MARUTI SUZUKI ARENA

# VICTORIS

## OWNER'S MANUAL

For vehicle fitted with CNG fuel system, use VICTORIS CNG Supplementary Owner's Manual

Refer for vehicle usage at all times

Contains Warranty policy and Important Information On Safety, Operation & Maintenance

Part No. 99011M71UD0-74W
August, 2026 (ENG.)

This Owner's Manual applies to the VICTORIS series produced by
MARUTI SUZUKI INDIA LIMITED



NOTE: The illustrated model is one of the VICTORIS series
Accessories shown in the picture are not part of standard equipment

© Copyright 2026 **Maruti Suzuki India Limited.** All rights reserved.
No part of this manual can be reproduced in any manner whatsoever or transmitted
in any form or by any means without prior written consent of Maruti Suzuki India Limited.

# FOREWORD

The digital Owner's Manual is an essential part of your vehicle a rich document which familiarizes you with the vehicle by providing information such as features, warnings, operations and equipment description etc. Please read this manual carefully before operating your new MARUTI SUZUKI vehicle and review the manual from time to time. It is recommended to download this manual (from the “Maruti Suzuki” mobile application with your registered mobile number) and save a soft copy of the same for easy access all times. Please visit MARUTI SUZUKI authorised workshop for availing any service.

To prolong the life of your vehicle and reduce maintenance cost, the periodic maintenance must be carried out according to “PERIODIC MAINTENANCE SCHEDULE” described in “INSPECTION AND MAINTENANCE” section of this manual. It is essential for preventing trouble and accidents to ensure your satisfaction and safety.

Daily inspection and care as per “DAILY INSPECTION CHECKLIST” described in the “OPERATING YOUR VEHICLE” section of this manual is essential for prolonging the life of the vehicle and for safe driving.

Vehicle and the available features/accessories therein should be used and plied by the owner/user in accordance with the applicable legal requirements.

MARUTI SUZUKI INDIA LIMITED believes in conservation and protection of Earth’s natural resources.

To that end, we encourage every vehicle owner to recycle, trade-in or properly dispose of, as appropriate, used Engine Oil, coolant and other fluids, batteries and tyres etc.

**MARUTI SUZUKI INDIA LIMITED**

**All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. MARUTI SUZUKI INDIA LIMITED reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.**

**This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.**

# IMPORTANT

**⚠ WARNING/ ⚠ CAUTION/*NOTICE*/** *NOTE*

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words **WARNING**, **CAUTION**, ***NOTICE*** and *NOTE* have special meanings. Pay particular attention to messages highlighted by these signal words:

**⚠ WARNING**

**Indicates a potential hazard that could result in death or serious injury.**


**⚠ CAUTION**

**Indicates a potential hazard that could result in minor or moderate injury.**

***NOTICE***

**Indicates a potential hazard that could result in vehicle damage.**

*NOTE:*
*Indicates special information to make maintenance easier or instructions clearer.*

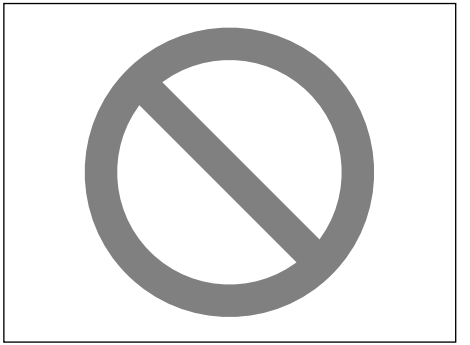

75F135

The circle with a slash in this manual means “Don’t do this” or “Don’t let this happen”.

*NOTE:*
- *Words like car, model/variant are invariably used in this manual to denote the “Vehicle”.*
- *Pictorial representations used in this manual are for reference purposes only.*

# MODIFICATION WARNING

**⚠ WARNING**

**Do not modify your vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification shall not be covered under warranty.**

***NOTICE***

**Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen’s Band) radios may cause electronic interference with your vehicle’s ignition system, resulting in vehicle performance problems. Consult your Maruti Suzuki authorized workshop or qualified service technician for advice on installing such mobile communication equipment.**

***NOTICE***

**The diagnostic connector of your vehicle is prepared only for the specific diagnostic tool for inspection and service purpose. Connecting any other tool or device may interfere with electronic parts operations and cause running out of batteries.**


# “WARNING”



**Vehicle may break-down, meet with an accident or catch fire due to**

1. Installation of
   - High wattage bulbs
   - Non genuine lamps / horns
   - Modified suspension / wheels
   - Non genuine parts / accessories etc.
2. Retrofitment of LPG / CNG fuel systems/kits.
3. Usage of domestic LPG.
4. Short circuiting due to tampering of wiring harness.

**CAUTION: DO NOT STORE OR CARRY INFLAMMABLE MATERIALS IN THE VEHICLE.**

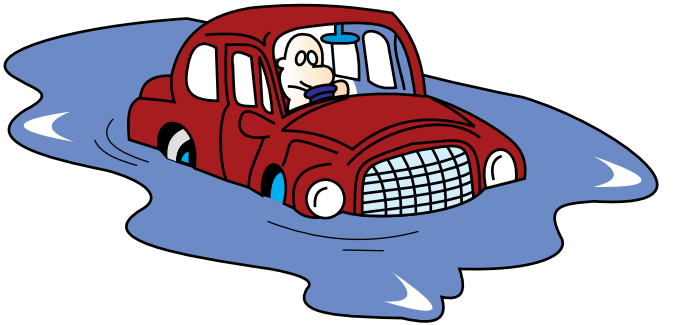

**Avoid driving into or starting the vehicle in a heavily water logged area. Vehicle may break-down or engine may fail due to**

1. Water entry into the engine (which may lead to hydrostatic lock).
2. Short circuiting of the electrical systems.

**If the vehicle is stuck in deep water, do not start / crank the vehicle until the level of water drops below the level of exhaust pipe.**

**NOTE:**
**IF THE VEHICLE IS SUBMERGED IN WATER, REPORT TO THE NEAREST AUTHORIZED WORKSHOP.**

# “CAUTION”

1. Retro-fitment of LPG / CNG kit may deteriorate vehicle performance, reduce engine & engine related component's life and also warranty will be null and void for such vehicles.
2. Do not use domestic LPG/LPG cylinder for your factory fitted LPG vehicles.
3. Usage of domestic LPG for running vehicles is prohibited as per law.
4. Do not remove company fitted LPG/CNG kit to install some other kit. It may affect vehicle performance and may cause fire.
5. Drive slowly on wet roads. Tires may slip while braking at higher speeds due to aquaplaning. (reduced contact area between tire and road due to presence of water)
6. Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon- monoxide in cabin and may lead to suffocation or breathing problems.
7. Do not park vehicle on dry leaves or grass. This may lead to fire due to hot catalytic converter, igniting the dry leaves/grass.
8. If the vehicle is equipped with CNG/LPG, ensure availability of fire extinguisher in the vehicle all the time.
9. Always wear seat belt at all the times.
10. Do not use mobile phone while driving.
11. Avoid Smoking in the car, live bud thrown in car may cause fire.
12. Do not put any body part under the vehicle when it is supported on a Jack.
13. Do not use non-genuine accessories in your vehicle.
14. Do not fit accessories from unauthorized workshops/sources.
15. Usage of non-approved electrical accessories in your vehicle may result in spark, fire or personal injury.
16. Do not use camphor, incense sticks inside cabin room. Doing so may cause fire.
17. Avoid usage of cellular phones while refueling. Electric current and/or electronic interference from cellular phones can potentially ignite fuel vapors and cause fire.
18. Avoid entry inside vehicle immediately once after you have begun refueling. You can generate a build up of static electricity by touching, rubbing or sliding against any item or fabric capable of producing static electricity. Static electricity discharge can ignite fuel vapors and may causing a fire.
19. Do not check the engine room/ open the hood near the fire area (Outside the vehicle). Fuel, washer fluid, etc. are flammable oils that may cause fire.
20. Avoid driving when vehicle has met with an accident. Before driving, Please contact with authorized MSIL dealership.

## To experience and use the Digital Owner’s Manual, download Maruti Suzuki application

**Maruti Suzuki application** ensures a hassle free ownership experiance. Get easy access to all the services and information you need by downloading the application

GET IT ON Google Play

Available on the App Store

## How to download Owners manual from Maruti Suzuki application

**Step 1:** Download the “Maruti Suzuki” mobile application from the Apple App Store or Google Play Store.

**Step 2:** Enter your registered mobile number and verify with the OTP received via SMS.

**Step 3:** Tap the “Offerings” icon on the bottom bar.

**Step 4:** Select “Owner’s Manual” to access your car’s digital manual.

**Step 5:** Tap on download icon at top right of the page to download the Owner's Manual.

Now, the Owner's Manual is available on your mobile phone for reference at all times.

**(For assistance, contact Maruti Suzuki authorized workshop)**

# WARRANTY POLICY

Maruti Suzuki India Limited (hereinafter called “Maruti Suzuki”), warrants that each new Maruti Suzuki vehicle distributed in India by Maruti Suzuki and sold by a Maruti Suzuki authorized dealer will be free, under normal use and service, from any defects in material and workmanship at the time of manufacture SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS:

## (1) Qualification:

To qualify for this warranty the vehicle must be delivered by a Maruti Suzuki authorized dealer and set-up, and serviced by a Maruti Suzuki authorized workshop.

## (2) Term:

The term of this warranty shall be Thirty-Six (36) months or 1,00,000 kilometers (whichever occurs first) from the date of invoice to the first owner, except for the following parts for which the term is as under:

*NOTE:*
*Maruti Suzuki offers warranty for the below parts in vehicle, if equipped, as follows:*

- *Lithium-ion battery, Integrated Starter Generator (ISG), Hybrid ECU, Inverter / Converter Unit, Power Management ECU- Sixty (60) months or 1,00,000 kilometers (whichever occurs first).*
- *Hybrid Electric Vehicle (HEV) Battery- Ninety six (96) months or 1,60,000 kilometers (whichever occurs first).*
- *Lead acid battery – Twenty four (24) months or 40,000 kilometers (whichever occurs first).*

## (3) Maruti Suzuki Warranty Obligation:

If any defect(s) should be found in a Maruti Suzuki vehicle within the term stipulated above, Maruti Suzuki’s only obligation is to repair or replace at its sole discretion any part shown to be defective, with a new part or the equivalent at no cost to the owner for parts or labor, when Maruti Suzuki acknowledges that such a defect is attributable to faulty material or workmanship at the time of manufacture. Such defective parts, which have been replaced, will become the property of Maruti Suzuki. The owner is responsible for any repair or replacements which are not covered by this warranty. The decision of Maruti Suzuki shall be final & binding.

## (4) Limitation:

This warranty shall not apply to:

(a) Normal maintenance service required other than the three free services, including without limitation, oil and fluid changes, consumables, headlight aiming, fastener retightening, wheel balancing, wheel alignment and tyre rotation, cleaning of injectors, adjustments of clutch and valve clearance.

(b) The normal wear of parts including without limitation, bulbs, tyres* and tubes, spark plugs, belts, hoses, filters, wiper blades, brushes, contact points, fuses, clutch disc, brake shoes, brake pads, cable and all rubber parts (except oil seal and glass run).
(* - If there is a complaint related to tyre, the customer may contact respective tyre manufacturer).

(c) Any vehicle which has been used for competition, rallies or racing.

(d) Any repairs or replacement arising from accidents or collision.

(e) Any defect/ damage caused by misuse, negligence, abnormal use, insufficient care, vandalism, theft, riot, fire, flooding - not limited to entry of water in the components resulting in engine seizure, hydrostatic lock, etc. or external damages to the body/ components.
(f) Any damage resulting due to usage of adulterated fuel/ lubricants/ oil/ coolant/ fluids/ polishing products and fuel/ lubricants/ oil/ coolant/ fluids used other than those specified in the Owner's Manual.
(g) Any vehicle which has been modified or altered, including without limitation, the installation of performance accessories, enlargements of lights, other changes and external/ consequential reasons.
(h) Any vehicle on which parts or accessories not approved by Maruti Suzuki (Non-MSGA, Non-MSGP) have been used.
(i) Any vehicle which has not been operated in accordance with the operating instructions in this Owner's Manual.
(j) Any vehicle which has not received the service inspections prescribed in this Owner's Manual.
(k) Any vehicle which has been assembled, disassembled, adjusted or repaired by other than a Maruti Suzuki authorized workshop.
(l) Any vehicle which has been used for purposes other than what it was designed for.
(m) Any damage or deterioration caused by airborne fallout, industrial fallout, acid rain, hail or hail storm, wind storm, lightning, bird droppings, rodents bite / rat bite and such other thing that result in damage to the vehicle.
(n) Insignificant defects / noise which do not affect the function of the vehicle including without limitation, sound, vibration and fluid seep.
(o) Any natural wear and tear including without limitation, ageing, wear & tear or deterioration such as discoloration, fading, deformation or blurring and fabric discoloration.
(p) Installation and usage of domestic LPG gas/LPG Cylinder.
(q) V-belts, hoses and gas leaks.
(r) Any vehicle retrofitted with LPG/CNG kits.
(s) Repainting including patchwork, bodywork and mouldings and interior trims.
(t) Corrosion, rusting of body parts and/ or components.
(u) Any vehicle on which odometer has been changed unauthorizedly or odometer reading has been modified/ tampered with/ or not matching the service records.
(v) The damage(s) caused to the vehicle being unattended despite knowledge that the defect exists and ignorance by the owner/ user of the vehicle.
(w) Any damage(s) caused to vehicle including battery/ tyre due to improper maintenance or prolonged parking of the vehicle in idle condition for long duration.
(x) Any vehicle on which the retro-fitment is not authorized and/ or type approved as per the standards prescribed by the relevant authority including but not limited to Automotive Standards of India.
(y) Any vehicle on which the retro-fitment is such which directly or indirectly causes any damage to the vehicle or affects the functions of the vehicle in any manner whatsoever.

### (5) Extent of Warranty:

This warranty is the entire written warranty given by Maruti Suzuki for Maruti Suzuki vehicles and no dealer or its or his agent or employee is authorized to extend or enlarge this warranty and no dealer or its or his agent or employee is authorized to make any oral warranty or representation or assurance on behalf of Maruti Suzuki.

Maruti Suzuki reserves the right to add any improvements or change the design of any model at any time with no obligation to make the same changes on units previously sold.

### (6) Warranty Service:

To obtain warranty service, the complete vehicle must be presented at the owner's expenses to Maruti Suzuki authorized workshop.

The customer shall be responsible for his belongings or accessories fitted in the vehicle at the time of presenting the vehicle for service and no claim shall be entertained in any manner under any circumstances.

### (7) Owner's Warranty Obligations:

| *NOTICE* |
| --- |
| **The owner shall not use the vehicle in a damaged condition and report the same immediately to the nearest Maruti Suzuki authorized workshop. This would result in early inspection and repair of the vehicle and any possible harm to the person or aggravation of damage to the vehicle can be prevented.** |

It is responsibility of each owner to:

- Have performed, at his own expenses, by a Maruti Suzuki authorized workshop all the service inspections specified in the Owner's Manual described in "INSPECTION AND MAINTENANCE" section.
- Should you resell the vehicle, please guide the new users/ owners to download this manual (from the "Maruti Suzuki" mobile application with your registered mobile number). Also the soft copy of the manual must be passed on to new users/ owners when resold or otherwise transferred.

If the Owner's Manual is lost due to any reason, the owner or user may download a soft copy of the same (from the "Maruti Suzuki" mobile application with the mobile number) and save it for easy access at any point of time".

### (8) Disclaimer of Consequential Damage:

Maruti Suzuki assumes no responsibility for loss of vehicle, loss of time, inconvenience or any other indirect incidental or consequential damage resulting from the vehicle not being available to the owner because of any defect covered by this warranty.

### (9) Change of Owner


Even if ownership of the vehicle changes, the remaining warranty period is effective for the new owner.

This warranty is applicable only in India and not transferable to any other country.

*NOTE:*
*Notwithstanding the warranty obligations, Maruti Suzuki may reuse reworked (refurbished) parts for undertaking rectification of recalled vehicles in terms of applicable laws.*

# TABLE OF CONTENTS


| | |
|---|---|
| QUICK GUIDE | 1 |
| FOR SAFE DRIVING | 2 |
| BEFORE DRIVING | 3 |
| INSTRUMENT CLUSTER | 4 |
| OPERATING YOUR VEHICLE | 5 |
| ADVICE FOR YOUR DRIVING | 6 |
| OTHER CONTROLS AND EQUIPMENT | 7 |
| VEHICLE LOADING AND TOWING | 8 |
| INSPECTION AND MAINTENANCE | 9 |
| EMERGENCY SERVICE | 10 |
| APPEARANCE CARE | 11 |
| SPECIFICATIONS | 12 |
| SERVICE NETWORK | 13 |

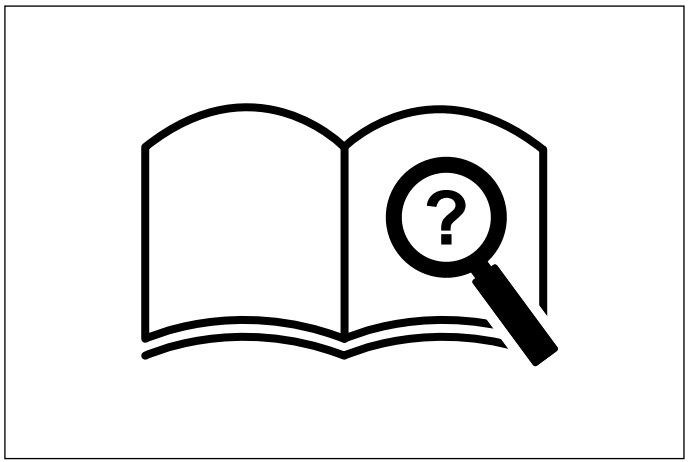

59RN00020


# QUICK GUIDE

Illustrated Table of Contents ..... 1-1
Warning Lights and Indicators ..... 1-10
Warning Buzzer ..... 1-21
FAQ ..... 1-29

## Illustrated Table of Contents

### Exterior

(1) Door (P.3-1)
(2) Door Locks (P.3-1)
(3) Side Turn Signal Light on Outside Rearview Mirrors (P.9-36)
(4) Roof Rails (if equipped) (P.7-34)
(5) Sunroof (if equipped) (P.7-18)
(6) Front camera (DSBS II) (if equipped) (P.5-70)
(7) Windshield Wiper (P.3-36, 9-45)
(8) Front Camera (if equipped) (P.5-151)
(9) Fuel Filler Cap (P.7-1)
(10) Tailgate (P.3-4)
(11) Radio Antenna (P.7-47)
(12) High Mount Stop Light (P.9-38)
(13) Rear Window Wiper (if equipped) (P.3-38, 9-47)
(14) Rearview Camera (if equipped) (P.5-173)
(15) Side Camera (if equipped) (P.5-151)
(16) Outside Rearview Mirror (P.2-11)
(17) Front Fog Light (if equipped) (P.3-33, 9-37)
(18) Engine Hood (P.7-4)
(19) Front radar (DSBS II) (if equipped) (P.5-70)
(20) Towing Eye Cover (P.10-3)
(21) Parking Sensor (P.5-135)
(22) License Plate Light (P.9-38)
(23) Headlight (P.3-33, 9-36)
(24) Position Light, Daytime Running Light (D.R.L.) and Front Turn Signal Light (P.3-30, 9-36)
(25) Position Light ((if equipped)) (P.9-36)
(26) Front Turn Signal Light (if equipped) (P.3-34, 9-36)
(27) Tail Light (if equipped) (P.9-37)
(28) Brake Light and Tail Light (P.9-37)
(29) Rear Turn Signal Light (P.3-34, 9-37)
(30) Retro Reflector
(31) Reversing Light (P.9-37)

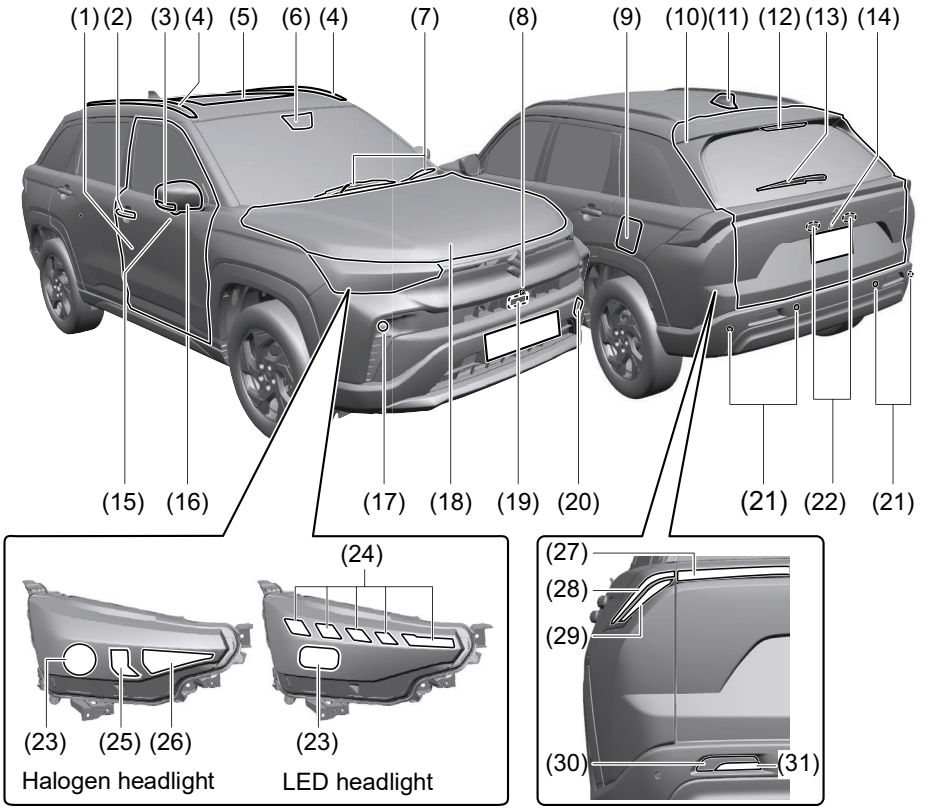


71UM01003


## Interior, Side

(1) Front camera (DSBS II) (if equipped) (P.5-70)
(2) Front Interior Light (P.7-7, 9-38)
(3) Sun Visor (P.7-6)
(4) Warning Label for Front Passenger's Front Airbag (P.2-54) *1, *2
(5) Hands-free Microphone (if equipped) (P.7-49) / eCall Microphone (if equipped) (P.10-6)
(6) Seat Belt (P.2-22)
(7) Side Curtain Airbag (P.2-52)
(8) Center Interior Light (P.7-7)
(9) Inside Rearview Mirror (P.2-9)
(10) Front Seat (P.2-5)
(11) Side Airbag (P.2-52)
(12) Front Seatback Pocket (if equipped) (P.7-32)

*1: Be sure to read the detailed information in the target page before using a child restraint system.
*2: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.





76TM01001

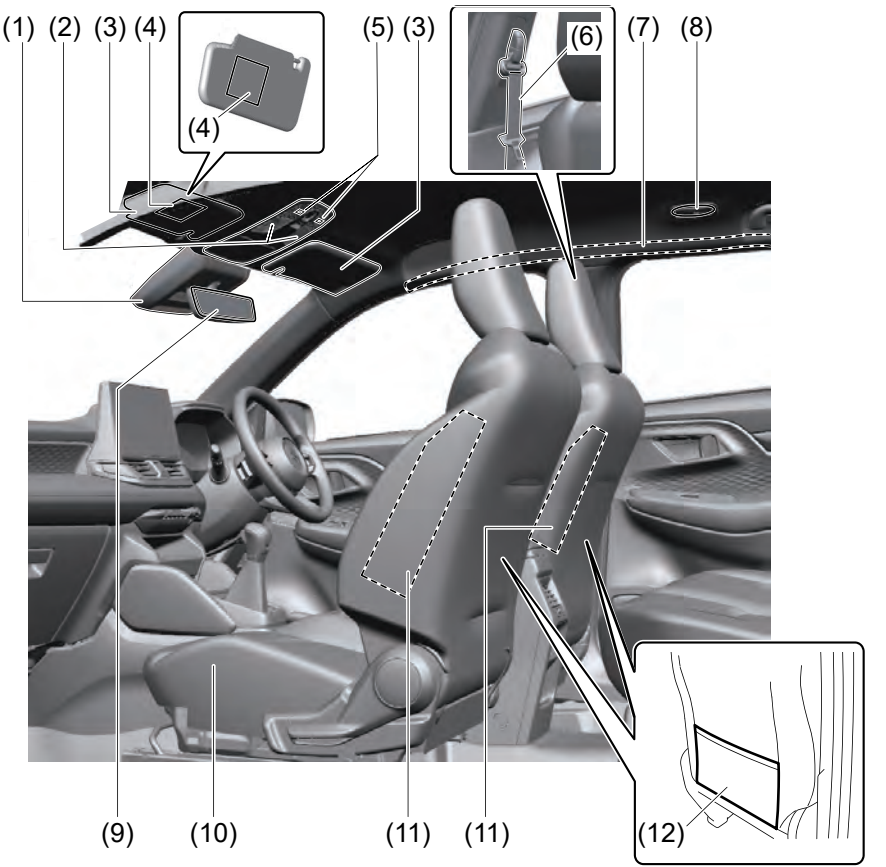


71UM01004

## Interior, Rear


(1) Assist Grips (P.7-23)
(2) Seat Belt (P.2-22)
(3) Rear Seat (P.2-15)
(4) USB Charging Socket (if equipped) (P.7-26)
(5) Front Armrest (if equipped) (P.7-18)
(6) Rear Seat Armrest (P.7-14)

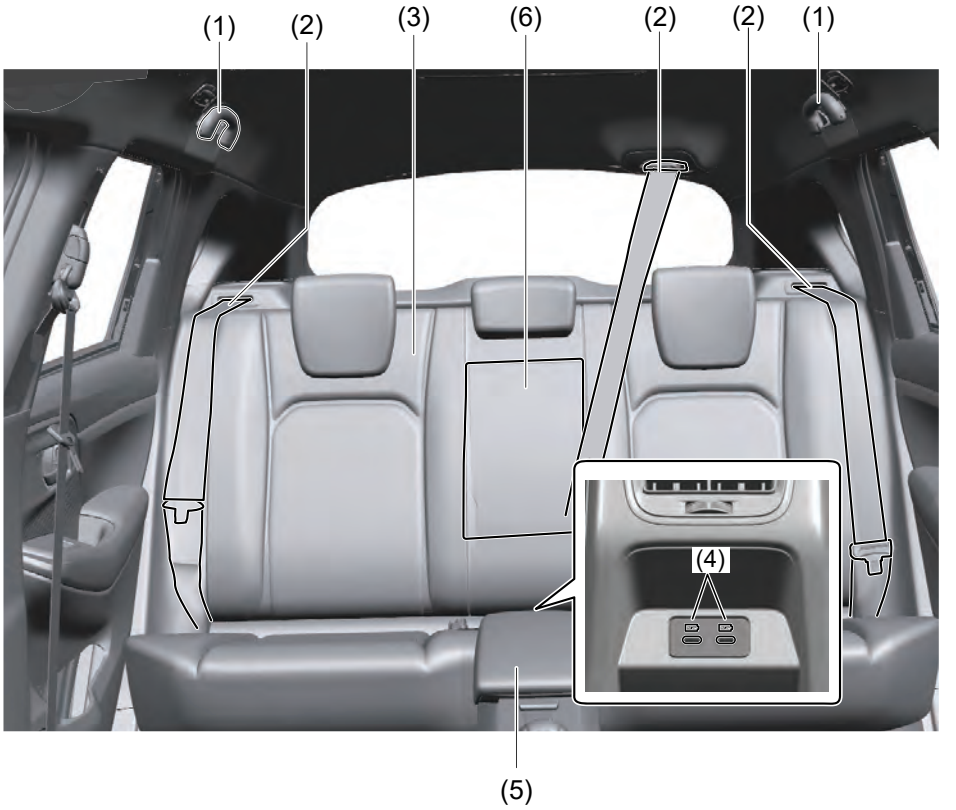


71UM01005

## Interior, Front


(1) Glove Box (P.7-17)
(2) Front Passenger's Front Airbag (P.2-52)
(3) Accessory Socket (P.7-13)
(4) Heating and Air Conditioning System (P.7-36)
(5) USB Socket and USB Charging Socket (if equipped) (P.7-26)
(6) Driver's Front Airbag (P.2-52)
(7) Engine Hood Release Handle (P.7-4)
(8) Fuel Lid Opener Lever (P.7-1)
(9) Parking Brake Lever (if equipped) (P.5-20)
(10) Electric Parking Brake Switch (if equipped) (P.5-22)
(11) Brake Hold Switch (if equipped) (P.5-24)
(12) Gearshift Lever (P.5-30)
(13) Door Lock Switch (P.3-25)
(14) Electric Window Control (P.3-25)
(15) Electric Mirror Control (P.2-11)
(16) Electric Window Lock Switch (P.3-25)

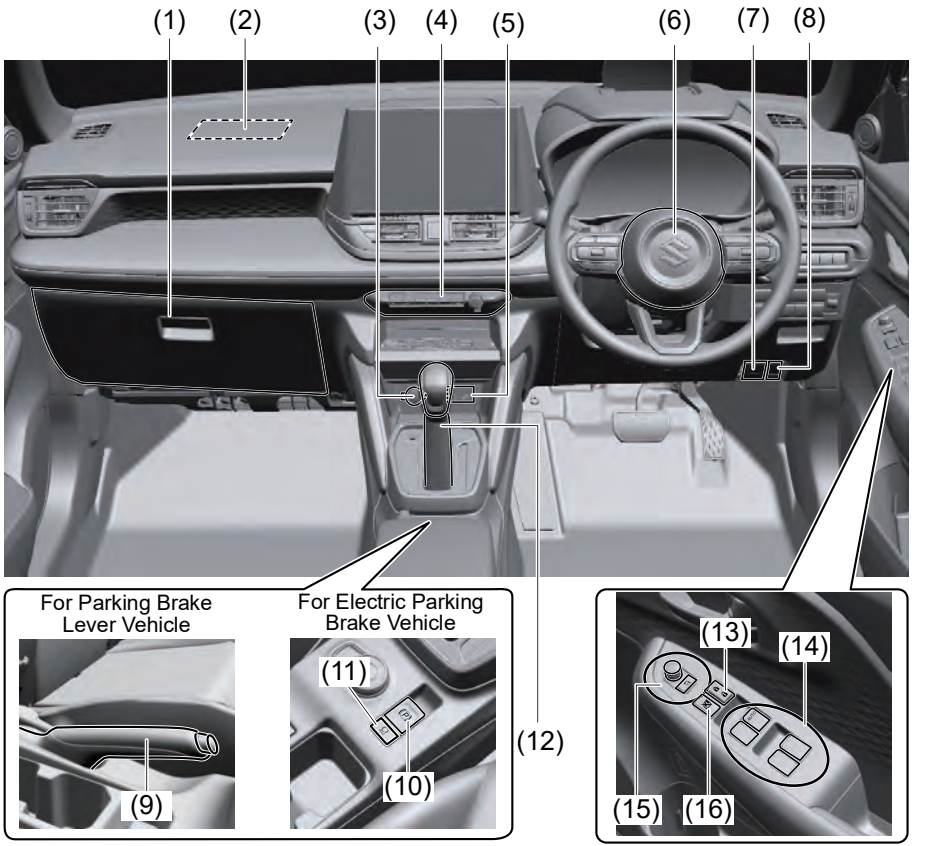


71UM01006

## Instrument Panel 1

(1) Hazard Warning Switch (P.3-35)
(2) Volume & Mute Knob (P.7-49)
(3) Remote Audio Controls (P.7-48)
(4) Windshield Wiper and Washer Lever (P.3-36)/
Rear Window Wiper/Washer Switch (P.3-38, P3-39)
(5) Shift Paddle (if equipped) (P.5-34)
(6) Hands-free Switch (if equipped) (P.7-49)
Voice Recognition Switch (if equipped) (P.7-49)
(7) Head-up Display (if equipped) (P.5-142)
(8) Instrument Cluster (P.4-1, 4-29)
(9) Cruise Control Switches (if equipped) (P.5-102) / Adaptive Cruise Control Switches (if equipped) (P.5-106)
(10) Lighting Control Lever (P.3-28)/ Turn Signal Control Lever (P.3-34)
(11) Heated Rear Window Switch (P.3-39)
(12) Fuses (P.9-27)
(13) Drink Holder (P.7-14)
(14) Tilt / Telescoping Steering Lock Lever (P.2-9)
(15) Lane Keep Assist ON/OFF Switch (if equipped) (P.5-97)
(16) Engine Switch / Power Switch (P.5-3)

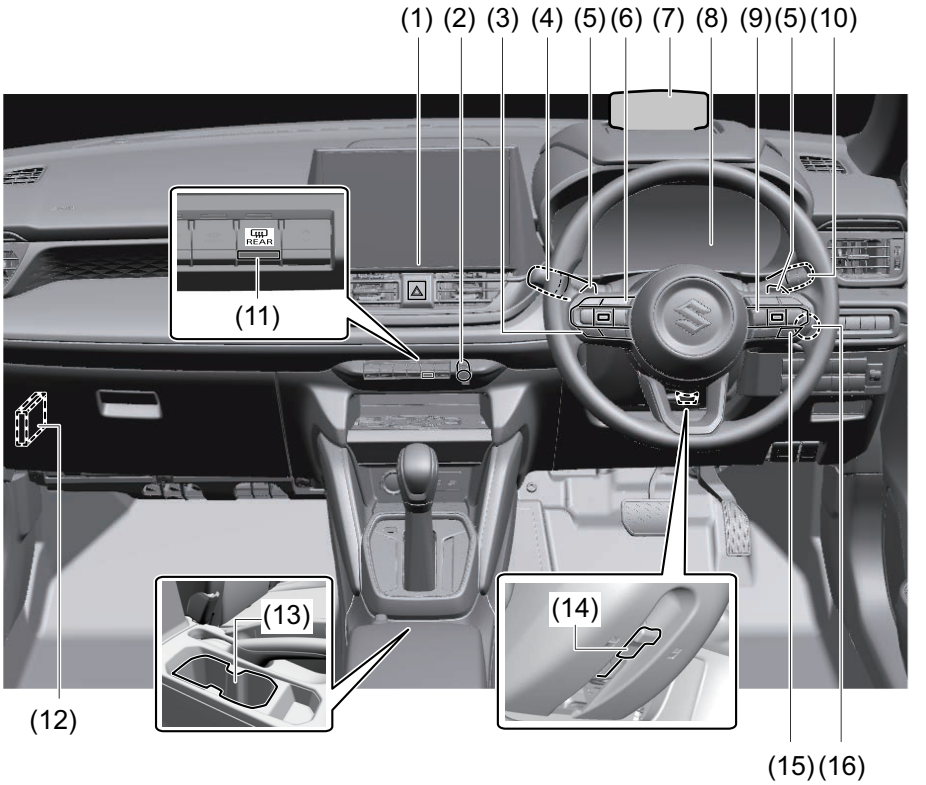



71UM01007

## Instrument Panel 2

(1) Head-up Display Switch (if equipped) (P.5-142)
(2) Brightness Control Head-up Display Switch (if equipped) (P.5-142)
(3) Up Head-up Display Switch (if equipped) (P.5-142)
(4) Down Head-up Display Switch (if equipped) (P.5-142)
(5) Headlight Leveling Switch (P.3-33)
(6) Camera Switch (if equipped) (P.5-151)
(7) ESP® OFF Switch (P.5-180)
(8) Lane Departure Prevention OFF Switch (if equipped) (P.5-91)
(9) Hill Descent Control Switch (if equipped) (P.5-183)
(10) Smart Power Tailgate Switch (if equipped) (P.3-7)
(11) Smart Power Tailgate OFF Switch (if equipped) (P.3-15)
(12) Dual Sensor Brake Support II (DSBS II) OFF Switch (if equipped) (P.5-87)
(13) Changeover / Selector Switch Position (for CNG model)
(14) Parking Sensor Buzzer OFF Switch (if equipped) (P.5-133)
(15) ENG A-STOP OFF Switch (if equipped) (P.5-58)

**For Head-Up Display**

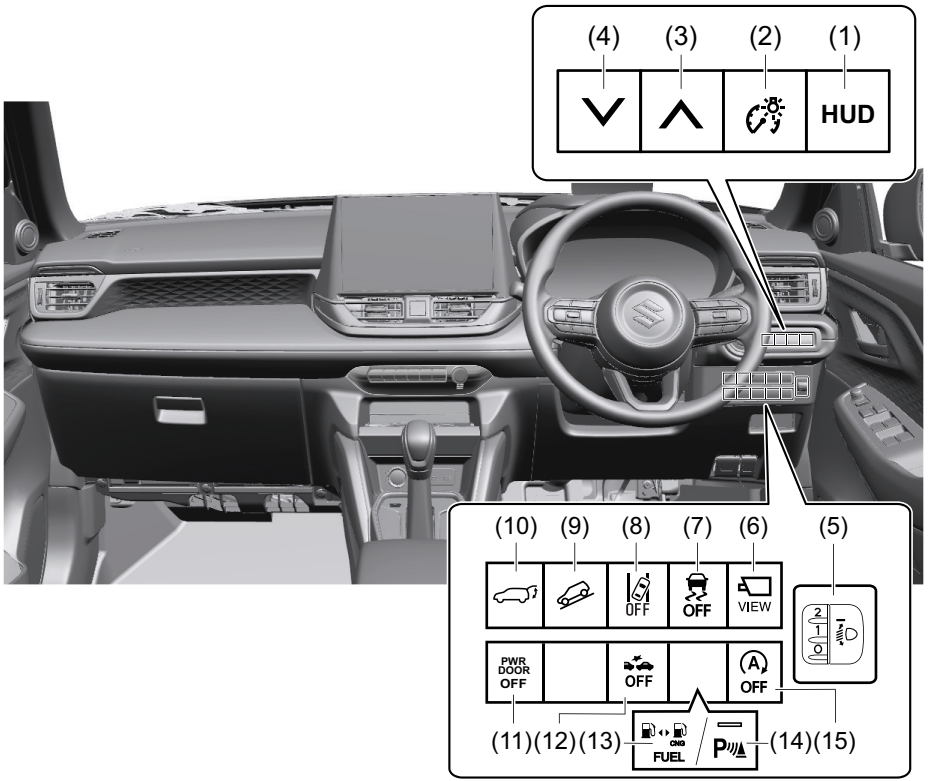



71UM01002

## Luggage Compartment

(1) Luggage Compartment Cover (if equipped) (P.7-32)
(2) Luggage Compartment Hook (P.7-32)
(3) Accessory Socket (if equipped) (P.7-13)
(4) Luggage Compartment Light (if equipped) (P.7-10, 9-41)
(5) Luggage Compartment Board (P.7-33)
(6) Towing Eye (P.10-3)
(7) Jack Handle (P.10-13)
(8) Wheel Wrench (P.10-13)
(9) Jack (P.10-13)
(10) Flat Tyre Repair Kit (P.10-21)
(11) Warning Triangle (P.10-31)

**K15C Model**

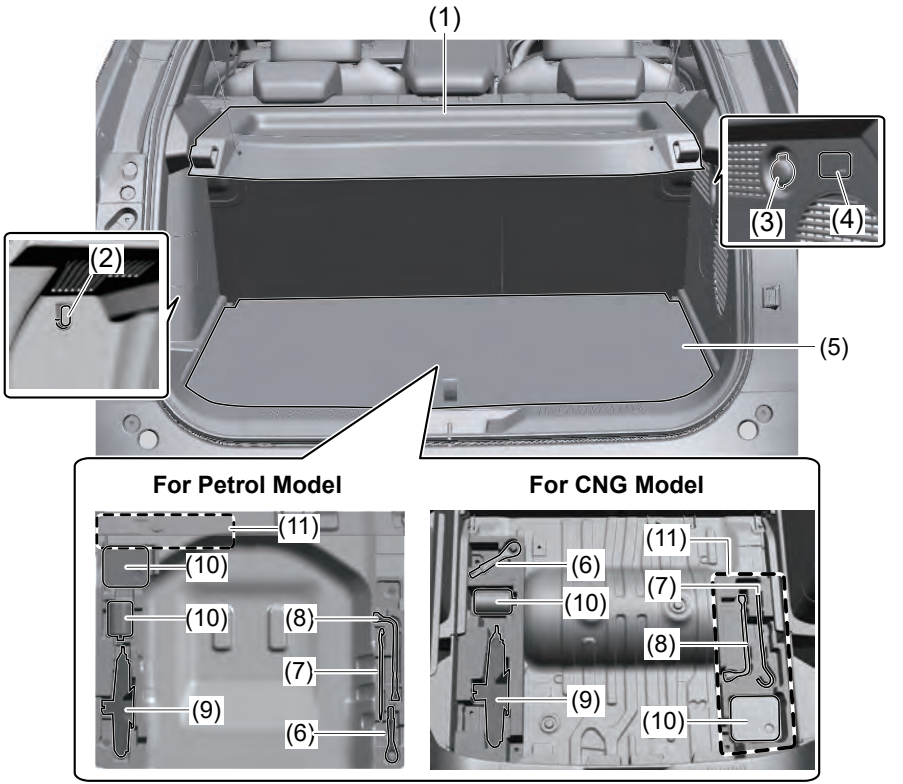



71UM01008

## Luggage Compartment

(1) Luggage Compartment Cover (P.7-32)
(2) Luggage Compartment Board FR (P.7-33)
(3) Luggage Compartment Board RR (P.7-33)
(4) Luggage Floor Carpet
(5) Luggage Compartment Board L (P.7-33)
(6) Luggage Compartment Hook (P.7-32)
(7) Accessory Socket (P.7-13)
(8) Luggage Compartment Light (P.7-10, 9-41)
(9) Jack (P.10-14)
(10) Jack Handle (P.10-14)
(11) Wheel Wrench (P.10-14)
(12) Extension (Applicable for accessory) (P.10-14)
(13) Towing Eye (P.10-14)
(14) Tool Box
(15) Flat Tyre Repair Kit (P.10-21)
(16) Warning Triangle (P.10-31)

**M15D Model**

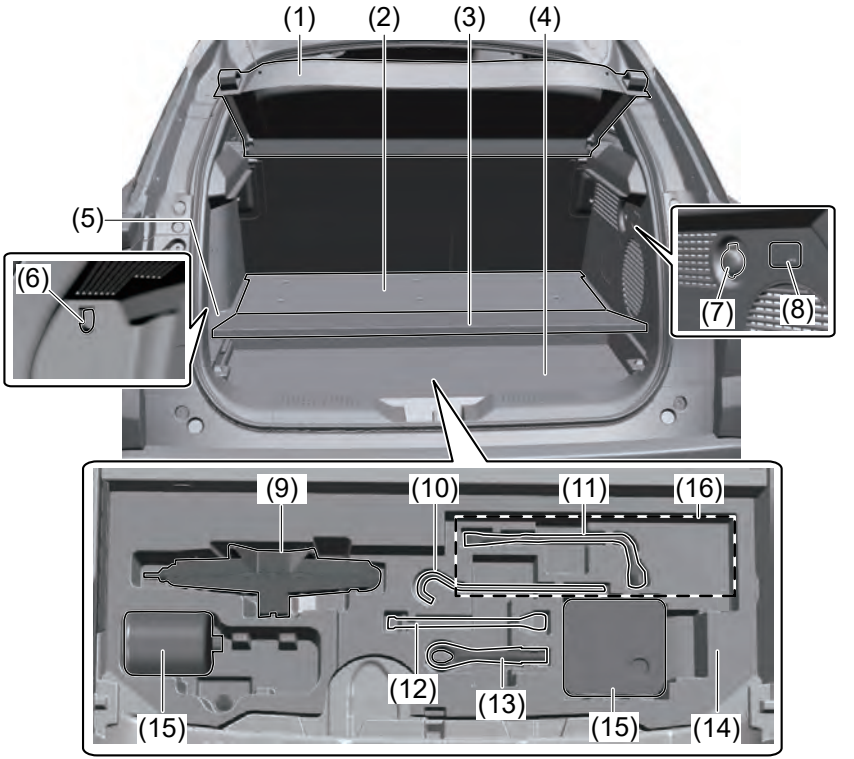



71UM01009

## Key

(1) Keyless Push Start System Remote Controller (P.3-16)
Keyless Push Start System (P.5-8)
Starting Engine (P.5-13)

(2) Key (P.3-1)
Door Locks (P.3-2)

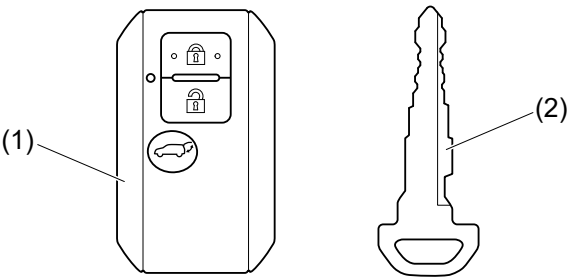



71UM01001

# Warning Lights and Indicators


## Warning Lights

### Instrument cluster (Type A)

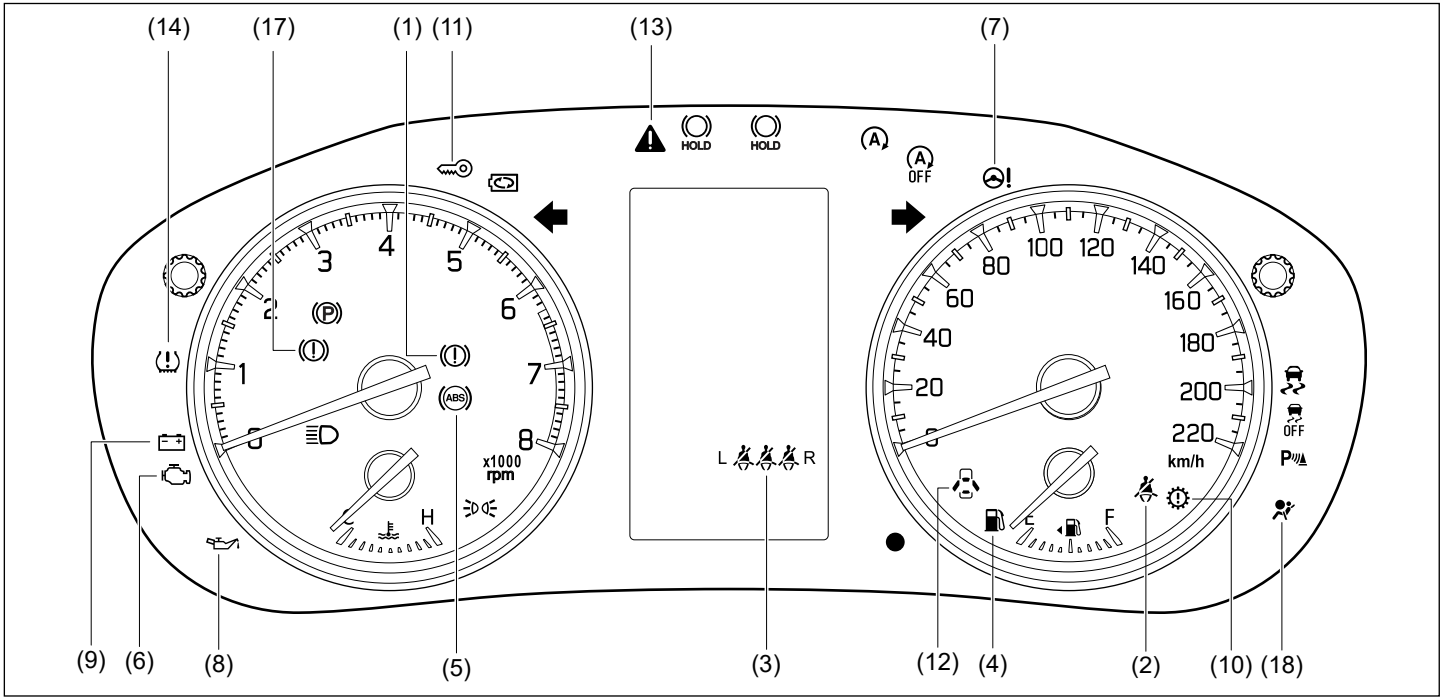


71UM01010


**Instrument cluster (Type B)**

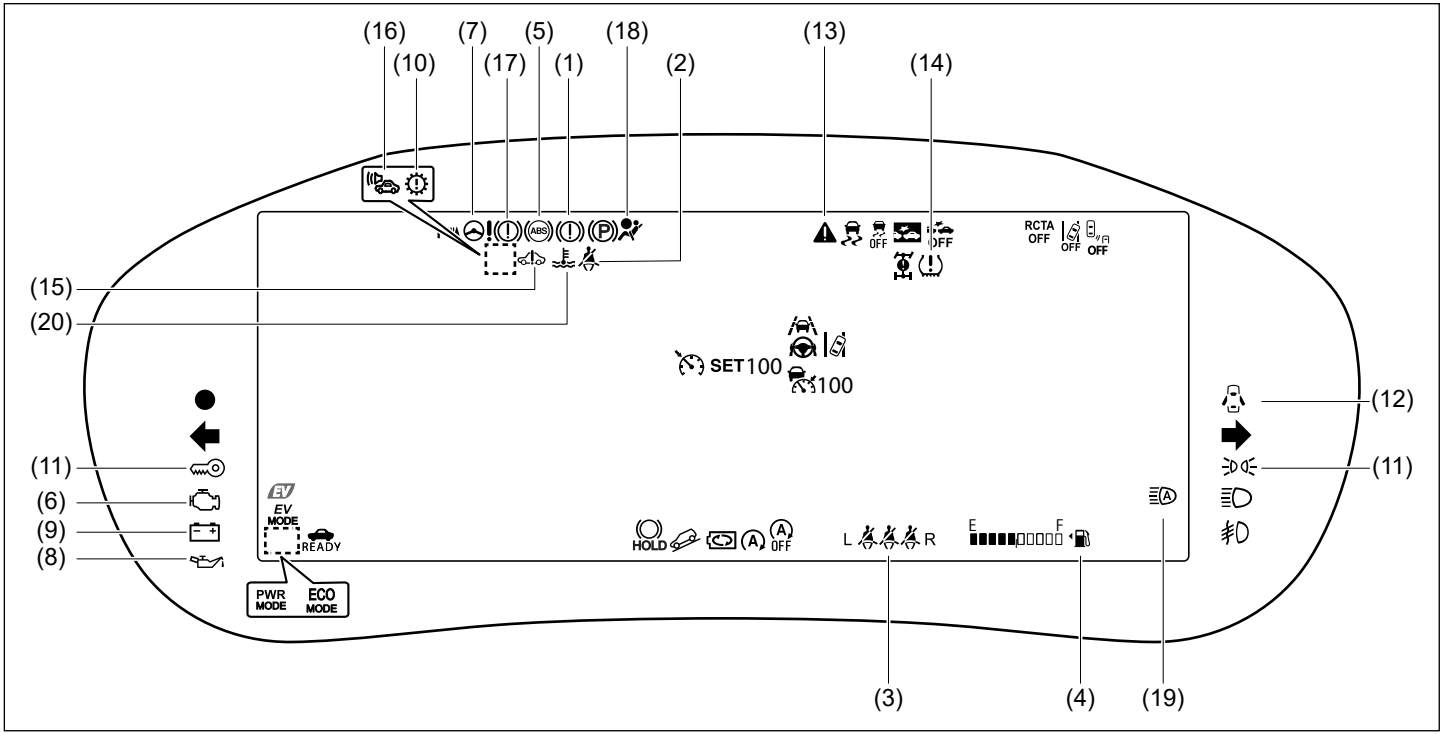


71UM01012

- If a warning light continues to be lit or is blinking, there may be a problem with the vehicle or the system. Carefully read the following reference information and consult with a Maruti Suzuki authorized workshop.
- It is considered normal that warning lights and indicators marked with an asterisk (*) are lit when pressing the engine switch or the power switch to change the ignition mode to ON (i.e., high engine coolant temperature warning light initially lights up in red). If such lights do not light up, consult with a Maruti Suzuki authorized workshop.


| Warning light | | | Color | Name |
|---|---|---|---|---|
| (1) |  | * | Red | Brake System Warning Light |
| (2) |  | | Red | Driver’s Seat Belt Reminder Light / Front Passenger’s Seat Belt Reminder Light |
| (3) |  | | Red | Rear Seat Passenger's Seat Belt Reminder Light (Left / Center / Right) |
| (4) |  | | Yellow | Low Fuel Warning Light |
| (5) |  | * | Yellow | Anti-lock Brake System (ABS) Warning Light |
| (6) |  | * | Yellow | Malfunction Indicator Light |
| (7) |  | * | Yellow | Electric Power Steering Light |

| Warning light | | | Color | Name |
|---|---|---|---|---|
| (8) |  | * | Red | Engine Oil Pressure Warning Light |
| (9) |  | * | Red | Charge Warning Light |
| (10) |  | * | Yellow | Transmission Warning Light (Automatic Transmission models) |
| (11) |  | * | Yellow | Immobilizer/Keyless Push Start System Warning Light |
| (12) |  | | Red | Open Door Warning Light |
| (13) |  | * | Yellow | Master Warning Indicator Light |
| (14) |  | * | Yellow | Low Tyre Pressure Warning Light (if equipped) |
| (15) |  | * | Red | Hybrid System Warning Light (M15D engine model) |


| Warning light | | | Color | Name |
|---|---|---|---|---|
| (16) |  | * | Yellow | Acoustic Vehicle Alerting System Warning Light (if equipped) |
| (17) |  | * | Yellow | Brake System Warning Light (if equipped) |
| (18) |  | * | Red | Airbag Warning Light |
| (19) |  | * | Yellow | High Beam Assist Warning Light (if equipped) |
| (20) |  | * | Red | High Engine Coolant Temperature Warning Light (if equipped) |
| |  | | Blue | Low Engine Coolant Temperature Warning Light (if equipped) |

## Indicators


### Instrument cluster (Type A)

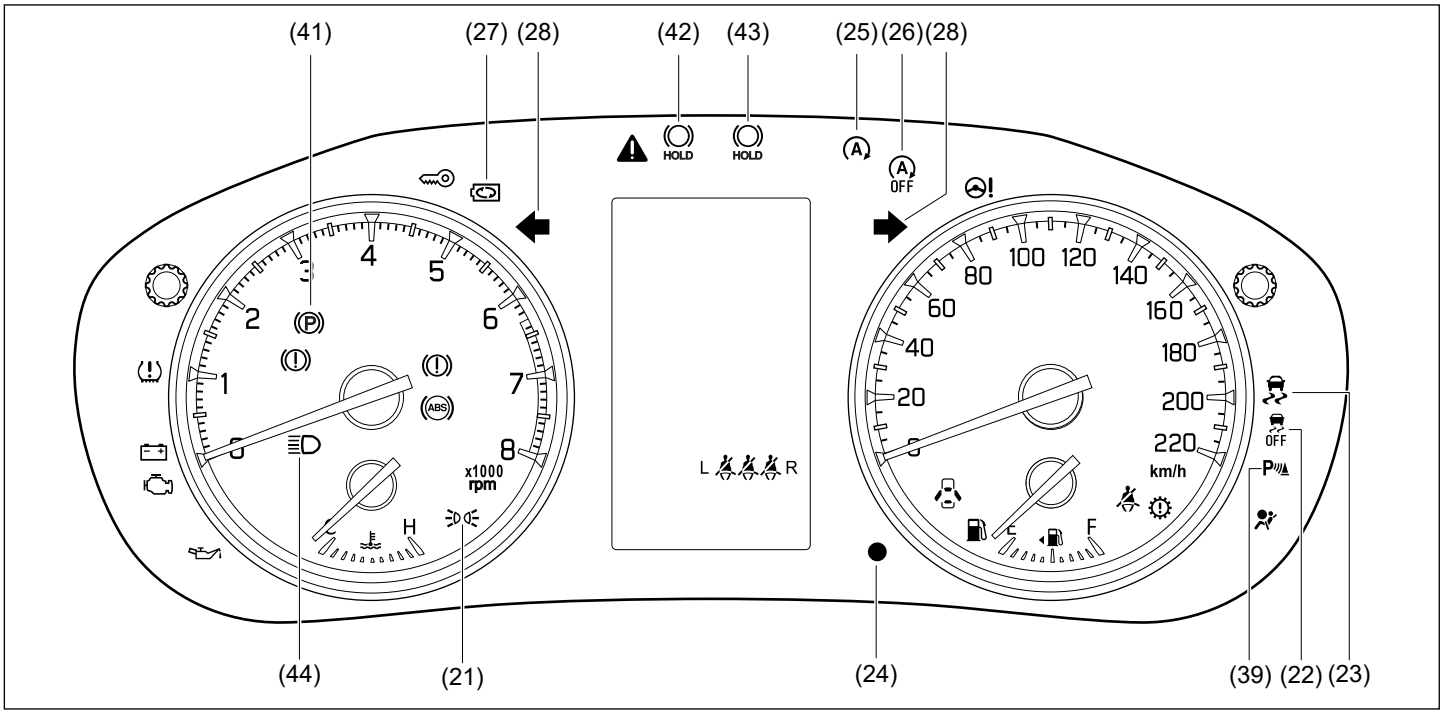

**Instrument cluster (Type B)**

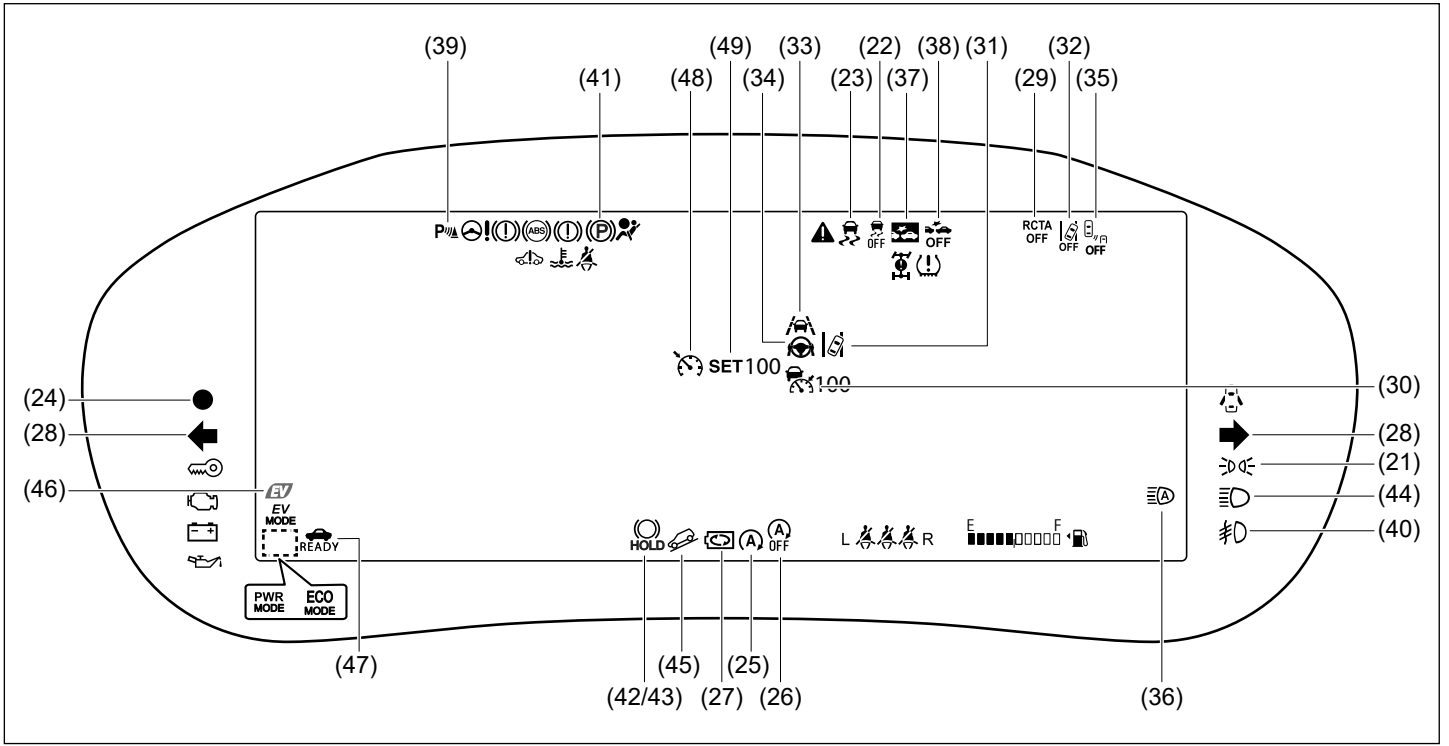


71UM01013

| Indicator | | | Color | Name |
|---|---|---|---|---|
| (21) |  | | Green | Illumination Indicator Light |
| (22) |  | * | Yellow | ESP® OFF Indicator Light |
| (23) |  | * | Yellow | ESP® Warning Light |
| (24) |  | | Red | Security System Indicator |
| (25) |  | | Green | ENG A-STOP Indicator Light (if equipped) |
| (26) |  | | Yellow | ENG A-STOP OFF Indicator Light (if equipped) |
| (27) |  | | White | Deceleration Energy Regenerating Indicator Light (if equipped) |
| (28) |  | | Green | Turn Signal Indicators |

| Indicator | | | Color | Name |
|---|---|---|---|---|
| (29) | RCTA OFF | * | Yellow | Rear Cross Traffic Alert (RCTA) OFF Indicator light (if equipped) |
| (30) |  | | Yellow<br>Green<br>White | Adaptive Cruise Control Indicator Light (if equipped)*1 |
| (31) |  | * | Yellow<br>Green | Lane Departure Prevention Indicator Light (if equipped)*1 |
| (32) |  | | Yellow | Lane Departure Prevention OFF Indicator Light (if equipped) |
| (33) |  | * | Yellow<br>Green<br>White | Lane Keep Assist Indicator Light (if equipped)*1 |
| (34) |  | * | White<br>Green | Steering Assist Indicator Light (if equipped)*1 |
| (35) |  | * | Yellow | Blind Spot Monitor (BSM) OFF Indicator Light (if equipped) |
| (36) |  | | Green | High Beam Assist Indicator Light (if equipped) |

*1 Depending on the operating status of the system, the color, blinking, and lighting of the indicator light will change.

| Indicator | | | Color | Name |
|---|---|---|---|---|
| (37) |  | * | Yellow | Dual Sensor Brake Support II Indicator Light (if equipped) |
| (38) |   | * | Yellow | Dual Sensor Brake Support II OFF Indicator Light (if equipped) |
| (39) |  | * | Yellow | Parking Sensor Indicator Light |
| (40) |  | | Green | Front Fog Light Indicator Light (if equipped) |
| (41) |  | * | Red | Electric Parking Brake Operation Indicator Light (if equipped) |
| (42) |   | * | White | Brake Hold Standby Indicator Light (if equipped) |
| (43) |   | * | Green | Brake Hold Operation Indicator Light (if equipped) |
| (44) |  | | Blue | Main Beam (High Beam) Indicator Light |
| (45) |  | * | White<br>Green | Hill descent control indicator light (if equipped)*1 |

*1 Depending on the operating status of the system, the color, blinking, and lighting of the indicator light will change.

| Indicator | | | Color | Name |
|---|---|---|---|---|
| (46) |  | * | Green | EV Indicator (for M15D engine model) |
| (47) |  | * | Green | READY Indicator (for M15D engine model) |
| (48) |  | | Green | Cruise Control Indicator Light (if equipped) |
| (49) | SET | | Green | Cruise “SET” Indicator Light (if equipped) |

## Warning Buzzer

- *1: The master warning ⚠ in the instrument cluster blinks. At the same time, the message will be shown on the information display to inform the driver of the vehicle condition and the remedy.
- *2: The message will be shown on the information display to inform the driver of the vehicle condition and the remedy. (P.4-34)

| When | Warning buzzer | Instrument cluster | Cause and remedy |
|---|---|---|---|
| When one of the doors is opened | Interior buzzer<br>• Beeping at short intervals for approx. 10 seconds |  <br>Blinks every 2 seconds | The security system warning is being activated. You can stop the warning by either of the following operations:<br>• Unlock the doors using the keyless push start system remote controller or the request switch.<br>• Press the engine switch or the power switch to change the ignition mode to ON. |
| When the engine switch or the power switch is pressed to change the ignition mode to ON | Interior buzzer<br>• Beeping 4 times |  <br>Blinks rapidly for approx. 8 seconds | Indicates that a security system has been activated while the vehicle has been parked; check the vehicle to make sure that it is not broken into or nothing is stolen. |
| | Interior buzzer<br>• Chime (once) | *1 | The steering wheel lock has not been released. With load not applied, turn the steering wheel to the left or right so as to press the engine switch or the power switch again. |
| When the engine switch or the power switch is in ON mode | Interior buzzer<br>• Chime (once) |  <br>Lights up | The fuel level is low. Refuel soon. |

| When | Warning buzzer | Instrument cluster | Cause and remedy |
|---|---|---|---|
| When driving | Interior buzzer<br>• Beeping at short intervals for approx. 95 seconds |  <br>Blinks<br>*1 | The driver does not wear his/her seat belt. Stop the vehicle in a safe place and wear your seat belt.<br>The front or rear passenger(s) does not wear his/her seat belt. Wear the seat belt. |
| | • Beeping at short intervals for approx. 35 seconds |  <br>Blinks<br>*1 | |
| | Interior buzzer<br>• Chime (once) |  <br>Lights up<br>*1 | One of the doors is not completely closed. Stop the vehicle in a safe place and close all doors completely. |
| When opening the driver's door | Interior buzzer<br>• Continuous beep |  <br>Lights up<br>*1 | The headlights or position lights are on. Turn these lights off. |
| When the engine switch or the power switch is in ON mode | Interior buzzer<br>• Chime (once) |  <br>Blinks every 1 second<br>*1 | There may be a problem with the keyless push start system. Consult with a Maruti Suzuki authorized workshop. |

| When | Warning buzzer | Instrument cluster | Cause and remedy |
|---|---|---|---|
| When the engine switch or the power switch operated | Interior buzzer<br>• Beeping twice |  <br>Lights up<br>*1 | The remote controller may be outside the vehicle or its battery may have become discharged.<br>Bring the remote controller in the vehicle or touch the engine switch or the power switch with the remote controller. |
| When the engine switch or the power switch is pressed to change the ignition mode to ON or ACC | Exterior and/or interior buzzers<br>• 5 beeps repeating at short intervals<br>Interior buzzer<br>• Chime (once) |  <br>Blinks<br>*1 | When the engine switch or the power switch was pressed to change the ignition mode to ON or ACC, the remote controller was detected. However, when starting the engine, the remote controller was not detected. Place the remote controller in the interior workable area and then press the engine switch or the power switch again. |
| When one of the door is opened or closed | Exterior and/or interior buzzers<br>• 5 beeps repeating at short intervals |  <br>Blinks<br>*1 | The remote controller may be outside the vehicle.<br>Bring the remote controller in the vehicle. |
| When opening the driver's door | Interior buzzer<br>• Beeping at short intervals | – | Press the engine switch or the power switch to change the ignition mode from ON or ACC to LOCK (OFF). |
| | Interior buzzer<br>• Continuous short beeps | – | The steering lock fails to engage due to a fault in the system when the ignition mode is turned to LOCK (OFF) by pressing the engine switch or the power switch.<br>Have the vehicle inspected by a Maruti Suzuki authorized workshop. |

| When | Warning buzzer | Instrument cluster | Cause and remedy |
|---|---|---|---|
| When pushing the request switch | Exterior buzzer<br>• Beeping at short intervals for approx. 2 seconds | – | The engine switch or the power switch is in ACC or ON mode. Press the engine switch or the power switch to change the ignition mode to LOCK (OFF). |
| | | – | The remote controller is left inside the vehicle. Take the remote controller outside the vehicle. |
| | |  <br>Lights up<br>*2 | Any door (including the tailgate) is open.<br>Close all doors completely |
| When pushing LOCK button on the remote controller | Exterior buzzer<br>• Beeping at short intervals for approx. 2 seconds |  <br>Lights up<br>*2 | Any door (including the tailgate) is open.<br>Close all doors completely |
| When stopping or backing up the vehicle | Interior buzzer<br>• Short beeps at long intervals, short beeps at short intervals, short beeps at very short intervals, or continuous beep | – | Parking sensors detect an obstacle on the rear and front (if equipped) side of the vehicle. Check the surrounding area directly with your eyes and the mirrors, and back up the vehicle slowly. |
| When using the shift paddle | Interior buzzer<br>• 2 beeps at short intervals | – | The gear position is not set in the desired position by operating the paddle shift switch. Select the proper gear position for the vehicle speed. |

| When | Warning buzzer | Instrument cluster | Cause and remedy |
|---|---|---|---|
| When the engine is stopped automatically by the ENG A-STOP system | Interior buzzer<br>• 1 Beeps | *2 | The engine has restarted automatically because either of the following conditions occurred.<br>• The difference between the set temperature of the air conditioner and the interior air temperature became big.<br>• The defroster is turned on.<br>• Brake booster vacuum pressure is low.<br>• The battery continues to be discharged.<br>• 3 minutes passed after the engine is automatically stopped by the ENG A-STOP system.<br>• The temperature selector was greatly set toward cool while cooling or greatly set toward hot while heating. |
| | Interior buzzer<br>• 2 Beeps | – | The engine stalled because the hood is opened after the engine is stopped automatically.<br>To restart the engine, follow the procedure below.<br>1) Set the parking brake firmly, and then place the gearshift lever in the “P” position.<br>2) Securely close the engine hood.<br>3) Press the engine switch or the power switch to restart the engine. |
| | Interior buzzer<br>• 5 beeps |  <br>or<br>  <br>Lights up<br>*2 | The engine has restarted automatically because either of the following operations was performed.<br>• The driver’s seat belt is unfastened.<br>• The driver’s door is opened.<br>Before driving, close the door and buckle the seat belt. In addition, before getting out of the vehicle, follow the procedure below.<br>1) Set the parking brake firmly, and then place the gearshift lever in the “P” position.<br>2) When the vehicle will be stopped for a long time or when you will leave the vehicle unattended, press the engine switch or the power switch to stop the engine. |

| When | Warning buzzer | Instrument cluster | Cause and remedy |
|---|---|---|---|
| When driving | Interior buzzer<br>• Beeps at short intervals | *2 | The Dual Sensor Brake Support II (DSBS II) is activated. Depress the brake pedal firmly. |
| When driving or backing up the vehicle | Interior buzzer<br>• Beeps at short intervals | - | Blind Spot Monitor or rear cross traffic alert detect an obstacle on the rear side of the vehicle. Check the surrounding area directly with your eyes and the mirrors, and back up the vehicle slowly. |
| When driving | Interior buzzer<br>• Beeps at short intervals | *2 | The distance from the preceding vehicle is too close, such as when a vehicle cut in front of your vehicle while the adaptive cruise control is operating.<br>Depress the brake pedal to maintain appropriate distance from the preceding vehicle. |
| | Interior buzzer<br>• Continuous beeps | *2 | While the adaptive cruise control was operating, the system has been canceled or your vehicle has stopped following the preceding vehicle.<br>Check the vehicle condition and set the vehicle speed again. |
| | Interior buzzer<br>• Beeps at short intervals | *2 | The adaptive cruise control could not be set.<br>Check the vehicle condition and set the vehicle speed again. |
| | Interior buzzer<br>• Short beep | *2 | The vehicle swaying warning has activated. Check the road conditions, carefully operate the steering wheel and return to center of the lane.(P.5-89) |
| | Interior buzzer<br>• Beeps at short intervals | *2 | The lane departure prevention has activated. Check the road conditions, carefully operate the steering wheel and return to the center of the lane.(P.5-89) |

| When | Warning buzzer | Instrument cluster | Cause and remedy |
|---|---|---|---|
| When driving | Interior buzzer<br>• Beeps at short intervals*3 | *2 | The lane departure warning has activated. Check the road conditions, carefully operate the steering wheel and return to the center of the lane.<br>If the setting is changed to vibration in the setting mode of the information display, the buzzer does not sound.(P.5-88) |
| | Interior buzzer<br>• Beeps at short intervals | *2 | The hands off steering wheel warning by the lane departure prevention has activated. Hold the steering wheel firmly.(P.5-90) |
| | Interior buzzer<br>• Beeps at short intervals | *2 | The hands off steering wheel warning by the lane keep assist has activated. Hold the steering wheel firmly and check the vehicle condition while driving.(P.5-96) |
| | Interior buzzer<br>• Continuous beeps | *2 | The hands off steering wheel warning has activated and lane keep assist has stopped. Hold the steering wheel firmly.(P.5-96) |
| | Interior buzzer<br>• Short beep | *2 | The lane keep assist has been canceled. Check the road conditions and set the lane keep assist again.(P.5-95) |

*3: You can select “Steering Vibration” via the setting mode of the information display.
For details, refer to “Setting mode of information display (Type B)”

**Vehicles with Electric Parking Brake**

| When | Warning buzzer | Instrument cluster | Cause and remedy |
|---|---|---|---|
| When driving | Interior buzzer<br>• Continuous short beeps |  <br>Lights up<br>*1 | The electric parking brake has not been released. Stop the vehicle in a safe place and release the parking brake. |
| When stopping | Interior buzzer<br>• Continuous short beeps | - | The electric parking brake has not been released, or the brake hold has not been set. Confirm safety, and release the electric parking brake or set the brake hold again. |
| When stopping | Interior buzzer<br>• 1 beep | *2 | The electric parking brake has been activated automatically in response to a request from other function (system). |
| When stopping | Interior buzzer<br>• Continuous short beeps | *1 | Since the vehicle may move, promptly depress the brake pedal, and park the vehicle in a place that is not on a steep slop |

# FAQ

## Q&A

Refer to the following list of frequently asked questions.

### Door opening / closing

Q. The keyless entry system does not work. What should I do?

A. There is a possibility that something is interfering with the function of the keyless entry system. Refer to “Keyless Push Start System Remote Controller” in the “BEFORE DRIVING” section.

A. If the battery of the keyless push start system remote controller is dead, replace it. Refer to “Battery replacement” in the “BEFORE DRIVING” section.

Q. A loud alarm sounds when opening the door. What does this mean?

A. The security system has been activated. Press the engine switch or the power switch to change the ignition mode to ON to stop the alarm. For the correct method of handling, refer to “Security System” in the “BEFORE DRIVING” section.

### Window glass

Q. How can I clear fog on the inside of the windshield and door glass areas?

A. Use the defroster switch. Refer to “Automatic Heating and Air Conditioning System (Climate Control)” in the “OTHER CONTROLS AND EQUIPMENT” section.

Q. How can I clear fog on the inside of the rear window glass?

A. Use the heated rear window switch. Refer to “Heated Rear Window Switch” in the “BEFORE DRIVING” section.

**Tyres**

Q. I get a flat tyre. What should I do?

A. Depending on the tyre conditions, you can repair the flat tyre by the flat tyre repair kit, or change the flat tyre with a spare tyre (optional). Refer to “Flat Tyre Repair Kit” or “Tyre Changing Tool” in the “EMERGENCY SERVICE” section.

**Running out of battery**

Q. The battery runs out and the engine does not start. What should I do?

A. Connect the battery of a vehicle for assistance to jump leads and start the engine. Refer to “Jump-starting Instructions” in the “EMERGENCY SERVICE” section.

**Engine oil**

Q. I would like to change the engine oil. What should I do?

A. Refer to “Engine Oil and Filter” in the “INSPECTION AND MAINTENANCE” section and “Specifications” in the “SPECIFICATIONS” section.

**ENG A-STOP system (if equipped)**

Q. The ENG A-STOP system does not work. What should I do?

A. Refer to “ENG A-STOP System (Engine Auto Stop Start System) (if equipped)” in the “OPERATING YOUR VEHICLE” section.

### Electrical equipment

Q. The headlights or brake lights do not light up. What should I do?

A. Check the light bulbs. Refer to “Bulb Replacement” in the “INSPECTION AND MAINTENANCE” section and “Specifications” in the “SPECIFICATIONS” section.

Q. I cannot use an electrical device. What should I do?


A. Check the fuses. Refer to “Fuses” in the “INSPECTION AND MAINTENANCE” section.

### SUZUKI SAFETY SUPPORT

Q. How can I know when SUZUKI SAFETY SUPPORT operates and does not operate?

A. Refer to “SUZUKI SAFETY SUPPORT (if equipped)” in the “OPERATING YOUR VEHICLE” section.

# FOR SAFE DRIVING

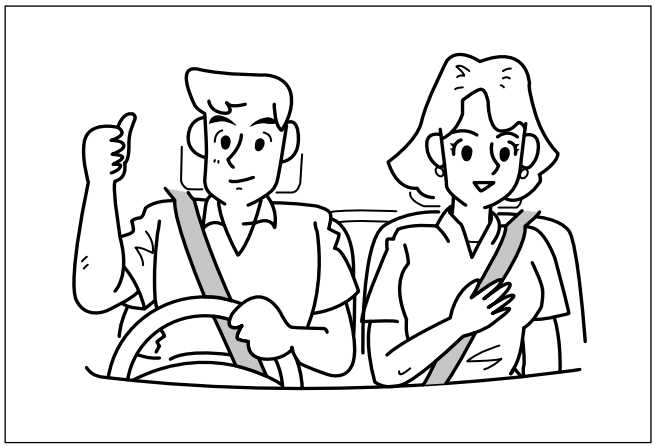


76TM02010


Driver's Seat Floor ..... 2-1
Seat Belts and Child Restraint Systems ..... 2-2
Front Seats ..... 2-5
Tilt / Telescoping (if equipped) Steering Lock Lever ..... 2-9
Mirrors ..... 2-9
Rear Seats ..... 2-15
Seat Utility ..... 2-16
Safety for Child ..... 2-18
Seat Belt ..... 2-22
Handling and Care for Seat Belt ..... 2-30
Seat Belt Pretensioner System (Only for Front Seat) ..... 2-32
Seat Belt Force Limiter System (Only for Front Seat) ..... 2-34
Child Restraint Systems ..... 2-35
Supplemental Restraint System (Airbags) ..... 2-50
When Driving the Vehicle with SRS Airbag System ..... 2-53
Handling for Airbags ..... 2-56
Function of Airbags ..... 2-59
When Starting the Engine ..... 2-67
When Loading the Luggage ..... 2-68
Hybrid system features (if equipped) ..... 2-70

## Driver's Seat Floor

### Floor Mats

**Example for genuine floor mat**

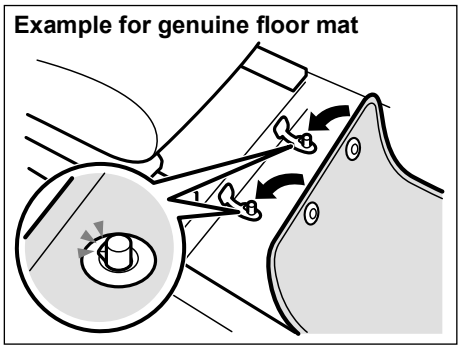

55T020010

To prevent the driver's side floor mat from sliding forward and possibly interfering with the operation of the pedals, Maruti Suzuki genuine floor mats are recommended.
Whenever you put the driver's side floor mat back in the vehicle after it has been removed, hook the floor mat grommets to the fasteners and position the floor mat properly in the footwell.

When you replace the floor mats in your vehicle with a different type such as all-weather floor mats, we highly recommend to use Maruti Suzuki genuine floor mats for proper fitting.

**⚠ WARNING**

**Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.**

- **Check that the floor mat grommets are hooked to the fasteners.**
- **Never stack floor mats.**
- **Never use a floor mat which does not fit the floor as the same may cause hindrance/damage in vehicle and its functioning.**
- **Never use damaged floor mats.**

### Clearing the Floor




69RHS157

**⚠ WARNING**

**Do not leave empty cans, etc. at your feet. These objects may interfere with pedal operation and cause accidents.**

## Seat Belts and Child Restraint Systems

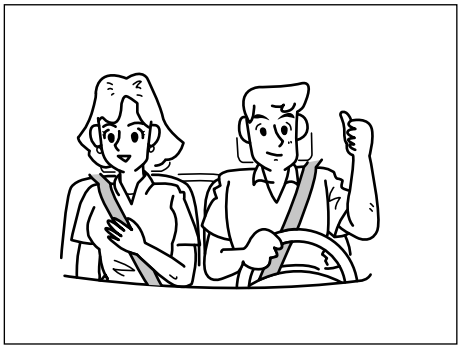

59RN02300

**⚠ WARNING**


- **Wear your seat belts at all times.**
- **An airbag supplements or adds to the frontal collision protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times, even if driving for a very short distance, whether or not an airbag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a collision.**

(Continued)


**⚠ WARNING**

(Continued)


- **Do not modify, remove, disassemble seat belts. Doing so may prevent them from functioning properly and cause the risk of severe injury or death in the event of a collision.**

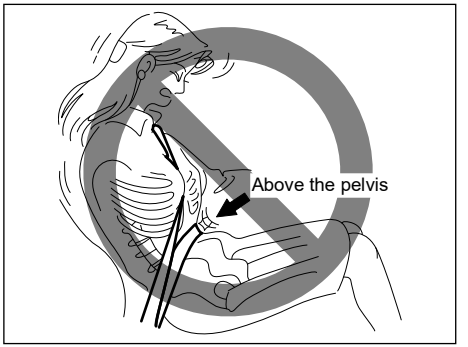


59RN02390

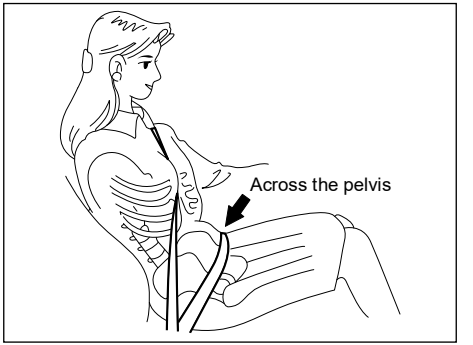


59RN02400

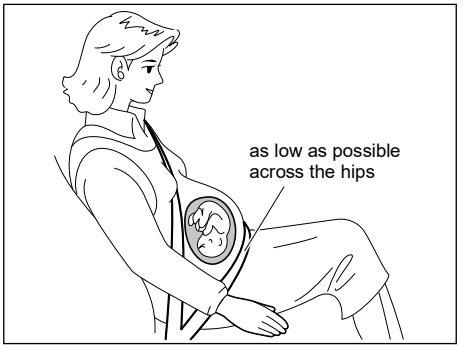


59RN02380

**⚠ WARNING**

- **Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.**
- **Ensure that all seat belts are worn correctly. An improperly worn seat belt increases the risk of injury or death if a collision occurs.**
- **Seat belts should always be adjusted as follows:**
  - **– the lap portion of the belt should be worn low across the pelvis, not across the waist.**
  - **– the shoulder straps should be worn on the outside shoulder only, and never under the arm.**
  - **– the shoulder straps should be away from your face and neck, but not falling off your shoulder.**
- **Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than a snug belt.**
- **Check that seat belt latch plate (tongue) is inserted into the proper buckle especially in the rear seats. It is not possible to insert into the wrong buckles in the rear seats.**

(Continued)

**⚠ WARNING**

(Continued)

- **Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the illustration.**
- **Do not wear seat belts over hard, fragile, or sharp items such as pens, keys, eyeglasses, etc in pockets or on clothing. The pressure from seat belt on such items can cause injury in case of an accident.**



59RN02440

- **Do not hold a child on a passenger's lap. Even if the passenger holds the child tightly, he/she would not be supported enough in the event of an accident and it could result in a serious injury of the child.**

(Continued)

**⚠ WARNING**

(Continued)

- **Never use the same seat belt for more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.**
- **Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.**
- **Children aged 12 and under should ride properly restrained in the rear seat.**


(Continued)

**⚠ WARNING**

(Continued)

- **Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Check that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.**
- **For child, if the seat belt irritates the neck or face, use a child restraint system appropriately for the child. The seat belts of your vehicle are principally designed for persons of adult size.**
- **Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.**
- **Do not insert any items such as coins, clips into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.**
- **All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.**

## Adjustment before Driving

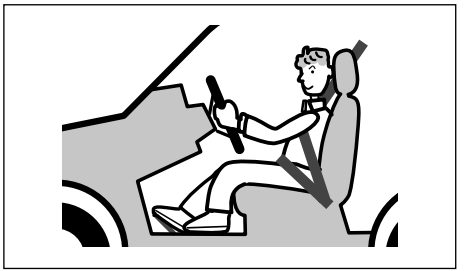


80J014

**⚠ WARNING**


- **When driving, do not adjust the steering wheel (only adjustable type with certain specifications), the seat, the inside rearview mirror or the outside rearview mirrors. Otherwise, there is the risk of mistaken operation of the steering wheel or reduced awareness of what is in front of you, possibly leading to an accident.**
- **Do not tilt the seatback further back than necessary. Otherwise, the head restraint and the seat belt cannot function as intended.**

## Correct Use of Seat Belt

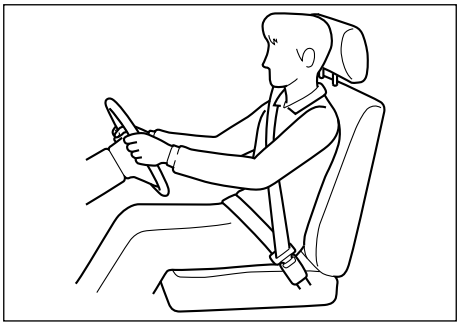

69RHS158

- Adjust the seat to the correct position. Sit your body fully into the seat.
- Make sure that the seat belt is not twisted.
- Make sure that you place the lap portion of the belt as low as possible across the pelvis.
- The upper belt should rest on the area midway between the shoulder and the base of the neck.
- Confirm that the belt is not twisted in any way, and remove any slack.

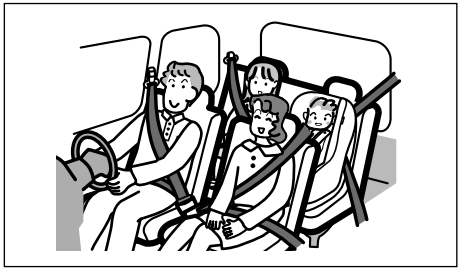

77R20050

**⚠ WARNING**

- **If you do not fasten your seat belt properly, your body may not be restrained in a sudden braking and a collision. This may cause severe injury.**
  **Fasten your seat belt properly before driving.**
- **If all the passengers do not fasten their seat belts properly, their body may not be restrained in a sudden braking and a collision. This may cause severe injury.**
  **Ask all the passengers on the front passenger's seat and the rear seats to fasten their seat belts properly before driving.**

## Front Seats

### Seat Adjustment

**⚠ WARNING**

- **Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Check that the driver's seat and seatback are properly adjusted before you start driving.**
- **To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, check that the seats are adjusted before the seat belts are fastened.**
- **All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.**
- **If you recline the seatback more than necessary, the seatbelt and SRS airbag system may not function properly in the event of an accident, resulting in serious injury. When driving, do not recline the seatback more than necessary.**

(Continued)

**⚠ WARNING**

(Continued)

- **If you place a cushion, etc. between the seatback and your back, you may not be able to drive the vehicle in a correct posture. Also, the seat belt and the head restraint may not provide the best performance. This may cause severe injury in an accident.**
  **Do not place a cushion, etc. between the seatback and your back.**
- **Do not place any object under the front seat. If an object gets stuck under the front seat, the seat shall not be latched properly and may cause injury.**
- **Do not place any object under the seat. If an object becomes caught under the seat, the following accidents or malfunctions may occur.**
  **– The seat will not be latched.**
  **– The parts under the seat get damaged.**
- **Do not leave cigarette lighters or spray cans on the floor. If a cigarette lighter or spray can is on the floor, it may light accidentally when luggage is loaded or the seat is adjusted, causing a fire.**

**⚠ CAUTION**

**When you adjusting the seat, observe the following points.**
- **Your hands or feet may get caught and be injured.**
  **Do not put your hands or feet under the seat or near the moving parts**
- **Passengers may get injured by hitting a moving seat.**
  **Check your surroundings and ensure the safety of passengers.**


## Manual seat (if equipped)

**⚠ WARNING**

**If the seat is not securely latched, it may move unexpectedly while driving and result in an accident. After making adjustment the seat, check it by moving back and forth to ensure it is securely latched.**


**⚠ CAUTION**

**If you operate the reclining lever while away from the seatback, the seatback may suddenly spring up, resulting in injury. Do not operate the reclining lever while away from the seatback. When operating it, make sure to support it with your hand.**

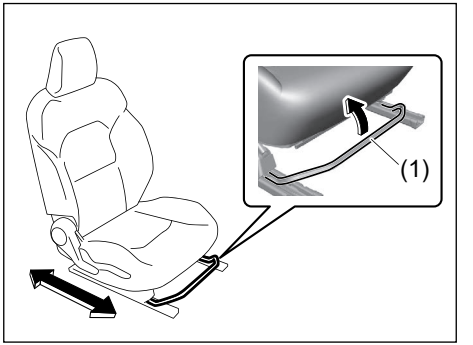



76TS20010

**Seat position adjustment lever (1)**
Pull the lever up and slide the seat.

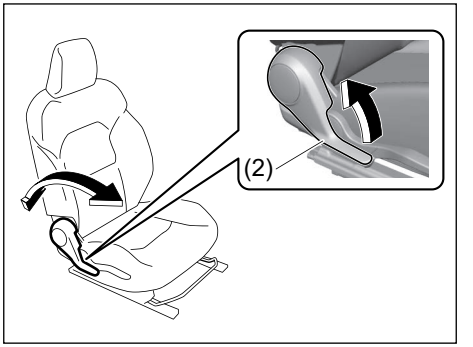


76TS20020

**Seatback angle adjustment lever (2)**
Pull the lever up and move the seatback.

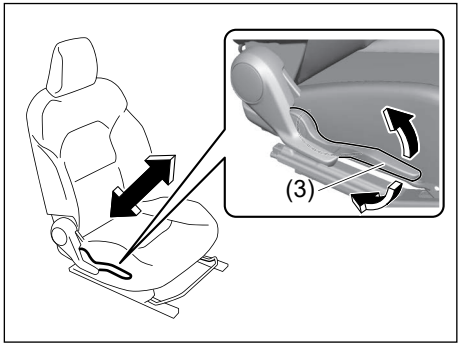


76TS20030

**Seat height adjustment lever (3) (if equipped)**
Pull the lever up to raise the seat. Push the lever down to lower the seat.


After adjustment, move the seat and seatback back and forth to check if it is securely latched.

*NOTE:*
*To operate the seat back smoothly, pull the seat back adjustment lever (2) in upward direction. Ensure to move seat back only after lever is moved to fully up position. After adjustment of seat back, release the lever gently. Check that seat back is locked by moving it forward and backward.*

## Power seat (if equipped)


***NOTICE***

- **If you adjust the power seat for a long time during engine running off condition, the lead acid battery may discharge.**
- **Power seat is driven by electric motors. Stop operating the seat once the adjustment is done. Continuous operation of power seat may stop the electric motors function for a while. The power seat will resume operating again normally after some time.**

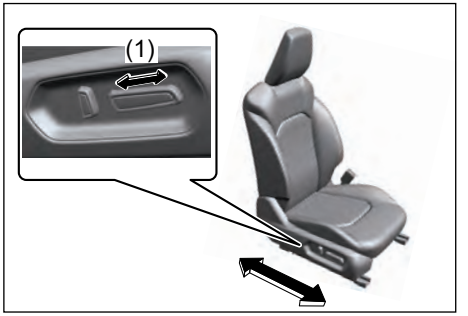



71UM02015

**Seat position adjustment (1) (driver's seat)**
Operate the switch and slide the seat.

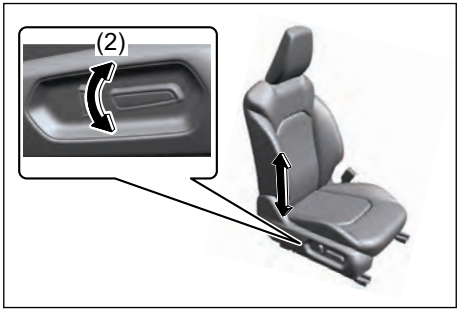



71UM02016

**Seat height adjustment (2) (driver's seat)**
Operate the switch and raise/lower the entire seat.

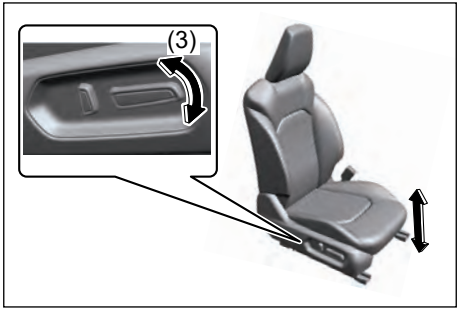


71UM02017

**Cushion angle adjustment (3) (driver's seat)**
Operate the switch and raise/lower the front of the cushion.

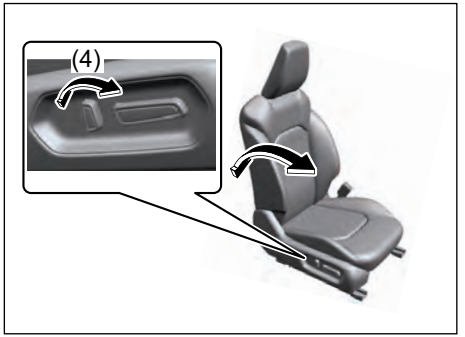



71UM02018

**Seatback angle adjustment (4) (driver's seat)**
Operate the switch and adjust the angle of the seatback.

**⚠ WARNING**

- **Do not leave children unattended in vehicle. Children can be injured if they get part of their body caught by the seat during operation.**
- **Observe the following precautions when operating the power seat.**
  - **Check and ensure there are no obstacles or belongings under the seat that could get caught during seat movement. Failure to do so may cause damage to belongings or seats.**

## Head Restraints

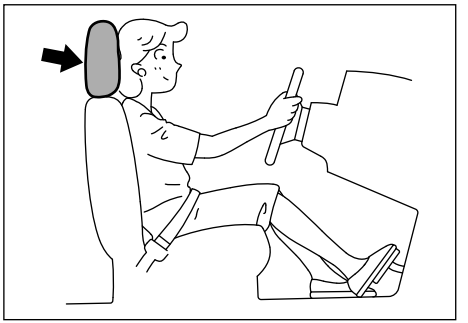


80J001

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident. Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

**⚠ WARNING**

- **If you drive the vehicle with the head restraint removed, a passenger's backward tilting cannot be prevented in a collision from the backward and the impact to a passenger's head cannot be reduced in a sudden braking or a collision. This may cause severe injury. Never drive the vehicle with the head restraints removed.**
- **If the head restraint is installed back to front or it is not installed securely, the head restraint may not provide the best performance in case of emergency, resulting in severe injury.**
  **If the head restraint is installed back to front, you cannot adjust the height and install it securely. Make sure to install the head restraint securely in the right direction.**
- **Being distracted by head restraint adjustment could lead to an accident.**
  **Do not attempt to adjust the head restraint while driving.**


*NOTE:*
*It may be necessary to recline the seatback to provide enough overhead clearance to remove the head restraint.*

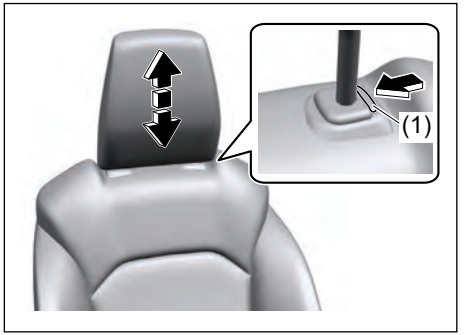


71UM02031

To raise the front head restraint, pull upward the head restraint until it clicks. To lower the head restraint, push down the head restraint while holding in the lock button (1). If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock button (1) and pull the head restraint all the way out.

## Tilt / Telescoping (if equipped) Steering Lock Lever

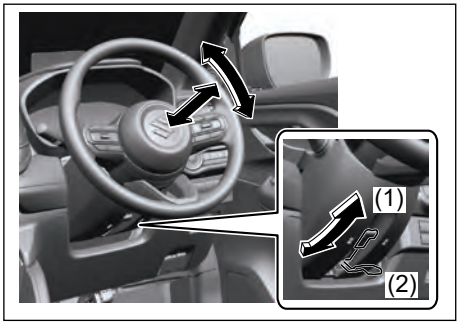


71UM02001

(1) LOCK
(2) UNLOCK

The lock lever is located under the steering column. To adjust the steering wheel height:

1) Push down the lock lever to unlock the steering column.
2) Adjust the steering wheel to the desired height and fore-aft position and lock the steering column by pulling up the lock lever.
3) Try moving the steering wheel up and down back and forth to check that it is securely locked in position.

**⚠ WARNING**


**Never attempt to adjust the steering wheel while the vehicle is moving or you could lose control of the vehicle.**

## Mirrors


**⚠ WARNING**

- **Failure to observe following point may result in loss of vehicle control and cause an accident, leading to death or serious injury. Always follow below points while driving.**
- **Always unfold all the outside rearview mirrors and adjust properly before driving.**
- **Do not place objects in the rear of the vehicle which may hinder visibility or interfere with your vision from the rear window glass.**

### Inside Rearview Mirror

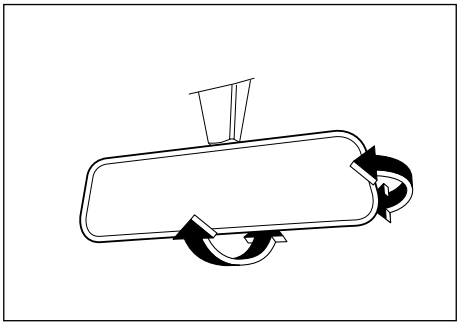

81M30360

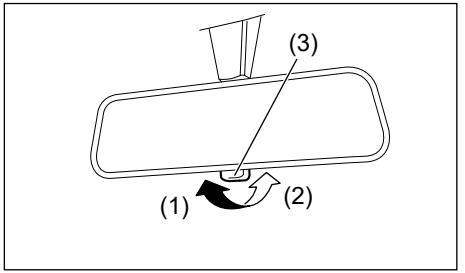


83S02352

(1) Night driving
(2) Day driving
(3) Selector tab

You can adjust the inside rearview mirror by hand to see the rear of your vehicle in the mirror. To adjust the mirror, set the selector tab (3) to the day position, then move the mirror up, down or sideways by hand to obtain the best view.
When driving at night, you can move the selector tab (3) to the night position to reduce glare from the headlights of vehicles behind you.


**⚠ WARNING**

- **If you adjust the inside rearview mirror while driving, you could lose control of the vehicle, resulting in an accident.**
  **Adjust the inside rearview mirror before driving.**
- **Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you. Be aware that in this position you may not be able to see some objects that could be seen in the day position.**

**⚠ CAUTION**

**Do not modify the inside rearview mirror or install a non-genuine wide mirror. It could result in injury during accident.**

## Auto Dimming Rearview Mirror (if equipped)

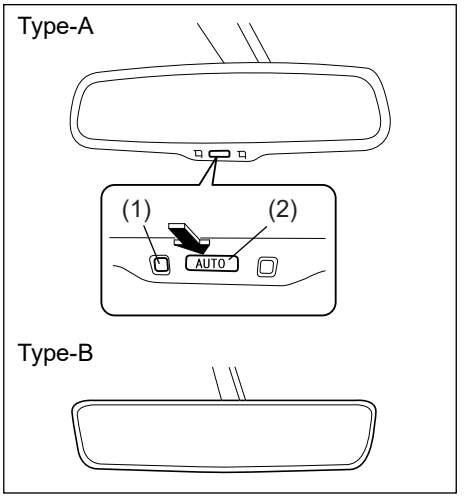



71UM02030


You can adjust the auto dimming rearview mirror by hand so you can see to the rear of your vehicle in the mirror. This rearview mirror has a function of automatically reducing glare from the lights of vehicles behind you. The function works when the ignition mode has been changed to “ON” by pressing the engine switch or the power switch.

- The mirror is always set to the automatic dimming mode when the ignition mode is “ON”.

- When the switch (2) is pushed, the green indicator (1) is lit, indicating that the mirror is set to the automatic dimming mode. To cancel the automatic dimming mode, push the switch (2); the indicator (1) then goes out.
- The auto dimming rearview mirror is automatically deactivated while the gear-shift lever is in the “R” position.

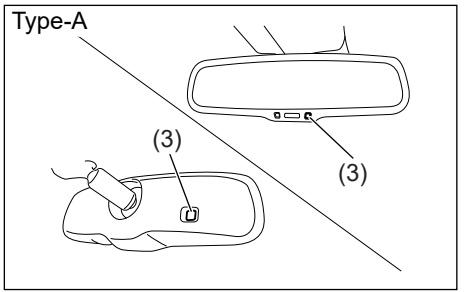


57L30020

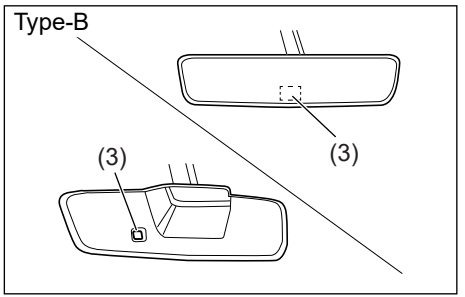


71UM02029

**⚠ CAUTION**

**The electrolyte may come out when the mirror is broken. Do not allow it to come into contact your skin or eyes. If it accidentally comes in contact with eyes or skin, flush with water and consult a doctor immediately.**

***NOTICE***

**Do not hook anything heavy on the mirror, or the mirror may break under the weight.**

*NOTE:*
*Auto dimming system may not work in any of the following cases:*
- *Light from the rear is not directly focused to the sensor (3).*
- *Rear window glass is not transparent enough or is dark tinted glass.*


## Outside Rearview Mirrors

Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

**⚠ WARNING**

**If you adjust the outside rearview mirror while driving, you could lose control of the vehicle, resulting in an accident.**
**Adjust the outside rearview mirror before driving.**

### Electric mirrors

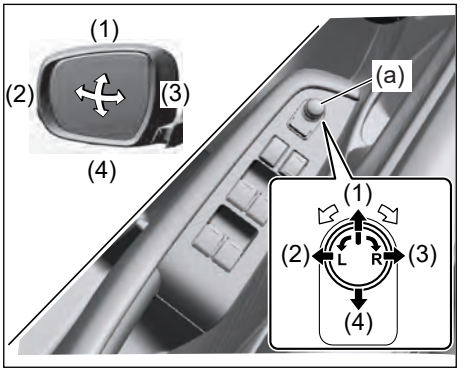


71UM02002

The switch to control the electric mirrors is located on the driver’s door panel. You can adjust the mirrors when the ignition mode


is ACC or ON. To adjust the mirrors:

1) Move the selector switch (a) to the left or right to select the mirror you wish to adjust.
2) Press the outer part of the switch (a) that corresponds to the direction in which you wish to move the mirror.
3) Return the selector switch (a) to the center position to help prevent unintended adjustment.


***NOTICE***

- **The electric type outside rearview mirror operates even though the ignition switch is in the ACC position. However, to prevent unnecessary battery discharge, do not adjust the mirrors longer than necessary while the engine is not running.**
- **The mirrors stop moving when they reach the maximum adjusting angles, but the motor continues to operate while the switch is pressed. Do not continue to press the switch in such a situation as the motor may be damaged.**
- **Do not attempt to adjust the outside rearview mirror by hand which may cause damage to the motor.**
- **Do not fold the electrical foldable outside rearview mirror by hand. It could cause motor failure.**

## Outside Rearview Mirror Folding Switch (if equipped)

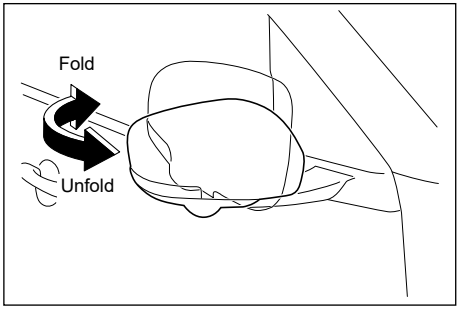


76TS20070

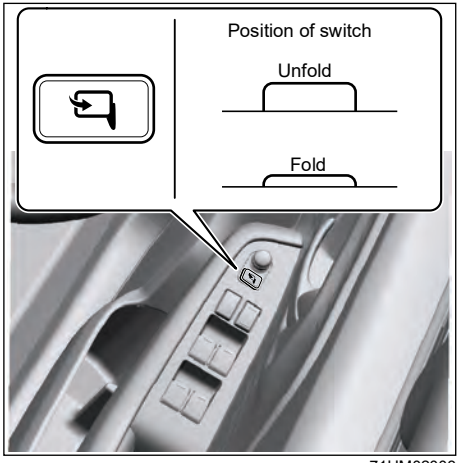


71UM02003

You can fold the mirrors when you park the vehicle in a narrow space. Push the folding switch to fold and unfold the mirrors. Make sure the mirrors are completely unfolded before you start driving.

**⚠ WARNING**

**If you drive the vehicle with the outside rearview mirrors folded, it may result in an accident.**
**Do not drive the vehicle with the outside rearview mirrors folded.**

**⚠ CAUTION**

**Moving mirrors can pinch and injure a hand. Do not allow anyone's hand to get near the mirrors when folding and unfolding the mirrors.**

*NOTE:*

- *If you press the folding switch to open the outside rearview mirrors and simultaneously start the engine, then the outside rearview mirrors may get stuck during that moment. To open the outside rearview mirrors completely, again press the folding switch after starting the engine.*
- *Slight time difference in opening of both outside rearview mirrors is due to angular positioning of the driver seat.*

## Remote Folding Mirrors (if equipped)

When the outside rearview mirror folding switch is in the unfolded position, the outside rearview mirrors are folded or unfolded in conjunction with the door locking or engine switch operation.

- When you lock the doors (including the tailgate) by using the remote controller or pushing the request switch, the mirrors will be folded automatically.
- To unfold the mirrors, push the engine switch to change the ignition mode to ACC or ON.
- The factory setting is that the function is enabled. You can switch the function from enabled to disabled, and vice versa. To switch the function for your preference, refer to “How to switch the remote folding mirror function” in this section.

| *NOTICE* |
| --- |
| **In a cold winter such as the mirrors are frozen, disable the function. If the mirrors are folded and unfolded repeatedly without thawing, the mirrors may be damaged.** |


*NOTE:*

- *If the doors are locked by using the key or lock knob, the mirrors will not be folded automatically.*
- *If the outside rearview mirror folding switch is in the folded position, the mirrors will not be unfolded automatically, even when the engine switch is pushed to change the ignition mode to ACC or ON.*
- *If any of the doors is not opened within about 30 seconds after the doors are unlocked by using the keyless push start system remote controller or request switch, the doors will be locked again and the mirrors will be folded automatically.*

**How to switch the remote folding mirror function**

When the ignition mode is LOCK (OFF), you can switch the function from the enabled state to the disabled state, and vice versa, using the following method.


1) Sit in the driver’s seat and make sure that all doors are closed.
   - If any door is open, the open door warning light comes on.

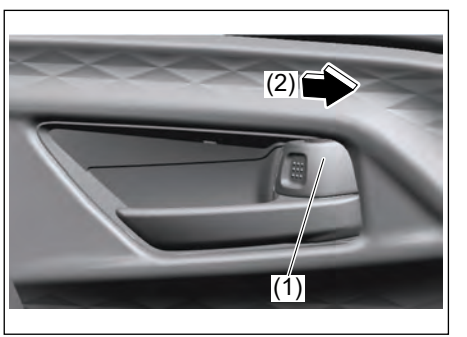


71UM02004


2) Turn the lock knob (1) on the driver’s door rearward (2).

*NOTE:*
*All operations included in the following steps 3) and 4) must be completed within 15 seconds.*

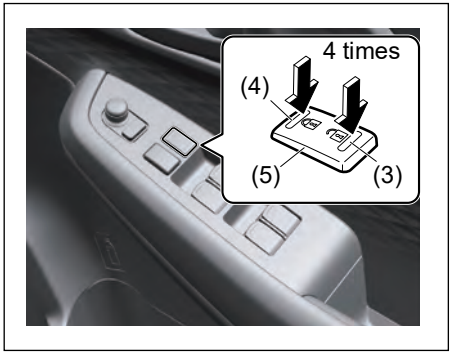


71UM02005

3) Push the lock end (4) (forward end) of the power door lock switch (5) to lock the doors, and then the unlock end (3) (backward end) to unlock the doors. Repeat these operations 4 times and finally push the lock end of the switch.

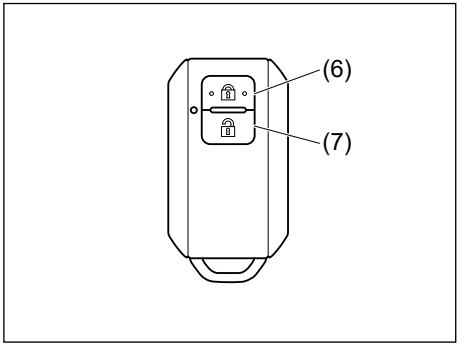


76TM02002

(6) LOCK button
(7) UNLOCK button

4) Push any of the buttons on the keyless push start system remote controller 3 times.
   - Push any buttons described above you like.
   - During operation, the doors are not locked, unlocked, opened or closed.

Every time you perform the series of the above steps, the state of the remote folding mirror function changes from the currently selected one to the other. You can check whether the system is enabled or disabled by the number of interior buzzer beeps at the end of the procedure as follows.

| System state | Number of beeps |
|---|---|
| Disabled | Once |
| Enabled | Twice |

- If you cannot complete the operations in step 3) and 4) within 15 seconds correctly, the state of the remote folding mirror function will not change and the interior buzzer does not beep. Perform the procedure again from the beginning.

## Rear Seats

### Head Restraints

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident.

**⚠ WARNING**

- **If you drive the vehicle with the head restraint removed, a passenger's backward tilting cannot be prevented in a collision from the backward and the impact to a passenger's head cannot be reduced in a sudden braking or a collision. This may cause severe injury. Never drive the vehicle with the head restraints removed.**
- **If the head restraint is installed back to front or it is not installed securely, the head restraint may not provide the best performance in case of emergency, resulting in severe injury.**
  **If the head restraint is installed back to front, you cannot adjust the height and install it securely. Make sure to install the head restraint securely in the right direction.**

(Continued)

**⚠ WARNING**


(Continued)

- **Being distracted by head restraint adjustment could lead to an accident.**
  **Do not attempt to adjust the head restraint while driving.**
- **If you try to install a child restraint system and it touches the head restraint, a child may be severely injured in a collision.**
  **When you install a child restraint system, adjust the height of the head restraint as high as possible or remove the head restraint for avoiding that the child restraint system touches the head restraint.**


**⚠ CAUTION**

**If you leave the removed head restraint in the vehicle, it may jump out and hit passengers or objects, resulting in injury or damage. Do not leave the removed head restraint in the vehicle.**

*NOTE:*
*It may be necessary to fold forward the seatback to provide enough overhead clearance to remove the head restraint.*

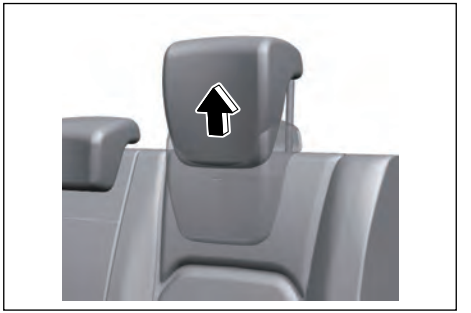

71UM02032

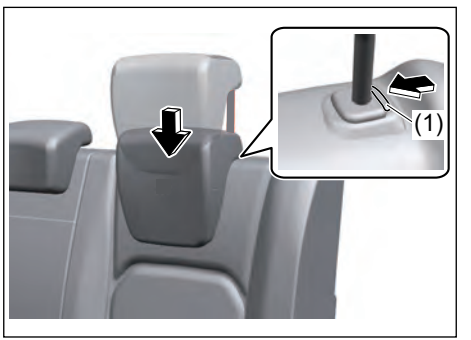



71UM02033

To raise the rear head restraint, pull up the head restraint until it clicks. To lower the head restraint, push down the head restraint while holding in the lock button (1). If a head restraint must be removed (for cleaning, replacement, etc.), push in

the lock button (1) and pull the head restraint all the way out.

When installing a child restraint system, adjust the height of the head restraint or remove it for fitting the child restraint system, as necessary.

**Rear center head restraint**

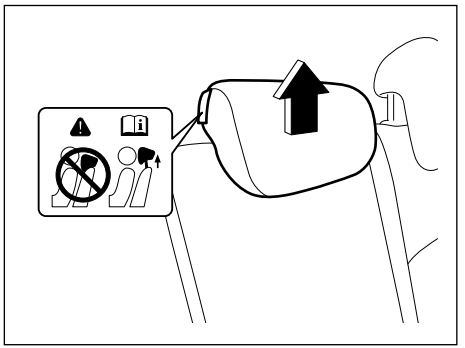

52RM251

When using the rear center head restraint, pull it up and lock it securely before driving.

**⚠ WARNING**

**Do not allow anyone to sit in the rear center seat with the rear center head restraint removed or in stowed position.**


## Seat Utility

### Folding Rear Seats

The rear seats of your vehicle can be folded forward to provide additional cargo space.

To fold the rear seats forward:

1) Lower the head restraint fully.

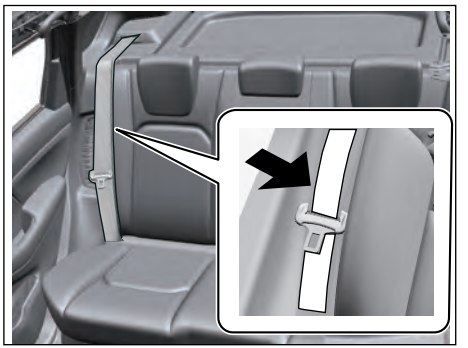


71UM02006

2) Move the outboard lap shoulder belts to the rear door side trims.

***NOTICE***

- **When you move a seatback, make sure the seat belts are placed on the rear door side trims so the seat belts and buckles are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.**
- **Make sure the belt webbing is not twisted.**

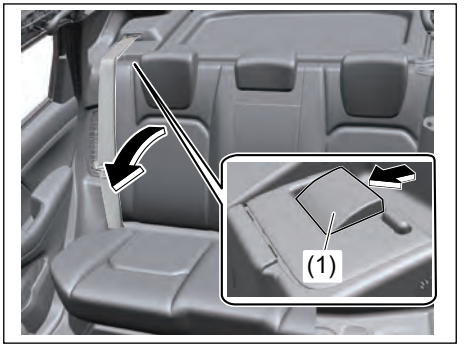


71UM02007

3) Slide the release lever (1) on the top of each split seat in arrow direction, and fold the seatbacks forward.

**NOTICE**

**After folding the rear seatback forward, do not allow any foreign material to enter the lock opening. This may cause damage to the inside of the lock and prevent the seatback from being locked securely.**

**⚠ WARNING**

**If you need to carry cargo in the passenger compartment with the rear seatback folded forward, secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatbacks.**


To return the seat to the normal position, follow the procedure below.

**⚠ CAUTION**

**When returning the rear seatback to the normal position, be careful that your finger is not caught between the lock and the striker.**

**NOTICE**

**When you move a seatback, make sure the seat belts are placed on the rear door side trims so the seat belts and buckles are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.**

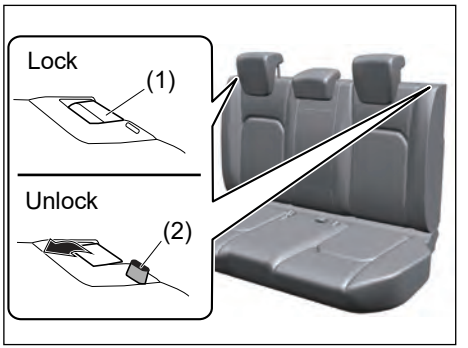


71UM02024

Raise the seatback until it locks into place.

After returning the seat, move the seatback back and forth to check if it is securely latched.

**⚠ CAUTION**

**Do not put your hand into the rear seatback lock opening, or your finger may get caught and be injured.**

**⚠ CAUTION**

**After securing the rear seatback, check that it is locked securely. If it is not, red indicator (2) will appear beside the release lever (1).**


**NOTICE**

- **When returning the rear seatback to the normal position, do not allow any foreign material to enter the lock opening. This may prevent the seatback from being locked securely.**
- **When returning the rear seatback to the normal position, handle it carefully by hand to avoid any damage to the lock itself. Do not push it by using some material or by applying excessive force.**
- **As the lock is designed exclusively for securing the rear seatback, do not use it for any other purpose. Incorrect use of it may cause damage to the inside of the lock and prevent the seatback from being locked securely.**
- **When returning the rear seatback to the normal position, check that there is nothing around the striker. Any foreign materials prevent the seatback from being locked securely.**

## Safety for Child

For safety, carefully drive at lower speed than usual.

### Place a Child in the Rear Seat

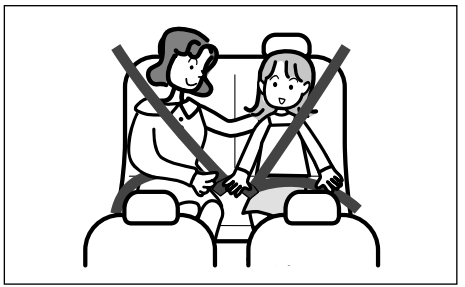

51K0188

- Seat a child next to an adult when possible, and ensure that the child can be visually monitored.
- Select an appropriate child restraint system suitable for the child's age and physical size.

**⚠ WARNING**

- **If you do not use the child-proof lock, a child may open a door and the child may be thrown out, resulting in severe injury. To avoid this, use the child-proof lock setting.**
- **When it is necessary to seat the child who does not need a child restraint system in the front passenger's seat, observe the following point.**
  - **Slide the front passenger's seat all the way back. If the front passenger's seat is in a forward position, there is a risk of serious injury due to major impact if the front passenger's seat airbag was to be deployed.**

(Continued)

**⚠ WARNING**

(Continued)



59RN04650

- **If a child put a hand out of the window or lean on a door, the child may get severe injury by a strong impact of side or curtain airbag activation.**
  **Do not allow a child to put hand out of the window or lean on a door.**

- **Do not allow the hands or feet, etc., of a child near movable parts inside a vehicle, such as the armrests and the seat rails. Otherwise, there is the possibility of injury.**

### A Child Needs to Wear Seat Belt



69RHS159

**⚠ WARNING**

- **Do not drive with a child on your lap. Even if you hold the child tightly, proper support is not possible, and in the event of a collision, etc., the child may get serious injury.**
- **If a child does not wear a seat belt, in a sudden braking and a collision, the child may get serious injury. Be sure to always have a child wear a seat belt.**

(Continued)

**⚠ WARNING**

(Continued)

- **If two or more people use a single seat belt, in a sudden braking and a collision, the seat belt may not provide the best performance, resulting in severe injury.**
  **Do not allow two or more people to use a single seat belt.**




69RHS160

**⚠ WARNING**

- **The seat belts of this vehicle are designed to be suitable for occupants of adult size. If the shoulder strap rests on the neck or chin of a child rather than the shoulder, or if the lap portion of the belt does not rest securely on the hipbone, ensure that the child is seated in a child restraint system placed in the rear seat. Failure to properly use a seat belt may result in serious injury to the child.**
- **Use a child restraint system securely fastened to the rear seat for any child that cannot hold their head upright or sit on their own.**

### Do not Let a Child Play with Seat Belt

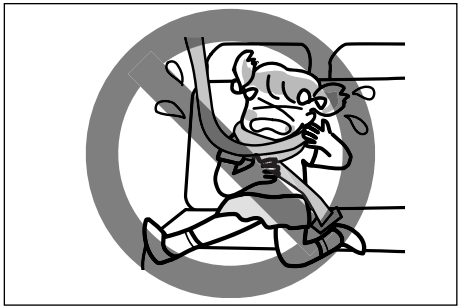

69RHS161

**⚠ WARNING**

**If a child play with a seat belt, for example, if the child's body is wrapped by the seat belt, it may cause severe injury such as suffocation. In case of emergency, cut the seat belt with scissors.**

### Using the Child Restraint System

Refer to “Securing Child Restraint System by Seat Belt” in this section.

### An Adult Needs to Open or Close Each Door, Window or Tailgate, and Adjust Seats

Only an adult should open or close each door or window and adjust seats, not to get a child’s hands, arms, legs or neck, etc. caught in.



69RHS162

**⚠ WARNING**

- **If the windows are not locked, a child may operate the windows by mistake or the other passengers may be caught in the windows. To avoid unintended operation of the power window by a child, use the window lock switch.**


(Continued)

**⚠ WARNING**

(Continued)

- **If you leave the power window in ready condition, it may cause unintended operation of the power window by a child, resulting in an accident.**
  **When you leave the vehicle, make sure to press the engine switch to change the ignition mode to OFF, keep the key with you and leave the vehicle with your child.**

### Do not Let a Child Stick His/her Head or Hands out of the Window

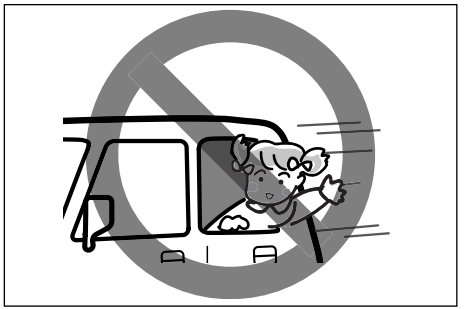


69RHS163

**⚠ WARNING**

**Ensure that a child does not put their hands or heads, etc., out the windows. Otherwise, serious injuries due to falling out or sudden braking may occur. Moreover, serious injury could also occur if a child were to come into contact with objects outside the vehicle.**

### Do not Leave a Child Unattended in the Vehicle

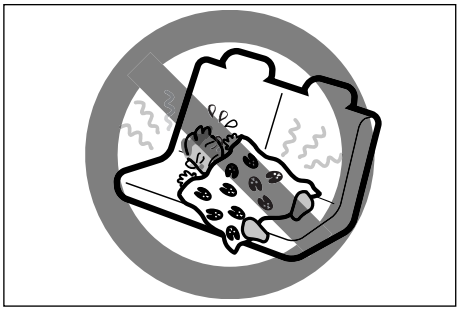

69RHS164

**⚠ WARNING**

**When getting out of the vehicle, do not allow a child to stay in the vehicle without you.**

- **Unintended and wrong operations by a child may cause a fire or an accident from the vehicle start.**
- **As the inside temperature of the vehicle will become hot under the blazing sun, a child may suffer from heat stroke or dehydration, resulting in severe health problems or death in the worst case. Even if you turn on the air conditioner, do not leave a child alone in the vehicle.**

(Continued)


**⚠ WARNING**

(Continued)

**Never leave children unattended in the vehicle, and never allow children to have or use the key.**

- **Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the side windows or other features of the vehicle.**

### Do not Place a Child in Luggage Compartment

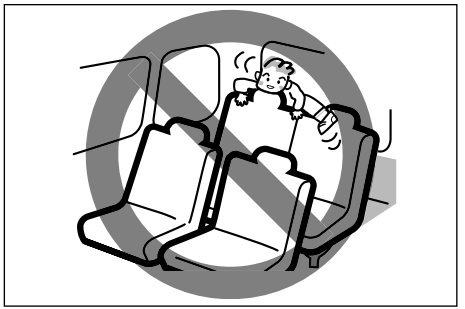

69RHS165

**⚠ WARNING**

**The luggage areas do not feature a structure that can accommodate people. Do not allow a child to ride in such areas. Otherwise, there is the danger of accidents due to sudden braking, etc. Do not let a child play in luggage areas even while the vehicle is stopped on the road.**

**⚠ WARNING**


- **Do not let small children operate equipment which may catch or pinch body parts, such as the power window, hood, tailgate, seats, etc.**
- **Do not allow children to play in the luggage compartment. If a child is accidentally locked in the luggage compartment, they could get heat exhaustion or other injuries.**

## Seat Belt

### A Child Needs to Wear Seat Belt

Refer to “Safety for Child” in this section.

### Information for Pregnant Woman and the Sick Person

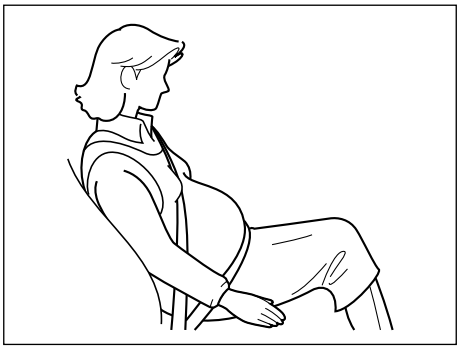

69RHS166

**⚠ WARNING**


- **Those that are pregnant or sick/disabled must also wear their seat belts. However, in the event of a collision, there is the danger of heavy pressure focused on certain body areas. Consultation with a physician is recommended.**
- **For those that are pregnant, ensure that the lap portion of the belt is as low as possible across the pelvis, avoiding to touch the abdomen. Make sure that the shoulder strap rests halfway between the shoulder and the base of the neck, crossing the chest and avoiding to touch the abdomen.**

## Lap-shoulder Belt


### Emergency locking retractor (ELR)

The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this happens, let the belt go back to unlock it, and then pull the belt across your body more slowly.

### Safety reminder

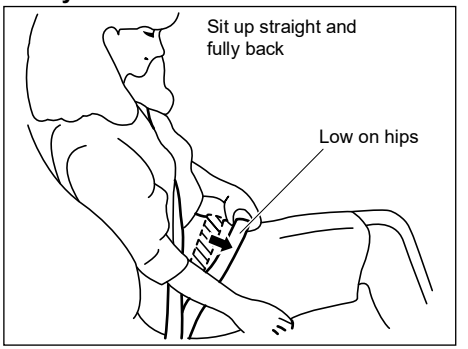



59RN02310

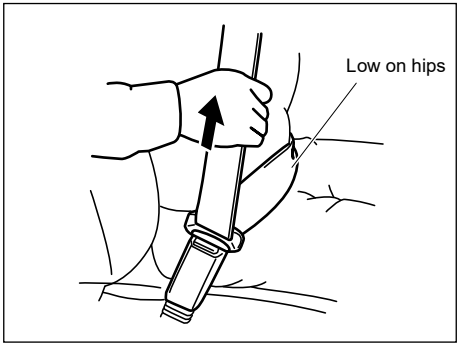



59RN02320

To reduce the risk of sliding under the belt during a collision, position the lap portion of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length of the diagonal shoulder strap adjusts itself to allow freedom of movement.

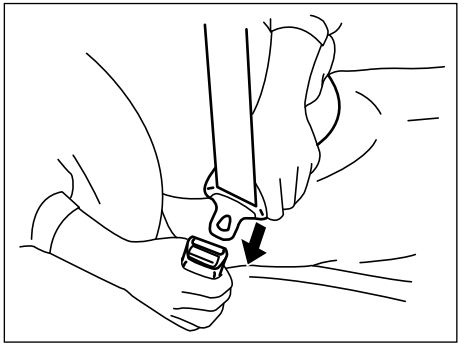


59RN02330

To fasten the seat belt, sit up straight and far back into the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a click. After pressing the latch plate into the buckle, pull the seat belt to make sure it is securely latched.

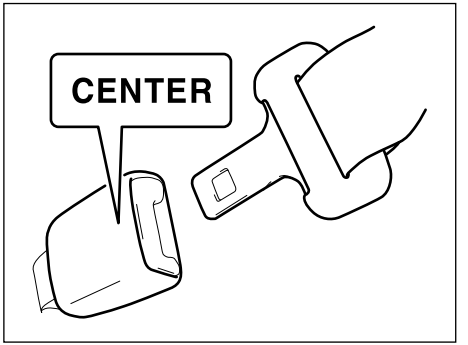


80J2008

*NOTE:*
*The word "CENTER" is marked on the buckle for the rear center belt. The buckles are designed so a latch plate cannot be inserted into the wrong buckle.*

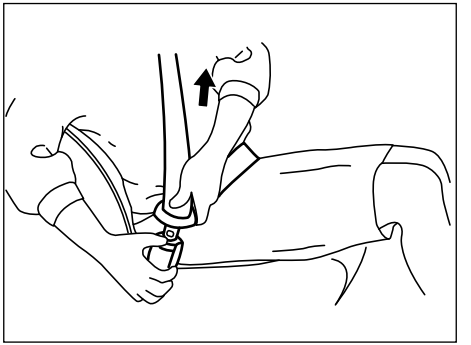


59RN02340

To unfasten the seat belt, push the red "PRESS" button on the buckle and retract the belt slowly while holding the belt or/and the latch plate.

*NOTE:*
*If the seat belt cannot be pulled from its fully retracted position, firmly pull the belt and release it. Then smoothly pull the belt out of the retractor.*

## Lap-Shoulder Belt with Detachable Connector

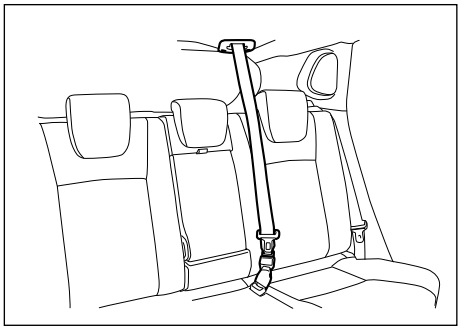


65T02100

The rear center lap-shoulder belt has a buckle, a latch plate and a detachable connector. The buckle is marked as “CENTER” for distinction from the rear left seat belt buckle. The rear center seat belt buckle and the connector are designed so as not to allow a wrong latch plate to be inserted.

When the rear seatback is in the upright position, keep the detachable connector latched. Only when the rear seatback will be folded down, unlatch the detachable connector. To latch and unlatch the connector, see “Unlatching and Latching Detachable Connector” later in this section.

### Fastening

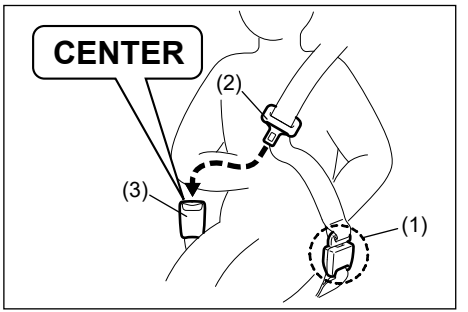



61MM0A060a

Before fastening the rear center lap-shoulder belt, make sure the detachable connector (1) is securely latched and the webbing is not twisted.


To fasten the belt, sit up straight and well back in the seat, pull the latch plate (2) across your body and press it straight into the buckle (3) until you hear a click.

### Unfastening

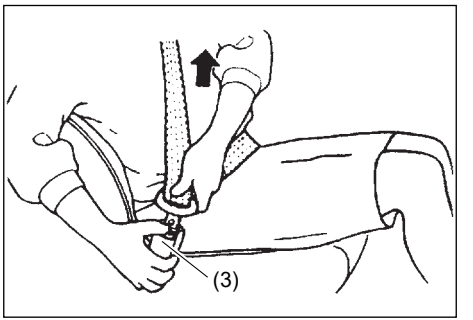



61MM0A094a

To unfasten the seat belt, push the button on the buckle (3) and retract the belt slowly while attaching a hand to the belt or/and the latch plate.

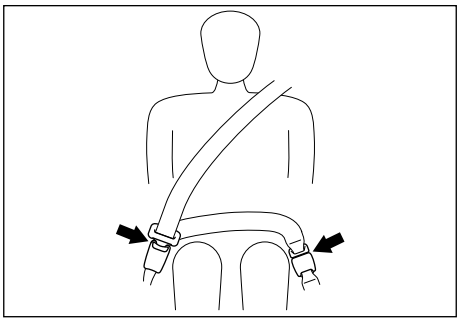

61MM0A061

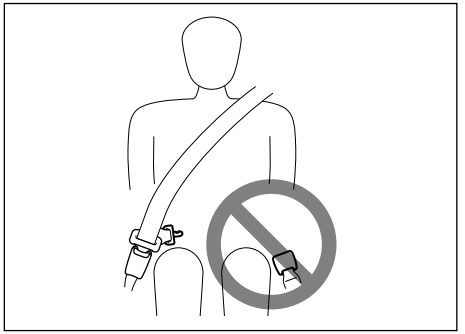


61MM0A062

**⚠ WARNING**

**To minimize risk of severe injury or death in the event of a collision, always wear seat belt with both latches buckled.**

## Unlatching and Latching Detachable Connector

### Unlatching

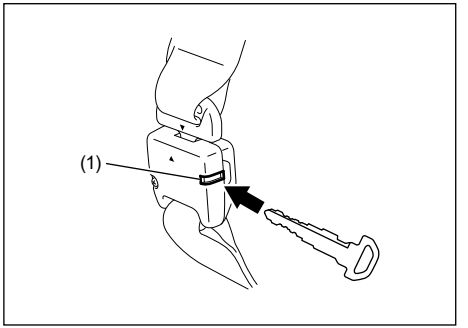


76TS40620

To unlatch the connector:

1) Insert a latch plate into the slot (1) on the connector and allow the belt to retract.
2) Once the belt has completely retracted, stow the belt in the holder. Refer to “Stowing Rear Center Lap-Shoulder Belt” for details later in this section.


***NOTICE***

**When the rear seatback is folded forward, be sure to unlatch the connector of rear center lap-shoulder belt. Otherwise, the seat belt webbing can be damaged.**

### Latching

To latch the connector:

1) Pull the belt out from the holder.

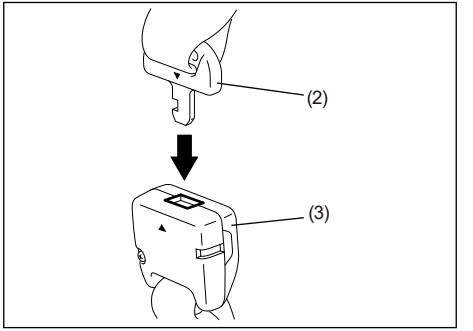


61MM0A064


2) Insert the connector latch plate (2) into the connector (3) until you hear a click.

**⚠ WARNING**

**Make sure the detachable connector is securely latched and the webbing is not twisted.**

### Stowing Rear Center Lap-Shoulder Belt

Stow the belt after it is retracted completely.

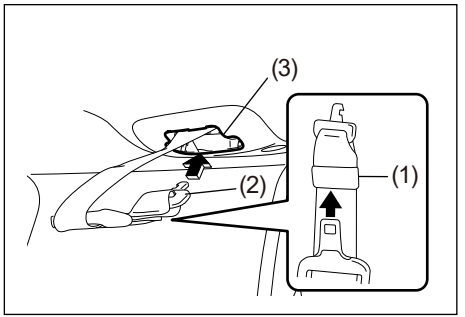


61MM0A065

To stow the belt, insert the latch plate into the slit (1). Then insert the connector latch plate (2) into the roof holder slot (3).

### Adjustment of Seat Belt Length

The seat belt does not require length adjustment. The seat belt extends and retracts according to the movement of the body. If the seat belt gets a strong impact, the belt locks its tension automatically, in order to secure the body.


### Correct Use of Seat Belt

**⚠ WARNING**

- **Use the seat belt correctly. Otherwise, in a sudden braking or a collision, the body may not be restrained, resulting in severe injury. Observe the following points.**
- **If the seat belt is twisted or contains excessive slack, there is danger of heavy pressure focused on certain body areas.**
- **If the seat belt rests on the abdomen, this area may sustain heavy pressure when you get a strong impact.**
- **If the seat belt does not rest firmly over the shoulder, you may be thrown forward when you get a strong impact.**


## Seat Belt Reminder

**Type A**

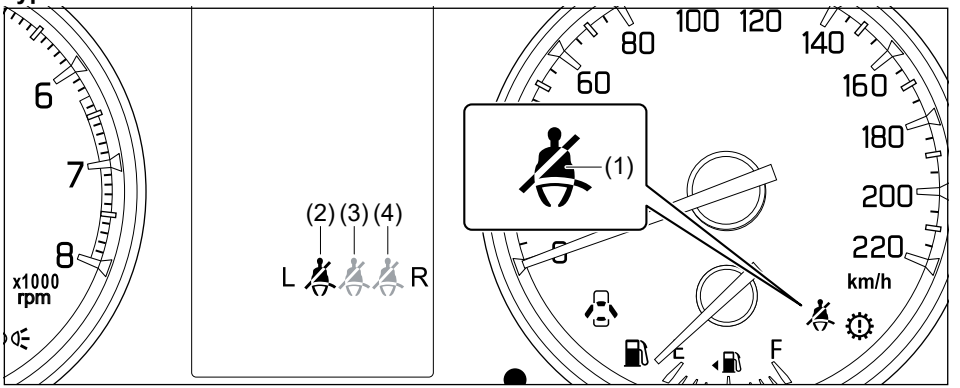


71UM02019

**Type B**

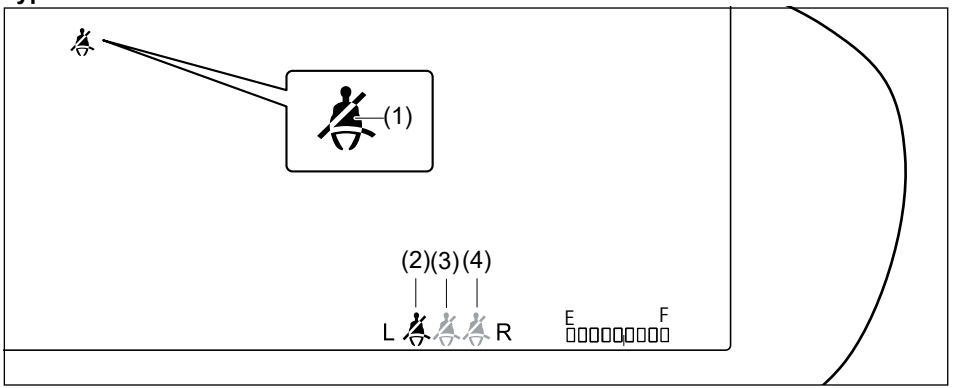


71UM02020

1) Driver's seat belt reminder light / front passenger's seat belt reminder light.
2) Rear passenger's seat belt reminder light (rear left)
3) Rear passenger's seat belt reminder light (rear center)
4) Rear passenger's seat belt reminder light (rear right)

For more details, refer to the explanation below.

**⚠ WARNING**

**It is absolutely essential that the driver, front passenger and rear passenger fasten their seat belts at all times. Persons who are not fastening seat belts have a much greater risk of injury if an accident occurs. Make a regular habit of buckling your seat belt before starting the engine.**

*NOTE:*

- *Along with the seat belt reminder light, a reminder message shall also come on the information display (if equipped), for un-restrained driver and/or front passenger.*
- *The driver's seat belt reminder light / front passenger's seat belt reminder light is for both the driver and front passenger.*

**Driver's seat belt reminder**

If the driver's seat belt remains unbuckled when the engine switch is pressed to change the ignition mode to ON, the reminder works as follows:


1) The driver's seat belt reminder light will come on.
2) After the vehicle's speed has reached about 15 km/h, the driver's seat belt reminder light will blink and a buzzer will sound for about 95 seconds.
3) The reminder light will remain on until the driver's seat belt is buckled.

If the driver has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from Step 1) or 2) according to the vehicle's speed. When the vehicle's speed is less than 15 km/h, the reminder will start from Step 1). When the vehicle's speed is more than 15 km/h, the reminder will start from Step 2).

The reminder will be automatically canceled when the driver's seat belt is buckled or the engine switch is pressed to change the ignition mode to LOCK (OFF).

**Front passenger's seat belt reminder**

If there is a person sitting in the front passenger seat and the front passenger seat belt is unbuckled when the engine switch is pressed to change the ignition mode to ON, the front passenger's seat belt reminder will activate. The front passenger's seat belt reminder works in the same manner as the driver's seat belt reminder.

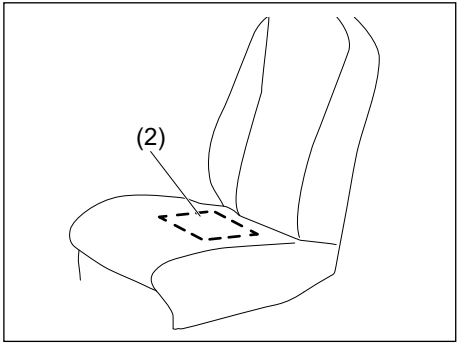


72RS2008

(2) The sensor of the front passenger's seat belt reminder

The seat belt reminder sensor (2) detects whether a person is sitting in the front seat. The sensor of the front passenger's seat belt reminder is located in the seat cushion. The front passenger's seat belt reminder works in the same manner as the driver's seat belt reminder.

***NOTICE***

- **The sensor of the front passenger's seat belt reminder is located in the seat cushion. If heavy or sharp objects are put on the seat cushion, or a removal, disassembly and modification of the passenger's seat are performed, the sensor may not work properly or can be damaged. Do not put heavy or sharp objects on the seat cushion. Do not remove, disassemble and modify the passenger's seat.**
- **Depending on the variety of seat cover, operation of the sensor may be adversely affected. Maruti Suzuki highly recommends that you use Maruti Suzuki genuine seat cover exclusively for this vehicle.If a seat cover is installed, consult with Maruti Suzuki authorized workshop.**
- **If you spill liquid such as liquid aromatics, soft drinks or juice on the front passenger's seat cushion, the sensor of the front passenger's seat belt reminder located in the seat cushion can be damaged. Immediately wipe it dry with a soft cloth when spilled.**

(Continued)

***NOTICE***

(Continued)

- **When sitting on the front passenger's seat, it is very important that the passenger sits upright, leaning against the seat backrest and centered on the seat cushion in order for the seatbelt reminder system to function effectively. An occupant sitting improperly (slouches, turns sideways, sits forward or sideways) may hamper the functioning of this system as it may not detect the occupant.**

*NOTE:*

- *If you put an object on the passenger's seat, the weight of the object will be sensed by the sensor and the front passenger's seat belt reminder light will come on and then the interior buzzer may beep.*
- *If a child or a small sized person sit on the front passenger's seat or the cushion is put on the front passenger's seat, the weight will not be sensed by the sensor and the interior buzzer may not beep.*

**Rear passenger's seat belt reminder**

Reminder light in speedometer for rear passengers to fasten their seat belts. Whether or not a passenger is seated, the rear seat belt reminder system works as follows, when ignition mode is turned ON:

1) Reminder light will turn ON for the non-buckled seats and continue for vehicle speed below 15 km/h.
2) When vehicle speed is above 15 km/h, reminder light will remain ON for the non-buckled seats for about 65 seconds and then turn OFF.
3) Further, when a buckled seat belt is unbuckled, the corresponding reminder light will turn ON. Above 15 km/h, the reminder light will blink (about 65 seconds) along with a buzzer sound (about 35 seconds). The reminder light will remain ON until the seat belt is buckled.

If rear door is opened in vehicle stationary condition, then reminder system will start from step 1.
The reminder will be automatically canceled when all the rear seat belts are buckled or the ignition mode to LOCK (OFF).

## Handling and Care for Seat Belt

### Seat Belt Handling



71UM02034

Periodically inspect the seat belts to make sure they work properly and are not damaged. Check the webbing, buckles, latch plates, retractors, anchorages and guide loops. Replace any seat belts which do not work properly or are damaged.

**⚠ WARNING**

- **Inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly even which was not in use during a collision must be replaced if the seat belt pretensioners were activated. The pretensioners and the load limiter only function once. In case they did not activate, consult with a Maruti Suzuki authorized workshop.**
- **If frays, scratches, cuts are found on the seat belt, replace it with a new one.**
- **If the buckle does not work properly, ask Maruti Suzuki authorized workshop for inspection.**
- **If strong force was applied to the seat belt in a collision, the seat belt function may be damaged, even though its appearance is normal. Replace the seat belt with a new one.**


(Continued)

**⚠ WARNING**

(Continued)

- **As the seat belt may not provide the best performance and it may result in severe injury in case of emergency, observe the following points.**
  - **When foreign material enters into the buckle or you spill a drink, the seat belt may not work properly. In this case, ask Maruti Suzuki authorized workshop for inspection.**
  - **As the seat belt may be damaged, be careful not to get the seat belt caught in the door. Before closing the door, check that the seat belt is retracted without any slack.**
  - **Do not modify or remove the seat belt.**

### Shoulder anchor height adjuster (Only for Front Seat)

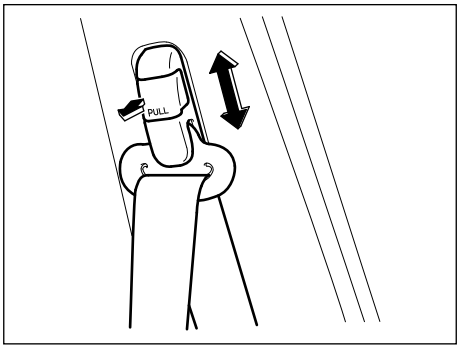



64J198

Adjust the shoulder anchor height so that the shoulder belt rides on the center of the outboard shoulder. To move upward, slide the anchor up. To move downward, slide the anchor down while pulling the lock knob out. After adjustment, check that the anchor is securely locked.

**⚠ WARNING**

**Check that the shoulder belt is positioned on the center of the outside shoulder. The belt should be away from your face and neck, but not falling off your shoulder. Misadjustment of the belt could reduce the effectiveness of the seat belt in a collision.**

### Rear Seat Belt Handling

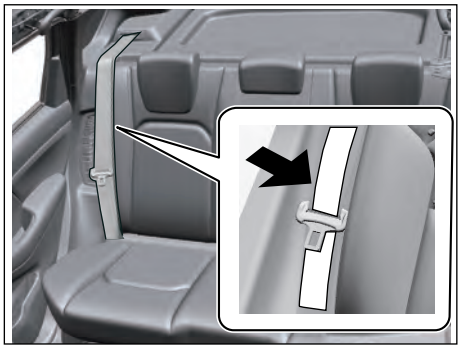

71UM02006

Place the outboard lap shoulder belts on the rear door side trims when the rear seat belts are not used.

***NOTICE***

**When you move a seatback, make sure the seat belts are placed on the rear door side trims so the seat belts and buckles are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.**


### Seat Belt Care

Caring for seat belts is the same as caring for any type of regular cloth material, etc.

**⚠ WARNING**

**Do not use bleach, solvent or dyes on seat belts. Doing so may cause stains, discoloration and strength deterioration, and the seat belt may not function properly.**

## Seat Belt Pretensioner System (Only for Front Seat)

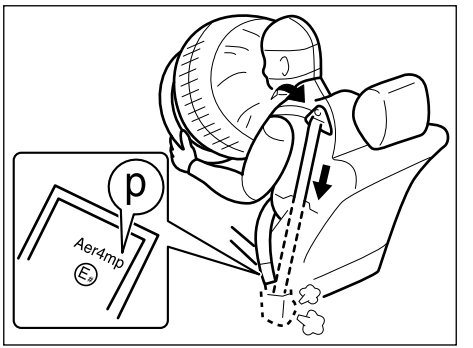


76TS20540

**⚠ WARNING**

**This section describes your Maruti Suzuki vehicle's seat belt pretensioner system. Read and follow all these instructions carefully to minimize your risk of severe injury or death.**

To determine if your vehicle is equipped with a seat belt pretensioner system at the front or rear seating positions, check the label on the seat belt at the bottom part.

If the letter “p” appears as illustrated, your vehicle is equipped with the seat belt pretensioner system. You can use the pretensioner seat belts in the same manner as ordinary seat belts.
Read this section and “Supplemental Restraint System (Airbags)” section to learn more about the pretensioner system.

The seat belt pretensioner system works with the supplemental restraint system (airbags). The crash sensors and the electronic controller of the airbag system also control the seat belt pretensioners. The pretensioners are triggered only when there is a frontal or side collision severe enough to trigger the airbags and the seat belts are fastened. For precautions and general information including servicing the pretensioner system, refer to “Supplemental Restraint System (Airbags)” section in addition to this “Seat Belt Pretensioner system” section, and follow all those precautions.
The pretensioner is located in each front seat belt retractor. The pretensioner tightens the seat belt so the belt fits the occupant’s body more snugly in the event of a frontal or side collision. The retractors will remain locked after the pretensioners are activated. Upon activation, some noise will occur and some smoke may be released. These conditions are not harmful and do not indicate a fire in the vehicle.

The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not a pretensioner is equipped at their seating position, to minimize the risk of severe injury or death in the event of a collision.

Sit fully back in the seat; sit up straight; do not lean forward or sideways. Adjust the belt so the lap portion of the belt is worn low across the pelvis, not across the waist. Please refer to “Seat Adjustment” section and the instructions and precautions about the seat belts in this “Seat Belts and Child Restraint Systems” section for details on proper seat and seat belt adjustments.Please note that the pretensioners along with the airbags will activate in severe frontal or side collisions. They are not designed to activate in rear impacts, roll-overs, or minor frontal side collisions. The pretensioners can be activated only once. If the pretensioners are activated (that is, if the airbags are activated), have the pretensioner system serviced by Maruti Suzuki authorized workshop as soon as possible.

The pretensioner system or the airbag system may not work properly if any of the following conditions occurs:

1) If the air bag warning light on the instrument cluster does not come on briefly, when the engine switch is pressed to change the ignition mode to “ON”.
2) If the air bag light comes on and stays on for more than 10 seconds, when the engine switch is pressed to change the ignition mode to “ON”.
3) If the air bag light comes on while driving.

Have both systems inspected by Maruti Suzuki authorized workshop as soon as possible.
Service on or around the pretensioner system components or wiring must be performed only by Maruti Suzuki authorized workshop. who is specially trained. Improper service could result in unintended activation of pretensioners or could render the pretensioner inoperative. Either of these two conditions may result in personal injury.

To prevent damage or unintended activation of the pretensioners, check that the lead-acid battery is disconnected and the ignition mode has been in LOCK (OFF) for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle.

Do not touch pretensioner system components or wiring. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow. When scrapping your Maruti Suzuki vehicle, ask a Maruti Suzuki authorized workshop, body repair shop or scrap yard for assistance.

### For Proper Operation of Seat Belt Pretensioner System

Do not modify any parts that can affect the functionality of the seat belt pretensioner system. The seat belt may be retracted unexpectedly, or it may not be properly retracted when necessary.


### Disposal and Scrapping

Seat belt pretensioners that have not been activated must be activated according to the predetermined procedure before disposal.

**⚠ WARNING**


**If you do not handle a pretensioner properly for disposal, the pretensioner system may activate unexpectedly, resulting in severe injury. When disposing of a pretensioner or scrapping the vehicle equipped with a pretensioner, consult Maruti Suzuki authorized workshop.**

## Seat Belt Force Limiter System (Only for Front Seat)

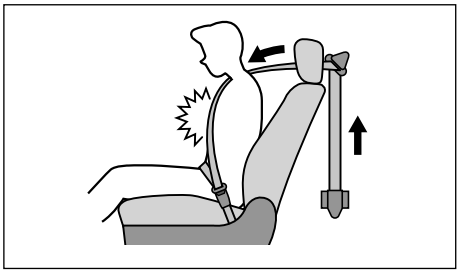

69RHS167

In the event of a strong impact coming from the front, the seat belt force limiter operates in one stage to reduce a force to the shoulder strap, thus lessening the impact being sustained by the front passengers.

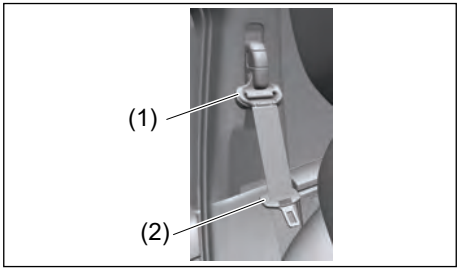



71UM02025

**⚠ WARNING**

**If the seat belt sustains strong impact, the resin of the shoulder anchor part (1) and the tongue plate part (2) could soften due to heavy friction, thus sticking to the seat belt, making the belt slide less easily. In such a case, the seat belt may not provide the best performance, resulting in severe injury in case of emergency. Have the seat belt replaced by Maruti Suzuki authorized workshop.**

## Child Restraint Systems


### Child Restraint System Usage

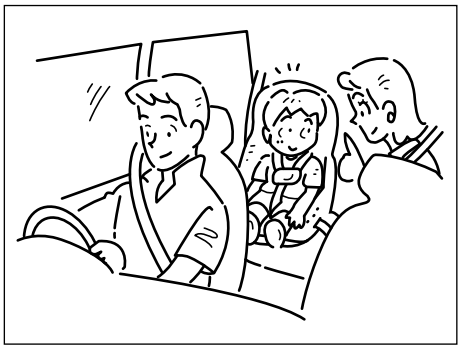

59RN02280


The following types of child restraint system are available generally.

**Infant restraint**

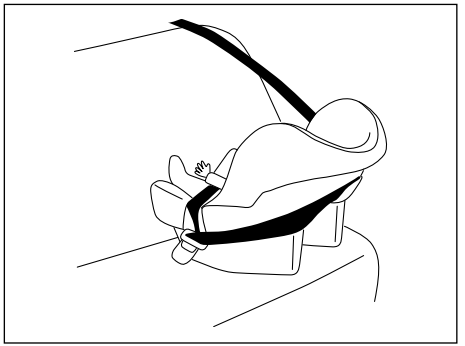


80JC007

**Child restraint**

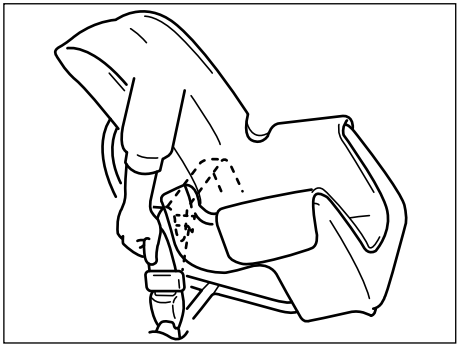

59RN02350

**Booster seat**

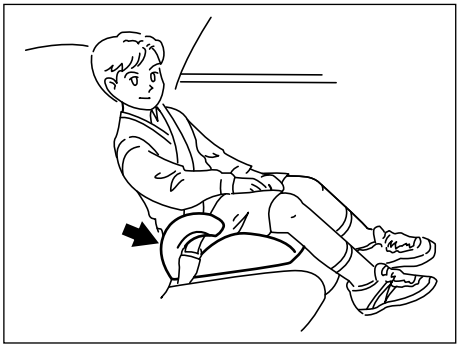

59RN02290

Maruti Suzuki highly recommends that you use a child restraint system to restrain infants and small children. Many different types of child restraint systems are available; check that the restraint system you select meets applicable safety standards.

All child restraint systems are designed to be secured in vehicle seats either by seat belts (lap portion of lap-shoulder belts) or by special rigid lower anchor bars built onto the floor. Whenever possible, Maruti Suzuki recommends that child restraint systems be installed on the rear seat. According to accident statistics, children are safer when properly restrained in rear seating positions than in front seating positions.

*NOTE:*
*Observe any statutory regulation about child restraints.*

**⚠ WARNING**



61M0241

- **Do not install a child restraint system on the front passenger's seat.**
- **When installing a child restraint system to the rear seat, touching the child's foot or the child restraint system to the seatback of the front seat can cause serious injury to the child in the event of an accident. Adjust the front seat so that it does not touch the child or the child restraint system.**

(Continued)

**⚠ WARNING**

(Continued)

- **If child restraint systems are not installed properly, children or other occupants could be seriously injured in the event of an accident. Secure the child restraint system firmly according to both this manual and the instruction provided by child restraint system's manufacturer.**
- **If the child is not secured properly in the child restraint system, it could cause serious injury to the child in the event of an accident. Use the child restraint system correctly following the instruction provided by child restraint system's manufacturer.**
- **If you recline the seatback, a child restraint system may not be secured properly and a child body may slip beneath the seat belt. This may cause severe injury. Do not recline the seatback when a child restraint system is installed on the seat.**

(Continued)

**⚠ WARNING**

(Continued)

- **If you use the child restraint system which was severely damaged by an accident, etc., it may not provide the best performance. This may cause severe injury to a child. If the child restraint system was severely damaged by an accident, etc., do not reuse the child restraint system even though its appearance looks normal.**

## Child Restraint Systems for India

### Child Restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below. Whenever you carry children up to 12 years of age, properly use the child restraints which conform to AIS 072 or UN R44*1 or UN R129*1 the standard for child restraints, referring to the table.

*1: UN R44/R129 means the international regulation for the child restraint system.

**Child Restraint Systems Installation Suitability for Each Seat Position (AIS 072 Format)**


| MASS GROUP# | | Seating position (or other site) | | | | |
|---|---|---|---|---|---|---|
| | | Front Passenger | Rear Outboard | Rear Center | Intermediate Outboard | Intermediate Center |
| Group 0 | Up to 10 kg | X | U | U | N.A. | N.A. |
| Group 0+ | Up to 13 kg | X | U | U | N.A. | N.A. |
| Group I | 9 to 18 kg | X | U | U | N.A. | N.A. |
| Group II | 15 to 25 kg | X | U | U | N.A. | N.A. |
| Group III | 22 to 36 kg | X | U | U | N.A. | N.A. |

Key letters in the above table indicates the following:
U =Suitable for 'universal' category restraints approved for use in this mass group
X =Seat position not suitable for children in this mass group
N.A = Seat position not available for children in this mass group.

*NOTE:*
- *'universal' is the category as per AIS 072.*
- *'Outboard' indicates window side seat.*

#*Mass Groups are classification of child restraint systems which conform to AIS 072 or UN R44.*

**Child Restraint Systems Installation Suitability for Each Seat Position (UN R16*2 Format)**

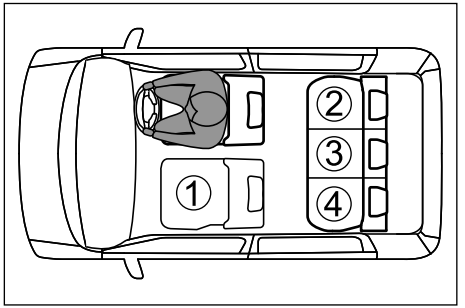


55T02001

*NOTE:*
*For detailed information on seating positing for child restraint system, please refer to the table on the next page.*

| | |
|---|---|
| ① | |
| ② (#1, #2) | U |
| ③ (#1, #2) | U |
| ④ (#1, #2) | U |

| | |
|---|---|
| U | It is suitable for universal category of child restraint system fixed with the vehicle seat belt. |
| | It is suitable for i-Size and ISOFIX child restraint system. |
| | This seat is equipped with Top tether anchorage point. |
| | Never use a rearward facing child restraint system on passenger seat with active passenger airbag. |
| | It is not suitable for child restraint system. |

NOTICE

#1 If the head restraint interferes with the child restraint system, adjust the height of the head restraint or remove it, as necessary.

#2 When you install a forward facing child restraint, if there is a gap or space between the child restraint and the seatback, adjust the seatback angle in order to install the child restraint system properly.

*2: UN R16 means the international regulation for safety belts, including compatibility with child restraint systems.

**Detailed information for child restraint system (UN R16 Format)**

| | Seating position | | | |
|---|---|---|---|---|
| Seat position number | ① | ② | ③ | ④ |
| Seating position suitable for universal belted (YES/NO) | NO | YES | YES | YES |
| i-Size seating position (YES/NO) | NO | YES | NO | YES |
| Seating position suitable for lateral fixture (L1/L2)* | NO | X | NO | X |
| Suitable rearward facing fixture (R1/R2X/R2/R3)* | NO | R1,R2,R3 | NO | R1,R2,R3 |
| Suitable forward facing fixture (F2X/F2/F3)* | NO | F2,F3 | NO | F2,F3 |
| | | F2X#1 | | F2X#1 |
| Suitable booster fixture (B2/B3)* | NO | B2, B3 | B2, B3 | B2, B3 |

Key letters in the above table indicates the following:
YES =Suitable for this seating position
NO = Not suitable for this seating position
X =This ISOFIX seat position is not suitable for ISOFIX child restraint systems in this fixture.

The child restraint system can be used in the seating positions for fixture shown in the above table.

*NOTE:*
*#1:The head restraint should be pulled up until it clicks.*

*For child restraint system fixtures mentioned herein, refer to table on the next page.

If your child restraint system has no size class (or if you cannot find information in the following table), refer to the child restraint system suitability information for the vehicle or ask with child seat retailer.

**ISOFIX child restraint systems are shown as follows:**

ISOFIX child restraint systems are divided into different mass group, size class and fixture.

| Mass group | Size class of child restraint system | Fixture | Description |
|---|---|---|---|
| 0 (up to 10 kg) | F | L1 | Left Lateral facing position Child Restraint Systems (carry-cot) |
| | G | L2 | Right Lateral facing position Child Restraint Systems (carry-cot) |
| | E | R1 | Rearward facing Infant Child Restraint Systems |
| 0+ (up to 13kg) | E | R1 | Rearward facing Infant Child Restraint Systems |
| | D | R2 | Reduced-Size rearward facing toddler Child Restraint Systems |
| | – | R2X | Reduced-Size rearward facing toddler Child Restraint Systems |
| | C | R3 | Full-Size rearward facing toddler Child Restraint Systems |
| I (9kg to 18kg) | D | R2 | Reduced-Size rearward facing toddler Child Restraint Systems |
| | – | R2X | Reduced-Size rearward facing toddler Child Restraint Systems |
| | C | R3 | Full-Size rearward facing toddler Child Restraint Systems |
| | B | F2 | Reduced-Height forward facing toddler Child Restraint Systems |
| | B1 | F2X | Reduced-Height forward facing toddler Child Restraint Systems |
| | A | F3 | Full-Height forward facing toddler Child Restraint Systems |

| Mass group | Size class | Fixture | Description |
|---|---|---|---|
| II<br>(15kg to 25kg) | X | X | – |
| III<br>(22kg to 36kg) | X | X | – |

Key letters in the above table indicates the following:
X = There is no fixture for this mass group.

**Booster seat fixtures are shown as follows;**

| Fixture | Description |
|---|---|
| B2 | Booster seat, reduced width 440 mm |
| B3 | Booster seat, full width 520 mm |

**Installation suitability of MARUTI SUZUKI recommendation child restraint systems for India**

| Body size | Direction of Child restraint system | Recommendation of Child restraint system (#A) | Seating position | | | |
|---|---|---|---|---|---|---|
| | | | ① | ② | ③ | ④ |
| 40 - 83 cm<br>≤ 13 kg | Rearward facing | BRITAX RÖMER<br>BABY-SAFE 3 i-SIZE | NO | YES (#1) | YES (#1) | YES (#1) |
| 40 - 83 cm<br>≤ 13 kg | Rearward facing | BRITAX RÖMER<br>BABY-SAFE 3 i-SIZE<br>and VARIO BASE 5Z | NO | YES | NO | YES |
| | | BRITAX RÖMER<br>BABY-SAFE 3 i-SIZE<br>and FLEX BASE 5Z | | | | |
| 61 - 105 cm<br>and exceed 3 months<br>≤ 18 kg | Rearward facing | BRITAX RÖMER<br>Dualfix 5Z<br>and VARIO BASE 5Z | NO | YES | NO | YES |
| | | BRITAX RÖMER<br>Dualfix 5Z<br>and FLEX BASE 5Z | | | | |
| 76 - 105 cm<br>and exceed 15 months<br>≤ 20 kg | Forward facing | BRITAX RÖMER<br>KING PRO | NO | YES (#1) | YES (#1) | YES (#1) |
| 76 - 105 cm<br>and exceed 15 months<br>≤ 22 kg | Forward facing | BRITAX RÖMER<br>TRIFIX 2 i-SIZE | NO | YES | NO | YES |

Key letters in the above table indicates the following:
YES: It is suitable for this seating position
NO: It is not suitable for this seating position

#1: Only belted.
#A:These child restraint systems are MARUTI SUZUKI Genuine Accessory which comply with the UN R129, refer to the genuine accessories catalog.

### Securing Child Restraint System by Seat Belt

Choose the appropriate seat for the child's age and physical size.

**⚠ WARNING**



61M0241

- **Do not install a child restraint system on the front passenger's seat.**

**(Continued)**

**⚠ WARNING**

**(Continued)**

- **If you install a child restraint system in the rear seat, slide the front seat far enough forward so that the child's feet do not contact the front seatback. This will help avoid injury to the child in the event of an accident.**
- **Do not hold a child on passenger'S lap when the vehicle is in motion.**
- **Even if the passenger holds the child tightly, he/she would not be supported enough in the event of an accident and it could result in a serious injury of the child.**


**⚠ CAUTION**

**If your vehicle is equipped with the head restraint, adjust the height of the head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the head restraint is fitted, the head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint.**
**If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.**

*NOTE:*
*Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.*

### Securing

This section explains securing the child restraint system in the rear seat.

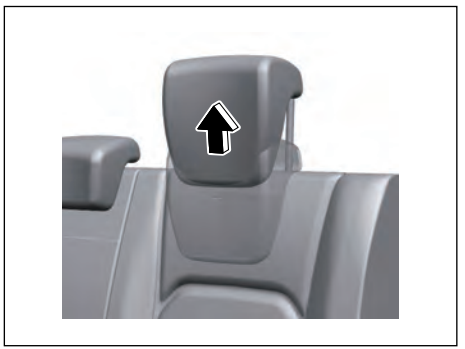

71UM02032


1) When the child restraint system contacts the head restraint, adjust the height of the head restraint or remove it for fitting the child restraint system.

**⚠ WARNING**

**If the child restraint system contacts the head restraint, the child restraint system cannot be secured firmly. This may cause severe injury to a child in a collision.**
**When installing the child restraint system, adjust the head restraint height to the highest position as much as possible or remove the head restraint so that the child restraint system would not contact the head restraint.**


2) If your vehicle is equipped with the reclining mechanism of rear seatback, adjust the angle of the seatback so that there is no gap between the child restraint system and the seatback.

3) Make sure that the child restraint system is securely fastened to the main seat.
4) Make sure to pass the seat belt of the passenger's seat through the specified parts, according to the instruction manual that came with the child restraint system.

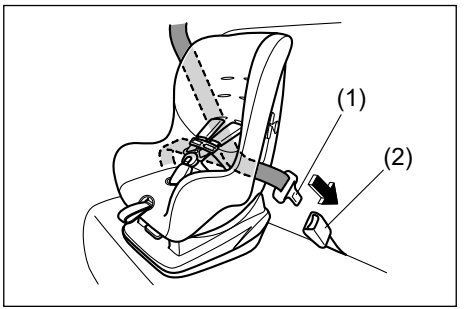


71UM02035

5) Insert the tongue plate (1) firmly into the seat belt buckle (2) until you hear a click.
   • The child restraint system in the above figure is a typical example.

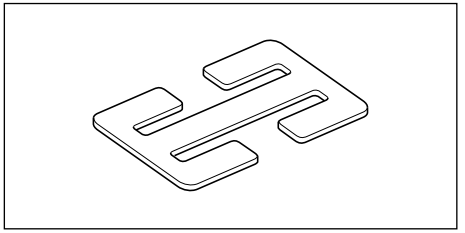

72M00172

6) If the child restraint system does not have a seat belt locking mechanism or a locking clip, secure it to the seat by using an aftermarket locking clip.
   • The aftermarket locking clip shown in the above figure is a typical example.

**⚠ WARNING**

**Failure to securely fasten a child restraint system via the seat belt locking mechanism or a locking clip may cause serious injury to a child when sudden braking or a collision occurs.**


7) Shake the child restraint system back and forth, and left and right to check if it is securely in position.
   • If you cannot ensure secure positioning, check the instruction manual that came with the child restraint system or consult the dealer where you purchased the seat.

**⚠ WARNING**

**Make sure to position the child restraint system securely. Failure in doing so could result in the child sustaining serious injury when sudden braking or a collision occurs.**

## Securing Child Restraint System by ISOFIX

### Securing

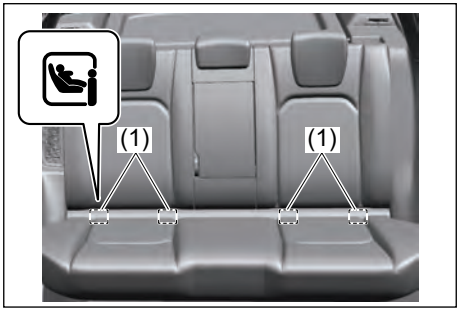


71UM02008


(1) Lower anchorage

Your vehicle is equipped with the lower anchorages in the rear seat outboard seating positions for securing a ISOFIX type of child restraints with the connecting bars. The lower anchorages are located where the rear of the seat cushion meets the bottom of the seatback.

**⚠ WARNING**

**Install the ISOFIX type of child restraint(s) in the only outboard seating positions, not in the central position for the rear seat.**

Install the ISOFIX type child restraint system according to the instructions provided by the child restraint system manufacturer. After installation, try moving the child restraint system in all directions especially forward to check that connecting bars are securely latched to the anchorages.

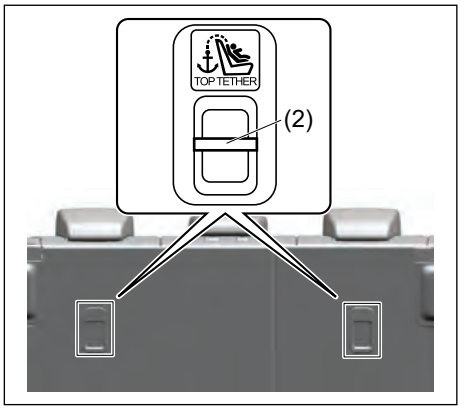


71UM02026

(2) Top tether anchorage


Your vehicle is equipped with the top tether anchorages. Use the top tether strap of the child restraint according to the instructions provided by the child restraint system manufacturer.

Here is a general instruction:

**⚠ CAUTION**

**If your vehicle is equipped with the head restraint, adjust the height of the rear head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the head restraint is fitted, the head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint.**
**If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.**

*NOTE:*
*Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.*

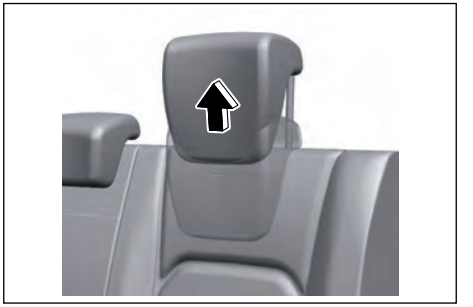


71UM02032

1) When the child restraint system contacts the head restraint, adjust the height of the head restraint or remove it for fitting the child restraint system.


**⚠ WARNING**

**If the child restraint system contacts the head restraint, the child restraint system cannot be secured firmly. This may cause severe injury to a child in a collision.**
**When installing the child restraint system, adjust the head restraint height to the highest position as much as possible or remove the head restraint so that the child restraint system would not contact the head restraint.**

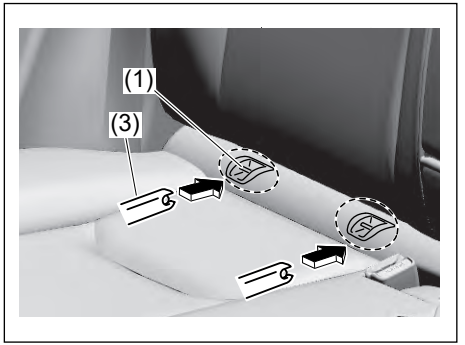



76TS20230

2) Place the child restraint in the rear seat, inserting the connecting bars (3) to the lower anchorages (1) between the seat cushion and the seatback.

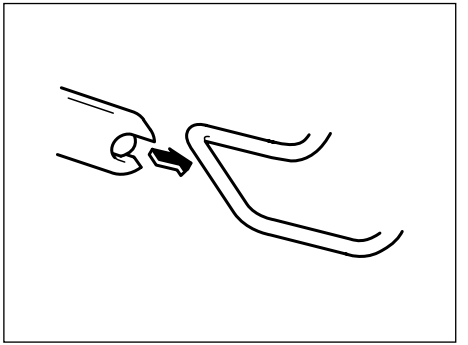


68LM268

3) Use your hands to carefully align the connecting bar tips with the anchorages. Take care not to pinch your fingers.

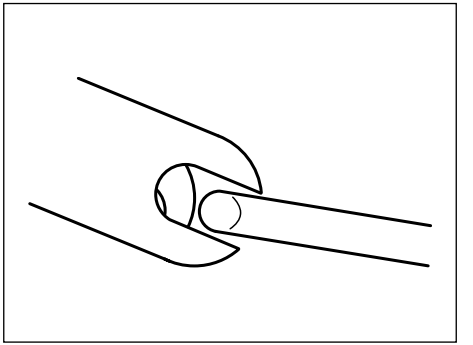

54G184

4) Push the child restraint toward the anchorages so that the connecting bar tips are partially hooked to the anchorages. Use your hands to confirm the position.

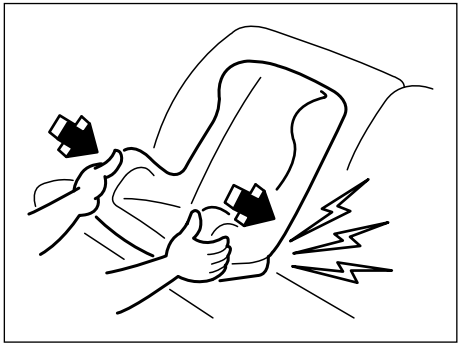


54G185

5) Grasp the front of the child restraint and push the child restraint forcefully to latch the connecting bars. Check that they are securely latched by trying to move the child restraint system in all directions, especially forward.
6) Attach the top tether strap referring to "Installation of Child Restraint with Top Tether" section.
   When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of your child's body.

***NOTICE***

**When installing a child restraint system to the rear seat, adjust the front seat position so that the front seat does not interfere with the child restraint system.**

## Installation of Child Restraint with Top Tether

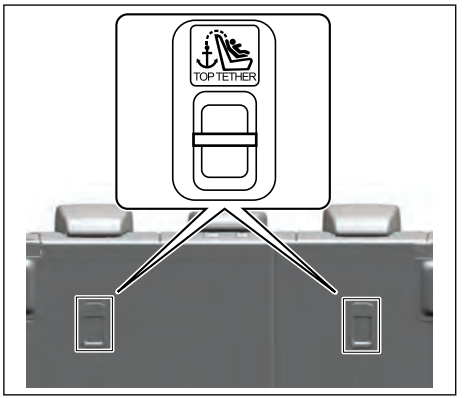



71UM02027

Some child restraint systems require the use of a top tether strap. Top tether anchorages are provided in your vehicle at the locations shown in the illustrations. The number of the top tether anchorage brackets provided in your vehicle depends on the vehicle specification. Install the child restraint system as follows:

1) Remove the luggage compartment cover (if equipped).
2) Secure the child restraint on the rear seat using the procedure described above for securing a restraint system that does not require a top tether strap.
3) Hook the top tether strap to the top tether anchorage and tighten the top tether strap according to the instructions provided by the child restraint system manufacturer. Attach the top tether strap to the corresponding top tether anchorage located directly behind the child restraint. Do not attach the top tether strap to the luggage restraint loops (if equipped).

**⚠ WARNING**

**Do not attach the child restraint top tether strap to the luggage restraint loops. Incorrectly attached top tether strap will reduce the intended effectiveness of the child restraint system.**

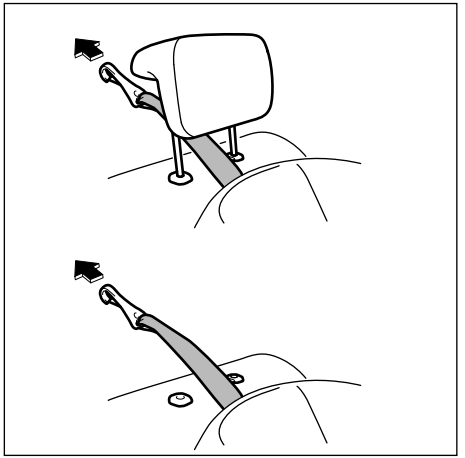

52RS20431

4) When routing the top tether strap, pass the top tether strap as shown in the illustration. (Refer to “Head Restraints” section for details on how to adjust the height of head restraint or remove it.)
5) Check that cargo does not interfere with routing of the top tether strap.

**⚠ WARNING**

**If the seat belt, etc. gets stuck in the child restraint system, it may not be secured properly and this may cause severe injury to a child in a collision. When you install the child restraint system, check that obstacles and the seat belt do not exist near the ISOFIX anchorages and the top tether anchorages.**


## Supplemental Restraint System (Airbags)

**⚠ WARNING**

**This section describes the protection provided by your Maruti Suzuki vehicle's supplemental restraint system (airbags). Read and follow all instructions carefully to minimize your risk of severe injury or death in the event of a collision.**

Your vehicle is equipped with a supplemental restraint system consisting of the following components in addition to a lap-shoulder belt at each seating position.

(1) Side curtain airbag module
(2) Side crash sensor
(3) Front passenger's front airbag module
(4) Driver's front airbag module
(5) Forward crash sensor
(6) Front seat belt pretensioner
(7) Side airbag module
(8) Airbag controller

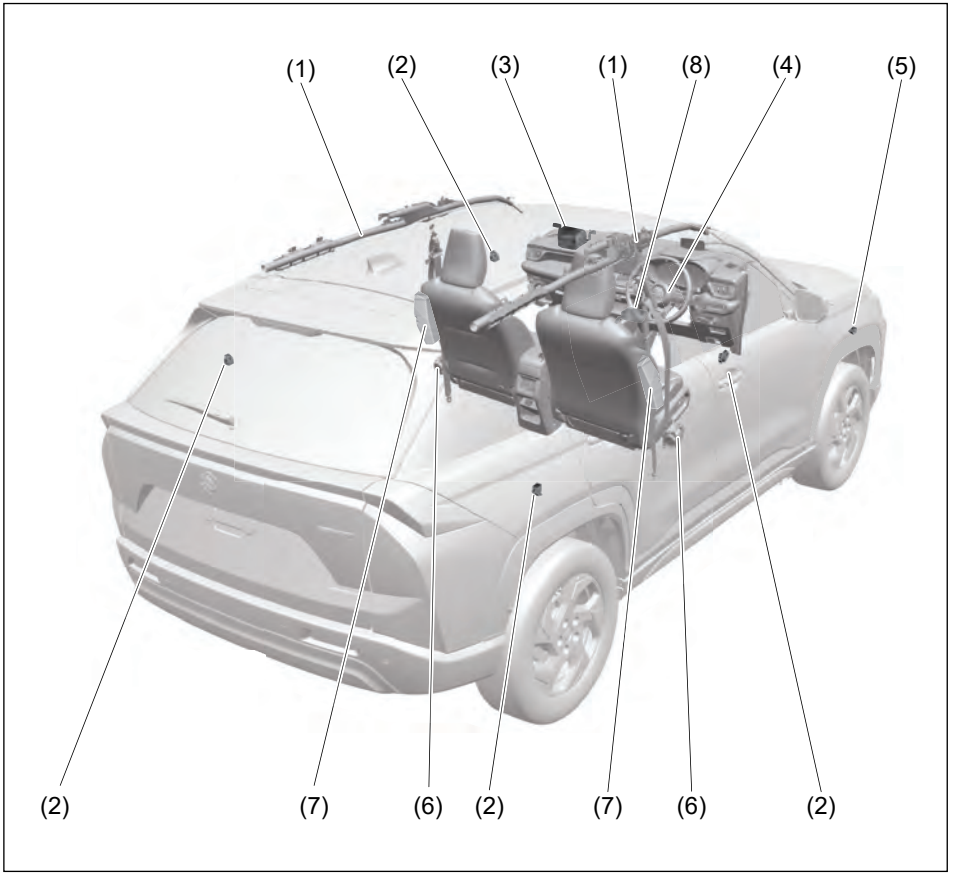


71UM02036

### What is SRS Airbag System?

SRS stands for “Supplemental Restraint System”. This system aims to restrain passengers in their seats for safety.



71UM02009


If airbag warning light on the instrument cluster does not blink or come on when the ignition mode is first changed to ON, or airbag warning light stays on, or comes on while driving, the airbag system (or the seat belt pretensioner system) may not work properly. Have the airbag system inspected by Maruti Suzuki authorized workshop as soon as possible

**⚠ WARNING**

- **SRS airbag system is not a substitute for seat belts. SRS airbag system is the supplemental restraint system and will provide the effectiveness by using the seat belts at the same time.**
  **If you and the passengers do not fasten their seat belts, it may result in severe injury in a sudden braking or a collision.**
  **Even when you drive the vehicle equipped with SRS airbag system, make sure to fasten seat belt.**
- **If the seat belts are not fastened properly, airbags may not provide the best performance. This may cause severe injury in a sudden braking and a collision.**
  **Make sure that the driver and all the passengers fasten the seat belts properly in a correct posture.**

*NOTE:*
*Via the event data recorder (EDR) system, this vehicle records and accumulates data when the airbag is deployed.*

**Front airbags**

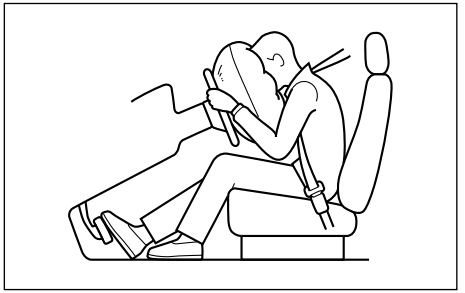

80J090


Front airbags are designed to inflate in severe frontal collisions when the ignition mode is ON.

*NOTE:*
*In a frontal angle collision, the side airbags and side curtain airbags may inflate.*

Front airbags are not designed to inflate in rear impacts, side impacts, rollovers or minor frontal collisions, since they would offer no protection in those types of accidents. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

**Side airbags and side curtain airbags**

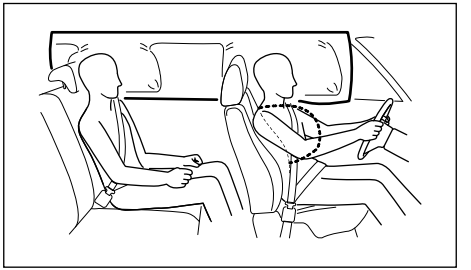


68KM090

Side airbags and side curtain airbags are designed to inflate in severe side impact collisions when the ignition mode is ON.

Side airbags and side curtain airbags are not designed to inflate in frontal or rear collisions, rollovers or minor side collisions, since they would offer no protection in those types of accidents. Only the side airbag and side curtain airbag on the side of the vehicle that is struck will inflate. However, in a frontal angle collision, the side airbags and side curtain airbags may inflate. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.
Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

## When Driving the Vehicle with SRS Airbag System

### Make Sure to Fasten Seat Belt

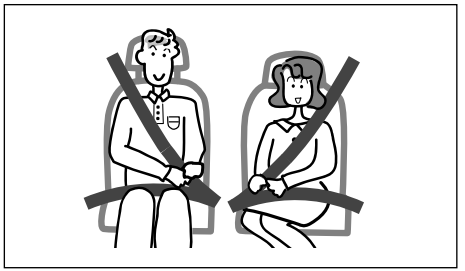


65J106

**⚠ WARNING**


**SRS airbag system is not a substitute for seat belts. SRS airbag system is the supplemental restraint system and will provide the effectiveness by using the seat belts at the same time. If you and the passengers do not fasten their seat belts, it may result in severe injury in a sudden braking or a collision.**
**Even when you drive the vehicle equipped with SRS airbag system, make sure to fasten seat belt.**

### Correct Sitting Posture

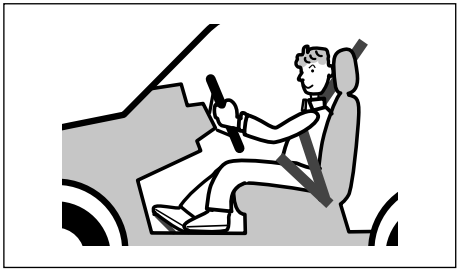

80J014

There is a possibility of major impact from the front airbags when the airbags activate and deploy instantaneously, the driver and the passenger should sit deeply into their seats and touch their backs lightly to the seatback. In addition, the seat should be positioned so that it is not too far forward.

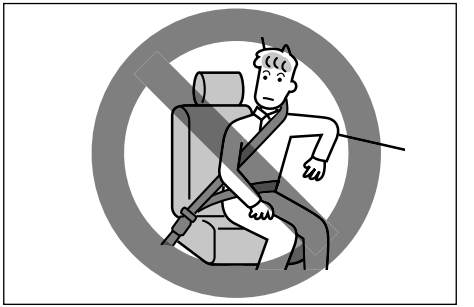


59RN02190

**⚠ WARNING**

- **Do not position your face, chest, etc., close to the steering wheel or instrument cluster, and do not rest your feet up into this area. Otherwise, there is the risk of serious injury due to major impact if the airbag were to be deployed.**
- **If side airbags or side curtain airbags activate, you may get strong impact, resulting in severe injury. Do not put hands out of the window or lean on the door. Also, when sitting in the rear seat, do not hug the seatback of the front seat.**


### For Proper SRS Airbag System Operation

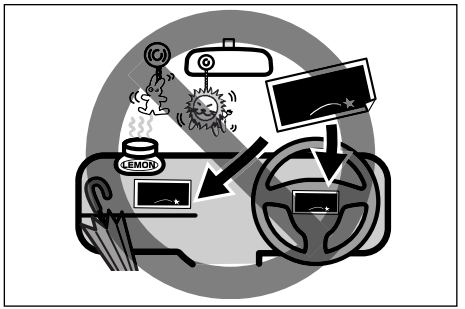


69RHS169

**⚠ WARNING**

- **Do not modify the steering wheel, such as replacing it, placing stickers on it, painting it or putting the cover on it.**
- **Do not place stickers on the airbag units or the surrounding areas or paint them. Also, do not attach any accessories, fragrances, electronic toll control units, portable car navigation systems, etc. to this area, and do not lean umbrellas or other objects against it.**
- **Do not attach accessories (except for Maruti Suzuki genuine products), etc., to the windshield or the inside rearview mirror.**

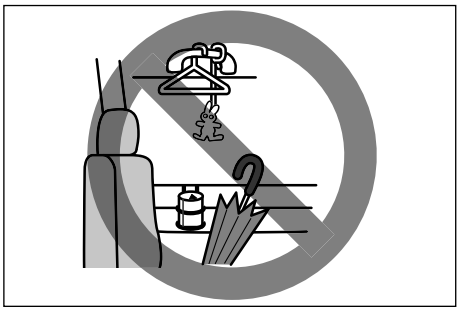

59RN02200

**⚠ WARNING**

**For the vehicle with side airbags or side curtain airbags, do not attach accessories such as cup holders or hangers near the door. Also, do not lean umbrellas against the door.**

### Warning Label of SRS Airbag for Front Passenger's Seat




72M00150

You may find this label on the sun visor.

**⚠ WARNING**

**NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.**

| Symbol | Symbol meaning |
|---|---|
|  | Do not install a rearward facing child restraint system to the front passenger's seat equipped with an airbag. |
|  | If the front passenger's seat airbag were to be deployed, a major impact could be applied to a rearward facing child restraint system and the child. |
|  | For more details, read this owner's manual. |


## "SRS AIRBAG" Mark and Location

### Driver's front airbag





71UM02010

### Front passenger's front airbag

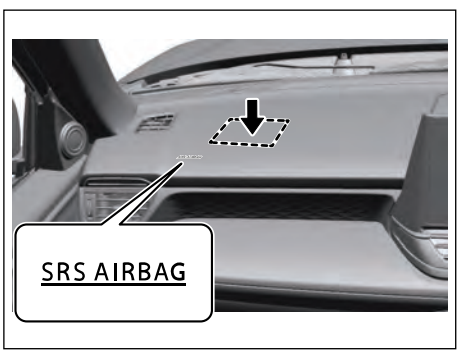



71UM02011

### Side airbags

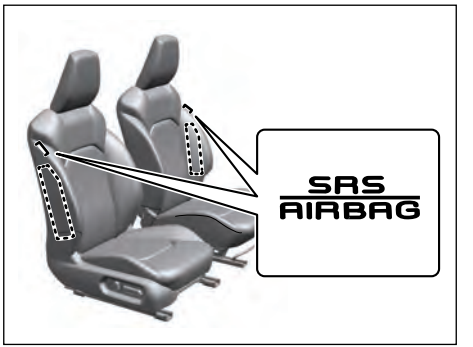


71UM02028

### Side curtain airbags

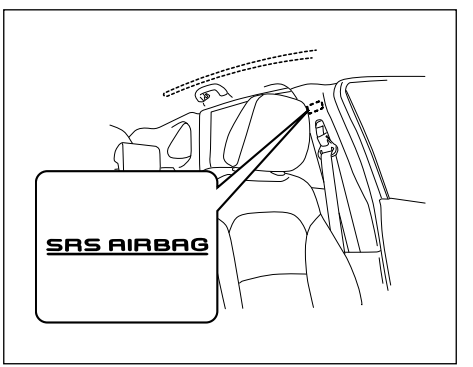


76TS20370

The driver's front airbag is located behind the center pad of the steering wheel and the front passenger's front airbag is located behind the passenger's side of the dashboard.
Side airbags are located in the part of the front seatbacks closest to the doors.
Side curtain airbags are located in the roof lining.
The words "SRS AIRBAG" are molded into the airbag covers to identify the location of the airbags.

**⚠ WARNING**

- **If the airbag stored place is damaged or cracked, the airbag system may not work properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by Maruti Suzuki authorized workshop.**
- **If you smash the airbag stored place or apply a strong impact to it, the airbag may not work properly or may inflate unexpectedly, resulting in serious injury.**
  **Do not smash the airbag stored place or apply a strong impact to it.**

### Installation of Child Restraint System

**⚠ WARNING**



61M0241

**Do not install a child restraint system on the front passenger's seat.**

Refer to "Seat Belts and Child Restraint Systems" section for details on securing your child.

## Handling for Airbags

### For Proper SRS Airbag System Operation

If objects are positioned within the range where the airbag deploys, such objects might be impacted and blown off or the airbag may not deploy properly.

**⚠ WARNING**

- **As the airbag may not provide the best performance and it may result in severe injury in case of emergency, observe the following points.**
  - **– Do not modify the suspension. If the vehicle height or the stiffness of the suspension were to change, airbag malfunction may result.**
  - **– When installing a grille guard, etc., on the front of the vehicle, consult Maruti Suzuki authorized workshop. If you modify the front part of the vehicle, the airbag system may not work properly.**
  - **– When installing radio equipment, etc., consult Maruti Suzuki authorized workshop. Radio waves, etc., from a radio may adversely affect the computer module used in the airbag system.**

(Continued)

**⚠ WARNING**

(Continued)

- **Even though your vehicle is damaged by a collision, it may not be severe enough to trigger front, side or side curtain airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by Maruti Suzuki authorized workshop to ensure that it works properly. If the original function of airbag system is damaged, airbag may not function effectively and fully in case of an emergency.**

- **If the airbag-related parts are replaced or repaired, which has an impact on the airbag functions, the airbag may activate unnecessarily or may not activate when necessary.**
  **The following situations may give a negative impact to the airbag system. In these cases, consult Maruti Suzuki authorized workshop beforehand.**
  - **Removing the steering wheel, repairing the areas around the steering wheel, etc.**


(Continued)

**⚠ WARNING**

(Continued)

- **Center console repair, repairs around the instrument cluster, repairs under the front seat, and repairs of electrical wiring**
- **Installation of audio equipment, etc.**
- **Sheet metal painting and repairs around the dashboard**
- **Replacement of the front seat and repairs around the seat**
- **Repairs around the front pillar, the back pillar or the roof side**
- **Repairs around the center pillar**

**Driver's front airbag precautions**

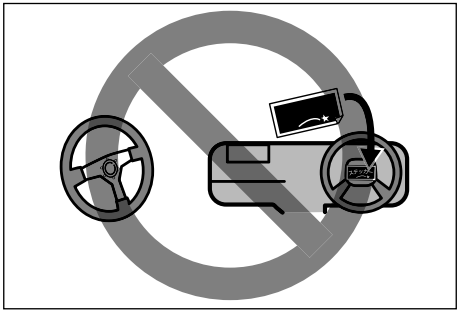


69RHS022

**⚠ WARNING**

- **Do not position your hands, face, chest, etc., close to airbag unit area or lean on the steering wheel. Otherwise, there is the risk of serious injury due to major impact if the airbag were to be deployed.**
- **Do not modify the steering wheel, such as replacing it, placing stickers on it, painting it or putting the cover on it. Otherwise, the airbag may not deploy normally in case of emergency, resulting in severe injury.**

**Side airbags and side curtain airbags precautions**

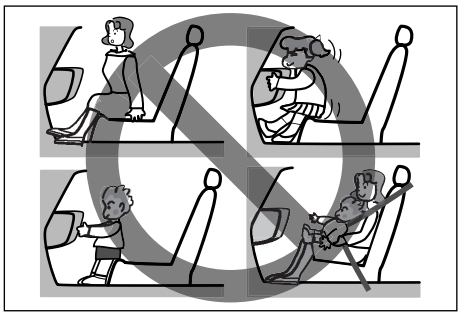

69RHS170

**⚠ WARNING**


- **When riding in the front passenger's seat or when allowing a child to ride in this seat, be sure to observe the following points. Failure to do so may result in serious injury due to major impact if the airbag is deployed.**
  - **– Do not position your hands or feet on the airbag unit area, and do not position your face, chest, etc., close to this area.**
  - **– Do not allow a child to stand in front of the airbag unit area or sit on a passenger's lap in the front passenger's seat. Have a child ride in the rear seat wearing a seat belt.**

(Continued)

**⚠ WARNING**

(Continued)

- **– For a child that is not yet big enough to wear a seat belt properly, be sure to use a child restraint system on the rear seat.**

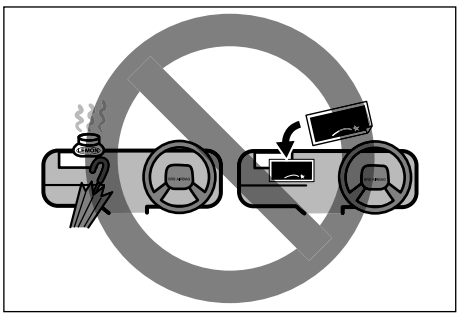


69RHS171

**⚠ WARNING**

- **As the airbag may not provide the best performance and it may result in severe injury in case of emergency, observe the following points.**
  - **– Do not place stickers on the airbag units or the surrounding areas or paint them. Also, do not attach any accessories, fragrances, electronic toll control units, portable car navigation systems, etc. to this area, and do not lean umbrellas or other objects against it.**
  - **– Do not attach accessories (except for Maruti Suzuki genuine products), etc., to the windshield or the inside rearview mirror.**

**Side airbags and side curtain airbags precautions**

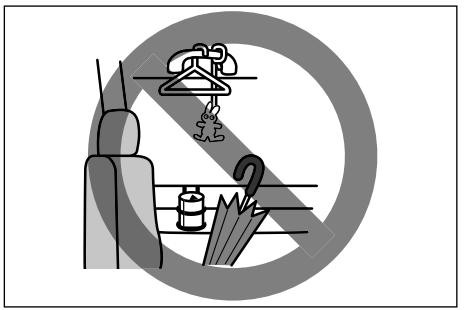

59RN02200

**⚠ WARNING**

**If you attach accessories such as cup holders or hangers near the door, or if you lean umbrellas against the door, when side airbags or side curtain airbags activate, these objects may be thrown out and may not inflate properly, resulting in severe injury.**
**Do not attach accessories such as cup holders or hangers near the door. Also, do not lean umbrellas against the door.**

## Function of Airbags


### How the System Works

In a frontal collision, the collision sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal collision, the controller will trigger the inflators. The inflators inflate the appropriate airbags with nitrogen or argon gas. The inflated airbags provide a cushion for your head and upper body. The airbag inflates and deflates so quickly that you may not even realize that it has activated. The airbag will neither hinder your view nor make it harder to exit the vehicle.

A seat belt helps keep you in the proper position for maximum protection when an airbag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel or dashboard. Front occupants should not lean on or sleep against the door. Refer to “Seat Adjustment” section and “Seat Belts and Child Restraint Systems” section in this section for details on proper seat and seat belt adjustments.



59RN02370

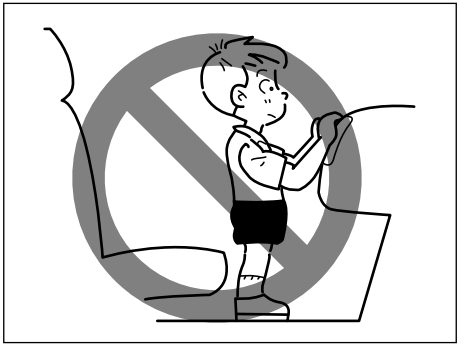

59RN02360



59RN04670

**⚠ WARNING**

- **The driver should not lean over the steering wheel. The front passenger should not rest his or her body against the dashboard where a front air bag is mounted or a child should not stand in front of the dashboard. Otherwise, he or she will get too close to the dashboard. For vehicles with side air bags and side curtain air bag, occupants should not lean on or sleep against the door. In these situations, the out-of-position occupant would be too close to an inflating airbag, and may suffer severe injury.**

(Continued)

**⚠ WARNING**

(Continued)

- **Do not attach any objects to, or place any objects over, the steering wheel or dashboard. Do not place any objects between the airbag and the driver or front passenger. These objects may interfere with airbag operation or may be propelled by the airbag in the event of a collision. Also, these objects may move when you start moving vehicle or while vehicle is moving, they may interfere with driver's view or safe driving. In each condition, it may cause severe injury.**
- **For vehicles with side airbags, do not use non-genuine seat covers on the front seats, because non-genuine seat covers may obstruct the inflation of side airbags. Maruti Suzuki highly recommends Maruti Suzuki-genuine seat covers to be used when covering the front seats of such vehicles with side airbags. Also, near the door, do not place cup holders, hangers or any other objects and do not lean an umbrella, as these objects could be propelled by the airbag in the event of a collision. Either of these conditions may cause severe injury.**

(Continued)

**⚠ WARNING**

(Continued)

- **Do not strike or apply significant levels of impact to the airbag component areas. It can cause the airbags to malfunction.**
- **Even though your vehicle is damaged by a collision, it may not be severe enough to trigger front, side or side curtain airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by Maruti Suzuki authorized workshop to ensure that it works properly. If the original function of air bag system is damaged, air bag may not function effectively and fully in case of an emergency.**

**⚠ CAUTION**

**Airbags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the airbag may irritate bare skin, such as the facial area against a front airbag. Wash off any residue as soon as possible to prevent skin irritation. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however, that some airbag components may be hot for a while after inflation.**
**This may cause burn injury.**

Your vehicle is equipped with a diagnostic module which records information about the airbag system if the airbags deploy in a collision. The module records information about overall system status, and which sensors activated the deployment.

**Servicing the airbag system**

If the airbags inflate, have the airbags and related components replaced by Maruti Suzuki authorized workshop as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the airbag controller could be damaged. If this happens, ask Maruti Suzuki authorized workshop to check the airbag system as soon as possible.

Special procedures are required for servicing or replacing an airbag. For that reason, only Maruti Suzuki authorized workshop should be allowed to service or replace your airbags. Remind anyone who services your Maruti Suzuki vehicle that it has airbags.

Service on or around airbag components or wiring must be performed only by Maruti Suzuki authorized workshop. Improper service could result in unintended airbag deployment or could render the airbag inoperative. Either of these two conditions may result in severe injury.


To prevent damage or unintended inflation of the airbag system, check that the battery is disconnected and the ignition mode has been in LOCK (OFF) for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle. Do not touch airbag system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

**⚠ CAUTION**

**If you do not handle the airbags properly, they may inflate unexpectedly, resulting in personal injury.**
**When scrapping the airbags or the vehicle that has the airbags, consult Maruti Suzuki authorized workshop.**


## Front Airbag Deployment Conditions

### Front airbags deploy (inflation)

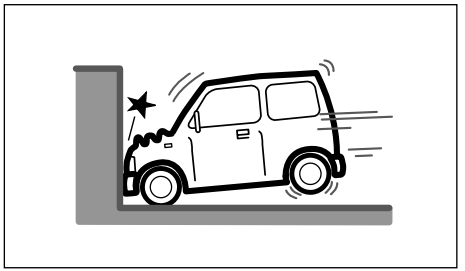

80J097


- Frontal collision with a fixed wall that does not move or deform at more than about 25 km/h

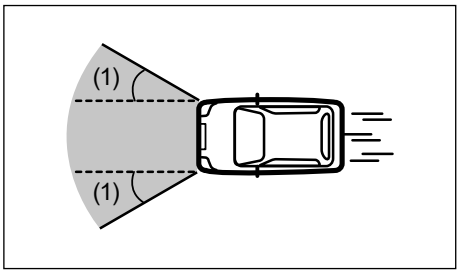


80J098E


- Strong impact equivalent to frontal collision such as above at left and right angles of about 30 degrees (1) or less from the front of your vehicle

**Front airbags may inflate**
Receiving a strong impact to the lower body of your vehicle, the front airbags may inflate.

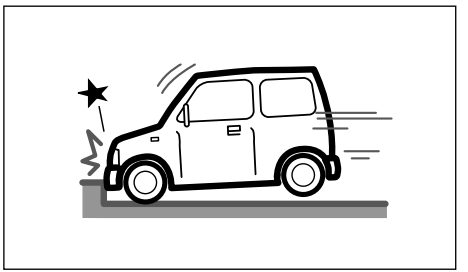


80J099

- Hitting a curb or medial strip

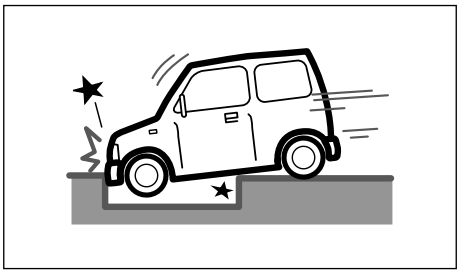

80J100E

- Falling into a deep hole or ditch

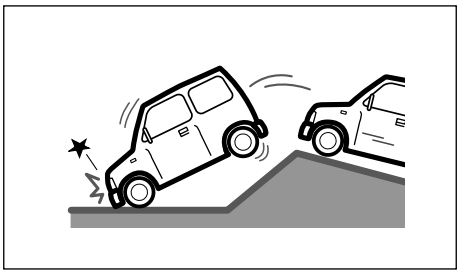


80J101

- Landing hard or falling

**Front airbags may not inflate**


The front airbags may not inflate when a strong impact has not occurred since the collision object (including living beings like animals) was easy to be deformed or moved, or the crashed portion of your vehicle was easy to be deformed.

Also, front airbags may not inflate in many cases when the collision angle is greater than about 30 degrees at left and right angles from the front of your vehicle.Also, in certain collisions at low speed, the airbag may not inflate.

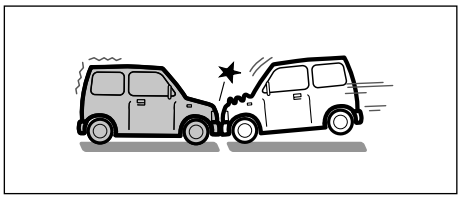


80J102

- Frontal collision to a stopped vehicle at less than about 50 km/h

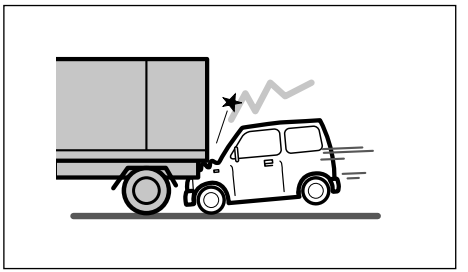


80J103

- Collision that the front of your vehicle goes under the bed of a truck etc.

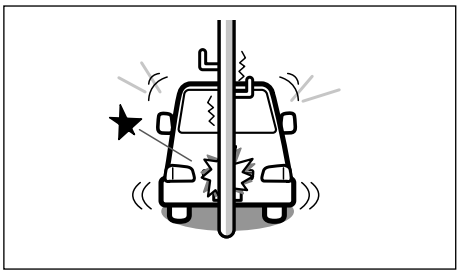


80J104

- Collision with a utility pole or stumpage

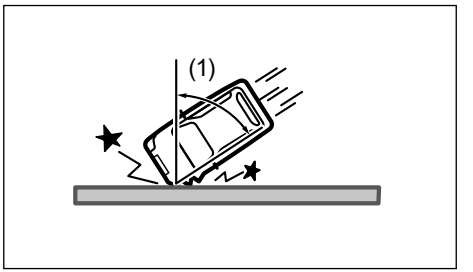


80J105E


- Collision with a fixed wall or guardrail at left and right angles of greater than about 30 degrees (1) from the front of your vehicle

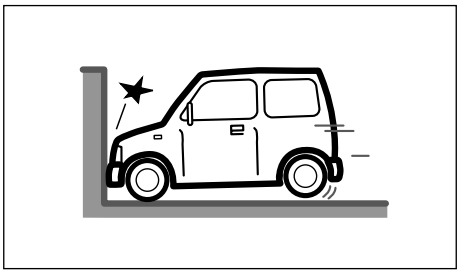

80J106


- Frontal collision with a fixed wall that does not move or deform at less than about 25 km/h

**Front airbags do not inflate**
Front airbags do not inflate in rear impacts, side impacts or rollovers, etc. However, these might inflate in a strong impact.

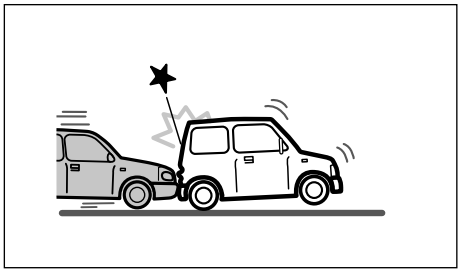


80J120

- Impact from the rear

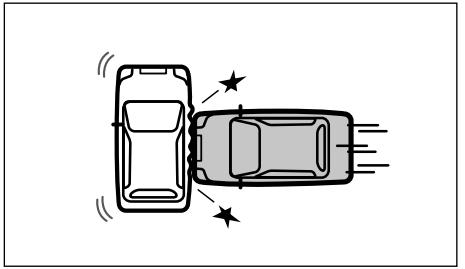

80J119

- Impact from the side

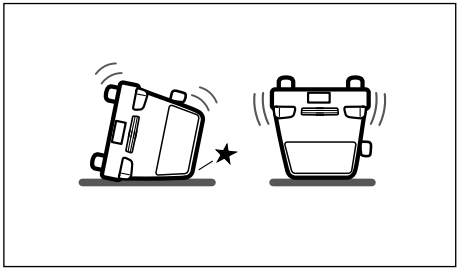


80J110

- Vehicle rollover

## Side Airbags and Side Curtain Airbags Deployment Conditions

**Side airbags and side curtain airbags deploy (inflation)**

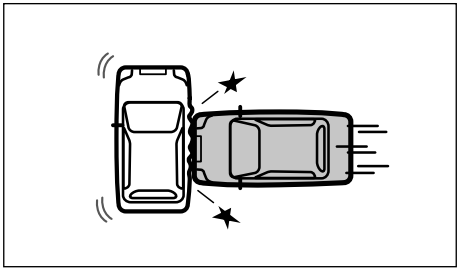


80J119

- Impacts from the side at about a right angle by a general passenger car to your vehicle at more than about 30 km/h or in a greater impact


**Side airbags and side curtain airbags may inflate in a strong impact**

Side airbags and side curtain airbags may inflate even in a frontal collision, if there is a strong impact to the lateral direction.

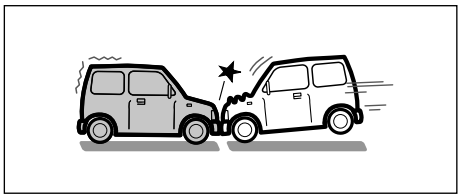


80J102

- Frontal collision

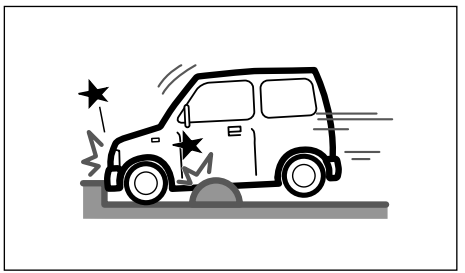


52RM20730

- Hitting a curb or bump

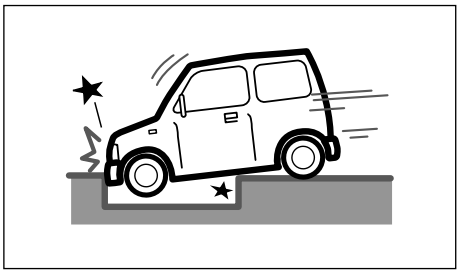

80J100E


- Falling into a deep hole or ditch

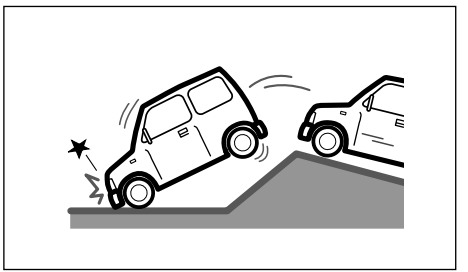


80J101

- Landing hard or falling

**Side airbags and side curtain airbags may not inflate**

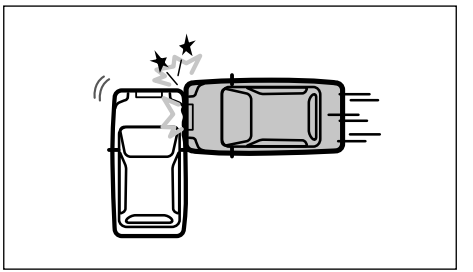


80J121

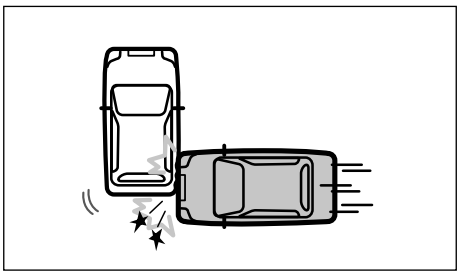


80J122

- Impact from the side to the vehicle body other than the passenger compartment

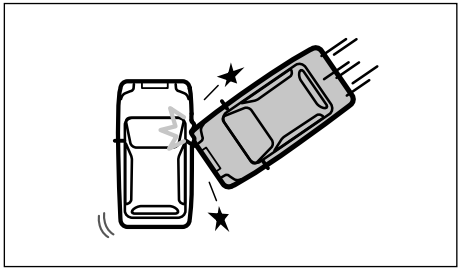


80J123

- Impact from the side at an oblique angle

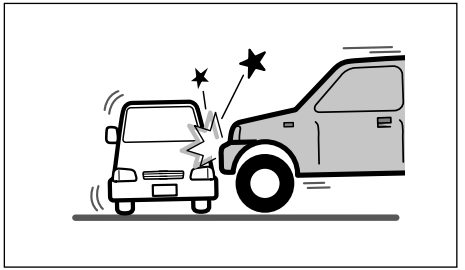


80J124

- Impact from the side by a high hood vehicle

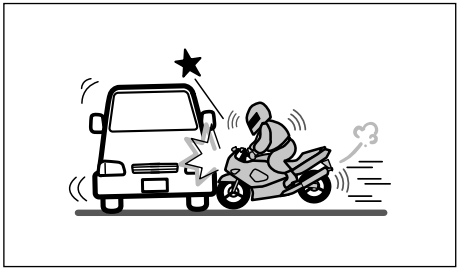

80J125


- Impact from the side by a motorcycle or bicycle

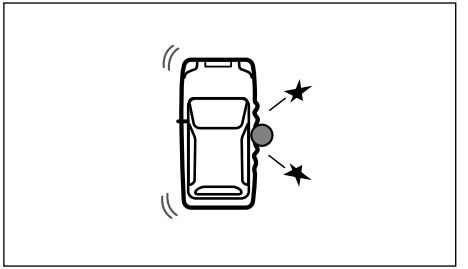

80J126


- Collision with a utility pole or stumpage

**Side airbags and side curtain airbags do not inflate**

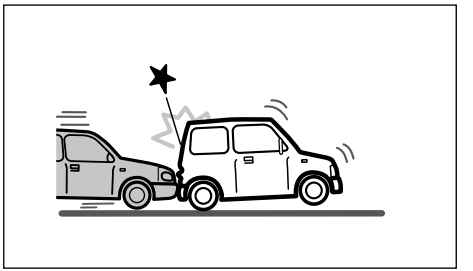

80J120

- Impact from the rear

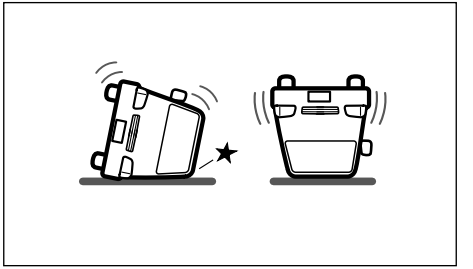

80J110

- Vehicle rollover


## When Starting the Engine

### Be Careful of Carbon Monoxide Poisoning

**⚠ WARNING**

**Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. If you breath exhaust gases, you may feel drowsy, resulting in severe health problems or death in the worst case.**
**If you start the engine, be careful of carbon monoxide poisoning.**

### Do not Run Engine in a Poorly-ventilated Area

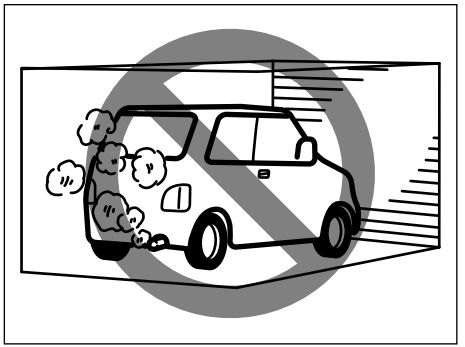

52D334

**⚠ WARNING**

**Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, take the following precautions to help prevent carbon monoxide from entering your vehicle.**
**Otherwise, it may result in severe health problems or death in the worst case.**

- **Do not leave the engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon monoxide in cabin and may lead to suffocation or breathing problem and lead to death.**

(Continued)

**⚠ WARNING**

(Continued)

- **Do not park with the engine running for a long period of time, even in an open area. In case of long periods, danger of choking and death on being inside the vehicle is a possibility when the engine is running. If it is necessary to sit for a short time in a parked vehicle with the engine running, check that the air intake selector is set to "FRESH AIR" and the blower is at high speed.**
- **Avoid operating the vehicle with the tailgate open. If it is necessary to do so, check that the all windows are closed, and the blower is at high speed with the air intake selector set to "FRESH AIR".**
- **To allow proper operation of your vehicle's ventilation system, keep the air inlet grill in front of the windshield clear of snow, leaves or other obstructions at all times.**
- **Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.**
- **Have the exhaust system inspected periodically for damage and leakage. Any damage or leakage should be repaired immediately.**

### Do not Take a Nap with Engine Running



69RHS172

**⚠ WARNING**

**Do not take a nap with the engine running. Otherwise, it may result in an accident, severe health problems or death in the worst case.**

- **Exhaust gases can enter the vehicle due to surrounding conditions and wind direction, possibly causing carbon monoxide poisoning.**
- **The gearshift lever could change unintentionally, or the accelerator pedal could be depressed accidentally, causing an accident.**
- **If you were to accidentally step on the accelerator pedal while asleep, the engine and exhaust system could overheat, resulting in danger of fire**

## When Loading the Luggage

Loading too much luggage in the vehicle may have negative effects to the vehicle body or driving performance.

**⚠ WARNING**



59RN02230

- **Fuel, chemical containers, spray cans etc. may catch a fire or cause an explosion.**
  **Do not bring these objects into the vehicle.**

(Continued)

**⚠ WARNING**

(Continued)



59RN02240

- **If you place any objects on the instrument panel, these objects may move and interfere with driver's view or safe driving. Also, the front passenger's front airbag may not work properly or these objects may be thrown out when the airbag inflates in an accident. Do not place any objects on the instrument panel.**



59RN07290

**⚠ CAUTION**


- **If you hang any objects on the gearshift lever or use it as a handrest, the gearshift lever may not work properly, resulting in a malfunction or an accident.**
  **Do not hang any objects on the gearshift lever or use it as a handrest.**
- **If you pile up luggage, it may interfere with driver's view. Also, in a sudden braking, the luggage would jump out and it may result in an accident.**
  **Do not pile up luggage in the vehicle.**
- **If animals move about in the vehicle, it may interfere with driver's view. Also, in a sudden braking, it may result in an accident.**
  **When you bring animals into the vehicle, make sure that animals do not move about.**

## Hybrid system features (if equipped)

Your vehicle is a hybrid vehicle. It has characteristics different from conventional gasoline vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate it with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

### System components

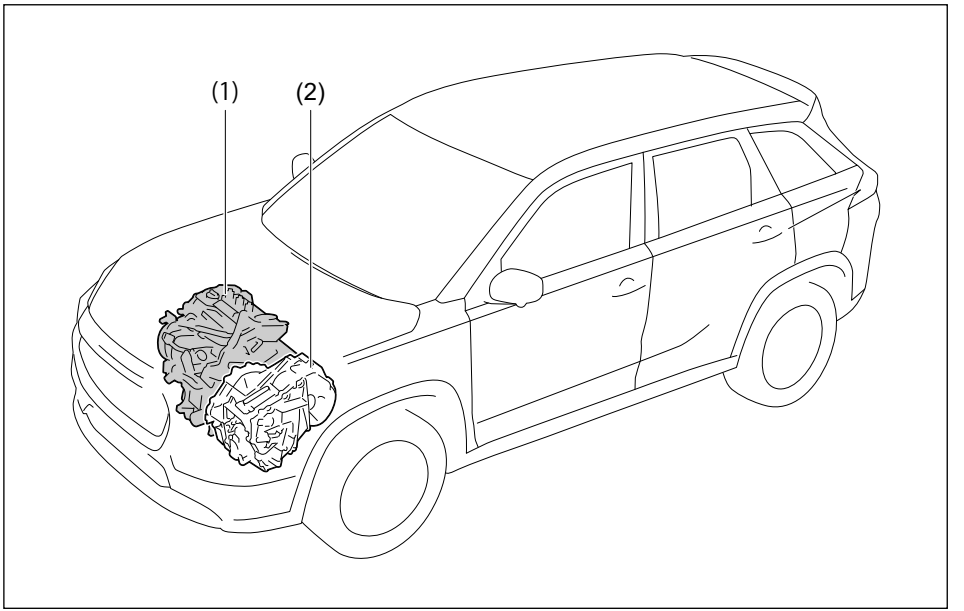


71UM02022

1) Gasoline engine
2) Electric motor (traction motor)

This illustration is an example of the Hybrid system explanation and may be different from the actual system on the vehicle.

## When stopped/during starting off

The gasoline engine stops* when the vehicle is stopped. During start off, the electric motor (traction motor) drives the vehicle. At slow speeds or when traveling down a gentle slope, the engine is stopped* and the electric motor (traction motor) is used.

When the shift lever is in N, the hybrid battery (traction battery) is not being charged.

*: When the hybrid battery (traction battery) requires charging or the engine is warming up, etc., the gasoline engine will not automatically stop.

**During normal driving**

The gasoline engine is predominantly used. The electric motor (traction motor) charges the hybrid battery (traction battery) as necessary.


**When braking (regenerative braking)**

The wheels operate the electric motor (traction motor) as a power generator and the hybrid battery (traction battery) is charged.

In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).

- The accelerator pedal is released while driving with the shift lever in D or B.
- The brake pedal is depressed while driving with the shift lever in D or B.

**EV indicator**

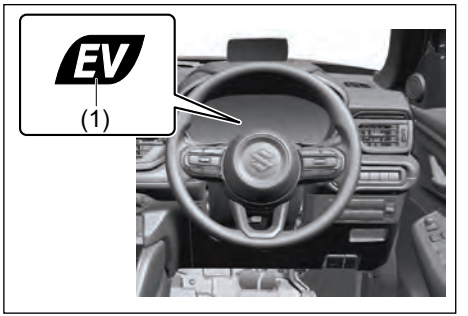


71UM02012

(1) EV indicator

EV indicator comes on when the vehicle is driven using only the electric motor (traction motor) or the gasoline engine is stopped.

**Conditions in which the gasoline engine may not stop**

The gasoline engine starts and stops automatically. However, it may not stop automatically in the following conditions:

- During gasoline engine warm-up
- During hybrid battery (traction battery) charging
- When the temperature of the hybrid battery (traction battery) is high or low
- When the heater is switched on

Depending on the circumstances, the gasoline engine may also not stop automatically in other situations.

**Charging the hybrid battery (traction battery)**

As the gasoline engine charges the hybrid battery (traction battery), the battery does not need to be charged from an outside source. However, if the vehicle is left parked for a long time the hybrid battery (traction battery) will slowly discharge. For this reason, make sure to drive the vehicle at least once every few months for at least 30 minutes or 16 km. If the hybrid battery (traction battery) becomes fully discharged and you are unable to start the hybrid system, contact your Maruti Suzuki authorized workshop.

**Charging the lead-acid 12-volt battery**
Refer to “Jump-starting Instructions” in “EMERGENCY SERVICE” section.

After the lead-acid battery has discharged or when the terminal has been removed and installed during exchange, etc, the gasoline engine may not stop even if the vehicle is being driven by the hybrid battery (traction battery). If this continues for a few days, contact your Maruti Suzuki authorized workshop.

**Sounds and vibrations specific to a hybrid vehicle**

There may be no engine sound or vibration even though the vehicle is able to move with the “READY” indicator is illuminated. For safety, apply the parking brake and make sure to shift the shift lever to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) from the rear luggage compartment when the hybrid system starts or stops.
- Relay operating sounds such as a snap or soft clank will be emitted from the hybrid battery (traction battery) from the rear luggage compartment when the hybrid system is started or stopped.
- Sounds from the hybrid system maybe heard when the tailgate is open.
- Sounds may be heard from the transmission when the gasoline engine starts or stops when driving at low speeds, or during idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds from the motor or hybrid system may be heard when the brake pedal is depressed or as the accelerator pedal is released.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vent on the rear door side trim beside the rear right seat.


**Maintenance, repair, recycling, and disposal**
Contact your Maruti Suzuki authorized workshop regarding maintenance, repair, recycling and disposal. Do not dispose of the vehicle yourself.

## Hybrid system precautions

Take care when handling the hybrid system, as it is a high voltage system (about 580V at maximum) as well as the vehicle contains parts that become extremely hot when the hybrid system is operating. Follow the warning labels attached to the vehicle.

## System components

This illustration is an example of the Hybrid system explanation and may be different from the actual system on the vehicle.

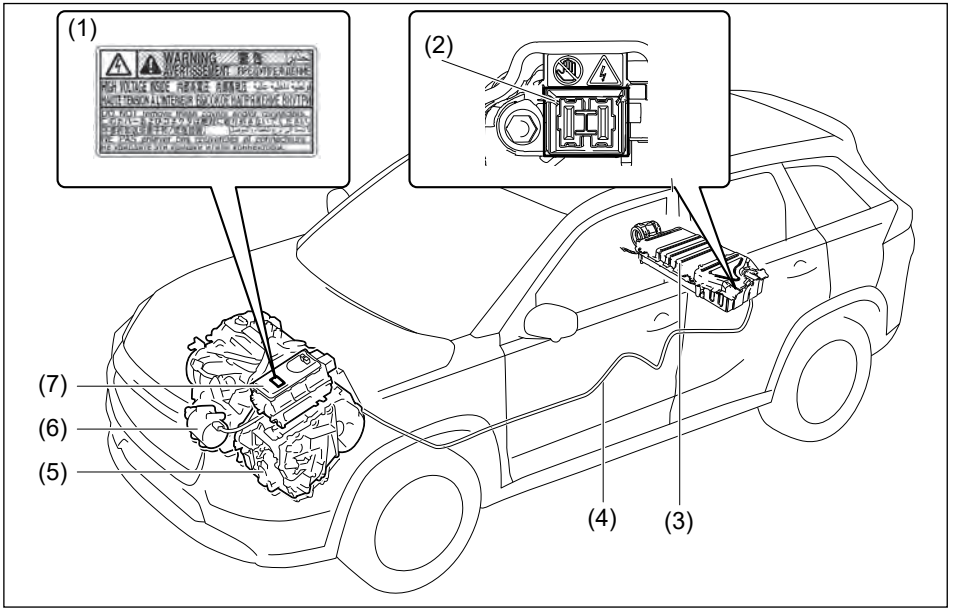


71UM02023

(1) Warning label
(2) Service plug
(3) Hybrid battery (traction battery)
(4) High voltage cables (orange)
(5) Electric motor (traction motor)
(6) Air conditioning compressor
(7) Power control unit

**Running out of fuel**
When the vehicle runs out of fuel and the hybrid system cannot be restarted, fill the fuel tank with the gasoline until the low fuel warning light is turned off.

The amount of the gasoline required to restart the hybrid system is 11L (19.4 Imp pt) at minimum which depends on the tilt of the vehicle. Add more gasoline if the hybrid system cannot be restarted.

**Electromagnetic waves**
High voltage parts and cables on hybrid vehicles incorporate electromagnetic shielding, and therefore emit approximately the same amount of electromagnetic waves as conventional gasoline powered vehicles or home electronic appliances.

Your vehicle may cause sound interference in some third party-produced radio parts.

**Hybrid battery (traction battery)**
The hybrid battery (traction battery) has a limited service life. The lifespan of the hybrid battery (traction battery) can change in accordance with driving style and driving conditions.

**Starting the hybrid system in an extremely cold environment**
When the hybrid battery (traction battery) is extremely cold (below approximately -15°C [5°F]) under the influence of the outside temperature, it may not be possible to start the hybrid system. In this case, try to start the hybrid system again after the temperature of the hybrid battery increases due to the outside temperature increase etc.

**⚠ WARNING**

**This vehicle has high voltage DC and AC systems as well as a 12-volt system. DC and AC high voltage is very dangerous and can cause severe burns and electric shock that may result in death or serious injury.**
- **Never touch, disassemble, remove or replace the high voltage parts, cables or their connectors.**
- **The hybrid system will become hot after starting as the system uses high voltage. Be careful of both the high voltage and the high temperature, and always obey the warning labels attached to the vehicle.**
- **Never try to open the service plug located beside the traction battery in the luggage compartment. The service plug is used only when the vehicle is serviced and is subject to high voltage.**

**⚠ WARNING**

**Observe the following precautions to reduce the risk of death or serious injury:**

- **Pull your vehicle off the road, apply the parking brake, shift the shift lever to "P" (Park) and turn the hybrid system off.**
- **Do not touch the high voltage parts, cables and connectors.**
- **If electric wires are exposed inside or outside your vehicle, an electric shock may occur. Never touch exposed electric wires.**
- **If a fire occurs in the hybrid vehicle, leave the vehicle as soon as possible. Never use a fire extinguisher that is not meant for electric fires. Using even a small amount of water may be dangerous.**
- **If your vehicle needs to be towed, do so with the front wheels raised. If the wheels connected to the electric motor (traction motor) are on the ground when towing, the motor may continue to generate electricity. This may cause a fire.**

**⚠ WARNING**

- **Inspect the ground under the vehicle carefully. If you find that liquid has leaked onto the ground, the fuel system may have been damaged. Leave the vehicle as soon as possible.**
- **Never touch, disassemble, remove or replace the high voltage parts, cables or their connectors.**
- **Do not touch the battery if liquid is leaking from or adhering to it. If electrolyte (carbonate ester-based organic electrolyte) from the hybrid battery (traction battery) comes into contact with the eyes or skin, it could cause blindness or skin wounds. In the unlikely event that it comes into contact with the eyes or skin, wash it off immediately with a large amount of water, and seek immediate medical attention.**

(Continued)

**⚠ WARNING**

(Continued)

- **If electrolyte is leaking from the hybrid battery (traction battery), do not approach the vehicle. Even in the unlikely event that the hybrid battery (traction battery) is damaged, the internal construction of the battery will prevent a large amount of electrolyte from leaking out. However, any electrolyte that does leak out will give off a vapor. This vapor is an irritant to skin and eyes and could cause acute poisoning if inhaled.**
- **Do not bring burning or high-temperature items close to the electrolyte. The electrolyte may ignite and cause a fire.**

**⚠ WARNING**

**Your vehicle contains a sealed lithium-ion battery.**
**Never resell, hand over or modify the hybrid battery. To prevent accidents, hybrid batteries that have been removed from a disposed vehicle are collected through your Maruti Suzuki authorized workshop. Do not dispose of the battery yourself.**
**Unless the battery is properly collected, the following may occur, resulting in death or serious injury:**
- **The hybrid battery may be illegally disposed of or dumped, and it is hazardous to the environment or someone may touch a high voltage part, resulting in an electric shock.**
- **The hybrid battery is intended to be used exclusively with your hybrid vehicle. If the hybrid battery is used outside of your vehicle or modified in any way, accidents such as electric shock, heat generation, smoke generation, an explosion and electrolyte leakage may occur.**
- **When reselling or handing over your vehicle, the possibility of an accident is extremely high because the person receiving the vehicle may not be aware of these dangers.**

(Continued)

**⚠ WARNING**


(Continued)
- **If your vehicle is disposed of without the hybrid battery having been removed, there is a danger of serious electric shock if high voltage parts, cables and their connectors are touched. In the event that your vehicle must be disposed of, the hybrid battery must be disposed of by your Maruti Suzuki authorized workshop.If the hybrid battery is not disposed of properly, it may cause electric shock that can result in death or serious injury.**

***NOTICE***

**Your vehicle contains the hybrid battery (traction battery) air intake vent. Do not carry large amounts of water such as water cooler bottles in the vehicle. If water spills onto the hybrid battery (traction battery), the battery may be damaged. Have the vehicle inspected by your Maruti Suzuki authorized workshop.**

### Before opening the hood

Before you open the hood, make sure that the ignition mode is LOCK (OFF) and READY indicator comes off on the information display (1).

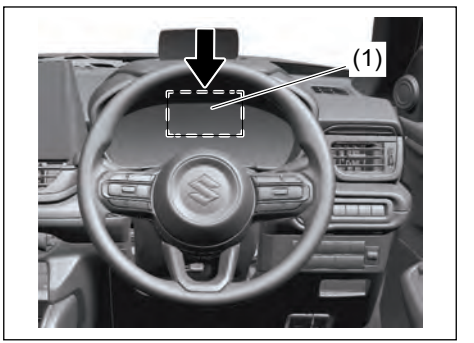


71UM02013


(1) Information display

**⚠ WARNING**

**Before opening the hood, make sure the power switch and "READY" indicator are turned off to avoid a sudden engine start. Failure to do so may result in serious injury.**

### Hybrid battery (traction battery) air intake vent

There is an air intake vent near the right side of the rear seat and rear right door for the purpose of cooling the hybrid battery (traction battery). If the vent becomes blocked, the hybrid battery (traction battery) input and output may be reduced.

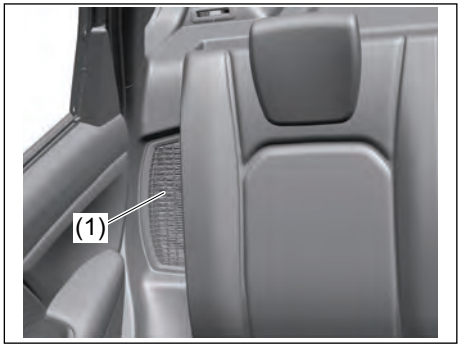


71UM02014

(1) Hybrid battery air intake vent

***NOTICE***

- **Make sure that the air intake vent is not blocked, such as by a seat cover, plastic cover, or luggage. If the vent is blocked, the hybrid battery (traction battery) input and output may be restricted, possibly leading to a malfunction.**
- **Clean the air intake vent regularly to prevent the hybrid battery (traction battery) from overheating.**
- **Do not get water or foreign materials in the air intake vent as this may cause a short circuit and damage the hybrid battery (traction battery).**
- **A filter is installed to the air intake vent. When the filter remains noticeably dirty even after cleaning the air intake vent, filter cleaning or replacement is recommended.**


### Emergency shut off system

When a certain level of impact is detected by the impact sensor, the emergency shut off system blocks the high voltage current and stops the fuel pump to minimize the risk of electrocution and fuel leakage. If the emergency shut off system activates, your vehicle will not restart. To restart the hybrid system, contact your Maruti Suzuki authorized workshop.

### Hybrid warning message

A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.

If a warning message is shown on the multi-information display, read the message and follow the instructions.

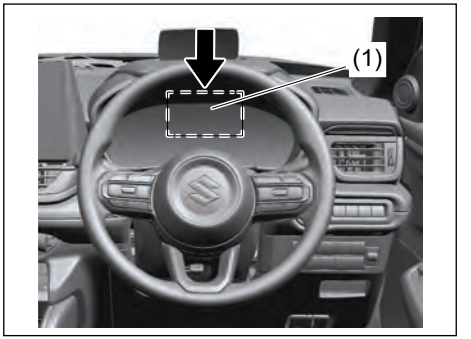


71UM02013

(1) Information display

If a warning light comes on, a warning message is displayed, or the 12-volt lead-acid battery is disconnected, the hybrid system may not start. In this case, try to start the system again. If the “READY” indicator does not come on, contact your Maruti Suzuki authorized workshop.

**Hybrid battery (Traction battery)**
Check the charge of the hybrid battery (traction battery). If the charge is low, shift the gearshift lever to “P” position allow the engine of the hybrid system to run to charge the hybrid battery (traction battery) and then press the power switch.

| *NOTICE* |
| --- |
| **If the gearshift lever is in “N” position, the hybrid battery (traction battery) will not be charged even when the engine is running. Therefore, if the vehicle is left with the shift lever in “N” position for a long period of time, the hybrid battery (traction battery) will discharge and this may result in the vehicle not being able to start.** |

**If “DRIVE BATTERY POWER LOW AVOID USING GEAR POSITION N” is displayed**
This message may be displayed when the gearshift lever is in “N” position.
As the hybrid battery (traction battery) cannot be charged when the gearshift lever is in “N” position, shift the gearshift lever to “P” position when the vehicle is stopped.

**If “DRIVE BATTERY POWER LOW USE GEAR P TO RESTART” is displayed**
This message is displayed when the hybrid battery (traction battery) charge has become extremely low because the gearshift lever has been left in “N” position for a certain amount of time.


**If “CHANGE GEARSHIFT POSITION TO P” is displayed**
Message is displayed when the driver’s door is opened without turning the power switch to OFF with the gearshift lever in any position other than “P” position. Shift the gearshift lever to “P” position.

**If “GEAR POSITION N RELEASE ACCELERATOR BEFORE SHIFTING” is displayed**
The accelerator pedal has been depressed when the shift lever is in “N” position. Release the accelerator pedal and shift the gearshift lever to “D” position or “R” position.

**If “DRIVE BATTERY COOLING PARTS MALFUNCTION SEE OWNER’S MANUAL” is displayed**
This message is displayed when the filters may be clogged, the air intake vents may be blocked, or there may be a gap in the duct. Therefore, have the vehicle inspected by Maruti Suzuki authorized workshop immediately.

**If “BRAKING POWER LOW STOP IN SAFE PLACE CONTACT DEALER” is displayed**
This message is displayed when the brake power is low. Continuing to drive your vehicle may be dangerous. Stop your vehicle in a safety place immediately and contact your Maruti Suzuki authorized workshop for your vehicle inspected.

**If “BRAKE SYSTEM MALFUNCTION BRAKING POWER LOW CONTACT DEALER” is displayed**
This message is displayed when there may be a problem or malfunction with the brake system and the brake power is low. Have your vehicle inspected by Maruti Suzuki authorized workshop.

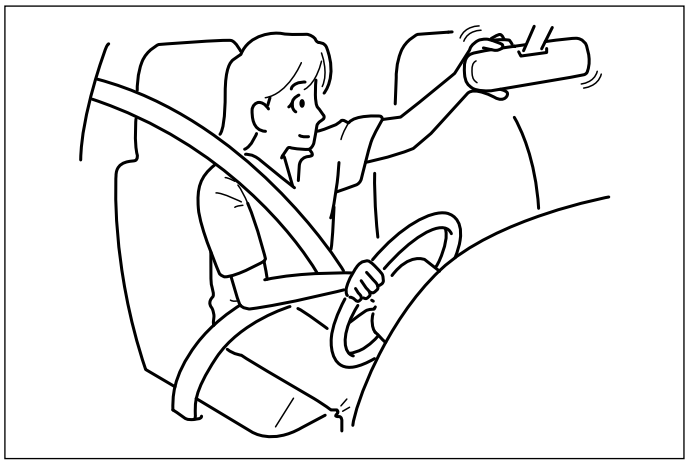

60G404


# BEFORE DRIVING

Keys ..... 3-1
Doors ..... 3-1
Keyless Push Start System Remote Controller ..... 3-16
Security System ..... 3-22
Windows ..... 3-25
Lighting Control Lever ..... 3-28
Headlight Leveling Switch ..... 3-33
Turn Signal Control Lever ..... 3-34
Hazard Warning Switch ..... 3-35
Windshield Wiper and Washer Lever ..... 3-36
Horn ..... 3-39
Heated Rear Window Switch ..... 3-39

## Keys

Your vehicle comes with a pair of identical keys. Keep one of the keys as a spare key in a safe place. One key can open all of the locks on the vehicle.

### Key Number Plate

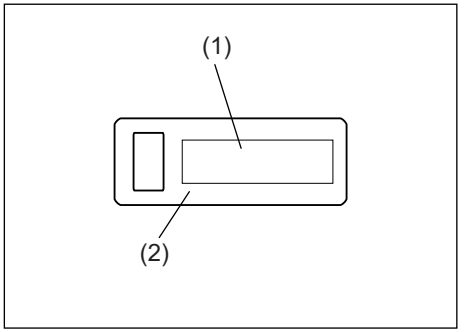


55T030020

The key identification number (1) is stamped on a metal tag (2) provided with the keys. Keep the tag in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.

| KEY NUMBER: |
| --- |
| |

*NOTE:*

- *Carefully keep the tag in the place other than your vehicle, so that someone does not find out about the key identification number. If you lose your key, inform the key identification number to a Maruti Suzuki authorized workshop.*
- *When you resell or transfer your vehicle to a new owner or operator, give the key number plate with your vehicle to him or her.*

### Immobilizer System

For detail of immobilizer system, “Immobilizer System” in the “OPERATING YOUR VEHICLE” section

## Doors

**⚠ WARNING**

- **When a seat belt or luggage is caught by a door, the door cannot be shut properly and it may open while driving. This may cause an accident. Close a door not to catch a seat belt or luggage in the door.**
- **When you keep the tailgate open with the engine running or the hybrid system activating, exhaust gases will enter the vehicle and cause carbon monoxide poisoning. This may cause severe health problems or death in the worst case. Do not keep the tailgate open with the engine running or the hybrid system activating.**
- **To prevent fire or theft, stop the engine or the hybrid system and lock the doors when leaving the vehicle.**
- **When opening a door, be careful of the surrounding area. An accident, such as a collision with the vehicle or a pedestrian behind your vehicle, may occur. Be very careful when opening a door especially on a windy day.**


**⚠ CAUTION**

- **When a child opens or closes a door, his / her hands, legs or head may be caught in the door and this may cause injury. Opening or closing a door should be performed not by a child but by an adult.**
- **When the tailgate is not fully opened, it may be unexpectedly closed and this may cause injury. When opening the tailgate, open it fully.**
- **Opening the tailgate right behind the exhaust pipes may cause burn injury. With the engine running or the hybrid system activating, do not open the tailgate right behind the exhaust pipes.**

*NOTE:*

- *When leaving the vehicle even for a short period of time, do not leave cash or valuables in the vehicle, to avoid risk of theft.*
- *Depending on the setting conditions of the security alarm and the opening conditions of the doors, an alarm may operate. Refer to "Security System" in this section.*

## Side Door Locks

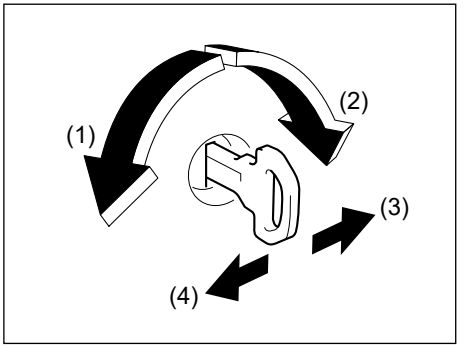



59RN03180

(1) UNLOCK
(2) LOCK
(3) Front
(4) Rear

To lock a front door from outside the vehicle:

- Insert the key and turn the top of the key toward the front of the vehicle, or
- Turn the lock knob forward, then pull and hold the door handle as you close the door.

To unlock a front door from outside the vehicle, insert the key and turn the top of the key toward the rear of the vehicle.

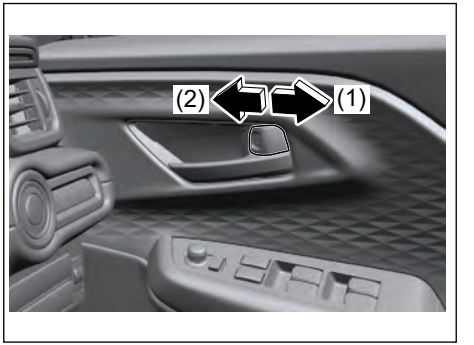


71UM03005


(1) UNLOCK
(2) LOCK

To lock a door from inside the vehicle, turn the lock knob forward. Turn the lock knob rearward to unlock the door.

To lock a rear door from outside the vehicle, turn the lock knob forward and close the door. You do not need to pull and hold the door handle as you close the door.

*NOTE:*
*Be sure to hold the door handle when you close a locked front door, or the door will not remain locked.*

## Central Door Locking System

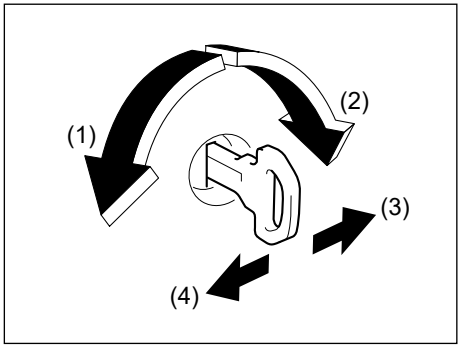


59RN03180

(1) UNLOCK
(2) LOCK
(3) Front
(4) Rear


You can lock and unlock all doors (including the tailgate) simultaneously by using the key in the driver's door lock.

To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle once.

To unlock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle twice.

*NOTE:*
*You can switch the function that unlocks all doors from requiring two turns to requiring one turn, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Setting mode of information display (Type A)" or "Setting mode of information display (Type B)" in "SPECIFICATIONS" section.*

To unlock the driver's door only, insert the key in that door lock and turn the top of the key toward the rear of the vehicle once.

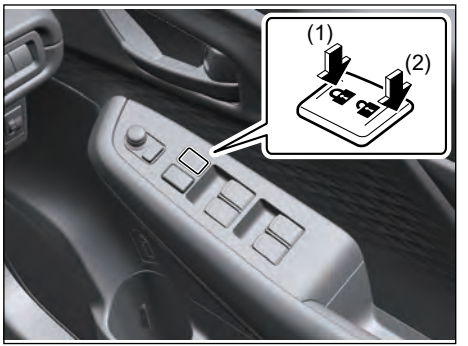



71UM03006

(1) LOCK
(2) UNLOCK

You can also lock or unlock all doors by pressing the front or rear of the switch, respectively.

*NOTE:*
- *You can also lock or unlock all doors by operating the remote controller. Refer to "Keyless Push Start System Remote Controller" in this section.*
- *If your vehicle is equipped with the keyless push start system, you can also lock or unlock all doors by pushing the request switch. Refer to "Keyless Push Start System Remote Controller" in this section.*

## Child-proof Locks (rear door)

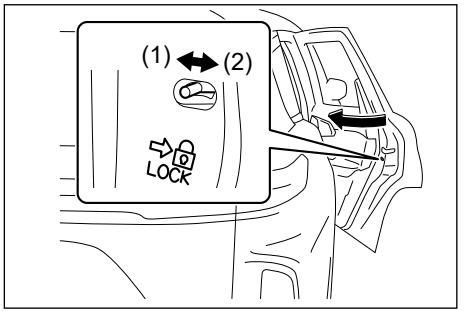


55T030410

(1) UNLOCK
(2) LOCK

Each of the rear doors is equipped with a child-proof lock which can be used to help prevent unwanted opening of the door from inside the vehicle. When the lock lever is in the lock position (2), the rear door can only be opened from outside. When the lock lever is in the unlock position (1), the rear door can be opened from inside or outside.


**⚠ WARNING**

**Be sure to place the child-proof lock in the lock position whenever children are seated in the rear.**

*NOTE:*
*When you open a door from inside, put your hand out of the window and use the door handle.*

## Tailgate

### Locking and unlocking from outside the vehicle

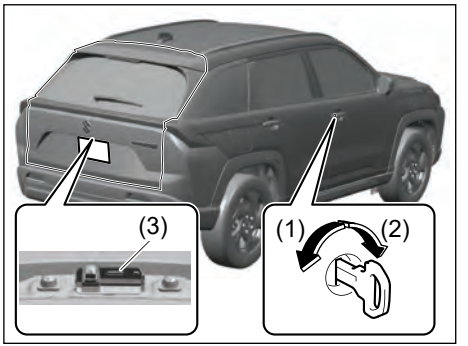


71UM03007

(1) Unlock
(2) Lock
(3) Tailgate unlatch switch

You can lock and unlock the tailgate by using the key in the driver's door lock.

To open the tailgate, push and hold the tailgate unlatch switch (3) and lift the tailgate.

*NOTE:*
*When the tailgate is closed incompletely, follow the procedure below:*
1) *Push the tailgate unlatch switch (3) and open the tailgate.*
2) *Close the tailgate.*
3) *Check that the tailgate is closed completely.*

**⚠ WARNING**

**Always ensure that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.**

**⚠ WARNING**

**Observe the following precautions. Failure to do so may result in death or serious injury.**

### Before driving

- **Make sure that the tailgate is fully closed.**
  **If the tailgate is not fully closed, it may open unexpectedly while driving and hit near-by objects or luggage in the luggage compartment may be thrown out, causing an accident.**
- **Do not allow children to play in the luggage compartment.**
  **If a child is accidentally locked in the luggage compartment, they could get heat exhaustion or other injuries.**
- **Do not allow a child to open or**

(Continued)

**⚠ WARNING**

(Continued)
**close the tailgate. Doing so may cause the tailgate to operate unexpectedly, or cause the child's hands, head, or neck being caught by the closing tailgate.**

### Important points while driving

- **Keep the tailgate closed while driving.**
  **If the tailgate is left open, it may hit nearby objects or luggage in the luggage compartment may be thrown out, causing an accident.**
- **Never let anyone sit in the luggage compartment.**
  **In the event of sudden braking, sudden swerving or a collision, they are susceptible to death or serious injury.**

### Operating the tailgate

**Observe the following precautions. Failure to do so may cause parts of the body to be caught, resulting in death or serious injury.**

- **Remove any heavy loads or external material such as snow and ice, from the tailgate before opening it. Failure to do so may cause the tailgate to suddenly shut again after it is opened.**

(Continued)

**⚠ WARNING**

(Continued)
- **When opening or closing the tailgate, thoroughly check to ensure the surrounding area is safe.**
- **If anyone is in the vicinity, ensure they are safe and let them know that the tailgate is about to open or close.**
- **Use caution when opening or closing the tailgate in windy weather as it may move abruptly in strong wind.**
- **Do not pull on the tailgate damper stay (vehicles without smart power tailgate) or tailgate spindle (vehicles with smart power tailgate) to close the tailgate, and do not hang on the tailgate damper stay or tailgate spindle (as equipped).**
  **Doing so may cause hands to be caught or the tailgate damper stay or tailgate spindle (as equipped) to break, causing an accident.**
- **If a bicycle carrier or similar heavy object is attached to the tailgate, it may suddenly shut again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the tailgate, using a Maruti Suzuki genuine part is recommended.**

(Continued)

**⚠ WARNING**

(Continued)
- **When closing the tailgate, take extra care to prevent your fingers etc. from being caught.**


**Vehicles without smart power tailgate:**

- **The tailgate may suddenly shut if it is not opened fully. It is more difficult to open or close the tailgate on an incline than on a level surface, so beware of the tailgate unexpectedly opening or closing by itself. Make sure that the tailgate is fully open and secure before using the luggage compartment.**
- **When closing the tailgate, ensure to press it lightly on its outer surface. If the tailgate handle is used to fully close the tailgate, it may result in hands or arms being caught.**

**Vehicles with smart power tailgate:**

- **The tailgate may suddenly shut if it is not opened fully, while on a steep incline. Make sure that the tailgate is secured before using the luggage compartment.**

**⚠ CAUTION**

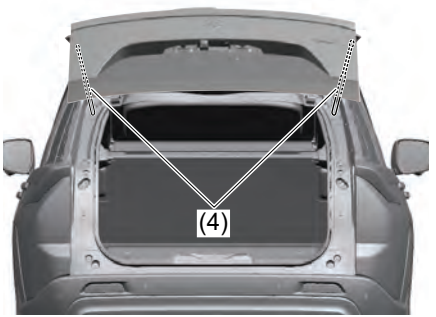


71UM03017


**To avoid damage and malfunction of the damper stay, observe the following precautions. Otherwise, the damper stay (4) which upholds the tailgate may not operate smoothly and the tailgate may not be kept up when opening it.**

- **Do not scratch the rod part of the damper stay and ensure that foreign materials such as dirt, vinyl and tape to this part is not attached to it.**
- **Do not lay your hands on the damper stay and do not hang any objects.**

**Unlocking from inside the vehicle**

If you cannot unlock the tailgate by using the key in the driver's door lock due to a discharged lead-acid battery or malfunction, reach out to Maruti Suzuki authorized workshop. In emergency situations, follow the procedures below.


1) Remove the luggage compartment cover (if equipped) and fold the rear seat forward for easier access. Refer to "Folding Rear Seats" in "FOR SAFE DRIVING" section for details on how to fold the rear seat forward.

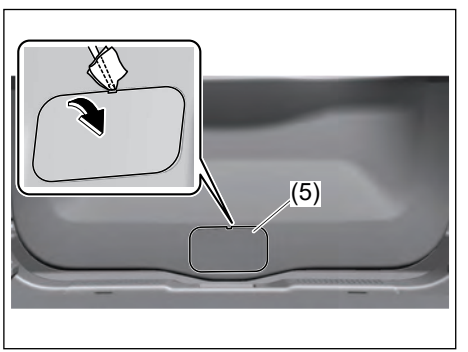


71UM03002


2) Remove the cover (5) using a flat-bladed screwdriver.

- **For without smart power tailgate vehicles**

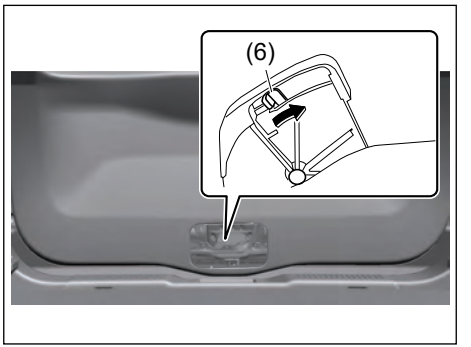


71UM03019

- **For smart power tailgate vehicles**

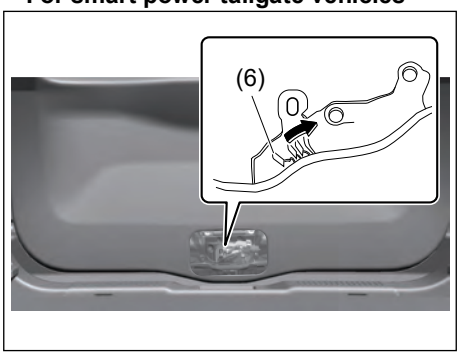


71UM03003

3) Move the emergency lever (6) to the direction of the arrow with a flat-blade screwdriver as shown in the illustration.

4) Push open the tailgate from inside. The tailgate will be latched again by simply closing the tailgate.


If you release the lever immediately after unlatching, the tailgate will be half-shut. Push open the tailgate while pulling the lever.
If the tailgate cannot be unlatched, have the vehicle inspected by a Maruti Suzuki authorized workshop.

**⚠ CAUTION**

- **Do not touch the edges of the holes of the tailgate when you pull or push the lever, as it may cause injury.**
- **Check that there is no one near the tailgate when pushing open the tailgate from inside the vehicle.**

**Opening/closing the tailgate (vehicles with smart power tailgate)**

**Using the remote controller**

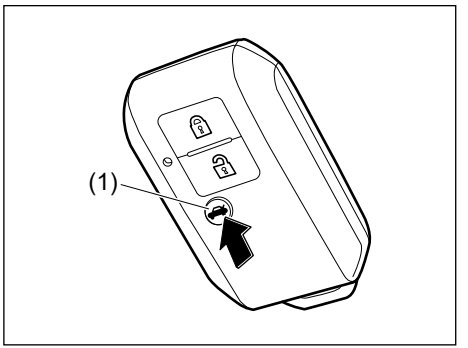


71UM03001


Press and hold the switch (1).

The smart power tailgate automatically opens/closes.

Pressing the switch while the smart power tailgate is opening/closing stops the operation. When the switch is pressed and held during the halted operation, the tailgate will perform the reverse operation.

*NOTE:*
*Above function works only in ignition off condition.*

**Using the smart power tailgate switch on the instrument panel**

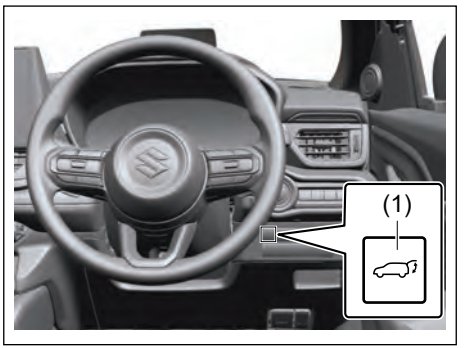


71UM03004

Unlock the tailgate before operating.

Press and hold the switch (1).


The smart power tailgate automatically opens/closes.

Pressing the switch while the smart power tailgate is opening/closing stops the operation. When the switch is pressed and held again during the halted operation, the tailgate will perform the reverse operation.

*NOTE:*
*If the security system is armed then use either request switch or remote controller to unlock tailgate before operating.*

### Using the switches on the tailgate

- **Open**

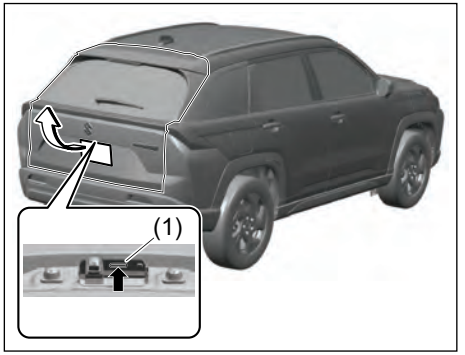


71UM03008

Unlock the tailgate before operating.


Press the switch (1).

The smart power tailgate automatically opens.

Pressing the switch while the smart power tailgate is opening/closing stops the operation.

*NOTE:*
*If the security system is armed then use either request switch or remote controller to unlock tailgate before operating.*

- **Close**

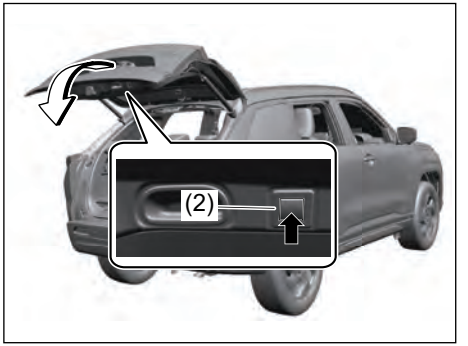



71UM03018

Press the switch (2) on the lower part of the tailgate.

The smart power tailgate automatically closes.

Pressing the switch (2) while the smart power tailgate is operating will stop the operation. When the switch (2) is pressed again during the halted operation, the tailgate will perform the reverse operation.

### Using the tailgate handle

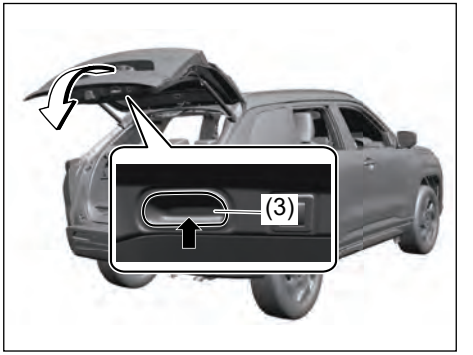



71UM03020

Lower the tailgate using the tailgate handle (3).

The tailgate closing assist will be activated, and the smart power tailgate will fully close automatically.

**Using the gesture control**

1) While carrying a remote controller, stand within the request switch operation range, from the rear bumper.

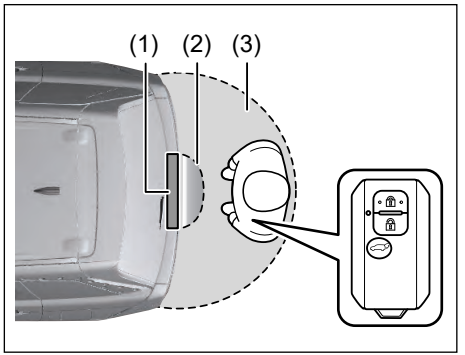



71UM03021

(1) Gesture control
(2) Gesture control operation detection area
(3) Request switch operation detection area (P.3-18)

2) Perform a kick operation by moving your foot within approximately 10 cm, of the rear bumper and then pulling it back.


Perform the entire kick operation within 1 second.
The tailgate will not start operating while a foot is detected under the rear bumper.

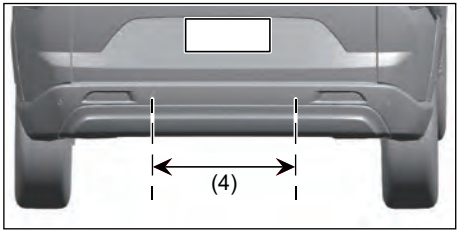


71UM03035

(4) Gesture control operation detection area: 500 mm

Operate the gesture control without contacting the rear bumper with your foot.

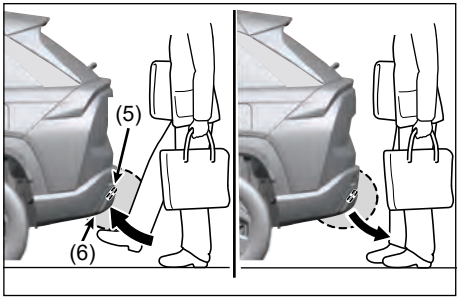


71UM03022

(5) Gesture control
(6) Gesture control operation detection area

3) When the gesture control detects that your foot is pulled back, a buzzer will sound and the tailgate will automatically fully open/close.

If a foot is moved under the rear bumper while the tailgate is opening/ closing, the tailgate will stop moving.
If a foot is moved under the rear bumper again during the halted operation, the tailgate will perform the reverse operation.

**Tailgate closer (vehicles with smart power tailgate)**

In the event that the tailgate is left slightly open, the tailgate closer will automatically close it to the fully closed position.
Whatever the state of the power switch, the tailgate closer operates.

**Smart power tailgate operating conditions**

The smart power tailgate can automatically open and close under the following conditions:

- When the smart power tailgate system is “ON”. (P.3-15)
- When the ignition mode is “ON”, in addition to the above for the opening operations, the tailgate operates for any of the following conditions:
  – Vehicle speed is 5 km/h or less and parking brake is engaged, or the brake pedal is depressed, or the shift lever is in P.

*NOTE:*
*Before leaving the vehicle make sure that all doors are closed and locked.*

**Operation of the smart power tailgate**
- A buzzer sounds and the turn signal lights will flash twice to indicate that the tailgate is opening/closing.
- When the smart power tailgate system is “OFF”, the smart power tailgate does not operate but it can be opened and closed by hand.
- While the smart power tailgate automatically opens, if an abnormality due to people or objects is detected, operation will stop.

**Jam protection function**
Sensors are equipped on both sides of the smart power tailgate. If anything obstructs the smart power tailgate while it is closing, the tailgate will automatically operate in the opposite direction and stop.



71UM03029

**Fall-down protection function**
While the smart power tailgate is opening automatically, applying excessive force to it will stop the opening operation to prevent the smart power tailgate from suddenly shutting.

**Tailgate closing assist**
If the tailgate is lowered manually when the tailgate is stopped at an open position, the tailgate will fully close automatically.

**Gesture control operating conditions**
The gesture control will open/close automatically when the following conditions are met:
- The gesture control operation is enabled.
- The remote controller is within the operational range.
- A foot is put near the lower center part of the rear bumper and moved away from the rear bumper.
  The smart power tailgate may also be operated by putting a hand, an elbow, a knee, etc. near the lower center part of the rear bumper and moving it away from the rear bumper. Make sure to hold it close enough to the center part of the rear bumper.

**Situations in which the gesture control may not operate properly**
In the following situations, the gesture control may not operate properly:
- When a foot remains under the rear bumper
- If the rear bumper is strongly hit with a foot or is touched for a while
- If the rear bumper has been touched for a while, wait for a short time before attempting to operate the gesture control again.
- When operated while a person is too close to the rear bumper
- When an external radio wave source interferes with the communication between the remote controller and the vehicle
- When the vehicle is parked near an electrical noise source which affects the sensitivity of the gesture control, such as a pay parking spot, fuel station, electrically heated road, or fluorescent light
- When the vehicle is near a TV tower, electric power plant, radio station, large electronic display, airport or other facility that generates strong radio waves or electrical noise
- When a large volume of water is applied to the rear bumper, such as when the vehicle is being washed or in heavy rain
- When mud, snow, ice, etc. is attached to the rear bumper
- When the vehicle has been parked for a while near objects that may move and contact the rear bumper, such as plants

- When an accessory is installed to the rear bumper

If an accessory has been installed, turn the gesture control operation setting off. Please contact a Maruti Suzuki authorized workshop to turn off gesture control.

**Preventing unintentional operation of the gesture control**

When a remote controller is in the operation range, the gesture control may operate unintentionally, so be careful in the following situations.

- When a large volume of water is applied to the rear bumper, such as when the vehicle is being washed or in heavy rain
- When dirt is wiped off the rear bumper
- When a small animal or small object, for example a ball, rolls under the rear bumper
- When an object is dragged from under the rear bumper
- If someone is swinging their legs while sitting on the rear bumper
- If the legs or body parts come into contact of the rear bumper while passing by the vehicle
- When the vehicle is parked near an electrical noise source which affects the sensitivity of the gesture control, such as a pay parking spot, fuel station, electrically heated road, or fluorescent light
- When the vehicle is near a TV tower, electric power plant, radio station, large electronic displays, airport or other facility that generates strong radio waves or electrical noise
- When the vehicle is parked in a place where objects such as plants or shrubs are near the rear bumper
- If luggage or any object is set near the rear bumper
- If accessories or a vehicle cover is installed/removed near the rear bumper
- When the vehicle is being towed

  To prevent unintentional operation, turn the “PWR DOOR OFF” switch off to disable the smart power tailgate system. (P.3-15)

**When reconnecting the 12-volt battery or changing a fuse while tailgate is open**

To enable the smart power tailgate to operate properly, initialize the system by completely closing the tailgate manually. If the battery is reconnected or a fuse is changed while the tailgate is closed, initializing the system is not necessary.

**⚠ WARNING**

**Tailgate closure**

- **In the event that the tailgate is left slightly open, the tailgate will automatically close it to the fully closed position. It takes several seconds before the tailgate closure begins to operate. Ensure that the fingers or any body parts/clothes do not get stuck, as this may cause bone fractures or other serious injuries.**



71UM03030

- **Use caution when using the tailgate closure operation as it may still operates when the smart power tailgate system is canceled.**

**⚠ WARNING**

**Smart power tailgate**

**Observe the following precautions when operating the smart power tailgate. Failure to do so may cause death or serious injury.**

- **Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.**
- **If anyone is in the vicinity, ensure they are safe and let them know that the tailgate is about to open or close.**
- **If the smart power tailgate system is turned off while the tailgate is operating automatically, the automatic operation is stopped. The tailgate then has to be operated manually. Take extra care when on an incline, as the tailgate may open or close unexpectedly.**
- **The smart power tailgate is designed not to open or close automatically while driving, but it may open or close automatically if the operating conditions are met. Make sure the vehicle is completely stopped before operating it. Opening or closing the smart power tailgate while the vehicle is moving may lead to an unexpected accident.**

(Continued)

**⚠ WARNING**

(Continued)

- **If the operating conditions of the smart power tailgate are no longer met, a buzzer may sound and the tailgate may stop opening or closing.The tailgate then has to be operated manually. Take extra care when on an incline, as the tailgate may open or close abruptly.**
- **On an incline, the tailgate may suddenly shut after it opens. Make sure the tailgate is fully open and secure.**
- **In the following situations, the smart power tailgate may detect an abnormality and automatic operation may be stopped. In this case, the tailgate has to be operated manually.**
  - **– When the tailgate comes into contact with an obstacle**
  - **– When the 12-volt battery voltage suddenly drops, such as when the power switch is turned to ON or the hybrid system is started during automatic operation.**

(Continued)

**⚠ WARNING**

(Continued)

- **If a bicycle carrier or similar heavy object is attached to the tailgate, the smart power tailgate may not operate, causing itself to malfunction, or the tailgate may suddenly shut again after being opened, causing someone's hands, head or neck getting caught and injured. When installing an accessory part to the tailgate, using a genuine Maruti Suzuki part is recommended.**

**Jam protection function**

**Observe the following precautions. Failure to do so may cause death or serious injury.**

- **Never use any part of your body to intentionally activate the jam protection function.**
- **The jam protection function may not work if something gets caught just before the tailgate fully closes. Be careful to keep fingers or anything getting caught.**
- **The jam protection function may not work depending on the shape of the object that is caught.**

**⚠ WARNING**

**Gesture control**

**Observe the following precautions when operating the gesture control. Failure to do so may cause death or serious injury.**

- **Check the safety of the surrounding area to make sure there are no obstacles that could cause any of your belongings to get caught.**
- **When putting your foot near the lower center part of the rear bumper and moving it from the rear bumper, be careful not to touch the exhaust pipes until they have cooled down sufficiently, as touching hot exhaust pipes can cause burns.**
- **Do not leave the remote controller within the effective range (detection area) of the luggage compartment.**

***NOTICE***

**Tailgate spindles**

**The tailgate is equipped with spindles that hold the tailgate in place. Observe the following precautions. Failure to do so may cause damage to the tailgate spindle, resulting in malfunction.**



71UM03031

- **Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the spindle rod.**
- **Do not attach any accessories other than genuine Maruti Suzuki parts to the tailgate.**
- **Do not place your hand on the spindle or apply lateral forces to it.**

***NOTICE***

**To prevent tailgate closer malfunction**

**Do not apply excessive force to the tailgate while the tailgate closer is operating. Applying excessive force may cause the tailgate closer to malfunction.**

**To prevent damage to the smart power tailgate**

- **Make sure that there is no ice between the tailgate and frame that would prevent movement of the tailgate. Operating the smart power tailgate when excessive load is present on the tailgate may cause a malfunction.**
- **Do not apply excessive force to the tailgate while the smart power tailgate is operating.**
- **Take care not to damage the sensors (installed on the right and left edges of the smart power tailgate) with a knife or other sharp object. If the sensor is disconnected, the smart power tailgate will not close automatically.**

***NOTICE***

**Gesture control precautions**

**The gesture control is located behind lower center part of the rear bumper. Observe the following to ensure that the gesture control function operates properly:**

- **Keep the lower center part of the rear bumper clean at all times. If the lower center part of the rear bumper is dirty or covered with snow, the gesture control may not operate. In this situation, clean off the dirt or snow, move the vehicle from the current position and then check if the gesture control operates. If it does not operate, have the vehicle inspected by a Maruti Suzuki authorized workshop.**
- **Do not apply coatings that have a rain clearing (hydrophilic) effect, or other coatings, to the lower center part of the rear bumper.**
- **Do not park the vehicle near objects that may move and contact the lower center part of the rear bumper, such as grass or plants. If the vehicle has been parked for a while near objects that may move and contact the lower center part of the rear bumper, such as grass or plants, the gesture control may not operate. In this situation,**

(Continued)

***NOTICE***

(Continued)

**move the vehicle from the current position and then check if the gesture control operates. If it does not operate, have the vehicle inspected by a Maruti Suzuki authorized workshop.**

- **Do not subject the gesture control or its surrounding area to a strong impact. If the gesture control or its surrounding area has been subjected to a strong impact, the gesture control may not operate properly. If the gesture control does not operate in the following situations, have the vehicle inspected by a Maruti Suzuki authorized workshop.**
  - **The gesture control or its surrounding area has been subjected to a strong impact.**
  - **The lower center part of the rear bumper is scratched or damaged.**
- **Do not disassemble the rear bumper.**
- **Do not attach stickers to the rear bumper.**
- **Do not paint the rear bumper.**
- **If a bicycle carrier or similar heavy object is attached to the smart power tailgate, turn the gesture control operation setting off. Please contact a Maruti Suzuki**

(Continued)


***NOTICE***

(Continued)

**authorized workshop to turn off gesture control.**

- **When tailgate is opened using remote controller or gesture control in security system arm mode, then tailgate will lock automatically & security system will be rearmed once it is closed.**
- **When the smart power tailgate is closed and relocked, turn signal lights and siren sound will indicate that all of the doors have been locked. [Same as lock confirmation]**
- **Before leaving the vehicle, ensure confirmation all the doors are locked.**
- **If any other door is opened, while the tailgate is in open condition, then security system shall be disarmed. In this case, please lock the vehicle once all doors are closed before leaving.**
- **If remote controller is left inside after tailgate is closed, then all doors shall be automatically unlocked and security system shall be disarmed. This shall be followed by turn signal lights and siren sound. [Same as unlock confirmation]**


### Canceling the smart power tailgate system (Vehicles with smart power tailgate)

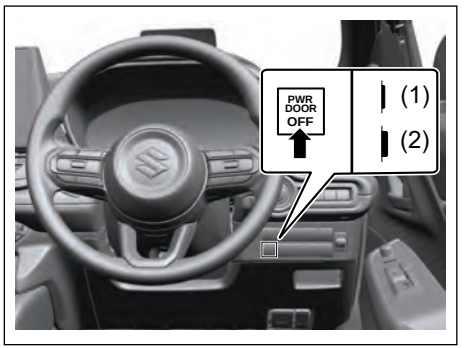


71UM03033

Turn the “PWR DOOR OFF” switch off to disable the smart power tailgate system.
(1) Off
(2) On

### Adjusting the open position of the tailgate (vehicles with smart power tailgate)

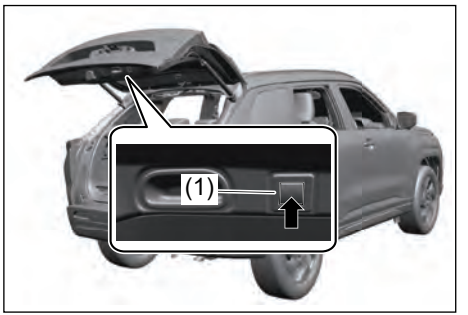



71UM03032

The open position of the smart power tailgate can be adjusted.
1) Stop the tailgate in the desirable position.
2) Press and hold the switch (1) on the lower part of the tailgate for approximately 2 seconds.

When the settings are completed, the buzzer sounds 4 times.

When opening the tailgate the next time, the tailgate will stop at that position.

### Canceling the adjusted open position of the tailgate

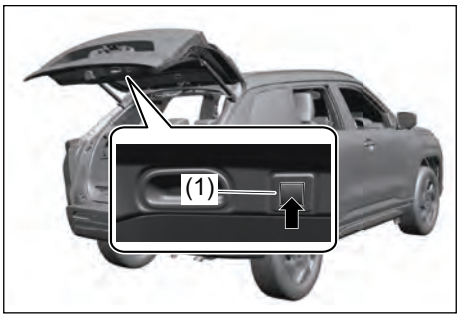



71UM03032

Press and hold the switch (1) on the lower part of the tailgate for approximately 7 seconds.

After the buzzer sounds 4 times, it sounds thrice more. When the smart power tailgate does the opening operation the next time, the door will open to the initial settings position.

## Keyless Push Start System Remote Controller

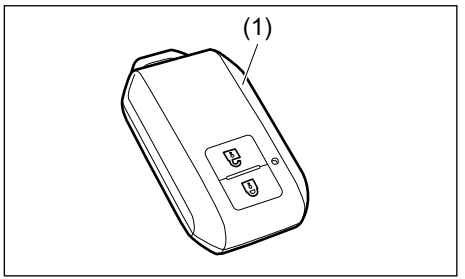


55T030010

Your vehicle is equipped with a keyless push start system remote controller (1). The remote controller has a keyless entry system and a keyless push start system. For details, refer to the following explanations.

**⚠ WARNING**


**Radio waves from the keyless push start system antenna(s) may interfere with operation of electrical medical equipment such as pacemakers. Failure to take the precautions listed below can increase the risk of severe injury or death due to radio wave interference.**

- **Anyone who uses electrical medical equipment such as a pacemaker should consult the medical equipment supplier or their medical advisor about whether radio waves from the antenna(s) can interfere with the medical equipment.**
- **If radio wave interference is a concern, have the function of the antenna(s) disabled by a Maruti Suzuki authorized workshop.**

### Keyless Push Start System Remote Controller

The remote controller enables the following operations:

- You can lock or unlock the doors by operating LOCK/UNLOCK buttons on the remote controller. Refer to the explanation in this section.
- You can lock or unlock the doors by pushing the request switch. For details, refer to the explanation in this section.
- You can start the engine or hybrid system without using an ignition key. For details, refer to “Engine switch (vehicle with keyless push start system)” in “OPERATING YOUR VEHICLE” section.

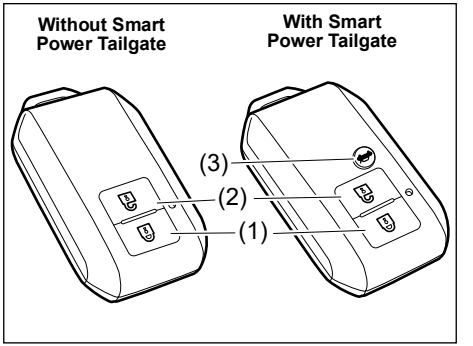


71UM03034

(1) LOCK button
(2) UNLOCK button
(3) Smart power tailgate button

There are two ways to lock or unlock all doors (including the tailgate) simultaneously by operating the remote controller near the vehicle.

**Central door locking system**
- To lock all doors, push LOCK button (1) once.
- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

*NOTE:*
*You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Setting mode of information display (Type A)" or "Setting mode of information display (Type B)" in "SPECIFICATIONS" section.*

The turn signal lights will flash once and the siren will sound once when the doors are locked.


When the doors are unlocked:
- The turn signal lights will flash twice and the exterior buzzer will sound twice.
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you press the engine switch or the power switch during this time, the light will start to fade out immediately.

Check that the doors are locked after you operate LOCK button (1).

*NOTE:*
*If no door is opened within about 30 seconds after UNLOCK button (2) is operated, the doors will automatically lock again.*

*NOTE:*
- *The maximum operating distance of the remote controller is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.*
- *The door locks cannot be operated with the remote controller if the ignition mode is other than the "LOCK" (OFF).*
- *When any door is open, if you push LOCK button on the remote controller, the exterior buzzer will sound and doors cannot be locked.*
- *If you lose one of the remote controllers, ask your Maruti Suzuki authorized workshop as soon as possible for a replacement. Have your Maruti Suzuki authorized workshop program the new transmitter code in your vehicle's memory so that the old code is erased.*

**Keyless unlocking/locking using the request switches**

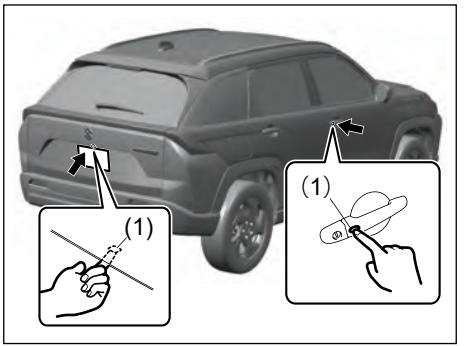


71UM03009

When the remote controller is within the operating range described in this section, you can lock or unlock all the doors (including tailgate) by pushing the request switch (1) on the driver's door handle or front passenger's door handle or tailgate.

When all doors are unlocked:
- To lock all doors, push one of the request switches once.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

To unlock a door or all doors:
- Push one of the request switches once to unlock only one door.


• Push one of the request switches twice to unlock all doors.

*NOTE:*
*You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Setting mode of information display (Type A)" or "Setting mode of information display (Type B)" in "SPECIFICATIONS" section.*

When the doors are unlocked:
• The turn signal lights will flash twice and the exterior buzzer will sound twice.
• If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you press the engine switch or the power switch during this time, the light will start to fade out immediately.

Check that the doors are locked after you operate the request switch to lock the doors.

*NOTE:*
• *The door locks cannot be operated by the request switch under the following conditions:*
  – *If any door is open or is not completely closed.*
  – *If the ignition mode is in any other mode than LOCK (OFF).*
• *If no doors are opened within about 30 seconds after unlocking the doors by pushing the request switch, the doors will be locked again automatically.*

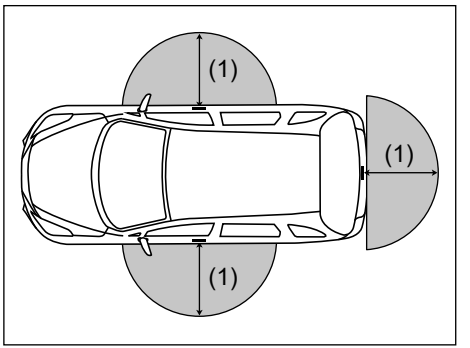

71UM03025

(1) 80 cm (2.6 ft)

When the remote controller is within approximately 80 cm (2.6 ft) from a front door handle or the tailgate switch, you can lock or unlock the doors by pushing the request switch.


*NOTE:*
• *If the remote controller is outside the request switch operating range described above, you will not be able to operate the request switch.*
• *If the battery of the remote controller runs down or there are strong radio waves or noise, the request switch operating range may be reduced or the remote controller may be inoperative.*
• *If the remote controller is too close to the door glass, the request switches may not operate.*
• *If a spare remote controller is in the vehicle, the request switches may not operate normally.*
• *The remote controller will only operate a request switch if it is within the switch's operating range. For example, if the remote controller is within the operating range of the driver's door request switch but not the front passenger's door request switch or the tailgate request switch, the driver's door switch can be operated but the front passenger's door switch or tailgate switch cannot be operated.*
• *If the remote controller is located in the following places in the vehicle, the remote controller may be detected and the request switch may be activated depending on the radio wave condition, there is a risk of that the remote controller may be trapped inside the vehicle.*
  – *On the instrument panel*
  – *Floor*
  – *Luggage compartment*
  – *Deep in storage compartments such as the glove box or a door pocket, etc.*
  *–>Refer "Storage Area" in "OTHER CONTROLS AND EQUIPMENT" section.*

**NOTICE**

**The remote controller is a sensitive electronic instrument. To avoid damaging the remote controller:**
- **Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.**
- **Keep the remote controller away from magnetic objects such as a television.**


*NOTE:*
*The keyless push start system may not function correctly in certain environments or under certain operating conditions such as the following:*
- *When there are strong signals coming from a television, power station or a cellular phone.*
- *When the remote controller is in contact with or covered by a metal object.*
- *When a radio wave type remote keyless entry is used nearby.*
- *When the remote controller is placed near an electronic device such as personal computer.*

*Some additional precautions you should take and information you should be aware of are:*
- *Check that the key is stowed in the remote controller. If the remote controller becomes unusable, you will not be able to lock or unlock the doors.*
- *Check that the driver always carries the remote controller.*
- *If you lose one of the remote controllers, ask your Maruti Suzuki authorized workshop as soon as possible for a replacement. Have your Maruti Suzuki authorized workshop program the new transmitter code in your vehicle's memory so that the old code is erased.*
- *You can use up to four remote controllers and the keys for your vehicle. Ask your Maruti Suzuki authorized workshop for details.*
- *The battery life of the remote controller is about two years, but it can vary depending on usage conditions.*

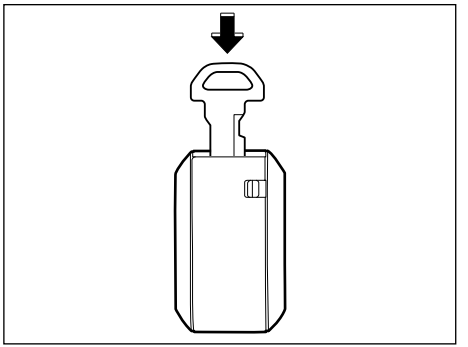

55T030030

To stow the key into the remote controller, push the key in the remote controller until you hear a click.

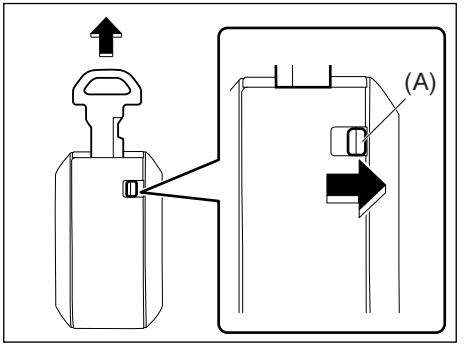


55T030040

To remove the key from the remote controller, slide the lock knob (A) in arrow direction and pull the key out from the remote controller.


**Request switch warning buzzer**
The exterior buzzer beeps for about 2 seconds in the following conditions to warn you that the request switch is not working:
- The request switch is pressed after all doors are closed with the ignition mode changed to ACC or ON position by pressing the engine switch or the power switch when the remote controller is outside the vehicle.
- The request switch is pressed in any of the following conditions after changing the ignition mode to LOCK (OFF) by pressing the engine switch or the power switch.

– The remote controller is left inside the vehicle.
– Any door (including the tailgate) is open.

Press the request switch again after doing the following:
With the ignition mode changed to LOCK (OFF) by pressing the engine switch or the power switch, bring out the remote controller if it is inside the vehicle and check that all doors are completely closed.


**Reminder function**

**Type-A**

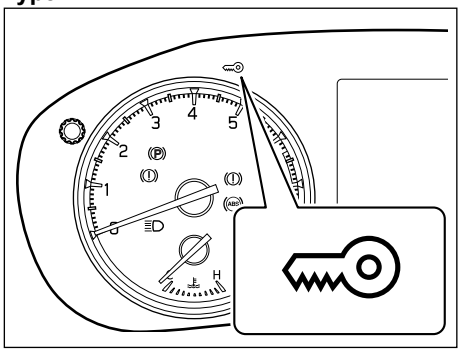

71UM03023

**Type-B**

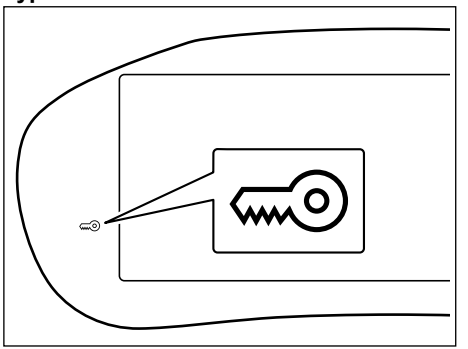

71UM03024

If the remote controller is not in the vehicle under the following conditions, the buzzer sounds intermittently for about 2 seconds and the immobilizer/keyless push start system warning light on the instrument cluster blinks:
When one or more doors are opened and all of the doors are later closed with the ignition in any other mode than LOCK (OFF).
The indicator light will turn off within several seconds after the remote controller is returned to an area of the vehicle other than the rear luggage area.

If the remote controller is left in the vehicle and you lock the driver's door or front passenger's door as described below, the door will be automatically unlocked.

- If you open the driver's door and lock the door by turning the lock knob forward or pushing the power door locking switch, the driver's door will be automatically unlocked.
- If you open the front passenger's door and lock the door by turning the lock knob forward or pushing the power door locking switch, the front passenger's door will be automatically unlocked.


*NOTE:*
- *The reminder will not operate when the remote controller is on the instrument panel, in the glove box, in a storage compartment, in the sun visor or on the floor, etc.*
- *Check that the driver always carries the remote controller.*
- *Do not leave the remote controller in the vehicle when leaving the vehicle.*

**Battery replacement**

If the remote controller becomes unreliable, replace the battery as follows:


*NOTE:*
*You may damage the remote controller when replacing its battery. Asking a Maruti Suzuki authorized workshop is recommended.*

To replace the battery of the remote controller:

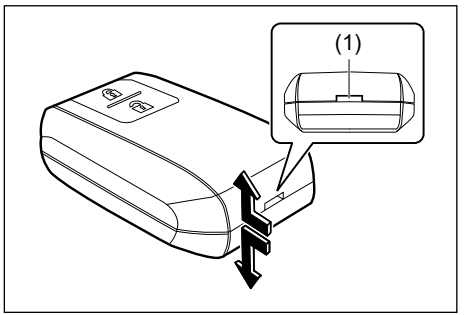


71UM03036

1) Pull the key out from the remote controller.
2) Separate the remote controller up and down while applying force to the slot (1) on the side of the remote controller.

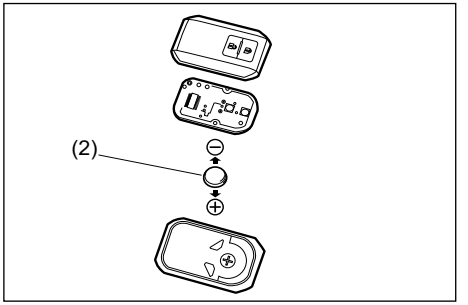


71UM03037

(2) Lithium disc type battery: CR2032

3) Replace the battery (2) so its + terminal faces the bottom of the case as shown in the illustration.
4) Close the remote controller firmly.
5) Check that the door locks can be operated with the remote controller.
6) Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.


**⚠ WARNING**

**Swallowing a lithium battery may cause serious internal injury or death in the worst case. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.**

***NOTICE***

- **The remote controller is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.**
- **When you replace the battery by yourself, touch a metallic part and remove static electricity to prevent damaging the remote controller.**

*NOTE:*
- *Used batteries must be disposed of properly according to applicable rules or regulations and must not be disposed of with ordinary household trash.*
- *You may damage the remote controller when replacing its battery. Ask your Maruti Suzuki authorized workshop to inspect the system.*
- *When you purchase the battery by yourself at Maruti Suzuki aut o ized workshop check the year of manufacture for the battery.*

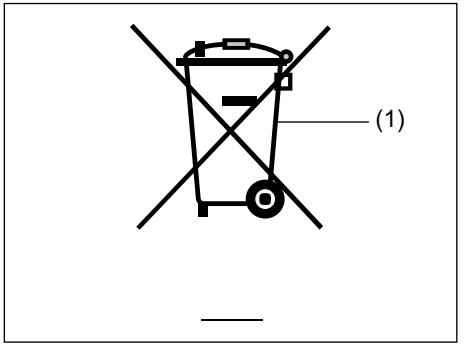


80JM133

(1) Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that a used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate battery disposal. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling of the used battery, consult Maruti Suzuki authorized workshop.

## Security System

The security system is armed after you close and lock all doors (including engine hood and tailgate) by using the keyless push start system remote controller or request switch.
Once the system is armed, any attempt to open a door by using any other means (*) than the keyless push start system remote controller, request switch or open the engine hood, will cause the alarm to be triggered.
* These means include the following:
  – The key
  – The lock knob on a door
  – The central door locking switch
  – The tailgate unlatch switch

Also, in case that you have set the shock sensor (if equipped) to enabled state and set sensitivity of the pre-warning function and full blast warning function to a level other than 0, the warning will be triggered in case of any attempt to tamper with the vehicle. The shock sensor (if equipped) can be selected enabled or disabled state, and sensitivity of each warning can be adjusted as desired. To set the shock sensor (if equipped), ask your Maruti Suzuki authorized workshop or use the setting mode of the information display.


*NOTE:*
- *The default setting of the shock sensor (if equipped) is in the disabled state. Set to the enabled state and adjust sensitivity of each warning according to your preference. For details on how to use the information display, refer to "Setting mode of information display (Type A)" or "Setting mode of information display (Type B)" in "SPECIFICATIONS" section.*
- *Your dealer may have already set the shock sensor (if equipped) of the vehicle to the enabled state before you purchase it. Consult your dealer for further information.*

*NOTE:*
- *The security system generates alarms when any of the predetermined conditions is met. However, the system does not have any function of blocking unauthorized entry into the vehicle.*
- *Always use the keyless push start system remote controller or request switch to unlock the doors when the security system has been armed.Using a key instead will trigger the alarm.*
- *If a person who does not know the security system is going to drive the vehicle, we recommend you explain the system and its operation to the person. Mistakenly triggering the alarm may cause a nuisance to others.*

- *Even if the security system is armed, you should still be careful to guard against theft. Do not leave money or valuable things in the vehicle.*

### How to Arm the Security System

Lock all doors (including engine hood and tailgate) using the keyless push start system remote controller or request switch.
When the system is armed, the indicator continues to blink at intervals of approximately 2 seconds.

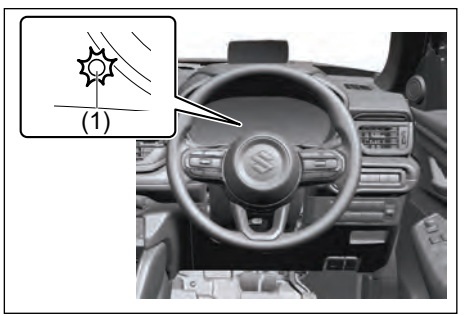


71UM03010

*NOTE:*

- *To prevent the alarm from being accidentally triggered, avoid arming it while anyone remains inside the vehicle. The alarm will be triggered if any person inside opens the door, tailgate, engine hood, or the warning may be triggered if anyone swings the vehicle (if the shock sensor is in the enabled state).*
- *The security system is not armed when all doors are locked using the key from outside, using the door lock knobs or the central door locking switch from inside.*
- *If any door is not operated within approximately 30 seconds after the doors have been unlocked using the keyless push start system remote controller or request switch, the doors are automatically locked again. When the doors are locked, the security system will be armed.*
- *If the security system indicator (1) blinks when the ignition mode is "ON", there may be something wrong with the security system.Ask your Maruti Suzuki authorized workshop to inspect the system.*

### How to Disarm the Security System

Simply unlock the doors using the keyless push start system remote controller or request switch. The security system indicator will go out, indicating that the security system is disarmed.

### How to Stop the Alarm

Should the alarm be triggered accidentally, the alarm will stop by the following operations.

- Press the engine switch or the power switch to change the ignition mode to ON in case of emergency.
- Unlock the doors using the keyless push start system remote controller or request switch.

*NOTE:*

- *Even after the alarm has stopped, if you lock the doors using the keyless push start system remote controller or request switch, the security system will be rearmed.*
- *If you disconnect the battery while the security system is in the armed condition or the alarm is actually in operation, the alarm will be re-triggered when the battery is reconnected.*
- *Even after the alarm has stopped at the end of the predetermined operation time, it will be triggered again if any of the doors, tailgate or engine hood is opened, without disarming the security system.*

### Checking Whether the Alarm has Been Triggered During Parking

If the alarm was triggered and you then the ignition mode is ON the security system indicator will blink rapidly for about 8 seconds and a buzzer will beep 4 times during this period. If this happens, check whether the vehicle has been broken into while you were away from it.

### Security System Indication

- If any of the doors or tailgate are opened without unlocking by the keyless push start system remote controller or request switch, all turn signal lights start to blink and the interior buzzer beeps intermittently. After 5 seconds, the siren will sound for about 27.5 seconds. The security system indicator continues to blink during this time.
- If the engine hood is opened, all turn signal lights blink, and the siren sounds for about 27.5 seconds. The security system indicator continues to blink during this time.

(If the shock sensor is in the enabled state)

- If the vehicle feels a shock higher than the pre-warning sensitivity, the siren sounds for about 2 seconds (pre-warning). If the vehicle feel a shock higher than the full blast warning sensitivity, the siren sounds for about 5 seconds (full blast warning). The security system indicator continues to blink during this time.


*NOTE:*
*If you set the full blast warning sensitivity higher than the pre-warning sensitivity in the setting mode of the information display, or the vehicle feels such shock as to be able to trigger the full blast warning, the full blast warning will be triggered preferentially. In this case, the pre-warning will not be triggered.*

# Windows

## Electric Window Controls

The electric windows can only be operated when the ignition mode is ON.

### Driver's side

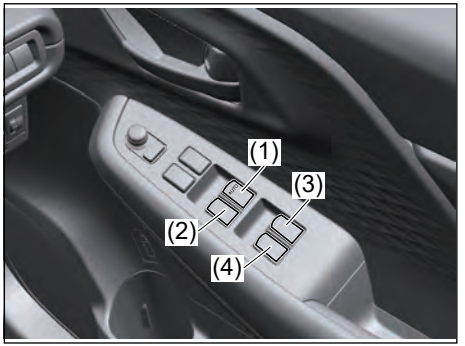


71UM03011


The driver's door has a switch (1) to operate the driver's window, and a switch (2) to operate the front passenger's window or there are switches (3), (4), to operate the rear right and left passenger windows, respectively.

### Passenger's door / rear door




71UM03012

The passenger's door has a switch (5) to operate the passenger's window.

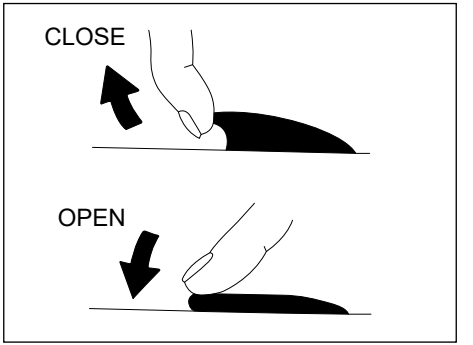


81A009

To open a window, push the top part of the switch. To close the window, lift up the top part of the switch.

The driver's window has AUTO-DOWN and AUTO-UP features for greater convenience (at toll booths or drive-through restaurants, for example). These features allow the driver to open or close the window without holding the window switch in DOWN or UP position. Press down or lift up the driver's window switch completely and release it. To stop the window before it reaches the FULL-DOWN or FULL-UP position, pull up or push down the switch briefly.

**Lock switch**



71UM03013

The driver's door also has a lock switch for the passenger's window(s). When you push in the lock switch, the passenger's window(s) cannot be raised or lowered by operating any of the switches (2), (3), (4) or (5). To restore normal operation, release the lock switch by pushing it again.

**⚠ WARNING**

- **When opening or closing a window, a part of body such as hands, legs and neck may be caught by the window and an accident may occur. When you operate a window, observe the following precautions:**
  - **A driver and the other passengers should be careful when opening or closing a window.**
  - **Do not allow a child to operate the window switches.**
  - **You should always lock the passenger's window operation when there are children in the vehicle. Children can be seriously injured if they get part of their body caught by the window during operation. Refer to "Lock switch" in this section for details.**
  - **When you leave your vehicle, make sure to press the engine switch or the power switch to change the ignition mode to OFF. Then, carry your key with you and take a child or children out of the vehicle.**

(Continued)

**⚠ WARNING**

(Continued)

- **When you open or close the front passenger's window or the rear windows on the driver's side, check that the other passengers and children do not take their hands and faces outside the vehicle, before the window operation. Also, make sure to inform them that you will perform the window operation.**

- **When you operate the electric window controls from the outside of the window, your hands or neck may be caught by the window and an accident may occur. Do not operate the electric window controls from the outside of the window.**

*NOTE:*
*If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.*

### Pinching Prevention Function

The driver's window is equipped with a pinching prevention function. This function detects a foreign object that is caught in the window as it is being closed by AUTO-UP feature, which allows you to close the window without holding the window switch in UP position, and stops the window from closing to prevent damage.

**⚠ WARNING**

**The function may not detect the object depending on shape, size, hardness and position of the object caught by the closing window. This may cause severe injury.**
**Be very careful when opening or closing the windows.**

**⚠ CAUTION**

- **The pinching prevention function does not operate while you are holding the window switch in UP position.**
- **The pinching prevention function may not detect an object caught in the window just before the window is fully closed.**

*NOTE:*
*Even if you cannot close the window by the AUTO-UP feature because there may be something wrong with the pinching prevention function, you can close the window by holding the window switch in UP position.*
*If you drive in extreme off-road condition, the pinching prevention function may operate accidentally because the window reacts to vehicle jolting.*

**Pinching prevention function initialization**

When you disconnect and reconnect the lead-acid battery or replace the fuse, the function will be deactivated. In this condition, the AUTO-DOWN feature will be deactivated, while the AUTO-UP feature may remain activated. The pinching prevention function needs to be initialized.

To initialize the pinching prevention function, use the following procedure:

1) Press the engine switch or the power switch to change the ignition mode to ON.
2) Open the driver's window fully by holding the window switch in DOWN position.
3) Close the driver's window by holding the switch in UP position, and keep holding the switch for 2 seconds after the window is fully closed.
4) Check the driver's window to see if the AUTO-DOWN/UP feature works.


**⚠ WARNING**

**As the pinching prevention function will not operate until its initialization is completed, an accident may occur. Make sure to perform the pinching prevention function initialization.**

If the AUTO-DOWN/UP feature will not work after initialization, there might be something wrong with the pinching prevention function. Have your vehicle inspected by a Maruti Suzuki authorized workshop.


## Lighting Control Lever

### Automatic light operation (if equipped)

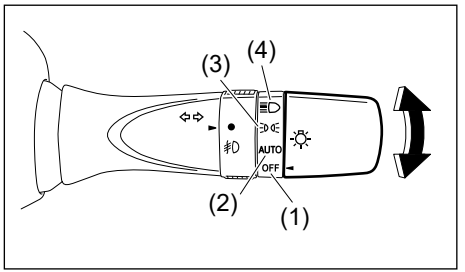


70TH03016

- The image in the above figure is a typical example; it depends on the vehicle type.

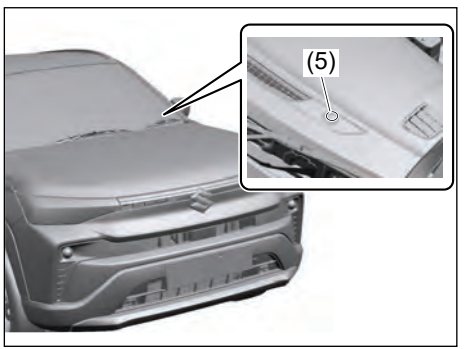


71UM03014

Your vehicle's lighting system is controlled by the lighting switch and the auto-on headlight system (if equipped: when the lighting switch is in "AUTO" position).
The lighting switch and the auto-on headlight system (if equipped) work together to operate your lights as shown in the following chart:

**ON: Lights ON**
**LIGHT: When it is light around the light sensor (5).**
**DARK: When it is dark around the light sensor (5).**

| Lighting switch position | Main lights to be operated | Ignition mode LOCK (OFF) or ACC | | Ignition mode ON | |
|---|---|---|---|---|---|
| | | LIGHT | DARK | LIGHT | DARK |
| (1) OFF | Position lights, Tail lights, License plate light | – | – | – | – |
| | Headlights | – | – | – | – |
| (2) AUTO (if equipped) | Position lights, Tail lights, License plate light | – | – | – | ON |
| | Headlights | – | – | – | ON |
| (3) ≣D | Position lights, Tail lights, License plate light | ON | ON | ON | ON |
| | Headlights | – | – | – | – |
| (4) ≣D | Position lights, Tail lights, License plate light | ON | ON | ON | ON |
| | Headlights | ON | ON | ON | ON |

To turn the lights on or off, twist the knob on the end of the lever. There are three or four positions:

**OFF (1)**
All lights are off.

**AUTO (2) (If equipped)**
This function works when the engine switch or the power switch is pressed to change the ignition mode to ON. The position lights, tail lights, license plate light and headlights are turned on and off automatically according to the amount of outside light detected by a sensor. They go out automatically when you change the ignition mode to ACC or LOCK (OFF) by pressing the engine switch or the power switch.

The light sensor (5) for sensing the amount of outside light is installed on the passenger's seat side of instrument panel.

When the following conditions are met, you can use the high beam assist (if equipped).
- The engine switch is pressed to change the ignition mode to ON
- The headlights are turned on when it becomes dark outside the vehicle
- The lighting switch is in "AUTO" position

For details, refer to "High beam assist (if equipped)"


**⚠ CAUTION**

**If the light sensor area of the windshield is covered with mud, ice, or other similar substances, the headlights and position lights may be turned on even when it is still light outside.**

*NOTE:*
- *Avoid covering the light sensor area of the windshield with a sticker. The sticker may impair the performance of the sensor and make the system unable to control operation of the lights correctly.*
- *If you changed the ignition mode to ON by pressing the engine switch or the power switch and "AUTO" position remains selected, the headlights and position lights come on automatically as it gets dark outside, even with the engine not running and the hybrid system not activating. Leaving the lights lit for a long time may lead to a completely discharged battery.*

**(3)**
Front position lights, tail lights, license plate light and instrument lights are on, but headlights are off.

**(4)**
Front position lights, tail lights, license plate light, instrument lights and headlights are on.

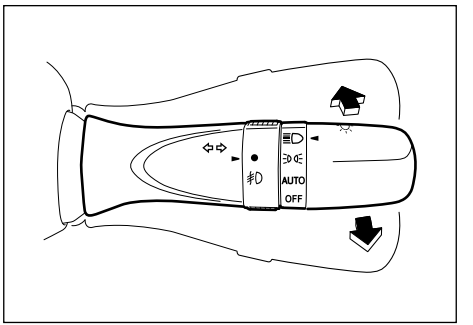


70TH03018

With the headlights on, push the lever forward to switch to the high beams (main beams) and pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument cluster will come on. To momentarily activate the high beams (main beams) as a passing signal, pull the lever slightly toward you and release it when you have completed the signal.

*NOTE:*
*The high beam assist will be activated when the lighting switch is in "AUTO" position. Refer to the "*High beam assist (if equipped)*"*

**Auto-on headlight system (if equipped)**

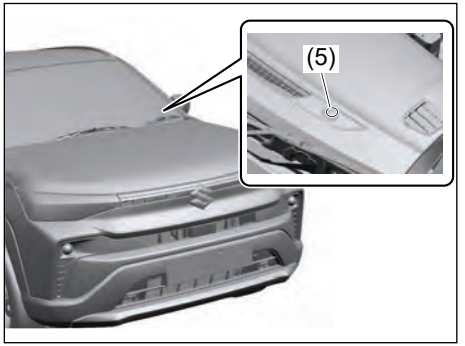


71UM03014

The auto-on headlight system automatically turns on all lights that are operated by the lighting switch, when the following three conditions are all met.

Conditions for auto-on headlight system operation:
1) It is dark around the light sensor (5).
2) The lighting switch is in “AUTO” position.
3) You press the engine switch or the power switch to change the ignition mode to ON.

This system is activated by a signal from the light sensor (5) on the passenger side of instrument panel. Do not cover the sensor (5). Otherwise, the system will not work correctly.

**⚠ WARNING**

**It takes about 5 seconds for the light sensor to react to a change in lighting conditions. To help avoid an accident due to reduced visibility, turn on your headlights before driving into a tunnel, parking structure, etc.**

*NOTE:*
*The light sensor reacts even to infrared rays, so it may operate incorrectly when there are strong infrared rays.*

## Light Reminder Buzzer

The interior buzzer continuously beeps if you open the driver’s door without turning off the headlights and position lights. This function is triggered under the following condition:
The headlights and/or position lights are on even after engine switch or the power switch is pressed to change the ignition mode to LOCK (OFF).

The buzzer stops sounding when you turn off the headlights and position lights.

*NOTE:*
*A message is indicated on the information display in the instrument cluster while the buzzer is sounding.*

## Daytime Running Light (D.R.L.) System (if equipped)


When the engine or the hybrid system is started, the daytime running lights are turned on by this system.

Conditions for D.R.L. system operation
1) The engine is running or the hybrid system is activating.
2) Headlights and front fog light (if equipped) are off.

*NOTE:*
- *Brightness of the daytime running lights is different from the brightness of the position lights, but it is not a malfunction.*
- *When using the turn signal light, the Daytime Running Light on the side where the turn signal light is blinking goes off.*

**How to switch the state of the daytime running light (D.R.L.)**
You can switch the daytime running light (D.R.L.) from the enabled state to the disabled state, and vice versa, using the following method.


1) Press the engine switch or power switch to change the ignition mode to ON.

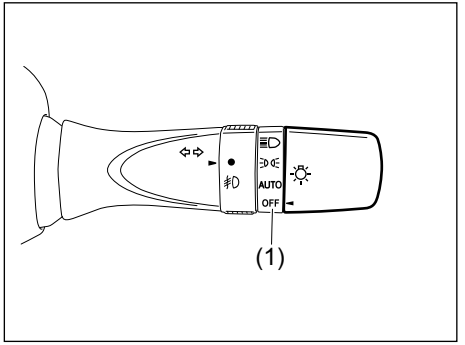


70TH03023


2) Turn the knob on the lighting control lever to “OFF” position (1).

*NOTE:*
*All operations included in the following step 3) and 4) must be completed within 15 seconds of step 1).*

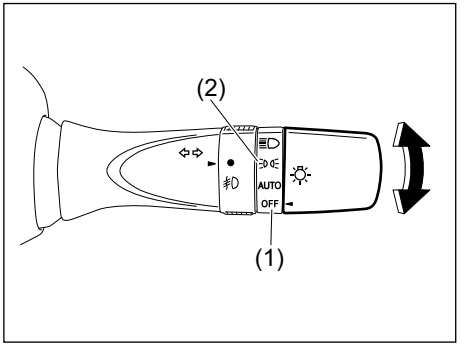


70TH03022

3) Turn the knob on the lighting control lever to the position (2) and then to “OFF” position (1). Repeat this operation 4 times with the control lever finally set to “OFF” position.

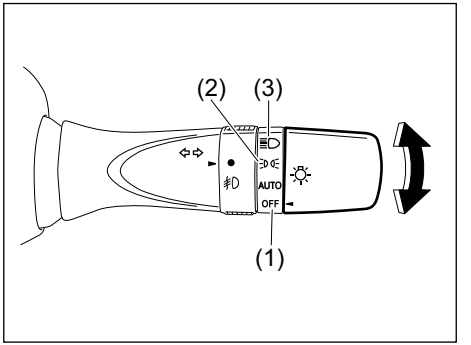


70TH03017

4) Turn the knob on the lighting control lever to the position (3) and then to “OFF” position (1). Repeat this operation 4 times with the control lever finally set to “OFF” position.

Every time you perform the series of the above steps, the state of the daytime running light (D.R.L.) changes from the currently selected one to the other. You can check whether the system is enabled or disabled by the number of interior buzzer beeps at the end of the procedure as follows.

| System state | Number of beeps |
|---|---|
| Disabled | Once |
| Enabled | 2 times |

*NOTE:*
*If you fail to complete the all operations included in Step 1) and 4) within 15 seconds, perform the procedure again from the beginning.*

## Guide Me Light (if equipped)

Guide me light has two functions of "To home" and "To car" for improving your visibility in the dark.

**"To home" function**

Even after you leave the car, the ground will be illuminated for a short while with this function. You can turn on the front position lights and the headlights in the low beam setting for about 10 seconds after the engine switch or the power switch is pressed to change the ignition mode to LOCK (OFF).

To set the function:

1) Turn the lighting switch to "AUTO" position.
2) Press the engine switch or the power switch to change the ignition mode to LOCK (OFF).
3) Pull the lighting control lever toward you once and open the driver's side door within 60 seconds. Or pull the lighting control lever toward you once while the driver's side door is open.

To cancel the function:
Perform any of the following operations.

- Pull the lighting control lever toward you once.
- Change the ignition mode to ACC or ON by pressing the engine switch or the power switch.
- Turn the lighting switch to any other position than "AUTO" position.

*NOTE:*

- *When the "To home" is functioning, and the front fog light (if equipped) and the headlights (high beam) are not turned on.*
- *Lighting time of the "To home" function can be changed on the information display. Refer to "Information display" in "INSTRUMENT CLUSTER" section.*


**"To car" function**

Before you get in the vehicle, the ground will be illuminated for a short while to easily lead the driver to the vehicle. If UNLOCK button of the keyless push start system remote controller is pressed while the lighting switch is positioned in "AUTO", the front position lights and the headlights in the low beam are turned on for 10 seconds.
This function will operate only when it is dark outside the vehicle.

To cancel the function:
Perform any of the following operations.
- Lock the doors by using the keyless push start system remote controller, the request switch or the key in the driver's door lock.
- Change the ignition mode to ACC or ON by pressing the engine switch or the power switch.
- Change the ignition mode to ACC or ON by pressing the engine switch or the power switch.

*NOTE:*
- *When the "To car" is functioning, the front fog lights (if equipped) and the headlights (high beam) are not turned on.*
- *Lighting time of the "To car" function can be changed on the information display. Refer to "Information display" in "INSTRUMENT CLUSTER" section.*

### Front Fog Light Switch (if equipped)

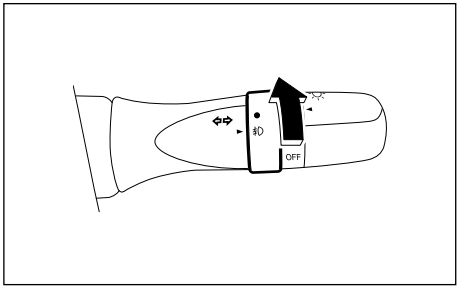



70TH03019

To turn the front fog light on, twist the knob as shown in the illustration with the position lights, tail lights and/or the headlights are on. When the front fog light is on, an indicator light on the instrument cluster will come on.

*NOTE:*
*In some countries the lighting operation may be different from the above description according to local regulations.*

## Headlight Leveling Switch

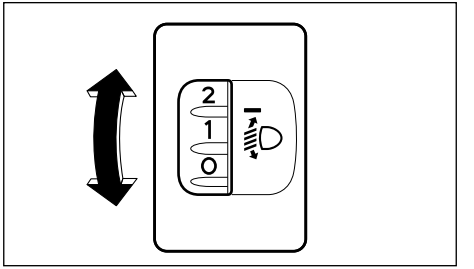


75RM008

Level the headlight beam according to the load condition of your vehicle by turning this switch. The chart shows the appropriate switch position for different vehicle load conditions.

**For Petrol Model**

| | Halogen headlight | LED headlight |
|---|---|---|
| Vehicle Load Condition | Switch Position | |
| Driver only | 0 | 0 |
| Driver + 1 passenger (in front seat) | 0 | 0 |
| Driver + 4 passengers, no cargo | 1.5 | 1 |
| Driver + 4 passengers, cargo added | 2.5 | 2.0 |
| Driver + full cargo | 3.5 | 3.5 |

**For CNG Model**


| | Halogen headlight | LED headlight |
|---|---|---|
| Vehicle Load Condition | Switch Position | |
| Driver only | 0 | 0 |
| Driver + 1 passenger (in front seat) | 0 | 0 |
| Driver + 4 passengers, no cargo | 1 | 1 |
| Driver + 4 passengers, cargo added | 1.5 | 1.5 |
| Driver + full cargo | 2.5 | 2.5 |

## Turn Signal Control Lever

You can use the turn signal control lever when the engine switch or the power switch is in ON mode.

### Turn Signal Operation

With the ignition mode ON, move the lever upward or downward to activate the right or left turn signals.

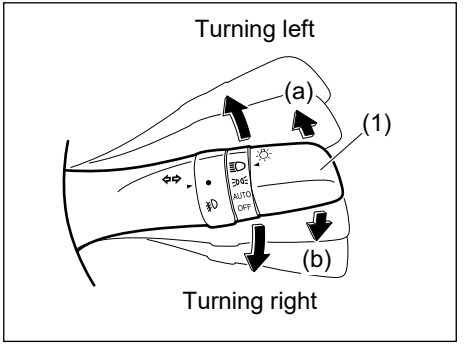



70TH03020

- Move the turn signal control lever (1) as follows:
  – Turning left: Move the lever upward.
  – Turning right: Move the lever downward.

- When you move the lever, the turn signal lights and the turn signal light indicators on the instrument cluster will flash simultaneously.
- When you move the lever to its original position, the turn signal lights and the turn signal light indicators on the instrument cluster will be turned off.
- When changing lanes, if you lightly press the turn signal control lever in the directions (a) or (b) in which you want to change lanes, the turn signal lights and turn signal light indicators on the instrument cluster will flash only while the turn signal control lever is pressed.
- The turn signal control lever in the above figure is a typical example; the actual equipment depends on the vehicle type.

*NOTE:*
*If the angle which you turn the steering wheel is small, the lever will not automatically returned to its original position. In this case, return the lever to its original position by your hand.*

**Lane change signal**

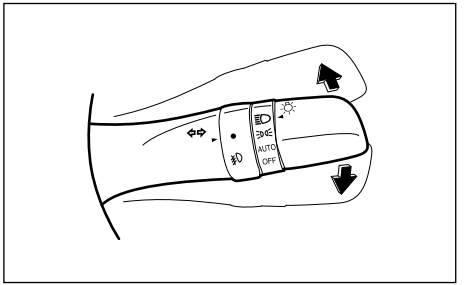



70TH03021

Move the lever partially upward or downward to turn right or left and hold the lever in the moved position.

- The turn signal and its indicator flash while the lever is held at the moved position.
- The turn signal and its indicator flash 3 times even if you returned the lever immediately after the activation.

*NOTE:*
- *The turn signal and its indicator can be set whether they flash 3 times after the turn signal lever is returned via the information display. Refer to "Setting mode of information display (Type A)" or "Setting mode of information display (Type B)" in "SPECIFICATIONS" section.*
- *You can customize the setting for the number of flashing times of the turn signal and its indicator (1 to 4 times). Please ask Maruti Suzuki authorized workshop for the customization.*

## Hazard Warning Switch

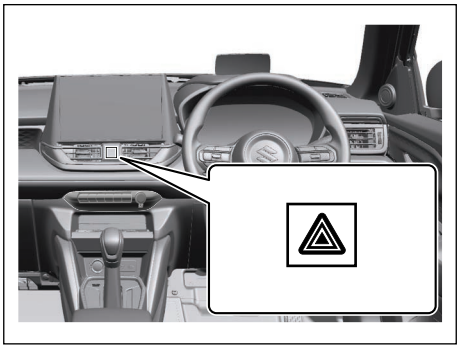

71UM03015

You can use the hazard warning switch to warn the other drivers of possible risk of traffic hazard when you park your vehicle in case of emergency.

- Push the hazard warning switch to activate the hazard warning lights. The turn signal lights and the turn signal indicators on the instrument cluster will flash simultaneously.
- Push the switch again to turn off the hazard warning switch.
- The instrument panel in the above figure is a typical example; the actual equipment depends on the vehicle type.

***NOTICE***

**If you use the hazard warning switch for many hours with the engine or the hybrid system stopped, the lead-acid battery may run out.**
**Do not use the hazard warning switch for many hours with the engine or the hybrid system stopped.**

## Windshield Wiper and Washer Lever

When the ignition mode ON, you can use the wiper/washer lever.

**⚠ CAUTION**

**In cold weather, the sprayed washer fluid on the glass may get frozen and it may cause poor visibility to a driver. Use the defroster to warm the glass and spray the washer fluid. Refer to "Heating and Air Conditioning System" in the "OTHER CONTROLS AND EQUIPMENT" section.**

***NOTICE***

- **If you use the wipers with the glass dried, the glass and the wiper blade rubbers may be damaged. When the glass is dry, use the washer fluid and then use wipers.**
- **If you operate the wipers with the wiper blades stuck on the glass, the wiper blade rubbers may be damaged or the wipers may be broken. When the wiper blades are stuck on the glass, do not operate the wipers.**
- **If you use the washer when the washer fluid cannot be sprayed enough, the washer pump may be broken. When the washer fluid cannot be sprayed enough, turn off the washer switch.**

**When the operative wipers suddenly stop**


When the wipers are under heavy load such as covered by snow and the temperature of the wiper motor becomes high, the breaker will be activated and the wipers will temporarily stop to protect the wiper motor from overheating.

If this happens, perform the following operations:

1) Stop the vehicle in a safe place, and press the engine switch or the power switch to change the ignition mode to ACC or LOCK (OFF).
2) Move the wiper lever and switch to “OFF” position.
3) Remove obstacles such as snow on the wipers.
4) After a while, when the temperature of the wiper motor becomes low enough, the breaker will be reset automatically and you can use the wipers.

If you cannot use the wipers after a while, there may be another problem. Ask Maruti Suzuki authorized workshop to have the wipers inspected.


## Windshield Wipers

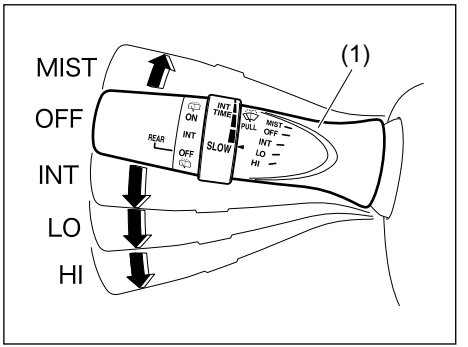


76TS30520

You can operate the windshield wipers by moving the lever (1) upward or downward.


| | |
|---|---|
| MIST | Temporary operation only while the lever is up |
| OFF | Off |
| INT | Intermittent operation |
| LO | Low speed operation |
| HI | High speed operation |

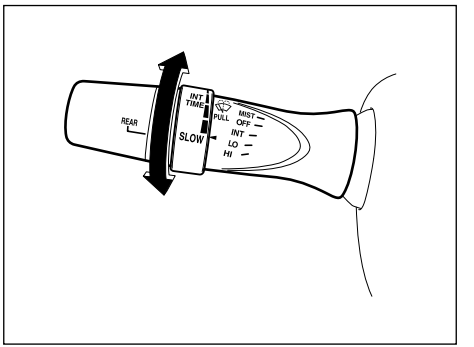


76TS30530

If the lever is equipped with “INT TIME” control, turn the control forward or backward to adjust the intermittent wiper operation to the desired interval.

## Windshield Washer

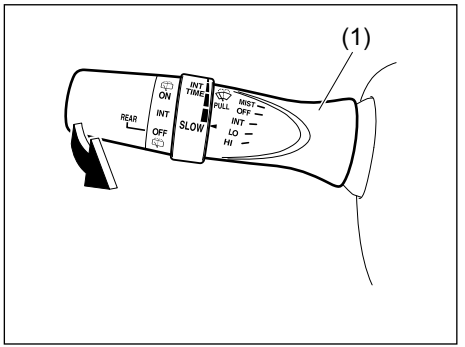


76TS30540

If you pull the lever (1) toward you, the windshield washer fluid will be sprayed and the windshield wipers will automatically operate a few times.

**⚠ WARNING**


- **To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.**
- **Do not use radiator antifreeze in the windshield washer reservoir. It can severely impair visibility when sprayed on the windshield, and can also damage your vehicle's paint.**

***NOTICE***

**To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:**

- **Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.**
- **Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.**
- **Clear ice or packed snow from the wiper blades before using the wipers.**
- **Check the washer fluid level regularly. Check it often when the weather is bad.**

## Rear Window Wiper (if equipped)

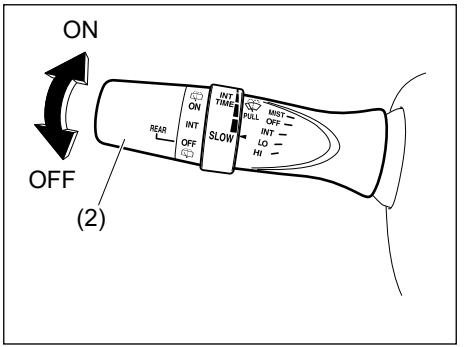


76TS30550


You can operate the rear window wiper by twisting the lever (2) as shown in the illustration.

| | |
|---|---|
| ON | Normal operation |
| INT | Intermittent operation |
| OFF | Off |

***NOTICE***

**Clear ice or snow from the rear window and rear wiper blade before using the rear wiper. Accumulated ice or snow could prevent the wiper blade from moving, causing damage to the wiper motor.**


### Rear Window Washer (if equipped)

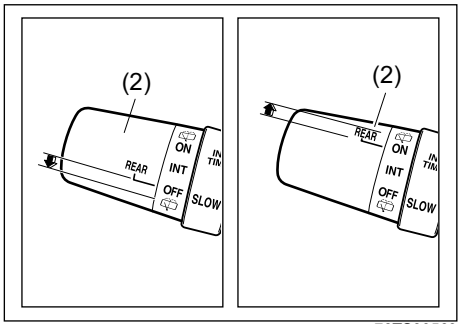


76TS30560

- If you twist the lever (2) in the direction of ⬆ and align it to 🚿 (washer) position above “ON” position, the rear window washer fluid will be sprayed and the rear wiper will operate simultaneously. If you release your hand from the lever, it will return to “ON” position.
- If you twist the lever (2) in the direction of ⬇ and align it to 🚿 (washer) position below “OFF” position, the rear window washer fluid will be sprayed and the rear wiper will operate simultaneously. If you release your hand from the lever, it will return to “OFF” position.


## Horn

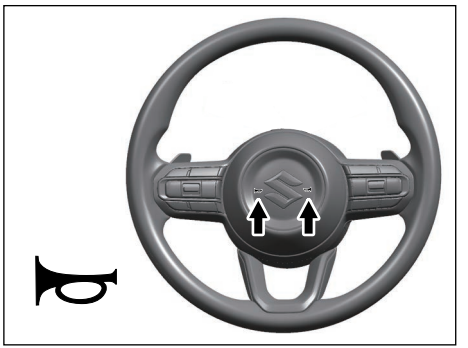

71UM03026

Press the horn button of the steering wheel to sound the horn. The horn will sound with any ignition mode.

## Heated Rear Window Switch

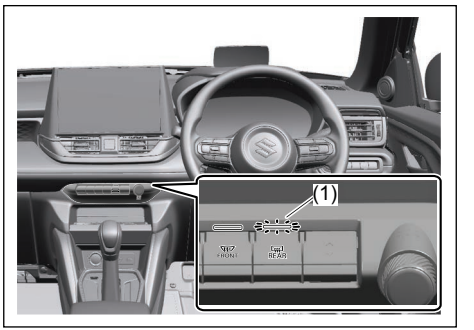


71UM03016

While the engine is running or the hybrid system is activating, you can use the heated rear window switch as the defogger for the rear window glass.


- If you push the rear defogger switch, the rear window glass will be heated and the indicator light (1) will turn on. To turn off the defogger, push the switch again.
- The defogger will automatically turn off after the defogger remains on for 15 minutes to prevent discharging of the lead-acid battery.
- If you press the engine switch or the power switch to change the ignition mode to ACC or LOCK (OFF) with the defogger on, the defogger will not automatically operate even if you start the engine again.

| *NOTICE* |
| --- |
| **The heated rear window use a large amount of electricity. If you do not turn off the switch after the window and mirrors have become clear, the battery may run out. To protect the lead-acid battery, turn off the switch shortly after the window and mirrors have become clear.**<br>**Also, do not use the defogger to melt snow or dry rain water.** |

*NOTE:*

- *When you wipe the interior side of the rear window glass, use a soft cloth dampened with water and wipe the glass along the heat wires, not to damage the heat wires and the terminals.*
- *The defogger will work only when the engine is running* or the hybrid system is activating.

# INSTRUMENT CLUSTER

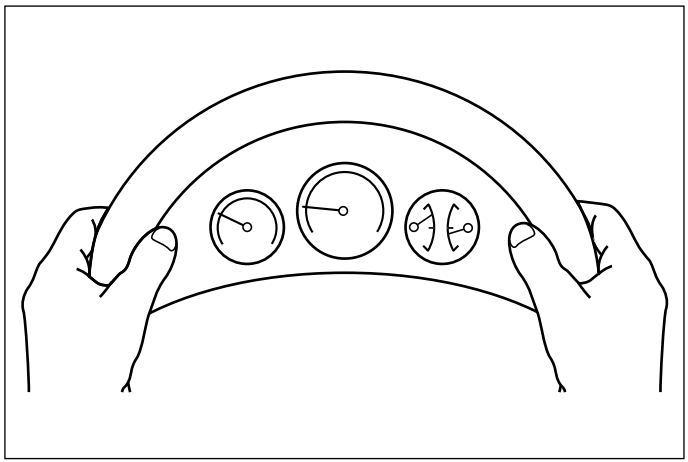


59RN04640

Instrument Cluster (Type A) ..... 4-1
Information Display (Type A) ..... 4-4
Instrument Cluster (Type B) ..... 4-29
Information Display (Type B) ..... 4-34
Warning and Indicator Lights ..... 4-72

## Instrument Cluster (Type A)

1. Speedometer
2. Tachometer
3. Fuel gauge
4. Temperature gauge (if equipped)
5. Information display
6. Trip meter selector knob
7. Indicator selector knob
8. Warning and indicator light

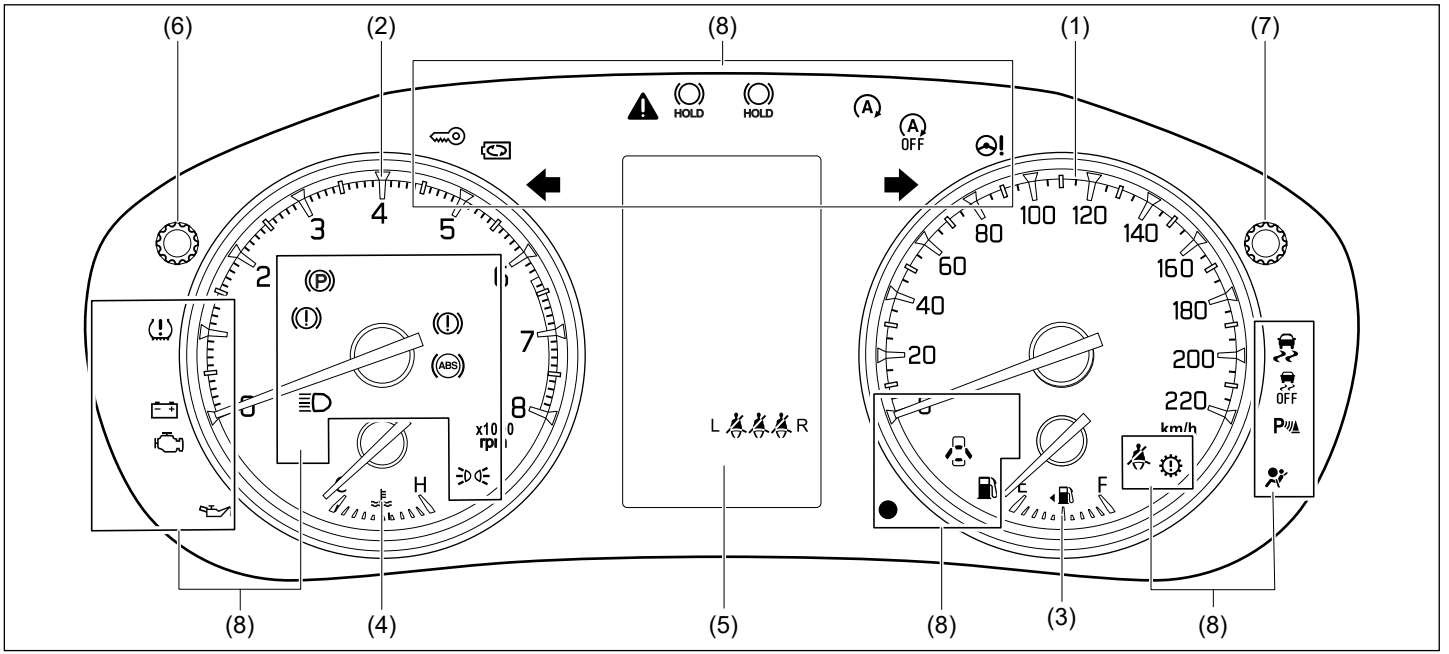


71UM04010

*NOTE:*
*For vehicle fitted with CNG fuel system, refer to the supplementary owner's manual.*

## Speedometer

The speedometer indicates vehicle speed.

## Speed Alert System


The speed alert system gives audible warning for alert of over-speed to driver. When the vehicle speed exceeds about 80 km/h, primary level warning with two beeps will sound every minute. When the vehicle speed exceeds about 120 km/h, secondary level warning with continuous beeps will sound.
If the vehicle speed is slowed down to about 118 km/h, primary warning will resume. If the vehicle is slowed down to about 78 km/h, speed alert warning will stop. This buzzer does not indicate any malfunction in vehicle.

## Tachometer

The tachometer indicates engine speed in revolutions per minute.

| *NOTICE* |
| --- |
| **Never drive the vehicle with the engine revving in the red zone or severe engine damage can result. Keep the engine speed below the red zone even when downshifting to a lower gear position.**<br>**Refer to "Downshifting maximum allowable speeds" in "OPERATING YOUR VEHICLE" section.** |

## Fuel Gauge

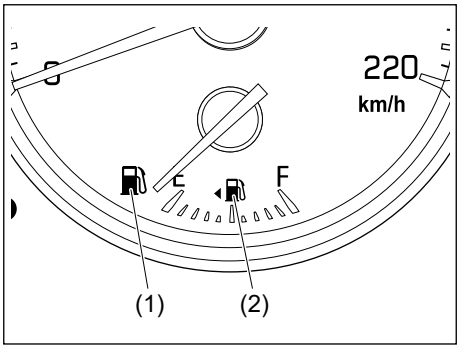


71UM04011

When ignition switch is pressed to change the ignition mode to ON, this gauge gives a rough indication of the amount of fuel in the fuel tank. "F" stands for full and "E" stands for empty.

If the indicator approaches a low level (near "E") on fuel gauge, refill the tank as soon as possible.


| *NOTICE* |
| --- |
| **To minimize the possibility of damage to catalytic converter or other components of the vehicle, avoid driving the vehicle near empty fuel tank level.** |

*NOTE:*
*The indicator moves a little depending on road conditions (for example, slope or curve) and driving conditions because of fuel movement in the tank.*

If the low fuel warning light (1) comes on, refill the fuel tank as soon as possible.
Refer to “Low Fuel Warning Light” in “Warning and Indicator Lights” in this section for details.

The mark (2) indicates that the fuel filler door is located on the left side of the vehicle.

## Temperature Gauge (if equipped)

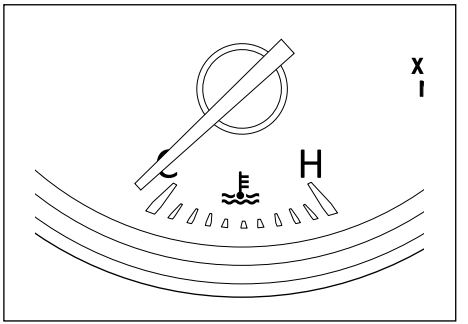



71UM04012


When the ignition switch is pressed to change the ignition mode to ON, this gauge indicates the engine coolant temperature. Under normal driving conditions, the indicator should stay within the normal, acceptable temperature range between “H” and “C”. If the indicator approaches “H”, overheating is indicated. Follow the instructions for “Engine Trouble: Overheating” in “EMERGENCY SERVICE” section.

| ***NOTICE*** |
| --- |
| **Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.** |

## Brightness Control

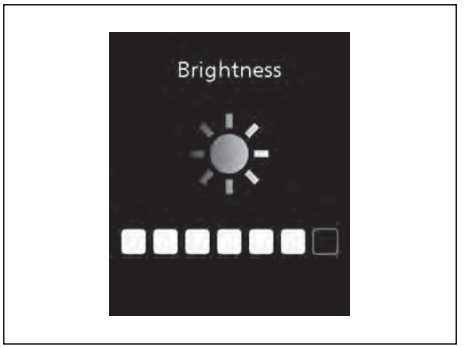


56RM02010

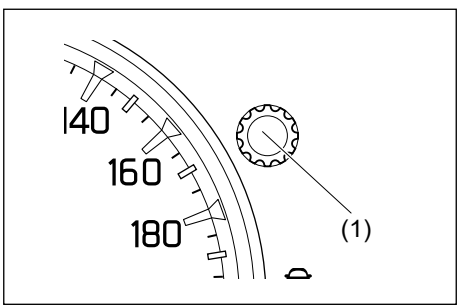


71UM04013

When the ignition switch is pressed to change the ignition mode to ON, the instrument panel lights come on.

Your vehicle has a system to automatically dim the brightness of the instrument panel

lights when the position lights or headlights are on.

When the position lights and/or headlights are on, you can adjust the meter illumination brightness.

To increase the brightness of the instrument panel lights, turn the indicator selector knob (1) clockwise.

To reduce the brightness of the instrument panel lights, turn the indicator selector knob (1) counterclockwise.

**⚠ WARNING**


**Do not adjust the brightness of the instrument panel lights while driving. Otherwise, you could lose control of the vehicle.**

*NOTE:*
- *If you do not turn the knob within several seconds of activating, the brightness control display will be canceled automatically.*
- *When you reconnect the lead-acid battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.*


*NOTE:*
*If you adjust to the maximum brightness level when the position lights or headlights are on, the following functions will be canceled.*
- *The function which automatically dims the brightness of instrument panel lights*
- *The function which operates with the brightness control, except maximum brightness level*

## Information Display (Type A)

The information display is shown when the ignition mode is “ON”.

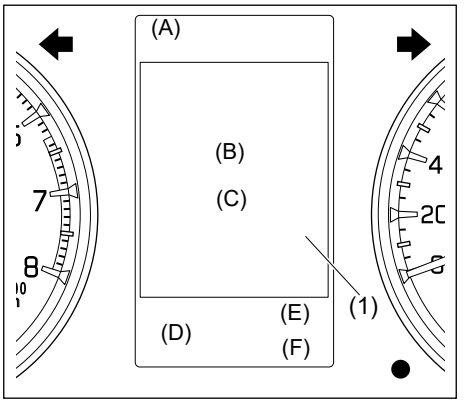


(1) Information display

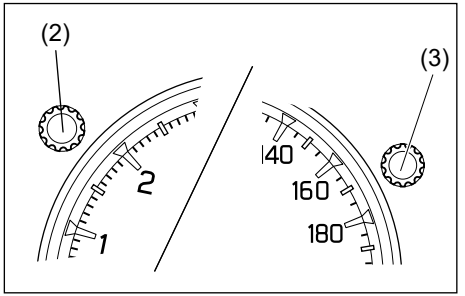


71UM04014

(2) Trip meter selector knob
(3) Indicator selector knob

The information display shows the following information.

**Display (A)**
Clock

**Display (B) and (C)**
Warning and indicator messages / Fuel consumption / Driving range / /Average Speed / Driving time / Clock and date / Cruise control (if equipped) / Total Idling Stop Time and Total Idling Fuel Saved (if equipped) / Energy flow (if equipped)

**Display (D)**
Selector position

**Display (E)**
Rear passenger's seat belt reminder / Outside temperature

**Display (F)**
Odometer / Trip meter




55T040250

When ignition switch is pressed to change the ignition mode to ON, the message display shown in the above illustration will appear on the display for several seconds. Some warning and indicator messages may appear on the display when the ignition mode is changed to ACC or LOCK (OFF)

## Clock


The display (A) shows the time.

To set the clock, follow "Setting mode" instructions in this section.

## Thermometer

The display (E) shows the thermometer.

The thermometer indicates the outside temperature.

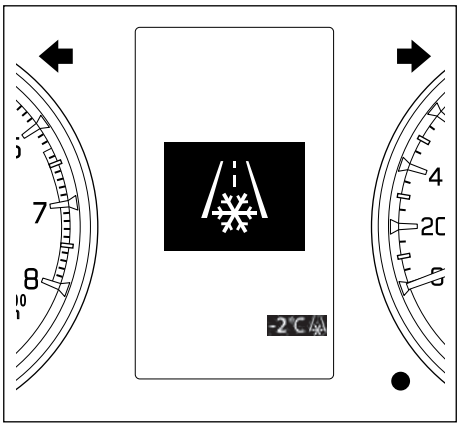


71UM04091

If the outside temperature nears freezing condition, the message shown in the above illustration will appear on the display.

To change the temperature unit between "°C" and "°F", follow "Setting mode" instructions in this section.


*NOTE:*
*The outside temperature indication is not the actual outside temperature when driving at low speed, or when stopped.*

### Fuel Consumption (if equipped) / Driving Range (if equipped) / Average Speed / Driving Time / Total Idling Stop Time and Total Idling Fuel Saved (if equipped) / Clock and Date (if equipped) / Energy flow (if equipped) / Mode ratio and total CNG mode time (if equipped) / CNG gauge and total CNG mode time (if equipped)

When there are no warning or indicator messages on the display (C), you can select one of the following indications to appear on the display: instantaneous fuel consumption, average fuel consumption, driving range, average speed, driving time, clock and date or no indication.

**⚠ WARNING**

**If you attempt to adjust the display while driving, you could lose control of the vehicle. Do not attempt to adjust the display while driving.**

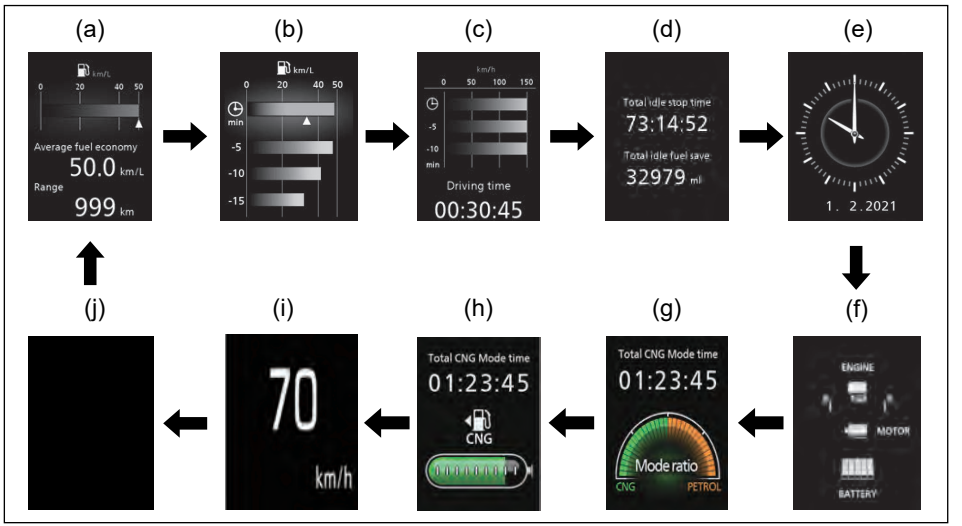


71UM03027


(a) Instantaneous fuel consumption / Average fuel consumption / Driving range (if equipped)
(b) Instantaneous fuel consumption / Average fuel consumption / 5-minute average fuel consumption (if equipped)
(c) Average speed / 5-minute average speed / Driving time
(d) Total Idling Stop Time and Total Idling Fuel Saved (if equipped)
(e) Clock and date (if equipped)
(f) Energy flow (if equipped)
(g) Mode ratio and total CNG mode time (if equipped) - Refer to the CNG supplementary owner's manual
(h) CNG gauge and total CNG mode time (if equipped) - Refer to the CNG supplementary owner's manual
(i) Digital vehicle speed
(j) No indication

To switch the display indication, push the indicator selector knob (3) quickly.

*NOTE:*
*The value of instantaneous fuel consumption, average fuel consumption, driving range, average speed shown on the display are affected by the following conditions;*

- *road condition*
- *surrounding traffic condition*
- *driving condition*
- *vehicle condition*
- *a malfunction which causes the malfunction indicator light to come on or blink.*

**Instantaneous fuel consumption**
The display shows instantaneous fuel consumption with a bar graph only when the vehicle is moving.

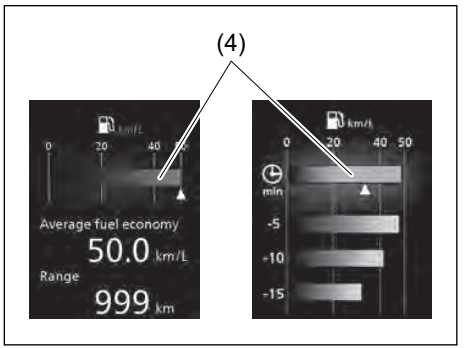



52RM21070

(4) Instantaneous fuel consumption

*NOTE:*
- *The display does not show the bar graph unless the vehicle is moving.*
- *Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km, km/L.*
- *For "L/100km" setting, the indicated maximum value of instantaneous fuel consumption is 30. No more than 30 will be indicated on the display even if the actual instantaneous fuel consumption is higher.*
- *For "km/L" setting, the indicated maximum value of instantaneous fuel consumption is 50. No more than 50 will be indicated on the display even if the actual instantaneous fuel consumption is higher.*
- *The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.*
- *The display shows estimated values. Indications may not be the same as actual values.*
- *For "L/100km" or "km/L" setting, you can change the units that instantaneous fuel consumption is displayed in. Refer to "Average fuel consumption" in this section.4*

**Average fuel consumption / 5-minute average fuel consumption / 1-driving cycle average fuel consumption**
Average fuel consumption from previous reset and 5-minute average fuel consumption, and 1-driving cycle average fuel consumption are shown.

**(Average fuel consumption)**

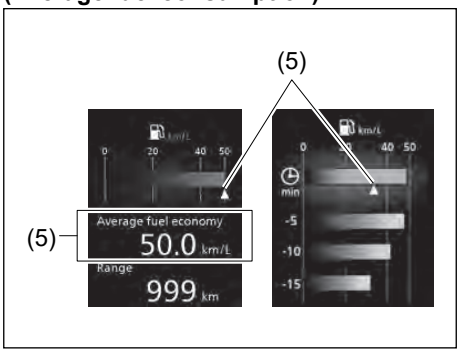


52RM21080

(5) Average fuel consumption

If you selected average fuel consumption the last time you drove the vehicle, the display shows the last value of average fuel consumption from previous driving when the ignition switch is pressed to change the ignition mode to ON. Unless you reset the value of average fuel consumption, the display indicates the value of average fuel consumption based on the average fuel consumption during previous driving.


*NOTE:*
*When you reconnect the negative (–) terminal to the lead-acid battery, the value of average fuel consumption will be shown after driving for a period of time.*

You can select the timing to reset the value of average fuel consumption by one of the following three methods;
- Reset after refuel: the value of average fuel consumption will be reset automatically by refueling.
- Reset with trip meter A: the value of average fuel consumption will be reset automatically by resetting trip meter A.
- Reset manually: the value of average fuel consumption will be reset by pushing and holding the indicator selector knob (3) when the display indicates the average fuel consumption.

To change the timing to reset the value of average fuel consumption, refer to “Setting mode” in this section.

*NOTE:*
*If you add only a small amount of fuel when you select “Reset after refuel”, the average fuel consumption value may not be reset.*


**(5-minute average fuel consumption)**

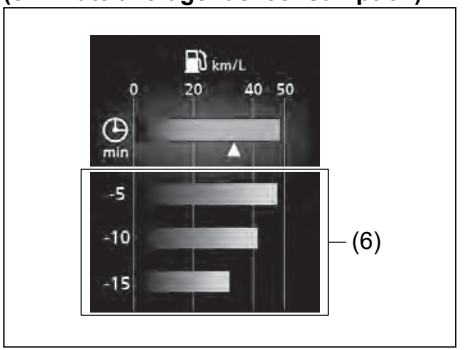


68PM00282

(6) 5-minute average fuel consumption

**(1-driving cycle average fuel consumption)**

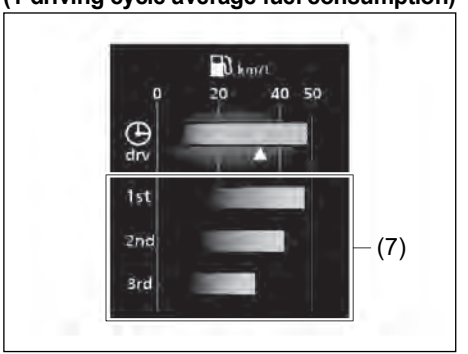



56RM02018

(7) 1-driving cycle average fuel consumption

You can check transition of average fuel consumption every 5 minutes from 15 minutes before up to now. Also, you can check transition of average fuel consumption the past 3 driving cycles. Time indication and driving cycle indication can be changed. For details, refer to “Setting mode” in this section.

**Driving range**

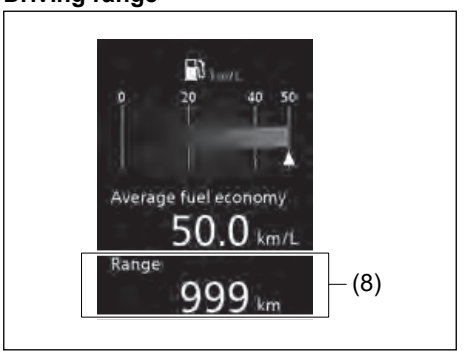


52RM21090

(8) Driving range

If you selected driving range the last time you drove the vehicle, the display indicates “---” for a few seconds and then indicates the current driving range when the ignition switch is pressed to change the ignition mode to ON.

The driving range shown in the display is an indicative unit of the approximate distance you can drive until the fuel gauge indicates “E”, based on current driving conditions and current fuel level in the fuel tank.


When the low fuel warning light comes on, the display “---” will appear.
If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

When you refuel, the driving range is updated. However, if you only add a small amount of fuel, the correct value will not be displayed.

*NOTE:*
- *If you refuel when the ignition mode is “ON”, the driving range may not indicate the correct value.*
- *When you reconnect the negative (–) terminal to the lead-acid battery, the value of driving range will be shown after driving for a period of time.*
- *If there are substantial changes in the driving pattern or vehicle usage, the displayed range may vary significantly.*

**Average speed / 5-minute average speed**
Average speed from previous reset and 5-minute average speed are shown.

**(Average speed)**

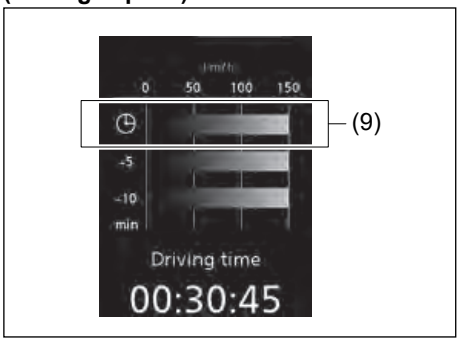


52RM21100


(9) Average speed

If you selected average speed the last time you drove the vehicle, the display indicates the last value of average speed from previous driving when the ignition switch is pressed to change the ignition mode to ON. Unless you reset the value of average speed, the display indicates the value of average speed which includes average speed during previous driving.

To reset the value of average speed, push and hold the indicator selector knob (3) for about 2 seconds when the display indicates an average speed. The display shows “---” and then indicates a new average speed after driving for a short time.

*NOTE:*
*When you reconnect the negative (–) terminal to the lead-acid battery, the value of average speed will be shown after driving for a period of time.*

**(5-minute average speed)**

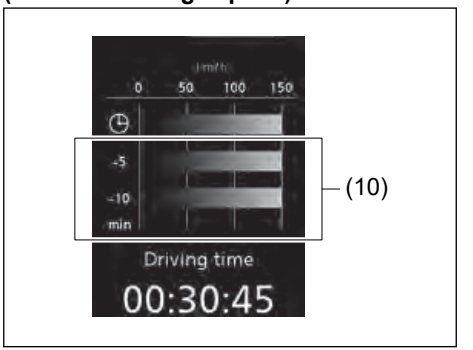



52RM21110

(10) 5-minute average speed

You can check transition of 5-minute average speed every 5 minutes from 10 minutes before up to now.

**Driving time (if equipped)**

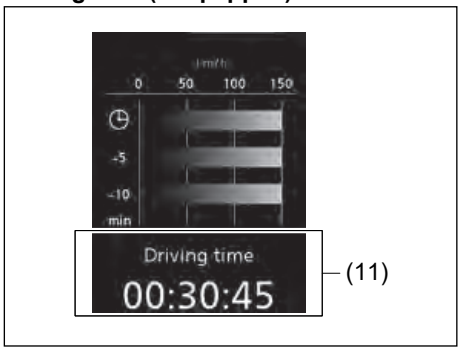



52RM21120

(11) Driving time

Driving time from previous reset is shown. To reset the driving time, push and hold the indicator selector knob (3) for about 2 seconds when the display indicates a driving time. The display shows "---" and then indicates a new driving time after driving for a short time.

*NOTE:*
- *Disconnection of the lead-acid battery negative (-) terminal will reset the indication of the driving time.*
- *The indicated maximum value of driving time is 99:59:59. No more than this value will be indicated on the display until you reset the driving time.*

**Total idling stop time and total idling fuel saved (if equipped)**

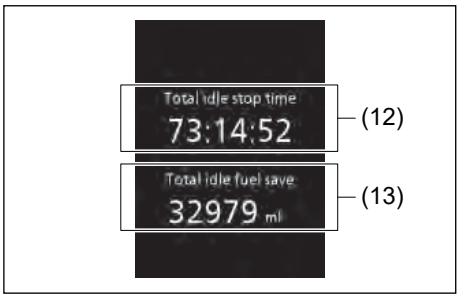


52RM217

(12) Total idling stop time
(13) Total idling fuel saved





The display shows the total length (in hours, minutes and seconds) of engine stopping time and the total amount (in milliliters) of fuel conservation by ENG ASTOP system since the indication was reset.
- To reset the total idling stop time and the total idling fuel saved, push and hold the indicator selector knob (3) for a while when the display shows the total idling stop time and the total idling fuel saved.

*NOTE:*
- *The indicated maximum value of the total idling stop time is 99:59:59 and this value is fixed until it is reset.*
- *When you reconnect the negative (–) terminal to the lead-acid battery, the value of the total idling stop time and the total idling fuel saved will be reset.*

**Clock and date (if equipped)**


Date and time are shown. For the setting procedure, refer to "Setting mode" in this section.

**Energy flow (if equipped)**
The state of SHVS operation can be checked on the information display. For details, refer to “SHVS (Smart Hybrid Vehicle by Suzuki) (if equipped)” in “OPERATING YOUR VEHICLE” section.
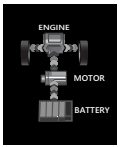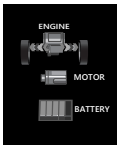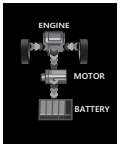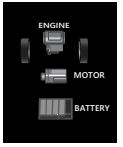
| Information display | Description |
|---|---|
|  69T040460 | When the vehicle is running, ISG (Integrated Starter Generator) assists engine power as an electric motor. |
|  69T040470 | When the vehicle is powered by the engine. |
|  69T040490 | When decelerating your vehicle, the ISG generates electricity without engine power. |
|  69T040480 | When the engine automatically stops by the ENG A-STOP system. |

**Information shown after driving**
When you press the ignition switch to change the ignition mode to “LOCK” (OFF), the following information appears for several seconds on the information display.

(Vehicles without ENG A-STOP system)

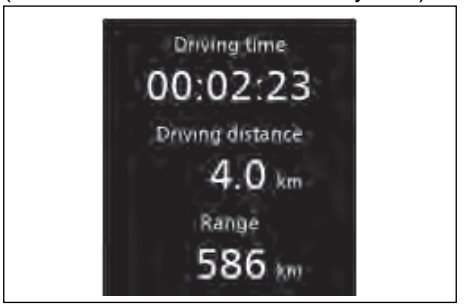



71UM04056

(Vehicles with ENG A-STOP system)




71UM04057

**Intersection Guidance (When using Android Auto™*1 or Apple CarPlay*2 on infotainment system**

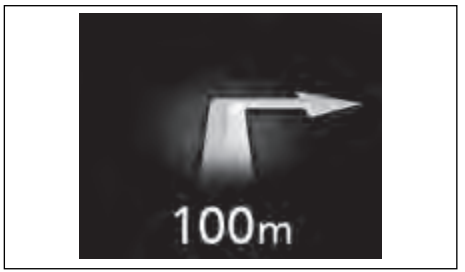


59RN04710

The display shows the direction of your driving and the distance, working with the infotainment system.

*NOTE:*

- *A slight time lag may occur between the intersection guidance on the information display and the guidance from the infotainment system.*
- *Switch the intersection guidance to ON or OFF while the guidance from the infotainment system is displayed.*
  - *A time lag may occur between ON display and OFF display of the intersection guidance.*
  - *For the functions and operations of the infotainment system, refer to the supplementary manual, provided along with it.*
- *You can display or hide the intersection guidance by changing the setting (customization). For details, refer to "Setting Mode" in this section.*

*1: Android Auto™ may not be available in your country or region.
For details about Android Auto™, refer to http://support.google.com/androidauto

*2: Apple CarPlay may not be available in your country or region.
For details about Apple CarPlay, refer to https://www.apple.com/ios/carplay/

## Gear Position (if equipped)




76TS40670

### Gear position

When the ignition switch is pressed to change the ignition mode to ON, the display (D) indicates the gear position (16).
For details on how to use the transmission, refer to "Using Transmission" in "OPERATING YOUR VEHICLE" section.

### Trip Meter

The display (F) shows the trip meter.

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.
You can use trip meter A or trip meter B independently.

To reset the trip meter, push and hold the trip meter selector knob (2) for few seconds when the display shows the trip meter.

### Odometer

The display (F) shows the odometer.


The odometer records the total distance the vehicle has been driven.

| *NOTICE* |
| --- |
| **Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.** |

## Setting Mode

For details on how to use the information display, refer to “Setting mode of information display (Type A)” in “SPECIFICATIONS” section.

**Rear Passenger’s Seat Belt Reminder Light**

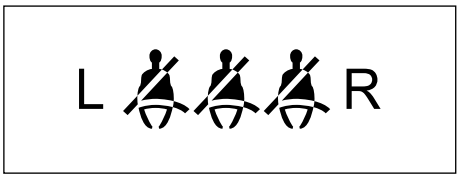


76TS01005

Reminder light for rear passengers to fasten their seat belts. For details of the seat belt reminder, refer to “Seat Belt Reminder” in “FOR SAFE DRIVING” section.

## Warning and Indicator Messages

The display shows warning and indicator messages to let you know about certain vehicle problems.

In some cases, the external or internal buzzer may also sound at the same time to alert you.

If warning and indicator messages appear on the display, follow the messages.

**Master warning indicator light**



68PM00278

When the display shows warning and indicator messages, the master warning indicator light may also blink.


*NOTE:*

- *When the problem that causes a message to appear is corrected, the message will disappear.*
- *If a message is displayed, and other problems requiring a message occur, the message for each of the problems will be alternately displayed about every 5 seconds.*
- *When you push and hold the indicator selector knob (3) for about 2 seconds while a message is displayed, the message will disappear temporarily. If the problem that caused the message is not corrected, the message will appear again after 5 seconds.*

**Warning and indicator messages**

**All models**

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  71UM04078 | Blinks (only while vehicle is in motion)  | Beep (one time from interior buzzer; only while vehicle is in motion) | A door, tailgate or engine hood is not properly closed. Stop the vehicle in a safe place and close the door, tailgate or engine hood properly. |
|   52RS005 | Blinks  | Continuous beep (from interior buzzer) | The parking brake is not released. Stop the vehicle in a safe place and release the parking brake. |
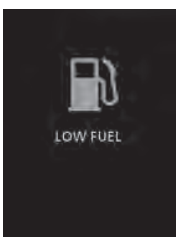
| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  52RM21170 | Blinks  | Continuous beep (from interior buzzer) | The headlights and/or the position lights are left on. Turn them off. |
|  52RM21180 | Off | Beep (one time from interior buzzer) | Fuel level is low. Refill it as soon as possible. (#1) |



(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>55T050831C | Off | Beep (one time from interior buzzer) | CNG level is low. Refill CNG Tank as soon as possible. (#1) |
|  <br>52RM21190 | Off | Off | The road may be icy. Drive very carefully. (#1) |

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>52RM21210 | Off | Off | This message is displayed when ACC position is selected as the ignition mode. (#1) |
|  <br>52RM21220 | Off | Off | The brake pedal (for automatic transmission models) or the clutch pedal (for manual transmission models) is depressed. Press the ignition switch to start the engine. |

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.
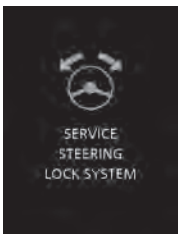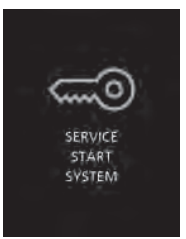
| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>52RM21230 | Blinks<br>  | Beep (one time from interior buzzer) | There is a problem with the steering lock system.<br>Have your vehicle inspected by a Maruti Suzuki authorized workshop. |
|  <br>52RM21240 | Blinks<br>  | Beep (one time from interior buzzer) | There is a problem with the immobilizer/ keyless push start system. Also, the vehicle battery voltage may be decreased.<br>When the message is displayed even if you start the engine with normal voltage of the vehicle battery, have your vehicle inspected by a Maruti Suzuki authorized workshop. |

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>55T040090<br><br>  <br>55T040100 | Blinks<br>  | Series of beeps under certain conditions (for about 2 seconds from exterior and/or interior buzzers) | The remote controller may be outside the vehicle or its battery may be discharged. Bring the remote controller in the vehicle or touch the engine push start switch with the remote controller.<br>If the message still appears, replace the remote controller battery. |

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>52RM21270 | Off | Off | This message is displayed when “ON” position is selected as the ignition mode. (#1) |
|  <br>55T040020 | Blinks  | Beep (one time from interior buzzer) | The steering lock is not disengaged. While lightly turning the steering wheel in both directions, press the ignition switch again. |

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>55T040110 | Off | Off | The remote controller battery is about to become flat. Replace the battery. (#1) |

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

**Manual transmission models**


| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>52RM21300 | Off | Off | The ignition switch is pressed without depressing the brake and clutch pedals. Try again as instructed by the message. |

**Automatic transmission models**

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  52RM21310 | Off | Off | The ignition switch is pressed with the gear-shift lever in a position other than “P” or “N” or without depressing the brake pedal. Try again as instructed by the message. |
|  52RM21320 | Off | Off | The ignition switch is pressed with the gear-shift lever in a position other than “P”. Try again as instructed by the message. |

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>52RM21330 | Blinks<br>  | Beep (one time from interior buzzer) | The Automatic transmission model fluid temperature becomes too high.<br>Stop the vehicle in a safe place and let the fluid cool down. |

**Vehicle with ESP® system**
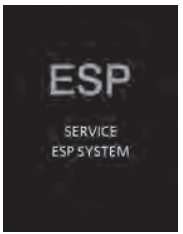
| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  52RM21340 | Blinks  | Beep (one time from interior buzzer) | There may be a problem with ESP® system.<br>Have your vehicle inspected by a Maruti Suzuki authorized workshop. |
| Hill hold control system  52RM21350 | Blinks  | Beep (one time from interior buzzer) | There may be a problem with hill hold control system and Hill descent control.<br>Have your vehicle inspected by a Maruti Suzuki authorized workshop. |

**Vehicles with electric parking brake system**


| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
| RELEASE PARKING BRAKE | Blinks  | Continuous short beeps | The electric parking brake has not been released. Stop the vehicle in a safe place and release the electric parking brake. |
| VEHICLE MIGHT ROLL AVOID STEEP SLOPE | Blinks  | Continuous beeps | Since the vehicle may move, promptly depress the brake pedal, and park the vehicle in a place that is not on a steep slope. |
| FREQUENT OPERATION TEMPORARILY DISABLED | Blinks  | Continuous short beeps | The electric parking brake switch has been operated repeatedly in a short period and cannot operate temporarily. Wait for a while before attempting the operation again. |
| PARKING BRAKE INSPECTION REQUIRED | Blinks  | 1 beep | The electric parking brake malfunction is detected. Consult a Maruti Suzuki authorized workshop for advice. |
| PARKING BRAKE UNAVAILABLE | Blinks  | Continuous beeps | The electric parking brake malfunction is detected. Consult a Maruti Suzuki authorized workshop for advice. |
| PARKING BRAKE AUTO ACTIVATED | Off | 1 beep | The electric parking brake is automatically operated in response to the request from another function (system). |

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
| PARKING BRAKE SHIFT SYNCHRO FCN ACTIVATED | Off | 1 beep | The electric parking brake system auto mode is ON. |
| PARKING BRAKE SHIFT SYNCHRO FCN DEACTIVATED | Off | 1 beep | The electric parking brake system auto mode is OFF. |
| PUSH SWITCH WHILE PRESSING BRAKE PEDAL | Off | Continuous short beeps | The electric parking brake switch is operated when the brake pedal is not depressed. Operate the electric parking brake switch while depressing the brake pedal. |
| PARKING BRAKE ON (SEATBELT/ DOOR) | Off | Continuous short beeps | The electric parking brake cannot be automatically released due to the driver's seat belt not being fastened or the driver's door not being closed securely. Make sure you are wearing the seat belt and driver's door is closed, then try again. |
| BRAKE HOLD INSPECTION REQUIRED | Blinks  | 1 beep | The brake hold malfunction is detected. Consult a Maruti Suzuki authorized workshop for advice. |
| BRAKE HOLD UNAVAILABLE STEEP SLOPE KEEP BRAKING | Blinks  | Continuous beeps | The brake hold function may not be set due to the vehicle being parked on a steep slope or similar conditions. Avoid parking on a steep slope or take other necessary precautions, then apply the brake hold again. |

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
| BRAKE HOLD UNAVAILABLE (SEATBELT/ DOOR) | Off | Continuous short beeps | The brake hold system cannot be set automatically due to the driver's seat belt not being fastened or the driver's door not being closed securely. Make sure you are wearing the seat belt and driver's door is closed, then try again. |
| PUSH SWITCH WHILE PRESSING BRAKE_PEDAL | Off | Continuous short beeps | The brake hold switch is operated when the brake pedal is not depressed. Operate the electric parking brake switch while depressing the brake pedal. |

## Instrument Cluster (Type B)

1. Speedometer
2. Power meter / Tachometer / Multimedia / Clock and date (if equipped)
3. Information display
4. Fuel gauge
5. Multi-information display
6. Warning and indicator lights

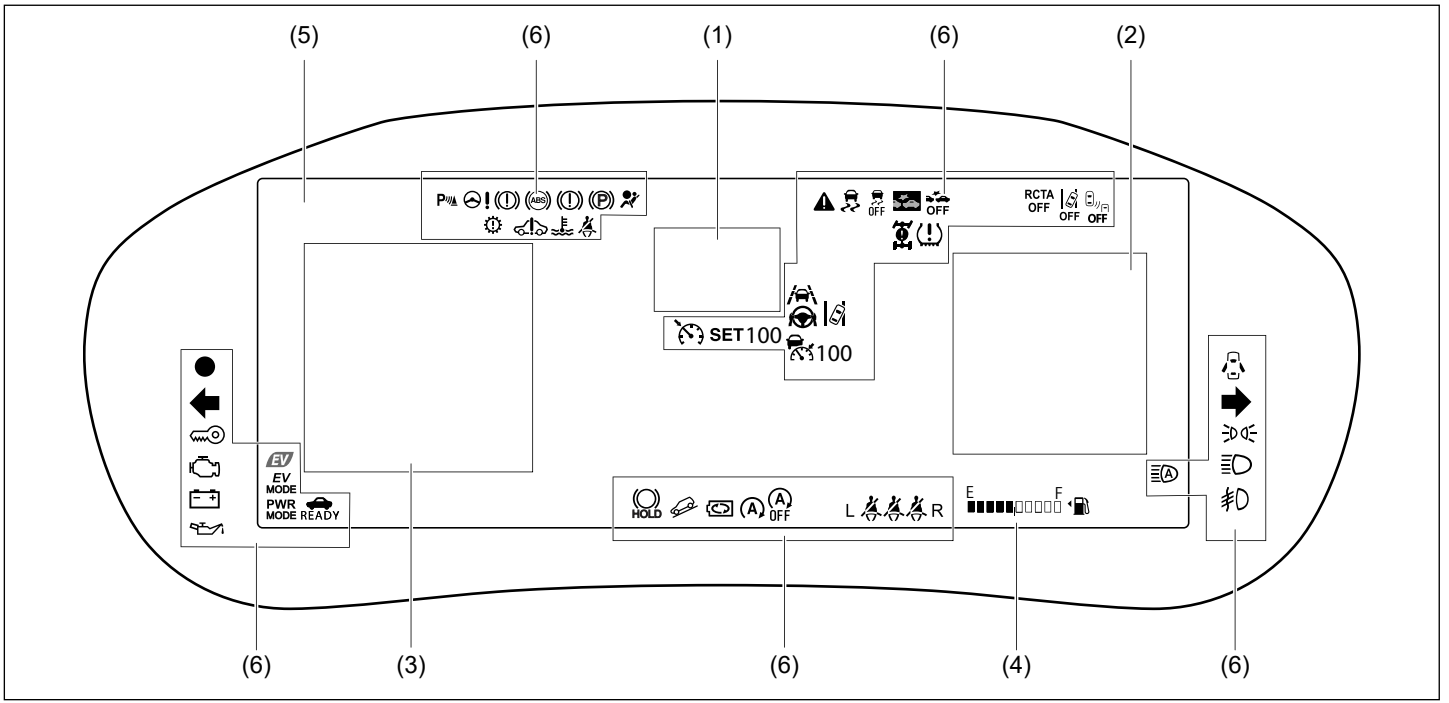


71UM04033

*NOTE:*
*For vehicle fitted with CNG fuel system, refer to the supplementary owner's manual.*

## Speedometer

The speedometer indicates vehicle speed. You can change the classic or standard layout of the speedometer on the information display.

Refer to “Setting Mode” in this section for details.


### Classic Layout




71UM04019

(1) Classic layout speedometer display

### Standard Layout

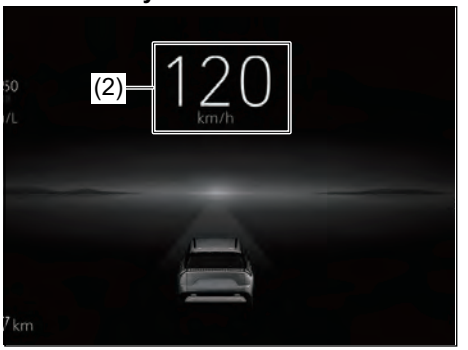


71UM04020

(2) Standard speedometer display


## Speed Alert System

The speed alert system gives audible warning for alert of over-speed to driver. When vehicle speed exceeds about 80 km/h, primary level warning with two beeps will sound every minute. When the vehicle speed exceeds about 120 km/h, secondary level warning with continuous beeps will sound.

If the vehicle speed is slowed down to about 118 km/h, primary warning will resume. If the vehicle is slowed down to about 78 km/h, speed alert warning will stop. This buzzer does not indicate any malfunction in vehicle.


## Power meter (if equipped)

### Classic Layout

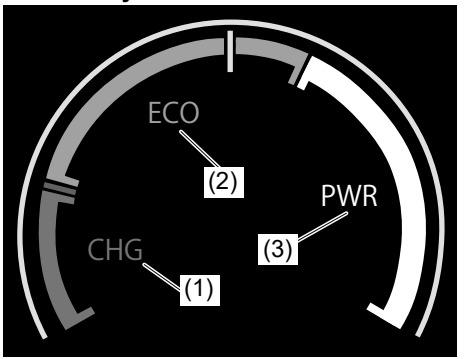


71UM04021

### Standard Layout

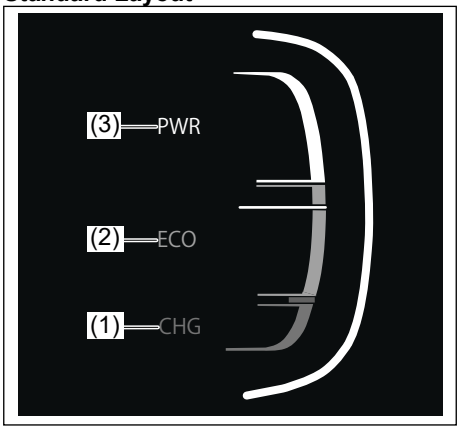


71UM04022

This power meter shows the following areas.

**CHG (Charge) area (1)**
This area shows regeneration* status. Regenerated energy will be used to charge the hybrid battery (traction battery).

**ECO area (2)**
This area shows that the vehicle is being driven in an Eco-friendly manner.

**PWR (Power) area (3)**
This area shows that an Eco-friendly driving range is being exceeded (during full power driving, etc.)

*NOTE:*
*"Regeneration" refers to the conversion of energy created by the movement of the vehicle into electrical energy.*

In the following situation, the power meter does not operate.
- Power meter is not illuminated.
- The shift position is in a range other than D, B or R position.

## Tachometer (if equipped)

**Classic Layout**




71UM04089

**Standard Layout**




71UM04090

The tachometer indicates engine speed in revolutions per minute.


***NOTICE***

**Never drive the vehicle with the engine revving in the red zone or severe engine damage can result. Keep the engine speed below the red zone even when downshifting to a lower gear position.**
**Refer to "Downshifting maximum allowable speeds" in "OPERATING YOUR VEHICLE" section.**

## Multimedia (if equipped)

The screen displays multimedia information such as Bluetooth, USB, Apple CarPlay or Android Auto™ etc. Refer to the infotainment system manual for detail.

### Clock and date (if equipped)

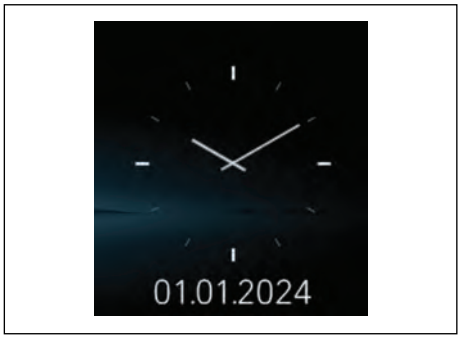



71UM04079

The display (F) shows the time.

To set the clock, follow “Setting mode” instructions in this section.

### Fuel Gauge

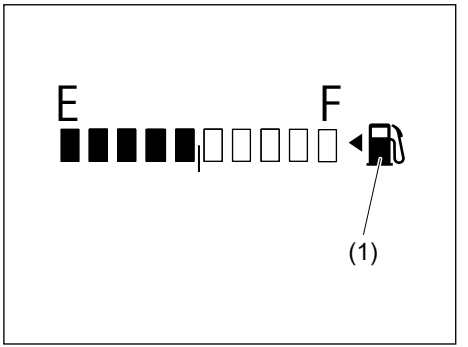


71UM04023

When the power switch is pressed to change the ignition mode to ON, this gauge indicates a rough indication of the amount of fuel in the fuel tank. “F” stands for full and “E” stands for empty.

If the indicator approaches a low level (near “E”) on fuel gauge, refill the tank as soon as possible.

*NOTE:*
*The indicator moves a little depending on road conditions (for example, slope or curve) and driving conditions because of fuel movement in the tank.*


If the low fuel warning light comes on, refill the fuel tank as soon as possible.

| *NOTICE* |
| --- |
| **To minimize the possibility of damage to catalytic converter or other components of the vehicle, avoid driving the vehicle near empty fuel tank level.** |


Refer to “Low Fuel Warning Light” in “Warning and Indicator Lights” in this section for details.

The mark (1) indicates that the fuel filler door is located on the left side of the vehicle.

## Brightness Control

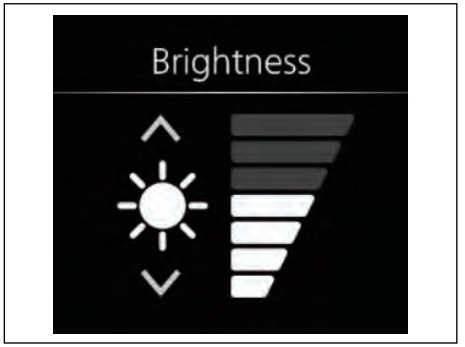


71UM04024

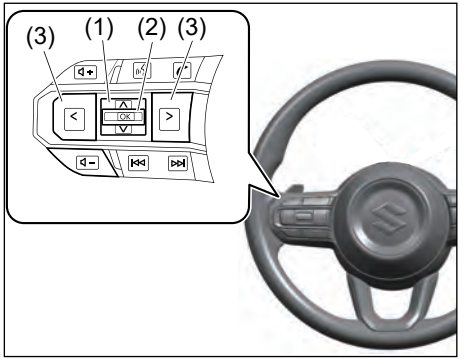


71UM04025

When the power switch is pressed to change the ignition mode to ON, the instrument panel lights come on. You can you can adjust the meter illumination brightness even if the ignition mode is LOCK (OFF).

To increase or reduce the brightness of the instrument panel lights, follow the below instructions.

- Press “<” or “>” of left/right selector switch (3) to select “Setting mode”.
- Press selector up/down switch (1) “ ∧” up or down “ ∨ ” to select the brightness after changing the display. Then press the switch (2).
- Press selector up/down switch (1) “ ∧” up or down “ ∨ ” to adjust the brightness.
- Press “<” of left selector switch (3) after adjusting the brightness.

**⚠ WARNING**

**Do not adjust the brightness of the instrument panel lights while driving. Otherwise, you could lose control of the vehicle.**

*NOTE:*
*When you reconnect the lead-acid battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.*


*NOTE:*
*If you adjust to the maximum brightness level when the position lights or headlights are on, the following functions will be canceled.*

- *The function which automatically dims the brightness of instrument panel lights*
- *The function which operates with the brightness control, except maximum brightness level*

This software of this speedometer includes open software. The license information and source code for open source software is available through the following URL.
https://www.nippon-seiki.co.jp/business_ic_mete

## Information Display (Type B)

The information display is shown when the ignition mode is “ON”.

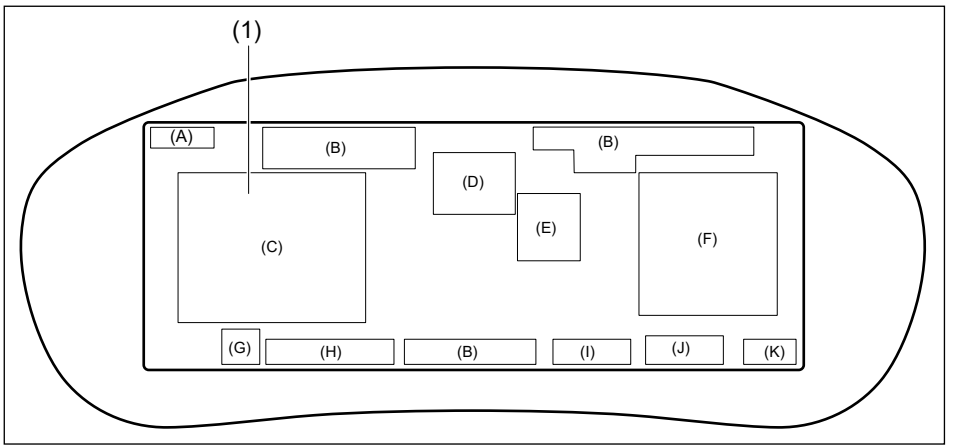


71UM04026

(1) Information display

The information display shows the following information.

**Display (A)**
Clock

**Display (B)**
Warning and Indicator lights

**Display (C)**
Average fuel economy (if equipped) / Range (if equipped) / Fuel economy history (if equipped) / Average speed (if equipped) / Driving time / Total idle stop time (if equipped) / Total idle fuel save (if equipped) / Energy flow (if equipped) / Navigation (if equipped) / Mode ratio and total CNG mode time (if equipped) / CNG gauge and total CNG mode time (if equipped) / Warning information / Setting mode / Odometer & Trip meter / Menu bar indicator

**Display (D)**
Speedometer

**Display (E)**
Lane keep assist indicator light (if equipped) / Steering assist indicator light (if equipped) / Lane departure prevention indicator light (if equipped) / Adaptive cruise control indicator (if equipped) /

**Display (F)**
Clock and date / Multimedia / Tachometer (if equipped) / Power meter (if equipped) /

**Display (G)**
Shift position indicator

**Display (H)**
Odometer / Trip meter / 4WD System Driving Mode (for 4WD models) / CNG, Petrol Mode Information (if equipped)


**Display (I)**
Rear passenger’s seat belt reminder / Outside temperature

**Display (J)**
Fuel Gauge

**Display (K)**
Range (if equipped)

## Display

The information display shows (C) the following flows and images.

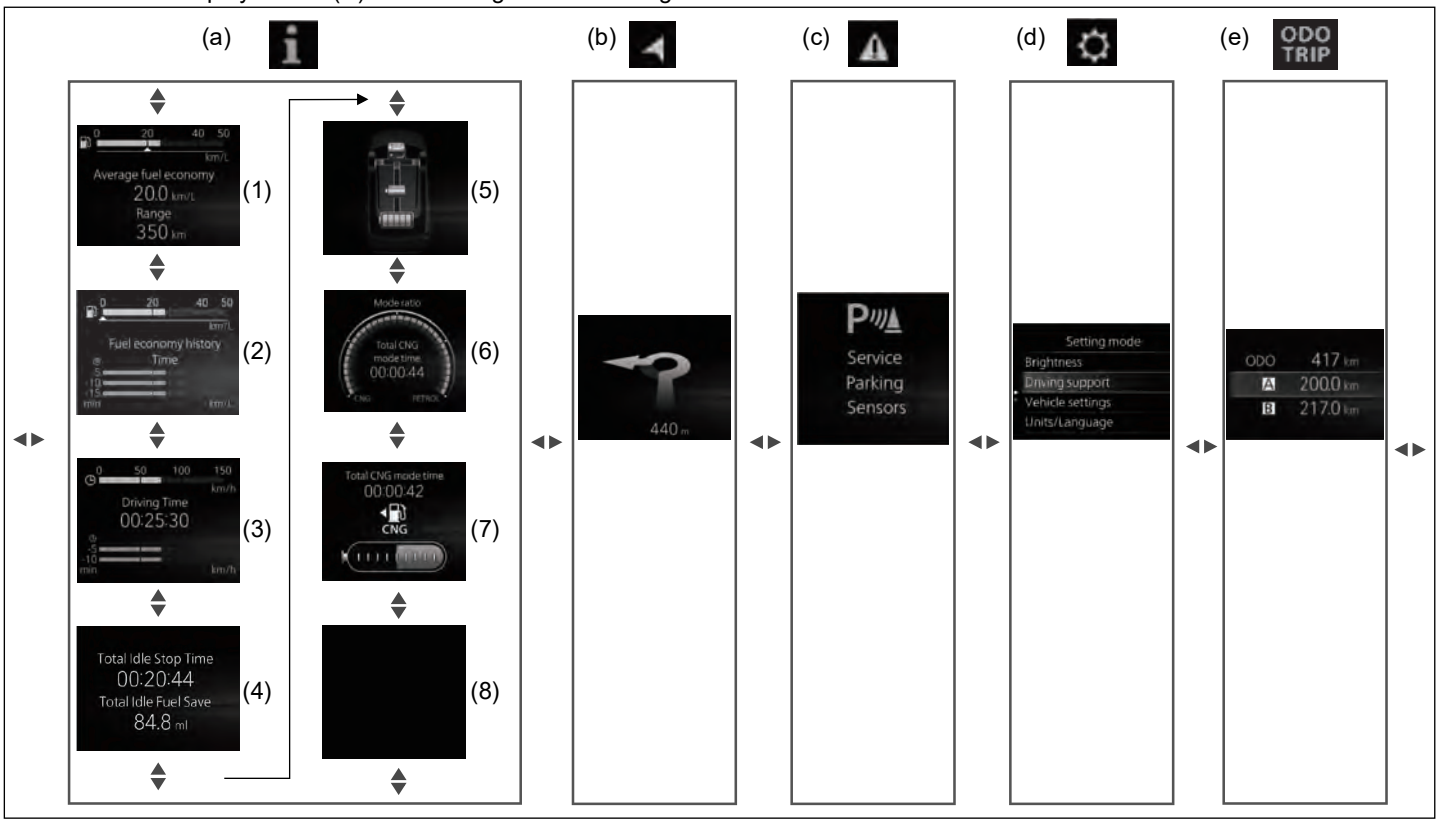


71UM04047

The following images of menu will be displayed on the Display (C). Select an icon by using left/right selector switch.


| | | |
|---|---|---|
| (a) |  | Driving information display |
| (b) |  | Navigation information display (if equipped) |
| (c) |  | Warning message display |
| (d) |  | Setting mode display |
| (e) |   | Odometer / Trip meter display |

The following images will be displayed inside the driving information display (a):

1) Instantaneous fuel consumption / Average fuel consumption / driving range (if equipped)
2) Instantaneous fuel consumption / Average fuel consumption / 5-minute average fuel consumption / 1-driving cycle fuel consumption (if equipped)
3) Average speed / 5-minute average speed / driving time
4) Total idle stop time / Total idle fuel save (if equipped)
5) Energy flow (if equipped)
6) Mode ratio and total CNG mode time (if equipped)
7) CNG gauge and total CNG mode time (if equipped)
8) No indication

## Changing the information display

The information display is shown and operated by using the steering switch for the information display.

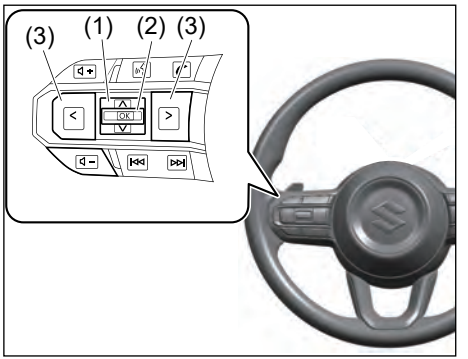



71UM04025


(1) Up/down selector switch
(2) OK switch
(3) Left/right selector switch

- To change the menu, press “<” or “>” of the switch (3) to scroll or move the screen.
- Press the up/down selector switch (1) “∧” up or down “∨” to select the screen.
- Press the left/right selector switch after selecting and changing the menu on the display.

The menu bar is shown on Display (C) area and operated by using the Left/right selector switch.

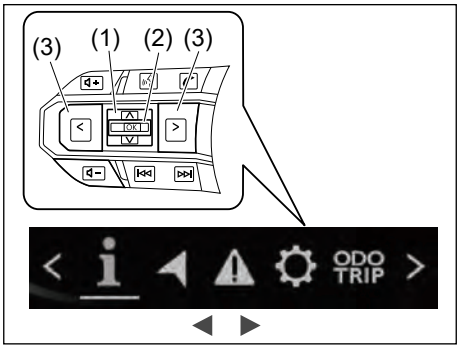



71UM04030

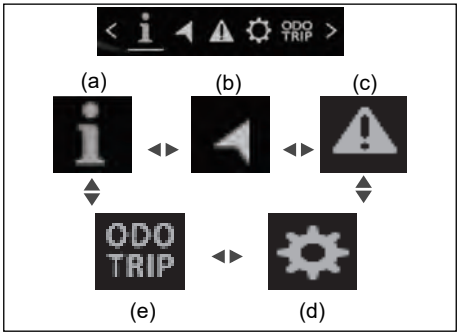


71UM04031

To change the menu bar, press “<” or “>” of the switch (3).

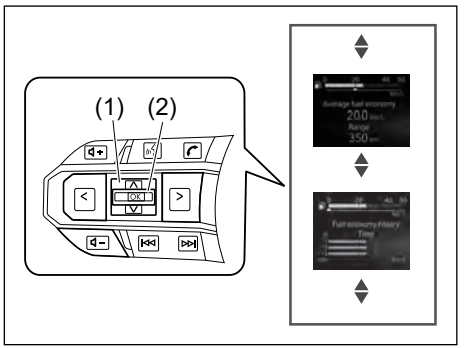


71UM04032

To change the screen on the menu bar, press the up/down selector switch (1) “ ∧” up or down “∨ ” to select the screen.

When there are no warning or indicator messages on the display (C), you can select one of the following indications to appear on the display: average speed/driving time, instantaneous fuel consumption/ average fuel consumption/range, fuel economy history, Energy flow, digital speedometer (if equipped), Multimedia (if equipped), and Odometer & Trip meter.

**⚠ WARNING**

**If you attempt to adjust the display while driving, you could lose control of the vehicle. Do not attempt to adjust the display while driving.**

*NOTE:*
*The value of instantaneous fuel consumption, average fuel consumption, driving range, average speed shown on the display are affected by the following conditions;*
- *road condition*
- *surrounding traffic condition*
- *driving condition*
- *vehicle condition*
- *a malfunction which causes the malfunction indicator light to come on or blink*

**Instantaneous fuel consumption (if equipped)**
The display shows instantaneous fuel consumption with a bar graph only when the vehicle is moving.




71UM04037

(4) Instantaneous fuel consumption


*NOTE:*
- *The display does not show the bar graph unless the vehicle is moving.*
- *Depending on the vehicle’s specification, the fuel consumption units of initial setting are indicated as L/100km, km/L.*
- *For “L/100km” setting, the indicated maximum value of instantaneous fuel consumption is 30. No more than 30 will be indicated on the display even if the actual instantaneous fuel consumption is higher.*

- *For "km/L" setting, the indicated maximum value of instantaneous fuel consumption is 50. No more than 50 will be indicated on the display even if the actual instantaneous fuel consumption is higher.*
- *The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.*
- *The display shows estimated values. Indications may not be the same as actual values.*
- *For "L/100km" or "km/L" setting, you can change the units that instantaneous fuel consumption is displayed in. Refer to "Average fuel consumption" in this section.*

**Average fuel consumption / 5-minute average fuel consumption / 1-driving cycle average fuel consumption (if equipped)**

Average fuel consumption from previous reset and 5-minute average fuel consumption, and 1-driving cycle average fuel consumption are shown.

**Average fuel consumption**

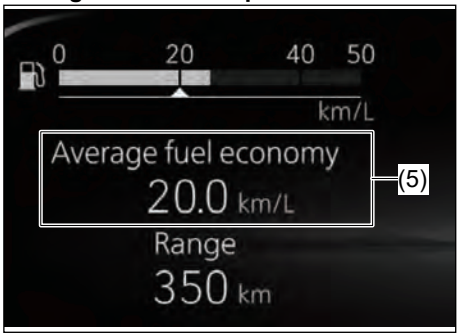


71UM04038

(5) Average fuel consumption

If you selected average fuel consumption the last time you drove the vehicle, the display shows the last value of average fuel consumption from previous driving when the power switch is pressed to change the ignition mode to ON. Unless you reset the value of average fuel consumption, the display indicates the value of average fuel consumption based on the average fuel consumption during previous driving.

*NOTE:*
*When you reconnect the negative (–) terminal to the lead-acid battery, the value of average fuel consumption will be shown after driving for a period of time.*

You can select the timing to reset the value of average fuel consumption by one of the following three methods;

- Reset after refuel: the value of average fuel consumption will be reset automatically by refueling.
- Reset with trip meter A: the value of average fuel consumption will be reset automatically by resetting trip meter A.
- Reset manually: the value of average fuel consumption will be reset by pushing OK (2) switch when the display indicates the average fuel consumption.

To change the timing to reset the value of average fuel consumption, refer to "Setting mode" in this section.

*NOTE:*
*If you add only a small amount of fuel when you select "Reset after refuel", the average fuel consumption value may not be reset.*

**1-driving cycle fuel consumption**




71UM04040

(6) 1-drive cycle fuel consumption

**5-minute average fuel consumption**




71UM04039

(7) 5-minute average fuel consumption

You can check transition of average fuel consumption every 5 minutes from 15 minutes before up to now. Also, you can check transition of average fuel consumption the past 3 driving cycles. Time indication and driving cycle indication can be changed. For details, refer to “Setting mode” in this section.

**Driving range (if equipped)**




71UM04041

(8) Driving range

If you selected driving range the last time you drove the vehicle, the display indicates “---” for a few seconds and then indicates the current driving range when the ignition switch is pushed to “ON” mode.

The driving range shown in the display is an indicative unit of the approximate distance you can drive until the fuel gauge indicates “J”, based on current driving conditions and current fuel level in the fuel tank.

When the low fuel warning light comes on, the display “---” will appear. If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

When you refuel, the driving range is updated. However, if you only add a small amount of fuel, the correct value will not be displayed.

*NOTE:*

- *If you refuel when the ignition mode is “ON”, the driving range may not indicate the correct value.*
- *When you reconnect the negative (–) terminal to the lead-acid battery, the value of driving range will be shown after driving for a period of time.*
- *If there are substantial changes in the driving pattern or vehicle usage, the displayed range may vary significantly.*

**Average speed / 5-minute average speed / driving time**
Average speed from previous reset and 5-minute average speed are shown.

**Average speed**




71UM04034

(9) Average speed

If you selected average speed the last time you drove the vehicle, the display indicates the last value of average speed from previous driving when the power switch is pressed to change the ignition mode to ON. Unless you reset the value of average speed, the display indicates the value of average speed which includes average speed during previous driving.

To reset the value of average speed, press OK switch (2) when the display indicates an average speed. The display resets and then indicates a new average speed after driving for a short time.

*NOTE:*
*When you reconnect the negative (–) terminal to the lead-acid battery, the value of average speed will be shown after driving for a period of time.*

**5-minute average speed**




71UM04035

(10) 5-minute average speed

You can check transition of 5-minute average speed every 5 minutes from 10 minutes before up to now.

**Driving time**




71UM04036

(11) Driving time

Driving time from previous reset is shown. To reset the driving time, change the display of a driving time when the display indicates a driving time. Press OK switch (2). The display resets and then indicates a new driving time after driving for a short time.

*NOTE:*
- *Disconnection of the lead-acid battery negative (-) terminal will reset the indication of the driving time.*
- *The indicated maximum value of driving time is 99:59:59. No more than this value will be indicated on the display until you reset the driving time.*

**Total idling stop time and total idling fuel saved (if equipped)**




71UM04085

(12) Total idling stop time
(13) Total idling fuel saved

The display shows the total length (in hours, minutes and seconds) of engine stopping time and the total amount (in milliliters) of fuel conservation by ENG A-STOP system since the indication was reset.

- To reset the total idling stop time and the total idling fuel saved, press OK switch (2) when the display shows the total idling stop time and the total idling fuel saved.

*NOTE:*

- *The indicated maximum value of the total idling stop time is 99:59:59 and this value is fixed until it is reset.*
- *When you reconnect the negative (–) terminal to the lead-acid battery, the value of the total idling stop time and the total idling fuel saved will be reset.*

**Energy flow indicator (if equipped)**

With the energy flow indicator in the instrument cluster, you can check whether or not the energy flow is functioning.

For details on the status lamp, refer to "Hybrid System (if equipped)" in the "OPERATING YOUR VEHICLE" section.



71UM04042

**Mode ratio and total CNG mode time (if equipped)**

Refer to the CNG supplementary owner's manual

**CNG gauge and total CNG mode time (if equipped)**

Refer to the CNG supplementary owner's manual

**Intersection Guidance (When using Android Auto™*1 or Apple CarPlay*2 on infotainment system**

(For Android Auto)




71UM04058

(For Apple CarPlay)




71UM04059

The display shows the direction of your driving and the distance, working with the infotainment system.

*NOTE:*

- *A slight time lag may occur between the intersection guidance on the information display and the guidance from the infotainment system.*
- *Switch the intersection guidance to ON or OFF while the guidance from the infotainment system is displayed.*
  - *A time lag may occur between ON display and OFF display of the intersection guidance.*
  - *For the functions and operations of the infotainment system, refer to the supplementary manual, provided along with it.*
- *You can display or hide the intersection guidance by changing the setting (customization). For details, refer to "Setting Mode" in this section.*

*1: Android Auto™ may not be available in your country or region.
For details about Android Auto™, refer to http://support.google.com/androidauto

*2: Apple CarPlay may not be available in your country or region.
For details about Apple CarPlay, refer to https://www.apple.com/ios/carplay/

**Warning message display**

When there is any warning or information on your vehicle, the message shows on Display (C), if any.

## Setting Mode

For details on how to use the information display, refer to "Setting mode of information display (Type B)" in "SPECIFICATIONS" section.

**Trip Meter / Odometer**

The display (H) shows the trip meter and the odometer. You can select the trip meter or the odometer.

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.
You can use trip meter A or trip meter B independently.

The odometer records the total distance the vehicle has been driven.


***NOTICE***

**Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.**




76TS40410

You can change the trip meter and the odometer display from the menu bar.After selecting “Odometer / Tripmeter display” on the menu bar, Odometer and trip meter display is shown on Display (C).To reset the trip meter, select trip meter A or trip meter B and then press OK switch until resetting the display.

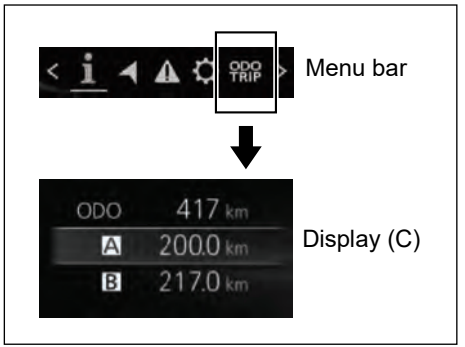


71UM04045

**Information shown after driving**

When you press the power switch to change the ignition mode to “LOCK” (OFF), the following information appears for several seconds on the information display.

(Vehicles with ENG A-STOP system)





71UM04052

(Vehicles without ENG A-STOP system)




71UM04051

**Gear Position**

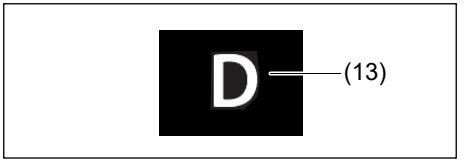



71UM04044

When the power switch is pressed to change the ignition mode to ON, the display (G) indicates the gear position (13).
For details on how to use the transmission, refer to “Using Transmission” in “OPERATING YOUR VEHICLE” section.

**Digital speedometer display**

When selecting the analog speedometer display, You can change ON/OFF of the digital speed display inside the analog speedometer.

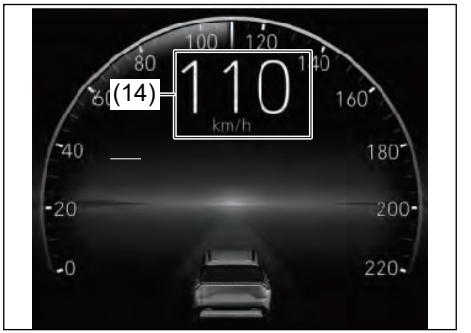



71UM04043

(14) Digital speed display

**Four-mode 4WD system (if equipped)**

The display (H) shows the driving mode. For details on how to use the four-mode 4WD system, refer to “Four-mode 4WD System (if equipped)” in “OPERATING YOUR VEHICLE” section.

**Rear Passenger’s Seat Belt Reminder Light**

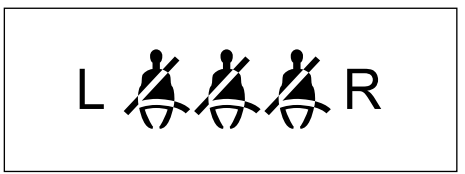


76TS01005

Reminder light for rear passengers to fasten their seat belts. For details of the seat belt reminder, refer to “Seat Belt Reminder” in “FOR SAFE DRIVING” section.

## Warning and Indicator Messages

The display shows warning and indicator messages to let you know about certain vehicle problems.
In some cases, the external or internal buzzer may also sound at the same time to alert you.

If warning and indicator messages appear on the display, follow the messages.

**Master warning indicator light**





68PM00278

When the display shows warning and indicator messages, the master warning indicator light may also blink.

*NOTE:*
- *When the problem that causes a message to appear is corrected, the message will disappear.*
- *If a message is displayed, and other problems requiring a message occur, the message for each of the problems will be alternately displayed about every 5 seconds.*
- *When you press and hold OK switch (2) for a while, the message will disappear.*
- *Unless the message is disappeared on the display, have your vehicle inspected by a Maruti Suzuki authorized workshop for the problems or messages.*

**Warning and indicator messages**

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  71UM04046 | Blinks (only while vehicle is in motion)  | Beep (one time from interior buzzer; only while vehicle is in motion) | A door, tailgate or engine hood is not properly closed. Stop the vehicle in a safe place and close the door, tailgate or engine hood properly. |
|   71UM04080 | Blinks  | Continuous beep (from interior buzzer) | The parking brake is not released. Stop the vehicle in a safe place and release the parking brake. |
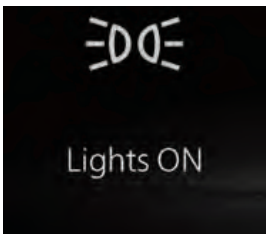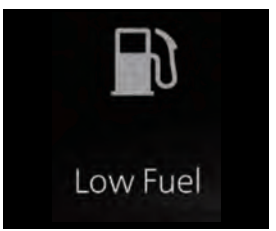
| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  71UM04064 | Blinks  | Continuous beep (from interior buzzer) | The headlights and/or the position lights are left on. Turn them off. |
|  71UM04065 | Off | Beep (one time from interior buzzer) | Fuel level is low. Refill it as soon as possible. (#1) |



(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.


| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>71UM04077 | Off | Beep (one time from interior buzzer) | CNG level is low. Refill CNG Tank as soon as possible. (#1) |
|  <br>71UM04075 | Off | Off | The road may be icy. Drive very carefully. (#1) |

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>71UM04066 | Off | Off | This message is displayed when ACC position is selected as the ignition mode. (#1) |
|  <br>71UM04067 | Off | Off | The brake pedal is depressed. Press the power switch to start Hybrid system. |


(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.
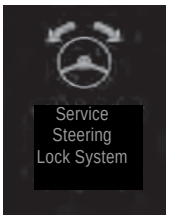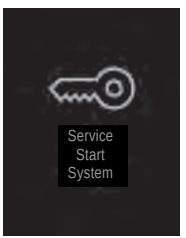
| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>71UM04082 | Blinks<br>  | Beep (one time from interior buzzer) | The steering lock is not disengaged. While lightly turning the steering wheel in both directions, press the power switch again. |
|  <br>71UM04081 | Blinks<br>  | Beep (one time from interior buzzer) | There is a problem with the immobilizer/ keyless push start system. Also, the vehicle battery voltage may be decreased.<br>When the message is displayed even if you start the engine with normal voltage of the vehicle battery, have your vehicle inspected by a Maruti Suzuki authorized workshop. |
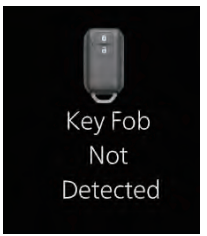
| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>71UM04068<br>  <br>71UM04069 | Blinks<br>  | Series of beeps under certain conditions (for about 2 seconds from exterior and/or interior buzzers) | The remote controller may be outside the vehicle or its battery may be discharged. Bring the remote controller in the vehicle or touch the engine push start switch with the remote controller.<br>If the message still appears, replace the remote controller battery. |

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>71UM04070 | Off | Off | This message is displayed when “ON” position is selected as the ignition mode. (#1) |
|  <br>71UM04076 | Blinks  | Beep (one time from interior buzzer) | The steering lock is not disengaged. While lightly turning the steering wheel in both directions, press the power switch again. |

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.
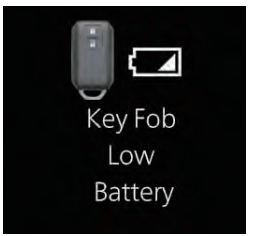
| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>71UM04071 | Off | Off | The remote controller battery is about to become flat. Replace the battery. (#1) |


(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.


| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>71UM04072 | Off | Off | The power switch is pressed with the gear-shift lever in a position other than “P” or “N” or without depressing the brake pedal. Try again as instructed by the message. |
|  <br>71UM04088 | Off | Off | The power switch is pressed with the gear-shift lever in a position other than “P”. Try again as instructed by the message. |


| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>71UM050169 | Blinks<br>  | Beep (one time from interior buzzer) | The transmission fluid temperature becomes too high.<br>Stop the vehicle in a safe place and let the fluid cool down. |


| Warning and indicator | Message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|---|
|  69T040280 | "Vehicle Swaying Detected" (#1) | Off | Short beep (from interior buzzer) | The vehicle swaying warning is activated. Refer to "Vehicle swaying warning" for details. |
|   62R0316 | "Dual Sensor Brake Support System Off" | Off | Beep (one time from interior buzzer) | The Dual Sensor Brake Support II (DSBS II) is turned off. |

#1:The warning message will disappear after a certain period of time, even if the condition is not resolved.
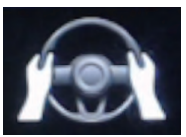
| Warning and indicator | Message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|---|
|  <br>69T040280 | “Keep Control of Steering Wheel” | Blinks<br>  | Beeps at short intervals (from interior buzzer) | The system is detecting that the steering is not held or no steering operation. Hold the steering wheel firmly. |
|  <br>71UM04086<br>Hands are illuminated in white | “Use steering” | | | |
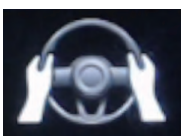
| Warning and indicator | Message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|---|
|  <br>69T040540 | “Keep Control of Steering Wheel” | Blinks<br>  | Off | The lane keep assist system is detecting that the steering is not held or no steering operation. Hold the steering wheel firmly. |
|  <br>71UM04086<br>Hands are illuminated in white | “Use steering” | | | |
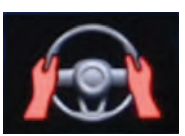
| Warning and indicator | Message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|---|
|  <br>69T040540 | “Keep Control of Steering Wheel” | Blinks<br>  | Beeps at short intervals (from interior buzzer) | The lane keep assist system is detecting that the steering is not held or no steering operation. Hold the steering wheel firmly. |
|  <br>71UM04087<br>Hands are illuminated in red | “Use steering” | | | |
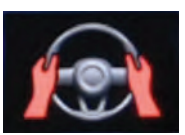
| Warning and indicator | Message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|---|
|  <br>69T040540 | “Unavailable Keep Control Of Steering Wheel” | Blinks<br>  | Continuous beeps (from interior buzzer) | The lane keep assist system is detecting that the steering is not held or no steering operation. Hold the steering wheel firmly. |
|  <br>71UM04087<br>Hands are illuminated in red | “Use steering” | | | |

| Warning and indicator | Message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|---|
|  69T040540 | “LKA System Unavailable at Current Speed” (#1) | Off | Off (#) | The lane keep assist system does not operate because the vehicle speed exceeds the maximum vehicle speed which the lane keep assist system operates. |
|  69T040280 | “LDP System Unavailable at Current Speed” (#1) | Off | Off | The lane departure prevention system does not operate because the vehicle speed exceeds the maximum vehicle speed which the lane departure prevention system operates. |

#: If the vehicle speed exceeds the maximum vehicle speed which the lane keep assist system operates, short beep (from interior buzzer).
#1:The warning message will disappear after a certain period of time, even if the condition is not resolved.

| Warning and indicator | Message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|---|
|  69T040300 | “Accel pressed” “Press Brake” | Blinks | Beeps at short intervals (from interior buzzer) | After the automatic brake system is activated, the system is holding the vehicle in a stopped state. (when the accelerator pedal is depressed) |
| | “Press Brake” | | | After the automatic brake system is activated, the system is holding the vehicle in a stopped state. (when the accelerator pedal is not depressed) |
| | “Accel Pressed” | | | The automatic brake system is activated. (when the accelerator pedal is depressed) |

| Warning and indicator | Message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|---|
| Not displayed | “DSBS II System Stopped” | Blinks  | Short beep (from interior buzzer) | The dual sensor is temporarily stopped. Refer to “Temporary stop of the dual sensor” for details. |
| Not displayed | “F Camera Stopped (Temp)” | | | The front camera (DSBS II) functions is temporarily stopped, because the front camera (DSBS II) itself is in low and high temperature. Refer to “Temporary stop of the dual sensor” for details. |
| Not displayed | “F Camera Stopped (Low Vis)” | | | The front camera (DSBS II) functions is temporarily stopped, because visibility from the front camera (DSBS II) is poor. Refer to “Temporary stop of the dual sensor” for details. |

| Warning and indicator | Message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|---|
| Not displayed | “F Radar Stopped (Temp)” | Blinks  | Short beep (from interior buzzer) | The front radar (DSBS II) functions is temporarily stopped, because the front radar (DSBS II) itself is in low and high temperature. Refer to “Temporary stop of the dual sensor” for details. |
| Not displayed | “Clean External Radar” | Off | Off | The front radar (DSBS II) functions is temporarily stopped, because the surrounding areas of radar is dirty. Refer to “Temporary stop of the dual sensor” for details. |
| Not displayed | “F Radar Stopped (Calib)” | Off | Off | The front radar (DSBS II) functions is temporarily stopped, because the recognition angle of radar is bad. Refer to “Temporary stop of the dual sensor” for details |
| Not displayed | “DSBS II System Disabled” | Blinks  | Short beep (from interior buzzer) | There may be a problem with the dual sensor. If this message is still displayed even when you restart the engine, consult a Maruti Suzuki authorized workshop. |

| Warning and indicator | Message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|---|
|  <br>69T040300 | "Dual Sensor Brake Support" | Blinks<br>  | Beeps at short intervals (from interior buzzer) | The frontal collision warning is activated.<br>Refer to "Frontal collision warning" for details. |
| | | | | The brake assist system is activated.<br>Refer to "Brake assist system" for details. |
| | | | | The automatic brake system is activated.<br>Refer to "Automatic brake system" for details. |
|  <br>69T040310 | "Clean Parking Sensors" | Off | Off | The parking sensor is dirty.<br>Refer to "When the ultrasonic sensor detects any foreign object" for details. |

| Warning and indicator | Message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|---|
|  69T040310 | “Service Parking Sensors” | Blinks  | Off | There may be a problem with the ultrasonic sensors. If this message is still displayed even when you start the engine, consult a Maruti Suzuki authorized workshop. |

| Warning and indicator | Message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|---|
|  71UM04060 | – | Off | Short beeps at long intervals from interior buzzer<br><br>or<br><br>Short beeps at short intervals from interior buzzer | The ultrasonic sensors detect objects.<br>Refer to “Parking Sensors (RPAS+FPAS)” and “Parking Sensors (RPAS)” for details. |
|  71UM04061 | – | Off | Short beeps at very short intervals from interior buzzer | |
|  71UM04062 | – | Off | Continuous beep from interior buzzer | |

**Vehicle with ESP® system**

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
|  <br>71UM04083 | Blinks | Beep (one time from interior buzzer) | There may be a problem with ESP® system.<br>Have your vehicle inspected by a Maruti Suzuki authorized workshop. |
| Hill hold control system<br>  <br>71UM04084 | Blinks | Beep (one time from interior buzzer) | There may be a problem with hill hold control system.<br>Have your vehicle inspected by a Maruti Suzuki authorized workshop. |

**Vehicles with electric parking brake system**

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
| Release Parking Brake | Blinks  | Continuous short beeps | The electric parking brake has not been released. Stop the vehicle in a safe place and release the electric parking brake. |
| Vehicle Might Roll Avoid Steep Slope | Blinks  | Continuous beeps | Since the vehicle may move, promptly depress the brake pedal, and park the vehicle in a place that is not on a steep slope. |
| Frequent Operation Temporarily Disabled | Blinks  | Continuous short beeps | The electric parking brake switch has been operated repeatedly in a short period and cannot operate temporarily. Wait for a while before attempting the operation again. |
| Parking Brake Inspection Required | Blinks  | 1 beep | The electric parking brake malfunction is detected. Consult a Maruti Suzuki authorized workshop for advice. |
| Parking Brake Unavailable | Blinks  | Continuous beeps | The electric parking brake malfunction is detected. Consult a Maruti Suzuki authorized workshop for advice. |
| Parking Brake Auto Activated | Off | 1 beep | The electric parking brake is automatically operated in response to the request from another function (system). |

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
| Parking Brake Shift Synchro Fcn Activated | Off | 1 beep | The electric parking brake system auto mode is ON. |
| Parking Brake Shift Synchro Fcn Deactivated | Off | 1 beep | The electric parking brake system auto mode is OFF. |
| Push Switch While Pressing Brake Pedal | Off | Continuous short beeps | The electric parking brake switch is operated when the brake pedal is not depressed. Operate the electric parking brake switch while depressing the brake pedal. |
| Parking Brake ON (Seatbelt/ Door) | Off | Continuous short beeps | The electric parking brake cannot be automatically released due to the driver's seat belt not being fastened or the driver's door not being closed securely. Make sure you are wearing the seat belt and driver's door is closed, then try again. |
| Brake Hold Inspection Required | Blinks  | 1 beep | The brake hold malfunction is detected. Consult a Maruti Suzuki authorized workshop for advice. |

| Warning and indicator message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|
| Brake Hold Unavailable Steep Slope Keep Braking | Blinks  | Continuous beeps | The brake hold function may not be set due to the vehicle being parked on a steep slope or similar conditions. Avoid parking on a steep slope or take other necessary precautions, then apply the brake hold again. |
| Brake Hold Unavailable (Seatbelt/ Door) | Off | Continuous short beeps | The brake hold system cannot be set due to the driver's seat belt not being fastened or the driver's door not being closed securely. Make sure you are wearing the seat belt and driver's door is closed, then try again. |
| Push Switch While Pressing Brake Pedal | Off | Continuous short beeps | The brake hold switch is operated when the brake pedal is not depressed. Operate the electric parking brake switch while depressing the brake pedal. |


*NOTE:*

- *If your vehicle is equipped with the ENG A-STOP system, the information display also indicates warning and indicator messages related to the system. For information on these messages, refer to "ENG A-STOP System (Engine Auto Stop Start System) (if equipped) (SHVS vehicle)".*
- *If your vehicle is equipped with the Dual Sensor Brake Support II (DSBS II), the information display also indicates warning and indicator messages related to the system. For information on these messages, refer to "Dual Sensor Brake Support II (DSBS II) (if equipped)".*
- *If your vehicle is equipped with the adaptive cruise control, the information display also indicates warning and indicator messages related to the system. For information on these messages, refer to "Adaptive cruise control (with all-speed following and stop keeping function)".*
- *If your vehicle is equipped with the lane departure prevention, the information display also indicates warning and indicator messages related to the system. For information on these messages, refer to "Lane departure prevention system (if equipped)".*
- *If your vehicle is equipped with the Blind Spot Monitor (BSM) or Rear Cross Traffic Alert (RCTA), the information display also indicates warning and indicator messages related to the system. For information on these messages, refer to "Blind Spot Monitor (BSM) (if equipped)" or "Rear Cross Traffic Alert (RCTA) (if equipped)".*
- *If your vehicle is equipped with a parking sensor system, the information display also indicates warning and indicator messages related to the system. For information on these messages, refer to "Parking sensors".*

## Warning and Indicator Lights

*NOTE:*
*If warning and indicator lights blink or come on, the corresponding messages may be shown on the information display.*

### Low Tyre Pressure Warning Light (if equipped)

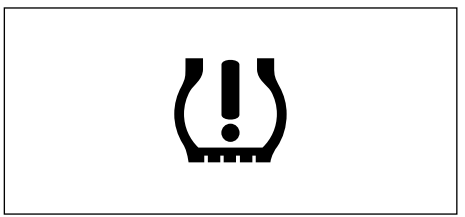

52D305

As an added fuel efficiency feature, your vehicle is equipped with a tyre pressure monitoring system (TPMS) that uses a low tyre pressure warning light to inform you when one or more of your tyres is significantly under-inflated.

When the ignition switch or the power switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working.

When the low tyre pressure warning light is lit, one or more of your tyres is significantly under-inflated. You should stop and check your tyres as soon as possible, and inflate them to the proper pressure as indicated on the vehicle's tyre information placard. Driving on a significantly under-inflated tyre causes the tyre to overheat and can lead to tyre failure. Under-inflation also reduces fuel efficiency and tyre tread life, and may affect the vehicle's handling and stopping ability. Each tyre, including the spare (optional), should be checked at least once a month when cold and set to the recommended inflation pressure as specified in the vehicle placard.

The low tyre pressure warning light is also used to inform you of a TPMS malfunction. When the system detects a malfunction, this light will blink for about 75 seconds and then remain continuously illuminated. This sequence will be repeated after the ignition switch or the power switch is pressed to change the ignition mode to "ON" as long as the malfunction exists.

*NOTE:*
*The low tyre pressure warning light may not come on immediately if you have a sudden loss of air pressure.*

**⚠ WARNING**

**Failure to take corrective action when the low tyre pressure warning light is not working or when it comes on and blinks while driving can lead to an accident.**
**If the low tyre pressure warning light does not come on for 2 seconds after the ignition switch or the power switch is pressed to change the ignition mode to "ON", or comes on and blinks while driving, have your vehicle inspected by a Maruti Suzuki authorized workshop. Even if the light turns off after blinking, indicating that the monitoring system has recovered, you should still have the system checked by a Maruti Suzuki authorized workshop.**

**⚠ WARNING**

**The load-carrying capacity of your tyres is reduced at lower inflation pressures. If your tyres are even moderately under-inflated, the load on the tyres may exceed the load-carrying capacity of the tyres, which could lead to tyre failure. The low tyre pressure warning light will not alert you to this condition, because it only comes on when one or more of your tyres becomes significantly under-inflated.**

**Check and adjust your tyre inflation pressure at least once a month. Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section.**

**⚠ WARNING**

**Continuing to drive with the low tyre pressure warning light on can lead to an accident, resulting in severe injury or death.**

**If the low tyre pressure warning light comes on and stays on, reduce your speed and avoid abrupt steering and braking. Be aware that driving on a significantly under-inflated tyre can cause the tyre to overheat and can lead to tyre failure, and may affect steering control and brake effectiveness. Stop the vehicle in a safe place as soon as possible and check your tyres.**

- **If you have a flat tyre, replace it with the spare tyre (optional). Refer to "Flat tyre repair kit" or "Tyre changing tool. Refer to "Jacking Instructions" in "EMERGENCY SERVICE" section for the tyre replacement method. Also refer to "Replacing tyres and/or wheels" for instructions on how to restore normal operation of the TPMS after you have had a flat tyre. Refer to "Flat tyre repair kit" or "Tyre changing tool.**

(Continued)


**⚠ WARNING**

(Continued)

- **If one or more of your tyres is under-inflated, adjust the inflation pressure of all tyres to the recommended inflation pressure as soon as possible.**

Refer to "Tyre Pressure Monitoring System (TPMS) (if equipped)" in "OPERATING YOUR VEHICLE" section for additional details on the tyre pressure monitoring system. Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section for information on maintaining proper tyre pressure.

### Brake System Warning Light (red color)

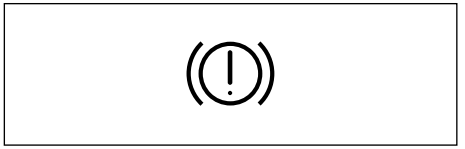

82K170

Three different types of operations exist depending on the vehicle's specification.

1) The light comes on briefly when the ignition switch or the power switch is pressed to change the ignition mode to ON.
2) The light comes on when the parking brake is engaged with the ignition mode ON.
3) The light comes on under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (proportioning valve function) of the ABS system fails.

The light also comes on when the brake system is malfunctioning for the vehicle of M15D engine (hybrid) model.

If the brake system warning light comes on while you are driving the vehicle, it may mean that there is something wrong with the vehicle's brake system. If this happens, you should:

1) Pull off the road and stop carefully.

**⚠ WARNING**

**Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.**

**For the vehicle of the gasoline model**

2) Test the brakes by carefully starting and stopping on the shoulder of the road.
3) If you determine that it is safe, drive the vehicle cautiously at low speed to the nearest Maruti Suzuki authorized workshop for repairs or tow the vehicle to the nearest Maruti Suzuki authorized workshop for repairs.

**For the vehicle of M15D engine (hybrid) model**

2) Continuing to drive the vehicle may be dangerous. Contact a Maruti Suzuki authorized workshop.

**⚠ WARNING**

**If any of the following conditions occur, you should immediately ask your Maruti Suzuki authorized workshop to inspect the brake system.**

- **If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.**
- **If the brake system warning light does not come on when the ignition switch or the power switch is pressed to change the ignition mode to ON.**
- **If the brake system warning light comes on at any time during vehicle operation.**

*NOTE:*
*Because the brake system is self-adjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.*

*NOTE:*
*(Parking Brake Reminder Buzzer)*
*A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.*

### Seat Belt Reminder Light



80J221

When the driver and/or front passenger do(does) not buckle his or her seat belt, this light will come on and/or blink.
For details about the seat belt reminder, refer to “Seat Belt Reminder” in “FOR SAFE DRIVING” section.

*NOTE:*
*Along with the seat belt reminder light, a reminder message shall also come on the information display (if equipped), for unrestrained driver and/or front passenger.*

### Rear Passenger’s Seat Belt Reminder Light




80J224

Reminder light for rear passengers to fasten their seat belts. For details of the seat belt reminder, refer to “Seat Belt Reminder” in “FOR SAFE DRIVING” section.

### Airbag Warning Light



63J030


This light blinks or comes on for several seconds when the ignition switch or the power switch is pressed to change the ignition mode to ON so you can check if the light is working.

The light will come on and stay on if there is a problem in the airbag system or the seat belt pretensioner system.

**⚠ WARNING**

**If the airbag warning light does not blink or come on briefly when the ignition switch is pressed to change the ignition mode to ON, stays on for more than 6 seconds, or comes on while driving, the airbag system or the seat belt pretensioner system may not work properly, which could result in serious injury in the event of a crash. Have both systems inspected by a Maruti Suzuki authorized workshop.**

### Low Fuel Warning Light

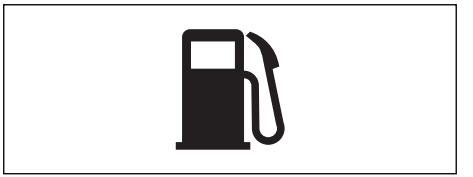


54G343

When the ignition mode or the power switch is ON, this light comes on if the remaining fuel level is about 5.0L or less. If this light comes on, fill the fuel tank immediately.

When this light comes on, a ding sounds once to remind you to fill the fuel.
If you do not fill the fuel, a ding sounds every time when the ignition switch or the power switch is pressed to change the ignition mode to ON.

*NOTE:*
- *The activation point of this light varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.*
- *When this light comes on, low fuel warning message is displayed on the information display.*
  *For details, refer to "Warning and Indicator Messages" in this section.*

## Anti-lock Brake System (ABS) Warning Light

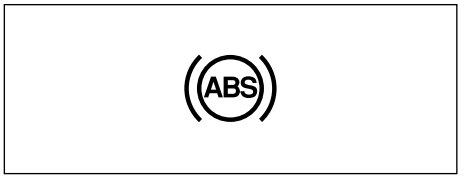


80J127

When the ignition switch or the power switch is pressed to change the ignition mode to ON, the light comes on briefly so you can check that the light is working.
If the light stays on, or comes on when driving, there may be something wrong with the ABS.

If this happens:
1) Pull off the road and stop carefully.
2) Change the ignition mode to LOCK (OFF) by pressing the ignition switch or the power switch and then start the engine again.


If the warning light comes on briefly then turns off, the system is normal. If the warning light still stays on, the system will be something wrong.

If the light and the brake system warning light stay on, or come on simultaneously when driving, your ABS system is equipped with the rear brake force control function (proportioning valve function) and there may be something wrong with both the rear brake force control function and anti-lock function of the ABS system.

If one of these happens, have your vehicle inspected by a Maruti Suzuki authorized workshop.
If the ABS becomes inoperative, the brake system will function as an ordinary brake system that does not have this ABS system.

For details of ABS system, refer to “Anti-lock Brake System (ABS)” in the “OPERATING YOUR VEHICLE” section.

## Engine Coolant Temperature Warning Light (if equipped)

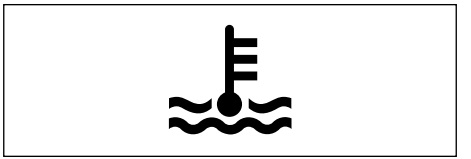

54G344

When the ignition switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working.

This indicator has the following two following functions.


**Low engine coolant temperature light (blue color) (K15C Engine)**
This light stays on while the engine is still cold and goes off when the engine has warmed up.
If this light blinks, there is a problem with the system. Have your vehicle inspected by an authorized Maruti Suzuki workshop.

**High engine coolant temperature warning light (red color)**
If this light blinks while driving, it means the engine is running hot. Avoid driving conditions that may lead to actual overheating. If the light stays on without blinking, then the engine is overheating. Follow the instructions in “Engine Trouble: Overheating” of “EMERGENCY SERVICE” section.

**NOTICE**

**Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.**

## Malfunction Indicator Light

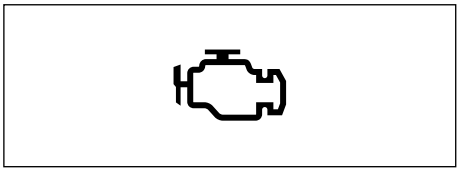

80J222

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument panel to indicate when it is necessary to have the emission control system serviced. The malfunction indicator light comes on when the ignition switch or the power switch is pressed to change the ignition mode to ON to let you know the light is working and goes out when the engine is started.

If the malfunction indicator light comes on or blinks when the engine is running, there is a damage in the emission control system.
Bring the vehicle to a Maruti Suzuki authorized workshop to have the damage fixed.

**⚠ WARNING**


**If this light blinks, stop your vehicle immediately in a safe place to avoid catalyst's melting problem since there may be a misfire in the engine.**
- **Do not drive or stop over such as withered grasses.**

**Drive slowly if required to move the vehicle.**

**NOTICE**

**Continuing to drive the vehicle when the malfunction indicator light is on or blinking can cause permanent damage to the vehicle's emission control system, and can affect fuel economy and driveability.**

## Electric Power Steering Light

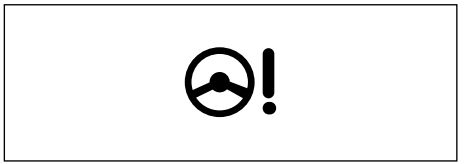

80J408

This light comes on when the ignition switch or the power switch is pressed to change the ignition mode to ON, and goes out when the engine is started or hybrid system is activated.


If this light comes on while driving, the power steering system may not work properly. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

*NOTE:*

- *Following operations of the steering wheel while parking or driving at a very lowspeed may have steering effort bigger gradually. This is not a malfunction of the steering system, but the power steering control system limits the power assist in order to prevent them from overheating.*
  - *– The steering wheel is operated very often.*
  - *– The steering wheel is kept in a fully turned position for a long while.*

  *When the power steering control system cool down, the power steering system back to the original condition.*
  *However, repeating these operations could cause the power steering system damaged.*
- *If the power steering system does not work properly, you will feel heavier to steer but you still will be able to steer.*
- *If the steering is operated, you may hear a noise. This is normal and indicates that the power steering system works properly.*

## Engine Oil Pressure Warning Light

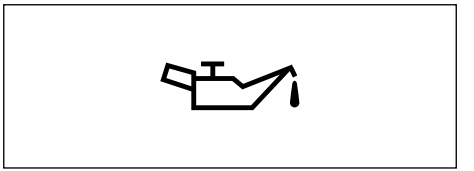


80J223

This light comes on when the ignition switch or the power switch is pressed to change the ignition mode to ON, and goes out when the engine is started or hybrid system is activated. The light will come on and remain on if there is insufficient oil pressure. If the light comes on when driving, pull off the road as soon as you can and stop the engine.
Check the oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by a Maruti Suzuki authorized workshop before you drive the vehicle again.

***NOTICE***

- **If you operate the engine with this light on, severe engine damage can result.**
- **Do not rely on the engine oil pressure warning light to indicate the need to add oil. Be sure to periodically check the engine oil level.**


### Charge Warning Light

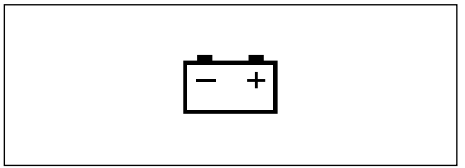

80J226

This light comes on when the ignition switch or the power switch is pressed to change the ignition mode to ON, and goes out when the engine is started or hybrid system is activated. The light will come on and remain on if there is something wrong with the battery charging system. If the light comes on when the engine is running or hybrid system is activated, the charging system should be inspected immediately by a Maruti Suzuki authorized workshop.

### Cruise Control Indicator Light (if equipped)

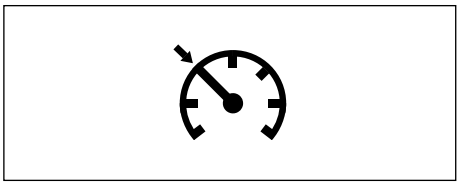

64MM02015

When the cruise control is on, this light will be on.


### "SET" Indicator Light (if equipped)




65D474

When a cruising speed of the cruise control is set, this light will be on.

### Transmission Warning Light (Automatic Transmission models)

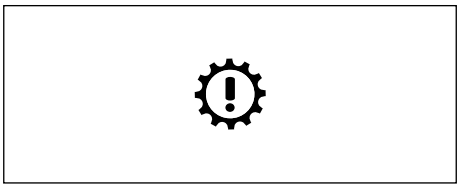


80J219

When the ignition switch is pressed to change the ignition mode to ON, this light comes on for several seconds so you can check that the light is working.

If this light comes on when the ignition switch is pressed to change the ignition mode to ON, there is a problem with the automatic transmission system.
If this light comes on or blinks, stop the vehicle in a safe place and contact a Maruti Suzuki authorized workshop. If the light comes on or blinks again after the light goes out, have the system inspected by a Maruti Suzuki authorized workshop.

### Immobilizer / Keyless Push Start System Warning Light

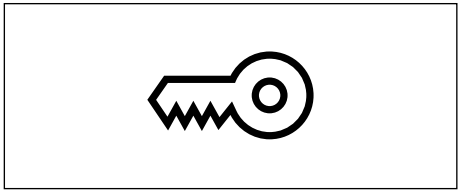


80JM122

When the ignition switch or the power switch is pressed to change the ignition mode to ON, the light comes on briefly so you can check that the light is working.

If this light blinks or stays on, there is a problem with the system.

If this light still blinks or stays on even if you start the engine with normal voltage of the vehicle battery, ask a Maruti Suzuki authorized workshop to have the system inspected.

### Open Door Warning Light

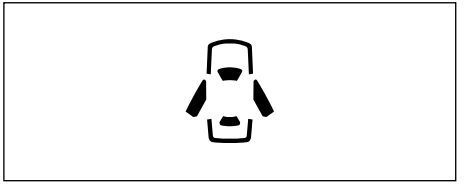


54G391

This light remains on until all doors (including the tailgate) are completely closed.

If any door (including the tailgate) is open when the vehicle is moving, a ding sounds to remind you to close all doors completely.

### Turn Signal Indicators

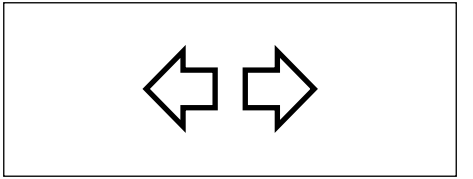


59RN04690

When you turn on the left or right turn signals, the corresponding green arrow on the instrument panel will blink along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will blink along with all of the turn signal lights.

*NOTE:*
*If any abnormality of the turn signals is observed, such as fast blinking, there may be a malfunction in the turn signal system. Ask your Maruti Suzuki authorized workshop to inspect the system.*


### Main Beam (High beam) Indicator Light

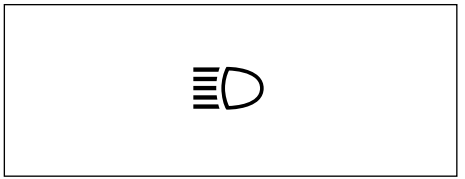

80J212

This indicator comes on when headlight main beams (high beams) are turned on.


### Illumination Indicator Light

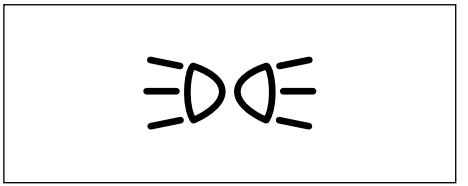

64J045

This indicator light comes on while the position lights, tail light and/or the headlights are on.

### ESP® OFF Indicator Light

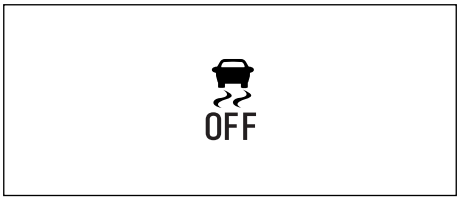


57L30045

When the ignition switch or the power switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working.

When the ESP® OFF switch is pushed to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light comes on and stays on.

For details of the ESP® systems, refer to “Electronic Stability Program (ESP®)” in the “OPERATING YOUR VEHICLE” section.

### ESP® Warning Light



52KM133

ESP® is a registered trademark of Mercedes-Benz Group AG.

This light blinks 5 times per second when one of the ESP® systems other than ABS is activated. If this light blinks, drive carefully.


When the ignition switch or the power switch is pressed to change the ignition mode to ON, the light comes on briefly so you can check that the light is working. If the light stays on, or comes on when driving and remains on, there may be something wrong with the ESP® systems (other than ABS). You should have the system inspected by a Maruti Suzuki authorized workshop.

For details of the ESP® systems, refer to "Electronic Stability Program (ESP®)" in the "OPERATING YOUR VEHICLE" section.

**⚠ WARNING**

**The ESP® systems cannot prevent accidents. Always drive carefully.**

### ENG A-STOP Indicator Light (if equipped)

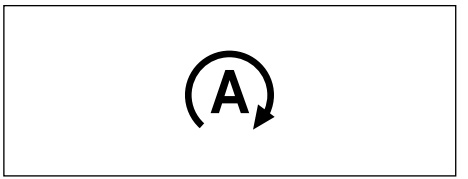



72M00032

When the ignition switch is pressed to change the ignition mode to ON, this light comes on briefly to let you know the light is working.

When the engine stops automatically, this light comes on.

For details, refer to "ENG A-STOP System (Engine Auto Stop Start System) (if equipped)" in the "OPERATING YOUR VEHICLE" section.


### Front Fog Light Indicator Light (if equipped)

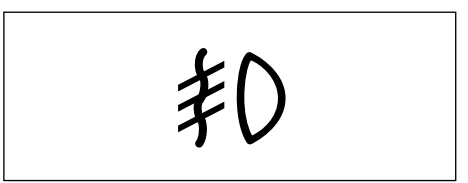

68PM00268

The front fog light indicator light comes on when the front fog light operates.

### ENG A-STOP OFF Indicator Light (if equipped)

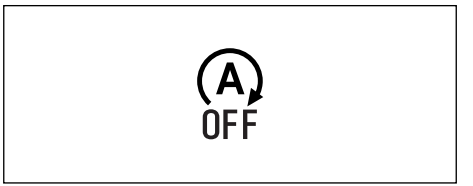


62R0352

When the ignition switch is pressed to change the ignition mode to ON, this light comes on briefly if the system works properly.

When you push the ENG A-STOP OFF switch, this light comes on.

The ENG A-STOP OFF indicator light blinks under the following conditions:

- If there is something wrong with the ENG A-STOP system
- If there is something wrong with the lithium- ion battery
- When the lead-acid battery is due for replacement

If the ENG A-STOP OFF indicator light blinks, have your vehicle inspected immediately by a Maruti Suzuki authorised workshop.
For details, refer to "ENG A-STOP OFF light" in the "OPERATING YOUR VEHICLE" section.

### Master warning indicator light




68PM00278

When the ignition switch is pressed to change the ignition mode to “ON”, this light comes on briefly so you can check that the light is working.

When the information display shows warning and indicator messages, this indicator light may also blink.

For details, refer to “Information display” in this section.

### 4WD indicator light (if equipped)

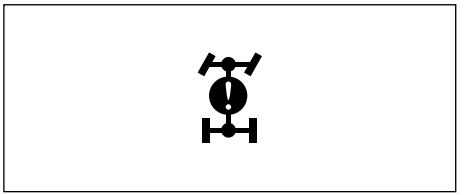


57L30042

When the ignition switch is pressed to change the ignition mode to “ON”, this light comes on briefly so you can check that the light is working.

- This light comes on if there is any problem with the four-mode 4WD system. The system will be deactivated automatically.
- The light blinks if the vehicle is in either of the following conditions, and the system will be deactivated automatically.
  – Wheels of different diameters are fitted to the vehicle.
  – Drive train components overheat as a result of spinning of a drive wheel in mud or snow.

*NOTE:*
*Should the light blink, immediately move the vehicle to a safe place and park it there to protect the drive train components. If you let the engine run at idle for a while except for the case of different sized wheels are fitted, the light will go out and the system will resume.*

### Hill descent control indicator light (if equipped)

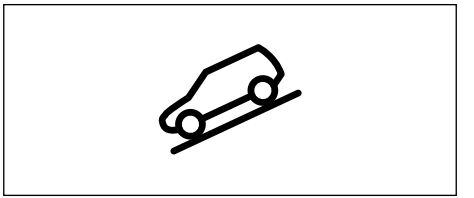


79K050

When the ignition switch is pressed to change the ignition mode to “ON”, this light comes on briefly so you can check that the light is working.

When you push the hill descent control switch and the hill descent control operating conditions are fulfilled, the hill descent control indicator comes on. If the hill descent control indicator blinks, the hill descent control will not be activated.

For details of the hill descent control system, refer to “Hill Hold Control System” in “OPERATING YOUR VEHICLE” section.

### Hybrid system warning light (if equipped)

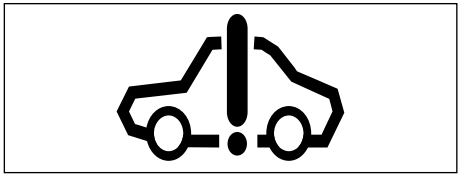

71UM04018

When the power switch is pressed to change the ignition mode to “ON”, this light comes on briefly so you can check that the light is working.


### EV indicator (if equipped)




71UM04073

When the vehicle is driven using the electric motor (traction motor) or the gasoline engine is stopped, this indicator comes on.


### Acoustic Vehicle Alerting System Warning Light (if equipped)

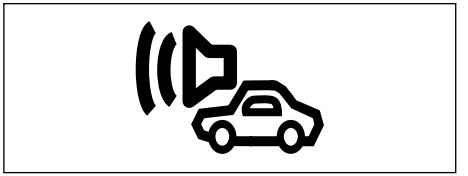

76TS04002

When the power switch is pressed to change the ignition mode to “ON”, this light comes on briefly so you can check that the light is working. If this light blinks, there may be something wrong with the acoustic vehicle alerting system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.


### Power mode (if equipped)

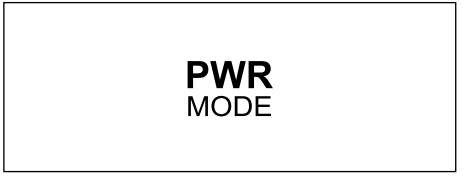


76TS40350

When pushing Drive mode switch and selecting Power mode, quick response and strong acceleration to accelerator pedal can be done and this light comes on.


### ECO mode indicator (if equipped)

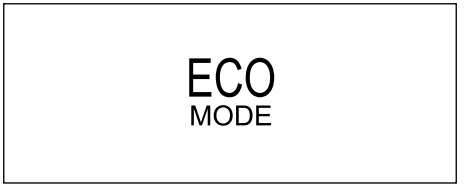


76TS40330

This indicator comes on when the vehicle is driven under ECO mode situation when pushing Drive mode switch and selecting ECO mode


### EV drive mode (if equipped)

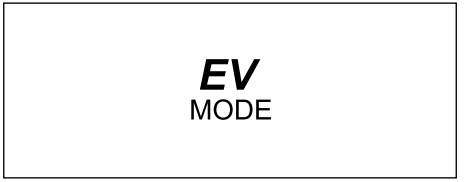


76TS40340

When electric power is supplied by the hybrid battery and electric motor is used only to drive the vehicle, this light comes on.

### Deceleration energy regenerating indicator light (if equipped)

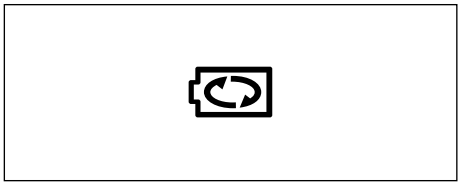

72M00168

When the ignition switch is pressed to change the ignition mode to “ON”, this light comes on briefly so you can check that the light is working.

When the deceleration energy regenerating function is working, this light comes on.

For details, refer to “SHVS (Smart Hybrid Vehicle by Suzuki) (if equipped)” in “OPERATING YOUR VEHICLE” section.


### READY indicator (if equipped)




74SB20206

With the gearshift lever in “P” position and brake pedal depressed, pressing the power switch starts up the hybrid system to be ready to run and this READY indicator comes on.

### High beam assist warning light (yellow) (if equipped)

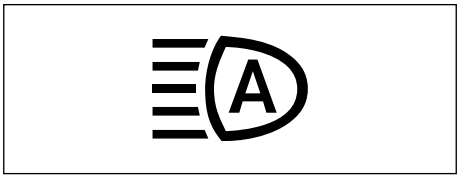


71UM04001


When the engine switch is pressed to change the ignition mode to ON, this light comes on by yellow briefly so you can check that the light is working.

When the high beam assist has failure, this light will come on and the Dual Sensor Brake Support II (DSBS II) will stop functioning when the ignition mode is ON. Ask a Maruti Suzuki authorized workshop to have the dual sensor inspected.

For details, refer to “High beam assist (if equipped)”.

*NOTE:*
*If the function of the dual sensor stops temporarily, high beam assist also stops temporarily.*


### Dual Sensor Brake Support II (DSBS II) indicator light (if equipped)

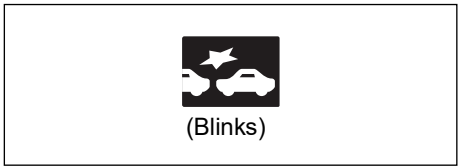


71UM04063

- The light will blink when the brake support by the Dual Sensor Brake Support II (DSBS II) is activated.

### Dual Sensor Brake Support II (DSBS II) OFF indicator light (if equipped)

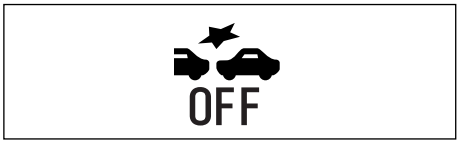



71UM04002

When the engine switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working.

- In the following situations, this light will come on and the Dual Sensor Brake Support II (DSBS II) system will stop functioning.
  - When the Dual Sensor Brake Support II (DSBS II) OFF switch is pushed and held to turn off the Dual Sensor Brake Support II (DSBS II) system.
  - When the ESP® OFF switch is pushed to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light will also come on.
- If this light comes on, there is a problem with the Dual Sensor Brake Support II (DSBS II). Bring the vehicle to a Maruti Suzuki authorized workshop to have the problem corrected.

For details, refer to “Dual Sensor Brake Support II (DSBS II) (if equipped)”.

### Lane departure prevention indicator light (if equipped)

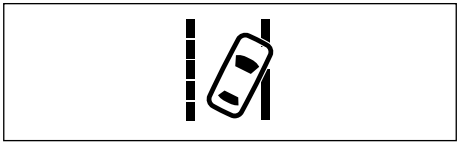

71UM04003

The light will illuminate or blink when the lane departure prevention or lane departure warning is operating. The display color, illumination and blinking state will change depending on the operating status of the system.

- When the lane departure prevention is active, it lights up in green.
- When the lane departure warning is active, it blinks in yellow.
- If there is a malfunction in the system as described below, it lights up in yellow. Bring the vehicle to a Maruti Suzuki authorized workshop to have the problem corrected.

→(P.5-88) Lane departure warning
→(P.5-89) Lane departure prevention
→(P.5-89) Vehicle swaying warning

If the system is functioning normally, the light will illuminate in yellow for a few seconds when the engine switch is pressed to change the ignition mode to ON, and then light off.

### Lane departure prevention OFF indicator light (if equipped)





71UM04004

When the lane departure prevention OFF switch is pressed and held to turn off the lane departure prevention, this light comes on.

For details, refer to "Lane departure prevention OFF switch" (P.5-91).

### Lane keep assist indicator light (if equipped)

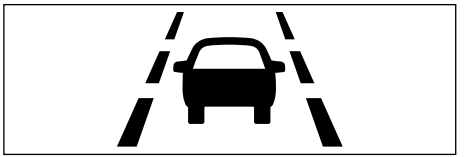

71UM04005


The display color, illumination and blinking state will change depending on the operating status of the lane keep assist.

- When the system is on standby or preparing, it lights up in white.
- When the system is active, it lights up in green.
- If the vehicle deviates from the lane while the system is operating, it will blink yellow.
- If there is a malfunction in the system, it lights up in yellow. Bring the vehicle to a Maruti Suzuki authorized workshop to have the problem corrected.

→(P.5-95) Lane keep assist

If the system is functioning normally, the light will illuminate in yellow for a few seconds when the engine switch is pressed to change the ignition mode to ON, and then light off.

### High beam assist indicator light (green) (if equipped)

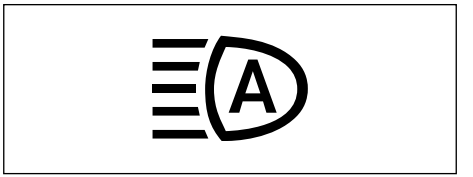



71UM04001

When the high beam assist is working, this light comes on by green.

For details, refer to “High beam assist (if equipped)”.

### Adaptive cruise control indicator light (if equipped)

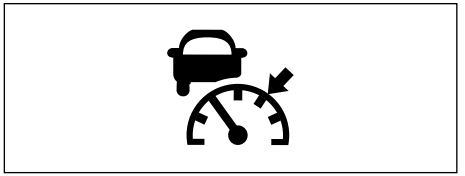


71UM04006

The indicator color and coming on status change depending on the operating status of systems.

- When the adaptive cruise control is in standby condition, this light comes on in white.
- When the adaptive cruise control is active condition, this light comes on in green.
- When the adaptive cruise control malfunctions, this light comes on in yellow. Bring the vehicle to a Maruti Suzuki authorized workshop to have the problem corrected.

### Blind Spot Monitor (BSM) OFF indicator light (if equipped)

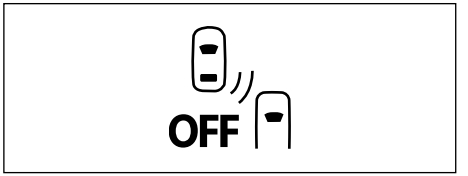



71UM04007

When the engine switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working.

When the blind spot monitor (BSM) to turn off using the settings mode of the information display, this light comes on.

- When the BSM is stopped, the blind spot monitor OFF indicator light and rear cross traffic alert OFF indicator light come on.

### Rear Cross Traffic Alert (RCTA) OFF indicator light (if equipped)

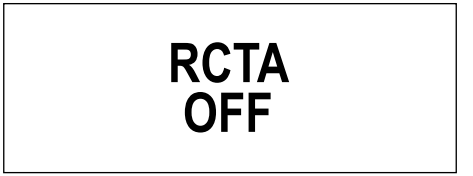


71UM04008

When the the engine switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working.

When the rear cross traffic alert (RCTA) to turn off using the settings mode of the information display, this light comes on.

### Parking sensor indicator light



71UM04009

When the engine switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working.

When the rear parking sensors is activated and then detected obstacles, this light blinks.

If this light comes on, there is a problem with the parking sensors. Bring the vehicle to a Maruti Suzuki authorized workshop to have the problem corrected.

For details, refer to “Parking sensors”.

### Steering assist indicator light (if equipped)



69T010150


The light will illuminate when the lane departure prevention or lane keeping assist is active.
The display color and illumination state will change depending on the operating status of the system.

- When the lane keep assist is on standby, it illuminates in white.
- When the lane keep assist or lane departure prevention is active, it illuminates in green.
- Even if lane keep assist is turned ON, the indicator will turn off when there is a system failure or when the system is preparing.
  Bring the vehicle to a Maruti Suzuki authorized workshop to have the problem corrected.

→(P.5-89) Lane departure prevention
→(P.5-95) Lane keep assist

If the system is functioning normally, the light will illuminate in white for a few seconds when the engine switch is pressed to change the ignition mode to ON, and then light off.


### Electric parking brake operation indicator light (if equipped)

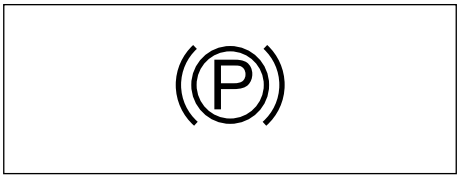

71UM04015

- This indicator comes on when the electric parking brake is engaged.
- This indicator blinks when the electric parking brake system is malfunctioning.
- When the electric parking brake is functioning normally, the indicator comes on for several seconds when pressing the engine switch to change the ignition mode to ON, and the indicator continues as follows.
  – When the electric parking brake is ON, the indicator continues to stay illuminated.
  – When the electric parking brake is released, the indicator turns off.

### Brake Hold Standby Indicator Light (white color) (if equipped)

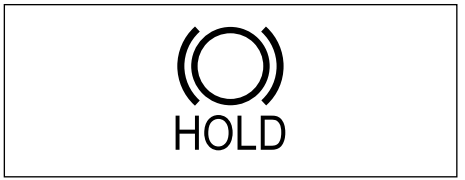



71UM04016

This indicator comes on when the brake hold operational conditions (standby conditions) are met.

**Vehicles with Instrument Cluster Type A**
When the brake hold system is functioning normally, the indicator comes on for few seconds when pressing the engine switch to change the ignition mode to ON, then goes off.


### Brake Hold Operation Indicator Light (green color) (if equipped)

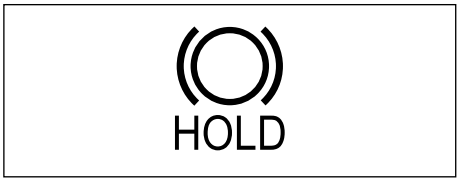


71UM04016


- This indicator comes on when the brake hold system is operating.
- When the brake hold system is functioning normally, the indicator comes on for several seconds when pressing the engine switch to change the ignition mode to ON, then goes off.

### Brake System Warning Light (yellow color) (if equipped)

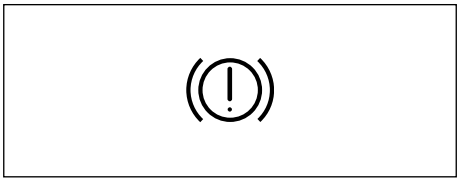

82K170

- When the power switch is pressed to change the ignition mode to “ON”, this light comes on briefly so you can check that the light is working.
- If the light stays on or comes on when driving, there may be something wrong with any of the below systems:
  – Regenerative brake function
  – Hill hold control system
  – Electric parking brake system
- If the light comes on temporarily while driving but then goes off and does not come back on, it is normal.

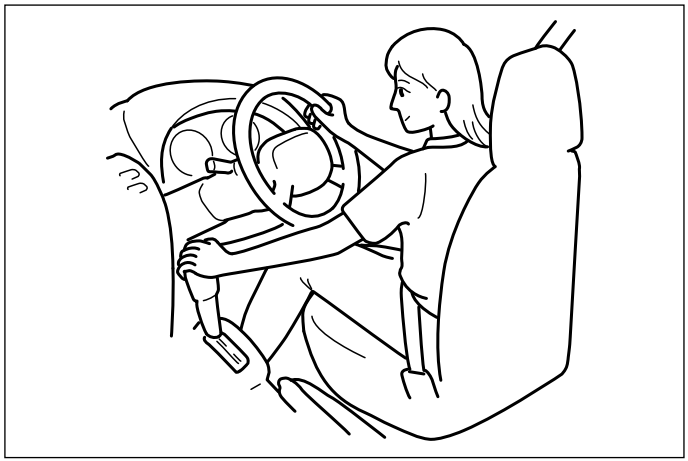

59RN05760

# OPERATING YOUR VEHICLE


Daily Inspection Checklist ..... 5-1
Engine Switch / Power Switch ..... 5-3
Immobilizer System ..... 5-6
Pedal ..... 5-7
Keyless Push Start System ..... 5-8
Starting / Stopping Engine or Hybrid System ..... 5-13
Parking Brake Lever (if equipped) ..... 5-20
Electric Parking Brake (if equipped) ..... 5-22
Precaution for Parking ..... 5-26
Using Transmission ..... 5-30
Gearshift Indicator (if equipped) ..... 5-39
SHVS (Smart Hybrid Vehicle by Suzuki) (if equipped) ..... 5-40
Hybrid System (if equipped) ..... 5-44
Acoustic Vehicle Alerting System (if equipped) ..... 5-46
ENG A-STOP System (Engine Auto Stop Start System) (if equipped) ..... 5-47
Driving Mode (if equipped) ..... 5-61
Four-mode 4WD System (if equipped) ..... 5-63
SUZUKI SAFETY SUPPORT (if equipped) ..... 5-69
Cruise Control (if equipped) ..... 5-102
Rearview Camera (if equipped) ..... 5-173
Electronic Stability Program (ESP®) ..... 5-178
Braking ..... 5-185
Anti-lock Brake System (ABS) ..... 5-186
Tyre Pressure Monitoring System (TPMS) (if equipped) ..... 5-191

## Daily Inspection Checklist

### Before Driving

**⚠ WARNING**

**If the vehicle is damaged, or if a warning light or buzzer indicates an abnormality, ask a MARUTI SUZUK authorized workshop to have your vehicle inspected and repaired immediately before driving. Continued operation in this condition may result in vehicle fire or serious malfunction.**

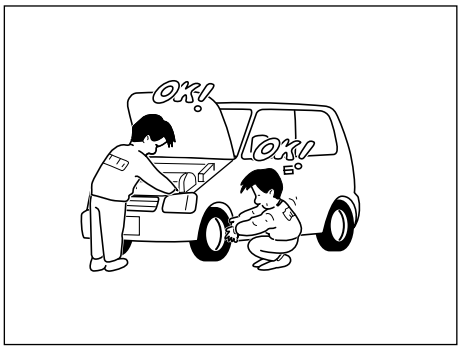


59RN05750

1) Check that the windows, mirrors, lights and reflectors are clean and unobstructed.
2) Visually check the tyres for the following points:
   – the depth of the tread groove
   – abnormal wear, cracks and damage
   – loose wheel nuts
   – existence of foreign material such as nails, stones, etc.

   Refer to “Tyres” in “INSPECTION AND MAINTENANCE” section for details.
3) Look for fluid and oil leakage.

*NOTE:*
*It is normal for water to drip from the air conditioning system while and after use.*

4) Check that the hood is fully closed and latched.
5) Check the headlights, turn signal lights, brake lights and horn for proper operation.
6) Adjust the seat and head restraint.
7) Check the brake pedal feeling and the adjustment condition for the parking brake lever (if equipped).
   Refer to “Brakes” in “INSPECTION AND MAINTENANCE” section for details.
8) Adjust the mirrors.
9) Check that you and all the passengers have properly fastened the seat belts.
10) Check that all the warning lights come on as the engine switch is pressed to change the ignition mode to ON.
11) Check all the gauges.
12) Check that the brake system warning light (if parking lever equipped) or Parking brake operation indicator light (for EPB equipped) turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank, or before a long distance driving (like highway driving) perform the following under-hood checks:

1) Engine oil level
2) Coolant level
3) Brake fluid level
4) Battery fluid (acid) level
5) Windshield washer fluid level
6) Hood latch operation
   Pull the hood release lever inside the vehicle. Check that you cannot open the hood further without releasing the secondary latch. Close the hood securely after checking for proper latch operation. See the item “All latches, hinges and locks” of “Chassis, body and others” in “Maintenance Schedule” in “INSPECTION AND MAINTENANCE” section for lubrication schedule.

**⚠ WARNING**


**Check that the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.**

Once a month, or each time you fill your fuel tank, check the tyre pressure using a tyre pressure gauge. Also check the tyre pressure of the spare tyre (optional).

### Inspection of the engine compartment

When the vehicle has not been used for a long period of time, check that there are no nests or twigs etc., (combustibles or objects that interfere with the operation of the cooling fan (radiator fan)) brought by small animals in the engine compartment. Failure to do so may result in vehicle fire or serious malfunction.

### When You Notice the Following Symptoms

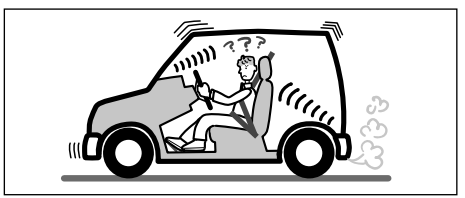


80J009

**⚠ CAUTION**

**If you keep using your vehicle in the following conditions, malfunction and an accident may occur. Consult a Maruti Suzuki authorized workshop.**

- **Leaked oil or other liquid appears on the ground below the vehicle.**
- **Brake fluid level is low.**
- **There are unusual odors, sounds or vibrations.**
- **The feeling of operating the steering wheel or the brakes is different than usual.**

### Check the Tyre Pressure

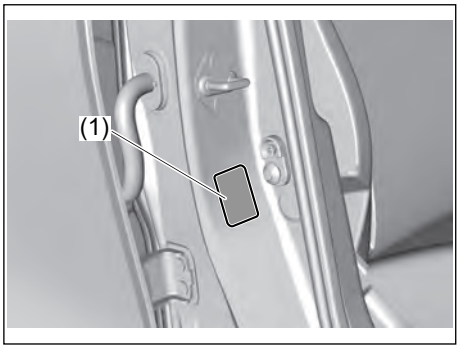



55T090020

- Periodically check and adjust the tyre pressure. The specified tyre pressure for the tyres of this vehicle can be confirmed by checking the tyre information label (1) affixed to the opening of the driver's door.
- Driving with insufficient tyre pressure can cause the sides of the tyre to wear, in addition to decreasing fuel efficiency.

**⚠ WARNING**

- **Driving with extremely low tyre pressure can cause a tyre blowout (bursting) and may result in an accident. Do not drive with extremely low tyre pressure.**

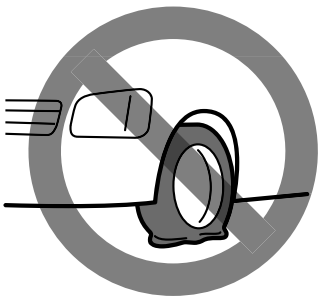

69RHS173

- **If the specified tyre pressure is not maintained, the full performance of the vehicle cannot be achieved and the following could occur, leading to accidents or malfunctions.**
  **Adjust the tyre pressure as specified.**
  **– Decreased driving stability**
  **– Longer distance required for braking**

(Continued)

**⚠ WARNING**


(Continued)

**– Accurate tyre rotation speed cannot be detected, which interferes with the following functions:**
- **Anti-lock Brake System (ABS)**
- **Emergency Stop Signal (ESS)**
- **Electronic stability program (ESP®)**
- **Some functions of Dual Sensor Brake Support II (DSBS II) (if equipped)**

**For details, refer to "If accurate tyre rotation speed cannot be detected"**

To adjust the tyre pressure, refer to "Tyres" in "INSPECTION AND MAINTENANCE" section.

### Check the Exhaust Pipe

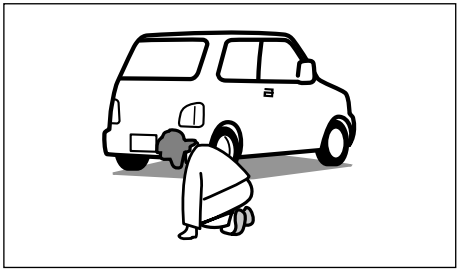

80J011

Periodically check the exhaust pipes for holes or cracks.

**⚠ WARNING**

**If leaks in exhaust pipes are present, exhaust gas could enter the vehicle and possibly cause carbon monoxide poisoning. If you feel that something is abnormal, consult a Maruti Suzuki authorized workshop.**

## Engine Switch / Power Switch

**The vehicle without the hybrid system**




71UM05088

**The vehicle with the hybrid system**




71UM050191

**LOCK (OFF)**
This mode is for parking the vehicle. When this mode is selected by pressing the engine switch or the power switch and then any door (including the tailgate) is opened or closed, the steering will be locked automatically.

*NOTE:*
*For the vehicle with the hybrid system:*
*If the shift lever is in a position other than P when turning off the hybrid system, the power switch will be remained to ON, not to off.*

**ACC**
Press the engine switch or the power switch to select this ignition mode to use such electric equipment as the audio system, outside rearview mirrors and accessory socket with the engine or the hybrid system off. When this position is selected, the information display in the instrument cluster shows the following message.




71UM050136

**ON**

- **With the engine or the hybrid system off**
  You can use such electric equipment as the power windows and wipers with the engine or the hybrid system off. When this ignition mode is selected by pressing the engine switch or the power switch, the information display in the instrument cluster shows the following message.




71UM050137

- **With the engine or the hybrid system on**
  All electric equipment is operational. The vehicle can be driven when you have selected this ignition mode by pressing the engine switch or the power switch.

**START**

**Manual transmission vehicles:**

Provided you have the keyless push start system remote controller with you, the engine automatically starts when you press the engine switch to select this ignition mode after shifting to “N” (Neutral) and depressing the brake and clutch pedals.

**Automatic transmission vehicles / e-CVT vehicles:**

Provided you have the keyless push start system remote controller with you, the engine or the hybrid system automatically starts when you press the engine switch or the power switch to select this ignition mode after placing the gearshift lever in “P” (Park) position and depressing the brake pedal. (If you need to restart the engine or the hybrid system while the vehicle is moving, shift into “N”.)

***NOTICE***

**Do not leave the engine switch or the power switch in ACC or ON mode when the engine is not running or the hybrid system is not operating. Avoid using the radio or other electric accessories for a long time when the engine switch or the power switch is in ACC or ON mode when the engine is not running or the hybrid system is not operating, otherwise the lead-acid battery may discharge.**

*NOTE:*

- *The steering will be unlocked when you press the engine switch or the hybrid system to change the ignition mode from LOCK (OFF) to ACC or ON.*
- *You do not need to keep the engine switch or the hybrid system pressed until the engine or the hybrid system starts.*
- *In the presence of strong radio wave or noise, you may not be able to change the ignition mode to ACC or ON or to start the engine or the hybrid system using the engine switch or the power switch. In this case, the information display in the instrument cluster will show the following message.*




71UM050138

## Unreleased Steering Lock Warning

If the steering lock remains engaged when you press the engine switch or the power switch to change the ignition mode to ON, the information display in the instrument cluster shows the following message and you cannot start the engine or the hybrid system. If this happens, press the engine switch or the power switch, turning the steering wheel to right or left.




71UM050162




71UM05064

*NOTE:*

- *The steering lock may not be released and the immobilizer/keyless push start system warning light turns on if some load is applied on the steering wheel. If this happens, turn the steering wheel system to the right or left to relieve it from the load before you press the engine switch or the power switch again to change to the desired ignition mode.*
- *For the vehicle with the hybrid system: To prevent the steering lock motor from overheating, the motor may be suspended if the hybrid system is turned on and off repeatedly in a short period of time. In this case, refrain from operating the power switch. After about 10 seconds, the steering lock motor will resume functioning.*

## Immobilizer System

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system or the hybrid system.
The engine or the hybrid system can be started only with your vehicle's original keyless push start system remote controller, which has an electronic identification code programmed in it. The remote controller communicates the identification code to the vehicle when the engine switch or the power switch is pressed to change the ignition mode to ON. If you need to make spare remote controllers, consult a Maruti Suzuki authorized workshop.The vehicle must be programmed with the correct identification code for the spare remote controllers.


In the case you can start the engine or the hybrid system, when press the engine switch or the power switch to change the ignition mode to ON, the immobilizer system will be released and the immobilizer/keyless push start system warning light will turn on for about 2 seconds and then it will turn off.

When you press the engine switch or the power switch to change the ignition mode to LOCK (OFF), the immobilizer system will operate.

| *NOTICE* |
| --- |
| **If the immobilizer system is modified or removed, it cannot be properly operated. Do not modify or remove the immobilizer system.** |

*NOTE:*
*This immobilizer system is maintenance-free.*

### Immobilizer / Keyless Push Start System Warning Light

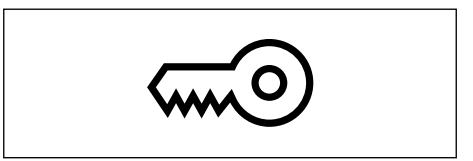

80JM122

This light will be shown on the instrument cluster.

- If there is abnormality on the immobilizer system or the keyless push start system, this light will turn on with the engine switch or the power switch in ON mode.

- If this light blinks or turns on for about 5 seconds, you may not be able to start the engine or the hybrid system. Check the position of the keyless push start system remote controller, change the ignition mode to LOCK (OFF), and then change it back to ON. Also, refer to “If the master warning indicator light blinks and the engine or the hybrid system cannot be started” in “Starting Engine” in this section.
- This light will blink when the remote controller outside warning operates as well. Refer to “Remote Controller Outside Warning” in this section.


| *NOTICE* |
| --- |
| **The remote controller is sensitive electronic instrument. To avoid damaging it:**<br>**• Do not expose it to impacts, moisture or high temperature such as on the dashboard under direct sunlight.**<br>**• Keep it away from magnetic objects.** |

*NOTE:*

- *If you lose your remote controller, ask your Maruti Suzuki authorized workshop as soon as possible to deactivate the lost one, and to make a new remote controller.*
- *If you own other vehicles with immobilizer keys, keep those keys away from the engine switch or the power switch when using your Maruti Suzuki vehicle. Otherwise, the engine or the hybrid system may not be started because they may interfere with your Maruti Suzuki vehicle’s immobilizer system.*
- *If you attach any metal objects to the remote controller, it may not start the engine.*


## Pedal

**Manual transmission**

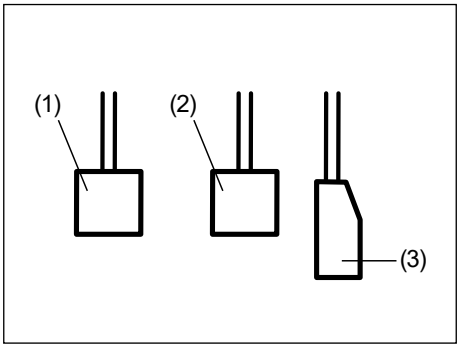


80J2121

**Automatic transmission / e-CVT**

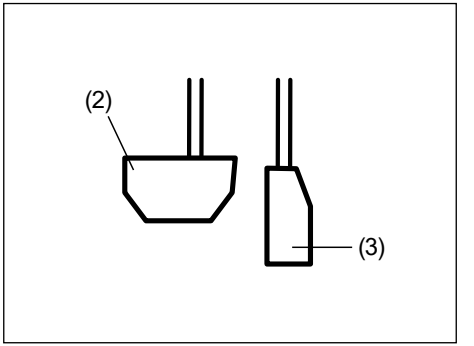


80J2122

### Clutch Pedal (1)

A clutch pedal is used to disengage the driving force to the wheels when starting the engine, stopping, or shifting the gearshift lever. Depressing the pedal disengages the clutch.

**⚠ WARNING**

**Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.**

### Brake Pedal (2)

Your vehicle is equipped with either front and rear disc brakes or front disc brakes and rear drum brakes. Depressing a brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as temperature, humidity, snow or dust, etc.

*NOTE:*
*Automatic transmission - You may hear occasional sound when you release brake pedal while vehicle is in "D" (Drive) mode and about to move. This is a normal phenomenon.*

**⚠ WARNING**

- **If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by a Maruti Suzuki authorized workshop.**
- **Do not apply brakes continuously or rest your foot on the brake pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.**

### Accelerator Pedal (3)


An accelerator pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.

*NOTE:*
*Your vehicle is equipped with Brake Override System. If you depress both the accelerator pedal and the brake pedal simultaneously, the engine power output / the hybrid system output may be suppressed.*

## Keyless Push Start System

Provided the keyless push start system remote controller is within the interior workable area, you can use the engine switch for starting the engine or the hybrid system and selecting an ignition mode (ACC or ON). In addition, the following functions can be used:

- Keyless entry function. Refer to “Keyless Push Start System Remote Controller” in “BEFORE DRIVING” section for details.
- Locking and unlocking doors (including the tailgate) using a request switch. Refer to “Keyless Push Start System Remote Controller” in “BEFORE DRIVING” section for details.
- Immobilizer (anti-theft) function. Refer to “Immobilizer System” in this section for details.

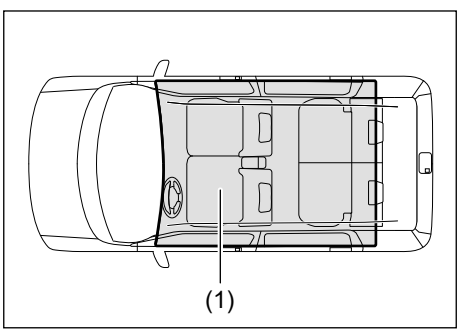


55T050230

(1) Interior workable area

The interior workable area is defined as all the interior spaces except for the space on the instrument panel or in the luggage compartment.

*NOTE:*


- *Even when the remote controller is in the interior workable area, if it is in any of the following conditions, you may not be able to start the engine or the hybrid system or to select the ignition modes, and the remote controller outside warning may be given.*
  - *–The remote controller's battery is low.*
  - *–The remote controller is affected by strong radio wave or noise.*
  - *–The remote controller is in contact with or covered by a metallic object.*
  - *–The remote controller is in the secluded stowages such as the glove box or a door pocket.*
  - *–The remote controller is in the sun visor pocket or on the floor.*
- *Even when the remote controller is outside the interior workable area, if it is in any of the following conditions, you may be able to start the engine or the hybrid system or to select the ignition mode. The remote controller outside warning may not be given at that time.*
  - *–The remote controller is outside the vehicle but very close to a door.*
  - *–The remote controller is on the instrument panel.*
- *If the remote controller is located in the following places in the vehicle, the remote controller may be detected and the request switch may be activated depending on the radio wave condition, there is a risk of that the remote controller may be trapped inside the vehicle.*
  - *– On the instrument panel*
  - *– Floor*
  - *– Luggage compartment*
  - *– Deep in storage compartments such as the glove box or a door pocket, etc.*
  - *–>Refer "Storage Area" in "OTHER CONTROLS AND EQUIPMENT" section.*

## Engine Switch Illumination / Power Switch Illumination

The engine switch or the power switch is illuminated (lit) in the following situations:


- When the engine is off and the driver's door is open, or for 15 seconds after the driver's door is closed. The illumination will fade out after 15 seconds passed.
- While the headlights and/or the position lights are on, the illumination will turn on. The illumination will go out when the headlights and the position lights are turned off.

**The vehicle without the hybrid system**

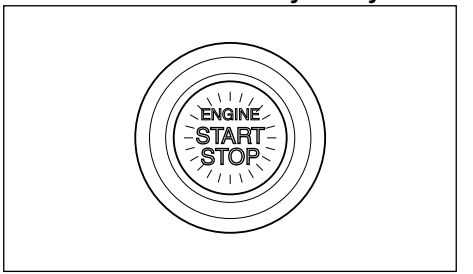


82K253

**The vehicle with the hybrid system**

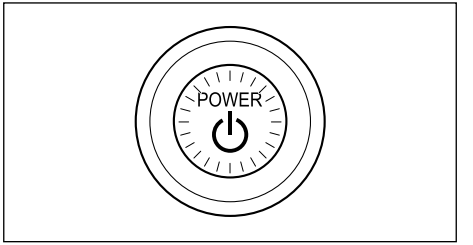


76TS50940

*NOTE:*

*To save the lead-acid battery, the illumination will be automatically turned off when both of the following conditions are simultaneously met:*

- *The headlights and the position lights are turned off.*
- *15 minutes has elapsed since opening the driver's door.*


## Selection of Ignition Modes

Press the engine switch or the power switch to select ACC or ON mode as follows when you use an electric accessory or check the operation of instrument cluster without running the engine.

*NOTE:*
*When selecting the ignition modes, the information display in the instrument cluster show certain messages. Refer to "Information Display" in the "INSTRUMENT CLUSTER" section.*


1) Bring the keyless push start system remote controller with you and sit in the driver's seat.

**The vehicle without the hybrid system**

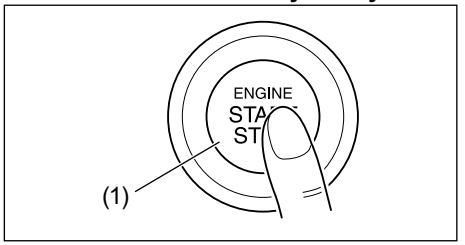


82K254


**The vehicle with the hybrid system**

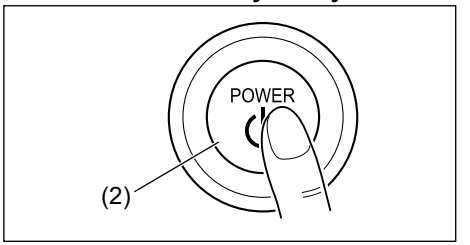


76TS50950


2) Manual transmission – Without depressing the clutch pedal, press the engine switch (1).
Automatic transmission / e-CVT – Without depressing the brake pedal, press the engine switch (1) or the power switch (2).
Every time you press the engine switch or the power switch, the ignition mode changes as follows.

**Manual transmission**

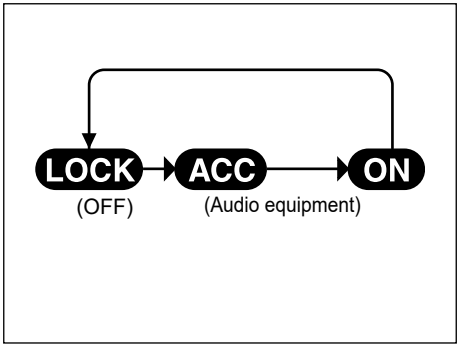


68PH00322

**Automatic transmission / e-CVT**

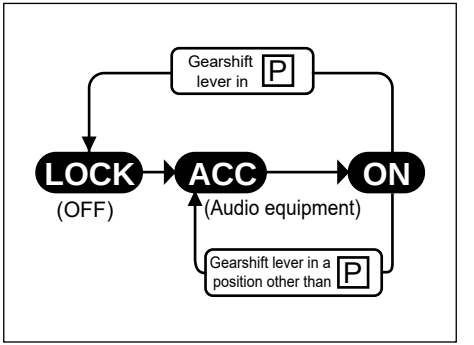



57L31006

*NOTE:*
- *Automatic transmission / e-CVT – If the gearshift lever is in any position other than "P", or if the knob button is pushed when the gearshift lever is in "P" position, the ignition mode cannot be returned to LOCK (OFF).*
- *If the gearshift lever has malfunction, you may not return the ignition mode to LOCK (OFF). Refer to "Returning Ignition Mode to LOCK (OFF)" in this section for details.*

**If the master warning indicator light ⚠ blinks and the ignition modes cannot be selected**

Your keyless push start system remote controller may not be sensed as being within the interior workable area (refer to the related explanation in this section). Try again after checking that you have the remote controller with you. If the ignition modes still cannot be selected, the battery of the remote controller may be discharged. To select an ignition mode, you must then use the following method:

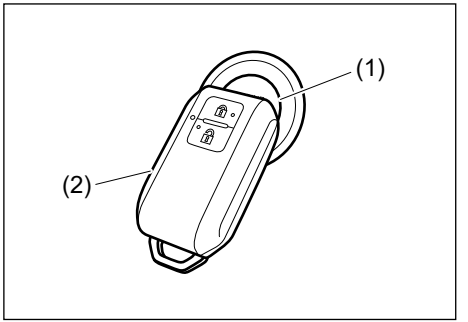


76TS50930

1) Manual transmission – Without depressing the clutch pedal, push the engine switch (1).
   Automatic transmission / e-CVT – Without depressing the brake pedal, press the engine switch or the power switch (1).
2) Within about 10 seconds while the master warning indicator light blinks and the information display in the instrument cluster shows the following message, touch the engine switch or the power switch with the lock switch end of the remote controller (2) for about 2 seconds.




71UM050134

While the master warning indicator light blinks, the immobilizer/keyless push system warning light will come on for about 5 seconds.

If you still cannot select the ignition modes, there may be the other problem such as the discharged lead-acid battery. In this case, consult a Maruti Suzuki authorized workshop.

*NOTE:*
- *You may customize the system to cause the interior buzzer to sound once for warning that remote controller is out of sensing range. For this customization, consult a Maruti Suzuki authorized workshop.*
- *If the battery of the remote controller is almost discharged, the information display in the instrument cluster shows the following message when you press the engine switch or the power switch to change the ignition mode to ON. Refer to "Information Display" in "INSTRUMENT CLUSTER" section for details. For details on replacing the battery, refer to "Keyless Push Start System Remote Controller" in "BEFORE DRIVING" section.*





71UM050135

## Remote Controller Outside Warning

When either of the following conditions is met, the system causes the remote controller outside warning by sounding the interior and exterior buzzers. At the same time, the immobilizer/keyless push start system warning light comes on, the master warning indicator light blinks and the information display in the instrument cluster will show the corresponding message.

- Any door is opened and then closed while the remote controller is not inside the vehicle and the engine is running (the hybrid system is operating) or the ignition mode has been changed to ACC or ON by pressing the engine switch or the power switch.
- The remote controller is not inside the vehicle when you attempt to start the engine or the hybrid system after changing the ignition mode to ACC or ON by pressing the engine switch or the power switch.

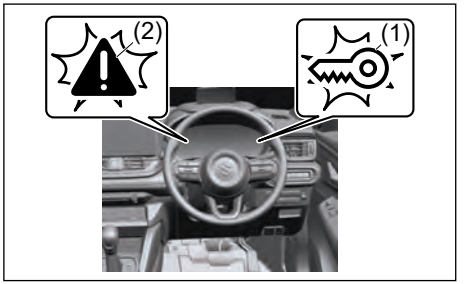


71UM05065

(1) Immobilizer/keyless push start system warning light (blinks)
(2) Master warning indicator light (blinks)


If the warning is given, place the remote controller inside the vehicle as soon as possible.
- Any attempt to start the engine or the hybrid system will fail while the warning is active. The message appearing in the information display in the instrument cluster will also indicate this condition. Refer to "Information Display" in the "INSTRUMENT CLUSTER" section for details.
- Normally, the immobilizer/keyless push start system warning light should go out and the master warning indicator light should stop blinking shortly after the remote controller is brought back inside the vehicle. If they remain lit and blinking, change the ignition mode to LOCK (OFF) by pressing the engine switch or the power switch and then perform the engine starting operation or the strong hybrid starting operation. Refer to "Starting / Stopping Engine or Hybrid System" in this section.

*NOTE:*
*Always keep the remote controller with you as the driver.*

# Starting / Stopping Engine or Hybrid System


## Starting Engine or Hybrid System

### Manual Transmission model

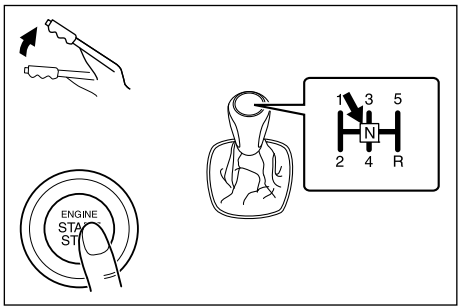



71UM050113

### Automatic Transmission model

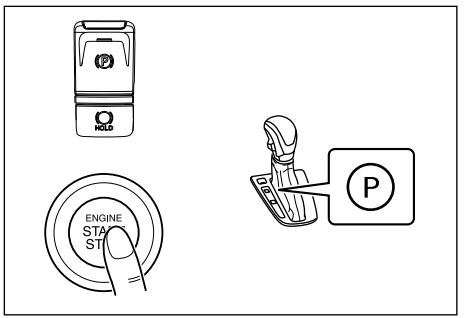


71UM050114


### e-CVT model

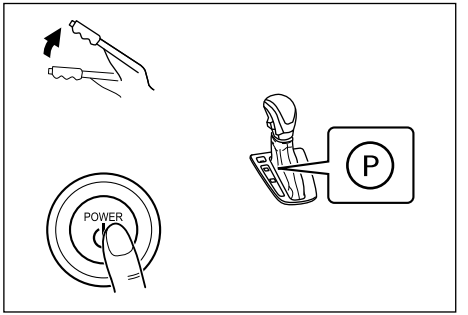


76TS50960

1) Check that the parking brake is set fully.
2) Turn off such loads as the headlights and air conditioning system to facilitate starting of the engine or the hybrid system.
3) Manual transmission vehicles:
   Shift into “N” (Neutral). Hold the clutch pedal and brake pedal fully depressed.
   Automatic transmission vehicles / e-CVT vehicles:
   If the gearshift lever is not in “P” (Park) position, shift into “P” (Park). Hold the brake pedal fully depressed.
4) The “PUSH START SWITCH” message will appear in the information display in the instrument cluster.

### Vehicles with electric parking brake

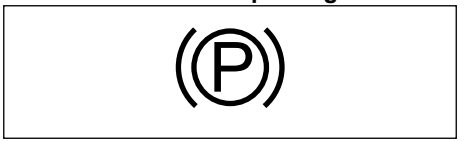



71UM04015

Check that the electric parking brake operation indicator light is illuminated.

*NOTE:*
- *The hill hold control system is activated when the engine is restarted automatically.*
- *When engine restarts automatically, the electric parking brake may engage or disengage and interrupt the restarting process, and that is normal operation.*

**The vehicle without the hybrid system**

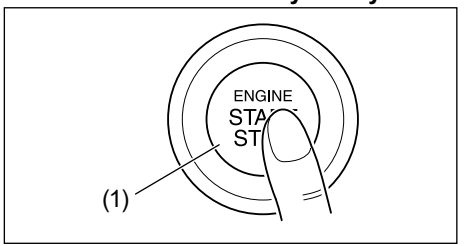



82K254

5) With your foot taken off the accelerator pedal, push the engine switch (1). When the engine is started, the starter motor will automatically stop.
   - Even if you fail to start the engine, the starter motor will stop turning automatically after approximately 12 seconds. In this case, press the engine switch to select LOCK (OFF) mode and restart the engine.
   - If there is a problem with the system, the engine will not start automatically even if the switch is pressed. In case the starter motor does not turn or stops immediately, start the engine by the following procedure.
     a. Press the engine switch to select the ON mode.
     b. Perform the above procedure 1) to 3).
     c. Keep the engine switch pressed until the engine starts. Release your finger from the engine switch after the engine has started.

***NOTICE***

- **If the engine does not start, press the engine switch to select LOCK (OFF) mode and wait for more than 30 seconds before trying again, for protection of a lead-acid battery and a starter motor. If the engine does not start after several attempts, consult a Maruti Suzuki authorized workshop.**
- **Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill. This starting method could result in damage to the catalytic converter or damage to other parts.**

**The vehicle with the hybrid system**

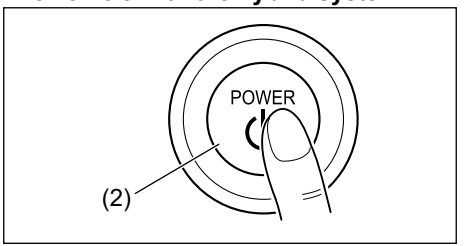


76TS50950

6) With your foot taken off the accelerator pedal, push the power switch (1).
   - If there is a problem with the system, the hybrid system will not start automatically even if the switch is pressed.

***NOTICE***

- **Do not try to start the hybrid system by pushing or towing the vehicle, or coasting down a hill. This starting method could result in damage to the catalytic converter or damage to other parts.**
- **During normal driving, do not turn off the hybrid system. Turning the hybrid system off while driving will not cause loss of steering or braking control, however, power assist to the steering will be lost. This will make it more difficult to steer smoothly, so you should pull over and stop the vehicle as soon as it is safe to do so.**




71UM05066

7) For the vehicle with hybrid system: When READY indicator in the meter is on, the hybrid system is working.

**⚠ WARNING**

**For the vehicle with hybrid system:**

- **When starting the hybrid system, always start the hybrid system while sitting in the driver's seat. Do not depress the accelerator pedal while starting the hybrid system under any circumstances. Doing so may cause an accident resulting in death or serious injury.**
- **If hybrid system failure occurs while the vehicle is moving, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting in death or serious injury.**

*NOTE:*

- *You do not need to keep the engine switch or the power switch pressed to start the engine or the hybrid system.*
- *Manual transmission vehicles:*
  *The engine of a manual transmission vehicle will not start unless the clutch pedal is depressed.*
- *Automatic transmission vehicles:*
  *Automatic transmission vehicles have a starter interlock device.*
  - *When the vehicle is stopped and you try to start the engine for the first time with the ignition mode OFF, you can start the engine only in the gearshift lever in "P" position.*
  - *When you are driving the vehicle and press the engine switch to change the ignition mode to OFF, you can start the engine in the gearshift lever in "N" position.*
- *e-CVT vehicles:*
  *e-CVT vehicles have a starter interlock device.*
  - *When the vehicle is stopped and you try to start the hybrid system for the first time with the ignition mode OFF, you can start the hybrid system only in the gearshift lever in "P" position.*
  - *When you are driving the vehicle and press the power switch to change the ignition mode to OFF, you can start the hybrid system in the gearshift lever in "N" position.*

- *During the engine starting procedure or the hybrid system starting procedure, messages on the information display will help you. Refer to "Information display" in "INSTRUMENT CLUSTER" section for details.*
- *When the engine stalls in intersection and railway crossing etc., restart the engine by usual procedure.*
- *For the vehicle with the hybrid system:*
  - *When operating the power switch, one short, firm press is enough. It is not necessary to press and hold the switch. If the "READY" indicator turns on, the hybrid system will operate normally. Continue depressing the brake pedal until the "READY" indicator is illuminated. The hybrid system can be started from any power switch mode.*
  - *If the power switch is not pressed shortly and firmly, the power switch mode may not change or the hybrid system may not start.*
  - *If attempting to restart the hybrid system immediately after turning the power switch off, the hybrid system may not start in some cases. After turning the power switch off, please wait a few seconds before restarting the hybrid system.*
  - *If the hybrid system does not start, the immobilizer system may not have been deactivated. consult a Maruti Suzuki authorized workshop.*
  - *During winter driving conditions, when starting the hybrid system, the flashing time of the "READY" indicator may be long. Leave the vehicle as it is until the "READY" indicator is steady on, as steady means the vehicle is able to move.*
  - *When the hybrid battery (traction battery) is extremely cold (below approximately −30°C [−22°F]) under the influence of the outside temperature, it may not be possible to start the hybrid system. In this case, try to start the hybrid system again after the temperature of the hybrid battery increases due to the outside temperature increase, etc.*
  - *When starting the hybrid system, if the hybrid system becomes difficult to start, consult a Maruti Suzuki authorized workshop.*

### Stopping Engine or Hybrid System

- Depress the engine switch or the power switch to stop the engine or the hybrid system after the vehicle stopped completely.
- If the engine remains stopped for a while after it was stopped unexpectedly or was raced before stopping, a clicking sound may be heard from around the engine when it is restarted. This is not a malfunction. Always let the engine idle before stopping it.

**⚠ WARNING**

**Except in cases of emergency, do not stop the engine or the hybrid system while the vehicle is in motion. If you stop the engine or the hybrid system while the vehicle is in motion, the steering wheel will lock and you will not be able to steer the vehicle. This may result in an accident. Avoid stopping the engine or the hybrid system while driving.**

**⚠ WARNING**

**The following function will not operate:**
- **SUZUKI SAFETY SUPPORT**

***NOTICE***

**Automatic transmission vehicles / e-CVT vehicles:**
**If you stop the engine or the hybrid system while the vehicle is in motion, the automatic transmission / e-CVT may be damaged. Avoid stopping the engine or the hybrid system while driving.**

- For the vehicle with the hybrid system: If the hybrid system is stopped with the shift lever in a position other than P, the power switch will not be turned off. Perform the following procedure to turn the switch off:
  1. Check that the parking brake is set.
  2. Shift the shift lever to P.
  3. Check that “ON” of the ignition mode is displayed on the information display and press the power switch shortly and firmly.
  4. Check that “ACC” or “ON” of the ignition mode on the information display is off.

***NOTICE***

**To prevent 12-volt battery discharge, do not stop the hybrid system when the shift lever is in a position other than P. If the hybrid system is stopped in another shift lever position, the power switch will not be turned off and remained to ON. If the vehicle is left in ON, battery discharge may occur.**

### Emergency Stop


In case of emergency, you can stop the engine or the hybrid system by quickly pushing the engine switch or the power switch more than 3 times, or pushing and holding the engine switch or the power switch for more than 2 seconds while the vehicle is in motion.

*NOTE:*

- *Except in cases of emergency, do not stop the engine or the hybrid system while the vehicle is in motion. The steering and braking operation will require more effort when the engine or the hybrid system is stopped. Refer to “Braking” in this section.*
- *For the vehicle with the hybrid system: If the hybrid system has to be turned off while driving, power assist for the steering wheel will be lost, making the steering wheel heavier to turn. Decelerate as much as possible before turning off the hybrid system.*

### If the Master Warning Indicator Light ⚠ Blinks and the Engine or the Hybrid System cannot be Started

Your keyless push start system remote controller may not be sensed as being within the interior workable area (refer to the related explanation in this section). Try again after checking that you have the remote controller with you. If the engine or the hybrid system cannot be started, the battery of the remote controller may be discharged. To start the engine or the hybrid system, you must then use the following method:

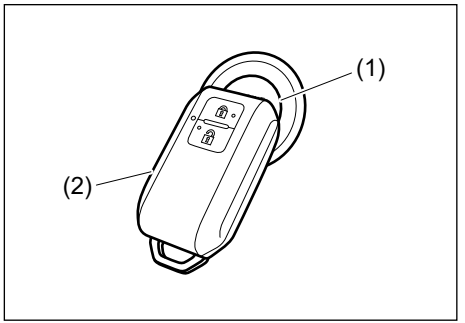


76TS50930

1) Check that the gearshift lever is in “P” (Park) position and keep depressing the brake pedal fully.




71UM050133

2) If the following message is shown on the information display in the instrument cluster, press the engine switch or the power switch (1).




71UM050134

3) Within about 10 seconds while the master warning indicator light blinks and the information display in the instrument cluster shows the following message, touch the engine switch or the power switch with the lock switch end of the remote controller (2) for about 2 seconds.

While the master warning indicator light blinks, the immobilizer/keyless push system warning light will come on for about 5 seconds.

If you still cannot start the engine or the hybrid system, there may be the other problem such as the discharged lead-acid battery. In this case, consult a Maruti Suzuki authorized workshop.

*NOTE:*

- *You may customize the system to cause the interior buzzer to sound once for warning that remote controller is out of sensing range. For this customization, consult a Maruti Suzuki authorized workshop.*

- *If the battery of the remote controller is almost discharged, the information display in the instrument cluster shows the following message when you press the engine switch or the power switch to change the ignition mode to ON. Refer to "Information Display" in "INSTRUMENT CLUSTER" section for details. For details on replacing the battery, refer to "Keyless Push Start System Remote Controller" in "BEFORE DRIVING" section.*




71UM050135

## Returning Ignition Mode to LOCK (OFF)

Automatic transmission / e-CVT – To ensure safety, the ignition mode can be returned to LOCK (OFF) by pressing the engine switch or the power switch only when the gearshift lever is placed in "P" position without pressing the knob button.

*NOTE:*
*In the case of an automatic transmission / e-CVT, the ignition mode cannot be returned to LOCK (OFF) position if the gearshift lever is in any other position than "P".*
*Certain problems such as a fault in engine system or the hybrid system may prevent the engine switch or the power switch from going back to LOCK (OFF) mode. If this happens, have the vehicle inspected by a Maruti Suzuki authorized workshop.after doing the following:*

- *Lock the doors using the key to prevent theft. (The request switches and the keyless push start system remote controller cannot be used to lock them.)*
- *Disconnect the negative cable from the lead-acid battery to prevent discharge.*

**LOCK (OFF) mode reminder buzzer**


If the driver's door is opened without returning the ignition mode to LOCK (OFF) by pressing the engine switch or the power switch, a buzzer sounds to warn you of this condition.

- If you open the driver's door after pressing the engine switch or the power switch to change the ignition mode to ACC, the interior buzzer beeps intermittently.
- The buzzer will stop sounding if you then push the engine switch or the power switch twice, thus bringing it back the ignition mode to LOCK (OFF).

*NOTE:*
*Whenever you leave the vehicle, check that you have returned the ignition mode to LOCK (OFF) using the engine switch or the power switch and then lock the doors. Without returning the ignition mode to LOCK (OFF), you cannot use a request switch or keyless push start system remote controller to lock the doors.*

**Steering lock warning buzzer**
If the steering lock fails to engage due to a fault in the system when the ignition mode is turned to LOCK (OFF) by pressing the engine switch or the power switch and any door (including the tailgate) is opened or closed, the interior buzzer will warn you of this condition with repeated short beeps. If this happens, have the vehicle inspected by a Maruti Suzuki authorized workshop.

## Parking Brake Lever (if equipped)

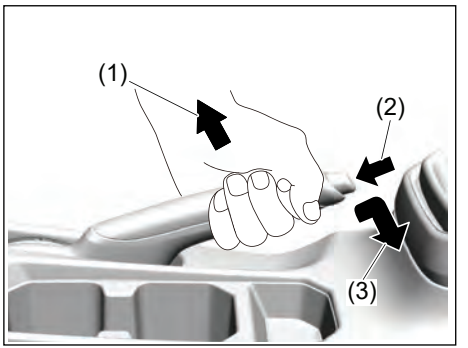

76TS50070

(1) To set
(2) To release
(3) To release

The parking brake lever is located between the front seats. To set the parking brake, depress the brake pedal and pull the parking brake lever all the way up. To release the parking brake, depress the brake pedal and pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.

For automatic transmission vehicles / e-CVT vehicles, always set the parking brake before moving the gearshift lever to “P” (PARK) position. If you park on an incline and shift into “P” before setting the parking brake, the weight of the vehicle may make it difficult to shift out of “P” or a sound and a shock may occur when you are ready to drive the vehicle. These are not malfunctions.

When preparing to drive the vehicle, move the gearshift lever out of “P” position before releasing the parking brake.

**⚠ WARNING**

- **Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.**
- **If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected by a Maruti Suzuki authorized workshop.**

(Continued)

**⚠ WARNING**

(Continued)

- **Always set the parking brake fully before leaving your vehicle or it may move, causing injury or damage. When parking, check that the gearshift lever is in one of the following positions:**
  - **1st gear or "R" (Reverse) for manual transmission vehicles.**
  - **"P" (Park) for automatic transmission vehicles / e-CVT vehicles.**

  **Remember, even though the transmission is in gear or in Park, you must set the parking brake fully.**

(Continued)

**⚠ WARNING**

(Continued)

- **When parking the vehicle in extremely cold weather, the following procedure should be used:**
  1) **Set the parking brake.**
  2) **Manual transmission – turn off the engine, then shift into reverse or first gear.**
     **Automatic transmission / e-CVT – shift into "P" (Park) and turn off the engine.**
  3) **Get out of the vehicle and put chocks under the wheels.**
  4) **Release the parking brake. When you return to your vehicle, first set the parking brake, and then remove the wheel chocks.**
- **Do not leave cigarette lighters, spray cans, soft drink cans or plastic articles (such as glasses, CD cases, etc.) in sun-heated vehicle. The temperature inside the vehicle may cause as follows:**
  - **Gas may leak from a cigarette lighter or spray can and may lead to a fire.**
  - **The glasses, plastic cards or CD cases, etc. may deform or crack.**
  - **Soft drink cans may fracture.**

***NOTICE***

**When parking the vehicle on a slope, set the parking brake, shift the gearshift lever to P and make sure that the vehicle does not move, before you leave the vehicle.**

### Parking Brake Reminder Buzzer


A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without fully releasing the parking brake. Check that the parking brake is fully released and the brake system warning light turns off.

## Electric Parking Brake (if equipped)

The parking brake can be applied and released automatically or manually.
When the electric parking brake (EPB) is in auto mode, the parking brake is applied automatically according to the position of the transmission.
Additionally, you can manually apply or release the parking brake even in auto mode.

### How To Operate

You can manually apply or release the parking brake.

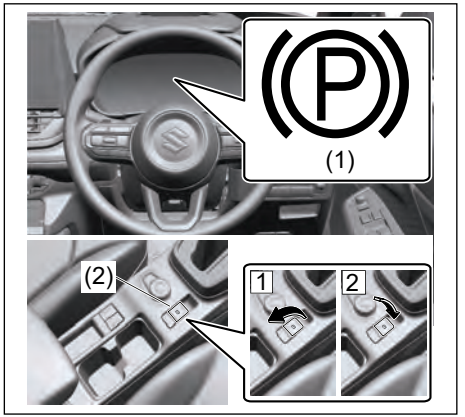


71UM05061

(1) Electric parking brake operation indicator light
(2) Electric Parking brake switch

1) Pull the electric parking brake switch up gently and securely to apply the parking brake.
   – The electric parking brake operation indicator light turns on. When you need to apply the parking brake while driving in emergency situation, pull the electric parking brake switch up continually.
2) Push the electric parking brake switch to release the parking brake.
   – Depress the brake pedal when you operate the switch.

### Electric parking brake automatic releasing feature

- After releasing the electric parking brake, the electric parking brake operation indicator light turns off.
- When the electric parking brake operation indicator light blinks, push the electric parking brake switch again.

**Setting Auto Mode to ON**
Depress the brake pedal while parking and pull the electric parking brake switch until the buzzer sounds and the multi-information display shows the message to set the auto mode to ON.

When the auto mode is set to ON, the parking brake operates as follows:
- When you move the gearshift lever to P (Park) from any other position, the parking brake is applied and the electric parking brake operation indicator light turns on.
- To operate the gearshift lever, depress the brake pedal while parking.
  To release the parking brake, push the electric parking brake switch.
  – Press the electric parking brake switch while depressing the brake pedal.

**Setting Auto Mode to OFF**
Depress the brake pedal while parking and press and hold the electric parking brake switch until the buzzer sounds and the multi-information display shows the message to set the auto mode to OFF.

*NOTE:*
***Parking brake operation***
- *To release the parking brake, the ignition mode must be ON.*
- *To operate the auto mode, the ignition mode must be ON.*
- *It is normal that the brake pedal may move while the electric parking brake operation.*

***Automatically releasing feature***
*The parking brake can be released by depressing the accelerator pedal when the vehicle circumstances meets a certain condition as following:*
- *The driver's door is closed.*
- *The driver's seat belt is fastened.*
- *Engine warning lamp, brake warning lamp, and brake system warning lamp are off.*
- *The gearshift lever is in any position other than P (Park) or N (Neutral).*

*Depress the accelerator pedal gently. When the parking brake is not released by depressing the accelerator pedal, release it manually.*

***If the message "FREQUENT OPERATION TEMPORARILY DISABLED" is shown;***
*The electric parking brake system may restrict its operation for overheating prevention if the system is operated repeatedly in a short time. Please avoid to operate the switch, and the system will be return to normal state shortly.*

***If the message, "PARKING BRAKE INSPECTION REQUIRED" or "PARKING BRAKE UNAVAILABLE" is shown;***
*Operate the electric parking brake switch. If the message is shown continually, there may be a problem with the system. Have your vehicle inspected by a Maruti Suzuki authorized workshop immediately.*

***Parking brake operating noise***
- *When the electric parking brake is operated (to be applied or released), an operating noise like motor sound (whirring sound) may be heard. This is normal.*
- *When you keep pulling the switch up during emergency, a noise may be heard from the engine compartment along with pedal vibration. This is normal.*

***About the electric parking brake operation indicator light***
- *When the parking brake is applied, according to the ignition switch mode, the indicator comes on as follows; ON mode: the indicator continually comes on until the parking brake released.*
  *Any Other mode than ON: the indicator comes on for about 15 seconds.*
- *When LOCK mode is selected by pressing the engine switch, the indicator stays to come on for about 15 seconds. This is normal.*

**When the electric parking brake switch malfunctions**
The auto mode will be set to ON automatically.

**Parking brake engaged warning buzzer**
A buzzer sounds immediately and the message, "RELASE PARKING BRAKE" is shown on display if you drive the vehicle without fully releasing parking brake (with vehicle reached a speed of 5 km/h).

**⚠ WARNING**

**The performance of the parking brake is limited. The following conditions can cause the vehicle to start moving unexpectedly, resulting in an accident, serious injury, or death. Do not park on the following condition.**
- **Parking on a steep slope.**
- **Parking on extremely slippery road.**

**For Electric Parking Brake Switch: If the parking brake is unexpectedly released and the car starts moving, an accident, serious injury or death may result. Do not place objects near the switch. Also, do not let children operate the switch.**

**⚠ CAUTION**

**When the lead-acid battery is running out;**
- **You can not operate the electric parking brake.**

**When you can not release the parking brake because of the system malfunction or problems;**
- **Never drive your vehicle with the parking brake engaged. Doing so can reduce rear brake effectiveness due to overheating, shorten brake life, and potentially cause permanent brake damage.**
- **Have your vehicle inspected immediately by a Maruti Suzuki authorized workshop.**

*NOTE:*
***When parking the vehicle;***
*Apply the parking brake, shift the gearshift lever to P and make sure that the vehicle does not move, before you leave the vehicle.*

***When malfunction occurs in the system;***
*Immediately stop in a safe place and check the warning indicators and messages.*

***When the brake system warning light (yellow color) turns on;***
*Refer "Brake System Warning Light (yellow color) (if equipped)" in "INSTRUMENT CLUSTER".*


***For instruction on using the electric parking brake in winter;***
*Refer "Parking Brake Precautions in Cold Weather" in "INSPECTION AND MAINTENANCE".*

## Brake Hold (if equipped)

When the gearshift lever is in D or N and the brake hold system is turned on, the system keeps the brake applied after releasing the brake pedal.
When the gearshift lever is in D, the system is released by depressing the accelerator pedal and you can start to drive the vehicle smoothly.

### Turning on the system

When the system is turned on by pressing the brake hold switch (1), the brake hold standby system indicator light (2) turns on. The brake hold operation indicator light (3) turn on while the brake is being held.

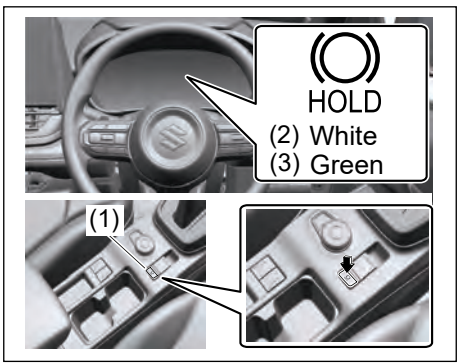


71UM05062

(1) Brake hold switch
(2) Brake hold standby indicator light (white color)

(3) Brake hold operation indicator light (green color)

*NOTE:*
***System activation conditions***
*System activation conditions You can not turn the system on in the certain conditions as following;*
- *The driver's door is not closed firmly.*
- *The driver's seat belt is unfastened.*
- *The messages, "PARKING BRAKE INSPECTION REQUIRED" and/or "BRAKE HOLD INSPECTION REQUIRED", are shown on the display.*

*When the brake hold system detects any of the situations listed above, the brake hold standby indicator light (white color) (2) goes off.*
*If any of the above conditions are detected while the brake hold system is active, the system will turn OFF, the brake hold operation indicator light (green color) (3) will go off and a message "PARKING BRAKE AUTO ACTIVATED" will be displayed on the multi-information display along with a warning buzzer sound, and the parking brake will be applied automatically.*

***About brake hold***
- *If the brake pedal is not depressed for about three minutes while the brake hold system is active, the parking brake is applied automatically and a message will be displayed along with a buzzer sound.*
- *When driving the vehicle on a slope, the brake hold system may not activate, and you will need to depress the brake pedal. At the same time, a message will be displayed along with a warning buzzer sound. Follow the instructions shown on the display.*
- *To turn off the system while it is active, depress the brake pedal and press the brake hold switch again.*

***When the parking brake applied automatically while the system holding the brake;***
*Release the parking brake when starting the vehicle by performing one of the following operations:*
- *Move the gearshift lever into a position other than P or N with the driver's seat belt fasten, driver door closed and depress the accelerator pedal.*
- *Release the parking brake manually by pushing the electric parking brake switch while depressing the brake pedal.*

*After complete one of the procedures, make sure to check that the electric parking brake operation indicator light goes off. Refer to "Electric Parking Brake (if equipped)" in this section.*

***When your vehicle needs to be inspected at an authorized Maruti Suzuki workshop;***
*If the brake hold standby indicator light (2) does not come on by pressing the brake hold switch under the proper operating condition, there may be some problem with the system. Have your vehicle inspected by a Maruti Suzuki authorized workshop immediately.*

***If the message "BRAKE HOLD INSPECTION REQUIRED" is shown;***
*There may be some problem with the system. Have your vehicle inspected by a Maruti Suzuki authorized workshop immediately.*

***About the brake hold system operation***
*When you depress the brake pedal while the system holding the brake, you feel that the pedal is heavier than usual. This is normal.*

***Warning messages and buzzers***
*Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution. If a warning message is shown in the multiinformation display, read the message and follow the instructions.*

**⚠ WARNING**


- **Driving on a steep hill**
  **Be careful to use the brake hold system when you drive on a steep hill. The system may not be able to hold the brake on a steep hill so that the vehicle may start moving unexpectedly.**
- **Driving on a slippery road**
  **The system can not keep holding the brake beyond the tyre grip performance limit. Avoid driving on a slippery road.**
- **Parking the vehicle**
  **The brake hold system is not a feature for parking the vehicle for long time.**
  **When you change the ignition mode to LOCK (OFF) while the system activating, the brake is released from the hold so that the vehicle may start moving unexpectedly.**
  **When you change the ignition mode to LOCK (OFF), depress the brake pedal firmly, shift to "P" (Park), and apply the parking brake.**

## Precaution for Parking

### Apply the parking brake firmly

**When parking the vehicle on a flat place**


1) For vehicles with the parking brake lever, depress the brake pedal and pull the parking brake lever (1) to securely apply the parking brake.

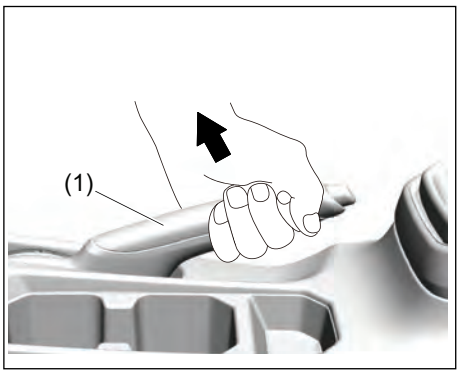


71UM050115

(1) Parking brake lever

For vehicles with the electric parking brake, depress the brake pedal and pull the electric parking brake switch (2) to apply the parking brake. Ensure the electric parking brake operation indicator light (3) turns on.

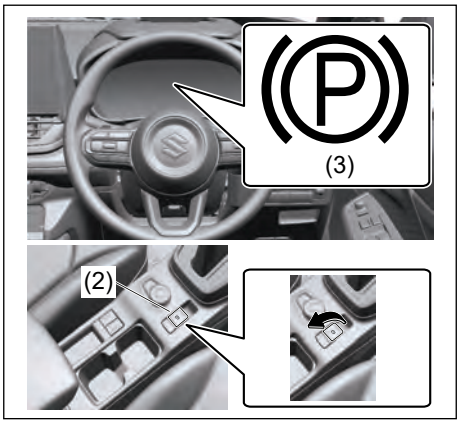


71UM050116

(2) Electric parking brake switch
(3) Electric parking brake operation indicator light

2) For vehicles with automatic transmission or e-CVT, move the gearshift lever into "P" (Park) position.
   For vehicles with manual transmission, move the gearshift lever into "R" (Reverse) or 1st gear position.
   - Slowly release your foot from the brake pedal and check that the vehicle does not move.

**⚠ CAUTION**

**If you are using the parking brake during cold weather, sometimes it might become frozen and impossible to release the parking brake. In this case, avoid parking on a slope and park in a flat place instead.**

*NOTE:*
***For vehicles with automatic transmission or e-CVT***
*Even when parking the vehicle for a short time in a flat place, shift the gearshift lever into "P" (Park) position.*

**When parking the vehicle on a slope**
Perform step 1) and 2), which are written in "When parking the vehicle on a flat place".

3) Secure the vehicle by putting a commercially available wheel chock or a rock, etc. under the tyres so that the vehicle does not move.

**⚠ WARNING**

**Avoid parking on a steep slope.**
**There is a risk of the vehicle accidentally moving without a driver, leading to a potential accident.**

**⚠ WARNING**

- **Be careful while parking on a steep hill. The system may not be able to hold the brake on a steep hill so that the vehicle may start moving unexpectedly.**
- **The system can not keep holding the brake beyond the tyre grip performance limit. Avoid driving on a slippery roads or parking on steep gradient.**

**For the electric parking brake switch:**
- **Do not put any object around the switch. And also, do not allow the children to operate the switch.**
- **If the parking brake is applied or released unexpectedly, there is a risk of an accident.**


## When Moving the Vehicle

When moving the vehicle, start the engine.

**⚠ WARNING**

**If you coast with the engine off, stronger force than normal is required when turning the steering wheel or depressing the brake pedal, resulting in an accident.**
**Do not coast on a downhill slope with the engine off.**

## When Taking a Nap in the Vehicle

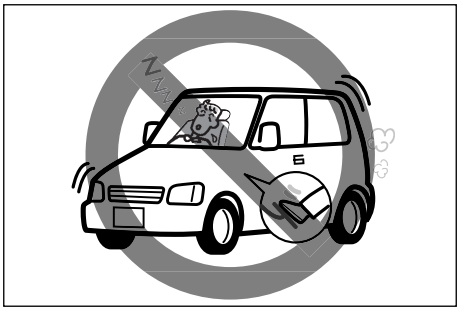

69RHS172

Do not take a nap in the vehicle with the engine running.

**⚠ WARNING**

- **Exhaust gases can enter the vehicle due to surrounding conditions and wind direction, possibly causing carbon monoxide poisoning.**
- **The gearshift lever could change unintentionally, or the accelerator pedal could be depressed accidentally, causing an accident.**
- **If you were to accidentally step on the accelerator pedal while you are asleep, the engine and the exhaust system could overheat, resulting in danger of fire.**

### With the Engine Running, the Cooling Fan (Radiator Fan) may Rotate Suddenly

The cooling fan (radiator fan) in the engine compartment may automatically stop and rotate depending on the conditions of the engine coolant temperature.

**⚠ WARNING**

- **If you get close to a rotating cooling fan (radiator fan), your hands, hair and clothing may get caught in it, resulting in personal injury. With the engine running, even when the cooling fan (radiator fan) stops, it may automatically rotate. Therefore, do not get close to the cooling fan (radiator fan).**
- **For the vehicle with hybrid system: After the hybrid system has been turned off, check that the "READY" indicator is off. When the hybrid system is operating, the gasoline engine may automatically start, or the cooling fan may suddenly operate even if the gasoline engine stops. Do not touch or approach rotating parts such as the fan, which may lead to fingers or clothing (especially a tie, a scarf or a muffler) getting caught, resulting in serious injury.**

### When You Park the Vehicle Outside on a Snowy Day

**⚠ WARNING**

- **When you park the vehicle under the eaves or the trees, fallen snow may hit the vehicle's roof and it may be dented.**
  **Do not park the vehicle under the eaves or the trees on a snowy day.**
- **If you park the vehicle outside on a snowy day, the wiper arms may be deformed and the wiper blades may be frozen on the windshield, because of the weight of snow. When you park the vehicle outside, raise the wiper arms.**

### Do not Park the Vehicle Near Flammable Materials




69RHS174

**⚠ WARNING**

**If you park the vehicle near flammable materials, the exhaust pipes and exhaust gas will get hot, resulting in danger of fire.**
**Do not park the vehicle near flammable materials such as dry grass, paper waste and plywood.**

### When Leaving the Vehicle, Stop the Engine and Lock Doors

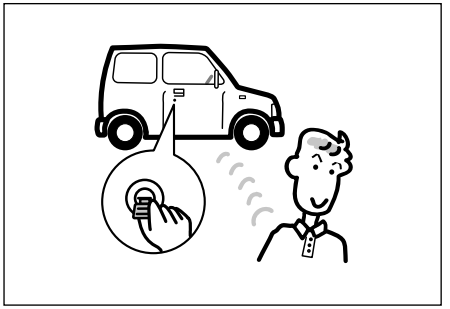

69RHS054

Even when leaving the vehicle for a short time, do not leave cash or valuables inside, as there is a risk of theft.


**⚠ WARNING**

**If you leave the vehicle unattended with the engine running, problems such as fire or theft can occur.**
**Do not leave the vehicle unattended with the engine running.**

### Do not Leave the Computer and the Mobile Phone in the Vehicle

There is the possibility of theft, or these items could become damaged due to moisture, humidity or temperature change.

### Do not Leave Lighters and Eyeglasses in the Vehicle

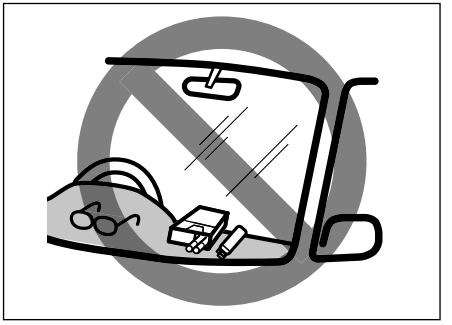

69RHS175

**⚠ WARNING**


- **As the inside of the vehicle becomes hotter when parking in areas where strong sunlight causes increased temperature, there is the danger of spontaneous ignition of lighters or spray cans, fire due to explosion, the deformation or cracking of eyeglasses, plastic cards or CD cases, or the rupture of carbonated beverage cans. When parking in those areas, do not leave lighters, spray cans, plastic products (eyeglasses, plastic cards, CD cases, etc.) or carbonated beverage cans in the vehicle.**
- **When items get pushed around or when the seats are moved, it is possible that gas could escape and lead to a fire. Do not place accessories such lighters or spray cans with exposed operating parts in the glove box, in storage compartments, between the seats, on the floor, etc.**

## Using Transmission

**⚠ WARNING**

**Do not hang any items on the gearshift lever and do not use the gearshift lever as a handrest. Otherwise, it could prevent proper operation of the gearshift lever and cause its malfunction, resulting in an accident.**

### Manual Transmission

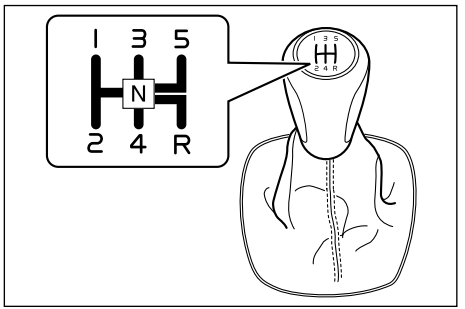


56RM03002

**Starting off**
To start off, depress the clutch pedal all the way to the floor and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine's sound, slowly press the accelerator while continuing to gradually release the clutch.

**Shifting**
All forward gears are synchronized and provide quiet and easy shifting. Always depress the clutch pedal all the way to the floor before shifting gears. Keep the engine speed from rising into the red zone of the tachometer.

**Downshifting maximum allowable speeds**

**For K15C engine models (2WD)**

| Downshifting | km/h |
|---|---|
| 2nd to 1st | 20 |
| 3rd to 2nd | 80 |
| 4th to 3rd | 115 |
| 5th to 4th | 150* |

**NOTE*
*You may not accelerate to the maximum allowable speed because of the driving situation and/or the vehicle condition.*

**⚠ WARNING**

- **Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking. Avoid riding the brakes or they may overheat, resulting in brake failure.**

(Continued)

**⚠ WARNING**

(Continued)
- **When driving on slippery roads, slow down before downshifting. Excessive and/or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.**

***NOTICE***

**Before engaging reverse gear [R], check that the vehicle is completely stationary and gear lever is in neutral [N] position. After depressing clutch pedal fully, shift to [R].**

***NOTICE***

- **Do not downshift to a lower gear at the speed faster than the maximum allowable speeds for the next lower speed, or severe damage to engine and transmission can result.**
- **Check that the vehicle is completely stationary before you shift into reverse.**
- **To help avoid clutch damage, do not use the clutch pedal as a footrest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.**

(Continued)

**NOTICE**

(Continued)
- **When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and cause negative effect to smooth shifting.**

*NOTE:*
*If it is difficult to engage reverse gear [R], follow below procedure.*
- *Put gear lever in neutral [N] position.*
- *Release clutch pedal once.*
- *Again depress the clutch pedal and shift from [N] to [R].*

**When operating the gearshift lever**

When repeating to move the vehicle back and forth for change of direction, stop the vehicle completely and then operate the gearshift lever.

**⚠ WARNING**


**Operating the gearshift lever with the accelerator pedal depressed could cause the vehicle to suddenly start moving and lead to an accident.**
**Never operate the gearshift lever with the accelerator pedal depressed.**

**NOTICE**

**If frequently driving at low speed using a high gear position, the life cycle of the clutch may be reduced.**

## 6-speed Automatic Transmission

**Gearshift lever**

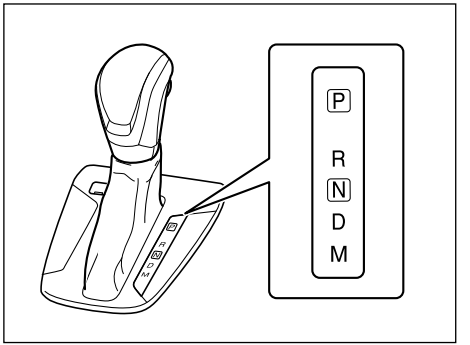


76TS50120


The gearshift lever is designed so that it cannot be shifted out of “P” position unless the ignition mode is ON and the brake pedal is depressed.

**⚠ WARNING**

**Always depress the brake pedal before shifting from “P” (Park) (or “N” (Neutral) if the vehicle is stationary) to a forward or reverse gear, to help prevent the vehicle from moving unexpectedly when you shift.**

The gearshift lever has a lock mechanism to help prevent accidental shifting. Shift the gearshift lever as follows:

**Models with manual mode**

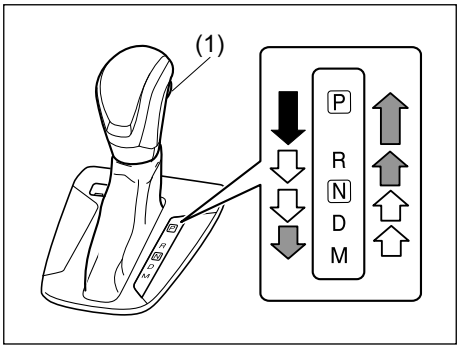


76TS50140

(1) Knob button

| | |
|---|---|
| ⇩ | Shift with the knob button (1) pushed in and the brake pedal depressed. |
| ⇧⇩ | Shift with the knob button (1) pushed in. |
| ⇧⇩ | Shift without the knob button (1) pushed in. |

*NOTE:*
- *Always shift the gearshift lever without pushing in the knob button (1) except when you shift from "P" to "R", from "D" to "M" or "L", from "N" to "R" or from "R" to "P". If you always push in the knob button (1) when shifting the gearshift lever, you could shift into "P", "R", "M" or "L" by mistake.*
- *If driver's or passenger's knee hits the gearshift lever while driving, the lever could move and the gear could be changed unexpectedly.*

Use the gearshift lever positions as described below:

**P (Park)**
Use this position to lock the transmission when the vehicle is parked or when starting the engine. Shift into Park only when the vehicle is completely stationary.

**R (Reverse)**
Use this position to reverse the vehicle from stop. Make sure that vehicle is completely stationary before shifting into Reverse.

***NOTICE***

**Do not shift the gearshift lever into "R" while moving forward, or the transmission may be damaged. If you shift into "R" when the vehicle speed is over 10 km/h, the transmission will not shift into reverse.**

**N (Neutral)**
Use this position for starting the engine if the engine stalls and you need to restart it while the vehicle is moving. You may also shift into Neutral and depress the brake pedal to hold the vehicle stationary during idling.

**D (Drive)**
Use this position for all normal driving.

With the gearshift lever in "D" range you can get an automatic downshift by pressing the accelerator pedal. The higher the vehicle speed is, the more you need to press the accelerator pedal to get a downshift.

**M (manual mode)**
**(models with manual mode)**
Use this position for driving in the manual mode. Refer to "Manual mode" later in this section for details on how to use the manual mode.

*NOTE:*
*If you move the gearshift lever to a lower gear while driving faster than the maximum allowable speed for the lower gear, the transmission will not actually downshift until your speed drops below the maximum speed for the lower gear.*

**⚠ CAUTION**

**If you cannot press the engine switch firmly, the engine may not start.**
**Even if you shift the gearshift lever into "R" or "D" position without the engine running, the vehicle does not move.**
**If you try to move your vehicle under the above-mentioned condition, the vehicle may move in unexpected directions on a slope, etc. This may cause an accident. When starting the engine, press the engine switch firmly. Also, make sure that the engine is running by checking engine sound or warning and indicator lights.**


**NOTICE**

**Be sure to take the following precautions to help avoid damage to the automatic transmission:**


- **Make sure that the vehicle is completely stationary before shifting into "P" or "R".**
- **Do not shift from "P" or "N" to "R", "D" or "M" when the engine is running above idle speed.**
- **Do not rev the engine with the transmission in a drive position ("R", "D" or "M") and the front wheels not moving.**
- **Do not use the accelerator to hold the vehicle on a hill. Use the vehicle's brakes.**

*NOTE:*
*When you shift the gearshift lever into "P" and stop the engine before depressing the parking brake pedal, if you try to restart the engine and shift the gearshift lever into the position other than "P", it may reduce gearshift lever capability, or unusual sound and shock may occur. However, this is not abnormal.*

**Manual mode**
**(models with manual mode)**
The automatic transmission can shift gears automatically. When using the manual mode, you can shift gears in the same manner as conventional manual transmission.
To use the manual mode, shift the gearshift lever from "D" to "M".

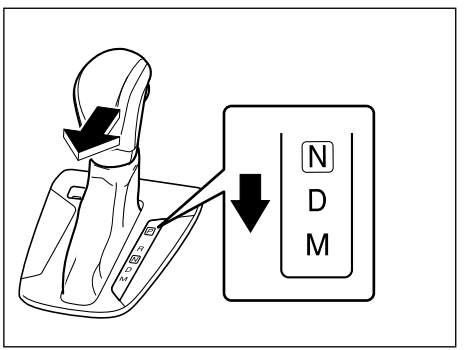


76TS50160

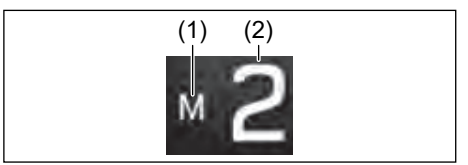


52RM30030

(1) Manual mode indicator
(2) Gear position

The information display shows the manual mode indicator and the current gear position.


*NOTE:*
- *The indicated gear position in the information display when you shift from "D" to "M" is the gear position that was selected automatically when the gearshift lever was in "D".*
- *You can change to the manual mode temporarily by pulling the shift paddle on the steering wheel toward you when the gearshift lever is in "D".*

**Shifting in the manual mode**
You can shift gears from 1st to 6th depending on driving speed.

*NOTE:*
- *When the engine is revved, the gear is shifted up automatically to prevent damage to the engine and the transmission.*
- *When the driving speed becomes slow, the gear shifts down automatically, and when the vehicle stops, the gear position will be in 1st gear without shifting the gearshift lever.*
- *If you depress the accelerator pedal a certain amount, the gear shifts down automatically even if the gearshift lever is in the manual mode.*

*NOTE:*
*When you change gear, sometimes the transmission may not shift to the desired gear but a buzzer sounds instead. This is to maintain good driveability and to protect the transmission.*

**Using the shift paddle**

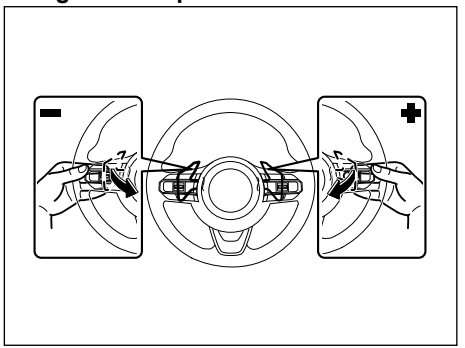

71UM050106


To shift up, pull "+" side shift paddle, located on right side of the steering wheel, toward you. When you release your finger from the switch, the switch will return to the original position.

To shift down, pull "–" side shift paddle, located on left side of the steering wheel, toward you. When you release your finger from the switch, the switch will return to the original position.

*NOTE:*
- *To shift gears continuously, release your finger from the shift paddle, then pull the shift paddle again. You cannot shift gears continuously while holding the shift paddle toward you.*
- *When you pull the both "+" and "–" shift paddle simultaneously, the gear may not shift.*

**Canceling the manual mode**
To cancel the manual mode, shift the gearshift lever from "M" to "D".

**Temporary manual mode**
Pull the shift paddle toward you when driving with the gearshift lever in "D". The information display shows the manual mode indicator and the current gear position.

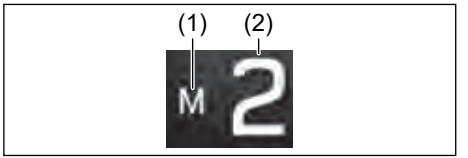



52RM30030

(1) Manual mode indicator
(2) Gear position

The temporary manual mode will be canceled automatically in the following situations.
- When you press and hold the accelerator pedal for a certain period of time without shifting gears.
- When driving speed becomes slow.

## If you cannot Shift Automatic Transmission Gearshift Lever out of "P" (PARK)

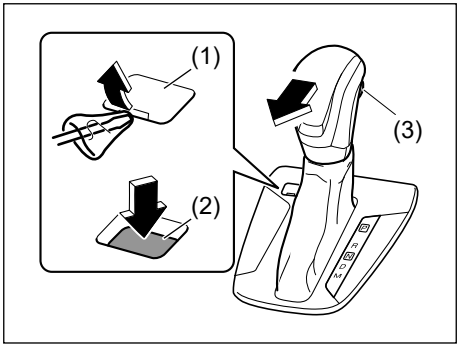


76TS50190

The automatic transmission vehicles have an electrically operated park-lock feature. If the vehicle's lead-acid battery is discharged, or there is some other electrical failure, the automatic transmission cannot be shifted out of Park in the normal way. Jump starting may correct the condition. If not, follow the procedure described below.


This procedure will permit shifting the transmission out of Park.

1) Be sure the parking brake is firmly applied.
2) If the engine is running, stop the engine.
3) Make sure the ignition mode is ON or ACC.
4) Remove the cover (1) by using a flat-bladed screwdriver covered with a soft cloth as shown.
5) With the release button (2) pushed by the key or the flat end rod, push the knob button (3) and shift the gearshift lever to the desired position.

This procedure is for emergency use only. If repeated use of this procedure is necessary, or the procedure does not work as described, take the vehicle to a Maruti Suzuki authorized workshop.

## Continuously Variable Transmission (e-CVT)

### Gearshift lever

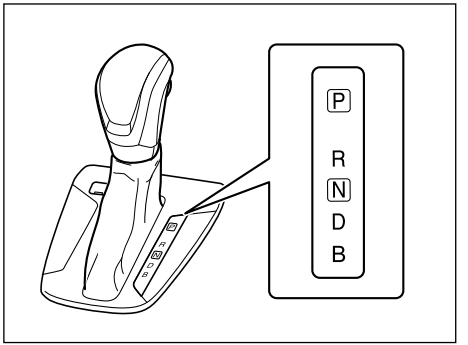



76TS50200

The gearshift lever is designed so that it cannot be shifted out of “P” position unless the ignition mode is ON and the brake pedal is depressed.

**⚠ WARNING**

**Always depress the brake pedal before shifting from “P” (Park) (or “N” (Neutral) if the vehicle is stationary) to a forward or reverse gear, to help prevent the vehicle from moving unexpectedly when you shift.**

The gearshift lever has a lock mechanism to help prevent accidental shifting. To shift the gearshift lever:

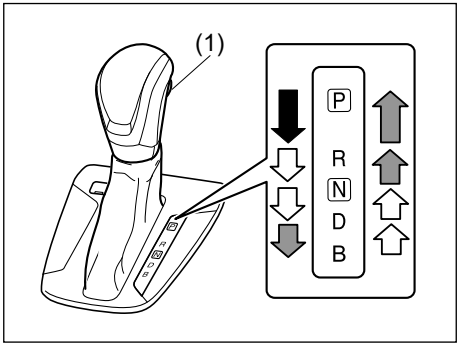


76TS50210

(1) Knob button

| | |
|---|---|
| ⬇ | Shift with the knob button (1) pushed in and the brake pedal depressed. |
| ⇧⇩ | Shift with the knob button (1) pushed in. |
| ⇧⇩ | Shift without the knob button (1) pushed in. |

*NOTE:*
- *Always shift the gearshift lever without pushing in the knob button (1) except when you shift from "P" to "R", from "D" to "B", from "N" to "R" or from "R" to "P". If you always push in the knob button (1) when shifting the gearshift lever, you could shift into "P", "R" or "B" by mistake.*
- *If driver's or passenger's knee hits the gearshift lever while driving, the lever could move and the gear could be changed unexpectedly.*

Use the gearshift lever positions as described below:

**P (Park)**
Use this position to lock the transmission when the vehicle is parked or when starting the engine or the hybrid system. Shift into Park only when the vehicle is completely stationary.

**R (Reverse)**
Use this position to reverse the vehicle from stop. Make sure that vehicle is completely stationary before shifting into Reverse.

***NOTICE***

**Do not shift the gearshift lever into "R" while moving forward, or the transmission may be damaged. If you shift into "R" when the vehicle speed is over 10 km/h, the transmission will not shift into reverse.**

**N (Neutral)**
In this position, the power is not transmitted.

**D (Drive)**
Use this position for all normal driving.

**B (Braking)**
Use this position to provide engine braking when going down steep hills.

**⚠ CAUTION**

**If you cannot press the power switch firmly, the hybrid system may not start.**
**Even if you shift the gearshift lever into "R" or "D" position without the hybrid system ready, the vehicle does not move.**
**If you try to move your vehicle under the above-mentioned condition, the vehicle may move in unexpected directions on a slope, etc. This may cause an accident. When starting the hybrid system, press the power switch firmly. Also, make sure that the hybrid system is ready to be activated by checking a short beep and the indicator light.**


***NOTICE***

**Be sure to take the following precautions to help avoid damage to the e-CVT:**
- **Make sure that the vehicle is completely stationary before shifting into "P" or "R".**
- **Do not shift from "P" or "N" to "R", "D" or "B" when the engine is running (the hybrid system is operating) above idle speed.**
- **Do not rev the engine with the transmission in a drive position ("R", "D" or "B") and the front wheels not moving.**
- **Do not use the accelerator to hold the vehicle on a hill. Use the vehicle's brakes.**

*NOTE:*

- *When you shift the gearshift lever into "P" and stop the engine before depressing the parking brake pedal, if you try to restart the engine and shift the gearshift lever into the position other than "P", it may reduce gearshift lever capability, or unusual sound and shock may occur. However, this is not abnormal.*
- *If the gearshift lever is in "N", the hybrid battery (traction battery) will not be charged even when the engine is running. Therefore, if the vehicle is left with the gearshift lever in "N" for a long period of time, the hybrid battery (traction battery) will discharge, and this may result in the vehicle not being able to start.*
- *The charge of the hybrid battery (traction battery) has become low due to the shift position being left in "N" for a long time.*
  - *As the hybrid battery (traction battery) cannot be charged with the "N" position selected, when stopping the vehicle for a long period of time, shift the gearshift position to "P".*
  - *If the "READY" indicator is not illuminated, shift the gearshift position to "P" and restart the hybrid system.*

## If You cannot Shift e-CVT Gearshift Lever out of "P" (PARK)

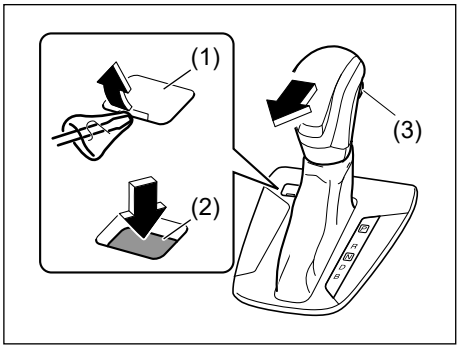


71UM050192

Vehicles with a e-CVT have an electrically operated park-lock feature. If the vehicle's lead-acid battery is discharged, or there is some other electrical failure, the e-CVT cannot be shifted out of Park in the normal way. Jump starting may correct the condition. If not, follow the procedure described below. This procedure will permit shifting the transmission out of Park.

1) Be sure the parking brake is firmly applied.
2) If the engine is running, stop the engine.
3) Make sure the ignition mode is ON or ACC.
4) Remove the cover (1) by using a flat-bladed screwdriver covered with a soft cloth as shown.
5) With the release button (2) pushed by the key or the flat end rod, push the knob button (3) and shift the gearshift lever to the desired position.

This procedure is for emergency use only. If repeated use of this procedure is necessary, or the procedure does not work as described, take your vehicle to a Maruti Suzuki authorized workshop.

### When operating the gearshift lever

- When repeating to drive the vehicle back and forth, you may forget that the gearshift lever is in "R". Shortly after reversing the vehicle, shift the gearshift lever from "R" to "N".
- When repeating to move the vehicle back and forth for change of direction, stop the vehicle completely and then operate the gearshift lever.

**⚠ WARNING**

**Operating the gearshift lever with the accelerator pedal depressed could cause the vehicle to suddenly start moving and lead to an accident.**
**Never operate the gearshift lever with the accelerator pedal depressed.**

### Visually Check the Position of Gearshift Lever

Visually check the position of gearshift lever as follows:

- For starting or exiting the vehicle, the gearshift lever should be in “P”.
- For driving the vehicle forward, the gearshift lever should be in “D”.
- For driving the vehicle in reverse, the gearshift lever should be in “R”.

### Stopping the Vehicle Temporarily

1) With the gearshift lever in the driving position, stop the vehicle and firmly depress the brake pedal.
   - To temporarily stop the vehicle on a steep slope, pull the parking brake lever if necessary.
   - If you are likely to stop the vehicle for a long time, put the gearshift lever into the “N”.
2) To avoid making a mistake when starting to move the vehicle again, visually check that the position of the gearshift lever and the gearshift lever position/gear position indicator in the instrument cluster are correct, and that the parking brake is released.

**⚠ WARNING**

**If the gearshift lever is in the position other than “P” or “N”, there is the danger that revving the engine could cause unexpected movement and result in an accident.**
**When the vehicle is temporarily stopped, do not rev the engine.**


***NOTICE***

**If you try to stop the vehicle on an uphill slope by operating the accelerator pedal, the transmission fluid will overheat, resulting in a malfunction.**
**Do not stop the vehicle on an uphill slope by operating the accelerator pedal.**

### Parking the Vehicle


1) Completely stop the vehicle.
2) With the brake pedal depressed, pull the parking brake lever firmly.

**For 6AT Vehicle**

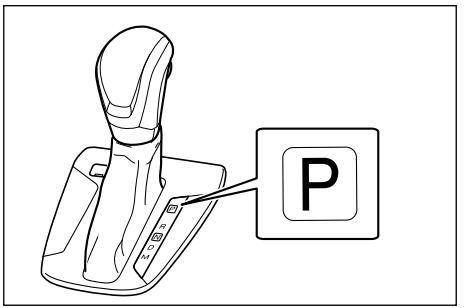


71UM050179

**For e-CVT Vehicle**

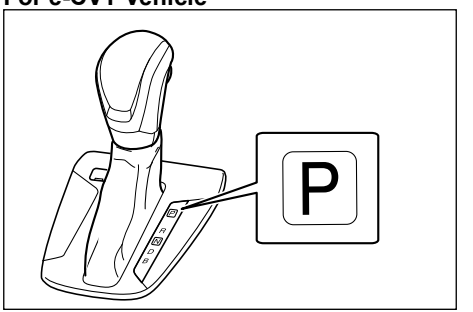


71UM050170

3) Shift the gearshift lever into “P”, stop the engine and slowly release your foot from the brake pedal.

- Visually check that the gearshift lever is in “P”.

**⚠ WARNING**

**If the gearshift lever is in the position other than “P”, the shift lock will not operate, resulting in wrong operation of the gearshift lever and an accident. When you park the vehicle, shift the gearshift lever into “P” and then stop the engine.**

*NOTE:*
*When repeating forward and reverse movements, you may forget that the gearshift lever is in “R”. Shortly after reversing the vehicle, shift the gearshift lever from “R” to “N”.*

**⚠ CAUTION**

**If you allow the vehicle to move backward by coasting while the gearshift lever is in a forward-driving position (“D”, “B” or “M”), or allow it to move forward by coasting while in a reverse-driving position (“R”), the engine could stall, reducing braking and steering capability and possibly resulting in an accident. Also, this could cause a malfunction of the vehicle. When driving the vehicle on slopes, do not perform the above-mentioned operations.**

## Gearshift Indicator (if equipped)




72RH4027

In the following cases, the gearshift indicator is indicated on the information display when the ignition mode is “ON”.
- When the gearshift lever is in a position other than “N” (Neutral).
- For vehicles equipped with the cruise control, when the system is not in use.

The electronic control system monitors driving condition (such as vehicle speed and/or engine revolution), and it shows which gear position is optimal for your driving with the indication on the display.

If UP/DOWN arrow and the gear position other than currently selected are indicated on the display while driving, we recommend you to shift up or down the gear to indicated position. It is the optimal gear position for a driving condition that reduces the over revolution and stress to the engine, and improves fuel consumption.

For details on how to use the transmission, refer to “Using the Transmission” in this section.

**⚠ WARNING**

**The gearshift indicator is designed to indicate optimal gear position for your driving, however, a driver will not be relieved from the duty of care of driving operation or gear change with this indicator.**
**To drive safe, do not gaze the gearshift indicator, pay attention to your driving situation and shift up or down if necessary.**

*NOTE:*
- *The gearshift indicator is not indicated when the gear position is in “N” (Neutral).*
- *If you depress the clutch pedal while UP/DOWN arrow is indicated, the indication will disappear.*
- *In ordinary driving, UP arrow will disappear when you release your foot from the accelerator pedal.*
- *The indication of gearshift indicator timing may differ depending on the vehicle condition and/or driving situation even in the same vehicle speed and engine revolution.*
- *If any of the electrical systems such as the ESP® is working, the gearshift indicator will disappear temporarily.*

**Example of the gearshift indicator**

| Indication | Description |
|---|---|
|  | Lower gear position is selected for the vehicle speed and/or engine revolution. Changing to a higher gear position is recommended.<br>• In this case, shifting up to 4th gear position is recommended. |
|  | Current gear position is optimal for the vehicle speed and/or engine revolution.<br>• In this case, 3rd gear position is the best. |
|  | Higher gear position is selected for the vehicle speed and/or engine revolution. Changing to a lower gear position is recommended.<br>• In this case, shifting down to 2nd gear position is recommended. |

## SHVS (Smart Hybrid Vehicle by Suzuki) (if equipped)

SHVS has an Integrated Starter Generator (ISG) instead of conventional generator to get a better fuel consumption.

Integrated Starter Generator (ISG) is a generator which incorporates a motor function.


The ISG has the following 3 functions.
- Deceleration energy regenerating function
- Engine power assist function
- Starter motor function

**⚠ WARNING**

**Dripping engine oil, brake fluid and coolant, etc. to the ISG may cause a fire or malfunction. Do not spill them when pouring.**

## Deceleration Energy Regenerating Function

### Instrument cluster (Type A)

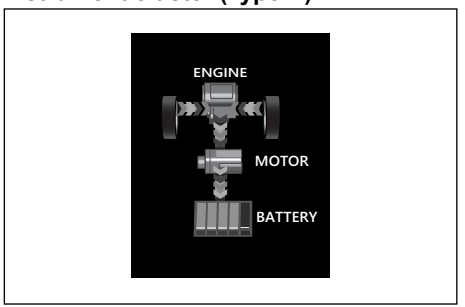


69T051180

### Instrument cluster (Type B)



71UM050203

While decelerating your vehicle, the ISG generates electricity without engine power. This reduces engine loads and improves fuel consumption.

While decelerating your vehicle, deceleration energy regenerating function will be activated when the following conditions are satisfied.


- Gearshift lever is not in “N” (Neutral).
- Clutch pedal is not depressed.
- Inside temperature of lead-acid battery is in normal condition.
- Lithium-ion battery is not fully charged and inside temperature is in normal condition.

etc.

*NOTE:*
*The deceleration energy regenerating function may not work depending on vehicle conditions.*

## Engine Power Assist Function

### Instrument cluster (Type A)

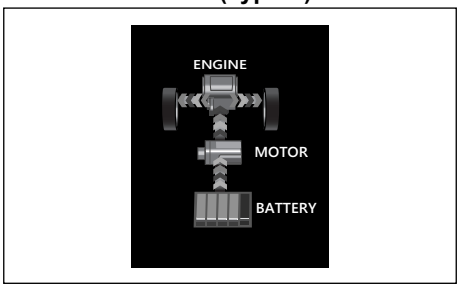


69T051190

### Instrument cluster (Type B)



71UM050204

While the vehicle is running, ISG assists engine power as a motor in the following limited condition. This reduces engine loads and improves fuel consumption.


While the vehicle is running with the engine speed at approximately 3900 rpm or less, engine power assist function will be activated when all of the following conditions are satisfied.

- SHVS system and ENG A-STOP system are working properly. (ENG A-STOP OFF indicator light is not blinking.)
- Clutch pedal is not depressed.
- ESP® is not activated.
- Accelerator pedal is excessively depressed.
- Lead-acid battery and lithium-ion battery are fully charged and each inside temperature is in normal condition.
- Engine coolant temperature is in normal condition.
- ISG inside temperature is in normal condition.

*NOTE:*
*The engine power assist function may not work depending on vehicle conditions.*

## Starter Motor Function

**Instrument cluster (Type A)**

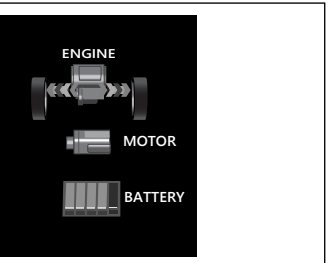


69T051200

**Instrument cluster (Type B)**



71UM050174

After the engine auto stop by the ENG A-STOP system, the engine will be restarted using a cranking power of the ISG.

The starting with the ISG is quiet compared with starting by the conventional starter motor.

*NOTE:*
*When you restart the engine by pushing the engine switch, the conventional starter motor is used and you will hear a gear engagement sound.*


## Lithium-ion Battery Indication

**Instrument cluster (Type A)**




76TS51010

**Instrument cluster (Type B)**

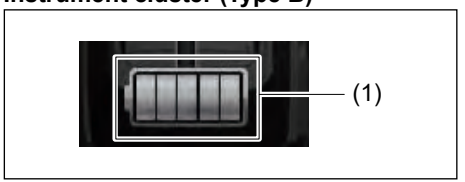



71UM050201

The segments in the lithium-ion battery indicator (1) give an approximate indication of the charge of the lithium-ion battery. The number of segments that appear in the indication increases or decreases with the charge of the lithium-ion battery.

*NOTE:*
*The indicator gives an approximate indication. The indication may be delayed or differ from the actual charge of the lithium-ion battery under certain conditions, for example, when the outside temperature is low.*
*Also, the minimum segment is 1 bar and the bar will never be 0. Even when 1 bar is shown, the battery level may be close to be flat.*

## Deceleration Energy Regenerating Indicator Light

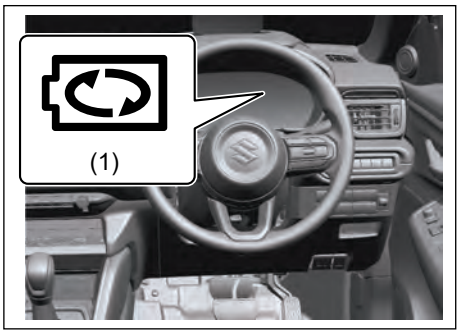



71UM05067

When the deceleration energy regenerating function is working, the deceleration energy regenerating indicator light (1) comes on.

*NOTE:*
*If the gearshift lever is in the "N" (Neutral) position, this light does not come on.*

## ENG A-STOP OFF Light

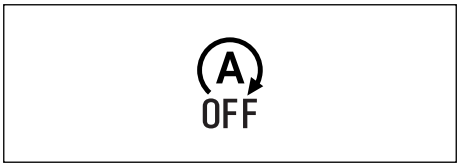


62R0352

If this indicator blinks when driving, there may be something wrong with the ENG A-STOP system or the SHVS system. You should have the system inspected by a Maruti Suzuki authorized workshop.

## Hybrid System (if equipped)

For details, refer to “Hybrid system features (if equipped)” in “FOR SAFE DRIVING” section.

**Energy flow indicator**
With the energy flow indicator in the instrument cluster, you can check the energy flow among the engine, the lithium-ion battery and the tyres.

Each color indicates the following information.
- Orange: Energy flow of the engine
- Blue: Energy flow between the tyres and the motor
- White: Energy flow between the battery and the motor:



71UM050171

- There is no energy flow.



71UM050172

- The vehicle is running by the energy of the lithium-ion battery.
  (Displayed by blue and white)



71UM050173

- The vehicle is running by the energy of both the engine and the lithium-ion battery.
  (Displayed by blue, orange and white)



71UM050174

- The vehicle is running by the energy of the engine.
  (Displayed by orange)



71UM050175

- The vehicle is running and the battery is charged by the energy of the engine. (Displayed by orange and white)



71UM050176


- The lithium-ion battery is charged by the energy of the engine. (Displayed by orange and white)



71UM050177

- The lithium-ion battery is charged by the deceleration energy regeneration function. (Displayed by blue and white)

**Battery indicator**
The segments in the battery indicator (1) give an approximate indication of the charge of the lithium-ion battery.

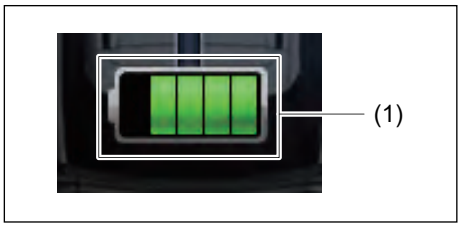

71UM050178

## Acoustic Vehicle Alerting System (if equipped)


When the vehicle is driven using the electric motor (traction motor) at a speed of approximately 23 km/h or less, an alarm is sounded to alert those around the vehicle to its approach.

The alarm may be difficult for people around you to hear when there is a lot of noise around you, or when there is heavy rain or strong winds. Also, because the vehicle approach notification device is mounted in front of the vehicle, it may be difficult to hear the rear of the vehicle compared to the front of the vehicle. The alarm may also be heard in the vehicle while the vehicle is in motion, but this is not a malfunction because the sound is intended to inform people around the vehicle that it is approaching.

**⚠ WARNING**

**Even if the alarm sounds, you may not notice the approach of the vehicle if the surrounding noise is loud, so drive carefully.**

### Acoustic Vehicle Alerting System Warning Light

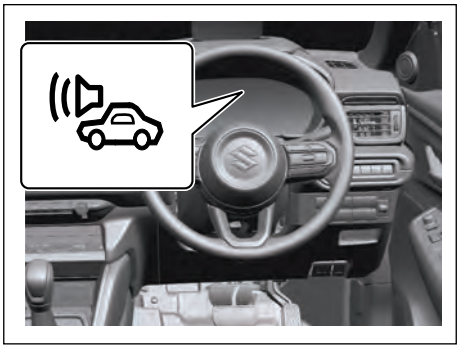
71UM05068

When the power switch is pressed to change the ignition mode to “ON”, this light comes on briefly so you can check that the light is working.

If this light blinks, there may be something wrong with the acoustic vehicle alerting system.

## ENG A-STOP System (Engine Auto Stop Start System) (if equipped)

The ENG A-STOP system (engine auto stop start system) automatically stops the engine while waiting briefly at a traffic light, etc., and automatically restarts the engine afterward. This system helps reduce emissions, improve fuel consumption and lower engine noise.

This system stops the engine temporarily under specific conditions. Before parking the vehicle for an extended period of time or leaving the vehicle, properly apply the parking brake and stop the engine with the engine switch.

Once the specific conditions are met, the engine will stop automatically after the vehicle has stopped. However, the engine will not be stopped automatically until confirmation of the system function is finished.

*NOTE:*
*If your vehicle is equipped with the auto air conditioning system, you can change the automatic engine stop condition via the information display. Refer to "Information display" in "BEFORE DRIVING" section.*

**⚠ CAUTION**


- **Do not get out of the vehicle while the engine is automatically stopped by the ENG A-STOP system. Doing so may lead to an accident.**
  - **– Manual transmission vehicle – If the driver's seat belt is unfastened or the driver's door is opened, the engine will restart.**
  - **– Automatic transmission vehicle – If the driver's seat belt is unfastened, even if the brake pedal is pressed down, or the driver's door is opened, the engine will be restarted to warn you that the engine was stopped automatically by the ENG A-STOP system.**
- **If the engine does not restart automatically after having been stopped automatically by the ENG A-STOP system, push the engine switch to start the engine. Trying to move the vehicle when the engine has not yet restarted requires a strong force to turn the steering wheel or depress the brake pedal, potentially leading to an accident.**

***NOTICE***

**The vehicle equipped with this system uses a dedicated high-performance lead-acid battery that supports ENG A-STOP system. Accordingly, observe the instructions listed below. If these instructions are not observed, the system may not actuate properly or the lead-acid battery may die prematurely.**

- **When replacing the lead-acid battery, use a Maruti Suzuki GENUINE battery specified in the Specification.**
- **Do not draw power from the lead-acid battery terminals for electrical products.**

## Lithium-ion Battery

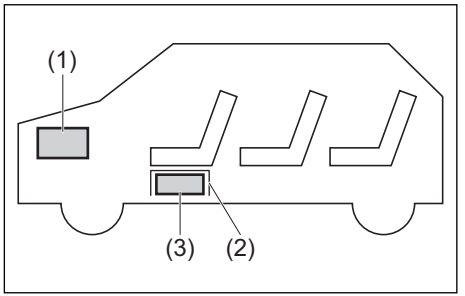


75UM03006

(1) Battery (lead-acid battery)
(2) Lithium-ion battery cover
(3) Lithium-ion battery

This lithium-ion battery is used exclusively for the vehicle equipped with ENG ASTOP system or SHVS, and located below the front left side seat.

- Just like a battery (lead-acid battery), the lithium-ion battery also discharges gradually.
  To prevent the lithium-ion battery from dying, you must charge the lithium-ion battery by driving continuously for at least 30 minutes once a month.
- Vehicle should not be left with ignition in ON or ACC position, or the ignition mode is “ON” or “ACC” for extended periods of time.
- Do not add any external load to lithium-ion battery.
- The lithium-ion battery is maintenance-free.
- To replace or dispose of the lithium-ion battery, consult a Maruti Suzuki authorized workshop.

**⚠ WARNING**

**Wrong handling of the lithium-ion battery may result in fire, electric shock or system malfunction. Accordingly, observe the instructions listed below:**


- **Do not remove the lithium-ion battery cover, dismount or disassemble the lithium-ion battery.**
- **Do not let the lithium-ion battery come in contact with water or other liquids.**
- **Do not apply strong impact on the lithium-ion battery.**
- **Do not step on the lithium-ion battery or put articles on the lithium-ion battery.**
- **Do not disconnect the lithium-ion battery terminals or draw power from the terminals for electrical products.**
- **If lithium-ion battery gets submerged under water, it can lead to fire.**

*NOTE:*
*Lithium-ion battery, if not disposed in an eco-friendly manner and in accordance with the applicable laws, may pose safety and environmental hazard. Maruti Suzuki ensures proper disposal of this battery through established channels in an eco-friendly manner. Owner shall return this lithium-ion battery to Maruti Suzuki authorized dealerships as soon as it is not fit for use in vehicle. Once the owner returns the lithium-ion battery, Maruti Suzuki will ensure proper disposal in compliance with the laws to avoid legal implications to owners. If batteries are not returned to Maruti Suzuki, it will become owners’ responsibility and accountability to ensure proper disposal in accordance with the applicable laws. Maruti Suzuki will not take any responsibility for consequences such as accidents or damages arising due to the abandonment, resale, inappropriate use, modification, dismantling and improper disposal of Lithium-ion battery. Contact your nearby Maruti Suzuki authorized workshop to dispose the used lithium-on battery. ‘Battery Recycling Information’ and necessary handling instructions are also affixed on the battery pack. For more information, connect Maruti Suzuki customer care.*

## Automatic Stopping/Restarting of the Engine

**Manual transmission vehicles**

1) With the brake pedal depressed, decelerate the vehicle.

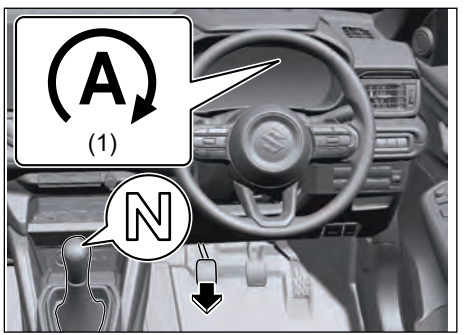



71UM05069

2) After the vehicle has stopped with the clutch pedal depressed and the gearshift lever shifted to “N”, and then release the clutch pedal, the engine will stop automatically.
   The ENG A-STOP indicator light (green) (1) will come on.
   - The ENG A-STOP system will not stop the engine automatically if all the automatic engine stop conditions are not met.
     For details, refer to the section, “Operating Conditions of ENG A-STOP System”.
   - During the automatic engine stop, the engine may shut down, accompanied by an interior buzzer or restarted, to ensure safety.
     For details, refer to the section, “Precautions of When the Engine is Stopped Automatically”.

***NOTICE***

**During the automatic engine stop, do not shift the gearshift lever to a position other than “N” without depressing the clutch pedal. If the gearshift lever is in a position other than “N”, the engine will not restart automatically even if the clutch pedal is depressed.**

*NOTE:*
*During the automatic engine stop, electric equipment will be in the following conditions:*
- *The audio and other electrical component can be used during the automatic engine stop, but the air conditioner will switch to the fan mode.*
- *If the vehicle is equipped with an auto air conditioner, the fan speed will be limited during the automatic engine stop (only in the auto control mode) to keep the cabin air-conditioned for a longer time.*

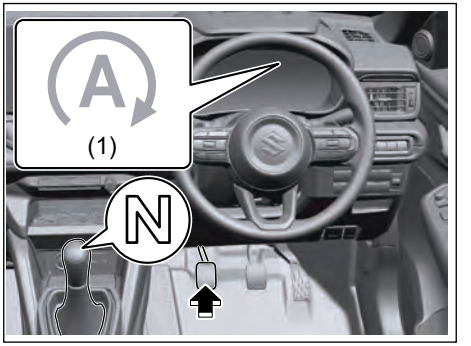


71UM05070

3) Regardless of whether the vehicle has stopped or not, depressing the clutch pedal will restart the engine and ENG A-STOP indicator light (green) (1) will go off.

While the engine is stopped automatically, depressing the clutch pedal will restart the engine consuming fuel. Therefore, for fuel economy, it is recommended to depress the clutch pedal just before the vehicle start.


- Without depressing the clutch pedal, the engine may restart automatically if the automatic engine restart conditions are met.
  For details, refer to the section, “Automatic engine restart conditions”.
- When restarting the engine, keeping brake force temporarily prevents the vehicle from moving forward by the

creeping function. Also, this prevents the vehicle from rolling downward on a hill. For details, refer to the section “Hill Hold Control System”.

*NOTE:*
*When the engine is restarted automatically, the following conditions may be found as the hill hold control system is activated, but this is not a malfunction.*
- *You may hear a sound from the engine room.*
- *As brake pedal becomes heavy, it may be difficult for you to depress it.*

**Automatic transmission vehicles**


1) Depress the brake pedal to decelerate while the gearshift lever is in the “D” position will automatically stop the engine before the vehicle is stopped (approximately 9 km/h or less). At the same time, the ENG A-STOP indicator light (green) will remain on.
   - The engine is not stopped automatically if all of the conditions to stop the engine automatically are not met, even if the brake pedal is pressed down to decelerate.
     For details on the conditions for automatically stopping the engine, refer to “Conditions to Stop the Engine Automatically” in this section.
   - To ensure safety when the engine is stopped automatically, the interior buzzer may sound and the engine will stall, or the engine may be restarted.

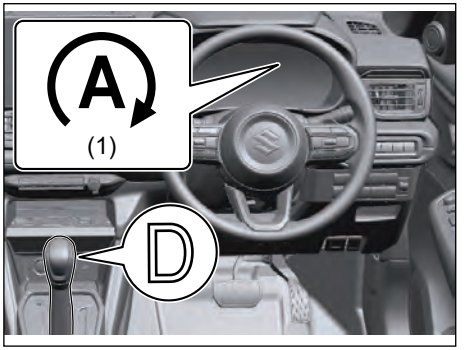

71UM05071

*NOTE:*
- *The engine is not stopped automatically when decelerating without depressing the brake pedal, for example, by using engine braking.*
- *The engine may be stopped automatically when the vehicle is stopped, even if the engine is not stopped automatically before stopping the vehicle (approximately 9 km/h or less).*
- *Electrical components, such as the navigation system or audio system, can be used while the engine has been stopped automatically, however, the air conditioner switches to the ventilation position.*
- *For the automatic heating and air conditioning system, airflow is limited (only under automatic operation) when the engine is stopped automatically, in order to improve the cooling and heating performance.*

2) When you remove your foot from the brake pedal, regardless of whether it is before or after stopping the vehicle, the engine is restarted and the ENG A-STOP indicator light (green) goes off.
   - The engine is restarted automatically if the conditions to restart the engine automatically are met, even if the brake pedal is depressed.
     For details on the conditions for automatically restarting the engine, refer to “Conditions to Restart the Engine Automatically” in this section.

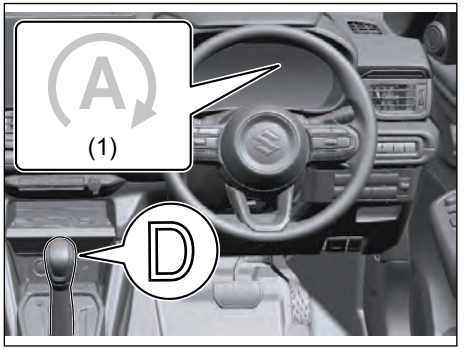


71UM05072

*NOTE:*

- *The hill hold control system is activated when the engine is restarted automatically.*
- *When engine restarts automatically, the electric parking brake may engage or disengage and interrupt the restarting process, and that is normal operation.*

### Precautions of When the Engine is Stopped Automatically

**⚠ WARNING**

**Do not perform any of the following operations while the engine has been stopped automatically. This may result in an accident.**

| | Operation/Vehicle Condition | Solution |
|---|---|---|
| Common | Engine hood opened<br>• The interior buzzer sounds intermittently.<br>• After the engine is stopped automatically, it stalls.<br>• The ENG A-STOP indicator light (green) goes off. | To restart the engine, follow the procedure below.<br>1) Set the parking brake firmly, and then place the gearshift lever in the “N” position (for manual transmission) or “P” position (for automatic transmission).<br>2) Securely close the engine hood.<br>3) Press the engine switch to restart the engine. |
| Manual transmission | Driver’s seat belt unfastened or driver’s door opened<br>• The engine is restarted automatically.<br>• The ENG A-STOP indicator light (green) blinks 5 times, then goes off. | Fasten the driver’s seat belt and/or close the driver’s door. |
| | Gearshift lever shifted to a position other than “N” without depressing the clutch pedal, driver’s seat belt unfastened and driver’s door opened<br>• The interior buzzer sounds intermittently.<br>• After the engine is stopped automatically, it stalls.<br>• The ENG A-STOP indicator light (green) goes off. | To restart the engine, follow the procedure below.<br>1) Set the parking brake firmly, and then place the gearshift lever in the “N” position.<br>2) Close the door and buckle the seat belt.<br>3) Press the engine switch to restart the engine. |

| | Operation/Vehicle Condition | Solution |
|---|---|---|
| Automatic transmission | Driver's seat belt unfastened, or driver's door opened<br>• The engine is restarted automatically.<br>• The ENG A-STOP indicator light (green) blinks 5 times, then goes off. | Before driving, close the door and buckle the seat belt. In addition, before getting out of the vehicle, follow the procedure below.<br>1) Set the parking brake firmly, and then place the gearshift lever in the "P" position.<br>2) When the vehicle will be stopped for a long time or when you will leave the vehicle unattended, press the engine switch to stop the engine. |

*NOTE:*
*The following indicator lights in the instrument cluster do not come on when the engine is stopped automatically.*
- *Malfunction indicator light, electric power steering light, oil pressure light, charging light*

## Operating Conditions of ENG A-STOP System

**Standby conditions**
If all of the following conditions are met while driving, the automatic engine stop will be permitted.

| | | |
|---|---|---|
| When the engine is started | | • The engine is started with the engine hood securely closed. |
| When driving | Common | • The ENG A-STOP system is not deactivated (OFF).<br>• The battery is charged more than a certain amount, and the temperature inside the battery is within the specified range. (#1)<br>• The engine coolant temperature is within the specified range.<br>• The driver's seat belt is fastened.<br>• The driver's door is securely closed.<br>• The engine hood is securely closed.<br><Vehicle with automatic heating and air conditioning system><br>• The air from the outlets is sufficiently cooled while cooling or sufficiently warmed while heating.<br>• The defroster is turned off. |
| | Manual transmission | • There is no signal to prevent stopping the engine from any electronic control systems other than the ENG A-STOP system. (#2) |
| | Automatic transmission | • The gearshift lever is in the "D" or "N" position. (#3)<br>• The manual mode is not in use.<br>• There is no signal to prevent stopping the engine from any electronic control systems other than the ENG A-STOP system. |

#1: If the battery is discharged, for example, if the vehicle has not been used for a long time or electrical components, such as the navigation system or audio system, have not been used for a long time while the engine was stopped, it may take some time until the system can be in standby.

#2: If any of the warning and indicator lights affecting the ENG A-STOP system come on, the engine will not be stopped automatically.

#3: The system will be in standby even though the gearshift lever is in the "N" position, however, the engine will be stopped automatically when the vehicle is stopped, instead of when it is decelerating (approximately 9 km/h or less) before stopping.

**Conditions to stop the engine automatically**
If all of the following conditions are met while the standby conditions are met, the engine is stopped automatically when the vehicle is decelerating before stopping or when the vehicle is stopped.

| | | |
|---|---|---|
| When decelerating before stopping | Automatic transmission | • The ABS or ESP® system has not been activated.<br>• Brake booster vacuum pressure is normal.<br>• The brake pedal is sufficiently depressed. (#)<br>• The vehicle is decelerating to a speed of approximately 9 km/h or less.<br>• The accelerator pedal is not depressed.<br>• The vehicle is not being driven on a steep hill.<br>• The brake is not applied abruptly. |
| When the vehicle is stopped | Manual transmission | • The gearshift lever is in “N” position.<br>• The clutch pedal is released. |
| | Automatic transmission | • The ABS or ESP® system has not been activated.<br>• Brake booster vacuum pressure is normal.<br>• The brake was not applied abruptly before the vehicle was stopped.<br>• The brake pedal is sufficiently depressed. (#)<br>• The accelerator pedal is not depressed.<br>• The vehicle is not stopped on a steep hill. |

#: The engine may not be stopped automatically if the brake pedal was depressed lightly or strongly.

**Conditions to restart the engine automatically**
If any of the following vehicle conditions occur or operations are performed while the engine is stopped automatically, the engine is restarted automatically and the ENG A-STOP indicator light (green) goes off.

<table>
<tr><td colspan="2">Common</td><td>• The ENG A-STOP system is deactivated (OFF).<br>• The battery continues to be discharged. (#1)<br>• A malfunction was detected in this system. (#2)<br>• Brake booster vacuum pressure is low. (#1)<br>• The temperature of the air from the outlets changes greatly, or the cooling and heating performance is insufficient. (#1)<br>• The temperature selector was greatly set toward COOL while cooling or greatly set toward HOT while heating. (#1)<br>• The defroster is turned on. (#1)</td></tr>
<tr><td colspan="2">Manual transmission</td><td>• The clutch pedal is depressed.</td></tr>
<tr><td colspan="2">Automatic transmission</td><td>• The foot is removed from the brake pedal. (#3)<br>• The accelerator pedal is depressed.<br>• The gearshift lever is placed in the “P”, “R” or “M” position.</td></tr>
<tr><td rowspan="2">When decelerating (approximately 9 km/h or less for automatic transmission vehicles)</td><td>Common</td><td>• The engine hood was opened.</td></tr>
<tr><td>Automatic transmission</td><td>• The gearshift lever is placed in the “N” position.<br>• The slope of the road suddenly changes. (#1)</td></tr>
</table>


| | | |
|---|---|---|
| When the vehicle is stopped | Common | • The driver's seat belt is unfastened. (#1)<br>• The driver's door is opened. (#1)<br>• The vehicle is moving along a slope. (#1)<br>• Some time (about 3 minutes) has passed since the engine was stopped automatically. (#1) |
| | Automatic transmission | • After the gearshift lever is placed in the "N" position, it is returned to the "D" position. |

#1: After the ENG A-STOP indicator light (green) blinks, it goes off. Also, the interior buzzer may sound at the same time.

#2: Depending on the situations of malfunction, it is a normal restart or the restart as #1.

#3: The engine may be restarted automatically when the brake pedal is depressed lightly. In this case, when the brake pedal is depressed again, the engine is stopped automatically and the ENG A-STOP indicator light (green) comes on again.

### ENG A-STOP OFF Switch (if equipped)

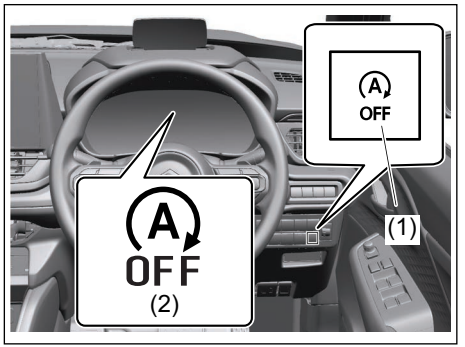



71UM050102

The ENG A-STOP system can be deactivated.

- To deactivate the system, press the ENG A-STOP OFF switch (1) to turn on ENG A-STOP OFF light (2).
- To activate the system once again, press the switch (1) again to turn off the indicator.
- Every time the engine is stopped manually, the system is enabled again and the ENG A-STOP OFF light (2) goes off.

*NOTE:*
*Pressing the ENG A-STOP OFF switch (1) during the automatic engine stop will restart the engine automatically and the ENG A-STOP OFF light (2) will come on.*

### ENG A-STOP OFF Light (if equipped)

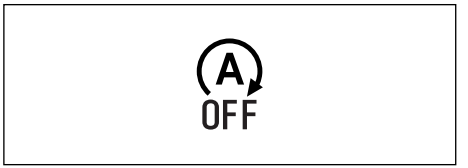


62R0352



This indicator comes on in the information display.



- This indicator comes on when the ENG A-STOP system is deactivated.
- The indicator blinks when the engine switch is pressed to change the ignition mode to ON, if one of the conditions listed below is met (The ENG A-STOP system or the SHVS system does not actuate correctly while the indicator is blinking). Have the system inspected immediately by a Maruti Suzuki authorized workshop.
  – If there is something wrong with the ENG A-STOP system, SHVS system or the lithium-ion battery.
  – An engine component (ISG) or the lead-acid battery is due for replacement.

*NOTE:*
*If the indicator blinks during the automatic engine stop, the engine may shut down.*

## Information Message

The information display shows the messages to let you know certain problems of the ENG A-STOP system.

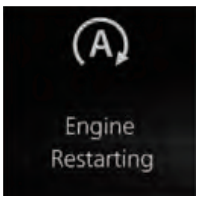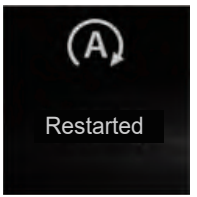
| Information message | Cause and remedy |
|---|---|
|  71UM050139 | The ENG A-STOP system cannot stop the engine automatically because something of the actuation conditions is not met.<br>For details, refer to “Operating Conditions of ENG A-STOP System” in this section. |
|  71UM050140 | The engine is restarting automatically because one of the following automatic engine restart conditions is met.<br>• The temperatures at air conditioner outlets have changed considerably after the automatic engine stop to the point of affecting the cooling/heating performance.<br>• The lead-acid battery has discharged substantially.<br>• Some time has elapsed after the start of the automatic engine stop. |
|  71UM050141 | The engine restarted automatically because one of the following automatic engine restart conditions is met.<br>• The negative pressure of the brake booster has dropped. |
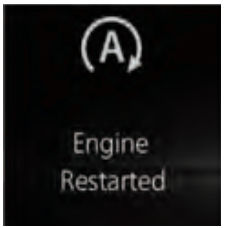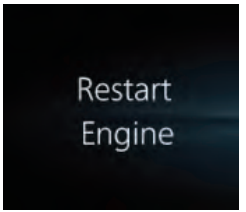
| Information message | Cause and remedy |
|---|---|
|  <br>71UM050142 | The engine restarted automatically because one of the following automatic engine restart conditions is met.<br>• The defroster is turned on.<br>• The driver's seat belt is released.<br>• The driver's door is opened.<br>• The vehicle is started to move on a slope, etc. |
|  <br>71UM050163 | The engine shut down because one of the following operations is performed during the automatic engine stop.<br>• The hood is opened.<br>• For Manual transmission vehicle, the driver's door is opened with the driver's seat belt is unfastened.<br><br>Restart the engine by usual operation. Refer to "Starting / Stopping Engine or Hybrid System" in this section for details. |
| **Manual transmission**<br>  <br>71UM050164 | The gearshift lever is shifted to a position other than "N" (Neutral) position without depressing the clutch pedal during the automatic engine stop.<br>To restart the engine, place the gearshift lever in "N" (Neutral) position and depress the clutch pedal. |

## Driving Mode (if equipped)

The driving modes can be selected to suit driving condition.

### Driving Mode Select Switch

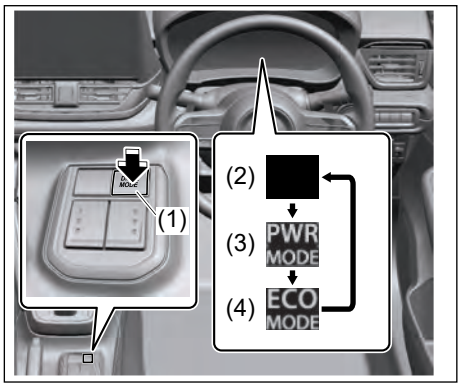


71UM050103

Each time the switch (1) is pressed, the system changes between normal mode, power mode and ECO drive mode

(2) Normal mode
This mode provides an optimal balance of fuel economy, quietness, and dynamic performance. This is suitable for normal driving.

(3) Power mode
This mode controls the hybrid system to provide quick, powerful acceleration. Also, this mode makes it suitable for when agile driving response is desired, such as when driving on roads with many curves.
When the Power mode is selected, Power mode indicator comes on.

(4) Eco drive mode
This mode helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling).
When the Eco drive mode is selected, Eco drive mode indicator comes on.

**Operation of the air conditioning system in Eco drive mode**

Eco drive mode controls the heating/cooling operations and fan speed of the air conditioning system to enhance fuel efficiency. To improve air conditioning performance, perform the following operations:

- Adjust the fan speed
- Turn off Eco drive mode

**Automatic deactivation of Power mode**


If the power switch is turned off after driving in power mode, the drive mode will be changed to normal mode.

### EV Drive Mode Switch

In EV drive mode, electric power is supplied by the hybrid battery (traction battery), and only the electric motor (traction motor) is used to drive the vehicle.
This mode allows you to drive in residential areas early in the morning and late at night, or in indoor parking lots, etc., without concern for noises and gas emissions.

**Operating instructions**

Press EV drive mode switch to turn on the EV drive mode. Press the switch again to turn off this mode.

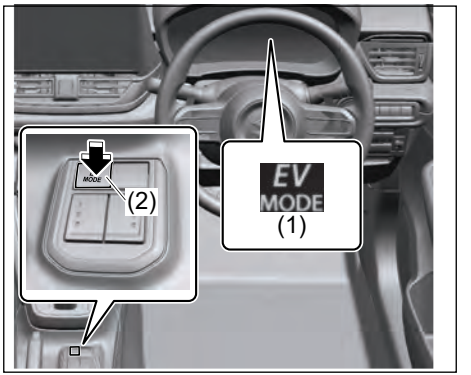


71UM050104

When EV drive mode is turned on, EV drive mode indicator (1) will come on. Pressing the switch (2) when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor).

**Situations in which EV drive mode cannot be turned on**
It may not be possible to turn EV drive mode on in the following situations. If it cannot be turned on, a message will be shown on the information display.
- The temperature of the hybrid system is high.
  The vehicle has been left in the sun, driven on a hill, driven at high speeds, etc.
- The temperature of the hybrid system is low.
  The vehicle has been left in temperatures lower than about 0°C (32°F) for a long period of time, etc.
- The gasoline engine is warming up.
- The hybrid battery (traction battery) is low.
  The remaining battery level indicated in the information display is low.
- Vehicle speed is high.
- The accelerator pedal is depressed firmly or the vehicle is on a hill, etc.
- The windshield defogger is in use.

**Switching to EV drive mode when the gasoline engine is cold**
If the hybrid system is started while the gasoline engine is cold, the gasoline engine will start automatically after a short period of time in order to warm up. In this case, you will become unable to switch to EV drive mode.

**Automatic cancellation of EV drive mode**
When driving in EV drive mode, the gasoline engine may start automatically and the vehicle may be driven by the gasoline engine and electric motor (traction motor) in the following situations. When EV drive mode is canceled, a message will be displayed on the information display.
- The hybrid battery (traction battery) becomes low.
  The remaining battery level indicated in the information display is low.
- Vehicle speed is high.
- The accelerator pedal is depressed firmly or the vehicle is on a hill, etc.

**Possible driving distance when driving in EV drive mode**
EV drive mode's possible driving distance ranges from a few hundred meters to approximately 1 km. However, depending on vehicle conditions, there are situations when EV drive mode cannot be used. (The distance that is possible depends on the hybrid battery [traction battery] level and driving conditions.)

**Fuel economy**
The hybrid system is designed to achieve the best possible fuel economy during normal driving (using the gasoline engine and electric motor [traction motor]). Driving in EV drive mode more than necessary may lower fuel economy.


**If "EV MODE UNAVAILABLE" is shown on the information display**
The EV drive mode is not available. Use the EV drive mode when it becomes available.

**If "EV MODE CANCELED" is shown on the information display**
The EV drive mode has been automatically canceled. Drive the vehicle for a while before attempting to turn on the EV drive mode again.

**⚠ WARNING**

**When driving in EV drive mode, pay special attention to the area around the vehicle. Because there is no engine noise, pedestrians, people riding bicycles or other people and vehicles in the area may not be aware of the vehicle starting off or approaching them.**

## Four-mode 4WD System (if equipped)

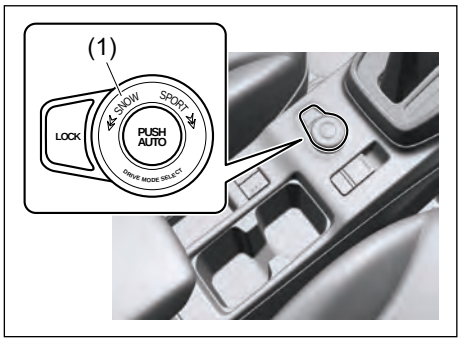


71UM05073

(1) Driving mode switch

The four-mode 4WD system enables you to select the driving mode according to driving conditions by operating the driving mode switch.

### Driving Modes

**AUTO**

This mode prioritizes fuel economy in typical driving conditions. The system switches the driving mode to 4WD if it detects wheel spin.

**SPORT**

This mode is optimized for sporty driving. The system apportions torque to promote cornering performance.

- In the vehicle with automatic transmission, this mode optimizes the throttle/torque characteristics with small and moderate throttle openings to keep the engine speed high for good response.

**SNOW**

This mode is optimal for snowy, unpaved, and other slippery surfaces. This mode enhances traction during acceleration on slippery surfaces, and enables stable cornering on slippery surfaces.

**LOCK**


This mode is for extricating the car from snow, mud, or sand.

### Driving Mode Switch Operation

Operate the driving mode switch according to the appropriate procedure described below.

**How to turn on driving mode switch**

The driving mode switch will activate when the ignition mode is ON.

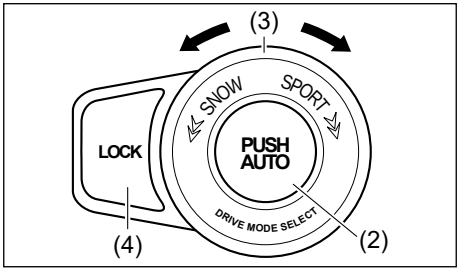


76TS51170

**Selecting AUTO mode**

Push the “PUSH AUTO” part (2) of the driving mode switch.

**Selecting SPORT mode**

Turn the dial (3) of the driving mode switch clockwise to the “SPORT” position.

**Selecting SNOW mode**


Turn the dial (3) of the driving mode switch counterclockwise to the “SNOW” position.

**Selecting LOCK mode**

When the vehicle speed is less than 60 km/h and the SNOW mode is selected, push the “LOCK” part (4) of the driving mode switch.

*NOTE:*
*If the vehicle speed exceeds about 60 km/h in the LOCK mode, the driving mode changes to the SNOW mode automatically. Even when the vehicle speed reduces, on the other hand, the driving mode does not return to the LOCK mode automatically. You should select the LOCK mode according to the driving conditions.*

*NOTE:*
- *The information display shows current driving mode.*
- *When the engine switch is pressed to change the ignition mode to ON, the AUTO mode is selected automatically.*
- *The driving mode switch can be operated when the vehicle is either stopped or moving.*
- *Make sure that the front wheels are in the straight ahead position when operating the driving mode switch.*
- *While making turns or accelerating and decelerating, operating the driving mode switch, pressing the engine switch to change the ignition mode to ACC or LOCK may cause a shock, but this is not a system malfunction.*
- *When you operate your vehicle under conditions that involve wheel spin, such as driving off-road in the sand or water or when a wheel has run off the road, the difference in the amount of revolution between front wheels and rear wheels increases (wheels run idle). If this state continues, the oil temperature of the driving system parts increases. The 4WD warning light warns of this condition by blinking. At the same time, the information display shows this message: "AWD SYSTEM HIGH TEMP AWD IS OFF".*

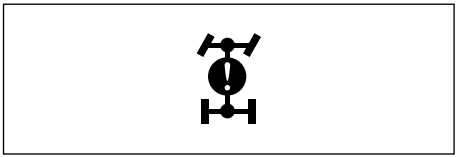

57L30042

*When the 4WD warning light blinks, park the vehicle at a safe place and run the engine idle. After a while, the 4WD warning light will go out and the system will resume.*

**NOTICE**

- **Note that 4WD vehicles are not all-around vehicles. Be sure to observe the following instructions when driving your vehicle.**
  - **– Do not drive through water such as by crossing a river.**
  - **– Do not drive continuously in places such as sand and mud where front wheels tend to race.**
  - **– When any wheel is in the air for such reason as running off the road, do not race it needlessly.**

(Continued)

**NOTICE**

(Continued)
- **If the 4WD warning light comes on or blinks when driving, there may be something wrong with the four-mode 4WD system. Have the system inspected by a Maruti Suzuki authorized workshop.**

**NOTICE**

**Unevenly worn tyres can cause problems with the 4WD system. Be sure to rotate the tires according to the maintenance schedule. Refer to "Tyres" and "Maintenance Schedule" in the "INSPECTION AND MAINTENANCE" section for proper tyre rotation procedures.**


## Warning and Indicator Messages

The information display shows the warning and indicator message when the four-mode 4WD system is operated, or has a problem.

**Warning and indicator messages**

| Warning and Indicator Message | Master Warning Indicator Light | Sound | Cause and Remedy |
|---|---|---|---|
|  71UM050143 | Blinks  | Beep (one time from interior buzzer) | There may be a problem with the four-mode 4WD system.<br>Have your vehicle inspected by a Maruti Suzuki authorized workshop. |
|  71UM050144 | Blinks  | Beep (one time from interior buzzer) | Tyres of different sizes may be fitted or tyres may be insufficiently inflated.<br>Have your vehicle inspected by a Maruti Suzuki authorized workshop. |

| Warning and Indicator Message | Master Warning Indicator Light | Sound | Cause and Remedy |
|---|---|---|---|
|  <br>71UM050145 | Blinks<br>  | Beep (one time from interior buzzer) | Drive train components may be overheated.<br>Stop in a safe place and allow the engine to idle. |
|  <br>71UM050146 | Blinks<br>  | Beep (one time from interior buzzer) | If this message is displayed, have your vehicle inspected by a Maruti Suzuki authorized workshop. |
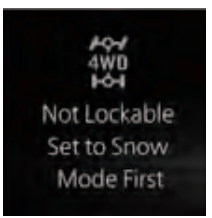
| Warning and Indicator Message | Master Warning Indicator Light | Sound | Cause and Remedy |
|---|---|---|---|
|  <br>71UM050147 | Blinks<br>  | Beep (one time from interior buzzer) | The “LOCK” part of the driving mode switch is pushed when the vehicle speed is more than 60 km/h. (#1)<br>Refer to “Selecting LOCK mode” in this section. |
|  <br>71UM050148 | Blinks<br>  | Beep (one time from interior buzzer) | The “LOCK” part of the driving mode switch is pushed without selecting the SNOW mode. (#1)<br>Refer to “Selecting LOCK mode” in this section. |

(#1) This message will disappear for a while even if the problem that caused the message to appear is not corrected.

| Warning and Indicator Message | Master Warning Indicator Light | Sound | Cause and Remedy |
|---|---|---|---|
|  <br>71UM050149 | Blinks<br>  | Beep (one time from interior buzzer) | There may be a problem with the driving mode switch. Have your vehicle inspected by a Maruti Suzuki authorized workshop. |

## SUZUKI SAFETY SUPPORT (if equipped)

SUZUKI SAFETY SUPPORT consists of the driving assist systems and contributes to a safe and comfortable driving experience.

**⚠ WARNING**

**SUZUKI SAFETY SUPPORT**

**SUZUKI SAFETY SUPPORT is designed to under the assumption that the driver will drive safely, and is designed to help reduce the impact to the occupants in a collision and assist the driver under normal driving conditions.**
**As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is solely responsible for paying attention to the vehicle's surroundings and driving safely.**
(Continued)

**⚠ WARNING**

(Continued)
**For safe use**

- **Do not overly rely on this system. The driver is solely responsible for paying attention to the vehicle's surroundings and driving safely. This system may not operate in all situations and provided assistance is limited. Over-reliance on this system to drive the vehicle safely may lead to an accident resulting in death or serious injury.**
- **Do not attempt to test the operation of the system, as it may not operate properly, possibly leading to an accident.**
- **When driver's attention is necessary or the system has malfunction, a warning message will appear or a warning buzzer will sound to get your attention for driving. When you see a warning message on the display, follow the message to drive safely.**
- **Depending on external noise, the volume of the audio system, etc. it may be difficult to hear the warning buzzer. Also, depending on the road conditions, it may be difficult to recognize the operation of the system.**

(Continued)

**⚠ WARNING**

(Continued)
**When it is necessary to disable the system**

**In the following situations, make sure to disable the system.**
**Failure to do so may lead to the system not operating properly, possibly leading to an accident resulting in death or serious injury.**

- **When the vehicle is tilted due to being overloaded or having a flat tyre**
- **When towing another vehicle**
- **When the vehicle is being transported by a truck, ship, train, etc.**
- **When the vehicle is raised on a lift and the tyres are allowed to rotate freely**
- **When inspecting the vehicle using a drum tester such as a chassis dynamometer or speedometer tester, or when using an on vehicle wheel balancer**
- **When the vehicle is driven in a sporty manner or off-road**
- **When using an automatic car wash**

(Continued)

**⚠ WARNING**

(Continued)
- **When a sensor is misaligned or deformed due to a strong impact being applied to the sensor or the area around the sensor**
- **When accessories which obstruct a sensor or light are temporarily installed to the vehicle**
- **When a compact spare tyre (optional) or tyre chains are installed to the vehicle**
- **When the tyres are excessively worn or the inflation pressure of the tyres is low**
- **When tyres other than the manufacturer specified size are installed**
- **When the vehicle cannot be driven stably, due to a collision, malfunction, etc.**

*NOTE:*
*The system's detection of preceding vehicles, obstacles, parking (lot) lines and road signs is limited within field of view.*
*Also, it will take several seconds to become subject to control and alarm after an object enters the detectable field of view.*

## Driving assist systems

- Dual Sensor Brake Support II (DSBS II) (if equipped)
- Lane departure prevention system (if equipped)
- Vehicle swaying warning (if equipped)
- Lane keep assist (if equipped)
- High beam assist (if equipped)
- Cruise control (if equipped)
- Adaptive cruise control (with all-speed following and stop keeping function) (if equipped)
- Parking sensors
- Blind Spot Monitor (if equipped)
- Rear Cross Traffic Alert (if equipped)

**⚠ WARNING**

**<u>If accurate tyre rotation speed cannot be detected</u>**


**If accurate tyre rotation speed cannot be detected such as the specified tyre pressure is not maintained, following functions may not operate properly.**
- **Dual Sensor Brake Support II (DSBS II)**
- **Lane departure prevention system**
- **Lane keep assist**
- **Cruise control**
- **Adaptive cruise control (with all-speed following and stop keeping function)**

## Sensors used by SUZUKI SAFETY SUPPORT (if equipped)

Various sensors are used to obtain the necessary information for system operation.

### Sensors which detect the surrounding conditions


**Front**

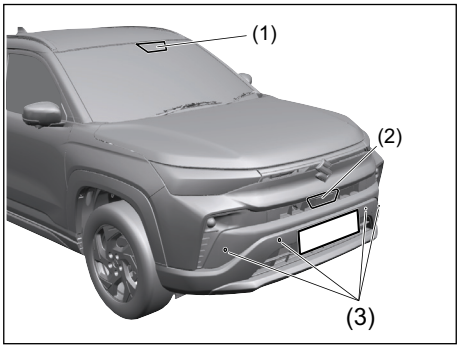


71UM05026

(1) Front camera (DSBS II)
(2) Front radar (DSBS II)
(3) Ultrasonic sensors

**Rear**

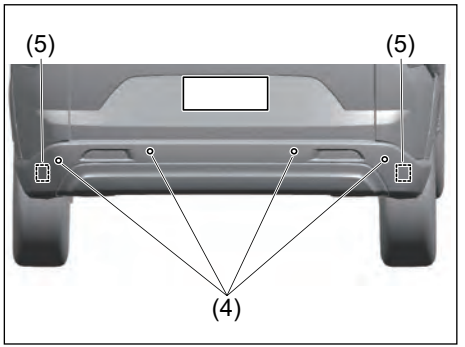


71UM05027

(4) Ultrasonic sensors
(5) Radar sensor (rear) (if equipped)

**⚠ WARNING**

**To prevent malfunction of the front camera (DSBS II)**


**Observe the following precautions. Failure to do so may lead to the front camera (DSBS II) not operating properly, possibly leading to an accident resulting in death or serious injury.**

- **Always keep the windshield clean.**
  - **If the windshield is dirty or covered with an oily film, water droplets, snow, etc., clean the windshield.**
  - **Even if a glass coating agent is applied to the windshield, it will still be necessary to use the windshield wipers to remove water droplets, etc. from the area of the windshield in front of the front camera (DSBS II).**
  - **If the inner side of the windshield where the front camera (DSBS II) is installed is dirty, consult Maruti Suzuki authorized workshop.**

(Continued)

**⚠ WARNING**

(Continued)

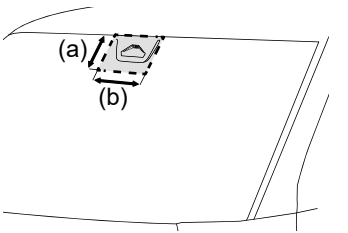


71UM05028

(a) Approximately 24 cm
(b) Approximately 25 cm

- **Do not attach stickers (including transparent stickers) or other items to the area of the windshield in front of the front camera (DSBS II) (shaded area in the illustration).**
- **Do not place anything near the front of the windshield that may block the view of the front camera (DSBS II).**
- **If the part of the windshield in front of the front camera (DSBS II) is fogged up or covered with condensation or ice, use the windshield defogger to remove the fog, condensation, or ice.**

(Continued)

**⚠ WARNING**

(Continued)

- **If water droplets cannot be properly removed from the area of the windshield in front of the front camera (DSBS II) by the windshield wipers, replace the wiper insert or wiper blade.**
- **When replacing the front wiper body or blades, use the specified ones (for more information, consult Maruti Suzuki authorized workshop).**
- **Do not attach window tint to the windshield.**
- **Replace the windshield if it is damaged or cracked.**
  **If the windshield has been replaced, recalibration of the front camera (DSBS II) will be necessary. consult Maruti Suzuki authorized workshop.**
- **Do not allow liquids to contact the front camera (DSBS II).**
- **Do not allow bright lights to shine into the front camera (DSBS II).**
- **Do not damage the lens of the front camera (DSBS II) or allow it to become dirty.**
  **When cleaning the inside of the windshield, do not allow glass cleaner to contact the lens of the front camera (DSBS II).**


(Continued)

**⚠ WARNING**

(Continued)

**Do not touch the lens of the front camera (DSBS II).**
**If the lens of the front camera (DSBS II) is dirty or damaged, contact a Maruti Suzuki authorized workshop for details.**

- **Do not subject the front camera (DSBS II) to a strong impact.**
- **Do not change the position or orientation of the front camera (DSBS II) or remove it.**
- **Do not disassemble the front camera (DSBS II).**
- **Do not modify any parts around the front camera (DSBS II), such as the inside rear view mirror or ceiling.**
- **Do not block opening (A) of the front camera (DSBS II) cover with holy cloth, sticker, or similar materials.**

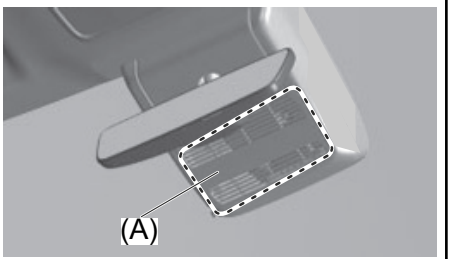


71UM05103

(Continued)

**⚠ WARNING**

(Continued)

- **Do not attach accessories which may obstruct the front camera (DSBS II) to the hood, front grille, or front bumper.**
  **Contact a Maruti Suzuki authorized workshop for details.**
- **If a surfboard or other long object is to be mounted on the roof, make sure that it will not obstruct the front camera (DSBS II).**
- **Do not modify or change the headlights and other lights.**


**Front camera (DSBS II) installation area on the windshield**

**If the system determines that the windshield may be fogged up, it will automatically operate the heater to defog the part of the windshield around the front camera (DSBS II). When cleaning, etc., be careful not to touch the area around the front camera (DSBS II) until the windshield has cooled sufficiently, as touching it may cause burns.**

(Continued)

**⚠ WARNING**

**To prevent malfunction of the front radar (DSBS II)**

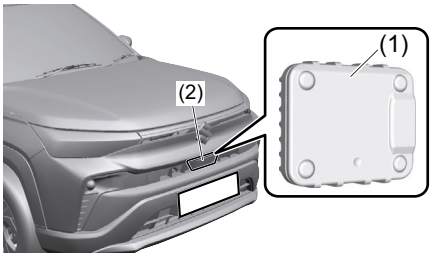


71UM05029

(1) Front radar (DSBS II)
(2) Front radar cover

**Observe the following precautions. Failure to do so may lead to the front radar (DSBS II) not operating properly, possibly leading to an accident resulting in death or serious injury.**

- **Keep the front radar (DSBS II) and front radar cover clean at all times. Clean the front of the front radar (DSBS II) or the front or back of the front radar cover if it is dirty or covered with water droplets, snow, etc. Clean the front radar (DSBS II) and front radar cover with a soft cloth so as to not mark or damage them.**

(Continued)

**⚠ WARNING**

(Continued)


- **Do not attach accessories, stickers (including transparent stickers), aluminum tape, etc. to the front radar (DSBS II) or front radar cover and their surrounding area.**
- **Do not subject the front radar (DSBS II) or its surrounding area to impact. If the front radar (DSBS II), the front grille, or front bumper has been subjected to a impact, have the vehicle inspected by Maruti Suzuki authorized workshop.**
- **Do not disassemble the front radar (DSBS II).**
- **Do not modify or paint the front radar (DSBS II) or front radar cover, or replace them with anything other than Maruti Suzuki genuine parts.**
- **In the following situations, recalibration of the front radar (DSBS II) will be necessary. Consult Maruti Suzuki authorized workshop.**
  - **– When the front radar (DSBS II) is replaced**
  - **– When the front bumper or the front grille has been replaced**

(Continued)

**⚠ WARNING**

(Continued)

**When installing the license plate on the front bumper**

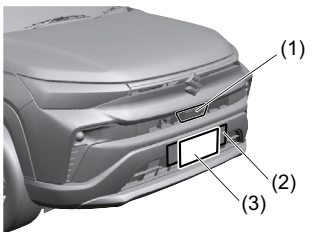


71UM05030

(1) Front radar (DSBS II)
(2) Base plate
(3) License plate and license plate frame (sizes vary depending on the country and region)


- **The license plate and license plate frame (3) must be installed on the base plate (2).**
- **The front radar (DSBS II) (1) is positioned as shown in the illustration. If you do not install the license plate directly on the base plate (2), or install the license plate by protruding upwards from the base plate (2), emission/reception of the front radar (DSBS II) can be interrupted and the system may malfunction.**

(Continued)

**⚠ WARNING**

(Continued)

**EXAMPLE**

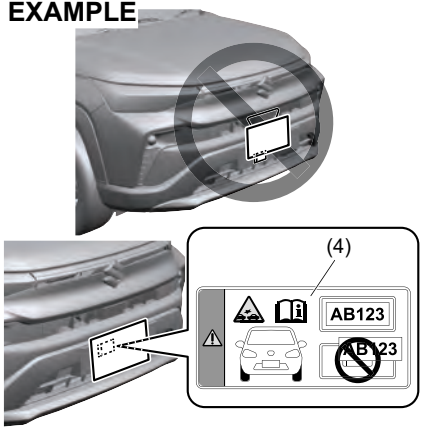


71UM05031


- **Do not install the license plate and license plate frame (3) so that the warning label (4) is visible. Install them so that the warning label (4) is hidden. The license plate and license plate frame (3) must be installed securely on the base plate (2) by using self-tapping screws.**
- **We recommend you to ask your Maruti Suzuki authorized workshop to install the license plate.**

*NOTE:*

*Situations in which the front camera (DSBS II) and front radar (DSBS II) may not operate properly*


- *When the height or inclination of the vehicle has been changed due to modifications*
- *When the windshield is dirty, fogged up, cracked or damaged*
- *When a sensor is extremely hot or cold*
- *When mud, water, snow, dead insects, foreign matter, etc., is attached to the front of the sensor*
- *When in inclement weather such as heavy rain, fog, snow, or a sandstorm*
- *When water, snow, dust, etc. is thrown up in front of the vehicle, or when driving through mist or smoke*
- *When the headlights are not illuminated while driving in the dark, such as at night or when in a tunnel*
- *When the lens of a headlight is dirty and illumination is weak*
- *When the headlights are misaligned*
- *When a headlight is malfunctioning*
- *When the headlights of another vehicle, sunlight, or reflected light shines directly into the front camera (DSBS II)*
- *When the brightness of the surrounding area changes suddenly*
- *When driving near a TV tower, broadcasting station, electric power plant, radar equipped vehicle, etc., or other location where strong radio waves or electrical noise may be present*
- *When a wiper blade is blocking the front camera (DSBS II)*
- *When in a location or near objects which strongly reflect radio waves, such as the following:*
  - *Tunnels*
  - *Truss bridges*
  - *Gravel roads*
  - *Rutted, snow-covered roads*
  - *Walls*
  - *Large trucks*
  - *Manhole covers*
  - *Metal plates*
  - *Guardrail*
  - *Construction zone*
  - *Railroad*
- *When near a step or protrusion*
- *When a detectable vehicle is narrow, such as a small mobility vehicle*
- *When an object is placed on Dashboard.*
- *When the vehicle ahead has no taillights or positioned abnormally.*
- *Driving in large areas with minimal traffic, such as desert, meadow, suburb zones etc.*
- *Poor road conditions leading to significant vehicle vibrations while driving.*

- *When a detectable vehicle has a small front or rear end, such as an unloaded truck*

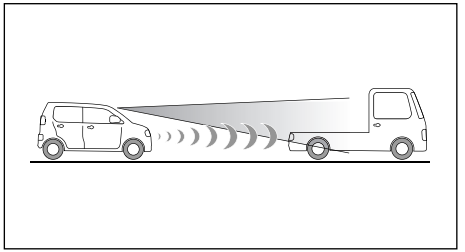

71UM05032

- *When a detectable vehicle has a low front or rear end, such as a low bed trailer*

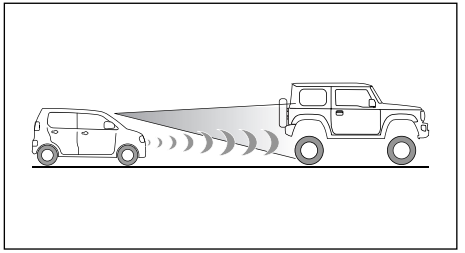

71UM05033

- *When a detectable vehicle has extremely high ground clearance*
- *When a detectable vehicle is carrying a load which protrudes from its cargo area*
- *When a detectable vehicle has little exposed metal, such as a vehicle which is partially covered with cloth, etc.*
- *When a detectable vehicle is irregularly shaped, such as a tractor, sidecar, etc.*
- *When the distance between the vehicle and a detectable vehicle has become extremely short*
- *When a detectable vehicle is at an angle*
- *When a large amount of snow, mud, etc. is attached to a detectable vehicle*
- *When driving on the following kinds of roads:*
  - *Roads with sharp curves or winding roads*
  - *Roads with changes in grade, such as sudden inclines or declines*
  - *Roads which are sloped to the left or right*
  - *Roads with deep ruts*
  - *Roads which are rough and unmaintained*
  - *Roads which frequently undulate or are bumpy*
- *When the steering wheel is being operated frequently or suddenly*
- *When the vehicle is not in a constant position within a lane*
- *When parts related to this system, the brakes, etc. are extremely hot or cold, wet, etc.*
- *When the wheels are misaligned*
- *When driving on slick road surfaces, such as when it is covered with ice, snow, gravel, etc.*
- *When the course of the vehicle differs from the shape of a curve*
- *When the vehicle speed is excessively high when entering a curve*
- *When entering/exiting a parking lot, garage, car elevator, etc.*
- *When driving in a parking lot*
- *When driving through an area where there are obstructions which may contact your vehicle, such as tall grass, tree branches, a curtain, etc.*
- *When the wind is strong*

*<u>Situations in which the lane may not be detected</u>*

- *When the lane is extremely wide or narrow*
- *Immediately after changing lanes or passing through an intersection*
- *When driving in a temporary lane or lane regulated by construction*
- *When there are structures, patterns, shadows which are similar to lane lines in the surrounding*
- *When the lane lines are not clear or driving on a wet road surface*
- *When a lane line is on a curb*
- *When driving on a bright, reflective road surface, such as concrete*
- *When there are multiple white lines in the same lane*

*<u>Situations in which some or all of the functions of the system cannot operate</u>*

- *When a malfunction is detected in this system or a related system, such as the brakes, steering, etc.*
- *When the ESP® or other safety related system is operating*

- *When the ESP® or other safety related system is off*

*Changes in brake operation sound and pedal response*

- *When the brakes have been operated, brake operation sounds may be heard and the brake pedal response may change, but this does not indicate a malfunction.*
- *When the system is operating, the brake pedal may feel stiffer than expected or sink. In either situation the brake pedal can be depressed further. Further depress the brake pedal as necessary.*

**Temporary stop or failure of the dual sensor**

The following chart shows the temporary stop or failure of the dual sensor.

| | Instrument cluster | Information display message | Dual sensor | |
|---|---|---|---|---|
| | | | Temporary stop | Failure |
| (1) |  | – | On | |
| (2) |  | – | On | |
| (3) |  | – | On | |
| (4) |  | – | On | |
| (5) |  | – | On | |
| (6) | – | “DSBS II System Stopped” | On | Off |
| (7) | – | “DSBS II System Disabled” | Off | On |
| (8) |  | – | Blinks | |

(1) Dual Sensor Brake Support II (DSBS II) OFF indicator light (if equipped)
(2) Lane departure prevention indicator light (if equipped)
(3) Lane keep assist indicator light (if equipped)
(4) Adaptive cruise control indicator light (if equipped)
(5) High beam assist warning light (yellow) (if equipped)
(6) Indication of information display (if equipped)
(7) Indication of information display (if equipped)
(8) Master warning indicator (if equipped)

The message may be shown in the following situations:
- When driving the vehicle on a dark road without street lamps
- Wen driving the vehicle on a steep slope
- When trying to stop the vehicle in a garage
- When slowly approaching forward to an unicolor wall
- When slowly approaching forward to a shutter or a horizontal-striped wall

*NOTE:*
*When the function of the dual sensor is temporarily stopped or malfunctioning, the following functions will be turned off.*
- *Dual Sensor Brake Support II (DSBS II) (if equipped)*
- *Lane departure prevention system (if equipped)*
- *Lane keep assist (if equipped)*
- *Vehicle swaying warning (if equipped)*
- *High beam assist (if equipped)*
- *Adaptive cruise control (with all-speed following and stop keeping function) (if equipped)*

**Temporary stop of the dual sensor**
Under the following situations, the function of the dual sensor stops temporarily.
When the situations are improved, the temporary stop of the function will be canceled.

| Message | Cause | Remedy |
|---|---|---|
| "DSBS II System Stopped" | Under the following situations, the function of the dual sensor stops temporarily.<br>• When the systems related to SUZUKI SAFETY SUPPORT stop temporarily<br>• When the lead-acid battery has a voltage abnormality | Drive with caution until the cause is resolved.<br>If the message remains on the information display after a while, consult with a Maruti Suzuki authorized workshop. |
| "F Camera Stopped (Temp)" | Since the temperature of the body of front camera (DSBS II) is low or high, the function of the dual sensor stops temporarily. | • Drive with caution until the cause is resolved.<br>• If the message remains on the information display after a while, consult with a Maruti Suzuki authorized workshop.<br>• If the front camera (DSBS II) is hot, such as after the vehicle is parked in the sun, use the air conditioning system to decrease the temperature around the front camera (DSBS II).<br>• If the front camera (DSBS II) is cold, such after the vehicle is parked in an extremely cold environment, use the air conditioning system to increase the temperature around the front camera (DSBS II) |
| "F Camera Stopped (Low Vis)" | The dual sensor functions are temporarily stopped, because visibility from the front camera (DSBS II) is poor. Possible reasons are as follows<br>• When there is bad weather such as heavy rain, fog or a blizzard<br>• When the windshield in front of the front camera (DSBS II) is covered with dirt or foreign material<br>• When the windshield in front of the front camera (DSBS II) is fogged up | Use the windshield wiper in bad weather.<br>If the temporary stop of function is not canceled even if the windshield wiper is used, wait for the weather to improve.<br>• Using the windshield wipers, remove the dirt or foreign material from the windshield.<br>• Using the air conditioning system, defog the windshield.<br>• Close the hood, remove any stickers, etc. to avoid blocking view of the front camera (DSBS II). |

| Message | Cause | Remedy |
|---|---|---|
| “Clean External Radar” | The function of the system stops temporarily due to failure of radar. Possible reason is as follows.<br>• When the surrounding areas of radar is covered with dirt, oil film or raindrops | Wipe off dirt, oil film and raindrops from the surrounding areas of radar with a soft cloth. |
| “F Radar Stopped (Temp)” | Since the temperature of the body of front radar (DSBS II) is low or high, the function of the system stops temporarily. | Drive with caution until the cause is resolved.<br>If the message remains on the information display after a while, Consult with a Maruti Suzuki authorized workshop. |
| “F Radar Stopped (Calib)” | The function of the system stops temporarily due to bad angle of the front radar (DSBS II). | • If the message remains on the information display after a while, Consult with a Maruti Suzuki authorized workshop.<br>• Check if there is any foreign material attached to the front radar (DSBS II) or front radar cover and clean them if necessary. |

## Dual Sensor Brake Support II (DSBS II) (if equipped)

The Dual Sensor Brake Support II (DSBS II) uses sensors to detect objects in the path of the vehicle. When the system determines that the possibility of a frontal collision with a detectable object is high, a warning operates to urge the driver to take evasive action. If the system determines that the possibility of a collision is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.
The Dual Sensor Brake Support II (DSBS II) can be disabled/enabled and the warning timing can be changed. Refer to "Dual Sensor Brake Support II (DSBS II) OFF switch".

**⚠ WARNING**

**For safe use**

- **Driving safely is solely the responsibility of the driver. Pay careful attention to the surrounding conditions in order to ensure safe driving. Never use the Dual Sensor Brake Support II (DSBS II) in place of normal braking operations. This system cannot help avoid or reduce the impact of a collision in every situation. Over-reliance on this system to drive the vehicle safely may lead to an accident resulting in death or serious injury.**
- **Although the Dual Sensor Brake Support II (DSBS II) is designed to help avoid or help reduce the impact of a collision, its effectiveness may change according to various conditions. Therefore, it may not always be able to achieve the same level of performance. Read the following items carefully. Do not overly rely on this system and always drive carefully.**
  - **Refer to "For safe use" in this section.**

(Continued)

**⚠ WARNING**

(Continued)

**When to disable the Dual Sensor Brake Support II (DSBS II)**

- **Refer to "When it is necessary to disable the system" in this section.**

### Detectable objects

The system can detect the following as detectable objects. (Detectable objects differ depending on the function.)

- Vehicles
- Bicycles*1
- Pedestrians
- Motorcycles*1

- *1: Detected as a detectable object only when being ridden.

## System functions

**• Frontal collision warning**




"Dual Sensor Brake Support"

When the system determines that the possibility of a collision is high, a buzzer will sound and an image and warning message will be displayed on the information display to urge the driver to take evasive action.




"Accel Pressed"

If the system determines that the accelerator pedal is strongly depressed, the above image and message will be displayed on the information display.

**• Brake assist system**

If the system determines that the possibility of a collision is high and the brake operation by the driver is insufficient, the braking power will be increased.

**• Automatic brake system**

If the system determines that the possibility of a collision is extremely high, the brakes are automatically applied to help avoid the collision or reduce the impact of the collision.

**⚠ WARNING**

**Automatic brake system**

- **When the automatic brake system function is operating, a large amount of braking force will be applied.**
- **The automatic brake system function is not designed to hold the vehicle stopped. If the vehicle is stopped by automatic brake system function, the driver should operate the brakes immediately as necessary.**
- **In the following situations, brake hold will not operate after the automatic brake system function has operated. Depending on the situation, the driver should operate the brake pedal immediately.**
  - **When the accelerator pedal is depressed**
  - **When the vehicle is stopped on a steep slope**

(Continued)

**⚠ WARNING**

(Continued)

- **The automatic brake system function may not operate if certain operations are performed by the driver. If the accelerator pedal is being depressed strongly or the steering wheel is being turned, the system may determine that the driver is taking evasive action and the automatic brake system function may not operate or may be deactivated.**
- **If the brake pedal is being depressed, the system may determine that the driver is taking evasive action, which could delay the activation timing of the automatic braking system or prevent it from operating.**

*NOTE:*

*Operating conditions of each function of the Dual Sensor Brake Support II (DSBS II)*

*The Dual Sensor Brake Support II (DSBS II) is enabled and the system determines that the possibility of a frontal collision with a detected object is high, the system will operate.*

*However, the system will not operate in the following situations:*

- *When the gearshift lever is in "R" position*
- *When the ESP® OFF indicator is illuminated (only the frontal collision warning function will be operational)*

*The following are the operational speeds and cancelation conditions of each function:*

- *Frontal collision warning*

| ***Detectable objects*** | ***Vehicle speed*** | ***Relative speed between your vehicle and object*** |
|---|---|---|
| *Preceding vehicles, stopped vehicles* | *Approximately 10 to 180 km/h* | *Approximately 10 to 180 km/h* |
| *Bicycles* | *Approximately 10 to 80 km/h* | *Approximately 10 to 80 km/h* |
| *Pedestrians* | *Approximately 10 to 80 km/h* | *Approximately 10 to 80 km/h* |
| *Preceding motorcycles, stopped motorcycles* | *Approximately 10 to 80 km/h* | *Approximately 10 to 80 km/h* |

*While the frontal collision warning is operating, if the steering wheel is operated heavily or suddenly, the frontal collision warning may be canceled.*

• *Brake assist system*

| *Detectable objects* | *Vehicle speed* | *Relative speed between your vehicle and object* |
|---|---|---|
| *Preceding vehicles* | *Approximately 30 to 180 km/h* | *Approximately 10 to 180 km/h* |
| *Stopped vehicles* | *Approximately 30 to 180 km/h* | *Approximately 30 to 180 km/h* |
| *Bicycles* | *Approximately 30 to 80 km/h* | *Approximately 30 to 80 km/h* |
| *Pedestrians* | *Approximately 30 to 80 km/h* | *Approximately 30 to 80 km/h* |
| *Preceding motorcycles* | *Approximately 30 to 80 km/h* | *Approximately 10 to 80 km/h* |
| *Stopped motorcycles* | *Approximately 30 to 80 km/h* | *Approximately 30 to 80 km/h* |


• *Automatic brake system*

| *Detectable objects* | *Vehicle speed* | *Relative speed between your vehicle and object* |
|---|---|---|
| *Preceding vehicles* | *Approximately 10 to 180 km/h* | *Approximately 10 to 180 km/h* |
| *Stopped vehicles* | *Approximately 10 to 80 km/h* | *Approximately 10 to 80 km/h* |
| *Bicycles* | *Approximately 10 to 80 km/h* | *Approximately 10 to 80 km/h* |
| *Pedestrians* | *Approximately 10 to 80 km/h* | *Approximately 10 to 80 km/h* |
| *Preceding motorcycles, stopped motorcycles* | *Approximately 10 to 80 km/h* | *Approximately 10 to 80 km/h* |

*If either of the following occur while the automatic brake system function is operating, it will be canceled:*
- *The accelerator pedal is strongly depressed*
- *The steering wheel is operated heavily or suddenly*

*NOTE:*

*Detection of detectable objects*

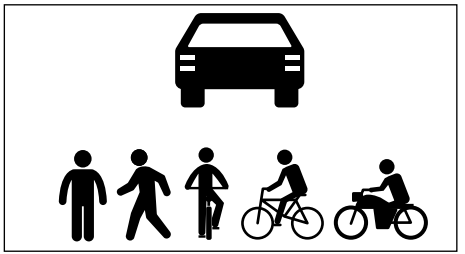


69TJ050080

*Objects are detected based on their size, shape, and movement. Depending on the ambient brightness, movement, posture and direction of a detectable object, it may not be detected and the system may not operate properly. The system detects shapes, such as the above, as detectable objects.*


*Situations in which the system may operate even though the possibility of a collision is not high*

- *In certain situations, such as the following, the system may determine that the possibility of a collision is high and operate:*
  - *When passing a detectable object*
  - *When changing lanes while overtaking a detectable object*
  - *When suddenly approaching a detectable object*
  - *When approaching a detectable object or other object on the roadside, such as guardrails, utility poles, trees, walls, etc.*

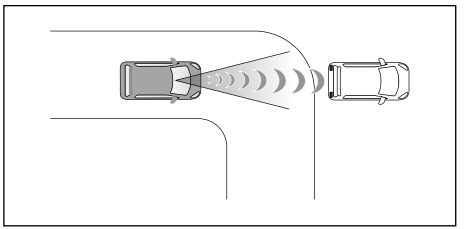


71UM05039

  - *When there is a detectable object or other object by the roadside at the entrance of a curve*
  - *When there are patterns or a painting ahead of the vehicle that may be mistaken for a detectable object*

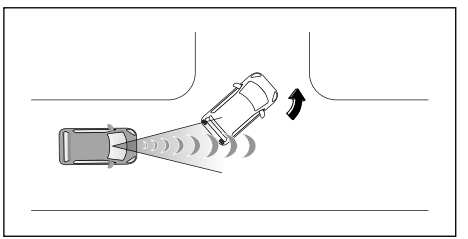


71UM05040

  - *When passing a detectable object that is changing lanes or turning left/right*

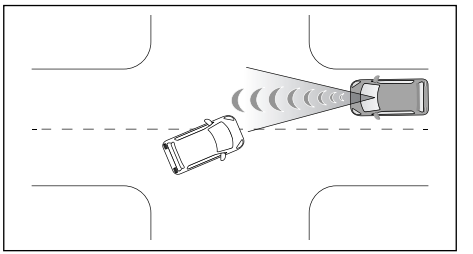

71UM05041


  - *When passing a detectable object which is stopped to make a left/right turn*
  - *When a detectable object stops immediately before entering the path of the vehicle*

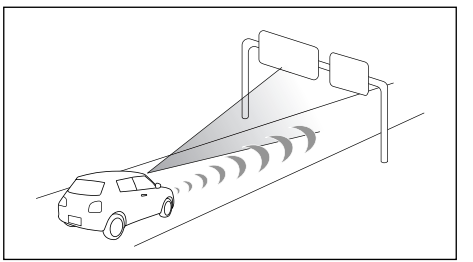

71UM05042


  - *When passing through a location with a structure above the road (traffic sign, billboard, etc.)*
  - *When approaching an electric toll gate barrier, parking lot barrier, or other barrier that opens and closes*

– *When turning left/right and an oncoming vehicle, oncoming motorcycle, pedestrian or bicycle crosses in front of the vehicle*
– *When attempting to turn left/right in front of an oncoming vehicle, oncoming motorcycle, pedestrian or bicycle*
– *When turning left/right and an oncoming vehicle, oncoming motorcycle, pedestrian or bicycle stops immediately before entering the path of the vehicle*

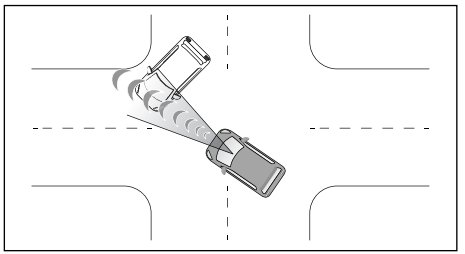

69T050130

– *When the steering wheel is operated toward the path of an oncoming vehicle*
– *When there is something moving above/below the road*

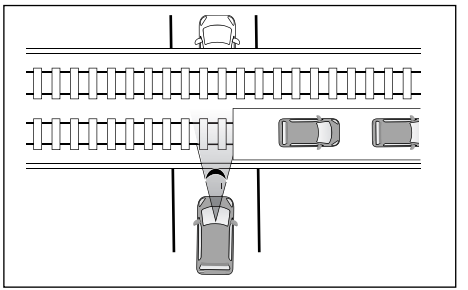


71UM050118

*<u>Situations in which the system may not operate properly</u>*


- *In certain situations, such as the following, a detectable object may not be detected by the front sensors, and the system may not operate properly:*
  – *When a detectable object is approaching your vehicle*
  – *When your vehicle or a detectable object is wandering*
  – *When a detectable object makes an abrupt maneuver (such as sudden swerving, acceleration or deceleration)*
  – *When suddenly approaching a detectable object*
  – *When the detectable object is near a wall, fence, guardrail, manhole cover, steel plate on the road surface, or another vehicle*
  – *When there is a structure above a detectable object*
  – *When part of a detectable object is hidden by another object (large luggage, umbrella, guardrail, etc.)*
  – *When multiple detectable objects are overlapping*
  – *When a bright light, such as the sun, is reflecting off of a detectable object*
  – *When a detectable object is white and looks extremely bright*
  – *When the color or brightness of a detectable object causes it to blend in with its surroundings*
  – *When a detectable object cuts in front of or suddenly emerges in front of your vehicle*
  – *When approaching a vehicle which is diagonal*
  – *When a detectable object blends in with the surrounding area, such as when it is dim (at dawn or dusk) or dark (at night or in a tunnel)*
  – *When the vehicle has not been driven for a certain amount of time after the engine was started*
  – *While turning left/right or a few seconds after turning left/right*
  – *While driving around a curve and a few seconds after driving around a curve*
  – *If a vehicle ahead is a child sized bicycle, is carrying a large load, is carrying an extra passenger, or has an unusual shape (bicycles equipped with a child seat, tandem bicycles, etc.)*

– *If a pedestrian or bicycle is shorter than approximately 1 m (3.3 ft.) or taller than approximately 2 m (6.6 ft.).*
– *When the silhouette of a pedestrian or bicycle is unclear (such as when they are wearing a raincoat, long skirt, etc.)*
– *When a pedestrian is bending forward or squatting*
– *When a pedestrian or bicycle is moving at high speed*
– *When a pedestrian is pushing a stroller, wheelchair, bicycle or other vehicle*
– *When turning left/right and an oncoming vehicle is driving in a lane 3 or more lanes from the vehicle*

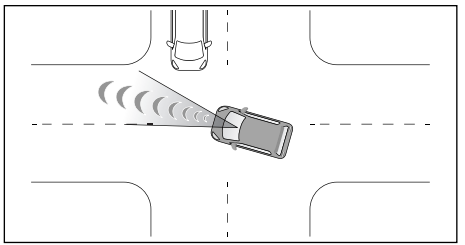

69TJ050640

– *When turning left/right and the direction of the vehicle differs greatly from the direction traffic flows in the oncoming lane*

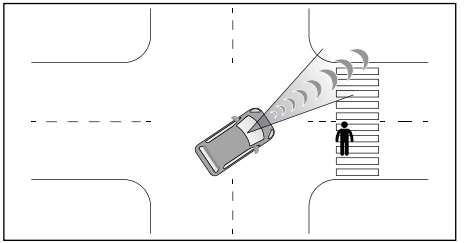


69TJ050650

– *When turning left/right and approaching a pedestrian who was traveling in the same direction as the vehicle and continues straight*
– *When a long vehicle such as a large vehicle or a towing vehicle approaches from the front at an intersection.*

**Dual Sensor Brake Support II (DSBS II) OFF switch**

You can turn off the Dual Sensor Brake Support II (DSBS II).

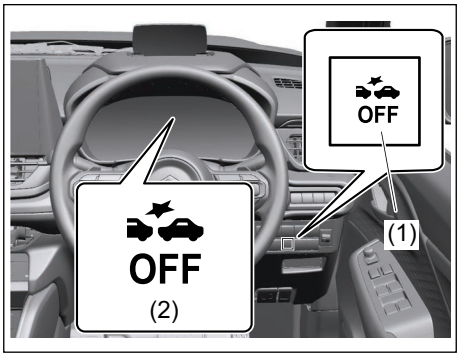


71UM05046

- When you want to turn off the system, push and hold the Dual Sensor Brake Support II (DSBS II) OFF switch (1) until the interior buzzer beeps and the Dual Sensor Brake Support II (DSBS II) OFF indicator light (2) comes on.
- When you want to turn the system back on, push the Dual Sensor Brake Support II (DSBS II) OFF switch (1), the interior buzzer beeps and the Dual Sensor Brake Support II (DSBS II) OFF indicator light (2) goes off.
- Every time you turn off the engine, the system will turn back on and the Dual Sensor Brake Support II (DSBS II) OFF indicator light (2) will go off.

- Every time you push the Dual Sensor Brake Support II (DSBS II) OFF switch (1), the interior buzzer will beep to inform you of the system's activation or deactivation.

**Changing the Dual Sensor Brake Support II (DSBS II) setting**

The Dual Sensor Brake Support II (DSBS II) setting can be changed through the information display setting mode*1. For details, refer to "Setting mode of information display (Type B)". The system is enabled each time the engine switch is pressed to change the ignition mode to ON.

- When the adaptive cruise control is operating, the frontal collision warning will operate at the [Earlier] timing, regardless of the user setting.

*1: The items you can change depend on the vehicle's specifications.

## Lane departure prevention system (if equipped)

**Basic functions**


The lane departure prevention system warns the driver if the vehicle may deviate from the current lane or course*1, and also can slightly operate the steering wheel to help avoid deviation from the lane or course*1.

The front camera (DSBS II) is used to detect lane lines or a course*1.

*1: Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc.

**Lane departure warning**

When the system determines that the vehicle might depart from its lane or course*1, the lane departure prevention indicator light will blink and the steering wheel will vibrate or a warning buzzer will sound to alert the driver.

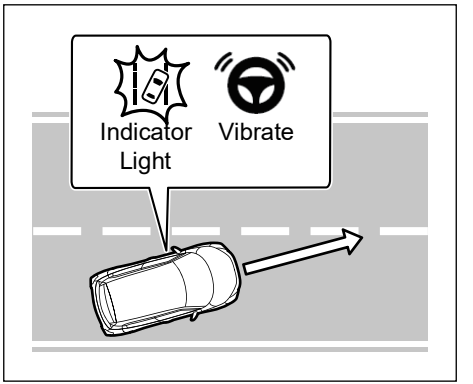



71UM05104

Check the area around your vehicle and carefully operate the steering wheel to move the vehicle back to the center of the lane or course*1.

*1: Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc.

**Lane departure prevention**
If the system determines that the vehicle is likely to depart from its lane or course*1, it provides assistance through steering wheel operations to help avoid deviation from the lane or course.

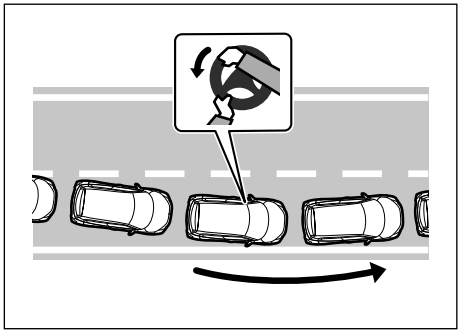


71UM05048

If the system determines that the steering wheel has not been operated for a certain amount of time or the steering wheel is not being firmly gripped (for example, driving with one hand), a warning message may be displayed and a warning buzzer may sound to alert the driver.

*1: Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc.

**Vehicle swaying warning**
If the vehicle is swaying, a message will be displayed and a warning buzzer will sound to urge the driver to take a break.

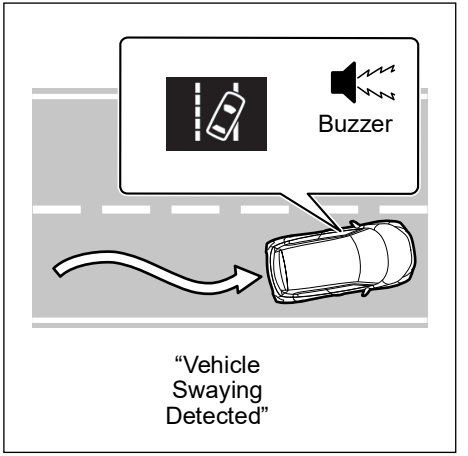


71UM05049

**⚠ WARNING**

**Before using the lane departure prevention system**

- **Do not overly rely on the lane departure prevention system. The lane departure prevention system is a system which provides automated assistance in driving. However, as it is not a system which reduces the amount of attention necessary for safe driving. The driver is solely responsible for paying attention to their surroundings and operating the steering wheel as necessary to ensure safety. Also, the driver is responsible for taking adequate breaks when fatigued, such as when driving for a long time.**
- **Failure to perform appropriate driving operations and pay careful attention may lead to an accident.**
- **If you replace the steering wheel or attach the cover, the lane departure warning function or lane departure prevention function may not operate proper.**

*NOTE:*

*Operating conditions of each function*

- *Lane departure warning/prevention function*
  *This function is operable when all of the following conditions are met:*
  – *The vehicle speed is approximately 50 km/h or more.*
  *Operation may be possible when the vehicle speed is approximately 40 km/h or more if vehicles, motorcycles, bicycles, or pedestrians are detected near the lane.*
  – *The system recognizes a lane or course*2. (When recognized on only one side*2, the system will operate only for the recognized side.)*
  – *The lane width is approximately 3 m (9.8 ft.) or more. If the lane width is narrow, the lane departure warning and the lane departure prevention function may not work against line.*
  – *The turn signal control lever is not being operated.*
  – *The vehicle is not being driven around a sharp curve.*
  – *The vehicle is not accelerating or decelerating more than a certain amount.*
  – *The steering wheel is not being turned sufficiently to perform a lane change.*

**2: Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc.*

- *Vehicle swaying warning*
  *This function is operable when all of the following conditions are met:*
  – *The vehicle speed is approximately 50 km/h or more.*
  – *The lane width is approximately 3 m (9.8 ft.) or more.*

*Temporary cancellation of functions*

*When the operating conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function will automatically be restored.*


*Operation of the lane departure warning function/lane departure prevention function*

- *Depending on the vehicle speed, road conditions, lane departure angle, etc., operation of the lane departure prevention function may not be felt or the function may not operate.*
- *Depending on the conditions, the warning buzzer may operate even if vibration is selected through a customize setting.*
- *If a course*2 is not clear or straight, the lane departure warning function or lane departure prevention function may not operate.*
- *The lane departure warning function or lane departure prevention function may not operate if the system judges that the vehicle is intentionally being steered to avoid a pedestrian or parked vehicle.*
- *The steering assist operation of the lane departure prevention function can be overridden by the steering wheel operation of the driver.*

**2: Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc.*


*Hands off steering wheel warning*

*In the following situations, a message urging the driver to operate the steering wheel and an image will be displayed and a buzzer will sound to warn the driver. When using the system, make sure to grip the steering wheel firmly, regardless of whether the warning is operating or not.*

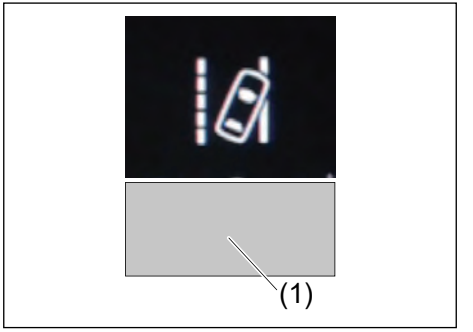


71UM050193

(1) “Keep Control of Steering Wheel”

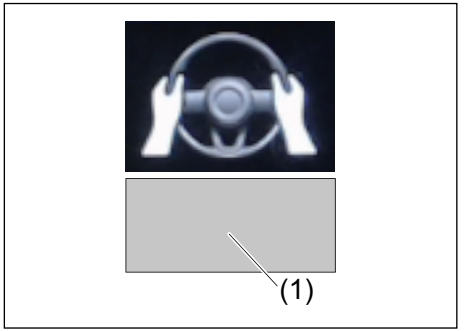


71UM050194

(1) “Use steering”

- *When the system determines that the driver is not securely holding the steering wheel (for example, driving with one hand), or the steering wheel is not being operated when the steering assist operation of the lane departure prevention function is operating.*
  *The length of time that the warning buzzer operates will become longer as the frequency of the steering assist operating increases. Even if the system judges that the steering wheel has been operated, the warning buzzer will sound for a certain amount of time.*

*Vehicle swaying warning*




71UM05051

“Vehicle
Swaying
Detected”

*If the vehicle is swaying, a message will be displayed and a warning buzzer will sound to urge the driver to take a break.*

*Depending on the condition of the vehicle and road surface, the vehicle swaying warning function may not operate.*

**Lane departure prevention OFF switch**
You can turn off the lane departure prevention, lane departure warning and the vehicle swaying warning.

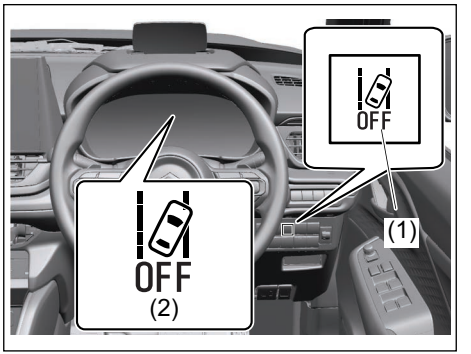


71UM05052

- When you want to turn off the system, press and hold the lane departure prevention OFF switch (1) until the interior buzzer beeps and the lane departure prevention OFF indicator light (2) comes on.

Perform the following method to turn the system back on.
Push the lane departure prevention OFF switch (1), the interior buzzer beeps and the lane departure prevention OFF indicator light (2) goes off.

**⚠ WARNING**

**If you attempt to press the lane departure prevention OFF switch while driving, you could lose control of the vehicle.**
**Do not press the lane departure prevention OFF switch while driving.**

**Changing Lane Departure Prevention setting**
The settings of the lane departure prevention can be changed through the information display setting mode. For details, refer to “Setting mode of information display (Type B)”.

**⚠ WARNING**

**Situations in which the lane departure prevention should not be used**

**Refer to “When it is necessary to disable the system” in this section and disable the system. Failure to do so may lead to an accident.**

**Situations in which the system may not operate properly**

**In the following situations, the system may not operate properly and the vehicle may depart from its lane. Do not overly rely on these functions. The driver is solely responsible for paying attention to their surroundings and operating the steering wheel as necessary to ensure safety.**
- **When the boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc. is not clear or straight**

(Continued)

**⚠ WARNING**

(Continued)
- **When the vehicle is struck by a crosswind or the turbulence of other nearby vehicles**
- **Situations in which the lane may not be detected: Refer to “Situations in which the lane may not be detected” in this section.**
- **Situations in which the sensors may not operate properly: Refer to “Situations in which the front camera (DSBS II) and front radar (DSBS II) may not operate properly” in this section.**
- **Situations in which some or all of the functions of the system cannot operate: Refer to “Situations in which some or all of the functions of the system cannot operate” in this section.**

**Displays and system operation**
The operating state of the lane departure warning function and steering assist operation of the lane departure prevention function are indicated.


| Indicator | Information display | | Situation |
|---|---|---|---|
| | Lane | Steering | |
|  On (yellow) | Off | Off | System disabled |
| Off |  On (white outline) | Off | Lane lines are not detected by the system |
| Off |  On (white) | Off | Lane lines are detected by the system |
|  Blinks (yellow) |  Blinks (yellow) | Off | Lane departure warning function is operating for the side which the lane display is blinking |

| Indicator | Information display | | Situation |
|---|---|---|---|
| | Lane | Steering | |
|  On (green) |  On (green) |  On (green) | Lane departure prevention function is operating for the side which the lane display is illuminated |
|  Blinks (yellow) |  Blinks (yellow) |  On (green) | Lane departure warning function/lane departure prevention function is operating for the side which the lane display is blinking |
|  On (yellow) | Off | Off | When the engine switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working. If there is a problem in the lane departure prevention with the ignition switch in “ON” position or the engine switch in ON mode, this light will come on by yellow. Bring the vehicle to a Maruti Suzuki authorized workshop to have the problem corrected. |

## Lane keep assist (if equipped)

### Lane keep assist functions


- When driving on a road with clear lane lines with the adaptive cruise control operating, lane lines and preceding vehicles are detected using the front camera (DSBS II) and radar sensor, and the steering wheel is operated to maintain the vehicle's lane position.

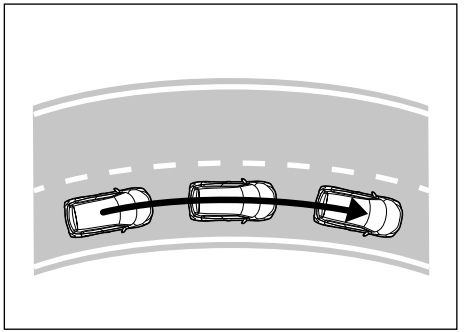

71UM05053

Use the function only on highways and expressways.
If the adaptive cruise control is not operating, the function will not operate.
Refer to "Adaptive cruise control (with all-speed following and stop keeping function)" (P.5-106).
In situations where the lane lines are difficult to see or are not visible, such as when in a traffic jam, support will be provided using the path of preceding vehicles.

If the system determines that the steering wheel has not been operated for a certain amount of time or the steering wheel is not being firmly gripped, the driver will be alerted via a display and this function will be temporarily canceled.
If the function is deactivated, use the lane keep assist ON/OFF switch to turn on the system.

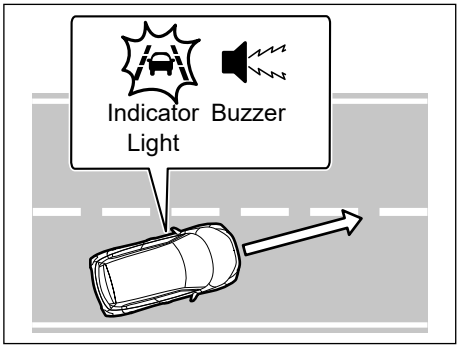


71UM05054

- When the function is operating, if the vehicle is likely to depart from its lane, the driver will be alerted via a display and buzzer.
- When the buzzer sounds, check the area around the vehicle and carefully operate the steering wheel to move the vehicle back to the center of the lane.

**⚠ WARNING**

**Before using the lane keep assist system**

- **Do not overly rely on the lane keep assist system. The lane keep assist system is a system which provides automated assistance in driving. However, as it is not a system which reduces the amount of attention necessary for safe driving. The driver is solely responsible for paying attention to their surroundings and operating the steering wheel as necessary to ensure safety. Also, the driver is responsible for taking adequate breaks when fatigued, such as when driving for a long time.**
- **Failure to perform appropriate driving operations and pay careful attention may lead to an accident.**
- **When not using the lane keep assist system, turn it off using the lane keep assist ON/OFF switch.**
- **If you replace the steering wheel or attach the cover, the function may not operate properly.**

*NOTE:*

*Operating conditions of function*

- *This function is operable when all of the following conditions are met:*
  - *The lane keep assist system detects lane lines or the path of preceding vehicles (except when the preceding vehicle is small, such as a motorcycle).*
  - *The adaptive cruise control is operating.*
  - *The lane width is approximately 3 to 4 m (10 to 13 ft.).*
  - *The turn signal control lever is not being operated.*
  - *The vehicle is not being driven around a sharp curve.*
  - *The vehicle is not accelerating or decelerating more than a certain amount.*
  - *The steering wheel is not being turned with a large force.*
  - *The hands off steering wheel warning is not operating. Refer to "Hands off steering wheel warning" in this NOTE.*
  - *The vehicle is being driven in the center of a lane.*


*Temporary cancelation of functions*

- *When the operating conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function will automatically be restored. Refer to "Operating conditions of function" in this NOTE.*
- *If the operating conditions of a function are no longer met while the function is operating, a buzzer may sound to indicate that the function has been temporarily canceled.*
- *The steering assist operation of the function can be overridden by the steering wheel operation of the driver.*

*Lane departure warning function when the lane keep assist is operating*


- *Even if the warning method of the lane departure warning is changed to vibration of the steering wheel, if the vehicle deviates from the lane while the lane keep assist is operating, the warning buzzer will sound to alert the driver.*
- *If steering wheel operation equivalent to that necessary for a lane change is detected, the system will determine the vehicle is not deviating from the lane and the warning will not operate.*

*Hands off steering wheel warning*

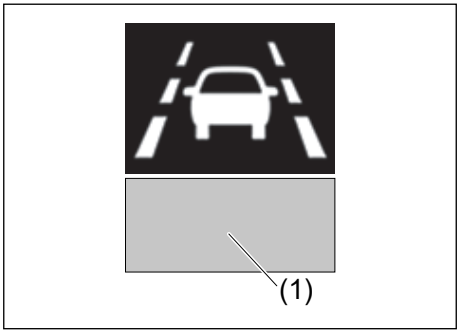


71UM050195

(1) "Keep Control of Steering Wheel"

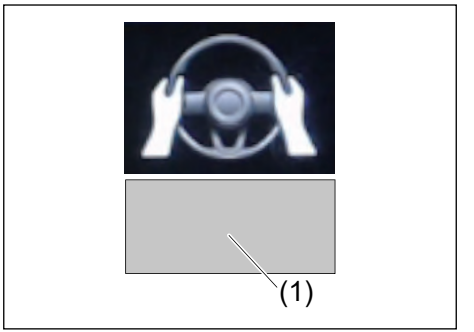


71UM050194


(1) "Use steering"

*In the following situations, a message urging the driver to grip the steering wheel*

*and the image shown in the illustration will be displayed on the information display to warn the driver. If the system detects that the steering wheel is held, the warning will be canceled. When using the system, make sure to grip the steering wheel firmly, regardless of whether the warning is operating or not.*
*Refer to "Warning and indicator messages"(P4-57).*

- *When the system determines the driver is not holding the steering wheel (for example, driving with one hand) while the function is operating*
  - *If no operations are detected for a certain amount of time, a buzzer will sound, the warning will operate, and the function will be canceled. This warning may also operate if the driver only operates steering wheel a small amount continuously.*
- *Depending on the condition of the vehicle, handle control condition and road surface, the warning function may not operate.*

**Lane keep assist ON/OFF switch**

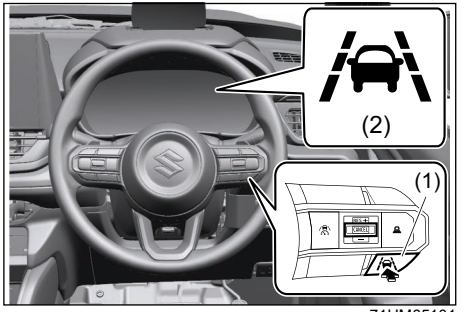


71UM05101


(1) Lane keep assist ON/OFF switch
(2) Lane keep assist indicator light

- To turn on the lane keep assist, push the lane keep assist ON/OFF switch (1) in the arrow direction as shown in the illustration, and turn on the lane keep assist indicator light (2).
- To turn off the lane keep assist, push the lane keep assist ON/OFF switch (1) in the arrow direction again and turn off the lane keep assist indicator light (2).

**⚠ WARNING**

**Situations in which the functions may not operate properly**

**In the following situations, the functions may not operate properly and the vehicle may depart from its lane. Do not overly rely on these functions. The driver is solely responsible for paying attention to their surroundings and operating the steering wheel as necessary to ensure safety.**

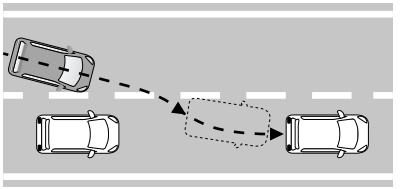

71UM05057

- **When a preceding vehicle changes lanes (Your vehicle may follow the preceding vehicle and also change lanes)**

(Continued)

**⚠ WARNING**

(Continued)

- **When a preceding vehicle is swaying (Your vehicle may sway accordingly and depart from the lane)**
- **When a preceding vehicle departs from a lane (Your vehicle may follow the preceding vehicle and also depart from the lane)**
- **When a preceding vehicle is being driven extremely close to the left/right lane line (Your vehicle may follow the preceding vehicle accordingly and depart from the lane)**
- **When there are moving objects or structures in the surrounding area (Depending on the position of the moving object or structure relative to your vehicle, your vehicle may sway)**
- **When the vehicle is struck by a crosswind or the turbulence of other nearby vehicles**
- **Situations in which the sensors may not operate properly: Refer to "Situations in which the front camera (DSBS II) and front radar (DSBS II) may not operate properly" in this section.**

(Continued)

**⚠ WARNING**

- **Situations in which the lane may not be detected: Refer to "Situations in which the lane may not be detected" in this section.**
- **When it is necessary to disable the system: Refer to "When it is necessary to disable the system" in this section.**

**Operation display of steering wheel operation support**
The operating state of the lane keep assist system is indicated.

| Indicator | Information display | | Situation |
|---|---|---|---|
| | Lane | Steering | |
|  On (white) |  On (white outline) |  On (white) | Lane keep assist is on standby |
|  On (green) |  On (green) |  On (green) | Lane keep assist is operating |
|  Blinks (yellow) |  Blinks (yellow) |  On (green) | The vehicle is departing the lane toward the side which the lane display is blinking |
|  On (yellow) | Off | Off | When the engine switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working. If there is a problem in the lane keep assist with the ignition switch in “ON” position or the engine switch in ON mode, this light will come on by yellow. Bring the vehicle to a Maruti Suzuki authorized workshop to have the problem corrected. |
|  On (white) |  On (white outline) | Off | Lane keep assist is preparing |

## High beam assist (if equipped)

The high beam assist uses a front camera (DSBS II) located on the upper portion of the windshield to detect the brightness of the lights of vehicles ahead, streetlights, etc., and automatically changes the head lights between the high beams and low beams.

**⚠ WARNING**


**For safe use**

**Do not overly rely on the high beam assist. Drivers should always be aware of their surroundings at their own responsibility, drive safely, and manually switch between high beam and low beam as needed.**

**To prevent unintentional operation of the high beam assist System**

**When it is necessary to disable the system: Refer to "When it is necessary to disable the system" in this section.**

### Using the high beam assist system

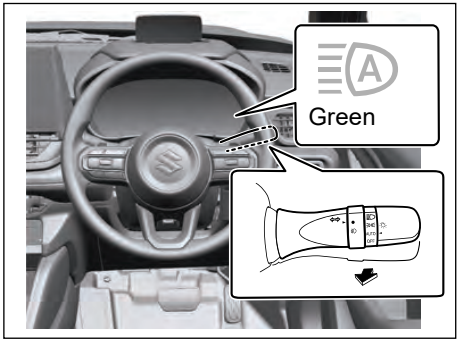


71UM05058

- Set the lighting switch to the "AUTO" position when the engine switch is pressed to change ignition mode to ON and when headlight is lit automatically, the high beam assist indicator light (green) will come on.
- To disable the high beam assist, pull the lever toward you or change the lever position or the knob of the lighting control lever to other than the above. The high beam assist indicator light (green) will go off.

*NOTE:*

*Automatic operating conditions of the high beams*

- *When all of the following conditions are met, the high beams will illuminate automatically:*
  - *The vehicle speed is more than about 30 km/h*
  - *The area ahead of the vehicle is dark.*
  - *There are no vehicles ahead with lights on.*
  - *There are few streetlights or other lights on the road ahead.*
- *If any of the following conditions are met, the headlights will change to the low beams:*
  - *The vehicle speed drops below about 25 km/h*
  - *The area ahead of the vehicle is not dark.*
  - *There is a vehicle ahead with lights on.*
  - *There are many streetlights or other lights on the road ahead.*

*Front Camera (DSBS II) detection*


- *In the following situations, the high beams may not be automatically changed to the low beams:*
  - *When a vehicle cuts in front of your vehicle*
  - *When another vehicle crosses in front of the vehicle*

  - *When vehicles ahead are repeatedly detected and then hidden due to repeated curves, road dividers or roadside trees*
  - *When a vehicle ahead approaches from a far lane*
  - *When a vehicle ahead is far away*
  - *When a vehicle ahead has no lights*
  - *When the lights of a vehicle ahead are dim*
  - *When a vehicle ahead is reflecting strong light, such as own headlights*
  - *Situations in which the sensors may not operate properly: Refer to "Situations in which the front camera (DSBS II) and front radar (DSBS II) may not operate properly" in this section.*
- *The headlights may change to the low beams if a vehicle ahead that is using fog lights without its headlights turned on is detected.*
- *House lights, street lights, traffic signals, and illuminated billboards or signs may cause the high beams to change to the low beams, or the low beams to remain on.*
- *The following may change the timing at which the headlights change to the low beams:*
  - *The brightness of lights of vehicles ahead*
  - *The movement and direction of vehicles ahead*
  - *The distance between the vehicle and a vehicle ahead*
  - *When a vehicle ahead only has lights illuminated on one side*
  - *When a vehicle ahead is a two-wheeled vehicle*
  - *The condition of the road (gradient, curve, condition of the road surface, etc.)*
  - *The number of passengers and amount of luggage*
- *The headlights may change between the high beams and low beams unexpectedly.*
- *Bicycles and other small vehicles may not be detected.*
- *In the following situations, the system may not be able to correctly detect the brightness of the surroundings. This may cause the low beams to remain on or the high beams to flash or dazzle pedestrians or vehicles ahead. In such a case, it is necessary to manually change between the high beams and low beams.*
  - *When there are lights similar to headlights or tail lights in the surrounding area*
  - *When headlights or tail lights of vehicles ahead are turned off, dirty, changing color, or not aimed properly*
  - *When the headlights are repeatedly changing between the high beams and low beams.*
  - *When use of the high beams is inappropriate or when the high beams may be flashing or dazzling pedestrians or other drivers.*
  - *When the vehicle is used in an area in which vehicles travel on the opposite side of the road of the country for which the vehicle was designed, for example using a vehicle designed for right-hand traffic in a left-hand traffic area, or vice versa*
  - *When it is necessary to disable the system: Refer to "When it is necessary to disable the system" in this section.*
  - *Situations in which the sensors may not operate properly: Refer to "Situations in which the front camera (DSBS II) and front radar (DSBS II) may not operate properly" in this section.*

### *Changing high beam assist setting*

*The settings of the high beam assist can be changed through the information display setting mode. For details, refer to "Setting mode of information display (Type B)".*


**Turning the high beams on/off manually**
**• Changing to the high beams**

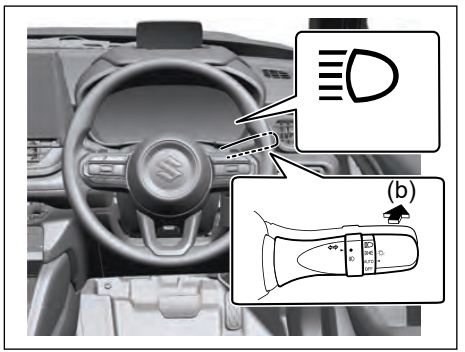


71UM05059

- Push the lever toward forward of the vehicle as shown in the illustration (b) to change to the high beams.
- To return to high beam assist, return the lever to its original position again.

**• Changing to the low beams**

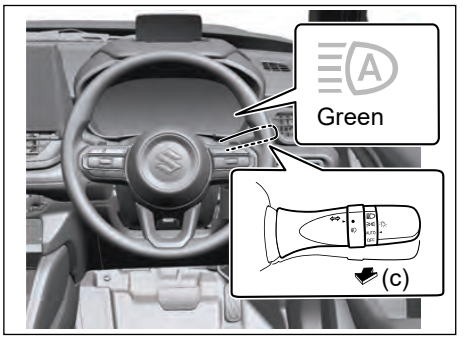


71UM05060

- Set the knob of the lighting control lever to the ≡D position or pull the lighting control lever toward you as shown in the illustration (c) to change to the low beams, the high beam assist indicator light (green) will turn off.
- To return to high beam assist, pull the lever toward you again or set the knob of the lighting control lever to the “AUTO” position.

## Cruise Control (if equipped)

The cruise control system allows you to maintain a steady speed without keeping your foot on the accelerator pedal. The controls for operating the cruise control system are on the steering wheel.

You can use the cruise control system under the following conditions:


- For manual transmission vehicle, the gear position is in 3rd, 4th or 5th. The vehicle speed is about 40 km/h or higher.
- For automatic transmission vehicle, the gearshift lever is in “D” position or the gear position is in 3rd, 4th, 5th or 6th in the manual mode. The vehicle speed is about 40 km/h or higher.
- For e-CVT vehicle, the gearshift lever is in “D” position. The vehicle speed is about 30 km/h or higher.

**⚠ WARNING**

**To help avoid loss of vehicle control, do not use the cruise control system when driving in heavy traffic, on slippery or winding roads, or on steep downhills.**

## Setting Cruising Speed


### Cruise control switch

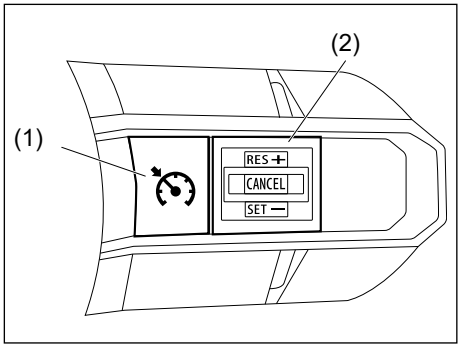


71UM050107


(1) Cruise switch
(2) “CANCEL” / “RES +” / “SET –” switch

### Instrument cluster Type A

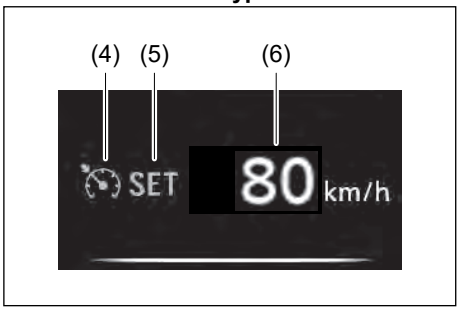


76TS51240

### Instrument cluster Type B

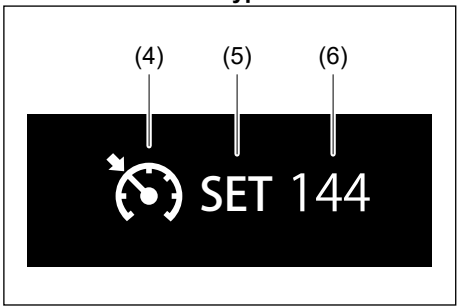


71UM050165

(4) Cruise indicator
(5) “SET” indicator
(6) Set speed indication

1) Turn on the cruise control system by pushing cruise switch (1). When the cruise indicator (4) comes on, you can set cruising speed.
2) Accelerate or decelerate to the desired speed.
3) Push down the “RES +/SET –” switch (2) and then “SET” indicator (5) comes on. Also, set speed indication (6) comes on at the same time. Take your foot off the accelerator pedal and the set speed will be maintained.

**⚠ WARNING**

**If the cruising speed is set by accident, you cannot decelerate or could loose control of the vehicle. This could lead to an accident, resulting in severe injury or death.**
**Turn off the cruise control system and check that the cruise indicator (4) is off when the system is not in use.**

*NOTE:*
*Established cruising speed may differ a little from the speed meter indication depending on the road conditions.*

## Changing Speed Temporarily

When the cruising speed is maintained, you can temporarily accelerate or decelerate.

To accelerate, depress the accelerator pedal. When you take your foot off the pedal, your vehicle will return to the set speed.

To decelerate, depress the brake pedal. The set speed will be canceled and "SET" indicator (5) will go off.

For manual transmission vehicle and automatic transmission vehicle, to resume the previously set speed, push up the "RES +/SET –" switch (2) and turn on "SET" indicator (5) again when vehicle speed is above 40 km/h. The vehicle will accelerate to the previously set speed and maintain its speed.

For e-CVT vehicle, to resume the previously set speed, push the "RES +" side of the "RES +/SET –" switch (2) and turn on "SET" indicator (5) again when vehicle speed is above 30 km/h. The vehicle will accelerate to the previously set speed and maintain its speed.

*NOTE:*
*For automatic transmission vehicle, when the cruising speed is maintained, you cannot decelerate by using the engine brake even if you downshift from higher gear to 3rd in the manual mode.*
*To decelerate while the cruise control is on, depress the brake pedal or push down the "RES +/SET –" switch (2).*

## Changing Cruising Speed

**Using the accelerator pedal**

To reset at a faster cruising speed, accelerate to the desired speed using the accelerator pedal and push down the "RES +/SET –" switch (2). The new speed will be maintained.

**Using the brake pedal**

To reset at a slower cruising speed, decelerate to the desired speed using the brake pedal and push down the "RES +/SET –" switch (2). The new speed will be maintained.

*NOTE:*
*When the brake pedal is depressed, "SET" indicator (5) will go off until you reset the cruising speed.*

**Using "RES +/SET –" switch**

To reset at a faster cruising speed, press repeatedly or hold push up the "RES +/SET –" switch (2). Vehicle speed will steadily increase. When you release the switch, the new speed will be maintained.

To reset at a slower cruising speed, press repeatedly or hold push down the "RES +/SET –" switch (2) until the vehicle has slowed to the desired speed, and then release the switch. The new speed will be maintained.

*NOTE:*
- *You can adjust the set speed by approximately 1 km/h by pushing "RES +/SET –" switch quickly.*
- *For manual transmission vehicle and automatic transmission vehicle, when the current vehicle speed is about 10 km/h or more faster than the previously set speed, the cruising speed cannot be decreased even if the "RES +/SET –" switch (2) is pushed down.*
- *For manual transmission vehicle and automatic transmission vehicle, when the current vehicle speed is about 10 km/h or more slower than the previously set speed, the cruising speed cannot be increased even if the "RES +/SET –" switch (2) is pushed up.*
- *For e-CVT vehicle, when the current vehicle speed is about 5 km/h or more faster than the previously set speed, the cruising speed cannot be decreased even if the "RES +/SET –" switch (2) is pushed down.*
- *For e-CVT vehicle, when the current vehicle speed is about 5 km/h or more slower than the previously set speed, the cruising speed cannot be increased even if the "RES +/SET –" switch (2) is pushed up.*

## Canceling Cruise Control

"SET" indicator (5) will go off and the cruise control will be canceled temporarily with the following conditions:

- Push "CANCEL" switch (2).
- Depress the brake pedal.
- For manual transmission, depress the clutch pedal.
- For automatic transmission vehicle, downshift from 3rd to 2nd in the manual mode.
- For manual transmission vehicle and automatic transmission vehicle, the vehicle speed falls more than about 20 percent from the set speed.
- For manual transmission vehicle and automatic transmission vehicle, any time the vehicle speed falls below 40 km/h.
- For manual transmission vehicle and automatic transmission vehicle, when the vehicle skids and ESP® is activated.
- For e-CVT vehicle, the current vehicle speed becomes below 30 km/h.
- For e-CVT vehicle, the current vehicle speed falls more than 16 km/h, compared with the set speed.
- For e-CVT vehicle, when ESP® is activated.
- For e-CVT vehicle, when TRC is activated for a certain period of time.

For manual transmission vehicle and automatic transmission vehicle, to resume the previously set speed, push up the "RES +/SET –" switch (2) to turn on "SET" indicator (5). The vehicle speed must be above 40 km/h when the vehicle is not under the above conditions.

For e-CVT vehicle, to resume the previously set speed, push the "RES +" side of the "RES +/SET –" switch (2) to turn on "SET" indicator (5). The vehicle speed must be above 30 km/h when the vehicle is not under the above conditions.

To turn off the cruise control system, push cruise switch (1) and check that the cruise indicator (4) is off.

Also, if the malfunction indicator light in the instrument cluster comes on or blinks, the cruise control system will be turned off.

*NOTE:*
*If you turn off the cruise control system, the previously set speed in the memory is cleared. Reset your cruising speed again.*

### Adaptive cruise control (with all-speed following and stop keeping function)

This adaptive cruise control uses front radar (DSBS II) and front camera (DSBS II) to detect the presence of vehicles ahead, determines the current vehicle-to-vehicle distance, and operates to maintain a suitable distance from the vehicle ahead. The desired vehicle-to-vehicle distance can be set by operating the following distance setting switch
Use the adaptive cruise control only on highways and expressways.

**⚠ WARNING**

**For safe use**

- **Driving safely is solely the responsibility of the driver. Do not overly rely on this system, and pay careful attention to the surrounding conditions in order to ensure safe driving.**

(Continued)

**⚠ WARNING**

(Continued)

- **The adaptive cruise control provides driving assistance to reduce the driver's burden. However, there are limitations to the assistance provided.**
  **Read the following items carefully. Do not overly rely on this system and always drive carefully.**
  **– Conditions under which the system may not operate correctly: Refer to "Conditions under which the system may not operate correctly" in this section.**
- **Set the speed appropriately according to the speed limit, traffic flow, road conditions, weather conditions, etc. The driver is responsible for confirming the set speed.**
- **Even if the system is operating correctly, the condition of a preceding vehicle as recognized by the driver and detected by the system may differ. Therefore, it is necessary for the driver to pay attention, assess risks, and ensure safety. Over-reliance on this system to drive the vehicle safely may lead to an accident resulting in death or serious injury.**

(Continued)

**⚠ WARNING**

(Continued)

**Precautions for the driving assist systems**

**Observe the following precautions, as there are limitations to the assistance provided by the system. Over-reliance on this system may lead to an accident resulting in death or serious injury.**

- **For support for the driver's vision: The adaptive cruise control is only intended to help the driver in determining the distance between the driver's own vehicle and a designated preceding vehicle. It is not a system which allows for careless or inattentive driving, and is not a system which assists in poor visibility conditions.**
  **The driver must pay attention to their surroundings.**

(Continued)

**⚠ WARNING**

(Continued)

- **For support for the driver's judgment:**
  **The adaptive cruise control determines whether the distance between the driver's own vehicle and a designated preceding vehicle is within a set range. It is not capable of making any other type of judgment. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger.**
- **For support for the driver's operation:**
  **The adaptive cruise control does not include functions which will prevent or avoid collisions with vehicles ahead of your vehicle. Therefore, if there is ever any possibility of danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure safety.**

(Continued)


**⚠ WARNING**

(Continued)

**<u>Situations in which the adaptive cruise control should not be used</u>**

**Do not use the adaptive cruise control in the following situations. As the system will not be able to provide appropriate control, using it may lead to an accident resulting in death or serious injury.**

- **When driving on a road with a mix of pedestrians, bicycles, Oncoming vehicles, animals, barriers, Stationary objects, etc**
- **When driving on a highway or expressway entrance or exit**
- **When the approach warning sounds frequently**
- **When vehicle is driven on steep hill**
- **When vehicle is driven on curvy, winding, undulating roads.**

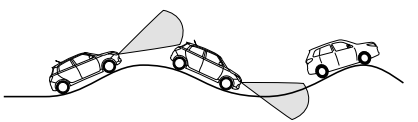

71UM05001

- **When vehicle is driven on the road with many steep uphills and downhills**
- **Situations in which the sensors may not operate properly:**

(Continued)

**⚠ WARNING**


(Continued)

**Refer to "Situations in which the front camera (DSBS II) and front radar (DSBSII) may not operate properly" in this section.**

- **When it is necessary to disable the system: Refer to "When it is necessary to disable the system" in this section.**
- **A busy road or one that involves frequent acceleration and deceleration. The system could not keep your vehicle at an appropriate speed for traffic conditions.**
- **On a slippery road such as ice or snow-covered road. The tyres may turn over and you may lose control of the vehicle.**
- **When your vehicle is towed or your vehicle is towing another vehicle**
- **When the vehicle cannot move in a straight manner without consistently steering, due to an accident or breakdown**
- **When driving on the potholes, speed breakers, railroad crossing, toll plaza.**

*NOTE:*
*When the adaptive cruise control is operating, there may be a noise caused by the brake application, which is not abnormal.*

**Basic functions**

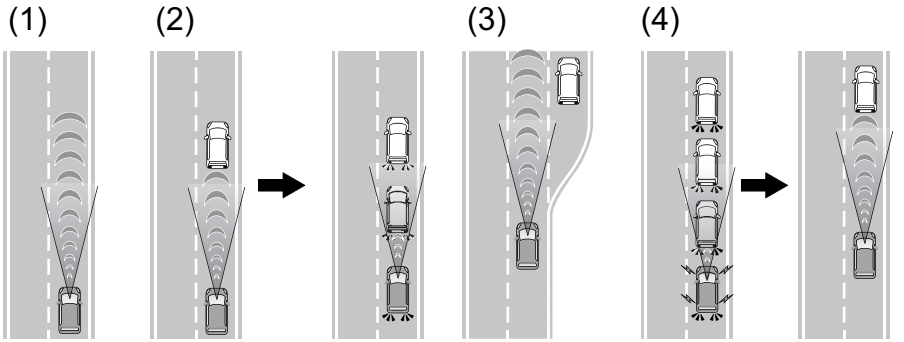


71UM05012


(1) Constant speed cruising:
When there are no vehicles ahead
The vehicle drives at the speed set by the driver.
If the set vehicle speed is exceeded while driving down a hill, the set vehicle speed display will blink.

(2) Deceleration and follow-up cruising
When a preceding vehicle driving slower than the set vehicle speed is detected
When a vehicle is detected driving ahead of your vehicle, the vehicle automatically decelerates and if a greater reduction in vehicle speed is necessary, the brakes are applied (the stop lights will come on at this time). The vehicle is controlled to maintain the vehicle-to-vehicle distance set by the driver, in accordance with changes in the speed of the preceding vehicle. If vehicle deceleration is not sufficient and the vehicle approaches the vehicle ahead, the approach warning will sound.

(3) Acceleration
When there are no longer any preceding vehicles driving slower than the set vehicle speed
The vehicle accelerates until the set vehicle speed is reached and then resumes constant speed cruising.

(4) Stop and start control:
If a preceding vehicle stops, the vehicle will also stop (stop control). After the preceding vehicle begins to move ahead, pulling up the “RES +” / “–” switch to the “RES +” position or depressing the accelerator pedal will resume follow-up cruising (start control). If start control is not performed, stop control will continue.


**System components**
**• Meter display**

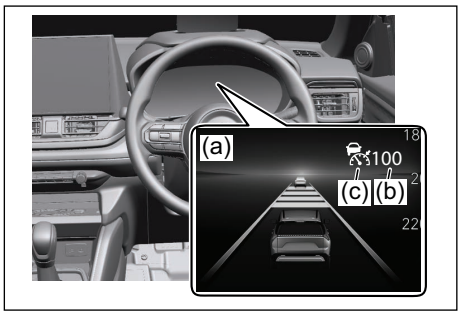


71UM05004

(a) Information display
(b) Set vehicle speed
(c) Adaptive cruise control indicator


**• Switches**

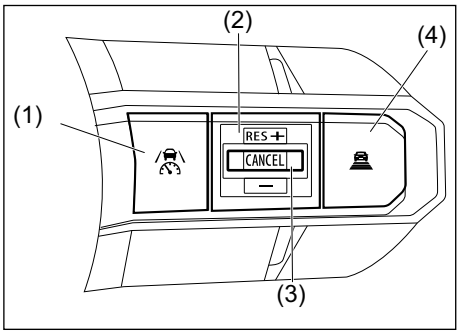


71UM050108


(1) Driving assist switch
(2) “RES +” / “–” switch
(3) “CANCEL” switch
(4) Following distance setting switch

**Using the adaptive cruise control**

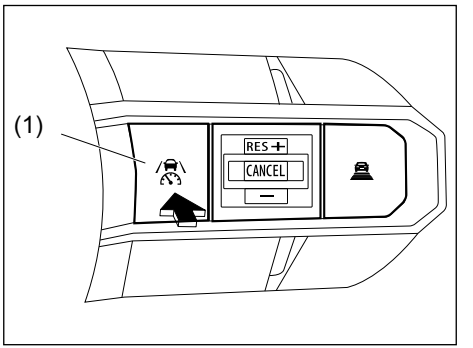


71UM050109

Using the accelerator pedal, accelerate or decelerate to the desired vehicle speed (approximately 30 km/h or more), and press the driving assist switch (1) to set the set vehicle speed.

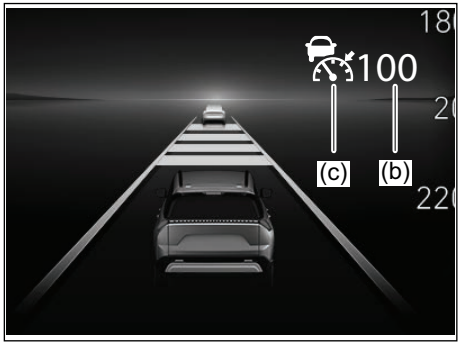



71UM05007

The adaptive cruise control indicator (c) will change from illuminated in white to green. The set vehicle speed (b) will be displayed on the information display (a) in green. If the vehicle speed is set while driving at below approximately 30 km/h, the set vehicle speed will be set to approximately 30 km/h.

*NOTE:*
*The vehicle speed indicated on the speedometer may differ slightly from the set vehicle speed depending on road conditions.*

**Adjusting the set vehicle speed**

**• Adjusting the set vehicle speed using the switches**

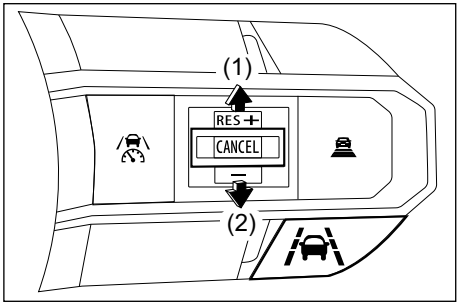


71UM05008

(1) Increase set vehicle speed
(2) Decrease set vehicle speed

Short press adjustment:
Press the switch
Long press adjustment:
Press and hold the switch until the desired set vehicle speed is reached.

The set vehicle speed will increase or decrease as follows:


- Short press adjustment:
  By 1 km/h each time the switch is pressed.
- Long press adjustment:
  Increases or decreases in 5 km/h increments continuously while the switch is pressed and held.

The set vehicle speed adjustment increment can be changed through a customize setting. Refer to “Setting mode of information display (Type B)”.

**• Increasing the set vehicle speed using the accelerator pedal**

1) To increase the set speed, accelerate to the desired speed using the accelerator pedal.
2) Pull up the “RES +” / “–” switch to “RES +” position.
   The new speed will be maintained.

**Canceling/resuming control**

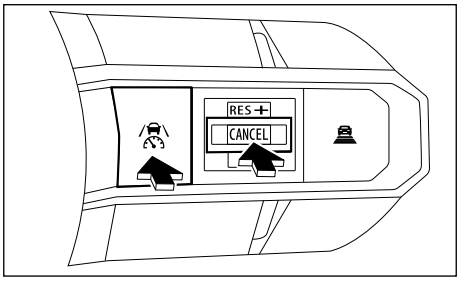



71UM050111

1) Press “CANCEL” switch or driving assist switch to cancel control. Control will also be canceled if the brake pedal is depressed.
2) Pull up the “RES +” / “–” switch to “RES +” position or press driving assist switch to resume control.

**Changing the vehicle-to-vehicle distance**

- Each time the switch is pressed, the vehicle-to-vehicle distance setting will change as follows:
  If a preceding vehicle is detected, the preceding vehicle mark (A) will be displayed.

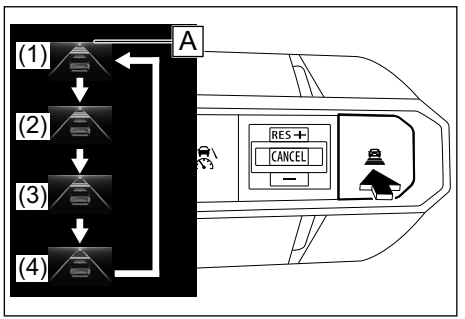


71UM05010

| Vehicle-to-vehicle distance | | Approximate Distance (Vehicle Speed: 100 km/h) |
|---|---|---|
| (1) | Long | Approximately 70 m (230 ft) |
| (2) | Medium | Approximately 60 m (197 ft) |
| (3) | Short | Approximately 45 m (148 ft) |
| (4) | Shortest | Approximately 30 m (98 ft) |

*NOTE:*

*Operating conditions*

- *The gearshift lever is in "D".*
- *The desired set speed can be set when the vehicle speed is approximately 30 km/h or more.*
  *(If the vehicle speed is set while driving at below approximately 30 km/h, the set speed will be set to approximately 30 km/h.)*

*Accelerating after setting the vehicle speed*

*As with normal driving, acceleration can be performed by depressing the accelerator pedal. After accelerating, the vehicle will return to the set vehicle speed. However, while in vehicle-to-vehicle distance control mode, the vehicle speed may decrease to below the set vehicle speed in order to maintain the distance from the preceding vehicle.*

*Stop control during follow-up cruising*

- *When the "RES +" / "–" switch is pressed to the "RES +" position during stop control, the vehicle will return to follow-up cruising if the preceding vehicle starts within approximately three seconds.*
- *If the preceding vehicle starts within approximately three seconds after stopping in accordance with the movement of that vehicle, follow-up cruising resumes.*
- *The system is released approximately three minutes after stopping in accor-*

*dance with the movement of the preceding vehicle. However, vehicle stopping continues*

*Automatic cancellation of adaptive cruise control (with all-speed following and stop keeping function)*

*In the following situations, the adaptive cruise control will be canceled automatically:*

- *When the brake control or output restriction control of SUZUKI SAFETY SUPPORT operates (For example: Dual Sensor Brake Support II (DSBS II)*
- *When the parking brake has been operated*
- *When stop control is activated on a steep slope*
- *When the following is detected during stop control*
  - *The driver's seatbelt is not fastened*
  - *The driver's door opened*
  - *Approximately 3 minutes have passed since the vehicle stopped*
- *Situations in which some or all of the functions of the system cannot operate: (P.5-72)*

*Adaptive cruise control warning messages and buzzers*

- *For safe use: Refer to "For safe use" in this section.*

*Preceding vehicles that the sensor may not detect correctly*

*In the following situations, depending on the conditions, if the system cannot provide sufficient deceleration or acceleration is necessary, operate the brake pedal or accelerator pedal.*
*As the sensor may not be able to correctly detect these types of vehicles, the approach warning may not operate.*
*Refer to "Approach warning" in this section.*

- *When a vehicle cuts in front of your vehicle or changes lanes away from your vehicle extremely slowly or quickly*
- *When changing lanes*
- *When a preceding vehicle is driving at a low speed*
- *When a vehicle is stopped in the same lane as the vehicle*
- *When a motorcycle is traveling in the same lane as the vehicle*

*Conditions under which the system may not operate correctly*


*In the following situations, operate the brake pedal (or accelerator pedal, depending on the situation) as necessary.*
*As the sensor may not be able to correctly detect a vehicle, the system may not operate properly.*

- *When a preceding vehicle brakes suddenly*
- *When changing lanes at low speeds, such as in a traffic jam*

**Approach warning**
In situations where the vehicle approaches a preceding vehicle and the system cannot provide sufficient deceleration, such as if a vehicle cuts in front of the vehicle, a warning display will flash and a buzzer will sound to alert the driver. Depress the brake pedal to ensure appropriate vehicle-to-vehicle distance.

**• Warnings may not occur when**
In the following situations, the warning may not operate even though the vehicle- to-vehicle distance is short.
- When the preceding vehicle is traveling at the same speed or faster than your vehicle
- When the preceding vehicle is traveling at an extremely low speed
- Immediately after the vehicle speed has been set
- When the accelerator pedal is depressed

**Curve speed reduction function**
When a curve is detected, the vehicle speed will begin being reduced. When the curve ends, the vehicle speed reduction will end.
Depending on the situation, the vehicle speed will then return to the set vehicle speed.
In situations where vehicle-to-vehicle distance control needs to operate, such as when a preceding vehicle cuts in front of your vehicle, the curve speed reduction function will be canceled.

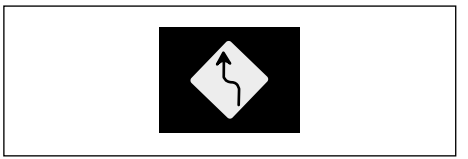

71UM05011

*NOTE:*
*Situations in which the curve speed reduction function may not operate*

*In situations such as the following, the curve speed reduction function may not operate:*
- *When the vehicle is being driven around a gentle curve*
- *When the accelerator pedal is being depressed*
- *When the vehicle is being driven around an extremely short curve*

*Changing the settings of the curve speed reduction function*

*Various settings of the curve speed reduction function can be changed through customize settings. Refer to "Setting mode of information display (Type B)".*

**Support for lane change**
If your vehicle is being driven at approximately 80 km/h or more and a lane change to the passing lane is performed, when the turn signal control lever is operated for lane changing, the vehicle will accelerate up to the set speed to assist in overtaking.
If your vehicle is being driven at approximately 80 km/h or more and the lane is changed to that with a vehicle traveling slower than your vehicle, when the turn signal control lever is operated the vehicle will gradually decelerate to assist in changing lanes.

**Changing adaptive cruise control settings**
The settings of the adaptive cruise control can be changed through customize settings. Refer to "Setting mode of information display (Type B)".

**Warning and indicator messages**

The information display shows the warning and indicator messages to let you know about certain problems of the adaptive cruise control.

When adaptive cruise control (with all-speed following and stop keeping function) cannot be set

| Indicator | Message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|---|
|  69T050860 | “ACC System Unavailable Turn ON ESP System” | Off | Beeps at short intervals (from interior buzzer) | Adaptive cruise control cannot be set because ESP® is OFF. Set ESP® to ON. |
|  69T050860 | “ACC System Unavailable Shift into D” | Off | Beeps at short intervals (from interior buzzer) | • Adaptive cruise control cannot be set because the gearshift lever is not in “D” position. Shift the gearshift lever in “D” and try again.<br>• Adaptive cruise control cannot be set because the temporary manual mode is active. Cancel the temporary manual mode and try again. |
|  69T050860 | “ACC System Unavailable Activate on Flatter Road” | Off | Beeps at short intervals | The adaptive cruise control cannot be set because you are driving on a steep slope. Set it on a flat road. |
|  69T050860 | “ACC System Unavailable” | Off | Beeps at short intervals (from interior buzzer) | Adaptive cruise control cannot be set except for the above causes. Ensure operating conditions and try again. |

When adaptive cruise control (with all-speed following and stop keeping function) is automatically canceled

| Indicator | Message | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|---|
|  69T050860 | “ACC System Malfunction Press Brake Visit Dealer” | Blinks | Continuous beep | There may be a malfunction in the adaptive cruise control system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.(P.4-89) |
|  69T050860 | “Unavailable Press Brake to Resume Driving” | Off | Continuous beep | The adaptive cruise control is canceled except for the above cause. Improve the cause, set the adaptive cruise control again.(P.5-111) |

### Displays and system operation

The operating state of the adaptive cruise control is indicated.

| Indicator light | Set vehicle speed | Vehicle to vehicle distance setting | Preceding vehicle mark | Situation |
|---|---|---|---|---|
|  On (white) |  Off / On (white) |  On (white) | Off | Adaptive cruise control is on standby |
|  On (green) |  On (green) |  On (green) | Off | Constant speed cruising / acceleration |
|  On (green) |  On (green) |  On (green) |  On (white) | Deceleration / followup cruising |
|  On (green) |  On (white) |  On (white) |  On (gray) | Stop control is in progress / accelerating by operating the accelerator pedal |
|  On (green) |  On (green) |  Blinks (yellow) |  Blinks (yellow) | Approach warning is operating |

| Indicator light | Set vehicle speed | Vehicle to vehicle distance setting | Preceding vehicle mark | Situation |
|---|---|---|---|---|
|  On (yellow) |  Off / On (white) | Off | Off | Adaptive cruise control system is temporarily stopped |
|  On (yellow) | Off | Off | Off | There is a malfunction in the adaptive cruise control system |


## Blind Spot Monitor (BSM) (if equipped)

Blind Spot Monitor (BSM) detects presence of a vehicle diagonally in the rear and tells you of the presence by the outside rearview mirror and an interior buzzer. This system assists the driver to change lanes.

**⚠ WARNING**

- **The BSM is a supplemental device to tell you the presence of a vehicle approaching diagonally from the rear. However, your responsibility for safe driving is the most important matter. Check around the vehicle using your direct vision or mirrors.**
- **Depending on the circumstances, the system may not work. Do not rely excessively on the system and always drive in a safe manner. Overreliance on this function may lead to an accident.**


The sensor detects a vehicle running on the neighboring lane or approaching from the rear on the neighboring lane and tells the presence to you. The indicator on the outside rearview mirror at the detected side comes on.

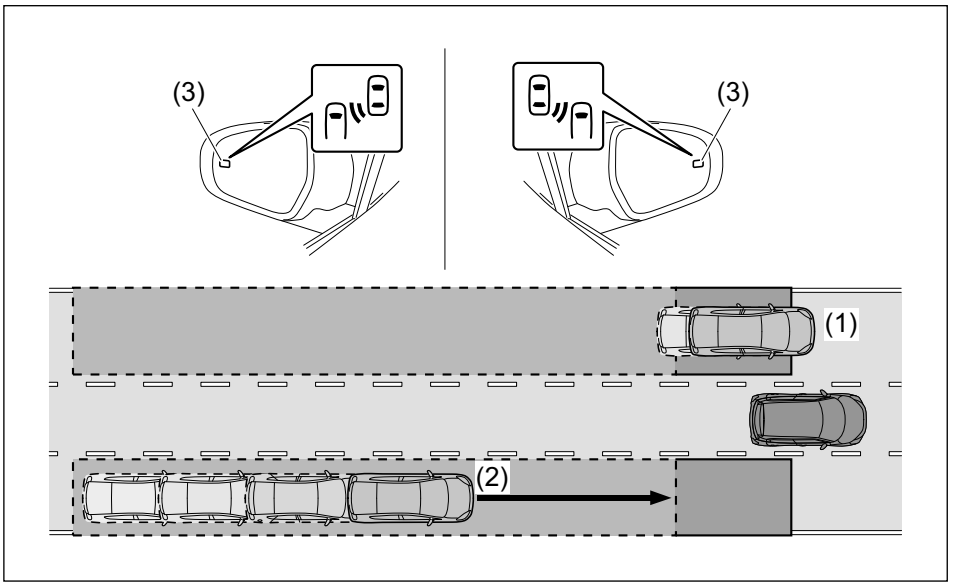


71UM05013


(1) A vehicle running alongside in the area where the outside rearview mirror cannot reflect
(2) A vehicle rapidly approaching the area where the outside rearview mirror cannot reflect
(3) Indicator

When the driver operates turn signal control lever to the detected side, an interior buzzer sounds and the indicator on the outside rearview mirror blinks.

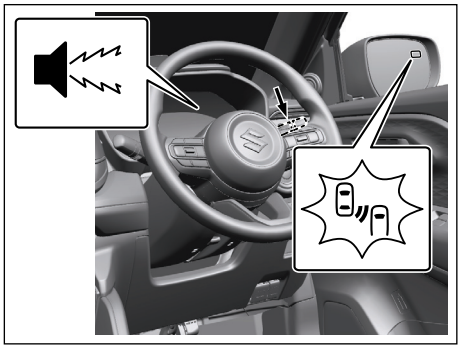

71UM05014

**Detecting area**
Vehicle entering the following areas can be detected.

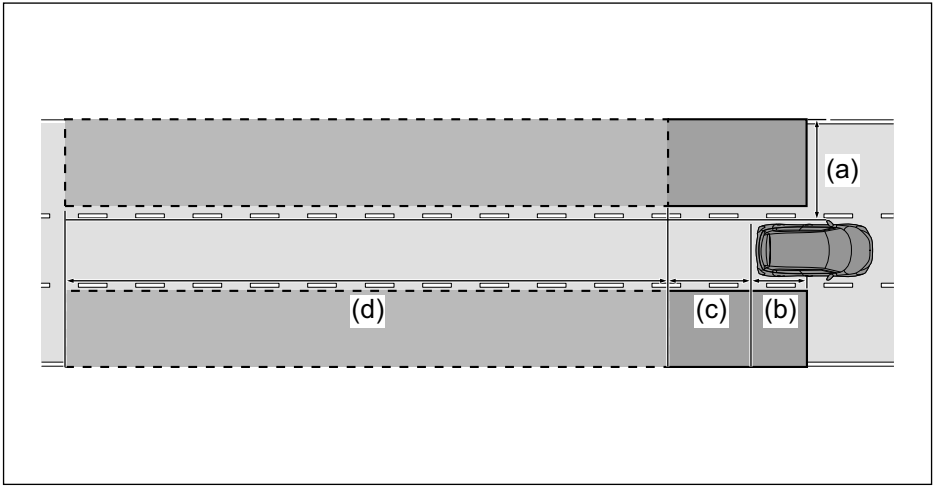


71UM05015

(a) An area about 0.5 to 4.0 m (1.6 to 13.1 ft) from both sides of the vehicle
(b) An area between the rear bumper and near the driver's seat
(c) An area about 4.0 m (13.1 ft) behind the rear bumper
(d) An area between about 4 and 50 m (13.1 and 164 ft) behind the rear bumper

*NOTE:*
*The greater the difference in speed between your vehicle and the detected vehicle is, the farther away the vehicle will be detected, causing the outside rearview mirror indicator to illuminate or blink.*

**Operating condition**
When all the following conditions are satisfied, the BSM will actuate.
- When the BSM OFF indicator light is not indicated.
- When gearshift lever position is other than “R”.
- When vehicle speed is about 15 km/h or more.
- When the engine is running.


*NOTE:*
*Using the setting mode in the information display, the BSM can be canceled. For details on how to use the information display, refer to “Setting mode of information display (Type B)”.*

**Situations where the system does not activate**
Vehicles in the below situation cannot be detected and the BSM will not activate.
- Small motorcycle, bicycle and pedestrian*
- Oncoming vehicle
- Vehicle running behind on the same lane*
- Vehicles traveling 2 lanes away from your vehicle*
- Guardrails, walls, signs, parked vehicles and similar stationary objects*

* Depending on conditions, detection of a vehicle and/or object may occur.

**Situations where the system may not activate properly**
Under the following situations, the BSM may not activate correctly due to ineffective detection.
- When sensor or surrounding area on the rear bumper is covered with foreign materials such as dirt, snow, ice, etc. (remove foreign materials)
- When sensor is misaligned in such a case as a strong impact to the sensor or the rear bumper
- When the tyres are slipping or spinning
- When the distance between your vehicle and a guardrail, wall, etc., that enters the detection area is short
- With a modified suspension (Altering the vehicle height, etc.)
  When your vehicle is weighed down by heavy items in the luggage compartment
- When the battery has a voltage abnormality
- When the temperature around the sensor is too high/low
- The entrance or exit of a tunnel
- When rear visibility is poor due to exhaust gas, splash of water or snow, spray, sand or smoke
- When two or more vehicles are approaching one after another continuously
- When distance to a vehicle behind is too close
- When speed difference between your vehicle and a vehicle behind in the detecting area is too big
- When vehicle speed between your vehicle and other vehicle in the detecting area is almost the same
- When starting from standstill, another vehicle in the detecting area remains
- When running on a steep uphill, downhill, continuous sharp curves or pavement joints
- When running on road with rough, bumpy or uneven surface
- When speed difference between your vehicle and other vehicle varies
- When the other vehicle running on the neighboring lane is too far due to wide lane, running on edge of lane, etc.
- When your vehicle is equipped with accessory such as carrier in the rear
- When height difference between your vehicle and other vehicle in the detecting area is too big (A low-slung vehicle and sports cars etc.)

**Sensor location**
The sensors (4) are arranged in the rear bumper at right and left one by one.

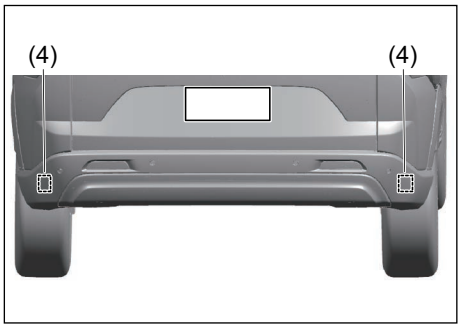

71UM05016

**⚠ WARNING**


**For correct activation of the sensor, you are requested to observe the following precautions. Lack of reasonable care of the sensor may cause detection error due to malfunction and lead to accident.**
- **Keep the rear bumper around the sensors clean always.**
- **Do not give strong impact or pressure to the rear bumper. If the radar sensor periphery such as the radar sensor or rear bumper is deformed or damaged due to a contact accident, do not use the blind spot monitor and consult with a Maruti Suzuki authorized workshop**

(Continued)

**⚠ WARNING**

(Continued)
- **Do not stick stickers on the rear bumper around the sensors.**
- **Do not modify the surrounding area on the rear bumper. In case the rear bumper gets damaged or the paint gets peeled off, the system may malfunction. If this occurs, consult with a Maruti Suzuki authorized workshop.**
- **Do not remove or disassemble the radar sensors or peripheral components.**

**Stopping BSM /RCTA**

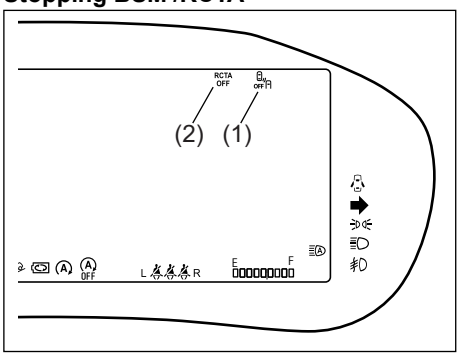

71UM050112

(1) BSM OFF indicator light
(2) RCTA OFF indicator light

Using the setting mode on the information display, the BSM can be stopped. For details on how to use the information display, refer to “Setting mode of information display (Type B)”. When the BSM is stopped, the BSM OFF indicator light (1) and RCTA OFF indicator light (2) come on.

In the following situations, the BSM OFF indicator light or RCTA OFF indicator light blinks and the system is deactivated.
- When the sensor or bumper is covered in snow, ice or dirt
- When the temperature around the sensor is too high/low
- When the mounting position or angle of the sensor is shifted
- When the battery voltage is decreased

If the light blinks and stays on, there may be a malfunction of the systems. You should have the systems inspected by a Maruti Suzuki authorized workshop.

*NOTE:*
*When the BSM is stopped, the RCTA is also stopped. When the BSM is ON, the RCTA can be stopped separately. For details about RCTA, refer to “Rear Cross Traffic Alert (RCTA) (if equipped)”.*

**Warning and indicator messages of BSM/RCTA**

The information display shows the warning and indicator messages to let you know about certain problems.

| Warning and indicator message | Warning indicator | Master warning indicator light | Sound | Cause and remedy |
|---|---|---|---|---|
|  <br>69T050830<br>"BSM System Function Paused" | Blinks<br>  <br>69T050850 | Blinks<br>  | Chime | BSM and RCTA are suspended. If the warning message remains after starting the engine again, have your vehicle inspected by a Maruti Suzuki authorized workshop. |
| | | | | BSM and RCTA are suspended due to dirt on sensor and rear bumper around the sensor. Remove the dirt from the sensor and rear bumper around the sensor, and restart the engine. If the warning message remains, have your vehicle inspected by a Maruti Suzuki authorized workshop. |
|  <br>69T050830<br>"BSM System Test Required" | Blinks<br>  <br>69T050850 | Blinks<br>  | Chime | There may be a problem with the BSM and RCTA. Have your vehicle inspected by a Maruti Suzuki authorized workshop. |


## Rear Cross Traffic Alert (RCTA) (if equipped)

Rear Cross Traffic Alert (RCTA) detects the presence of a vehicle from the rear right or the rear left and tells you of the presence by the image in the information display and an interior buzzer. This system assists the driver when backing up.

**⚠ WARNING**

- **The RCTA is a supplemental device to tell you the presence of a vehicle approaching from the left and right rear when backing up. However, your responsibility for safe driving is the most important matter. Check around the vehicle using your direct vision or mirrors.**
- **Depending on the circumstances, the system may not work. Do not rely excessively on the system and always drive in a safe manner. Overreliance on this function may lead to an accident.**


While your vehicle is backing up, if the approaching vehicle from the rear right or the rear left is detected by the radar sensor, an interior buzzer sounds and the information display shows the following image such as (2) and/or (3). Also, the following image such as (4) and/or (5) as will be displayed on the rear view camera monitor (if equipped). In addition, the indicators (6) and (7) on both outside rearview mirror blinks.

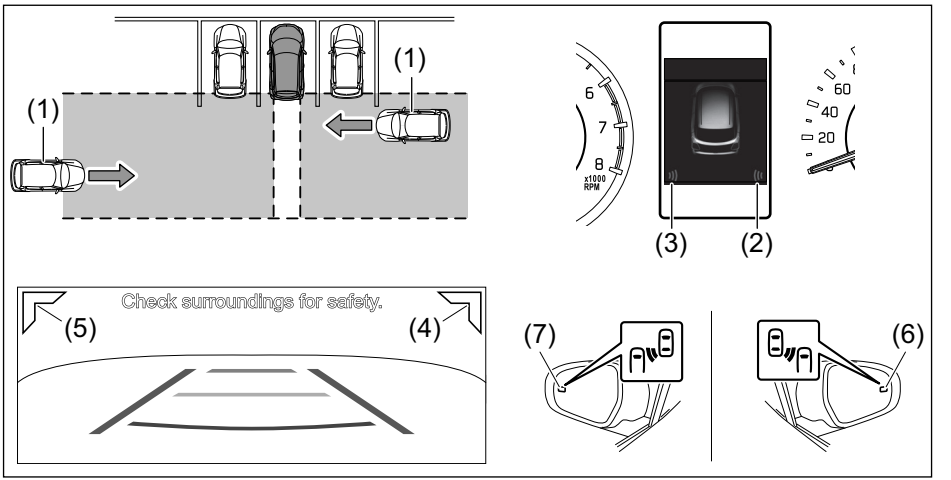


71UM05017

(1) Approaching vehicle
(2) Approaching vehicle from the rear right
(3) Approaching vehicle from the rear left
(4) Approaching vehicle from the rear right
(5) Approaching vehicle from the rear left
(6) Indicator
(7) Indicator

**Detecting area**
Vehicle in the following area can be detected.

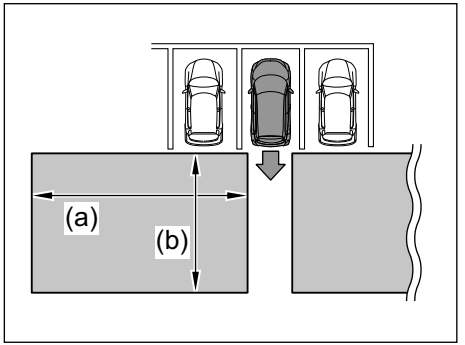


71UM05018


(a) About 20 m (66 ft)
(b) About 8 m (26 ft)

**Operating condition**
When all of the following conditions are satisfied, the RCTA is activated.

- When the BSM OFF indicator light is not indicated
- When the RCTA OFF indicator light is not indicated
- When gearshift lever position is in “R” position
- When the retreating vehicle speed is about 8 km/h or below
- When approaching vehicle speed is approximately 3.6 to 90 km/h

*NOTE:*
- *Using the setting mode on the information display, RCTA can be stopped. For details on how to use the information display, refer to “Setting mode of information display (Type B)”*
- *If the BSM is stopped using the setting mode on the information display, the RCTA is also stopped.*

**Situations where the system does not activate**
The system does not detect the following vehicles, and the RCTA will not activate.
- Approaching vehicle from just behind
- A vehicle backing up from the neighboring parking space

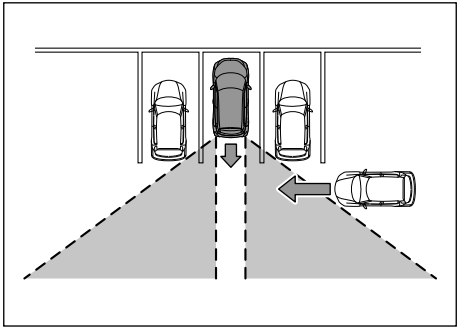

71UM05019


- A vehicle cannot be detected due to an obstacle
- Parked vehicles and similar stationary objects*
- Small motorcycle, bicycle and pedestrian*
- A vehicle moving away from your vehicle

* Depending on conditions, detection of a vehicle and/or object may occur.

**Situations where the system may not activate properly**

Under the following conditions, the system cannot detect vehicle effectively and the RCTA may not activate properly.

- When sensor or surrounding area on the rear bumper is covered with foreign materials such as dirt, snow, ice, etc. (remove foreign materials)
- When there is bad weather such as a heavy rain, dense fog or blizzard
- When rear visibility is poor due to exhaust gas, splash of water or snow, spray, sand or smoke
- When sensor is misaligned in such a case as a strong impact to the sensor or the rear bumper
- When two or more vehicles are approaching one after another continuously
- A vehicle approaching in high speed
- When the battery has a voltage abnormality
- When the temperature around the sensor is too high/low
- A vehicle parked at a shallow angle
- In an environment with grates and gutters.
- Extreme changes in vehicle height (Nose up, nose down, etc.)
- When water splashes toward the sensor from sprinklers, etc.
- When a guardrail, wall, etc., is at a short distance and they are within the detection range.

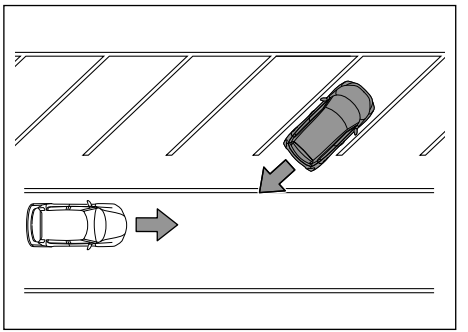

71UM05020

**Sensor location**

For details, refer to “Sensor location”.

**Stopping RCTA**


For details, refer to “Stopping BSM / RCTA”.

**Warning and indicator messages**


The information display shows the warning and indicator messages to let you know about certain problems of the RCTA. For details, refer to “Warning and indicator messages of BSM/RCTA”.

## Parking Sensors (RPAS+FPAS)

The ultrasonic sensor transmits ultrasonic, it hits an obstacle and the sensor receive the reflected ultrasonic again. The sensor will detect the position of the obstacle based on the time which takes for transmitting and receiving ultrasonic.

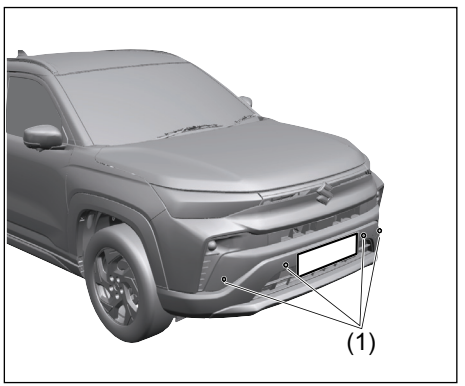


71UM050196

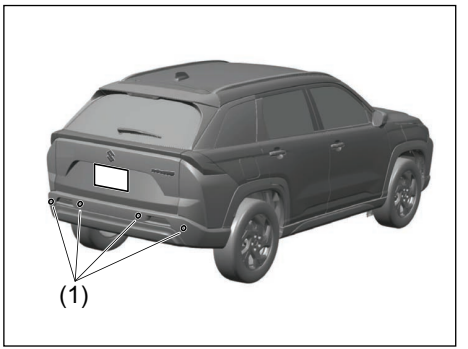


71UM050100

(1) Ultrasonic sensors

- The position of each ultrasonic sensor in the above figure is a typical example; the actual equipment depends on the vehicle type.

**⚠ WARNING**

- **The parking sensor warns you of obstacles with buzzers and by showing you the location of the obstacles on the information display. However, you must still pay full attention yourself while driving.**
- **The sensors can detect obstacles only within a limited area and only when the vehicle is moving within a limited speed range. So, in tricky areas, you must move the vehicle slowly while checking around it using your direct vision or rearview mirrors. There is increased risk of an accident if you control the vehicle relying only on the parking sensor.**

**NOTICE**

**Parking sensors are only for driver's assistance.**

**⚠ WARNING**

**To prevent malfunction of the ultrasonic sensor**

**Observe the following precautions. Failure to do so may lead to the ultrasonic sensor not operating properly, possibly leading to an accident resulting in death or serious injury.**

- **Keep the ultrasonic sensor clean at all times.**
- **Clean the ultrasonic sensor if it is dirty or covered with water droplets, snow, plastic bag, etc. Clean the ultrasonic sensor with a soft cloth so as to not mark or damage them.**
- **Do not attach accessories, stickers (including transparent stickers), etc. to the ultrasonic sensor and its surrounding area.**
- **Do not subject the ultrasonic sensor or their surrounding area to impact.**
  **If the ultrasonic sensor or rear bumper has been subjected to a impact, have the vehicle inspected by a Maruti Suzuki authorized workshop.**
- **Do not change the position or orientation of the ultrasonic sensor or remove them.**

(Continued)

**⚠ WARNING**

(Continued)


- **Do not disassemble the ultrasonic sensor.**
- **Do not modify or paint the ultrasonic sensor or ultrasonic sensor cover, or replace them with anything other than Maruti Suzuki genuine parts.**
- **When using a high-pressure cleaner, do not point the nozzle to the ultrasonic sensor.**
- **When using steam to clean the vehicle, do not direct steam too close to the ultrasonic sensor.**
- **In the following situations, angle measurement/ initialization of the ultrasonic sensor will be necessary. Contact a Maruti Suzuki authorized workshop for details.**
  - **When the ultrasonic sensors are removed and installed, or replaced**
  - **When the rear bumper has been replaced**

### Working sensors

The sensors work depending on the gearshift lever position and parking brake lever position as follows:

| Gearshift lever position | | Parking brake lever | Front Sensor (if equipped) | | Rear Sensor | |
|---|---|---|---|---|---|---|
| | | | Center | Corner | Center | Corner |
| Manual Transmission | R | No relation | Off | On | On | On |
| | N, 1st – 6th | Pull | Off | Off | Off | Off |
| | | Release | On | On | Off | Off |
| Automatic Transmission | P | No relation | Off | Off | Off | Off |
| | R | | Off | On | On | On |
| | N,D,M | | On | On | Off | Off |

### Approximate areas where obstacles can be detected

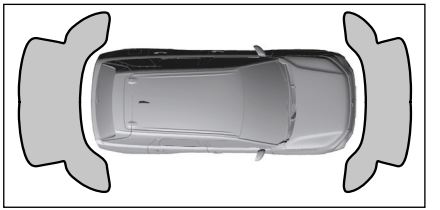

71UM050197

- An obstacle within about 20 cm (8 in) from a sensor or just below a sensor is not detectable.
- The sensors can detect an obstacles up to about 100 cm (3.0 ft) from the front of the vehicle, or about 150 cm (4.9 ft) from the rear of vehicle.

**Temporary stop or failure of the ultrasonic sensor**

| | Instrument cluster | Information display message | Ultrasonic sensor | |
|---|---|---|---|---|
| | | | Temporary stop | Failure |
| (1) |  59S010120 | – | On | |
| (2) |  80P0382 | – | Off | Blinks |
| (3) |  69T040310 | "Clean Parking Sensors" | Displayed | Not displayed |
| (4) |  69T040310 | "Service Parking Sensors" | Not displayed | Displayed |


(1) Parking sensor indicator light
(2) Master warning indicator
(3) Indication of the parking sensor needs cleaning
(4) Failure of the ultrasonic sensor

*NOTE:*
*When temporary stop of the ultrasonic sensor or failure of the ultrasonic sensor occurs, the parking sensors will stop.*

**Temporary stop of the ultrasonic sensor**
The ultrasonic sensor will temporarily stop under the following situations. If the situations are improved, temporary stop of the ultrasonic sensor will be canceled.
- When any foreign object such as dirt, snow and ice is attached to the ultrasonic sensor
- When the battery has temporarily a voltage abnormality

**Situations where the parking sensor system does not activate**
Under the following situations, the parking sensor system does not activate properly.
- For few seconds immediately after changing the ignition mode to ON
- When the position of the gearshift lever does not match the selector position shown in the information display, or when "–" is displayed
- When an obstacle cannot be detected
- When the parking sensor system is temporarily stopped or malfunctioning
  – For details, refer to "Temporary stop of the ultrasonic sensor" and "Failure of the ultrasonic sensor" in this section.

**Obstacle indication by parking sensor**

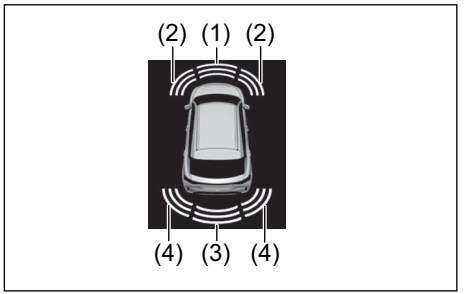


74T01EN050027

(1) Obstacle detected by front center sensors
(2) Obstacle detected by front corner sensors
(3) Obstacle detected by rear center sensors
(4) Obstacle detected by rear corner sensors

Upon detecting an obstacle, the parking sensor causes an interior buzzer to sound and a symbol representing the obstacle appears on the information display in the instrument cluster.

- A different symbol is displayed depending on the direction and distance of the obstacle.
- A buzzer in the instrument panel sounds when a sensor detects an obstacle.

- Warnings when obstacles are detected by front sensors

| Distance (approx.) | | Buzzer sound | Information display |
|---|---|---|---|
| Center sensors | 60 - 100 cm | Short beeps at long intervals | Three lines |
| 45 - 60 cm | | Short beeps at short intervals | |
| 35 - 45 cm | | Short beeps at very short intervals | Two lines |
| Less than 35 cm | | Continuous beep | One lines |

- Warnings when obstacles are detected by rear sensors

| Distance (approx.) | | Buzzer sound | Information display |
|---|---|---|---|
| Center sensors | 60 - 150 cm | Short beeps at long intervals | Three lines |
| Center sensors | 45 - 60 cm | Short beeps at short intervals | |
| Corner sensors | 45 - 60 cm | | |
| 35 - 45 cm | | Short beeps at very short intervals | Two lines |
| Less than 35 cm | | Continuous beep | One lines |

**NOTICE**

- **If anything other than the buzzer explained in above table sounds, the sensor may be failure. Consult with a Maruti Suzuki authorized workshop.**
- **If there is a malfunction of the parking sensor, the indicator light of the parking sensor buzzer OFF switch will not come on. If the indicator light of the parking sensor buzzer OFF switch does not come on, consult with a Maruti Suzuki authorized workshop.**

*NOTE:*
- *Symbols are displayed with a short delay after the detection of obstacles.*
- *If the system detects multiple obstacles simultaneously, the display shows all of their positions using the corresponding symbols. However, the buzzers will sound only for the nearest obstacles.*
- *Even in places where the buzzer always sounds when an obstacle is detected, the buzzer may not sound depending on the situation.*
- *When the parking sensor detects an obstacle while it is operating, the parking sensor indicator light will blink.*

**Warning and indicator messages**

If there is a problem or warning regarding the parking sensor system, a message is displayed on the information display in the instrument cluster, and a symbol blinks. If a message is displayed, follow its instruction.

| Indicator | Message | Symbol | Probable cause and remedy |
|---|---|---|---|
|  | "Service Parking Sensors" | Not displayed | There may be a problem with the parking sensor system. Have your vehicle inspected by a Maruti Suzuki authorized workshop. |
|  | "Clean Parking Sensors" | One blinking line in a sensor location. | The indicated sensor is contaminated. Wipe it clean with a soft cloth. |

**Failure of the ultrasonic sensor**
When the ultrasonic sensor is faulty, the function of the ultrasonic sensor is stopped until the engine switch is pressed to change the ignition mode to LOCK (OFF). Stop the vehicle in a safe place, turn the ignition switch to “LOCK” position or press the engine switch to change the ignition mode to LOCK (OFF) and stop the engine. Then, restart the engine and check that the parking sensor indicator light is turned off.
If the parking sensor indicator light stays on after restarting the engine, there may be a failure of the ultrasonic sensor. Ask a Maruti Suzuki authorized workshop to have the ultrasonic sensor inspected.

*NOTE:*
*If the parking sensor indicator light comes on and there may be a failure of the ultrasonic sensor, the system will stop. However, there would not be a problem to normal driving.*

**When the ultrasonic sensor detects any foreign object**
When the ultrasonic sensor detects any foreign object such as dirt, snow or ice which attaches to the sensor, the indication will be displayed on the information display as the following chart shows. When you remove the attached foreign object, the ultrasonic sensor will properly function again. While any foreign object is detected, the ultrasonic sensor will temporarily stop functioning. Even though no foreign object is attached to the ultrasonic sensor and the following indication is displayed, there may be a possibility of sensor abnormality. Ask your Maruti Suzuki authorized workshop to have the ultrasonic sensor inspected.

**Information display**




71UM050188

“Clean Parking Sensors”

*The side which detects any foreign object is shown

**Parking sensor buzzer OFF switch**





71UM05089

If you press the parking sensor buzzer OFF switch when the interior buzzer sounds after detecting an obstacle, the buzzer will be temporarily stopped. The parking sensor buzzer OFF switch indicator light (1) goes out when the parking sensor buzzer is paused.
While the parking sensor buzzer is suspended, the buzzer will sound again under the following conditions.
- When the parking sensor buzzer OFF switch is pressed again
- When gear position is changed from other than reverse (R) to reverse.
- When gear position is changed from other than drive (D/M/N/1/2/3/4/5/6 gear) to drive.

*NOTE:*
*Depending on the surrounding conditions, the parking sensor buzzer may sound again when an obstacle is detected while the buzzer is temporarily stopped.*


**Situations where the ultrasonic sensor may not activate properly**
Under the following situations, the ultrasonic sensor may not activate properly.

- When any foreign object such as dirt, snow or ice is attached to the ultrasonic sensor (In this case, remove the foreign object)

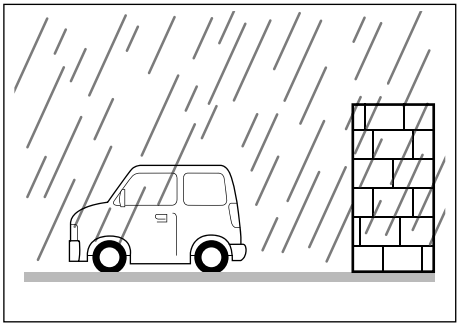

71UM05022


- When it is bad weather such as heavy rain, fog or a blizzard
- When backward visibility is poor due to exhaust gas from the vehicle, water, snow, water vapor, sand or smoke
- When the ultrasonic sensor is covered by a sticker or an accessory
- When a commercially-available electrical component such as a towing hook, a back-lit license plate, a fog lamp, a corner pole or a radio antenna is equipped
- When the vehicle position or the height of bumper is changed due to modification of suspension
- When the installed direction of rear parking sensors is misaligned due to a collision
- When snow chains or the tyres of undesigned size are equipped
- When the vehicle is inclined to drive over bumps on the road
- When the surrounding part of the ultrasonic sensor is hot or cold under the blazing sun or in extremely cold weather
- When humidity is extremely high or low

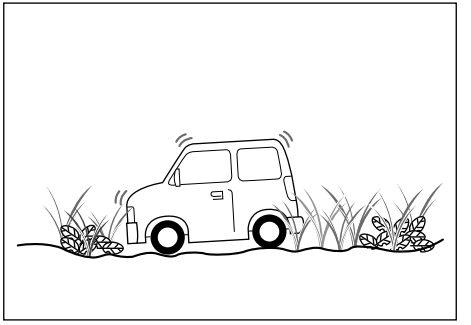

71UM05023


- When you drive on rough road, slope, gravel or grown grass
- When your vehicle is severely inclined
- When there is any object which emits ultrasonic characteristics such as horn from the other vehicle, engine sound from a motorcycle, air brake sound from

a large-size vehicle, brake sound, vehicle detector or ultrasonic sensor from the other vehicle
- When the ultrasonic sensor gets too close to an obstacle
- When the vehicle is moved in a diagonal direction towards an obstacle or to the edge or corner of a wall (reflected wave is not returned)

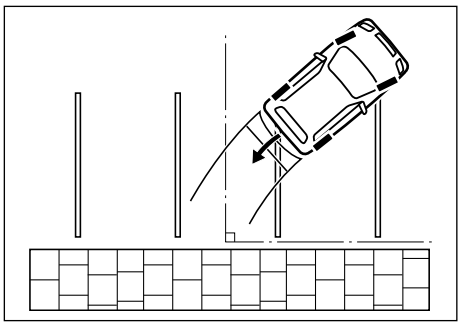

71UM05024

- When an obstacle such as a wall is not in a vertical position of the vehicle
- A wall which is not in vertical position of the ground, a rough wall, a wall or shutter which has running wavy pattern
- A pole which is protruded from a wall or a pipe arrangement

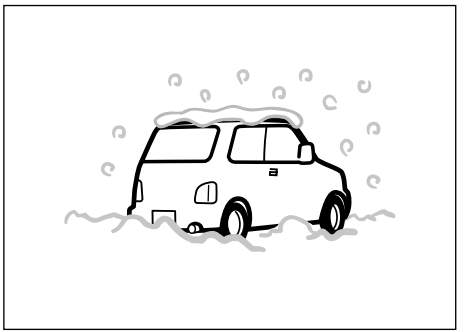


71UM05025

- An object which easily absorbs sonic wave such as a person, a spongy object or a snow wall
- A moving object such as a pedestrian, a bicycle or an animal
- An object which suddenly rushes out into the traveling direction of the vehicle (while or immediately after the vehicle is turning around)
- The ultrasonic sensor may not detect the following obstacles:
  – An obstacle in the shape of pole such as a sign or a street lamp
  – A low-height obstacle such as a guardrail
  – A small obstacle or a thin obstacle such as a chain or a rope
  – A micromesh fence

## Parking Sensors (RPAS)

The ultrasonic sensor transmits ultrasonic, it hits an obstacle and the sensor receive the reflected ultrasonic again. The sensor will detect the position of the obstacle based on the time which takes for transmitting and receiving ultrasonic.

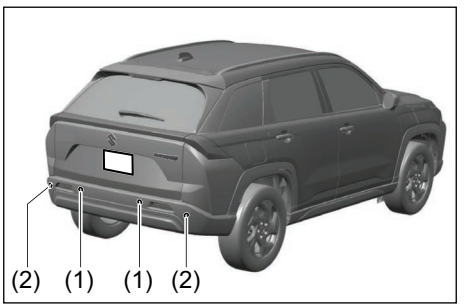


71UM05079

(1) Rear center sensors (2 places)
(2) Rear corner sensors (2 places)

**NOTICE**

- **Avoid hitting the sensor areas or directing the nozzle of a high-pressure car washer onto the sensor areas. Otherwise, the sensors may be damaged.**
- **If the bumper hits a hard object, the sensors on it may not work properly. If this occurs, have the sensors inspected by a Maruti Suzuki authorized workshop.**

- The position of each ultrasonic sensor in the above figure is a typical example; the actual equipment depends on the vehicle type.

**⚠ WARNING**

- **The parking sensor warns you of obstacles with buzzers and by showing you the location of the obstacles on the information display. However, you must still pay full attention yourself while driving.**
- **The sensors can detect obstacles only within a limited area and only when the vehicle is moving within a limited speed range. So, in tricky areas, you must move the vehicle slowly while checking around it using your direct vision or rearview mirrors. There is increased risk of an accident if you control the vehicle relying only on the parking sensor.**

**NOTICE**

**Parking sensors are only for driver's assistance.**

**⚠ WARNING**

**To prevent malfunction of the ultrasonic sensor**

**Observe the following precautions. Failure to do so may lead to the ultrasonic sensor not operating properly, possibly leading to an accident resulting in death or serious injury.**

- **Keep the ultrasonic sensor clean at all times.**
- **Clean the ultrasonic sensor if it is dirty or covered with water droplets, snow, plastic bag, etc. Clean the ultrasonic sensor with a soft cloth so as to not mark or damage them.**
- **Do not attach accessories, stickers (including transparent stickers), etc. to the ultrasonic sensor and its surrounding area.**
- **Do not subject the ultrasonic sensor or their surrounding area to impact.**
  **If the ultrasonic sensor or rear bumper has been subjected to a impact, have the vehicle inspected by a Maruti Suzuki authorized workshop.**
- **Do not change the position or orientation of the ultrasonic sensor or remove them.**

(Continued)

**⚠ WARNING**

(Continued)

- **Do not disassemble the ultrasonic sensor.**
- **Do not modify or paint the ultrasonic sensor or ultrasonic sensor cover, or replace them with anything other than Maruti Suzuki genuine parts.**
- **When using a high-pressure cleaner, do not point the nozzle to the ultrasonic sensor.**
- **When using steam to clean the vehicle, do not direct steam too close to the ultrasonic sensor.**
- **In the following situations, angle measurement/ initialization of the ultrasonic sensor will be necessary. Contact a Maruti Suzuki authorized workshop for details.**
  - **When the ultrasonic sensors are removed and installed, or replaced**
  - **When the rear bumper has been replaced**
- **Under the following conditions, the parking sensor system may not work normally because the sensors cannot detect obstacles correctly.**
  - **Sensors are covered with mud, ice or other materials (Such materials must be removed for normal operation).**

(Continued)

**⚠ WARNING**

(Continued)

- **Sensors are wet from water splashes or heavy rain.**
- **Sensors are covered by a hand, sticker, accessory, etc.**
- **There is an accessory or other object attached within the sensor's sensing area.**
- **Items such as tow hooks, commercially available corner poles, radio antenna, etc. are installed on the bumper.**
- **The height of the bumper is changed due to alteration to the suspension or other causes.**
- **The sensor areas are extremely hot from direct sunlight or cold due to freezing weather.**
- **The vehicle is on a rough surface, slope, gravel road or grass field.**
- **The vehicle is at a steep angle.**
- **Sensors have intercepted ultrasonic noise from another vehicle's horn, engine, air braking system (large vehicles), or parking sensor.**
- **Obstacles are too close to the sensors.**

(Continued)

**⚠ WARNING**

(Continued)

- **Sensors are at an angle to a highly reflective object such as glass (Ultrasonic waves are not reflected back from the obstacle).**

- **Sensors may not be able to correctly detect the following types of obstacles:**
  - **Objects made of a thin material like wire netting and ropes.**
  - **Square-shaped curbstones or other objects with sharp edges.**
  - **Tall objects with a large upper part like a road sign.**
  - **Low-profile objects such as curbstones.**
  - **Sound-absorbing objects such as cotton and snow.**


*NOTE:*

- *Thin poles or obstacles lower than the sensors may become undetectable as the vehicle moves closer to them even if they have been detected from longer distances.*
- *The system may calculate the distance to a road sign or similar obstacle to be shorter than the actual distance.*

**Working sensors**
The sensors work depending on the gearshift lever position as follows:

| Gearshift lever position | | Manual transmission | | Automatic transmission / e-CVT | | Parking brake lever |
|---|---|---|---|---|---|---|
| | | R | N, 1st – 5th | R | N or D | |
| Rear sensors | Center | On | Off | On | Off | No relation |
| | Corner | On | Off | On | Off | No relation |

**Approximate areas where obstacles can be detected**

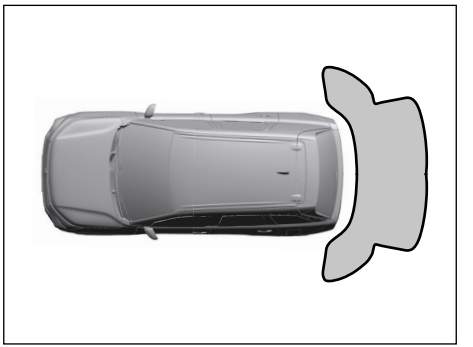

71UM05094

- An obstacle within about 20 cm (8 in) from a sensor or just below a sensor is not detectable.
- The sensors can detect obstacles such as a wall up to about 1.5 m (5 ft) from the rear of vehicle.

## Obstacle Indication by Parking Sensor




71UM050120

(1) Obstacle detected by rear center sensors
(2) Obstacle detected by rear corner sensors

Upon detecting an obstacle, the parking sensor causes an interior buzzer to sound and a symbol representing the obstacle appears on the information display in the instrument cluster.
- A different symbol is displayed depending on the direction and distance of the obstacle.
- Warnings when obstacles are detected by rear sensors

| Distance (approx.) | | Buzzer | Symbol |
|---|---|---|---|
| Center sensors | 60–150 cm | Short beeps at long intervals | Three lines |
| 45–60 cm | | Short beeps at short intervals | |
| 35–45 cm | | Short beeps at very short intervals | Two lines |
| Less than 35 cm | | Continuous beep | One line |

*NOTE:*
- *Symbols are displayed with a short delay after the detection of obstacles.*
- *If the system detects multiple obstacles simultaneously, the display shows all of their positions using the corresponding symbols. However, the buzzers will sound only for the nearest obstacles.*

**Temporary stop or failure of the ultrasonic sensor**

| | Instrument cluster | Information display message | Ultrasonic sensor | |
|---|---|---|---|---|
| | | | Temporary stop | Failure |
| (1) |  59S010120 | – | On | |
| (2) |  80P0382 | – | Off | Blinks |
| (3) |  69T040310 | "Clean Parking Sensors" | Displayed | Not displayed |
| (4) |  69T040310 | "Service Parking Sensors" | Not displayed | Displayed |

(1) Parking sensor indicator light
(2) Master warning indicator
(3) Indication of the parking sensor needs cleaning
(4) Failure of the ultrasonic sensor

*NOTE:*
*When temporary stop of the ultrasonic sensor or failure of the ultrasonic sensor occurs, the parking sensors will stop.*

**Temporary stop of the ultrasonic sensor**
The ultrasonic sensor will temporarily stop under the following situations. If the situations are improved, temporary stop of the ultrasonic sensor will be canceled.
- When any foreign object such as dirt, snow and ice is attached to the ultrasonic sensor
- When the battery has temporarily a voltage abnormality

**Failure of the ultrasonic sensor**
When the ultrasonic sensor is faulty, the function of the ultrasonic sensor is stopped until the engine switch is pressed to change the ignition mode to LOCK (OFF). Stop the vehicle in a safe place, turn the ignition switch to "LOCK" position or press the engine switch to change the ignition mode to LOCK (OFF) and stop the engine. Then, restart the engine and check that the parking sensor indicator light is turned off. If the parking sensor indicator light stays on after restarting the engine, there may be a failure of the ultrasonic sensor. Ask a Maruti Suzuki authorized workshop to have the ultrasonic sensor inspected.

*NOTE:*
*If the parking sensor indicator light comes on and there may be a failure of the ultrasonic sensor, the system will stop. However, there would not be a problem to normal driving.*

## Warning and Indicator Messages

If there is a problem or warning regarding the parking sensor system, a message is displayed on the information display in the instrument cluster, and a symbol blinks. If a message is displayed, follow its instruction.

| Indicator | Message | Symbol | Probable cause and remedy |
|---|---|---|---|
|  | "Service Parking Sensors" | Not displayed | There may be a problem with the parking sensor system. Have your vehicle inspected by a Maruti Suzuki authorized workshop. |
|  | "Clean Parking Sensors" | One blinking line in a sensor location. | The indicated sensor is contaminated. Wipe it clean with a soft cloth. |

**Situations where the parking sensor system does not activate**

Under the following situations, the parking sensor system does not activate properly.

- For few seconds immediately after changing the ignition mode to ON
- When the position of the gearshift lever does not match the selector position shown in the information display, or when "–" is displayed
- When an obstacle cannot be detected
- When the parking sensor system is temporarily stopped or malfunctioning
  – For details, refer to "Temporary stop of the ultrasonic sensor" and "Failure of the ultrasonic sensor" in this section.

**Parking sensor buzzer OFF switch (if equipped)**





71UM05089

If you press the parking sensor buzzer OFF switch when the interior buzzer sounds after detecting an obstacle, the buzzer will be temporarily stopped. The parking sensor buzzer OFF switch indicator light (1) goes out when the parking sensor buzzer is paused.
While the parking sensor buzzer is suspended, the buzzer will sound again under the following conditions.

- When the parking sensor buzzer OFF switch is pressed again
- When gear position is changed from other than reverse (R) to reverse.

## Head-up Display (if equipped)

Head-up display (HUD) will show the information such as the current vehicle speed and the gear position in the driver's front vision.

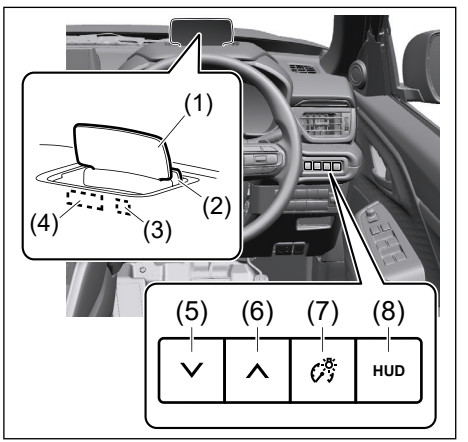


71UM05075

(1) Display
(2) Cover
(3) Light-received surface
(4) Mirror
(5) Down head-up display switch
(6) Up head-up display switch
(7) Brightness control head-up display switch
(8) Head-up display switch

**⚠ WARNING**

- **Do not continue to look at the head-up display while driving. Otherwise, you may not find the vehicle, pedestrians or obstacles in front of you. This could result in an accident.**
- **Adjust the display brightness and position to your preference not to obstruct a safe driving. If adjustment is not performed properly, it could result in an accident.**
- **Operate the head-up display while the vehicle is stopped. If you attempt to operate the display while driving, you may not look ahead carefully. This could result in an accident.**
- **If the hybrid system is operating while changing certain settings on the settings display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.**

**⚠ CAUTION**

**When the head-up display is moving, do not put your hands closer to it. Your hands may get caught in it and get injured.**

***NOTICE***

- **Performing the following points may prevent the proper operations of the head-up display and result in its malfunction. Observe these points.**
  - **– Do not adjust the display angle by your hands. Do not open or close the cover by your hands.**
  - **– Do not place any object or drink on the cover, its peripheral part and the light-received surface.**
  - **– Do not place stickers, etc. to the display, the inside of the cover and the light-received surface.**
  - **– Do not shine a strong light on the light-received surface.**
- **If you drop any object inside the cover, carefully pick it up not to injure the part such as the mirror.**

(Continued)

***NOTICE***

(Continued)


- **Ask your Maruti Suzuki authorized workshop, if you drop any object inside the place where the head-up display is stored and you cannot pick up the object or the head-up display is stuck inside.**
- **Do not wipe the HUD cover forcefully. When you wipe it off, use a soft cloth.**
- **To prevent 12-volt battery discharge, ensure that the hybrid system is operating while changing the settings of the head-up display.**

*NOTE:*

- *If you wear your sunglasses, you may have trouble seeing the displayed information. In this case, adjust the brightness or take your sunglasses off.*
- *You may have trouble seeing the displayed information in the following cases.*
  - *– On a rainy day or a day with strong sunlight*
  - *– When driving on snowy roads or when a wet road is shining after the rain*
  - *– When the headlights from your vehicle is reflected to the vehicle in front of you at night*
  - *– When the position of the vehicle in front of you and the displayed information get overlapped*
  - *– Depending on the driving posture*
- *Under the very cold condition, the vehicle speed on the speedometer and the one on the head-up display may differ a little.*
- *When the head-up display gets hot, such as after parking the vehicle under the blazing sun, the displayed information may temporarily become dark for its protection. When the head-up display gets hotter, the displayed information will temporarily disappear and the message will be shown on the information display of the instrument cluster.*
  - *– When the temperature becomes low, the above condition will be canceled. However, if the above condition is kept, ask your Maruti Suzuki authorized workshop*
  - *– You can turn off the message on the information display in high temperature by changing the setting (customization). For details, refer to "Setting Mode" in "INSTRUMENT CLUSTER" section.*

**Activation of the head-up display**

When you press the engine switch or the power switch to ON mode and the engine starts, the head-up display will automatically appear and the following information will be displayed as necessary.

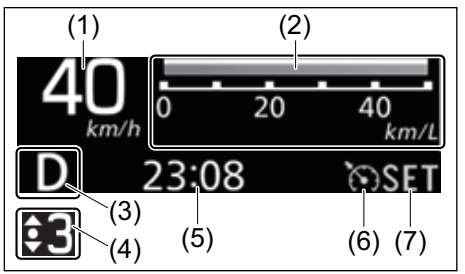


71UM050122

(1) Vehicle speed
(2) Standard display
(3) Gear position (for Automatic Transmission vehicles / e-CVT vehicles) (if equipped)
(4) Gearshift indicator (for Manual Transmission vehicles) (if equipped)
(5) Clock
(6) Cruise indicator (if equipped)
(7) “SET” indicator (if equipped)


When you press the engine switch to ACC or LOCK (OFF) mode, the head-up display will be automatically stored.

*NOTE:*
- *Even if you stop the engine, the display setting will be stored.*
- *The vehicle speed on the head-up display and the one on the speedometer may differ a little.*
- *You can turn off a part of the information by changing the setting (customization).*
- *You can see either of UP arrow, a circle or DOWN arrow on the left side of the gearshift indicator (4).*

**Operation of the head-up display**

Operate the head-up display while the vehicle is stopped. You cannot adjust the brightness and the displayed position while driving.

**Head-up display operation switch**

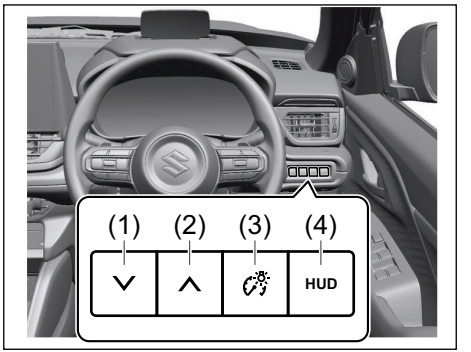


71UM05076

(1) Down head-up display switch
(2) Up head-up display switch
(3) Brightness control head-up display switch
(4) Head-up display switch

**ON / OFF operation of the head-up display**

If you press and hold the HUD (Head-up display) switch (4) with the engine on, you can make the head-up display appear or store.

*NOTE:*
*If you store the head-up display inside by operating the HUD (Head-up display) switch and stop the engine, the head-up display will not appear automatically on the next engine start.*

**ON / OFF operation of the intersection guidance display (When using Android Auto™*1 or Apple CarPlay*2 on infotainment system)**




71UM050123

(5) The intersection guidance display (The above image is an example of Apple CarPlay.)

*NOTE:*

- *For ON / OFF operation of the intersection guidance display, you need to change the setting on the information display. For details, refer to "Setting Mode" in "INSTRUMENT CLUSTER" section.*
- *The intersection guidance display on the head-up display and the one on the navigation system may differ a little.*

*1: Android Auto™ may not be available in your country or region.
For details about Android Auto™, refer to http://support.google.com/androidauto

*2: Apple CarPlay may not be available in your country or region.
For details about Apple CarPlay, refer to https://www.apple.com/ios/carplay/

**Brightness control**

Brightness of the display will be automatically adjusted depending on the surrounding conditions. You can adjust the brightness to your preference by the following steps.

1) Press the brightness control switch (3).
2) To make the display brighter, press " ∧ " of the up switch (2). To make the display darker, press " ∨ " of the down switch (1).




71UM050124

*NOTE:*

- *You can adjust brightness of the display from −10 to +10 (21 levels) by the brightness control switch.*
- *Depending on brightness which was automatically adjusted, you may not be able to make the display brighter or darker.*
- *Regardless of the driver's seat conditions, brightness may be automatically changed in the following conditions.*
  - *– When driving in a tunnel or around its gateway*
  - *– When driving on a road where there is a structural object over your head*

**Adjustment of the displayed position**

Press the down switch (1) or up switch (2) to adjust the displayed position of the head-up display.




71UM050125

*NOTE:*

- *You can adjust the displayed position of the head-up display from −12 to +12 (25 levels) by the up/down switch.*

**Displayed information of the head-up display**

**Activation / ending of the head-up display**

When you press the engine switch to ON mode, the head-up display will automatically activate and the following images will be displayed by turns.





71UM050126

**Standard display of the head-up display**

Every time you press the HUD (Head-up display) switch, the displayed information will be changed as follows.

- The following images are typical examples; they depend on the vehicle type.

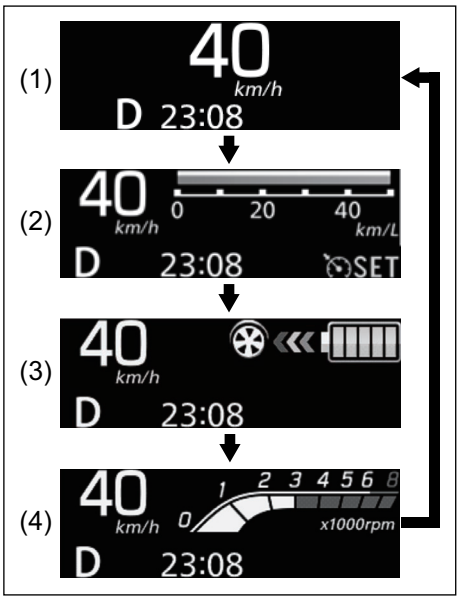


71UM050127

(1) Vehicle speed
(2) Instantaneous fuel consumption
(3) Energy flow
(4) Tachometer

*NOTE:*

- *Even if you stop the engine, the display setting will be stored.*
- *The vehicle speed on the head-up display and the one on the speedometer may differ a little.*


**When operating the air conditioner**

If you operate the air conditioner with instantaneous fuel consumption, tachometer displayed, the following images will be displayed.





71UM050128

When you press “AUTO” switch, “AUTO” and the set temperature will be displayed for a certain time.

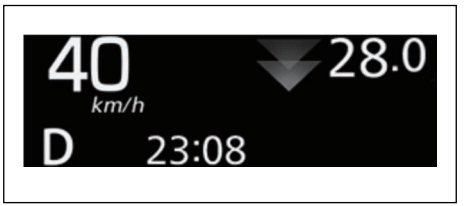


71UM050129

When you operate the temperature selector, the set temperature will be displayed for a certain time.

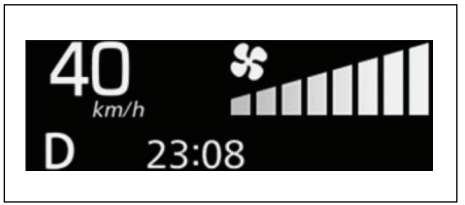




71UM050130

When you operate the blower speed selector, the blower speed will be displayed for a certain time.

*NOTE:*
- *When the vehicle speed is displayed in standard display of the head-up display, the air conditioner setting will not be displayed.*
- *You can hide the information of air conditioner by the setting mode on the information display. For details, refer to "Setting Mode" in "INSTRUMENT CLUSTER" section.*

**Interrupt display**
When there is the information to tell you and you press the engine switch to ON mode, the following interrupt display will appear. Depending on the type of the display, a buzzer may sound at the same time.
• The following images are typical examples; they depend on the vehicle type.

| Display | Buzzer | Description |
|---|---|---|
|  71UM050131 | Chime (Once) (Only when one of the doors is not completely closed) | When one of doors, the bonnet or the fuel lid is not completely closed, the interrupt display will appear. For the vehicles with the power sliding door, if you are driving your vehicle, stop the vehicle in a safe place and close the door completely. |
|   76TM050026 | 3 beeps repeating at short intervals | When the parking brake is not released while driving, the interrupt display will appear. Stop the vehicle in a safe place and release the parking brake. |
|   76TM050027 | Chime (Once) | When the fuel level is low, the interrupt display will appear. Refill the fuel tank as soon as possible. |

| Display | Buzzer | Description |
|---|---|---|
|  <br>76TM050028 | Beeping at short intervals | The driver does not wear his/her seat belt. Stop the vehicle in a safe place and wear your seat belt.<br>The front passenger does not wear his/her seat belt. Wear the seat belt. |
|  <br>76TM050029 | – | When outside temperature nears freezing, this interrupt display will appear. |
|  <br>71UM050132 | Off | The intersection guidance is displayed. (When using Android Auto™ or Apple CarPlay on infotainment system) For details, refer to “ON / OFF operation of the intersection guidance display” in this section. |
|  <br>76TM050031 | 3 beeps repeating at short intervals or continuous short beeps | The warning message is displayed on the speedometer. Check the message on the speedometer. Consult a Maruti Suzuki authorized workshop if necessary. |

| Display | Buzzer | Description |
|---|---|---|
|  <br>74U050030 | Beeps at short intervals | Indicates that the vehicle deviates from the lane repeatedly.<br>Hold the steering wheel and operate it. |
|  <br>74U050030 | Off | The lane keep assist system is about to stop.<br>Hold the steering wheel and operate it. |
|  <br>74U050031A | Beeps at short intervals | The lane keep assist system is about to stop.<br>Hold the steering wheel and operate it. |
|  <br>74U050031A | Continuous beeps | The lane keep assist system has stopped.<br>Hold the steering wheel and operate it. |


*NOTE:*
*To turn off the intersection guidance display (When using Android Auto or Apple CarPlay on infotainment system), you can change the setting on the information display. For details, refer to “Setting Mode” in “INSTRUMENT CLUSTER” section.*

## 360 View Camera (if equipped)

The 360 view camera is the function which shows visual image for the surrounding of your vehicle on the infotainment system screen, using the front camera, the side camera (left and right) and the back camera. This helps the driver improve visibility when the driver tries to park your vehicle, go by an oncoming vehicle in a narrow road or start the vehicle with poor visibility for left and right sides of the vehicle.

- Use the infotainment system which corresponds with the 360 view camera.

### Camera positions

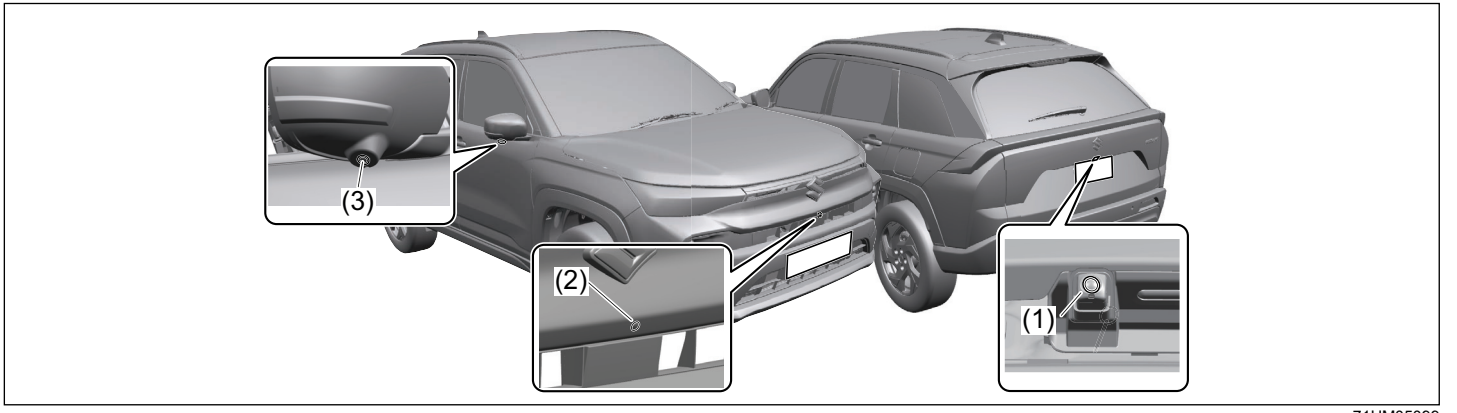


71UM05099

(1) Back camera
(2) Front camera
(3) Side camera (under left and right outside rearview mirrors)

- Each camera in the above figure is a typical example; the actual equipment depends on the vehicle type.

**⚠ WARNING**

- **The 360 view camera cannot reduce the driver's duty of care for driving operation. Use the 360 view camera only to provide driving assistance.**
- **The 360 view camera has limits and it may not show a person or an obstacle. Drive your vehicle slowly confirming the safety of the backward and the surrounding conditions by directly checking with your eyes and mirrors. If you drive your vehicle only by checking the 360 view camera, an accident may occur.**
- **The cameras are precision instruments. Do not apply excessive force to the cameras, disassemble them and modify them. Also, do not pour hot water to the cameras and poke them with a stick to remove mud or frozen snow on the cameras. Doing so may damage the cameras and cause a fire and malfunction.**
- **Do not use the 360 view camera, when the outside rearview mirrors are folded and any of front doors and the tailgate is not closed. The image of the surrounding area may not be displayed properly and an accident may occur.**

***NOTICE***


**If you use the 360 view camera for a long period of time with the engine stopped, the lead-acid battery could run out. Do not use the 360 view camera for a long period of time with the engine stopped.**

*NOTE:*
*Rough indication lines of vehicle width will be displayed more widely, compared with an actual vehicle width. Drive your vehicle by directly checking the safety of the surrounding conditions.*

**How to use the 360 view camera**

**3D view mode function**
The 360 view camera will display the image of the surroundings with a view from the outside or the inside of the vehicle.

1) Press the engine switch to change the ignition mode to ON.
2) After the opening image was displayed, 3D view mode will be automatically displayed on the screen.

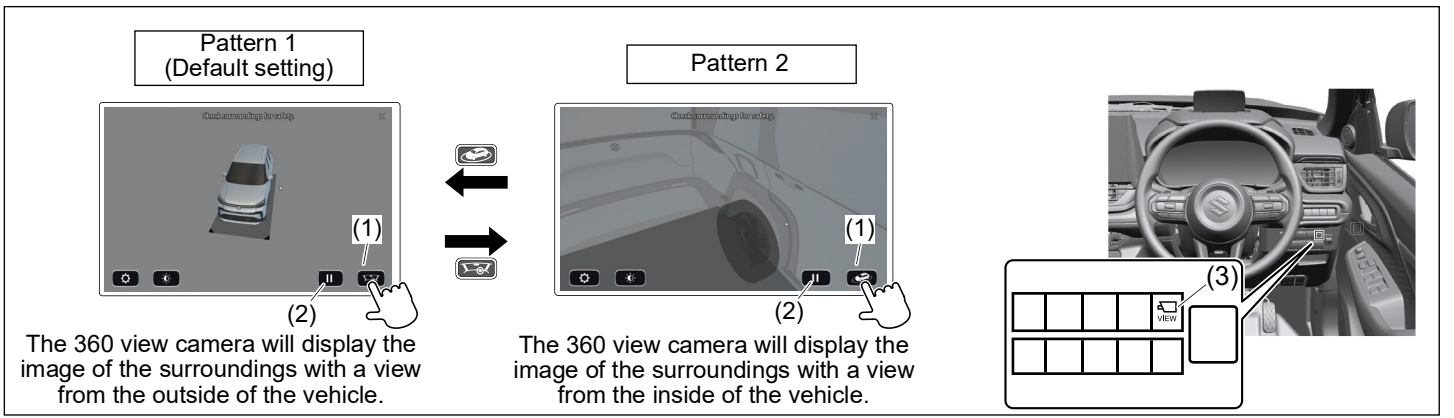


71UM05077


3) For switching the current image to the image with a different view, touch the image switching button (1) on the screen. For temporarily stopping the rotation of 3D view mode, touch the temporary stop or replay button (2). For restarting the rotation of 3D view mode, touch the button (2) again.

*NOTE:*

- *For automatic transmission vehicle or e-CVT vehicle, when you press the camera switch* (3) *with the gearshift lever in "P", you can display 3D view mode.*
- *For manual transmission vehicle, if you press the camera switch (3) when the gearshift lever is in other than "R", parking brake is applied and the vehicle is stopped, you can display 3D view mode.*
- *You can change the display screen of 3D view mode by changing the setting.*
- *When you press the camera switch while the opening image is displayed, 3D view mode will end. If you display 3D view mode, follow the procedure below.*
  *3D view mode → Press the camera switch → Change the mode of display → Press the camera switch → End of 3D view mode*
- *When the ignition mode is in ACC, 3D view mode will not be displayed on the screen.*
- *Touch of the icons will not be operational in the opening 3D display screen.*


**Displaying the forward of the vehicle**

1) Press the engine switch to change the ignition mode to ON.
2) Manual transmission vehicle: Shift the gearshift lever into a position other than “R” while the parking brake is released or the vehicle is in motion. Automatic transmission vehicle / e-CVT vehicle: Shift the gearshift lever into a position other than “P” or “R”.
3) Press the camera switch (1). “Top image and forward image” (default setting) will be displayed.

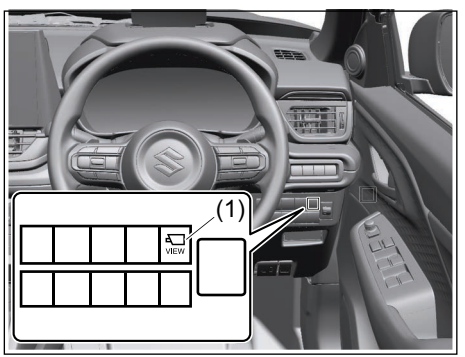


71UM05078

4) Every time you touch the image switching button (2), the image will be changed as follows:

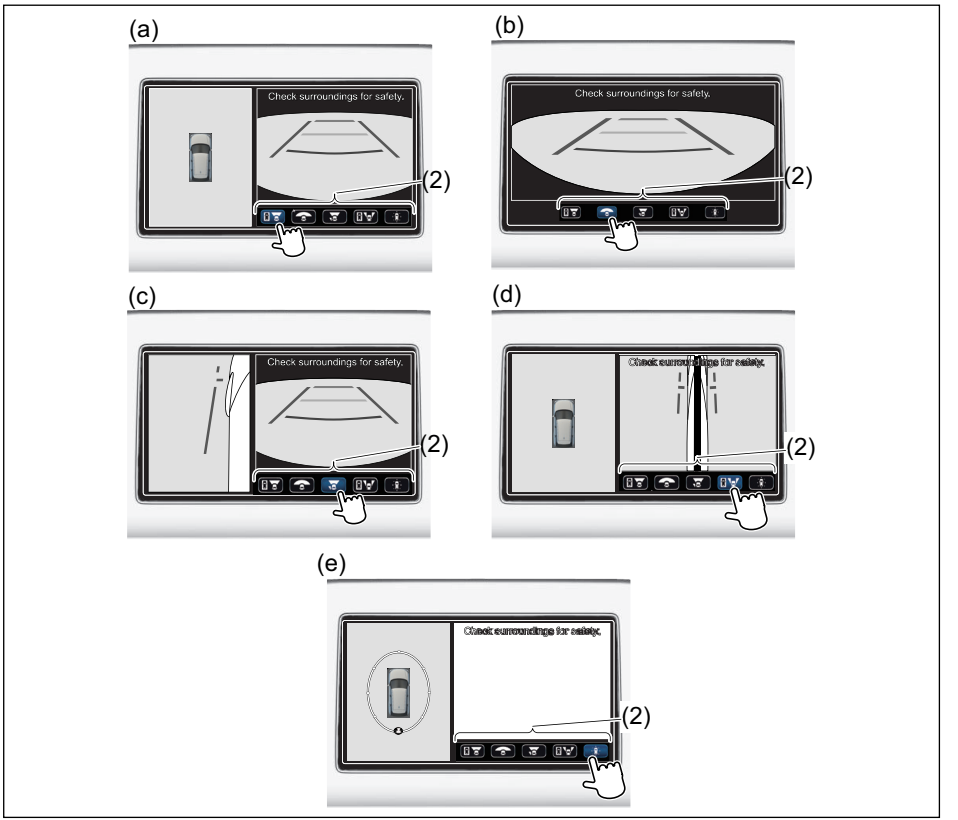


71UM050155

**(a)Top image and forward image (Default setting)**
The 360 view camera will display the surrounding image and the forward image.


**(b)Forward wide image**
The 360 view camera will display the forward image widely.

**(c)Side image and forward image**
The 360 view camera will display the lower left image outside the front passenger's seat and the forward image.

**(d) Top and Forward Left + Right image**
The 360 view camera will display the surroundings image and the forward right and left image.

**(e) 8 Point 3D view**
The 360 view camera will display the surroundings image chosen by the user.

- When you press the camera switch, the current image will be changed to the previous image.
- Even when you do not press the camera switch, the current image will be changed to the previous image by the following methods:
  – When 3 minutes passed after you press the camera switch
  – When you operate the infotainment system
  – When the vehicle speed becomes over about 10 km/h

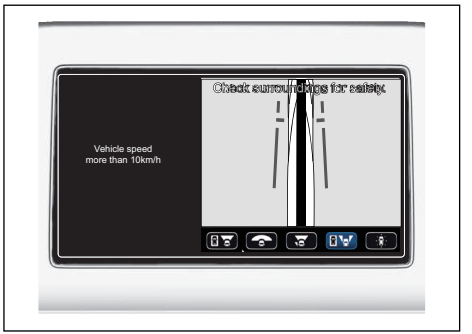



71UM050180

- When the vehicle speed becomes over about 10 km/h and you press the camera switch, you can display the forward side images on the screen. When the vehicle speed becomes about 10 km/h or less, the forward image will be displayed on the screen.

*NOTE:*
- *For automatic transmission vehicle or e-CVT vehicle, for adjusting the image quality and setting up the initial display image, shift the gearshift lever into "P".*
- *For manual transmission vehicle, you can adjust the image quality and set up the initial display image when the gearshift lever is in other than "R", parking brake is applied, and the vehicle is stopped.*
- *When the ignition mode is in ACC, the camera image will not be displayed.*

**Displaying the backward of the vehicle**

1) Press the engine switch to change the ignition mode to ON.
2) Shift the gearshift lever into “R” (Reverse). “Top image and backward image” (default setting) will be automatically displayed.
3) Every time you touch the image switching button (2), the image will be changed as follows:

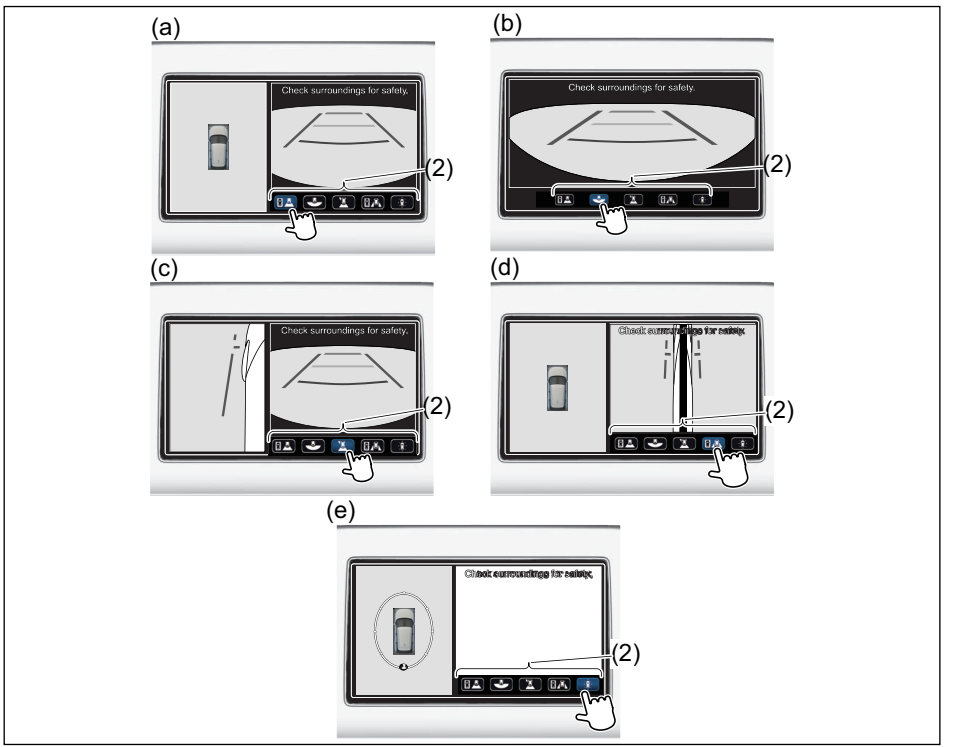


71UM050156

**(a)Top image and backward image (Default setting)**

The 360 view camera will display the surrounding image and the backward image.

**(b)Backward wide image**

The 360 view camera will display the backward image widely.

**(c)Side image and backward image**

The 360 view camera will display the lower left image outside the front passenger's seat and the backward image. When you shift the gearshift lever other than “R”, the camera image will return to the previous one.

**(d)Top and Rear Left + Right image**

The 360 view camera will display the surroundings image and the backward right and left image.

**(e) 8 Point 3D view**

The 360 view camera will display the surroundings image chosen by the user.

*NOTE:*


- *The backward image of the 360 view camera is displayed as the top priority out of all the images. However, when the infotainment system itself is being activated, the backward image will not displayed.*
- *For automatic transmission vehicle or e-CVT vehicle, for adjusting the image quality and setting up the initial display image, shift the gearshift lever into “P”.*

- *For manual transmission vehicle, you can adjust the image quality and set up the initial display image when the gear-shift lever is in other than "R", parking brake is applied and the vehicle is stopped.*
- *When the ignition mode is in ACC, the camera image will not be displayed.*

**Error display on the screen**

When there is an abnormality in the camera system, the following mark will be displayed on the screen.


Consult a Maruti Suzuki authorized workshop to have the camera system inspected.

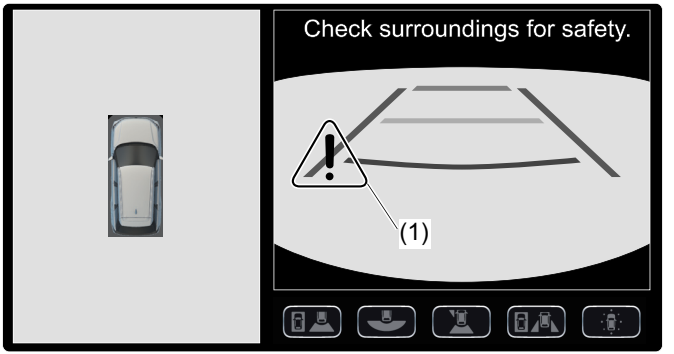


71UM050157

(1) Error mark of camera system

**How to understand the displayed items on the screen**
The following guide lines and buttons will be displayed on the screen.
The guide lines would provide a rough indication for your driving operations.

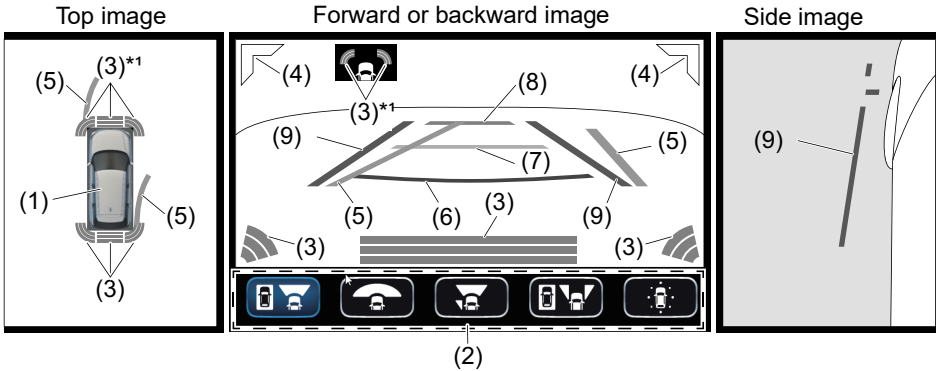


71UM050181

- Each displayed item in the above figure is a typical example; it depends on the vehicle type.

*1: Displayed only when reversing.

| No. | Displayed item | Contents |
|---|---|---|
| (1) |  | This shows the position of your vehicle. |

| No. | Displayed item | Contents |
|---|---|---|
| (2) |  | This shows that the top image and forward image are displayed. |
| |  | This shows that the top image and backward image are displayed. |
| |  | This shows that the forward wide image is displayed. |
| |  | This shows that the backward wide image is displayed. |
| |  | This shows that the side image and forward image are displayed. |
| |  | This shows that the side image and backward image are displayed. |

| No. | Displayed item | Contents |
|---|---|---|
| (2) |  | This shows that the top image and forward left & right images are displayed. |
| |  | This shows that the top image and rear left & right images are displayed. |
| |  | This shows the top image and the user selected isometric view for the selected position. |

| No. | Displayed color | Item name | Contents |
|---|---|---|---|
| (3) | Green or yellow or red | Indication detected from the parking sensors | When the parking sensors detect a wall or an obstacle while driving slowly, this icon is displayed. |
| (4) | Yellow | Rear Cross Traffic Alert (RCTA) detection display | Display when a vehicle is detected coming into proximity from the rear left or right when reversing at low speed. |
| (5) | Green | Guide line for the course | In conjunction with your operations of the steering wheel, this shows the guide line of predicted course when your vehicle moves forward or backward. * |

*: When the steering wheel is in straight position, the top image and the guide line for the course of forward/backward movement will not be displayed.

| No. | Displayed color | Item name | Contents |
|---|---|---|---|
| (6) | Red | Guide line for the distance | This shows the guide line of the position about 0.5 m (1.6 ft) forward or backward from the center of bumper front-end or bumper back-end |
| (7) | Yellow | | This shows the guide line of the position about 1 m (3.3 ft) forward or backward from the center of bumper front-end or bumper back-end. |
| (8) | Light blue | | This shows the guide line of the position about 2 m (6.6 ft) forward or backward from the center of bumper front-end or bumper back-end. |
| (9) | Purple | Guide line for the vehicle width (vertical line) | This shows the guide line of the position slightly outside of the vehicle width (including the width of outside rearview mirrors). |
| | | Guide line for the vehicle width (horizontal line) | This shows the guide line of the position the most front-end of the vehicle. |

- As each guide line is displayed towards road surface, the distance from your vehicle to an obstacle such as the parked vehicle near your vehicle is not accurately displayed. Also, as the top image is displayed by processing the image based on a flat road surface, the position of an obstacle (such as the bumper of the other vehicle) where is higher than the road surface is not accurately displayed.
- Trapezoidal guide lines for the distance and the vehicle width which are displayed on the screen are rough indications and they depend on the actual distance and vehicle width.
- If you modify suspensions or replace a tyre by undesignated tyre, the guide lines and the top image will not be accurately displayed.
- The buttons on the screen are displayed by pressing.

**⚠ CAUTION**


- **The top image is the quasi-image which combines and processes several images from the cameras on the outside rear-view mirrors, the forward of your vehicle and the backward of your vehicle. Therefore, the top image may be displayed as follows:**
  - **– A steric object is displayed as if it is fell down.**
  - **– If the position of a steric object is higher than the road surface, the object is displayed farther away or it is invisible.**
  - **– A part of the steric object is not displayed inside the screen frame or its position is misaligned.**
- **A steric object on the forward image or the backward image may not be displayed on the top image.**
- **On the top image, the lines on the road may be misaligned on the frame of screen or these lines may look bended. The farther distance from your vehicle there is, the much misalignment the lines have.**
- **When the position of a camera is misaligned, the images or the guide lines may be misaligned. Ask your Maruti Suzuki authorized workshop to have the camera inspected.**
- **On a snowy road or a slippery road surface, the guide line for the course and the actual course may be different.**
- **As the icon of vehicle on the top image is displayed by a computer graphics, it is different from color, shape and size of the actual vehicle. Therefore, the position between your vehicle and the road surface or obstacles may be different from the actual position.**
- **On the top image, the brightness of the image from each camera may vary depending on brightness conditions.**
- **After an image is switched to the other image, it may be displayed late. Until the 360 view camera is completely displayed, the image may be temporarily distorted.**
- **The camera of the 360 view camera uses a special lens. Therefore, the displayed distance and the actual distance may look different and the target object may be displayed as a distorted image. The farther distance from your vehicle there is, the much tendency these situations have.**
- **As the wide image displays a large range, it displays a significantly-distorted image. Also, the distance on the wide image looks different from the actual distance.**
- **The camera uses wide-angle lens which creates a fish eye effect. So the size of the objects or in the display may differ from the actual size and distances in low light conditions, the screen may darken or image may appear faint.**
- **Camera system is for aid only. User needs to check surroundings for safety.**

*NOTE:*
*When you activate the infotainment system or there is abnormality on the touch panel, you cannot operate the buttons. In this case, wait for a while. Or, press the camera switch to go back to the original displayed screen, press the camera switch again and operate the buttons while the screen is displayed.*
*If you cannot operate the buttons to perform the above procedure, consult a Maruti Suzuki authorized workshop.*

**Difference between the camera image and the actual road surface**
The position and distance which the guide lines on the screen shows vary depending on the number of passengers, the load capacity, the inclination and situation on the road surface. Directly check safety of the surroundings with your eyes.

**When there is the uphill slope on your movement direction**
You will see the guide line for the distance in front of the actual distance.

Backward image (Example):

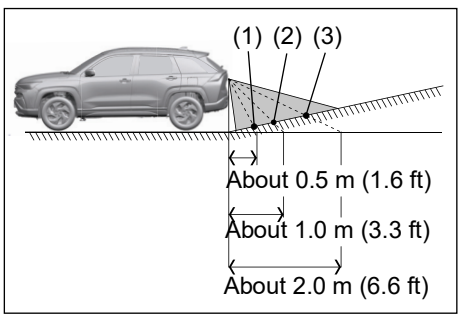



71UM05098

(1) Red, the point which the guide line for the distance (about 0.5 m [1.6 ft]) shows
(2) Yellow, the point which the guide line for the distance (about 1.0 m [3.3 ft]) shows
(3) Light blue, the point which the guide line for the distance (about 2.0 m [6.6 ft]) shows

**When there is the downhill slope on your movement direction**
You will see the guide line for the distance in the back of the actual distance.

Backward image (Example):

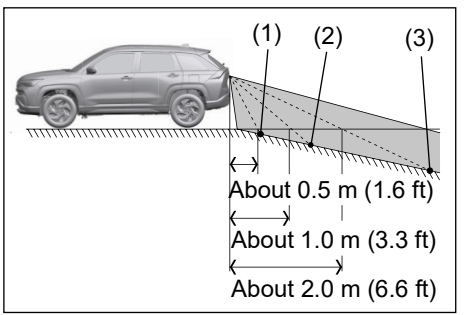



71UM05097

(1) Red, the point which the guide line for the distance (about 0.5 m [1.6 ft]) shows
(2) Yellow, the point which the guide line for the distance (about 1.0 m [3.3 ft]) shows
(3) Light blue, the point which the guide line for the distance (about 2.0 m [6.6 ft]) shows

**When there is the steric object near your vehicle**
In this case, the distance from your vehicle to the steric object may be different from the actual distance.


Example 1:

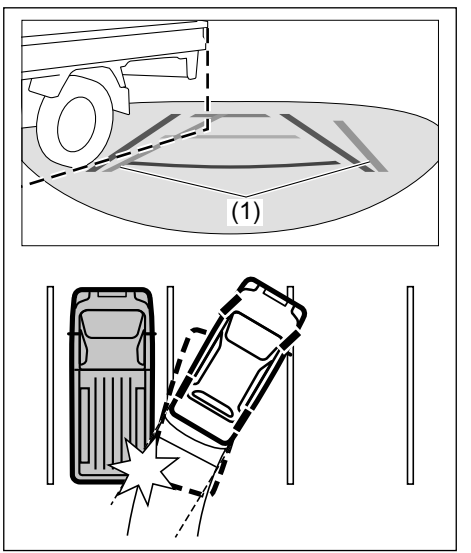


76TS51190

In the illustration, the guide line for the course (1) does not touch the body of the displayed truck. However, if the body of this truck protrudes on the actual course to which your vehicle will go, a collision may occur.

Example 2:

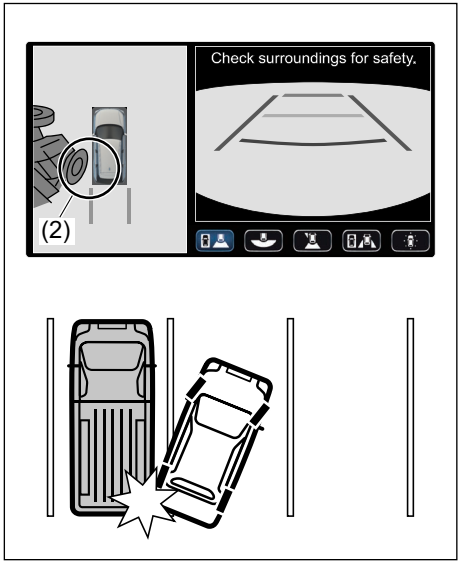


71UM050186

In the illustration, the top image (2) shows that there is a little distance between your vehicle and the body of the displayed truck. However, the actual distance is shorter than the displayed distance and a collision may occur.


**Displayed areas on the screen**

- As for the displayed areas on the screen, refer to the illustrations in “The image of view area by the 360 view camera”. However, the areas around and under the front bumper and the rear bumper will not be displayed.
- The areas above a camera will not be displayed. If an obstacle is high or the upper part of an obstacle protrudes, such as a sign, the upper part will not be displayed on the screen.
- A feeling of distance on the image of the 360 view camera is different from the actual distance.
- If there is an obstacle such as the parked vehicle on the areas which are displayed on the screen, it may be displayed different from the actual distance.
- The backward image may be inverted on the screen, which is the same as you see the image on the inside rearview mirror or the outside rearview mirrors.
- As the front camera and the back camera are installed on the places which are a little misaligned from the center of your vehicle, the forward image and the backward image will be displayed with a little misaligned positions.

**The image of view area by the 360 view camera**


**⚠ CAUTION**

**The specified areas will become blind spots which will not be displayed on the screen. Make sure to directly check the safety with your eyes.**

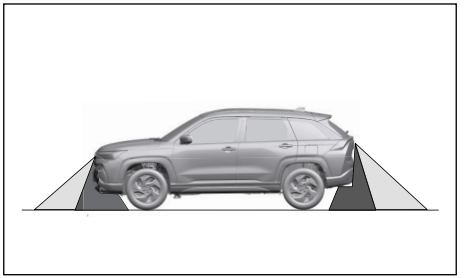

71UM05096

- The areas under the front bumper and the rear bumper or the ground surface which is indicated in the below illustration may not be displayed on the screen.

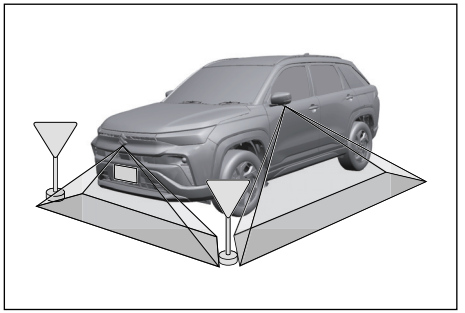

71UM05095

- On the top image, an object near the edge of areas which a camera displays and an object which is higher than the road surface may not be displayed on the screen.

*NOTE:*
- *The image of the 360 view camera may be a little different from the actual color.*
- *If a moving object is displayed on the screen, its residual image may be displayed as well.*
- *Under the following situations, it may be difficult for the driver to see the image of the 360 view camera. However, it is not malfunction.*
  - *At night, on a rainy day or at a dark place*
  - *When the area around a camera is hot or cold under the blazing sun or the cold condition, or when humidity is high on a rainy day (A camera lens may be fogged)*
  - *When strong light directly streams to a camera (White vertical lines may be displayed on the image)*
  - *Under the lights such as the fluorescent light (The image on the screen may flicker)*
  - *When the outside air temperature is low (The screen may get dark)*
  - *When you park your vehicle for a long time with the engine on (Noise may be displayed on the image)*
  - *When a camera lens is dirty or when snow or waterdrop is attached to a camera lens*

**Change of setting**
You can adjust the image quality or change the setting of the 360 view camera and the front and rear traffic alert.

**⚠ WARNING**

**If you do not change the setting in a safe place where there is nothing around your vehicle, an accident may occur.**
**Change the setting in a safe place where there is nothing around your vehicle.**


***NOTICE***

**If you change the setting for a long time with the engine off, the lead-acid battery may run out.**
**Change the setting with the engine on.**

**Adjusting the image quality**


When you adjust the image quality, perform the following procedure:

1) Set the parking brake firmly.
2) Press the engine switch to change the ignition mode to ON.

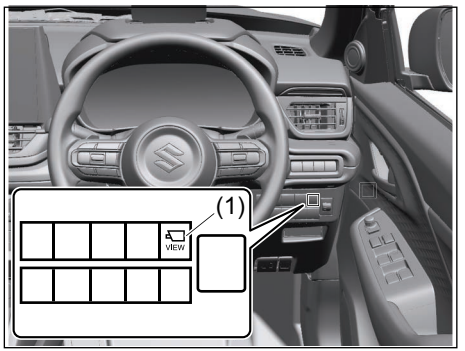


71UM05078

3) After the opening image is finished, press the camera switch (1)

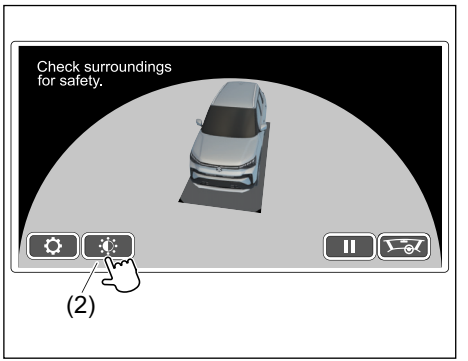



71UM050161

4) 3D view mode image will be displayed. Press the button (2) for adjusting the image quality.
5) Adjust brightness and contrast of the image to your preference.
6) When the button (2) is pressed, transition from 3D view to 2D view happens on the display screen.

*NOTE:*


- *The figure of the set brightness varies depending on ON/OFF condition of the light.*
- *Refer to the owner's manual of infotainment system for details.*

**Setting of the 360 view camera**
When you change the setting, perform the following procedure:
1) Set the parking brake firmly.
2) Press the engine switch to change the ignition mode to ON.

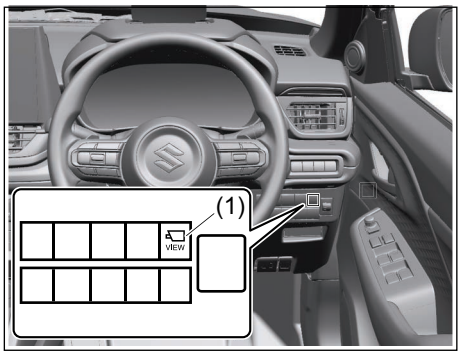


71UM05078

3) After the opening image is finished, press the camera switch (1).

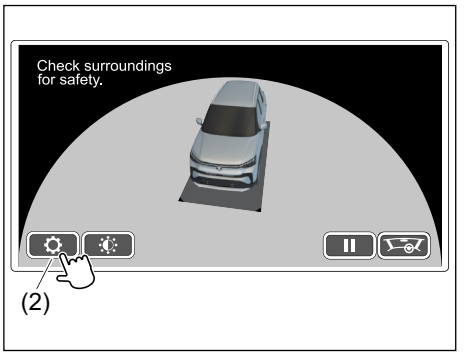

71UM050160

4) 3D view mode image will be displayed. Press the button (2) for the setting.

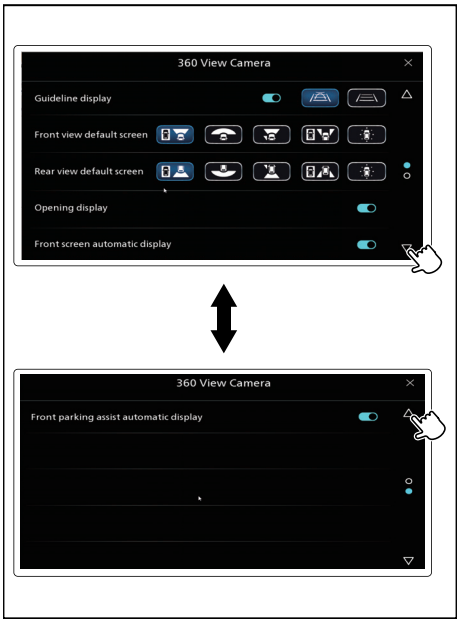


71UM050159

5) Change the setting to your preference. To switch to the different page, press ▽ or △.

• The image in the above figure is a typical example; it depends on the vehicle type.

| Indication | Function |
|---|---|
|  76TM050032 | You can select one of the following guide lines:<br>• Hiding guide lines<br>• Displaying guide lines which operate simultaneously with the steering angle<br>• Displaying fixed guide lines |
|  76TM050033 | As the image to check the forward area of your vehicle, you can select one of the following images:<br>• Top image and forward image (default setting)<br>• Forward wide image<br>• Side image and forward image<br>• Top image & Forward Left and Right images.<br>• Top View & user selected isometric image |
|  76TM050034 | As the image to check the backward area of your vehicle, you can select one of the following images:<br>• Top image and backward image (default setting)<br>• Backward wide image<br>• Side image and backward image<br>• Top image & Backward Left and Right images.<br>• Top View & user selected isometric image |
|  76TM050035 | You can display or hide 3D view mode which is automatically displayed on activation. |

| | |
|---|---|
|  <br>76TM050036 | When you shift the gearshift lever from “R” to the other position than “P”, you can display or hide the camera image which is automatically displayed. |
|  <br>71UM050187 | You can trigger SVS view automatically based on the FPAS indication during driving at low speed. |

**Handling a camera**

**⚠ CAUTION**

**When you strike a camera or its periphery, the image may not be displayed properly. Ask your Maruti Suzuki authorized workshop to have the camera inspected.**

*NOTE:*
- *When you replace a camera with new one, adjustment is necessary. Ask your Maruti Suzuki authorized workshop for adjustment.*
- *Do not attach any object which prevents the camera's activation to the camera and its periphery. You cannot attach the backlit license plate.*

**When you doubt malfunction of camera**

**When the error mark of camera system is displayed on the screen**

When the error mark ⚠ is displayed on the screen, there is abnormality in the camera system.
- If the error mark does not disappear, ask your Maruti Suzuki authorized workshop to have the camera system inspected.

**When the image quality on the 360 view camera is poor**
- When a camera lens is dirty, you may have difficulty to see the image. If waterdrop, snow or dirt is attached to the camera lens, wash it with water and wipe it off with a soft cloth. If the camera lens is heavily dirty or wax is attached to the camera lens, use a mild detergent.
- When reflected light from strong sun or strong headlights from the vehicle behind your vehicle streams directly to a camera, white lines may be displayed on the image and you may have difficulty to see the image. However, this is not malfunction.

**When the image and the guide lines are misaligned**

In the following case, the image and the guide lines will be misaligned. However, this is not malfunction.
- Your vehicle is tilted due to the number of passengers and baggage.

## License Information

The software in the 360 view camera includes open software. The license information is as follows:

[T-Kernel]

This Product uses the Source Code of T-Kernel under T-License granted by the T-Engine Forum (www.tron.org).

---

[OpenGL ES]

SGI FREE SOFTWARE LICENSE B (Version 2.0, Sept. 18, 2008)

Copyright (C) [dates of first publication] Silicon Graphics, Inc. All Rights Reserved.
Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice including the dates of first publication and either this permission notice or a reference to http://oss.sgi.com/projects/FreeB/ shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL SILICON GRAPHICS, INC. BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of Silicon Graphics, Inc. shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization from Silicon Graphics, Inc.

## Rearview Camera (if equipped)

When the gearshift lever is shifted to “R” position while the ignition mode is ON, the rearview camera system automatically shows the view behind the vehicle on the display.


**⚠ WARNING**

**The distance viewed in the rearview camera may differ from the actual distance according to the condition of road or the load the vehicle is carrying. Since the camera display area is also limited, backing up by only looking at the display may cause an accident or a crash with an object.**
**The rearview camera cannot replace the driver’s attention. The driver alone is responsible for parking and similar driving maneuvers.**
- **Use the rearview camera only to provide driving assistance.**
- **Always drive carefully confirming the safety of the rear and the surrounding conditions by looking directly with your eyes and using the rear view mirror.**
- **Check that the trunk lid is securely closed when backing up.**

***NOTICE***

**If you use the rearview camera for a long time when the ignition mode is ON, but the engine is not running, the battery may discharge.**
**Do not leave the ignition mode to ON for a long time when the engine is not running.**

### Rearview Camera Location

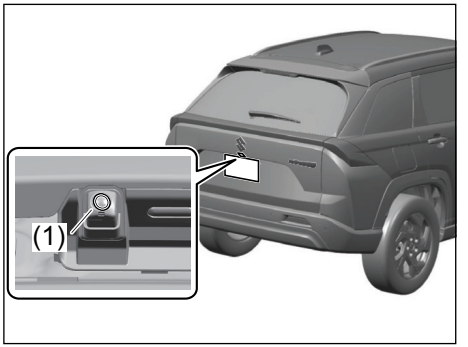


71UM05080

(1) Rearview camera

The rearview camera is installed on the tailgate.

***NOTICE***

- **The rearview camera is a precision instrument. If you strike the camera, it may be broken and cause damage resulting in a catch fire or a malfunction.**
  - **– Do not strike the camera.**
  - **– Do not remove snow or mud on the camera lens with a stick.**
- **If water enters the rearview camera, it may cause a malfunction or catch fire.**
  **Do not use high pressure water around the camera.**
- **This lens is hard coated to prevent damage or discoloration. Damage or discoloration of lens may obscure the image.**
  - **– Do not use a brush to clean lens.**
  - **– Do not use alcohol, benzine or thinner to clean the lens.**
  - **– Do not use wax on the camera lens.**

*NOTE:*
*If body wax gets on the camera lens, wipe off the wax with a clean cloth dampened with mild detergent diluted with water, and then wipe the lens with a dry cloth.*

**How to use rearview camera**


1) Press the engine switch to change the ignition mode to ON.
2) Shift the gearshift lever in “R” position.
   - The display automatically shows the view behind the vehicle.
   - When the gearshift lever is shifted from “R” to another gearshift lever position, the display returns to the previous display.

*NOTE:*
*The rearview camera display has first priority in any display mode. However, the rearview camera display does not show the rear view while the system is initializing.*


## Display Range of Rearview Camera

The rearview camera display shows the area behind the rear end of the bumper. The display cannot show objects which are close to the bumper or under the bumper.
The rearview camera display cannot show obstacles which are higher than the camera. Upper parts of tall objects such as road signs cannot be viewed on the display.

**Display range of rearview camera**

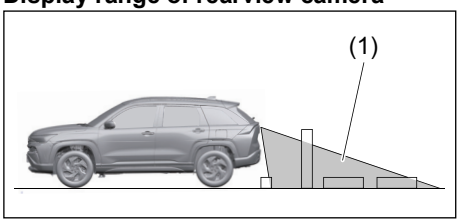


71UM05092

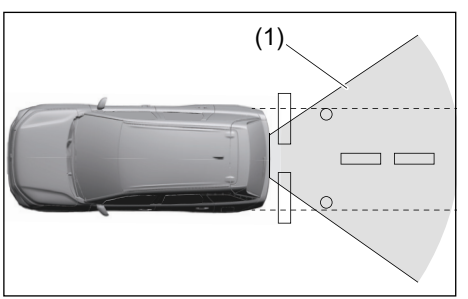



71UM05093

(1) Display range

*NOTE:*
- *Images shown on the display from the rearview camera are reversed images (mirror images).*
- *The colors of objects on the rearview camera may differ from the actual object colors.*
- *The rearview camera display may be difficult to see under the following conditions, but this is not a system malfunction.*
  – *In dark areas, on a rainy day or at night.*
  – *When the temperature around the lens is too high/low, or the camera is wet such as on a rainy day or during periods of high humidity (dew condensation may occur on the camera lens).*
  – *When a foreign object such as mud or a drop of water is stuck around the camera lens.*
  – *When strong light directly enters the camera (vertical lines may be seen on the display).*
  – *Under fluorescent light (The display may flicker).*
  – *When the outside temperature is low (the image on the display may be darkened).*

## How to understand the displayed items on the screen

The rearview camera display and following guide lines will be displayed on the screen.

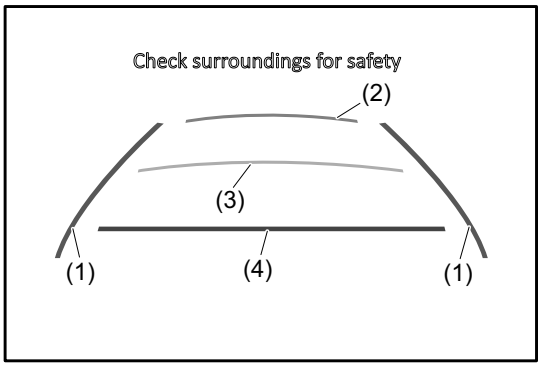


70TH051090


- As each guide line is displayed towards road surface, the distance from your vehicle to an obstacle such as the parked vehicle near your vehicle is not accurately displayed.
- Trapezoidal guide lines for the distance and the vehicle width which are displayed on the screen are rough indications and they depend on the actual distance and vehicle width.
- If you modify suspensions or replace a tyre by undesignated tyre, the guide lines will not be accurately displayed.

| No. | Item name | Displayed color | Contents |
|---|---|---|---|
| (1) | Guide line for the vehicle width (vertical line) | Purple | This shows the guide line of the position which is slightly outside of the vehicle width (including the width of outside rearview mirrors). |

| No. | Item name | Displayed color | Contents |
|---|---|---|---|
| (2) | Guide line for the distance | Light blue | This shows the guide line of the position which is about 2 m (6.6 ft) backward from the center of bumper back-end. |
| (3) | | Yellow | This shows the guide line of the position which is about 1 m (3.3 ft) backward from the center of bumper back-end. |
| (4) | | Red | This shows the guide line of the position which is about 0.5 m (1.6 ft) backward from the center of bumper back-end. |

**Rearview camera screen indication**
The distance viewed in the rearview camera may differ from the actual distance according to the condition of the road or the load the vehicle is carrying.

**Uphill incline behind the vehicle**

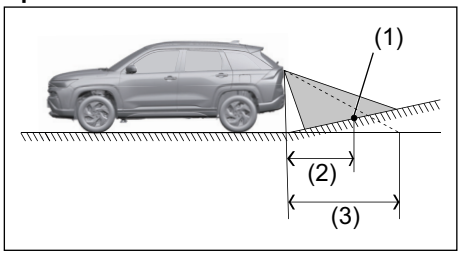



71UM05091

(1) Object
(2) Actual distance
(3) Distance on the display

When there is an uphill incline behind the vehicle, the object shown on the display appears farther away than the actual distance.

**Downhill incline behind the vehicle**

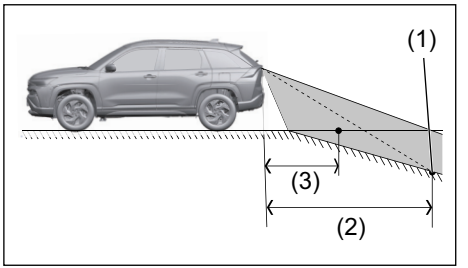


71UM05090

(1) Object
(2) Actual distance
(3) Distance on the display

When there is a downhill incline behind the vehicle, the object shown on the display appears closer than the actual distance.

**If the rear view from the rearview camera is not shown or there is a poor image**

- If the rear view from the rearview camera is not shown.
  – Check that the ignition mode is ON.
  – Check that the gearshift lever is shifted to “R” position.

- If the image from the rearview camera is poor.
  – Check that the camera lens is not dirty.
  – Check that light from the sun or the beam of the headlights from the vehicle behind is not shining directly into the lens.

If the rearview camera system is still not working properly after checking the above, have the system inspected by a Maruti Suzuki authorized workshop as soon as possible.

## Electronic Stability Program (ESP®)

ESP® is a registered trademark of Mercedes-Benz Group AG.

The Electronic Stability Program (ESP®) helps to control the vehicle during cornering if front wheels or rear wheels skid. It also assists you in maintaining traction while accelerating on loose or slippery road surfaces. It does this by regulating the engine's or the hybrid system's output, and by selectively applying the brakes. In addition, ESP® helps to avoid skidding by controlling braking pressure.

**⚠ WARNING**

**The ESP® cannot enhance the vehicle's driving stability in all situations and does not control your vehicle's entire braking system. The ESP® cannot prevent accidents, including those resulting from excessive speed in turns, or hydroplaning. Only safe and attentive drive can prevent accidents.**
**The capabilities of an ESP®-equipped vehicle must never be used as a substitute for careful driving.**

The ESP® has the following systems:

### Anti-lock Brake System (ABS)

Refer to "Anti-lock Brake System (ABS)" in this section.

### Brake Assist System

Refer to "Brake Assist System" in this section.

### Traction Control System

The traction control system automatically helps prevent the spinning of wheels when the vehicle is started or accelerated on slippery road surfaces. The system operates only if it senses that some of the wheels are spinning or beginning to lose traction. When this happens, the system operates the front or rear brakes and reduces the engine power or the hybrid system power to limit wheel spin.

### Stability Control System

The vehicle stability control system helps provide integrated control of systems such as anti-lock brakes, traction control, engine control, etc. This system automatically controls the brakes and the engine or the hybrid system to help prevent the vehicle from skidding when cornering on a slippery road surface or when turning the steering wheel abruptly.

**⚠ WARNING**

**Always check the surrounding conditions and drive the vehicle in a safe manner, as controlling the vehicle by ESP® has limits and ESP® may not function properly depending on the surrounding conditions.**

**⚠ CAUTION**

- **Observe the following points. Otherwise, ESP® may not operate properly or it may result in a malfunction.**
  - **– Adjust the tyre pressure as specified.**
  - **– When replacing tyres, use the same tyres with the size, type, and tread patterns.**
  - **– Do not use the tyres which have excessively worn conditions.**
  - **– Do not modify the suspension or the brake and do not change vehicle height or suspension hardness.**
  - **– Do not drive the vehicle with suspension or brake excessively deteriorated.**
  - **– Do not modify the engine or the muffler.**
  - **– Do not install LSD (limited slip differential).**
- **When you install the snow chains, ESP® may not operate properly.**

*NOTE:*

- *If you perform the following operations, you may hear an operation sound or a clicking sound. This means that the ESP® system is in the self-check mode and this does not indicate a malfunction.*
  - *– When pressing the engine switch / the power switch to change the ignition mode to ON*
  - *– When releasing your foot from the brake pedal, after the ignition mode is ON with the brake pedal depressed*
  - *– When starting the engine or the hybrid system*
  - *– When starting the vehicle after starting the engine or the hybrid system*
  - *– When engine revolutions is high and ESP® operates, you may feel the change of engine revolutions or vibration of vehicle body. However, this is normal.*

### ESP® Warning Light



71UM05081

- If there is a problem in the ESP® system with the engine switch / the power switch in ON mode, this light will come on. While this light comes on, the following situations will occur. In this case, ask your Maruti Suzuki authorized workshop for inspection.
  - – The following functions will not work:
    - Traction control system
    - Stability control system
  - – Hill hold control system may not work.
  - – ABS will work.
  - – Depending on the malfunction condition, brake assist system may not work.

- If any of the following situations occurs, this light will blink at very short intervals of 0.2 seconds.
  – Traction control system is activated when starting or accelerating the vehicle
  – Stability control system is activated when making a sharp turn or whirling round
  – For the vehicle with the hybrid system, when the ABS is activated

- If the system is in normal condition, when you press the engine switch / the power switch to change the ignition mode to ON, this light will come on for about 2 seconds and then come off.

**⚠ CAUTION**

**If this light blinks at very short intervals, there is high possibility that the vehicle will be stuck or skid on a slippery road surface. In this case, drive the vehicle very carefully.**

*NOTE:*
*While this light comes on, traction control system and stability control system will not be activated. However, you can use ABS.*

## ESP® OFF Switch




71UM05082

- In the following situations, keep pressing the ESP® OFF switch until the ESP® OFF indicator light in the instrument cluster turns on. Traction control system and stability control system will not work.
  – When placing the vehicle on the tester for automobile inspection, traction control system and stability control system needs to be deactivated.
  – If your vehicle is stuck and you try to get out of the stuck condition, traction control system may not be suitable.

- If you perform any of the following operations, the ESP® OFF indicator light will come off. Also, traction control system and stability control system will return to be in the activated condition.
  – Pressing the ESP® OFF switch again
  – Stopping the engine / the hybrid system and then restarting the engine / the hybrid system

- If you would like to perform normal driving after escaping from the stuck condition, press the ESP® OFF switch again. This will allow the ESP® OFF indicator light to come off and the vehicle will return to the original condition.


*NOTE:*
- *For safety reasons, ABS and brake assist system are not in a deactivated state when the ESP® "OFF" switch is operated.*
- *If your vehicle is equipped with the Dual Sensor Brake Support II (DSBS II) system, when the ESP® system is turned off, Dual Sensor Brake Support II (DSBS II) system, lane departure warning, lane departure prevention, vehicle swaying warning, lane keep assist and traffic sign recognition will be turned off. (High beam assist does not turn off).*

- For the vehicle with the hybrid system, you can disable the traction control system. If the vehicle gets stuck in mud, dirt or snow, the traction control system may reduce power from the hybrid system to the wheels. Press the ESP® OFF switch to turn the system off to make it easier for you to rock the vehicle in order to free it. To turn off the traction control system, quickly press and release the ESP® OFF switch. The message “TRACTION CONTROL TURNED OFF” will be shown on the information display. Press the ESP® OFF switch again to turn the system back on.




71UM05083

## ESP® OFF Indicator Light

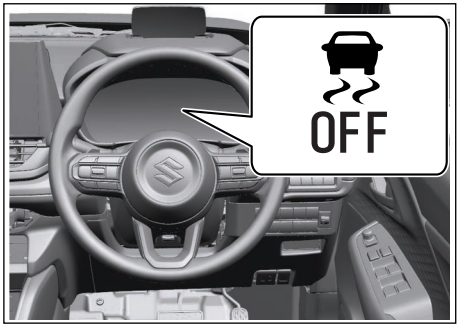


71UM05084

- If you press and hold the ESP® OFF switch with the ignition mode ON, this light will come on.
  – While this light comes on, traction control system and stability control system will not work.
- If the system is in normal condition, when you press the engine switch / the power switch to change the ignition mode to ON, this light will come on for about 2 seconds and then come off.

## Hill Hold Control System

The hill hold control system is designed to assist you in starting to move up hills. When you start to move up a hill, the system helps to prevent the vehicle from rolling downward (for approximately 2 seconds) while you move your foot from the brake pedal to the accelerator pedal.

- The hill hold control system is not designed to stop the vehicle on a hill.



71UM05081

**⚠ WARNING**

- **Always check the surrounding conditions and drive the vehicle in a safe manner by depressing the brake pedal as necessary, as controlling the vehicle by the hill hold control system has limits and the system may not function properly depending on the surrounding conditions.**
- **If you do not depress the brake pedal firmly enough, the hill hold control system may not work.**
- **If you release your foot from the brake pedal for more than 2 seconds, the hill hold control system will be canceled. If so, the vehicle may roll downward, which can result in an accident depending on the degree of a slope. Also, the engine may stall and the power assist for the steering and brakes will not work so steering and braking will be much harder than usual which can result in an accident or vehicle damage. After you release your foot from the brake pedal, accelerate the vehicle to move up immediately.**

*NOTE:*

- *If there is a problem with the hill hold control system, the ESP® warning light in the instrument cluster may come on and the hill hold control system may not work. In this case, consult a Maruti Suzuki authorized workshop.*
- *If you move up an excessively sharp slope, a frozen road or a mud track, or depending on laden weight, the vehicle may roll downward when you start the vehicle.*
- *If you move up an excessively sharp slope, a frozen road or a mud track and the hill hold control system activates, the tyres may be locked and the vehicle may not be controlled properly.*

**Activation conditions for the hill hold control system**

The hill hold control system activates to prevent the vehicle from rolling downward for about 2 seconds if your foot is moved from the brake pedal when the following conditions are all met.

- The gearshift lever is in the forward gear or reverse position.
- The parking brake is released.
- The vehicle is on an upward slope.
- The brake pedal is depressed firmly.

*NOTE:*

*When the hill hold control system is activated, you may hear a sound coming from the engine room, or you may feel hardness of the brake pedal. These are normal and do not indicate a malfunction.*


### Hill Descent Control System

The hill descent control system is designed to reduce the driver's workload when going down steep, rough and/or slippery hills where the vehicle cannot decelerate enough by engine braking alone. The hill descent control system helps to control vehicle speed by automatically engaging the vehicle's brakes, as needed, so you can concentrate on steering the vehicle.

**⚠ WARNING**

**Do not rely excessively on the hill descent control system. The hill descent control system may not control the vehicle speed on a hill under all load or road conditions. Always be prepared to control vehicle speed by applying the brakes. Failure to pay attention and control vehicle speed using the brakes when necessary may result in loss of control or an accident.**

**Hill descent control switch**

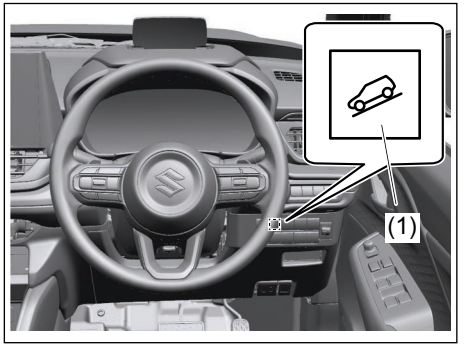


71UM050101

(1) Hill descent control switch

To activate the hill descent control system:
1) Turn the driving mode switch (if equipped) to “LOCK” position.
2) Shift the gearshift lever into a forward gear or reverse gear.
3) Push the hill descent control switch (1) when the vehicle speed is under 25 km/h. The hill descent control indicator on the instrument cluster will come on and the hill descent control system will be activated.

*NOTE:*
*While Hill Descent Control is operating, Dual Sensor Brake Support II (DSBSII) may not activate depending on the amount of accelerator input.*

If the driving mode switch (if equipped) is in “LOCK” position, vehicle speed is maintained at approximately 10 km/h when going down a hill.
The brake/tail lights come on and the ESP® warning light blinks while the hill descent control system applies the brakes to maintain the vehicle speed.
If the accelerator or brake pedal is depressed while the hill descent control system is activated, the system will stop working temporarily. As soon as the accelerator or brake pedal is released, the hill descent control system begins to function again if the hill descent control operating conditions are fulfilled. However, when the vehicle speed exceeds 35 km/h, the hill descent control system will be deactivated automatically.
When the vehicle speed becomes under 25 km/h, the hill descent control indicator will turns on and the hill descent control system will be ready to be activated.
To deactivate the hill descent control system, push the hill descent control switch again.


**⚠ WARNING**

- **When the hill descent control system is used continuously for a long time, the temperature of the brake system may increase and the hill descent control system may be deactivated temporarily to protect the device of the brake system. The hill descent control indicator blinks to let you know the system is deactivated. Depress the brake pedal and stop the vehicle in a safe place. When the temperature of the brake system goes down, the hill descent control indicator will come on and the system is activated again.**
- **The hill descent control system may be activated when the gearshift lever is in “N” (Neutral) position, but engine braking will not work. Always use the hill descent control system with the gearshift lever in a forward gear or reverse gear.**
- **When using the hill descent control system, push the hill descent control switch and make sure that the hill descent control indicator light turns on and no warning message is indicated on the information display.**

*NOTE:*
*You may hear a sound coming from the engine room when the hill descent control system is activated. This sound is normal and does not indicate a malfunction.*

To turn off the hill descent control system, push the hill descent control switch and turn off the hill descent control indicator light.

**Hill descent control indicator light**

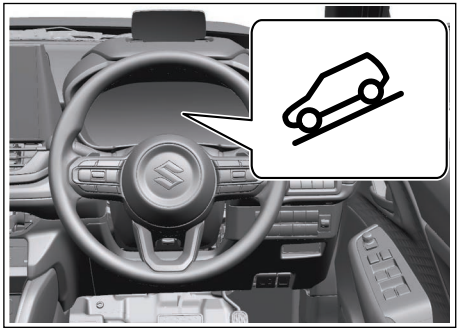

71UM05085

When the ignition mode is in “ON” position, this light comes on briefly so you can check that the light is working.

When you push the hill descent control switch and the hill descent control operating conditions are fulfilled, the hill descent control indicator turns on. If the hill descent control indicator blinks, the hill descent control will not be activated.

If hill descent control indicator light turns on or blinks, while not operating the hill descent control switch, there is a problem in this system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

*NOTE:*
*If the hill descent control indicator blinks when you push the hill descent control switch, the following conditions may not be fulfilled.*

- *The driving mode switch (if equipped) is in “LOCK” position*
- *The gearshift lever is in a forward gear or reverse gear*
- *The vehicle speed is under 25 km/h*
- *The brake system is under normal operating temperature*

*NOTE:*
*If any of the following conditions occur, there may be a problem with the hill descent control system or the ESP® system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.*


- *The hill descent control indicator does not come on or blink when you push the hill descent control switch.*
- *The hill descent control indicator stays on when driving without pushing the hill descent control switch.*

**Type-A**




71UM050152

**Type-B**

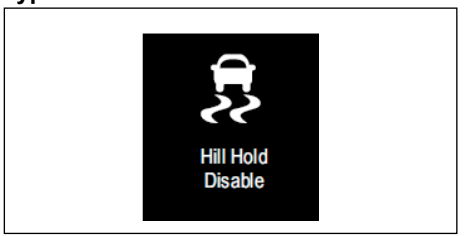



71UM050202

If the message shown in the above illustration appears on the information display, master warning indicator light blinks and the interior buzzer beeps, there may be a problem with the hill descent control system and the hill hold control system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

*NOTE:*
*You cannot activate the hill descent control system while this message is displayed.*

## Braking

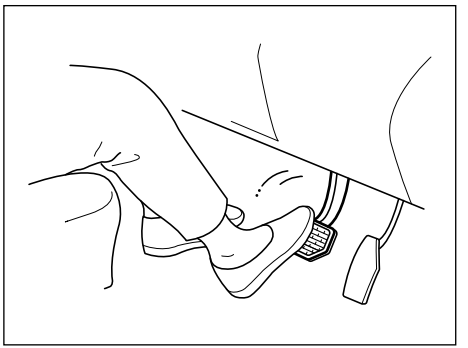

59RN05770

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h will be approximately 4 times greater than the braking distance needed at 30 km/h. Start to depress the brake pedal when there is plenty of distance between your vehicle and the stopping point, and slow down gradually.

**⚠ WARNING**

**If water gets into the brake devices, brake performance may become poor and unpredictable. After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.**

*NOTE:*
*While braking you may hear operational noise due to friction between brake disc/drum and brake lining. This is a normal phenomenon and does not indicate any abnormality or affect normal functioning of the vehicle.*

### Power-assisted Brakes

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the pedal.

**⚠ WARNING**

**Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.**

*NOTE:*
*During brake pedal application & release, you may hear some operational noise owing to activation and functioning of components in the brake system. This is a normal phenomenon and does not indicate any abnormality or malfunction. Also, it does not affect the brake function.*

### Brake Assist System

When you slam the brakes on, the brake assist system determines it to be an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

*NOTE:*
- *If you quickly and forcefully depress the brakes, you may hear clicking sound by the brake assist system operation. This is normal and indicates that the brake assist system is activated properly.*

- *For the vehicle with the hybrid system, operating sound from the brake system may be heard in the following cases as well, but it does not indicate that a malfunction has occurred.*
  - *Operating sound heard from the engine compartment when the brake pedal is operated.*
  - *Motor sound of the brake system heard from the front part of the vehicle when the driver's door is opened.*
  - *Operating sound heard from the engine compartment when one or two minutes passed after the stop of the hybrid system.*

## Anti-lock Brake System (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.
The ABS works automatically, so you do not need any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that the wheels are locking up. You may feel the brake pedal move a little while the ABS is operating.

**⚠ WARNING**

- **Always check the surrounding conditions and drive the vehicle in a safe manner, as controlling the vehicle by ABS has limits and the system may not function properly depending on the surrounding conditions.**
- **If tyre grip performance is over the limit or hydroplaning occurs, ABS cannot work properly.**

*NOTE:*
- *If the ABS system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.*
- *You may hear an operation sound when you start the engine / the hybrid system or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.*
- *For the vehicle with the hybrid system, the ESP® warning light in the instrument cluster will blink while the ABS is operating.*

### Braking Distance

ABS is not designed to shorten the stopping distance.

**⚠ WARNING**

- **In the following situations, the braking distance required for a vehicle with ABS may be slightly greater than the one required for a vehicle without ABS, resulting in an accident. Drive the vehicle slowly and maintain ample distance between your vehicle and the vehicle in front of you.**
  - **– When driving on rough roads such as unpaved or stone-paved roads**
  - **– When driving on gravel roads or fresh snow roads**
  - **– When driving over bumps on the roads such as joint seams**
  - **– When passing over metal plates such as manholes**
  - **– When snow chains are installed**

*NOTE:*
- *When applying sudden brake or applying brake on slippery roads, the braking distance required for a vehicle with ABS is almost the same as the one required for a vehicle without ABS.*
- *If you would like to suddenly apply brake, just push the brake pedal down firmly without pumping. Otherwise, the longer braking distance will be required.*
- *The ABS will not work if vehicle speed is under about 9 km/h. This depends on the road conditions.*

### Vibration and Sound during ABS Operation

When strongly depressing the brake pedal, you might feel vibration of the brake pedal, the steering wheel, and the vehicle body. This is due to ABS operation, and does not indicate a malfunction; continue strongly depressing the brake pedal at this time.

*NOTE:*
*Immediately after starting the engine / the hybrid system and beginning to drive, you might temporarily hear a motor sound. This means that the systems are in self-check mode. This sound does not indicate a malfunction.*


## Tyres

**⚠ WARNING**

**ABS detects each wheel rotation speed via a sensor. If tyres or wheels other than those specified in the owner's manual are used for size, type, tread pattern, or if worn conditions of tyres are different, the correct wheel rotation speed cannot be detected and ABS will not work properly. This may result in an accident.**
**When replacing tyres, use the tyres with the size, type, and tread patterns which are specified in this owner's manual.**
**Also, do not use the tyres which are excessively worn.**


## Situations where ABS may Activate by Chance when Applying Brake

- When driving on slippery roads

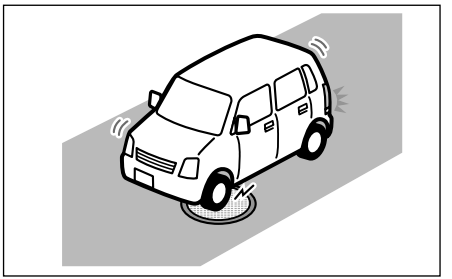


69RHS150

– Manholes

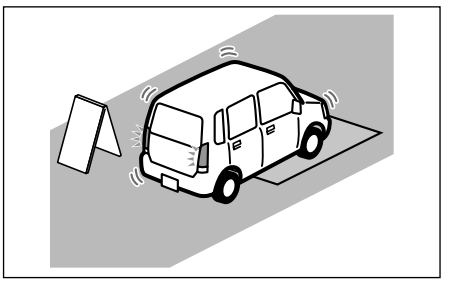

69RHS151


– Metal plates in construction zones

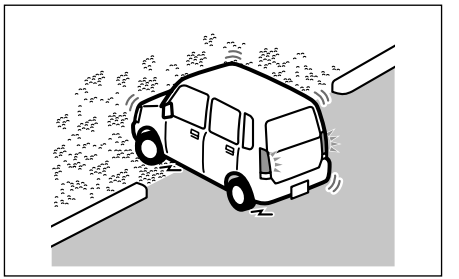

69RHS152


– Gravel roads

- When driving over joints in roads and other height differences

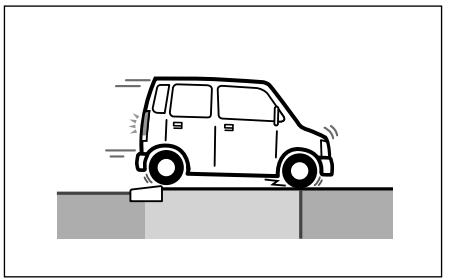

69RHS153


– Joints in roads

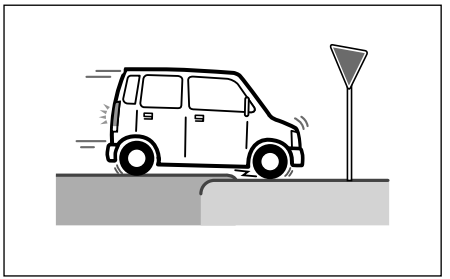

69RHS154


– Height differences in roads

• When driving on rough roads

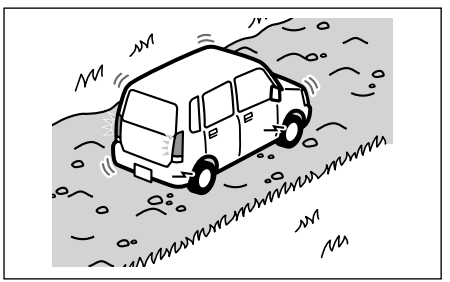

69RHS155

– Bumpy roads

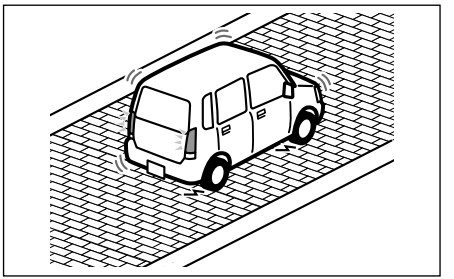

69RHS156

– Cobblestone

### ABS Warning Light




71UM05086

If there is a problem in the ABS system with the engine switch or the power switch in ON mode, this light will come on.

### Braking Assist


This function assists you in applying more force when operating the brake. When sudden braking is applied, the time until the ABS comes into full effect is shortened.

- If you do not depress the brake pedal firmly, braking assist will not operate.
- Brake assist is not a device that provides control beyond the original braking performance.

### Emergency Stop Signal (ESS) (if equipped)

ESS is a feature that gives a warning to a following vehicle by flashing all turn signal lights faster than usual if all the following conditions are met. Also, within these conditions, it will flash along with your turn signal in the instrument cluster.

- When you slam down on the brakes at speeds of approximately 55 km/h or over
- When the ABS is activated or when you apply sudden brake, which is similar conditions for activating the ABS

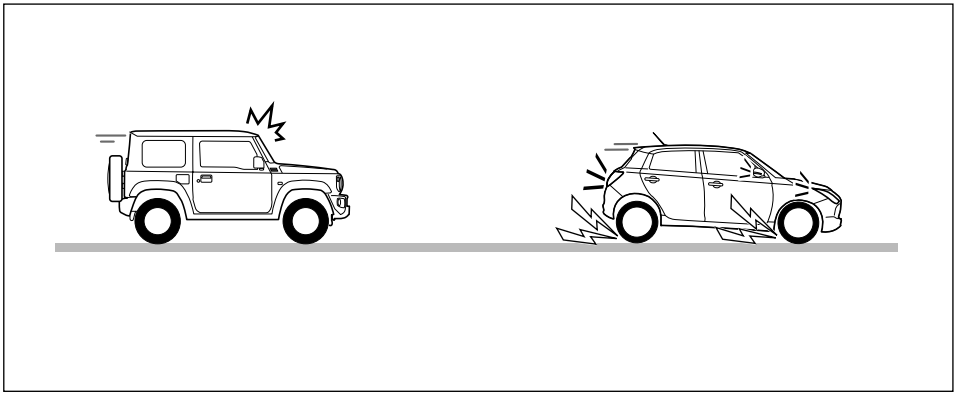

71UM05074

The ESS will stop functioning in the following situations:

- When the vehicle speed is sufficiently reduced
- When you release the brake
- When the ABS is no longer activated
- When you turn on the hazard warning switch

**⚠ WARNING**

**Although the ESS is designed to reduce the number of rear-end collisions that occur from sudden braking, by warning a following vehicle, it cannot prevent all collisions. Always make an effort to drive safely and avoid unnecessary sudden braking when stopping or decelerating.**


*NOTE:*

- *The ESS functions cannot be deactivated.*
- *Use of the hazard warning switch should be given preference over the ESS.*
- *When driving on the following surfaces and the ABS gives out momentarily, the ESS may not function.*
  - *When driving on slippery surfaces*
  - *When driving over bumps on the roads such as joint seams*

## Tyre Pressure Monitoring System (TPMS) (if equipped)

The tyre pressure monitoring system is designed to alert you when one or more of the tyres on your vehicle is significantly under-inflated. The tyre pressure monitoring system (TPMS) sensor containing a unique identification code is mounted on each wheel. The TPMS sensors transmit tyre pressure signals to the receiver of the tyre pressure monitoring system controller (Integrated with Body Control Module). When the inflation pressure of one or more tyres indicates significant under-inflation, the low tyre pressure warning light comes on.

### Low Tyre Pressure Warning Light

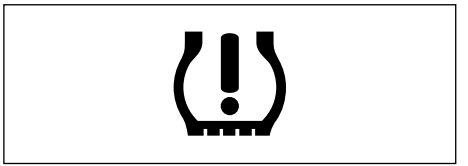

52D305

Each tyre should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tyre pressure label. (If your vehicle has tyres of a different size than the size indicated on the vehicle placard or tyre pressure label, you should determine the proper tyre pressure for those tyres.)

As an added fuel efficiency feature, your vehicle has been equipped with a tyre pressure monitoring system (TPMS) that illuminates a low tyre pressure warning light when one or more of your tyres is significantly under-inflated.

Accordingly, when the low tyre pressure warning light illuminates, you should stop and check your tyres as soon as possible, and inflate them to the proper pressure.

Driving on a significantly under-inflated tyre causes the tyre to overheat and can lead to tyre failure. Under-inflation also reduces fuel efficiency and tyre tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tyre maintenance, and it is the driver's responsibility to maintain correct tyre pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tyre pressure warning light.

**⚠ WARNING**

**Relying only on the tyre pressure monitoring system to determine when it is necessary to add air to the tyres can result in loss of control or an accident.**

**Check tyre pressures monthly when the tyres are cold. If necessary, adjust them to the recommended inflation pressure as specified on the vehicle's tyre information placard and in this owner's manual. Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section.**

**⚠ WARNING**

**Failure to take corrective action when the low tyre pressure warning light is not working or when it comes on and blinks while driving can lead to an accident.**
**If the low tyre pressure warning light does not come on for 2 seconds after the engine switch is pressed to change the ignition mode to ON, or comes on and blinks while driving, have your vehicle inspected by a Maruti Suzuki authorized workshop. Even if the light turns off after blinking, indicating that the monitoring system has recovered, you should still have the system checked by a Maruti Suzuki authorized workshop.**

**⚠ WARNING**

**The load-carrying capacity of your tyres is reduced at lower inflation pressures. If your tyres are even moderately under-inflated, the load on the tyres may exceed the load-carrying capacity of the tyres, which could lead to tyre failure. The low tyre pressure warning light will not alert you to this condition, because it only comes on when one or more of your tyres becomes significantly under-inflated. Check and adjust your tyre pressure at least once a month. Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section.**

**⚠ WARNING**

**Continuing to drive with the low tyre pressure warning light on can lead to an accident, resulting in severe injury or death.**
**If the low tyre pressure warning light comes on and stays on, reduce your speed and avoid abrupt steering and braking. Be aware that driving on a significantly under-inflated tyre can cause the tyre to overheat and can lead to tyre failure, and may affect steering control and brake effectiveness. Stop in a safe place as soon as possible and check your tyres.**

- **If you have a flat tyre, replace it with the spare tyre (optional). Refer to "Jacking instructions" in "EMERGENCY SERVICE" section for the tyre replacement method. Also refer to "Replacing tyres and/or wheels" for instructions on how to restore normal operation of the TPMS after you have had a flat tyre.**
- **If one or more of your tyres is under-inflated, adjust the inflation pressure in all of your tyres to the recommended inflation pressure as soon as possible.**

**⚠ WARNING**

**The TPMS system cannot alert you for tire damage caused by external factors such as nails or road debris (if that is not leading to drop in inflation pressure).**

The low tyre pressure warning light can come on due to normal causes such as natural air leakage and pressure changes caused by changes in temperature or atmospheric pressure. Adjusting the air pressure in the tyres to the pressure shown on the tyre information placard should cause the low tyre pressure warning light to turn off.

To make the low tyre pressure warning light go off, adjust the tyre pressures when the tyres are cold, and drive the vehicle for about 10 minutes.
When the adjusted tyre pressure is recognized, the low tyre pressure warning light will go off and the information display shows the current tyre pressure (if you select the TPMS monitor (if equipped)).

***NOTICE***

**If the low tyre pressure warning light does not go off even when you drive for more than 10 minutes after adjusting the cold tyre pressure, there may be a problem with the TPMS. Have your vehicle inspected by a Maruti Suzuki authorized workshop.**

If the light turns on again shortly after adjusting the pressure in your tyres, you may have a flat tyre. If you have a flat tyre, replace it with the spare tyre (optional).
Refer to “Jacking instructions” in “EMERGENCY SERVICE” section. Refer to “Replacing tyres and/or wheels” for instructions on how to restore normal operation of the tyre pressure monitoring system after you have had a flat tyre.




71UM050153

*NOTE:*
- *For a certain type of instrument cluster only, the information display shows the above warning and indicator message when this light comes on.*
- *When the tyre pressure is adjusted in high altitude areas, the low tyre pressure warning light may not turn off even after tyre pressure adjustment. In this case, adjust the inflation pressure to a slightly higher pressure than the one shown on the tyre information placard.*
- *The low tyre pressure warning light may turn off temporarily after coming on. This could be due to increase of surface temperature after long distance driving or traveling to a high temperature area. Even if the low tyre pressure warning light turns off after coming on, check the inflation pressure of all tyres.*
- *To reduce the chance that the low tyre pressure warning light will come on due to normal changes in temperature and*

*atmospheric pressure, it is important to check and adjust the tyre pressures when the tyres are cold. If you check tyres after driving, they are warm. Even if the tyre pressure seems to be good in this condition, it could fall below the specified pressure when tyres cool down. Also, if tyres are inflated to the specified pressure in a warm garage, the tyre pressure could fall below the specified one when you drive the vehicle outside in very cold temperature. If you adjust the tyre pressure in a garage that is warmer than the outside temperature, you should add 1 kPa to the recommended cold tyre pressure for every 0.8°C difference between garage temperature and outside temperature.*

### TPMS Malfunction Indicator

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly.

The TPMS malfunction indicator is combined with the low tyre pressure warning light. When the system detects a malfunction, the low tyre pressure warning light will flash for about 75 seconds and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

The TPMS malfunction indicator is not reset even after the engine is turned off; it remains in the ON state until the normal conditions are restored.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tyre pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tyres or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the low tyre pressure warning light after replacing one or more tyres or wheels on your vehicle to ensure the replacement or alternation of tyres and wheels to allow the TPMS to continue to function properly.


***NOTICE***

**The tyre pressure sensors can be damaged if you do not take proper precautions.**

- **We highly recommend that you have tyres repaired or replaced by a Maruti Suzuki authorized workshop. The tyre pressure sensors can be damaged by installation or removal of tyres.**
- **Do not use liquid sealants for a flat tyre unless your vehicle is equipped with a flat tyre repair kit instead of a spare tyre (optional).**

***NOTICE***

**If the low tyre pressure warning light comes on frequently, there may be something wrong with one or more of the tyres, tyre pressure sensors or the monitoring system.**
**If the low tyre pressure warning light comes on frequently, have your vehicle inspected by a Maruti Suzuki authorized workshop.**

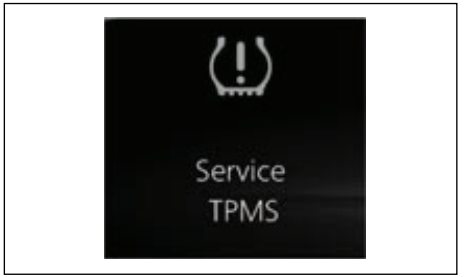


71UM050154

*NOTE:*
*For a certain type of instrument cluster only, the information display shows the above warning and indicator message when this light comes on.*


### TPMS Limitations

The tyre pressure monitoring system may not function properly under certain circumstances. In the following situations, the low tyre pressure warning light may come on and remain on or may blink.

- When you replace a flat tyre with the spare tyre (optional).
- When you include a spare tyre (optional) during a tyre rotation.
- When the TPMS sensor is damaged during a tyre replacement or liquid sealants are used to repair a flat tyre.
- When the electronic signal of TPMS sensor is disturbed in one of the following ways:
  – Electric devices or facilities using similar radio wave frequencies are nearby.
  – A metallic film that may cause radio wave interference is attached on the window.
  – A lot of snow or ice covers the vehicle, in particular, around the wheels or wheel housings.
  – Snow tyres that are not installed with genuine TPMS sensors or snow chains are used.
- When you use non-genuine Maruti Suzuki wheels or tyres.
- When the pressure of any tyre is too high.
- When there is a problem with the receiver of the TPMS controller (Integrated with Body Control Module).

### To Check the Current Tyre Inflation Pressure (For instrument cluster - Type A)

You can check the current tyre pressure on the information display.

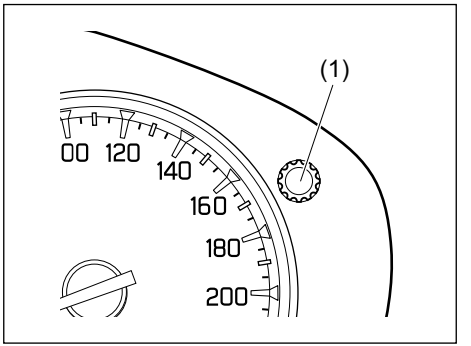


71UM05087


1) When the ignition mode is ON and the vehicle is stationary, push and hold the indicator selector knob (1) on the instrument cluster for more than 3 seconds to change the information display to the setting mode.




52RM30840


2) Turn the indicator selector knob (1) left or right to select “TPMS” and push the indicator selector knob.

*NOTE:*
*If you exit the setting mode, select “Back” and push the indicator selector knob (1).*

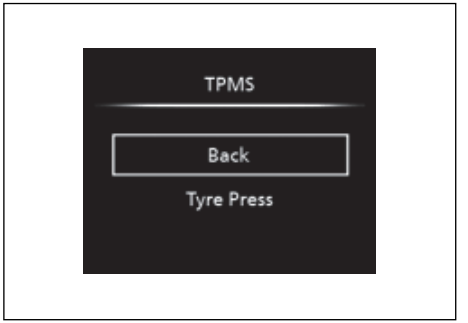


55T050950

3) Turn the indicator selector knob (1) left or right to select “Tyre Press” and push the indicator selector knob.

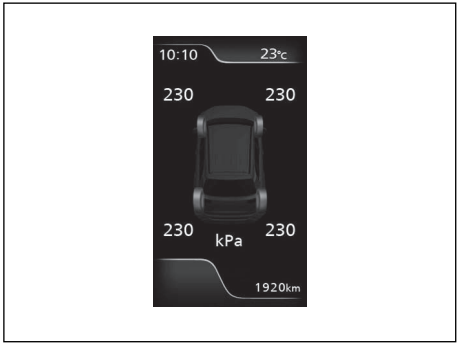



76TS51260

4) The display shows current tyre inflation pressure.

*NOTE:*
- *If the low tyre pressure warning light comes on, the information display will be switched to “Tyre Press” display and the corresponding tyre pressure indication blinks to alert you which tyre(s) is(are) low pressure.*
- *The display may not show the tyre pressure for about 10 minutes after the vehicle begins to move. This is because the TPMS system learns the tyre pressure within this 10 minutes. The display will show the tyre pressure after 10 minutes pass.*
- *If you stop the vehicle and change the ignition mode to LOCK (OFF), and leave it for 20 minutes or more, tyre pressure will be reset and will be indicated as “---” kPa when the engine is restarted. In this case, the current tyre pressure indication will recover after driving for a while. However, if any of tyre pressures has been detected as low pressure before stopping the engine, the tyre pressure indication may not recover and may be indicated as “---”.*


### To Check the Current Tyre Inflation Pressure (For instrument cluster - Type B)

You can check the current tyre pressure on the information display.

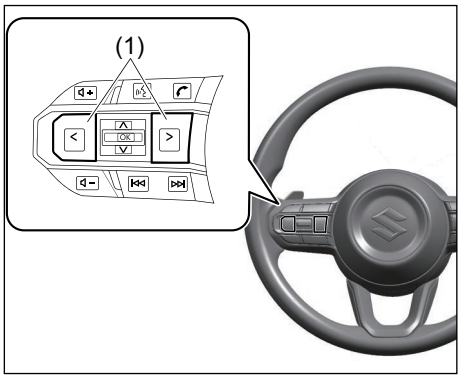



71UM050117

1) When the ignition mode is ON and the vehicle is stationary, push the left/right selector switch (1) to change the information display to the setting mode.

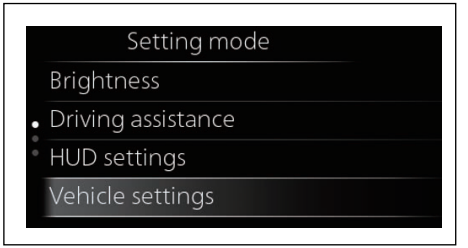


71UM050166


2) Select “Vehicle settings” and press the OK switch quickly.

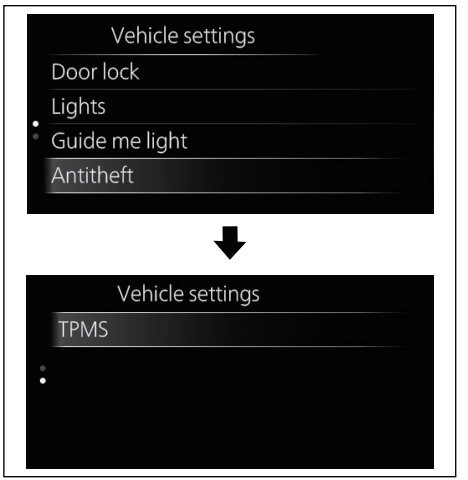


71UM050166


3) Select “TPMS” and press the OK switch quickly.

*NOTE:*
*If you exit the setting mode, press the left/right selector switch (1).*

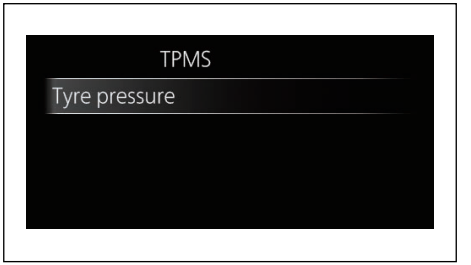


71UM050168

4) Press the OK switch quickly to select “Tyre pressure”.

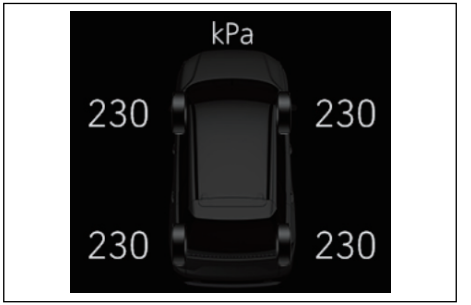


71UM050119

5) The display shows current tyre inflation pressure.

*NOTE:*
- *If the low tyre pressure warning light comes on, the information display will be switched to "Tyre pressure" display and the corresponding tyre pressure indication blinks to alert you which tyre(s) is(are) low pressure.*
- *The display may not show the tyre pressure for about 10 minutes after the vehicle begins to move. This is because the TPMS system learns the tyre pressure within this 10 minutes. The display will show the tyre pressure after 10 minutes pass.*
- *If you stop the vehicle and change the ignition mode to LOCK (OFF), and leave it for 20 minutes or more, tyre pressure will be reset and will be indicated as "---" kPa when the engine is restarted. In this case, the current tyre pressure indication will recover after driving for a while. However, if any of tyre pressures has been detected as low pressure before stopping the engine, the tyre pressure indication may not recover and may be indicated as "---".*

## Replacing Tyres and/or Wheels

If you got a flat tyre and replaced it with the spare tyre (optional), Maruti Suzuki recommends that you have a Maruti Suzuki authorized workshop mount a new tyre on the wheel that had the flat tyre. The TPMS is already set up to recognize the ID code of the original wheel, and normal TPMS operation will be restored.

If you need to replace any wheels on your vehicle, a Maruti Suzuki authorized workshop must check that TPMS sensors are installed in the new wheels and must set up the TPMS to recognize the new sensors.


*NOTE:*
*A TPMS sensor is not installed in the spare tyre (optional). You should use the spare tyre (optional) only in an emergency situation, and should replace the spare tyre (optional) as soon as possible to restore normal TPMS operation.*

**⚠ WARNING**

**Use of tyres or wheels not recommended by Maruti Suzuki can result in failure of the TPMS.**
**When replacing tyres and wheels, use only tyres and wheels recommended by Maruti Suzuki as standard or optional equipment for your vehicle. Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section for additional information.**

**⚠ WARNING**

**Tampering with, modifying, or disabling the tyre pressure monitoring system (TPMS) components may interfere with the system's ability to warn the driver of low tyre pressure conditions and/or TPMS malfunctions. Tampering with, modifying, or disabling the tyre pressure monitoring system (TPMS) components may void the warranty for that portion of the vehicle.**

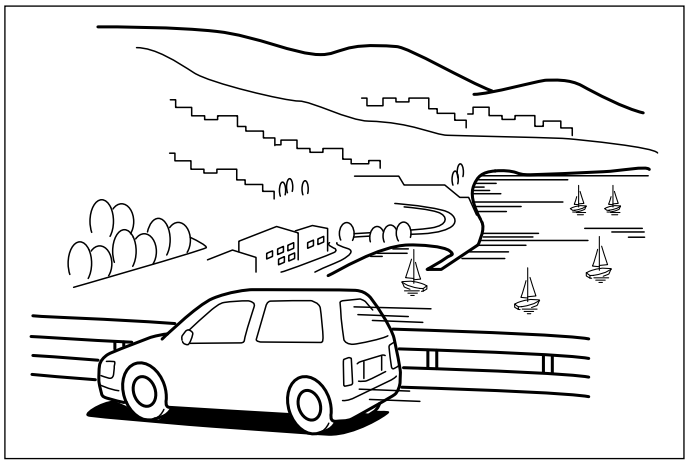


60G409

# ADVICE FOR YOUR DRIVING

When Driving ..... 6-1
Off-road Driving ..... 6-8
Improving Fuel Economy ..... 6-9
Stuck Vehicle ..... 6-10
Precaution for Handling Vehicle ..... 6-11
Running-in ..... 6-15
Catalytic Converter ..... 6-15
When Driving Hybrid Vehicle ..... 6-16

## When Driving

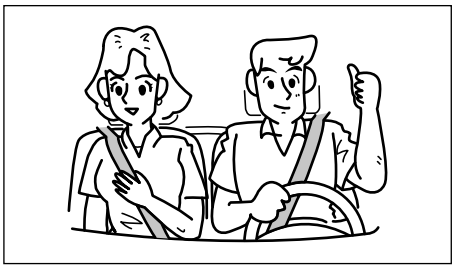


59RN02300

**⚠ WARNING**

- **Wear your seat belts at all times. Even though airbags are equipped at the front seating positions, the driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to "Seat belts and child restraint systems" section for instructions on proper use of the seat belts.**
- **Never drive under the influence of alcohol or other drugs. Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to yourself and others. You should also avoid driving when you are tired, sick, irritated or under stress.**

### Start Driving after Carefully Checking the Surrounding Circumstances

Be sure to always fully check the safety of the surrounding circumstances before beginning to drive.

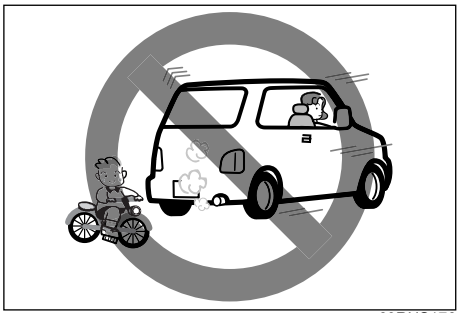

69RHS176

**⚠ CAUTION**

**You cannot check the safety of the surrounding circumstances enough only by the 360 view camera, the parking sensors and the inside mirror. When moving the vehicle forward or backward, check the safety of the surrounding circumstances by directly checking with your eyes.**

### Do not Race the Engine, Avoid Fast Starts and Rapid Acceleration Just after Engine Start

Refer to "Avoid Fast Starts, Rapid Acceleration and Hard Braking" and "Do not Race the Engine" in the "Improving Fuel Economy" section.

### Do not Concentrate on a Mobile Phone or Navigation System




55T060050

**⚠ WARNING**

- **Do not operate a mobile phone, etc. while driving. Being distracted by phone operation could lead to an accident.**
- **Do not operate navigation/audio equipment, etc. while driving. Otherwise, there is the danger of an accident due to being distracted.**

### Do not Reach Through the Steering Wheel

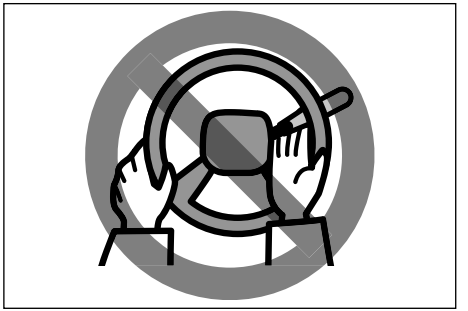

69RHS178

**⚠ WARNING**

**Reaching through the steering wheel could interfere with steering wheel operation and result in an accident.**

### Do not Drive with Your Foot on the Brake Pedal


**⚠ CAUTION**

**Driving with your foot resting on the brake pedal could cause brake parts to become worn out more quickly than normal or cause brake components to overheat, making them less effective.**

### When Depressing the Accelerator Pedal and the Brake Pedal Simultaneously

*NOTE:*
*If you depress both the accelerator pedal and the brake pedal simultaneously while driving, the engine power or the hybrid system output may be suppressed.*

### Do not Shift the Gearshift Lever into "N" (Neutral) while Driving

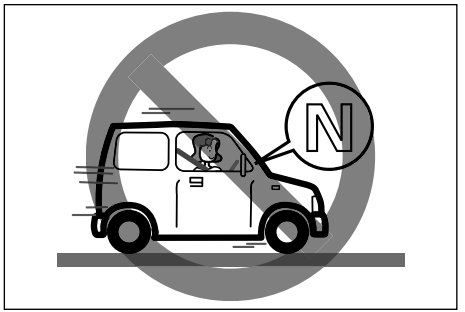


69RHS180

**⚠ CAUTION**

**Do not put the gearshift lever into the "N" (Neutral) position while driving, except in times of emergency, as this disengages engine braking, which could result in an accident.**

*NOTE:*
*Non-usage of vehicle for long duration may cause gradual rusting on brake disc surface as it is made of cast iron. This may result in noise/vibration. The same has no bearing on functioning of the vehicle. Regular driving of vehicle may prevent/remove rust, thus reducing the noise and vibration.*

### What Should You Do in Case of Malfunction or Emergency?

- **Warning light turns on**
  Stop immediately in a safe place and take corrective action.
  For details, refer to "Warning Lights and Indicators" in the "QUICK GUIDE" section or "Warning and indicator messages" in the "INSTRUMENT CLUSTER".
- **You feel strong shock from under the floor**
  Immediately stop in a safe place and check whether there is brake fluid leakage or fuel leakage, and also check whether there is any abnormality in the exhaust pipe, etc. If any abnormality is found, consult a Maruti Suzuki authorized workshop.
- **Sudden tyre puncture**
  Grasp the steering wheel firmly, carefully apply the brake, slowly reduce speed, and stop in a safe place.
- **You feel that the brake pedal is heavy to use**
  Via engine vacuum pressure, the vehicle utilizes a brake booster to reduce the force necessary for depressing the brake pedal. If this engine vacuum pressure decreases, you may feel as if the brakes require more force than usual to depress, but this is not abnormal. Depress the brake pedal as strongly as you need to.
- **Metallic screeching sound is heard from the brakes**
  Promptly consult a Maruti Suzuki authorized workshop. The disk brake pads (Maruti Suzuki genuine parts) are designed to emit a creaking/screeching sound as a function to warn the wear, as they have almost reached usage limit and replacement timing.


**⚠ WARNING**

**The brakes could be losing their ability to function normally, which could result in an accident.**
**If you hear a metallic creaking/ screeching sound, do not continue driving.**

## Use Engine Brake on a Long Downhill Slope

Use engine braking(*) in tandem with regular braking when driving on a long downhill slope. Release the accelerator pedal and shift down according to vehicle speed.


### Manual transmission vehicles

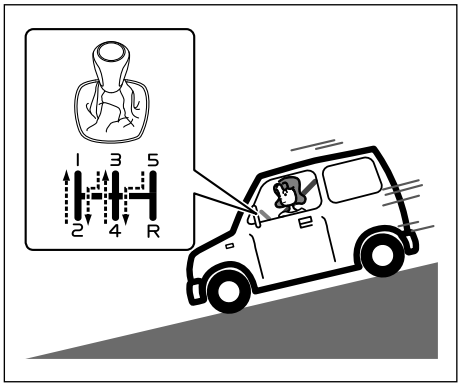


55T060010

For manual transmission vehicle, shift down to a lower gear one by one.


### 6-Speed Automatic transmission vehicles

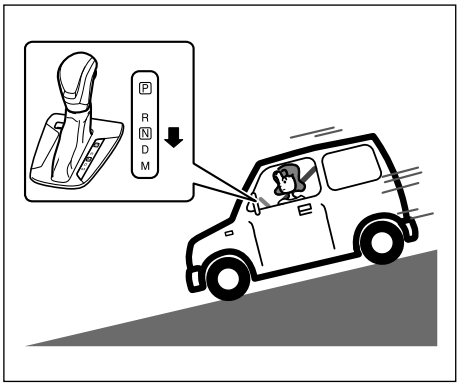


76TS60010

For 6-Speed automatic transmission vehicle, shift the gearshift lever into “M” (manual mode) first. Then, pull “–” side of the shift paddle to shift down to an appropriate gear position.

### e-CVT vehicles

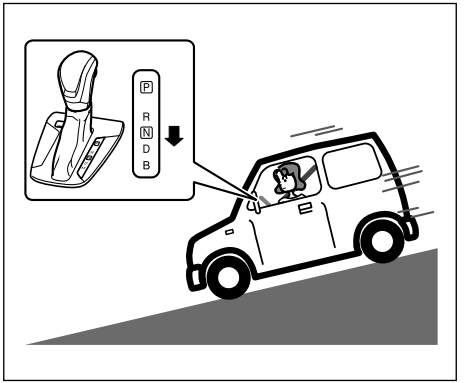


71UM06001


For e-CVT vehicle, shift the gearshift lever into “B”.

*: Engine braking is a braking effect that occurs when you release your foot from the accelerator pedal while driving. The lower the gear, the greater the effect of engine braking becomes.

**⚠ WARNING**

**Continuously depressing the brake pedal could cause the brakes to overheat, possibly rendering them ineffective.**


## When Side Wind Is Strong

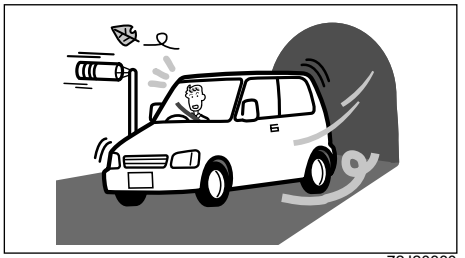

72J20330

At a tunnel exit, on a bridge, or when a large truck passes you, your vehicle might be blown slightly sideways by side wind. Do not panic. Firmly grasp the steering wheel, gradually reduce speed, and regain your intended course.

## Drive Slowly on a Slippery Road Surface

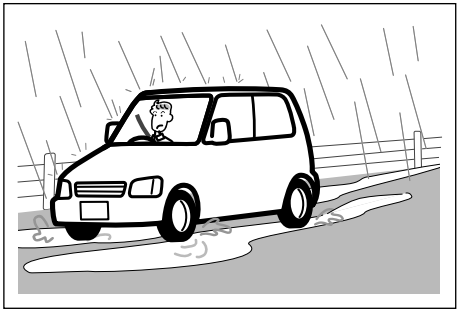


59RN06030

**⚠ CAUTION**

**When driving on wet, icy, or snowy roads, etc., refrain from sudden movements, such as sudden starting, acceleration, braking, turning or abrupt engine braking. Otherwise, there is the danger of an accident due to loss of traction.**

## Do not Drive on Puddles at High Speed

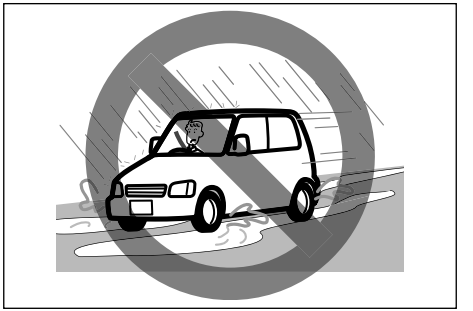


69RHS182

**⚠ CAUTION**

**When driving on puddles or on wet road surfaces at high speed, a thin surface of water is built between the wheels and the road surface, and the wheels may float. This is called as hydroplaning, which leads to a loss of control in the steering wheel and the brakes and possibly results in an accident.**

### Check Brake Effectiveness after Driving on Puddles or Washing a Vehicle

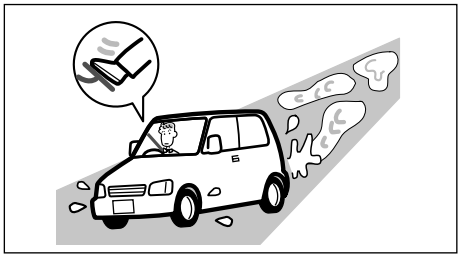

72J20360

- After verifying the safety of the surroundings, depress the brake pedal several times at low speed and check the brake effectiveness.
- If the brake effectiveness is still poor, depress the brake pedal at low speed gently and repeatedly until the brake effectiveness is fully recovered, to dry the brake equipment.

### When Encountering a Flooded Area



61M0075

Avoid driving in a flooded area or a deep puddle. If driving in a flooded area is unavoidable, go slowly in the lowest gear. In case that you have driven in a flooded area, stop the vehicle in a safe and non flooded place while checking the brake effectiveness. Then, ask a Maruti Suzuki authorized workshop to check the following inspection items.

- Function of brake.
- Function of electrical components.
- Changes of oil level and quality for engine, transmission and differential. In case that the oil is turbid whitely, water has been mixed in the oil and an oil change is required.
- Lubricant condition of the bearings, suspension joints, etc.

| *NOTICE* |
| --- |
| **Avoid driving in a flooded area or a deep puddle. It may cause an engine stall, short in electrical components, engine, hybrid system and transmission damages, etc.** |


## Highway Driving

When driving at highway speeds, pay attention to the following:

- Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping point to allow for the extra stopping distance.
- On rainy days, hydroplaning can occur. Hydroplaning is the loss of direct contact between the road surface and the vehicle's tyres due to a water film forming between them. Steering or braking the vehicle during hydroplaning can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.


## Driving on Hills

### Manual transmission vehicles

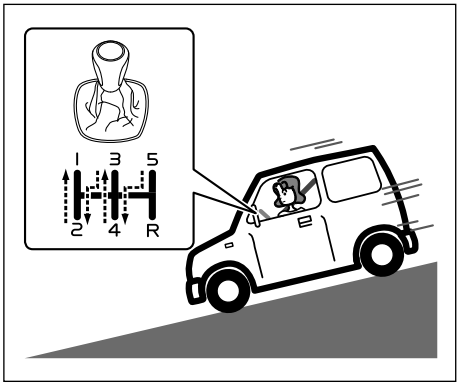



55T060010

### 6-Speed Automatic transmission vehicles

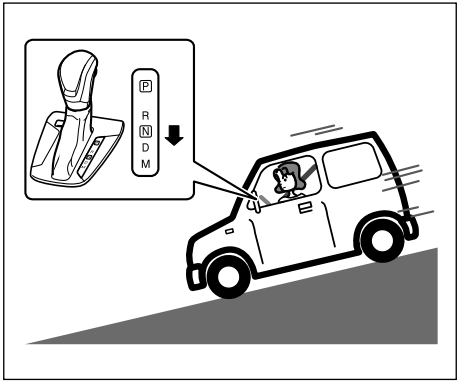


76TS60010

**e-CVT vehicles**

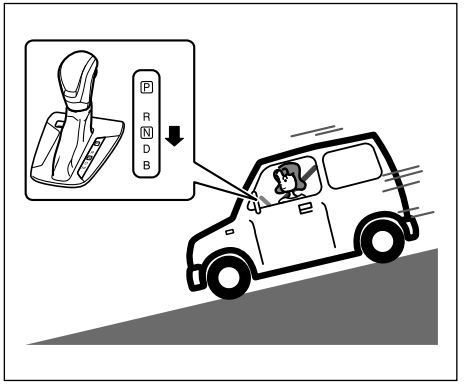


71UM06001

- When driving on steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine or the hybrid system will again be activating in its higher power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine or the hybrid system should be used for braking by shifting to the next lower gear.

**⚠ WARNING**

**Do not hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.**

***NOTICE***

**When descending a downhill, Never turn the ignition key to "LOCK" position or press the engine switch or the power switch to change the ignition mode to LOCK (OFF). Emission control system and automatic transmission damage may result.**

## Off-road Driving

### Do not Drive in the Field Covered with Grown Grass



69RHS181

Do not drive in the field covered with grown grass If you drive in the field covered with grass, it may cause accident or fire or vehicle damage by getting caught in grown grass.

**⚠ WARNING**

**If loose grass, etc. becomes entangled in drive train parts or exhaust pipes, drive train components might become damaged or fire may result.**

## Improving Fuel Economy

*NOTE:*
*Fuel economy (mileage) of the vehicle may vary due to several factors i.e. driving habits- gear change pattern, usage of A.C, Air pressure in the tyres, wind speed, traffic conditions, fuel quality-non adulterated standard fuel, maintenance of vehicle, road conditions, braking etc.*

The following instructions will help you improve fuel economy.

### Keep Tyre Pressures Correct

Under-inflation of the tyres can waste fuel due to increased running resistance of the tyres. Keep your tyres inflated to the correct pressure shown on the label on the driver's side door or the driver's door lock pillar.

### Keep Weight to a Minimum

The heavier the load is, the more fuel the vehicle consumes. Unload any unnecessary luggage or cargo.

### Avoid Excessive idling

If you park your vehicle for more than one minute, stop the engine or the hybrid system and start it again later. When warming up a cold engine or the hybrid system, do not allow the engine to idle, the hybrid system to activate or apply full throttle until the engine or the hybrid system has reached operating temperature. Allow the engine or the hybrid system to warm up by driving.

### Avoid Fast Starts, Rapid Acceleration and Hard Braking

**Avoid fast starts**
Fast starts away from lights or stop signs will consume fuel unnecessarily and shorten engine or the hybrid system life. Start off slowly.

**Avoid unnecessary stops**
Avoid unnecessary deceleration and stopping. Try to maintain a moderate, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.

**Keep a steady cruising speed**
Drive at a constant speed that road and traffic conditions will permit.

### Do not Race the Engine



69RHS060


Revving the engine only consumes extra fuel and has no benefit.

| *NOTICE* |
| --- |
| **Immediately after starting, the engine or the hybrid system is often not yet fully warmed up. Therefore, revving the engine, starting to drive suddenly, or rapid acceleration can cause engine or the hybrid system failure.** |

### Drive with an Appropriate Gear for Vehicle Speed

Running the vehicle at a high engine rotation speed by using a low-speed gear will result in poor fuel economy. Use the correct gear according to the vehicle speed.

### Keep the Air Cleaner Clean

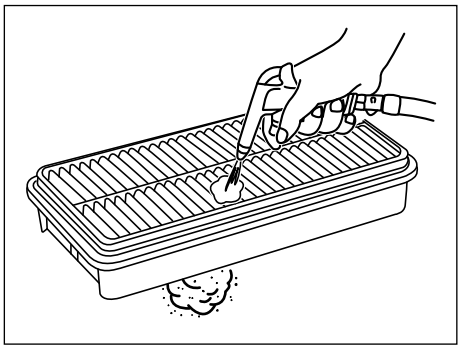

59RN06050

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

## Stuck Vehicle

If your vehicle gets stuck in snow, mud or sand, follow the directions below:


1) Shift the transmission back and forth between a “D” (drive) (or first gear for manual transmission) and reverse. This will create a rocking motion which may give you enough momentum to free the vehicle. Press gently on the accelerator to keep wheel spinning to a minimum wheel rpm. Remove your foot from the accelerator while shifting. Do not race the engine or the hybrid system. Excessive wheel spin will cause the tyres to dig deeper, making it more difficult to free the vehicle.

*NOTE:*
*You may have to turn the ESP® system off in order to allow spinning the wheels.*

2) If your vehicle remains stuck after a few minutes of rocking, we recommend you to consult a Maruti Suzuki authorized workshop or a roadside assistance service. If a towing service is not available in an emergency, your vehicle may be temporarily towed by a towing cable or chain secured to the towing eye either on the front or rear of the vehicle. Refer to “Towing by Using Towing Eye” in the “EMERGENCY SERVICE” section.

**⚠ WARNING**

- **Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h on the speedometer. Personal injury and/or vehicle damage may result from spinning the wheels too fast.**

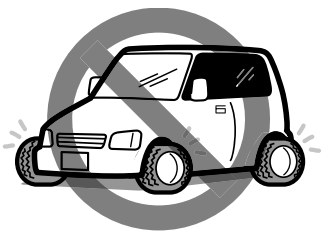

55T060070

- **In addition to following the driving tips in this section, it is important to observe the following precautions.**
  - **Check that your tyres are in good condition and always maintain the specified tyre pressure. Refer to “Tyres” in “INSPECTION AND MAINTENANCE” section for details.**

(Continued)

**⚠ WARNING**

(Continued)

- **Do not use tyres other than those specified by Maruti Suzuki. Never use different sizes or types of tyres on the front and rear wheels. For information regarding the specified tyres, refer to the tyre information label located on the driver's door lock pillar.**
- **Never use oversized tyres or special shock absorbers and springs to raise (jack up) your vehicle. This will change the handling characteristics. Oversized tyres may also rub against the fender over bumps, causing vehicle damage or tyre failure.**
- **After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.**

***NOTICE***

**Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating or transmission damage.**

## Precaution for Handling Vehicle

### Do not Apply Strong Force to Exterior Parts

***NOTICE***

**Do not apply strong force to the body panel, spoiler, front and rear bumper, side skirts, etc. These forces can cause damage to these exterior parts.**

### Be Careful of Uneven Road Surface

***NOTICE***

**In the following cases, the bumper or the lower part of the vehicle could get damaged. Ensure proper care.**

- **Entering the areas where there is uneven road surface, such as road shoulder.**
- **Driving on roads with grooves, bumps or potholes.**

### Do not Modify Your Vehicle Illegally



69RHS184

**⚠ WARNING**

- **If you modify your vehicle illegally, there is a danger of a fire or an accident. Illegal modifications might adversely affect handling, performance or durability. Also, this could even violate laws and ordinances.**
  **Do not install unsuitable parts to your vehicle or do not make your own adjustments or wiring.**
- **Do not install unsuitable parts to your vehicle or do not make your own adjustment or wiring . such modifications also affect advanced safety equipment such as the SUZUKI SAFETY SUPPORT, and there is a danger that it may not operate properly or may operate in situations where it should not.**

(Continued)

**⚠ WARNING**

(Continued)

- **Do not use wheels or wheel nuts other than specified Maruti Suzuki genuine products. Doing so could lead to accidents, such as nuts loosening and the wheel coming off while driving. Also, fuel consumption and driving stability could worsen, or it could result in other malfunctions.**

***NOTICE***

- **When installing or removing electrical equipment such as radio equipment, navigation, audio equipment or electronic toll control equipment, consult a Maruti Suzuki authorized workshop. Also, do not operate electrical equipment directly from the battery terminals or connect ground wires directly. Otherwise, there is a danger of hindering the functioning of electronic components, causing fire, malfunction, battery runout, etc.**

(Continued)

***NOTICE***

(Continued)

- **Only a troubleshooting device designed for inspection and maintenance for this model can be connected to the vehicle's onboard diagnostics system. Connecting a device other than that specified could hinder the functioning of electronic components and cause battery runout, etc.**

### Risk of installing electrical equipment other than specified Maruti Suzuki genuine products

***NOTICE***

**Installing electrical equipment other than specified Maruti Suzuki genuine products may cause other electrical equipment to malfunction, lead to serious failure or leakage of personal information. Maruti Suzuki will not be responsible for any failure or damage caused by the installation of electrical equipment other than specified Maruti Suzuki genuine products.**


### When Installing, Removing and Repairing Parts

**⚠ WARNING**

**The SRS airbag system and the seat belt pretensioner system could activate unexpectedly or could be rendered ineffective if the parts that affect their functions are adjusted or arranged. In the following cases, these systems will be adversely affected. Consult a Maruti Suzuki authorized workshop beforehand.**

- **When removing the steering wheel and conducting repairs around the steering wheel, etc.**
- **When conducting repairs around the center console, around the instrument cluster, under the front seats or to electrical wiring**
- **When installing audio equipment, etc.**
- **When conducting sheet metal painting or repairs around the dashboard**
- **When replacing the front seats or conducting repairs around the seats**
- **Repairs around the front pillar, the back pillar or the roof side**
- **When conducting repairs around the center pillar**

### Be Careful When Placing Accessories

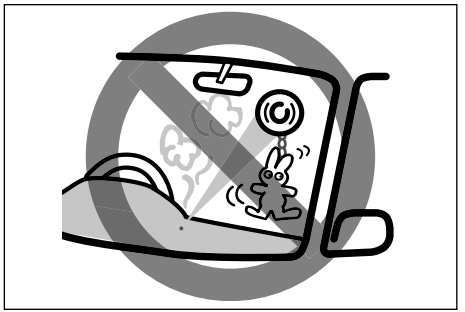

69RHS185

**⚠ WARNING**

**Do not attach accessories to the window glasses. Accessories and suction cups could hinder vision, or a suction cup could act as a lens and cause a fire. Also, if an airbag is activated, such accessories could be ejected outward within the vehicle, possibly resulting in injury.**

### When Spilling Drinks or Liquids

**⚠ WARNING**

**Do not allow liquids to spill, splash or spray inside the vehicle. The following items could malfunction, or fire could result. In the case of spilling drinks, etc., promptly consult a Maruti Suzuki authorized workshop.**


- **SRS airbag system**
- **Audio equipment**
- **Electrical parts such as switches and wiring**
- **Movable parts such as the gearshift lever or seat belt buckles**

***NOTICE***

**The sensor of the seat belt reminder is built into the front passenger's seat cushion.**
**If you spill liquid such as soft drinks or juice, the sensor of the seat belt reminder may be damaged.**
**If you spill any liquid on the seat cushion, immediately wipe it with a soft cloth.**

### When Replacing Engine Oil

**Replace engine oil regularly**

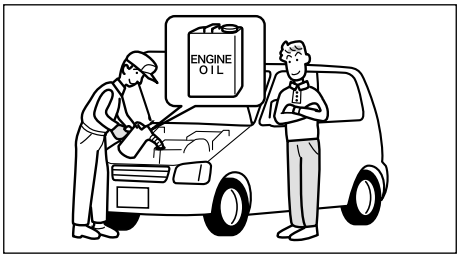


54M3143

- If the vehicle is normally used, replace the engine oil and filter every 10,000 km or every 12 months, whichever is earlier.
- When the vehicle is used under severe driving conditions, the engine oil and filter replacement is required earlier than the case that the vehicle is normally used.

***NOTICE***

**Observe the periods designed for the engine oil and filter replacement. Degraded oil or clogged filters can cause engine malfunction or abnormal noise. For replacement, consult a Maruti Suzuki authorized workshop.**

**Specification and viscosity of engine oil**
As performance factors such as fuel consumption depend on the engine oil used, use oil that satisfies the specifications in the following Table 1 and Table 2. Using Maruti Suzuki genuine oil is recommended.

**Table 1**


| Specification | | Oil quality |
|---|---|---|
| API(*1) / ILSAC(*2) | SP / GF-6 |  |
| | SN / GF-5 | |
| | SM / GF-4 | |
| | SL / GF-3 | |

**Table 2**
**For K15C engine - For India**

| Specification | All vehicles |
|---|---|
| Viscosity: SAE(*3) | 0W-16 |

**For K15C engine - Except for India**

| Specification | All vehicles |
|---|---|
| Viscosity: SAE(*3) | 0W-16, 0W-20, 5W-30 |

**For M15D engine**

| Specification | All vehicles |
|---|---|
| Viscosity: API(*1) SN, SN PLUS, SP or ILSAC(*2) GF-6B | 0W-16 |
| Viscosity: API(*1) SL, SM, SN, SN PLUS, SP or ILSAC(*2) GF-6A | 0W-20, 5W-30, 10W-30 |

*1: The API standard is determined by the American Petroleum Institute and represents the quality grade of engine oil.
*2: The ILSAC standard is an engine oil standard for automobiles, established by the International Lubricant Specification Advisory Committee, and is based on the API standard while indicating even higher performance specifications such as for fuel conservation and durability.
*3: SAE viscosity is a standard that determines the viscosity of lubricating oil. The number on the left side (the number with a “W”) means the viscosity at low temperature. The smaller this figure is, the stronger the oil resistance to coldness is and the better the engine start capability is. The number on the right side means the viscosity at high temperature. The larger this figure is, the stronger the oil resistance to heat is and the better the engine protection performance is.


## Running-in

***NOTICE***

**The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the first 960 km of vehicle operation.**

- **After starting, do not race the engine. Warm it up gradually.**
- **Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.**
- **Start off from a stop slowly. Avoid full throttle starts.**
- **Avoid hard braking, especially during the first 320 km of driving.**
- **Do not drive slowly with the transmission in a high gear.**
- **Drive the vehicle at moderate engine speeds.**
- **Do not tow a trailer during the first 960 km of vehicle operation.**

## Catalytic Converter

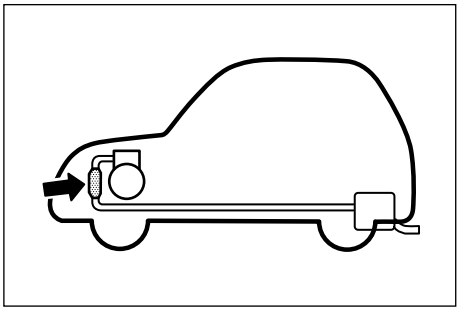

80G106

The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However, it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalytic converter. This may result in permanent heat damage to the catalytic converter and other vehicle components.

***NOTICE***

**To minimize the possibility of catalytic converter or other vehicle damage:**

- **Maintain the engine in the proper operating condition.**
- **In the event of an engine malfunction, particularly one involving engine misfire or other apparent loss of performance, have the vehicle serviced promptly.**
- **Do not turn off the engine or interrupt the ignition when the transmission is in gear and the vehicle is in motion.**
- **Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.**
- **Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.**
- **Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.**
- **Do not allow the fuel tank to get near the empty level.**



59RN06060

**⚠ WARNING**

**Be careful where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.**

## When Driving Hybrid Vehicle

For economical and ecological driving, pay attention to the following points:

### Shift lever operation


Shift the shift lever to D when stopped at a traffic light, or driving in heavy traffic etc.
Shift the shift lever to P when parking.
When using the N, there is no positive effect on fuel consumption.
In the N, the gasoline engine operates but electricity cannot be generated.
Also, when using the air conditioning system, etc., the hybrid battery (traction battery) power is consumed.

### Accelerator pedal/brake pedal operation

- Drive your vehicle smoothly. Avoid abrupt acceleration and deceleration. Gradual acceleration and deceleration will make more effective use of the electric motor (traction motor) without having to use gasoline engine power.
- Avoid repeated acceleration. Repeated acceleration consumes hybrid battery (traction battery) power, resulting in poor fuel consumption. Battery power can be restored by driving with the accelerator pedal slightly released.

### Warming up before driving

Since the gasoline engine starts up and cuts out automatically when cold, warming up the engine is unnecessary. Moreover, frequently driving short distances will cause the engine to repeatedly warm up, which can lead to excess fuel consumption.

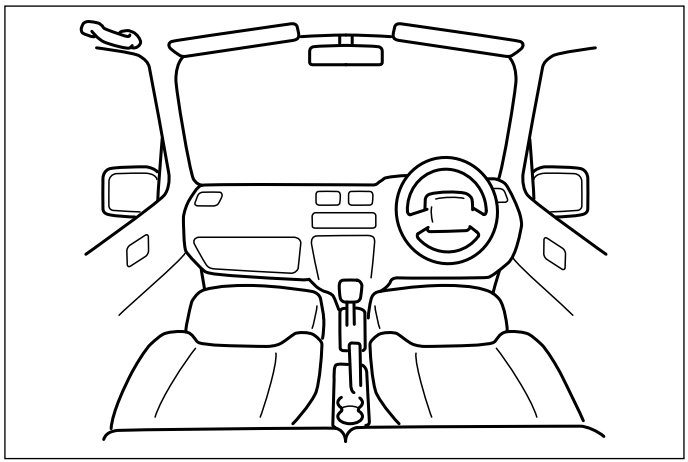

60G407

# OTHER CONTROLS AND EQUIPMENT


Fuel Filler Opening ..... 7-1
Refueling ..... 7-2
Hood ..... 7-4
Sun Visor ..... 7-6
Interior Light ..... 7-7
Accessory Socket ..... 7-13
Drink Holder ..... 7-14
Storage Area ..... 7-16
Sunroof (if equipped) ..... 7-18
Assist Grips ..... 7-23
Overhead Console (if equipped) ..... 7-24
Footrest ..... 7-25
Door Pocket ..... 7-25
USB Socket (if equipped) ..... 7-26
USB Charging Socket (if equipped) ..... 7-26
Wireless Charger (if equipped) ..... 7-27
Front Seatback Pocket (if equipped) ..... 7-32
Luggage Compartment Hook ..... 7-32
Luggage Compartment Cover (if equipped) ..... 7-32
Luggage Compartment Board ..... 7-33
Roof Rails (if equipped) ..... 7-34
Heating and Air Conditioning System ..... 7-36
Automatic Heating and Air Conditioning System (Climate Control) ..... 7-38
Ventilated Seats (if equipped) ..... 7-46
Radio Antenna ..... 7-47
Installation of Radio Frequency Transmitters ..... 7-48
Audio Function ..... 7-48
Remote Audio Controls (if equipped) ..... 7-48
Suzuki Connect (if equipped) ..... 7-50

## Fuel Filler Opening


Make sure to read “Refueling” in this section.

**⚠ WARNING**

**Be sure to observe the following points when refueling. Otherwise, gasoline may catch a fire from fuel and it may cause a fire.**

- **Always stop the engine first.**
- **Close all the doors and windows when refueling.**
- **As gasoline is highly flammable, open sparks such as lit cigarettes are strictly prohibited.**


### Fuel Filler Door

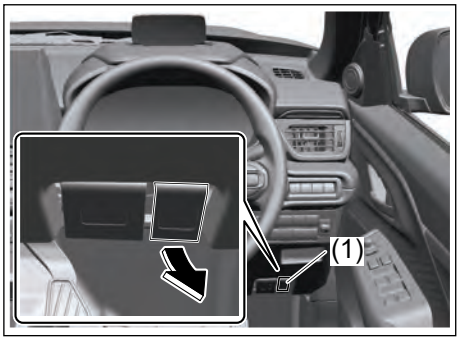


71UM07001


A fuel filler door is located on the left rear side of the vehicle. The fuel filler door can be unlocked by pulling up the opener lever (1) located on the outboard lower side of the driver’s seat and locked by simply closing the door.

### Fuel Filler Cap

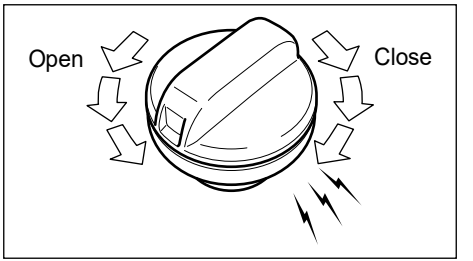


57L51093

- To open the fuel filler cap, turn it counterclockwise.
- To close the fuel filler cap, turn it clockwise until you hear more than 2 clicks.

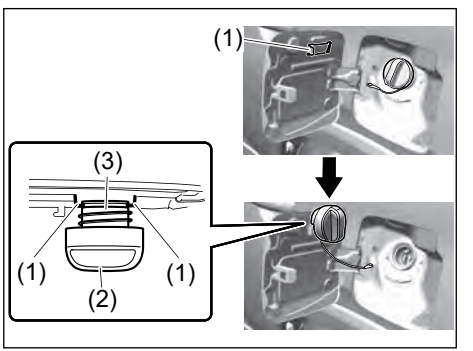


76TS70050

*NOTE:*
*The cap holder (1) holds the fuel filler cap (2) by hooking the groove (3) when refueling.*

**⚠ WARNING**

- **If you open the fuel filler cap suddenly, fuel may be under pressure and may spray out. Loosen the fuel filler cap slowly. After air deflating sound stops, open the fuel filler cap.**
- **If fuel spills out, an accident such as a fire may occur. Also, if you leave spilled fuel as it is, it may cause paint staining, discoloration or cracking. Be careful not to spill out fuel. If you spill it out, wipe it off with a soft cloth.**
- **If the fuel filler cap is not closed securely, it may cause fuel leakage or a fire. After refueling, close the fuel filler cap until you hear more than 2 clicks.**
- **If you use the fuel cap other than a genuine Maruti Suzuki cap, it may cause fuel leakage. Do not use the fuel cap other than a genuine Maruti Suzuki cap.**

## Refueling

### Watch Out for Fire



69RHS186

**⚠ WARNING**

**Be sure to observe the following points when refueling. Otherwise, gasoline may catch a fire from fuel and it may cause a fire.**

- **Always stop the engine first.**
- **Close all the doors and windows when refueling.**
- **As gasoline is highly flammable, open sparks such as lit cigarettes are strictly prohibited.**

### When Refueling at a Self-service Gas Station

**⚠ WARNING**

**When refueling at a self-service gas station, be sure to observe the following points.**

- **If substantial static electricity is accumulated within your body, a spark could ignite fuel vapors and possibly cause burns. Before opening the fuel filler cap, discharge any static electricity* that might have accumulated in your body, by touching a metal part of the vehicle body or the gas pump machine. In addition, do not re-enter the vehicle while refueling, as static electricity could be charged to your body again.**
- **Do not allow others who have not discharged their static electricity to come close to the fuel filler opening.**

***Take special care when air is dry, as this can cause your body to become charged with static electricity more easily. In addition, wearing layers of clothing can generate static electricity due to the friction of the fibers.**

(Continued)


**⚠ WARNING**

(Continued)
- **If you open the fuel filler cap suddenly, fuel may be under pressure and may spray out. Loosen the fuel filler cap slowly. After air deflating sound stops, open the fuel filler cap.**
- **If you do not insert the fuel filler nozzle securely into the fuel filler opening, fuel may spill out. Insert the fuel filler nozzle securely into the fuel filler opening until it stops.**
- **Pull the gas pump filler nozzle lever until it stops.**

(Continued)

**⚠ WARNING**

(Continued)

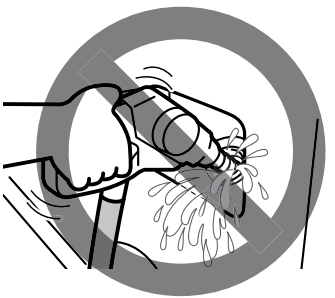

69RHS070

- **If you continue to refuel after the automatic stop to top up the tank, fuel could overflow. When the automatic stop function* of gas pump filler nozzle is activated, stop refueling.**

  ***Depending on the type of gas pump machine being used, the automatic stop function could activate early and refueling might not be possible. Please follow the instructions of the employees at the gas station.**

(Continued)

**⚠ WARNING**

(Continued)
- **If fuel spills out, an accident such as a fire may occur. Also, if you leave spilled fuel as it is, it may cause paint staining, discoloration or cracking. Be careful not to spill out fuel. If you spill it out, wipe it off with a soft cloth.**
- **If the fuel filler cap is not closed securely, it may cause fuel leakage or a fire. After refueling, return the fuel filler nozzle to its original position and close the fuel filler cap until you hear more than 2 clicks.**
- **Fuel contains substances harmful to the human body. Do not breathe in vaporized fuel.**
- **In addition, be sure to observe all the warnings posted at the gas station.**

## Use Unleaded Gasoline Only

***NOTICE***

**Using leaded gasoline, low-quality gasoline or other types of fuel (such as alcohol and diesel oil) can cause harmful effects to the engine and fuel delivery system.**
**Do not use fuel other than unleaded gasoline.**

## Hood


**⚠ WARNING**

- **As the hood is heavy, if a child tries to open or close it, the child may get injured. Do not allow a child to open or close the hood.**
- **As the engine compartment becomes hot, it may cause burns. When opening the hood, do not allow a child to come close to the hood.**
- **If you leave any tool or cloth in the engine compartment, it may cause a malfunction. Also, as the engine compartment becomes hot, it may result in vehicle fire. Do not leave any tool or cloth for inspection or cleaning in the engine compartment.**

**⚠ CAUTION**

**If you come close to a running drive belt or a cooling fan (radiator fan), hands, hair, clothing, etc. may be caught and you may get injured. When the engine is running, keep away from the drive belt or the cooling fan (radiator fan).**

### Opening the Hood

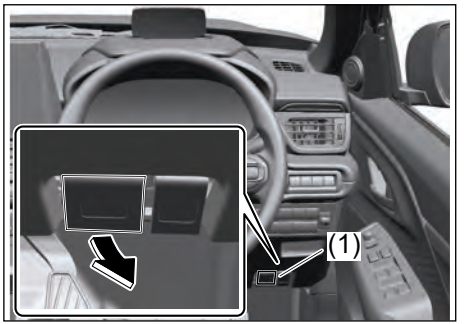



71UM07002

1) Pull up the hood release lever (1) located under the driver's side instrument panel in the outboard position. This will disengage the hood lock halfway.

***NOTICE***

**In snow regions, snow may get trapped inside the hood latch, due to which the hood open-close indicator warning light may be slow in its response when the hood is opened.**
**In this situation, wait for few minutes and then check the indicator warning.**

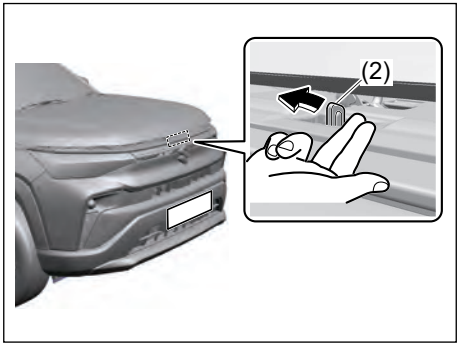


71UM07003


2) Push the under-hood release lever (2) sideways with your finger, as shown in the illustration. While pushing the lever, lift up the hood.

**⚠ CAUTION**

**The under-hood release lever can be hot enough to burn your finger while the engine is running or right after the engine stopped.**
**If you try to open the hood while the engine is running or right after the engine stopped, touch the under-hood release lever after it becomes cool enough.**

**NOTICE**

**If you lift up the hood with the wiper arms raised, the wiper arms and the hood may get damaged.**
**Do not lift up the hood with the wiper arms raised.**

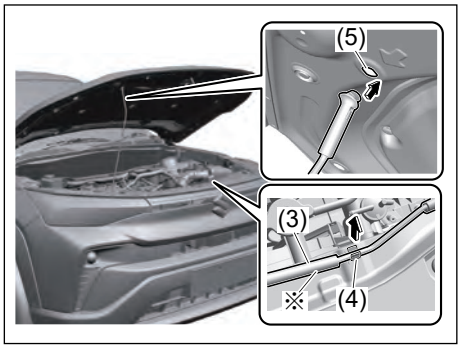


71UM07005


3) While holding the hood, pull the prop rod (3) out from the holding clip (4), and then insert the end of the rod into the designated hole (5).

**⚠ CAUTION**

- **The prop rod can be hot enough to burn your finger while the engine is running or right after the engine stopped. If you would like to use the prop rod while the engine is running or right after the engine stopped, touch the prop rod after it becomes cool enough.**
- **If the prop rod slips out, you may get caught in the closing hood. Insert the end of the prop rod into the hole securely.**
- **The prop rod may slip out when the hood is blown by wind. If this occurs, you may get caught in the closing hood. Be very careful when you open the hood on a windy day.**

*NOTE:*
*When you pull out the prop rod from the holding clip, hold the ※ part.*

## Closing the Hood

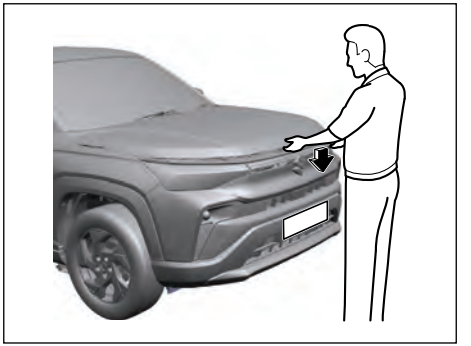

71UM07004

1) Lift up the hood slightly and remove the prop rod from the hole. Put the prop rod back into the holding clip.

2) Lower the hood to about 20 cm above the hood latch, and then let it drop down. Check that the hood is securely latched after closing.


**⚠ WARNING**

**If the hood is not fully closed, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident. Check that the hood is fully closed and latched before driving.**

**⚠ CAUTION**

**When closing the hood, the occupant's body such as hands may get caught in the hood and get injured. Also, pushing on the hood from the top may damage it.**
**When closing the hood, check that no part of the occupant's body such as hands is in the path of the hood.**

## Sun Visor

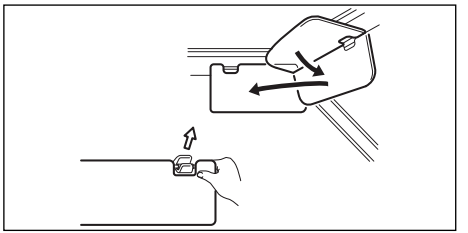


79J161

The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.


***NOTICE***

**When unhooking and hooking a sun visor, be sure to handle it by the hard plastic parts or the sun visor can be damaged.**

## Card Holder (if equipped)

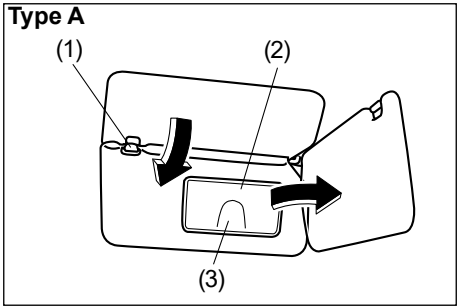


72M2058

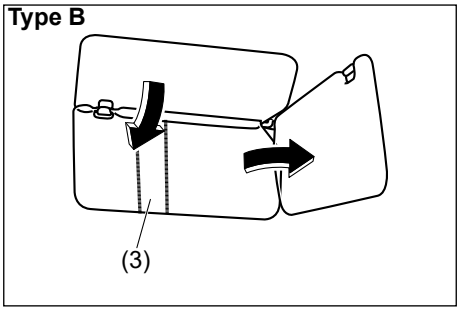


71UM07069


(1) Hook
(2) Mirror cover
(3) Card holder

You can put a card in the card holder (3) on the back of the sun visor.

***NOTICE***

**If you park your vehicle outdoors in direct sunlight in hot weather, the inside of the vehicle will become hot. The heat may distort or crack a card. When you park your vehicle outdoors in direct sunlight or in hot weather, do not leave plastic cards in the card holder.**

### Vanity Mirror (if equipped)

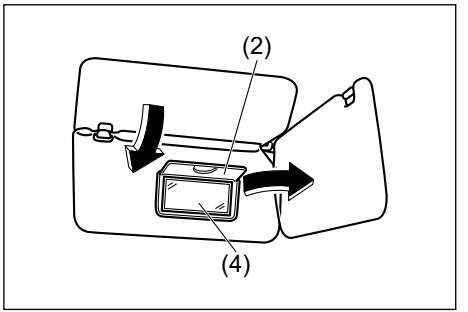


71UM07068


(4) Vanity mirror

To use the vanity mirror (4) on the back of the sun visor, pull up the mirror cover (2).

**⚠ WARNING**


- **If you use the vanity mirror while driving, you may lose control of the vehicle, resulting in an accident. Do not use the vanity mirror while driving.**
- **Do not place any object on the location where an airbag is stored or come close to the location where airbag is stored, when using a vanity mirror. Doing so may cause the airbag to deploy and cause serious injury due to the impact of airbag.**

## Interior Light

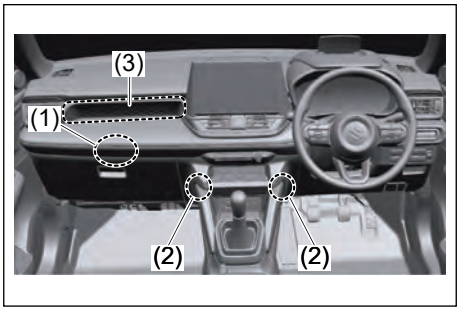


71UM07006

(1) Glove box light (if equipped)
(2) Footwell lights (if equipped)
(3) Instrument panel assistant ornament ambient light (if equipped)

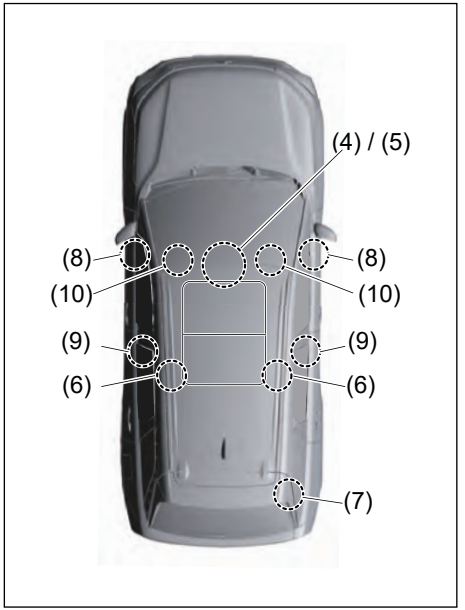



71UM07007

(4) Front (without overhead console)
(5) Front (with overhead console)
(6) Center
(7) Luggage compartment (if equipped)
(8) Front door ambient light (if equipped)
(9) Rear door ambient light (if equipped)
(10) Vanity mirror light (if equipped)

## Glove Box Light (if equipped) (1)

Refer to “Glove box” in this section.

## Footwell Lights (if equipped) (2)

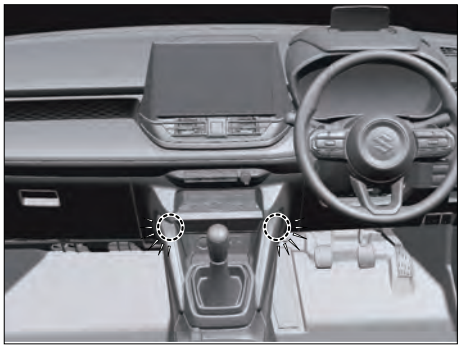

71UM07008

A footwell light is provided in the leg space in front of each front seat. The light comes on when the door is opened. After closing all doors, the light will remain on for about 15 seconds and then fade out. If you press the engine switch / the power switch to change the ignition mode to ACC or ON during this time, the light will start to fade out immediately. After you press the engine switch / the power switch to change the ignition mode to LOCK (OFF), the light will turn on for about 15 seconds and then fade out.

*NOTE:*
*When the ignition mode is LOCK (OFF) and if you leave any door open, the light will automatically turn off after about 15 minutes to prevent from discharging the lead-acid battery.*

## Instrument Panel Assistant Ornament Ambient Light (if equipped)(3)



71UM07009


An Instrument panel assistant ornament ambient light is provided for illuminating the design patterns on panel on front passenger's seat side.

When you unlock the door, the light will come on for 15 seconds.
When you open the door, the light will remain on for 15 minutes.
With the ignition mode "LOCK" (OFF), if you close the door, the light will turn on for 15 seconds and then fade out.

The Instrument panel assistant ornament ambient light will come on with 100% brightness when all doors are closed, the ignition mode is ON and the exterior lights turn off.
The brightness of the Instrument panel assistant ornament ambient light can be adjusted when all doors are closed, the ignition mode is ON and the exterior lights come on.
When the ignition mode is ON, you can turn Off/On, change the color and brightness of the Instrument panel assistant ornament ambient light.

*NOTE:*
- *You can change the Instrument panel assistant ornament ambient light operation in the Ambient lighting settings screen on the Infotainment/Head Unit.*
  *For more details, refer to the manual of the Infotainment/Head Unit.*
- *When the ignition mode is LOCK (OFF) and if you leave any door open, the light will automatically turn off after about 15 minutes to prevent from discharging the lead-acid battery.*


### Front (without Overhead Console) (4)

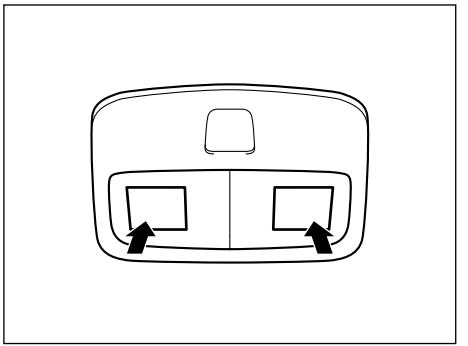

61MM0A205


Push the switch to turn on the light and push it again to turn off the light.

### Front (with Overhead Console) (5)

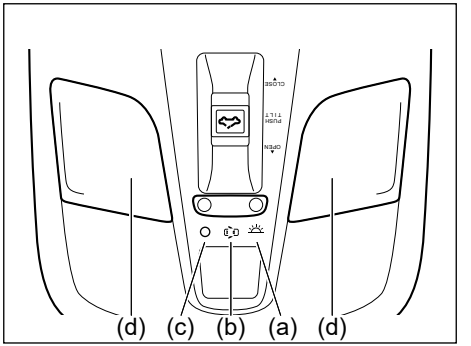


76TS70720

### Center (6)

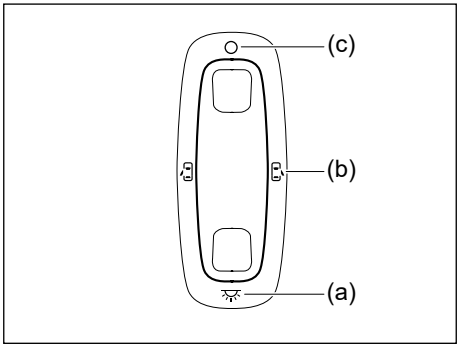


76TS70730

These light switches have three or four positions which function as described below:

**ON (a)**
The light comes on and stays on regardless of whether the door is open or closed.

*NOTE:*
- *The light will turn off after a period of time when the light remains illuminated to prevent the lead-acid battery from discharging.*
- *The light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:*
  - *The ignition mode is LOCK (OFF).*
  - *The hazard warning lights, the position lights and the headlights are off.*
  - *15 minutes passed after the light is turned on.*

- *For a short while after pressing the engine switch / the power switch to change the ignition mode to LOCK (OFF), there is an occasion that the light will not turn on even if the light switch is turned on. This is also a normal light control to prevent the lead-acid battery from discharging.*
- *For the vehicle with hybrid system: To prevent 12-volt battery discharge, do not leave the lights on longer than necessary when the hybrid system is off.*


**DOOR (b)**
The light comes on when the door is opened. After closing all doors, the light will remain on for about 15 seconds and then fade out. If you press the engine switch / the power switch to change the ignition mode to ACC or ON during this time, the light will start to fade out immediately. After you press the engine switch / the power switch to change the ignition mode to LOCK (OFF), the light will turn on for about 15 seconds and then fade out.

*NOTE:*
*When the ignition mode is LOCK (OFF) and if you leave any door open, the light will automatically turn off after about 15 minutes to prevent from discharging the lead-acid battery.*

**OFF (c)**
The light remains off even when the door is opened.


**Spot light (d)**
When the light switch is in “DOOR” or “OFF” position, push the switch to turn on the light and push it again to turn off the light.

## Luggage Compartment Light (if equipped) (7)

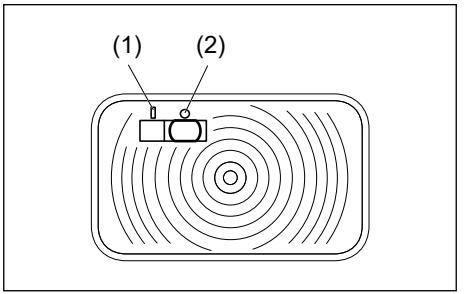

68PM00510

When you open the tailgate with the luggage compartment light switch in the “ON” position (1), the light comes on for about 15 minutes.
When the luggage compartment light switch is in the “OFF” position (2), the light remains off regardless of whether the tailgate is open or close.

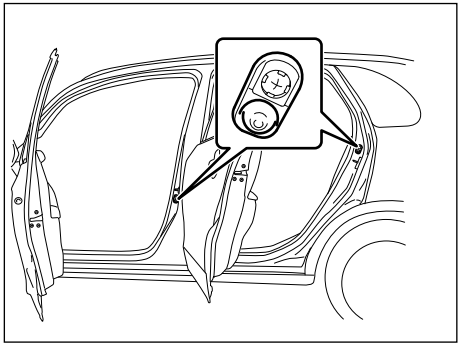

68PM00511

*NOTE:*
*The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber protrusion) at the door opening as shown, the door is involved in the lighting operation. The tailgate is also involved in this operation even without the rubber protrusion.*

## Front / Rear Door Ambient Light (if equipped) (8) (9)

**Front (Driver's seat side)**




71UM07010

**Front (Passenger's seat side)**



71UM07011

**Rear**

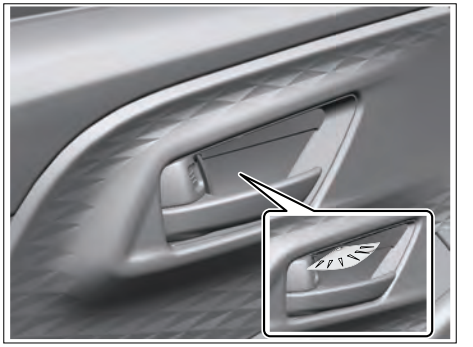

71UM07012

A door ambient light is provided for illuminating the door handle inside the vehicle.

When you unlock the door, the light will come on for 15 seconds.
When you open the door, the light will remain on for 15 minutes.
With the ignition mode "LOCK" (OFF), if you close the door, the light will turn on for 15 seconds and then fade out.


The door ambient light will come on with 100% brightness when all doors are closed, the ignition mode is ON and the exterior lights turn off.

The brightness of the door ambient light can be adjusted when all doors are closed, the ignition mode is ON and the exterior lights come on.

When the ignition mode is ON, you can turn Off/On, change the color and brightness of the door ambient light.

*NOTE:*
*You can change the door ambient light operation in the ambient light settings screen on the Infotainment/Head Unit.*
*For more details, refer to the manual of the Infotainment/Head Unit.*

## Vanity Mirror Light (10) (if equipped)

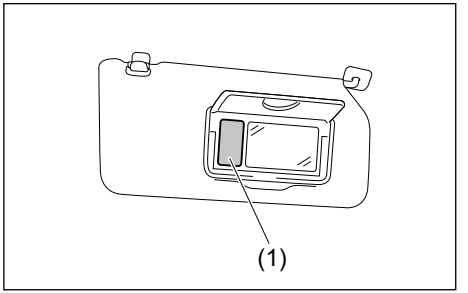


55T070040

The vanity mirror light (1) comes on when the mirror cover is opened.

*NOTE:*
*For the vehicle with hybrid system: To prevent the 12-volt battery from being discharged, do not leave the vanity mirror lights on for extended periods while the hybrid system is off.*

## Courtesy Lights (if equipped)




71UM07060

Each front door has a courtesy light on its inside bottom. It lights automatically when the door is opened.

*NOTE:*
*If you leave any door open, the light will automatically be turned off after about 15 minutes to prevent the battery from discharging.*


## Accessory Socket

### Center Console

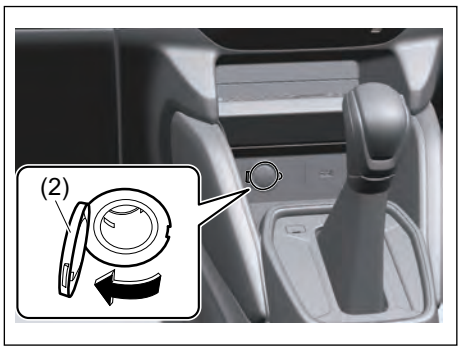



71UM07013

### Luggage Compartment

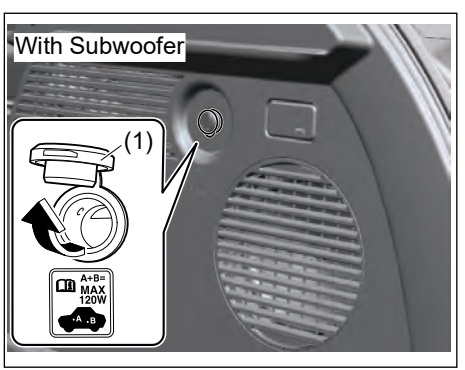


71UM07014

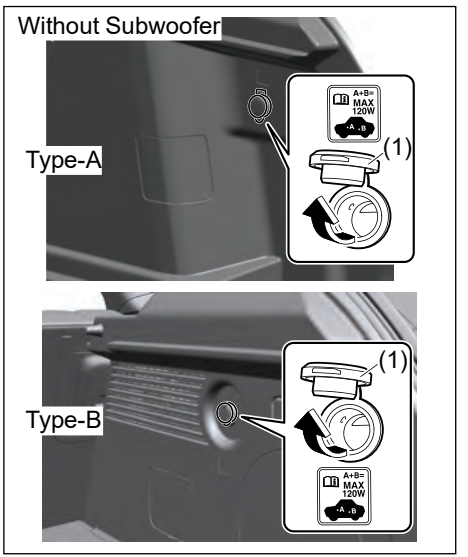


71UM07062

The accessory socket will work when the engine switch or the power switch is in ACC or ON mode.
While using the accessory socket, open the rubber cap (1) / plastic cap(2).

**⚠ WARNING**

**When the accessory socket is not in use, close the cap. If any foreign material enters the accessory socket, it may cause a malfunction or short circuit.**

***NOTICE***


- **To prevent the fuse from being blown, when using sockets at the same time, do not exceed the total combined power capacity of 12 volt / 120 watt / 10 ampere.**
- **Use of inappropriate electrical accessories can cause damage to your vehicle's electrical system. Check that any electrical accessories you use are designed to plug into this type of socket.**
- **Check that the cap remains on the socket when the socket is not in use.**
- **When the ignition mode is LOCK (OFF) during using the accessory socket, the following accidents may occur;**
  - **– the audio or navigation system does not turn off.**
  - **– the keyless entry system does not work, etc.**

  **If they occur, disconnect the item from the accessory socket and check whether the electrical equipments work properly.**
- **If the problem persists, ask your Maruti Suzuki authorized workshop to have the system inspected.**

*NOTE:*
*For the vehicle with hybrid system:*
- *When stopping the hybrid system, disconnect electrical devices with charging functions, such as mobile battery packs. If such devices are left connected, the hybrid system may not stop normally.*
- *To prevent 12-volt battery discharged, do not use the accessory socket longer than necessary when the hybrid system is off.*

## Drink Holder


### Floor Console

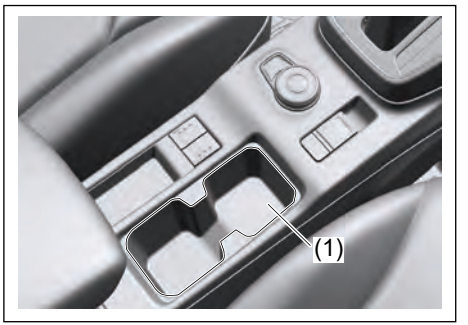


71UM07015

(1) Floor console drink holder

### Rear Seat Armrest (if equipped)

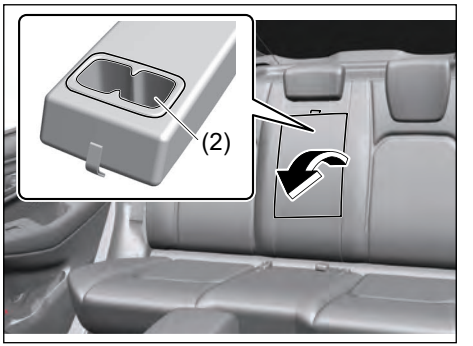


71UM07017

(2) Rear seat armrest drink holder

The rear armrest is stowed in the center of the seatback. Tilt it down forward to use.

**⚠ WARNING**


- **If the seat belt is obstructed by any part of the armrest when fastened, it cannot provide the intended protection. After fastening the seat belt, always check that the armrest is not interfering with the belt.**
- **In an accident or sudden stop, the rear armrest could fall forward. If there is a child in a rearward facing child restraint in the rear center seating position, the falling armrest could injure the child. Do not install a rearward facing child restraint in the rear center seating position.**

**NOTICE**

**To avoid damage to the armrest, do not lean on it or allow a child to sit on it.**


## Door

### Front

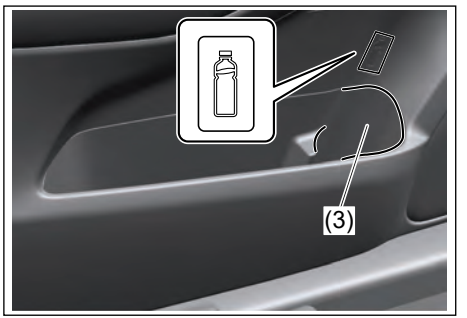


71UM07016

### Rear

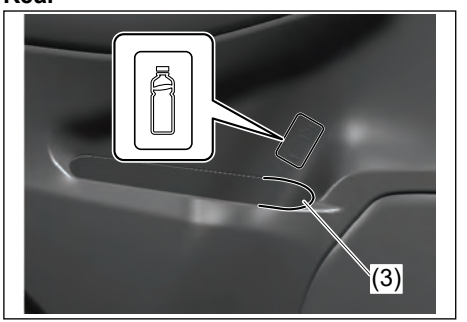


71UM07018

(3) Bottle holder


*NOTE:*
- *Maruti Suzuki recommends to use maximum 1 liter capacity of bottle.*
- *You should only place a bottle with a cap in the holder.*

**⚠ WARNING**

- **Be careful and use a lid for a drink not to spill out liquid. Spilling out hot liquid can cause burn injury. In addition, if liquid spills out on the following parts, it may cause a fire or a malfunction and an airbag system may not work properly.**
  - **– Navigation system, audio system or the relevant switches**
  - **– Wiring or electrical components under the floor**
  - **– Moving part of the gearshift lever or the seatbelt buckle**
- **The lithium-ion battery is located under the front left side seat. Spilling liquids on the lithium-ion battery in models equipped with SHVS may cause a fire or electric shock or damage to the battery.**
- **If you place a long drink container, sharp-edged, hard or breakable objects in the drink holders, these objects may be thrown out, resulting in personal injury and hindering your view. In the driver's side drink holder or the front passenger's side drink holder, you can place a can, a cup or a plastic bottle.**
- **Do not place a long drink container in the driver's side drink holder. The container may hinder your view, resulting in an accident.**

*NOTE:*
- *If you place the keyless remote controller in a drink holder or a bottle holder, it may not be detected.*
- *If you spill or drop liquid accidentally, have your vehicle inspected by a Maruti Suzuki authorized workshop.*

## Storage Area

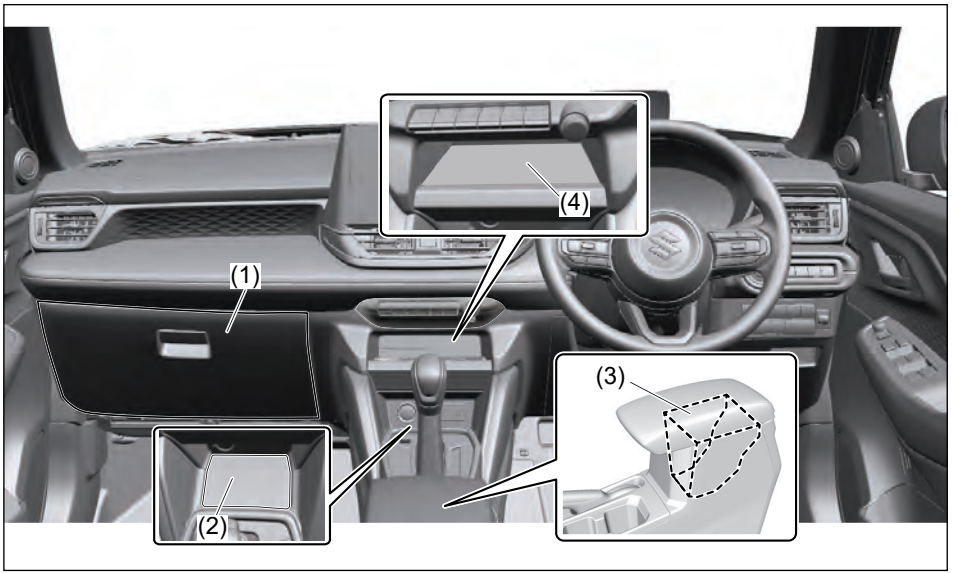


71UM07019

(1) Glove box
(2) Floor console tray (if equipped)
(3) Front armrest with console box
(4) Utility Pocket (if equipped)

- Each item in the figure is a typical example; the actual equipment depends on the vehicle type.

**⚠ WARNING**

- **If any object gets caught in the brake pedal or the accelerator pedal, you may not operate the pedal properly, resulting in an accident. If you use a storage area without a lid, do not place the object which may fall out while driving.**
- **If there is any object within the area where the front passenger's airbag could inflate, the object may be thrown out or the front passenger's airbag may not inflate properly. Do not place a big object on the instrument panel tray.**


**⚠ CAUTION**

**If you use a storage area with a lid, do not drive the vehicle with the lid open. In acceleration, a sudden braking or an collision, your body may be hit by the lid or the object which falls out from the storage area.**

*NOTE:*
*If you place the keyless remote controller in any of storage areas, it may not be detected.*

## Using Storage Area with a Lid

### Glove box

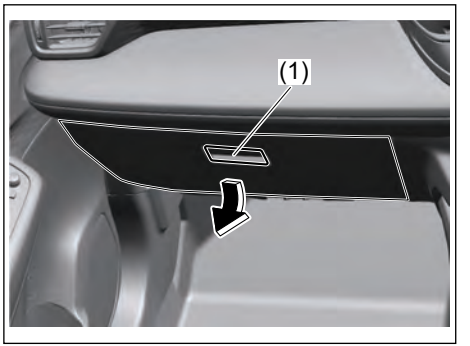


71UM07020

- To open the glove box, pull the latch lever (1).
- To close it, push the lid until it is latched securely.

**⚠ WARNING**

- **Never drive with the glove box lid open. It could cause injury if an accident occurs.**
- **Do not leave cigarette lighters or spray cans in the glove box. If a cigarette lighter or spray can is in a place such as the glove box, it may light accidentally when luggage is loaded, causing a fire.**




71UM07021

The glove box light (if equipped) stays on while the lid is open.

**Front armrest with console box (if equipped)**

| *NOTICE* |
| --- |
| **To avoid damage to the armrest, do not lean on it or allow a child to sit on it.** |

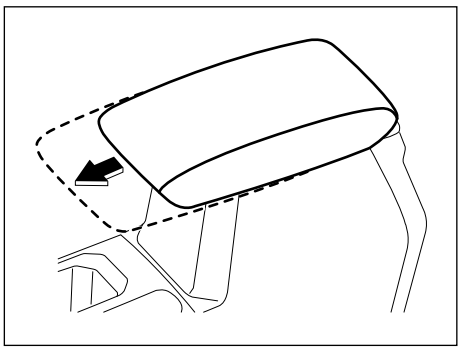


76TS70250

The armrest can be slid forward.

**Console box**

Use this stowage for keeping small items. Open the compartment by raising the top lid while keeping the lever (1) up.

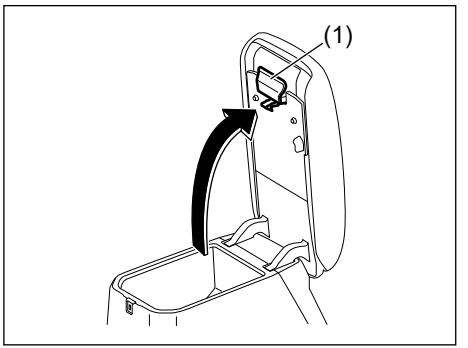



76TS70260

*NOTE:*
*Always close the lid after you put something into or take something out of the box.*

## Sunroof (if equipped)

You can tilt or slide the sunroof by operating the sunroof switch after pressing the engine switch or the power switch to change the ignition mode to ON.

**⚠ WARNING**

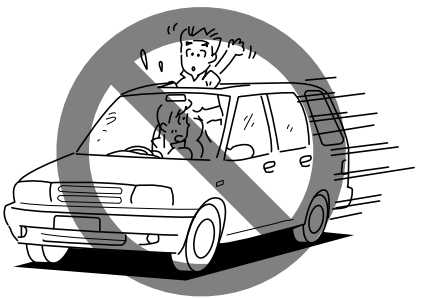

76TS70270

- **Ensure that body parts, especially hand or head are not kept out of the sunroof while vehicle is moving.**
- **Fasten your seat belt and use child restraints at all times. In an accident, there could be an injury or the person could fall of the vehicle through an open sunroof.**
- **Check that there are no hands or other obstructions in the path of the sunroof when you close the sunroof.**

(Continued)

**⚠ WARNING**

(Continued)

- **Always take the keyless push start system remote controller with you when leaving the vehicle even if only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could use the sunroof switches and get trapped by the sunroof.**
- **Never block the sunshade's or glass's movement as this could damage the sunroof.**
- **Never poke or put pressure on the sunshade fabric with hands or any other object or sharp material as this could lead to sunshade deformation or tear or damage.**


***NOTICE***

- **Do not put your body weight on the roof around the sunroof such as by sitting on it.**
- **Remove water drops, snow, ice or sand from the sunroof before opening.**
- **Close the sunroof when you leave the vehicle unattended.**
- **Periodically inspect the guide rail for dirt and clean it if any dirt has accumulated.**

*NOTE:*

- *You may hear a loud sound when you drive with sunroof fully opened. This sound is caused by fluctuation of air pressure around the sunroof and it is not an abnormality or disorder. The sunroof is designed to stop at a position before it is fully opened to avoid this sound.If you observe such sound while driving with the sunroof fully opened, close the sunroof slightly to reduce the sound.*
- *To reduce wind noise while driving, it is recommended that you drive with the sunroof slightly closed (stop the sunroof about 10 cm before the maximum slide open position).*
- *Glass opening can be further increased by pressing the sunroof control lever in auto or manual mode till desired position is achieved.*
- *While driving with the all windows closed and with the sunroof opened (or partially opened), your vehicle may demonstrate a wind buffeting or pulsation noise. This noise is normal and can be reduced by fully opening the windows glasses of side door or slightly close the sunroof*

### To Tilt the Sunroof

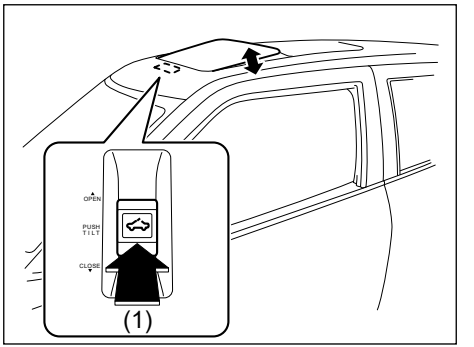



76TS70010

To tilt the sunroof up from fully closed position, push “PUSH TILT” part (1) of the sunroof switch. The sunroof will tilt up fully.

*NOTE:*
*If the sun shade is closed when tilting up, the sun shade will open automatically.*

To tilt the sunroof down from tilted up position, push “PUSH TILT” part (1) of the sunroof switch again. The sunroof will tilt down. If you keep holding “PUSH TILT” part (1) of the sunroof switch for more than 1 second, the sunroof and sun shade will be completely closed.

### To Open the Sunroof

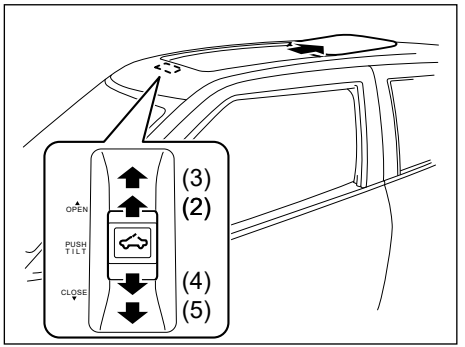


76TS70020

You can open the sunroof manually by sliding the sunroof switch to position (2) in “OPEN” direction. The sun shade will open and then the sunroof will open.

When you slide the sunroof switch to position (3) in “OPEN” direction once, the sunshade will open fully. When you slide the sunroof switch to position (3) in “OPEN” direction again for the second time, the sunroof will open and stop before the full-open position.

When you slide the sunroof switch to position (3) in “OPEN” direction again for the third time, the sunroof will open fully.

When you slide and hold the sunroof switch at position (3) in “OPEN” direction for more than 1 second, the sunshade will open fully and then the sunroof will open and stop before the full-open position.When you slide the sunroof switch to position (3) in “OPEN” direction again, the sunroof will open fully.

To stop the sunshade or sunroof during the operation, press or slide the switch in any direction briefly.

***NOTICE***

- **Operating the sunroof repeatedly with the engine turned off will run down the battery. Operate the sunroof while the engine is running.**
- **In cold and wet climates, the sunroof may not work properly due to freezing conditions.**
- **After the vehicle is washed or in a rainstorm/snowfall be sure to wipe off any water that is on the sunroof before operating it.**
- **The sunroof cannot slide when it is in the tilt position nor can it be tilted while in an open or slide position.**
- **Clean up the circumference of sunroof regularly. Otherwise, operating the sunroof may cause a noise due to foreign material and dirt.**
- **Close the sunroof while driving in the dusty environment. The dusts or particles entered can cause operating problems.**

(Continued)


***NOTICE***

(Continued)

- **If a roof rack system is installed on the vehicle roof or any cargo is secured to the roof rack, do not operate the sunroof. If you are required to operate the sunroof, carefully check that the roof rack system does not interfere with the sunroof and it is safe to open the sunroof.**
- **Make sure the sunroof is fully closed when leaving your vehicle.**
- **If sunroof is left open, rain, dust or snow may wet/spoil the interior of the vehicle. Also, leaving the sunroof open when the vehicle is unattended, may lead to un-authorized access or theft.**
- **Do not continue to move the sunroof switch after the sunroof is fully opened, closed, or tilted. Damage to the motor or system components could occur.**
- **The sunshade may naturally develop wrinkles or sag depending upon use or over period of time.**
- **Sunroof operation may get interrupted temporarily after continuous/abusive usage. Operation will resume after giving adequate hold time.**

- **Opening of Sunroof Through Remote Controller**

Press the Lock/unlock button of remote controller for about 2 seconds, Sunshade and Sunroof glass will close/open respectively in defined sequence automatically.

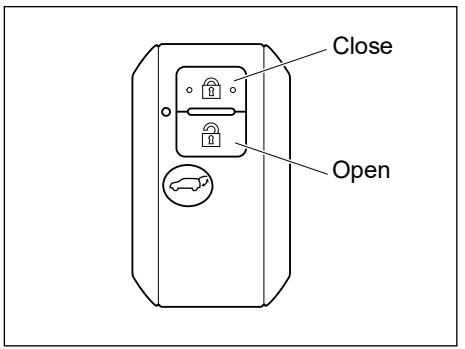


71UM07066

- The sunroof can be operated through overhead console switch for a short time after ignition mode is changed from ON to OFF.

After Ignition mode is changed from ON to OFF, customer can operate the sunroof through overhead console switch also. This is allowed until the driver door is opened or the elapse time is completed.

## To Close the Sunroof

You can close the sunroof manually by sliding the sunroof switch to position (4) in “CLOSE” direction.The sunroof will close and then the sunshade will close.


When you slide the sunroof switch to position (5) in “CLOSE” direction once, the sunroof will close fully. When you slide the sunroof switch to position (5) in “CLOSE” direction again for the second time, the sunshade will close fully.

When you slide and hold the sunroof switch at position (5) in “CLOSE” direction for more than 1 second, the sunroof will close fully and then the sunshade will close fully.
To stop the sunroof or sunshade during the operation, press or slide the switch in any direction briefly.

There is a system to prevent being pinched by the sunroof.
When the system senses that something is pinched when the sunroof is sliding forward or tilting down, the sunroof will automatically reverse direction and slide back or tilt up. This system will operate when the sunroof is closing or tilting down automatically.

Check that there are no hands or other obstructions in the path of the sunroof when you close the sunroof even though there is a system to prevent being pinched by the sunroof.

**⚠ WARNING**

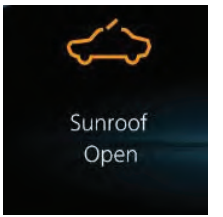


71UM07067

- **If the driver turns off the engine and opens the driver door when the sunroof is not fully closed, the warning chime will sound for several seconds and the sunroof open warning will appear on the information display.**
- **The turn Signal lights will flash once and the siren will sound three times when sunroof is not in fully closed condition and doors are locked through remote controller/ request switch.**
- **The warning/siren will disappear once the sunroof is closed completely**

**⚠ CAUTION**

**Use sunroof through key fob only in close vicinity.**


**⚠ CAUTION**

- **The system to prevent being pinched by the sunroof does not work in the area where the sunroof is almost completely closed.**
- **The system to prevent being pinched by the sunroof may not work if the lead-acid battery is not sufficiently charged.**

If the system to prevent being pinched by the sunroof does not operate properly, close the sunroof fully by using the sunroof switch and ask your Maruti Suzuki authorized workshop to have the system inspected.

### Automatic reverse (if equipped)

If the sunroof senses any obstacle while it is closing automatically, it will move in reverse direction then stop to allow the object to be cleared.

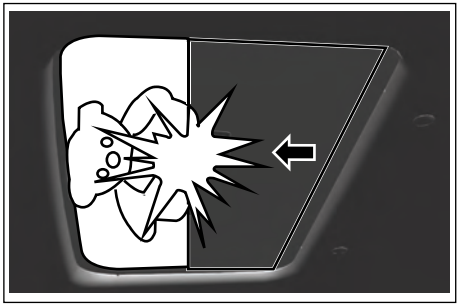

66T050760

**⚠ WARNING**

**Small objects that can get caught between the sunroof glass and the Roof Panel may not be detected by the automatic reverse system. In this case, the sunroof glass will not detect the object and will not move in reverse direction**

***NOTICE***

- **Periodically remove any dirt that may accumulate on the sunroof guide rail or between the sunroof and roof panel, which can make a noise.**
- **Do not try to open the sunroof when the temperature is below freezing or when the sunroof is covered with snow or ice, otherwise the motor could be damaged. In cold and wet climates, the sunroof may not work properly**
- **Do not operate the sunroof while driving. Always ensure the vehicle is parked and the ignition mode to off before using the remote key fob to operate the sunroof.**
- **Be aware of people or objects around the vehicle when using the remote key fob to open or close the sunroof.**
- **Do not rely on the remote key fob to operate the sunroof if the vehicle's battery is weak or dead. The sunroof operation may not function correctly under these conditions.**
- **Check for any unusual sounds or movement while operating the sunroof via the remote. If the sunroof is not functioning smoothly, consult a Maruti Suzuki authorized workshop for inspection.**

### Resetting the sunroof

The sunroof may need to be reset if the following conditions occur:


- The battery is discharged or disconnected or the sunroof fuse has been replaced or disconnected
- The sunroof switch is not functioning properly.

To reset the sunroof, perform the following steps:

1) Press the engine switch or the power switch to change the ignition mode to ON and close the sunroof glass and sunshade completely.
2) Release the sunroof switch.
3) Slide and hold the sunroof switch to position (5) in “CLOSE” direction for about 10 seconds until the sunshade and sunroof glass moves slightly, then release the sunroof switch.
4) Within 4 seconds, slide and hold the sunroof switch to position (5) in “CLOSE” direction until the sunroof operates as follows:
   Sunshade Open -> Glass Tilt Open -> Glass Slide Open -> Glass Slide Close -> Sunshade Close
5) Then, release the sunroof switch. When this is complete, the sunroof system is reset.


For more details, contact a Maruti Suzuki authorized workshop.

*NOTE:*
*If you do not reset the sunroof, it may not work properly*

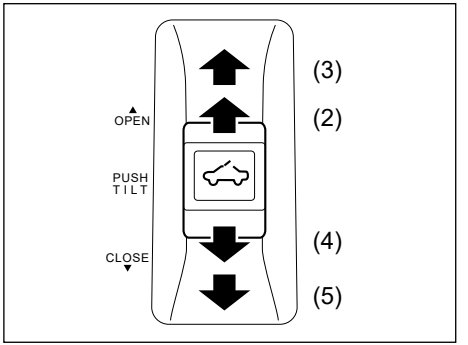


71UM07077

## Assist Grips

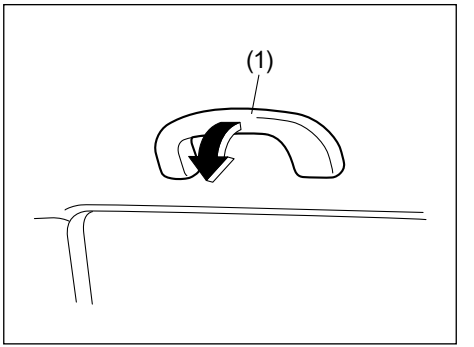



80J1233

Assist grips are provided for convenience. Pull the assist grip (1) towards you.

| *NOTICE* |
| --- |
| **To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.** |

### Coat Hooks

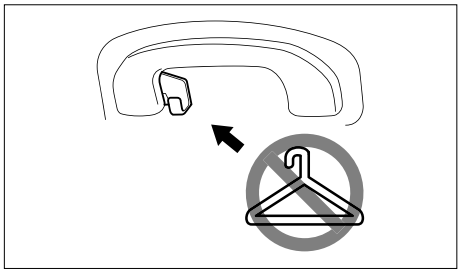

71UM07071

You can hang clothing on the coat hooks. These hooks are not designed for large or heavy items and are located with rear right assist grip.


**⚠ WARNING**

**If your vehicle is equipped with side curtain airbags, do not hang sharp items like a hanger on the coat hook. When hanging the clothes, hang them on the hook without using a hanger.**

***NOTICE***

**To avoid breaking the hook, do not hang items heavier than the following weight.**
**Coat hook: 2 kg**

## Overhead Console (if equipped)

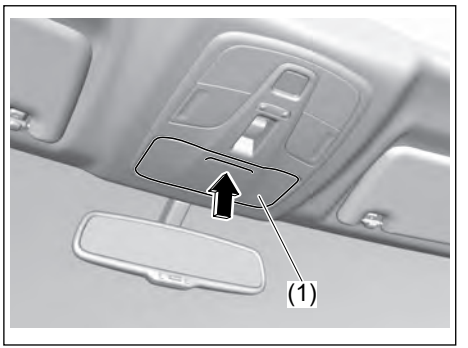


76TS70280

Use this stowage to keep small articles. You can open the lid (1) by pressing the raised portion on it.

**⚠ WARNING**

- **Do not drive with the overhead console lid open, or the articles stowed inside could fall down during braking, acceleration or in the event of a collision. Always close the lid after putting something into or taking something out of the console.**

(Continued)

**⚠ WARNING**

(Continued)

- **If you park your vehicle outdoors in direct sunlight or in hot weather, the overhead console can get very hot since it is close to the roof. So, when parking in such conditions:**
  - **Do not leave eyeglasses and plastic cards etc. in the overhead console. The heat may distort plastic lenses or frames.**
  - **Do not place flammable items, such as a lighter, in the overhead console. The heat may cause a fire.**


**⚠ CAUTION**

**Use this stowage to keep small articles. If you store heavy or large articles, the lid may open due to the impact during driving, the contents may pop out, and the console may be damaged.**

***NOTICE***

- **Do not apply undue force to the lid when closing it. Doing so could break the lid and articles inside.**
- **Place glasses in a case when stowing them in the overhead console, or the lenses may be damaged.**

## Footrest

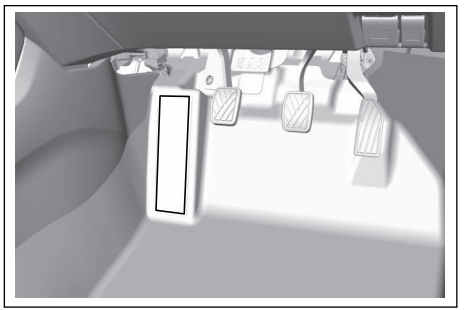


76TS70290

Use the footrest as a support for your left foot only.


## Door Pocket

**Front**

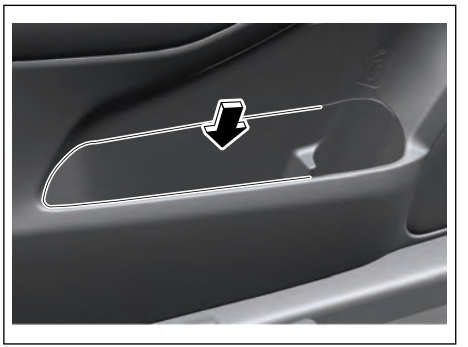

71UM07022

**Rear**

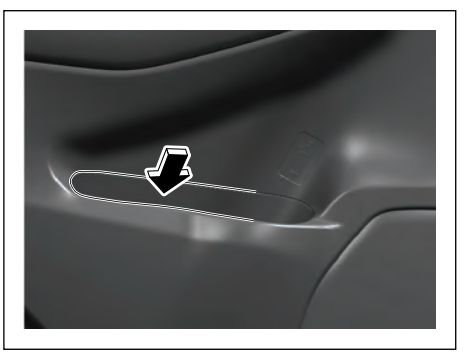

71UM07023


Each pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

**⚠ CAUTION**

- **If an accident occurs, objects such as bottles, cans, etc. in the door pocket can injure the occupants. Do not put hard or breakable objects in the door pocket.**
- **If you grab and pull the door pocket, it may be broken, resulting in personal injury. When closing a door, do not grab and pull the door pocket.**

*NOTE:*
*If you place the keyless remote controller in a door pocket, it may not be detected.*

## USB Socket (if equipped)

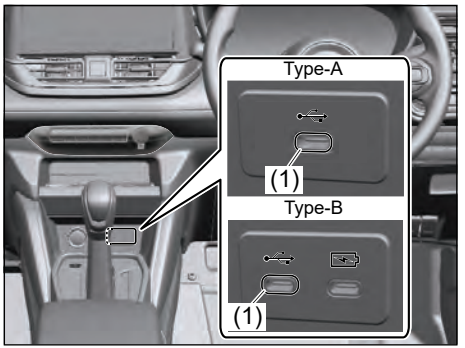


71UM07042

Connect your portable digital music player, etc. to USB socket (1) to enjoy music through the vehicle's audio system. Refer to the audio manual for details.

***NOTICE***

**Do not use USB socket for long period in vehicle ACC or engine off condition, as the lead-acid battery may run out in such condition.**

**⚠ WARNING**


**If any foreign object or liquid enters the USB socket, it may cause malfunction or short circuit.**

## USB Charging Socket (if equipped)

**Front**

When the ignition mode is ACC or ON, you can charge your mobile device such as your smart phone by using the connecting cable (commercial item).

The socket(1) Is compatible for use of USB Type-C and maximum capacity of socket is 15V/3A(45W) based on USB power delivery 3.1.
Charging speed of the devices may depend on charging specification of the connected digital device.

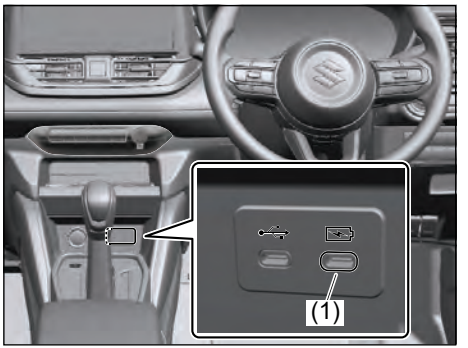


71UM07043

**Rear**

When the ignition mode is ACC or ON, you can charge your mobile device such as your smart phone by using the connecting cable (commercial item) connected to the two Type-C charging sockets.

The total maximum output capacity of two sockets is 60W based on USB power delivery 3.1.
The capacity of the first connected socket:
15 V / 3.0 A (45W)*
The capacity of the subsequently connected socket:
5 V / 3.0 A (15W)

* The maximum output capacity of the first connected socket is 45W, and the output capacity is automatically adjusted depending on the connected device.




71UM07058

***NOTICE***

- **Do not charge your devices for a long period in vehicle ACC or engine off condition, as the lead-acid battery may run out in such condition.**
- **Use only original /compatible USB cable as provided or recommended by manufacturer of the device for charging.**

**⚠ WARNING**

**If any foreign object or liquid enters the USB socket, it may cause malfunction or short circuit.**


*NOTE:*

- *The priority of the socket's output capacity varies depending on the supported voltage of the connected device and the vehicle conditions.*
- *The USB charging socket should be used only for charging.*
- *For some models, charging may pause. However, this is not a malfunction.*
- *Depending on the vehicle conditions such as the following examples, charging may temporarily pause.*
  - *When the inside temperature of the vehicle is high after parking the vehicle under the blazing sun*
  - *When the engine is started*

## Wireless Charger (if equipped)


Smart phone equipped with wireless charging function, can be charged by placing it on the charging area, provided the phone is Qi 1.3 certified as per Wireless Power Consortium (please refer official website of Wireless Power Consortium for the certified product list). Wireless charger uses inductive charging technology to charge the smart phones which is less efficient than conventional charging. Also, user may experience higher device temperature during charging depending upon the smart phone.

### The “Qi” Symbol

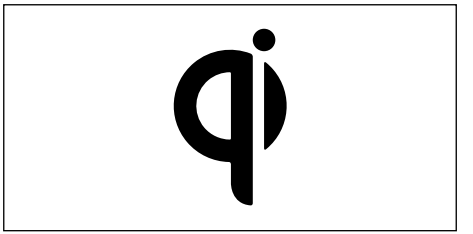

76TS70360

The “Qi” symbol is a trademark of the Wireless Power Consortium.

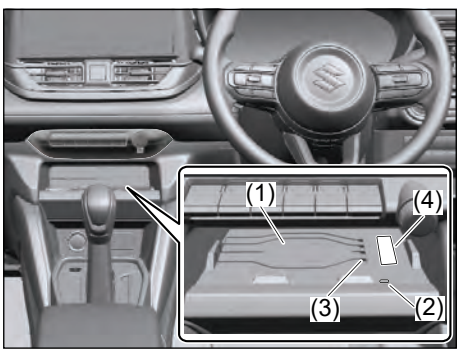


71UM07025

(1) Wireless charger
(2) Indicator light
(3) Vents for airflow
(4) Caution Label

**For optimum functioning of wireless charger, we recommend:**

1) Place the smart phone equipped with wireless charging function at the centre of Wireless Charger ensuring its charging surface faces down.
2) Close all the doors (including the tailgate) and press the engine switch to ON or ACC to start the Wireless Charger.
3) Keep the charging area, surface between smart phone and charger and air vent completely clean and free from any foreign objects like coins, metal, clothes, paper bits, chips, pins, dust etc.
4) Charge the smartphone without any cover or accessories to ensure better performance.

*NOTE:*

*1) Do not operate the smartphone while charging and driving for safety reasons.*
*2) Do not use the wireless charger with a smartphone that is larger than the charging area.*
*3) Do not spill liquid such as water, drinks, etc. over the Wireless Charger or clean it with any cleaning agents or liquid.*
*4) Do not bring precision instruments such as wrist watches, close to the Wireless Charger, as such objects may malfunction.*
*5) Do not use the Wireless Charger for a long period of time, in engine stopped condition. Prolonged charging in such condition may impact the vehicle battery health.*
*6) In case your device unusually heats up while charging, immediately remove it from the charger.*
*7) To prevent potential hazards such as fire, equipment failure, or burns while charging do not place external object or spill liquid on the Wireless Charger or the smart phone.*
*8) Do not bring magnetic card such as a credit card, or magnetic recording media, close to the Wireless Charger while charging. Otherwise, data may be erased due to the influence of magnetism.*

**Wireless charger indicator light status**

| Indicator light* | Description |
|---|---|
| Off | Wireless charger OFF |
| Amber | Wireless charger activated and ready to charge |
| Blue | Charging in progress |
| Green** | Charging completed |

*: Indicator light intensity may vary depending on the vehicle/ weather condition.
**: Depending on the smart phone, the indicator light may not turn green even after charing completion.

**Error / malfunction status**

| Indicator light | Description | Action |
|---|---|---|
| Red blinking | Presence of any foreign object (metallic object) or the mobile is displaced from the charging area. | Remove the foreign object including phone cover (having metallic content)<br>Align the phone at the center. |
| | Smart phone / Wireless Charger temperature is too high | Remove the phone and wait for some time for get it cool. |
| | Wireless Charger is not able to communicate with the vehicle | Contact your nearest Maruti SuzukiI authorized workshop if error persists. |
| Red permanent | Non-recoverable failure might have occurred. | Contact your nearest Maruti Suzuki authorized workshop if error persists. |

**Important Information:**

1) Phones with a magnetic array for charger alignment may experience varying charging performance and heat levels based on the smart phone type.
2) Wireless Charger can support only one smart phone at a time.
3) The Wireless Charger may not function correctly if the smartphone overheats, other wireless keys are nearby, or if there are other unspecified issues, refer to the Error/Malfunction table for more details.
4) Charging performance may vary depending on phone type, causing intermittent or no charging, and potential heating of the phone or charger and may generate indicator or light or alert. This is not a malfunction. Background apps can drain the battery and increase temperature, affecting performance. Charging will resume once the temperature returns to the operating range.
5) Charging maybe impacted when smartphone is displaced during vehicle running condition.
6) When the smartphone placed on wireless charger is connected to a USB cable, its charging would be as per the smart phone specifications. The indicator LED status may change, and the user may receive different malfunction or error alerts.
7) Depending on the vehicle drive mode condition, the charging may get impacted.
8) Consult your physician before using the wireless charger if you have any implantable medical devices including but not limited to Cardiac Pacemaker, implantable cardioverter defibrillators, etc. as it may have a possible impact on their operation.
9) Wireless charger may experience operational issues when the vehicle is near to facilities such as TV towers, electric power plants, gas stations, large displays, airports, or other sources of strong radio waves or electrical noise.
10) In some smartphones, a protruding camera may interfere with wireless charging performance. In such a scenario, try adjusting the position or placement of the smartphone on the Wireless Charger to enhance the charging performance.
11) Non-compatible / non-Qi certified smart phone may generate FOD / error alerts.

| Vehicle State / Operation | | Wireless Charger State |
|---|---|---|
| Engine OFF | ACC OFF | OFF |
| | ACC ON | ON |
| Engine ON | Clutch / Brake press | ON |
| Engine OFF | | OFF |
| Engine OFF / ON | Any Door (including tailgate) Open | OFF, will ON once all door close. |
| Vehicle battery too low | | OFF |
| Key fob is taken out of the vehicle | | OFF, will ON once key Fob is inside the car. |


For other conditions, user may get different Malfunction / Error indication. Contact your nearest Maruti Suzuki authorized workshop if error persists.

**Caution label:**



| | |
|---|---|
|  | Caution |
|  | Phone, foreign object may heat. |
|  | Refer to Owner's Manual. |
|  | Do not put metallic objects, key, coin, card etc. |

## Front Seatback Pocket (if equipped)

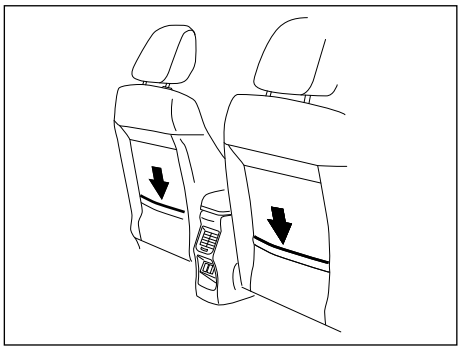

76TS70390

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

**⚠ CAUTION**

- **If an accident occurs, objects such as bottles, cans, etc. can injure the occupants in the rear seat. Do not put hard or breakable objects in the pocket.**
- **If you put sharp or heavy objects in the pocket, the seat may be damaged. Do not put sharp or heavy objects in the pocket.**

## Luggage Compartment Hook




71UM07044

You can hang the shopping bag or other suitable objects on the hook.
This hook is not designed for large or heavy items.

***NOTICE***

**To avoid breaking the hook, do not hang items heavier than the following weight.**
**Shopping hook: 1 kg**

## Luggage Compartment Cover (if equipped)

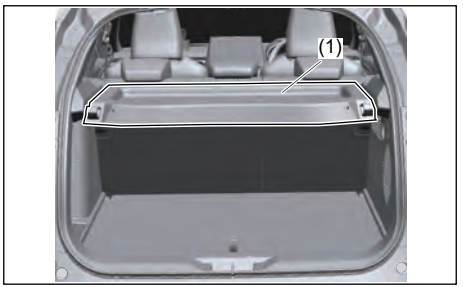


71UM07045

Luggage or other cargo placed in the luggage compartment is hidden from view by a luggage compartment cover (1).

**⚠ WARNING**

**Do not carry items on top of the luggage compartment cover, even if they are small and light. Objects on top of the cover could be thrown about in an accident, causing injury, or could obstruct the driver's rear view.**

***NOTICE***

**To avoid damaging the luggage compartment cover:**
- **Do not push down on it or lean on it.**
- **Handle it carefully when installing or removing.**

## Luggage Compartment Board

Your vehicle is equipped with the luggage compartment board in the luggage compartment. You can place luggage or other cargoes on the board or under the board. You can also place tall luggage by removing the board from the luggage compartment.

**⚠ WARNING**

**The luggage areas do not feature a structure that can accommodate people. Do not allow a child to ride in such areas. Otherwise, there is the danger of accidents due to sudden braking, etc. Do not let a child play in luggage areas even while the vehicle is stopped on the road.**


**⚠ CAUTION**

**If you are not careful when handling the luggage board, you could be injured.**
**Handle the luggage board carefully when removing or installing it.**


**⚠ WARNING**

**Objects that extend higher than the luggage compartment cover (if equipped) can obstruct the driver's rear view, which can cause an accident. These objects can also become damaged or can damage the tailgate. Do not carry items that extend higher than the luggage compartment cover.**

**M15D model**

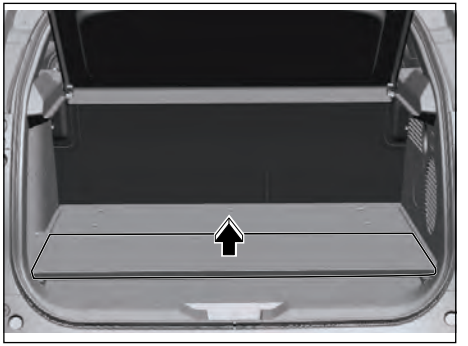


71UM07046

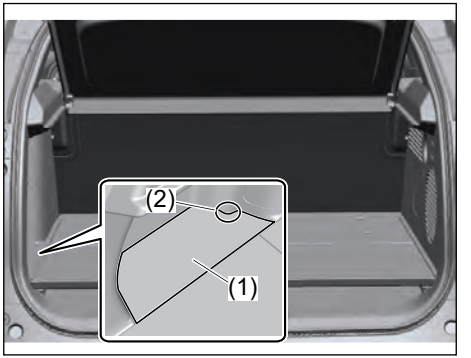



71UM07047

You can remove the luggage compartment board (1) by hooking your fingers into these spaces (2) and pulling them.


**K15C model**

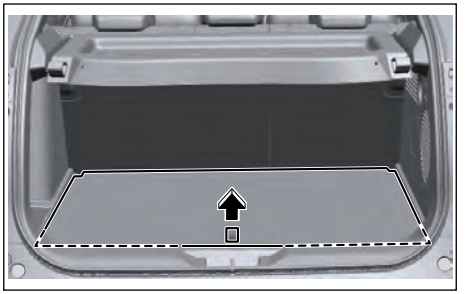

71UM07048

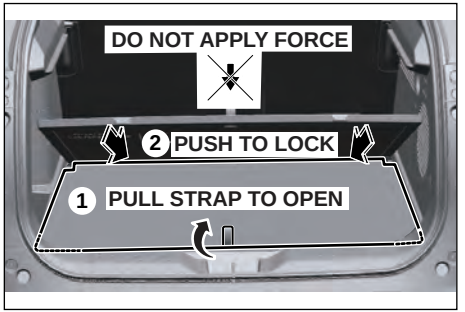


71UM07070

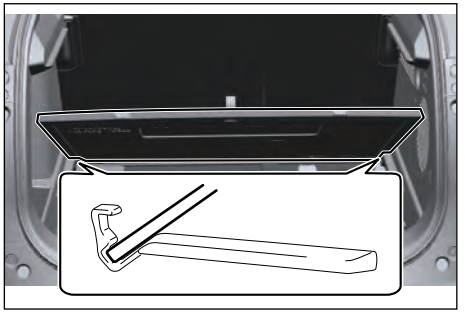


71UM07049

The luggage compartment board can be held open as shown in the illustration.

***NOTICE***

**Do not apply undue force to the board which is held open, and do not hold open the board while driving. Doing so could break the board or the interior.**

## Roof Rails (if equipped)

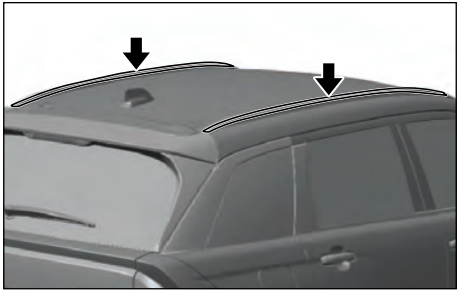

71UM07026

You can use the roof rails to attach the optional roof rack which is available at your Maruti Suzuki authorized workshop.If you use a roof rack, observe the instructions and precautions in this section and provided with the roof rack.

- Check that the roof rack is securely installed.
- To mount various types of cargo (such as skis, bicycles, etc.) properly, use suitable attachments which are available at your Maruti Suzuki authorized workshop. Install the attachments properly and securely according to the instructions provided. Do not mount cargo directly on the roof panel. The cargo can damage the roof panel.


- The gross weight of the roof rack plus cargo must not exceed the loading capacity.
  – Roof rails: 75 kg
  Also, do not let the gross vehicle weight (fully loaded vehicle including driver, passengers, cargo, roof load and trailer tongue weight) exceed the Gross Vehicle Weight Rating (GVWR) listed in the "SPECIFICATIONS" section.
- Mount and secure the cargo onto the roof rack properly according to the instructions provided. Stow the heaviest items at the bottom and distribute the cargo as evenly as possible.
- Do not carry large items that hang over the bumpers or the sides of the vehicle. Otherwise, these items could block your view.
- Secure the front and rear ends of long items such as wood panels and surfboards, to both the front and rear of the vehicle. You should protect the painted surfaces of the vehicle from scuffing caused by tie-down ropes.
- Check periodically that the roof rack is securely installed and free from damage.

**⚠ WARNING**

- **Abrupt maneuvers or failure to properly secure cargo can allow the cargo to fly off the vehicle and hit others, causing personal injury or property damage.**
- **Mount cargo securely and avoid abrupt maneuvers such as jackrabbit starts, sharp turns, fast cornering and sudden braking. Check periodically that cargo is securely fastened.**
- **Large, bulky, long or flat items can affect vehicle aerodynamics or be caught by the wind, and can reduce vehicle control resulting in an accident and personal injury. Drive cautiously at a safely reduced speed when carrying this type of cargo.**

## Heating and Air Conditioning System


### Air Outlet

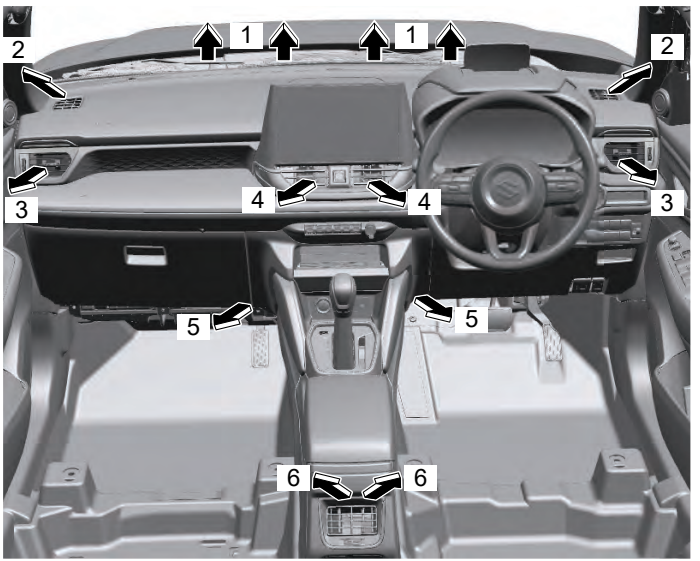


71UM07030

1. Windshield defroster outlet
2. Side defroster outlet
3. Side outlet
4. Center outlet
5. Floor outlet
6. Rear outlet

**Center outlet**

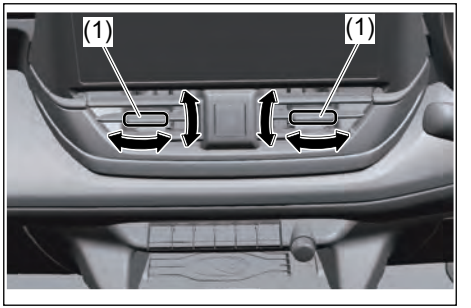



71UM07031

Move the knob (1) vertically or horizontally to adjust the direction of airflow as desired.


**⚠ CAUTION**

**Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.**

**Side outlet and rear outlet**

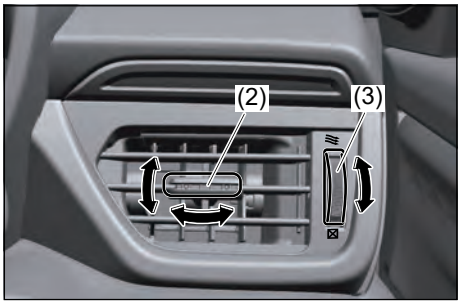


71UM07032

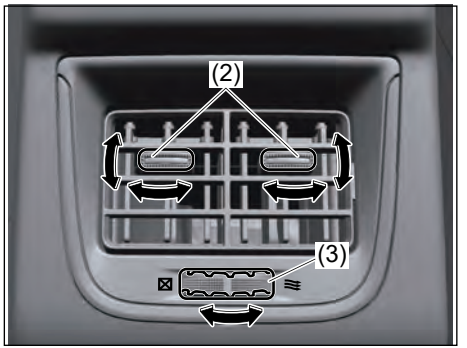


71UM07033

When open, air comes out regardless of the air flow selector position. Move the knob (2) vertically or horizontally, to adjust the direction of airflow as desired. The side outlet opens when you turn the dial (3) upward and closes when you turn it downward. The rear outlet opens when you move the dial (3) to the right and closes when you move it to the left.

**⚠ CAUTION**


**Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.**

*NOTE:*

- *For side outlet, if the front door windows are fogged, adjust to direct wind from the side outlets towards the front door windows. This will allow you to remove fog more quickly.*
- *The airflow from the rear outlet can be increased by fully moving the center outlet knob (1) to the inner side.*

## Automatic Heating and Air Conditioning System (Climate Control)

### Description of Controls

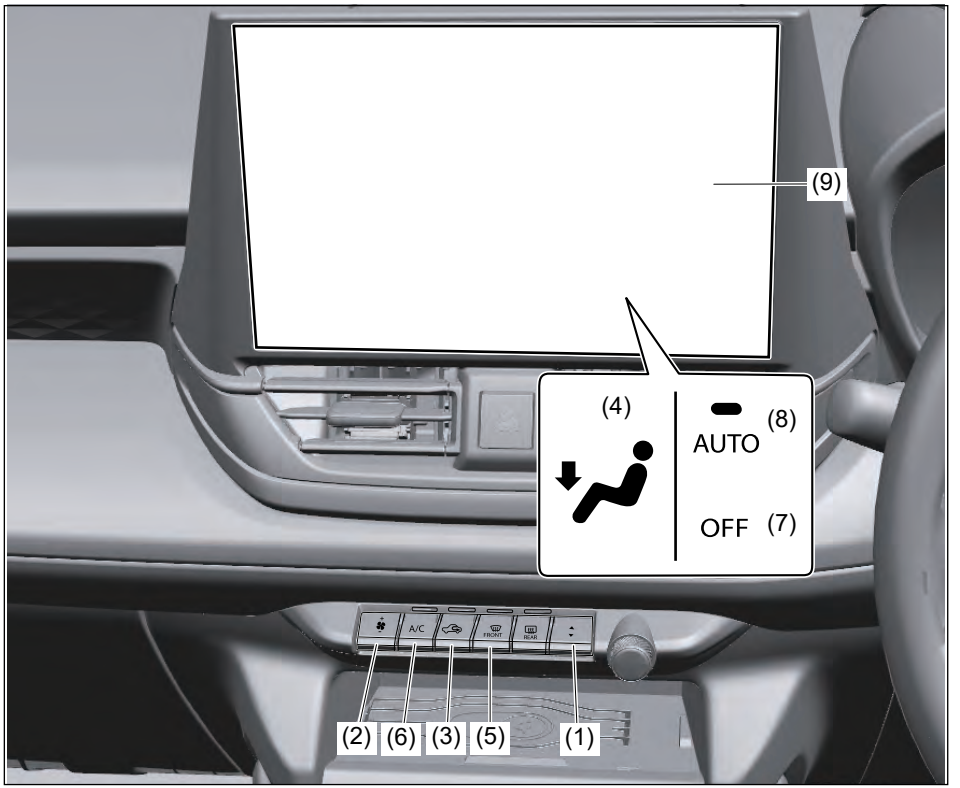



71UM07050

(1) Temperature selector
(2) Blower speed selector
(3) Air intake selector
(4) Air flow selector
(5) Defrost switch
(6) Air conditioning switch
(7) “OFF” switch
(8) “AUTO” switch
(9) Display

*NOTE:*

- *The air flow switch, “AUTO” switch and “OFF” switch can be operated on the center display. The Climate Control screen can be accessed by tapping 'Climate Control Information' on the status bar. For more details, please refer to the owner's manual of infotainment system.*
- *You can also operate the temperature and blower speed on the centre display.*

**Temperature selector (1)**

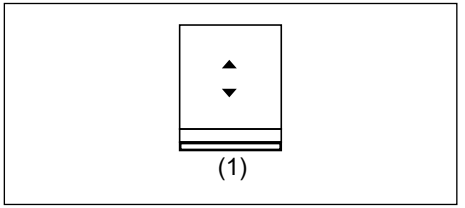



71UM07051

Push upper part or lower part of the temperature selector (1) to adjust the temperature. The display (9) shows the selected temperature.

*NOTE:*

- *If you push the temperature selector (1) until "HI" or "LO" appears on the display, the climate control system will operate at maximum heating or cooling. The temperature of the air from the outlets may change suddenly while "LO" or "HI" is displayed, but this is normal.*
- *When you change the unit of temperature in the information display, the unit of temperature in the air conditioning system will be changed. Refer to "Thermometer (if equipped)" in "INSTRUMENT CLUSTER" section or "Setting mode of information display (Type-B)" in "SPECIFICATION" section for details.*

**Blower speed selector (2)**

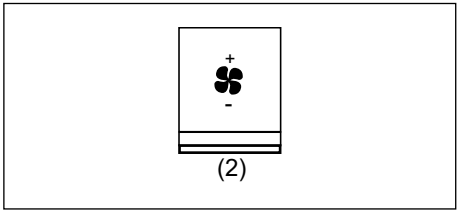



71UM07052

The blower speed selector (2) is used to turn on the blower and to select blower speed.

If the "AUTO" switch (8) is pushed, the blower speed will vary automatically as the climate control system maintains the selected temperature.

**Air intake selector (3)**

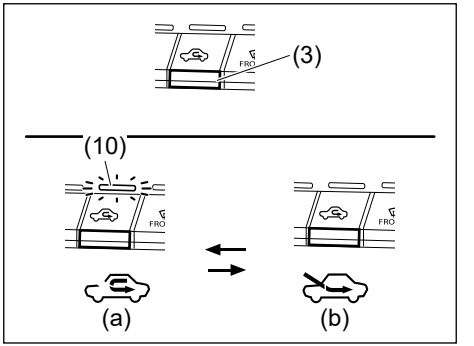


71UM07053

Push the air intake selector (3) to change between the following modes.

If the "AUTO" switch (8) is pushed, the air intake will vary automatically as the climate control system maintains the selected temperature.

*NOTE:*
*When you select the recirculated air mode, the automatic operation system is deactivated if you push the "AUTO" switch (8).*


**RECIRCULATED AIR (a)**
When this mode is selected, inside air is recirculated. At the same time, the indicator light (10) will turn on. This mode is suitable when driving through an area with polluted air such as a tunnel, or when attempting to quickly cool down the vehicle or to reduce unwanted odor from entering the vehicle.

**FRESH AIR (b)**
When this mode is selected, outside air is introduced. At the same time, the indicator light (10) will turn off.

The fresh air position (b) and recirculated air position (a) are selected alternately each time the air intake selector is pushed.

*NOTE:*
*If you select the RECIRCULATED AIR (a) for an extended period of time, the air in the vehicle may become contaminated and the windows tend to get misted. Therefore, you should FRESH AIR (b) whenever possible.*

**Air flow selector (4)**

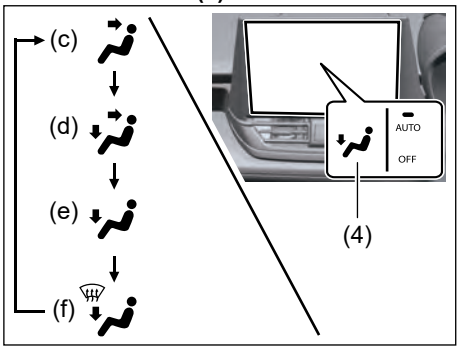



71UM07057

Push the air flow selector (4) to change among the following functions. The indication of the selected mode appears on the display.

If the “AUTO” switch (8) is pushed, the air flow will vary automatically as the climate control system maintains the selected temperature.


**Ventilation (c)**

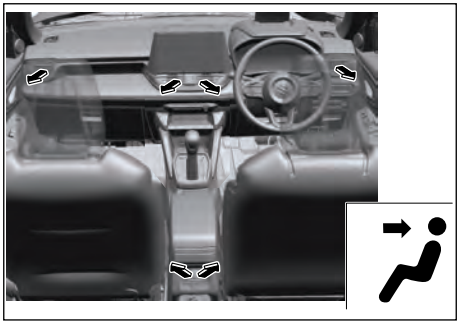

71UM07034

Temperature-controlled air comes out of the center, side and rear outlets.

**Bi-level (d)**

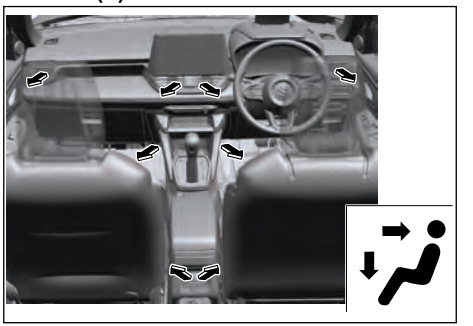


71UM07035

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center, side and rear outlets. When

the temperature selector (1) is in the fully COLD position or fully HOT position, however, the air from the floor outlets and the air from the center, side and rear (if equipped) outlets will be the same temperature.


**Heat (e)**

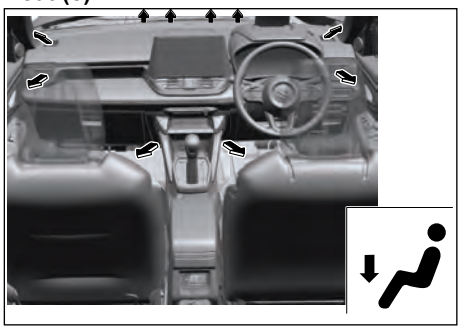

71UM07036

Temperature-controlled air comes out of the floor outlets and the side outlets, also comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.


**Heat and defrost (f)**

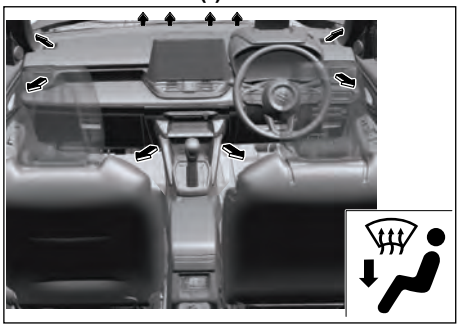

71UM07037

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.


**Defrost switch (5)**

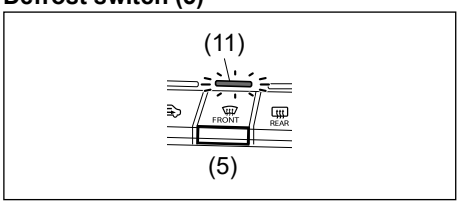


71UM07056

Push the defrost switch (5) to turn on the defroster. At the same time, the indicator light (11) will turn on.

**Defrost**

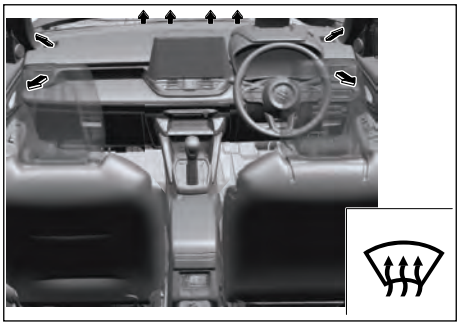


71UM07038

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

*NOTE:*
*When the defrost switch (5) is pushed to turn on the defroster, the air conditioning system will come on and the fresh air position (b) will be selected automatically. In very cold weather, however, the air conditioning system will not turn on.*

*NOTE:*
*An extended use of cool air operation in Defrost or Heat/Defrost position may cause the windows to fog from outside due to the inside and outside temperature difference. Therefore, you should avoid using cooling function in Defrost or Heat/Defrost position.*

**Air conditioning switch (6)**

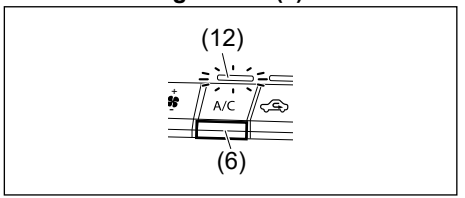


71UM07054

The air conditioning switch (6) is used to turn on and off the air conditioning system only when the blower is on. Push in the switch to turn on the air conditioning system. At the same time, the indicator light (12) will turn on.
Push in the switch again to turn off the air conditioning system. At the same time, the indicator light (12) will turn off.

**Models with idling stop system**


When the engine is stopped automatically, the air conditioner switches to the ventilation position (a).

*NOTE:*

- *If the cooling and heating performance is insufficient when the engine is stopped automatically, push the idling stop system OFF switch to deactivate the idling stop system. (The engine is restarted automatically, and the cooling and heating performance is restored.)*
- *If the windshield and/or front door windows are fogged, push the defrost switch. (When the defrost switch is pushed, the engine is restarted automatically and the defroster is turned on.)*

## System Operating Instructions

**Automatic operation**

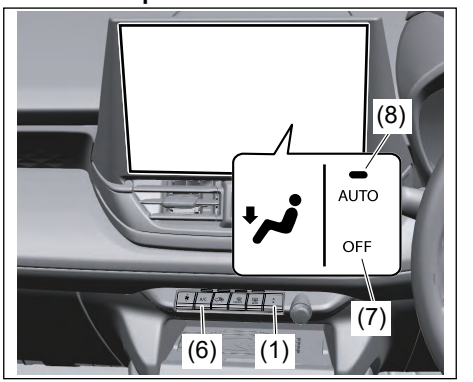


71UM07055

You can let the climate control system work automatically. To set the system for fully-automatic operation, follow the procedure below.

1) Start the engine.
2) Push the “AUTO” switch (8).
3) Set the desired temperature by pushing the temperature selector (1).


The blower speed, air intake and air flow are controlled automatically to maintain the set temperature. However, the air flow is not changed to the defrost position automatically.

*NOTE:*
*When you select the recirculated air mode, the automatic operation system is deactivated if you push the "AUTO" switch (8).*


You can use the air conditioning switch (6) to manually turn the air conditioner on or off according to your preference. When you turn the air conditioning switch off, the climate control system cannot lower the inside temperature below outside temperature.

To turn the climate control system off, push the "OFF" switch (7).

*NOTE:*
- *To find the temperature at which you are most comfortable, start with the 25°C (75°F) setting.*
- *If you push the temperature selector (1) until "HI" or "LO" appears on the display, the climate control system will operate at maximum heating or cooling and the blower will run at full speed.*
- *To avoid blowing cold air in cold weather or hot air in hot weather, the system will delay turning on the blower until warmed or chilled air is available.*
- *If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly.*
- *Even under the automatic operation, you can set individual selectors to the manual mode. The manually selected functions are maintained, and the other functions remain under automatic operation.*
- *When the outside temperature and humidity is high, such as in summer, Fog may be formed on the outside of the windshield or side window in localized or overall area of glass. To defog the windshield or side window*
  - *Switch on the windshield wipers (only applicable for windshield).*
  - *Push the temperature selector switch (1) to increase the cabin side temperature.*
  - *Push the blower speed selector switch (2) to reduce the blower speed.*
- *When the outside temperature is low, such as in winter, Fog may be formed on the inside of the windshield or side window in localized or overall area of glass. To defog the windshield or side window*
  - *Push the defrost Switch (5) to turn on the defroster OR push the air flow selector (4) to change the air flow to DEFROST position to defog the windows.*
  - *Push the temperature selector switch (1) to increase the cabin side temperature.*
  - *Push the blower speed selector switch (2) to increase the blower speed.*
- *To return the blower speed selector (2), air intake selector (3), and air flow selector (4) to automatic operation, push the "AUTO" switch (8).*

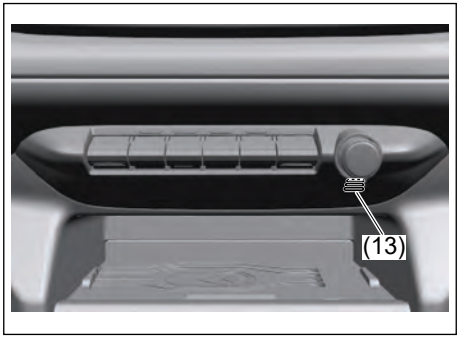


71UM07040

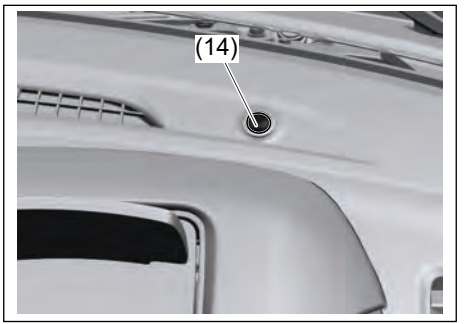

71UM07041

Be careful not to cover the interior temperature sensor (13) located on the climate control panel, or the solar sensor (14) located at the top of the driver's side dashboard. These sensors are used by the automatic system to regulate temperature.

**Manual Operation**
You can manually control the climate control system. Set the selectors to the desired positions.

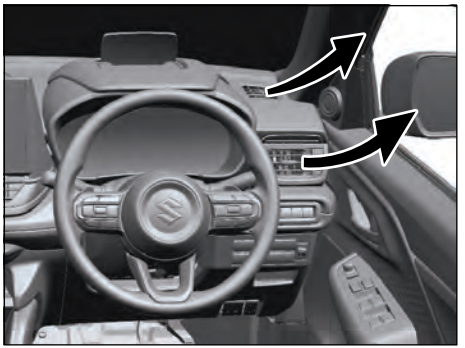

71UM07027

*NOTE:*
*If you need maximum defrosting, take the following procedure:*
1) *Push the defrost switch (5) to turn on the defroster (the air conditioning system will come on and the fresh air position (b) will be selected automatically).*
2) *Set the blower speed selector to HIGH.*
3) *Adjust the temperature selector to the "HI" indication on the display.*
4) *Adjust the side outlets so the air blows on the side windows.*
5) *If the heating performance can no longer perform at a sufficient level due to automatically stopping the engine, press the ENG A-STOP OFF switch to deactivate the ENG A-STOP system. (The engine will automatically restart and the air conditioning performance will be restored.)*
6) *If the windshield and/or the driver's side/ passenger side door windows are fogged during automatically stopping the engine, stop the ENG A-STOP system and restart the engine. Then, turn the air flow selector (4) to change the air flow to the HEAT & DEFROST or DEFROST position to defog the windows.*
7) *Do not place anything on the instrument panel which may cover the defrost air outlets. Otherwise, air flow may be obstructed, preventing the windshield from defogging.*
8) *Make sure to remove any foreign object such as snow and leaves on the air inlets to avoid window fogging.*

## Auto Purify (if equipped)
Auto Purify can automatically reduce the concentration of the particulate matter faster.

While the Auto Purify feature is in operation, the climate control system may Automatically switch to internal air circulation and control blower speed.
For details on how to use this feature, refer to the owner's manual of infotainment system.

For the display contents, refer to the table below.

| PM2.5 concentration range (μg/m$^3$) | Color name | Level |
|---|---|---|
| 0-29 | Green | Good |
| 30-59 | Light Green | Satisfactory |
| 60-89 | Yellow | Moderate |
| 90-119 | Orange | Poor |
| 120-249 | Red | Very Poor |
| 250-999 | Dark red | Severe |

*NOTE:*
- *The PM2.5 concentration displayed is the value of the air inside the vehicle at the particular instant may differ from the one published by govt agencies, 3rd parties and by other external devices. It may be used as an indicative figure for PM2.5 inside the vehicle.*
- *Using recommended Maruti Suzuki genuine Air conditioner filter capable of filtering PM2.5 and following the maintenance schedule ensures correct functioning of Auto Purify.*
- *If the outside temperature is low, the air conditioner is not operating or the defroster is operating, this feature may not be available or may turn off even when functioning.*
- *When using the following switches of the climate control system, Auto Purify will turn OFF to give preference to USER request:*
  – *Blower speed selector*
  – *Air intake selector*
  – *Air conditioning switch*
  – *"OFF" switch*
  – *"AUTO" switch*
  – *Defrost switch*

## Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

Your air conditioner is equipped with air filters. Clean or replace them as specified in "Maintenance Schedule" in the "INSPECTION AND MAINTENANCE" section. Have this job done by a Maruti Suzuki authorized workshop as the lower glove box must be lowered for this job.

*NOTE:*
*Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called R-134a. R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.*

***NOTICE***

**Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.**

*NOTE:*
*For the vehicle with hybrid system:*
*Do not leave the air conditioning system on longer than necessary when the hybrid system is off.*

## How to Use Air Conditioning System Effectively

**Parking under the blazing sun**

After parking for a long time under the blazing sun, the interior temperature can become very high. Use the air conditioning system, with the windows or doors opened to ventilate the interior.


**If you do not use the air conditioner for a long period**

Ensure that the air conditioner is used at least once a month, so as to circulate the refrigerant throughout the air conditioning system. The refrigerant contains the oil necessary for lubricating the system's parts, which contributes to maintaining the air conditioner's performance.

## Ventilated Seats (if equipped)


The fans for ventilated seats breathe air and ventilate the seat surface through small vent holes on the surface of the seat cushions and seatbacks.
You can use the seat ventilation when you want to get a cool feeling and reduce a stuffy feeling.

**Type-A**

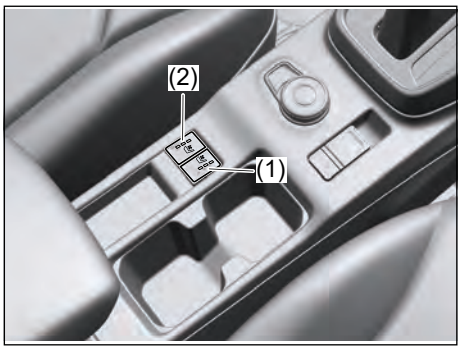



71UM07028

**Type-B**

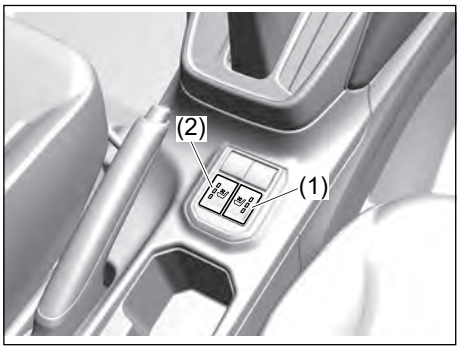


76TS70740


**Type-C**

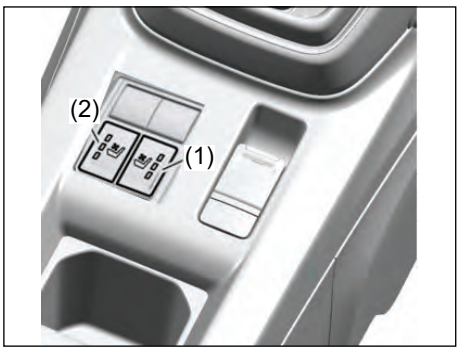


71UM07063

(1) Air ventilation switch (right side)
(2) Air ventilation switch (left side)

Each time you press the switch, the airflow will change as follows:

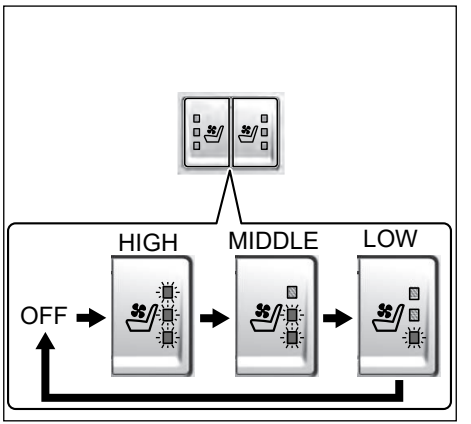


71UM07029

- The ventilated seat defaults to the OFF position whenever the ignition is turned ON.
- Depending airflow of the ventilated seat, the operating sound of fan motor will vary. Adjust airflow for both the air conditioner and the ventilated seat to your preference.
- If you use the air conditioner and the ventilated seat at the same time, they will inhale cool air around the driver and/or the front passenger. So that, you can effectively feel coolness.

**⚠ CAUTION**

- **Never use a solvent such as paint thinner, benzine, alcohol or gasoline to clean the seats.**
- **Do not use the ventilated seat in the following situations:**
  **–The seat is not occupied.**
  **–There are objects on the seat, such as a child seat, newspapers, plastic bags.**
- **For the ventilated seat, do not use the objects which cover the seat surface, such as the seat cover and the seat cushion.**
- **If you spill any liquid, wipe it off immediately. Do not use the air ventilation function until the seat becomes dry. Contact of liquid with the seat ventilation system may impact its functionality.**
- **Do not place any sharp or heavy object on the passenger seat which can penetrate through seat upholstery and can cause damage to the ventilation system.**
- **If there is any problem with the seat ventilation system, visit a Maruti Suzuki authorized workshop for further assistance.**


(Continued)

**⚠ CAUTION**

(Continued)

- **The battery can be discharged if the seat ventilation system is used for a long time with the ignition mode ON and without engine running.**
- **If small vent holes on the surface of the seat cushions and seatbacks are clogged with dust and dirt, the air suction force for the ventilated seat may weaken. In this case, clean the seat surface by the vacuum cleaner.**
- **For lubrication of motor rotating part, the ventilated seat will operate for a short period of time with the ignition mode ON.**

## Radio Antenna

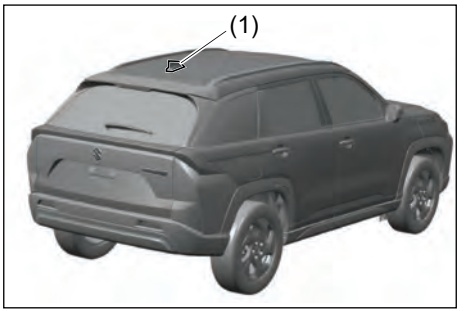


71UM07061

(1) Radio antenna

## Installation of Radio Frequency Transmitters

We recommend that you always ask an authorized Maruti Suzuki workshop about frequency band, max output power, antenna position of vehicle and specific conditions for installation and/or use before installing a radio transmitter in your vehicle. Such equipments may cause the electronic control system to malfunction if they are incorrectly installed or they are not suited for the vehicle.

***NOTICE***

**Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios or any other wireless transmitters may cause electronic interference with your vehicle's ignition system or any other electrical systems resulting in vehicle performance problems. Consult a Maruti Suzuki authorized workshop for advice.**

## Audio Function

### When Using Audio System with Appropriate Volume not to Disturb Safe Driving

- When playing music or other audio, if a mobile phone is used inside or nearby the vehicle, noise may be heard from the speakers. This does not indicate a malfunction.
- Navigation and audio equipment may not function properly if they are interfered with unauthorized radio waves.
- For further information about the features of the navigation or audio equipment, refer to the instruction manuals.

**⚠ WARNING**

**If you operate the navigation or audio equipment, you may be distracted by them, resulting in an accident.**
**Do not operate the navigation or audio equipment while driving.**


***NOTICE***

**While the engine is stopped, using the navigation or audio equipment for a long period of time may cause the lead-acid battery to run out.**
**Do not use the navigation or audio equipment for a long period of time while the engine is stopped.**

## Remote Audio Controls (if equipped)

Basic functions of the audio system can be controlled using the switches on the steering wheel & instrument panel.
The remote audio switches are available when the engine switch / the power switch is in ACC or ON mode.

- For operation of an audio system or a navigation system, refer to the audio manual, provided along with it.
- The operating procedure may be different depending on an audio system or a navigation system.

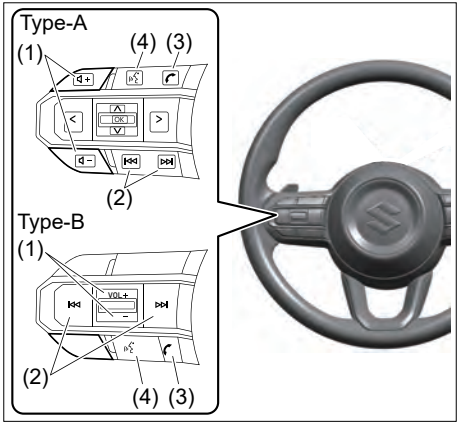



71UM07059

(1) Volume switch
(2) Select switch
(3) Hands-free switch
(4) Voice recognition switch

### Volume Switch (1)
You can adjust volume with this switch.
- To increase the volume, press "+" side.
- To decrease the volume, press "–" side.
- The volume will continue to increase or decrease until this switch is released.

*NOTE:*
*You can also adjust the volume by operating the volume knob (1). Turning the volume knob clockwise increases the volume, while turning it counter clockwise decreases it.*

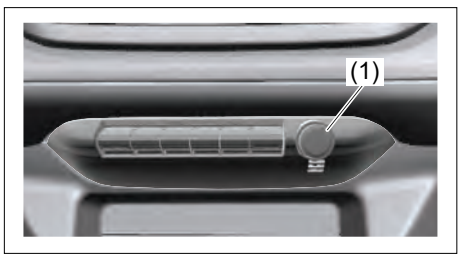



71UM07064

(1) Volume Knob

### Mute Switch
To mute this sound, press the switch.


*NOTE:*
- *Pressing the volume knob (1) will mute the sound. Pressing it again will unmute it.*

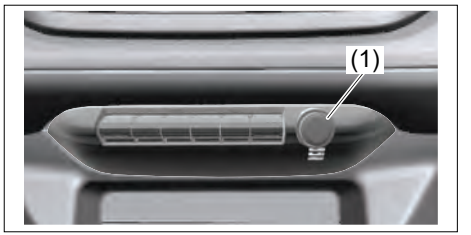


71UM07064

(1) Volume Knob

- *To mute: long press "-" side.*

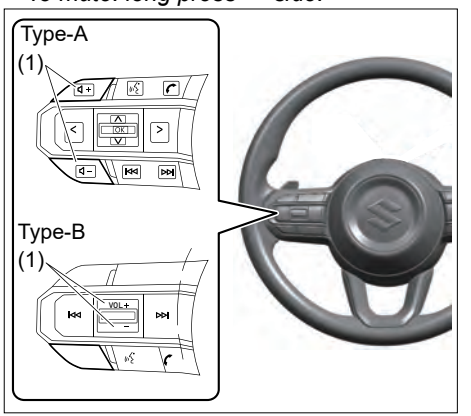


71UM07065

### Select Switch (2)
Every time you press this switch, you can select broadcast station or music according to your preference, along with the currently selected mode.

### Hands-free Switch (3)
You can use this switch for the equipment which has the hands-free function. To use the function, you need to set up for the equipment. Refer to the audio manual for details.

### Voice Recognition Switch (4)*
You can use this switch for the equipment which has the voice recognition function. To use the function, you need to set up for the equipment. Refer to the audio manual for details.

*: When using Apple CarPlay or Android Auto™ on infotainment system

Apple CarPlay may not be available in your country or region.
For details about Apple CarPlay, visit the following site:
http://www.apple.com/ios/carplay

Android Auto™ may not be available in your country or region.
For details about Android Auto, please refer to the Google support site:
http://support.google.com/androidauto

## Suzuki Connect (if equipped)

Suzuki Connect is an advanced Telematics solution that offers Connected car features related to Vehicle Alerts & Notifications, Safety & Security, Trips & Location & Remote Vehicle Operation.

Refer to *MARUTI SUZUKI* website for below details:

1. Feature & Vehicle applicability
2. Terms & Conditions
3. FAQs
4. Suzuki Connect App Manual
5. Help & Contact us
6. Suzuki Connect Alexa Skill Manual

### Remote AC (if equipped)

Allows you to set cabin temperature remotely to desired level (18 - 32 Celsius degree) for 10 minutes while starting Vehicle Engine. You can remotely stop Remote AC anytime within 10 minutes of Remote AC ON Request success. Additionally, you can set Defroster & Rear Defogger ON/OFF. This remote request shall be authenticated through preset mPIN (Mobile PIN) after consent is given by customer.

**Modes of operation**

This feature can be operated from three modes:

- Suzuki Connect Application
- Smart Watch
- Suzuki Connect skill for Amazon Alexa

**Operating conditions**

Remote AC ON request shall be processed when all of following operational conditions are met:

- Ignition is OFF
- Parking brake is engaged
- All doors are locked properly
- Hood is closed properly
- Brake Pedal is not depressed
- Gearshift lever is in “P” (Park) position
- Key FOB is not detected in the vehicle
- Steering lock is engaged
- Vehicle is parked in good cellular network area
- It has been less than 9 days since last ignition OFF
- No Malfunction present in vehicle before ignition OFF

**Terminating conditions**

Remote AC ON request shall be terminated when any of following conditions is met:

- Telematics device is unable to communicate with vehicle (No network location)
- Battery voltage is low
- Any Doors, hood, or trunk is opened
- Key FOB is detected inside the vehicle
- When the vehicle is in motion or in IG-ON/EG-ON status
- When the brake is applied
- Gearshift is in position other than “P” Park position.
- When there is a problem with the air conditioner (malfunction of AC) or any
- Pressing the engine switch
- When the engine is stalled

**⚠ WARNING**

- **Accumulation of poisonous exhaust gases in enclosed area may lead to serious health issues and death in worst cases, Kindly ensure that**
  - **There are no passengers in the vehicle before usage of this feature**
  - **Park Vehicle in the areas where you can safely use this feature**
  - **Avoid usage in enclosed places like garage, multi-level car parking, etc.**
  - **Make sure that the ventilation opening and muffler are not blocked before use**
- **There is high risk of fire accident due to high temperature exhaust gases when flammable materials are surrounded by car. Kindly ensure that no flammable material (such as oil or dry leaves) are nearby the vehicle and Vehicle is not covered with body cover.**

(Continued)

**⚠ WARNING**

(Continued)

- **Never use this function when there are passengers in the car. Remote AC ON creates anxiety, panic or discomfort in passengers inside car, due to sudden Engine ON/OFF & change in cabin temperature.**
- **Never use this feature while the vehicle is under inspection or maintenance at service center or at a gas station. Sudden start of engine during maintenance can be a safety hazard for the technician working on the vehicle or for you**

**⚠ CAUTION**

- **Following operations may get activated due to Remote AC ON feature:**
  - **– Wipers get activated if left in ON condition**
  - **– Audio may turn on**
- **Desired temperature may not be achieved when any of windows is opened.**

***NOTICE***

- **Do not use this function on public roads.**
- **Depending on where you live, idling may be prohibited or restricted by an ordinance, so please check it before use.**
- **Use the feature only when essential and ready to board on your journey for effective fuel efficiency.**

*NOTE:*

- *Application services are subject to change. It is recommended to install the latest updates from Google Play/Apple App store for optimal experience.*
- *Application functioning is subject to network availability & also depends on Smartphone hardware & OS performance.*
- *Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.*

The communication device equipped with your vehicle includes free/open source software.

The license information and/or source code for free/open source software is available at the following URL:

http://www.opensourceautomotive.com/suzuki/DCM3

## Infotainment Applications (if equipped)

### Applications (if equipped)

Applications is a smart infotainment app store, providing access to a wide variety of third-party applications. You can explore and download popular apps directly to the system for enhanced functionality and entertainment.

*Refer your Maruti Suzuki vehicle User Manual for below details:
1.Features and accessibility
2.App Categories
3.Troubleshooting Errors

### Suzuki Navigation (if equipped)

Suzuki Navigation is a customized Navigation App to search for places , locations and provide routes for navigation. It comes pre-installed in your vehicle's infotainment system.

*Refer your Maruti Suzuki vehicle User Manual for below details:
1.Features and accessibility
2.Troubleshooting Errors


### Remote Control App

The Remote-Control Application for Car Infotainment System offers seamless connectivity between your smartphone and your car. Through a simple pairing process, the app empowers you to remotely control key infotainment features.

*Refer your Maruti Suzuki brochure for Applicable Remote control App name.

*Refer your Maruti Suzuki vehicle User Manual for features and connectivity

# VEHICLE LOADING AND TOWING

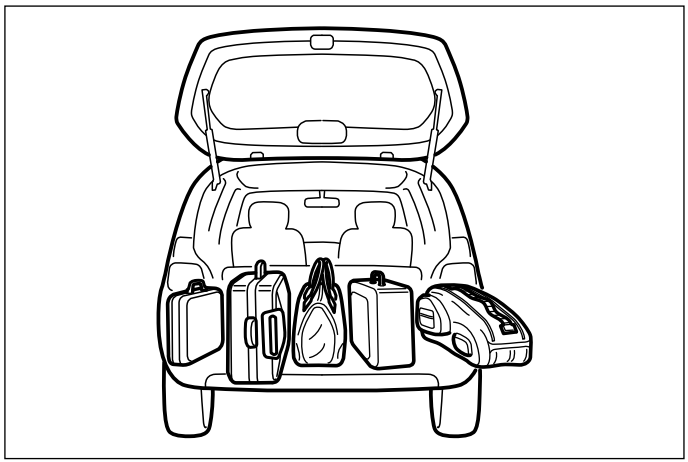

54G215

**Vehicle Loading ..... 8-1**
**Trailer Towing ..... 8-1**

## Vehicle Loading

Your vehicle was designed for specific weight capacities. The weight capacities of your vehicle are indicated by the Gross Vehicle Weight Rating (GVWR) and the Permissible maximum Axle Weight (PAW, front and rear). The GVWR and PAW (front and rear) are listed in the "SPECIFICATIONS" section.

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).
PAW – (Front and Rear) Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle. Compare these weights to the GVWR and PAW (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.


**⚠ WARNING**

- **Never overload your vehicle. The gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories, cargo plus trailer nose weight if towing a trailer) must never exceed the Gross Vehicle Weight Rating (GVWR). In addition, never distribute a load so that the weight on either the front or rear axle exceeds the Permissible maximum Axle Weight (PAW).**
- **Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.**

## Trailer Towing


Your vehicle was originally designed to carry people and a normal amount of cargo, not to tow a trailer.

# INSPECTION AND MAINTENANCE

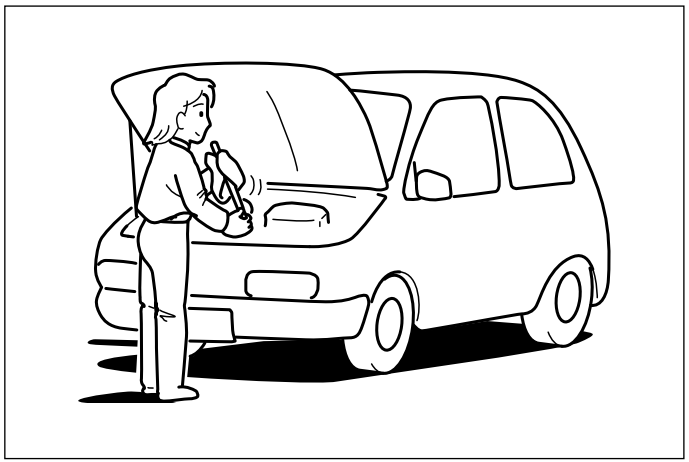

60G410


Maintenance Schedule ..... 9-2
Periodic Maintenance Schedule
- For K15C Engine Model ..... 9-2
Periodic Maintenance Schedule - M15D engine model ..... 9-7
Drive Belt ..... 9-11
Engine Oil and Filter ..... 9-11
Engine Coolant ..... 9-13
Air Cleaner ..... 9-15
Spark Plugs ..... 9-15
Automatic Transmission Fluid (if equipped) ..... 9-16
Gear Oil ..... 9-16
Clutch ..... 9-17
Brakes ..... 9-18
Steering Wheel ..... 9-21
Tyres ..... 9-22
Battery ..... 9-25
Fuses ..... 9-27
Headlight Aiming ..... 9-33
Bulb Replacement ..... 9-34
Wiper Blades ..... 9-45
Windshield Washer Fluid ..... 9-48
Air Conditioning System ..... 9-48
Cleaning the Hybrid Battery Air Intake Vent and Filter
(M15D Engine Model) ..... 9-49
Preparation Before Winter Season ..... 9-50

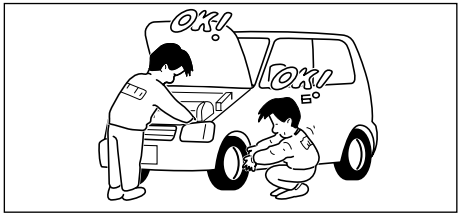


59RN05750

**⚠ WARNING**

**Take extreme care when working on your vehicle to prevent accidental injury. Carefully observe the following precautions:**

- **To prevent damage or unintended activation of the airbag system or seat belt pretensioner system, check that the lead-acid battery is disconnected and the ignition switch has been in "LOCK" position or the ignition mode has been in LOCK (OFF) position for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle. Do not touch airbag system components, seat belt pretensioner system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.**
- **Do not leave the engine running in garages or other confined areas.**

(Continued)

**⚠ WARNING**

(Continued)

- **When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.**
- **When it is necessary to perform service work with the engine running, check that the parking brake is set fully and the transmission is in Neutral (for manual transmission vehicles) or Park (for automatic transmission vehicles).**
- **Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.**
- **Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.**
- **Do not allow smoking, sparks, or flames around fuel or the battery. Flammable fumes are present.**

(Continued)

**⚠ WARNING**

(Continued)

- **Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.**
- **Be careful not to cause accidental short circuits between the positive and negative battery terminals.**
- **Keep used oil, coolant, and other fluids away from children and pets. Dispose of used fluids properly; never pour them on the ground, into sewers, etc.**

## Maintenance Schedule

The following table shows the times when you should perform regular maintenance on your vehicle. This table shows in kilometers and months when you should perform inspections, adjustments, lubrication and other services.

**⚠ WARNING**

**MARUTI SUZUKI recommends that maintenance on your Maruti Suzuki vehicle should be performed by a Maruti Suzuki authorized workshop.**

## Periodic Maintenance Schedule - For K15C Engine Model

***NOTICE***

**Whenever it becomes necessary to replace parts on your vehicle, it is recommended that you use Maruti Suzuki genuine replacement parts or their equivalent.**

**"C": Clean**
**"R": Replace or Change**
**"I": Inspect, clean, adjust, lubricate or replace as necessary**
**"L": Lubricate**
**"T": Tighten to Specified Torque**
**"O": Rotate**

*NOTE:*

- *This table includes services as scheduled up to 80,000 km mileage. Beyond 80,000 km, carry out the same services at the same intervals respectively.*
- *For free inspection the cost of materials and consumables to be borne by customer.*

| Interval: This interval should be judged by odometer reading or months, whichever comes first. | | | FREE INSPECTION | | | PERIODIC MAINTENANCE AT COST | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | km (x1000) | 1 | 5 | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 |
| | | months | 1 | 6 | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 |
| **ENGINE** | | | | | | | | | | | | |
| 1-1. | Generator drive Belt (Wear) | ISG Model | – | – | I | I | R | I | I | R | I | I |
| | | Non-ISG Model | – | – | I | I | I | I | I | I | I | R |
| 1-2. | Water pump drive belt (Wear) | | – | – | I | I | I | I | I | I | I | R |
| 1-3. | Engine Coolant SUZUKI LLC: Super (Blue) | First time only: | Replace at 100000 km or 60 months whichever comes first. | | | | | | | | | |
| | | Second time and after: | Replace every 40000 km or 24 months whichever comes first. | | | | | | | | | |
| 1-4. | Engine oil, engine oil filter and drain plug gasket (Level, Leakage) | | I | I | R | R | R | R | R | R | R | R |
| 1-5. | Cooling system hoses and connections (Leakage and Damage) | | I | I | I | I | I | I | I | I | I | I |
| 1-6. | Engine Mounting & manifold fixing (Loose, Damage) | | – | – | I | – | I | – | I | – | I | – |
| 1-7. | Exhaust System (Noise, Leakage etc.) | | – | I | – | I | – | I | – | I | – | I |
| 1-8. | Positive Crank Case Ventilation System (Hoses, Connections and Valve) | | – | I | – | I | – | I | – | I | – | I |
| **IGNITION** | | | | | | | | | | | | |
| 2-1. | Spark Plug | Petrol | Replace after every 100000 km or 84 months whichever comes first. | | | | | | | | | |
| | | CNG | Replace every 50000 km or 48 months whichever comes first | | | | | | | | | |
| **FUEL** | | | | | | | | | | | | |
| 3-1. | Air cleaner filter element | Paved-road | Clean after every 5000 km. Replace after every 40000 km. | | | | | | | | | |
| | | Dusty Condition | Clean after every 2500 km or as required. Replace after every 40000 km. | | | | | | | | | |
| 3-2. | Fuel tank cap, fuel lines and connections (Leakage and Damage) | | – | I | – | – | – | I | – | – | – | I |
| 3-3. | Fuel Filter | | Replace after every 100000 km or 120 months whichever comes first. | | | | | | | | | |
| 3-4. | Fuel Tank | | – | – | – | – | – | I | – | – | – | I |
| **CLUTCH AND TRANSMISSION** | | | | | | | | | | | | |
| 4-1. | Clutch fluid (Level, Leakage) (#) | | I | I | I | I | I | I | I | I | I | I |
| | | | Replace every 40000 km or 24 months whichever comes first | | | | | | | | | |
| 4-2. | Clutch slipping (Dragging or Excess Damage) | | I | I | I | I | I | I | I | I | I | I |
| 4-3. | Clutch pedal | | I | I | I | I | I | I | I | I | I | I |

# Clutch Fluid is supplied from brake fluid reservoir

| Interval: This interval should be judged by odometer reading or months, whichever comes first. | | | FREE INSPECTION | | | PERIODIC MAINTENANCE AT COST | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | km (xI000) | 1 | 5 | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 |
| | | months | 1 | 6 | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 |
| 4-3. | Manual Transmission Oil (Level, Leakage) | | I | I | I | I | I | I | I | I | I | I |
| 4-4. | Automatic Transaxle Fluid (Leakage) | | – | – | – | I | – | I | – | I | – | I |
| 4-5. | Transfer Oil (4WD) (Level, Leakage) | | I | I | I | I | I | I | I | I | I | I |
| | | | Replace every 150000 km or 120 months whichever comes first | | | | | | | | | |
| 4-6. | Rear Differential Oil (4WD) (Level, Leakage) | | I | I | I | I | I | I | I | I | I | I |
| | | | Replace every 150000 km or 120 months whichever comes first | | | | | | | | | |
| 4-7. | Hose, Automatic Transaxle Cooler (Leakage & Damage) | | I | I | I | I | I | I | I | I | I | I |
| 4-8. | Gear shifter (Operation) | | I | I | I | I | I | I | I | I | I | I |
| **DRIVE SHAFT** | | | | | | | | | | | | |
| 5-1. | Drive shaft noise | | I | I | I | I | I | I | I | I | I | I |
| 5-2. | Drive shaft boot / Propeller shafts (boot damage) | | – | I | I | I | I | I | I | I | I | I |
| **BRAKE** | | | | | | | | | | | | |
| 6-1. | Brake Fluid (Level, Leakage) | | I | I | I | I | I | I | I | I | I | I |
| | | | Replace every 40000 km or 24 months whichever comes first | | | | | | | | | |
| 6-2. | Brake pedal (Pedal - wall clearance) | | I | I | I | I | I | I | I | I | I | I |
| 6-3. | Parking brake lever and cable (Play, Damage) | | I | I | I | I | I | I | I | I | I | I |
| 6-4. | Brake disc and pad (Wear) | | – | I | I | I | I | I | I | I | I | I |
| 6-6. | Brake hoses and pipes (Fluid leakage, Damage) | | I | I | I | I | I | I | I | I | I | I |
| 6-7. | Master cylinder, wheel cylinder and caliper piston (Fluid leakage, boot/seal damage) | | I | I | I | I | I | I | I | I | I | I |
| **WHEEL** | | | | | | | | | | | | |
| 7-1. | Tires (Air pressure, Abnormal wear, Crack and Rotation) | | I | I&O | I&O | I&O | I&O | I&O | I&O | I&O | I&O | I&O |
| 7-2. | Wheels (Damage) | | I | I | I | I | I | I | I | I | I | I |
| 7-3. | Front/Rear wheel bearing (Loose, Damage) | | I | I | I | I | I | I | I | I | I | I |

| Interval: This interval should be judged by odometer reading or months, whichever comes first. | | FREE INSPECTION | | | PERIODIC MAINTENANCE AT COST | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | km (xl000) | 1 | 5 | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 |
| | months | 1 | 6 | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 |
| **FRONT / REAR SUSPENSION** | | | | | | | | | | | |
| 8-1. | Suspension strut (Oil leakage, Damage) | I | I | I | I | I | I | I | I | I | I |
| 8-2. | Suspension arms / Knuckle support and Torsion rods (Loose, Damage) | – | I | I | I | I | I | I | I | I | I |
| 8-3. | Rear spring (Damage) | I | I | I | I | I | I | I | I | I | I |
| 8-4. | Shock absorbers (Oil leakage, Damage) | I | I | I | I | I | I | I | I | I | I |
| 8-5. | All bolts and nuts (Loose) | – | T | T | T | T | T | T | T | T | T |
| **STEERING** | | | | | | | | | | | |
| 9-1. | Steering wheel (Play, Loose) | I | I | I | I | I | I | I | I | I | I |
| 9-2. | All rods and arms (Loose, Damage, Wear) | I | I | I | I | I | I | I | I | I | I |
| 9-3. | Tilt & Telescopic Steering (Operation) | I | I | I | I | I | I | I | I | I | I |
| **ELECTRICAL** | | | | | | | | | | | |
| 10-1. | Battery - electrolyte (Level, leakage) and voltage | I | I | I | I | I | I | I | I | I | I |
| 10-2. | Wiring harness connection (Loose, Damage) | – | I | I | I | I | I | I | I | I | I |
| 10-3. | Lighting system (Operation, Stains, Damage) | I | I | I | I | I | I | I | I | I | I |
| 10-4. | Wiper (Operation, Stains, Damage) | I | I | I | I | I | I | I | I | I | I |
| 10-5. | Horn (Operation) | I | I | I | I | I | I | I | I | I | I |
| 10-6. | USB and accessory socket (Operation) | – | I | I | I | I | I | I | I | I | I |
| 10-7. | Sunroof (Operation) | I | I | I | I | I | I | I | I | I | I |
| 10-8. | Wireless charger | I | I | I | I | I | I | I | I | I | I |

**⚠ WARNING**

**The shock absorbers are filled with high pressure gas. Never attempt to disassemble them or throw them into a fire. Avoid storing them near a heater or heating device. When scrapping the absorber, the gas must be released from the absorber safely. Ask Maruti Suzuki authorized workshop for assistance.**

| Interval: This interval should be judged by odometer reading or months, whichever comes first. | | FREE INSPECTION | | | PERIODIC MAINTENANCE AT COST | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | km (xI000) | 1 | 5 | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 |
| | months | 1 | 6 | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 |
| **BODY** | | | | | | | | | | | |
| 11-1. | All chassis bolts and nuts (Tighten) | – | T | T | T | T | T | T | T | T | T |
| 11-2. | All latches, hinges and locks (Function) | I | I&L | I&L | I&L | I&L | I&L | I&L | I&L | I&L | I&L |
| **ROAD TEST** | | | | | | | | | | | |
| 12-1. | Operation of Brakes, gear shifting and speedometer | I | I | I | I | I | I | I | I | I | I |
| 12-2. | Body and chassis noise | I | I | I | I | I | I | I | I | I | I |
| **AIR CONDITIONER** | | | | | | | | | | | |
| 13-1. | Tighten compressor mounting bolt | – | T | T | T | T | T | T | T | T | T |
| 13-2. | All hose joint (Check, Tighten) | I | I | I | I | I | I | I | I | I | I |
| 13-3. | Check functioning of Recirculating flap | I | I | I | I | I | I | I | I | I | I |
| 13-4. | Clean condenser with low pressure water | – | C | C | C | C | C | C | C | C | C |
| 13-5. | Check all mounting bolts | I | I | I | I | I | I | I | I | I | I |
| 13-6. | Air conditioner filter element (PM 2.5 filter) | – | – | R | R | R | R | R | R | R | R |
| 13-7. | Air conditioner filter element | I | I | I | I | R | I | I | R | I | I |

## Periodic Maintenance Schedule - M15D engine model

**"C": Clean**
**"R": Replace or Change**
**"I": Inspect, clean, adjust, lubricate or replace as necessary**
**"L": Lubricate**
**"T": Tighten to Specified Torque**
**"O": Rotate**

*NOTE:*
*This table includes services as scheduled up to 80,000 km mileage. Beyond 80,000 km, carry out the same services at the same intervals respectively.*

| Interval: This interval should be judged by odometer reading or months, whichever comes first. | | | FREE INSPECTION | | | PERIODIC MAINTENANCE AT COST | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | | km (x1000) | 1 | 5 | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 |
| | | months | 1 | 6 | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 |
| **ENGINE** | | | | | | | | | | | | |
| 1-1. | Engine Coolant (Level, Leakage) | First time: | Replace at 160000 km or 96 months | | | | | | | | | |
| | | Second time and after: | Replace at 80000 km or 48 months | | | | | | | | | |
| 1-2. | Engine oil, engine oil filter and drain plug gasket (Level, Leakage) | | – | – | R | R | R | R | R | R | R | R |
| 1-3. | Cooling system hoses and connections (Leakage and Damage) | | – | – | I | I | I | I | I | I | I | I |
| 1-4. | Engine Mounting & manifold fixing (Loose, Damage) | | – | – | I | – | I | – | I | – | I | – |
| 1-5. | Exhaust System (Noise, Leakage etc.) | | – | – | – | I | – | I | – | I | – | I |
| 1-6. | Inverter coolant (Level, Leakage) | First time: | Replace at 160000 km or 96 months | | | | | | | | | |
| | | Second time and after: | Replace at 80000 km or 48 months | | | | | | | | | |
| **IGNITION** | | | | | | | | | | | | |
| 2-1. | Spark Plug | | Replace after every 100000 km or 84 months whichever comes first. | | | | | | | | | |
| **FUEL** | | | | | | | | | | | | |
| 3-1. | Air cleaner filter element | Paved-road | – | – | I | I | R | I | I | R | I | I |
| | | Dusty Condition | Clean after every 2500 km or as required. Replace after every 30000 km. | | | | | | | | | |
| 3-2. | Fuel tank cap, fuel lines and connections (Leakage and Damage) | | – | – | – | I | – | I | – | I | – | I |
| 3-3. | Fuel Filter | | Replace after every 100000 km or 120 months whichever comes first. | | | | | | | | | |
| 3-4. | Fuel Tank | | – | – | – | – | – | I | – | – | – | I |
| **TRANSMISSION** | | | | | | | | | | | | |
| 4-1. | Transaxle Oil (Leakage) | | – | – | – | – | – | I | – | – | – | I |
| 4-2. | Fluid Hose | | – | – | – | – | – | I | – | – | – | I |
| 4-3. | Gear shifter (Operation) | | I | I | I | I | I | I | I | I | I | I |

| Interval: This interval should be judged by odometer reading or months, whichever comes first. | | | FREE INSPECTION | | | PERIODIC MAINTENANCE AT COST | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | km (xI000) | 1 | 5 | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 |
| | | months | 1 | 6 | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 |
| **DRIVE SHAFT** | | | | | | | | | | | | |
| 5-1. | Drive shaft noise | | I | I | I | I | I | I | I | I | I | I |
| 5-2. | Drive shaft boot (boot damage) | | – | I | I | I | I | I | I | I | I | I |
| **BRAKE** | | | | | | | | | | | | |
| 6-1. | Brake Fluid (Level, Leakage) | | I | I | I | I | I | I | I | I | I | I |
| | | | Replace every 40000 km or 24 months whichever comes first | | | | | | | | | |
| 6-2. | Brake pedal (Pedal - wall clearance) | | I | I | I | I | I | I | I | I | I | I |
| 6-3. | Parking brake lever and cable (Play, Damage) | | I | I | I | I | I | I | I | I | I | I |
| 6-4. | Brake disc and pad (Wear) | | – | I | I | I | I | I | I | I | I | I |
| 6-6. | Brake hoses and pipes (Fluid leakage, Damage) | | I | I | I | I | I | I | I | I | I | I |
| 6-7. | Master cylinder, wheel cylinder and caliper piston (Fluid leakage, boot/seal damage) | | I | I | I | I | I | I | I | I | I | I |
| **WHEEL** | | | | | | | | | | | | |
| 7-1. | Tires (Air pressure, Abnormal wear, Crack and Rotation) | | I | I&O | I&O | I&O | I&O | I&O | I&O | I&O | I&O | I&O |
| 7-2. | Wheels (Damage) | | I | I | I | I | I | I | I | I | I | I |
| 7-3. | Front/Rear wheel bearing (Loose, Damage) | | I | I | I | I | I | I | I | I | I | I |
| **FRONT / REAR SUSPENSION** | | | | | | | | | | | | |
| 8-1. | Suspension strut (Oil leakage, Damage) | | I | I | I | I | I | I | I | I | I | I |
| 8-2. | Suspension arms / Knuckle support and Torsion rods (Loose, Damage) | | – | I | I | I | I | I | I | I | I | I |
| 8-3. | Rear spring (Damage) | | I | I | I | I | I | I | I | I | I | I |
| 8-4. | Shock absorbers (Oil leakage, Damage) | | I | I | I | I | I | I | I | I | I | I |
| 8-5. | All bolts and nuts (Loose) | | – | T | T | T | T | T | T | T | T | T |

**⚠ WARNING**

**The shock absorbers are filled with high pressure gas. Never attempt to disassemble them or throw them into a fire. Avoid storing them near a heater or heating device. When scrapping the absorber, the gas must be released from the absorber safely. Ask Maruti Suzuki authorized workshop for assistance.**

| Interval: This interval should be judged by odometer reading or months, whichever comes first. | | | FREE INSPECTION | | | PERIODIC MAINTENANCE AT COST | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | km (xl000) | 1 | 5 | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 |
| | | months | 1 | 6 | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 |
| **STEERING** | | | | | | | | | | | | |
| 9-1. | Steering wheel (Play, Loose) | | I | I | I | I | I | I | I | I | I | I |
| 9-2. | All rods and arms (Loose, Damage, Wear) | | I | I | I | I | I | I | I | I | I | I |
| 9-3. | Tilt & Telescopic Steering (Operation) | | I | I | I | I | I | I | I | I | I | I |
| **ELECTRICAL** | | | | | | | | | | | | |
| 10-1. | Battery - electrolyte (Level, leakage) and voltage | | I | I | I | I | I | I | I | I | I | I |
| 10-2. | Wiring harness connection (Loose, Damage) | | – | I | I | I | I | I | I | I | I | I |
| 10-3. | Lighting system (Operation, Stains, Damage) | | I | I | I | I | I | I | I | I | I | I |
| 10-4. | Wiper (Operation, Stains, Damage) | | I | I | I | I | I | I | I | I | I | I |
| 10-5. | Horn (Operation) | | I | I | I | I | I | I | I | I | I | I |
| 10-6. | USB and accessory socket (Operation) | | – | I | I | I | I | I | I | I | I | I |
| 10-7. | Sunroof (Operation) | | I | I | I | I | I | I | I | I | I | I |
| 10-8. | Wireless charger | | I | I | I | I | I | I | I | I | I | I |
| **BODY** | | | | | | | | | | | | |
| 11-1. | All chassis bolts and nuts (Tighten) | | – | T | T | T | T | T | T | T | T | T |
| 11-2. | All latches, hinges and locks (Function) | | I | I&L | I&L | I&L | I&L | I&L | I&L | I&L | I&L | I&L |
| 11-3. | Hybrid battery cooling intake filter | | – | – | I | I | I | I | I | I | I | I |
| **ROAD TEST** | | | | | | | | | | | | |
| 12-1. | Operation of Brakes, gear shifting and speedometer | | I | I | I | I | I | I | I | I | I | I |
| 12-2. | Body and chassis noise | | I | I | I | I | I | I | I | I | I | I |
| **AIR CONDITIONER** | | | | | | | | | | | | |
| 13-1. | Tighten compressor mounting bolt | | – | T | T | T | T | T | T | T | T | T |
| 13-2. | All hose joint (Check, Tighten) | | I | I | I | I | I | I | I | I | I | I |
| 13-3. | Check functioning of Recirculating flap | | I | I | I | I | I | I | I | I | I | I |
| 13-4. | Clean condenser with low pressure water | | – | C | C | C | C | C | C | C | C | C |
| 13-5. | Check all mounting bolts | | I | I | I | I | I | I | I | I | I | I |
| 13-6. | Air conditioner filter element (PM 2.5 filter) | | – | – | R | R | R | R | R | R | R | R |

## Drive Belt

**⚠ WARNING**

**When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.**


The drive belts tension is adjusted automatically. If the belt is too loose, insufficient lead-acid battery charging, engine overheating, poor power steering, poor air conditioning, or excessive belt wear can result. The belts should also be examined to ensure that they are not damaged.

If you need to replace or adjust the belt have it done by a Maruti Suzuki authorized workshop.

## Engine Oil and Filter


### Specified Oil

**For India - K15C engine model**

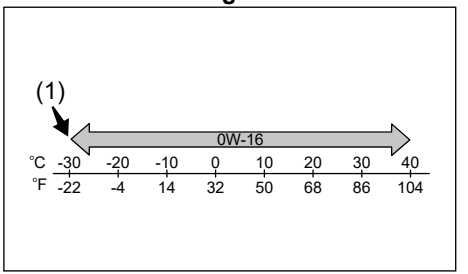


56RM07013

**Except for India - K15C engine model**

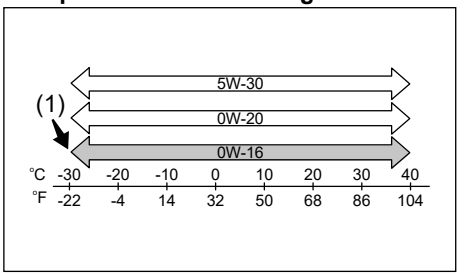


76TS90780

(1) Preferred

For India, check that the engine oil you use comes under the quality classification of API SN, SP. Select the appropriate oil viscosity according to the above chart.


Except for India, be sure that the engine oil you use comes under the quality classification as listed below.

- API SL, SM, SN, SP
- ILSAC GF-6

SAE 0W-16 (1) is the best choice for good fuel economy, and good starting in cold weather.

*NOTE:*
*We recommend that you use Maruti Suzuki genuine oil. To purchase it, see a Maruti Suzuki authorized workshop.*

**M15D engine model**

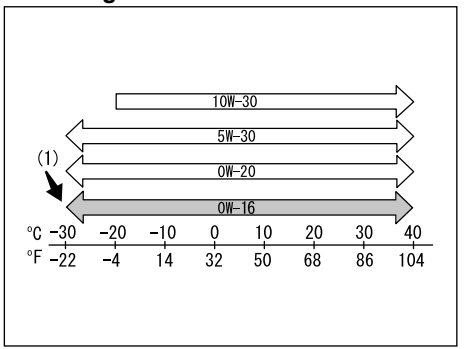


76TS90710

Be sure that the engine oil you use comes under the quality classification as listed below.

- API SL, SM, SP, SN, SN PLUS
- ILSAC GF-6A, 6B


Select the appropriate oil viscosity according to the above chart.

SAE 0W-16 (1) is the best choice for good fuel economy, and good starting in cold weather.

*NOTE:*
*We recommend that you use Maruti Suzuki genuine oil. To purchase it, see a Maruti Suzuki authorized workshop.*


## Oil Level Check

**K15C engine model**

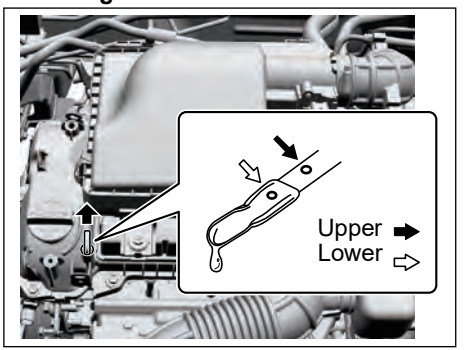


76TS90140

**M15D engine model**

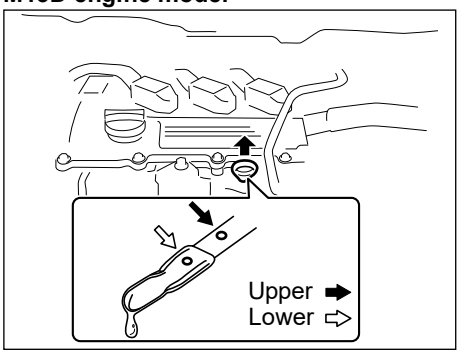


76TS90650

It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or hybrid system, or at least 5 minutes after stopping the engine or hybrid system.

Pull out the oil dipstick, wipe the oil off with a clean cloth, insert the dipstick all the way into the engine, and then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower limit, add enough oil to raise the level to the upper limit.

| *NOTICE* |
| --- |
| **Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.** |

### Refilling

Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

### Changing Engine Oil

Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

### Oil Filter Replacement
Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

### Refilling with Oil and Oil Leakage Check
Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

## Engine Coolant

### Selection of Coolant
To maintain optimum performance and durability of your engine, use Maruti Suzuki genuine coolant or equivalent.

This type of coolant is the best for cooling system for the following reasons:
- The coolant helps maintain proper engine temperature.
- It gives proper protection against freezing and boiling.
- It gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system. Your Maruti Suzuki authorized workshop can help you select the proper coolant.

Please check the type of coolant before refilling:
K15C Engine : Blue Coolant
M15D(SHVS) Engine: Pink Coolant

***NOTICE***

**To avoid damaging your cooling system:**
- **Check that the proper mix is 50/50 coolant to distilled water and in no case higher than 50/50. Concentrations greater than 50/50 coolant to distilled water will cause overheating conditions.**
- **Do not use straight coolant nor plain water.**
- **Do not add extra inhibitors or additives. They may not be compatible with your cooling system.**
- **Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/or the possibility of severe overheating and extensive engine/automatic transmission damage.**

### Coolant Level Check

Check the coolant level at the reservoir tank, not at the radiator. With the engine and hybrid system cool, the coolant level should be between “FULL” and “LOW” marks.

### Adding Coolant

**⚠ WARNING**


**Swallowing engine coolant and inverter coolant can cause severe injury or death. Inhaling coolant mist or vapors or getting coolant in your eyes could result in severe injury.**

- **Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician.**
- **Avoid inhaling coolant mist or hot vapors. If inhaled, remove to a fresh air area.**
- **If coolant gets in the eyes, flush with water and seek medical attention.**
- **Wash thoroughly after handling coolant.**
- **Keep engine coolant out of the reach of children and pets.**

***NOTICE***


**This coolant is already diluted to the proper percentage. Do not diluted with distilled water additionally. Doing so may result in the possibility of freezing and/or overheating coolant.**

**Engine coolant**
**K15C engine model**

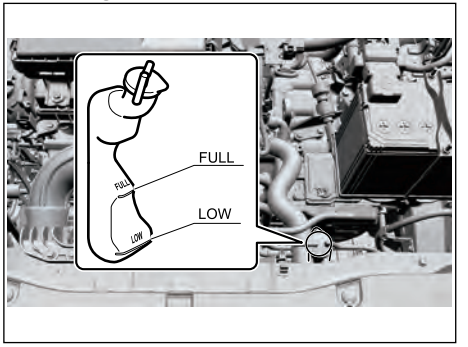


76TS90050


**M15D engine model**

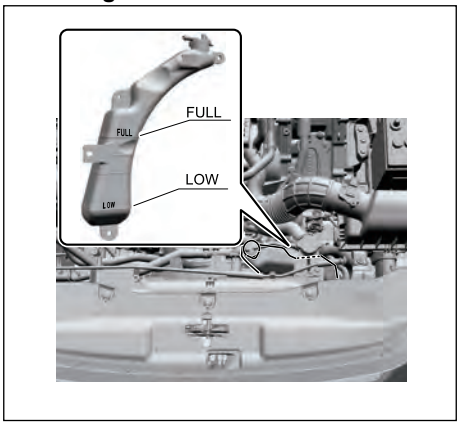


76TS90680

If the engine coolant level is below “LOW” mark, coolant should be added. While the engine is cool, remove the reservoir tank cap and add coolant until the reservoir tank level reaches “FULL” mark. Never fill the reservoir tank above “FULL” mark.

**Inverter coolant**

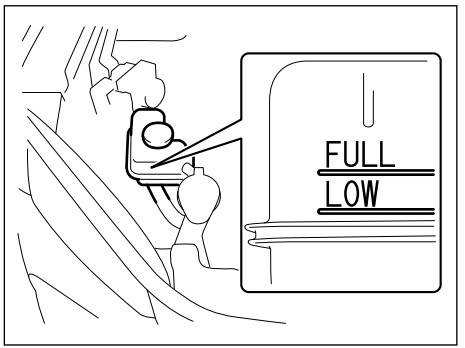


76TS90440

If the inverter coolant level is below “LOW” mark, coolant should be added. While the hybrid system is cool, remove the reservoir tank cap and add coolant until the reservoir tank level reaches “FULL” mark. Never fill the reservoir tank above “FULL” mark.

| *NOTICE* |
| --- |
| **When putting the cap on the reservoir tank, line up the mark on the cap and the mark on the tank. Failure to follow this can result in coolant leakage.** |

### Coolant Replacement

Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

## Air Cleaner

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.
Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

## Spark Plugs

### Spark Plug Replacement and Inspection

Since special procedures, materials and tools are required, it is recommended that you trust this job to a Maruti Suzuki authorized workshop.

## Automatic Transmission Fluid (if equipped)

### Specified Fluid

**6AT model**
Use an automatic transmission fluid SUZUKI AT OIL AW-1.

**e-CVT model**
Use an automatic transmission fluid AUTO FLUID WS.

### Fluid Level Check

**6AT model**
Since special procedures, materials, and tools are required to change the automatic transmission oil, ask a Maruti Suzuki authorized workshop for this job.

**e-CVT model**
Since special procedures, materials, and tools are required to change the automatic transmission oil, ask your Maruti Suzuki authorized workshop for this job.

### Changing Oil

Since special procedures, materials, and tools are required to change the automatic transmission oil, ask your Maruti Suzuki authorized workshop for this job.


## Gear Oil

### Manual Transmission Oil / Transfer Oil (4WD) / Rear Differential Oil (4WD))

When adding gear oil, use gear oil with the appropriate viscosity and grade as shown in the chart below.

We highly recommend you use “MARUTI GENUINE GEAR OIL 75W” for manual transmission oil.


**Manual transmission oil**

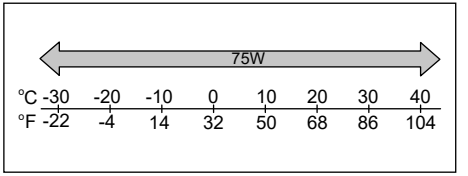


56RM07006

We highly recommend you use “SUZUKI GEAR OIL 75W-85” for transfer oil (4WD) and rear differential oil (4WD).

**Transfer oil (4WD)**
**Rear differential oil (4WD)**

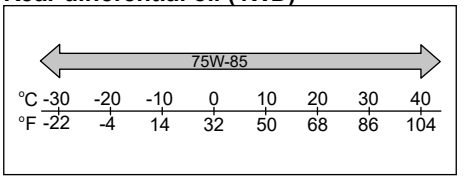



71LMT0701

### Gear Oil Level Check and Change

Since special procedures, materials and tools are required, ask your Maruti Suzuki authorized workshop for this job.

# Clutch

## Clutch Pedal

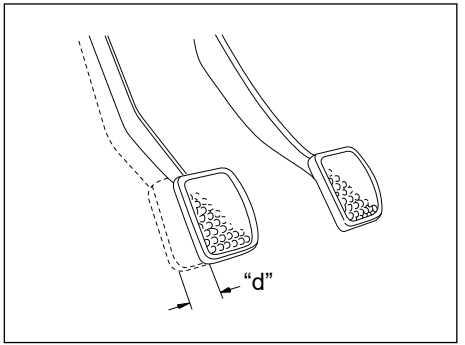



54G274

**Clutch pedal play "d":**
**MAX 10 mm**

Measure the clutch pedal play by moving the clutch pedal with your hand and measuring the distance it moves until you feel slight resistance. The play in the clutch pedal should be less than the specified values. If the play is more than the above, or clutch dragging is felt with the pedal fully depressed, have the clutch inspected by a Maruti Suzuki authorized workshop.

## Clutch Fluid

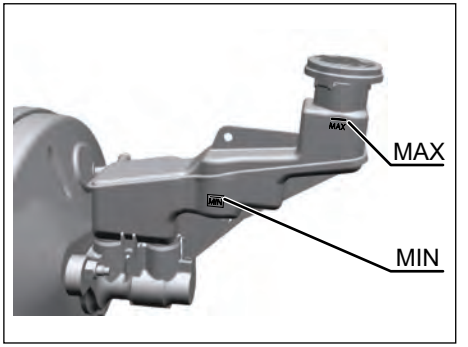


71UM09035

Check the clutch pedal for smooth operation and clutch fluid level from time to time. If clutch dragging is felt with the pedal fully depressed, have the clutch inspected by a Maruti Suzuki authorized workshop. If the clutch fluid level is near "MIN" line, fill it up to "MAX" line with "Brake Fluid DOT3".


***NOTICE***

**Clutch fluid is supplied from brake fluid reservoir. If your clutch fluid level is increased or near the "MIN" line, there is a possibility of clutch or brake fluid leakage or abnormal wear of clutch.**
**Have your vehicle inspected immediately by a Maruti Suzuki authorized workshop.**

## Brakes


### Brake Fluid

**K15C engine model**

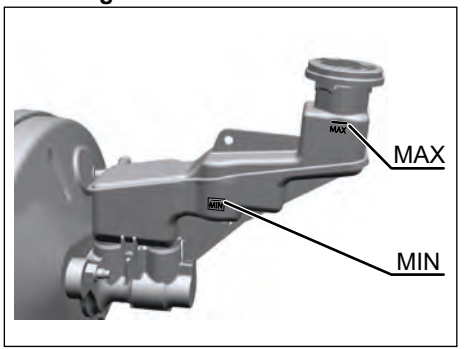


71UM09035

**M15D engine model**

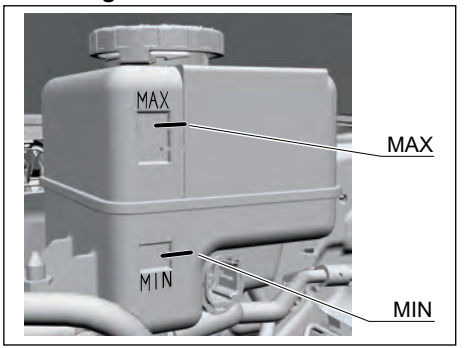


76TS90670

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between “MAX” and “MIN” lines.

**⚠ WARNING**

- **Failure to follow the guidelines below can result in personal injury or serious trouble in the brake system.**
  - **If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument cluster will come on (the engine must be running with the parking brake fully disengaged). Should the light come on, immediately ask a Maruti Suzuki authorized workshop to inspect the brake system.**
  - **A rapid fluid loss indicates leakage in the brake system. In this case, immediately ask a Maruti Suzuki authorized workshop to inspect the brake system.**
  - **We highly recommend to use “Brake fluid DOT3”. Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.**

(Continued)

**⚠ WARNING**

(Continued)

- **Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of reach of children and animals.**

***NOTICE***


- **If your brake fluid level is near the "MIN" line, there is a possibility of brake pad and/or shoe wear and brake fluid leakage. In this case, ask a Maruti Suzuki authorized workshop to inspect the brake system.**
- **Brake fluid can damage painted surfaces. Be careful when refilling the reservoir.**

*NOTE:*

- *The fluid level can be expected to gradually fall as the brake pad and/or shoe wear.*
- *Brake fluid absorbs water over time and brake fluid with high water content may cause vapor lock or brake system malfunction.*
  *Replace the brake fluid according to the maintenance schedule in this owner's manual.*

## Brake Pedal

Check brake pedal stroke. If the stroke is so large, have the brake system inspected by a Maruti Suzuki authorized workshop. If you doubt the brake pedal is at its normal height, check it as follows:

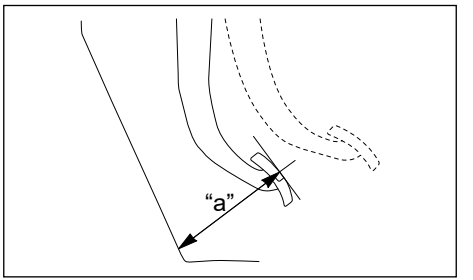



55T090060

**Minimum distance between brake pedal and floor carpet "a"**

| | |
|---|---|
| For K15C engine | 52 mm |
| For M15D engine | 68 mm |

With the engine running or the hybrid system activating, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg of force. The minimum distance required is as specified. Since your vehicle's brake system is self-adjusting, there is no need for pedal adjustment.
If the pedal to floor carpet distance as measured above is less than the minimum distance required, have your vehicle inspected by a Maruti Suzuki authorized workshop.

*NOTE:*
- *When measuring the distance between the brake pedal and floor wall, be sure not to include the floor mat or rubber on the floor carpet in your measurement.*
- *Measure the distance at the brake pedal's side facing toward the driver's door.*

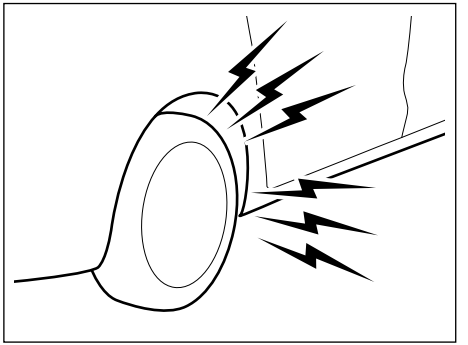

52RM70500


**⚠ WARNING**

**If the brake pad lining becomes worn and it has reached its minimum thickness, squealing noise sounds during braking.**
**If you hear this noise, have the vehicle inspected immediately by a Maruti Suzuki authorized workshop.**
**Continued driving with this condition can cause an accident.**

**⚠ CAUTION**

**If you experience any of the following problems with your vehicle's brake system, have the vehicle inspected immediately by a Maruti Suzuki authorized workshop.**
- **Poor braking performance**
- **Uneven braking (brakes not working uniformly on all wheels)**
- **Excessive pedal travel**
- **Brake dragging**

### Parking Brake Lever (if equipped)

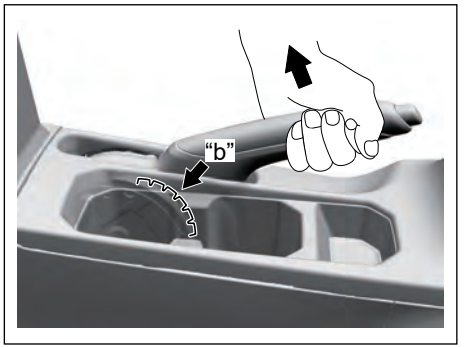



76TS90070

**Ratchet tooth specification "b": 4th – 9th**
**Lever pull force : 200 N (20 kg)**

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag is suspected even after the lever has been fully released, have the parking brake inspected and/or adjusted by a Maruti Suzuki authorized workshop.

### Brake Discs

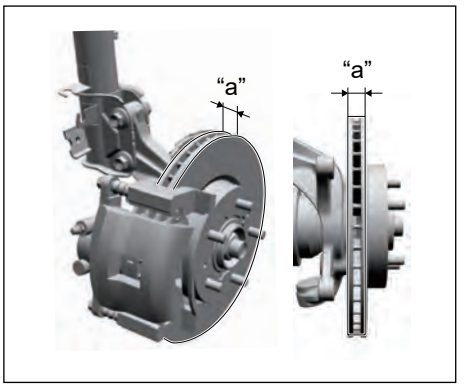



76TS90080

| Brake location | Minimum thickness "a" |
|---|---|
| Front wheels | 20.0 mm |
| Rear wheels | 8.0 mm |

If the measured thickness or inner diameter of the most worn part falls below or exceeds the value indicated above, the parts should be replaced with a new one. The measurement involves disassembling each brake and requires the use of a micrometer or caliper, which must be done according to the instructions described in the relevant service manual or available from the relevant repair information site.

## Steering Wheel

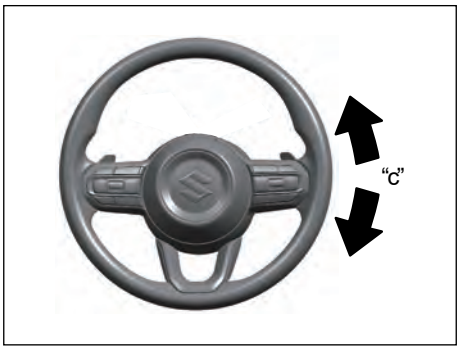



71UM09018

**Steering wheel play "c": 0–30 mm**

Check the free play of the steering wheel by gently turning it from left to right and measuring the distance that it moves before you feel slight resistance. The play should be between the specified values.

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is not as specified or you find anything else to be wrong, an inspection must be performed by a Maruti Suzuki authorized workshop.

## Tyres

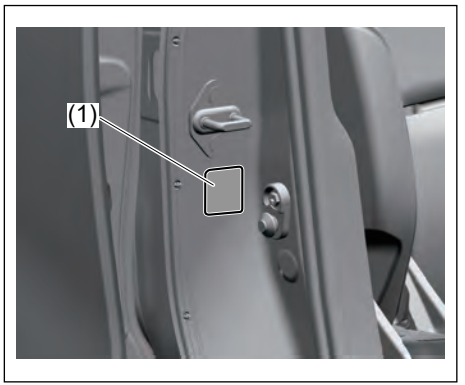


76TS90100

The front and rear tyres pressure specifications are listed in the tyre information label (1). Both front and rear tyres should have the specified tyre pressure.

Note that the value does not apply to the compact spare tyre (optional).

*NOTE:*
*The tyre pressure will change due to changes in atmospheric pressure, temperature or tyre temperature when driving. To reduce the chance that the low tyre pressure warning light (if equipped) will come on due to normal changes in temperature and atmospheric pressure, it is important to check and adjust the tyre pressures when the tyres are cold. If you check tyres after driving, they are warm. Even if the tyre pressure seems to be good in this condition, it could fall below the specified pressure when tyres cool down. Also, tyres that are inflated to the specified pressure in a warm garage may have pressure below the specification when the vehicle is driven outside in very cold temperature. If you adjust the tyre pressure in a garage that is warmer than the outside temperature, you should add 1 kPa to the recommended cold tyre pressure for every 0.8 °C difference between garage temperature and outside temperature.*


### Tyre Inspection

Inspect your vehicle's tyres at least once a month or before long trip by performing the following checks:

1) Measure the air pressure with a tyre gauge. Adjust the pressure if necessary.

**⚠ WARNING**

- **Air pressures should be checked when the tyres are cold or you may get inaccurate readings.**
- **Check the tyre pressure from time to time while inflating the tyre gradually, until the specified pressure is obtained.**
- **Never under-inflate or over-inflate the tyres.**
  **Under-inflation can cause unusual handling characteristics or can cause the rim to slip on the tyre bead, resulting in an accident or damage to the tyre or rim. Over-inflation can cause the tyre to burst, resulting in personal injury. Over-inflation can also cause unusual handling characteristics which may result in an accident.**

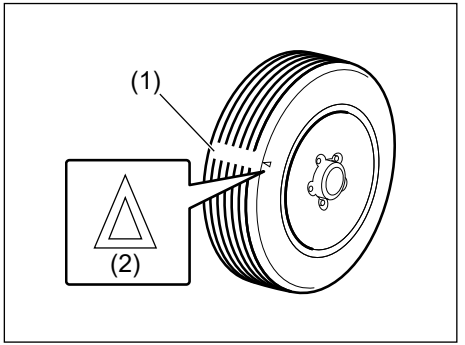


80T090190

(1) Tread wear indicator
(2) Indicator location mark

2) Check that the depth of the tread groove is more than 1.6 mm. To help you check this, the tyres have molded-in tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is 1.6 mm or less and the tyre should be replaced.
3) Check for abnormal wear, cracks and damage. Any tyres with cracks or other damage should be replaced. If any tyres show abnormal wear, have them inspected by a Maruti Suzuki authorized workshop.

**⚠ CAUTION**

**Hitting curbs and running over rocks can damage tyres and affect wheel alignment. Have tyres and wheel alignment checked periodically by a Maruti Suzuki authorized workshop.**

4) Check for loose wheel nuts.
5) Check that there are no nails, stones or other objects sticking into the tyres.

**⚠ WARNING**

- **Your Maruti Suzuki vehicle is equipped with tyres which are all the same type and size. This is important to ensure proper steering and handling of the vehicle. Never mix tyres of different size or type on the four wheels of your vehicle. The size and type of tyres used should be only those approved by Maruti Suzuki as standard or optional equipment for your vehicle.**
- **Replacing the wheels and tyres equipped on your vehicle with certain combinations of aftermarket wheels and tyres can significantly change the steering and handling characteristics of your vehicle.**

(Continued)

**⚠ WARNING**

(Continued)


- **Therefore, use only those wheel and tyre combinations approved by Maruti Suzuki as standard or optional equipment for your vehicle.**
- **For vehicles with smart power tailgate:**
  **In cases such as when replacing tires, make sure to turn off the smart power tailgate system. Failure to do so may cause the tailgate to operate unintentionally if the smart power tailgate switch is accidentally touched, resulting in hands and fingers being caught and injured.**

***NOTICE***

- **Replacing the original tyres with tyres of a different size may result in false speedometer or odometer readings. Check with a Maruti Suzuki authorized workshop before purchasing replacement tyres that differ in size from the original tyres.**
- **Replacing a tyre with one of a different size, or using different brands among the four tyres can result in damage to the drive train.**


## Tyre Rotation

### 4-tyre rotation

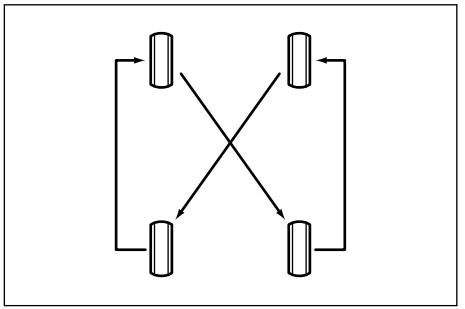

65D459

### 5-tyre rotation

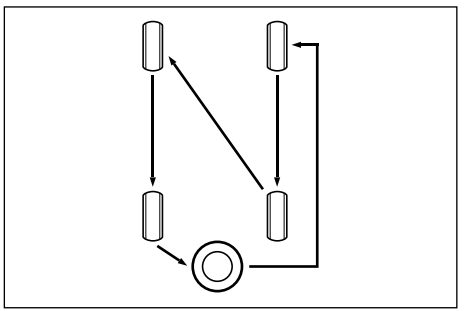

55T090680

To avoid uneven wear of your tyres and to prolong their life, rotate the tyres as illustrated. Tyres should be rotated every 10000 km. After rotation, adjust front and rear tyre pressures to the specification listed on your vehicle's Tyre Information Label.

**Wheel Balancing**
If the vehicle vibrates abnormally on smooth road, have the wheel balanced at a Maruti Suzuki authorized workshop.

**Wheel Alignment**
In case of abnormal tyre wear or pulling towards one side, have the wheel aligned at a Maruti Suzuki authorized workshop.

**Tubeless Tyres**
The vehicle is equipped with Tubeless Tyres. In tubeless tyre, a thin layer of butyl rubber is used for lining the inside of the tubeless tyre. This layer is to prevent air loss and fulfilling the purpose of tube. The air pressure is maintained by the sealing between tyre bead and wheel rim. Tubeless tyres are having advantage of slow air loss and preventing sudden deflation while driving.

**Care and maintenance tips for tubeless tyres**

1) Always maintain recommended inflation pressure. Driving continuously at low inflation pressure can lead to tyre damage.
2) In case any leakage is found, check for any nail penetration/valve core damage or rim bent. Damaged wheel must not be used.
3) In case tyre has run at low pressure, it must be inspected for any defect.
4) Whenever new tyre is fitted, replace the valve.
5) If continuous high speed driving is required, increase tyres pressure by 5 psi over recommended inflation pressure.
6) Never run the tyre beyond TWI (Tread wear indicator). The tyre is recommended to be replaced when the remaining tread has worn to this point. The indicators are spaced across the tread around the tyre marked by a triangular symbol (TWI).
7) Always prefer tubeless tyre mounting machine. In case of manual mounting-tyre/wheel rim damage may occur.
8) In case of any problem, please get in touch with a Maruti Suzuki authorized workshop.

## Battery

**⚠ WARNING**


- **Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.**
- **When checking or servicing the battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the battery posts and the vehicle at the same time.**
- **To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions in "EMERGENCY SERVICE" section if it is necessary to jump-start your vehicle.**
- **Diluted sulfuric acid spilled from battery can cause blindness or severe burns. Use proper eye protection and gloves. Flush eyes or body with ample water and get medical care immediately if suffered. Keep batteries out of reach of children.**
- **A lack of the electrolyte fluid could cause the danger of battery explosion due to overheating. Do not use the battery or do not charge the battery, with the fluid level below the lower limit.**

(Continued)

**⚠ WARNING**

(Continued)

- **Loose connection of the battery terminals could cause fire or malfunction. When detaching the battery terminals and connecting them again, ensure a tight connection.**

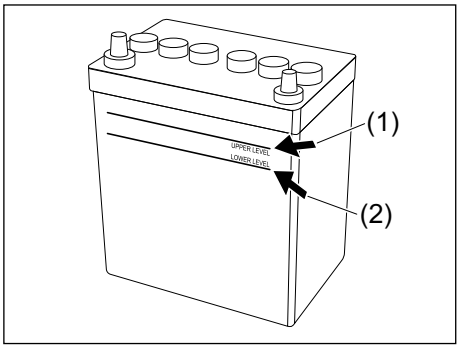


59RN09430

For maintenance-free battery (cap-less type), you need not add water. For traditional type battery, which has water filler caps, the level of the battery solution must be kept between the upper level line "MAX" (1) and the lower level line "MIN" (2) at all times. If the level is found to be below the "LOWER" level line, add distilled water to the "UPPER" level line. You should periodically check the battery, battery terminals, and battery hold-down bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.

The lead-acid battery and lithium-ion battery (if equipped) discharge gradually. In order to avoid a flat battery, drive the vehicle once a month for at least 30 minutes to recharge the battery.
If your vehicle is not going to be driven for a month or longer, disconnect the cable from the negative terminal of the battery to help prevent discharge.

**⚠ WARNING**


**If the battery is used with battery level being less than the lower level line "MIN" (2), it may cause reduced battery life, an exothermic heat, or an explosion by hydrogen gas occurring from the battery. Do not use the battery with battery level being less than the lower level line "MIN" (2).**

**NOTICE**

- **If the battery liquid is added more than the upper level line "MAX" (1), liquid may leak by vibrations during driving or liquid may spray out in some case depending on the condition of battery charging. These may cause damage to the parts near the battery. If the battery liquid overspills, immediately wash away with water. Do not add the battery liquid more than the upper level line "MAX" (1).**
- **If your vehicle is equipped with the ENG A-STOP system and the battery which is exclusive for the ENG A-STOP system is used, only use the specified type of battery for ENG A-STOP system. Refer to "SPECIFICATIONS" section for details. Otherwise, you could damage your vehicle, and the ENG A-STOP system could not be available. If a vehicle battery has to be replaced, consult a Maruti Suzuki authorized workshop.**

*NOTE:*
*The battery liquid is consumed when the battery is used. If the level is found to be less than the center of upper level "MAX" (1) and lower level "MIN" (2), add distilled water till it reaches the upper level line "MAX" (1).*

## Replacement of the Battery

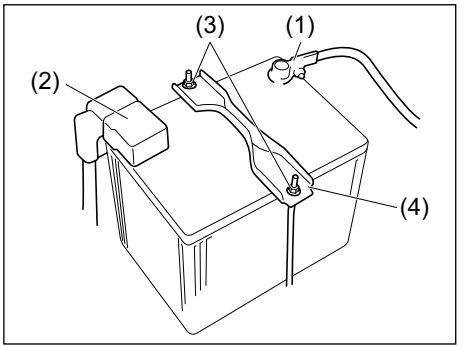

68PM00711

To remove the battery:
1) Disconnect the negative cable (1).
2) Disconnect the positive cable (2).
3) Remove the retainer nuts (3) and remove the retainer (4).

To install the battery:
1) Install the battery in the reverse order of removal.
2) Tighten the bracket bolt and battery cables securely.


*NOTE:*
- *When the battery is disconnected, some of the vehicle's functions will be initialized and/or deactivated.*
  *These functions must be required to reset after the battery is reconnected.*
- *Do not disconnect the battery terminals for at least one minute after the engine switch or the power switch is pressed to change the ignition mode to "LOCK" (OFF).*

**⚠ WARNING**

**Batteries contain toxic substances including sulfuric acid and lead. They could have potential negative consequences for the environment and human health. Used batteries must be disposed of or recycled according to applicable rules or regulations and must not be disposed of with ordinary household trash. Make sure not to tip over the battery when you remove it from the vehicle. Otherwise, sulfuric acid could run out and you might get injury.**

| *NOTICE* |
| --- |
| **After stopping the engine, controller and system are operated for a while. Therefore, before removing the battery, wait for more than one minute after turning the ignition switch to "OFF" or changing the ignition mode to "LOCK" (OFF).** |

**(Battery label)**

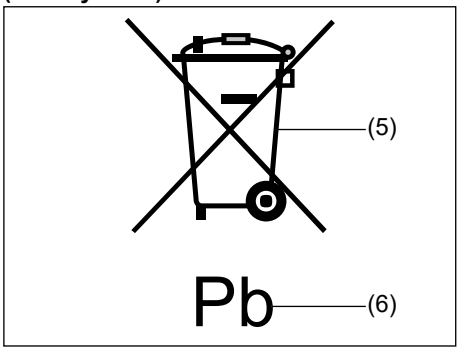


76TS90700

(5) Crossed-out wheeled bin symbol
(6) Chemical symbol of "Pb"

The crossed-out wheeled bin symbol (5) located on the battery label indicates that the used battery should be collected separately from ordinary household trash. The chemical symbol of "Pb" (6) indicates the battery contains more than 0.004% lead.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate trash handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult a Maruti Suzuki authorized workshop.

## Fuses


Your vehicle has three types of fuses, as described below:

**Main fuse**
The main fuse takes current directly from the lead-acid battery.

**Primary fuses**
These fuses are between the main fuse and individual fuses, and are for electrical load groups.

**Individual fuses**
These fuses are for individual electrical circuits.


To remove a fuse, use the fuse puller provided in the fuse box.

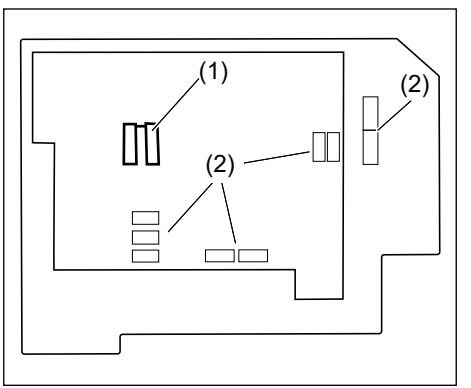


71UM09019

(1) Fuse puller
(2) Spare fuse

## Fuses in Engine Compartment

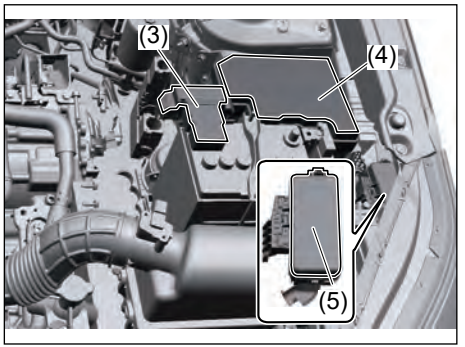



71UM09033

(3) Main fuse box
(4) Relay box
(5) Sub relay box (if equipped)


### Main fuse box_K15C model

**Type A**

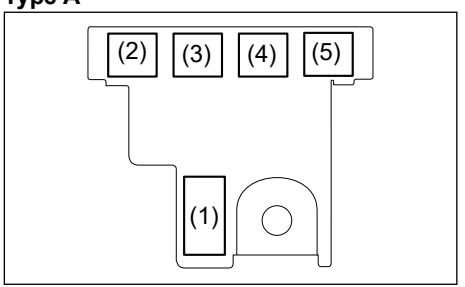



71UM09001

**Type B**

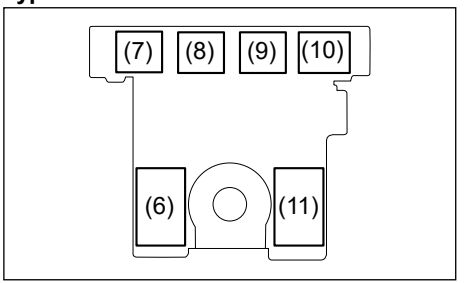



71UM09002

**Type C**

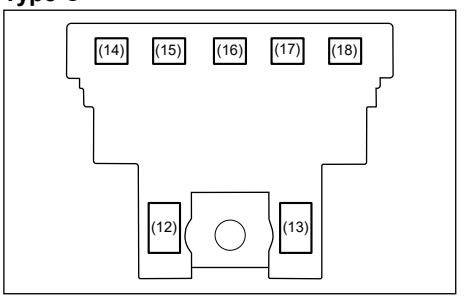


71UM09003

**Relay box K15C engine model**

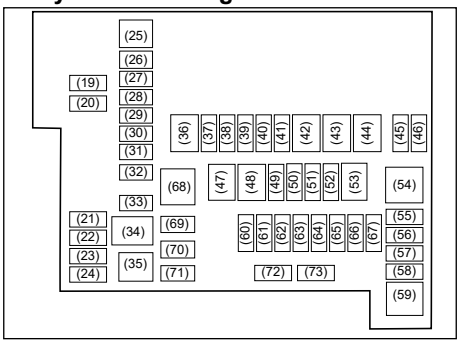


71UM09004


| MAIN FUSE / PRIMARY FUSE | | |
|---|---|---|
| (1) | 120 A | FL1 |
| (2) | 100 A | FL2 |
| (3) | 80 A | FL3 |
| (4) | 100 A | FL4 |
| (5) | 50 A | FL5 |
| (6) | – | Blank |
| (7) | 100 A | FL1 |
| (8) | 80 A | FL2 |
| (9) | 100 A | FL3 |
| (10) | 50 A | FL4 |
| (11) | 200 A | FL5 |

| | | |
|---|---|---|
| (12) | 175 A | FL1 |
| (13) | 120 A | FL2 |
| (14) | 100 A | FL3 |
| (15) | 80 A | FL4 |
| (16) | 100 A | FL5 |
| (17) | 60 A | FL6 |
| (18) | 100 A | FL7 |
| (19) | – | Blank |
| (20) | – | Blank |
| (21) | 5A | Turn_R |
| (22) | 5A | Turn_L |
| (23) | 5A | Tail2 |
| (24) | 5A | Stop2 |
| (25) | – | Blank |
| (26) | 25A | Towing |
| (27) | 20 A | Power seat driver |
| (28) | 15 A | S/V |
| (29) | 15 A | CHG3 |
| (30) | 25 A | Radio2 |
| (31) | 20 A | Power seat driver 2 |
| (32) | – | Blank |
| (33) | – | Blank |

| | | |
|---|---|---|
| (34) | – | Blank |
| (35) | – | Blank |
| (36) | – | Blank |
| (37) | 15 A | CHG2 |
| (38) | 10 A | CPRSR |
| (39) | 10 A | Front Fog |
| (40) | 20 A | S/R |
| (41) | 30 A | B/U |
| (42) | – | Blank |
| (43) | 30 A | Starting motor |
| (44) | 40 A | Blower fan |
| (45) | 5 A | SPARE |
| (46) | 7.5 A | SPARE |
| (47) | 40 A | ABS motor |
| (48) | 30 A | Radiator fan |
| (49) | 20 A | FI |
| (50) | 25 A | ABS control module |
| (51) | 15 A | Headlight (Right) |
| (52) | 10 A | Airbag 2 |
| (53) | – | Blank |
| (54) | 40 A | Ignition switch 11 |
| (55) | 20 A | Headlight HI |


| | | |
|---|---|---|
| (56) | 7.5 A | CNG VLV (For CNG vehicle) |
| | 15 A | 4WD (For 4WD vehicle) |
| (57) | 10 A | Power back door 2 |
| (58) | 15 A | Headlight (Left) |
| (59) | 30 A | Power back door 1 |
| (60) | 7.5 A | CNG |
| (61) | 5 A | CNG IG1 |
| (62) | 5 A | Starting signal |
| (63) | 10 A | Headlight HI (Left) |
| (64) | 10 A | Headlight HI (Right) |
| (65) | 20 A | FI 2 |
| (66) | 10 A | CPRSR 2 |
| (67) | 15 A | Transmission 2 |
| (68) | 50 A | Ignition switch 2 |
| (69) | 20 A | SPARE |
| (70) | 25 A | SPARE |
| (71) | 30 A | SPARE |
| (72) | 15 A | SPARE |
| (73) | 10 A | SPARE |

**Main fuse box_M15D engine mode**

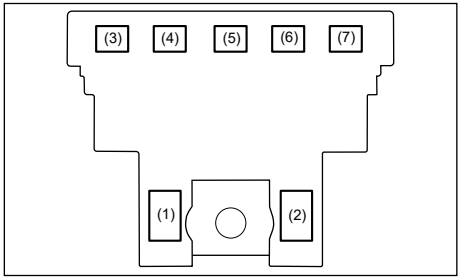



71UM09006

**Relay box M15D engine model**

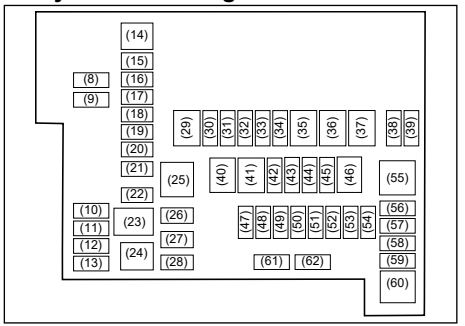


71UM09005

**Sub relay box M15D engine model**

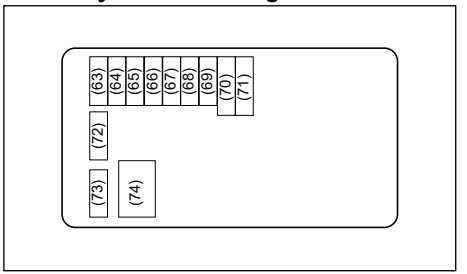


71UM09034


| MAIN FUSE / PRIMARY FUSE | | |
|---|---|---|
| (1) | 175 A | FL1 |
| (2) | 120 / 100A | FL2 |
| (3) | 100 A | FL3 |
| (4) | 80 A | FL4 |
| (5) | 100 A | FL5 |
| (6) | 60 A | FL6 |
| (7) | 100 A | FL7 |
| (8) | 10 A | IG1 SIG4 |
| (9) | 10 A | ABS 2 |
| (10) | 10 A | CPRSR |
| (11) | 10 A | Ignition coil |
| (12) | 10 A | Battery fan |
| (13) | 10 A | Inverter water pump |
| (14) | 30 A | ABS motor 3 |
| (15) | 20 A | Ignition switch 12 |
| (16) | 30 A | HEV main 2 |
| (17) | 20 A | FI main |
| (18) | 25 A | HEV main |
| (19) | 10 A | ICU |
| (20) | 10 A | ABS 4 |
| (21) | 10 A | Cont 2 |
| (22) | – | Blank |
| (23) | 60 A | Radiator |
| (24) | – | Blank |
| (25) | 50 A | Ignition switch 2 |
| (26) | 20 A | SPARE |
| (27) | 25 A | SPARE |
| (28) | 30 A | SPARE |
| (29) | – | Blank |
| (30) | 15 A | CHG2 |
| (31) | 10 A | O2 Heater |
| (32) | 10 A | Front fog |
| (33) | 20 A | S/R |
| (34) | 30 A | B/U |

| | | |
|---|---|---|
| (35) | – | Blank |
| (36) | – | Blank |
| (37) | 40 A | Blower |
| (38) | 5 A | SPARE |
| (39) | 7.5 A | SPARE |
| (40) | 30 A | ABS motor 2 |
| (41) | 30 A | ABS control module |
| (42) | 10 A | ABS 3 |
| (43) | 25 A | FI main 2 |
| (44) | 15 A | Headlight (Right) |
| (45) | 10 A | Airbag 2 |
| (46) | 30 A | ABS motor |
| (47) | 10 A | FI 2 |
| (48) | 10 A | FI 3 |
| (49) | 10 A | FI |
| (50) | 10 A | Headlight HI (Left) |
| (51) | 10 A | Headlight HI (Right) |
| (52) | 10 A | HEV 2 |
| (53) | 10 A | HEV 3 |
| (54) | 10 A | HEV |
| (55) | 40 A | Ignition switch 11 |
| (56) | 20 A | Headlight HI |

| | | |
|---|---|---|
| (57) | – | Blank |
| (58) | 10 A | ECM |
| (59) | 15 A | Headlight (Left) |
| (60) | 30 A | Water pump |
| (61) | 15 A | SPARE |
| (62) | 10 A | SPARE |
| (63) | 15 A | CHG3 |
| (64) | 20 A | Power seat driver2 |
| (65) | – | Blank |
| (66) | 10 A | Power back door2 |
| (67) | 15 A | S/V |
| (68) | 20 A | Power seat driver |
| (69) | 25 A | Radio2 |
| (70) | 30 A | Power back door1 |
| (71) | – | Blank |
| (72) | – | Blank |
| (73) | – | Blank |
| (74) | – | Blank |

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a genuine Maruti Suzuki replacement.

To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in the back of the fuse box cover.

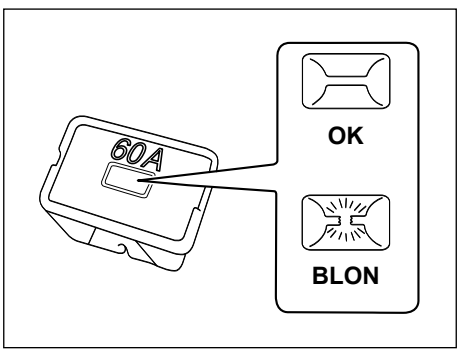


55T090620

**⚠ WARNING**


**If the main fuse or a primary fuse blows, have your vehicle inspected by a Maruti Suzuki authorized workshop. Always use a genuine Maruti Suzuki replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.**

*NOTE:*
*Check that the fuse box always carries spare fuses.*

## Fuses Under Dashboard



71UM09007

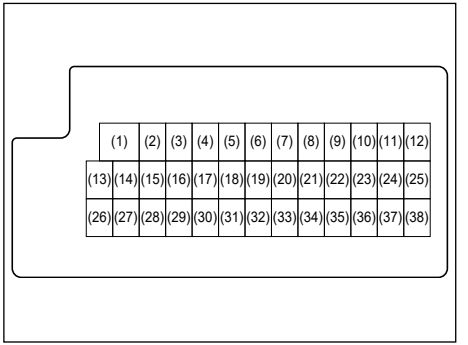



55T090590

| PRIMARY FUSE | | |
|---|---|---|
| (1) | 30 A | Power window |
| (2) | 10 A | Meter |
| (3) | 15A | Ignition coil |
| (4) | 5A | Ignition-1 signal 2 |
| (5) | 20 A | Shift lever* |
| (6) | 10 A | CHG |
| (7) | 10 A | STL2 |
| (8) | 20 A | Door |
| (9) | 15 A | Steering lock |
| (10) | 10 A | Hazard |
| (11) | 5A | A-STOP controller |
| (12) | 10A | Rear fog lamp |
| (13) | 5 A | ABS / ESP® control module |
| (14) | 15A | Seat heater |
| (15) | 5A | Ignition-1 signal 3 |
| (16) | 10 A | Dome light-2 |
| (17) | 5 A | Dome light |
| (18) | 15 A | Radio |
| (19) | 5 A | CONT |
| (20) | 5 A | Key-2* |

| | | |
|---|---|---|
| (21) | 20 A | Power window timer |
| (22) | 5 A | Key* |
| (23) | 15 A | Horn |
| (24) | 5 A | Tail light (Left) |
| (25) | 10 A | Tail light |
| (26) | 10 A | Air bag |
| (27) | 10 A | Ignition-1 signal |
| (28) | 10 A | Back up light |
| (29) | 5 A | ACC-3* |
| (30) | 20 A | Rear defogger |
| (31) | 10 A | Heated mirror* |
| (32) | 15 A | ACC-2 |
| (33) | 5 A | ACC |
| (34) | 10 A | Wiper |
| (35) | 5 A | Ignition-2 signal |
| (36) | 15 A | Washer |
| (37) | 25 A | Front wiper |
| (38) | 10 A | Stop light |

* Feature not available in the vehicle

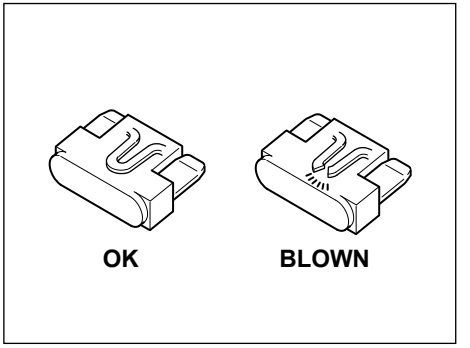


55T090630


**⚠ WARNING**

**Always replace a blown fuse with a fuse of the correct amperage. Never use a substitute such as aluminum foil or wire to replace a blown fuse. If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected immediately by a Maruti Suzuki authorized workshop.**

## Headlight Aiming

Since special procedures are required, ask a Maruti Suzuki authorized workshop for this job.

## Bulb Replacement

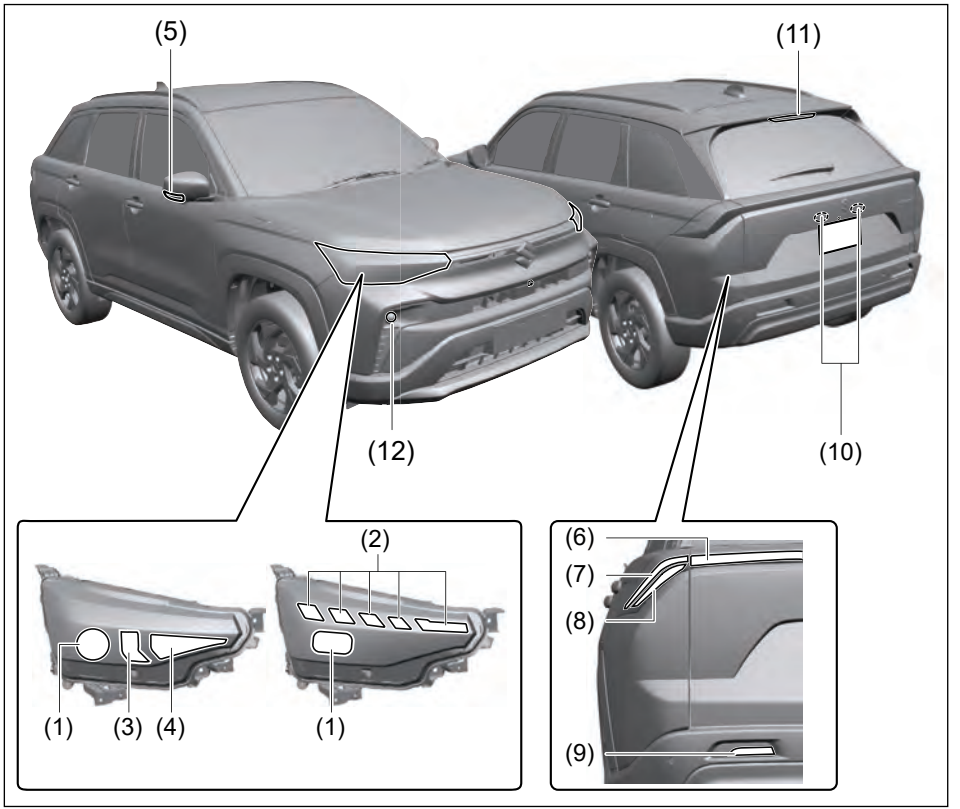


71UM09008

| No. | ITEM: Lights | WATTAGE | BULB No. |
|---|---|---|---|
| (1) | Headlight | 12V55W | HIR2 |
| | Headlight*1 | LED | – |
| (2) | Front turn signal light, position light and daytime running light (D.R.L.)*1 | LED | – |
| (3) | Position light | 12V 5W | W5W |
| (4) | Front turn signal light | 12V 21W | WY21W |
| (5) | Side turn signal light*1 | LED | – |
| (6) | Tail light (if equipped)*1 | LED | – |
| (7) | Brake light and tail light*1 | LED | – |
| (8) | Rear turn signal light*1 | LED | – |
| (9) | Reversing light | 12V16W | W16W |
| (10) | License plate light | 12V5W | W5W |
| (11) | High mount stop light*1 | LED | – |

If you need to replace the following bulbs indicated in the above table, consult a Maruti Suzuki authorized workshop.
*1: Since the lights are non-disassemble type, you cannot replace a bulb.
Replace the target assembly if any bulb is defective.

**⚠ CAUTION**

- **Light bulbs can be hot enough to burn your finger right after turning off lights. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.**
- **The headlight bulbs are filled with pressurized halogen gas. They can burst and injure you if they are hit or dropped. Handle them carefully.**
- **To avoid injury by sharp-edged parts of the body, wear gloves and a long-sleeved shirt when replacing light bulbs.**

***NOTICE***

- **The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.**
- **Frequent bulb replacement indicates the need for an inspection of the electrical system. This should be carried out by a Maruti Suzuki authorized workshop.**
- **During bulb replacement always use same bulb number as used in vehicle which is imprinted on the said bulb/unit and/or mentioned in this section.**

*NOTE:*
*The inner surface of lens such as the headlights or the rear combination lights may be clouded or dew condensation may occur by driving on a rainy day or washing the vehicle. This is a temporary phenomenon caused by temperature difference between the inside and the outside of the lights. (This is the same phenomenon as the windows are clouded on a rainy day.)*
*Also, it sometimes seems that water gets into the lights because of waterdrop on the edge of the lens. This is a temporary phenomenon caused by water adherence to the outside of the lights.*
*The above-mentioned phenomena are not vehicle malfunction.*
*However, if water is piled up in the lights or large waterdrop adheres to the inner surface of lens, have your vehicle inspected by a Maruti Suzuki authorized workshop.*

### Non-disassembled Type Lights

Since the lights shown below are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any bulb is defective.
If you need to replace the assembly, ask a Maruti Suzuki authorized workshop.


- Headlight (LED type) (if equipped)
- Front turn signal light, position light and daytime running light (if equipped)
- Tail/brake light (if equipped)
- Side turn signal light / hazard warning light on outside rearview mirrors (if equipped)
- High mount stop light
- Front fog light (if equipped)

## Headlights

### LED headlights


Since special procedures are required, we recommend you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

### Halogen headlights

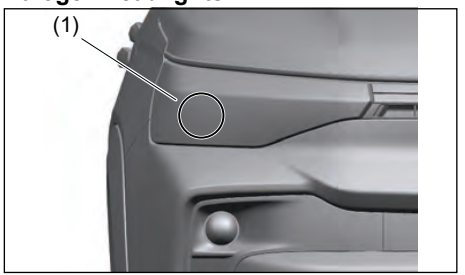


71UM09020


(1) Headlight (high/low beam)

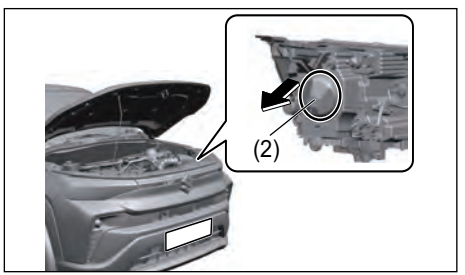


71UM09036

(2) Dust cover

Remove the dust cover (2).

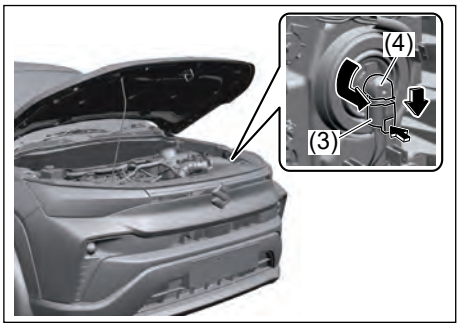


71UM09021

Disconnect the coupler (3) by pushing the lock release. Turn the bulb (4) counterclockwise and remove it.

## Side Turn Signal Light On Outside Rearview Mirrors

LED module is used. Since special procedures are required, we recommend you take your vehicle to a Maruti Suzuki authorized workshop for LED module replacement.

## Daytime Running Light (D.R.L.) (if equipped)


Since special procedures are required, it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

## Front Turn Signal Light and Front Position Light (if equipped)

### Vehicle with the LED headlights


Since special procedures are required, it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

### Vehicle with the halogen headlights

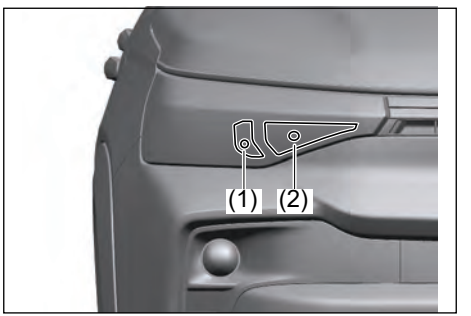



71UM09022

(1) Front position light
(2) Front turn signal light

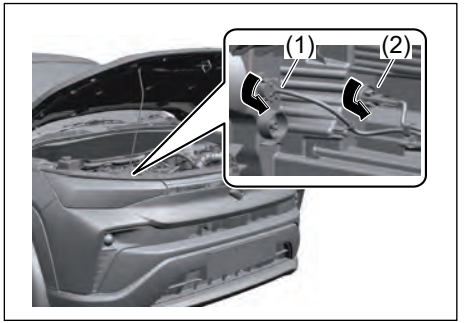


71UM09023

1) Open the engine hood. To remove the bulb holder of the front turn signal light (1) or the front position light (2) from the light housing, turn the holder counterclockwise and pull it out.

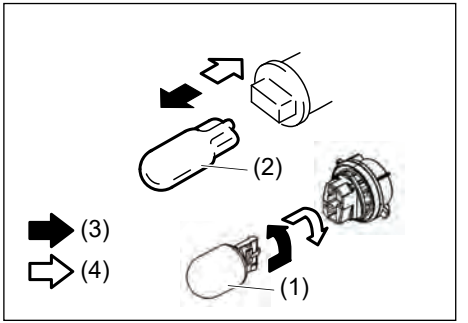


71UM09024

(3) Removal
(4) Installation

2) To remove the bulb of the front turn signal light (1) from the bulb holder, push in the bulb and turn it counterclockwise. To install a new bulb, push it in and turn it clockwise.
To remove and install the bulb of the front position light (2), simply pull out or push in the bulb.

### Front Fog Light (if equipped)

Since special procedures are required, it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

### Rear Combination Light

Since special procedures are required, it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.


### Reversing Light

Since special procedures are required, it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

### Tail Light (if equipped)


Since special procedures are required, it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

## License Plate Light

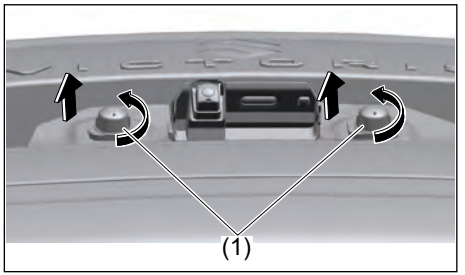


71UM09030

1) Turn the cover (1) counterclockwise to remove it.

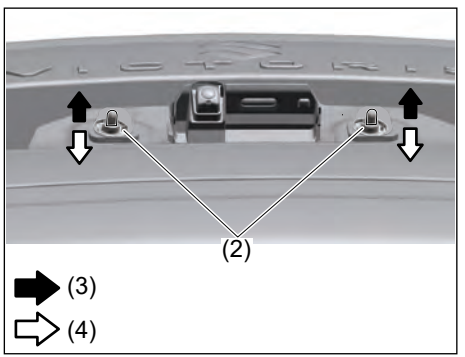


71UM09031

(3) Removal
(4) Installation


2) To remove and install the bulb of the license plate light (2), simply pull out or push in the bulb.

## High Mount Stop Light

Since special procedures are required, it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.


## Interior Light

### Front (without overhead console)

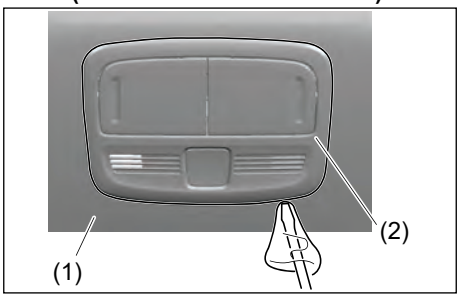



71UM09037

1) To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth between roof lining (1) and lamp (2) and then remove the lamp (2).

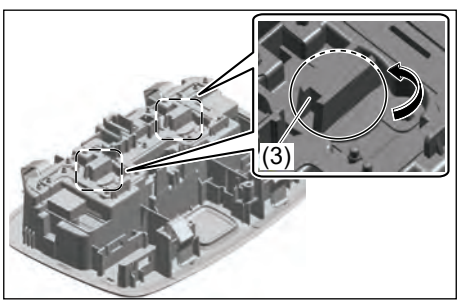


71UM09038

2) Slightly rotate Bulb-holder(3) of bulb(4) to be replaced in anti-clockwise direction to remove it from lamp(2)

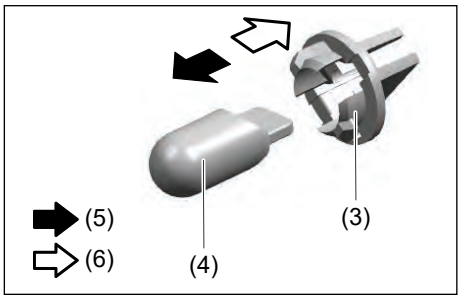



71UM09039

(5) Removal
(6) Installation


3) Pull the bulb out and then insert a new one.
4) After replacing the bulb, install the bulb holder in lamp in the reverse order of removal.
5) Assemble lamp in roof lining.

**Front (with overhead console and without sunroof)**

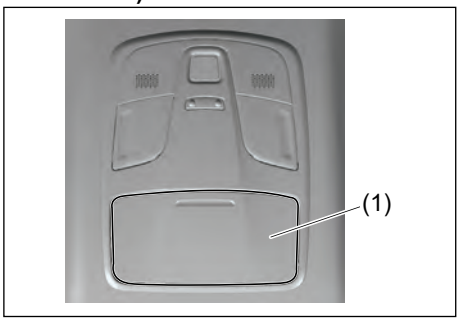



71UM09040

1) Open the Lid(1)

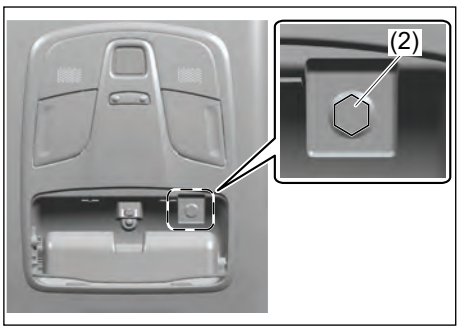



71UM09041

2) Remove the Bolt(2)

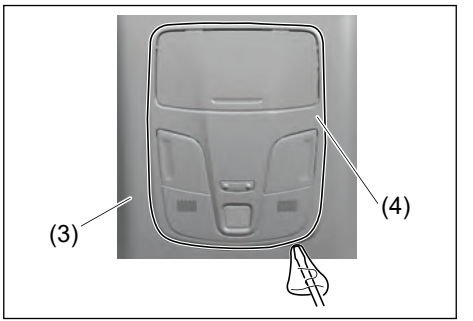



71UM09042

3) To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth between roof lining (3) and lamp (4) and then remove the lamp (4).

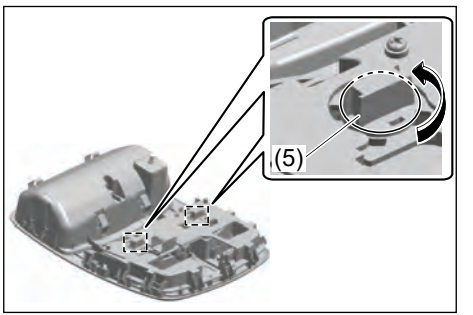


71UM09043

4) Slightly rotate Bulb-holder(5) of bulb(6) to be replaced in anti-clockwise direction to remove it from lamp(4)

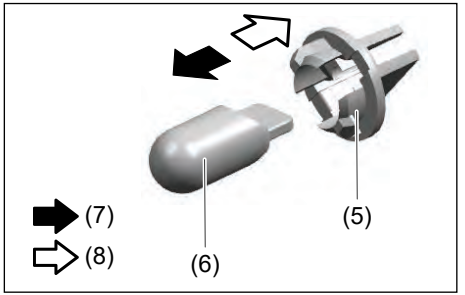



71UM09044

(7) Removal
(8) Installation


5) Pull the bulb out and then insert a new one.
6) After replacing the bulb, install the bulb holder in lamp in the reverse order of removal.
7) Reassemble the lamp on the roof lining.
8) Reassemble the bolt(4).

**Front (with overhead console and with sunroof)**

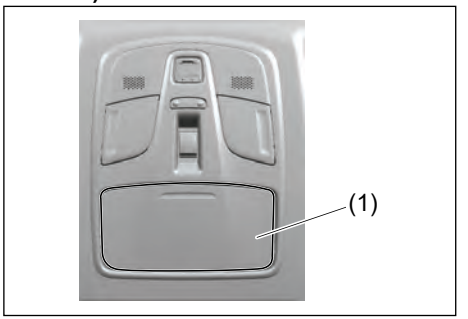



71UM09045

1) Open the Lid(1)

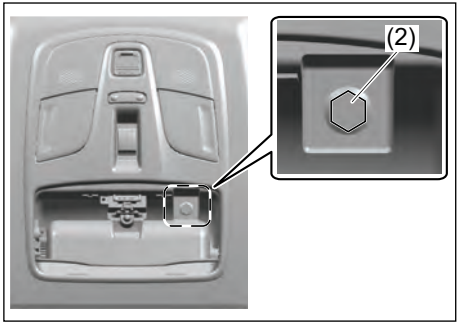



71UM09046

2) Remove the Bolt(2)

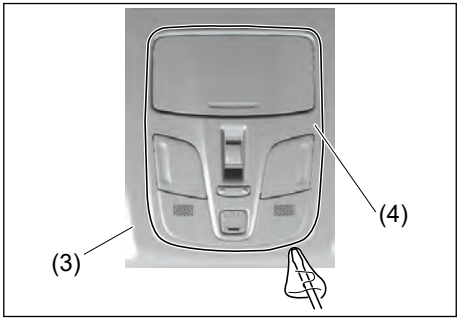



71UM09047

3) To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth between roof lining (3) and lamp (4) and then remove the lamp (4).

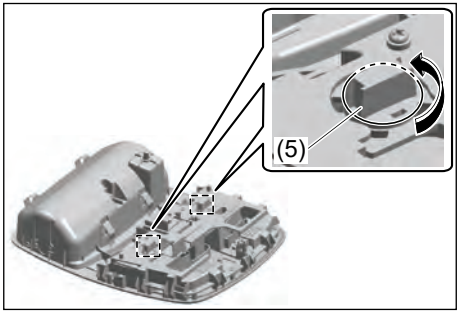


71UM09048

4) Slightly rotate Bulb-holder(5) of bulb(6) to be replaced in anti-clockwise direction to remove it from lamp(4)

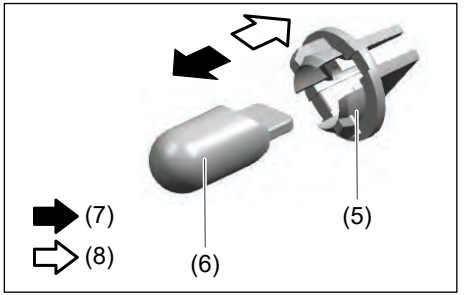



71UM09044

(7) Removal
(8) Installation


5) Pull the bulb out and then insert a new one.
6) After replacing the bulb, install the bulb holder in lamp in the reverse order of removal.
7) Reassemble the lamp on the roof lining.
8) Reassemble the bolt(4).

**Center**

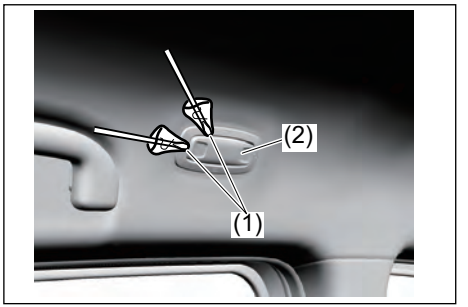


76TS90330

1) To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth into the notch (1), and then remove the lens (2).

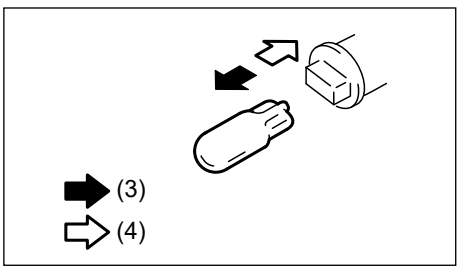



55T090040

(3) Removal
(4) Installation


2) Pull the bulb out and then insert a new one.
3) After replacing the bulb, install the center interior light lens in the reverse order of removal.

**Luggage compartment (if equipped)**

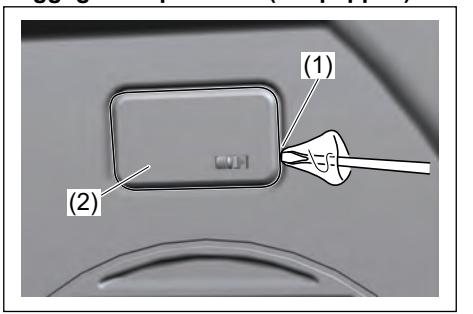


71UM09027

1) To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth into the notch (1), and then remove the lens (2).

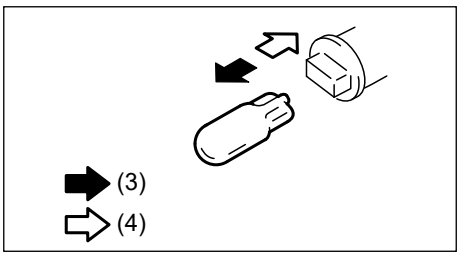



55T090040

(3) Removal
(4) Installation


2) Pull the bulb out and then insert a new one.
3) After replacing the bulb, install the luggage compartment light lens in the reverse order of removal.

**Courtesy light (if equipped)**

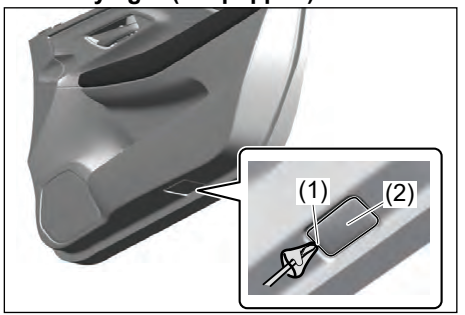


71UM09032

1) To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth into the notch (1), and then remove the lens (2).

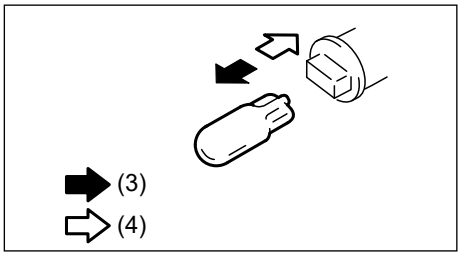



55T090040

(3) Removal
(4) Installation


2) Pull the bulb out and then insert a new one.
3) After replacing the bulb, install the courtesy light lens in the reverse order of removal.

**Vanity mirror light (if equipped)**

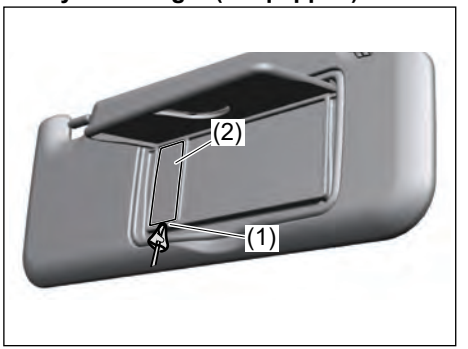


71UM09028

1) To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth into the notch (1), and then remove the lens (2).

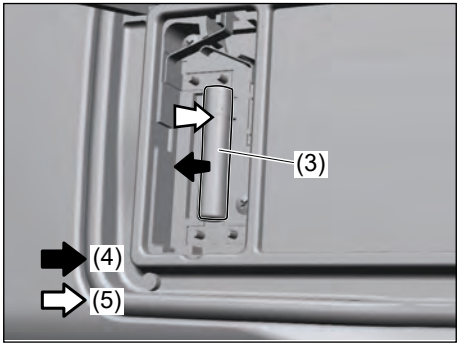



71UM09029

(4) Removal
(5) Installation


2) Pull the bulb (3) out and then insert a new one.
3) After replacing the bulb, install the vanity mirror light lens in the reverse order of removal.

### Glove box light (if equipped)

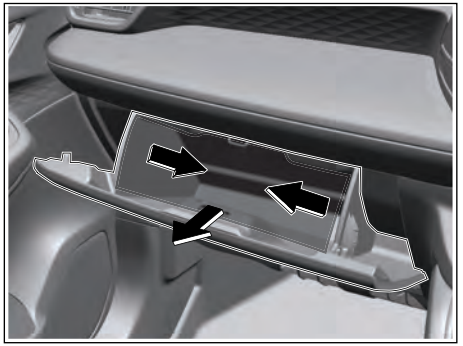


71UM09017

1) Press inward on both sides of the glove box and pull frontward and then unclamp it.

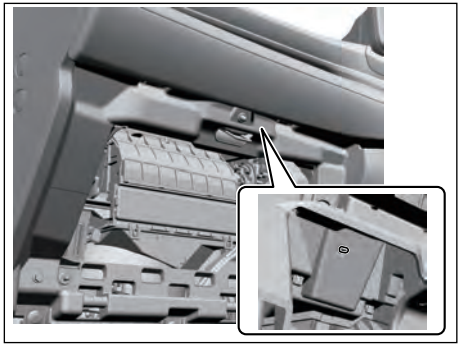

76TS90450

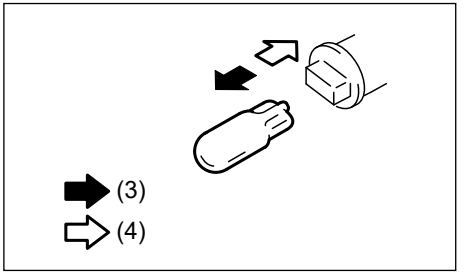


55T090040

(3) Removal
(4) Installation

2) Pull the bulb out and then insert a new one.
3) After replacing the bulb, install the courtesy light lens in the reverse order of removal.


## Front footwell lights (if equipped)

### Driver side




71UM09009

### Passenger side

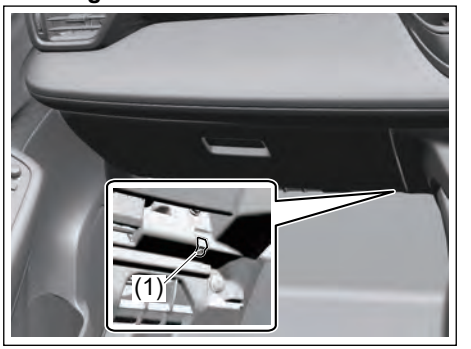



71UM09010

(1) Front footwell light

Since special procedures are required, we recommend you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

### Instrument panel assistant ornament ambient light (if equipped)

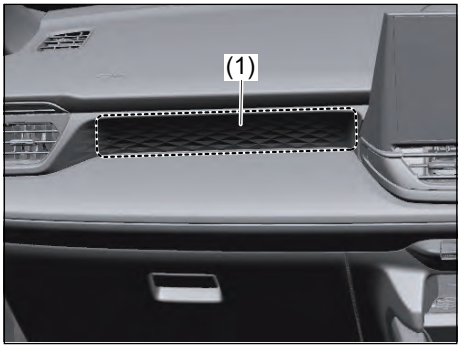



71UM09011

(1) Instrument panel assistant ornament ambient light

Since special procedures are required, we recommend you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.


### Front / Rear door ambient light (if equipped)

**Front (Driver's seat side)**

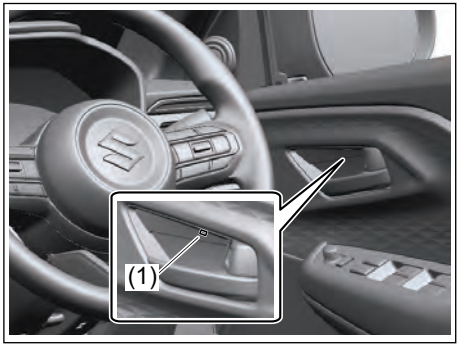


71UM09013


**Front (Passenger's seat side)**

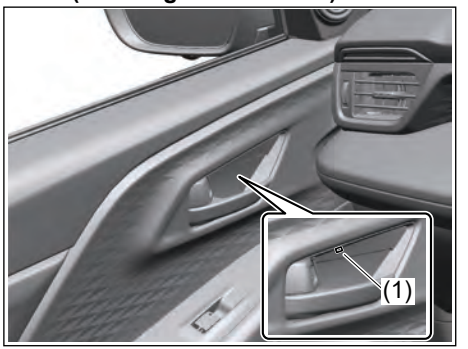


71UM09012

(1) Front door ambient light

**Rear**

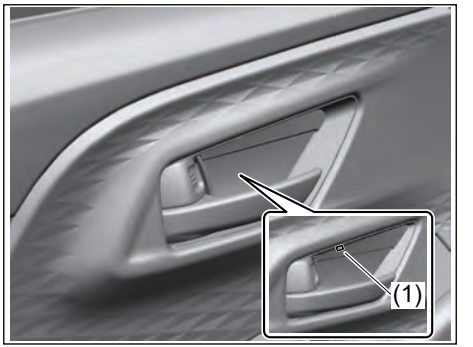



71UM09014

(1) Rear door ambient light

Since special procedures are required, we recommend you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

## Wiper Blades

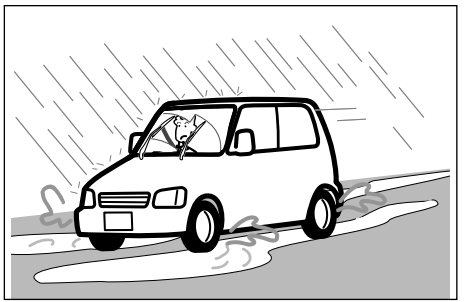

59RN09450

If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blades, follow the procedures below.

| *NOTICE* |
| --- |
| • **To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.**<br>• **At times, wiper blades may stop at a position slightly higher than home position. If this occurs, kindly operate one additional wiping cycle to return wiper blades to the home position.** |

*NOTE:*
*Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult a Maruti Suzuki authorized workshop for proper replacement method.*


### For Windshield Wipers



71UM09015


1) Hold the wiper arm away from the window.

*NOTE:*
*When raising both of the front wiper arms, pull the driver's side wiper arm up first. When returning the wiper arms, lower the passenger's side wiper arm first.*
*Otherwise, the wiper arms may interfere with each other.*

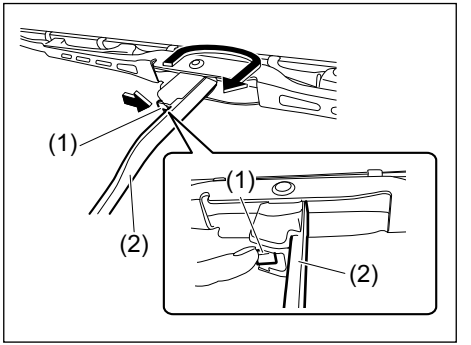



59RN09240

2) Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.

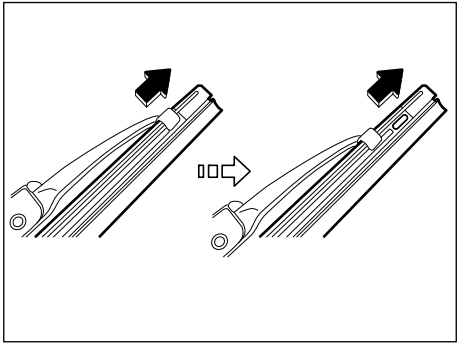

59RN09250


3) Unlock the lock end of the wiper blade and slide the blade out as shown.

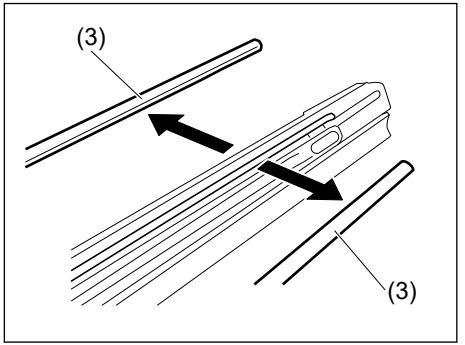


59RN09260

(3) Retainer


4) If the new blade is provided without the two metal retainers, move them from the old blade to the new one.

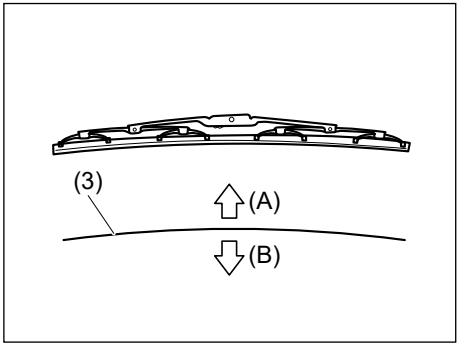


59RN09270

(A) Up
(B) Down

*NOTE:*
*When you install the metal retainers (3), make sure the direction of metal retainers as shown in the above illustration.*

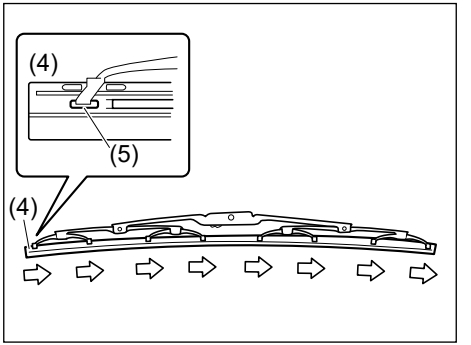



55T090710

(4) Locked end

5) Install the new blade in the reverse order of removal, with the locked end positioned toward the wiper arm. Make sure the blade is properly retained by all the hooks. Lock the blade end into place.
6) Reinstall wiper frame to arm, making sure that the lock lever is snapped securely into the arm.


| ***NOTICE*** |
| --- |
| **Fit the stopper side (5) of the wiper blade rubber in the driver's seat side. Otherwise, the wiper blade rubber may be misaligned while the wiper operates.** |

### For Rear Windshield Wiper (if equipped)

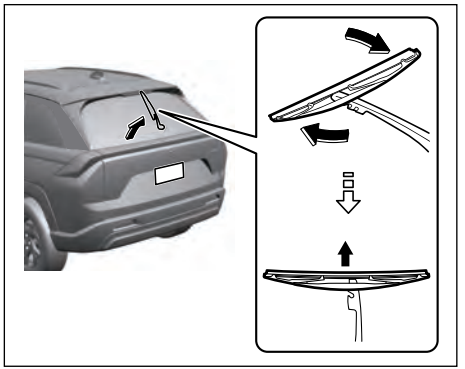

71UM09016


1) Hold the wiper arm away from the window.
2) Remove the wiper frame from the arm as shown.

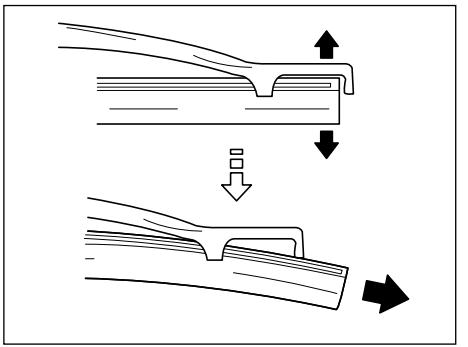

59RN09300

3) Slide the blade out as shown.

*NOTE:*
*Do not flex the wiper blade frame end more than necessary. If you do, it can break off.*

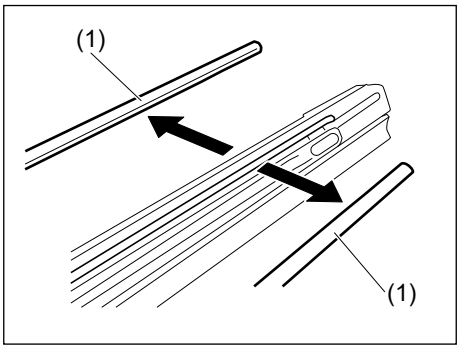



59RN09310

(1) Retainer

4) If the new blade is provided without the two metal retainers, move them from the old blade to the new one.
5) Install the new blade in the reverse order of removal.
   Make sure the blade is properly retained by all the hooks.
6) Reinstall wiper frame to arm in the reverse order of removal.

## Windshield Washer Fluid

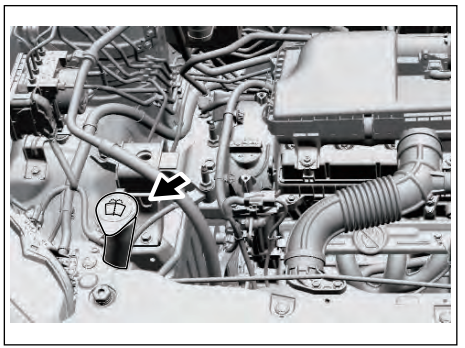

76TS90390

Check that there is washer fluid in the tank. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

**⚠ WARNING**

- **Do not use radiator antifreeze in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also can damage your vehicle's paint.**
- **Do not add washer fluid when the engine and hybrid system is hot or operating as washer fluid contains alcohol and may catch fire if spilled on the engine, etc.**

***NOTICE***


- **Damage may result if the washer motor is operated with no fluid in the washer tank.**
- **Avoid use of hard water to prevent building of lime scale on the vehicle.**

## Air Conditioning System

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.


### Air Conditioner Filter Replacement

Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

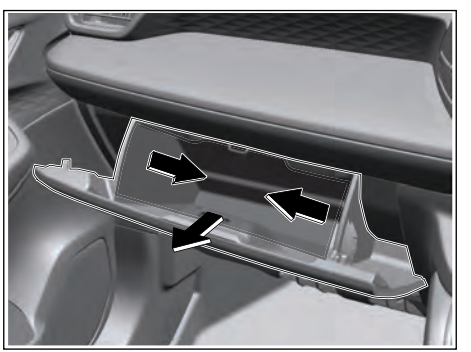

71UM09017


1) To approach the air conditioner filter, remove the glove box by pressing both sides of the glove box inward and pulling it out.

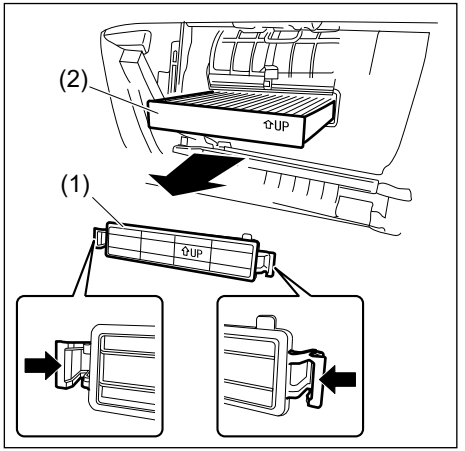


69T090380

2) Push the tabs on both sides of the holder (1) in the direction of the arrow to remove the filter (2).

**Installing the Air conditioner filter**

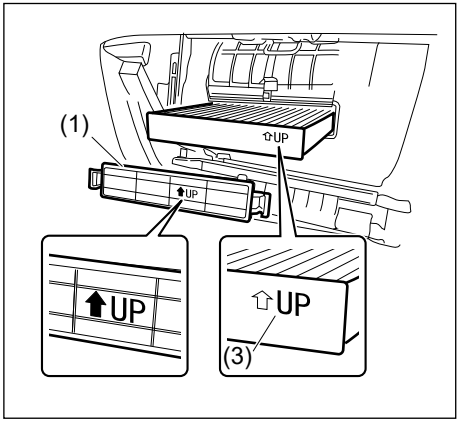


69T090440

1) Insert the filter with the arrow of the mounting direction mark (3) facing upward.
2) Attach the holder (1) by hooking the tabs on both sides to the case side.

## Cleaning the Hybrid Battery Air Intake Vent and Filter (M15D Engine Model)

To prevent the fuel economy from being affected, visually inspect the hybrid battery air intake vent periodically for dust and clogs.

If there is a problem or “DRIVE BATTERY COOLING PARTS MALFUNCTION SEE OWNER’S MANUAL” is shown on the multi-information display, it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for hybrid battery air intake vent and filter replacement.

## Preparation Before Winter Season

### Windshield Washer Fluid


To prevent windshield washer fluid from freezing, dilute it by the ratio according to outside temperature.

### Engine Coolant

To prevent the inside of engine from corroding and freezing, use the designated engine coolant. Refer to “Specifications” in the “SPECIFICATIONS” section.

*NOTE:*
*To check the concentration of engine coolant or replace it, ask a Maruti Suzuki authorized workshop.*

### Winter Tyres and Chocks

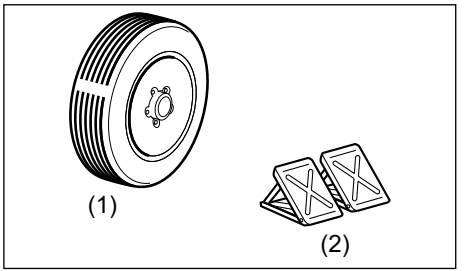



55T090671

(1) Winter tyre
(2) Chock

Winter tyres and chocks are necessary to drive on the snow roads or the frozen roads.

### Before Your Driving

#### Snow on the Roof

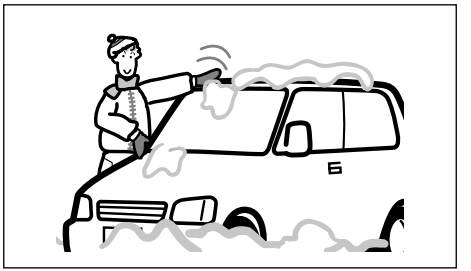


80J308

Remove snow on the roof before your driving. If you do not remove it, snow may fall during your driving and it may hinder your view.

- For vehicle equipped with Dual Sensor Brake Support II (DSBS II), the Dual Sensor Brake Support II (DSBS II) may not operate properly when there is snow or frost on the windshield.


### Frozen Wiper Blades

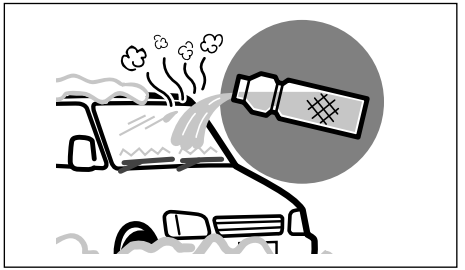

65P60060

Melt ice by pouring lukewarm water. After melting it, wipe off water to prevent refreezing. If you operate the wiper blades forcedly when ice stays freezing, the wiper rubbers may be damaged and the wiper blades may be broken.

### Snow and Frost on the Window Glasses

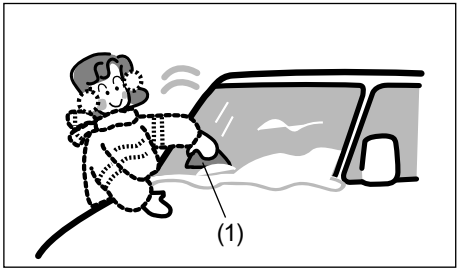



82K261

Use the plastic board (1). You can remove snow and frost not to damage the window glasses.

- For vehicle equipped with Dual Sensor Brake Support II (DSBS II), the Dual Sensor Brake Support II (DSBS II) may not operate properly when there is snow or frost on the windshield.

### Frozen Outside Rearview Mirrors

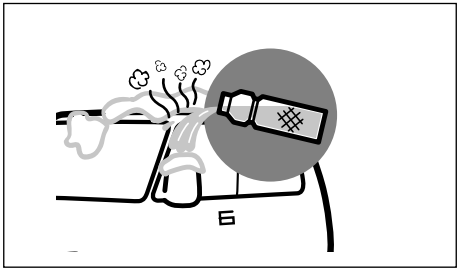


65P60070

Melt ice by pouring lukewarm water. After melting it, wipe off water to prevent refreezing. If you operate the outside rearview mirrors forcedly when ice stays freezing, the outside rearview mirrors may be broken.

***NOTICE***

- **For the outside rearview mirror folding switch, check if you can move the mirrors by your hands first. Then, operate the switch. If you repeat to operate the switch when ice stays freezing, the mirrors may be broken.**
- **For the remote folding mirrors, deactivate the function of the remote folding mirrors in the cold condition where the outside rear-view mirrors are frozen. If you repeat to operate them when ice stays freezing, the mirrors may be broken.**


**Frozen Doors**

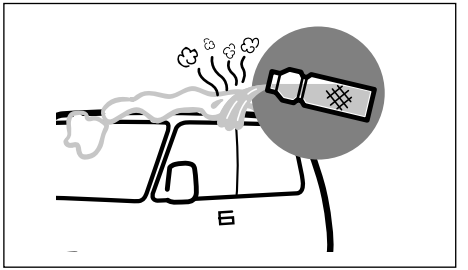

65P60080

Pour lukewarm water except the keyhole on the door. After opening the door, wipe off water. If you open the door forcedly when ice stays freezing, the rubbers around the door may be come off and broken.


**Snow Attaching to Shoes**

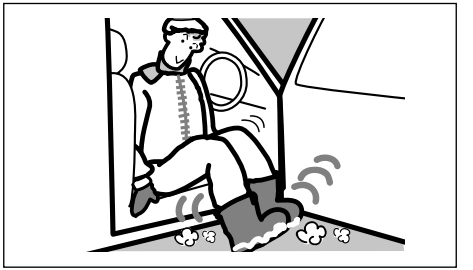

80J312

Remove snow attaching to shoes before getting in your vehicle. If you do not remove it, you may slip when operating the pedals and the window glasses may mist easily because of high humidity inside the vehicle.

## When Parking the Vehicle Outside

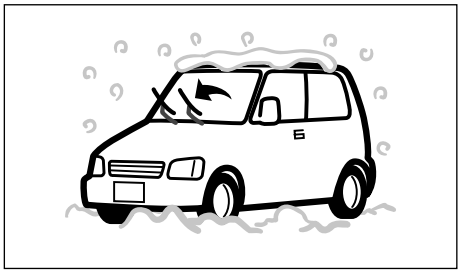

80J315

For vehicle equipped with Dual Sensor Brake Support II (DSBS II), the Dual Sensor Brake Support II (DSBS II) may not operate properly when there is snow or frost on the windshield.

***NOTICE***

- **If you park the vehicle under eaves or trees, the roof of the vehicle may be dented by accumulated snow or fallen snow.**
  **When it is snowing, do not park the vehicle under eaves or trees.**
- **If you park the vehicle outside when it is snowing, the wiper arms may be deformed or the wiper blades may be frozen on the windshield by snow weight. Raise the wiper arms away from the windshield when parking the vehicle.**

## Parking Brake Precautions in Cold Weather


If the parking brake system freezes, the parking brake may not be released.

**Vehicles with the parking brake lever**
When parking for an extended period, use wheel chocks (commercially available) instead of applying the parking brake. For vehicles with automatic transmission or e-CVT, move the gearshift into “P” (Park) position.

For vehicles with manual transmission, move the gearshift into “R” (Reverse) or 1st gear position.

**Vehicles with the electric parking brake**
- Turn off the auto mode of the electric parking brake. There is a risk that the electric parking brake may activate automatically, causing the brake system to freeze and making it impossible to release. Also, avoid using the brake hold system. Even if the auto mode of the electric parking is OFF, the electric parking brake may still activate automatically.
- If the electric parking brake is applied, the brake system may freeze, and this makes releasing the system difficult. Use wheel chocks (commercial available) instead of applying the electric parking brake. Failure to do so may cause the vehicle to move unintentionally, leading to an unexpected accident.
- When parking the vehicle without using the electric parking brake, make sure that the gearshift lever is in “P” position, and cannot be moved.
- When electric parking brake is in auto mode, move the gearshift to “P” position then release the electric parking brake.
- If the vehicle is parked with wet brake components in cold weather, they may freeze.

# EMERGENCY SERVICE

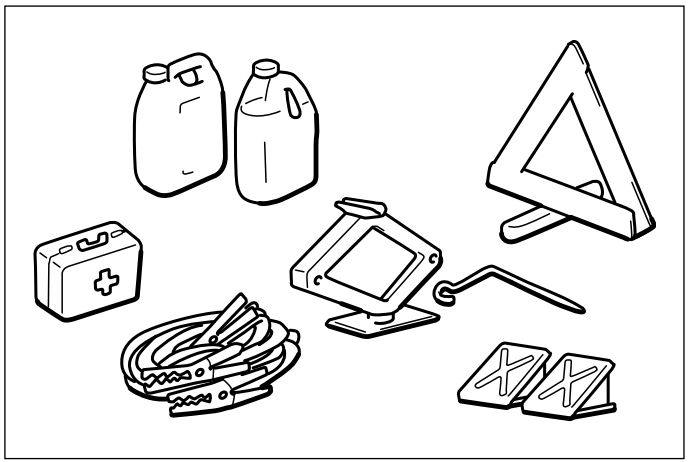

60G411


Towing by Tow Truck ..... 10-1
Towing by Using Towing Eye ..... 10-3
eCall (if equipped) ..... 10-6
Do not drive when the vehicle is damaged ..... 10-13
Tyre Changing Tool ..... 10-13
Jacking Instructions ..... 10-16
Flat Tyre Repair Kit ..... 10-21
Jump-starting Instructions ..... 10-25
Running Out of Battery ..... 10-27
If You Get a Flat Tyre While Driving ..... 10-27
Engine Trouble: Starter Does not Operate ..... 10-28
Engine Trouble: Does not Start ..... 10-28
Engine Trouble: Overheating ..... 10-28
Hybrid System Trouble: Does not Start ..... 10-29
Hybrid System Trouble: Overheating ..... 10-30
Warning Triangle ..... 10-31

## Towing by Tow Truck

If you need to have your vehicle towed, contact a professional service. A Maruti Suzuki authorized workshop can provide you with detailed towing instructions.

**⚠ WARNING**

**For vehicle equipped with the Dual Sensor Brake Support II (DSBS II), if your vehicle is towed with the engine on, press the Dual Sensor Brake Support II (DSBS II) OFF switch and turn off the Dual Sensor Brake Support II (DSBS II). If not, an accident related to the system being turned on may occur.**

***NOTICE***

**To help avoid damage to your vehicle during towing, proper equipment and towing procedures must be used.**

The following may indicate a problem with your transmission. Contact your Maruti Suzuki authorized workshop or commercial towing service before towing.

- For the vehicle with M15D engine, the hybrid system warning message is shown on the multi-information display and the vehicle does not move.
- The vehicle makes an abnormal sound.

**For vehicles with the electric parking brake**

If the electric parking brake malfunctions and cannot be released, the vehicle must be towed as follows.

- With all four wheels on a flat-bed truck.
- With the front or rear wheels lifted and a dolly under the other wheels.


**⚠ WARNING**

**Make sure that the auto mode is turned off as necessary to prevent the parking brake from being applied automatically.**

### 2-wheel Drive (2WD) Manual Transmission

Manual transmission vehicles may be towed using either of the following methods.

- Being towed from the front:
  Lift the front wheels and keep the rear wheels on the ground. Before the vehicle is towed, make sure that the parking brake is released.
- Being towed from the rear:
  Lifted and the front wheels on the ground, provided the steering and drivetrain are in operational condition. Before towing, check that transmission is in neutral, the steering wheel is unlocked (the ignition mode is ACC), and the steering wheel is secured with a clamping device designed for towing service.

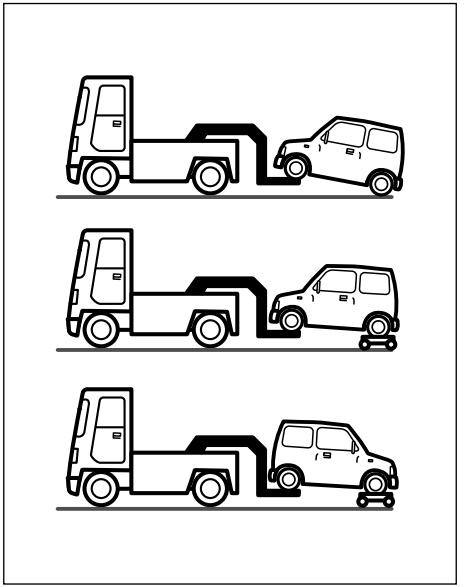

67T00160


***NOTICE***

**The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.**

### 2-Wheel Drive (2WD) Automatic Transmission or e-CVT

Automatic transmission or e-CVT vehicles may be towed using either of the following methods.

- Being towed from the front:
  Lift the front wheels and keep the rear wheels on the ground. Before the vehicle is towed, make sure that the parking brake is released.
- Being towed from the rear:
  Lift the rear wheels and place a dolly under the front wheels.

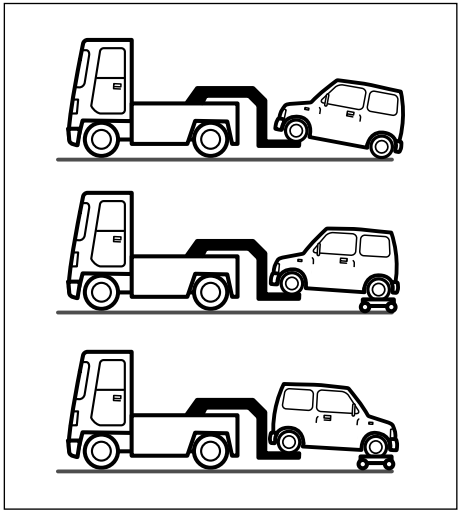

67T00160

**⚠ WARNING**

**For e-CVT model, do so with the front wheels raised. If the wheels connected to the electric motor (traction motor) are on the ground when towing, the motor may continue to generate electricity. This may cause a fire.**


***NOTICE***

**If your vehicle is towed with the front wheels on the ground, it can result in damage to the automatic transmission or e-CVT.**

### 4-Wheel Drive (4WD)

Your vehicle should be towed under one of the following conditions:

- With all four wheels on a flat-bed truck.
- With the front or rear wheels lifted and a dolly under the other wheels.

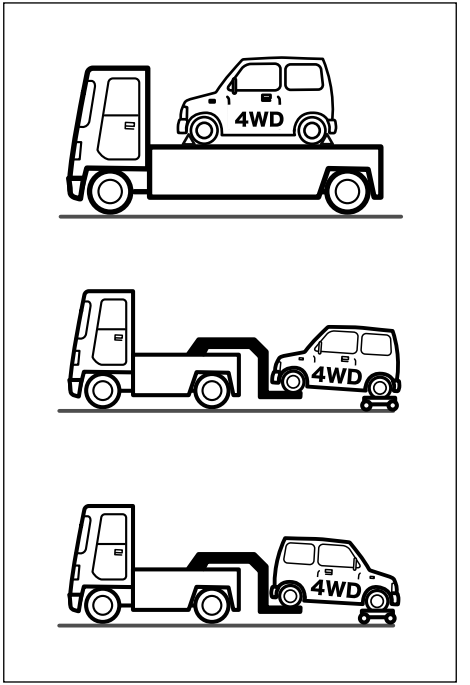


76TS100010

***NOTICE***

**Towing the 4WD vehicle with four wheels on the ground can result in damage to the manual transmission, automatic transmission and/or the 4WD system.**


## Towing by Using Towing Eye

**⚠ WARNING**

**For vehicle equipped with the Dual Sensor Brake Support II (DSBS II), if your vehicle is towed with the engine on, press the Dual Sensor Brake Support II (DSBS II) OFF switch and turn off the Dual Sensor Brake Support II (DSBS II). If not, an accident related to the system being turned on may occur.**

### Hanging Point of a Towing Cable

Hang a towing cable on a towing eye. The towing eye is provided on the front of the vehicle for use in emergency situations or sea shipping purposes.

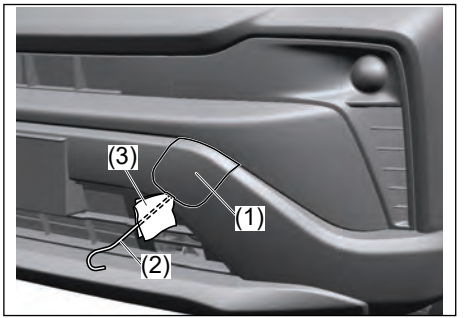



71UM010001

1) Remove the cover (1) by using a jack handle (2) covered with a soft cloth (3) as shown in the illustration.

***NOTICE***


**Do not apply excessive force as it may damage the cover strap.**

*NOTE:*
*We recommend that you fasten the cover with tape to prevent damage during towing.*

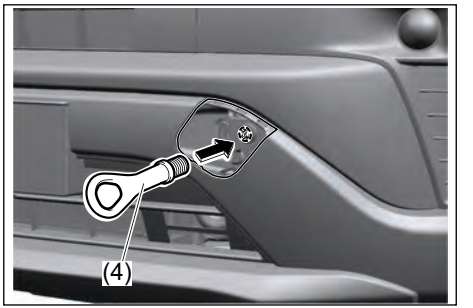


71UM010002

2) Install the towing eye (4) by hand.

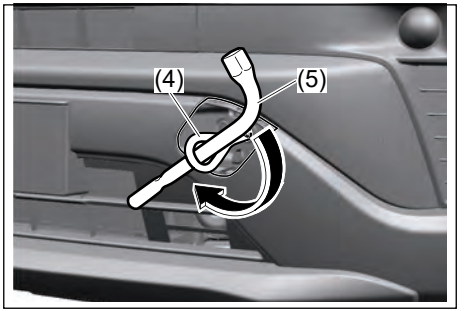


71UM010003


3) To tighten the towing eye (4), turn it clockwise by using a wheel wrench (5) until the towing eye (4) is securely installed.

**NOTICE**

- **Observe the following instructions when using the towing eye (4). Otherwise, the towing eye or the vehicle body may break and cause serious injury or damage:**
  - **Avoid pulling the vehicle to get out of severe snowy, muddy or sandy conditions.**
  - **Avoid sudden starts or erratic driver performance which could cause excessive stress on the towing eye.**


  **In such cases, we recommend that you contact a professional service.**
- **Do not use the towing eye (4) for towing another vehicle or transporting your vehicle by a car carrier trailer, etc.**

**K15C engine model**

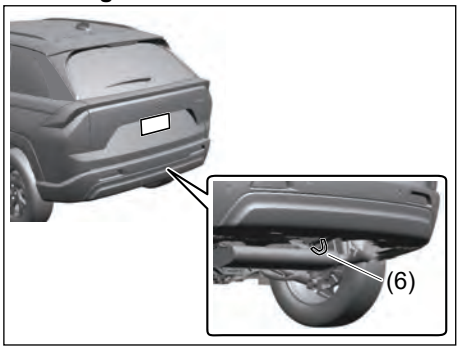


71UM010017

**M15D engine model**

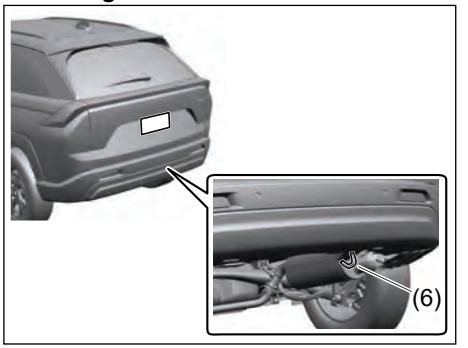



71UM010004

**NOTICE**

- **Your vehicle was originally designed to carry people and a normal amount of cargo, not to tow a trailer.**
- **The frame hook (6) is provided on the rear of the vehicle for use in emergency situations and sea shipping purposes only. Do not use the frame hook for towing another vehicle, being towed by another vehicle or transporting your vehicle by a car carrier trailer, etc. Otherwise, the frame hook or the vehicle body may break and cause serious injury or damage.**

### Other Holes

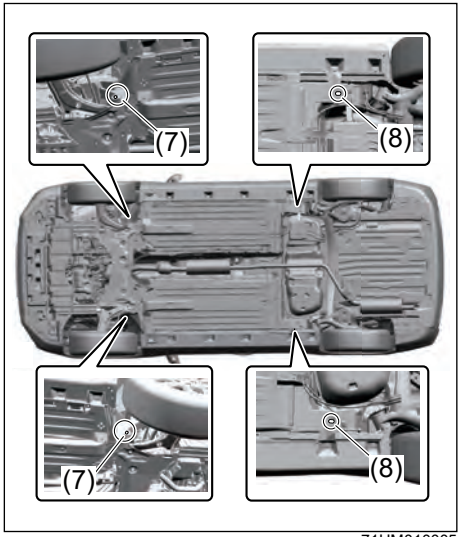


71UM010005

The frame holes (7) and (8) are provided only for transporting by a car carrier trailer.

**⚠ WARNING**

**Do not use the frame holes (7) and (8) for towing purpose. These holes may break and cause serious injury or damage.**

### Towing by Using a Rope

1) Hang a towing cable on a towing eye horizontally, so that the hanging side would be the same for the towing vehicle and the towed vehicle if possible.

2) Keep the engine running or the hybrid system activating.
   - When you cannot start the engine or the hybrid system, press the engine switch or the power switch to change the ignition mode to the position other than LOCK (OFF).
   - Turn the steering wheel to left and right to check that the steering lock is released.
   - For the vehicle with SUZUKI SAFETY SUPPORT, when the ignition switch is in “ON” position or the ignition mode is ON, press the Dual Sensor Brake Support II (DSBS II) OFF switch and turn off the Dual Sensor Brake Support II (DSBS II).

**⚠ WARNING**

**If you drive the vehicle without the engine running and the hybrid system starting, it may cause an accident.**
**When your vehicle is towed by using a rope, observe the following instructions.**
- **Do not press the engine switch or the power switch to change the ignition mode to LOCK (OFF). Otherwise, the steering wheel will be locked and not be turned.**
- **Depress the brake pedal more firmly than usual, as the brake booster does not work.**
- **Operate the steering wheel with more force, as the power steering system does not work.**

***NOTICE***

**If you cannot release the steering lock, you cannot operate the steering wheel and it may cause an accident. If you cannot release the steering lock because of malfunction and running out of the lead-acid battery, do not perform towing by using a rope.**

3) Shift the gearshift lever into “N”.

*NOTE:*
*If you cannot shift the gearshift lever into "N", towing by using a towing cable is not possible. Consult a Maruti Suzuki authorized workshop.*

4) During towing, make sure that a towing cable is not slack. To avoid a collision, carefully drive your vehicle checking the brake lights of the front vehicle.
   - To warn the driver of a following vehicle, turn on the hazard warning lights of the towed vehicle.

**⚠ WARNING**

**If you continuously depress the brake pedal on a long or steep downhill slope, the brakes could overheat and become ineffective.**
**When there is a long or steep downhill slope, do not perform towing by a rope. Make a request of a tow truck.**

***NOTICE***

- **If a strong impact is applied to a towing eye or a towing cable by sudden starting etc., the towing eye or the vehicle body may be damaged.**
  **When the vehicle needs to be towed, do not apply a strong impact to a towing eye or a towing cable by sudden starting etc. Do not accelerate suddenly.**
- **If the vehicle unavoidably needs to be towed by a rope, tow your vehicle on the roads. Do not exceed the vehicle speed of 30 km/h and do not drive the vehicle for longer than 30 km to protect the transmission.**
- **To avoid damaging engine system components, tow the vehicle in the forward direction when using a rope.**


## eCall (if equipped)

### eCall system

The eCall is a system which (if equipped / activated) automatically sends the information to the emergency contact center and calls up an eCall operator for quick help, whenever airbag gets deployed or when the "SOS" button is pressed.

**Function of eCall system -**

(1) Location information of vehicle is gathered by eCall system
(2) Vehicle information is transmitted to emergency contact center
(3) Emergency contact center informs regional emergency service provider
(4) Thereupon, the regional emergency service provider attempts to contact the vehicle occupant to assess the situation and assistance required

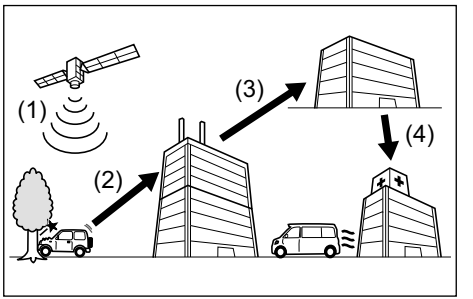


78RB21002

**⚠ WARNING**

**Radio waves from eCall system may interfere with operation of electrical medical equipment such as pacemakers. Failure to take the precautions listed below can increase the risk of severe injury or death due to radio wave interference.**

- **Anyone who uses electrical medical equipment such as a pacemaker should consult the medical equipment supplier or their medical advisor about whether radio waves from eCall system can interfere with the medical equipment.**

**⚠ CAUTION**


- **eCall function will not work without a valid telematics contract and functioning.**
- **The eCall is only available where communication is possible using wireless mobile communication. This system cannot be used in areas with atmospheric disturbance, remote areas and areas where a signal cannot be obtained.**
- **If the microphone, speaker or "SOS" button is malfunctioning, eCall cannot operate properly. Have the function checked at a Maruti Suzuki authorized workshop.**
- **Use Maruti Suzuki genuine audio system for optimal operating condition of eCall.**

*NOTE:*

- *Vehicle eCall system's correct functioning directly depends on presence of eCall operator in country, and availability of its services.*
- *The responsibility of the components of the eCall system (with the exception of equipment installed on the vehicle) is borne by the operator of the eCall system.*
- *The ecall functionality may not work in any of the following situations. In such cases, report to emergency services provider (112 system etc.) by other means such as nearby public phones.*
  - *Even when the vehicle is in the cellular phone service area, it may be difficult to connect to the Emergency Call Centre if the reception is poor or the line is busy. In such cases, you may not be able to connect to the Emergency Call Centre.*
  - *When the vehicle is out of the cellular phone service area, the eCall cannot be made.*
  - *When any related equipment (such as the "SOS" button panel, indicator lights, microphone, DCM, antenna, or any wires connecting the equipment) is malfunctioning, damaged or broken, the eCall cannot be made.*
  - *For details, refer to the ecall terms & conditions: https://marutistoragenew.blob.core.windows.net/msilintiwebpdf/Suzuki_Connect_TandC-Final.pdf*

## How to use eCall

The eCall has 2 modes, automatic operation mode and manual operation mode.

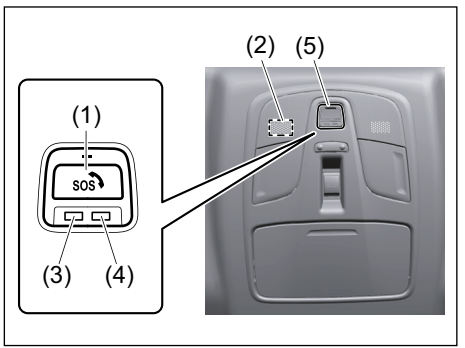


71UM010006

(1) “SOS” button
(2) eCall microphone
(3) Green indicator
(4) Red indicator
(5) Cover

**Automatic operation mode**

The eCall system is operated when the engine switch or the power switch is pressed to change the ignition mode to ON. In the event of an accident that an airbag is activated, signals about your vehicle’s various information such as the vehicle’s position are sent automatically to the emergency contact center.
The green indicator will blink and call will connect to an emergency contact center operator.

**Manual operation mode**

Open the cover (5) for manual operation.
When the engine switch or the power switch is pressed to change the ignition mode to ON, push and hold “SOS” button (1) for more than 1 second and release it.
The green indicator will blink and call will connect to an emergency contact center operator.


*NOTE:*
*Only for manual operation mode*
*Do not perform a test operation in order to confirm the function using manual operation.*
*Cancel the operation if the system is accidentally operated. Refer to “Cancellation of eCall” for details.*

*For both automatic and manual operation modes*

- *A tone will sound when the cancellation period by manual operation and the emergency call operates for calling up.*
- *The vehicle information (for example, the vehicle location, direction, VIN, accident time, etc.) is sent to the emergency contact center when eCall operates. The above information will not be sent except when the emergency call is performed.*
- *Any conversation held during communication is not recorded by the vehicle itself, but is recorded by the emergency contact center.*
- *Communication from the emergency contact center operator can be heard on the speaker on the center side of the instrument panel. If the audio system is in use, the communication from the emergency contact center operator will be prioritized and any other audio will be automatically muted.*
- *The eCall is equipped with a built-in battery as a backup power for the damaged onboard battery caused by an accident. The useful life of the built-in battery will be about 3 years under the temperature conditions between -40 °C and 85 °C (-40 °F and 185 °F).*
- *If communication to the emergency contact center by automatic operation mode is used, replace the built-in battery for good battery health. Consult a Maruti Suzuki authorized workshop when you replace the battery.*

- *When installing electrical equipment such as navigation terminal, consult a Maruti Suzuki authorized workshop. Otherwise, there is a danger of hindering the functioning of eCall components, malfunction, etc.*
- *If the red indicator blinks every 1 second and the eCall warning message appears on the information display at the same time, an undercharged condition of the built-in battery or system error is estimated. Have your vehicle inspected by a Maruti Suzuki authorized workshop soon. When the built-in battery is in the undercharged condition, replace the battery as soon as possible even though the remaining battery power is considered to last for about 10 minute call with the emergency contact center operator. This built-in battery is specified for the eCall exclusively.*
  *Therefore when you replace the battery, consult a Maruti Suzuki authorized workshop.*

*NOTE:*
*Used batteries must be disposed properly according to applicable rules or regulations and must not be disposed with ordinary household trash.*

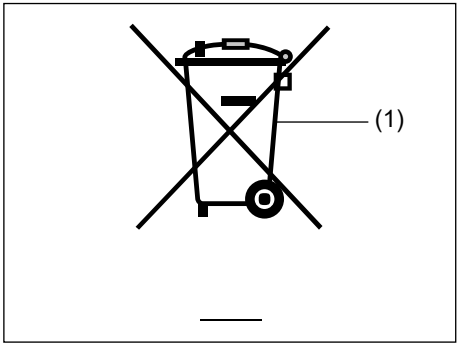


80JM133

(1) Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate trash handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing or recycling of the used battery, consult a Maruti Suzuki authorized workshop.

**Indicator light**
The indicator light in “SOS” button operate as follows, according to the eCall operation state and communication state.


| Green indicator | Red indicator | State |
|---|---|---|
| ON | ON | For about 5~90 sec. when the ignition is turned to “ON” (#1) |
| ON | OFF | Normal operation (include Callback waiting) |
| Blinks (approximately every 0.5 seconds) | OFF | “eCall” operation begins |
| Blinks (approximately every 1 seconds) | OFF | “eCall” communication: established<br>Voice call, Callback |
| Blinks (approximately every 0.3 seconds) | OFF | “eCall” communication: Finished normally (#3) |
| OFF | Blinks (approximately every 0.3 seconds) | “eCall” communication: Finished abnormally |
| Blinks (approximately every 3 seconds) | OFF | No connection with GPS satellite or Out of range modem network (#2) |
| OFF | Blinks (approximately every 1 seconds) | System error<br>When it is necessary to replace the buit-in battery |
| OFF | OFF | No contract with eCall system |

#1: It may take up to 90 seconds for the eCall system to become available after the power switch or the engine switch is turned “ON”. If the “SOS” button is pressed with both the green and red indicators “ON”, “eCall” operation begins after the eCall system is available.
#2: You can customize the system to stop blinking of the green indicator. Ask a Maruti Suzuki authorized workshop for details.
#3: When the call is completed, either the green indicator or the red indicator could blink, depending on the emergency contact center behavior.

## eCall warning message

If the following image and message appears on the multi-information display, there may be a problem with eCall.

When this message is displayed, Have your vehicle inspected by a Maruti Suzuki authorized workshop.

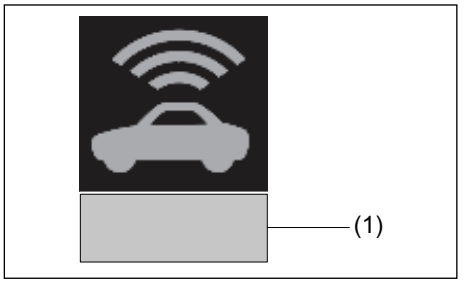



71UM010007

**For Type A Instrument Cluster (1):**
"SERVICE
CONNECTED"

**For Type B Instrument Cluster (1):**
"Service
Connected"

When this message is displayed, eCall is in progress. Other connected services are temporarily unavailable.

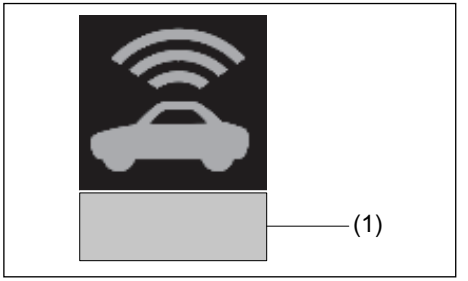


71UM010007

**For Type A Instrument Cluster (1):**
"EMERGENCY CALL IN PROGRESS"

**For Type B Instrument Cluster (1):**
"Emergency Call in Progress"

## Cancellation of eCall

The operation can be canceled only when communication is performed via manual operation. The operation can be canceled if "SOS" button is pressed before communication is established with an eCall operator.

*NOTE:*
- *Communication cannot be canceled in automatic operation mode.*
- *The cancellation of the communication is available until 5 seconds after pushing the "SOS" button first.*
- *Communication cannot be canceled from the vehicle after communication is established with* an eCall *operator. Ask the emergency contact center to cancel the communication.*

## Free/Open Source Software Information

The communication device equipped with your vehicle includes free/open source software. The license information and/or source code for free/open source software is available through the following URL.
http://www.opensourceautomotive.com/suzuki/DCM3

## HOT PARTS! EXPLOSION!

Improper handling of built-in battery contained in eCall equipment may result in heat generation, explosion or fire possibly leading to burn injury or physical damage. To ensure safety and to avoid any possibilities of any accidents, please observe the following precautions.


– Do not heat or dispose in fire/heat oven etc., disassemble or deform the battery. Subjecting the battery to extreme heat may cause the battery to burst and/or burn fiercely. If battery is disassembled, irritant gases may be released, and exposed lithium alloy may react leading to fire. If battery is deformed either by pressure or impact, sealing may be damaged leading to leakage or internal insulation or short circuit. Internal short circuit will result in heat generation that may lead to rupture or fire.

## Do not drive when the vehicle is damaged

If your vehicle is damaged, even if the damage is minor, consult a MARUTI SUZUKI authorized a workshop before driving and have your vehicle inspected and repaired immediately. Depending on the damage, there may be a risk of vehicle fire or breakdown.

## Tyre Changing Tool

**K15C Engine Model**

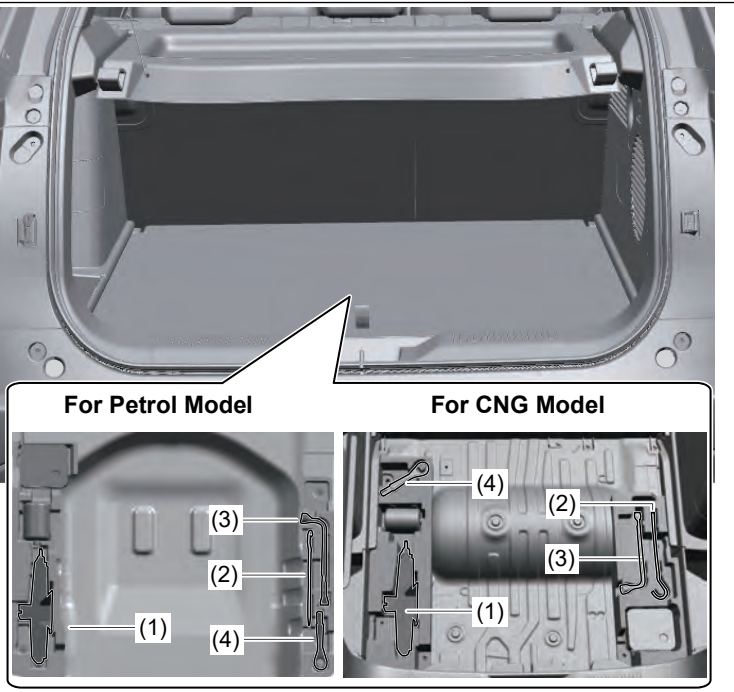



71UM010009

(1) Jack
(2) Jack handle
(3) Wheel wrench
(4) Towing eye

*NOTE:*
*For vehicle fitted with CNG fuel system, refer to the supplementary owner's manual.*

**M15D Engine Model**

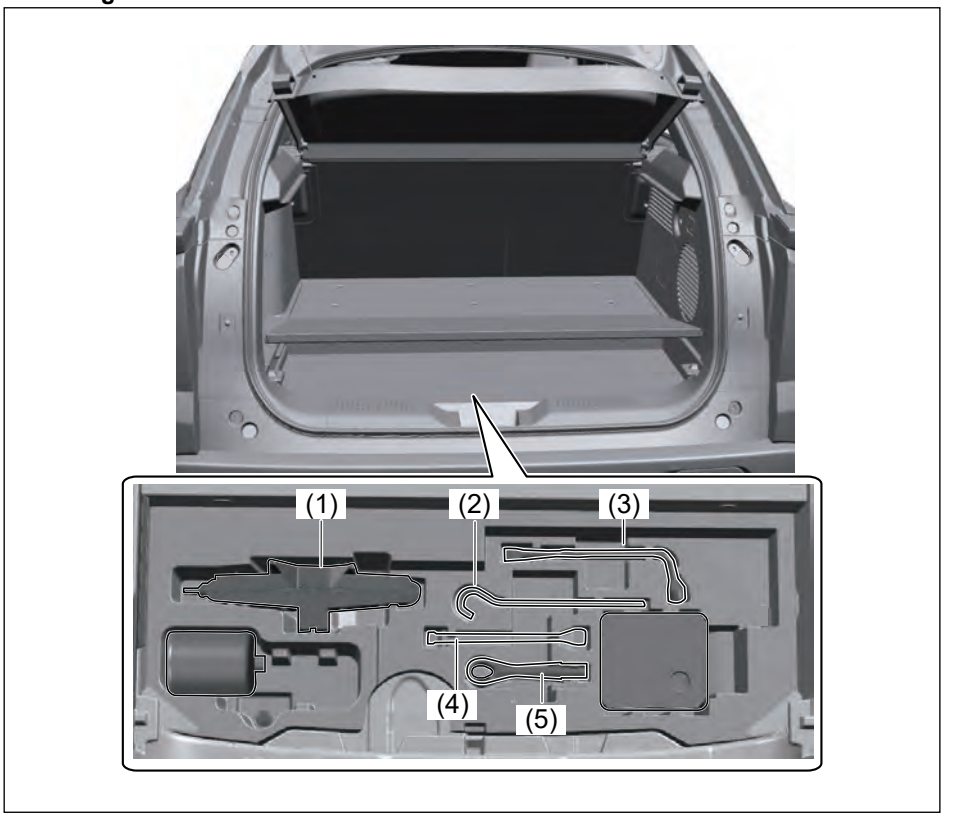


71UM010010

(1) Jack
(2) Jack handle
(3) Wheel wrench
(4) Extension (Applicable for accessory)
(5) Towing eye


The tyre changing tools are stowed in the luggage compartment.
Refer to “Luggage Compartment” in “QUICK GUIDE” section.

## How to Remove the Jack

When using the jack, check that there is no deformation or damage on the jack.
Also, check that there is no dirt on the screw part and grease is applied on it.


The tyre changing tools are stowed in the luggage compartment, below luggage compartment boards.
Follow instructions shared to remove jack (3).

### K15C engine petrol model

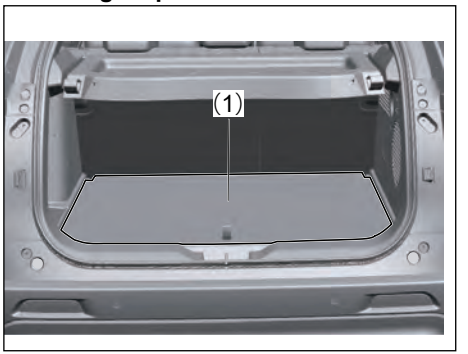


71UM010015


1) Remove the luggage compartment board (1) by lifting it using the strap.

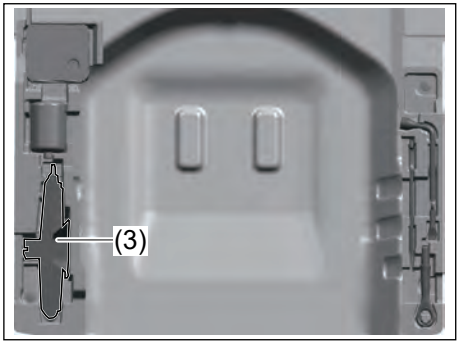


71UM010016


2) Remove the jack (3).

### M15D engine model

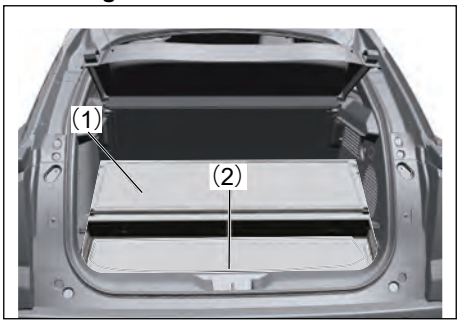


71UM010014

1) Lift the luggage compartment board (1) and place it as shown.
2) Remove luggage floor carpet (2) by lifting it from the hole provided in the board.

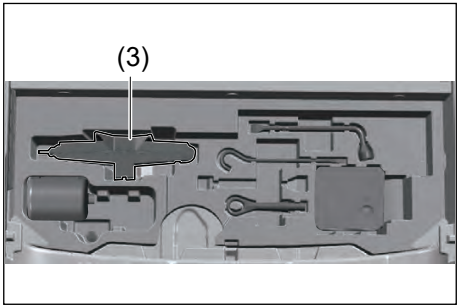


71UM010013

3) Remove the jack (3).

**⚠ WARNING**

**After using the tyre changing tools, be sure to stow them securely or they can cause injury if an accident occurs.**

**⚠ CAUTION**

**The jack should be used only to change wheels. It is important to read the jacking instructions in this section before attempting to use the jack.**

***NOTICE***

**To avoid damaging the storage bracket, do not expand the jack excessively.**


## Jacking Instructions

1) Place the vehicle on level, hard ground.
2) Set the parking brake firmly and shift into “P” (Park) if your vehicle has an automatic transmission or e-CVT, or shift into “R” (Reverse) if your vehicle has a manual transmission.

**⚠ WARNING**


- **Shift into “P” (Park) when you jack up the vehicle.**
- **Never jack up the vehicle with the transmission in “N” (Neutral). Otherwise, unstable jack may cause an accident.**

3) For M15D engine model, stop the hybrid system.
4) Turn on the hazard warning switch if your vehicle is near traffic.
5) Vehicles with smart power tailgate:
   Turn off the smart power tailgate system.

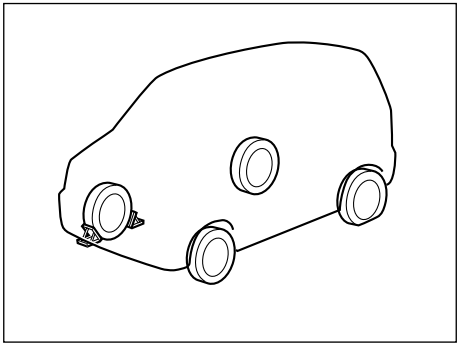


59RN10010

6) Block the front and rear of the wheel diagonally opposite to the wheel being lifted.

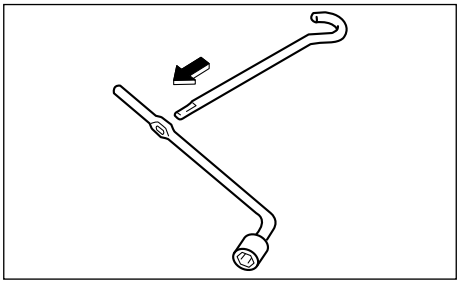


59RN10120

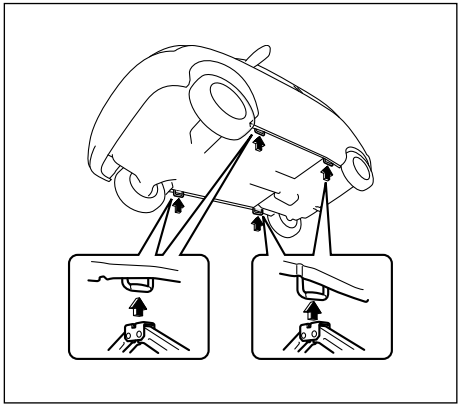

63J100

7) Position the jack at an angle as shown in the illustration and raise the jack by turning the jack handle clockwise until the jack-head groove fits around the jacking bar beneath the vehicle body.

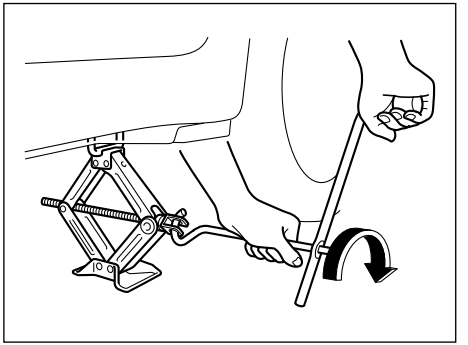

63J101

8) Continue to raise the jack slowly and smoothly until the tyre clears the ground. Do not raise the vehicle more than necessary.

**⚠ WARNING**

- **Use the jack only to change wheels on level, hard ground.**
- **Never jack up the vehicle on an inclined surface.**
- **Never raise the vehicle with the jack in a location other than between the frame bosses near the wheel to be changed.**
- **Make sure that the jack is raised at least 25 mm before it contacts the boss. Use of the jack when it is within 25 mm of being fully collapsed may result in failure of the jack.**
- **Do not use wooden blocks or similar objects as a jack underlay.**
- **No person should place any portion of their body under a vehicle that is supported by a jack. Never place your hands or feet under the raised vehicle when it is supported by a jack.**
- **Never run the engine and activate the hybrid system when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.**

## Raising Vehicle with Garage Jack

- Apply the garage jack to one of the points indicated below.
- Always support the raised vehicle with jack stands (commercially available) at the points indicated below.


(1) Front
(2) Rear
(3) Jack stand
(4) Garage jack
(5) Jacking point for garage jack

**⚠ WARNING**

**As the vehicle may get damaged or an accident may occur, observe the following points.**


- **Observe the designated points shown in the illustrations.**
- **When holding the lifted vehicle, use the rigid rack.**
- **When jacking up the front side or the rear side only, place a chock (commercially-available product) on front and back of the grounded tyre.**

**K15C engine model**

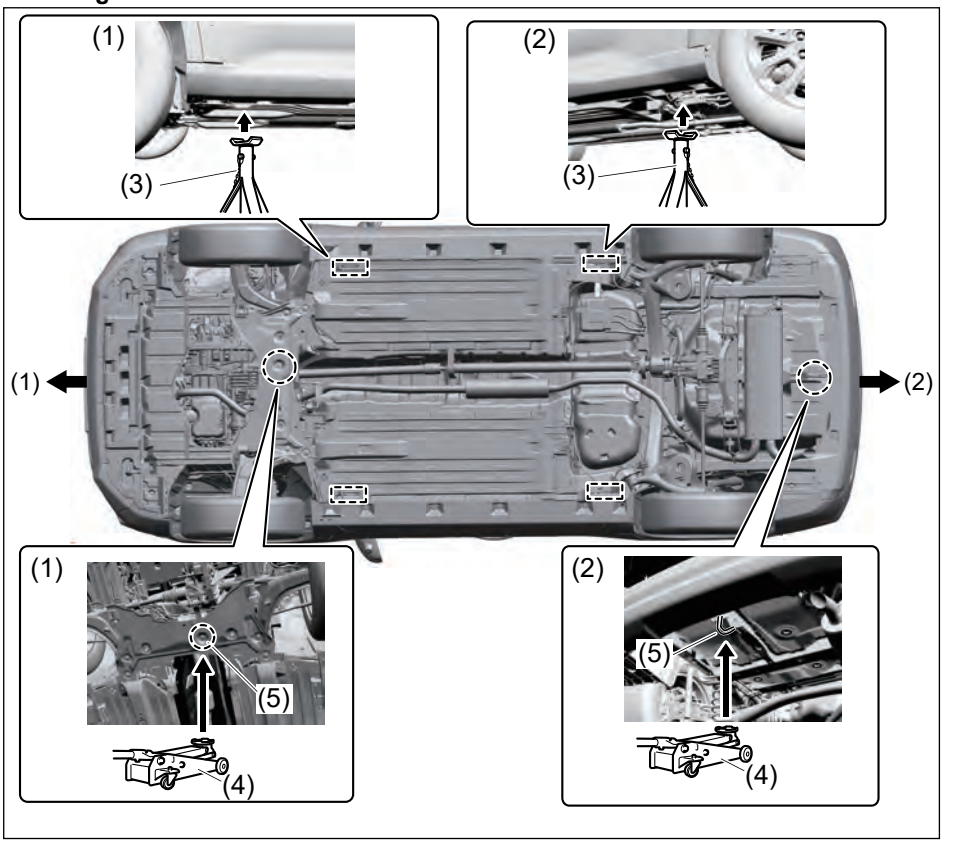



71UM010011

**M15D engine model**

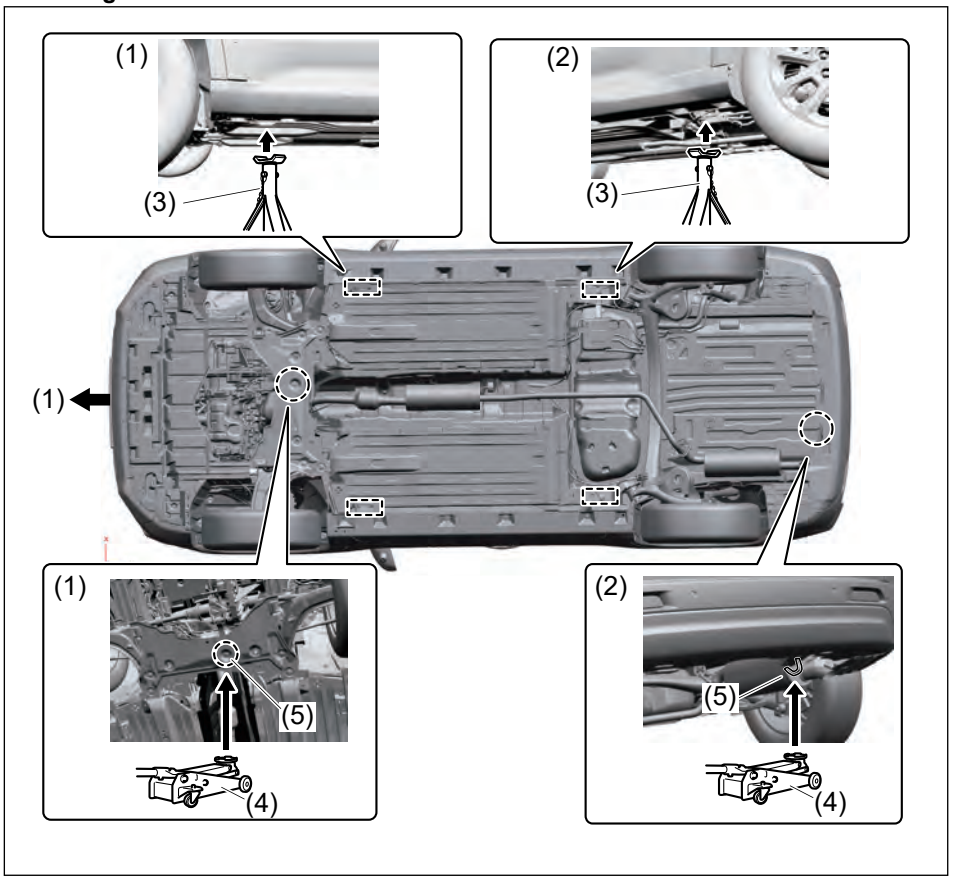


71UM010012

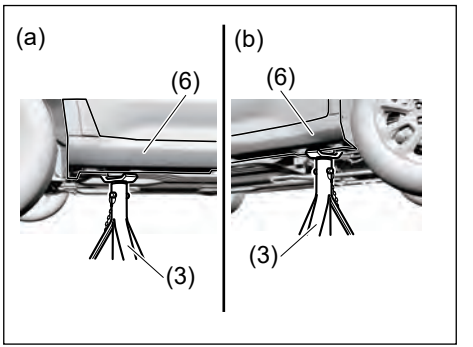


71UM010018

(a) Specified position of jack stand for the front side
(b) Specified position of jack stand for the rear side

***NOTICE***

**If you use the jack stand (3) in the condition that it touches the side skirt (6), the side skirt may be broken or damaged.**
**When using the jack stand, make sure that it does not touch the side skirt.**

*NOTE:*
*For more details, consult a Maruti Suzuki authorized workshop.*

## Changing Wheels

**⚠ WARNING**

**Never change a wheel in traffic lane. Always move the vehicle off the road on level, hard ground away from traffic for changing a wheel. For any further assistance contact your nearest Maruti Suzuki authorized workshop.**

To change a wheel, use the following procedure:


1) Prepare the jack and tools.
2) Loosen, but do not remove the wheel nuts.
3) Jack up the vehicle (follow the jacking instructions in this section).
4) Remove the wheel nuts and wheel.

**⚠ WARNING**

- **Shift into "P" (Park) for an automatic transmission or e-CVT, or into "R" (Reverse) for a manual transmission vehicle when you jack up the vehicle.**
- **Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.**


**⚠ CAUTION**

**Immediately after the vehicle has been driven, the wheels, the wheel nuts and the area around the brakes might be extremely hot. Touching these areas may cause burn injury Do not touch these areas, immediately after the vehicle has been driven.**

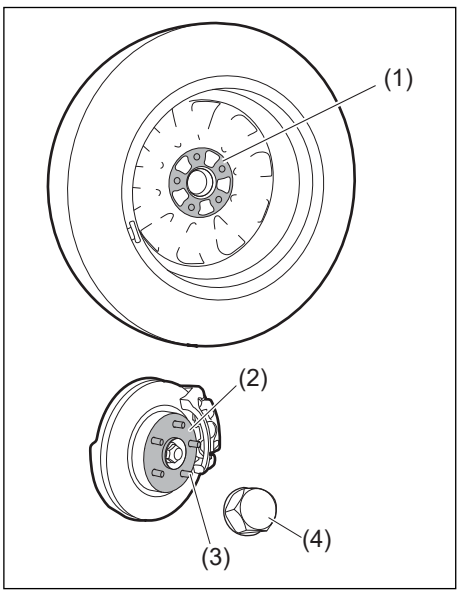


76MH1001

5) Clean any mud or dirt off from the surface of the wheel (1), hub (2), thread part (3) and surface of the wheel nuts (4) with a clean cloth. Clean the hub carefully; it may be hot from driving.
6) Install the new wheel and replace the wheel nuts with their cone shaped end facing the wheel. Tighten each nut snugly by hand until the wheel is securely seated on the hub.

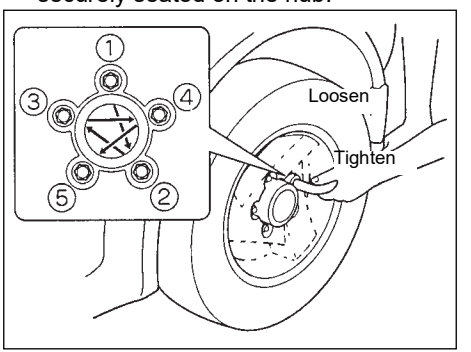


81A057


**Tightening torque for wheel nuts 100 Nm (10.2 kg-m)**

7) Lower the jack and fully tighten the nuts with a wrench in numerical order as shown in the illustration.

**⚠ WARNING**

**Use genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident. If you do not have a torque wrench, have the wheel nut torque checked by a Maruti Suzuki authorized workshop.**


### Full Wheel Cover (if equipped)

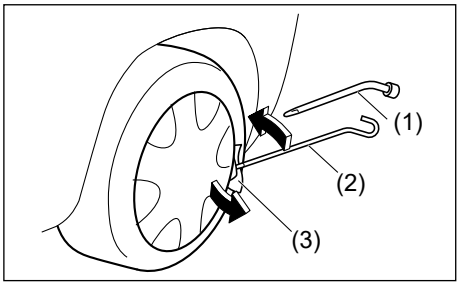


68PM08011

(1) or (2) Flat end tool

Your vehicle includes two tools, a wheel wrench and a jack crank, one of which has a flat end.
Use the tool with the flat end with soft cloth (3) to remove the full wheel cover, as shown above.

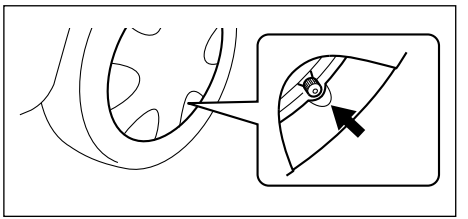

68PM08012

When installing the cover, make sure that it is positioned so that it does not cover or foul the air valve.

## Flat Tyre Repair Kit

The flat tyre repair kit is stowed in the luggage compartment.
Refer to “Luggage Compartment” in “QUICK GUIDE” section.

**⚠ WARNING**

**Failure to follow the instructions in this section for using the flat tyre repair kit can result in an increased risk of loss of control and an accident.**
**Carefully read and follow the instructions in this section.**

**NOTICE**


**The flat tyre repair kit cannot be used in the following cases. Consult a Maruti Suzuki authorized workshop.**

- **Cuts or piercing in the tyre tread larger than approx. 4 mm.**
- **Cuts in the tyre side wall.**
- **Tyre damage caused by driving with considerably reduced tyre pressure or even with deflated tyre.**
- **The tyre bead completely unseated outside of the rim.**
- **The rim damaged.**

**Small punctures in the tyre tread, caused by a nail or a screw, can be sealed with the flat tyre repair kit.**

**Do not remove nails or screws from the tyre during an emergency repair.**

**Flat tyre repair kit contents**

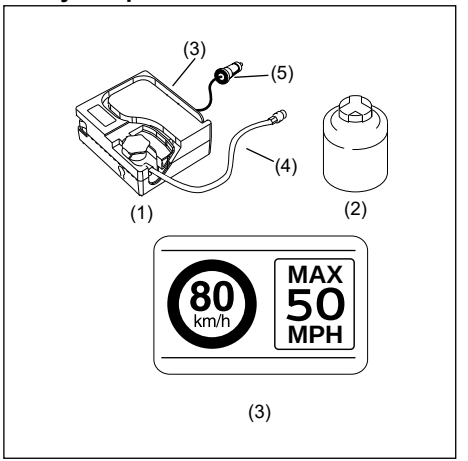


76TS0A090

(1) Air compressor
(2) Sealant bottle
(3) Speed restriction sticker (with air compressor)
(4) Air hose
(5) Power plug

**⚠ WARNING**


**Flat tyre repair kit sealant is harmful if swallowed, or if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Give plenty of water (if possible charcoal slurry) and seek medical attention immediately. If sealant gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of the reach of children and animals.**

**NOTICE**

**Replace the sealant before expiry date indicated on the label of the sealant bottle. To purchase new sealant, see your Maruti Suzuki authorized workshop.**

## Emergency repair

1) Place the vehicle on level, hard ground. Set the parking brake firmly and shift into “P” (Park) if your vehicle has an automatic transaxle, or shift into “R” (Reverse) if your vehicle has a manual transaxle.
   Turn on the hazard warning flasher if your vehicle is near traffic.
   Block the front and rear of the wheel diagonally opposite of the wheel being repaired.
2) Take out the sealant bottle and the compressor.
3) At the top of the compressor, remove the cap that covers the socket for the sealant bottle, and then screw the bottle into the socket.
4) Unscrew the valve cap from the tyre valve.
5) Connect the air hose of the air compressor to the tyre valve.
6) Connect the power plug of the compressor to the accessory socket. For a manual transmission vehicle, shift from “R” (Reverse) into “N” (Neutral). Start the engine. Switch on the compressor. Inflate the tyre to the required air pressure.

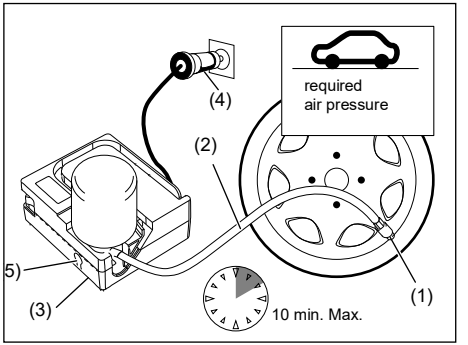


76TS0A091

(1) Tyre valve
(2) Air hose
(3) Compressor
(4) Power plug
(5) Deflation valve

***NOTICE***

**Do not operate the compressor for longer than 10 minutes. It can cause overheating of the compressor.**

If the tyre cannot be inflated to the required air pressure within 5 minutes, move the vehicle a few meters back and forth to spread the sealant over the entire tyre. Then, inflate the tyre again.

If the tyre still cannot be inflated to the required air pressure, the tyre may be severely damaged. In this case, the flat tyre repair kit cannot provide the necessary seal. consult with a Maruti Suzuki authorized workshop.

*NOTE:*
*If the tyre is over-inflated, deflate air by pushing the deflation valve (5) of the filler hose.*

7) Affix the speed restriction label from the air compressor in the driver’s field of view.
8) Make a short drive immediately after inflating the tyre to the required air pressure. Drive carefully with a maximum speed of 80 km/h.
9) Carry on driving carefully to the nearest Maruti Suzuki authorized workshop.

**⚠ WARNING**

**Do not affix the speed restriction label to the air bag. Also do not affix it to the warning light indicator or to the speedometer.**

10)After 10 km running, check the tyre pressure with the pressure gauge of the compressor. If the air pressure indicates more than 220 kPa (2.2 bar), the emergency repair is completed. But, if the air pressure indicates less than the required air pressure, correct the tyre pressure to the required air pressure. If the tyre pressure has dropped below 130 kPa (1.3 bar), the flat tyre repair kit cannot provide the necessary seal. Do not use the tyre and consult with a Maruti Suzuki authorized workshop.

**⚠ WARNING**

**Check the tyre pressure and confirm the completion of the emergency repair after 10 km of running.**

***NOTICE***

**Have the tyre renewed at the nearest Maruti Suzuki authorized workshop. When reusing the sealed tyre, consult a tyre repair shop.**
**The wheel can be reused after wiping sealant off completely with cloth in order to prevent rust, but the tyre valve and tyre pressure monitoring system (TPMS) sensor must be renewed.**
**Dispose of the sealant bottle and the air hose at a Maruti Suzuki authorized workshop or in accordance with your regional codes and practices.**
**After using the sealant bottle and the air hose, replace it with a new ones from your Maruti Suzuki authorized workshop.**

### Using compressor to inflate a tyre

1) Place the vehicle on level, hard ground. Set the parking brake firmly and shift into “P” (Park) if your vehicle has an automatic transaxle, or shift into “R” (Reverse) if your vehicle has a manual transaxle.
2) Take out the compressor.
3) Unscrew the valve cap from the tyre valve.
4) Connect the air hose of the compressor to the tyre valve.
5) Connect the power plug of the compressor to the accessory socket. For a manual transmission vehicle, shift from “R” (Reverse) into “N” (Neutral).Start the engine. Switch on the compressor. Inflate the tyre to the required air pressure.

***NOTICE***

**Do not operate the compressor for longer than 10 minutes. It can cause overheating of the compressor.**

## Jump-starting Instructions

**⚠ WARNING**


- **Never attempt to jump-start your vehicle if the lead-acid battery appears to be frozen. Batteries in this condition may explode.**
- **When making jump lead connections, check that your hands and the jump leads remain clear from pulleys, belts or fans.**
- **Lead-acid batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.**
- **If the booster battery you use for jump-starting is installed in another vehicle, check that the two vehicles are not touching each other.**
- **If your lead-acid battery discharges repeatedly, for no apparent reason, have your vehicle inspected by a Maruti Suzuki authorized workshop.**
- **To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions below.**
  **If you are in doubt, call for qualified road service.**

***NOTICE***

- **Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter. Use jump leads to start a vehicle with a weak or flat battery.**
- **Never charge the 12-volt battery while the hybrid system is activating. Also, be sure all accessories are turned off.**
- **For M15D engine model, the vehicle cannot be used to jump start another vehicle.**


1) Use only a 12-volt lead-acid battery to jump-start your vehicle. Position the good 12-volt lead-acid battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, check that two vehicles do not touch each other. Set the parking brakes fully on both vehicles.
2) Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).

**K15C model**

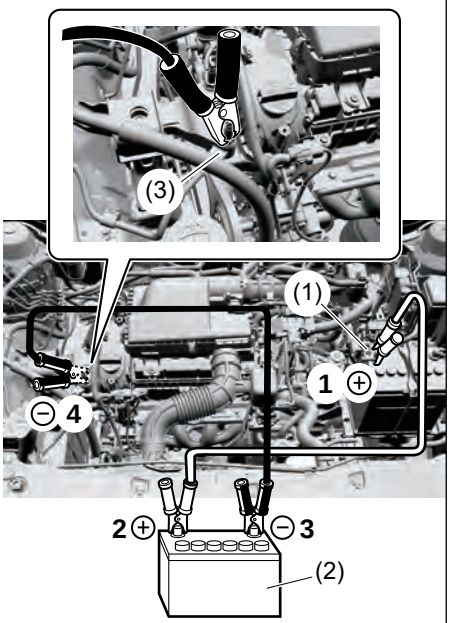


76TS100060

**M15D model**

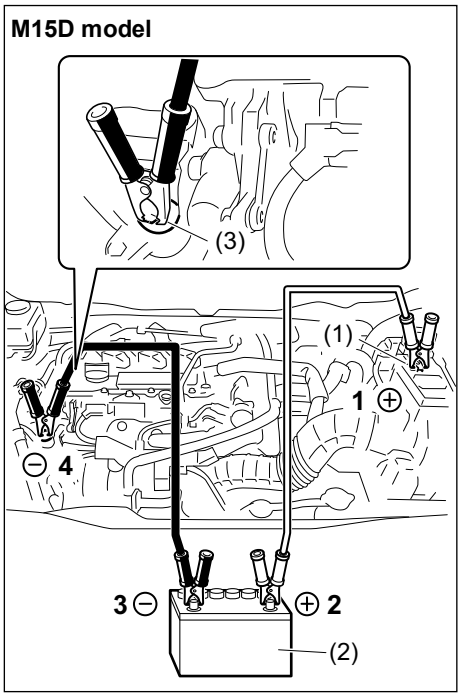



76TS100170

3) Connect jump leads as follows:
   1. Connect one end of the first jump lead to the positive (+) terminal of the discharged battery (1).

**⚠ WARNING**

- **Never try to jump-start the vehicle beyond fuse terminal.**
- **Don't try to remove the battery terminal cover (4)**
- **Never connect the jump lead to any terminal other than the battery terminal (5) as shown in the image below**

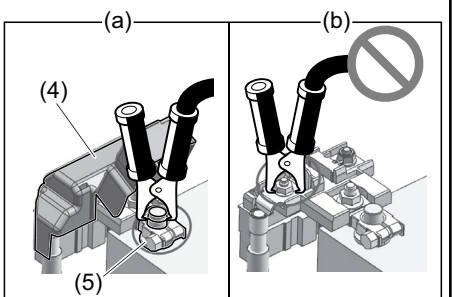


76TS100171

(a) Correct
(b) Wrong

   2. Connect the other end to the positive (+) terminal of the booster battery (2).
   3. Connect one end of the second jump lead to the negative (–) terminal of the booster battery (2).
   4. Make the final connection to an unpainted, heavy metal part (i.e. engine mount bolt (3)) of engine cylinder head in the vehicle with the discharged battery (1).

**⚠ WARNING**

**Never connect the jump lead directly to the negative (–) terminal of the discharged battery, or an explosion may occur.**

**⚠ CAUTION**

**Connect the jump lead to the engine mount bolt securely. If the jump lead disconnects from the engine mount bolt because of vibration at the start of the engine, the jump lead could be caught in the drive belts.**

4) If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
5) Start the engine or the hybrid system of the vehicle with the discharged battery.
6) Remove the jump leads in the exact reverse order in which you connected them.

*NOTE:*
- *For M15D engine model, the hybrid system may not start with the power switch turned off after charging the 12-volt lead-acid battery. However, the hybrid system will operate normally from the second attempt.*
- *For M15D engine model, after the 12-volt battery has discharged or when the terminal has been removed and installed during exchange, the gasoline engine may not stop even if the vehicle is being driven by the hybrid battery (traction battery). If this continues for a few days, consult a Maruti Suzuki authorized workshop.*

## Running Out of Battery

In the following cases, the lead-acid battery is running out.

- The starter does not engage when attempting to turn on the engine. Or, the starter rotation is too weak to make the engine or the hybrid system start.
- The headlight illumination is extremely low or the horn volume is low.

## If You Get a Flat Tyre While Driving

Firmly hold the steering wheel and carefully apply the brakes to slow down the vehicle and stop it in a safe place.

## Engine Trouble: Starter Does not Operate

1) Try turning the ignition mode to START with the headlights turned on to determine the lead-acid battery condition. If the headlights go excessively dim or go off, it usually means that either the lead-acid battery is discharged or the battery terminal contact is poor. Recharge the lead-acid battery or correct battery terminal contact as necessary.
2) If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by a Maruti Suzuki authorized workshop.

## Engine Trouble: Does not Start

Make sure that your vehicle has enough fuel and battery.
If the engine does not start under very cold condition, press the accelerator pedal all the way to the floor and hold it while cranking the engine.
Refer to “Starting / Stopping Engine or Hybrid System” in “OPERATING YOUR VEHICLE” section.
If the engine still does not start have your vehicle inspected at a Maruti Suzuki authorized workshop.

- Do not operate the starter motor for more than 12 seconds.

*NOTE:*
*If the engine refuses to start, the starter motor automatically stops after a certain period of time. After the starter motor has automatically stopped or if there is anything abnormal in the engine starting system, the starter motor runs only while the engine switch is held pressed.*

## Engine Trouble: Overheating

The engine could overheat temporarily under severe driving conditions. If the high engine coolant temperature warning light comes on as overheating or the engine coolant temperature gauge indicates overheating during driving:

1) Turn off the air conditioner.
2) Take the vehicle to a safe place and park.
3) Run the engine at a normal idle speed for a few minutes until the high engine coolant temperature warning light goes off or the indicator is within the normal, acceptable temperature range between “H” and “C”.

**⚠ WARNING**

**If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to cool it. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.**

If the high engine coolant temperature warning light does not go off or the temperature indication does not come down to within the normal, acceptable range:

1) Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.
2) Check the coolant level in the reservoir. If it is found to be lower than "LOW" line, check radiator, water pump, radiator hoses and heater hoses for leakage. If leakage that may cause overheating is found, do not run the engine until these problems have been corrected.
3) If leakage is not found, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to "Engine coolant" in "INSPECTION AND MAINTENANCE" section.)

*NOTE:*
*If engine overheats and you are not sure what to do, contact a Maruti Suzuki authorized workshop.*



79J007

**⚠ WARNING**

- **It is hazardous to remove the radiator cap when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.**
- **To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan and air-conditioner fan. These electric fans can automatically turn on without warning.**

## Hybrid System Trouble: Does not Start

Reasons for the hybrid system not starting vary depending on the situation. Check the following and perform the appropriate procedure:
Contact your Maruti Suzuki authorized workshop if the problem cannot be repaired, or if repair procedures are unknown.

### Hybrid System will not Start even though the Correct Starting Procedure is Being Followed

One of the following may be the cause of the problem:

- The shift lever may not be in P.
- When you press the power switch, you may not press the brake pedal firmly.
- The remote controller may not be functioning properly.
- The remote controller may not be in a detectable location in the car.
- The 12-volt battery may be discharged.
- There may not be sufficient fuel in the vehicle's tank. Refuel the vehicle.
- There may be a malfunction in the immobilizer system.
- There may be a malfunction in the steering lock system.
- The hybrid system may be malfunctioning due to an electrical problem such as remote controller battery depletion or a blown fuse. However, depending on the type of malfunction, an interim measure is available to start the hybrid system.
- The temperature of the hybrid battery (traction battery) may be extremely low (below approximately -15°C [5°F]).

### Interior Lights and Headlights are Dim, or the Horn does not Sound or Sounds at a Low Volume

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged.
- The 12-volt battery terminal connections may be loose or corroded.

### Interior Lights and Headlights do not Turn on, or the Horn does not Sound

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged.
- One or both of the 12-volt battery terminals may be disconnected.

## Hybrid System Trouble: Overheating

The following may indicate that the hybrid system of your vehicle is overheating.

- A loss of hybrid system power is experienced. (For example, the vehicle speed does not increase.)
- "HYBRID SYSTEM HIGH TEMPERATURE HYBRID DRIVE RESTRICTED" is shown on the multi-information display.

### Correction Procedures

If "HYBRID SYSTEM HIGH TEMPERATURE HYBRID DRIVE RESTRICTED" is shown on the multi-information display

1) Stop the vehicle in a safe place.
2) Stop the hybrid system and carefully lift the hood.
3) After the hybrid system has cooled down, inspect the hoses and radiator core (radiator) for any leaks.

If a large amount of coolant leaks, immediately contact your Maruti Suzuki authorized workshop.

4) The inverter coolant level is satisfactory if it is between the "FULL" and "LOW" lines on the reservoir.
5) Add coolant if necessary. If water was added in an emergency, have the vehicle inspected at your Maruti Suzuki authorized workshop as soon as possible.
6) After stopping the hybrid system and waiting for 5 minutes or more, start the


hybrid system again and check for the multi-information display.

If the message does not disappear: Stop the hybrid system and contact your Maruti Suzuki authorized workshop.

If the message is not displayed: The hybrid system temperature has dropped and the vehicle may be driven normally.


However, if the message appears again frequently, contact your Maruti Suzuki authorized workshop.

## Warning Triangle

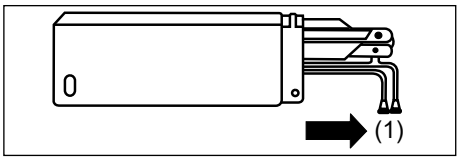



55T100010

In case of vehicle break-down or during emergency stopping, where, your vehicle could become a potential traffic hazard, keep the warning triangle, provided with your vehicle, on the road free from any obstacles behind your vehicle so as to warn the approaching traffic, at an approximate distance of 50-100 m. The reflecting side of the triangle should face the oncoming traffic. Please activate the hazard warning lamps before alighting the vehicle to keep the warning triangle.

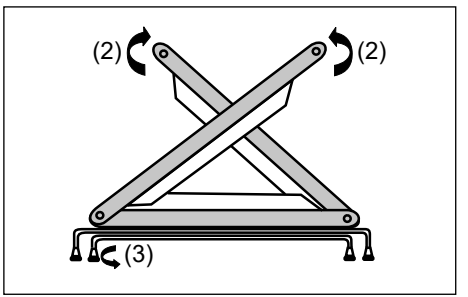



55T100020

- Remove the warning triangle carefully from the cover as shown by arrow (1).
- Open both the reflector arms as shown by arrow (2) and lock the arms with each other with the clip provided in the right arm. Open the bottom stand in counter clock-wise direction as shown by arrow (3). Position the warning triangle behind the vehicle on a plain surface.
- Reverse the removal procedure for keeping inside the cover.

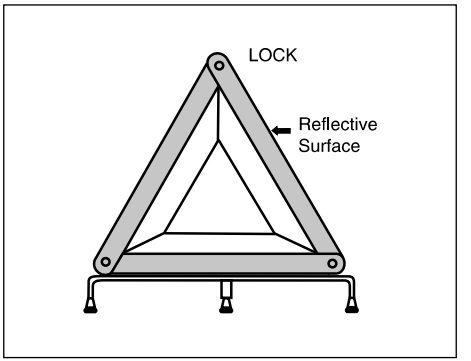


55T100030

# APPEARANCE CARE

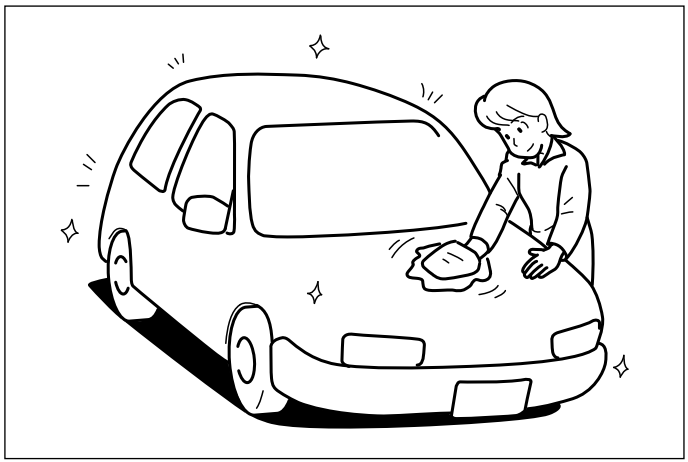

76TM11003

Corrosion Prevention ..... 11-1
Cleaning Exterior ..... 11-2
Cleaning Interior ..... 11-7

## Corrosion Prevention

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

### Important Information about Corrosion

**Common causes of corrosion**

1) Accumulation of road salt, dirt, moisture or chemicals in hard-to-reach areas of the vehicle underbody or frame.
2) Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.
3) Any or all of the below mentioned points:

- Continuous exposure to sunlight.
- Hard water & sea water coming in contact with vehicle.
- Foot rubbing (skirting).

**Environmental conditions which accelerate corrosion**

1) Road salt, dust control chemicals, sea breeze or industrial pollution will all accelerate the corrosion of metal.
2) High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.
3) Moisture in certain areas of a vehicle for an extended period of time may promote corrosion even when other body sections are completely dry.
4) High temperatures will cause an accelerated rate of corrosion to parts of the vehicle which are not well-ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

### How to Help Prevent Corrosion

**Wash your vehicle frequently**

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing.
Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underside, as clean and dry as possible.
If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the year.

For washing instructions, refer to “Cleaning Exterior” section.

**Remove foreign material deposits**

Foreign materials such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Check that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer’s directions when using these special cleaners.

**Repair finish damage**

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a qualified body shop make the repair.

**Keep passenger and luggage compartments clean**
Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion. Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used for off-road driving or in wet weather.
Certain cargos such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If they are spilled or leaked, clean and dry the area immediately.

**Park your vehicle in a dry, well-ventilated area**
Park your vehicle to save it from continuous exposure to direct sunlight. Do not park your vehicle in a damp, poorly-ventilated area. If you often wash your vehicle in the garage and place it there in wet condition, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.

**⚠ WARNING**

**Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter and the exhaust pipes. It may catch a fire if the undercoating substance becomes overheated.**


## Cleaning Exterior

### For Keeping the Paintwork Beautiful

To keep your vehicle's beautiful appearance for a long term, daily care is important.

- For parking and storing the vehicle, we recommend garages with good ventilation and locations with roofs.
- The following situations may cause rusting and discoloration of the paint. Wash your vehicle promptly.
  – When driving in coastal areas or on roads sprayed with antifreeze agent (Wash the underside of the vehicle and around the wheel wells especially)
  – When bird droppings, dead insects, sap, iron dust, soot or smoke residue, coal tar, etc., adhere to the paint or when the vehicle gets wet with acid rain
  – When the vehicle is dirty with dust or mud
- Give the vehicle a wax about once a month or whenever the water-repelling ability of the painted surfaces has declined. Follow all instructions on the package of the wax (sold separately).

*NOTE:*
*Do not use wax on plastic parts that are not coated. Waxing these surfaces could result in a whitened or uneven appearance.*

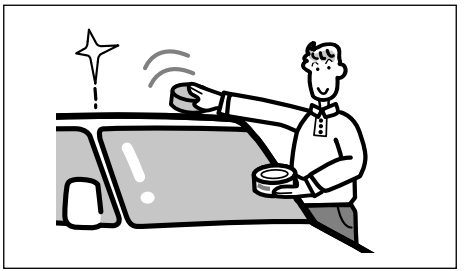

80J302

- Chips from flying rocks, scratches, etc. can cause rust. Repair these areas as soon as possible.

***NOTICE***

- **When repairing scratches on painted surfaces, consult a Maruti Suzuki authorized workshop. Using an inappropriate material for repair could cause damage to the paint.**
- **It is important that your vehicle be kept clean and free from dirt. Failure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.**

## Washing

**⚠ WARNING**

- **Never attempt to wash and wax your vehicle with the engine running or the hybrid system activating.**
- **When cleaning the underside of the body and fender, where there may be sharp-edged parts, wear gloves and a long-sleeved shirt to protect your hands and arms from being cut.**
- **After washing your vehicle, carefully test the brakes before driving to check that they have maintained their normal effectiveness.**
- **Do not splash or spill liquid in the vehicle, such as on the floor, in the hybrid battery (traction battery) air intake vent, and in the luggage compartment. Doing so may cause the hybrid battery, electrical components, etc. to malfunction or catch fire.**
- **Before washing the vehicle, turn off the smart power tailgate.**

***NOTICE***




84S09240

- **When washing or waxing the vehicle, do not lean on the vehicle body or do not push it hard.**
  **This might cause it to deform.**

(Continued)

***NOTICE***


(Continued)

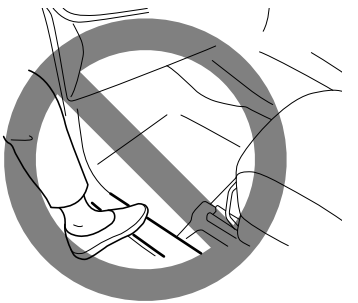

55T110010

- **When washing or waxing the vehicle, do not put your foot on the door opening.**
  **This might cause it to damage.**

**Washing by hand**

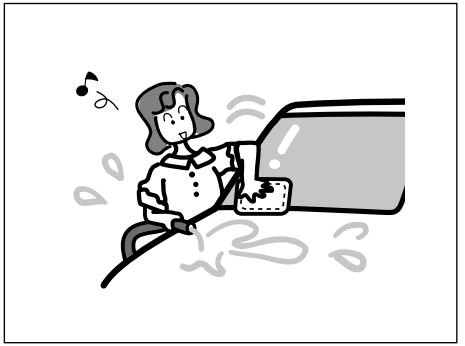

80J303

When washing the vehicle, park it in the place where direct sunlight does not fall on it as much as possible and follow the instructions below:


1) Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.

***NOTICE***

**When washing the vehicle:**
- **Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.**
- **For K15C engine model, to avoid damaging engine components, do not use pressurized water in the engine compartment.**

***NOTICE***

**For M15D engine model, to avoid damaging the hybrid system components, do not apply water in the engine components.**

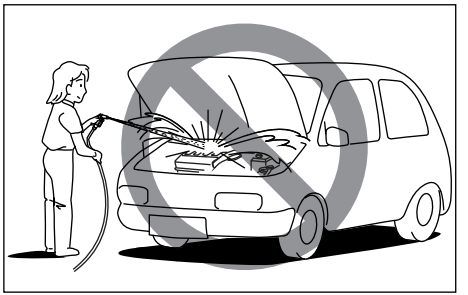

76TM11001

2) Rinse the body to loosen the dirt. Remove dirt and mud from the body exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

***NOTICE***

**To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Follow the above procedure.**

3) Wash the entire exterior with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.

***NOTICE***

**When using a commercial car wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.**

4) Once the dirt has been completely removed, rinse off the detergent with running water.
5) Wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.
6) Check carefully for damage to painted surfaces. If there is any damage, touch up the damage following the procedure below:
   1. Clean all damaged spots and allow them to dry.
   2. Stir the paint and touch up the damaged spots lightly using a small brush.
   3. Allow the paint to dry completely.

**Washing by an automatic car wash**

***NOTICE***

- **If you use an automatic car wash, check that your vehicle's body parts, such as antenna and spoilers, cannot be damaged. If you are in doubt, consult the car wash operator for advice.**
- **Do not wash a car with a roof end spoiler in an automatic car wash. It may get caught in the car wash and damage the spoiler.**
- **Before washing the vehicle, turn off the smart power tailgate.**

**Washing by a high-pressure cleaner**

***NOTICE***

**If you use a high-pressure cleaner, keep away the nozzle from your vehicle sufficiently.**

- **Pointing the nozzle to the surrounding parts of camera can allow water to enter the camera. This may cause a fire, malfunction, dew condensation, etc.**
- **For vehicle with 360 view camera or rear view camera, do not point to the nozzle to the camera.**
- **Bringing the nozzle to your vehicle too close or pointing the nozzle to the opening of front grill or bumper etc. can cause damage and malfunction of the vehicle body and parts.**
- **Pointing the nozzle to door glasses and door frames can allow water to enter the cabin.**

## Caring for the Windshield

If an oil film, etc. adheres to the windshield and the windshield wipers cannot clean it, use a glass cleaner (sold separately) to clean the windshield by hand.

## Caring for Lights

Wash the lens part of light and wipe it off with a soft cloth.

***NOTICE***

- **Do not use the detergent including organic solvent on the lens surface of the light. The lens surface may be cracked.**
  **If you use the detergent including organic solvent, rinse it off with ample water.**
- **Do not wipe the lens surface by wax or a hard brush. This may damage the lens or hasten its deterioration.**

### Caring for Cameras

Wash the lens part of camera and wipe it off with a soft cloth. If the lens part is very dirty, use a mild detergent.

***NOTICE***


- **Using alcohol, benzine, thinner etc. to wipe the camera may cause discoloration.**
  **When you wipe the camera, do not use alcohol, benzine, thinner etc.**
- **Hard coating is used for the lens of camera not to be easily scratched. However, if you use the brush for a vehicle, it may be difficult for you to see the image on the 360 view camera.**
  **Be very careful not to scratch the lens.**
- **The resin cover of the camera may be damaged if an organic solvent adheres to the camera.**
  **Do not let organic solvent, body wax, oil film remover, or glass coating agent adhere to the product.**
- **If the camera is subjected to a sudden temperature change, it may be damaged.**
  **Do not expose the camera to sudden temperature changes such as melting frozen snow with hot water.**

### Caring for Aluminum Wheels

*NOTE:*

- *Do not use an acidic or alkaline detergent, or a cleaner containing petroleum solvent to wash aluminum wheels. These types of cleaners will cause permanent spots, discoloration and cracks on the finished surface and damage to the center cap.*
- *Do not use a bristle brush and a soap containing an abrasive material. These will damage the finished surface.*

### Waxing

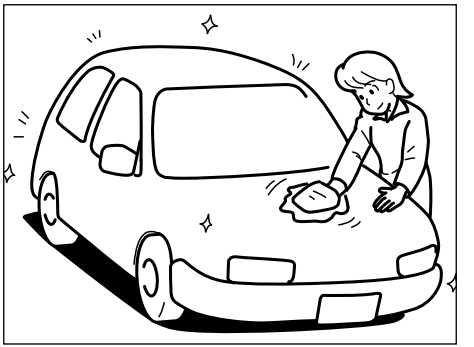

60G412

After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.

- Only use waxes and polishes of good quality.
- When using waxes and polishes, observe the precautions specified by the manufacturers.

## Cleaning Interior

- Clean out any dirt, sand, etc. using a vacuum cleaner, or wipe off the surfaces using a soft cloth moistened with cold or lukewarm water. If the interior is left dirty, scratches can occur.
- Quickly clean off any liquids such as those from air fresheners or spilled beverages by using tissue paper or a soft cloth. Leaving spilled liquids can cause staining, discoloration or cracking.

**⚠ WARNING**

**Do not spray the interior with water or other liquids. If the navigation equipment, audio components, switches, wiring under the floor, or other electrical parts become wet, there is a risk of fire or malfunction, and the SRS airbag system could fail to function normally.**
**If you pour water or spill a drink in the vehicle, consult a Maruti Suzuki authorized workshop as soon as possible for inspection.**

**⚠ WARNING**

**When cleaning the interior or exterior of the vehicle, do not use flammable solvents such as lacquer thinners, petrol and benzine. Also, do not use cleaning materials such as bleaches and strong household detergents. The materials could cause personal injury or damage to the vehicle.**

***NOTICE***

- **Do not use chemical products containing the following ingredients. Doing so may cause staining, discoloration, deformation, or a deterioration in strength, etc.**
  - **– Solvents such as benzine, gasoline, thinner, or sticker peeling agents**
  - **– Acidic or alkaline detergents**
  - **– Bleaches or dyes**
- **Do not use chemical products that include silicone for cleaning the areas around the air conditioner, electronic equipment such as the audio or navigation systems or switches. Contact with silicone may cause them to malfunction.**
- **Do not leave colored leather goods, furs, vinyl articles, etc. in your vehicle for long periods. Doing so could cause discoloration or deformation of the interior.**

*NOTE:*
*To prevent liquid-based air fresheners from spilling, it is recommended to fix their containers in place, or use solid-type air fresheners instead.*

### Vinyl Upholstery

Prepare a solution of soap or mild detergent dissolved in warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.
Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.

### Fabric Upholstery (Except front passenger seat)

Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

**⚠ CAUTION**

- **Do not spill liquid or semi-solid on the front passenger's seat. If you spill it on the front passenger's seat, immediately wipe it dry with a soft cloth. Contact of liquid with sensor may impact the function of seat belt reminder sensor.**
- **Do not place any sharp or heavy object on passenger seat which can penetrate through seat upholstery and can cause damage to sensor.**

### Fabric upholstery /vinyl (For front passenger seat)

Do not use liquid for cleaning as it may penetrate the fabric and damage the seat sensor.

### Leather Upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap or saddle soap solution, wipe dirt off with a clean damp soft cloth. To remove soap, wipe the areas again with a soft cloth dampened with water. Wipe the areas dry with a soft dry cloth. Repeat this until the dirt or stain is removed, or use a commercial leather cleaner for tougher dirt or stains. If you use a leather cleaner, carefully follow the manufacturer's instructions and precautions. Do not use solvent type cleaners or abrasive cleaners.

*NOTE:*

- *In order to keep the leather upholstery looking good, it should be cleaned at least twice a year.*
- *If the leather upholstery becomes wet, immediately wipe it dry with a tissue paper or a soft cloth. Water may cause the leather to harden and shrink if it is not wiped off.*
- *When parking on sunny days, select a shady place or use a sunshade. If the leather upholstery is exposed to the direct sunlight for a long time, it may discolor and shrink.*
- *As is common with natural materials, leather is inherently irregular in grain and cowhide has spots in its natural state. These do not affect the performance of the leather in any way.*

### Seat Belts

Clean seat belts with mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric of the belts.

### Vinyl Floor Mats

Ordinary dirt can be removed from vinyl with water or the mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.

### Carpets


Remove the dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.

### Instrument Panel and Console

Remove loose dirt with a vacuum cleaner. Gently wipe dirt off with a tightly squeezed damp clean cloth. Repeat this until the dirt is removed.

***NOTICE***

- **Do not use chemical products that contain silicon to wipe electrical components such as the air conditioning system, audio, navigation system, or other switches. These will cause damage to the components.**
- **Do not spray water or any liquid directly on instrument cluster or any other electrical or electronic components. This may cause damage and/ or lead to non-functioning of the part.**
- **Liquids such as liquid aromatics, soft drinks or juice may cause discoloration, wrinkles, and cracking to resin-based parts and textiles. Immediately wipe it dry with tissue paper or a soft cloth.**
- **Do not leave leather products with color, fur or vinyl products, etc. in your vehicle for long periods. It may cause discoloration or deterioration of interior.**

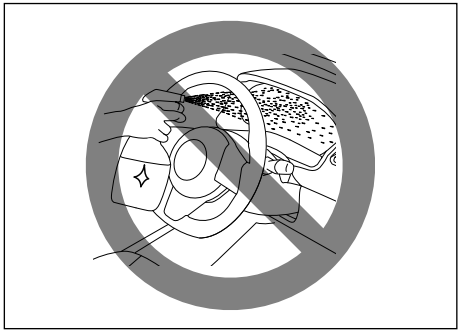

76TM11002

### Inside of the tailgate window


*NOTE:*
*Wipe the window along the antenna wires or heat wires by a soft cloth dampened with water to avoid damaging these wires.*

### Head-up Display

The surface of the display is coated, so please wipe off the dirt with a soft cloth like an eyeglass wipe.

| ***NOTICE*** |
| --- |
| • **Do not use a hard cloth or detergent as it may damage the display or the surface coating.**<br>• **Do not apply too much force when wiping the display or mirror, as it may damage it.** |

# SPECIFICATIONS

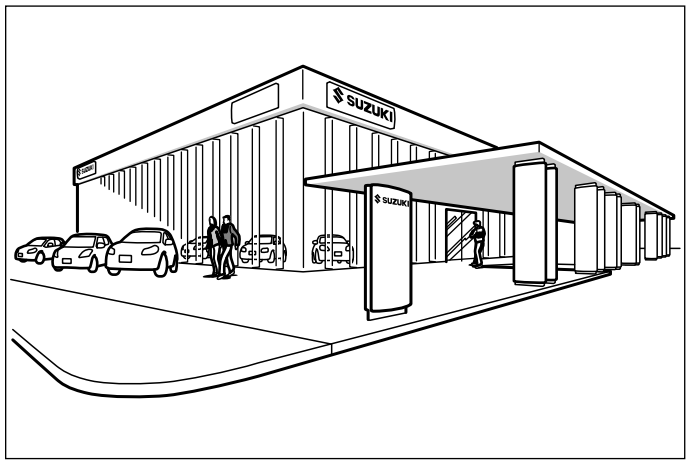


84MM01001


Vehicle Identification ..... 12-1
FASTag (if equipped) ..... 12-2
High Security Registration Plate (HSRP) (if applicable) ... 12-3
Fuel Recommendation ..... 12-4
Specifications ..... 12-6
Setting mode of information display (Type A) ..... 12-14
Setting mode of information display (Type B) ..... 12-19

# Vehicle Identification

## Chassis Serial Number



71UM012001

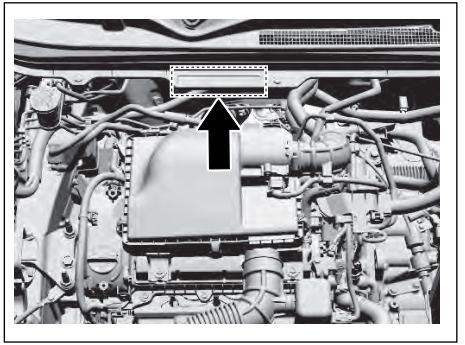


76TS120030

The chassis and/or engine serial numbers are used to register the vehicle. They are also used to assist a Maruti Suzuki authorized workshop when ordering or referring to special service information. Whenever you have occasion to consult a Maruti Suzuki authorized workshop, remember to identify your vehicle with this number. Should you find the number difficult to read, you will also find it on the identification plate.

## FASTag (if equipped)


As per Ministry of Road Transport and Highways, the FASTag (1) is mandatory for each vehicle for the purpose of electronic toll collection or any other purpose as may be defined by the Government of India.

In case of any damage to FASTag or replacement of front windscreen, please contact your nearest Maruti Suzuki authorized workshop.

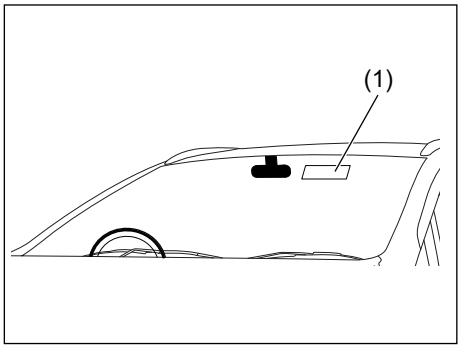


76TM12001


### As seen from inside of the vehicle

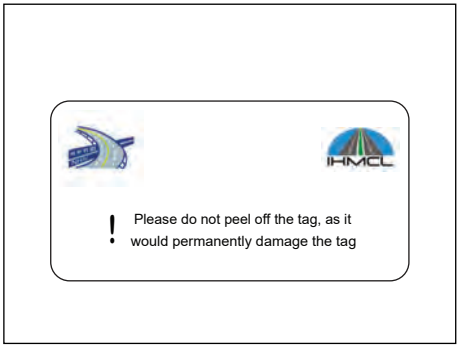


76TM12002

*NOTE:*
*The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.*

### As seen from outside of the vehicle

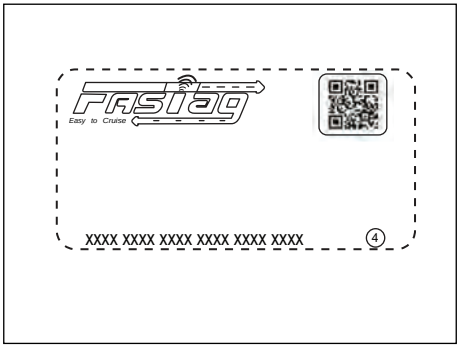


76TM12003

*NOTE:*
*The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.*


*NOTE:*
- *Any attempt to remove the tag from the windscreen will result in permanent damage to the tag.*
- *Use of chemical cleaners to clean the windscreen area where the tag is mounted can damage the tag.*
- *Use of any sharp objects on the tag can damage the tag.*

## High Security Registration Plate (HSRP) (if applicable)

As per Ministry of Road Transport and Highways, every new vehicle must have HSRP.
HSRP contains;

- Front and rear HSRP, which will be fitted with 2 snap-locks each on number plate area.
- Third license plate on front windshield.


### Third License Plate

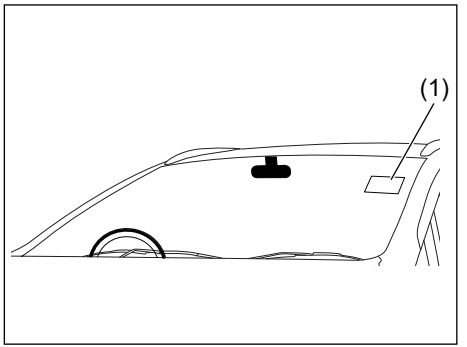


76TM12004

(1) Third license plate

### Third license plate - As seen from outside of the vehicle

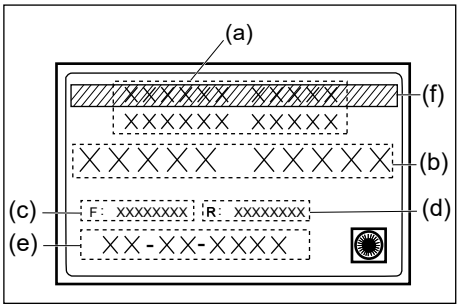


72RM09002


(a) HSRP issuing authority name
(b) Vehicle registration number
(c) Unique laser number - Front plate
(d) Unique laser number - Rear plate
(e) Date of 1st registration
(in DD-MM-YYYY format)
(f) Green strips (BS6 vehicle)

*NOTE:*
*The picture shown is for indicative purpose only. Internal structure of actual label mounted on vehicle may be different.*

*NOTE:*

- *Any attempt to remove the third license plate from the windscreen will result in permanent damage to the label.*
- *Use of chemical cleaners to clean the windscreen area where the label is mounted can damage the same.*
- *Use of any sharp objects on the label can damage the label.*
- *In the event of any replacement of the third license plate, may please contact the approved authority.*

### Third license plate - As seen from inside of the vehicle

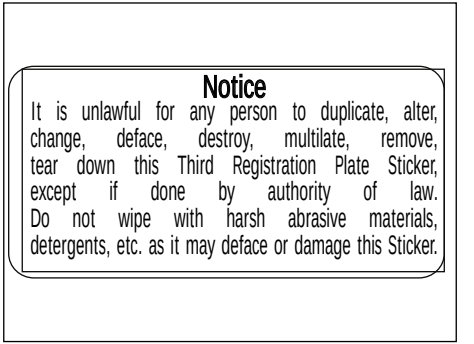



76TM12006

*NOTE:*
*The picture shown is for indicative purpose only.*

*NOTE:*
*Color of third license plate (back) is as per HSRP regulation as defined by Ministry of Road Transport and highways.*


## Engine Serial Number

### K15C Engine

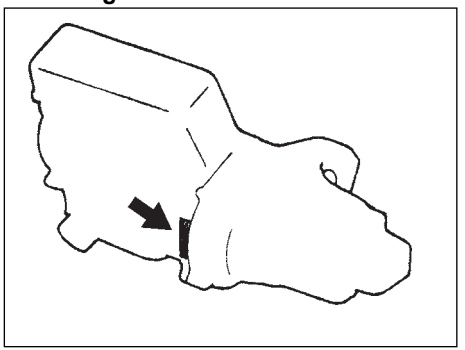

60G128

### M15D Engine

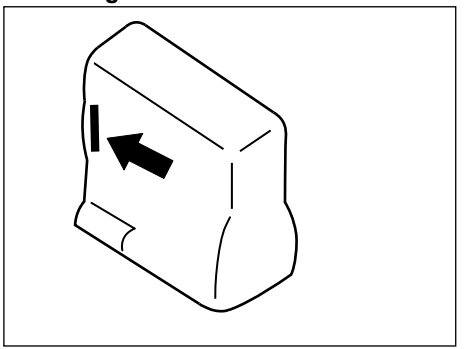

76TS120050

The engine serial number is stamped on the cylinder block as shown in the illustration.

# Fuel Recommendation

## Petrol Engine

**K15C engine model**
To avoid damaging catalytic converter, you must use unleaded petrol with an octane number (RON) of 91 or higher.

**M15D engine model**
To avoid damaging catalytic converter, you must use unleaded petrol with an octane number (RON) of 95 or higher.

**Gasoline/Ethanol blends**
Blends of unleaded gasoline and ethanol, also known as gasohol, are commercially available in the country and can vary with location. Gasoline Ethanol blend up to E20 can be used as fuel for this vehicle.

**Gasoline containing MTBE**
Unleaded gasoline containing MTBE (methyl tertiary butyl ether) may be used in your vehicle if the MTBE content is not greater than 15%. This oxygenated fuel does not contain alcohol.

**⚠ CAUTION**

**Use of spurious, low quality, adulterated fuel can cause damage to the engine and engine auxilliaries, affect functioning of engine and degrade engine performance including but not limited to engine seizure.**

***NOTICE***

- **The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative non-automatic system.**
- **Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.**

## Specifications

*NOTE:*
*Specifications are subject to change without notice.*

M/T: Manual transmission
A/T: Automatic transmission
e-CVT: e-CVT transmission

| **ITEM: Dimensions** | | **UNIT: mm** |
|---|---|---|
| Overall length | | 4360 |
| Overall width | | 1795 |
| Overall height | | 1655 |
| Wheelbase | | 2600 |
| Track | Front | 1530 |
| | Rear | 1535 |

| ITEM: Mass (weight) | | UNIT: kg |
|---|---|---|
| Curb mass (weight) | K15C M/T 2WD | 1145—1195 |
| | K15C A/T 4WD | 1285—1305 |
| | K15C A/T | 1185—1225 |
| | M15D e-CVT | 1250—1295 |
| Gross vehicle mass (weight) rating | K15C M/T 2WD | 1655 |
| | K15C A/T 4WD | 1765 |
| | K15C A/T | 1685 |
| | M15D e-CVT | 1755 |
| Permissible maximum Axle Weight | Front | 895 |
| | Rear | 915 |

| ITEM: Engine | | |
|---|---|---|
| Type | K15C | M15D |
| Number of cylinders | 4 | 3 |
| Bore | 74.0 mm | 80.5 mm |
| Stroke | 85.0 mm | 97.6 mm |
| Displacement | 1462$cm^3$ (1462 cc) | 1490 $cm^3$ (1490 cc) |
| Compression ratio | 12.0: 1 | 14.0: 1 |

| ITEM: Electrical | | | |
|---|---|---|---|
| Engine type | | K15C | M15D |
| Standard spark plug | | NGK ILZKR6Q11 | DENSO FC16HR-Q8 |
| Lead-acid battery | Petrol | N55 20HR 42Ah CCA 480A (JIS)*1 | 34B19L 20HR 33Ah CCA 240A (JIS) |
| | CNG | 34B19L 20HR 33Ah CCA 240A (JIS) | - |
| Lithium-ion battery | | Maintenance free*2 | Maintenance free*2 |
| Fuses | | See “INSPECTION AND MAINTENANCE” section. | |

*1: Your vehicle is equipped with a lead-acid battery for exclusive use of the ENG A-STOP system.
When replacing the lead-acid battery, make sure to select the specified type for ENG A-STOP system. Consult a Maruti Suzuki authorized workshop for replacing the lead-acid battery.

*2: If the lithium-ion battery or high voltage battery is completely discharged, the battery cannot be recharged. When replacing or disposing the lithium-ion battery or high voltage battery, consult a Maruti Suzuki authorized workshop.

| ITEM: Lights | | | WATTAGE | BULB No. |
|---|---|---|---|---|
| Headlight | Low / High beam | Halogen type | 12V 55W | HIR2 |
| | | LED type*1 | LED | – |
| Position light (if equipped)*1 | | | LED | – |
| Position light (if equipped) | | | 12V 5W | W5W |
| Front turn signal light (if equipped)*1 | | | LED | – |
| Front turn signal light (if equipped) | | | 12V 21W | WY21W |
| Daytime running light*1 | | | LED | – |
| Tail/brake light*1 | | | LED | – |
| Rear turn signal light | | | LED | – |
| Rear reversing light | | | 12V 16W | W16W |
| High mount stop light*1 | | | LED | – |
| License plate light | | | 12V 5W | W5W |
| Side turn signal light*1 | | | LED | – |

If you need to replace the following bulbs indicated in the above table, consult a Maruti Suzuki authorized workshop.

*1: Since the lights are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any light is defective.

| ITEM: Lights | | WATTAGE | BULB No. |
|---|---|---|---|
| Interior light | Front | 12V 5W | W5W |
| | Vanity mirror light (if equipped) | 12V 3W | – |
| | Luggage compartment (if equipped) | 12V 5W | W5W |
| | Instrument panel assistant side ornament ambient light*1 (if equipped) | LED | – |
| | Courtesy light (if equipped) | 12V 5W | W5W |
| | Glove box light (if equipped) | 12V 1.4 W | T5 |
| | Front footwell light*1 (if equipped) | LED | – |
| | Rear roof light | 12V 5W | W5W |
| | Front / Rear door ambient light*1 (if equipped) | LED | – |

If you need to replace the following bulbs indicated in the above table, consult a Maruti Suzuki authorized workshop.

*1: Since the lights are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any light is defective.

| ITEM: Wheels and tyres | | |
|---|---|---|
| Tyre size, front and rear | 215/60R17 96H*1 | |
| Rim size | with steel wheels | 17X6 1/2J |
| | with aluminum wheels | 17X6 1/2J |
| Tyre pressures | For the specified tyre pressure, see the tyre information label located on the driver's door lock pillar. | |

*1: If you cannot prepare tyres with the specified load index rate and speed symbol, prepare tyres with higher load index rate and speed symbol.

## SPECIFICATIONS


The capacities listed below are approximate guide. The actual amount when replacing may differ.

| ITEM: Recommended fuel / lubricants | | | | Capacity |
|---|---|---|---|---|
| Fuel | | | See “FUEL RECOMMENDATION” section. | 45 L |
| Engine oil | K15C Engine | | Classification: API SN or API SP or ILSAC GF-6<br>Viscosity: SAE 0W-16 | 3.3 L<br>(replacement with oil filter) |
| | M15D Engine | | Classification: API SN, SN PLUS or SP ILSAC GF-6B<br>Viscosity: SAE 0W-16 | 3.4 L<br>(replacement with oil filter) |
| Engine coolant | K15C M/T | | (Genuine) “SUPER LONG LIFE COOLANT (BLUE)” | 4.2 L<br>(including reservoir tank) |
| | K15C A/T | | | 4.4 L<br>(including reservoir tank) |
| | M15D e-CVT | | (Genuine) “SUPER LONG LIFE COOLANT (PINK)” | 4.8 L<br>(including reservoir tank) |
| Inverter coolant | M15D | | (Genuine) “SUPER LONG LIFE COOLANT (PINK)” | 1.9 L |
| Manual transmission oil | | | “MARUTI GENUINE GEAR OIL 75W” | 2.6 L |
| Automatic transmission oil | | A/T | “SUZUKI AT OIL AW-1” | 5.8 L |
| | | e-CVT | “AUTO FLUID WS” | 2.6 L |
| Transfer oil | 4WD | A/T | “SUZUKI GEAR OIL 75W-85” | 0.85 L |
| Rear differential oil | 4WD | | “SUZUKI GEAR OIL 75W-85” | 0.73 L |
| Brake fluid / Clutch fluid | | | “Brake Fluid DOT3” | – |
| Windshield washer fluid | | | – | 2.5 L |

## Setting mode of information display (Type A)

When the ignition mode is ON and the vehicle is stationary, you can enter into the setting mode of the information display.

**To switch to the setting mode**

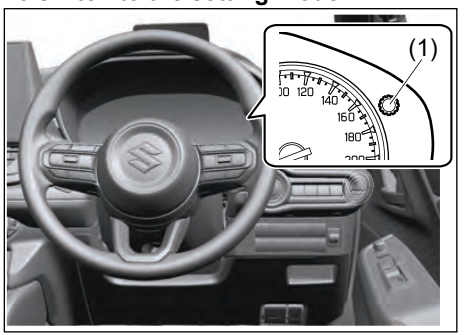


71UM012002

(1) Indicator selector knob

1) Push and holding the indicator selector knob (1) for more than 3 seconds.
2) After the display of setting mode is shown, select the setting item that you want to change by turning the indicator selector knob (1) left or right. Refer to “Setting items” in this section.

**EXAMPLE**




53SB2023

*NOTE:*
- *The currently selected setting item is surrounded by a frame.*
- *If you push and hold the indicator selector knob (1) to enter into the setting mode when the display (C) shows average fuel consumption, average speed, driving time, total idling stop time and total idling fuel saved (if equipped), the value will be reset simultaneously. If you do not want to reset the value, push the indicator selector knob quickly to switch the indication of the display.*
- *If you press the engine switch or start to move the vehicle when the display is in the setting mode, the setting mode will be canceled automatically.*

**To exit the setting mode**

Push the indicator selector knob (1) and select “Back”.

*NOTE:*
*You can exit the setting mode by either of the following operations:*
- *Press the engine switch to change the ignition mode to ACC or LOCK (OFF).*
- *Start driving your vehicle.*

## Setting items

*NOTE:*
*The items that can be changed in setting mode depends on the country or region.*


| Item | | Customization |
|---|---|---|
| Door lock | Door unlock | All doors / Driver door |
| | Auto lock | Manual lock / Speed sync / Gear shift sync (if equipped) |
| | Auto unlock | Sync OFF / IGN-OFF sync / Gear shift sync (if equipped) |
| | Siren | “ON” / “OFF” |
| Lights | Footwell lights | Light sync / Door sync / “OFF” |
| | Lane change | “ON” / “OFF” |
| Guide me light | To car | “OFF” / 10 seconds / 15 seconds / 20 seconds / 25 seconds |
| | To home | “OFF” / 10 seconds / 15 seconds / 20 seconds / 25 seconds / 30 seconds |

| Item | | Customization |
|---|---|---|
| Antitheft (if equipped) | Shock sensor | “ON” / “OFF” |
| | Shock sensor pre warn | Sensitivity OFF / Sensitivity L1 / Sensitivity L2 / Sensitivity L3 / Sensitivity L4 / Sensitivity L5 / Sensitivity L6 / Sensitivity L7 / Sensitivity L8 / Sensitivity L9 / Sensitivity L10 / Sensitivity L11 / Sensitivity L12 / Sensitivity L13 / Sensitivity L14 / Sensitivity L15 |
| | Shock sensor full warning | Sensitivity OFF / Sensitivity L1 / Sensitivity L2 / Sensitivity L3 / Sensitivity L4 / Sensitivity L5 / Sensitivity L6 / Sensitivity L7 / Sensitivity L8 / Sensitivity L9 / Sensitivity L10 / Sensitivity L11 / Sensitivity L12 / Sensitivity L13 / Sensitivity L14 / Sensitivity L15 |
| Auto stop / start AC | | Standard / Economy / Comfort<br>For details, refer to “Air conditioning system settings by ENG A-STOP system (if equipped)” in this section. |
| Parking sensor mode (if equipped) | | Normal mode / Trailer mode |
| Distance units | | “km” / “Miles” |
| Fuel economy units | | “km/L” / “L/100km” / “MPG(UK)” |
| Select language | | You can change the language of the information display. |
| Fuel economy reset | | After refuel / Reset with Trip A / Manual |
| Temperature units | | “°C” or “°F” |

| Item | | Customization |
|---|---|---|
| Clock (if equipped) | Adjust clock | Refer to “Adjusting the clock” in this section. |
| | 12H/24H | 12H or 24H |
| | Adjust date | Refer to “Adjusting the date” in this section. |
| Display item | Calendar | “Calendar ON” / “Calendar OFF” |
| | Calendar format | DD.MM.YYYY / YYYY.MM.DD / MM.DD.YYYY |
| | Fuel economy history | Time / Drive cycle |
| | Auto stop info (if equipped) | “Display ON” / “Display OFF” |
| | Auto stop warning (if equipped) | “Display ON” / “Display OFF” |
| | Regen indicator (if equipped) | “Display ON” / “Display OFF” |
| | Hill descent (if equipped) | “Display ON” / “Display OFF” |
| | Driving mode (if equipped) | “Display ON” / “Display OFF” |
| | Parking sensors (if equipped) | “Display ON” / “Display OFF” |
| | Intersection guide (if equipped) | “Display ON” / “Display OFF” |
| Startup sound | | “ON” or “OFF” |
| Notification sounds | | Volume low / Volume mid / Volume high |
| Default (Initialization setting) | | Yes or No |

## Adjusting the clock

Adjust the clock by selecting “Clock setting” in the “Setting mode”. Then, select “Adjust clock”.

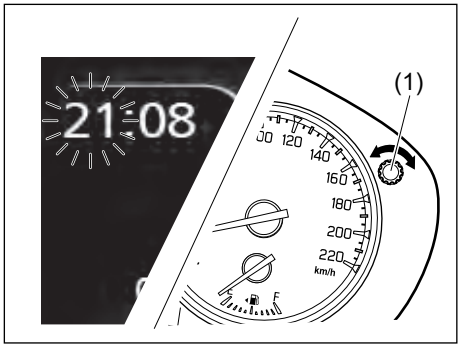



71UM012003

1) To change the hour indication, turn the indicator selector knob (1) left or right repeatedly when the hour indication blinks. To change the hour indication quickly, turn and hold the indicator selector knob (1). To set the hour indication, push the indicator selector knob (1) and the minute indication blinks.
2) To change the minute indication, turn the indicator selector knob (1) left or right repeatedly when the minute indication blinks. To change the minute indication quickly, turn and hold the indicator selector knob (1). To set the minute indication, push the indicator selector knob (1).

## Adjusting the date

Adjust the date by selecting “Clock setting” in the “Setting mode”. Then select “Adjust date”.

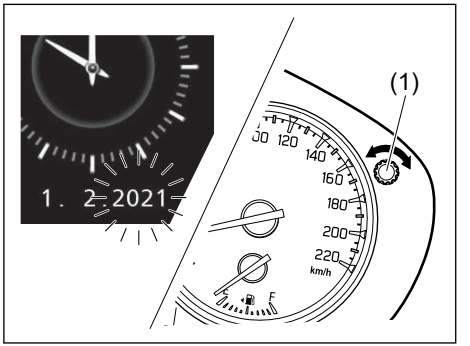


71UM012004

1) To change the year indication, turn the indicator selector knob (1) left or right repeatedly when the day indication blinks. To change the day indication quickly, turn and hold the indicator selector knob (1). To set the day indication, push the indicator selector knob (1) and the day indication blinks.
2) To change the month indication, turn the indicator selector knob (1) left or right repeatedly when the month indication blinks. To change the month indication quickly, turn and hold the indicator selector knob (1). To set the month indication, push the indicator selector knob (1) and the day indication blinks.
3) To change the day indication, turn the indicator selector knob (1) left or right repeatedly when the day indication blinks. To change the day indication quickly, turn and hold the indicator selector knob (1). To set the day indication, push the indicator selector knob (1).


### Air conditioning system settings by ENG A-STOP system (if equipped)

- When using the automatic heating and air conditioning system while the engine is stopped automatically by the ENG A-STOP system, you can select one of the following settings via the setting mode of the information display.
  - – Standard
  - – Economy
  - – Comfort
- When “Economy” is selected, engine auto stop condition is eased, compared with “Standard”. As engine auto stop condition will occur more frequently, the stop time will be longer, leading to reduction of fuel consumption.
- When “Comfort” is selected, engine auto stop condition becomes severe, compared with “Standard”. As engine auto stop condition will occur less frequently, the stop time will be shorter, leading to more comfortable cabin condition by air conditioner.

## Setting mode of information display (Type B)

When the ignition mode is ON and the vehicle is stationary, you can enter into the setting mode of the information display by selecting the setting mode from the menu bar by pressing “<” or “>” of the switch (3) to scroll or move the screen.

**To switch to the setting mode**

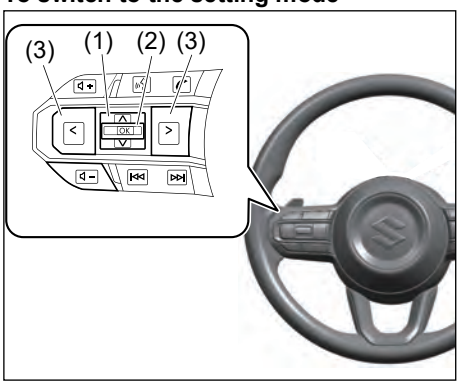



71UM04025

(1) Up/down selector switch
(2) OK switch
(3) Left/right selector switch

1) To select the setting item that you want to change, select the setting mode from the menu bar and then select the item by moving the up/down selector switch (1).
2) To exit the setting mode, press “<” or “>” of the selector switch (3).

**EXAMPLE**

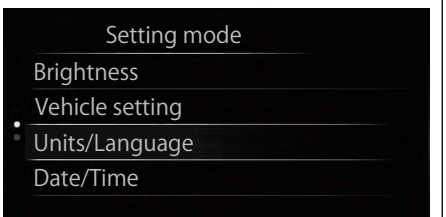


71UM012005

*NOTE:*

- *The currently selected setting item is surrounded by a frame.*
- *If you push and hold the indicator selector knob (1) to enter into the setting mode when the display (C) shows average fuel consumption, average speed, driving time, total idling stop time and total idling fuel saved (if equipped), the value will be reset simultaneously. If you do not want to reset the value, push the indicator selector knob quickly to switch the indication of the display.*
- *If you press the engine switch or start to move the vehicle when the display is in the setting mode, the setting mode will be canceled automatically.*

**To exit the setting mode**

Press “<” or “>” of the selector switch (3).

*NOTE:*
*You can exit the setting mode by either of the following operations:*
- *Press the engine switch to change the ignition mode to ACC or LOCK (OFF).*
- *Start driving your vehicle.*

## Setting items

*NOTE:*
*The items that can be changed in setting mode depends on the country or region.*

| Item | | | Customization |
|---|---|---|---|
| Brightness | | | - |
| Driving assistance (if equipped) | DSBS (Dual Sensor Brake Support) (if equipped) | Warning timing (if equipped) | Earlier / Default / Later |
| | LDP (Lane departure prevention system) (if equipped) | Warning mode (if equipped) | Vibration / Buzzer |
| | | Warning timing (if equipped) | Earlier / Default |
| | | Swaying warning (if equipped) | “ON” / “OFF” |
| | ACC (Adaptive Cruise Control) (if equipped) | Acceleration (if equipped) | Low / Mid / High |
| | | Speed short press (if equipped) | ±1 km/h / ±5 km/h / ±10 km/h |
| | | Speed long press (if equipped) | ±1 km/h / ±5 km/h / ±10 km/h |
| | | Corner speed reduction (if equipped) | OFF / Low / Mid / High |
| | BSM/RCTA (Blind Spot Monitor / Rear Cross Traffic Alert) (if equipped) | Blind spot monitor (if equipped) | “ON” / “OFF” |
| | | Rear cross traffic (if equipped) | “ON” / “OFF” |
| | Parking sensor | Park sensor mode (if equipped) | Normal mode / Trailer mode |

| Item | | | Customization |
|---|---|---|---|
| HUD settings (if equipped) | Display items | Speed | “ON” / “OFF” |
| | | Gear position | “ON” / “OFF” |
| | | Clock | “ON” / “OFF” |
| | | Intersection guide | “ON” / “OFF” |
| | | Driving assistance (if equipped) | “ON” / “OFF” |
| | | Air conditioning | “ON” / “OFF” |
| | | High temp warning | “ON” / “OFF” |
| | | Opening display (if equipped) | Switch at IGN ON / Set type A / Set type B |
| Vehicle settings | Door lock | Door unlock | All doors / Driver door |
| | | Auto lock | Manual lock / Speed sync / Gear shift sync (if equipped) |
| | | Auto unlock | Sync OFF / IGN-OFF sync / Gear shift sync (if equipped) |


| Item | | | Customization |
|---|---|---|---|
| Vehicle settings | Door lock | Outside buzzer (if equipped) | “ON” / “OFF” |
| | | Siren (if equipped) | “ON” / “OFF” |
| | | Door mirror (if equipped) | “ON” / “OFF” |
| | | Horn | “ON” / “OFF” |
| | Lights | Footwell lights | Light sync / Door sync / OFF |
| | | Lane change (if equipped) | “ON” / “OFF” |
| | | High beam assist (if equipped) | “ON” / “OFF” |
| | Guide me light (if equipped) | To car | OFF / 10 seconds / 15 seconds / 20 seconds / 25 seconds |
| | | To home | OFF / 10 seconds / 15 seconds / 20 seconds / 25 seconds / 30 seconds |
| | Antitheft (if equipped) | Shock sensor | “ON” / “OFF” |
| | | Shock sensor pre | OFF / Lv1 / Lv2 / Lv3 / Lv4 / Lv5 / Lv6 / Lv7 / Lv8 / Lv9 / Lv10 / Lv11 / Lv12 / Lv13 / Lv14 / Lv15 |
| | | Shock sensor full | OFF / Lv1 / Lv2 / Lv3 / Lv4 / Lv5 / Lv6 / Lv7 / Lv8 / Lv9 / Lv10 / Lv11 / Lv12 / Lv13 / Lv14 / Lv15 |
| | Auto stop / start AC (if equipped) | | Standard / Economy / Comfort<br>For details, refer to “Air conditioning system settings by ENG A-STOP system (if equipped)”. |

| Item | | | Customization |
|---|---|---|---|
| Vehicle settings | TPMS (if equipped) | Tyre pressure | The display shows current tyre inflation pressure.<br>For details, refer to “Tyre Pressure Monitoring System (TPMS) (if equipped)”. |
| | | TPMS mode | Comfort mode / Eco mode / Load mode |
| Units / language (if equipped) | Units | Fuel economy unit | km/L / L/100km / MPG (UK) |
| | | Temperature unit | °C / °F |
| | Language | | English / French / Spanish / German / Italian / Russian / Turkish / Arabic / Polish / Ukrainian / Romanian |
| Date / Time (if equipped) | Adjust clock | | Refer to "Adjusting the clock (Information display Type B)" in this section. |
| | 12H/24H | | 12h / 24h |
| | Adjust date | | Refer to "Adjusting the date (Information display Type B)" in this section. |
| | Calendar format | | DD.MM.YYYY / YYYY.MM.DD / MM.DD.YYYY |

| Item | | | Customization |
|---|---|---|---|
| Customize screen | Fuel economy | Fuel economy hist | Time / Drive cycle |
| | | Fuel economy reset | After refuel / Reset with Trip A / Manual |
| | Layout change | | Standard / Classic |
| | Items to display | Fuel economy (if equipped) | “ON” / “OFF” |
| | | Fuel economy hist (if equipped) | “ON” / “OFF” |
| | | Average speed | “ON” / “OFF” |
| | | Auto stop info (if equipped) | “ON” / “OFF” |
| | | Energy flow (if equipped) | “ON” / “OFF” |
| | | Mode ratio (if equipped) | “ON” / “OFF” |
| | | CNG level (if equipped) | “ON” / “OFF” |
| | Selection screen | | Tachometer (if equipped) / Powermeter (if equipped) / Clock / Media |
| | Interrupt display | Intersection guide | “ON” / “OFF” |
| | | Auto stop warning (if equipped) | “ON” / “OFF” |
| | | Light switch | “ON” / “OFF” |
| | Ending screen | Auto stop info (if equipped) | “ON” / “OFF” |
| | Regen indicator (if equipped) | | “ON” / “OFF” |
| Sound | Startup sound | | “ON” / “OFF” |
| | Notification sound | | Volume high / Volume mid / Volume low |
| Default | | | “Yes” / “No” |


### Adjusting the clock (if equipped)

You can adjust the clock on the information display.

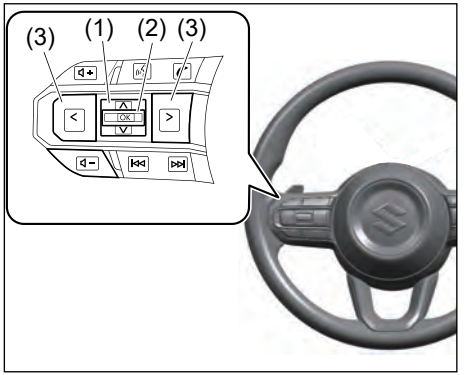


71UM04025

1) When the ignition mode is ON and the vehicle is stationary, push the left/right selector switch (3) to change the information display to the setting mode.

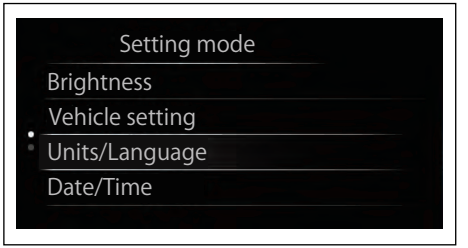


71UM012005

2) Select “Date/Time” and press the “OK” switch (2).




71UM012006

3) Select “Adjust clock” and press the “OK” switch (2).





71UM012007

4) Press selector up/down switch (1) “∧” up or down “∨” to adjust the clock.
5) To change the hour and minute indication press “<” or “>” of the switch (3). Press “OK” switch (2) after adjusting the clock.

*NOTE:*
*To exit the setting mode, press “<” or “>” of the selector switch (3).*


### Adjusting the date (if equipped)

You can adjust the date on the information display.

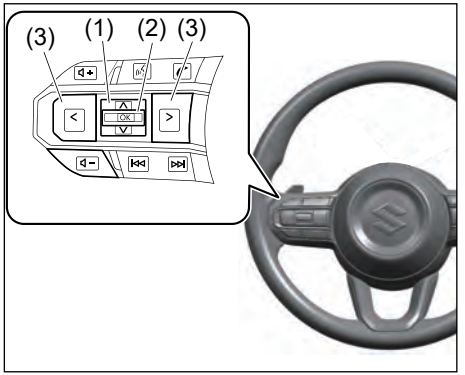



71UM04025

1) When the ignition mode is ON and the vehicle is stationary, push the left/right selector switch (3) to change the information display to the setting mode.

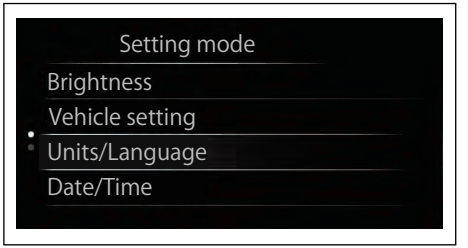


71UM012005

2) Select “Date/Time” and press the “OK” switch (2).

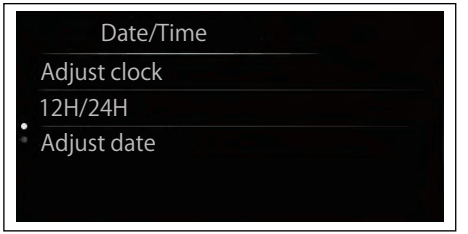


71UM012006

3) Select “Adjust date” and press the “OK” switch (2).




71UM012008

4) Press selector up/down switch (1) “∧” up or down “∨” to adjust the date.
5) To change the day, month and year indication press “<” or “>” of the switch (3). Press “OK” switch (2) after adjusting the date.

*NOTE:*
*To exit the setting mode, press “<” or “>” of the selector switch (3).*

### Air conditioning system settings by ENG A-STOP system (if equipped)

- When using the automatic heating and air conditioning system while the engine is stopped automatically by the ENG A-STOP system, you can select one of the following settings via the setting mode of the information display.

  – Standard
  – Economy
  – Comfort

- When “Economy” is selected, engine auto stop condition is eased, compared with “Standard”. As engine auto stop condition will occur more frequently, the stop time will be longer, leading to reduction of fuel consumption.
- When “Comfort” is selected, engine auto stop condition becomes severe, compared with “Standard”. As engine auto stop condition will occur less frequently, the stop time will be shorter, leading to more comfortable cabin condition by air conditioner.

- **MARUTI SUZUKI AUTHORISED DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS**
- **MARUTI SUZUKI NEXA DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS**
- **MARUTI SERVICE MASTER (MSM) : SERVICE, WARRANTY & SPARE PARTS**
- **MARUTI SERVICE ZONE (MSZ) : SERVICE, WARRANTY & SPARE PARTS**
- **MARUTI AUTHORISED SERVICE STATIONS (MASSs) : 'A' CATEGORY MASSs (**MARKED)**
  Free & paid Service, Major repairs & Accidental repairs
  **'B' CATEGORY MASSs (* MARKED)**
  Free & paid Service & Major repairs
  **'C' CATEGORY MASSs (##MARKED)**
  Free & paid Service & Minor repairs
  **'D' CATEGORY MASSs (#MARKED)**
  Free Service & Minor repairs

*NOTE:*
*Certain MASSs are not authorised to undertake Warranty jobs. Customers are requested to approach only Maruti Suzuki Authorised Dealer Workshop / Maruti Suzuki Nexa Dealer Workshop / Maruti Service Master / Maruti Service Zone for Warranty jobs.*

*The charges and services may vary depending upon service network and location.*

For latest Service Network details kindly visit **www.marutisuzuki.com** or contact our regional office / area office as mentioned below.

| REGIONAL OFFICE | AREA COVERED |
|---|---|
| REGIONAL OFFICE (NORTH-I) MARUTI SUZUKI INDIA LIMITED<br>2nd FLOOR, 157 DIVINE , RAJPUR ROAD, DEHRADUN, UTTARAKHAND -<br>248001 PH:- 0135-2738549 | UTTARAKHAND AND PART OF U.P. |
| REGIONAL OFFICE (NORTH-II) MARUTI SUZUKI INDIA LIMITED<br>SCO: 39-40, SECTOR 8C, MADHYA MARG, CHANDIGARH - 160009 PH. NO.- 0172-2780056 | PUNJAB, CHANDIGARH, PANCHKULA, ZIRAKPUR,<br>MOHALI, JAMMU AND KASHMIR & LADAKH |
| REGIONAL OFFICE (NORTH-III) MARUTI SUZUKI INDIA LIMITED<br>4TH FLOOR, SUMMIT, PLOT NO. TCG 3/3, VIBHUTI KHAND, GOMTI NAGAR – LUCKNOW - 226010 | PART OF U.P. |
| REGIONAL OFFICE (NORTH-IV) MARUTI SUZUKI INDIA LIMITED<br>S.C.O. 81, FIRST FLOOR, SECTOR 5, PANCHKULA (HARYANA)-134109 PH : (0172) 2590056, 2580056 | PART OF HARYANA AND HIMACHAL PRADESH |
| REGIONAL OFFICE (EAST-I) MARUTI SUZUKI INDIA LIMITED<br>PLOT NO IID/15, ACTION AREA IID, NEW TOWN KOLKATA-700156 | WEST BENGAL, SIKKIM, ANDAMAN & NICOBAR |
| REGIONAL OFFICE (EAST-II) MARUTI SUZUKI INDIA LIMITED<br>4TH FLOOR, ROHINI, OPP. HOTEL APSARA, 56, CIRCULAR ROAD, LALPUR RANCHI - 834001,<br>JHARKHAND PH.: - 0651-2563931/61 | BIHAR, JHARKHAND |
| REGIONAL OFFICE (EAST-III) MARUTI SUZUKI INDIA LIMITED<br>5A, 5TH FLOOR, PEACE ENCLAVE 724, ULUBARI, G.S.ROAD, GUWAHATI-781007 (ASSAM)<br>TELE: 0361-2734308/10/11/12 | ARUNACHAL PRADESH, ASSAM, MANIPUR,<br>MEGHALYA, MIZORAM, NAGALAND, TRIPURA |

## SERVICE NETWORK (AS ON 31.01.2026)

| | |
|---|---|
| REGIONAL OFFICE (WEST-I) MARUTI SUZUKI INDIA LIMITED<br>Plot No-GEN 25 + 25 B/2,TTC INDUSTRIAL AREA,PAWANE VILLAGE,THANE BELAPUR ROAD,NAVI MUMBAI- 400705 PH NO-022 45042300 | PART OF MAHARASHTRA AND GOA |
| REGIONAL OFFICE (WEST-II) MARUTI SUZUKI INDIA LIMITED<br>SACRED WORLD, 7TH FLOOR, NORTH BLOCK, UNIT NUMBER 708-715; JAGTAP CHOWK, WANAWADI, PUNE – 411 040 (MAHARASHTRA) PH. (020) 26856037 / 38 / 39 | PART OF MAHARASHTRA |
| REGIONAL OFFICE (WEST-III) MARUTI SUZUKI INDIA LIMITED<br>211-213, 2ND FLOOR, ISCON MALL, ABOVE STAR INDIA BAZAR, SATELLITE, AHMEDABAD - 380015<br>PH NO - 079 – 40036660 | GUJARAT, DADRA & NAGAR HAVELI, DAMAN AND DIU |
| REGIONAL OFFICE (SOUTH-I) MARUTI SUZUKI INDIA LIMITED<br>10th Floor, Block A, Global Infocity Park, No.40, Anna Nedunchalai, Kandanchavadi, Perungudi, Chennai, Tamil Nadu – 600096 PH. - 044 - 28233050 – 53 | TAMILNADU AND PONDICHERY |
| REGIONAL OFFICE (SOUTH-II) MARUTI SUZUKI INDIA LIMITED<br>#204, 2ND FLOOR, EMBASSY CLASSIC BUILDING,VITTAL MALLYA ROAD,BANGALORE- 560001, KARNATAKA. PH: (080) 41120018 | KARNATAKA |
| REGIONAL OFFICE (SOUTH-III) MARUTI SUZUKI INDIA LIMITED<br>2ND FLOOR, TUTUS TOWERS, 32/1787 NH47- BYE PASS, PADIVATTOM, COCHIN- 682024 | KERALA |
| REGIONAL OFFICE (SOUTH EAST-I) MARUTI SUZUKI INDIA LIMITD<br>101-102 FIRST FLOOR MAHAVIR CHAMBERS, LIBERTY SQUARE STANZA, HIMAYATH NAGAR, HYDERABAD-500029, TELANGANA CONTACT NO: 040-667299999 | ANDHRA PRADESH, TELANGANA |
| REGIONAL OFFICE (SOUTH EAST-II) MARUTI SUZUKI INDIA LIMITED<br>UTKAL SIGNATURE, UNIT NO. 605 & 606 (6TH FLOOR) NH-5, PAHAL, CUTTACK-BHUBANESWAR ROAD, BHUBANESWAR-752101, ODISHA PH. 0674-2914129, 0674-2914139 & 0674-2914229 | ODISHA AND CHHATTISGARH |
| REGIONAL OFFICE (CENTRAL-I & II) MARUTI SUZUKI INDIA LIMITED<br>Nelson Mandela Marg,Vasant Kunj II, Vasant Kunj, New Delhi, Delhi - 110070 | DELHI |
| REGIONAL OFFICE (CENTRAL-III) MARUTI SUZUKI INDIA LIMITED<br>7TH POOJA TOWER, 3 GOPALPURA BYEPASS, TONK ROAD JAIPUR (RAJASTHAN)- 302018, CONTACT NO.: 0141-2550888 | RAJASTHAN |
| REGIONAL OFFICE (CENTRAL-IV) MARUTI SUZUKI INDIA LIMITED<br>3RD FLOOR, COMMERCE HOUSE, 7 RACE COURSE ROAD INDORE (M.P) PIN CODE: 452001<br>CONTACT NO.: 07314069481/852/385. | MADHYA PRADESH |

| DETAILS OF AREA OFFICES | |
|---|---|
| **Area Office Location** | **Area Office Address** |
| Agra | Maruti Suzuki India Limited, 7th Floor, B-15/8, Shri Vrindavan Tower, Sanjay Place, Agra-282001 Ph:-0562-4052646/47 |
| Bhopal | Maruti Suzuki India Limited, 522, 5th Floor Corporate Zone, Ashima Mall, Hoshangabad Road, Bhopal (M.P) Pin Code: 462 026 Contact : 0755 6051555 |
| Calicut | Maruti Suzuki India Limited, Ground Floor, Aarpees Arcade, YMCA Cross Road, Opp. Indusind Bank, Kozhikode, Kerala -PIN 673001 Phone:- 0495-2723151 |
| Coimbatore | Maruti Suzuki India Limited, Srivari Gokul Towers, First floor, (East wing), No.108/3, Race course, Coimbatore - 641018 Ph.- 0422-2221091 |
| Hubli | Maruti Suzuki India Limited, Shiva Avenue, 2nd Floor, Gokul Road, Hubli - 580030, Ph: 0836-4259447 |
| Jammu | Maruti Suzuki India Limited, Hall no: 315, A2,3rd Floor, South Block, Bahu Plaza, Jammu-180012 M: 9622066444/9622524343 |
| Ludhiana | Maruti Suzuki India Limited, SCO No. 16/17, 4Th Floor, Fortune Chambers, Feroze Gandhi Market, Ludhiana-141001, Ph: 0161-4649764 |
| Madurai | Maruti Suzuki India Limited, 3rd floor, ADR towers, Kalavasal, Theni Bye pass road, Madurai-625016 Ph. - 0452-4200203 |
| Mangalore | Maruti Suzuki India Limited, F - 4,5,6, 1st Floor, Classic Gateway, Mahaveer Circle Pumpwell Mangalore – 575002 Ph. 0824 - 4112111 |

## SERVICE NETWORK (AS ON 31.01.2026)

| DETAILS OF AREA OFFICES | |
|---|---|
| **Area Office Location** | **Area Office Address** |
| Nagpur | Maruti Suzuki India Limited, Plot No.244, 1st Floor, Narayani House, Hill Road, Dharampeth Extension, Nagpur - 440010 (Maharashtra) Ph. (0712) 2225808 |
| Nashik | Maruti Suzuki India Limited, Plot No.202, Rushiraj Towers, Jehan Circle, Gangapur Road, Nashik - 422 005 (Maharashtra) Ph. (0253) 6698551 |
| Patna | Maruti Suzuki India Limited, 307-308, Vasundhara Metro Mall, Rajapur Pul, East Boring Canal Road, Patna - 800001, Bihar Phone - 0612-2559145 |
| Raipur | Maruti Suzuki India Limited, 629-630, Magneto Offizo,Magneto The Mall, Labhandi, Raipur, Chhattisgarh, Pin - 492001 Ph.- 0771-4039643 |
| Siliguri | Maruti Suzuki India Limited, Unit 401, 4th Floor, Quantum Siliguri, Parivahan Nagar, Matigara Siliguri - 734010 West Bengal |
| Surat | Maruti Suzuki India Limited, 304, Shivalik Western, Above TGB Restaurant, L.P. Savani Road, Adajan Surat - 395009 |
| Trivandrum | Maruti Suzuki India Limited, 8th Floor, KEK Tower, Opp. Police Head Quarters, Vazhuthacadu, Trivandrum - 695010, Phone:- 0471-2322366 |
| Udaipur | Maruti Suzuki India Limited, 302 & 303, 3rd Floor. Manglam's Fun Square, Durga Nursery Road. Udaipur, (Rajasthan) 313001 |
| Vijayawada | Maruti Suzuki India Limited, Vaishinavi Complex, 4th Floor, Unit 2,Opposite Executive Club, Vijayawada, -530002, |
| Visakhapatnam | Maruti Suzuki India Limited, Door No. 10-50-58/1, 3rd Floor, Waltair Main Road, Ramnagar, Above westside store, RK Estates, Visakhapatnam-530002, Andhra Pradesh Contact No: 0891 2745299 |

## ANDAMAN AND NICOBAR ISLANDS

DIGLIPUR

1. AGENCY HOUSE (A & N ISLANDS) PVT LTD (--0B), MADHUPUR VILLAGE,TEHSIL DIGLIPUR,NORTH ANDAMAN - 744202

PORT BLAIR

2. AGENCY HOUSE (A & N ISLANDS) PVT LTD (--01), GARACHRAMA, PORT BLAIR - 744105
3. AGENCY HOUSE (A & N ISLANDS) PVT LTD (--04), NAYAGEN, PORTBLAIR - 744101

RANGAT

4. AGENCY HOUSE (A & N ISLANDS) PVT LTD (--03), NIMBUTULLA, PO RANGAT, DIST. MIDDLE ANDMAN, - 744201
PH :211546.

## ANDHRA PRADESH

ADONI

5. MSA MOTORS (--01), BESIDE HP GAS YEMMIGANUR ROAD ADONI - 518301

AMALAPURAM

6. SB MOTOR CORPORATION (--01), #241/2B, BESIDE: BAPUJI PRIMARY SCHOOL MAIN ROAD, OPP. RR NAGAR, BANDARULANKA, AMALAPURAM, EAST GODAVARI (DIST) - 533201
PH :8374303303.

AMARAVATI

7. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), SURVEY NO. 29, TOWNSHIP-16, SECTOR-137, COLONY-539, BLOCK-2029, PLOT NO. 1, SUB-DIVISION-L40, MALKAPURAM LIMITS, MANDAL - THULLURU, AMARAVATI-CITY, DIST. -GUNTUR, ANDHRA PRADESH. - 522237

ANAKAPALLE

8. JAYABHERI AUTOMOTIVES PRIVATE LTD (--01), SURVEY NO.822/1 & 2, NH-5 ROAD, ANAKAPALLE, DISTT. VISHAKHAPATNAM. - 531001
PH :7093575555.

ANANTAPUR

9. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), SURVEY NO 146-3,SRI NAGAR COLONY, ANANTAPUR, ANDHRA PRADESH
10. NIVYA AUTOMOBILES PRIVATE LIMITED (--01), NH 44 RAJEEV COLONYNEAR SILPARAMAM - 515001

ANNAVARAM

11. VARUN MOTORS PVT LTD (--01), DO-NO : 5/116, SURVEY NO – 59.,CHALAMAYYA NAGAR, RAILWAY STATION ROAD, NEAR SMP BAJAJ SHOWROOM,
ANNAVARAM, EAST GODAVARI DISTRICT, ANDHRA PRADESH. - 533406
PH :9885288339.

ARAKU

12. VARUN MOTORS PVT LTD (--01), SURVEY NO 33-9/A, RAVULAGADDA VILLAGE,BESIDE GOVT DEGGRE
COLLEGE,ARAKU,VISHAKAPATNAM,ANDHRAPRADESH - 531151
PH :9885317344.

ATMAKUR

13. BHARGAVI AUTOMOBILES PVT LTD (--01), D.NO. 524, NELLORE PALEM, ATMAKUR, BESIDE HERO SHOWROOM, KURNOOL - 524322

BHIANSA

14. ADARSHA AUTOMOTIVES PVT LTD (--01), SURVEY NO 448A/1, BASAR ROAD, BHAINSA,NIRMAL DISTRICT,TELANGANA - 504103
PH :8886092222.

BHIMAVARAM

15. NOVELTY REDDY AND REDDY MOTORS PVT LTD (--01), NEAR BYEPASS ROAD,UNDI ROAD,BHIMAVARAM - 534202
PH :7799771177.

BOBBILI

16. VARUN MOTORS PVT LTD (--01), D. NO. 4-64, SURVEY NO. 219/8, VILLAGE – MALLAMMAPETA, BESIDE GROWTH CENTRE, BOBBILI, DISTRICT – VIZIANAGARAM, ANDHRA PRADESH. - 535558

CHANDRAGUNDA

17. VARUN MOTORS PVT LTD (--01), CHANDRUGONDA GRAM PANCHAYAT RECORD SURVEY NO. 81/4, OPP.SAI KRISHNA PETROL BUNK - 507166

CHEPURAPALLI

18. JAYABHERI AUTOMOTIVES PRIVATE LTD (--01), 4-284, CHEEPURPALLI, VIZIANAGARAM, ANDHRA PRADESH

CHILKALURIPET

19. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), M/S JAYALAKSHMI AUTO, SURVEY NO 457/C3, CHILKALURIPET, NADENLA MANDAL, GUNTUR, ANDHRA PRADESH - 522616
PH :9989144344.

CHINTALAPUDI

20. REDDY & REDDY MOTORS (--01), RS NO.698/2 MARUTI NAGAR COURT CENTRE, ELURU-CHINTALAPUDI HIGHWAY, CHINTALAPUDI MANDAL, ANDHRA PRADESH - 534460

CHIRALA

21. JAYALAKSHMI AUTOMOTIVES PVT LTD (--04), 9-1-92, CHURCH ROAD,CHIRALA, - 523157
PH :7331151661.

CHITTOOR

22. BHARGAVI AUTOMOBILES PVT LTD (--03), 22-241/A,KATTAMANCHI TIRUPATI ROAD,CHITTOOR, - 517001
PH :8463955558.

CHODAVARAM

23. VARUN MOTORS PVT LTD (--01), SURVEY.NO: 108-2-A, 108-3-A & 108-4, GOVCHODAVARAM, DIST. VISAKHAPATNAM, - 531036
PH :9885317344.

CUDDAPAH

24. MSA MOTORS (--03), K.T. BYE PASS ROAD,CUDDPPAH,ANDHRA PRADESH, - 516001
PH :7396685628.

DARSI

25. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), SURVEY NO 1025/1, DARSI, PRAKASHAM DISTRICT, ANDHRA PRADESH - 523247

DHARMAVARAM

26. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), BESIDE SIVALAYAM TEMPLE, B.C. COLONY, POTHUKUNTA, DHARMAVARAM - 515671

DRAKSHARAMMAM

27. VARUN MOTORS PVT LTD (--01), D.NO.19-2-9/1 ,PITTAVARI STREET , DRAKSHARAMAM, RAMACHANDRAPURAM MANDAL, EAST GODAVARI DISTRICT , ANDHRA PRADESH- - 533255

ELURU

28. REDDY & REDDY MOTORS (--01), OLD NH-5 ROAD,BESIDES C R REDDY WOMEN'S COLLEFE OLD NH-5,ELURU, - 534001
PH :9705311566.

GAJAPATINAGARAM

29. JAYABHERI AUTOMOTIVES PRIVATE LTD (--01), SURVEY NO 50-14, D.NO 3-1/C, BONDAPALLI MANADALAM, GAJAPATHINAGARAM, ANDHRA PRADESH. - 535270
PH :9100818111.

GAMBHEERAM

30. JAYABHERI AUTOMOTIVES PRIVATE LTD (--02), PLOT NO. 40-45 & 48, GREEN INDUSTRIAL PARK, GAMBHERAM, ANANDPURAM, VISHAKAPATNAM. - 530052
PH :9642496789.

GAMPALAGUDEM

31. VARUN MOTORS PVT LTD (--01), R.S.NO. 11/2A, AT PEDAKOMIRA PANCHAYAT, THIRUVURU SUB DIVISION, GAMPALAGUDEM MANDAL, N.T.R DISTRICT - 521403

GIDDALURU

32. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), S NO 716, BESIDE PADMAVATI GARDENS, GIDDALUR - 523357

GUDIVADA

33. VARUN MOTORS PVT LTD (2603--02), D NO. 1-621,AUTONAGER 1ST LANE,GUDIVADA - 521301
PH :9885651383.

GUDUR

34. BHARGAVI AUTOMOBILES PVT LTD (--01), SURVEY NO.1619/3A,GUDUR BYPASS, GUDUR RURAL, GUDUR DISTT. NELLORE, A.P. - 524101
PH :9652984999.

GUNTUR

35. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), D-N-8-24-31,MANGALAGIRI ROAD,GUNTUR - 522001
36. JAYALAKSHMI AUTOMOTIVES PVT LTD (--05), AT 1-14-114, OPP. HINDU COLLEGE, BANDLAMUDI GARDENS, AMARAVATI ROAD, GUNTUR-522003, AP - 522203
37. JAYALAKSHMI AUTOMOTIVES PVT LTD (--06), SURVEY NO 509, D.NO 25-11-50 TOWN, WARD NO 22, OPPOSITE ITC BUILDING, R AGRAHARAM, NAGARAPALAM ROAD,GUNTUR, - 522004
PH :8374847777.
38. VARUN MOTORS PVT LTD (--01), DOOR NO. 25-16-176, IN D.NO. 169/C1 & 2, ANKIREDDYPALEM, GUNTUR CHIALAKALURIPET R - 522007

HANUMAN JUNCTION

39. SANTOSH AUTOMOTORS PVT LTD (--01), SY NO. 569/1 BESIDES NH5, VELURU VILLAGE, BAPULAPADU MANDAL, HANUMAN JUNCTION KRISHNA DISTRICT PIN 521105 - 521115
PH :9703633755.

HINDUPUR

40. JAYALAKSHMI AUTOMOTIVES PVT LTD (3602-36-01), PLOT NO.83,BYPASS ROAD,BESIDE AR HOSPITARTC COLONY,CHAITANYANAGAR, HINDUPUR - 515201

ICHAPURAM

41. JAYABHERI AUTOMOTIVES PRIVATE LTD (--01), SURVEY NO. 105/3 , 105/4 AND 229/7, ICHAPURAM, BALAKRISHNAPURAM PANCHAYAT,MUNIBHADRA VILLAGE,ANDHRA PRADESH. - 532312

JAGGAIAHPETA

42. VARUN MOTORS PVT LTD (2603--05), DOOR NO. 2-20, MUTHYALAMMA GUDI STREET JAGGAIAHPET TOWN, JAGGAIAHPET, KRISHNA DISTT. - 521175

JAGGAMPET

43. SB MOTOR CORPORATION (--01), M/S D.NO 10-37, JAGGAMPETA, EAST GODAVARI DISTRICT, ANDHRA PRADESH - 533435
PH :8886677759.

JAMMALAMADUGU

44. ADARSHA AUTOMOTIVES PVT LTD (--01), 21/570/A,TADIPATRI ROAD, JAMMALAMADUGU,KADAPA - 516434

JANGAREDDYGUDEM

45. REDDY & REDDY MOTORS (--02), NEAR R&B GUEST HOUSE,ELURU ROAD,JANGAREDDYGUDEM, - 534447
PH :9912563666.

K. KOTAPUDU

46. VARUN MOTORS PVT LTD (--01), NEAR SAMPATH MOTORS, S.H: 142,K.KOTAPADU (VILLAGE & MANDAL),VISAKHAPATNAM – DIST. PIN-
531034 A.P - 531034

KAIKALURU

47. SANTOSH AUTOMOTORS PVT LTD (--01), SY. NO. 127/7 &9, OPP. NAIDU COMPLEX, AATAPAKA, KAIKALURU MANDAL, DIST. KRISHNA - 521333

KAKINADA

48. SB MOTOR CORPORATION (--01), D. NO. 52-10-36/3,NEAR AMAR GHATI CENTER,KARAPA ROAD, KAKINADA - 533001
PH :9885119888.

KALYANADURGAM

49. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), SURVEY NO.328-B,DODAGATTA ROAD, NEAR NAGULA DHINNE,KALYANADURGAM - 515761

KANCHIKACHERLA

50. VARUN MOTORS PVT LTD (--01), SURVEY NO. 510/5, DOOR NO. 13-144, 146, 13TH WARD, KANCHIKACHERLA VILLAGE AND MANDAL, KRISHNA DIST., ANDHRA PRADESH. - 521180

KANDUKURU

51. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), SURVEY NO. 414, MAHADEVAPURAM VILLAGE, O. V. ROAD, KANDUKURU MANDAL, DISTRICT – PRAKASHAM, ANDHRA PRADESH. - 523105

KANIGIRI

52. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), SURVEY NO 793, PLOT NO 11,12 , KANIGIRI, PRAKASHAM DISTRICT, ANDHRA PRADESH - 523230

KAVALI

53. BHARGAVI AUTOMOBILES PVT LTD (--05), OPP. VENKATESWAR SWAMI TEMPLE, AUTO NAGAR MAIN ROAD
KAVALI, DISTT. NELLORE - 524201
PH :9248702567.

KHAMMAM

54. VARUN MOTORS PVT LTD (2603--09), D.NO-15-19-48/3, PLOT NO.119, KHANAPURAM INDUSTRIAL AREA - 521108

KORUKONDA

55. VARUN MOTORS PVT LTD (--01), D. NO:1-220, NEAR INDIAN OIL PETROL BUNK, JUMBUPATNAM KORUKONDA, EAST GODAVARI- 533289. - 533289

KURNOOL

56. MSA MOTORS (--01), AUTO NAGAR,INDUSTRIAL ESTATE, NH-7, KURNOOL - 518004
PH :9912826682.
57. ADARSHA AUTOMOTIVES PVT LTD (--01), SURVEY
NO 105, DINNEDEVARAPADU VILLAGE, KURNOOL, ANDHRA PRADESG - 518001
PH :9160182222.

KURUPUM

58. VARUN MOTORS PVT LTD (--01), SY.NO: 76/2B1, RAVADA ROAD, KURUPAM - 535524

MACHERLA

59. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), D.NO. 343/7, 343/5-3, 15-2-3, MACHERLA, MACHERLA MUNICIPALITY. - 522426

MADANAPALLI

60. BHARGAVI AUTOMOBILES PVT LTD (--01), SURVEY NO.762, BASIKONDA VILLAGE, MADANPALLI, CHITTOOR DISTT. ANDHRA PRADESH - 524101
PH :9959893434.

MADHURAWADA

61. JAYABHERI AUTOMOTIVES PRIVATE LTD (--01), SY, NO. 180/2B, PARADESIPALEM,MADHURWADA, ANDHRA PRADESH - 530048
PH :8886669985.

MALKIPIURAM

62. VARUN MOTORS PVT LTD (--01), SURVEY NO 49/6A, MALKIPURAM VILLAGE AND MANDAL, EAST GODAVARI DISTRICT, ANDHRA PRADESH - 533250
PH :9885317344.

MANDAPETA

63. SB MOTOR CORPORATION (--01), BLOCK NO. 4, D. NO. 4-1-64, MANDAPETA, DISTRICT – EAST GOADAVARI, ANDHRA PRADESH . - 533308
PH :8886664090.

MARKHAPURAM

64. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), D. NO 4/515, RAILWAY STATION ROAD, MARKAPURAM, DIST: PRAKASAM, ANDHRA PRADESH-523316 - 523316

MOVVA

65. VARUN MOTORS PVT LTD (--01), D NO:4-64,KODALI ROAD,MOVVA POST AND MANDAL ,KRISHNA DISTRICT,ANDHRA PRADESH-521135 - 521135

MYLAVARAM

66. VARUN MOTORS PVT LTD (--01), D NO. 2-176/2, MAIN ROAD, MYLAVARAM, KRISHNA DISTRICT, PIN-521230, ANDHRA PRADESH - 521230

NAGARI

67. VISHNU CARS PVT LTD (--01), SURVEY NO 213/5, 1A& 1B, BALAJI GOLDEN CITY, NAGARI, DIST- CHITOOR, ANDHRA PRADESH - 517590

NAIDUPET

68. SB MOTOR CORPORATION (--01), M/S SURVEY NO 11-2, JUVALAPALEM VILLAGE, NAIDUPETA, ANDHRA PRADESH
STATE: - 524126
PH :9248747777.

NAKKAPALLI

69. VARUN MOTORS PVT LTD (--01), SURVEY NO 202/3, 203/4,PEDGUMMULURU GRAM PANCHAYAT, RAYAVARAM MANDAL,NAKKAPALLI,VISHAKAPATNAM, ANDHRA PRADESH - 531081
PH :9885317344.

NANDIGAMA

70. VARUN MOTORS PVT LTD (--01), RE SURVEY NO. 601/1B, NH-9 ROAD, NANDIGAMA, DIST. -KRISHNA, ANDHRA PRADESH. - 521185

NANDYAL

71. MSA MOTORS (--01), SURVEY NO. 333, VUDUMALPURAM, MANDAL – NANDYAL, OPP. AUTO NAGAR, NANDYAL, DISTRICT – KURNOOL. - 518501
PH :9490666616.

NARASARAOPET

72. JAYALAKSHMI AUTOMOTIVES PVT LTD (--03), P.NO 267/A1, CHILAKALURIPETA ROAD ,NARSAROAPET, GUNTUR , ANDHRA PRADESH NEAR RELIANCE PETROL PUMP BUNK,VINUKONDA ROAD, NARASAROAPET, GUNTUR, - 522603

NARSAPURAM

73. NOVELTY REDDY AND REDDY MOTORS PVT LTD (--01), SY NO. 98/7, NARSAPURAM– CHINCHINDA BYPASS ROAD,NARSAPURAM, PALAKOLLU MANDAL, WEST GODAVARI DISTRIC
T,ANDHRA PRADESH - 534206
PH :9703900011.

NARSIPATNAM

74. JAYABHERI AUTOMOTIVES PRIVATE LTD (--01), OPP. RDO BUNGLAW, BANK COLONY, VISAKHAPATNAM ROAD, NARSIPATNAM - 531116
PH :7702333513.

NELLORE

75. BHARGAVI AUTOMOBILES PVT LTD (--01), D.NO.25/II/97 INDUSTRIAL ESTATE, A.K. NAGAR, P.B.NO.18, NELLORE(A.P.) - 524004
PH :9248742225.
76. BHARGAVI AUTOMOBILES PVT LTD (--04), A2, INDUSTRIAL ESTATE,A.K. NAGAR,NELLORE, - 524004
PH :9248727888.
77. VISHNU CARS PVT LTD (--01), FIELD NO. 628 /SURVEY NO. 877, 878/A/4 AND 883/A/1A, NELLORE BIT-II, BESIDES GSR GARDENS, BALAJI NAGAR, NH-16, NELLORE CITY. - 542002
PH :7337340778.
78. BHARGAVI AUTOMOBILES PVT LTD (--07), PLOT NO 11, WOOD COMPLEX, VEDAYAPALEM, NELLORE - 524004

NIDDAVOHOLU

79. NOVELTY REDDY AND REDDY MOTORS PVT LTD (--01), D.NO 479/5, SAMISRAGUDEM , NIDADAVOLU, WEST GODAVARI, ANDHRA PRADESH - 534301

NUZVID

80. VARUN MOTORS PVT LTD (2603--03), BESIDE R T C BUS DEPOT.,OLD D M OFFICE,VIJAYAWADA ROAD, NIZVID - 521201

ONGOLE

81. JAYALAKSHMI AUTOMOTIVES PVT LTD (--02), THROVAGUNTA COMPANY CENTRE,NH-5,GUNTUR ROAD,ONGOLE,PRAKASAM DISTRICT. - 523003
PH :9701055955.

PADERU

82. JAYABHERI AUTOMOTIVES PRIVATE LTD (--01), DOOR NO.5-73, BESIDE MODHAKONDAMMA TEMPLE, NEAR OLD BUS STAND, G. MADUGULA ROAD - 524341

PALAKONDA

83. VARUN MOTORS PVT LTD (--01), SURVEY NO. 8, ANAVARAM GRAMAM, PALAKONDA, SRIKAKULAM DISTRICT, ANDHRA PRADESH. - 532440

PALASA

84. JAYABHERI AUTOMOTIVES PRIVATE LTD (--01), SURVEY NO. 63 OF VILLAGE – PURUSHOTTAPURAM, PALASA MANDAL, KASIBUGGA MUNICIPALITY, DISTRICT – SRIKAKULAM, ANDHRA PRADESH. - 532221

PALMANERU

85. VISHNU CARS PVT LTD (--01), SURVEY NO. 184/3, PALAMANERU VILLAGE, GANGAVARAM MANDALAM, DIST. CHITTOR, PIN-517408, ANDHRA PRADESH - 517408

PARVATHIPURAM

86. JAYABHERI AUTOMOTIVES PRIVATE LTD (--01), SY.NO. 195-1A, NEAR TBR THEATRE, NARSIPURAM, PARVATHIPURAM MANDAL, DISTRICT – VIZIANAGARAM, ANDHRAPRADESH,PINCODE – 535522 - 535522 PH :9100818111.

PATHAPATNAM

87. VARUN MOTORS PVT LTD (--01), D.NO 4-245,SURVEY NO 264/1A, PATHAPATNAM, SRIKAKULAM, ANDHRA PRADESH - 532213 PH :9885317344.

PEDDAPURAM

88. VARUN MOTORS PVT LTD (--01), S NO: 19-1-412/2, SUDHA COLONY, REVENUE WARD NO-15, PEDDAPURAM- 533 437. KAKINADA DIST. A.P - 533437

PENDURTHI

89. VARUN MOTORS PVT LTD (--01), SURVEY NO.107/1B, VELAMPETA, ANAKAPALLI TO PENDURTHI HIGHWAY, NEAR BRIDGE, PENDURTHI DISTT: VISAKAPATNAM - 530047 PH :9885438455.

90. VARUN MOTORS PVT LTD (--02), SURVEY NO 240/1,2 & 241, PENDURTHI, VIZAG - 531173 PH :9703843737.

PIDUGURALLA

91. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), SURVEY NO. 897/16, PIDUGURALLA, DISTRICT – GUNTUR, ANDHRA PRADESH. - 522413

PITHAPURAM

92. SB MOTOR CORPORATION (--01), NO. 11-2-114, 11TH WARD, KAKINADA-KATHIPUDI ROAD, PITHAPURAM, EAST GODAVRI DIST., ANDHRA PRADESH. - 533450

PONNUR

93. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), PLOT NO. 4, D.NO. 213-1, VAISHNAVI NAGAR, PONNUR, GUNTUR, ANDHRA PRADESH. - 522124

PRODUTTHUR

94. ADARSHA AUTOMOTIVES PVT LTD (--02), 11/301,BESIDE-DMART MYDUKUR ROAD - 516360

PUSAPTIRAGA

95. VARUN MOTORS PVT LTD (4603--11), SY.NO: 16/21, CHODAMMA AGRAHARAM - 535002

RAJAHMUNDRY

96. SB MOTOR CORPORATION (--01), OPP.FCI GOWDOWN,JAILROAD,LALACHERUVLI,RAJAMUNDRY - 533101

97. SB MOTOR CORPORATION (--03), D. NO. 3-243, NH-5, ROAD, HUKUMPETA, RAJAHMUNDRY. - 533107

98. VARUN MOTORS PVT LTD (--01), SURVEY NO. 660, PALACHERLA VILLAGE OF RANJANAGRAM MANDAL, RAJAHMUNDRY, EAST GODAVARI DSIT. - 533102 PH :9642225289.

RAJAM

99. VARUN MOTORS PVT LTD (--01), SURVEY NO 44, SARATHI VILLAGE, RAJAM, SRIKAKULAM, ANDHRA PRADESH. PLOT NO. 44, SARATHI NAGAR, RAJAMNAGAR PANCHAYAT, RAJAM, DISTRICT - SRIKAKULAM, ANDHRA PRADESH - 532127 PH :7799666998.

RAMPACHODAVARAM

100. VARUN MOTORS PVT LTD (--01), SURVEY NO 14/1,IRLAPALLY VILLAGE, RAMPACHODAVARAM,ANDHRA PRADESH - 533288 PH :9885288339.

RAYACHOTY

101. ADARSHA AUTOMOTIVES PVT LTD (--01), #38/105-8-8, CHITOOR ROAD, REVENUE WARD NO 88, RAYACHOTY - 516269

REPALLE

102. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), D.NO 430, BESIDE ESAR PETROL BUNK, REPALLE, DISTRICT: GUNTUR, ANDHRA PRADESH - 522265 PH :8374847777.

S KOTA

103. JAYABHERI AUTOMOTIVES PRIVATE LTD (--01), SURVEY NO 113/3,MALLIPUDI MADHURA VENKATARAMANAPETA, SRUNGAVARAPUKOTA, VIZIANAGARAM, ANDHRA PRADESH - 535145 PH :9100818111.

SALUR

104. VARUN MOTORS PVT LTD (--01), D. NO:139, NH-43, KOTTAKKI (VIL), RAMABADRA PURAM, SALUR-535579, MANYAM - 535579

SHAHABAD

105. GEM MOTORS (INDIA) PVT LTD (--01), SURVEY NO 467/1 ,SHABAD ,RANGA REDDY - 509217

SOMPETA

106. VARUN MOTORS PVT LTD (--01), KHATA NO 406,407,408 DENOTED IN SURVEY NO 241/1,MOGILIKOTURU VILLAGE, SOMPETA, SRIKAKULAM, ANDHRA PRADESH - 532284

SRIKAKULAM

107. VARUN MOTORS PVT LTD (4603--09), PEDDA PADDU ROAD,ARASAVILLI (P.O.),SRIKAKULAM, - 532001 PH :9985477155.

108. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606--04), SURVEY NO 22/7P,22/8 AND SURVEY NO 29/12,16,17, BALAGA RURAL,SRIKAKULAM CITY, DISTRICT: SRIKAKULAM - 532001 PH :9100818111.

SULURUPETA

109. BHARGAVI AUTOMOBILES PVT LTD (--01), S.K.S KALYANA MANDAPAM, OPPOSITE KOTAPOLLUR RD, SULLURUPETA 524121 - 524121

TADA

110. VISHNU CARS PVT LTD (--01), SURVEY NO 58/3,TADA, NELLORE DISTRICT - 524401 PH :9840434242.

TANUKU

111. NOVELTY REDDY AND REDDY MOTORS PVT LTD (--01), NH-5 ROAD, NEAR WOMEN'S COLLEGE, BESIDE IOC PETROL PUMP, TANUKU, DISTT: WEST GODAVARI(ANDHRA PRADESH) - 534211 PH :9912341624.

TATIPAKA

112. VARUN MOTORS PVT LTD (--01), D-2-96/2 ,NAGARAM VILLAGE.TATIPAKA, EAST GODAVARI DT ,ANDHRAPRADESH -

TEKKALI

113. VARUN MOTORS PVT LTD (--01), SURVEY NO 497-4, RAGHUNADHAPURAM, TEKKALI MAIN RD, TEKKALI, ANDHRA PRADESH - 532201

TENALI

114. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), D.NO 131/1, SULTANABAD, GUNTUR MAIN ROAD, TENALI KAVI RAJA NAGAR, GUNTUR ROAD, TENALI, GUNTUR DISTT. - 522002

THAGARAPUVALASA

115. VARUN MOTORS PVT LTD (--01), SURVEY NO.11/2B,11/3,NAGARAMPALEM VILLAGE, NH-16, NAGARAMPALEM GRAMA PANCHAYAT LIMITS, THAGARAPUVALASA, BHEEMUNIPATNAM MANDAL, VISHAKAPATNAM, - 531162

TIRUPATI

116. BHARGAVI AUTOMOBILES PVT LTD (--02), 11/66/1,TIRUPATI RENIGUNTA ROAD,TIRUPATI, - 517507 PH :7997969946.

117. BHARGAVI AUTOMOBILES PVT LTD (--06), DOOR NO: 22-9-57/5G, REVENUE WARD NO-22, THIMMINAIDU PALEM, RENIGUNTA ROAD, TIRUPATI - 517501 - 517501 PH :7997969919.

118. VISHNU CARS PVT LTD (--01), SURVEY NO. 192/3A2A, 200' CHENNAI – TIRUPATI HIGHWAY, KOTRAMANGALAM,RENIGUNTA MANDAL, TIRUPATI - 517520 PH :9154971551.

TIRUVURU

119. SANTOSH AUTOMOTORS PVT LTD (--01), D NO. 23-1/5, OPP. AYYAPA SWAMY TEMPLE, MAIN ROAD, TIRUVURU. - 521235

TUNI

120. SB MOTOR CORPORATION (--01), D. NO. 65-31-15/1, OPP. FCI GODOWNS, NARAYANAPURAM, TUNI, EAST GODAVARI, ANDHRA PRADESH - 533401 PH :7661893888.

VENKATAGIRIKOTA

121. BHARGAVI AUTOMOBILES PVT LTD (--01), M/S BHARGAVI AUTOMOBILES, BESIDE INDIAL OIL BUNK,GMR FUNTION HALL,DARASALLA,PALLIKUPPAM,KUPPAM ROAD,V KOTA - 517242

VENKATAPGIRI

122. BHARGAVI AUTOMOBILES PVT LTD (--01), SURVEY NO 166,169/1,169/2,RTC COLONY,VENKATAGIRI, NELLORE, ANDHRA PRADESH - 524132 PH :9248747777.

VIJAYAWADA

123. VARUN MOTORS PVT LTD (2603-26-01), 48-17-4/1,RING ROAD,VIJAYAWADA - 520008 PH :9885576602.

124. VARUN MOTORS PVT LTD (2603-26-06), SURVEY NO.561/1, 562/5 & 561/3, 562/6 KESARAPALLY,VIJAYAWADA, KRISHNA DISTRICT, A.P. - 521102 PH :8297241177.

125. SANTOSH AUTOMOTORS PVT LTD (2607--01), SURVEY NO. 223/5, D. NO. 11-61/2, KANURU PANCHAYAT, PENAMALURU MANDAL, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH. - 520010

126. VARUN MOTORS PVT LTD (2603--07), DOOR NO. 1-4-208 AND 1-4-208(1), IN R.S. NO. 33/3A, BHAVANIPURAM, VIJAYAWADA, MUNICIPAL CORPORATION, VIJAYAWADA, ANDHRA PRADESH. - 520012 PH :9642225291.

127. SANTOSH AUTOMOTORS PVT LTD (--02), D NO. 77-42-16A, OPP, NUNNA FIRE STATION, PRAKASH NAGAR, INNER RING ROAD, VIJAYAWADA - 520015 PH :7799787932.

128. VARUN MOTORS PVT LTD (2603-26-08), SURVEY NO 207/7, 207/8B2, 207/15B, D-NO 8-103, NEAR SHIVALAYAM TEMPLE, ENIKEPADU, VIJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH - 521108
PH :9885576602.

VIJAYWADA

129. JAYABHERI AUTOMOTIVES PVT LTD (--05), D.NO.40/17-192/1H, LABBIPET, VIJAYAWADA - 520002

VINUKONDA

130. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), SURVEY NO 239/3A,237/3, VINUKONDA, PALNADU DISTRICT, ANDHRA PRADESH - 522647
PH :8374847777.

VISHAKHAPATNAM

131. VARUN MOTORS PVT LTD (4603-46-0E), PLOT NO 88,BESIDES POLICE STATION,SRINAGAR,GAJUWAKA - 530026
PH :9703843737.
132. VARUN MOTORS PVT LTD (4603-46-08), DOOR NO. 58/2,BLOCK NO. 5,BALAJI NAGAR, OPP. ANDHRA UNIVERSITY, SIRIPURAM - 580003
133. VARUN MOTORS PVT LTD (4603-46-0F), D-25, INDUSTRIAL ESTATE, MARRIPALLEM, BESIDES COLA MANCHU KONDA GARDENS, VISAKHAPATNAM., - 530007
PH :9885511911.
134. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606-46-01), PLOT NO. A-9, INDUSTRIAL ESTATE, VISHAKAPATANAM, ANDHRA PRADESH - 530018
PH :8886332209.
135. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606-02), D.NO:51-17-2 , NH-5, KRANTHINAGAR, VISAKHAPATNAM,(ANDHRA PRADESH). - 530013
136. VARUN MOTORS PVT LTD (4607-46-01), S. NO. 8, KAPPARADA VILLAGE, BESIDE IOCL PETROL BUNK, MANCHUKONDA GARDENS, MURALI NAGAR, NATIONAL HIGHWAY, VISHAKAPATNAM. - 530007
PH :7799124243.
137. JAYABHERI AUTOMOTIVES PRIVATE LTD (4606-03), SURVEY NO. 119/6, KURMANNAPALEM, GAJUWAKA MANDAL, VIZAG, ANDHRA PRADESH. - 530046
PH :8897541234.
138. VARUN MOTORS PVT LTD (4603--0K), SURVEY NO. 394 & 395, PLOT NO. 7 AT VILLAGE – DUPPITURU, MANDAL – ACHUTAPURAM, DISTRICT – VISHAKAPATNAM, ANDHRA PRADESH. - 531011
PH :9966877133.
139. VARUN MOTORS PVT LTD (4603-46-0L), SURVEY NO. 408/1 OF MADHURAWADA VILLAGE, RUSHIKONDA ITI SEZ, VISHAKAPATNAM RURAL MANDAL, VISHAKAPATNAM DISTRICT, ANDHRA PRADESH. - 530045
PH :9885315344.
140. VARUN MOTORS PVT LTD (4603-46-1B), SURVEY NO. 2/A, SECTOR XI, MVP COLONY, VISHAKAPATNAM. - 530017
141. VARUN MOTORS PVT LTD (4603-46-10), SURVEY NO 228/224, WARD NO 19, AGNAMPUDI,VIZAG - 533053
PH :9885317344.
142. VARUN MOTORS PVT LTD (4603-46-13), D.NO: 3-83, NH-16 ROAD, BESIDE ARCHIAN GRANITES, YENDADA - 530045

VISSANNAPETA

143. VARUN MOTORS PVT LTD (--01), RS NO. 434/10, WARD NO. 10, VISSANNAPETA, KRISHNA DISTRICT, ANDHRA PRADESH - 521215
PH :9885576602.

VIZIANAGARAM

144. VARUN MOTORS PVT LTD (4603--0C), OPPOSITE SUN SCHOOL, 100 FEET RING ROAD, VIZIANAGARAM, VIZIANAGARAM - 535001
PH :8886721213.
145. JAYABHERI AUTOMOTIVES PRIVATE LTD (--01), SY NO: 108/12B & 109/2A, PLOT NO B2, B3 & B4, VT AGRAHARAM, ,VIZIANAGARAM, 535004 - 535001
PH :7702333514.

YANAM

146. SB MOTOR CORPORATION (--01), SURVEY NO 82-2,TALLAREVU MANDAL,YANAM, EAST GODAVARI DISTRICT - 533463
PH :8886677759.

YELAMANCHILI

147. JAYABHERI AUTOMOTIVES PRIVATE LTD (--01), SURVEY NO. 19-1, 2, 3, 45/1, 45/2&3, KOKIRAPALLI, YELAMANCHILI, NARSIPATNAM, VIZAG DIST., ANDHRA PRADESH. - 531055

YELESWARAM

148. VARUN MOTORS PVT LTD (--01), VARUN MOTORS P.LTD,DO-NO – 2-4-41,BESIDE GOLLAJI GARU BUNK,YERRAVARAM ROAD,YELESWARAM – 533429 - 533429
PH :9885511911.

## ARUNACHAL PRADESH

BHALUKPONG

149. D Y MOTORS (--01), NEAR SBI UPPER MARKET, BHALUKPONG, WEST KAMENG , ARUNACHAL PRADESH - 790114
PH :8415075164.

ITANAGAR

150. D Y MOTORS (-75-01), LPC NO - DC/ICC/LPC, BORUM VILLAGE, PO/PS- NAHARLAGUN, PAPUM PARE DIST, ARUNACHAL PRADESH - 791100
PH :8415075164.

NAMSAI

151. D Y MOTORS (--01), 2 MILES, NH 52, NH15, NAMSAI, ARUNACHAL PRADESH 792103 - 792103

PASSIGHAT

152. D Y MOTORS (--01), OPPOSITE TO DANGARIA MANDIR RANAGHAT PASIGHAT - 791102

ROING

153. D Y MOTORS (--01), P.O/P.S-RAYAND, ROING ROAD,ROING, 792110, ARUNACHAL PRADESH - 792110

RUKSIN

154. D Y MOTORS (--01), RUKSIN IN EAST SIANG DISTRICT, ARUNACHAL PRADESH - 787060
PH :8415075164.

## ASSAM

BADARPUR

155. JAIN UDYOG (--01), NH-37,SILCHAR KARIMGANJ ROAD,PO UMARPUR,PART-1,BADARPUR, - 788803

BAGHA BAZAR

156. JAIN UDYOG (--01), OPPOSITE TOBAM IDDGAH, VILL BONGRAM,BAGHA BAZAR - 788120

BAHARI

157. PODDAR CAR WORLD PVT LTD (--01), DAG NO 738, 739, UNDER MOUZA CHENGA, BARPETA DISTRICT - 781302

BAIHATA CHARIALI

158. PALLAVI MOTORS PVT LTD (--01), DAG NO. 1042, PATTA NO. 17, MOUZA – BORBANKHAR, P.S. – BAIHATA CHARIALI, DISTRICT – KAMRUP, ASSAM - 781381
PH :9864052488.

BANGALIPARA

159. MITTAL AUTOZONE (--01), BANGALIPARA,, BANGALI PARA, - 781364

BARAMA

160. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (--01), VILLAGE - BARJAR, PO & PS - BARAMA, ASSAM -781346 - 781346
PH :8638487401.

BARPETA

161. BHARATI MOTORS PVT LTD (--02), SIMULGURI,NH-31,DISTRICT-BARPETA, ASSAM - 781313
PH :7002819523.
162. PODDAR CAR WORLD PVT LTD (--01), WARD NO. 1, BILHORTARIHATI,, NEAR EMPLOYEE EXCHANGE OFFICE,, BARPETA TOWN, PIN-781301, ASSAM, - 781301

BIJOYNAGAR

163. PODDAR CAR WORLD PVT LTD (--01), AT/PO - BIJOYNAGAR, INDIAN OIL PETROL PUMP, KAMRUP DIST.,BIJOYNAGAR - 781125
PH :9864209733.

BISWANATH CHAIRALI

164. RAMLAL DURGADUTT MOTORS PVT LTD (--01), DAG NO- 7,8,9 PERIODIC PATTA NO - 24, REVENUE VILLAGE, BRAHMAPUTRA CHAPORI, MOUZA - BAGHMORA - 784176
PH :8724087940.

BOKAKHAT

165. RAMLAL DURGADUTT MOTORS PVT LTD (--01), NORA GAON ROAD, BENGENAKHOWA, ASSAM 785601 - 785601

BONGAIGAON

166. BHARATI MOTORS PVT LTD (--01), CHAPAGURI ROAD, BONGAIGAON - 783830

CHAMATA

167. PALLAVI MOTORS PVT LTD (--01), DAG NO.1137, PATTA NO.376, MOUZA – DAHRAMAPUR, CHAMATA DISTT. NALBARI, ASSAM - 781306

CHAYGAON

168. PALLAVI MOTORS PVT LTD (--01), CHAYGAON OUGURI CHOWK, NEAR BHARAT PETROL PUMP - 443301

DAYANGMUKH

169. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (--01), KHERONI,DAYANMUKH,DIST WEST KARBI ANGLONG - 782448

DHEKIAJULI

170. RAMLAL DURGADUTT MOTORS PVT LTD (--01), DAG NO.242, K.P. PATTA NO.88, VILLAGE-BHAKUAMARI, MOUZA-BORCHOLA, BESIDES-NH15, DHEKIAJULI, DISTT. SONITPUR, ASSAM. - 784110
PH :9706568722.

DHEMAJI

171. SAIKIA AUTO PVT LTD (--02), NALANIPAM KONCH GAON,NH-52,DHEMAJI (ASSAM) - 787057
PH :8638725209.

DHING

172. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (--01), DHING TOWN, MOIZABARI ROAD - 782123

DIBRUGARH

173. JAYBEE AUTO AGENCIES PVT LTD (--01), CHIRING CHAPARI, T.R. PHUKAN ROAD, P.O. DIBRUGARH (ASSAM) - 786001
PH :9954799273.

174. BIMAL AUTO AGENCY (--01), DAG NO. 104, GHARBANDICHUK JARUA GAON, MOUZA - MANKHATTA KANIKAR, DIST.-DIBRUGARH, ASSAM. - 786004

DIGBOI

175. VISHAL CAR WORLD PVT LTD (--01), BORBIL NO. 1, NEAR LIONS CLUB, NH-38, P.O. – DIGBOI, DISTRICT – TINSUKIA , ASSAM. - 786171

DIMAKUCHI

176. PALLAVI MOTORS PVT LTD (--01), DIMAKUCHI TOWN, DIMAKUCHI UDALGURI ROAD, NEAR SBI DIMAKUCHI BRANCH,DIST- UDALGURI - 781352

DIPHU

177. RAMLAL DURGADUTT MOTORS PVT LTD (--01), MANJA ROAD, DILLAJI, DIPHU, KARBI ANGLONG, ASSAM - - 782460
PH :9707556868.

DOBOKA

178. RAMLAL DURGADUTT MOTORS PVT LTD (--01), WARD NO 4 DABOKA TOWN - 782440

DULIAJAN

179. JAYBEE AUTO AGENCIES PVT LTD (--01), JAYBEE AUTO AGENCIES, TIPLING TINIALI, DULIAJAN DIST. DIBRUGARH - 786602
PH :7002722358.

GOALPARA

180. BHARATI MOTORS PVT LTD (--01), PO: KALYANPUR, VILLAGE: SOLMARI, P/S: AGIA, NH: 37, DISTRICT: GOALPARA, ASSAM - 781301
PH :9101940372.

GOLAGHAT

181. RAMLAL DURGADUTT MOTORS PVT LTD (--01), DAG NO. - 718, 684 & 706, PATTA NO 213, 168 & 192, KURUKA GAON, P.O - MORANGI, P.S -GOLAGHAT, DIST: GOLAGHAT, ASSAM PIN-785702 - 785702
PH :7002099547.

GORAIMARI

182. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (--01), DAG NO- 3, KP PATTA NO - 11, VILLAGE-CHALABASTI, MOUZA- GORAIMARI - 783390
PH :7002279100.

GUWAHATI

183. BIMAL AUTO AGENCY (--01), JHALUKBARI, GUWAHATI. - 781014

184. PALLAVI MOTORS PVT LTD (--01), DAG NO. 1&2,NEXT TO DEPTT. OF FAMILY WELFARE,SIX MILE. KHANAPARA G.S. ROAD, GUWAHATI - 781022

185. PODDAR CAR WORLD PVT LTD (--01), HENGRABARI ,VIP ROAD,GUWAHATI - 781036

186. BIMAL AUTO AGENCY (--01), CHANDMARI, BAMUNI MAIDAN, OPP SBI NEW GUWAHATI BRANCH, GUWAHATI - 781021

187. BIMAL AUTO AGENCY (--02), BEHARBARI,BEHIND DHOOM RESTAURANT, NH-37,GUWAHATI - 781028

188. PODDAR CAR WORLD PVT LTD (--01), NH-37, NEAR, GORCHUK CHAIRALI, GUWAHATI (ASSAM). - 781029

189. BIMAL AUTO AGENCY (--03), BESIDE NRL PETROL PUMP, RGB ROAD, ZOO ROAD, GUWAHATI, ASSAM - 781005

190. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (--01), NH-37, BELTOLA, NEAR HANUMAN KANTA, GUWAHATI - 781028

191. PALLAVI MOTORS PVT LTD (--02), DAG NO. 2201, PATTA NO. 237, VILLAGE – JYOTIKUCHI, MOUZA – BELTOLA, AK AZAD ROAD, GUWAHATI, DISTRICT – KAMRUP, ASSAM. - 781034

HOJAI

192. RAMLAL DURGADUTT MOTORS PVT LTD (--01), KHATIYAN NO.: 312/3F, HOJAI MAIN ROAD, NEAR UCO BANK, SHANKARDEVNAGAR, HOJAI, DISTRICT – NAGAON , ASSAM - 782435
PH :7002680534.

HOWLY

193. PODDAR CAR WORLD PVT LTD (--01), PATTA NO. 601, DAG NO. 1567, HOWLI TOWN, MOUZA GHILAJARI, DISTT BARBETA, ASSAM - 781316
PH :8085957586.

HOWRAGHAT

194. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (--01), HOWRAGHAT TOWN, KARBI ANGLONG, ASSAM - 782481 - 782481
PH :9864191169.

JAGIROAD

195. RAMLAL DURGADUTT MOTORS PVT LTD (--02), JAGIROAD,MORIGAON,NALAOW,ASSAM - 782410
PH :9365884355.

JORHAT

196. RAMLAL DURGADUTT MOTORS PVT LTD (--01), DAG NO. 7 & 8 OF P.P NO. 33, DAG O. 9 OF P.P NO. 61, DAG NO. 382 OF P.P NO. 206, VILLAGE - PAKIMURI HABIGAON, MOUZA - SARAIBAHAL, JORHAT. - 785006

197. JAINCO AUTOTECH PVT LTD (--01), AT ROAD, SEUNI ALI, JORHAT, ASSAM 785001 - 785001
PH :9287957451.

KALGACHIA

198. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (--01), VILL - KALGACHIA, PO - KALGACHIA , DIST BARPETA - 781319
PH :8638487401.

KALIABOR

199. RAMLAL DURGADUTT MOTORS PVT LTD (--01), MADHAB GAON,, PO-KUWARITOL,PS.KALIABOR, - 782137

KAMPUR

200. RAMLAL DURGADUTT MOTORS PVT LTD (--01), VILL KAMPUR,PANCHINI JAR, PO KAMPUR , DIST NAGAON, PIN 782426 - 782426

KARIMGANJ

201. JAIN UDYOG (6901--04), STEAMER GHAT ROAD, KARIMGANJ, ASSAM - 788710
PH :9435179025.

KAYAKUCHI

202. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (--01), B.B ROAD, KAYAKUCHI, BARPETA, ASSAM - 781352

KHARUPATIA

203. BIMAL AUTO AGENCY (--01), VILL –BOLOGARAH, P.O – KHARUPETIA, P.S DHULA, DIST – DARRANG, ASSAM. - 784115

KHATKHATI

204. PODDAR CAR WORLD PVT LTD (--01), NEAR TELEPHONE EXCHANGE, NH-39, KHATKHATI, DISTRICT – KARBI ANGLONG . - 782460
PH :6000900381.

KOKRAJHAR

205. BHARATI MOTORS PVT LTD (--01), TITAGURI,AT-KOKRAJHAR, DIST-KOKRAJHAR - 783370

LANKA

206. RAMLAL DURGADUTT MOTORS PVT LTD (--01), DAG NO 95 OF PP NO 59, DAG NO 96 OF PP NO 26 & DAG NO 418 OF PP NO 73 KISAM LAKHIMPUR , MOUZA - LANKA, DIST - HOJAI , ASSAM. - 782442
PH :9707556868.

MAJULI

207. RAMLAL DURGADUTT MOTORS PVT LTD (--01), PETROL PUMP, NEAR GARMUR, GARMUR, MAJULI, JORHAT, ASSAM 785104 - 785104

MANGALDOI

208. PODDAR CAR WORLD PVT LTD (--01), PUNIA, NH-52, MANGALDOI, DISTT. DARRANG - 784115
PH :9706970132.

MARGHERITA

209. VISHAL CAR WORLD PVT LTD (--01), MARGERITA TOWN, BEHIND IOCL PETROL PUMP, NH-38, MARGHERITA, ASSAM - 786181
PH :9435860000.

MORIGAON

210. RAMLAL DURGADUTT MOTORS PVT LTD (--01), DAG NO. 423 OF PP NO. 221, KISSAM BACHNAGHAT, MORIGAON, ASSAM. - 782105
PH :7002239592.

NAGARBERA

211. PALLAVI MOTORS PVT LTD (--01), NAGARBERA,, DOKUCHI,KAMRUP, - 781127

NAGOAN

212. RAMLAL DURGADUTT MOTORS PVT LTD (--01), KHUTIKHATIA, HAIBARGON, NAGAON - 782002
PH :9706007918.

213. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (--01), DAG NO. 255, 1508(N)/254(O), 1509(N)/257(O) AND 291, PATTA NO. 506(N)/15(O), 507(N)/15(O), 507(N)/97(O) AND 98, VILLAGE - DEODHAR, MOUZA - PAKHIMORIA, DIST.-NAGAON. - 782002

214. RAMLAL DURGADUTT MOTORS PVT LTD (--03), PAKHIMURIA, NEAR BHUGDOI DHABA, NAGAON, ASSAM

215. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (--02), BAJRANG CAR WORLD
DIMORUGURI
OPPOSITE KAPILI NURSING HOME
DISTRICT NAGAON
STATE ASSAM - 782003

NAHARKATIYA

216. JAYBEE AUTO AGENCIES PVT LTD (--03), NAHARKATIYA TOWN PART NO. 4, MOUZA – JAYPORE, NEAR ST. MARY'S SCHOOL, DISTRICT – DIBRUGARH, ASSAM . - 786610
PH :7002722358.

NALBARI

217. BIMAL AUTO AGENCY (9201--01), CHOWKBAZAR, NALBARI HAJO ROAD, NALBARI DIST. NALBARI - 781335
PH :7576842484.

NARAYANPUR

218. SAIKIA AUTO PVT LTD (--01), WARD NO-2, P.O-DIKRONG BADULAHATI,NH-52, NARAYANPUR - 784164

NAZIRA

219. RAMLAL DURGADUTT MOTORS PVT LTD (--01), MAIN ROAD NAZIRA,, NEAR NRL PETROL PUMP,PO/PS NAZIRA, - 785685

NORTH LAKHIMPUR

220. SAIKIA AUTO PVT LTD (--01), HATILUNG, NH-52 ROAD, NORTH LAKHIMPUR, ASSAM - 787031
PH :8473946336.

221. SAIKIA AUTO PVT LTD (--03), KHELMATI, WARD NO. 14, NH -52, NORTH LAKHIMPUR, ASSAM - 787001
PH :7002571073.

PATHSALA

222. PODDAR CAR WORLD PVT LTD (--01), DAG NO. 451, PATTA NO. 151 KMP, PATHSALA, DIST. -BARPETA, ASSAM. - 781325
PH :6000900256.

RAHA

223. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT. LTD.) (--01), RAHA TOWN, NH-37,, NEAR TOLL GATE, - 782103

RAJGARH

224. JAYBEE AUTO AGENCIES PVT LTD (--01), DAG NO.182, PP NO.140 OF 2 NO. BHAGATIA GAON, LAT NO.11, RAJGARH, MOUZA-TINKHONG, DISTT. DIBRUGARH, ASSAM - 786611
PH :9954799273.

RANGIA

225. PODDAR CAR WORLD PVT LTD (--01), RANGIA TOWN, WARD NO. 5, SHANTIPUR, BHUTAN ROAD, NEAR POLYCLINIC HOSPITAL, RANGIA DISTT. KAMRUP (ASSAM) - 781354
PH :8724877892.

SADIYA

226. VISHAL CAR WORLD PVT LTD (--01), 5 NO. SHANTIPUR, SADIYA, DIST. SADIYA, - 786155

SALBARI

227. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (--01), K.C COMPLEX, SALBARI, P.O. ANANDA BAZAR, DIST. BAKSA - 781318

SARUPATHAR

228. JAINCO AUTOTECH PVT LTD (--01), WARD NO 1, PADUMONI, SARUPATHER, GOLAGHAT - 785601

SIBSAGAR

229. RAMLAL DURGADUTT MOTORS PVT LTD (--02), RANGHAR CHARIALI, DHAPROTA, AT ROAD, OPPOSITE RANGHAR, SHIVASAGAR - 785640

230. RAMLAL DURGADUTT MOTORS PVT LTD (--01), NO.1,CHAULKARA GAON,UNDER KONWAR,DIST: SIVASGAR - 785640

SILCHAR

231. JAIN UDYOG (6901--02), KAUSHAL COMPLEX, SONAI ROAD, SILCHAR, ASSAM - 788006
PH :9706002524.

SIMLA

232. PODDAR CAR WORLD PVT LTD (--01), VILL: HAZUA NEW COLONY, PO- KOKLABARI, PS-SIMLA, DISTRICT- BAKSA, ASSAM - 781330

SONAPUR

233. PODDAR CAR WORLD PVT LTD (--03), NEAR LUMSUM,N.C,SONARPUR,ASSAM,782401 - 782401

SONARI

234. JAINCO AUTOTECH PVT LTD (--01), BORAHI CHARALI, WARD NO 12, SONARI, CHARAIDEO - 785690

SOOTEA

235. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT LTD) (--01), BIGHA NO 2, KATHA 10, KHERAJ MIYADI, REVENUE CIRCLE NO DUAR, SOOTEA - 784175

SORBHOG

236. MITTAL AUTOZONE (A UNIT OF SBM AUTOMOBILES PVT LTD) (--01), VILLAGE DAHALAPARA, KISMAT DWARIKA, PS SORBHOG, SUB DIVISION- BARPETA- ASSAM. - 781317
PH :8011042222.

TANGLA

237. BIMAL AUTO AGENCY (--01), DAG NO.:121, PATTA NO.101/320, VILLAGE BULLARPARA, MOUZA TANGLA. - 784521
PH :9954387619.

TENGAGHAT

238. BIMAL AUTO AGENCY (--01), NEAR INDIAN OIL PETROL PUMP,, SH-23, TEHGAGHAT - 786103

TEZPUR

239. RAMLAL DURGADUTT MOTORS PVT LTD (--01), NEAR DON BASCO SCHOOL, P.O. NIKAMULSATRA, TEZPUR, ASSAM - 784154

240. RAMLAL DURGADUTT MOTORS PVT LTD (--02), GORAIMARI, VILLAGE - SOLGAON, TEZPUR, ASSAM. - 784001
PH :9836036157.

TINSUKIA

241. VISHAL CAR WORLD PVT LTD (--01), LAIPULY, A.T. ROAD, TINSUKIA, DIST - TINSUKIA, ASSAM - 786183
PH :9435860000.

TITABAR

242. JAINCO AUTOTECH PVT LTD (--01), PUBALI NAGAR, TITABOR - 785630

## BIHAR

ARARIA

243. SEEMANCHAL MOTORS PVT LTD (--01), NEAR BUS STAND, JAGDISH RICE MILL COMPOUND, HOSPITAL ROAD, FORBESGANJ, DISTT. ARRARIA, BIHAR - 854318
PH :8797096013.

ARRAH

244. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (--01), (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT. LTD.), DHANUPRA, NEAR GANPAT CHOUDHARY DWAR, NH-30, ARRAH (BIHAR) - 802301
PH :8294634604.

AURANGABAD

245. KARLO AUTOMOBILES PVT LTD (--01), KARLO AUTOMOBILES PVT LTD, GT ROAD, NEAR, RAIPURA MORE, BABHANDI, AURANGABAD - 824101
PH :7019085212.

BANKA

246. SEEMANCHAL MOTORS PVT LTD (--01), KHATA NO. 134, KHESRA NO. 118, BEHIND MARUTI SHOWROOM, STATION ROAD, BANKA, BIHAR. - 813101
PH :8797096020.

BEGUSARAI

247. GS MOTORS PVT LTD (--01), HARHAR MAHADEV CHOWK, NH 31, BEGUSARAI, BIHAR - 851101
PH :9204756206.

BETTIAH

248. SHREE GOPAL AUTO PVT LTD (--01), BEETIAH - MOTIHARI HIGHWAY , NH-28 B, NEAR MACHALI LOK, BEETIAH (BIHAR). - 845438
PH :9771486183.

BHAGALPUR

249. SEEMANCHAL MOTORS PVT LTD (--01), BAUSI ROAD, ALIGANJ, NEAR SAINT TRESA SCHOOL, ALIGANJ, BHAGALPUR. - 812005
PH :8797096020.

BHITA

250. REESHAV AUTOMOBILES PVT LTD (--01), PLOT NO 1674 & 1676, KHATA NO - 19 & 67 AT MOUZA - MAHADEOPUR PHULARI, P.O - BIHTA, P.S-BIHTA, DISTRICT - PATNA - 801103
PH :7763954585.

BIHARSHARIF

251. REESHAV AUTOMOBILES PVT LTD (--03), PATNA RANCHI ROAD, NR GAGAN DIWAN SOGARA SCHOOL, THANA-LAHERI MURARPUR, BIHARSHARIF, DISTRICT-NALANDA, BIHAR - 803101
PH :9263632175.

BUXAR

252. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (--01), C/O DEVDHTRHA UPPDHYYA, SYNDICATE, BYE PASS ROAD, BUXAR - 802101

CHAKIA

253. RAMKRISHNA MOTORS PVT LTD (--01), OJHA TOLA, NEW BYPASS, CHAKIA-845412, PURVI CHAMPARAN DISTT., BIHAR - 845412
PH :9801773716.

CHAPRA

254. REESHAV AUTOMOBILES PVT LTD (--02), 146, PLOT NO. 381, VILLAGE RAUJA, CHAPRA PATNA ROAD, NEAR BHIKHARI CHOWK, CHAPRA, BIHAR - 841301
PH :7061295296.

DANAPUR

255. ALANKAR AUTO SALES & SERVICE PVT LTD (1504--02), ADJASCENT ARYA SAMAJ MANDIR, NEAR SAGUNA MORE, DANAPUR, - 800018
PH :9386898458.

256. ALANKAR AUTO SALES & SERVICE PVT LTD (--05), TOUZI NO. 5057, THANA NO. 35, MOUZA - BABAKKARPUR, DANAPUR, PATNA. - 801503
PH :9334415434.

DARBHANGA

257. RAJKRISHNA MOTORS LLP (--01), KHATA NO.61936, RAUSHAN CHOWK, BAJITPUR, B.M.P. -13, ROAD, DARBHANGA, BIHAR - 846009
PH :7004529271.

258. RAJKRISHNA MOTORS LLP (--02), VIP ROAD, ALLALPATTI, DARBHANGA (BIHAR) - 846003
PH :9693127351.

DEHRI ON SON

259. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (--02), MOUZA - KHASRA, KHATA NO. 141, PLOT NO. 186, SAAT KATDA THANA - DEHRI-ONE-SONE, DIST. -ROHTAS, BIHAR. - 821307
PH :8294634602.

GAYA

260. KARLO AUTOMOBILES PVT LTD (--01), BODH GAYA, GAYA. - 824231

261. DMC CARS (A UNIT OF DHANRAAJ AGENCIES PVT LTD) (--01), DHANRAAJ AGENCIES PRIVATE LIMITED, MARUTI SUZUKI ARENA SHOWROOM, OPPOSITE AIRPORT RUNWAY, GAYA-DOBHI ROAD,GAYA, PIN 823004 - 823004

GOPALGANJ

262. SHREE GOPAL AUTO PVT LTD (--01), NH-28, DANAPUR, TEHSIL-MANJAGARH,GOPALGANJ (BIHAR) - 800023

HAJIPUR

263. REESHAV AUTOMOBILES PVT LTD (--01), KHATA 617 & KHASHRA 354/1605, NEAR RELIANCE PETROL PUMP, M G SETU ROAD, HAJIPUR ( VAISHALI). - 844101
PH :9060945038.

JEHANABAD

264. DMC CARS (A UNIT OF DHANRAAJ AGENCIES PVT LTD) (--01), KHATA NO - 80, PLOT NO -1490, MOUZA - MUTHER, PS- JEHANBAD, DIST - JEHANABAD. - 804408

KATIHAR

265. SEEMANCHAL MOTORS PVT LTD (--01), NEAR SBP VIDIYA VIHAR SCHOOL, SIRSA, KATIHAR PURNEA ROAD, KATIHAR - 854105
PH :7762893700.

KISHANGANJ

266. SEEMANCHAL MOTORS PVT LTD (--01), PASCHIM PALI ROAD, COLLEGE ROAD, THANA:KNE, WARD NO.1, KISHANGANJ (BIHAR). - 855101
PH :8797096019.

LAKHISARAI

267. GS MOTORS PVT LTD (--01), TAUZI NO. 39, KHATA NO. 3, KHESRA NO. 496, MOUZA - JAINAGAR, ANCHAL - LAKHISARAI, DIST. -LAKHISARAI, BIHAR. - 811311
PH :9204756206.

MADHUBANI

268. RAJKRISHNA MOTORS LLP (--01), BHOWRA TOLA, BARDIBAN, MADHUBANI, BIHAR - 847211

MAHUA

269. REESHAV AUTOMOBILES PVT LTD (--01), MUZAFFARPUR-MAHUA ROAD,RASALPUR,HP PETROL PUMP, MADHAUL,MAHUA,VAISHALI,NEAR AKSHYAWAT COLLEGE - 844122

MOHANIA

270. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (--01), MOHANIA-BUXAR ROAD ,SH-14,MOHANIA - 821109

MOTIHARI

271. RAJIV AUTOMOBILES PVT LTD (--03), NEAR CHHATAUNI CHOWK, BESIDE NH 28 A, MOTIHARI TOWN , BIHAR - 845401
PH :9234609669.

MUZAFFARPUR

272. RAJIV AUTOMOBILES PVT LTD (--01), RAMDAYALU NAGAR, PATNA HAZIPUR ROAD, MUZAFFARPUR, BIHAR - 842002
PH :9910347908.

273. RAMKRISHNA MOTORS PVT LTD (--01), KRISHNA TALKIES CAMPUS, AKHARAGHAT ROAD, MUZAFFARPUR, BIHAR. - 842001

274. RAJIV AUTOMOBILES PVT LTD (--04), KHABRA POKHAR LANE NO -1, PANCHAYAT -KHABRA, CITY- MUZAFFARPUR - 843146
PH :9234609671.

NAUGACHIA

275. SEEMANCHAL MOTORS PVT LTD (--01), NEAR GAYATRI PLY ROOM, NH-31, NAUGACHIA MARKET, NAUGACHIA, DISTRICT – BHAGALPUR, BIHAR. - 853204

NAWADA

276. REESHAV AUTOMOBILES PVT LTD (--04), 191 & 400, KHSARA NO. 3105 & 3102, NEAR DM'S OFFICE, PATNA-RANCHI MAIN ROAD, NAWADA, BIHAR - 805110
PH :6206162228.

PATNA

277. KARLO AUTOMOBILES PVT LTD (1502-15-04), NEAR BATA GUNJ, DINGA PATNA, BIHAR. - 800013

278. ALANKAR AUTO SALES & SERVICE PVT LTD (1504--03), PLOT NO.118-119, BEHIND DURGA MARINE DRIVE APARTMENTS, DUJRA DEVI STHAN, ASHOK RAJPATH, PATNA - 800001
PH :9934020200.

279. REESHAV AUTOMOBILES PVT LTD (1506-15-01), PLOT NO.25/1581 KHATA NO.494, MOUZA KUMHRAR, PARGANA AZEEMABAD, KANKARBAGH, PATNA. - 800004
PH :7632995356.

280. KARLO AUTOMOBILES PVT LTD (1502--05), JAGDEOPATH , NEAR SAI CORPORATE PARK, PATNA - 801506
PH :9264190675.

281. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-15-06), ALANKAR COMPOUND, BESIDE ALANKAR SUN CITY, SANDALPUR, KUMHRAR, PATNA – 800006 - 800006
PH :9304403916.

282. ALANKAR AUTO SALES & SERVICE PVT LTD (-15-07), BASUDEV SADAN CAMPUS,SANDALPUR,PATNA - 800006

283. SHREE GOPAL AUTO PVT LTD (1507-15-01), KHAGAUL ROAD, OPP. KOTAK MAHINDRA BANK, DANAPUR, PATNA - 801503

284. HORIZON AUTOMOBILE PRIVATE LIMITED (1508-15-01), DHAWALPURA NAGAR,MAULI ROAD,, PS-CHOWK,NEAR MURGI DANA FACTORY, - 800001

PURNEA

285. SEEMANCHAL MOTORS PVT LTD (--01), NH-31, NEAR MARKETING YARD, GULAB BAGH, PURNEA (BIHAR) - 854326
PH :8797096014.

RAXAUL

286. RAMKRISHNA MOTORS PVT LTD (--01), KAWRIHAR, TOLA - LAXAMIPUR, THANA NO -9, TAUJI NO - 951, THNANA AND ANCHAL - RAXAUL, DIST - EAST CHAMPARAN , BIHAR. - 845305

ROSERA

287. RAJKRISHNA MOTORS LLP (--01), NAND CHOWK,JAIL ROAD, , WARD NO.17,ROSERA, BIHAR - 848210

SAHARSA

288. GS MOTORS PVT LTD (--02), PATUAHA, NH 107 SAHARSA,BIHAR - 852201
PH :9263638456.

SAMASTIPUR

289. RAJKRISHNA MOTORS LLP (--01), KHESRA NO. 3190-95, KHATA NO. 76, HERPUR ALLOTH, SAMASTIPUR, BIHAR. - 848101
PH :9204552405.

SASARAM

290. PEARL CARS (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT LTD) (--01), PLOT NO.7, 9 & 11, NH-2 MORE SARAI, SASARAM (BIHAR) - 821115

SITAMARHI

291. RAJIV AUTOMOBILES PVT LTD (--01), DUMRA ROAD, SHANTI NAGAR, SITAMARHI. - 843301

SIWAN

292. SHREE GOPAL AUTO PVT LTD (--01), CHAPRA ROAD, NEAR CHAPDHALA, NH 85, SIWAN - 841236
PH :9771486132.

SUPAUL

293. GS MOTORS PVT LTD (--01), SISAUNI, ROAD, KISHANPUR WEST, BIHAR 852138 - 852138

## CHANDIGARH

CHANDIGARH

294. MODERN AUTOMOBILES (--01), 4 M.W. INDL AREA, CHANDIGARH - 160002

295. AUTOPACE NETWORK PVT LTD (--01), PLOT #112-113, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002

296. TRICITY AUTOS (--02), PLOT NO 89, PHASE-1 INDUSTRIAL AREA, CHANDIGARH - 160002
PH :9988882335.

297. NAVDESH AUTOS LLP (--01), PLOT NO. 42, INDUSTRIAL AREA PHASE-1, CHANDIGARH. - 160002

## CHHATTISGARH

AKALTARA

298. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (--01), SHOP NO 4,5,6,7 & 8, SHRI NARAYAN COMPLEX & GODOWN, NEAR INDRA UDYAN,SHEORINARAYAN ROAD,AKALTARA-495552, CHHATTISGARH - 495552
PH :7987590484.

AMBAGARH CHOWKI

299. SPARSH AUTOMOBILES PVT LTD (--01), WARD NO.1, MOHALLA MANPUR BEHIND CRGB BANK,AMBAGARH CHOWKI, CHHATTISGARH - 491661

AMBIKAPUR

300. MAHAMAYA AUTOCARS PVT LTD (--01), MANEDRAGARH ROAD, AMBIKAPUR, CHATTISGARH. - 497001
PH :7987741432.

ARANG

301. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (--01), MAIN ROAD, IN FRONT OF BLOCK OFFICE, ARANG, CHHATTISGARH - 493441

BAGBAHARA

302. HDN MOTORS PVT LTD (--01), M/S HDN MOTORS, BESIDE R.N RICE MILL, NEW MAHAVEER COMPLEX, MAHASAMUND ROAD, BAGBAHARA - 493449
PH :7909800004.

BAIKUNTHPUR

303. MAHAMAYA AUTOCARS PVT LTD (--01), WARD NO.01, KHATA NO.91/6, TEHSIL - BAIKUNTHPUR, DISTT. - KORIYA, CHATTISGARH - 497335

BALOD

304. CHOUHAN AUTOMOBILES LLP (--01), H.NO 185, WARD NO 25, NAYA MARKET, DALLIRAJHARA, BALOD -491228 - 491228
PH :9837325267.

BALODA BAZAAR

305. SKY AUTOMOBILES (5001--04), AMBEDKAR CHOWK, RAIPUR ROAD, BALODA BAZAAR, CHATTISGARH. - 493332

BALRAMPUR

306. MAHAMAYA AUTOCARS PVT LTD (--01), NEAR REST HOUSE,, RAMANUJGANJ ROAD,BHANORA, - 497119

BASNA

307. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (--01), M/S VISHWABHARTHI AUTO, PADAMPUR ROAD, BASNOUL, BASNA,CHHATTISGARH - 493554
PH :6262620060.

BEMETRA

308. CHOUHAN AUTOMOBILES LLP (--01), KHASRA NO. 88/2, CHOUHAN AUTOMOBILE LLP, KAWARDHA ROAD, NAVGHAD CHOWK, BEMTARA CHATTISGARH - 491335
PH :6262000222.

BHATAPARA

309. SPARSH AUTOMOBILES PVT LTD (--01), RAIPUR ROAD, BHATAPARA (CHATTISGARH) - 493118

BHILAI

310. CHOUHAN AUTOMOBILES LLP (8305--01), PLOT NO.1 & 34, SHIVNATH COMPLEX, BEHIND CHOUHAN ESTATE, G.E. ROAD, SUPELA, BHILAI. - 490023
311. SPARSH AUTOMOBILES PVT LTD (--01), R-17, INDUSTRAIL AREA, NANDNI ROAD, CHHAWANI CHOWK, BHILAI, CHHATTISGARH - 490026
312. CHOUHAN AUTOMOBILES LLP (8305--02), NH-6, DURG BYPASS ROAD, KHASRA NO.1/14, 1/23, 1/192, VILLAGE-KATULBOD, BHILAI, TEHSIL & DISTT. DURG, BHILAI, CHHATTISGARH - 491001
313. SPARSH AUTOMOBILES PVT LTD (8304-83-02), M/S. SPARSH AUTO,VEERSAVARKAR MARKET, G.E ROAD, SUPELA,BHILLAI-490023 - 490023
PH :9926626662.

BHUBAN

314. SKY AUTOMOBILES (--01), NH-53, BYPASS ROAD,, BHUBAN, DHENKANAL, - 759017

BILASPUR-CG

315. SATYA AUTO PRIVATE LIMITED (--01), SECTOR C, PLOT NO. 42, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHATTISGARH - 495001
316. SATYA AUTO PRIVATE LIMITED (--02), PLOT NO. 848/20, 848/26, 848/40, MOPKA BYPASS ROAD, BILASPUR, CHHATTISGARH. - 495006
PH :9977879698.
317. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (--01), KHASRA NO. 420 AND 414/1, NEAR RELIANCE PETROLEUM PUMP, BESIDES TRANSPORT NAGAR GATE, RAIPUR ROAD, PARSADA, BILASPUR. - 495223
PH :6262622560.
318. SATYA AUTO PRIVATE LIMITED (--03), WARD NO.1, BESIDES HERO SHOWROOM, MUNGELI ROAD, SAKRI, BILASPUR - 495001

CHARODA

319. SPARSH AUTOMOBILES PVT LTD (--01), NH-6, OPP. RAIL NAGAR, CHARODA, BHILAI

CHHURIYA

320. SPARSH AUTOMOBILES PVT LTD (--01), NEAR CHURIYKALA BUS STAND ROAD, CHURIYA - 491558

DALLIRAJHARA

321. CHOUHAN AUTOMOBILES LLP (--01), H.NO 185, WARD NO 25, NAYA MARKET,DALLIRAJHARA,BALOD DISTRICT-491228 - 491228
PH :6262000222.

DANTEWADA

322. SKY AUTOMOBILES (--01), PATAR RAS MAIN ROAD,DANTEWADA,PIN-494440, - 494440

DEOBHOG

323. SPARSH AUTOMOBILES PVT LTD (--01), M/S SPARSH AUTOMOBILES PVT LTD SANTOSHI NAGAR,NEAR BHARAT PETROL PUMP, DHARAMGARH ROAD, DEOBHOG – 493890 - 493890
PH :9926626662.

DHAMTARI

324. SKY AUTOMOBILES (--01), KASRA NO.238/2, SEHARA DABRI, RAIPUR ROAD, DHAMTARI-493773 CHATTISGARH - 492009
PH :8889998612.

DIPKA

325. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (--01), NEAR GOVT COLLEGE ,JHABAR ROAD,DIPKA ,KOBA ,CHHATISGARH - 495452

DONGARGARH

326. SPARSH AUTOMOBILES PVT LTD (--01), M/S SPARSH AUTOMOBILES, ADARSH NAGAR, NEARTHANA CHOWK, DONGARGARH, DT:RAJNANDGAON, CHHATTISGARH - 491445 - 491445

DURG

327. SPARSH AUTOMOBILES PVT LTD (--01), OPP. JAINAM PLACE, BEFORE PULGAON CHOWK, PULGAON NAKA, DURG, CHHATTISGARH - 491001
328. SPARSH AUTOMOBILES PVT LTD (--02), MINI MATA CHOWK, PULGAON - 491001

GARIYABANDH

329. SPARSH AUTOMOBILES PVT LTD (--01), NEAR HP PETROL PUMP, RAIPUR ROAD, GARIYABAND, CHHATTISGARH. - 756032

GHARGHODA

330. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (--01), M/S M SQAURE,VILLAGE BHENGARI, NAVAPARA-TENDA,GHARGHODA,DISTRICT – RAIGARH CHHATTISGARH. PIN CODE: 496111 - 496111
PH :7987690484.

JAGDALPUR

331. SKY AUTOMOBILES (--01), GEEDAM ROAD, JAGDALPUR, CHATTISGARH. - 494001

JANJGIR

332. SATYA AUTO PRIVATE LIMITED (--01), NEAR KHOKSHA RAILWAY CROSSING, CHAMPA ROAD, NH-200, JANJGIR - 495668

KANKER

333. SKY AUTOMOBILES (5001--06), RAZA NAGAR, SINGARBHAT, NH-30, KANKER , DISTRICT – KANKER, CHHATTISGARH - 494334

KATGHORA

334. SATYA AUTO PRIVATE LIMITED (--01), BILASPUR RD. KATGHORA, KORBA, CHATTISGARH - 495445

KAWARDHA

335. CHOUHAN AUTOMOBILES LLP (--01), KHASRA NO. 100/6, TALPUR BILASPUR ROAD, KAWARDHA, CHHATTISGARH. - 491995

KHAIRAGARH

336. SPARSH AUTOMOBILES PVT LTD (--01), KHAIRAGARH -JHALBANDHA ROAD,AMLIPARA, OPP - BIJALI OFFICE, KHAIRAGARH -491881 - 491881
PH :9926626662.

KHARSIA

337. SATYA AUTO PRIVATE LIMITED (--01), M/S SATYA AUTO , BESIDE GOVT HIGH SCHOOL, RANISAGAR, KHARSIA, DISTRICT: RAIGARH, CHHATTISGARH - 496661
PH :9993092051.

KONDAGAON

338. SKY AUTOMOBILES (--01), – M/S SKY AUTO, NH-90 RAIPUR ROAD, NEAR INDIAN OIL PETROL PUMP, KONDAGOAN, CHHATTISGARH - 494226
PH :9425204051.

KORBA

339. SATYA AUTO PRIVATE LIMITED (--01), SHED NO. 1, INDUSTRIAL AREA, KORBA - 495681

KURUD

340. HDN MOTORS PVT LTD (--01), KHASRA NO 601/9 & 601/10, DHAMTARI-RAIPUR ROAD, KURUD, CHHATTISGARH - 493663
PH :7909800004.

LORMI

341. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (--01), KHASRA NO 273/6, MAHAMAYA MARG, LORMI, DIST-MUNGELI, CHHATTISGARH - 495115

MAGARLOD

342. SKY AUTOMOBILES (--01), WARD NO:14, SWANI VIVEKANAND WARD, PANDUKA ROAD, MATHURA NAGAR, MAGARLOAD, DIST-DHAMTARI, CHATTISGARH - 493662

MAHASAMUND

343. SPARSH AUTOMOBILES PVT LTD (5002--02), BARONDA CHOWNK, BAGBAHRA ROAD, MAHASAMUND. - 493445

MANENDRAGARH

344. MAHAMAYA AUTOCARS PVT LTD (--02), WARD NO.21, NH-43, AMBIKAPUR ROAD, NEAR HP PETROL PUMP, MANENDRAGARH, DISTT. KORIYA - 497442

MUNGELI

345. SATYA AUTO PRIVATE LIMITED (--01), KHASRA NO. 270/2, BILASPUR ROAD, MUNGELI, CHHATTISGARH - 861468

PANDARIYA

346. CHOUHAN AUTOMOBILES LLP (--01), KHASRA NO. 24,7, KAWARDHA ROAD, NEAR INDIAN OIL, PANDARIYA, SINGARPUR, CHHATTISGARH - 491559

PATHALGAON

347. MAHAMAYA AUTOCARS PVT LTD (--01), KHASRA NO. 567/2, PHATALGAON, DISTRICT – JASPUR, CHHATTISGARH. - 496118

PENDRA

348. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (--01), – M SQUARE MOTORS, NEAR SEMRA CLOCK MAIN ROAD, PENDRA,GOURELA PENDRA MARWAHI-495119 - 495119
PH :7987590484.

PITHORA

349. SPARSH AUTOMOBILES PVT LTD (--01), PLOT NO. 284/1, RAMSAGAR PARA, RAIPUR ROAD, PITHORA, CHHATTISGARH. - 761008

RAIPUR

350. SKY AUTOMOBILES (5001-50-01), G.E.ROAD, MOHABA BAZAR, RAIPUR. - 492010
351. SKY AUTOMOBILES (5001-50-02), K.K. ROAD, MOUDHAPARA, RAIPUR. - 492001
PH :9584460290.
352. SPARSH AUTOMOBILES PVT LTD (5002-50-01), PACHPADI NAKA, OPP. DUTTA DRY CLEANER, DHAMKARI, JAGDALPUR ROAD, RAIPUR. - 492001
353. SKY AUTOMOBILES (5001-50-05), NEAR R.K. MALL, KOTA ROAD, RAIPUR - 492001
PH :9893000161.
354. SKY AUTOMOBILES (5003-50-01), AVANTIVIHAR ROAD, TELEBANDHA, RAIPUR (C.G) - 492006
PH :9522314155.
355. SPARSH AUTOMOBILES PVT LTD (--04), OPP. UNION BANK, MAIN ROAD, PANDRI, RAIPUR - 492004
356. SPARSH AUTOMOBILES PVT LTD (5002-50-05), PLOT - 31, INDUSTRIAL ESTATE, OPP MAHESH COLD STORAGE, BHANPURI, RAIPUR - 494224

357. SKY AUTOMOBILES (5001--07), ADJOINING WALLFORT CITY, BHATGAON, RING ROAD NO. 2, RAIPUR, CHHATTISGARH. - 492013
358. HDN MOTORS PVT LTD (5005-50-01), BESIDES BHARAT BENZ SHOWROOM, DURG-BHILAI ROAD, TATIBANDH, RAIPUR, CHHATTISGARH. - 492001
359. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (5004-50-01), VIDHAN SABHA ROAD, MOWA, RAIPUR DISTT. CHHATTISGARH - 492005

RAJGARH

360. SATYA AUTO PRIVATE LIMITED (--01), JINDAL ROAD, RAIGARH - 496001

RAJIM

361. SPARSH AUTOMOBILES PVT LTD (5002--03), RAIPUR ROAD, NEAR AMMANI PETROL PUMP, NAYAPARA, RAJIM. - 493881

RAJNANDGAON

362. SPARSH AUTOMOBILES PVT LTD (--01), NEAR HANUMAN TEMPLE, VILL-MANKI , NH-6, RAJNANDGAON, CHHATTISGARH - 491441

SAKTI

363. SATYA AUTO PRIVATE LIMITED (--01), NH-49, NANDAUR KHURD, MALDI, DIST. SAKTI, PIN-495689, CHHATTISGARH - 495689

SARAIPALLI

364. SKY AUTOMOBILES (--01), KHASRA NO.482/5 AND 482/6, RAIPUR ROAD, SARAIPALI, DIST-MASAMUND, SARAIPALI - 493558

SARANGARH

365. SATYA AUTO PRIVATE LIMITED (--01), KASRA NO. 71/4, 73/2, 74/2, 75/1 AND 76/2, SARANGARH BIKAS KHAND, SARANGARH, DISTT. RAIGARH. - 733751

SHIVIRNARAYAN

366. SATYA AUTO PRIVATE LIMITED (--01), M/S SATYA AUTO,DEORI, SHIVRINARAYA, JANJGIR – CHAMPA, CHATTISGARH - PIN 495556 - 495556 PH :9993092051.

SIMGA

367. HDN MOTORS PVT LTD (--01), PLOT NO 2, WARD NUMBER 05, SHANKAR NAGAR, SIMGA, BALODA BAZAR, CHHATTISGARH - 493101 PH :9826686000.

SURAJPUR

368. MAHAMAYA AUTOCARS PVT LTD (--01), NEARNMAHINDRA SHOWROOM ,CHANDAPUR ,CHATTISGARH - 497229

TILDA

369. SKY AUTOMOBILES (--01), KASRA NO. 29/31, TILDA, DIST.-RAIPUR, CHHATTISGARH. - 493114 PH :9425204051.

## DADRA AND NAGAR HAVELI

SILVASSA

370. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), NEAR ATHAL CHAR RASTA,DADAR & NAGAR HAVELI, SILVASSA - 396230 PH :9723816223.

## DAMAN AND DIU

DAMAN

371. KATARIA AUTOMOBILES PRIVATE LIMITED (--11), NEAR AKASWANI CENTER, RINGANWADA, NANI DAMAN , DAMAN UNION TERRITORY - 396210

## DELHI

DELHI

372. SAYA AUTOMOBILES LTD (--03), A 21-22, G.T.KARNAL ROAD, NEW DELHI - 110033
373. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (--01), A-100 MAYAPURI,PHASE-II,NEW DELHI - 110064
374. COMPETENT AUTOMOBILES CO LTD (--03), PLOT NO.3,GAZIPUR,DELHI, - 110096
375. T R SAWHNEY MOTORS PVT LTD (--01), 33 & 34, HARICHAND MELARAM COMPLEX, EAST GOKULPUR, WAZIRABAD ROAD, DELHI - 110094
376. RANA MOTORS PVT LTD (--02), C-47,OKHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI - 110020
377. T R SAWHNEY MOTORS PVT LTD (--02), B-6 INDUSTRIAL AREA, PHASE I, OPP SECTOR 18, BADLI, NEW DELHI - 110042
378. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (--01), 5, WAZIRPUR,INDUSTRIAL AREA,ADJACENT TO WAZIRPUR DEPOT,RING ROAD, NEW DELHI - 110034
379. ROHAN MOTORS LTD (--01), F-9/B-1, MOHAN COOPERATIVE INDUSTRIAL ESTATE, MATHURA ROAD, DELHI - 110044
380. MAGIC AUTO PVT LTD (--01), A-93,PHASE-2,MAYAPURI INDL AREA,DELHI - 110064
381. PREM MOTORS PVT LTD (--01), KHASRA NO. 544/1, MUNDKA, NEW DELHI - 110041
382. T R SAWHNEY MOTORS PVT LTD (--04), PLOT NO.-508, FUNCTIONAL INDUSTRIAL ESTATE, PATPARGANJ - 110092
383. MAGIC AUTO PVT LTD (--01), PLOT NO. 68/3,MOTINAGAR,NEW DELHI, - 110015
384. SAYA AUTOMOBILES LTD (--2B), KHASRA NO.2,G.T. KARNAL ROAD,OPP. GURUDUARA HARGOVIND SINGH,SIRAS PUR BADLI,DELHI - 110033
385. COMPETENT AUTOMOBILES CO LTD (--06), 14, SHIVAJI MARG, NAGAFGARH ROAD, NEW DELHI - 110015
386. RANA MOTORS PVT LTD (--04), B-6/6, OKHLA INDUSTRIAL AREA PHASE-II, NEW DELHI - 110020
387. PREM MOTORS PVT LTD (--01), KH. NO.804/2,MAHIPALPUR MATA CHOWK, DELHI - 110037
388. AAA VEHICLEADES PRIVATE LIMITED (--03), VILLAGE GHEVRA, KHASRA NO.87/3, 87/8 & 87/13/1, DELHI-ROHTAK ROAD, METRO PILLAR NO.616, MUNDKA, NEW DELHI - 110041 PH :9717092903.
389. RANA MOTORS PVT LTD (--05), A-8, RAJASTHANI UDYOG NAGAR, NEAR AZADPUR FRUIT MARKET, G.T. KARNAL ROAD, OPP. METRO PILLAR NO.119, DELHI. - 110033
390. T R SAWHNEY MOTORS PVT LTD (--01), B-19, MAYAPURI INDUSTRIAL AREA, PHASE-1, NEW DELHI. - 110064
391. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (--02), 9/55 KIRTI NAGAR, INDUSTRIAL AREA, NEW DELHI - 110015
392. MAGIC AUTO PVT LTD (--01), PLOT NO. 449 & 450, PATPARGANJ INDUSTRIAL AREA, NEW DELHI. - 110092
393. DD MOTORS (A DIVISION OF D.D. MOTORS MOBILITY) (--03), 85B RANAJI ENCLAVE, NAGLI SAKRAWATI, NAJAFGARH, NEW DELHI. - 110043
394. PREM MOTORS PVT LTD (--01), 36/22/2 AND 36/19, PANA UDHYAN, NARELA, NEW DELHI. - 110040
395. DD MOTORS( A DIVISION OF D.D. MOTORS MOBILITY (--01), 32/19, MATIALA, BEHIND DELHI PUBLIC SCHOOL, SECTOR-3, DWARKA, NEW DELHI. - 110059
396. FAIR DEAL WHEELS PVT LTD (--01), PLOT NO.25, KHATA KHATAUNI NO.97/98, KHASRA NO.48/17, OPP. BRAHMSHAKTI HOSPITAL, BUDH VIHAR, POOTH KALAN, MAIN KANJHAWALA ROAD, DELHI - 110086 PH :8448690737.
397. COMPETENT AUTOMOBILES CO LTD (--07), 23/2, MATIALA PHIRNI, POCKET C, SECTOR 3, DWARKA, DELHI. - 110059
398. AAA VEHICLEADES PRIVATE LIMITED (--01), B243, OKHLA PHASE-1, OKHLA, DELHI - 110020 PH :8448582912.
399. D.D. MOTORS (A DIVISION OF D.D. PREM PVT LTD) (--05), A-90, WAZIRPUR INDUSTRIAL AREA, NEW DELHI-110052 - 110052 PH :9310367233.
400. JAGMOHAN AUTOMOTIVES PVT LTD (--01), PLOT NO. 69/2, WAZIRPUR INDUSTRIAL AREA, NEW DELHI, PIN-110052 - 110052 PH :9650790351.
401. RANA MOTORS PVT LTD (--08), B-83, GTK ROAD INDUSTRIAL AREA, DELHI. - 110033 PH :9289496300.
402. SHREYASH AUTOMOTIVES PVT LTD (--01), PLOT NO.2, SSI INDUSTRIAL ESTATE, GT KARNAL ROAD, NEW DELHI. - 110063 PH :43288888.
403. SHREYASH AUTOMOTIVES PVT LTD (--02), A-3, WAZIRPUR INDUSTRIAL AREA, DELHI. - 110052
404. VIPUL MOTORS PVT LTD (--01), B-26, JHILMIL INDUSTRIAL AREA, DELHI -110095 - 110095 PH :9811233385.
405. COMPETENT AUTOMOBILES CO LTD (--08), 43/12, NAJAFGARH BAHDURGARH ROAD, NEW ANAJ MANDI, NEAR JAAT BHAWAN, NAJAFGARH, PIN-110043, DELHI - 110043
406. PREM MOTORS PVT LTD (--02), GROUND FLOOR, PLOT NO. C-7, SMA CO-OPERATIVE INDUSTRIAL AREA, GTK ROAD, AZADPUR, PIN-110033, DELHI - 110033
407. SINGLA LINK AGENCY PVT LTD. (--01), 395 PATPAR GANJ INDL. AREA,PATPARGANJ,NEW DELHI - 110092
408. JAGMOHAN AUTOMOTIVES PVT LTD (--02), KH. NO. 26/3/4/7/8 REVENUE ESTATE NANGLI SAKRAWATI INDUSTRIAL AREA, DELHI-110043. - 110043
409. AAA VEHICLEADES PRIVATE LIMITED (--02), KH. NO.-32-33 VILLAGE SHAHOORPUR, SATBARI, NEAR FATEHPUR BERI, IN-FRONT SKY-MANSION TOWER, CHATTARPUR, PIN-110074, DELHI - 110074
410. FAIR DEAL WHEELS PVT LTD (--01), F-13, CHAND BAGH, MAIN WAZIRABAD ROAD, BHAJANPURA DELHI - 110053
411. SINGLA LINK AGENCY PVT LTD. (--02), E-26, B1 EXTENSION, MOHAN COOPERATIVE INDUSTRIAL AREA, MATHURA ROAD, NEW DELHI – 110044 - 110091

## GOA

BICHOLIM

412. SAI SERVICE PRIVATE LIMITED (--01), CITY SURVEY NO. 46/1, MUSLIM WADDO, BICHOLIM, GOA - 403529

CANACONA

413. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), PLOT NO.40, CANCONA INDUSTRIAL ESTATE, SHREESTAL, CANCONA, SOUTH GOA - 403702

CUNCOLIM

414. SAI SERVICE PRIVATE LIMITED (3402--06), SURVEY NO.64/7, SHOP NO.3-A-II, CANCNAMODDI, CUNCOLIM, SOUTH GOA - 403703

DHARBANDORA

415. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408--07), AT- KHANDEPAR- USGAON, TAL-DHARBANDORA, SOUTH GOA - 403401

GOA

416. SAI SERVICE PRIVATE LIMITED (3402--03), OFF PANJIM HIGHWAY,PONDA,GOA, - 403401

MAPUSA

417. SAI SERVICE PRIVATE LIMITED (3402--05), D-2/9,MAPUSA INDUSTRIAL ESTATE,MAPUSA, GOA, - 403507
418. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408--03), PLOT NO. 19/20,THIVIM INDUSTRIAL ESTATE,KARASWADA, MAPUSA,GOA - 403507

MARGAO

419. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408--01), OPP.DAMODAR TEMPLE,FATORDA,MARGOA,GOA - 403602
420. SAI POINT CARS PVT LTD (3409--01), H.NO.17,WARD NO.5,SURVEY NO.34/3,34/4,MARGAON PONDA HIGHWAY,SONFATOR AMBORA,CAMURLIN,SALCETE ,GOA - 403722
421. SAI SERVICE PRIVATE LIMITED (3402--02), SURVEY NO. 212/4,VILLAGE - VERNA,TAL : SALCETE ,NEXT TO AGNEL POLYTECHNIC, MARGAO - 403718
422. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408--08), PLOT NO. M-58 AND M-59, PHASE 3B, VERNA INDUSTRIAL ESTATE, MARGAO, VERNA, SALCETE SOUTH GOA, GOA - 403722

PANAJI

423. SAI SERVICE PRIVATE LIMITED (3402--01), SURVEY NO: 36/1,PENHA DE FRANCE,TAL : BARDEZ, ALTO PCRVORIM,GOA - 403501
424. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408--02), D.B BANDODKAR MARG,CAMPAL,PANAJI,GOA - 403001
425. SAI SERVICE PRIVATE LIMITED (3402--07), SHED NO.18/329, PLOT NO.5A, SURVEY NO.117/6, TELEIGAON, ST. INEZ, PANJIM, GOA-403 002. - 403001

PERNEM

426. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), SURVEY NO. 258/1-B & 258/1-C, OPPOSITE INDUTRIAL TRAINING INSTITUTE, TALUKA - PERNEM, DIST.-NORTH GOA. - 403512
PH :8380082893.

SANVORDEM

427. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), SURVEY NO. 4, SUBDIVISION-3, VILLAGE – CACORA, TALUKA – CURCHOREM, SANVORDEM, DIST. – SOUTH GOA, GOA . - 403706
PH :9850477607.

SATTARI

428. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408--10), SURVEY NO. 60, SUB DIV NO. 05, VILLAGE ARVALEM, VILLAGE PANCHAYAT ARVALEM, TALUKA SATTARI, NORTH GOA, GOA - 403505
PH :9923464422.

TALEIGAO

429. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408--06), SURVEY NO. 122, MAHBOS, NEAR SHANKARWADI TEMPLE, SHANKARWADI, TALEIGAON, - 403001

VASCO

430. SAI SERVICE PRIVATE LIMITED (3402--04), NEXT TO SHIKALIM CHURCH,SHIKALIM,VASCO,GOA - 403802
431. CHOWGULE INDUSTRIES PRIVATE LIMITED (3408--09), OPP BHRAMASTAL TEMPLE, PATRONG BAINA, VASCO,GOA - 403802

## GUJARAT

AHMEDABAD

432. KIRAN MOTORS LIMITED (--01), SARKHEJ - GANDHINAGAR HIGHWAY,OPP. RAJPATH CLUB,AHMEDBAD - 380054
433. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), D/8 BEHIND ESI HOSPITAL,OUTSIDE DARIAPUR DARWAJA,AHMEDABAD - 380016
434. POPULAR WHEELERS (INDIA) PVT LTD (--01), PATEL TRUST BUILDING, AVTAR HALL,NAROL, NARODA HIGHWAY,ISANPURA ROAD,AHMEDABAD - 382443
435. KIRAN MOTORS LIMITED (--02), BEHIND L&T GODOWN,SARKHEJ SANAND HIGHWAY, AHMEDABAD - 382210
436. KATARIA AUTOMOBILES PRIVATE LIMITED (--05), NEAR KOKHRA BRIDGE,MANINAGAR - 380008
437. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), BEHIND ADANAL PUMP, ,NEAR MAKARBA CROSSING, MAKARBA,SG HIGHWAY - 380051
438. POPULAR WHEELERS (INDIA) PVT LTD (--01), BESIDE SOLA ROAD BRIDGE,S. G. HIGHWAY SOLA,AHMEDABAD - 380054
439. KIRAN MOTORS LIMITED (--01), SURVEY NO. 82/1/1, NEAR H.P. PETROL PUMP, MOTERA ROAD, CHANDKHEDA, AHMEDABAD - 380005
440. UDAY AUTOLINK PVT LTD (--01), NEAR GALAXY SPACIA, OPP. DASTAN FARM, S. P. RING ROAD, KATHWADA, AHMEDABAD, GUJARAT - 382430
441. NANDA AUTOMOBILES PVT LTD (--01), SURVEY NO. 229/3, OPP. GOKULESH PETROL PUMP, NAROL - ASLALI ROAD, NAROL, AHMEDABAD, GUJARAT. - 382405
442. STARLINE CARS PVT LTD (--01), PLOT NO. 103/2, NANDA CHILODA, NEAR RAILWAY CROSSING, KRISHNANAGAR ROAD, NARODA, AHMEDABAD - 382330
443. KIRAN MOTORS LIMITED (--02), FINAL PLOT NO.33/1/1, NEAR SHRUSHTI LAVISH, OPP. SHYAM VILLA-II, NARODA-NIKOL ROAD, NIKOL DISTT. AHMEDABAD - 382330
444. KIRAN MOTORS LIMITED (--04), SURVEY NO. 245/3, TP SCHEME NO. 43, NEAR KARGIL PETROL PUMP, SCIENCE CITY ROAD, AHMEDABAD - 380060
445. POPULAR WHEELERS (INDIA) PVT LTD (--01), BEHIND G. B. SHAH COLLEGE, NEAR SWAMINARAYAN PARK, VAISHALI TOWNSHIP ROAD, VASNA, AHMEDABAD, GUJARAT. - 380007
446. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (--01), PLOT NO. 116, BOPAL – AMBIL ROAD, BOPAL , AHMEDABAD, DISTRICT – AHMEDABAD, GUJARAT. - 380058
447. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (--01), PLOT NO.116 & 118/2, SARDAR PATEL RING ROAD, VASTRAL, AHMEDABAD - 382418
448. TANU MOTORS PVT LTD (--01), SURVEY NO. 1155/1-2, 1154 & 1156, PLOT NO. 39, SARKHEJ-SANAND ROAD, SANAND, AHMEDABAD (GUJARAT) - 382110
449. STARLINE CARS PVT LTD (--09), SR NO – TP - 57, PLOT NO. 67, NEAR GOTA FLYOVER BRIDGE, OPP. SHANKU FARM HOUSE, S.G. HIGHWAY, GOTA, AHMEDABAD. - 382481
450. KATARIA AUTOMOBILES PRIVATE LIMITED (--02), PLOT NO. 112, 116 & 119, SURVEY NO. 283/3.7.10, B/H SILVER STAR, BESIDE HARI VILLA BUNGLOWS, GOTA ROAD, CHANDLODIYA, AHMEDABAD. - 382481
451. KATARIA AUTOMOBILES PRIVATE LIMITED (--10), SURVEY NO. 247, TP NO. 73, OPP. PAVITRA ENCLAVE, MANSAROVER ROAD, NEAR HARI OM FARM, TRAGAD, CHANDKHEDA, AHMEDABAD. - 382470
452. NANDA AUTOMOBILES PVT LTD (--02), PLOT NO-6, BEHIND HP PETROL PUMP, OPP. UMIYA TEMPLE, CANAL ROAD, THALTEJ-SHILAJ ROAD, AHMEDABAD -380059. - 380059
453. KIRAN MOTORS LIMITED (--05), AMBER STATE, NEAR HONDA WORKSHOP, OPP. MG MOTORS, SANATHAL, AHMEDABAD - 382210

AMBAJI

454. TANU MOTORS PVT LTD (--01), OPP KUMBHARIYA JAIN DERASAR, GIDC ROAD, AMBAJI, DIST-BANASKANTHA, GUJARAT 385110 - 385110
PH :9727709227.

AMOD

455. RAVIRATNA MOTORS PVT LTD (--03), ROYAL PARK, JAMBUSAR-BHARUCH ROAD, AMOD, DISTRICT: BHARUCH, GUJARAT. - 392110

AMRELI

456. ALPHA AUTOLINK LLP (--01), R.S NO 151/152, OPP GANESH GINNING, AMRELI BYE PASS ROAD, AMRELI - 365601

ANAND

457. AMAR CARS PVT LTD (--01), JANTHA CROSSING,SOJITRA ROAD,ANAND - 388121
PH :9909960772.
458. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), SURVEY NO. 189/1+2/A+3/A/K 190/P, OPP. OLD JAKAT NAKA, NEAR RAILWAY OVERBRIDGE, ANAND-CHIKHODRA ROAD, ANAND, GUJARAT. - 388120
PH :7698954466.

ANKLAV

459. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), AMBICA COMPLEX, GROUND FLOOR SHOP NO. B, C AND D, ASODAR CHOKDI, TAL. ASODAR, CITY ANKLAV, DIST. ANAND, PIN-388510, GUJARAT - 388510
PH :7227917151.

ANKLESHWAR

460. RAVIRATNA MOTORS PVT LTD (--01), PLOT NO. 624/2/BA, GIDC, VALIA ROAD, ANKLESHWAR - 393002
PH :9687691063.

BAGODRA

461. NANDA AUTOMOBILES PVT LTD (--01), SHOP NO. 9, 10, 11, 12, KAMDHENU COMPLEX, BAGODRA HIGHWAY, NR. SBI BANK, BAGODRA. - 382240

BALASINOR

462. AMAR CARS PVT LTD (--01), SR. NO. 1451, OPP. OIC PETROL PUMP, AHMEDABAD HIGHWAY (NH-47), KANTHARJINA MUVADA, VILLAGE – VADALA, TALUKA – BALASINOR, DISTRICT – MAHISAGAR, GUJARAT. - 388255
PH :7211109960.

BARDOLI

463. DHRU MOTORS (4002--02), G.I.D.C,SURAT BARDOLI ROAD,BARDOLI, - 394601
464. KATARIA AUTOMOBILES PRIVATE LIMITED (--02), BLOCK NO.13, NANDIDA CROSS ROAD, BARASADI VILLAGE, SURAT-BARDOLI ROAD, BARDOLI, GUJARAT - 394310

BAREJA

465. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), NH 64, BAREJA, DISTRICT AHMEDABAD, GUJRAT - 382425
PH :7046079997.

BARWALA (AHMEDABAD)

466. UDAY AUTOLINK PVT LTD (--01), OPP. HILTON HOTEL, BHAVNAGAR HIGHWAY, TA BARWALA, DIST. AHMEDABAD - 382450

BAVLA

467. KATARIA AUTOMOBILES PRIVATE LIMITED (--07), NEAR ESSAR PETROL PUMP, BAVLA -AHMEDABAD HIGHWAY, BAVLA - 382220

BECHRAJI

468. STARLINE CARS PVT LTD (--01), R.S. NO. 336 PAIKI, MOJE-BECHAR (BECHARAJI), TALUKA - BECHARAJI, DIST.-MEHSANA. - 384210
PH :9909043244.

BHABHAR

469. STARLINE CARS PVT LTD (--01), SHOP NO. 7, 8 ,9, SIDDHI VINAYAK BUSINESS HUB, R.S. NO. 225, PANJRAPOLE ROAD, BHABAR, DIS. -BANASKANTHA, GUJARAT. - 385320

BHACHAU

470. K D MOTORS (--02), SUNRISE MALL,OPP. BUS STAND,BHACHAU BHUJ ROAD, BHACHAU, GUJARAT - 370140

BHANVAD

471. ATUL MOTORS JAM LLP (--01), R.S. NO.439, PLOT NO.19, BHANVAD (GUJARAT) - 360510

BHARUCH

472. RAVIRATNA MOTORS PVT LTD (--01), NH 8, OPP YOGI PETROL PUMP,P.O. ZADESHWAR,BHARUCH - 392011

BHAVNAGAR

473. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), SURVEY NO 137/2, PLOT NO 301/2&3 AND 301/4&5, VERTEJ GIDC, NARI CHOWKDI, RAJKOT ROAD, BHAVNAGAR. - 364004
PH :9426168286.

474. KATARIA AUTOMOBILES PRIVATE LIMITED (--02), PLOT NO-29, NR. TALAJA OCTROI CIRCLE, JAKATNAKA, AT-ADHEWADA, DIST-BHAVNAGAR, GUJARAT – 364002. - 364002
PH :9638884422.

BHUJ

475. K D MOTORS (--01), PLOT NO. 5/6/14,UMANAGAR,MIRZAPUR HIGHWAY ROAD , BHUJ,GUJARAT - 370001

476. K D MOTORS (--03), R.S NO. 25/2, 25/3, 26/2, PLOT NO. 57 TO 61, VILLAGE - MIRZAPUR, TALUKA - BHUJ, GUJARAT. - 370001
PH :9909953124.

BODELI

477. KIRAN MOTORS LIMITED (--01), OPP.NARMADA GUEST HOUSE,DABHOI ROAD, BODELI, TALUKA: SANKHEDA,VADODARA - 391135
PH :9714592999.

BORSAD

478. AMAR CARS PVT LTD (--01), BORSAD – TARAPUR HIGHWAY, BORSAD , DISTRICT – ANAND, GUJARAT - 388540

BOTAD

479. KATARIA AUTOMOBILES PRIVATE LIMITED (--19), PLOT NO.13, SURVEY NO 33,34, AND 35 PAIKKI VILLAGE, HADADAD, OPP. PATEL HYUNDAI SHOWROOM, PALIYAD BOTAD ROAD - 364710
PH :9558060658.

CHANASMA

480. STARLINE CARS PVT LTD (--01), 16/17, PASABHI COMPLEX, NEAR ROYAL PALACE HOTEL, MEHSANA HIGHWAY, CHANASMA. - 384220

CHANDRALA

481. NANDA AUTOMOBILES PVT LTD (--01), HIMMATNAGAR HIGHWAY NO.8, NEAR DEVANSHI PARTY PLOT, CHANDRALA, DIST-GANDHINAGAR, GUJARAT - 382320

CHANGODAR

482. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (--01), SURVEY NO.393, VILLAGE – MORAIYA, CHANGODAR, TALUKA – SANAND, SUN DISTT - AHEMADABAD. - 382210
PH :7211120014.

CHHOTAUDEPUR

483. KIRAN MOTORS LIMITED (--01), PLOT NO. 29-30, SURVEY NO. 137, OPP. TO SP OFFICE, CHHOTA UDEPUR - 391165

CHIKHLI

484. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), SURVEY NO.461, VILLAGE-MAJIGAM, TALUKA-CHIKHALI, DISTT-NAVSARI, GUJARAT - 396521
PH :7698953899.

CHILODA

485. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (--01), PLOT NO. 332, BESIDES GALLOPS TATA, NH-8, CHILODA-HIMMATNAGAR HIGHWAY, CHILODA. - 382355

CHOTILA

486. DREAM VEHICLES PVT LTD (--01), SURVEY NO. 31, PLOT NO. 1, NILKANTH SOCIETY, NH NO. 8A, AHMEDABAD-RAJKOT, AT & PO – CHOTILA, DISTRICT – SURENDRANAGAR, GUJARAT. - 363520
PH :9227775709.

CHUDA

487. DREAM VEHICLES PVT LTD (--01), NR. GOVT HOSPITAL,CHATARLIYA ROAD,CHUDA,SURENDRANAGAR. - 363410
PH :9313802500.

DABHOI

488. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), OPP. VEGA BUS STOP, NEAR VEGA CROSS ROAD, DABHOI-BODELI ROAD, DABHOI, TA:DABHOI, DI:VADODARA - 391110
PH :8156000463.

DAHOD

489. R B CARS PVT LTD (--02), NEAR SIMANDHAR JAIN TEMPLE, OLD INDORE HIGHWAY,DAHOD - 389151

DANTIWADA

490. TANU MOTORS PVT LTD (--01), VISHWAS COMPLEX, OPP HINGLAJ PETROL PUMP, NR. JAIN DERASAR, DANTIWADA HIGHWAY, AT-PO PANTHWADA, TALUKA-DANTIWADA, DIST-BANASKANTHA - 385545
PH :9099940424.

DEDIAPADA

491. RAVIRATNA MOTORS PVT LTD (--01), SURVEY NO-124/45, PLOT NO-1, VILLAGE-NIVALDA, TA-DEDIAPADA, DIST-NARMADA. - 393040

DEESA

492. TANU MOTORS PVT LTD (--03), NH-14, NR. ESSAR PETROL PUMP, RADHANPUR HIGHWAY, HANUMAN NAGAR, MALGADH, DEESA - 385535
PH :9909006099.

DEHGAM

493. NANDA AUTOMOBILES PVT LTD (--03), SURVEY NO. 311, MOJE PALIYA TALUKA DEHGAM, GANDHINAGAR, GUJARAT-382305 - 382305

DETROJ

494. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (--01), PLOT NO-61,MILKAT NO-2534, AT-DETROJ,TALUKA-DETROJ-RAMPURA-382120 - 382120
PH :7971846442.

DEVGARHBARIA

495. R B CARS PVT LTD (--05), BESIDE ARIHANT PETROL PUMP, PIPLOD ROAD, DEVGADH BARIA - 389380

DHANERA

496. TANU MOTORS PVT LTD (--01), 01 & 02, MARUTI NANDAN COMPLEX, NEAR ESSAR PETROL PUMP, DHANERA-DEESA HIGHWAY, DHANERA. - 385310

DHARAMPUR

497. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), SURVEY NO.29/3/P1, VILLAGE ASHURA NR. ASHURA CIRCALE, DHARAMPUR DISTT. VALSHAD, GUJARAT - 396050
PH :9723455291.

DHARI

498. ALPHA AUTOLINK LLP (--01), PLOT NO. 9, DHARI - KHAMBHA ROAD, NEAR RAILWAY FATAK DHARI , TALUKA - DHARI, DIST. - AMRELI, GUJARAT. - 365640

DHOLKA

499. TANU MOTORS PVT LTD (--01), SURVEY NO. 722, OPPOSITE RANI RUDY MATAJI MANDIR, DHOLKA KALIKUND HIGHWAY, DHOLKA, GUJARAT - 382225
PH :9512009104.

DHORAJI

500. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502--09), JETPUR ROAD, OPP. SHRINATHJI SOCIETY, DHORAJI - - 360410

DHRANGADHRA

501. DREAM VEHICLES PVT LTD (--01), PLOT NO. 79, SURENDRANAGAR- DHRANGADHRA ROAD, OPP. ARMY WORKSHOP, DISTRICT-SURENDRANAGAR. - 363310
PH :9227775725.

DIYODAR

502. TANU MOTORS PVT LTD (--01), NR.HP PETROL PUMP, BHESANA CROSS ROAD, BHABHAR HIGWAY,DIYODAR-385330
PH :9099017756.

DWARKA

503. ATUL MOTORS JAM LLP (--01), SURVEY NO. 41, NEAR, SHRI SANTAN SEVA MANDAL, CORNER PLOT OF STATION ROAD AND HIGHWAY ROAD, DWARKA, DISTRICT – DWARKA – . - 361335

GANDHI NAGAR

504. NANDA AUTOMOBILES PVT LTD (--01), 1003,SECTOR-28,GANDHI NAGAR - 382028

505. NANDA AUTOMOBILES PVT LTD (--05), PLOT NO. 805, GIDC, SECTOR-28, GANDHINAGAR. - 382028

GANDHIDHAM

506. B.M. AUTOLINK (7702--03), SURVEY NO.129/26 P, GALPADAR HIGHWAY, GANDHIDHAM , DISTT.KACHCHH, GUJARAT. - 370110

GODHRA

507. R B CARS PVT LTD (--01), PLOT NO. 112/11.,12-VAVDI,GODARA - DAHOD HIGHWAY, GODHRA, PANCHMAHAL, GUJARAT - 389001

508. R B CARS PVT LTD (--04), SURVEY NO.107, LUNAWADA ROAD, GIDC, GODHRA, DISTT. PANCHMAHAL-389001. - 389001

GONDAL

509. ATUL MOTORS PVT LTD (5503--05), 8-B NATIONAL HIGHWAY, OPP. DAULAT OIL MILL, NR. NILKANTH VIRUDASHRAM, RAJKOT HIGHWAY,GONDAL - 360311

510. ATUL MOTORS PVT LTD (5503-55-06), RAJKOT AHMEDABAD HIGHWAY, NR. CHANDARANA PETROL PUMP, OPP. GUJARAT SAMACHAR PRESS, AT. NAVAGAM RAJKOT - 360003
PH :9924688774.

511. ATUL MOTORS PVT LTD (--01), NEAR ASHAPURA RAILWAY CROSSING, RAJKOT-PORBANDAR NATIONAL HIGHWAY, GONDAL-360311. - 360311

GOZARIA

512. VIMCO MOTORS PVT LTD (--01), 1597/339 P4 VISHNAGAR-GOZARIYA ROAD, GOZARIYA, DIST.-MEHSANA. - 382825
PH :7016623842.

HALOL

513. R B CARS PVT LTD (--01), PLOT NO. 104/6 & 104/8, VADODARA – GODHRA HIGHWAY, NEAR NAVJIVAN HOTEL, HALOL, DISTRICT – PANCHMAHAL, GUJARAT - 389350

HALVAD

514. DREAM VEHICLES PVT LTD (--01), PLOT NO.5 & 6, NAKLANKDHAM TOWNSHIP, OPP. HONEST RESTAURANT, AHMEDABAD HIGHWAY, HALVAD DISTT. SURENDRANAGAR (GUJARAT) - 363330
PH :8238000965.

HANSOT

515. RAVIRATNA MOTORS PVT LTD (--01), AT UTRAJ, HANSOT, DISTRICT - BHARUCH. - 393030
PH :9687691063.

HIMATNAGAR

516. KIRAN MOTORS LIMITED (--01), NEAR G.I.D.C,MOTIPURA, HIMMATNAGAR - 383001

HISAR

517. COMET CAR SALES & SERVICE PVT LTD (4006-40-04), SAROLI VILLAGE, NEAR SAIBABA MANDIR, SURAT-OLPAD ROAD - 394520

IDER

518. KIRAN MOTORS LIMITED (--01), SURVEY NO.69 IDAR-AMBAJI ROAD, IDAR DIST: SABARKANTHA - 383430

JAMBUSAR

519. RAVIRATNA MOTORS PVT LTD (--01), SURVEY NO-2939-2954, PLOT NO-2, VILLAGE-JAMBUSAR, TALUKA-JAMBUSAR, DIST-BHARUCH. - 392150
PH :9687667595.

JAMJODHPUR

520. ATUL MOTORS JAM LLP (--01), NEAR HDFC BANK, GAYATRI MANDIR ROAD, JAMJHODPUR, DIST-JAMNAGAR (GUJARAT) - 360530. - 360530
PH :9537888988.

JAMNAGAR

521. ATUL MOTORS JAM LLP (--01), SURVEY NO.422, PLOT NO. 16,17 & 19, JAMNAGAR, GUJARAT - 361001

522. ATUL MOTORS JAM LLP (--02), C-36, MP SHAH ARUN UDYOG, SARUSECTION ROAD, JAMNAGAR - 361002

523. ATUL MOTORS JAM LLP (--03), OPP MADHAV BAUG1, NEAR RAILWAY OVER BRIDGE, JAMNAGAR, GUJARAT-361006. - 361006
PH :9574004709.

JASDAN

524. ATUL MOTORS PVT LTD (5503--09), SURVEY NO. 1253, PLOT NO. 4, NEAR KALYAN PETROL PUMP, JASDAN-ATKOT HIGHWAY, JASDAN, DIST.-RAJKOT, GUJARAT. - 360050
PH :9265404142.

JHALOD

525. R B CARS PVT LTD (--01), SURVEY NO. 2550B/10, 11, AT - JHALOD, TALUKA- JHALOD, DISTRICT - DAHOD. - 389170

JUNAGARH

526. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502--02), PLOT NO. 81-82,G.I.D.C. DOLATPURA,RAJKOT-JUNAGARH HIGHWAY, JUNAGARH - 362001

527. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502--06), SURVEY NO.45/1, PLOT NO. 214-C/D/E/F, GIDC-I, DOLATPARA, JUNAGADH - 362001

KADI

528. STARLINE CARS PVT LTD (--07), OPP. COTTON MARKETING YARD, KADI-CHATRAL ROAD, TAL: KADI, DIST: MEHSANA - 382715
PH :8160707156.

KAKANPUR

529. R B CARS PVT LTD (--01), SURVEY NO.618/2, PAIKI PLOT NO. 29,30,31 AT. KAKANPUR, TAL. GODHRA, DISTRICT. PANCHMAHAL PIN-388713. - 388713
PH :9099049347.

KALAVAD

530. ATUL MOTORS JAM LLP (--01), SANIDHYA ARCADE, NEAR SANIDHYA PARTY PLOT, KALAVAD – DHORAJI ROAD, KALAVAD. - 361160
PH :9574222111.

KALOL

531. NANDA AUTOMOBILES PVT LTD (--01), PLOT NUMBER 1147,1148, MEHSANA HIGHWAY, KALOL, GANDHINAGAR - 383028

KAPADVANJ

532. AMAR CARS PVT LTD (--01), SAMARTH SQUARE, SHOP NO. 1, MODASA KAPADWANJ ROAD, KAPADVANJ, GUJARAT-387620 - 387620
PH :9909960761.

KAPRADA

533. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), AT&POST. KAPRADA, DHARAMPUR - NASIK ROAD, N.H.67& 848. TA.KAPRADA, DIST. VALSAD - 396065

KARJAN

534. AMAR CARS PVT LTD (--01), SURVEY NO.851/787 BESIDE PMT TOOLS, KANDARI, N.H. -8, KARJAN, DISTT-VADODRARA (GUJARAT) - 391210

KATHLAL

535. AMAR CARS PVT LTD (--01), MAHAVEER AUTO SHOWROOM, NADIAD ROAD, JB PLAZA, KATHLAL, GUJARAT. - 387630
PH :9909960761.

KAWANT

536. RAVIRATNA MOTORS PVT LTD (--01), SURVEY NO :35 , NASVADI KAVANT ROAD, KAVANT, DIST: CHOTTA UDEPUR. - 391170

KESHOD

537. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (--01), R S NO. 125/1, GODOWN NO. 01, SONDARDA, TALUKA – KESHOD, DISTRICT – JUNAGADH, GUJARAT. - 362220
PH :7043999073.

KHAMBHAT

538. AMAR CARS PVT LTD (--01), PLOT NO. 7/8/9, RAJMAHAL PARK, OPP. SARDAR CHATRALAY, LAL DARWAJA, GAYATRINAGAR ROAD, KHAMBHAT, TALUKA KHAMBHAT, ANAND DISTRICT, GUJARAT - 388620
PH :9909960772.

KHANVEL

539. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), SURVEY NO 40/3, SILVASA KHANVEL ROAD, KHANVEL, GUJARAT - 396230

KHEDA

540. AMAR CARS PVT LTD (--01), S.NO.708, PLOT NO.1, VILLAGE-SOKHDA, TAL: MATER, DISTT. KHEDA, GUJARAT - 387570
PH :9909960761.

KHEDBRAHMA

541. KIRAN MOTORS LIMITED (--01), AMBAJI ROAD, KHEDBRAHMA, DIST. – SABARKANTHA, PIN – 383255 - 383255
PH :9824010721.

KHERALU

542. STARLINE CARS PVT LTD (--01), R S NO. 4962 MAHAVIR COMPLEX, KHERALU, DIST. -MEHSANA. - 384325

KHERGAM

543. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), SANVIRA HAT BAZAAR, KHERGAM-DHARAMPUR HIGHWAY ROAD, SH-67, KHERGAM, PIN-396040. - 396040
PH :9624007774.

KIM

544. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), PLOT NO. 116-121, DAL MILL COMPOUND, OPP. SURAT JILLA SANGH, KIM CROSS ROAD, NH-8, KIM - 394110
PH :9723555185.

KODINAR

545. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (--01), R.S.NO.222, PLOT NO.2, 3 SHOPS, KODINAR-362720 DISTT. JUNAGADH, GUJARAT - 362720

KOSAMBA

546. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), SURVEY NO-629, OPP. PIRAMAL GLASS COLONY, KIM KOSAMBA MAIN ROAD, KOSAMBA, DISTRICT- SURAT, GUJRAT - 394120

KUKARWADA

547. STARLINE CARS PVT LTD (--01), SHOP NO.1741, 1742 AND PLOT NO.1752, KUKARWADA TALUKA, VIJAPUR, DISTT MAHESANA (GUJARAT) - 382830

LAJPUR

548. AMAR CARS PVT LTD (--01), NEAR INDIANOIL PETROL PUMP, ACHIN, NAVSARI ROAD, DIST. SURAT - 394235

LALSAR

549. R B CARS PVT LTD (--01), SURVEY NO-202, AT-LALSAR, LALSAR-LUNAWADA HIGHWAY, TALUKA-LUNAWADA PIN-388270. - 388270

LAVANA

550. R B CARS PVT LTD (--01), AT PO -LAVANA, NEAR BABILIYA CROSSING, MODASA ROAD, LAVANA-389230 - 389230

LIMBASI

551. AMAR CARS PVT LTD (--01), SURVEY NO 2495, OPP PHC CENTER, VILLAGE -LIMBASI - 387250

LIMBDI

552. DREAM VEHICLES PVT LTD (--01), SURVEY NO.276/1, NEAR PANCHVATI HOTEL, LIMDI CROSS ROAD, AHMEDABAD-RAJKOT HIGHWAY, LIMDI, DISTT. SURENDRANAGAR, GUJARAT. - 363421

LUNAWADA

553. R B CARS PVT LTD (--01), SURVEY NO.90, AT-BHAYASAR, GODHRA-LUNAWADA HIGHWAY, LUNAWADA , TALUK-LUNAWADA, DISTT-MAHISAGAR, GUJARAT. - 389230

MADHI

554. DHRU MOTORS (--01), MADHI SYADLA, BAJIPURA ROAD,, ATPOS, MADHI, SYADLA, TAPI, - 394340

MAHUVA (BHAVNAGAR)

555. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), V.P. COMPLEX, BUNDER RD, NR. GAUSHALA, BARPARA, MAHUVA, GUJARAT 364290. - 364290 PH :6357327534.

MAHUVA (SURAT)

556. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), BLOCK NO. 14/2, VILLAGE BUDHALESHWAR, SURAT SAPUTARA STATE HIGHWAY,TAL. MAHUVA, DIST. SURAT - 394250 - 394250

MANAVADAR

557. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (--01), RS NO. 13/1, 14, PLOT NO. 48, BHAKTINAGAR, TALUKA - MANAVADAR, DIST.-JUNAGADH. - 362630 PH :7043999073.

MANDAL

558. KIRAN MOTORS LIMITED (--01), SURVEY NO. 708, MANDAL - DETROJ HIGHWAY, NR. RELIANCE PETROL PUMP, MANDAL , DI: AHMEDABAD, GUJARAT. - 382130 PH :9408803925.

MANDVI

559. K D MOTORS (--01), PLOT NO.25,26 & 27, RAJ COMMERCIAL, SURVEY NO.246, NEAR "THE BEACH RESORT", MANDVI NALIYA ROAD, MANDVI-KUTCH - 370465

560. KIRAN MOTORS LIMITED (--01), C.S NO-3278, ZHANKHAVAV-MANDVI ROAD, DHOBANI NAKA, MANDVI - 394160. - 394160

MANGROL

561. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), PLOT NO. 12-28, MOSALI, MANGROL, DISTRICT-SURAT. - 394410 PH :6357071775.

MANSA

562. NANDA AUTOMOBILES PVT LTD (--04), SURVEY NO. 1686, NR. UMA PETROLEUM (INDIAN OIL), RAJPURA CROSS ROADS, MANSA GANDHINAGAR HIGHWAY, MANSA -382845. - 382845 PH :9727921000.

MEHMDABAD

563. AMAR CARS PVT LTD (--01), PATEL FALIYA, KHATRAJ, MEHMEDABAD, DIST.-KHEDA, GUJARAT. - 387130 PH :9909960761.

MEHSANA

564. STARLINE CARS PVT LTD (--01), NAGALPUR HIGHWAY,MAHESANA , GUJRAT - 384002 PH :9909043635.

565. TANU MOTORS PVT LTD (--04), SURVEY NO.78, NEAR SUNRISE AUTOMOBILES (AMW DEALER), GUJARAT STATE HIGHWAY NO.41, MEHSANA - 384002 PH :9909006076.

566. VIMCO MOTORS PVT LTD (--01), SURVEY NO. 104 & 104 PAIKI 1, AT P.O. - PALAVASANA, MEHSANNA, GUJARAT. - 384002 PH :8909953333.

567. VIMCO MOTORS PVT LTD (--02), SHOP # 7&8, TIRUPATI SAHIBAGH MARKET, MEHSANA – RADHANPUR ROAD, NEAR SAHAJ VILLA, MEHSANA - 380002. - 380002 PH :8909953333.

METODA

568. ATUL MOTORS PVT LTD (5503--08), PLOT NO. 2328, GATE NO. 2, METODA GIDC, METODA, TALUKA LODHIKA, DISTRICT - RAJKOT, GUJARAT - 360021

MODASA

569. KIRAN MOTORS LIMITED (--02), SHAMLAL JI ROAD,SABARKANTHA DIST., MODASA - 383315

MORBI

570. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502--07), SURVEY NO. 351/2, PLOT NO. 10, DHARTI INDUSTRIAL AREA, RAJPURA ROAD, SANALA, MORBI , TEHSIL-MORBI, DISTT.-MORBI, GUJARAT. - 363641

571. DREAM VEHICLES PVT LTD (--03), PLOT NO 2, DHARM GOLD INDUSTRIAL ESTATE, PIPLI JETPUR HIGHWAY, DIST MORBI, PIN 363642 - 363642 PH :7069089532.

MOTI KHAVADI

572. ATUL MOTORS JAM LLP (--01), PLOT NO.22 & 29, NEAR PADANA POLICE STATION, JAMNAGAR-KHAMBHALIYA HIGHWAY, MOTI KHAVDI, ZANKHAR, TA: LALPUR, DIST - JAMNAGAR, GUJARAT. - 361140

MUNDRA-DOM

573. B.M. AUTOLINK (7702--02), PRAGPAR ROAD,MUNDRA,DISTRICT-KUTCH, GUJARAT, - 370421

MUVAL

574. AMAR CARS PVT LTD (--01), YOGI RESIDENCY MOVAL CHOKDI, PADRA- JAMBUSAR HIGHWAY – MUVAL, TALUKA-PADRA, VADODARA. - 391430

NADIAD

575. AMAR CARS PVT LTD (--02), NEAR RAJHANS MULTIPLEX,NADIAD-UTTARSANDA ROAD - 387370 PH :9909960761.

NAKHATARANA

576. K D MOTORS (--01), PLOT NO-1, RS NO-19, AT-NANA ANGIYA, TALUKA-NAKHATRANA, KUTCH PH :9909953119.

NALIYA

577. K D MOTORS (--01), AT PO - SHAKTI SOCIETY, MAHAVIR NAGAR, PLOT(1), OPP. BANK OF BARODA, NALIYA, TAL-ABDASA, KUTCH. - 370655 PH :9909953119.

NANA PONDHA

578. AMAR CARS PVT LTD (--01), SHOP NO 7-11, JALASHAI SHOPPING CENTER, AT-NANA PONDHA, TALUKA- KAPRADA, DIST-VALSAD - 396126 PH :7227971155.

NANDASAN

579. TANU MOTORS PVT LTD (--01), M/S TANU MOTORS PVT LTD, AT&PO-NANDASAN, TALUKA-KADI, DIST-MEHSANA 382705 - 382705

NASWADI

580. RAVIRATNA MOTORS PVT LTD (--01), HOUSE NO-301,302,303, IN VALPURA-RAMLALNAGAR, VILLAGE AT-NASWADI, DIST: CHOTTA UDEPUR - 391150 PH :9687691047.

NAVSARI

581. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), PLOT NO.-891, OPP PAUVA MILL, NH-8,NEAR GANESH SISODRA CHOKDI,GANESH SISODIA NAVSARI, GUJRAT - 396463 PH :9723430012.

NETRANG

582. RAVIRATNA MOTORS PVT LTD (--01), SURVEY NO. 184, PLOT NO. 1 & 2, VILLAGE - NETRANG, TALUKA - VALIA, DIST.-BHARUCH. - 393130 PH :9687691063.

OLPAD

583. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (4006--02), 1906/1907, OPP. KUMBHARVAD, JUNA PURA, OLPAD - 394540 PH :9099916099.

PADRA

584. AMAR CARS PVT LTD (2205--02), NEAR WESTERN BYPASS, AT SAMIYALA, PADRA, DIST. – VADODARA, GUJARAT - 391440

PALANPUR

585. TANU MOTORS PVT LTD (--01), OPP.DHARTI RESORT, ABU- AHMEDABAD HIGHWAY, PALANPUR - 385001 PH :9099017756.

586. STARLINE CARS PVT LTD (--08), SURVEY NO.4 & 5/2, OPPOSITE L K PETROL PUMP, PALANPUR-DEESA HIGHWAY, PALANPUR-385001, DISTT BANASKANTHA, GUJARAT - 385001 PH :9824601793.

PALEJ

587. RAVIRATNA MOTORS PVT LTD (--01), PLOT NO. 626/6, GIDC AREA, PALEJ, DISTRICT - BHARUCH - 392220

PALITANA

588. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), PLOT NO 15, YASOVIJAYNAGAR, NEAR RAILWAY CROSSING, PALITANA HIGHWAY, PALITANA-364270 DIST BHAVNAGAR. - 364270 PH :6357314891.

PALSANA

589. KATARIA AUTOMOBILES PRIVATE LIMITED (4004--07), BESIDE SAINATH COMPLEX, KADODARA AHMEDABAD ROAD , NH-8, UMBHEL GAM,TALUKA: PALSANA KADODARA, SURAT. - 382721 PH :9924446895.

PARDI

590. AMAR CARS PVT LTD (--01), OPPOSITE MORARJI DESAI MEMORIAL HALL, SERVICE ROAD N.H-48, KILLA-PARDI, DIST-VALSAD - 396125 PH :7226800777.

PATAN

591. STARLINE CARS PVT LTD (--02), CHANASMA HIGHWAY, PATAN - 384265 PH :7046046187.

PATDI

592. DREAM VEHICLES PVT LTD (--01), R.S. NO.1614/2, PLOT NO.16, PATDI TALUKA DASADA, DISTT. SURENDRANAGAR, GUJARAT - 382765 PH :9227775709.

PAVI JETPUR

593. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (--01), NEAR ANKUR HOTEL, OPP. DHARESHWAR GEB STATION, PITHADIA, RAJKOT HIGHWAY, JETPUR (GUJARAT). - 360370

PETLAD

594. AMAR CARS PVT LTD (--01), SURVEY NO. 396/2, RANGAIPUR VILLAGE, PETLAD, DIST.-ANAND. - 388450 PH :9099017068.

POR

595. AMAR CARS PVT LTD (--01), SANKRUTI COMPLEX, POR KAYAVAROHAN ROAD, OPPOSITE OM BUNGALOWS. POR GUJARAT 391243 - 391243

PORBANDAR

596. ATUL MOTORS JAM LLP (--01), PLOT NO. 208, GIDC VANANA, NATIONAL HIGHWAY , PORBANDAR, DIST. PORBANDAR GUJARAT - 360577

PRANTIJ

597. KIRAN MOTORS LIMITED (--01), NO.6/P, OPP. VEGETABLE MARKET, PRANTIJ HIGHWAY, VILLAGE-KHAMALPUR, TALUKA-PRANTIJ, DISTT. SABARKANTHA, GUJARAT - 383205

RADHANPUR

598. STARLINE CARS PVT LTD (--01), SURVEY NO. 208/A, MOUJA – RADHANPUR, RADHANPUR MAIN ROAD, DISTRICT – PATAN, GUJARAT. - 385340

RAJKOT

599. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-55-01), PERFECT HOUSE,GONDAL ROAD,VANDI,RAJKOT - 360004
600. ATUL MOTORS PVT LTD (5503-55-01), PLOT NO.49/1 & 2, GIDC, BHAKTI NAGAR INDUSTRIAL ESTATE, RAJKOT. - 360002
PH :8140909093.
601. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502-55-04), 150 RING ROAD,OPP. GANDHIGRAM POLICE CHOWKI,RAJKOT - 360005
602. ATUL MOTORS PVT LTD (5503-55-02), BEHIND HP PUMP,UNIVERSITY ROAD ,NEAR SNK SCHOOL, RAJKOT - 360005
PH :8347005382.
603. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502--08), R.S. NO. 50/1, 150 FEET RING ROAD, RAIL NAGAR, RONKI, RAJKOT, GUJARAT. - 360006
604. KATARIA AUTOMOBILES PRIVATE LIMITED (5504-55-01), S. NO. 10/1, TPS NO. – 10, KALAVAD ROAD, MOTAMAVA, RAJKOT, GUJARAT. - 360001
PH :7573870001.
605. KATARIA AUTOMOBILES PRIVATE LIMITED (5504-55-02), OPP.ADARSH MARBLE,BESIDE SANNY PAJI KA DHABA, JAMNAGAR-RAJKOT HIGHWAY, - 360001

RAJPARDI

606. RAVIRATNA MOTORS PVT LTD (--01), R.S.NO.973, CTS NO. 1298, SHOPS PLOT NO.29 & 30, MOJE RAJPARDI, TALUKA-JHAGADIA, DISTT. BHARUCH - 393115

RAJPIPLA

607. RAVIRATNA MOTORS PVT LTD (--01), OPP. JALARAM SAW MILL, NEAR HARSIDDHI MATAJI TEMPLE, RAJPIPLA, DIST: NARMADA, GUJARAT - 393145

RAJULA

608. ALPHA AUTOLINK LLP (--01), R.S NO 96/3, PLOT NO-6 & 7, HINDORNA ROAD, RAJULA CITY, TALUKA-RAJULA. - 365560
PH :9033409043.

RANPUR

609. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), SURVEY NO -624/1,P2 PALIYAD ROAD, TALUKA RANPUR, DIST- BOTAD, GUJARAT. - 382245

RAPAR

610. B.M. AUTOLINK (--01), PARAGPAR CHAAR RASTA RAPAR GHANDHIDHAM KUTCH - 370165
PH :9727725723.

SAMI

611. STARLINE CARS PVT LTD (--01), SHOP NO. 55-56, AMBESHWAR PLAZA, SAMI-HARIJ ROAD. - 384240
612. VIMCO MOTORS PVT LTD (--01), SURVEY NO 917, VIRA SHOPPING CENTER, AT-SAMI, TALUKA-HARIJ, DIST-PATAN, GUJARAT. - 384245
PH :8909953333.

SANTEJ

613. NANDA AUTOMOBILES PVT LTD (--01), SUB PLOT NO. 05, SHOP NO. 3 & 4, BLOCK NO. 1162, SANTEJ, KALOL. - 380060
PH :9727822000.

SANTRAMPUR

614. R B CARS PVT LTD (--01), NEAR PTC COLLEGE, SANT ROAD, SANTRAMPUR,DISTT.-PANCHMAHAL - 389260

SARDHAR

615. ATUL MOTORS PVT LTD (--01), PLOT NO.1, NEAR VISHWA CATER FEED, RAJKOT-BHAVNAGAR NATIONAL HIGHWAY - 360025

SAVLI

616. KIRAN MOTORS LIMITED (--01), SURVEY NO. 2592/1 PAKKI 2, NEAR RELIANCE PETROL PUMP, BHADRVA CHOWKDI, SAVLI – TIMBA ROAD, SAVIL, TALUK – SAVLI, DISTRICT – VADODARA, GUJARAT. - 391770
PH :7984799054.

SAYAN

617. KIRAN MOTORS LIMITED (--01), PLOT NO.6 TO 10 OF R BLOCK, SURVEY NO.209, VILLAGE PARIA, TALUKA: OLPAD, SAYAN - 394130

SAYLA

618. DREAM VEHICLES PVT LTD (--01), LALGURU COMPLEX, SUDAMDA ROAD, SAYLA, DISTRICT SURENDRANAGAR, GUJARAT PIN 363430 - 363430
PH :9227775709.

SELAMBA

619. RAVIRATNA MOTORS PVT LTD (--01), CITY SURVEY NO. NA124/2/1, VILLAGE :- GHANSHERA, SELAMBA TALUKA:- SAGBARA, DIST:- NARMADA, PIN CODE:- 393050 - 393050

SHANKESHWAR

620. STARLINE CARS PVT LTD (--01), MANIBHADRA SHOPPING CENTRE, SHANKHESHWAR HIGHWAY, SHANKHESHWAR (GUJARAT)- DIST: PATAN - 384246
PH :9824601729.

SHAPAR

621. ATUL MOTORS PVT LTD (--01), SHOP NO. 1 TO 4, SURVEY NO. 305/1, PLOT NO. 169, SHAPAR, DISTRICT – RAJKOT, GUJARAT - 360024

SHIHORI

622. TANU MOTORS PVT LTD (--01), OPP. PANCHMUKHI HANUMAN TEMPLE, SHIHORI - DEESA HIGHWAY, SHIHORI, TA- KANKREJ, DIST- BANASKANTHA.385550 - 385550

SIDDHPUR

623. STARLINE CARS PVT LTD (--01), PLOT NO. 140-1285/7, SIDHPUR, TALUKA – VADGAM, DISTRICT – PATAN. - 384151

SIHOR

624. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), SURVEY PLOT NO 338, PAKKI 1 SIHOR BHAVNAGAR RAJKOT HIGHWAY, - 364240

SINOR

625. RAVIRATNA MOTORS PVT LTD (--01), NEAR SEVGA CHOKDI, SEVGA DABHOI ROAD, AT AND POST SEGVA, TALUKA SINOR, DIST. VADODARA, PIN-391105, GUJARAT - 391105
PH :7227055065.

SITAPUR

626. STARLINE CARS PVT LTD (--01), SHOP NO. 2, RUDRA ARCADE, REVENUE SURVEY NO. 129, VITHLAPUR (SITAPUR) BECHARAJI – VIRAMGAM HIGHWAY, DIST. AHMEDABAD, PIN CODE: 382120 - 382120

SOJITRA

627. AMAR CARS PVT LTD (--01), RAMDEV ARCADE, OPP. BUS STATION, AT – SOJITRA, DIST. - ANAND GUJARAT PIN 387240. - 387240
PH :9662357557.

SONGADH

628. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (--01), LAXMI PLAZA, SHOP NO. 21 & 22, SURAT DHULIYA HIGHWAY, TALUKA - SONGADH, DIST.-TAPI. - 384220
PH :9099916099.

SUPEDI

629. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), SURVEY NO-482/7, PAIKI PLOT NO-18, MATRAVAD ROAD, GRAM-SUPEDI, DIST - RAJKOT - 360440
PH :9409497902.

SURAT

630. KIRAN MOTORS LIMITED (4001-40-01), SURAT-BARDOLI ROAD,DUMBHAL,NEAR PUNA JAKAT NAKA,SURAT - 395010
631. DHRU MOTORS (4002-40-01), JEEVAN GANGA NAGAR,NEAR JEEVAN JYOT THEATRE,UDHNA MAIN ROAD,SURAT - 394210
632. KIRAN MOTORS LIMITED (4001-40-02), PANDESARA,BAMROLI ROAD,SURAT - 395002
PH :9824603880.
633. KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-04), TP NO. 6, SURVEY NO. 317/2, FINAL PLOT NO. 39, OPP SMS GARDEN, NEAR VIP ROAD, VESU, SURAT -395007 - 395007
634. KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-05), KATARIA ARCADE,OPP. RAJHANS CINEMA,DUMAS ROAD, PIPLOD, SURAT - 395007
635. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (4006-40-01), CHIKUWADI COMPLEX, GHB ROAD, PANDESARA, SURAT. - 394221
PH :9099915995.
636. KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-08), BLOCK NO.233, TP NO.8, OPP. SHREE LEKHA RESIDENCY, PALANPORE, ADAJAN, SURAT - 394310
PH :9924119020.
637. KIRAN MOTORS LIMITED (4005--01), PLOT NO. 443, FP NO. 26 MOJE PALGAM, ADAJAN, SURAT - 395009
638. AMAR CARS PVT LTD (4009--02), PLOT NO.10&11, SURVEY NO.7 & 9, SONARAS COMPOUND, NEAR DGVCL OFFICE, KARMNATH MAHADEV TEMPLE LANE, KAPODARA, VARACHHA ROAD, SURAT - 395006
PH :7069026512.
639. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (4006-40-03), R. S. NO. 311, T. P. SCHEME-3, FINAL PLOT NO. 102/A, KATARGAM, SURAT, DISTRICT – SURAT, GUJARAT. - 395004
PH :9099916099.

640. DHRU MOTORS (4002-40-03), PLOT NO.54/A, LAXMINARAYAN LNDUSTRIAL ESTATE, UDHNA, SURAT-394210 - 394210
PH :9978900862.
641. KATARIA AUTOMOBILES PRIVATE LIMITED (4004-40-09), SR NO-465+476, PLOT NUMBER: -1-9 AND 13-23, GURU KRUPA SHOPPING, NRLAXMIBA
PARK SOCIETY, NH 8, KHOLWAD, KAMREJ, SURAT-394190. - 394190
642. DHRU MOTORS (4002-40-06), TP NO.59, FP NO. 148, SUB PLOT NO-2, NEAR D'MART, MADHURAM CIRCLE, DINDOLI, SURAT - 394210

SURENDERNAGAR

643. DREAM VEHICLES PVT LTD (--01), 261/P, OPP MARKETING YARD,GIDC AREA,WADHWAN CITY, SURENDERNAGAR - 363030
644. DREAM VEHICLES PVT LTD (--02), PLOT NO-504/B, GIDC PHASE-3, WADHWAN, SURENDRANAGAR, GUJARAT-363030 - 363030
PH :9227775724.

TALAJA

645. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), SURVEY NO-168, DHANJIBHAI BALADHIYA NI VADI, NEAR
MAHUVA PALITANA CROSS ROAD, MAHUVA BHAVNAGAR HIGHWAY, TALAJA-364140. - 364140
PH :9316626475.

TALALA

646. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (--01), SURVEY NO-55/9/1, PLOT NO-10, TALALA-VERAWAL HIGHWAY, AT-TALALA, DIST-GIR SOMNATH, 362150 - 362150
PH :8511147524.

TALOD

647. KIRAN MOTORS LIMITED (--01), SURVEY NO-168, NEAR BALAJI PARK, TALOD, TALUKA-TALOD, DIST-SABARKANTHA, PIN-383215 - 383215

TANKARA

648. ATUL MOTORS PVT LTD (--01), PLOT NO. 8/1, S. NO. 107, VILLAGE – JABALPUR, TALUKA – TANKARA, SUB DISTRICT – MORBI, DISTRICT – RAJKOT. - 363650

TARAPUR

649. AMAR CARS PVT LTD (--01), NEAR N K STEEL, TARAPUR ROAD, TARAPUR, DIST.-ANAND. - 388180
PH :9909960772.

THANGADH

650. DREAM VEHICLES PVT LTD (--01), NEAR GATE, OPP.RELIANCE PETROL PUMP, - 363530

THARAD

651. TANU MOTORS PVT LTD (--01), PLOT NO. 21 & 22, VAJEGADH, DEESA HIGHWAY, THARAD, DIST.-BANASKANTHA - 384220

THASARA

652. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), PLOT NO 1 & 2, GIDC THASRA, BESIDES NARMADA VASAHAT, DAKORE THASRA ROAD, GUJARAT-388250 - 388250
PH :7984092780.

TILAKVADA

653. RAVIRATNA MOTORS PVT LTD (--01), SURVEY NO-157, VILLAGE- MOTI KAMSOLI, TALUKA-TILAKVADA, DIST-NARMADA, PIN-391120. - 391120

UMERGAON

654. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), PLOT NO. 239, LORD COMPLEX, SHOP NO. B-9 AND B-10, UMERGAON, DISTRICT – VALSAD, GUJARAT. - 396170
PH :9624001794.

UMRETH

655. AMAR CARS PVT LTD (--01), R. S. NO. 30/2, NADIAD-DAKOR ROAD, UMRETH , DIST.ANAND, GUJARAT. - 388220
PH :9909960772.

UNA

656. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (--01), SURVEY NO. 113, PLOT NO. 6, OPP. SWAMI VIVEKANAND VIDYALAYA, NEAR BANSIDHAR PETROL PUMP, BHAVNAGAR HIGHWAY, VAYAJPUR, UNA, DISTRICT – GIR SOMNATH, GUJARAT. - 362560

UNJHA

657. TANU MOTORS PVT LTD (--02), OPP. DHANA DAL FACTORY,MEHSANA PALANPUR HIGHWAY, UNJHA - 384170
PH :9727762079.

UPLETA

658. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (--01), S. NO. 184/1, PLOT NO. 15-16, UPLETA, GUJARAT - 360490

VADGAM

659. VIMCO MOTORS PVT LTD (--01), _ SURVEY NO-177, BESIDE ESSAR PETROL PUMP, VADGAM – PALANPUR ROAD, VADGAM, DIST – BANASKANTHA, GUJARAT – 385410. - 385410
PH :8909953333.

VADNAGAR

660. VIMCO MOTORS PVT LTD (--01), SHILALEKH COMPLEX, BLOCK-D, SURVEY NO-2713, VADNAGAR-VISNAGAR HIGHWAY, NEAR FOOD PARADISE HOTEL, VADNAGAR, GUJARAT - 385355
PH :7016623842.

VADODARA

661. KIRAN MOTORS LIMITED (2201--01), 909/4,G.I.D.C.MAKARPURA,VADODARA - 390010
PH :9624472699.
662. KIRAN MOTORS LIMITED (2201--02), PLOT NO.160,SUB-I NUTAN GUJ.INDL.ESTATE,OLD CHHANI ROAD, VADODARA - 390002
PH :9824207889.
663. AMAR CARS PVT LTD (2203--01), GORWA ROAD,VARODARA,GUJARAT, - 390016
664. AMAR CARS PVT LTD (2203-22-02), KALA GHODA, OPP. KIRTI MANDIR, VADODARA, DIS: VADODARA, GUJARAT - 390001
PH :7211109952.
665. KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-01), 984/4,GIDC, OLD NH-8,MAKARPURA ROAD, VADODARA, GUJARAT - 390010
PH :9904033422.
666. AMAR CARS PVT LTD (2205-22-01), VARASIYA AIRPORT ROAD, OPP POONAM CINEMA, KARELIBAUG, VADODARA,GUJARAT - 390016
PH :8980006756.
667. KIRAN MOTORS LIMITED (2201--03), C/O ARBUDA COLD STORAGE, 823 POWER CABLE ROAD, DHARMSINH ROAD, OPP. UMA AMAR PARTY PLOT, NEAR CHHANI JAKAT NAKA, VADODARA - 390002
PH :2771122.
668. KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-02), OPPOSITE SHARDA MANDIR HIGH SCHOOL, VINOBA BHAVE ROAD, SALATWADA, VADODARA - 390001
PH :8156017770.
669. RAVIRATNA MOTORS PVT LTD (2206-22-01), SURVEY NO. 1581, MILES HOUSE, ATLADARA ROAD, VADODARA. - 390012
670. KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-03), C/O SHIVAM TIMBER MART, BESIDES SIDDESHWAR PLAZA,NEAR SARDAR ESTATE, NEW VIP ROAD, VADODARA -390019. - 390019
671. KATARIA AUTOMOBILES PRIVATE LIMITED (2204-22-04), OPP. RUDRAKSH BLISS, RANG VATIKA ROAD, BAPOD, WAGHODIA - 390019
672. RAVIRATNA MOTORS PVT LTD (--02), SURVEY NO 560, BEHIND IOCL PETROL PUMP,, VILLAGE-VEMALI (SAMA), SAMA-SAVLI ROAD - 682024

VALETVA

673. AMAR CARS PVT LTD (--01), SHAH ALKABEN JITENDRA KUMAR, VALETVA CHOWKI, NEAR VISAT MATA MANDIR, PADGOL ROAD, VALETVA, DIST- KHEDA, GUJARAT - 388440

VALIA

674. RAVIRATNA MOTORS PVT LTD (--01), AT & PO VALIA, TA-VALIA, DIST. BHARUCH, VALIA - 393135

VALOD

675. DHRU MOTORS (--01), PLOT NO.5 TO 9, TAIYABA PARK SOCIETY, AT & PO - VALOD, TALUKA - VALOD, DISTT. - TAPI, GUJARAT. - 394640
PH :9712984522.

VALSAD

676. KATARIA AUTOMOBILES PRIVATE LIMITED (--06), SURVEY NO. 211,ATUL-ALSAD ROAD,PARNERA,AVALSAD, GUJARAT - 396020
677. AMAR CARS PVT LTD (9701-97-02), NEAR KALPANA WEIGH BRIDGE, OPP. VISHWAKARMA MANDIR, DHAMDACHI - 396001

VANSDA

678. KATARIA AUTOMOBILES PRIVATE LIMITED (--02), JAMNABA PARK, VANSDA HANUMAN BARI CHAR RASTA, VANSDA-DHARAMPUR ROAD, RANI FALIYA, VANSDA, DISTRICT – NAVSARI, GUJARAT - 396580
PH :7624088188.

VAPI

679. KATARIA AUTOMOBILES PRIVATE LIMITED (-97-03), PLOT NO. C-29,NATIONAL HIGHWAY-8,G. I. D. C., VAPI, TAL. PARDI - 396195
680. KATARIA AUTOMOBILES PRIVATE LIMITED (-97-09), PLOT NO. 304/2, VILLAGE BALITHA, NH-8, OPP BABA SITARAM TEMPLE, NEAR SWAMINARAYAN SCHOOL, SALAV, VAPI , DISTRICT -VALSAD, GUJARAT - 369191
681. AMAR CARS PVT LTD (9701-97-01), SURVEY NO. 1034, 1035, NEAR WOODLAND HOTEL, NH-8, VILLAGE - BALITHA, VAPI. - 396145
PH :9327909504.

VASO

682. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), SURVEY NO -8, NEAR MADHURAM FARMHOUSE, MAUJA-VASO, DIST-KHEDA, GUJARAT - 387380

VERAVAL

683. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (5502--05), SR.988/2/P1/P1, AT VILLAGE-DARI, TALUKA - PATAN, JUNGADH VERAWAL HIGHWAY, CHATRODA CHOWK, VERAVAL - 362255

VIJAPUR

684. STARLINE CARS PVT LTD (--04), HIMMATNAGAR HIGHWAY, ANANDPURA CHAR RASTA, VIJAPUR - 382870
PH :9909043635.

VIRAMGAM

685. KIRAN MOTORS LIMITED (--01), SURVEY NO.319/P, NILKI CHOKDI, VIRAMGAM, DISTT: AHMEDABAD, GUJARAT. - 382150
PH :8156016222.

VISAVADAR

686. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (--01), OPP BUS STAND, AT PO-MANDAVAD, TAL-VISAVADAR, DIST-JUNAGADH, PIN-362130. - 362130

VISNAGAR

687. STARLINE CARS PVT LTD (--05), VISNAGAR -AMBAJI ROAD, OPP. DHAROI COLONY, VISNAGAR, DISTT.- MEHSANA - 384315
PH :7046046174.

VYARA

688. COMET MOTORS (A UNIT OF COMET CAR SALES & SERVICE PVT LTD) (--01), SHOP NO. 11 & 12, BLOCK NO. 175/1/A, RS NO. 113, VYARA-SURAT ROAD, VYARA, DISTRICT – TAPI, GUJARAT - 394650
PH :9099916099.

WAGHODIA

689. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), OPPOSITE BHARAT PETROLEUM, WAGHODIA, TALUKA – WAGHODIA, DISTRICT – VADODARA, GUJARAT. - 391760
PH :7203013712.

WANKANER

690. ATUL MOTORS PVT LTD (--01), RAJKOT-WANKANER HIGHWAY, NEAR JADESHWAR CHAMBERS, NEAR INTERNATIONAL CERAMIC, WANKANER (GUJARAT) - 363621

## HARYANA

ADAMPUR (HARYANA)

691. SARAOGI AUTOMOBILES PVT LTD (--01), KEWAT NO. 663, KHAT NO. 1147, KHESRI NO. 44/21/1/2(1-0), MANDI ADAMPUR, TEHSIL - ADAMPUR, DIST.-HISSAR, STATE - HARYANA. - 125052
PH :8607777153.

AMBALA

692. MODERN AUTOMOBILES (1801-18-01), MODEL TOWN CROSSING, G.T.ROAD, AMBALA, HARYANA. - 134003
PH :9215016044.

693. MODERN AUTOMOBILES (1801-18-02), NEAR AMAR PALI RESTAURANT, G.T. ROAD, AMBALA - 134003
PH :9215016044.

694. EAKANSH WHEELS PVT LTD (1802-18-01), STONE NO. 126, JAGADARI ROAD, VILLAGE TEPLA, AMBALA - 133001
PH :9991703000.

695. EAKANSH WHEELS PVT LTD (1802-18-03), PLOT NO. 8, BASANT VIHAR, BEHIND SWASTIK MARBLE, NEAR MOTOR MARKET, AMBALA CITY, HARYANA - 133001
PH :88813874888.

696. T R SAWHNEY MOTORS PVT LTD (1803-18-01), JAGGI GARDEN, BALDEV NAGAR, OPPOSITE AMBALA PASSPORT OFFICE, AMBALA - 134003
PH :9990110068.

ASSANDH

697. KARNAL MOTORS PVT LTD (8906--04), OPP. NEW GRAIN MARKET, KARNAL ROAD ASSANDH, DISTT. KARNAL - 272032
PH :7082111325.

BABARPUR

698. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (--01), G.T. ROAD, NEAR PARK RESIDENCY, SHIMLA MAULANA, BADOLI, BABARPUR, DISTT. PANIPAT - 132103

BAHADURGARH

699. COMPETENT AUTOMOBILES CO LTD (--01), PLOT NO. 1202, MIE PART B, BAHADURGARH, HARYANA - 124507
PH :8929648144.

BAPOLI

700. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (--01), KHEWAT NO. 136, VILLAGE – JHAMBA, TEHSIL – BAPOLI, DISTRICT – PANIPAT. - 132103
PH :9053400583.

BARARA

701. EAKANSH WHEELS PVT LTD (--01), SH-4, KALA AMB - SHAHBAD - BARARA ROAD, BARARA - 133201
PH :9991478100.

BARWALA

702. MODERN AUTOMOBILES (--01), KHEWAT/KHOTONI NO. 388, KHASARA NO. 46/9, 10, OPPOSITE AXIS BANK, VILLAGE BATAPUR, P.O. BARWALA, TEHSIL AND DISTT. PANCHKULA, HARYANA - 134118
PH :9896217059.

BAWAL

703. DINCO 4 WHEELS LLP (AUTO VIBES) (--01), KHATA NO. 326 AND KHATAUNI NO. 362, OPPOSITE PRATHAM HOUSING, NH-8, BAWAL, DISTRICT – REWARI, HARYANA . - 123501
PH :7082100250.

BERI

704. COMPETENT AUTOMOBILES CO LTD (--01), KHASRA NO.9/19,KEWAT NO.320, BERI JHAJJAR ROAD,WAZIRPUR, - 124201

BHIWANI

705. JAGMOHAN AUTOMOTIVES PVT LTD (--01), DELHI ROHTAK ROAD, NEAR RADHA SWAMI SATSANG MANDIR, BHIWANI - 127021
PH :8685005592.

BILASPUR

706. PLATINUM MOTOCORP LLP (--02), KHASRA NO.54/67, CHOUDHARY NIHAL SINGH MARKET, BILASPUR CHOWK, NH-8, BILASPUR, DISTRICT – GURUGRAM. - 122413

BILASPUR-HR

707. PANDIT AUTOMOBILES PVT LTD (--01), NEAR GRAMIN BANK, JAGADHRI ROAD, BILASPUR, DISTRICT – YAMUNANAGAR, HARYANA. - 135102
PH :9992113854.

CHARKHI DADRI

708. JAGMOHAN AUTOMOTIVES PVT LTD (--02), BHIWANI LOHARU ROAD, CHARKHI DADRI, BHIWANI - 127306
PH :8059900538.

CHEEKA

709. EAKANSH MOTORS PVT LTD (--04), MARBLE MARKET, PATIALA ROAD, CHEEKA, HARYANA, - 136034
PH :8053086000.

CHHACHHARAULI

710. PANDIT AUTOMOBILES PVT LTD (--01), HB NO. 311, NEAR MDAV SCHOOL, TEHSIL – CHHACHHRAULI, DISTRICT – YAMUNA NAGAR. - 135103
PH :9812455895.

DADRI TOE

711. COMPETENT AUTOMOBILES CO LTD (--01), KHEWAT NO. – 270 MIN, KHATONI NO. – 319, DADRI TOYE, DISTT. JHAJJAR, HARYANA PIN 124103 - 124103
PH :9821308849.

DAHINA

712. DINCO 4 WHEELS LLP (AUTO VIBES) (--01), REWARI MAHENDERGARH ROAD, NEAR RAILWAY STATION, DAHINA, REWARI - 123411
PH :7082100201.

DHAND

713. EAKANSH MOTORS PVT LTD (--01), PANCHMUKHI CHOWK, KARNAL ROAD, DHAND, DISTT. KAITHAL, HARYANA. - 136020
PH :8395906111.

DHARUHERA

714. DINCO 4 WHEELS LLP (AUTO VIBES) (--01), KHASRA NO. 57, KILLA NO. 7, SOHNA-DHARUHERA ROAD, OFF SECTOR-4A, DHARUHERA, DIST.-REWARI. - 122106
PH :7082100270.

ELLENABAD

715. SHAKTI MOTORS PVT LTD (--03), SURERA CHOWNK, NEAR CHAUDHARI MANI RAM COLLEGE, SIRSA ROAD, ELLENABAD - 125055
PH :8222900250.

FARIDABAD

716. VIPUL MOTORS PVT LTD (5801-58-01), 27/5 KM, MAIN MATHURA ROAD, FARIDABAD - 121002

717. VIPUL MOTORS PVT LTD (5801-58-03), UNIT-II, PLOT NO. 1A 19/6, MATHURA ROAD, FARIDABAD - 121006

718. TCS AUTOWORLD (A UNIT OF TCS & ASSOCIATES PVT LTD) (5804-58-01), PLOT NO-1A, SECTOR-6, FARIDABAD, - 121001

719. FAIR DEAL PREMIUM WHEELS PVT LTD (5807-58-01), PLOT NO.-17A, NIT INDUSTRIAL AREA, NIT FARIDABAD - 121003
PH :8448296686.

720. TCS AUTOWORLD (A UNIT OF TCS & ASSOCIATES PVT LTD) (5804-58-02), 20.4 KMS MILESTONE, BHASKAR COMPOUND, AMAR NAGAR, MAIN MATHURA ROAD, FARIDABAD, HARYANA. - 121003

721. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (5806--01), 15/3, MATHURA ROAD, NEAR SECTOR-28, METRO STATION, FARIDABAD - 121003

722. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (5806-58-02), BYE PASS ROAD, PLOT NO. 12 SECTOR-9, FARIDABAD. - 121006

723. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (5806-58-03), 15-INDRA COMPLEX, NAHAR PAR NEAR SIDDHARTHA SCHOOL, FARIDABAD, KHERIKALANM PIN-121002, HARYANA - 121002

FARMANA

724. JAGMOHAN AUTOMOTIVES PVT LTD (--01), NEAR PARAMOUNT SCHOOL OF SCIENCE, KHARKHODA ROAD, FARMANA, DISTRICT SONIPAT, HARYANA - 131408

FARRUKHNAGAR

725. PLATINUM MOTOCORP LLP (--01), KHEVAT NO. 299, MUSTIL NO.-12, KHASRA NO.-19/3 AND 22/2, VILLAGE – SEHADPUR MOHAMADPUR, TEHSIL – FARRUKHNAGAR, DISTRICT – GURGAON. - 122506

FATEHABAD

726. SHAKTI MOTORS PVT LTD (--01), NH-10, SIRSA ROAD, FATEHABAD - 125050
PH :8222900217.

FEROZEPUR JHIRKA

727. PASCO AUTOMOBILES (--01), VILLAGE - CHAK RANGLA, TEHSIL - FIROZPUR JHIRKA DIST - NUH - 122104

GANAUR

728. JAGMOHAN AUTOMOTIVES PVT LTD (--01), SAROJ GARDEN, GT ROAD, GANNAUR , DISTRICT SONIPAT
RAILWAY ROAD, GANAUR - 131101
PH :8199911106.

GHARAUNDA

729. KARNAL MOTORS PVT LTD (8906--05), WARD NO.-1, BEHIND GOVT. SR. SEC. SCHOOL COLONY, GHARAUNDA, - 132114
PH :8222022321.

GOHANA

730. JAGMOHAN AUTOMOTIVES PVT LTD (--01), NEAR KHANPUR CHOWNK, ROHTAK PANIPAT HIGHWAY, GOHANA, DISTT. - SONEPAT - 131301
PH :8685005521.

GURGAON

731. PASCO AUTOMOBILES (9506-95-01), PASCO HOUSE, 6 PALAM GURGAON ROAD, INDUSTRIAL ESTATE, GURGAON - 122006
732. VIPUL MOTORS PVT LTD (5801-95-02), 504, UDYOG VIHAR, PHASE-III, GURGAON - 122001
733. COMPETENT AUTOMOBILES CO LTD (9505-95-01), A-25, INFOCITY, SECTOR-33, GURGAON - 122004
734. PASCO AUTOMOBILES (9506-95-02), SECTOR 17-18, DIVIDER ROAD, GURGAON, HARYANA, - 122015
735. ROHAN MOTORS LTD (9508-95-01), 2482/84, SECTOR-52A, WAZIRABAD VILLAGE, OPP. AARDI CITY MALL, GURGAON - 122001
736. VIPUL MOTORS PVT LTD (5801--04), PLOT NO.5/22/1, SARHAUL VILLAGE,SECTOR-18, MAIN ROAD, GURGAON. (HARYANA) - 201102
737. PREM MOTORS PVT LTD (9511-95-01), PLOT NO.101, SAINI PLAZA MARKET, OPP. H BLOCK, NEAR RAM MANDIR, PALAM VIHAR, GURGAON - 122017
738. PREM MOTORS PVT LTD (9512-95-01), PLOT NO. 3,IDC, OPPOSITE SECTOR-14, GURGAON - 122001
739. RANA MOTORS PVT LTD (9509-95-02), PLOT NO.60, IDC, GURGAON - 122001
740. PASCO AUTOMOBILES (9510-95-01), PLOT NO. 34/3, DINESH JAIN COMPLEX, DELHI-AJMER EXPRESSWAY (NH-8), RAJIV CHOWK, GURGAON, HARYANA. - 122001
741. PREM MOTORS PVT LTD (9512-95-02), PLOT NO. 122, PALAM VIHAR EXTENSION, NEAR KRISHNA CHOWK, GURUGRAM - 122017
742. PLATINUM MOTOCORP LLP (--03), 5/13 SOHNA ROAD VILL-TIKRI ADJACENT TO POLARIS HOSPITAL GURGAON HARYANA - 122018
743. PREM MOTORS PVT LTD (9512-95-G1), QILA NUMBER 8/2, MUSTAKIL NO - 25, SECTOR 17-18, DIVIDING ROAD, GURGAON, - 122015
PH :8800000817.
744. PLATINUM MOTOCORP LLP (-95-04), KILA NO. 15, SECTOR 93, NEAR HAYATPUR POLICE CHOWKI, HAYATPUR, GURGAON, PIN-122050, HARYANA - 122050
PH :9899118850.
745. PASCO AUTOMOBILES (9506-95-04), KHASRA NO. 191/2 & 190/2, MAIN DAULTABAD ROAD, OPP. OLD BHALLA CHEMICALS FACTORY, DAULATABAD INDUSTRIAL AREA, GURGAON, HARYANA - 122006. - 122006
PH :8851227233.
746. SWASTIK MOTOCORP PVT LTD (9514-95-01), NEAR RAO JAI SINGH CHOWK, SIKANDERPUR BADHA, SECTOR-85, GURUGRAM, HARYANA - 122004. - 122004
747. COMPETENT AUTOMOBILES CO LTD (9505-95-02), MAIN FARUKH NAGAR ROAD, DHANKOT, GURGAON - 122505 - 122505
748. PREM MOTORS PVT LTD (9512-95-03), OPP. TRUE VALUE, SECTOR 17-18 DIVIDING ROAD GURGAON - 122001
749. SWASTIK MOTOCORP PVT LTD (9514-95-02), KHATA NO.141/146, KILA NO.16/2/2, SECTOR-83, GURUGRAM, - 122004
750. SWASTIK MOTOCORP PVT LTD (9514-95-03), KHATAUNI NO 135, KHASRA/KILA NO 66/3/2/1 & 66/3/2/2, GURGAON- SOHNA RD, NEAR VATIKA CHOWK, GURUGRAM - 122101

HANSI

751. JAGMOHAN AUTOMOTIVES PVT LTD (--01), G. T. HIGHWAY ROAD, MAIN ROHTAK HANSI ROAD, NEAR HOLLAND TRACTORS AGENCY & HP PETROL, HANSI
ROHTAK ROAD, HANSI (HISAR), HARYANA. - 124001
PH :8059900546.

HATHIN

752. ROHAN MOTORS LTD. (--01), MAIN MARKET ROAD, WARD NO.13HATHIN,
PALWAL,,PIN-121103, - 121103

HISSAR

753. MODERN AUTOMOBILES (7602-76-01), OPP. VIDYUT NAGAR, DELHI ROAD, HISAR, - 125005
PH :9355473000.
754. SARAOGI AUTOMOBILES PVT LTD (7604-76-01), 5TH KM STONE, SIRSA ROAD, HISSAR, HARYANA - 125001
PH :8607777043.
755. MODERN AUTOMOBILES (7602-76-02), OPP. BBMB, HISSAR DELHI ROAD, HISSAR - 125001
PH :9355473000.
756. UNIQUE MOTORS PVT LTD (7603-76-01), OPP. BHANU INDUSTRIES, DELHI ROAD, VILLAGE: SATROD,HISSAR (HARYANA) - 125006
PH :8818055535.

HODAL

757. ROHAN MOTORS LTD (--02), KILA NO. 8/2(7-11), 9(5-06), 12(5-0), 13(8-0), HIGHWAY ROAD, NEAR RAILWAY BYEPASS CHOWK, TEHSIL - HODAL, DIST.-PALWAL. - 121106

ISMAILABAD

758. KARNAL MOTORS PVT LTD (--01), KHEWAT NO. 928, KHASRA NO. 2760(5-14), 2761(800), VILLAGE - ISMAILABAD, TEHSIL - PEHOW, DIST. -KURUKSHETRA, HARYANA. - 136129
PH :7082007138.

ISRANA

759. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (--01), MUSHTIL NO.-119, NEAR MANDI MOD, MAIN GOHANA ROAD, ISRANA - 132107
PH :9053400417.

JASANA

760. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (--01), MUSTKIL NO -06, KILL NO -22 VILLAGE, JASANA FARIDABAD HARYANA-121101 - 121101

JHAJJAR

761. COMPETENT AUTOMOBILES CO LTD (--01), PLOT NO 5, NEAR GOVT POLYTECHNIC COLLEGE, JHAJJAR-BAHADURGARH ROAD, JHAJJAR, HARYANA - 124101
PH :9999493040.

JIND

762. EAKANSH MOTORS PVT LTD (--01), ROHTAK ROAD, NATIONAL HIGHWAY-71, OPP. GRAIN MARKET, JIND, HARYANA - 126102
PH :7876008184.

JULANA

763. EAKANSH MOTORS PVT LTD (--01), PLOT NO. 52,53, KHEVAT NO. 253/3 ,ROHTAK ROAD, JULANA, DISTRICT JIND, HARYANA.
JIND ROHTAK MAIN ROAD, OPP. NEW BUS STAND, JULANA, DIST. JIND, HARYANA - 126101
PH :8816802111.

KAITHAL

764. EAKANSH MOTORS PVT LTD (--01), AMBALA ROAD, NH-65, KAITHAL - 136027
PH :9671788801.

KALANAUR

765. JAGMOHAN AUTOMOTIVES PVT LTD (--01), BHIWANI ROAD, KALANAUR, DISTRICT ROHTAK. - 124113
PH :9812000425.
766. PANDIT AUTOMOBILES PVT LTD (--01), VPO. KALANAUR, DISTRICT- YAMUNANAGAR, HARYANA - 124113
PH :9053055550.

KALAYAT

767. EAKANSH MOTORS PVT LTD (--01), NEAR BUS STAND, KAITHAL-KALAYAT ROAD, VILLLAGE-KALAYAT, DISTT. KAITHAL (HARYANA) - 136117
PH :9671788801.

KALKA

768. MODERN AUTOMOBILES (--01), ADJOINING INDIAN OIL PETROL PUMP, RAM NAGAR, NH-22, KALKA, DISTRICT – PANCHKULA, HARYANA - 133302
PH :9896217059.

KARNAL

769. KARNAL MOTORS PVT LTD (8906-89-01), 71/3 MILESTONE ,G.T.ROAD, KARNAL - 132001
PH :8222022399.
770. KARNAL MOTORS PVT LTD (8906-89-02), KHEWAT NO. 59, JHANJHARI GT ROAD, KARNAL - 132001
PH :8222022430.
771. MODERN AUTOMOBILES (8907-89-01), NEAR NAMASTE CHOWK, OLD G.T.ROAD, KARNAL - 132001
PH :7419900042.
772. MODERN AUTOMOBILES (8907-89-03), 117-118 KM MILE STONE NH1, NEAR VILLAGE KAMBOPURA, GT ROAD, KARNAL - 132001
PH :7419900042.

KATHURA

773. JAGMOHAN AUTOMOTIVES PVT LTD (--01), GOHANA MAHAM ROAD, KATHURA, GOHANA. - 131301
PH :8685005400.

KHARKHODA

774. JAGMOHAN AUTOMOTIVES PVT LTD (--01), NEAR KHANDA BYPASS CHOWK, SONIPAT ROAD, KHARKHODA, DISTRICT: SONIPAT, HARYANA - 131402
PH :8685005593.

KOSLI

775. DINCO 4 WHEELS LLP (AUTO VIBES) (--01), OPPOSITE RAJIV GANDHI STADIUM, TEHSIL ROAD KOSLI, DISTRICT – REWARI, HARYANA . - 123302
PH :7082100202.

KUND

776. DINCO 4 WHEELS LLP (AUTO VIBES) (--01), NEAR KUND BARRIER, OPP. SBI BANK, NARNAUL ROAD, VILLAGE - MANETHI, KUND, DISTRICT - REWARI, HARYANA . - 123102

KUNDLI

777. JAGMOHAN AUTOMOTIVES PVT LTD (--01), 34 E, SECTOR 57, PHASE 4 , KUNDLI INDUSTRIAL AREA, KUNDLI - 131001
PH :8059900518.

KURUKSHETRA

778. KARNAL MOTORS PVT LTD (8906--03), PLOT NO. 156, INDUSTRIAL AREA, SECTOR-2, KURUKSHETRA - 136118
PH :8222022371.

LADWA

779. KARNAL MOTORS PVT LTD (--01), KHEWAT NO.197, KHATONI NO.233, KHASRA NO.27/17/1,27/14, LADWA-KURUKSHETRA ROAD, VILLAGE - LADWA, TEHSIL THANESAR, DISTT. KURUKSHETRA - 136132
PH :7082007182.

LOHARU

780. JAGMOHAN AUTOMOTIVES PVT LTD (--01), BHIWANI ROAD , OPP. ITI, CITY: LOHARU - 127201
PH :9812000425.

MADLAUDA

781. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (--01), VILLAGE-BHALSI, ASSANDH-PANIPAT ROAD, MADLAUDA, PIN-132113, HARYANA - 132113
PH :9053400524.

MAHENDARGARH

782. PLATINUM MOTOCORP LLP (--01), KHEWAT NO. 187, KILLA NO. 51/8, REVENUE ESTATE OF VILLAGE REWASA, DADRI ROAD, TEHSIL & DISTRICT, MAHINDERGARH, PIN-123029, HARYANA - 123029

MANDI DABWALI

783. SHAKTI MOTORS PVT LTD (--02), SANGARIA ROAD, DABWALI, DISTT.-SIRSA - 125104
PH :8222900209.

MANESAR

784. PLATINUM MOTOCORP LLP (--01), PLOT NO.282, SEC 6, IMT MANESAR DISTT. GURGAON. - 122052

MEHAM

785. JAGMOHAN AUTOMOTIVES PVT LTD (--08), MAIN MARKET, NATIONAL HIGHWAY-10, ROHTAK-HISSAR ROAD, MEHAM, DISTRICT-ROHTAK - 124101
PH :8059900592.

MOHNA

786. TCS AUTOWORLD (A UNIT OF TCS & ASSOCIATES PVT LTD) (--01), YAMUNA PUL ROAD , NEAR GYATRI PETROL PUMP , VPO-MOHANA,TEHSIL BALLABGARH , DISTT FARIDABAD - 121004

MUSTAFABAD

787. PANDIT AUTOMOBILES PVT LTD (--01), KHATUNI NO. 205/287, KHASRA NO. 39:17/2, VILLAGE - MANSURPUR, THANA - CHAPPER, MUSTAFABAD, DIST.-YAMUNA NAGAR, STATE - HARYANA. - 133103
PH :9992113854.

NARAINGARH

788. EAKANSH WHEELS PVT LTD (1802--02), NH-72, AMBALA-KALA AMB ROAD, NEAR ADARSH FILLING STATION, NARAINGARH - 134203
PH :9991143700.

NARNAUL

789. PLATINUM MOTOCORP LLP (--01), KAILASH NAGAR, REWARI ROAD, NARNAUL, HARYANA,

NARNAUND

790. JAGMOHAN AUTOMOTIVES PVT LTD (--01), KHASRA NO. 234, HANSI ROAD, NARNAUND, DISTT. HISAR, HARYANA. - 125039
PH :9812000471.

NARWANA

791. EAKANSH MOTORS PVT LTD (--03), OPP. HAFED GODOWN-2, NH-65 AKHERAM NAGAR, NARWANA - 126116
PH :9813583100.

NUH

792. PASCO AUTOMOBILES (--01), MAIN DELHI - ALWAR ROAD, NEAR SHAHEED PARK, NH -248A, NUH, DISTRICT - MEWAT, HARYANA. - 122107
PH :9810014947.

PALWAL

793. ROHAN MOTORS LTD (--01), SANWAL COLONY, MAIN MATHURA ROAD, NEAR SDM COURT, PALWAL - 121101

PANCHKULA

794. MODERN AUTOMOBILES (--03), PLOT NO. 318, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113
795. AUTOPACE NETWORK PVT LTD (--03), PLOT NO. 5, INDUSTRIAL AREA, PHASE-1, PANCHKULA, HARYANA. - 134113
796. AUTO VOGUE PRIVATE LIMITED (--01), PLOT NO- 388, INDUSTRIAL AREA PHASE-1, PANCHKULA, HARYANA. - 134113
PH :8558813181.

PANIPAT

797. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (--01), KHASRA NO. 43/6, 44/9 & 10, VILLAGE – JATTIPUR, NEAR HOTEL SWARNA MAHAL, NH-1, PANIPAT, HARYANA.
PH :9053400515.

PATAUDI

798. PLATINUM MOTOCORP LLP (--01), HALI MANDI ROAD, OPPOSITE SHIV MURTI, PATAUDI, DIST. - GURGAON - 122503

PEHOWA

799. KARNAL MOTORS PVT LTD (--01), NEAR DAV COLLEGE, AMBALA ROAD, PEHOWA. 136128 - 136128
PH :8222022464.

PUNDRI

800. EAKANSH MOTORS PVT LTD (--01), KAITHAL-KARNAL ROAD, OPP. ESSAR PETROL PUMP, PUNDRI, KAITHAL, HARYANA.
KILA NO- 3/10, KHEWAT 2147 OPP. HARCHARAN FILLING STATION, KAITHAL ROAD, PUNDRI DIST. KAITHAL, HARYANA - 136026
PH :9671788801.

PUNHANA

801. PASCO AUTOMOBILES (--01), KILA NO. 4/2, PUNHANA, DIST.-MEWAT, HARYANA - 122508

RADAUR

802. PANDIT AUTOMOBILES PVT LTD (--02), OPP. JMIT ENGG. COLLEGE, NEAR BUS STAND, RADAUR, DISTRICT-RADAUR, HARYANA - 135001
PH :9992113854.

RAIPUR RANI

803. AUTO VOGUE PRIVATE LIMITED (--01), BARWALA ROAD, RAIPUR RANI, DISTRICT PANCHKULA, HARYANA. PIN CODE – 134204. - 134204

RAJOUND

804. EAKANSH MOTORS PVT LTD (--01), MITTAL KHAL BHANDAR, RAJOUND, DISTT KAITHAL
PH :9671788801.

REWARI

805. DINCO 4 WHEELS LLP (AUTO VIBES) (--01), BAWAL ROAD, NEAR BYE PASS ROAD, REWARI (HARYANA)) - 123401

ROHTAK

806. JAGMOHAN AUTOMOTIVES PVT LTD (--01), SONEPAT ROAD, ROHTAK - 124001
PH :9467465035.
807. JAGMOHAN AUTOMOTIVES PVT LTD (--09), SWAN GARDEN, DELHI ROAD, ROHTAK - 124001
PH :9812000357.

808. UNIQUE AUTOLEAD LLP (--01), KHASRA NO-3597 JIND ROAD, JIND CHOWK, ROHTAK, HARYANA - 124001
PH :9812259000.

SAFIDON

809. EAKANSH MOTORS PVT LTD (--05), NEAR BRSK SCHOOL , OPPOSITE RELIANCE PETROL PUMP, PANIPAT ROAD, SAFFIDON, DISTRICT-JIND - 126112
PH :9416616603.

SALHAWAS

810. COMPETENT AUTOMOBILES CO LTD (--01), JHAJJAR KOLSI ROAD, NEAR BDPO OFFICE, SALHAWAS, DISTT JHAJJAR HARYANA - 123106 - 123106

SAMALKHA

811. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (--01), GT ROAD, SAMALKHA, PANIPAT, HARYANA PIN- 132101 - 132101
PH :9053700003.

SAMPLA

812. JAGMOHAN AUTOMOTIVES PVT LTD (--01), NEAR VASUNDRA CAFÉ, DELHI ROHTAK ROAD, SAMPLA, DISTT. ROHTAK - 124501
PH :9812000351.

SATNALI

813. PLATINUM MOTOCORP LLP (--01), KHEVAT NO.605, KHATONI NO-1134 KILLA NO.167, VILL: SATNALI, NEAR BHARAT PETROL PUMP MAHENDRAGARH ROAD,
HARYANA -123024 (LOCATION: MAHENDRAGARH) - 123024
PH :9910100341.

SHAHABAD

814. KARNAL MOTORS PVT LTD (--01), KHEWAT NO. 460, KATONI NO. 486, KHASRA NO. 170, TEHSIL - SHAHABAD, DIST.- KURUKSHETRA. - 136135
PH :8222022338.

SIRSA

815. SHAKTI MOTORS PVT LTD (--01), DABBALI RD., SIRSA, HARYANA - 125055
PH :8222900201.

SIWANI

816. SARAOGI AUTOMOBILES PVT LTD (--01), OPP.GOVT HOSPITAL ,SIWANI BYPASS CHOWK,HISSAR ROAD ,SIWANI,DIST.BHIWANI -127046 HARYANA - 127046
PH :8607777149.

SOHNA

817. PASCO AUTOMOBILES (9506--03), 56, KILLA NO. 13 (4-10), 18(4-6), 19 (8-0), 22 (8-0), 23 (4-2), VILLAGE - ALIPUR, SOHNA GURUGRAM ROAD, TEHSIL - SOHNA , DISTRICT -GURUGRAM. - 122103

818. COMPETENT AUTOMOBILES CO LTD (--03), DAULA-197, LOHATKI VILLAGE, KHASRA NO.174, SOHNA ROAD, GURGAON, PIN-122103, HARYANA - 122103

SONEPAT

819. JAGMOHAN AUTOMOTIVES PVT LTD (--01), BAHALGARH-DELHI ROAD, OPP. POWER HOUSE, SONIPAT - 131001
PH :9992200372.

820. JAGMOHAN AUTOMOTIVES PVT LTD (--02), GAYATRI GARDEN, MURTHAL ROAD, SONEPAT (HARYANA) - 131001
PH :8685005686.

821. JAGMOHAN AUTOMOTIVES PVT LTD (--03), O-11 INDUSTRIAL AREA, SONIPAT, HARYANA. - 131001
PH :9812615000.

TAURU

822. PASCO AUTOMOBILES (--01), KILA NO. 34/1/2, REWARI ROAD, TAURU, DIST.-MEWAT, HARYANA. - 122015

TOHANA

823. SHAKTI MOTORS PVT LTD (--01), NEAR GREEN VALLEY PUBLIC SCHOOL, RATIA ROAD, TOHANA - 125120
PH :8572800991.

TOSHAM

824. JAGMOHAN AUTOMOTIVES PVT LTD (--01), BHIWANI ROAD, TEH. TOSHAM, DIST. BHIWANI. - 127040
PH :8059900566.

YAMUNANAGAR

825. PANDIT AUTOMOBILES PVT LTD (--01), GOVINDPURI ROAD, JAGADRI, YAMUNANAGAR - 135001
PH :9812455896.

826. PANDIT AUTOMOBILES PVT LTD (--03), PLOT NO.E-8, INDUSTRIAL AREA, ITI ROAD, YAMUNA NAGAR (HARYANA) - 135001
PH :9812455896.

## HIMACHAL PRADESH

ALAMPUR

827. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (--01), KHASRA NO. 1606/1582, STATE HIGHWAY PALAMPUR-SUJANPUR AT JANGAL, VILLAGE - ALAMPUR, DIST.-KANGRA. - 176082

BADDI

828. GOYAL MOTORS PVT LTD (--04), KHATA/KHATAUNI NO. 26/26, KHASRA NO. 93/56/32 AND 94/56/32, KITAS 2, REVENUE MAUZA – CHAK JANGI, HADBAST NO. 203, TEHSIL – BADDI, DISTRICT – SOLAN, HIMACHAL PRADESH. - 173205
PH :9418076972.

BAIJNATH

829. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (--01), TASHI JONG, PAPROLA-BAIJNATH, NH-20, KANGRA -MANDI ROAD, TEHSIL BAIJNATH, DISTT. KANGRA - 176115

BANGANA

830. COMPETENT AUTOMOBILES CO LTD (--01), VILLAGE BHALET, POST OFFICE DOHGI, TEHSIL BANGANA, DISTT UNA, HIMACHAL PRADESH - 174307

BANIKHET

831. PATHANKOT VEHICLEADES PVT LTD (--01), KHASRA NO.709, KHATA KHATOONI NO.23, BANIKHET, THE-DALHOUSIE, DISTT. CHAMBA - 176303

BILASPUR-HP

832. COMPETENT AUTOMOBILES CO LTD (--01), KHEWAT NO. 8/8 KHATAUNI, KHASRA NO. 137/30, 31, MAUZA KOTHI, PARGANA 9, P. O. – CHANDPUR, TEHSIL – SADAR, DIST.- BILASPUR, HIMACHAL PRADESH. - 174001

CHAMBA

833. PATHANKOT VEHICLEADES PVT LTD (--01), MOHALLA SULTANPUR, BALU BRIDGE, CHAMBA - 176310

834. PATHANKOT VEHICLEADES PVT LTD (--02), KHASRA NO. 88/96,1 & KHASRA NO.628/276, VILLAGE & PO SAROO, THE. & DISTT. CHAMBA, HIMACHAL PRADESH. - 176310

CHOWARI

835. PATHANKOT VEHICLEADES PVT LTD (--01), KHATA KHATNI NO. 24/32 MIN, KHASRA NO. 90, VILLAGE - LAHRU, P.O. - PARCHHORE, TEHSIL - BHATTIYAT, DIST.-CHAMBA, HAMACHAL PRADESH. - 144416
PH :8894569632.

DARLAGHAT

836. GOYAL MOTORS PVT LTD (--01), VILL SYAR, , PO DARLAGHAT,TEH ARKI, HIMACHAL PRADESH - 171102

DEHRA

837. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (--02), VILLAGE & P.O. SUNHET, TEHSIL DEHRA, DIST. KANGRA - 177101
PH :9817013058.

GAGGAL

838. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (--01), NATIONAL HIGHWAY -20 , ZAMANABAD ROAD, ICHHI, GAGGAL, DISTT. KANGRA , HIMACHAL PRADESH - 176209
PH :9418988832.

GAGRET

839. COMPETENT AUTOMOBILES CO LTD (--01), HOSHIARPUR ROAD, OPP. HPSEB OFFICE, GAGRET, DISTRICT UNA, HIMACHAL PRADESH - 177021

GHUMARWIN

840. COMPETENT AUTOMOBILES CO LTD (--01), WARD NO 6, KHASRO NO 1619KHEWAT NO 129/148, ABDHANIGHAT VILLAGE - 174021

HAMIRPUR

841. COMPETENT AUTOMOBILES CO LTD (--01), VILLAGE TIKKAR, P.O DIDWIN TEHSIL & DISTT, HAMIRPUR - 177401
PH :9805510276.

INDORA

842. PATHANKOT VEHICLEADES PVT LTD (--01), VILLAGE CHANDOR, PO & TEHSIL INDORA, DISTT. KANGRA, PIN-176401, HIMACHAL PRADESH - 176401
PH :9418008627.

JAISINGHPUR

843. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (--01), HARSI PATTAN ROAD, OPP. SABJI MANDI, TEHSIL – JAISINGHPUR, DIST. – KANGRA, HIMACHAL PRADESH. - 176095

JASWAN

844. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (--01), JASWAN, KANGRA, HIMACHAL PRADESH. - 221502

JAWALI

845. PATHANKOT VEHICLEADES PVT LTD (--01), VILLAGE - TIUKARI, NEAR MAHAVIR HOSPITAL LUBH ROAD, TEHSIL - JAWALI, DIST.-KANGRA, HAMACHAL PRADESH. - 176023
PH :9418195333.

JHANDUTTA

846. COMPETENT AUTOMOBILES CO LTD (--01), BEHRAN,TEHSIL JHANDUTTA, DISTRICT BILASPUR H.P. - 174031

JOGINDER NAGAR

847. COMPETENT AUTOMOBILES CO LTD (--01), VILL. DHELU PO DOHAG, JOGINDER NAGAR (H.P.) - 175015
PH :9805005754.

JWALAMUKHI

848. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (--01), KHASRA 880/613, MAUJA BOHAN, TEHSIL JWALAMUKHI, DISTRICT KANGRA - 176031
PH :9418488999.

KULLU

849. COMPETENT AUTOMOBILES CO LTD (--01), PLOT 3&4, INDUSTRIAL AREA, SHAMSHI, KULLU (HP) - 175126
PH :7018035136.

KUNIHAR

850. GOYAL MOTORS PVT LTD (--01), KHATA NO. – 77, VILLAGE KOTHI, P.O. KUNNIHAR, TEHSHIL – ARKI, DISTRICT – SOLAN, HIMACHAL PRADESH - 173207
PH :9418312472.

MANALI

851. COMPETENT AUTOMOBILES CO LTD (--01), VILL. CHOURI VIHAR (AALU GROUND), P.O. & THESIL- MANALI, DIST. KULLU, (H.P.) - 175131
PH :9418387465.

MANDI

852. COMPETENT AUTOMOBILES CO LTD (--01), GUTKAR INDUSTRIAL AREA, DELHI MANDI ROAD, N.H.21 GUTKAR, MANDI - 124501

MATIANA

853. GOYAL MOTORS PVT LTD (---), VPO MATIANA ( NEAR DEV BHOOMI APPLE COLD STORAGE),THEOG ,SHIMLA, HIMACHAL PRADESH-171212. - 171212

NADAUN

854. COMPETENT AUTOMOBILES CO LTD (--01), VILLAGE JALAN, KHASRA NO.183, PO & TEHSIL NADAUN, DISTT. HAMIRPUR, HIMACHAL PRADESH - 177041
PH :9805737436.

NAGROTA

855. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (--01), MALAN, NAGROTA - BAGWAN, KANGRA, H.P. - 176047
PH :7018268819.

856. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (--06), JHIKLI AMBARI, MOUZA AMBARI, MALAN, NAGROTA BAGWAN, TEHSIL & DISTT. KANGRA, HIMACHAL PRADESH - 176047
PH :7018268819.

NAGROTA SURIAN

857. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (--01), KHEWAT NO. 115, KHATAUNI NO. 127, KHASRA NO. 2037, MAHAL BASSA, SUB TEHSIL – NAGROTA SURIAN, DISTRICT – KANGRA. - 176027
PH :9418488999.

NALAGARH

858. GOYAL MOTORS PVT LTD (--01), NEAR HP PETROL PUMP, VILLAGE PEERSTHAN, P.O & TEHSIL NALAGARH, DISTT. SOLAN (H.P.) - 174101
PH :9418704572.

NERWA

859. GOYAL MOTORS PVT LTD (--01), KHASRA NO. 482, VILLAGE – KEDI, TEHSIL – NERWA, DISTRICT – SHIMLA, HIMACHAL PRADESH. - 171210
PH :9418663572.

NURPUR

860. PATHANKOT VEHICLEADES PVT LTD (--01), VILLAGE JACHH, PO JASSUR, TEHSIL NURPUR, DISTT. KANGRA - 176201
861. PATHANKOT VEHICLEADES PVT LTD (--02), VILL- NANGLAHAR, PO-RAJA KA BAG, TEH - NURPUR, KANGRA - 176201

PALAMPUR

862. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (--01), NEAR IOCL PUMP, KANGRA MANDI ROAD, PALAMPUR, DISTT. KANGRA, HIMACHAL PRADESH. - 176061

PAONTA SAHIB

863. GOYAL MOTORS PVT LTD (--02), OPP BIBIJEET KAUR SENIOR SECONDARY SCHOOL, SHAMSHERPUR , NH-72, PAONTA SAHIB - 173025
PH :9459210872.

RAJGARH

864. GOYAL MOTORS PVT LTD (--01), KHATA NO. 517/505, 478/3, KHASRA NO. – 38/98 VILLAGE NERI RATAULI, P.O. RAJGARH TEHSIL – RAJGARH, DISTRICT – SIRMAUR , HIMACHAL PRADESH - 173101
PH :9418312472.

RAMPUR

865. GOYAL MOTORS PVT LTD (--01), KHASRA NO. 824/825, MINN NO. 155/396, 163/411, NAGLI, ROHRU ROAD, RAMPUR, TEHSIL – RAMPUR, DISTRICT – SHIMLA. - 172001
PH :9459296572.

ROHRU

866. GOYAL MOTORS PVT LTD (--01), CHARGAON SHIMLA ROAD, ROHRU, DISTRICT -SHIMLA - 171207
PH :9418016072.

SALOONI

867. PATHANKOT VEHICLEADES PVT LTD (--01), KHASRA NO. 299/174, VILLAGE. MANJEER, TEHSIL-SALOONI, DISTT. CHAMBA, PIN-176320, HIMACHAL PRADESH - 176320
PH :9418059252.

SARAHAN

868. GOYAL MOTORS PVT LTD (--01), KHATA KHATUNI NO. 686/623/591/451 VILLAGE TIKKAR (260), TEHSIL PACHAD, DISTT SIRMAUR (HP) - 173024

SHAHPUR

869. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (--01), VILLAGE MANJHGRAN, P.O. DRAMMAN, TEHSIL SHAHPUR, DISTT. KANGRA, HIMACHAL PRADESH - 176206
PH :9459900241.

SHIMLA

870. GOYAL MOTORS PVT LTD (--01), TARADEVI, SHIMLA,(H.P.) - 171010
PH :9418663572.

SOLAN

871. GOYAL MOTORS PVT LTD (--01), DEON GHAT, SOLAN - 173211
PH :9418138772.

UNA

872. COMPETENT AUTOMOBILES CO LTD (--01), VILLAGE RAINSARY,P.O JHALERA,TEHSIL & DISTRICT:UNA - 174303
PH :9805737436.

## JAMMU AND KASHMIR

AKHNOOR

873. JAMMU MOTORS PRIVATE LIMITED (--01), MAIN ROAD DASKAL, TEHSIL – AKHNOOR, DISTRICT - JAMMU - 181201
PH :9419118393.
874. JAMMU MOTORS. PVT.LTD. (--02), MAIN ROAD DASKAL NEAR HANUMAN CHOWK, NEAR HANUMAN CHOWK AKHNOOR - 181201

BANDIPORA

875. JAMKASH VEHICLEADES PVT LTD (1205--04), AJAR BANDIPORA , J&K - 193502
PH :9149726427.

BARAMULLA

876. JAMKASH VEHICLEADES PVT LTD (--01), VILLAGE SANGRAMA,WAGAROO, BARAMULA - 193101
PH :7889612218.

BHADRAWAH

877. J&K VEHICLEADES PVT LTD (--01), KHASRA NO.2863, LOWER SUNGLI UNIVERSITY ROAD, BHADERWAH, DISTT. DODA, J&K - 182222

BHASOLI

878. JAMKASH VEHICLEADES PVT LTD (--01), ZERO MORTH, BASHOLI, DISTT. KATHUA, BASHOLI, PIN-184201, JAMMU & KASHMIR - 184201
PH :9018847230.

BUDGAM

879. HIGHLAND AUTOMOBILES PVT LTD (--04), KHASRA NO. 208 MIN, KHEWAT NO. 9 AND KHATTA NO. 55, MOUZA - PALLAR, TEHSIL AND DIST.-BUDGAM. - 191111
PH :9419019898.

CHOWKI CHOURA

880. JAMMU MOTORS PRIVATE LIMITED (--01), KHASRA NO. 37 MIN, ADJACENT TO J&K BANK, JAMMU POONCH HIGHWAY, CHOWKI CHOURA, JAMMU & KASHMIR - 185154
PH :9596975060.

DAYALACHAK

881. JAMKASH VEHICLEADES PVT LTD (--01), KHASRA NO. 183, KHEWAT NO.14, KHATANO-74, VILLAGE CHAK SAKTA, DAYALACHAK,TEHSIL & DISTT. KATHUA , JAMMU & KASHMIR - 184121
PH :88492849170.

DODA

882. J&K VEHICLEADES PVT LTD (--01), MINTO CAR CARE, AKHYARABAD, MAIN ROAD, DODA CITY, DODA (J&K) - 182202
PH :9419796821.

GANDERBAL

883. JAMKASH VEHICLEADES PVT LTD (--01), MALSHAIE BAGH, GANDERBAL (J&K) - 191201
PH :9419000828.

HANDWARA

884. JAMKASH VEHICLEADES PVT LTD (--01), KHEWAT NO-31, KHATTA NO-298, SURVEY NO-3764/1816, MOZA BRARIPORA, TEH-HANDWARA, DIST- KUPWARA, J&K - 193221

HANJWARA PATTAN

885. JAMKASH VEHICLEADES PVT LTD (--01), NEAR LIGHT HOUSE SCHOOL, HANJIWERA BRIDGE, HANJIWARA PATTAN - 193121

JAMMU

886. JAMKASH VEHICLEADES PVT LTD (3306-33-01), NH-1A, BYE PASS, OPP CHANNI HIMMAT, JAMMU - 180015
PH :6006801639.
887. JAMKASH VEHICLEADES PVT LTD (3306-33-02), NEAR GENERAL BUS STAND, OPP. PHE OFFICE, B.C. ROAD, JAMMU - 180001
PH :9419224014.
888. JAMKASH VEHICLEADES PVT LTD (3306-33-04), SUNJWAN, DISTT. JAMMU - 180011
PH :7006018600.
889. PEAKS AUTO PVT LTD (3312-33-01), GANGYAL INDUSTRIAL AREA, BEHIND COCA COLA FACTORY, JAMMU - 180010
PH :9697001125.
890. JAMMU MOTORS PRIVATE LIMITED (3308-33-01), 6, AKHNOOR ROAD, JAMMU. - 180001
PH :9419118393.
891. JAMMU MOTORS PRIVATE LIMITED (3308-33-02), PLOT NO.2, RAJPURA CHUNGI OPP AG OFFICE, AKHNOOR ROAD, JAMMU - 180002
PH :9419118393.
892. PEAKS AUTO PVT LTD (3312--02), KHASRA NO.425 & 426, KHATA NO.425 & 426, TOPE SHRKHANIAN (BACKSIDE OF BEST PRICE), AKNOOR ROAD, JAMMU. - 180001
PH :9697001125.
893. JAMKASH VEHICLEADES PVT LTD (--07), KHEWAT NO. 25, KHATA NO. 355, KHASRA NO. 544 MIN PALOURA ROAD, JANIPUR, JAMMU. - 180007
PH :9419191502.
894. NSF VEHICLES (UNIT OF NEW STYLE FABRICATORS PVT LTD) (3314-33-01), INDUSTRIAL ESTATE, ASHOK NAGAR (ADJOINING BAJAJ 2WHEELER), NEAR SATWARI, JAMMU - 180003
895. NSF VEHICLES (UNIT OF NEW STYLE FABRICATORS PVT LTD) (--02), RANIBAGH, NEAR JAMMU AIRPORT, JAMMU., NEAR JAMMU AIRPORT, JAMMU. - 180001

KATHUA

896. JAMMU MOTORS PRIVATE LIMITED (--01), WARD NO.13, CHAK PARTAP SINGH HATLI MORH, NH1-A, KATHUA TEHSIL KATHUA - 184101
PH :9419118393.

KATRA

897. J&K VEHICLEADES PVT LTD (--01), VILLAGE: KOTLI BAJALAN, TEHSIL - KATRA, DISTRICT - REASI, JAMMU AND KASHMIR. - 182301

KRALPORA

898. JAMKASH VEHICLEADES PVT LTD (--01), SHULOORA ROAD, KARALPORA, DISTRICT - KUPWARA, JAMMU & KASHMIR. - 193224

KUPWARA

899. JAMKASH VEHICLEADES PVT LTD (1205--03), JAMKASH VEHICLEADES, NEAR GM FILLING STATION, DC OFFICE ROAD KUPWARA - 193223
PH :9622499902.

MAGAM

900. JAMKASH VEHICLEADES PVT LTD (--01), KHASRA NO. 34, MOUZA - CHICHILORA, MAGAM, GULMARG ROAD, TEHSIL - KWARHAMA, DIST.-BARAMULLA, JAMMU & KASHMIR. - 193401
PH :8825016046.

MAHANPUR

901. JAMMU MOTORS PRIVATE LIMITED (--01), MAHANPUR, DISTRICT KATHUA, TEHSIL MAHANPUR - JAMMU & KASHMIR. - 184202
PH :9596975060.

MANJAKOTE

902. JAMKASH VEHICLEADES PVT LTD (--01), NEAR PHC ROAD MANJAKOTE, TEHSIL MANJAKOTE, DISTRICT RAJOURI, J&K - 185131
PH :7006014395.

MARH

903. JAMKASH VEHICLEADES PVT LTD (--01), KHASRA NO. 269, LOWER MUTHI DHARMAL, DIST.-JAMMU, STATE - JAMMU & KASHMIR. - 181205
PH :7006898474.

NOWSHERA

904. JAMMU MOTORS PRIVATE LIMITED (--01), TEHSIL - NOWSHERA, DISTRICT RAJOURI, JAMMU & KASHMIR - PIN CODE – 185152 - 185152

PANCHARI

905. J&K VEHICLEADES PVT LTD (--01), VILLAGE MIR, TEHSIL PANCHARI, DISTT. UDHAMPUR J&K - 182125

PHINTER

906. JAMKASH VEHICLEADES PVT LTD (--01), KHASRA NO.2293/405 AND KHEWAT NO.81/98, GURHA KALYAL, PHINTER, TEHSIL RAMKOT, DISTT. KATHUA, J&K. - 184203

POONCH

907. JAMKASH VEHICLEADES PVT LTD (--01), VILLAGE KUNUYIAN, TEHSIL HAVELI POONCH, JAMMU & KASHMIR. - 185121
PH :7006014395.

PULWAMA

908. PEAKS AUTO PVT LTD (1204--03), MUGHAL ROAD, GUNGOO, PULWAMA - 192301
PH :9519275151.

RAJOURI

909. JAMKASH VEHICLEADES PVT LTD (3306--06), KALAKOTE ROAD, VILLAGE BADOL, RAJOURI - 185131
PH :7006014395.

REASI

910. J&K VEHICLEADES PVT LTD (--01), HOSPITAL ROAD, MADI, REASI, REASI, JAMMU & KASHMIR - 182311

RS PURA

911. JAMKASH VEHICLEADES PVT LTD (3306--03), GAGAIN MORTH, R S PURA, JAMMU, - 181102
PH :9419190370.

SHOPIAN

912. PEAKS AUTO PVT LTD (--01), AGLAR SOFANAMAN, SHOPIAN - 192303
PH :9519275151.

SIDHRA

913. JAMKASH VEHICLEADES PVT LTD (--01), KHASRA NO.80 & KHATA NO.100, VILLAGE SIDHRA, NH1A, NEAR BHARAT PETROLEUM PETROL PUMP, TEH. & DISTT. JAMMU - 180019
PH :9419134144.

SRINAGAR

914. HIGHLAND AUTOMOBILES PVT LTD (1202--01), SONWAR, SRINAGAR - 190001
PH :9419057564.
915. JAMKASH VEHICLEADES PVT LTD (1205--01), HYDERPURA BY PASS CROSSING, SRINAGAR - 190015
PH :7006037255.
916. PEAKS AUTO PVT LTD (1204-12-01), BYE PASS ROAD, NH - 1A, NEAR HOTAL SILVER STAR, SRINAGAR - 191101
PH :9519275151.
917. JAMKASH VEHICLEADES PVT LTD (1205--05), NARBAL CROSSING, NH-1A, SRINAGAR, JAMMU & KASHMIR - 190017
PH :9796700750.
918. KATHROO MOTORS PRIVATE LIMITED (1207-12-01), MIRZA KAMIL CHOWK, HAWAL SRINAGAR - 190001

SUMBAL

919. JAMKASH VEHICLEADES PVT LTD (--01), GULSHAN PORA, SRINAGAR- SUMBAL ROAD, DISTRICT BANDIPORA, J&K- 193501 - 193501

SURANKOTE

920. PEAKS AUTO JAMMU PVT LTD (--01), NEAR KNIET KING FILLING STATION, BHARAT PETROLEUM, POONCH MUGHAL ROAD, SURANKOTE, DISTT: POONCH - 185101
PH :9697001125.

THANA MANDI

921. JAMKASH VEHICLEADES PVT LTD (--01), HASPLOTE(CHRUNG), TEHSIL THANAMANDI, DISTRICT RAJOURI -185212 - 185212
PH :9419267607.

UDHAMPUR

922. J&K VEHICLEADES PVT LTD (--01), NATIONAL HIGHWAY 1A, NEAR DAK BANGLOW, UDHAMPUR - 182101
PH :7006881028.

URI (CHAAL BONIYAAR)

923. JAMKASH VEHICLEADES PVT LTD (--01), KHASRA NO.346/118, KEWAT NO.15, KHATA NO.30, MOUZ-CHALAL (URI), TEHSIL-BONIYAR, DISTT. BARAMULLA - 193123
PH :9419074012.

VIJAYPUR

924. JAMMU MOTORS PRIVATE LIMITED (--01), JAMMU PATHANKOT HIGHWAY, VIJAYPUR (SAMBA), J&K - 184120
PH :9596975060.

## JHARKHAND

BAGODAR

925. RELIABLE INDUSTRIES (--01), SONTURPI, GT ROAD, GAIDA, BAGODAR, GIRIDIH, JHARKHAND. - 825322

BALIAPUR

926. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (--01), WARD NO 53, HOLDING NO - SAF3797, KANDRA SINDRI, BALIAPUR. - 828123
PH :7980074787.

BOKARO

927. HINDUSTAN AUTO AGENCY (--02), R1, CITY CENTRE, SECTOR-4, BOKARO STEEL CITY, BOKARO - 827004
928. HINDUSTAN AUTO AGENCY (--03), M2, SECTOR-4, CITRY CENTRE, BOKARO STEEL CITY (JHARKHAND) - 827004

BUNDU

929. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (--01), NH - 33 NEAR PPK COLLAGE , PS - BUNDU, RANCHI, JHARKHAND - 835204

CHAIBASA

930. PEBCO MOTORS LIMITED (--01), KOLHAN TIMBER MERCHANT, NEAR RAILWAY CROSSING, TATA ROAD, CHAIBASA, DISTRICT – WEST SINGHDHUM, JHARKHAND. - 833201

CHANDANKIYARI

931. HINDUSTAN AUTO AGENCY (--01), KHATA NO.119,PLOT NO.4055 AND 4056,, MOUZA BARKAMA,MAIN ROAD,CHANDANKIYARI, - 828134

CHANDWA

932. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (--01), HILLTOP MOTORS, MAIN ROAD, CHANDWA, PO AND PS, CHANDWA – 829203, DIST – LATEHAR, JHARKHAND - 829203
PH :7061157502.

CHIRKUNDA

933. RELIABLE INDUSTRIES (--01), PLOT NO. 109-110, KHAITAN NO. 12, MOUZA NO. 251, P.S. – CHIRKUNDA, DISTRICT – DHANBAD, JHARKHAND. - 828202

DALTONGANJ

934. PREMSONS MOTOR UDYOG PVT LTD (5103--02), KACEHRI ROAD, DALTONGANJ, PALAMU - 822101
PH :9835507004.

DEOGHAR

935. RELIABLE INDUSTRIES (5202--03), SHAHEED ASHRAM ROAD, JHAUNSAGARHI, DEOGHAR, - 814112
936. RELIABLE INDUSTRIES (--01), MOUZA - CHAKRIPAHARI, NO. 587, WARD NO. 36, DEOGHAR, JHARKHAND. - 814114

DHANBAD

937. RELIABLE INDUSTRIES (5202--01), KATRAS ROAD, DHANBAD, JHARKHAND. - 826001
938. RELIABLE INDUSTRIES (5202--02), BEHIND PRABHAT KHABAR, AT: KOLAKUSMA, P.O K.G. ASHRAM, SARAIDHELA , DHANBAD - 828127
939. RELIABLE INDUSTRIES (5202-52-06), SUGIADIH, HIRAK ROAD, SARAIDHELA, DHANBAD, JHARKHAND. - 828127
PH :9334094940.
940. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (--01), NH-2, GT ROAD, SAHARJORI, BARWADA, DHANBAD. - 828109
941. RELIABLE INDUSTRIES (5202--09), TILAKRAIDIH, K G ASHRAM, NH-32, GOVINDPUR, DHANBAD, JHARKHAND - 828109
PH :9031096662.

DUMKA

942. RELIABLE INDUSTRIES (--01), OPP DUDHANI PETROL PUMP, DEOGHAR-PAKUR ROAD,DUMKA ( JHARKHAND) - 814101
PH :6205161170.
943. RELIABLE INDUSTRIES (--02), GILAN PARA, NEAR TOWER CHOWK - 814110

GARHWA

944. PREMSONS MOTOR UDYOG PVT LTD (--01), KHATA NO. 4, KHESRA NO. 108, 109, THANA NO. 342, PIPRAKALA, GARHWA, JHARKHAND. - 822114

GHATSHILA

945. PEBCO MOTORS LIMITED (--01), PLOT NO. 68, KHASRA NO.128, MAUZA PAORA, NH-33, NEAR FULL-DUNGRI CHOWK,GHATSHILA, EAST SINGHBHUM (JHARKHAND) - 832303

GIRIDIH

946. RELIABLE INDUSTRIES (5202--04), MOHANPUR, PACHAMBA ROAD, GIRIDIH. - 815301
947. RELIABLE INDUSTRIES (--08), PLOT NO. 7, HALKA NO. 12, KHATA NO. 2, THANA NO. 266, MOUZA - CHATRO, GIRIDIH, JHARKHAND. - 815301
PH :9835835101.

GODDA

948. RELIABLE INDUSTRIES (5202--05), ASANBANI CHOWK, MAIN ROAD, GODDA. - 814133
PH :6207129088.

GOMIA

949. HINDUSTAN AUTO AGENCY (--01), HAZARI, GOMIA-KATHWARA ROAD, - 829111

GUMLA

950. PREMSONS MOTOR UDYOG PVT LTD (5103--04), VANASTHALI COMPLEX PUGUCHAMPA NAGAR,NH-23,SISAI ROAD,GUMLA - 835207
PH :9835507004.

HAZARIBAGH

951. HINDUSTAN AUTO AGENCY (--01), NEAR SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. - 825301

952. HINDUSTAN AUTO AGENCY (--02), MASIPIRHI, BABHANBAY, HAZARIBAGH , JHARKHAND. - 825301

JAMSHEDPUR

953. PEBCO MOTORS LIMITED (3101-31-01), MEDIUM SECTOR, INDUSTRIAL AREA, ADITYAPUR, JAMSHEDPUR - 831001
PH :9308433388.

954. PEBCO MOTORS LIMITED (3101-31-02), 16 BALICHALA, CONTRACTORS & GODOWN AREA, SONARI, JAMSHEDPUR - 831011
PH :9308433388.

955. MOTOR WORLD (A DIVISION OF KALIMATI MOTORS PVT LTD) (3102-31-01), N.H-33, NEAR PARDIH CHOWK, MANGO, JAMSHEDPUR - 831012

JAMTARA

956. RELIABLE INDUSTRIES (--01), PLOT NO. 483, PARWAT BIHAR, DUMKA ROAD, JAMTARA, JHARKHAND. - 815351

KATRAS

957. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (--01), RAJHANS REFRACTORIES, OPP. LIC OFFICE, RAJGANJ ROAD, KATRAS, DISTT. DHANBAD, JHARKHAND-828114 - 828114
PH :8910900556.

KHUNTI

958. PREMSONS MOTOR UDYOG PVT LTD (--01), PLOT NO. 747, KHATA NO. 2, DAHUGUTU, CHAIBASA ROAD, KHUNTI, JHARKHAND. - 835210
PH :9835507004.

KODARMA

959. HINDUSTAN AUTO AGENCY (--01), AT LALMAN DIGTHU, BESIDE KRISHNA SURYA COLD STORAGE, JHUMRI TILAIYA, P.S. – TILAIYA, DISTRICT – KODERMA, JHARKHAND. - 825409
PH :6201998936.

MURI

960. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (--01), NEAR BANK OF INDIA, SILLI MAIN ROAD, MURI, PIN - 835102 - 835102
PH :7061157502.

NAGAR UNTARI

961. PREMSONS MOTOR UDYOG PVT LTD (--01), PLOT NO.-598, KHATA, N0.-134, CITY, SHRI BANSHIDHAR NAGAR, JHARKHAND 822121 - 822121

PAKUR

962. RELIABLE INDUSTRIES (--01), C\O KHOKHAN RAY,HIRANPUR,,PAKUR, MAIN ROAD,VILL.SAHERKOL,PS PAKUR REGISTRY OFFICE - 816107
PH :9031096662.

PHUSRO

963. HINDUSTAN AUTO AGENCY (--01), DUMRI BERMO JAINA ROAD, PHUSRO, JHARKHAND - 829144

RAMGARH

964. HINDUSTAN AUTO AGENCY (--01), MARAR, RANCHI ROAD (NH-33), RAMGARH - 829122
PH :9263631345.

RANCHI

965. PREMSONS MOTOR UDYOG PVT LTD (5103-51-01), 502, KANKE ROAD, RANCHI. - 834008
PH :9304807355.

966. PREMSONS MOTOR UDYOG PVT LTD (5103-51-03), 10/P, NAMKUM INDUSTRIAL ESTATE,BEHIND HIGH TENSION INSULATOR FACTORY, LOWER CHUTIA, RANCHI - 834010
PH :9262899003.

967. PREMSONS MOTOR UDYOG PVT LTD (5103-51-05), PLOT NO.31 & 134, JOHNSON MORH, TUPUDANA INDUSTRIAL AREA, TUPUDANA, RANCHI - 834003
PH :9835507004.

968. PREMSONS MOTOR UDYOG PVT LTD (5103-51-06), PLOT NO.14 (P) KOKAR INDUSTRIAL AREA KOKAR, RANCHI. - 834001
PH :9835507004.

969. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (--01), KHATA NO. 247, MOUZA - PUNDAG,P.S. - PUNDAG, RANCHI, JHARKHAND. - 834004
PH :7061157502.

970. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (--02), NEAR KATHAL MORE, ARGORA RANCHI RD, NEAR EKLABBA TOWER, DHIPATOLI, ARGORA, RANCHI - 834004
PH :7061157502.

971. PREMSONS MOTOR UDYOG PVT LTD (5103-51-07), ARGORA-KATHAL MORE ROAD, OPPOSITE OF RELIANCE FRESH - 834001

972. TULSYAN MOTORS PRIVATE LIMITED (5110-51-01), TULSYAN COMPOUND, PANDRA, RATU ROAD, RANCHI JHARKHAND - 834001

SIMDEGA

973. PREMSONS MOTOR UDYOG PVT LTD (--01), R.S PLOT NO 4674 UNDER KHATA NO 157, SITUATED AT VILLAGE – GOTRA, NEAR GOUSHALA, MAIN ROAD, SIMDEGA, JHARKHAND. - 835223
PH :9835507004.

TORPA

974. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (--01), OPPOSITE NAGAR KARYALAY, KHUNTI SIMDEGA ROAD, TORPA, KHUNTI, JHARKHAND - 835227

## KARNATAKA

ANEKAL

975. PRATHAM MOTORS PVT LTD (--04), SY#45/3, KAVAL HOSAHALLI, KASABA HOBLI, ANEKAL TALUK - 562106

ANKOLA

976. BHARATH AUTO CARS PVT LTD (--01), NEAR NARAYANA TEMPLE KAKKAR MUTTA, BELEGULI CROSS, ANKOLA, UK DISTRICT - 581314
PH :7829567400.

ATHANI

977. SHANTESHA MOTORS PVT LTD (--01), RS NO. 605, SHIVAYOGI NAGAR, BIJAPUR ROAD, ATHANI, DIST. - BELGAUM. - 591304
PH :8884472587.

ATHRADI

978. ABHARAN MOTORS PVT LTD (--04), HERABETTU ROAD ATHARDI UDUPI - 576107
PH :9845472500.

ATTIBELE

979. SURAKSHAA CAR CARE PVT LTD (--01), SURVEY NO.22/7/8, SARJAPUR MAIN ROAD, INDIABELE VILLAGE, OPP. TO GOLDEN LIBERTY, ATTIBELE P.O., BANGALORE. - 562107
PH :9449865665.

BAGALKOT

980. VIJAY MOTOWINGS PVT LTD (--01), 180/4-2,BELGUM RAICHUR ROAD,NEAR APMC MARKET YARD, BAGALKOT - 587103
PH :9481289167.

BAGEPALLI

981. BIMAL AUTO AGENCY INDIA PVT LTD (--01), H.L. NO. 423 AND 436 SRI SATHYA SAI NAGAR, ON NH-7, THIMAKALAPALLI BLOCK-II, PARAGODU GRAM PANCHAYATH, KASABA HOBLI, BAGEPALLI TALUK, CHIKKABALLAPUR DIST. - 561207
PH :9742458888.

BAJPE

982. BHARATH AUTO CARS PVT LTD (--01), SURVEY NO: 5/A3,SUNKADAKATTE, KOLAMBE VILLAGE,BAJPE, DAKSHINA KANNADA DIST, KARNATAKA,574142 - 574142

BANDAHALLI

983. BIMAL AUTO AGENCY INDIA PVT LTD (--01), SURVEY NO: 44/11, TAVARAKERE VILLAGE, NANDAGUDI HOBLI, BANDHALLI, HOSKOTE TALUK, BANGALORE RURAL DIST, KARNATAKA-562122 - 562122

BANGALORE

984. MANDOVI MOTORS PVT LTD (--01), 24/4,7TH MAIN,WILSON GARDENS,BANGALORE - 560027

985. MANDOVI MOTORS PVT LTD (--07), 17/A-2&3 IND.SUBURB.IIND STAGE, GORAGUNTEPALAYA, TUMKUR ROAD. YESWANTHPUR, BANGALORE - 560022

986. MANDOVI MOTORS PVT LTD (--05), NO.2/106 (NEXT TO KASSIA BLDG.),17TH CROSS,MAGADI CHORD ROAD EXTN. VIJAYANAGAR,BANGALORE - 560079

987. RNS MOTORS PVT LTD (7301--03), 2275 TUMKUR ROAD, GURGUNTEPALYA, YESHWANTPUR, BANGALORE - 560022
PH :9606933236.

988. BIMAL AUTO AGENCY INDIA PVT LTD (--01), NO. - 60/3, VENKATALA VILLAGE, YELAHANKA HOBLI, BANGALORE NORTH TALUK - 560064

989. BIMAL AUTO AGENCY INDIA PVT LTD (--01), 60/2, MAHADEVPURA, WHITE FIELD ROAD, BANGALORE - 560048

990. RNS MOTORS PVT LTD (7301--04), HOSUR ROAD,BOMMANAHALLI,MADIVALA POST,BANGALORE - 560068
PH :9148001412.

991. MANDOVI MOTORS PVT LTD (--08), NO. 70 SARAKKI INDUSTRIAL LAYOUT,J.P NAGAR,3RD PHASE, BANGALORE - 560078

992. PRATHAM MOTORS PVT LTD (--01), SY. NO. 78/4, OPP. TO BELLANDUR CENTRAL MALL, OUTER RING ROAD, VARTHUR HOBLI, BELLANDUR,BANGALORE EAST TALUK, BANGALORE- 560103 - 560037

993. BIMAL AUTO AGENCY INDIA PVT LTD (--02), NO. 69/2, SARAKKI, KANAKAPURA ROAD, BANGALORE - 560078

994. PRATHAM MOTORS PVT LTD (--02), STHANIKAM'S ARCADE, OPP. ST THERESA HOSPITAL, DR. RAJ KUMAR ROAD, A BLOCK,RAJAJINAGAR 2 STAGE, BANGALORE - 560010

995. KALYANI MOTORS PRIVATE LIMITED (--01), MYSORE ROAD,PANTHARAPALYA,KENGRI HOBLI,BANGALORE - 583201

996. BIMAL AUTO AGENCY INDIA PVT LTD (--03), NO.7/1, KALANAAGRAHARA VILLAGE, MOUNT ST. JOSEPH TRAINING COLLEGE FOR JESUITS COMPOUND, IIMB POST, BANNERGHATTA RD. , BANGALORE - 560076
997. BIMAL AUTO AGENCY INDIA PVT LTD (--04), 6TH CROSS, OFF OLD AIRPORT ROAD, HAL 2ND STAGE POST, BANGALORE - 560038
998. MANDOVI MOTORS PVT LTD (--0C), NO 1 TO 5, NAVODAYA HBSC, 4TH STAGE, 4TH MAIN, RAJAJINAGAR INDUSTRIAL TOWN, BASAWESHWAR NAGAR - 560044
999. KALYANI MOTORS PRIVATE LIMITED (--04), 119/1, 11TH CROSS,MALLESHWARAM,BANGALORE, - 560003
1000. MANDOVI MOTORS PVT LTD (--0D), 6/8, SHREE GANGA GARDEN, GANGA NILAYA, HENNUR CROSS, KALYANAGAR POST - 560043
1001. MANDOVI MOTORS PVT LTD (--0E), SY NO:26,AMBLIPURA VILLAGE,VATHUR HOBLI,BANGALORE,EAST TALUKA. - 560102
1002. KALYANI MOTORS PRIVATE LIMITED (--02), SY. NO.:58/1A & 61/22, AVALAHALLI, NH-4, K.R. PURAM, BANGALORE. - 560049
1003. KALYANI MOTORS PRIVATE LIMITED (--03), NO.129/4, KUNDALAHALLI VILLAGE, OPP. TO BROOKE FIELD HOSPITAL, BROOKFIELD, BENGALURU. - 574239
1004. SURAKSHAA CAR CARE PVT LTD (--01), 30/3 K AGRAHARA, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE - 580100
1005. SURAKSHAA CAR CARE PVT LTD (--02), #54/1, BOMMANAHALLI, HOSUR MAIN ROAD, BANGALORE - 560068
1006. KALYANI MOTORS PRIVATE LIMITED (--04), 250/1,BILEKAHALLI, BANNERGHATTA ROAD, BENGALURUE - 560076
1007. BIMAL AUTO AGENCY INDIA PVT LTD (--04), PLOT NO.37/38, 2ND STAGE, PEENYA INDUSTRIAL AREA, BANGALORE - 560058
1008. RNS MOTORS PVT LTD (7301--0G), 106/7, BELLARY ROAD, NEAR IOC PETROL BUNK, AMRUTHAALLI, NEAR HEBBAL FLYOVER, BENGALURU (KARNATAKA) - 560092 PH :6364884787.
1009. PRATHAM MOTORS PVT LTD (--05), #58/5 KUDLU VILLAGE, NEXT TO ZEE SCHOOL, SARJAPUR HOBLI, ANEKAL TALUK, BANGALORE - 560034
1010. RNS MOTORS PVT LTD (7301--0H), PLOT NO.129, KIADB INDUSTRIAL AREA, HEBBAGODI VILLAGE, BOMMASANDRA, JIGINI LINK ROAD, BANGALORE - 562158 PH :9538965771.
1011. KALYANI MOTORS PRIVATE LIMITED (--02), 10/1, HEBBAL , AMANIKERE KASABA HOBLI, YOGESH NAGAR, BANGALORE - 560024
1012. BIMAL AUTO AGENCY INDIA PVT LTD (--01), #184/185, OPP. FORUM VALUE MALL, WHITE FIELD MAIN ROAD, BANGALORE - 560066
1013. SURAKSHAA CAR CARE PVT LTD (--04), PLOT NO. 8 & 9, NEXT TO BDA COMPLEX, 4TH BLOCK, 100 FT ROAD, KORAMANGALA, BANGALORE, KARNATAKA - 560034
1014. KALYANI MOTORS PRIVATE LIMITED (--01), # 10/5, NAGADEVANHALLI, KENGERI, MYSORE ROAD, BANGALORE, KARNATAKA - 560056
1015. BIMAL AUTO AGENCY INDIA PVT LTD (--06), PLOT NO. 82, DODDA BANASWADI MAIN ROAD, BEHIND IOC PETROL PUMP, NEXT TO AIYAPPA TEMPLE, BANASWADI, BANGALORE, KARNATAKA - 560033
1016. VARUN MOTORS PVT LTD (--01), SURVEY NO: 93, PLOT NO:31,PEENYA III PHASE, INDUSTRIAL AREA,PEENYA,YESHWANTHPUR HOBLI, BANGALORE NORTH, BANGALORE,KARNATAKA-56005 - 560022
1017. KALYANI MOTORS PRIVATE LIMITED (--05), PLOT NO. 74/5, HORMAVU MAIN ROAD, NEAR BBMP OFFICE, KR PURAM HOBLI, BANGALORE. - 560043
1018. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), NO. 5, 15TH CROSS, KOLANDAPPA GARDEN, ANEPALYA, POST – AADUGODI, BANGALORE. - 560030
1019. MANDOVI MOTORS PVT LTD (--0I), KATHA NO.4, SITUATED AT GANAKAL DHAKALE, SRINIVASPURA, KENGERI HOBLLI, UTTARAHALLI, BANGALORE - 560060
1020. VARUN MOTORS PVT LTD (--02), BEARING NO. 27/1 & 27/2, SURVEY NO. 41/3 & 42/7 BAGALAGUNTA, HESSARGHATTA MAIN ROAD, NEAR WIDIA SCHOOL BUS STOP, NAGASANDRA POST, BANGALORE. - 560073
1021. MANDOVI MOTORS PVT LTD (--0J), SITE NO. 58/1, J.B. KAVAL, MAJOR SANDEEP UNNIKRISHNAN ROAD, VIDYARANYAPURA, BANGALORE. - 560097
1022. KATARIA AUTOMOBILES PRIVATE LIMITED (--01), SURVEY NO. 8/3, 10/4, 10/2, VILLAGE – THALAGHATTAPURA, KANAKAPURA MAIN ROAD, NEAR NANDI TOYOTA, UTTARAHALLI HOBLI, TALUK - BENGALURU SOUTH, BANGALORE, KARNATAKA. - 560109
1023. RNS MOTORS PVT LTD (7301--0J), SY. NO. 11/2 & 12/1, VILLAGE – ARAKERE, BEGUR HOBLI, BANNERGHATTA ROAD, BANGALORE – 560 076. - 560076 PH :7760982836.
1024. SURAKSHAA CAR CARE PVT LTD (--05), SURVEY NO.2/6, BERTENA AGRAHARA, OPP. METRO CASH & CARRY, HOSUR MAIN ROAD, BANGALORE. - 560100
1025. KALYANI MOTORS PRIVATE LIMITED (--05), SY.NO.8/4, G HOSAHALLI MAIN ROAD, GOLLARAHATTI, V N POST, YESHWANTPURA HOBLI, MAGADI MAIN ROAD, BANGALORE - 560091
1026. SURAKSHAA CAR CARE PVT LTD (--06), BEARING NO. 54/4-320/2, BEGUR HOBLI, BOMMANAHALLI VILLAGE, BEGUR HOBLI, BANGALORE, KARNATAKA. - 560068
1027. PRATHAM MOTORS PVT LTD (--07), SUVEY NO. 43/1, ON SH-35, VILLAGE - YAMARE, SARJAPUR MAIN ROAD, POST - DOMMASANDRA, TALUKA - ANEKAL, BENGALURU RURAL, KARNATAKA. - 562125
1028. SURAKSHAA CAR CARE PVT LTD (--07), SURVEY NO 106/2A, CHANDAPURA MUNICIPAL TOWN,MUTHASANDRA HOSUR MAIN ROAD, ANEKAL TQ, BANGALORE, KARNATAKA - 560099
1029. VARUN MOTORS PVT LTD (--03), SY NO: 136 ( OLD NO 54/8) SANGEGURUVANAHALLI(VP) KAMAKSHIPALAYA, WARD NO: 17, VRISHABHAVATHI NAGAR, MAGADI ROAD, BANGALORE NORTH THALUK, BANGALORE,KARNATAKA - 560079
1030. RNS MOTORS PVT LTD (--01), SURVEY NO. 48, HEBBAGODI, HOSUR MAIN ROAD,ANEKAL TALUK, BANGALORE URBAN DIST, KARNATAKA - 560099
1031. KALYANI MOTORS PRIVATE LIMITED (--03), SURVEY NO. 194/5, HUNSEMARANAHALLI, JALA HOBLI, DEVANAHALLI TALUK, (YELAHANKA NEW TALUK), NEW KEMPEGOWDA INTERNATIONAL AIRPORT ROAD, NORTH - 562110
1032. MANDOVI MOTORS PVT LTD (--09), MUNICIPAL NO. 133 (OLD NO.S 133 & 133/1), BULL TEMPLE ROAD, BBMP WARD NO. 49, K G NAGAR, BANGALORE, KARNATAKA-560018. - 560018
1033. KALYANI MOTORS PRIVATE LIMITED (--06), SURVEY NO. 67, NH-209, NAVARATAN GARDENS, (NEAR IOCL PETROL BUNK) DODDAKALASANDRA VILL., UTTARAHALLI HOBLI, KONANAKUNTE, KANAKAPURA-KENGERI ROAD, BANGALORE, KARNATAKA - 560062
1034. SANVIT AUTOMOTIVES LLP (--01), NO2599/1 OPP , SHELL PETROL BUNK, GOTTIGERE BANNERGHATTA ROAD, BANGALORE - 560083
1035. KALYANI MOTORS PRIVATE LIMITED (--C1), KATHA NO 39, SURVEY NO 58 HENNUR MAIN ROAD, KR PURAM HOBLI - 560043
1036. AVANISH AUTO LLP (--01), SURVEY NO 8/1B, JALAHALLI CROSS, T DASARAHALLI, BENGALURU - 560038
1037. SANVIT AUTOMOTIVES LLP (--02), SANVIT MOTORS, HULIMAVU TO BEGUR ROAD, GOTTIGERE, BANGALORE - 560037
1038. POPULAR VEHICLES AND SERVICES LIMITED (--01), SURVEY NO. 26, OMR ROAD, NEXT TO PRIMARY HEALTH CENTRE - 560037
1039. AVANISH AUTO LLP (--02), NO. 277, NELAMANGALA TALUK, DASANAPURA, HOBLI, MADANAYAKANAHALLI, BANGALORE - 560037

BANGARPET

1040. SURAKSHAA CAR CARE PVT LTD (--01), 180/4 OPP. APMC YARD, KOLAR-BANGARPET ROAD, BANGARPET (KARNATAKA) - 563114 PH :9449865601.

BANTWAL

1041. MANDOVI MOTORS PVT LTD (--01), NH-75, PANEMANGALORE, B.C. ROAD, BANTWAL, KARANATAKA - 574231 PH :9008810123.

BASAVAKALYAN

1042. LAHOTI MOTORS PVT LTD (--01), SURVEY NO: 122/16, TRIPURANTH, SASTAPUR BANGLA MUMBAI HIGHWAY, BASAVAKALYAN, - 585327

BELGAUM

1043. SHANTESHA MOTORS PVT LTD (--01), MUJAWAR COMPOUND,NEHRU NAGAR,BELGAUM, - 590010 PH :9902043711.
1044. SHANTESHA MOTORS PVT LTD (--03), PLOT NO. 39, RS NO. 670, CTS NO. 1612/3, KHANAPUR ROAD, UDAYMBA, BELGAUM (SCREE SHOT ATTACHED) - 590006 PH :8884433911.
1045. SHANTESHA MOTORS PVT LTD (--06), PLOT NO. 2/I, RS NO. 29, KIADB INDUSTRIAL AREA, KIADB BAUXITE ROAD, KANGRALI BK, BELGAUM. - 590010 PH :9731396805.

BELLARY

1046. KPF PVT LTD (--01), P.B. NO. 58,BELLARY HOSPET ROAD,ALLIPURA,BELLARY - 583101 PH :9449876025.

BELLUR CROSS

1047. KALYANI MOTORS PRIVATE LIMITED (--01), SURVEY NO, 537/61, BELLUR VILLAGE, BELLUR HOBLI, NAMAGANGALA TALUK, MANDYA DIST KARNATAKA 571418 - 571418

BELTHANGADY

1048. BHARATH AUTO CARS PVT LTD (4503--04), MAIN ROAD, BELTHANGADY, BELTHANGADY TALUK DK DISTRICT - 574214 PH :9886543230.

BHADRAWATI

1049. SHRUTI MOTORS PVT LTD (--01), SURVEY NO. 18/4, BH ROAD,KADADAKATTE HOBLI, KADADAKATTE, BHADRAVATI, SHIMOGA DIST., KARNATAKA - 577229

BHATKAL

1050. BHARATH AUTO CARS PVT LTD (--01), SURVEY NO. 157/2A, SUSGADI VILLAGE, NH66, BHATKAL, UTTARKANNADA DISTRICT, KARNATAKA. - 581320
PH :9008693940.

BIDAR

1051. LAHOTI MOTORS PVT LTD (--01), SI 50/51,PRATAP NAGAR, UDGIR ROAD, KIADB INDUSTRIAL AREA, NAUBAD, BIDAR - 585402
PH :8884412049.

1052. LAHOTI MOTORS PVT LTD (--02), PLOT NO. 58, NAUBAD INDUSTRIAL AREA, PRATAP NAGAR, BIDAR. - 585401
PH :9108707709.

BIJAPUR

1053. RNS MOTORS PVT LTD (7301--0I), SURVEY NO.25K/1, CHITRADURGA SHOLAPUR ROAD, VIJAYPURA, BIJAPUR DISTT. KARNATAKA - 586109
PH :8861208998.

BUDHIGERE

1054. BIMAL AUTO AGENCY INDIA PVT LTD (--01), KHATTA NO:115,SY. NO. 128/33, MANDUR MAIN ROAD, BUDIGERE CROSS, MANDUR VILLAGE, NEXT TO IOCL PETROL BUNK, BANGALORE EAST TALUK, BANGALORE, - 560049
PH :9742259528.

BYNDOOR

1055. ABHARAN MOTORS PVT LTD (--01), 3-256 & 3-257, SOUPARNIKA COMPLEX, NH 66, VILLAGE - YEDATHRE, BYNDOOR, KUNDAPUR TALUK, UDUPI DISTT. - 576214
PH :7899751777.

CHALLAKERE

1056. SAKETH AUTOMOBILES (--01), SITE NO. 9 & 10, SY. NO. 96/1, OPP. SUJIMALLESHWARA NAGAR, BELLARY ROAD, CHALLAKERE. - 577522
PH :9686550126.

CHAMARAJANAGAR

1057. MANDOVI MOTORS PVT LTD (--01), RAJ KAMAL BUILDING, SATHYAMANGALA ROAD, KUVEMPU EXTENSION, CHAMRAJNAGAR (KARNATAKA) - 571313
PH :9845445586.

CHANNAGIRI

1058. SHRUTI MOTORS PVT LTD (--01), SURVEY NO.5, MACHANAYAKANAHALLI, OPP. FIRE STATION, CHITRADURGA ROAD, N.H.13, CHANNAGIRI DISTT. DAVANGERE - 577213

CHANNAPATNA

1059. KALYANI MOTORS PRIVATE LIMITED (--01), PROPERTY NO.58, MALUR GRAMA, MALLUR HOBLI, CHANNAPATNA TALUKA RAMANAGARA DISTRICT - 562160
PH :9845066682.

CHANNARAYAPATNA

1060. VENKAT MOTORS (--01), PLOT NO. 389, 36/3, 132/1, BESIDES THIRUMALA RICE MILL, MYSORE ROAD, CHANNARAYAPATNA, DISTRICT: HASSAN, KARNATAKA. - 573116
PH :8147077144.

CHICKBALLAPUR

1061. BIMAL AUTO AGENCY INDIA PVT LTD (--01), NO. 169/1, AMMANI KANDAVARAKERE VILLAGE, KASABA HOBLI, CHIKBALLAPURA DISTRICT - 562101
PH :9742262499.

CHICKMANGALUR

1062. SHRUTI MOTORS PVT LTD (--01), AIT CIRCLE, KM ROAD, CHIKMANGALUR - 577102

CHIKKA TIRUPATI

1063. SURAKSHAA CAR CARE PVT LTD (--01), URVEY NO. 1/2, OPPOSITE TO BHARATH PETROL BUNK, ANCHEMUSKUR, CHIKKA TIRUPATI, KOLAR, KARNATAKA – 563160 - 563160

CHIKODI

1064. SHANTESHA MOTORS PVT LTD (--05), OPP. IOC PUMP, NEAR B.K.COLLEGE, MIRAJ ROAD, CHIKKODI, KARNATAKA - 591201
PH :7829925790.

CHINTAMANI

1065. PRATHAM MOTORS PVT LTD (--06), SURVEY NO. 33, NEXT TO VIJAYA P U COLLEGE, OPP. GOPASANDRA LAKE, SREENIVASPURA MAIN ROAD, CHINTAMANI, KARNATAKA - 563125

CHITRADURGA

1066. SAKETH AUTOMOBILES (--01), NEAR VEDA COMPLEX, NH-4, M H ROAD, CHITRADURGA - 572130
PH :9686550313.

DABASPET

1067. KALYANI MOTORS PRIVATE LIMITED (--01), SURVEY NO. 33/4 (OLD SY NO. 33/3 & 33/2C), KENGAL KEMPOHALLI VILL., SOMPURA HOBLI, DABASPET MAIN ROAD, NELAMANGALA TALUK, BANGALORE RURAL DIST., KARNATAKA-562111 - 562111

DAVANGERE

1068. SHRUTI MOTORS PVT LTD (--01), NEAR PANCHDEVASTHANA, P. B. ROAD, DAVANGERE, KARNATAKA - 577004

1069. SHRUTI MOTORS PVT LTD (--02), DOOR NO. 473/1, SURVEY NO. 18/1, BESIDE GMIT COLLEGE, OPP. M&M SHOWROOM, OLD P. B. ROAD, DAVANGERE, KARNATAKA - 577001

DEVANAHALLI

1070. BIMAL AUTO AGENCY INDIA PVT LTD (--01), SURVEY NO.241/114/6, 11TH WARD, BB ROAD, DEVANAHALLI, BANGALORE DISTT: - 562110
PH :9742262514.

DHARWAD

1071. RNS MOTORS PVT LTD (--01), NO.29A/1, 29A/2, 29A/3 PLOT NO.1, ASHOK NAGAR, DODDANAYAKANAKOPPA VILLAGE, GOA ROAD, DHARWAD, KARNATAKA - 580008

DODDABALLAPUR

1072. PRATHAM MOTORS PVT LTD (--01), PLOT NO. 50, OBADENAHALLI INDUSTRIAL AREA, DODDABALLAPUR 3RD PHASE, SY. NO. 107, AREHALLI GUDDADAHALLI, KASABA HOBLI TALUK – DODDABALLAPUR, DISTRICT – BENGALURU RURAL. - 561203
PH :9886671687.

DODDADUNNASANDRA

1073. KALYANI MOTORS PRIVATE LIMITED (--01), SURVEY NO.57/1A, DODDADUNNASANDRA VILLAGE, ANUGONDANHALLI HOBLI, HOSKOTE TALUK, BANGALORE RURAL, KARNATAKA-562114. - 562114

GADAG

1074. RNS MOTORS PVT LTD (7301--0E), PLOT NO. 64, DIAGONALLY OPP. REGIONAL TRANSPORT OFFICE, HUBLI GADAG MAIN ROAD, GADAG - 582103
PH :9538925602.

GAJENDRAGARH

1075. PRN AUTOMOTIVES LLP (---), BESIDE PIAGGIO SHOWROOM, HUBLI-GAJENDRAGAD ROAD, GAJENDRAGAD,GADAG DISTRICT,KARNATAKA - 582101

GANGAVATI

1076. MUNEER CARS
(A UNIT OF MUNEER ENTERPRISES PVT LTD) (--03), JAGANMATHA COMPLEX,RAICHUR ROAD,GANGAVATI, - 583227
PH :9449870754.

GAURIBIDANUR

1077. MANDOVI MOTORS PVT LTD (--01), NO.592/522, E DIVISION, OPP. PUSHPANJALI TALKIES, B.H. ROAD, GAURIBIDANUR TOWN, DISTT. CHIKBALLAPUR - 561210
PH :8217453513.

GOKAK

1078. SHANTESHA MOTORS PVT LTD (--01), RS NO.106/3D/2A, APMC ROAD, GOKAK, BELGAUM DISTT. - 591307
PH :7829925760.

GONIKOPPAL

1079. MANDOVI MOTORS PVT LTD (2501--07), KAIKERY VILLAGE,GONIKOPPAL,, - 571213
PH :9900064873.

GUBBI

1080. SAKETH AUTOMOBILES (--01), SY NO. 71, ASSESSMENT NO. 54/4/4911, PROPERTY NO. 28-5-252, NEAR PETROL BUNK, B H ROAD, GUBBI TOWN & TALUK, TUMKUR DISTRICT, KARNATAKA,572216 - 572216

GUDIBANDHA

1081. BIMAL AUTO AGENCY INDIA PVT LTD (--01), DOOR NO:160, 1ST WARD, OPP TO GOVERNMENT BUS STAND, BAGEPALLI ROAD, GUDIBANDA, CHICKABALLAPURA DISTRICT KARNATAKA - 561209
PH :9742261903.

GULBARGA

1082. LAHOTI MOTORS PVT LTD (--01), LAHOTI GARDENS,NEAR KMF, HUMNABAD ROAD,GULBARGA - 585104
PH :9480825014.

1083. LAHOTI MOTORS PVT LTD (--02), DOOR NO. 7-12-11, 2ND BLOCK, OPP. GUNJ BUS STAND, HUMNABAD ROAD, GULBARGA, KARNATAKA. - 585104
PH :7619342035.

GUNDLUPET

1084. KALYANI MOTORS PRIVATE LIMITED (--01), ASSESSMENT NO. 2491/S. NO. 51/1, 2, 3, N.S. 11 AND ASSESSMENT NO. 2494/S. NO. 51/ N.S. 11, MYSORE-OOTY ROAD, GUNDLUPET. - 571111
PH :9686855799.

HAGARIBOMMANAHALLI

1085. MUNEER CARS
(A UNIT OF MUNEER ENTERPRISES PVT LTD) (--01), SITE NO.112A/2 & 112A/3, BLOCK NO.2, WARD NO.:3, HAGARIBOMANAHALLI PANCHAYAT, BELLARY DISTRICT. - 583212
PH :9481343007.

HALIYAL

1086. RNS MOTORS PVT LTD (--01), SURVEY NO: 347P/27, DOOR NO:B1180/15 & B1180/16, HANUMAN COMPLEX, HALIYAL CIRCLE, MAIN ROAD, HALIYAL TOWN & TALUK, UTTARA KANNADA DISTRICT,KARNATAKA - 581329
PH :8284200200.

HARAPANAHALLI

1087. SHREE LAKSHMI CARS PVT LTD (--01), SURVEY NO 13/1, ADAVIHALLI VILLAGE, KASABA HOBLI, HARAPPANAHALLI, DISTRICT - VIJAYANAGARA, KARNATAKA - 583131

HAROHOLLI

1088. SURAKSHAA CAR CARE PVT LTD (--01), SURVEY NO. 40/4, HOSAKOTE VILLAGE, HAROHALLI HOBLI, KANAKAPURA TALUK, RAMANAGARA, - 562112
PH :9449865608.

HASSAN

1089. VENKAT MOTORS (--01), NO. 326, HASSAN GROWTH CENTRE, H.N. PURA ROAD, HASSAN - 573201
PH :9844044038.

HAVERI

1090. REVANKAR MOTORS PVT LTD (--01), NEAR TMAE SOCIETY CAMPUS, IJARILAKAMAPUR, PB ROAD, HAVERI - 581110
PH :7022016903.

H-CROSS

1091. BIMAL AUTO AGENCY INDIA PVT LTD (--01), PART NO.1, SITE NO.36, SBT COMPLEX, HOSKOTE-BANGALORE ROAD, KARIYANAPURA, H CROSS, SHIDLAGHATTA TALUK, BANGALORE RURAL DISTT. CHIKKABALLAPURA - 562122
PH :9738948126.

HEBRI

1092. ABHARAN MOTORS PVT LTD (--01), SURVEY NO. 61-7C1P1 & 61-2P1, VILLAGE & TALUK - HEBRI, KARKALA, DIST.-UDUPI, KARNATAKA. - 576112
PH :9900077605.

HEGGADADEVANA KOTE (H D KOTE)

1093. KALYANI MOTORS PRIVATE LIMITED (--01), SURVEY NO. 5/4, VILLAGE – YARAHALLI, KASABA HOBLI, TALUK – H.D.KOTE, DISTRICT – MYSORE. - 571125
PH :9686855799.

HESSARGHATA

1094. BIMAL AUTO AGENCY INDIA PVT LTD (--01), SY NO 294/3, HESARAGHATTA VILLAGE YELAHANKA TALUK, BENGALURU,KARNATAKA - 560088
PH :9743658662.

HONNAVAR

1095. RNS MOTORS PVT LTD (--01), SURVEY NO. 727/1A, KARKI VILLAGE, HONNAVAR (HONAVAR) TALUK AND TOWN, UTTARA KANNADA DIST., KARNATAKA - 581327

HOSANAGRA

1096. SHRUTI MOTORS PVT LTD (--01), SH-52,OPPOSITE CANARA BANK,HOSANGARA, PIN-577418, - 577418

HOSDURGA

1097. SAKETH AUTOMOBILES (--01), ASSESSMENT NO. 9310/6, PLOT NO. 6, HOSADURGA TOWN, SARASWATI BADAVANE, HOSADURGA, DIST. -CHITRADURGA, KARNATAKA. - 577527
PH :7625088946.

HOSKOTE

1098. BIMAL AUTO AGENCY INDIA PVT LTD (--05), NO. 205/108, SITUATED AT HOSKOTE TALUK, KASABA HOSKOTE TOWN, DISTT.- BANGALORE - 562114

HOSPET

1099. MUNEER CARS
(A UNIT OF MUNEER ENTERPRISES PVT LTD) (--01), BELLARY ROAD,SANKLAPUR,HOSPET , - 583203
PH :7619505001.

HUBLI

1100. RNS MOTORS PVT LTD (7301-73-01), PUNE - BANGALOR ROAD, UNKAL, HUBLI - 580025
PH :9538965902.

1101. RNS MOTORS PVT LTD (7301-73-0F), GOKUL ROAD MUREDESHWAR BHAVAN , HUBLI - 580030
PH :8861208532.

1102. REVANKAR MOTORS PVT LTD (7303--01), CTS NO.165/A, WARD NO.III, DESHPANDE NAGAR, HUBLI (KARNATAKA) - 580029
PH :8792008301.

1103. PRN AUTOMOTIVES LLP (7304-73-01), SURVEY NO 33, NAGASHETTI KOPPA VILLAGE BESIDES SRINIVAS GARDENS, HUBALI - 580020

HUNSUR

1104. KALYANI MOTORS PRIVATE LIMITED (--01), M-18 & M-19, KSSIDC INDUSTRIAL ESTATE, BM BYPASS ROAD, HUNSUR, MYSORE DISTRICT, KARNATAKA - 571105
PH :7022669699.

JEWARGI

1105. LAHOTI MOTORS PVT LTD (--01), S NO: 125, PLOT NO:7, FILTER BED ROAD, OPP. BUS DEPOT, JEWARGI, KALABURGI DISTRICT (FORMERLY GULABARGA) , KARNATAK-585310. - 585310
PH :9480825004.

KADABA

1106. MANDOVI MOTORS PVT LTD (--01), SURVEY NO.-11/20, KALARA, KADABA POST, DAKSHIN KANNADA DISTT., KARNATAKA - 574221
PH :9740912365.

KADUR

1107. SHRUTI MOTORS PVT LTD (--01), SHOP NO. 1 & 2, DAGA COMPLEX, ULUKINAKALLU, NEAR PEARLS CLUB, B.H. ROAD, KADUR, DISTRICT – CHIKMAGALUR. - 577548

KANAKAPURA

1108. KALYANI MOTORS PRIVATE LIMITED (--01), SURVEY NO. 447/1B, KASABA HOBIL, BUDIGUPPE GRAMA, TALUKA- KANAKAPURA, DISTRICT- RAMANAGARA. KARNATAKA. - 562117
PH :9900599933.

KARKALA

1109. ABHARAN MOTORS PVT LTD (--03), NH-13, MANGALORE KUDREMUKH ROAD, PULKERI, KARKALA - 574104
PH :9880232666.

KARWAR

1110. BHARATH AUTO CARS PVT LTD (--01), SURVEY NO. 459/2B, 456/2B AND 456/3, CHITTAKULA VILLAGE, KARWAR TALUKA, UTTARKANNADA DISTRICT, KARNATAKA. - 581301
PH :7829567400.

KITTUR, BELGAUM

1111. SHANTESHA MOTORS PVT LTD (--01), PLOT NO. 219, KITTUR INDUSTRIAL AREA (KIADB), POONA BANGALORE HIGHWAY (NH-4),KITTUR TOWN AND TALUK, BELGAUM DISTRICT, - 591115
PH :9731396808.

KOLAR

1112. MANDOVI MOTORS PVT LTD (--0F), 67/3 BANGALORE-CHENNAI HIGHWAY, KONDARAJANA HALLI, OPP HOTEL SHANTHI SAGAR, KOLAR. - 563101

KOLLEGAL

1113. MANDOVI MOTORS PVT LTD. (--01), MYSORE KOLLEGAL ROAD,, NEAR BRAHMARAMBA KALYANAMTAP, - 571440

KOPPA

1114. SHRUTI MOTORS PVT LTD (--01), NEARBY ARCACENT POWDER SHOP, UPPERPET, KOPPA, DIST-CHIKAMAGALURU, KARNATAKA - 577126

KOPPAL

1115. KPF PVT LTD (--01), SL. 283/10, NEAR MINI VIDHAN SOUDHA, KOPPAL HOSPET ROAD NH63, KOPPAL - 583238
PH :9449876027.

KRISHNARAJANAGARA (KRNAGARA)

1116. KALYANI MOTORS PRIVATE LIMITED (--01), NO:D, DORNAHALLI,DODDEKOPPALU GRAMA PANCHAYAT,KASABA HOBLI, KRISHNARAJANAGARA, MYSORE DISTRICT,KARNATAKA - 571602
PH :8971159430.

KRISHNARAJAPET

1117. MANDOVI MOTORS PVT LTD (--01), KHATA NO.3094, SY. NO.278, MYSORE CHENNERAYAPATNA ROAD (OPP. TO K.B.C. FUEL STATION), KRISHARAJAPET TOWN, TALUK MANDYA DISTT. KARNATAKA - 571423
PH :9845132038.

KUDUR

1118. KALYANI MOTORS PRIVATE LIMITED (--01), SURVEY NO.272/1 AND SURVEY NO.272/2, NARASANDRA VILLAGE, KUDURU HOBLI, MAGADI TALUK, RAMANAGARA DISTRICT, KARNATAKA 562127 - 562127

KUMTA

1119. BHARATH AUTO CARS PVT LTD (--01), MALLYA'S COMPOUND, NH-66, ALVEKODI KALBAGH VILLAGE, KUMTA (KARNATAKA) - 581334
PH :9448979530.

KUNDARPUR

1120. ABHARAN MOTORS PVT LTD (--02), NH-17, THAKKATTE, KUNDAPURA - 272877
PH :9880197524.

KUNIGAL

1121. SAKETH AUTOMOBILES (--01), NEAR KRS AGRAHARA,BM ROAD, KUNIGAL, TUMKUR DISTRICT, KARNATAKA - 572130
PH :9686550127.

KUSHAL NAGAR

1122. MANDOVI MOTORS PVT LTD (--01), SY NO:88,MADAPATANA,KUSHAL NAGAR,SOMVARPUR,NORTH KODAGU, KARNATAKA - 571234
PH :9900080893.

LINGASUGUR

1123. MUNEER CARS
(A UNIT OF MUNEER ENTERPRISES PVT LTD) (--01), PLOT NO. 11, BASAMMA COMPLEX, RAICHUR ROAD, LINGSUGUR, RAICHUR, KARNATAKA - 584122
PH :9480830255.

MADDUR

1124. MANDOVI MOTORS PVT LTD (--01), SURVEY NO 802/2A4B, NEAR SANJAY THEATRE, BM ROAD, MADDUR TOWN,MANDYA DISTRICT, KARNATAKA - 571428

MADIKERI

1125. KALYANI MOTORS PRIVATE LIMITED (--01), BASAPPA THEATURE BUILDING, DASAWAL ROAD,MADIKERI KODAGU DISTRICT. - 571201
PH :9606073867.

MAGADI

1126. PRATHAM MOTORS PVT LTD (--01), SY NO:92/2, THIRUMALAI VILLAGE, KASABA HOBLI, MAGADI TOWN & TALUK, RAMANAGARA DISTRICT, KARANATAKA - 562120
PH :9900058483.

MALUR

1127. MANDOVI MOTORS PVT LTD (--01), NO 12/8, BANGALORE - MALUR MAIN ROAD, OPPOSITE OF INDIAN OIL PETROL BUNK - 563130

MANCHENAHALLI

1128. VARUN MOTORS PVT LTD (--01), NO:1219,GOLAPPA COMPUND, MAHESHWARI CIRCLE, MANCHENAHALLI, GOWRIBIDANUR TALUK, CHIKKABALLAPUR DIST, KARNATAKA-561211 - 561211
PH :9513979162.

MANDYA

1129. MANDOVI MOTORS PVT LTD (2501--06), 1660/A, KALLAHALLI EXTENSION, M.C. ROAD, - 571401
PH :9611165873.

1130. KALYANI MOTORS PRIVATE LIMITED (--02), PROPERTY NO 139/A,UMMADAHALLI VILLAGE, KASABA HOBLI, MANDYA,KARNATAKA - 571401

MANGALORE

1131. MANDOVI MOTORS PVT LTD (4502-45-01), ARVIND BUILDING, BALMATTA ROAD, HAMPANKATTA, MANGALORE - 575001
PH :9845107701.

1132. BHARATH AUTO CARS PVT LTD (4503-45-01), NH-17, KUNTIKAN JUNCTION, DEREBAIL, NEAR A.J. HOSPITAL, MANGALORE - 575004
PH :9886785730.

1133. MANDOVI MOTORS PVT LTD (4502-45-03), NO., HASSAN GROWTH CENTRE,ADYAR,N.H. -48,,MANGALORE - 575007
PH :9845514146.

1134. MANDOVI MOTORS PVT LTD (4502--07), BALLAL INDUSTRIAL ESTATE, YAYYADI, MANGALORE,KARNATAKA - 575008
PH :9880079235.

1135. BHARATH AUTO CARS PVT LTD (--06), PLOT NO. 290/1, 291/1, KODIALBAIL VILLAGE, NEXT TO BHARATH BEEDI WORKS PVT. LTD., BUNTS HOSTEL, KADRI ROAD, MANGALORE, KARNATAKA - 575002
PH :9886333030.

1136. MANDOVI MOTORS PVT LTD (4502--08), DOOR NO. 2-63/4, SUJITH BAGH LANE, YEYYADE, MANGALORE, DISTRICT – DAKSHINA KANNADA, KARNATAKA - 575008
PH :9880278077.

1137. BHARATH AUTO CARS PVT LTD (--08), S. NO. 1376/1-41, 1375/41-2-A1P1, 2A1P3, 1373/1-40, 1369/1-40-A2, KASABA BAZAR, KANDADAPALLI, KUDROLI, TALUK - MANGALORE, MANGALORE, KARNATAKA. - 575003
PH :9886785730.

MUDBIDRI

1138. BHARATH AUTO CARS PVT LTD (4503--03), BHARATH BEEDI COMPOUND, NEAR ALVAR'S HOSPITAL, MOODBIDRI - 574227
PH :9886785430.

MUDHOL

1139. VIJAY MOTOWINGS PVT LTD (--01), PLOT NO. 3B, IN NARS NO. 15-2, WARD NO. 5, VISHWESHWAR COLONY, LOKAPUR ROAD, MUDHOL TOWN, BAGALKOT DIST. - 587313
PH :9606046173.

MUDIGERE

1140. SHRUTI MOTORS PVT LTD (--01), SURVEY NO.10/1, 10/2, SITE NO.14, 15 NEXT TO SRIRANGPURA VIHAR,GOWDAHALLI RD - 577132

MULBAGAL

1141. PRATHAM MOTORS PVT LTD (--01), NO. 35-6-117/1, CHITTOOR MAIN ROAD, VEERABHADRA NAGAR, MULBAGAL, KOLAR DIST., KARNATAKA-563131 - 563131

MULKI

1142. BHARATH AUTO CARS PVT LTD (4503--05), BHARATH BEEDI COMPOUND, NH-17 MULKI - 574154
PH :9986020730.

MURUDESWAR

1143. RNS MOTORS PVT LTD (7301--02), NH-17, MANGALORE-BOMBAY ROAD, MURUDESHWAR, KARNATAKA - 581350
PH :9538965969.

MYSORE

1144. MANDOVI MOTORS PVT LTD (2501-25-01), NO: 5 K.R.S.ROAD, MYSORE - 570005
PH :9945248860.

1145. MANDOVI MOTORS PVT LTD (2501-25-05), NO.182/145/C, BANNUR ROAD, SIDHARTHA NAGAR, MYSORE, KARNATAKA - 570011
PH :9845939936.

1146. KALYANI MOTORS PRIVATE LIMITED (2503-25-01), MANATHAVADI ROAD, VIDYARANYA PURAM, MYSORE - 570008
PH :7259255558.

1147. MANDOVI MOTORS PVT LTD (2501-25-08), 217/2,, HUNSUR ROAD, HINKAL POST, MYSORE, KARNATAKA - 570017
PH :9845939937.

NAGAMANGALA

1148. MANDOVI MOTORS PVT LTD (--01), SURVEY NO:3316/2327,VISHALAXAMMA COMPLEX, T B BADAVANE B M ROAD, NAGAMANGALA TOWN, MANDYA DISTRICT, KARNATAKA - 571432
PH :9845132038.

NANJANGUD

1149. KALYANI MOTORS PRIVATE LIMITED (--01), 4340/4159/4, HULLAHALLI ROAD, NANJANGUD, DISTRICT – MYSORE, KARNATAKA. - 571301
PH :9686855799.

NARASIMHARAJAPURA

1150. SHRUTI MOTORS PVT LTD (--01), SURVEY NO # SURVEY NO.173,/P KOPPA ROAD, NAGALAPURA VILLAGE,NARASIMHARAJAPURA, CHIKMAGALUR DIST.,KARNATAKA - 577134

NARAVI

1151. MANDOVI MOTORS PVT LTD (--01), SURVEY NO:122/1B1,DOOR NO:4/59,SHRI CHAITHANYA , ARASAKATTE, NARAVI, BELTHANGADY TALUK, DAKSHINA KANNADA DIST, KARNATAKA-574109. - 574109
PH :9740392005.

NELAMANGALA

1152. RNS MOTORS PVT LTD (--01), NO.167/2, TUMKUR ROAD, KASABA HOBLI, NH4, NELAMANGALA, BANGALORE RURAL DT., BENGALURU, KARNATAKA - 562123
PH :7259875385.

NELYADI

1153. BHARATH AUTO CARS PVT LTD (--01), SURVEY NO. 97/11P AND SURVEY NO. 97/9, VILLAGE - HOSAMAJALU KAUKRADY, POST - NELYADI, TALUK - PUTTUR, DIST.-DAKSHIN KANNADA . - 574229
PH :9886072730.

OORGAUMPET

1154. BIMAL AUTO AGENCY INDIA PVT LTD (--01), SITE NO:10, NEW KATHA NO: 251, ROBERTSONPET, KGF, OORGAUMPET, KOLAR DIST, KARNATAKA- 563122 - 563122
PH :9513748707.

PADUBIDRI

1155. ABHARAN MOTORS PVT LTD (--01), PLOT NO. 51/20, VILLAGE – PADUBETTU, PADUBIDRI TOWN, TALUKA & DISTRICT – UDUPI, KARNATAKA. - 574111
PH :9880232999.

PANDAVAPURA

1156. KALYANI MOTORS PVT. LTD. (--01), SY NO.299/12, KENNALU VILLAGE,, KASABA HOBLI, PANDAVAPURA TALUK, - 571435

PERESANDRA

1157. BIMAL AUTO AGENCY INDIA PVT LTD (--01), SURVEY NO # NO.39,NO:113, SAMRUDDHI NILAYA GROUND FLOOR, NH7, ARURU VILLAGE, PERESANDRA, CHIKKABALLAPUR DISTRICT, KARNATAKA- 562104 - 562104
PH :8660799820.

PUTTUR

1158. BHARATH AUTO CARS PVT LTD (4503--02), NEAR RAIWAY STATION, HARADY, PUTTUR - 517583
PH :9886072730.

RAICHUR

1159. MUNEER CARS
(A UNIT OF MUNEER ENTERPRISES PVT LTD) (--02), #12-10-64,GOUSHAL ROAD,SIYA TALAB AREA,RAICHUR - 584101
PH :9480830264.

RAJANUKUNTE

1160. VARUN MOTORS PVT LTD (--01), SURVEY NO. 3/1, SITE NO. 6 , SINGANAYAKANAHALLI, RAJANKUNTE, BANGALORE NORTH TALUK, BANGALORE URBAN, KARNATAKA - 560064
PH :9513979162.

RAMANAGARA

1161. KALYANI MOTORS PRIVATE LIMITED (--02), #K1318/2034C,OPP TO ROTARY HOSPITAL,BM ROAD, RAMNAGARAM - 571511

RANEBENNUR

1162. REVANKAR MOTORS PVT LTD (--01), SCHEDULE A-2, OPP. STJIT ENGINEERING COLLEGE, P B ROAD, RANEBENUR, KARNATAKA. - 581115
PH :8830947883.

SAGAR

1163. SHRUTI MOTORS PVT LTD (--01), BESIDE H GANAPATHIYAPPA PETROL BUNK (BP), B H ROAD, NH-206, SAGAR, SHIMOGA DISTT. - 577401

SAKLESHPUR

1164. VENKAT MOTORS (--01), SITE NO. 19, 3RD WARD, SARASWATHIPURAM, SAKLESHPUR TOWN, DISTRICT – HASSAN. - 573134
PH :7892809634.

SARJAPURA

1165. PRATHAM MOTORS PVT LTD (--01), SURVEY NO. 476/3, SARJAPUR TOWN, TALUKA – ANEKAL, SARJAPUR HOBLI, DISTRICT – BANGALORE URBAN, KARNATAKA. - 562125
PH :7760962890.

SAUNDATI

1166. SHANTESHA MOTORS PVT LTD (--01), CTS NO. 4038/B/1,PLOT NO 16/3 DHARWAD ROAD, KENCHALARKOP, SAUNDATTI - 591126

SHIKARIPURA

1167. SHREE LAKSHMI CARS PVT LTD (--01), 35/5, AADHI SAKTI TEMPLE SHIMOGA-SHIKARIPURA ROAD, SHIKARIPURA - 577427

SHIMOGA

1168. SHRUTI MOTORS PVT LTD (--01), K.NO 599, SHANKARMUTT ROAD, SHIMOGA - 577201
1169. SHRUTI MOTORS PVT LTD (--02), BLOCK L-1, INDUSTRIAL ESTATE, BEHIND HP PETROL BUNK, SAGAR ROAD, SHIMOGA. - 577204
1170. SHRUTI MOTORS PVT LTD (--03), SURVEY NO. 41/3 & 41/4, HONNALI ROAD, SHANTHI NAGAR, SHIMOGA. - 577201
1171. SHREE LAKSHMI CARS PVT LTD (--01), SURVEY NO : 74 & 86 (PLOT NO 1800), URGADUR, BY PASS ROAD, SHIVAMOGGA, KARNATAKA – 577203 - 577203

SIDDAPUR

1172. BHARATH AUTO CARS PVT LTD (--01), SURVEY NO. 211, NEAR IOCL PETROL BUNK, JOG ROAD, VILLAGE – HOSUR, TALUK – SIDDAPUR, DISTRICT – UTTARA KANNADA. - 581355
PH :9449402730.

SINDHANUR

1173. KPF PVT LTD (--01), SY. NO. 168/15, EJ HOSAHALLI CAMP GANGAVATHI MAIN ROAD, SINDHANUR, RAICHUR DISTRICT,KARNATAKA - 584128 - 584128

SIRISI

1174. RNS MOTORS PVT LTD (--01), SURVEY NO 43/B, LANDAKANALLI VILLAGE, DODNALLI GRAMA,SIRSI TALUK AND HOBALI, UTTAR KANNADA, KARNATAKA - 581402
PH :9895979023.

SIRSI

1175. RNS MOTORS PVT LTD (7301--0D), K H B COLONY, SIRSI - 581402
PH :9538925606.

SIRUGUPPA

1176. MUNEER CARS
(A UNIT OF MUNEER ENTERPRISES PVT LTD) (--01), SITE NO:31C/1B & PLOT NO.1, BELLARY - SIRUGUPPA MAIN ROAD, SIRUGUPPA TALUK, BELLARY DISTRICT. - 583121
PH :7619505001.

SOMWARPET

1177. MANDOVI MOTORS PVT LTD (--01), SURVEY NO.130 SITUATED AT MADIKERI ROAD, NAGROOR VILLAGE, BALAGUNDA POST, SOWMARPET TALUK, NORTH KODAGU DISTT. - 571236
PH :9845115665.

SORABA

1178. SHRUTI MOTORS PVT LTD (--01), NO: 2281681997, 6TH WARD, KHATA NO: 7/A-1/B, OPPOSITE TO GOVERNMENT JUNIOR COLLEGE, SHIRALA-KOPPA ROAD, SORABA, SHIVAMOGGA DIST, KARNATAKA- 577429. - 577429

SRINGERI

1179. SHREE LAKSHMI CARS PVT LTD (--01), SL NO 711, DHRUVANISH GRAND, RAJANAGAR, SRINGERI - 577139

SRINIVASAPURA

1180. SURAKSHAA CAR CARE PVT LTD (--01), SY NO. 40, VPRD NO. 86, PROPERTY NO. 84 & 87, CHALDIGANA HALLI GRAMA PANCHAYATH, PANNASAMAKANA HALLI VILLAGE, SRINIVASAPURA POST & TALUK, DIST.-KOLAR, KARNATAKA - 563135
PH :9449865601.

SULLIA

1181. MANDOVI MOTORS PVT LTD (4502--04), ODABAI SULLIA,MANGALORE MYSORE ROAD,KARNATAKA - 574239
PH :9900002325.

SURTHKAL

1182. MANDOVI MOTORS PVT LTD (4502--02), KANA ROAD, SURATHKAL - 574158
PH :9845514143.

T. NARASIPURA

1183. MANDOVI MOTORS PVT LTD (--01), KHATA NO:472/473/474, OPP TO SRI RAGHAVENDRA SWAMY MUTT, CHAMARAJANAGAR ROAD, T. NARASIPURA TOWN, MYSORE DISTRICT, KARNATAKA - 571124
PH :9845132038.

THIRTHAHALLI

1184. SHRUTI MOTORS PVT LTD (--01), PLOT NO. 1507/2187, OPP. TO HEGDE PETROL PUMP, AGUMBE ROAD, THIRTHAHALLI . - 577432

THOKOTU

1185. BHARATH AUTO CARS PVT LTD (--01), NH-66, KAPIKAD, ULLAL,THOKOTTU, DAKSHINA KANNADA DISTT. - 575017
PH :9538796330.

TIPTUR

1186. SAKETH AUTOMOBILES (--03), BANDIHALLI INDUSTRIAL ESTATE, N.H.:206, TIPTUR, KARNATAKA - 572201
PH :9945301023.

TUMKUR

1187. SAKETH AUTOMOBILES (--01), SIRA ROAD, TUMKUR - 572106
PH :9686550323.

UDUPI

1188. ABHARAN MOTORS PVT LTD (--01), N.H. 17, NITTUR, UDUPI - 576103
PH :9880232999.
1189. ABHARAN MOTORS PVT LTD (--05), N0. 305/1C, DOOR NO. 5-51A, RAILWAY STATION ROAD, INDRALI, UDUPI, DISTT. - UDUPI . - 576101
PH :9686694341.

UJIRE

1190. BHARATH AUTO CARS PVT LTD (--01), SURVEY NO.237-2B1, MANGALORE-CHARMADY ROAD, NEAR INDIAN OIL PETROL PUMP, SAMPIGE NAGAR, UJIRE, BELTHANGADY TALUKA, DISTT. DAKSHINA KANNADA, KARNATAKA. - 574240
PH :9886176130.

UPPINANGADI

1191. MANDOVI MOTORS PVT LTD (4502--05), NR.PADMA VIDYA IOC PETROL STATION-34, NEKKILADY, UPPINANGADY - 574241
PH :9740912365.

VENOOR

1192. BHARATH AUTO CARS PVT LTD (--01), RESURVEY NO:8/5, KARIMANELU VILLAGE, VENOOR, BELTHANGADY TALUK, DAKSHINA KANNADA DIST., KARANATAKA-574242. - 574242

VIJAYPURA

1193. BIMAL AUTO AGENCY INDIA PVT LTD (--01), DOOR NO 563, MARUTHI NAGAR, CHIKKABALLAPUR ROAD, VIJAYAPURA TOWN, DEVANAHALLI TALUK, BANGALORE RURAL DISTRICT KARNATAKA. - 562135
PH :8884433996.

VITTAL

1194. MANDOVI MOTORS PVT LTD (--01), DOOR NO. 1-287 (9), JISHAN COMPLEX, VITTAL TOWN, TALUKA – BANTWAL, DISTRICT – DAKSHIN KANNADA - 574243
PH :9008810123.

YADGIR

1195. LAHOTI MOTORS PVT LTD (--01), SURVEY NO. 101/1, GULSARAM VILLAGE, YADGIR TOWN & DISTT, SHAHPUR TALUKA, KARNATAKA - 585223
PH :9480825031.

## KERALA

ADIMALI

1196. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), RE SURVEY NO:647/5-2, BUILDING NO:15/121, MANNANKANDAM VILLAGE, ADIMALI, DEVIKULAM TALUK, IDUKKI DISTRICT, KERALA-685561 - 685561

ADOOR

1197. AVG MOTORS PVT LTD (--02), KOTTAMUKAL, K.P. ROAD, ADOOR PO, PATHANAMTHITTA, KERALA - 691523
PH :9446355900.

ADUR

1198. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--0A), M. C. ROAD, MITHRAPURAM, ADOOR, PATHANMTHITTA - 689518
PH :9745998303.

ALAKODE

1199. POPULAR VEHICLES AND SERVICES LIMITED (--01), RE. SY. NO. 23/1958, ARANGAM, ALAKODE, TALIPARAMBA TALUK, KANNUR DISTRICT, KERALA – 670571. - 670571

ALANALLUR

1200. KVR AUTOCARS PVT LTD (--01), BUILDING NO. 10/1050, CHANDAPPADI, MANNARKAD ROAD, POST – ALANALLUR, TALUKA – MANNARKAD, DISTRICT - PALAKKAD, KERALA. - 678601
PH :9747020582.

ALAPPUZA

1201. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--12), BLOCK NO. 145, RE-SURVEY NO. 79, ALAPPUZHA WEST VILLAGE, AMBALAPPUZHA TALUK, ALAPPUZHA DIST. KERALA-699002. - 699002
PH :9745977744.

ALATHIYOOR

1202. A M MOTORS (--11), RE SURVEY NO. 160/3, 161/7 (OLD SURVEY NO. 359/1), VILLAGE - ALATHIYOOR, TIRUR PONNAI ROAD, TALUKA - TIRUR, DIST.-MALAPPURAM, KERALA. - 676102

ALATHUR

1203. BRD CAR WORLD LIMITED (--01), SURVEY NO. 456/8, 455/8, 455/9, ERATTUKKULAM, KATTUSSERY VILLAGE, ALATHUR TALUKA, PALAKKAD DISTRICT, KERALA - 678682
PH :9745634999.

ALLEPEY

1204. POPULAR VEHICLES AND SERVICES LIMITED (--01), BUILDING NO. XVIII/135, DOOR NO. 13/449, CCSB ROAD, PALACE WARD, CHUNGAM, ALAPPUZHA, KERALA-688011. - 688011
PH :9778698161.

ALUVA

1205. BRD CAR WORLD LIMITED (--09), RE SURVEY NO.330/7, NH-47, KUNNUMPURAM, PO-DESHAM PANCHAYATH, CHENGAMANAD, ALUVA. - 683102
PH :9745907100.

ANCHAL

1206. SARATHY AUTO CARS (--01), SURVEY NO. 371/9, VILLAGE – IDAMULAKKAL, P.O. – ANCHAL, TALUK – PUNALUR, DISTRICT – KOLLAM. - 691306
PH :9526906665.
1207. POPULAR VEHICLES AND SERVICES LIMITED (1601--14), RE SURVEY NO 581/5, BLOCK NO 33, ANCHAL VILLAGE, NEAR ALBILAL DRIVING SCHOOL, KAITHADY JUNCTION, ANCHAL, KERALA - 691306
PH :9778698200.

ANGAMALY

1208. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--0F), ANGAMAALY KALADY ROAD, MC ROAD, ANGAMALY - 683572
PH :9745998434.
1209. POPULAR VEHICLES AND SERVICES LIMITED (2701--0D), 182-AIRPORT JUNCTION NAGAR,M. C. ROAD,ANGAMALY - 683572
PH :8086078886.

AREEKODE

1210. KVR AUTOCARS PVT LTD (--01), SURVEY NO. 196/22-4,196/10-1,196/22-2,19, KEEZHUPARAMBU VILLAGE, PATHANAPURAM, AREEKODE - 673639

ATTINGAL

1211. POPULAR VEHICLES AND SERVICES LIMITED (1601--07), PALAMKONAM, PERUNKULAM,VIA-.ALAMCODE, ATTINGAL - 695102
PH :8086078788.
1212. SARATHY AUTO CARS (--01), SURVEY NO. 2952/17 & 2952/4, KIZHUVILLAM VILLAGE, ATTINGAL, CHARAYINKEEZHU TALUK, TRIVANDRUM DIST., KERALA. - 695104
PH :9526052765.
1213. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), SY. NO. 54/13, 14, 15, 16, (OLD SY. NO. 22, 22/13, 16), IN BLOCK NO. 3 OF VELLOOR VILLAGE, EASTERN SIDE OF NATIONAL HIGHWAY 47, NEAR INTERNATIONAL SCHOOL, CHEMBAKAMANGALAM, KORANI PO, ATTINGAL, TRIVANDRUM DIST., KERALA. - 695104
PH :9747550888.

BALARAMAPURAM

1214. POPULAR VEHICLES AND SERVICES LIMITED (1601--11), POOVAR ROAD, VAZHIMUKKU, BALARAMAPURAM P.O., TRIVANDRUM DISTRICT - 695501
PH :8943345922.

BHARANIKAVU

1215. SARATHY AUTO CARS (--01), URVEY NO. 116/2 OF 4, SASTHAMKOTTA VILLAGE, BHARANIKAVU TOWN, KUNNATHOOR TALUK, KOLLAM DISTRICT. KERALA, PIN-690520 - 690520
PH :7994825565.

CALICUT

1216. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-01), MARUTI WORKSHOP, PANIKKER ROAD, CALICUT, NADAKKAVE - 673011
PH :9745998019.
1217. POPULAR VEHICLES AND SERVICES LIMITED (4702-47-02), BEHIND MIMS, EASWARAMANGALAM ROAD, GOVINDAPURAM P.O., CALICUT - 673016
PH :9846298613.
1218. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-06), KOYA ROAD JUNCTION, PUTHIYANCADI, POST WEST HILL, CALICUT - 673005
PH :9745998020.
1219. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-08), NEAR STEEL COMPLEX, NALLALAM, CALICUT - 673655
PH :9745998018.
1220. POPULAR VEHICLES AND SERVICES LIMITED (4702-47-07), NH-17 BYE PASS,PACHAKKIL, MALAPARAMBU P.O., KOZHIKODE, CALICUT - 673009
PH :9288012082.
1221. BIMAL AUTO AGENCY INDIA PVT LTD (--01), RE SURVEY NO. 13, BUILDING NO. 5/548, KRISHNARJUNA BUILDING, AREEKAD, VILLAGE AND PANCHAYATH – CHERUVANNUR, P.O. – NALLALAM, CALICUT (KOZHIKODE) , KERALA. - 673027
1222. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-12), R S NO: 51/7, IRINGALLUR, OLAVANNA PANCHAYATH, GURUVAYOORAPPAN COLLEGE PO, PALLAZHI - 673014
1223. A M MOTORS (-47-01), SURVEY NO: 17/57, 55, AMBALAPADI, POOLADIKUNNU ,NH-66,ERANJIKKAL POST - 673001

CHALAKUDY

1224. POPULAR VEHICLES AND SERVICES LIMITED (2701--0C), SURVEY NO: 350/1,352/1,352/2,362/1,363/3,364/1,NH BYEPASS 47,PERAMBRA VILLAGE, CHALAKUDY, THRISSUR DIST.,KERALA- 680722 - 680307
PH :9072609600.
1225. BRD CAR WORLD LIMITED (--01), MURINGOOR P.O., CHALAKUDY - 680316
PH :9645176999.
1226. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), SURVEY NO. 53/1, 53/2 & 55/1, PANAMBILLY COLLEGE JUNCTION, VILLAGE-PERAMBRA, POTTA, TALUKA CHALAKKUDY, DISTT. THRISSUR, PIN-680307, KERALA - 680307

CHALAPARAMBU

1227. AVG MOTORS PVT LTD (--01), VAIKOM, KOTTYAM, CHALAPARAMBU, , - 673002

CHANGANASSERY

1228. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), BUILDING NO. 4/11, BLOCK NO. 4, RE-SURVEY NO. 224/1, VAZHAPPALLI WEST VILLAGE, CHANGANASSERY TOWN & TALUK, KOTTAYAM DIST.,KERALA - 686103
PH :9778699557.

CHANGARAMKULAM

1229. A M MOTORS (--01), MELE MANTHADAM, ALANKODE, P.O., CHANGARAMKULAM, MALAPPURAM DISTT, KERALA - 679585
PH :9895756008.

CHAVAKKAD

1230. BRD CAR WORLD LIMITED (--06), ORUMANAYOOR P.O.CHAVAKKAD, DISTRICT-THRISSUR - 680512
PH :9645963999.
1231. SAI SERVICE PRIVATE LIMITED (--01), SURVEY NO. 26/5, MULLANTHARA PARAMBU, OVUNGAL, KUNNAMKULAM ROAD, TALUK – GURUVAYUR, CHAVAKKAD.) - 680506
PH :9495883852.

CHAVARA

1232. SARATHY AUTO CARS (--01), SURVEY NO: 99/2, 99/21-1 & 99/21-2, OPPOSITE CHAVARA BUS STAND, NH 66, CHAVARA, KOLLAM DIST., KERALA -691584 - 691584

CHENGANNUR

1233. SARATHY AUTO CARS (--06), PRAVUMKOOD, THIRUVANVANDOOR P.O. CHENGANNUR TALUK, ALAPPUZHA (DIST) - 689124
PH :9447002647.
1234. SAI SERVICE PRIVATE LIMITED (--01), SURVEY NO. 276/2,11,13,13-2-2, NEAR BPCL PUMP AND SURVEY NO. 276/12, M C ROAD, NEAR LABHAM MAVELI STORE,CHENGANNUR PO & MUNICIPAL, CHENGANUUR VILL & TALUK, ALAPUZHA DIST., KERALA-689121 - 689121
PH :9288024220.

CHERPULASSERY

1235. KVR AUTOCARS PVT LTD (--01), SURVEY NO. 154/4, RS NO. 154/4, VILLAGE – CHERUPPALASSERY, TALUK – OTTAPPALAM, DISTRICT – PALAKKAD - 679503

CHERTHALA

1236. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), OPPOSITE TO S.N. COLLEGE, S.N. PURAM P.O., KANJIKKUZHI,CHERTHALA, ALAPPUZHA-DIST. - 688552
1237. POPULAR VEHICLES AND SERVICES LIMITED (--01), RE-SURVEY NO.150/2-1,147/3, BUILDING NO.KP-18/80, N.H. KANJIKUZHI VILLAGE, CHERTHALA, ALAPPUZHA DISTT., - 688582
PH :9072530127.
1238. MAIJO MOTO ( A UNIT OF GEORGE MAIJO AUTOMOBILES PVT LTD ) (--01), RE SURVEY NO:121/ 20B2,BUILDING NO:28/344,CHERTHALA,ALAPPUZHA DIST, KERALA - 688524 - 688524

CHERUPUZHA

1239. KVR AUTOCARS PVT LTD (--01), SURVEY NO.191, VAYAKARRA VILLAGE, - 670511

CHINGAVANAM

1240. POPULAR VEHICLES AND SERVICES LIMITED (--01), BUILDING NO. VI 461, RE SURVEY NO. 290/9, GOMATHI JUNCTION, MAVILANGU KARA, CHINGAVANAM P.O., DISTT. KOTTAYAM, KERALA - 686531
PH :9778690817.

CHITTUR

1241. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), S.NO.719/3 AND 721/1, RE SURVEY NO.671/10, VELLIYAVALLAMPPATHY VILLAGE, KOZHINJAMPARA, CHITTUR, PALAKKAD DISTT. - 678555

CHULLIMANOOR

1242. POPULAR VEHICLES AND SERVICES LIMITED (1601--16), RE-SURVEY NO. 43/7, VILLAGE-ANAND, CHULLIMANOOR TOWN, TALUKA-NEDUMANGAD, DIST. TRIVANDRUM, PIN-695541, KERALA - 695541
PH :9778690745.

COCHIN

1243. POPULAR VEHICLES AND SERVICES LIMITED (2701-27-01), PERANDOOR ROAD, PUNNAKAL, ELAMAKKARA, COCHIN - 682025
PH :9846017725.
1244. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-02), BEHIND COMMERCIAL SALES TAX, M.G. ROAD, COCHIN, - 682015
PH :9745998040.
1245. SAI SERVICE PRIVATE LIMITED (2705-27-01), 50/1 15L, ,CHERANALLOOR ROAD,EDAPPALLY,COCHIN - 682024
PH :9645106339.
1246. SAI SERVICE PRIVATE LIMITED (2705-27-02), NH-47,,PATHADIPALAM,EDAPPALLY,COCHIN - 682024
PH :9645105057.
1247. POPULAR VEHICLES AND SERVICES LIMITED (2701-27-04), NEAR LISI HOSPITAL, OPP. IMA BLOOD BANK, COCHIN, - 682018
PH :9846298618.
1248. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-09), PALARIVATTOM KAKANAD ROAD, KAKANAD, COCHIN, - 682030
PH :9745998013.

1249. SAI SERVICE PRIVATE LIMITED (2705--08), KETTEZHUTHUM KADAVU, INTUC JUNCTION, NETTOOR, ERNAKULAM, COCHIN (KERALA) - 682040
PH :8129496818.
1250. MAIJO MOTO ( A UNIT OF GEORGE MAIJO AUTOMOBILES PVT LTD ) (2709-27-01), DOOR NO.5/452, 5/452A, 5/453, OLD ELOOR ROAD, ELOOR JUNCTION, NORTH KALAMASSERY, DISTRICT - ERNAKULAM, COCHIN. - 683104
1251. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-0L), SURVEY NO. 30-A/32, KARIKKAD ROAD, THEKKUMBHAGAM, PUTHIYAKAVU, TRIPUNITHURA, ERNAKULAM, KERALA - 682301
PH :9745992070.
1252. MAIJO MOTO ( A UNIT OF GEORGE MAIJO AUTOMOBILES PVT LTD ) (2709--02), PLOT NO.2/316, NH-47, MARADU VILLAGE, KANNDIKAD, NEAR SAROVARAM, KUNDANOOR, COCHIN (KERALA) - 607001
1253. POPULAR VEHICLES AND SERVICES LIMITED (2701-27-10), SURVEY NO: 162/2,162/24-2,162/25,162/3,162/1-2,162/13-2 &162/5, BUILDING NO: 33/2,33/3 & 33/4, PIPELINE ROAD, PADIVATTOM, VAZHAKALA, COCHIN, KERALA-682021. - 682021
1254. BRD CAR WORLD LIMITED (--10), OPPOSITE IOC PARKING GATE, SEA PORT AIRPORT ROAD, IRRUMPANAM, - 682024

EDAKKARA

1255. KVR AUTOCARS PVT LTD (--01), SURVEY NO. 1087/1C-91, VAZHIKADAVU VILLAGE, OOTY ROAD, MUNDA, EDAKKARA TOWN, NILAMBUR TALUK, MALAPPURAM DIST., KERALA - 679331
PH :9747020777.

EDAPPAL

1256. POPULAR VEHICLES AND SERVICES LIMITED (4702--05), KOZHIKODA ROAD, KAVILPADY, EDAPPAL, MALAPPURAM - 679582
PH :9946104680.

EDAVANNAPARA

1257. A M MOTORS (--01), SURVEY NO. 98/1, PALLIPADI,EDAVANNAPPARA- AREEKODE ROAD, CHEEKODE POST, EDVANNAPPARA, KONDOTTY TALUK, MALAPPURAM DIST., KERALA- 673645. - 673645

EDAVANNAPPARA

1258. POPULAR VEHICLES AND SERVICES LIMITED (--01), SURVEY NO. 77/16-1 & 77/2-4 ,BUILDING NO.18/152-B, CHEEKODE VILLAGE,EDAVANNAPARA KONDOTTY ROAD, CHERUVAYOOR PO, MALLAPPURAM DISTRICT, KERALA-673645 - 673645
PH :9539007323.

ETUMANOOR

1259. INDUS MOTOR (--01), 43/16-2, 43/17, 43/18, 43/3, 2, OPP. SANETTUMANOOR, KOTTYAM, PIN-686631, KERALA - 686631

FORT KOCHI

1260. SAI SERVICE PRIVATE LIMITED (--01), PLOT NO.83/1,2 OPPOSITE TO KUMAR PETROL PUMP, STATUE ROAD, CHULLIKKAL POST, FORT KOCHI - 682005
PH :9645106330.

GURUVAYUR

1261. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--08), KUNAMKULLAM CHAVAKKAD ROAD, OPPOSITE CHOOLPURAM MOSQUE, GURUYOOR, THRISSUR - 680505
PH :9745998015.

IRINJALAKUDA

1262. BRD CAR WORLD LIMITED (--05), KARUPADANNA P.O., IRINJALAKUDA, THRISSUR - 680670
PH :9539006999.

IRITTY

1263. INDUS MOTOR COMPANY PRIVATE LIMITED (--02), SURVEY NO. 48, BUILDING NO. 214, PERUPARAMBA, IRITTY, KANNUR, KERALA - 670703
PH :9747554929.

IRITY

1264. POPULAR VEHICLES AND SERVICES LIMITED (--01), RE-SURVEY NO: 14/4, 11/2, NEAR JABBAR KADAVU BRIDGE, KEEZHUR VILL., PERAVOOR ROAD, IRITTY MUNICIPAL, KANNUR DIST. KERALA. - 670703
PH :7902473741.

KAIPAMANGALAM

1265. SAI SERVICE PRIVATE LIMITED (2705--07), SURVEY NO: 240/4-2 & 240/4-3, 249/5-19, 249/4A-3, 249/4B-1, 249/5-14 , 249/4B, 249/4A-4,KAIPAMANGALAM BOARD,KAIPAMANGALAM P O, THRISSUR DIST, KERALA - 680681
PH :8129496846.

KALAMASSERY

1266. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--07), KALAMASSERY, ALUVA WEST, ERNAKULAM DIST, KERALA - 683106
PH :9745998012.

KALLAMBALAM

1267. POPULAR VEHICLES AND SERVICES LIMITED (--01), BUILDING NO. 5/472, NH-47, KADUVAPALLY, THOTTAKAD P.O, KALLAMBALAM, TRIVANDRUM DIST., KERALA - 695605
PH :8086078788.

KALPETTA

1268. INDUS MOTOR COMPANY PRIVATE LIMITED (4701--0C), MEENANGADI, KAKKAVAYAL P.O., NORTH KALPETTA,WAYAND - 673591
PH :9745998592.
1269. KVR AUTOCARS PVT LTD (--C1), BUILDING NOS. 363, 364, 365, 366,367,368 AND 369 CONSTRUCTED ON THE PLOT COMPRISED IN RESURVEY NOS. 719/6, 722/3, 722/22, 722/6, 722/8, 722/10, 722/21, SITUATED AT MUTTIL NORTH VILLAGE, VYTHIRI TALUK, KALPETTA SUB-DISTRICT, WAYANAD DISTRICT, KERALA. - 673122
PH :9747021902.

KANHANGAD

1270. POPULAR VEHICLES AND SERVICES LIMITED (4702--06), HIGHWAY JUNCTION,KANHANGAD SOUTH P.O .,KANHANGAD - 689641
PH :9946104685.
1271. KVR AUTOCARS PVT LTD (--02), ARANGADI, P.O. KANHANGAD, DIST. KASARGOD, - 671315
PH :9605040999.
1272. INDUS MOTOR COMPANY PRIVATE LIMITED (4701--0F), SURVEY NO.491/3A1 AND 491/3A2, AJANUR VILLAGE, KANHANGAD, HOSADURGA TALUK, KASARAGOD DISTT, KERALA. - 671541

KANJIRAPALLY

1273. AVG MOTORS PVT LTD (--01), NEW SURVEY NO. 187/2 (OLD SURVEY NO. 299/1, 299/11), KANJIRAPALLY VILLAGE & TALUKA, KOTTAYAM DISTRICT.,KERALA - 686512

KANJRAPALLY

1274. INDUS MOTOR COMPANY PRIVATE LIMITED (--02), VADAKUMBHAGAM KARAYIL, KUNNAMBHAGAM P.O. , KANJIRAPALLY - 686506
PH :9745998009.

KANNUR

1275. INDUS MOTOR COMPANY PRIVATE LIMITED (4701--0E), BALANKINAR JN., KATTAMPALLY.P.O, KANNUR - 690011
1276. KVR AUTOCARS PVT LTD (--04), CP-3-651-B, OPP. DHANRAJ TALKIES, PUTHIYATHERU, CHIRAKKAL POST, KANNUR, KERALA - 670011
PH :9656034333.
1277. POPULAR VEHICLES AND SERVICES LIMITED (4702--0F), PLOT NO.82/6A, NEAR CHARAPPURAM SREEMUTHAPPAN KAVU, KAPPAD ROAD, THAZHE CHOVVA (PO), KANNUR - 670018
PH :9846062796.
1278. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), BALAN KINAR , KATTAMPALLY PO, KANNUR, KERALA - 670611

KARIKKAD (KUNNAMKULAM))

1279. BRD CAR WORLD LIMITED (--02), BRD INDUSTRIAL ESTATE,KARIKKAD, KUNNAMKULAM - 680519
PH :9995804599.

KARUNAGAPALLY

1280. SARATHY AUTO CARS (--05), K.S. PURAM,NEELIKULAM, KARUNAGAPPALLY,KOLLAM, - 690544
PH :9526691565.
1281. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), SY.NO.243/1, 243/10, 243/16, 243/14, 243/15, 243/16, EDAPPALLY KOTTA JUNCTION, NEAR TITANIUM, CHAVARA POST, KARUNAGAPALLY, DISTT. KOLLAM. - 691583
PH :9745998006.
1282. SARATHY AUTO CARS (--11), SURVEY NO. 15/3, SIDCO INDUSTRIAL AREA, EDAKULANGARA PO, NEAR KARUNAGAPALLY RAILWAY STATION, KARUNAGAPALLY, KERALA. - 690562
PH :9526691565.

KASARGOD

1283. KVR AUTOCARS PVT LTD (--01), ANANGUR, VIDYANAGAR (PO), NH17, KASARGOD - 671123
PH :9747021206.
1284. POPULAR VEHICLES AND SERVICES LIMITED (4702--0D), MUNDAKULAM, CHEMMANAD (PO), KASARGOD - 671371
PH :9946104621.
1285. INDUS MOTOR COMPANY PRIVATE LIMITED (--03), 18/304A & 18/304B, SY. NO. 39/3B, RE SY. NO. 57/6,MOGRAL, MANJESHWAR TALUK, KASARAGOD, KERALA - 671541
PH :9747550747.

KATAPPANA

1286. AVG MOTORS PVT LTD (--01), PALLIKKAVALA, KATTAPPANA, IDUKKI, KERALA - 685508

KATTAPANA

1287. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), KATTAPPANA-IDUKKI KAVALA, BYE PASS ROAD, KATTAPPANA, IDUKKI (DIST.). - 685508
PH :9746743460.
1288. POPULAR VEHICLES AND SERVICES LIMITED (--01), RE-SURVEY NO. 81/3, VILLAGE & TOWN - KATTAPPANA, TALUK & DIST.-IDUKKI, KERALA. - 685515
PH :9746818407.

KAYAMKULAM

1289. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--05), KARIYILAKULANGARA, KAYANKULAM P.O., ALAPPUZHA DISTT. - 690572
PH :9745998005.
1290. POPULAR VEHICLES AND SERVICES LIMITED (--03), NH 47, KOTTUKULANGARA, KAYAMKULAM P.O., ALAPPUZHA DISTT. - 690502
PH :9946105601.

KODAKARA

1291. A.M. MOTORS (--01), OPPT. KODAKARA POLICE STATION, NH-544, PERINGAKULAM, KODAKARA POST, THRISSUR - 680684

KODANGALLUR

1292. SAI SERVICE PRIVATE LIMITED (2705--03), NH-17,T.K.S.PURAM,,KODUNGALLOOR - 680667
PH :9645106571.

KODUNGALLUR

1293. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), RE-SURVEY NO. 116/1-6, 116/2-5, BUILDING NO. 560/A, WARD NO. VII, AALA VILLAGE, (OLD VILLAGE-SREENARAYANAPURAM), KODUNGALLUR TALUK, MADHILAKOM SRO, SANTHIPURAM PO, THRISSUR DIST., KERALA - 680008
PH :9747513444.

KODUVALLY

1294. A M MOTORS (--01), SURVEY NO:91/9, 91/10,NALLANKADY, VAVAD POST, KODUVALLY, KOZHIKODE DISTRICT, KERALA - 673572
PH :9895979023.

KOLANCHERRY

1295. SAI SERVICE PRIVATE LIMITED (--01), SURVEY NO.138/7, BLOCK NO. 47, WARD-8, KOLENCHERY TOWN, NH-85, AIKARANADU NORTH VILL., KUNNATHUNADU TALUK, ERNAKULAM DIST., KERALA-682311 - 682311
PH :7356605955.

KOLLAM

1296. POPULAR VEHICLES AND SERVICES LIMITED (1601--04), H & C COMPOUND, MUNDDACKAL, KOLLAM - 680006
PH :7594977550.

1297. INDUS MOTOR COMPANY PRIVATE LIMITED (1602--03), OLD SARATHY THEATRE, PUNALOOR ROAD, KOLLAM - 691005
PH :9745998004.

KONDOTTY

1298. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), SURVEY NO. 16/1, BLOCK NO. 36 (OLD SURVEY NO. 100/1), NEDIYIRUPPU VILLAGE, KONDOTTY PO, ERNAD TALUKA, MALAPURAM DISTRICT, KERALA - 683573
PH :9746743178.

KOOTHATTUKULAM

1299. SAI SERVICE PRIVATE LIMITED (--01), EDAPUTHUSSERY BUILDING, M.C. ROAD, OPP. MARYGIRI PUBLIC SCHOOL, KOOTHATHUKULAM P.O., ERNAKULAM DT. - 686662
PH :9645106258.

1300. POPULAR VEHICLES AND SERVICES LIMITED (--01), SURVEY NO. 614/3-4, BAPUJI JUNCTION,CHORAKUZHI,M C ROAD, KOOTHATTUKULAM, MUVATTUPUZHA TALUK,ERNAKULAM DIST., KERALA - 686662 - 686662

KOPPAM

1301. A M MOTORS (--01), SURVEY NOS: 331/3-6, 331/3-10, NEAR SALAFIYYA TRAINING COLLEGE, PERINTHALMANNA-PATTAMBI ROAD, KARINGANDU, VILAYUR POST, KOPPAM, PALLAKKAD DIST., KERALA-679309 - 679309
PH :9048666635.

KOTHAMANGLAM

1302. POPULAR VEHICLES AND SERVICES LIMITED (2701--0B), NEAR BSNL OFFICE, THANGALAM, KOTOHAMANGALAM, KERALA - 686691
PH :9846027990.

1303. INDUS MOTOR COMPANY PRIVATE LIMITED (--03), PALAKKADAN BUILDING,CHANKLAM,KOTHAMANGALAM - 686691
PH :9745998479.

KOTTAKKAL

1304. INDUS MOTOR COMPANY PRIVATE LIMITED (4701--09), NEAR MATHRUBHUMI PRESS, P.O. KOTTAKKAL, MALAPPURAM DIST, - 676503
PH :9745998017.

1305. POPULAR VEHICLES AND SERVICES LIMITED (4702--03), NH-17, ,CHANDAPARAMBU, ,RANBATHANI P.O, MALAPPURAM, KOTTAKAL - 676510
PH :9946104631.

KOTTARKKARA

1306. POPULAR VEHICLES AND SERVICES LIMITED (--01), MYLOM, MC ROAD, KOTTARAKKARA, DISTT-KOLLAM, KERELA - 691531
PH :8086073466.

1307. SARATHY AUTO CARS (--01), WARD NO.40, MELILLIA PANCHAYATH, IPPALLOOR LOWER KARIKAM, KOTTARKARA DISTT. KOLLAM (KERALA) - 691531
PH :9847423365.

1308. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), RE SURVEY NO.207/3-2, KIZHAKEKKARA MURIYIL, KNS HOSPITAL JUNCTION, KOTTARAKKARA VILLAGE AND TALUKA, KOLLAM DISTT., - 691531
PH :9747562299.

1309. POPULAR VEHICLES AND SERVICES LIMITED (--02), BUILDING NO. MP/20/749,20/426, 20/748, INCHAKADU, KALAYAPURAM VILLAGE, MYLOM PANCHAYATH, KOTTARAKKARA TALUKA, KOLLAM DISTRICT, KERALA- 691560 - 691560
PH :8086073466.

1310. INDUS MOTOR COMPANY PRIVATE LIMITED (--02), RE-SURVEY NO.141/3-4,142/1-2,15-16,143/1-2,143/2,143/15-2,143/15-2-2, BEARING NOS. 25/36 & 38, KOTTARAKKARA VILLAGE, KOTTARAKKARA TALUK, KOLLAM DISTRICT, KERALA- 691506 - 691506
PH :9747562299.

KOTTAYAM

1311. AVG MOTORS PVT LTD (--01), ERAYILKADAVU, KOTTAYAM - 686001
PH :7510982222.

1312. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--04), MULANKUZHA JN., NATTAKOM P.O., KOTTAYAM , KERALA - 686013
PH :9745998148.

1313. POPULAR VEHICLES AND SERVICES LIMITED (--01), NEAR ST. THOMAS CHURCH, S.H. MOUNT, P.O, KOTTAYAM - 686006
PH :8086073454.

1314. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--0C), MANIPPUZHA, NATTAKOM P.O.,KOTTAYAM - 686013
PH :9745998007.

KOZHENCHERRY

1315. AVG MOTORS PVT LTD (--03), KOZHENCHERRY, COLLEGE JUNCTION, DISTRICT-PATHANAMTHITTA, - 689641
PH :9446092995.

1316. SAI SERVICE PRIVATE LIMITED (--01), SURVEY NO: 315/15-B & 315/15-C,TB JUNCTION, NEAR HP PETROL PUMP, KOZHENCHERY, PATHANAMTHITTA, KERALA - 689641. - 689641

KUNNAMANGALAM

1317. BIMAL AUTO AGENCY (--01), SURVEY NO 268/6, D.NO 6/247 ,KUNNAMANAGALAM, KERALA - 673571

KUNNAMKULAM

1318. POPULAR VEHICLES AND SERVICES LIMITED (2701--07), CHOONDAL,TRISSUR ROAD, KUNNAMKULAM, TRISSUR DIST - 680502
PH :9946105695.

KUTTIYADI

1319. A M MOTORS (--01), KUTTIYADI-PERAMBRA ROAD, PARAKKADAVU, PALERI POST, KUTTIYADI - 673508

1320. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), CHERIYAKUMBALAM, PARAKADAVU,KUTTIYADI, - 673508

LAKKIDI PERUR

1321. A M MOTORS (--01), 217/7, 217/2, 278/2, 278/1, PALAPPURAM, P.O. OTTAPPALAM, LEKKIDI PERUR DISTT. PALAKKAD, - 679302

MAILLATTY

1322. KVR AUTOCARS PVT LTD (--03), CHOWKI, MAILLATTY(P.O.), (VIA) UDUMA, POINACHI, KERALA - 671319
PH :9747021026.

MALAPPURAM

1323. A M MOTORS (--01), VARANGODE, DOWNHILL, MALAPURAM, - 676519
PH :9895705325.

MALLAPALLY

1324. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), THOPPIL COMPLEX, MALLAPPALLY KOTTAYAM RD, MALLAPPALLY WEST, MALLAPPALLY (KERALA) - 689585
PH :9747541400.

MANATHAVADY

1325. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), SURVEY NO. 1/2A1, A1, B1, RY 1/210, 1/99, MYSORE ROAD, CHETTAPALAM, MANATHAVADY CITY & TALUK, WYANAD DIST., KERALA. - 670645
PH :9745997002.

MANJARI

1326. POPULAR VEHICLES AND SERVICES LIMITED (--0E), NARUKARA VILLAGE, RAJIV GANDHI BYEPASS JN., THRUKKAL, MANJERI (KERALA) - 676121
PH :8589992406.

MANJERI

1327. A M MOTORS (--05), THURAKKAL BYEPASS, MANJERI, MALAPURAM, KERALA - 676121
PH :9895756035.

1328. KVR AUTOCARS PVT LTD (--01), CH BYE PASS ROAD, MANJERI, MALAPPURAM, KERALA - 676123
PH :9747020801.

MANNARKAD

1329. A M MOTORS (--07), NH-213, MANNARKAD, DIST.-PALAKKAD - 678582
PH :9895979048.

MANNARKKAD

1330. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--0K), ANAKATTY ROAD, AANDIPPADAM, NELLIPPUZHA-PO. MANNARKAD,KERALA - 678583
PH :9745995946.

MAVELIKARA

1331. POPULAR VEHICLES AND SERVICES LIMITED (--02), KONNAYIL SUVAKO INDUSTRIAL COMPLEX,,SHED A-1,, KOLLAKADAVU INDUSTRIAL ESTATE, KOCHAL MOODU, KALLIMEL P.O.,, MAVELIKKARA, KERALA - 690570
PH :9400052338.

1332. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), SURVEY NO. 135/1/A, RE-SURVEY NO. 28/52, NEAR PRAYIKKARA, MAVELIKKARA VILLAGE & TALUK, ALAPUZHA (ALLEPPEY) DISTRICT, KERALA – 690 101. - 690101
1333. POPULAR VEHICLES AND SERVICES LIMITED (--10), BUILDING NO. 10/115-A, WARD NO. 10, CHENNITHALA VILL. AND TOWN, SHANTHIVANAM JUNCTION, CHERUKOLE P.O., MAVELIKKARA TALUK, ALAPPUZHA DIST., KERALA- 690104. - 690104
PH :9778690833.

MORAYUR

1334. A M MOTORS (--01), SURVEY NO. 328/1, VILLAGE – MORAYUR, VALENCHERY, DISTRICT – MALAPPURAM, KERALA. - 673642
PH :8086526666.

MUVATTAPUZAH

1335. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), NH-49, MUVATUPUZHA KODAMANGALAM ROAD, NEAR R.K. HOSPITAL, MUVATUPUZHA, ERNAKULAM DIST - 686661
PH :97459998011.
1336. POPULAR VEHICLES AND SERVICES LIMITED (2708--02), MUTHUKALLU JUNCTION,PERUMPALLUR P.O., MUVATTUPUZHA, KERALA - 686673
PH :7356988840.

NADAPURAM

1337. A M MOTORS (--01), NADAPURAM-THALASSERY ROAD, , PERODE POST, NADAPURAM, KOZHIKODE, KERALA - 673506

NEDUMANGAD

1338. POPULAR VEHICLES AND SERVICES LIMITED (--01), RE-SURVEY NO.- 855/29, 855/14/1 (OLD SURVEY NO. 1583/1), KARIPPUR VILLAGE, NEDUMANGAD TALUK, TRIVANDRUM DIST.,KERALA-695541. - 695541
PH :9846036696.

NEYATTINKARA

1339. POPULAR VEHICLES AND SERVICES LIMITED (--15), BUILDING NO. 11/562, KP-IX-843, NH 47, KOTTAMOM , KOLLAYIL PANCHAYAT, PANVEL - KOCHI - KANYAKUMARI HIGHWAY, KOTTAMOM, NEYYATTINKARA, TRIVANDRUM, KERALA-695122 - 695122
PH :9946104602.

NEYYANTTINKARA

1340. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), INDUS MOTOR CO. PVT. LTD., OLD M.V THEATRE, NEAR KSRTC BUS STATION, NEYYATINKARA, DIST. TRIVANDRUM - 695121
PH :9747544500.

NILAMBUR

1341. INDUS MOTOR COMPANY PRIVATE LIMITED (4701--0A), MINERVA JUNCTION, NILAMBUR , KERALA - 679329
PH :9745998396.
1342. INDUS MOTOR COMPANY PRIVATE LIMITED (4701--0D), MANAVEDHAM HIGH SCHOOL ROAD, CHANDAKUNNU - NILAMBUR PO, NILAMBUR, MALAPURAM DIST. - 679329
PH :9745998396.
1343. POPULAR VEHICLES AND SERVICES LIMITED (--01), RE-SURVEY NO: 6/1 BLOCK NO. 76, CHEMMARAN, NADUVATH PO, WANDOOR ROAD,NILAMBUR, MALAPPURAM DIST., KERALA - 679328
PH :7736094999.
1344. A M MOTORS (--01), NILAMBUR MYSORE ROAD, JYOTHIPADI, NILAMBUR - 679329

NILAMEL

1345. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), SURVEY. NO. 195/10, 195/3-1-2, 195/3-2-1, 195/8, 195/14, 195/9-1, 195/11-1, BLOCK NO. 32, ATTINGAL MUNCIPALITY, PAZHAYAKUNNAMEL VILLAGE, CHIRAYINKIL TALUK, (BORDER OF NILAMEL TOWN), TRIVANDRUM DIST., KERALA - 695601
PH :9745993331.
1346. POPULAR VEHICLES AND SERVICES LIMITED (--01), BUILDING NO. 10/279 TO 288, M. C. ROAD, KANNANCODU, NILAMEL PO, KOLLAM (DIST.), KERALA- 691535 - 691535
PH :8714606483.

OTTAPALAM

1347. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), BUILDING NO.23/667, 23/669, PALAKKAD-OTTAPPALM ROAD, OTTAPPALAM VILLAGE, OTTAPPALAM TALUKA, PALAKKAD DISTT., KERALA. - 679101
PH :9747544454.

PALA

1348. POPULAR VEHICLES AND SERVICES LIMITED (--04), 12TH MILE,PALA-PONKUNNAM ROAD,PALA - 686575
PH :9072609475.
1349. INDUS MOTOR COMPANY PRIVATE LIMITED (--05), OPP. ALPHONSA COLLAGE ARUNAPURAM(PO), PALA, KOTTAYAM - 686574
PH :9745998878.
1350. AVG MOTORS PVT LTD (--01), SURVEY NO.670/1, BLOCK-21, LALAM VILLAGE, ANTHINADU MEENANCHIL, PALA, KOTTAYAM DIST. - 686651
PH :9447137246.
1351. INDUS MOTOR COMPANY PRIVATE LIMITED (--07), SURVEY NO. 176, BLOCK NO. 16, HIGHWAY JUNCTION, ETTUMANOOR-POOJAR HIGHWAY, CHERPUNKAL, PALA, KOTTAYAM DISTRICT - 686584
PH :9747516934.

PALAKKAD

1352. POPULAR VEHICLES AND SERVICES LIMITED (2701--09), OPP. PALANA HOSPITAL,KODUVAYOOR ROAD,KINASSERY P.O.,PALAKKAD - 678707
PH :9946105613.
1353. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--0G), VADAKKUMURI-NH-47, KANNADI, KUZHALMAMMAM (P.O.), PALAKKAD. - 678701
PH :9745998590.
1354. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), DOOR NO: 5/366 & 367, NH 47, KOOTUPATHA, CHANDRANAGAR POST, PALAKKAD - 678007
PH :9747519500.

PANDIKKAD

1355. A M MOTORS (--01), SURVEY NOS: 333/2-2, 333/3-2,CHOORAKKAVU, PERINTHALMANNA ROAD, NEAR INDIAN OIL PETROL PUMP, PANDIKKAD TOWN & POST, MALAPPURAM DISTRICT, KERALA - 676521
PH :9539999570.

PARAPPANANGADI

1356. A M MOTORS (--01), SURVEY NO.66/6, 66/7, KODAPPADI, POST-CHETTIPPADY, PARPANGADI, MALAPPURAM. - 676319
PH :9895900466.

PARASSALA

1357. SARATHY AUTO CARS (--01), SURVEY NO.21/14, BUILDING NO. 717.C, NEAR SARASWATHY HOSPITAL, PARVATHIYANVIL - 695502

PARAVUR

1358. POPULAR VEHICLES AND SERVICES LIMITED (--01), SURVEY NO. 340/1-76,77,78, NEAR HP PETROL PUMP, PARAVUR-MANJALI MAIN ROAD, MANNAM PO, NORTH PARAVUR MUNICIPAL, ERNAKULAM DIST. 683520, KERALA. - 683520
PH :9072609638.

PATHANAMTHITTA

1359. AVG MOTORS PVT LTD (--02), JUNNUGAPADY, MYLAPRA ROAD, PATHANAMTHITTA, - 689671
PH :9446002987.
1360. INDUS MOTOR COMPANY PRIVATE LIMITED (1602--13), KUMBAZHA, PATHANAMTHITTA - 689653
PH :9745998008.
1361. POPULAR VEHICLES AND SERVICES LIMITED (--05), T.K. ROAD, NEAR COLLECTORATE,PATHANAMTHITTA - 689645
PH :9539009734.
1362. INDUS MOTOR COMPANY PRIVATE LIMITED (--12), SURVEY NO. 11-13/12(1), KARIMPANKUZHY ROAD, NEAR SAROJ GAS AGENCY, MAKKANKUNNU, PATHANAMTHITTA, KERALA. - 689645
PH :9745999858.
1363. POPULAR VEHICLES AND SERVICES LIMITED (--11), BUILDING NO 244 / A, CHURULIKODE PO, PULIMOODU JUNCTION,PATHNAMTHITTA TOWN & DIST.,KOZHENCHERY TALUKA, KERALA-689643. - 689643

PATHANAPURAM

1364. SARATHY AUTO CARS (--01), SURVEY NO. 3060/7-4, 3060/7-5,SALEMPURAM, KAYAMKULAM - PUNALUR ROAD, PATHANAPURAM, KOLLAM DIST., KERALA – 689695 - 689695

PATHIRAPPALLY

1365. POPULAR VEHICLES AND SERVICES LIMITED (--02), BUILDING NO. X/832 TO 834, X/837 TO 838, OPP .UDAYA STUDIO, PATHIRAPALLY TOWN, AMBALAPUZHA TALUK, NH-47, ALAPPUZHA DIST., KERALA-688521. - 688521
PH :9778698169.

PATTAMBI

1366. A M MOTORS (--04), SHORANUR ROAD, PATTAMBI, DISTRICT-PALAKKAD, - 679306
PH :9567866059.
1367. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--0B), PERINTHALMANNA ROAD, THEKKUMURI, PATTAMBI - 679303
PH :9745998295.
1368. A M MOTORS (--09), CHERPULASSERY ROAD, KOOMBAN KALLU, KARIMPULLI, MELE PATTAMBI POST, PALAKKAD DISTT., KERALA. - 679306
PH :9567866059.

PAYANNUR

1369. POPULAR VEHICLES AND SERVICES LIMITED (4702--04), N H 17,,EZHILODE P O, ,,PAYYANUR - 670309
PH :9946104701.
1370. POPULAR VEHICLES AND SERVICES LIMITED (--01), SY. NO. 218/1, CHERUTHAZHAM VILLAGE, EZHILODE (NEAR COLONY BUS STOP), PAYANNUR-KANNUR NH, PAYANNUR TALUK, KANNUR DISTRICT, KERALA – 670 309. - 670309
PH :9946104701.

PAYYANUR

1371. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), SURVEY NO.-289/117, 290/105, KARIVELLUR PERALAM GRAM PANCHAYAT (NEAR PALATHARA BRIDGE), PAYYANUR TALUK, KANNUR DISTRICT, KERALA-PIN-670521. - 670521
PH :9745998204.

PEREMBRA

1372. POPULAR VEHICLE & SERVICE (--01), NO. 62/1,KOOTHALI VILLAGE, MOORIKUTHI, PERAMBRA TOWN, KOYILANDY TALUKA, CALICUT - 673525

PERINTHALMANA

1373. A M MOTORS (--03), NEAR FIRE STATION, HOSPITAL ROAD, PERINTHALMANNA - 679322
PH :8129818235.
1374. KVR AUTOCARS PVT LTD (--01), SURVEY NO. 87/8-15, CALICUT ROAD, NEAR ITC, THIRURKAD, PERINTHALMANNA - 679351
PH :9747020573.
1375. KVR AUTOCARS PVT LTD (--06), OOTY ROAD, PERINTHALMANNA, MALAPPURAM(DT.), KERALA - 679322
PH :9747020837.

PERUMBAVOOR

1376. SAI SERVICE PRIVATE LIMITED (2705--04), M.C.ROAD,PERUMBAVOOR,ERNAKULAM DIST,KERALA - 683542
PH :7034258335.
1377. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), SURVEY NO. 72/2-3, 72/3-3, TALUK - KUNNATHUNADU, VILLAGE - RAYAMANGALAM, SUB DIST.-PERUMBAVOOR, DIST.ERNAKULAM. - 683541
PH :9747591803.

PIROVAM

1378. SAI SERVICE PRIVATE LIMITED (--01), SUVEY NO. 788/12-2-5, NEAR PIRAVOM GOVT. HOSPITAL, PIRAVOM TOWN & MUNICIPALITY, MUVATTUPUZHA TALUK, ERNAKULAM DIST., KERALA. - 686664
PH :9645106198.

PUNALUR

1379. SARATHY AUTO CARS (--03), NH-208, Q.S. ROAD,ELAMPAL POST,PUNALUR, KOLLAM DIST - 691322
PH :9744400265.
1380. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), SY. NO. 48/1/42, OLD, SY. NO. 231A/3324, (OLD RAMRAJ TILES FACTORY), THALICODE, PATHANAPURAM TALUK, PUNALUR ANCHAL ROAD. - 691305
PH :9747638885.

QUILANDY

1381. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), BUILDING NO.13/53 A, CHENGOTTUKKAVE VILLAGE, QUILANDY, KOZHIKODE DISTT. - 673306

QUILON

1382. SARATHY AUTO CARS (--01), NH-47 BYE PASS,AYATHIL(P.O.),QUILON - 691017
PH :9744552265.
1383. SARATHY AUTO CARS (--12), BUILDING NO. 15/620, SURVEY NO. 234/1, 235/2, SITHARA JUNCTION, ADICHANALLOOR VILLAGE, KOTTIYAM PO, KOLLAM DIST., KERALA. - 691571
PH :9847936165.
1384. SARATHY AUTO CARS (--13), SURVEY NO. 431/13-42, NEAR SN PUBLIC SCHOOL, VADAKKEVILA, AYATHIL, KILLIKLLOOR PO, PUNTHALATHAZHAM-PALATHARA ROAD, KOLLAM, KERALA - 691004
PH :8606430765.

RAMANATTUKKARA

1385. A M MOTORS (--06), NEAR RED CRESCENT HOSPITAL, FEROKE, CHUNGAM, CALICUT DISTRICT, RAMANATTUKARA, - 673632
PH :9567866144.

RANNI

1386. INDUS MOTOR COMPANY PRIVATE LIMITED (--06), CHELLAKKAD-PO, PATHANAMTHITTA( DISTRICT), RANNI - 689677
PH :9745998737.
1387. POPULAR VEHICLES AND SERVICES LIMITED (--01), SURVEY NO:417/3, 417-10, 417/16-2-1 & 41, BLOCK NO:09,PAZHAVANGADI VILLAGE, RANNI - 689672

SASTHAMKOTTAH

1388. INDUS MOTOR COMPANY PRIVATE LIMITED (1602--09), NO. SP IX/661, 662, 663, KADAPUZHA ROAD, PORUVAZHY P.O., BHARANIKUVU, SASTHAMKOTTAH, KOLLAM – , KERALA - 690520
PH :9745998849.

SHORNUR

1389. POPULAR VEHICLES AND SERVICES LIMITED (2701--0E), PALAKKAD PATTAMBI ROAD, KULAPPULLY JUNCTION, VADANAMKURUSSI, SHORNUR - 679124
PH :8589992432.

SULTHAN BATHERY

1390. POPULAR VEHICLES AND SERVICES LIMITED (--01), SURVEY NO. 421/5, 421/6, BLOCK NO. 22, KRISHNAGIRY VILLAGE, PATHIRIPALAM, KOLAGAPPARA (PO), TALUK & TOWN - SULTHAN BATHERY, WAYANAD DIST., KERALA. - 673591
PH :7594977551.

TALIPARAMBA

1391. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), RE SURVEY 53/4, THRICHAMBARAM THALIPARAMBA, KANNUR - 670141

TELLICHERRY

1392. INDUS MOTOR COMPANY PRIVATE LIMITED (4701--04), TEMPLE GATE, MAKKOOTAM, THALAYI, TELLICHERRY , KERALA - 670102
PH :9747520100.

THALASSERY

1393. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), NETTUR POST, KODUVALLY, THALASSERY, KANNUR DISTRICT - 670105
PH :9745998022.

THALAYOLAPARAMBU

1394. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--0J), THODUPUZHA ROAD, THALAYOLAPARAMBU, VAIKOM(TALUK), DISTRICT-KOTTAYAM, KERALA - 686605
PH :9746743003.

THAMARASSERY

1395. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), RE-SY. NO. 44/5A, 44/6, ROTH VILLAGE, (NEAR CHUNGAM), THAMARASSERY PANCHAYAT & TALUK, CALICUT DIST., KERALA. - 673573
PH :9747553362.
1396. POPULAR VEHICLES AND SERVICES LIMITED (--10), SURVEY NO.43/4 BLOCK NO:005 , ROTH VILLAGE , THAMARASSERY TALUK , KOZHIKODE DISTRICT, KERALA - 673573
PH :9846397060.

THIRUVALLA

1397. AVG MOTORS PVT LTD (--01), M.C ROAD, PERUMTHURUTHI, THIRUVALLA , PATHANAMTHITTA DISTT - 689107
PH :9446323999.
1398. POPULAR VEHICLES AND SERVICES LIMITED (--06), KAVUMBHAGOM P.O, THIRUVALLA, PATHANAMTHITTA (DIST.), KERALA - 689103
PH :8086073489.

THODUPUZHA

1399. INDUS MOTOR COMPANY PRIVATE LIMITED (--04), PALA ROAD, THODUPUZHA - 685584
PH :9745998631.
1400. POPULAR VEHICLES AND SERVICES LIMITED (--01), SY.NO.124/7A-1, 124/7A-2, THODUPUZHA EHLOOR MAIN ROAD, VILLAGE & TOWN, THODUPUZHA, DISTT. IDUKI - 685585

THRISSUR

1401. POPULAR VEHICLES AND SERVICES LIMITED (2701--05), KUNNATHUMKARA, PARAVATTANI, THRISSUR, KERALA - 680655
PH :6282306495.
1402. SAI SERVICE PRIVATE LIMITED (2705--06), 17/30,POOTHOLE,THRISSUR,KERALA - 680004
PH :9645105051.
1403. BRD CAR WORLD LIMITED (--01), NH 47,BYE PASS,KONIKARRA POST,THALORE, THRISSUR - 680031
PH :9995807141.
1404. INDUS MOTOR COMPANY PRIVATE LIMITED (2702--0D), JYOTHI COMPLEX, GURUVAYOOR ROAD, WEST FORT, THRISSUR - 680004
PH :9745998014.
1405. BRD CAR WORLD LIMITED (--07), GURUVAYOOR ROAD, PUNKUNNAM P.O., PUZHAKKAL, THRISSUR - 680002
PH :9746476529.

THRITHALLUR

1406. BRD CAR WORLD LIMITED (--04), PO-THRITHALLUR, NH-17, THRITHALLUR THRISSUR - 680619
PH :9539197888.

TIRUR

1407. A M MOTORS (--02), SATELLITE AUTO WORKS, PAYYANAGADI POST, TIRUR - 676101
PH :9995879706.
1408. KVR AUTOCARS PVT LTD (--05), T.P 7/204-B, TANUR ROAD,MOOCHIKKAL, MEENADATHUR P.O., TIRUR, DISTRICT-MALAPPURAM, KERALA - 676307
PH :9747020673.
1409. A M MOTORS (--08), THALAKKADATHOOR PO, MALAPPURAM,MALAPPURAM DISTT. - 676103
1410. INDUS MOTOR COMPANY PRIVATE LIMITED (--01), SURVEY NO. 119/3, 4, 9A, OLD MODERN PHARMACEUTICALS PVT. LTD., THRIKANDIYOOR VILLAGE, CHAMBAVATTOM ROAD, TIRUR, KERALA. - 676105
PH :9747518883.
1411. KVR AUTOCARS PVT LTD (--07), 829/A, THANUR ROAD, MOOCHIKKAL, MEENADATHUR PO, TIRUR, MALAPPURAM DIST - 676103

TRIPPUNITHURA

1412. SAI SERVICE PRIVATE LIMITED (2705--05), HILL PALACE ROAD,KARINGACHIRA,COCHIN - 682301
PH :9645105067.

TRIPRAYAR

1413. POPULAR VEHICLES AND SERVICES LIMITED (2701--08), SURVEY NO. 296/5,8, 296/9, 296/9-1, NATTIKA VILLAGE, NEAR CIVIL STATION, POLY JUNCTION, TRIPRAYAR TOWN, THRISSUR TALUK & DISTRICT, KERALA-680566 - 680566
PH :9846699245.

TRIVANDRUM

1414. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-01), T.C. 24/885 THYCAUD P.O., THYCAUD P.O., METTUKUDA, TRIVANDRUM - 695014
PH :9745998001.
1415. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-01), C.I.T. ROAD, KILLIPALAM, KARAMANA P.O, TRIVANDRUM - 695002
PH :9946104601.

1416. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-02), NH BYE PASS ROAD, VEMPALAVATTOM, TRIVANDRUM - 695029
PH :9745998003.

1417. SARATHY AUTO CARS (1607-16-02), KOVALAM BYEPASS,SN NAGAR, MANACAUD (PO), TRIVANDRUM - 695009
PH :9947270665.

1418. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-05), G.G. MEDICAL COLLAGE P.O., MURINJAPALAM, TRIVANDRUM, MURINJAPALAM, , - 695011
PH :9745998002.

1419. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-05), OPP. ST. JUDE CHURCH,CIT ROAD, KILLIPPALAM,TRIVANDRUM - 695002
PH :9846298610.

1420. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-08), NEAR MUSLIM JUMA MASJID, MUKKAM PLAMOODE, VATTAPPARA-MANNANTHALA M C ROAD, VATTAPPARA PO, MANNANTHALA,TRIVANDRUM - 695028
PH :9747540100.

1421. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-11), SURVEY NO.3, TC-7/1069(9), MARUTHAMKUZHI, SASTHAMANGALAM VILLAGE, PTP NAGAR ROAD, KANJIRAMPARA P.O., TRIVANDRUM - 695030
PH :9747508822.

1422. SARATHY AUTO CARS (1607--03), 77/2-11, NEMOM VILLAGE, PAPPANAMCODU INDUSTRIAL AREA, TALUKA AND DISTRICT-THIRUVANANTHPURAM, KERALA.
PH :9961665865.

1423. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-12), RE-SURVEY NO. 26/4-1, MANANTHALA STADIUM ROAD, NEAR SURYAPRABHA AUDITORIUM, ULOOR VILLAGE, MANANTHALA, TRIVANDRUM DIST., KERALA. - 695015
PH :9846498605.

1424. POPULAR VEHICLES AND SERVICES LIMITED (1601-16-17), BUILDING NO. 13/632,632-A, 633,633-A1,633-A2,634-636, 6TH MILE STONE, VAZHAYILA PO, PEROORKADA, THIRUVANANTHAPURAM, KERALA - 695521 - 695521
PH :9288023313.

1425. SARATHY AUTO CARS (1607-16-01), SURVEY NO. 2448/4, VILL. MUTTATHARA, NH BYE PASS ROAD, KALLUMOOD JN., VALLAKADAU PO, ENCHAKKAL, THIRUVANANTHAPURAM, KERALA-695008 - 695008
PH :9562416665.

UPPALA

1426. POPULAR VEHICLES AND SERVICES LIMITED (4702--0A), N.H.17, KAIKAMPA, UPPALA P.O., KASARGOD (KERALA) - 671322
PH :8086078864.

1427. KVR AUTOCARS PVT LTD (--01), NH 17, BANDIYODE, MANGALAPADI (PO), UPPALA, KASARGOD DISTT.,KERALA - 671324
PH :9526021876.

VADAKARA

1428. INDUS MOTOR COMPANY PRIVATE LIMITED (4701--07), BYE PASS JN,VATAKARA-673104,CALICUT, - 673104
PH :9745998021.

1429. POPULAR VEHICLES AND SERVICES LIMITED (--01), NEAR MADAPPALLY GOVT. COLLEGE, MADAPPALLY, P.O. VADAKARA, KOZHIKODE (KERALA) - 673102
PH :8943345935.

VALENCHARRY

1430. A M MOTORS (--01), SURVEY NO. 132/4, KOLAMANGALAM, PERINTHALMANNA ROAD, VALANCHERY, DIST.-MALAPPURAM. - 676552
PH :9745986666.

VARAKALA

1431. SARATHY AUTO CARS (--01), SURVEY NO.7, PALLACHIRA, VARKALA, CHIRAYANKEEZHU TALUKA,THIRUVANATHAPURAM DISTRICT, KERALA-695143 - 695143

VETTICHIRA

1432. KVR AUTOCARS PVT LTD (--03), AP IV, 75A TO G, NH-17, CHUNKAM, DIST. MALAPPURAM, VETTICHIRA, - 676552
PH :9747020023.

WADAKKANCHERY

1433. BRD CAR WORLD LIMITED (--03), VAZHAKODE, CHELAKARA ROAD, MULLURKARA P.O., WADAKKANCHERY, THRISSUR DIST - 680583
PH :9567869403.

## LEH-LADAKH

LEH

1434. DRUK AUTO ZONE (--01), AIRPORT ROAD, LEH (LADAKH), DISTT. LADAKH, LEH - 194101
PH :8082800205.

## MADHYA PRADESH

AGAR

1435. UNITARA MOTORS PVT LTD (--01), 27, UJJAIN ROAD, NEAR MARKETING FUEL STATION, AGAR, MADHYA PRADESH (465669) - 465669
PH :9575650883.

ALIRAJPUR

1436. RUKMANI MOTORS PVT LTD (--01), WARD NO 1, JHABUA ROAD, ALIRAJPUR, MADHYA PRADESH, MP - 457887
PH :8889676035.

ALOT

1437. PATEL MOTORS (INDORE) PVT LTD (--01), IN FRONT OF VIP COLONY, STATION ROAD, ALOT, DIST : RATLAM
MADHYA PRADESH - 457114 - 457114

AMLAHA

1438. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (--01), INDORE ROAD AMLAHA - 466113

ANUPPUR

1439. SHUBH MOTORS PVT LTD (--01), NEAR HDFC BANK, TEHSIL ROAD, ANNUPUR - 484224

ASHOK NAGAR

1440. PREM MOTORS PVT LTD (--02), SURVEY NO. 67/2/3, SINGAKHEDI HOUSE GUNA BYPASS NEAR RAJ MATA CIRCLE, ASHOKNAGAR, MADHYA PRADESH. - 473331
PH :9926809856.

ASHTA

1441. JEEWAN MOTORS PVT LTD (--01), KHASRA NO.111/1 NEAR RELIANCE PETROL PUMP, BHOPAL ROAD, ASHTA, DISTT. SEHORE (M.P.) - 466001

BADARWAS

1442. NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT LTD) (--01), SUMELA HIGHWAY, BADARWAS, DISTT. SHIVPURI, - 473885

BADNAWAR

1443. PATEL MOTORS (INDORE) PVT LTD (--01), KHASRA NO. 2194/1, BADNAGAR ROAD, BADI CHOUPATI, OPPOSITE BSNL TOWER, BADNAWAR, DISTT. - DHAR, MADHYA PRADESH. - 454660

BADWAH / BARWAHA (BOTH NAMES ARE OK)

1444. NIMAR MOTORS PVT LTD (--05), NIRMAL COMPLEX , INDORE ROAD , BARWAH - 451001

BAGH (DISTRICT - DHAR)

1445. RUKMANI MOTORS PVT. LTD. (--01), NEAR BAGHESHWARI MANDIR,, KUKSHI ROAD,BAGH, - 454221

BAHORIBAND

1446. MAA GAYATRI AUTOMOBILES ( A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (--01), OPP GRAIN MARKET, BAHORIBAND, DIST. - KATNI, MADHYA PRADESH - 483330

BALAGHAT

1447. KAMTHI MOTORS LLP (--01), IN FRONT OF AURAM CITY, DIST.BALAGHAT, MADHYA PRADESH - 481001

BARELI

1448. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (--01), SURVEY 423/2, VILLAGE KAMTON, NH 12, BARELI, RAISEN, MADHYA PRADESH. - 464668
PH :7909903922.

BARHI

1449. SHUBH MOTORS PVT LTD (--01), 1286/2, BARHI, DIST. - KATNI, MADHYA PRADESH - 483770
PH :9752546255.

BARI

1450. SRISATYASAI AUTOMOBILES PVT LTD (--01), WARD NO.12,,IN FRONT OF JANPAD, PANCHAYAT OFFICE,,BARI, PIN-464665, MAD - 464665

BARNAGAR

1451. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (--01), RUNIJA ROAD ,BARNAGAR CITY, DISTRICT UJJAIN - 456771

BARWANI

1452. NIMAR MOTORS PVT LTD (--02), ANJAD ROAD, VILLAGE -KARAHI, BARWANI, MADHYA PRADESH - 451551

BATTIS SHIRALA

1453. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), SURVEY NO-44/2/A/1 & 14/1/A/3, NEAR SIDDHESHWAR PERTOL PUMP, VILLAGE - 32 SHIRALA, TALUKA-SHIRALA, DIST- SANGLI, MAHARASHTARA - 415408

BEGAMGANJ

1454. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (--01), IN FRONT OF DUSHERRA MAIDAN, SAGAR BHOPAL ROAD, BEGAMGANJ, DIST – RAISEN , MADHYA PRADESH – 464881 - 464881
PH :7909997536.

BEOHARI

1455. SHUBH MOTORS PVT LTD (--01), REEVA ROAD, NEAR AARRA MACHINE, BEOHARI, DIST. -SHAHDOL, MADHYA PRADESH. - 484774
PH :9755595423.

BERASIA

1456. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (--01), BHOPAL ROAD, OPP. BERASIA HOSPITAL, BERASIA, DISTRICT – BHOPAL, MADHYA PRADESH. - 463106
PH :8770593501.

BETMA

1457. OCEAN MOTORS PVT LTD (--01), OPPOSITE MPEB OFFICE, INDORE-AHEMDABAD ROAD, BETMA, DISTRICT – INDORE, MADHYA PRADESH . - 453001
PH :7389936444.

BETUL

1458. KAMTHI MOTORS LLP (--01), NEAR SUNITA COLONY, ITARSI ROAD, BETUL, MADHYA PRADESH - 4600013 - 4600013
PH :9111535777.

BHANPURA

1459. PATEL MOTORS (INDORE) PVT LTD (--01), GAROTH RD., BHANPURA, MADHYA PRADESH - 458775 - 458775

BHAVRA

1460. RUKMANI MOTORS PVT LTD (--01), GRAM PANCHAYAT, KALIYAVAHO, OPP SUNKER MANDIR, BHAVRA TEHSIL, ALIRAJPUR DISTRICT, MADHYA PRADESH - 457882. - 457882
PH :9755549200.

BHITARWAR

1461. NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT LTD) (--01), BESIDE SAUSAR COTTON INDUSTRIES, CIVIL LINE, NAGPUR-CHHINDWARA ROAD, DABRA-BHITARWAR ROAD, BHITARWAR, MP - 474009 - 474009
PH :9109105599.

BHOPAL

1462. JEEWAN MOTORS PVT LTD (--01), 9E SECTOR A,INDUSTRIAL AREA, GOVINDPURA, BHOPAL - 462024
1463. SATYAM MOTORS PVT LTD (--01), NH-12,SUVEESHA NAGAR,HOSHANGABAD ROAD,MISROAD - 462040
1464. JEEWAN MOTORS PVT LTD (--04), KHASRA NO. 54-55/1/1, NEAR RELIANCE FRESH,CHUNA BHATTI MAIN ROAD, INDIAN OIL PETROL PUMP, BHOPAL (M.P.) - 462036
1465. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (--01), 8A, SECTOR-C, J.K. ROAD, GOVINDPURA INDUSTRIAL AREA, BHOPAL, MADHYA PRADESH - 462023
1466. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (--01), 4/1, DAGA HEIGHTS, NEAR BUDHNA MANDIR, MAIN ROAD KOLAR ROAD, CHUNABHATTI, BHOPAL, MADHYA PRADESH. - 462016
1467. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (--02), KHASRA NO. 80/1/K, VILLAGE - HALALPURA, TEHSIL - HUZUR, DISTRICT - BHOPAL, MADHYA PRADESH. - 462030
1468. SRISATYASAI AUTOMOBILES PVT LTD (--01), RAJENDRA PRASAD BHAWAN PARISHAR, INFRONT OF OLD VIDHAN SABHA BUILDING, PO – JAHANGIRABAD, MALVIYA NAGAR, BHOPAL, DISTRICT – BHOPAL, MADHYA PRADESH – 462008. - 462008

BIAORA

1469. UNITARA MOTORS PVT LTD (--01), OLD AB ROAD, KACHNARIA, BIAORA (M.P) - 465674
PH :9575650883.

BICHHIYA

1470. MAA GAYATRI AUTOMOBILES ( A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (--01), NEAR CIVIL COURT, BICHHIYA, DIST. MANDLA, PIN-481995, MADHYA PRADESH - 481995
PH :9303143327.

BIJURI

1471. SHUBH MOTORS PVT LTD (--01), GRAM - NEAR GENTRI GATE, NAGAR PALIKA PARISHAD BIJURI, DISTRICT - ANUPPUR, MADHYA PRADESH - 484116
PH :9755580253.

BINA

1472. ADINATH CARS PVT LTD (--01), PLOT NO. 2/3/4/5 AMANTIGEL LAND SEMI URBAN INDUSTRIAL AREA, BINA, KHURAI ROAD (NH 26) BINA, DISTRICT – SAGAR, MADHYA PRADESH - 470113
PH :9009780047.

BURHANPUR

1473. NIMAR MOTORS PVT LTD (--02), 654/15,16 BASEMENT OF HOTEL AMBIKA RESIDENCY,, OPPOSITE PAKIZA SHOWROOM, - 450331

CHAKGHAT

1474. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (--01), GRAM AND POST - CHANDAI, CHAKGHAT, TEHSIL - TEONTHER, PRAGRAJ ROAD, NH 27, DIST- REWA, MP – 486226.. - 486226

CHANDERI

1475. PREM MOTORS PVT. LTD. (--01), NEW BUS STAND,NEAR SBI BANK,, CHANDERI-LALITPUR BYE PASS - 473446

CHATTARPUR

1476. ADINATH CARS PVT LTD (--01), MAHOBA ROAD, NEAR BUS STAND, CHHATARPUR, DISTT SAGAR - 471001
PH :9009785577.

CHHANERA

1477. NIMAR MOTORS PVT LTD (--01), NEAR ST. STEPHEN SCHOOL, HARDA ROAD, CHHANERA (HARSUD), PIN-450001, MADHYA PRADESH - 450001
PH :9669569504.

CHHINDWARA

1478. KAMTHI MOTORS LLP (--01), KHASRA NO.1/53, BESIDE MVM SCHOOL, NAGPUR ROAD, VILL. -SARRA, DISTT. CHHINDWARA, MADHYA PRADESH - 480001

CHITRAKOOT

1479. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (--01), PILIKOTHI CHOURAHA, BESIDE SINGH AUTOMOBILE- A HERO AGENCY, CHITRA ROAD, CHITRAKOOT, DISTRICT-SATNA (MADHYA PRADESH)- 485334 - 485334

DABRA

1480. PREM MOTORS PVT LTD (--01), PICHHORE TIRAHA, GWALIOR JHANSI ROAD, DABRA, DIST. -GWALIOR. - 475110
PH :9926809110.

DAHI

1481. KTL AUTOMOBILE PRIVATE LIMITED (--01), BHAGAT SINGH MARG, WARD NO.2, DAHI DAHI, DHAR DISTRICT - 454331

DAMOH

1482. ADINATH CARS PVT LTD (--01), SAGAR JABALPUR BYPASS ROAD, DAMOH (M.P.). - 470661
PH :9009780035.

DATIA

1483. PREM MOTORS PVT LTD (3003--05), NR.BHOJPURIA MOTORS, BHANDER ROAD, DATIA, MADHYA PRADESH - 475661
PH :9165012280.

DEORI

1484. ADINATH CARS PVT LTD (--01), C/O VISHWANATH DIXIT, VIJAYSHRI GAS SERVICE, NEAR GOVT. HIGH SCHOOL, NARSINGHPUR ROAD,VILLAGE KHEER, DEORI DISTT. SAGAR (M.P.) - 470226
PH :7000410522.

DEPALPUR

1485. OCEAN MOTORS PVT LTD (--03), NEAR LEELA RESIDENCY,INDORE ROAD,DEPALPUR,DIST.INDORE-MP - 453115

DEWAS

1486. UNITARA MOTORS PVT LTD (--01), SURVEY NO 255, A.B. ROAD, RASULPUR SQUARE, DEWAS, MADHYA PRADESH PIN 455001 - 455001
PH :9575650883.

DHAMNOD

1487. KATHED MOTOCORP (A UNIT OF KATHED MOTORS PVT LTD) (--01), KHASRA NO. 484/1/2, OLD A B ROAD, OPPOSITE HP PETROL PUMP, DHAMNOD, DIST.-DHAR, MADHYA PRADESH. - 454552
PH :9981585165.

DHAR

1488. RUKMANI MOTORS PVT LTD (5304--02), 41/2 MAGAJPURA,DHAR,, - 454001

DHARAMPURI

1489. RUKMANI MOTORS PVT LTD (--01), MANAWAR ROAD, DHARAMPURI , MADHYA PRADESH - 454449 - 454449

DINDORI

1490. STANDARD MOTOCORP PVT LTD (--01), SUKKHAR WARD 1, NEAR DHURVE PETROL PUMP,DINDORI - 481661

FALI

1491. OCEAN MOTORS PVT LTD (--01), NH 47, NEAR GRAM - FALI, TEHSIL KHUDEL, INDORE, MADHYA PRADESH. - 452016
PH :7389936477.

GADARWARA

1492. STANDARD MOTOCORP PVT LTD (--01), KHASRA NO. 130/31/A & 131/2, HALKA NO. 18/1, NO. 119, GADARWARA, DISTRICT – NARSINGHPUR . - 487551
PH :8319784336.

GANDHWANI

1493. RANA MOTORS PVT LTD (--01), MUKATI COMPLEX, BAGH AWALDA MAAN ROAD, TEHSIL- GANDHWANI , DIST – DHAR, MADHYA PRADESH - 454446 - 454446
PH :9109975566.

GANJ BASODA

1494. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (--01), LAL BAGH, BARETH ROAD, GANJ BASODA, VIDISHA, 464221. - 464221
PH :9425148584.

GARRA

1495. KAMTHI MOTORS LLP (--01), LALBARRA ROAD, GARRA INDUSTRIAL AREA, GARRA, BALAGHAT, MADHYA PRADESH. - 481331
PH :7723020684.

GAUTAMPURA

1496. OCEAN MOTORS PVT LTD (--01), RUNJI CHOURAHA, GAUTAMPURA, TEHSIL - DEPALPUR, DISTT.-INDORE, MADHYA PRADESH . - 453220

GHATIYA

1497. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (--01), NEAR JAGOTI SQUARE, UJJAIN – AGAR ROAD, GHATIYA, MP - 456550 - 456550
PH :9425067979.

GOTEGAON

1498. STANDARD MOTOCORP PVT LTD (--01), JABALPUR ROAD, OPP. NEW KRISHI UPAJ MANDI, TEHSIL - GOTEGAON, DIST. -NARSINGHPUR. - 443001
PH :7771003774.

GUNA

1499. PREM MOTORS PVT LTD (--01), OPP R.T.O.,A.B. ROAD,GUNA, - 473001
PH :268015.

GWALIOR

1500. PREM MOTORS PVT LTD (3003-30-01), M. L. B. ROAD,GWALIOR,, - 474002
PH :9926809803.
1501. PREM MOTORS PVT LTD (3005--01), SHIVPURI LINK ROAD, GWALIOR - 474002
PH :9926809803.
1502. NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT LTD) (3006-30-01), GOLE KA MANDIR SQUARE, AIRPORT ROAD, GWALIOR, MADHYA PRADESH - 474005 - 474005
PH :9407067974.

HANSA KHEDI

1503. KATHED MOTOCORP (A UNIT OF KATHED MOTORS PVT LTD) (--01), MAIN DHARMAT ROAD, HANSA KHEDI (CHANDRAWATI GANJ), TEHSIL –SANWER, DISTRICT –INDORE, MADHYA PRADESH. - 453551
PH :9479952490.

HARDA

1504. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (--02), NEAR RTO,INDORE HIGHWAY ROAD,HARDA MP - 461331

HATOD

1505. OCEAN MOTORS PVT LTD (--01), 726/6, INDORE-DEPALPUR MAIN ROAD, OPP. HP GAS AGENCY, HATOD DISTT. INDORE - 453111
PH :7389936477.

HATPIPLIYA

1506. UNITARA MOTORS PVT LTD (--01), OPPOSITE UNWIND RESORT, HATPIPLIYA, DEWAS, MADHYA PRADESH - 455223 - 455223

HATTA

1507. ADINATH CARS PVT LTD (--01), NEAR NAVODAYA SCHOOL, DAMOH ROAD, HATTA, DISTT. DAMOH (M.P.) - 470775. - 470775
PH :9009787562.

HOSHANGABAD

1508. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (--01), 185, RAMJIBABA GROUND, HOSHANGABAD, MADHYA PRADESH - 461001
PH :8889282222.

ICHHAWAR

1509. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (--01), SEHORE NADAN ROAD, NEAR SARASWATI SCHOOL, ICHHAWAR, DISTRICT – SEHORE, MADHYA PRADESH. - 466115

INDERGARH

1510. PREM MOTORS PVT LTD (--01), NEAR KHERAPATI GARDEN, INDERGARH, MP - 475675 . - 475675
PH :9926809818.

INDORE

1511. PATEL MOTORS (INDORE) PVT LTD (5303-53-01), 428/3/3,NIRANJANPUR,A B ROAD,INDORE - 452010
1512. RUKMANI MOTORS PVT LTD (5304-53-01), 2-3,,A.B. ROAD,INDORE - 452001
1513. PATEL MOTORS (INDORE) PVT LTD (5303-53-02), 176/1,PIPLYA RAU,A.B. ROAD ,INDORE - 452017
1514. RUKMANI MOTORS PVT LTD (5304-53-03), NO. -4/5, MANORAMA GANJ, INDORE - 452001
1515. OCEAN MOTORS PVT LTD (5306-53-01), PLOT NO.49, SCHEME NO.97, PART 4, COMMERCIAL MANDI, CAIT SQUARE, RING ROAD, INDORE, MP. - 452001
1516. OCEAN MOTORS PVT LTD (5306--02), NEAR QUEENS COLLEGE,ASHARAM BAPU ASHRAM, KHANDWA ROAD,INDORE - 452017
1517. PATEL MOTORS (INDORE) PVT LTD (5303--03), M.O.G. LINES, NEAR GANGWAL BUS STAND, DHAR ROAD, INDORE (M.P.) - 452006
PH :7314293919.
1518. OCEAN MOTORS PVT LTD (5306-53-03), 171A, 174A, 175A, 180A, 181A, 82A, 182A, BRAJESHWARI EXTENSION, PIPLIYAHANA, INDORE - 452001
1519. KATHED MOTOCORP (A UNIT OF KATHED MOTORS PVT LTD) (5307--01), PLOT NO. 483/2/2, MAIN DHAR ROAD, NEAR CHANDAN NAGAR POLICE STATION, INDORE, MADHYA PRADESH. - 452002
PH :7471111132.
1520. RANA MOTORS PVT LTD (--01), KHASRA NO. 293/2, 299/1, TEJPUR, GADBADI PUL, A.B. ROAD, INDORE. - 452009
PH :9109975566.
1521. PATEL MOTORS (INDORE) PVT LTD (5303-53-05), SURVEY NO. 174/5 AND 174/6, PIPLIYA RAO, INDORE, MADHYA PRADESH. - 452012
1522. RUKMANI MOTORS PVT LTD (--04), MANGAL COMPOUND, GODOWN NO. 11-12, VILLAGE 15/1, PIPLYA KUMAR, MR 11 RING ROAD, DEWAS NAKA, INDORE, MADHYA PRADESH. - 452010
1523. OCEAN MOTORS PVT LTD (5306-53-04), PLOT NO. 142 AND 151, SCHEME NO. 97, PART-4, COMMERCIAL MANDI, NEAR CAT SQUARE, INDORE. - 452012
PH :7389936405.
1524. KTL AUTOMOBILE PRIVATE LIMITED (5309-53-C1), PLOT NO.5/RC, SCHEME NO 134,MR 10,VILLAGE KHAJRANA, DIST INDORE-452010,MADHYA PRADESH - 452010
PH :6263455899.
1525. RUKMANI MOTORS PVT LTD (-53-05), 109, BHAWRASLA NEAR PRATAP AUTO, FRONT OF VINAYAK TOL KANTE, SANWER ROAD, INDORE, PIN-453111, MADHYA PRADESH - 453111
PH :9109978301.

INGORIYA

1526. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (--01), SURVEY NO.589,, NAGDA ROAD,VILL.INGORIYA, - 456222

JABALPUR

1527. SHUBH MOTORS PVT LTD (5403-54-01), MAHANADDA, MADAN MAHAL ROAD, JABALPUR, MADHYAPRADESH - 482001
PH :9755545540.
1528. STANDARD MOTOCORP PVT LTD (5405-54-02), DEENDAYAL CHECK, DAMOH NAKA, JABALPUR - 482002
1529. SHUBH MOTORS PVT LTD (5403-54-03), 156/5/1, 156/3KA, 156/3KHA, 156/3GHA, BEHIND OM PETROLEUM, ADHARTAL TIRAHA, JABALPUR, MADHYA PRADESH - 482002
PH :9755595496.
1530. STANDARD MOTOCORP PVT LTD (5405--03), CHIMNEY PLOT, MADAN MAHAL, NEAR GULZAR HOTEL, JABALPUR - 482001
1531. MAA GAYATRI AUTOMOBILES ( A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (5404-54-01), MOUZA KARMETA N.B. 497, P.H. NO 23/26, KHASRA NO. 497 & DIV. KHASRA NO. 484/6, DIV. SHEET NO 2, PLOT NO 63/1, JABALPUR-PATAN ROAD, JABALPUR. - 482002
PH :7489901021.
1532. STANDARD MOTOCORP PVT LTD (5405-54-04), NEW WARD NO. 71, IN FRONT OF ORIENTAL COLLEGE, KATNI BYPASS, JABALPUR, MP. - 482003

JAIPUR

1533. KIRAN MOTORS LIMITED (1118-11-01), 75, JHOTWARA INDUSTRIAL AREA JAIPUR - 302001

JAORA

1534. PATEL MOTORS (INDORE) PVT LTD (--04), SURVEY NO.57/11/1, RATLAM ROAD, RATLAM NAKA, OPP. KOTHARI AGRIKO, INDUSTRIAL AREA, INFRONT OF ST. PAUL SCHOOL, JAORA, DISTT. RATLAM, MADHYA PRADESH - 457226

JAWAD

1535. PATEL MOTORS (INDORE) PVT LTD (--01), SURVEY NO.165/1/1/2,,GRAM BALKHEDA,TEHSIDIST.NEEMUCH,JAWAD,MAD HYA PRADESH 458330 - 458330

JHABUA

1536. PATEL MOTORS (INDORE) PVT LTD (--01), INDORE AHMEDABAD ROAD, MEGHNAGAR NAKA, JHABUA ,MADHYA PRADESH. - 457661
PH :9826634449.

JIRAPUR

1537. UNITARA MOTORS PVT LTD (--01), KHILCHIPUR ROAD, JIRAPUR
DIST- RAJGARH
MADHYA PRADESH - 465961 - 465961

JOBAT

1538. RUKMANI MOTORS PVT LTD (--01), BYEPASS ROAD, OPPOSITE JP COLLEGE, JOBAT, MP – 457990. - 457990
PH :6262505181.

KACHROD

1539. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (--01), MOHALLA PATEL COLONY, BARNAGAR RD, KACHROD, MP. - 456313

KANNOD

1540. UNITARA MOTORS PVT LTD (--01), KANNOD,DISTRICT-DEWAS, MADHYA PRADESH -455332 - 455332

KARELI

1541. MAA GAYATRI AUTOMOBILES (A UNIT OF MAA GAYATRI AGENCIES PVT. LTD) (--01), NEAR KRISHNA HOTEL,, NARSINGHPUR-KARELI BYPASS,KARELI, - 487221

KARERA

1542. PREM MOTORS PVT LTD (--01), GRAM - JHASI ROAD, KARERA, DISTRICT - SHIVPURI, MADHYA PRADESH - 473660. - 473660
PH :9926823596.

KATNI

1543. SHUBH MOTORS PVT LTD (--01), KHASRA NO.850, NH-7, JHINJARI, INFRONT OF POLICE STATION, JABALPUR ROAD, KATNI, MADHYA PRADESH. - 483501
PH :9755515839.

KHANDWA

1544. NIMAR MOTORS PVT LTD (--03), BEFORE VIKAS UDYOG, INDORE ROAD, KHANDWA - 450001

KHARGONE

1545. NIMAR MOTORS PVT LTD (--01), JETAPUR,SANAWAD ROAD,KHARGAONE, - 462026

1546. NIMAR MOTORS PVT LTD (--06), PH. NO. 35, VILLAGE – DANAPUR, TEHSIL – KHARGONE, DISTRICT – KHARGONE, MADHYA PRADESH. - 451001

KHATEGAON

1547. UNITARA MOTORS PVT LTD (--01), NEMAWAR-INDORE ROAD, KHATEGAON, M.P - 455336 - 455336
PH :9993406993.

KOTMA

1548. SHUBH MOTORS PVT LTD (--01), WARD NO.7, ANNUPPUR KOTMA ROAD, DISTT. ANNUPUR, KOTMA (M.P.) - 484336
PH :9755581441.

KUKSHI

1549. OCEAN MOTORS PVT LTD (--01), SURVEY NO.593/5/1, 593/6/1, BARWANI ROAD, TOLL KANTE KE PASS, TEHSIL-KUKSHI - 454331

KURWAI

1550. SRISATYASAI AUTOMOBILES PVT LTD (--01), SH-14, MAIN ROAD,,KURWAI,VIDISHA,,MADHYA PRADESH 464224 - 464224

LAKHNADON

1551. KAMTHI MOTORS LLP (--01), RANI DURGAVATI CHOWK, NH-7, WARD NO. - 05, JABALPUR ROAD, LAKHNADON, MADHYA PRADESH. - 480886
PH :9285506128.

LATERI (VIDISHA)

1552. SRISATYASAI AUTOMOBILES PVT LTD (--01), KHASRA NO.572,,ANANDPUR ROAD,, LATERI,MADHYA PRADESH 464114 - 464114

LOHARI

1553. KATHED MOTOCORP (A UNIT OF KATHED MOTORS PVT LTD) (--01), SINGHANA-KUKSI ROAD, LOHARI, DHAR, PIN-454335, MADHYA RPADESH - 454335

MAHESHWAR

1554. NIMAR MOTORS PVT LTD (--01), OPPOSITE DEVRAJ HOTEL, MAIN MANDLESHWAR-DHAMNOD ROAD, MAHESHWAR, MP - 451224
PH :9669569504.

MAHIDPUR

1555. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (--01), 264/3, BHIMAKHEDA, MAHIDPUR, UJJAIN - 456443
PH :9109130402.

MAIHAR

1556. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (--04), UNIT OF AGARWAL WHEELS PVT. LTD., NEAR RELIANCE PETROL PUMP, NH-7, REWA ROAD, MAIHAR (M.P.) - 485771
PH :7354252525.

MAJHAULI

1557. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (--01), WARD NUMBER 14, NAGAR PARISAD MAJHAULI, DIST. SIDHI (M.P) - 486666. - 486666
PH :7970003171.

MAJHOLI

1558. SHUBH MOTORS PVT LTD (--01), INDRANA ROAD, SUHAJNI TIRAHA, MAJHOLI, MADHYA PRADESH - 483336
PH :911155580.

MANASA

1559. PATEL MOTORS (INDORE) PVT LTD (--01), 982/1, RAMPURA ROAD, MANASA, DIST. NEEMUCH, MADHYA PRADESH. - 458110
PH :9644405368.

MANAWAR

1560. OCEAN MOTORS PVT LTD (--01), PLOT NO – 40, BAKANER ROAD, MANAWAR, DISTRICT – MANAWAR, MADHYA PRADESH. - 454335
PH :7389936477.

MANDLA

1561. STANDARD MOTOCORP PVT LTD (--01), KATARA ROAD, MANDLA, DIST. MANDLA MP - 481661

MANDSAUR

1562. PATEL MOTORS (INDORE) PVT LTD (--02), BLOCK 'C', SHED-5, WARD NO. 1, INDUSTRIAL AREA, CITY - MANDSAUR, MADHYA PRADESH. - 458001

MANPUR

1563. PATEL MOTORS (INDORE) PVT LTD (--01), KHASRA NO. 302/1/3, AB ROAD, MANPUR, DIST-INDORE - 453661
PH :9826360699.

MAUGANJ

1564. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (--01), NEAR SENGAR PETROL PUMP ,CHACK MODE WARD NUMBER 03,NH 7 ,MAUGANJ, DISTT – REWA, MADHYA PRADESH – 486331. - 486331
PH :975301199.

MHOW

1565. OCEAN MOTORS PVT LTD (--01), A.B. ROAD, NEAR KISANGANJ POLICE STATION, MHOW - 453441

MOHANA

1566. PREM MOTORS PVT LTD (--01), MOHANA, DISTRICT GWALIOR, MADHYA PRADESH - 475330. - 475330

MORENA

1567. PREM MOTORS PVT LTD (--01), NEAR SALES TAX BARRIER SQUARE, AB ROAD MORENA - 476001
PH :9926002791.

NAGDA

1568. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (--01), PLOT NO. 17, STATE HIGHWAY NO.17, INDORIYA ROAD, NAGDA, DISTRICT – UJJAIN, MADHYA PRADESH. - 456335

1569. PATEL MOTORS (INDORE) PVT LTD (--01), SURVEY NO.200/1,205/1/208,, VILLAGE MANKI NAGDA,MHOW ROAD, - 454660

NAINPUR

1570. STANDARD MOTOCORP PVT LTD (--01), MANJU SAHU, MANDLA ROAD, NEAR MPEB OFFICE, ADJOINING TO BAJAJ SHOW ROOM, NAINPUR, DISST MANDLA, MADHYA PRADESH -481776. - 481776
PH :7771003374.

NARAYANGARH

1571. PATEL MOTORS (INDORE) PVT LTD (--01), 1742/11, NARAYANGARH, TEHSIL - MALHARGARH, DISTRICT- MANDSAUR, MADHYA PRADESH. - 458553
PH :9977703907.

NARSINGHPUR

1572. STANDARD MOTOCORP PVT LTD (--01), KH. NO. 82/44 & 83/44, NB NO.519, PC NO. 19(42), OLD 46 (NEW) MOUZA RONSRA R.I.M. 2, TEHSIL & DISTRICT – NARSINGHPUR, MADHYA PRADESH. - 487001

NASRULLAGANJ

1573. JEEWAN MOTORS PVT LTD (--01), KHASRA NO. 458, VILLAGE – RALA, TEHSIL – NASRULLAGANJ, DISTRICT – SEHORE, MADHYA PRADESH. - 466331

NEEMUCH

1574. PATEL MOTORS (INDORE) PVT LTD (--02), MHOW-NEEMUCH ROAD,NEEMUCH(MP),, - 458441
PH :9977703907.

NIWARI

1575. ADINATH CARS PVT LTD (--01), ATKHASRA NO 2017/1, NEAR HDFC BANK MAIN ROAD, NIWARI, MADHYA PRADESH –472442. - 472442
PH :9009787562.

NIWAS

1576. STANDARD MOTOCORP PVT LTD (--01), OPP. INDIAL OIL PETROL PUMP, NIWAS , DISTRICT MANDLA, MADHYA PRADESH – 483001. - 483001

PANDHURNA

1577. KAMTHI MOTORS LLP (--01), SHANKAR NAGAR, PANDHURNA, DIST. - CHHINDWARA, MADHYA PRADESH - 480334. - 480334
PH :9111535777.

PANNA

1578. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (--01), KHASRA NO. 378, MOHAN RAJ VILAS CHOURAHA, BESIDE MOHAN RAJ HOTEL, CIVIL LINE NH-75, PANNA, MADHYA PRADESH . - 488001
PH :7354252525.

PARANDA

1579. CHAVAN MOTORS DIVISION INDIA PVT LTD (--01), 691/1/190, PARANDA BARSHI ROAD, PARANDA, TAL-PARANDA, DIST-DHARASHIV - 413502

PARASIA

1580. KAMTHI MOTORS LLP (--01), KHIRSADOHMAL, PARASIA, CHHINDWARA. MP - 480441
PH :9285506109.

PAT

1581. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (--01), WARD NO. 9, UJJAIN -KOTA ROAD, OPPOSITE GOVT MIDDLE SCHOOL, PAT, DISTT UJJAIN , MP - 416522

PATAN

1582. MAA GAYATRI AUTOMOBILES ( A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (--01), BESIDE KRISHI UPAJ MANDI, PATAN, PIN-483119, MADHYA PRADESH - 483119
PH :9770415141.

PAWAI

1583. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (--01), NEAR ETORI PETROL PUMP, PANNA ROAD, PAWAI, DIST. – PANNA, MP- 488446 - 488446
PH :9754301199.

PETLAWAD

1584. PATEL MOTORS (INDORE) PVT LTD (--01), NEAR H. P. PETROL PUMP, THANDLA ROAD, PETLAWAD, DISTRICT – JHABUA, MADHYA PRADESH. - 457773
PH :9111160868.

PICHHORE

1585. PREM MOTORS PVT LTD (--01), NEAR OF BACHRON CHAURAHA, PICHHORE, DIST. DIST. SHIVPURI, PIN-475300, MADHYA PRADE - 475300

PIPARIYA

1586. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (--01), HATHWAS TIRAHA, SHOBHAPUR ROAD, PIPARIYA, MADHYA PRADESH. - 461775

PITHAMPUR

1587. PATEL MOTORS (INDORE) PVT LTD (5303--04), 254-A, SECTOR-1, INDUSTRIAL AREA, PITHAMPUR, DISTT. DHAR - 454775
PH :9826360699.
1588. KTL AUTOMOBILE PRIVATE LIMITED (--01), WARD NO 18 , VILLAGE – AKOLIA , PITHAMPUR, MP - 454775 - 454775

PUSHPRAJGARH

1589. SHUBH MOTORS PVT LTD (--01), WARD NUMBER 8 ,SHIVRICHANDAS KARAUNDI TIRAHA, AMARKANTAK ROAD RAGENDRAGRAM DISTRICT ANUPPUR (M.P.) - 484224

RAISEN

1590. JEEWAN MOTORS PVT LTD (--01), WARD NO 14, PATANDEV, SAGAR ROAD, RAISEN, MADHYA PRADESH - 464551
PH :9826017799.
1591. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (--01), OPPOSITE S P OFFICE, NEAR ST. FRANCIS SCHOOL, VIDISHA ROAD, RAISEN, MADHYA PRADESH. - 464551
PH :7869755501.

RAJGARH

1592. RUKMANI MOTORS PVT LTD (--01), CHANDRA SHEKHAR AZAD MARG, NEAR TRIMURTI NAGAR, RAJGARH, DIST. - DHAR, MP. - 454116
PH :9755549200.

RAJOD

1593. RUKMANI MOTORS PVT. LTD. (--01), NEAR POLICE STATION,,SARDARPURA BADNAWARROAD,,RAJOD,DIST.DHAR,MADHYA PRADESH 454 - 454660

RATLAM

1594. PATEL MOTORS (INDORE) PVT LTD (--01), 76 C,D&E,INDUSTRIAL AREA,RATLAM - 452001
1595. PATEL MOTORS (INDORE) PVT LTD (--03), 181/17/18,DOSHI GOAN,INDUSTRIAL AREA ,JAORA ROAD,RATLAM - 457001

REWA

1596. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (--03), NYPASS CHURHATA,DIST. REWA - 482001
PH :7354252525.
1597. SHUBH MOTORS PVT LTD (5403--05), VILLAGE – RATHARA, TEHSIL – HUZUR, DISTRICT - REWA, MADHYA PRADESH - 486003 - 486003
PH :9755582351.

SABALGARH

1598. PREM MOTORS PVT LTD (--01), NR. INDIAN OIL PETROL PUMP, SABALGARH, DIST. – MORENA, MP - 476229 - 476229

SADALPUR

1599. OCEAN MOTORS PVT LTD (--01), JAIN SHRI SUPER MARKET, SERVICE ROAD, MHOW-NEEMUCH ROAD, SADALPUR, DISTRICT DHAR (M.P) - 454001. - 454001
PH :7389936423.

SAGAR

1600. ADINATH CARS PVT LTD (--01), STATION ROAD, TILAK GANJ, SAGAR (M.P). - 470001
PH :9009780030.

SANWER

1601. RANA MOTORS PVT LTD (--01), S.NO. 356/3/1, OLD UJJAIN BYPASS ROAD, TALUKA SANWER, DIST.-INDORE, MADHYA PRADESH. - 453551
PH :9109975566.

SATNA

1602. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (--05), (A UNIT OF AGRAWAL WHEELS PVT. LTD.), BESIDE BHASKAR PRESS, BEHIND MARUTI SHOWROOM, WARD NO.27, AMOUDHA KALA, PANNA ROAD, SATNA - 485001

SAUSAR

1603. KAMTHI MOTORS LLP (--01), BESIDE SAUSAR COTTON INDUSTRIES, CIVIL LINE, NAGPUR-CHHINDWARA ROAD, SAUSAR, DIST-CHHINDWARA, M.P – 480106. - 480106
PH :9111535777.

SEHORE

1604. JEEWAN MOTORS PVT LTD (--02), 869/1/2,OFFICERS COLONY,IN FRONT OF CHURCH GROUND,BHOPAL, INDORE ROAD - 466001

SENDHWA

1605. NIMAR MOTORS PVT LTD (--01), KHASRA NO. 286/10 AND 287/14, HALKA NO. 11, VARLA ROAD, SENDHWA, TEHSIL – SENDHWA, DISTRICT – BARWANI, MADHYA PRADESH. - 451666

SEONI

1606. KAMTHI MOTORS LLP (--01), IN FRONT OF MVM SCHOOL, JABALPUR ROAD, RTO BYPASS, SEONI - 480882

SEONI MALWA

1607. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT.LTD.) (--01), NEAR AXIS BANK, SEONI MALWA, MP - 461223 - 461223
PH :8889281113.

SHAHDOL

1608. SHUBH MOTORS PVT LTD (--01), JAMUA, NEAR GYAN GUPTA,BUDHAR ROAD,SHAHDOL, - 484771
PH :9755595423.

SHAHPURA

1609. STANDARD MOTOCORP PVT LTD (--01), KHASARA NO.172/3, BHERAV MATA MANDIR NEAR TOLL NAKA MAIN ROAD, JABALPUR NARSINGHPUR ROAD, SHAHPURA. - 483119
PH :7771000392.
1610. STANDARD MOTOCORP PVT LTD (--01), NEAR SAI PETROLEUM, SHARDA NAGAR, JABALPUR ROAD, SHAHPURA, DIST –DINDORI, MP. - 481990

SHAJAPUR

1611. UNITARA MOTORS PVT LTD (--01), LAL GHATI, A B ROAD, SHAJAPUR, MP - 465001
PH :9993406993.

SHAMGARH

1612. PATEL MOTORS (INDORE) PVT LTD (--01), KHASRA NO. 1179/1, MOHALLA MAROTH, TEHSIL – SHAMGARH, DISTRICT – MANDSAUR, MADHYA PRADESH. - 458883
PH :9753088222.

SHIVPURI

1613. PREM MOTORS PVT LTD (3003--04), A B ROAD,SIVPURI,, - 473551
PH :9926809976.

SHUJALPUR

1614. UNITARA MOTORS PVT LTD (--01), KISHONI, OPPOSITE HP FUEL STATION, SHUJALPUR, M.P - 465333 - 465333
PH :9575650883.

SHYAMPUR

1615. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (--01), NEAR MAHADEV RESTAURANT, NH-12, SHYAMPUR, DISTRICT – SEHORE, MADHYA PRADESH - 466651. - 466651
PH :7909997570.

SIDHI

1616. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (--01), ADHIYAR KHOH, NEAR GYAN DHARAMKATA, SIDHI, MADHYA PRADESH. - 486661

SIHORA

1617. SHUBH MOTORS PVT LTD (--01), KHASRA NO. 31/1, P.H. – 11, MOUZA – GHAT SIMARIYA, TEHSIL – SIHORA, DISTRICT – JABALPUR, MADHYA PRADESH,. - 483440

SILWANI

1618. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (--01), MAHAVIR COLONY, SAI KHEDA ROAD, SILVANI, DIST. RAISEN, MP - 464886. - 464886
PH :9174000501.

SIMROL

1619. RUKMANI MOTORS PVT LTD (--01), AMRIT SAGAR COLONY, SIMROL, DIST. - INDORE, MADHYA PRADESH - 452020 - 452020
PH :9109978301.

SINGHOLI

1620. PATEL MOTORS (INDORE) PVT LTD (--01), BEGHU CHITTORGARH ROAD, SINGOLI, NEEMUCH, MP – 458228 - 458228
PH :9977703907.

SINGRAULI

1621. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (--02), NEAR VIJAY BANDHU PETROL PUMP, KACHANI, THE. WAIDHEN, DISTRICT, SINGRAULI ,MADHYA PRADESH KHASRA NO-3721/1 &3721/2, GRAM- NAVGARH, SIDHI-REWA ROAD, WAIDHAN , DISTRCT-SINGROULI (MADHYA PRADESH)-486887. - 486886
PH :7354252525.

SIRONJ

1622. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (--01), OPPOSITE BALAJI DHAM, LINK ROAD, SIRONJ, MADHYA PRADESH. - 464228
PH :7909997585.

SITAMAU

1623. PATEL MOTORS (INDORE) PVT LTD (--01), MAUKHEDA, TEHSIL - SITAMAU, DISTRIST - MANDAUR, MADHYA PRADESH - 458990 - 458990
PH :9826360699.

SUTHALIA

1624. UNITARA MOTORS PVT LTD (--01), MAKSUDANGARH ROAD, NEAR POLICE STATION SUTHALIYA - 465677

TARANA

1625. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (--01), HOUSE NO. 1/6, WARD NO. 10, TOTLA MARG, TARANA-UJJAIN ROAD, TARANA, MADHYA PRADESH . - 456665

TENDUKHEDA

1626. STANDARD MOTOCORP PVT LTD (--01), KHASARA NO. 49/6, MOUZA – TENDUKHEDA, DISTRICT – NARSINGHPUR . - 470880

THIKRI

1627. NIMAR MOTORS PVT LTD (--01), OPPOSITE OF SHREE BALAJI TYRE SALES & SERVICE, SHREE NAGAR, THIKRI, MADHYA PRADESH –451660. - 451660
PH :9109202186.

TIKAMGARH

1628. ADINATH CARS PVT LTD (--01), NEAR NEW BUS STATI ON, OPPOSITE OF BANKE BIHARI COLONY, MAURANIPUR ROAD,TIKAMGARH, MADHYA PRADESH - 472001
PH :9200888454.

TULJAPUR

1629. CHAVAN MOTORS DIVISION INDIA PVT LTD (--01), 684/2, PLOT NO 16, VISHWAS NAGAR, BEED ROAD, TULJAPUR DIST. DHARASHIV - 413601

UDAIPURA

1630. JEEWAN MOTORS PVT LTD (--01), WARD NO 3, NH-12, UDAIPURA, DIST. - RAISEN, MADHYA PRADESH - 464770
PH :9826017799.

UJJAIN

1631. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (--01), SURVEY NO. 59/3, DEWAS ROAD,UJJAIN - 456010
1632. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (--02), 54/3/2, AGAR NAKA, NEAR VARDHAN HOTEL, MAKODI AAM CHAURAHA, INDIRA NAGAR, UJJAIN, MADHYA PRADESH. - 456001
PH :9425067979.

UMARIA

1633. SHUBH MOTORS PVT LTD (5403--04), 8/2 GRAM BHAGRA, KIRANTAL KHURD, UMARIA DISTRICT UMARIA (MADHYA PRADESH) - 484661
PH :9755502682.

UNHEL

1634. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT LTD) (--01), 15/ 35, STATION ROAD, UNHEL, UJJAIN - 456221

VIDHISHA

1635. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (--01), PLOT NO 59/1, VILLAGE RANGAI, VIDISHA, MADHYA PRADESH - 464001
PH :9109900374.

VIDISHA

1636. RAJRUP MOTORS JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (--01), UDAYNAGAR COLONY, NEAR OIL FACTORY, SAGAR ROAD, VIDISHA, DISTRICT-VIDISHA (M.P.) - 464001 - 464001
PH :7869755501.

VIJAY RAGHAVGARH

1637. MAA GAYATRI AUTOMOBILES ( A UNIT OF MAA GAYATRI AGENCIES PVT LTD) (--01), KARITALAI- VIJAYRAGHAVGARH ROAD, VIJAYRAGHAVGARH, DISTT. - KATNI, MP-483775 - 483775

## MAHARASHTRA

AHMEDNAGAR

1638. KANKARIYA AUTOMOBILES PRIVATE LTD (--01), SARDA MILLS,SAVEDI ROAD,AHMEDNAGAR, MAHARASTRA - 414001
PH :7410024227.
1639. KANKARIYA AUTOMOBILES PRIVATE LTD (--05), MIDC, AHMEDNAGAR - 414003
PH :7447700029.
1640. MAHALAXMI AUTOMOTIVES PVT LTD (--01), SURVEY NO 248/249, MANMAD RD, SAVEDI, AHMEDNAGAR. - 414003

AHMEDPUR

1641. AUTOMOTIVE MANUFACTURERS PVT LTD (--01), SURVEY NO-56/1/2, VILLAGE-MARSHIVANI, NH-361, PO & TALUKA -AHMEDPUR, DIST-LATUR, PIN-413515. - 413515

AJARA

1642. SAI SERVICE PRIVATE LIMITED (--01), GAT NO. 30, PLOT NO. 24, GP MILKAT NO. 906/3, NEAR MAYUR PETROL PUMP, AJARA, DISTRICT – KOLHAPUR. - 416505

AKLUJ

1643. CHAVAN MOTORS DIVISION INDIA PVT LTD (--04), PLOT NO. 15/3-A, PANCHVATI STOP,MALINAGAR ROAD,AKLUJ - 413101

AKOLA

1644. KHANDELWAL AUTOWHEELS PVT LTD (--01), TIRUPATI CHAMBERS,CONVENT ROAD,AKOLA - 444005
1645. KHANDELWAL AUTOWHEELS PVT LTD (--02), PLOT NO E/12-13-MIDC PHASE-2, AKOLA. - 444001

AKOT

1646. KHANDELWAL AUTOWHEELS PVT LTD (--01), PLOT NO 18 & 19, SURVEY NO 600/3, AKOT – AKOLA ROAD, AKOT, AKOLA (MAHARASHTRA) - 444101 - 444101

ALEPHATA

1647. KOTHARI AUTO WHEELS PVT LTD (--01), GAT NO.446, MATOSHRI PRIDE, NEAR SADHANA BANK, KALYAN ROAD, A/P – ALEPHATA, TALUKA – JUNNAR, DISTT. PUNE, PIN-412411 - 412411
PH :8421753278.

ALIBAUG

1648. SIMRAN MOTORS PVT LTD (--05), SURVEY NO. 30/1, OPP. RCF COLONY, VILLAGE – VESHVI, ALIBAUG, DISTRICT – RAIGAD, MAHARASHTRA - 402201

ALLAPALLY

1649. TRISTAR CARS PVT LTD (---), SHIVAJI SQUARE ETAPALLI ROAD, WARD NO 2, MOUZA-ALLAPALLI, HOUSE NO 1465, TAH-AHERI, DIST-GADCHIROLI-442703. - 442703

AMALNER

1650. MANRAJ MOTORS PVT LTD (--01), PRASAD MOTORS, RAVI
NAGAR, NEAR NAYARA PETROL PUMP, DHULE ROAD, AMALNER, DIST.JALGAON-425401. - 425401

AMBERNATH

1651. AHER AUTOPRIME LLP (--01), PLOT NO-24,26,27/17, MIDC, KALYAN-BADLAPUR ROAD, VILLAGE - KOHOJ, KHUNTAVLI, AMBERNATH - 421501
PH :8422871720.

AMRAVATI

1652. ASPA BANDSONS AUTO (P) LTD (--01), SATURNA BADNERA
ROAD,AMRAVATI,MAHARASTRA, - 444607
PH :9423123665.
1653. ASPA BANDSONS AUTO (P) LTD (--05), A1/A2, OLD BY PASS ROAD, MIDC, AMRAVATI, DIST: AMRAVATI, MAHARASTRA. - 444607
PH :9423339601.

ARAG

1654. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), SURVEY NO.1 , VILL-ARAG, TALUKA: MIRAJ, DIST: SANGLI - 416401

ARVI

1655. SEVA AUTOMOTIVE PVT LTD (--01), PLOT NO-7, SURVEY NO-32/7, MAUZA -AHMADNAGAR, WARDHA ROAD, NAGAR PARISHAD-ARVI, TEHSIL-ARVI, DIST-WARDHA - 442201
PH :8484988769.

ASHTA

1656. SIDDHI WHEELS ( A UNIT OF TARALEKAR MOTORS PVT LTD) (--01), GATE NO: 328/9, NEAR S R HOTEL, ASHTA -ISLAMPUR ROAD, ASHTA - 416301

ATPADI

1657. SIDDHI WHEELS ( A UNIT OF TARALEKAR MOTORS PVT LTD) (--01), GAT NO. 2774, MAYAKKA NAGAR . NEAR BDS BANK . ATPADI. TAL- ATPADI . DISTRICT SANGLI . PIN 415301 - 415301

AURANGABAD

1658. AUTOMOTIVE MANUFACTURERS PVT LTD (2102-21-01), PLOT NO. 1,P.B.NO. 716,CHIKALTHANA,AURANGABAD - 431210
PH :9158000046.
1659. PAGARIYA AUTO PVT LTD (2103-21-01), OPP. OLD HIGH COURT, NEAR HOTEL ASHOKA EXECUTIVE, JALANA ROAD, AURANGABAD - 431005
1660. AUTOMOTIVE MANUFACTURERS PVT LTD (2102-21-03), C-27,MIDC, CHIKALTHANA , N/R LUPIN LABORATORIES, AURANGABAD, MAHARASHTRA - 431006
PH :9158000059.
1661. PAGARIYA AUTO PVT LTD (2103-21-05), GAT NO. 46, PLOT NO. 50, NEAR MASTER COOK RESTAURANT (KAILASH HOTEL) BEED BYPASS ROAD, AURANGABAD, MAHARASHTRA - 431005
1662. PAGARIYA AUTO PVT LTD (2103-21-06), PLOT NO.A-35 MIDC, NEAR MAIN RAILWAY STATION, AURANGABAD - 431001

BALLARPUR

1663. TRISTAR CARS PVT LTD (--04), PLOT NO.11, BEHIND ZAWERI PETROL PUMP, NEAR GURU NANAK COLLEGE, ALLAPALLI ROAD, BAMNI, TAH. BALLARPUR - DIST. - 442701
PH :7447473304.

BARAMATI

1664. MAHALAXMI AUTOMOTIVES PVT LTD (--01), BARAMATI- PHALTAN RD., KASBA, BARAMATI, DIST. PUNE - 413102
PH :9881370310.

BARSHI

1665. CHAVAN MOTORS DIVISION INDIA PVT LTD (--01), GAT NO.1407/1, LATUR ROAD, NEAR ESSAR PETROL PUMP, BARSHI. - 413401

BEED

1666. PAGARIYA AUTO PVT LTD (--01), GUT NO. 61, VILLAGE – GHOSAPURI, TALUKA AND DISTRICT – BEED, MAHARASHTRA . - 431122

BHANDARA

1667. AUTOMOTIVE MANUFACTURERS PVT LTD (2001--03), JINDAL'S BLDG, NEAR NAVKAR PETROL PUMP, SAINATH NAGAR, NH-6, BHANDARA - 441904

BHIGWAN

1668. MAHALAXMI AUTOMOTIVES PVT LTD (--01), GAT NUMBER-342, NEXT TO HOTEL SAGAR, PUNE-SOLAPUR HIGHWAY, BHIGWAN – 413130. - 413130
PH :9922979653.

BHILAWADI

1669. SIDDHI WHEELS ( A UNIT OF TARALEKAR MOTORS PVT LTD) (--01), SURVEY NO-1721, AT POST - MALWADI, BHILAWADI, TAL-PALUS, DIST-SANGLI, PIN-416303.

BHIWANDI

1670. NAVNIT MOTORS PVT LTD (3908--03), SURVEY NO. 42/2, 45/1, GUPTA WAREHOUSE, DAPODE, TALUKA-BHIWANDI, DIST-THANE. - 421302
1671. AHER AUTOPRIME LLP (--03), NEXT TO K N PARK, RAJNOLI VILLAGE, KALYAN BYPASS ROAD, BHIWANDI - 421302

BHOR

1672. SEHGAL AUTORIDERS PVT LTD (--01), GUT NO. 929/1, UTTROLI, BHOR, TALUKA – BHOR, DISTRICT – PUNE, MAHARASHTRA. - 412206
PH :9527771016.

BHUSAWAL

1673. MANRAJ MOTORS PVT LTD (--02), NATIONAL HIGHWAY 6, NEAR KHADKA ROAD CROSSING, BHUSAWAL 425201. - 425201
PH :9422867242.

BOISAR

1674. SHIVAM AUTOZONE INDIA PVT LTD (--01), PLOT NO. J-240, MIDC ROAD, BOISAR, TARAPUR INDUSTRIAL, MUMBAI, PIN-401501, MAHARAHSTRA - 401501
PH :8082551155.

BRAMHAPURI

1675. TRISTAR CARS PVT LTD (--02), 165, NAVEGAON, NEAR VIDYANIKETAN SCHOLL, WADSA ROAD, BRAHMPURI, DIST: CHANDARPUR, MAHARASHTRA - 441206
PH :7745883000.

BULDHANA

1676. MANRAJ MOTORS PVT LTD (--01), GAT NO. 94, PLOT NO. 11, SUNDERKHED, BULDHANA, MAHARASHTRA. - 443001
PH :7875051521.

CHALISGAON

1677. MANRAJ MOTORS PVT LTD (--01), SL. NO 406, PLOT NO. 2, NEAR HOTEL RANI PARK, DHULE ROAD, CHALISGAON, DIST: JALGAON, MAHARASHTRA. - 424101
PH :8408889861.

CHANDGAD

1678. SAI SERVICE PRIVATE LIMITED (--01), GAT NO.360, G.P.M NO.157, A/P HALKARNI TALUKA CHANDGAD, DISTT. KOLHAPUR, MAHARASHTRA. - 416507
PH :9673339103.

CHANDRAPUR

1679. TRISTAR CARS PVT LTD (--01), NR. HOTEL KUNDAN PLAZA,NAGPUR ROAD,CHANDRAPUR - 442401
PH :7722068612.
1680. TRISTAR CARS PVT LTD (--03), NAGPUR ROAD, CHANDRAPUR - 442401
PH :7722068603.
1681. ARYA CARS ( A UNIT OF BARBATE AUTOMOTIVE PVT. (--01), ARYA CARS (A UNIT OF BARBATE AUTOMOTIVE, WORKSHOP /BODY SHOP :PLOT NO X-7 - 442401

CHIMUR

1682. TRISTAR CARS PVT LTD (--01), SHOP NO 1-2, OPP. RTM COLLEGE, CHIMUR, DIST-CHANDRAPUR, MAHARASHTRA - 442903 - 442903

CHIPLUN

1683. JAGRUT MOTORS PRIVATE LIMITED (--01), SURVEY NO-543, NH-17, MUMBAI-GOA HIGHWAY,AT-KALAMBASTE,TAL-CHIPLUN, DIST-RATNAGIRI,MAHARASHTRA - 415605

CHOUK

1684. SIMRAN MOTORS PVT LTD (--01), SIMRAN MOTORS PVT LTD STOCKYARD , AT WAVANDAL ,SURVEY NO- 62/2A POST- CHOWK, NEAR ARUN HOTEL ,MUMBAI-PUNE HIGHWAY, TALUKA - KHALAPUR, DISTRICT - RAIGAD - 410206
PH :8691988895.

COLVALE

1685. SAI SERVICE PVT. LTD. (--08), PLOT NO.S-11, COLVALE INDUSTRIAL ESTATE, COLVALE, BARDEZ COLVALE - 403507

DAHANU

1686. SAI SERVICE PRIVATE LIMITED (--03), DAHANU-JAWAHAR ROAD, DAHANU(E), TAL-DAHANU, DIST. TAHNE - 401602

DAHIWADI

1687. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), GAT NO-483/13/2, VILLAGE-DAHIWADI, DAHIWADI-SATARA ROAD, TALUKA-MAN, DIST-SATARA, MAHARASHTRA. - 415102

DAPOLI

1688. JAGRUT MOTORS PRIVATE LIMITED (--06), AT/POST-DAPOLI, DAPOLI-KHED ROAD,DAPOLI.DIST RATANAGIRI. - 415712

DEHUGAON

1689. SUMANKIRTI CARS PVT LTD (--01), GAT NO 359, DEHU – ALANDI ROAD, DEHUGAON, PUNE, MAHARASHTRA (412109) - 412109

DHAMANGAON

1690. ASPA BANDSONS AUTO (P) LTD (--01), RAMDEVBABA NAGAR, ANJANISINGH ROAD, DHAMANGAON RAILWAY, DIST- AMRAVATI - 444709
PH :9850333558.

DHULE

1691. SEVA AUTOMOTIVE PVT LTD (--01), GATE NO. 90,AWADHAN,MUMBAI AGRA ROAD,DHULE - 424001

DINDORI

1692. AUTOMOTIVE MANUFACTURERS PVT LTD (--01), S.NO.753, NEAR PANDAV PETROL PUMP,NASIK DINDORI ROAD, TAL. DINDORI, DISTT. NASIK - 422202
PH :9673000822.

DOMBILVLI

1693. AUTOMOTIVE MANUFACTURERS PVT LTD (3901--02), PLOT NO. B-43, PHASE-1,DOMBIVALI INDUSTRIAL AREA, DOMBIVALI,DISTT-THANE, MAHARASHTRA, - 421201

1694. FORT POINT AUTOMOTIVE CARS PVT LTD (3906--02), SURVEY NO.13, NEAR PIMPLESHWAR TEMPLE, OPP. MAHANAGAR CNG PUMP, KALYAN-SHILPHATA ROAD, MANGAON, SONARPADA, DOMBIVLI EAST. - 421203

GADCHIROLI

1695. BARBATE AUTOMOTIVE INDIA PVT LTD (--01), PLOT NO. 10, GANESH NAGAR, MUL ROAD, GADCHIROLI , MAHARASTRA - 442702
PH :8669929188.
1696. TRISTAR CARS PVT LTD (--01), PLOT NO 29, SURVEY NO 125/1OPP SBI NAVEGAON BRANCH, MUL ROAD< NAVEG - 442605

GANDHIGLAJ

1697. SAI SERVICE PRIVATE LIMITED (3802--04), 581/7B, PLON NO-12, SANKESHWAR ROAD, OPP. HOTEL NEELKAMAL, TAL. GADINGLAJ - 416502

GARGOTI

1698. KR MOTORS KOLHAPUR PVT LTD (--01), 230 & 231, KOLHAPUR GARGOTI ROAD, KHANAPUR, TALUKA BHUDARGAD, DISTRICT KOLHAPUR, MAHARASHTRA. - 416209

GEORAI

1699. PAGARIYA AUTO PVT LTD (--01), SHRI SIDDHI VINAYAK COMPOUND, SURVEY NO 556, JALNA ROAD, GEORAI, DISTRICT – BEED, MAHARASHTRA (431127) - 431127

GONDIA

1700. BARBATE AUTOMOTIVE INDIA PVT LTD (2004--02), ITI ROAD,NR. FULCHUR NAKA,OPP LAXMI FLOUR MILL,GONDIA - 441601
1701. BARBATE AUTOMOTIVE INDIA PVT LTD (2004--03), ITI KAWLEWADA ROAD, NEAR HIMGIRI LAYOUT, KARANJA, GONDIA, MAHARASHTRA. - 441601

GONDPIPRI

1702. TRISTAR CARS PVT LTD (--01), SURVEY NO. 338 , OPP, POLICE STATION , AHERI CHANDRAPUR ROAD, GONDPIPARI PIN 442702 (MAHARASHTRA) - 442702

GUHAGAR

1703. JAGRUT MOTORS PRIVATE LIMITED (--01), SURVEY NO. 23A, SHRUNGALTALI, GUHAGHAR-CHIPLUN ROAD, GUHAGAR, RATNAGIRI, MAHARASHTRA - 415703

HINGANGHAT

1704. SEVA AUTOMOTIVE PVT LTD (--01), PLOT NO. P-1, HINGANGHAT INDUSTRIAL AREA, NH-7, AJANTI, HINGANGHAT, TALUK – HINGANGHAT, DISTRICT – WARDHA, MAHARASHTRA. - 442301
PH :7722067843.

HINGOLI

1705. PAGARIYA AUTO PVT LTD (--01), PLOT NO.5,7 & 8, SURVEY NO.29/2, AKOLA BY PASS ROAD, HINGOLI. - 431513
PH :8411961177.

HUPARI

1706. SAI SERVICE PRIVATE LIMITED (--01), GAT NO.925/8K/2, PLOT NO.7, HUPARI TO YALGUD ROAD, HUPARI, TAL-HATKANANGALE, DISTRICT – KOLHAPUR. - 416203
PH :9923208454.

ICHALKARANSI

1707. SAI SERVICE PRIVATE LIMITED (--01), GATE NO. 107,KOLHAPUR ROAD,KABNOOR,ICHALKARANJI - 416122

INDAPUR

1708. MAHALAXMI AUTOMOTIVES PVT LTD (--02), STATE HIGHWAY NO. 151, INDAPUR - 412219
PH :8308807314.

ISLAMPUR

1709. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), GATE NO.905/A/3, NEAR BOMBAY RAYAN, PUNE-BANGALOE HIGHWAY (NH-4), ISLAMPUR TALUKA : WALVA, DIST:SANGLI - 415409

JALGAON

1710. MANRAJ MOTORS PVT LTD (--01), AJINTA ROAD, MIDC INDL AREA, JALGAON - 425003
1711. KHANDESH MOTORS LLP (--01), GAT 248/2, TARSOD-SHIVAR, TAL & DIST - JALGAON, PIN - 425002, MAHARASHTRA - 425002

JALNA

1712. AUTOMOTIVE MANUFACTURERS PVT LTD (2102--02), PLOT NO. 4 & 5 , CTS NO. 11427/4-A, BALAJI COMPLEX, JALNA-AURANGABAD ROAD, JALNA, - 431203
PH :9158000063.

JATH

1713. CHOWGULE INDUSTRIES PRIVATE LIMITED (--05), PLOT NO. 12, SAWANT ESTATE, MORE COLONY, OPP. CATTLE BAZAR, SATARA ROAD, JATH, DISTRICT SANGLI, MAHARASHTRA - 416404
1714. SIDDHI WHEELS ( A UNIT OF TARALEKAR MOTORS PVT LTD) (--01), GAT NO- 27/1B, POST-RAMPUR, JATH-SANGLI ROAD, TALUKA-JATH, DISTRICT-SANGLI - 416404
PH :8956454526.

JAYSINGPUR

1715. SAI SERVICE PRIVATE LIMITED (--01), GATE NO. 1239, NEAR ACHRYA TULSI BLOOD BANK, A/P UDGAON(JAYSINGHPUR), TALUKA:SHIROL, DIST: KOLHAPUR - 416134
PH :9673339762.

JEJURI

1716. EXCELL AUTOVISTA PRIVATE LIMITED (--01), GAT NO - 224, AT POST-SAKURDE, JEJURI, TALUKA-PURANDHAR, DISTRICT-PUNE, PIN-412303. - 412303
PH :9146052651.

KADEGAON

1717. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), GAT NO-248, KARAD ROAD, KADEGAON, TAL-KADEGAON, DIST-SANGLI, MAHARASTRA - 415304

KALWAN

1718. SHAAN CARS PVT LTD (--01), GAT NO. 189, PLOT NO. 7, MALEGAON ROAD, A/P KALWAN, NASHIK. - 423501

KALYAN

1719. AHER AUTOPRIME LLP (--01), SURVEY NO.53 & 54, HIND MILL, OPPOSITE STATE BANK OF INDIA, ANDHARWADI ROAD, KALYAN, MUMBAI - 421301

1720. AHER AUTOPRIME LLP (--02), SURVEY NO.31B,MOHANE ROAD ,NEAR SHAHAD RAILWAY STATION,SHAHAD,KALYAN. - 421103

KAMSHET

1721. SEHGAL AUTORIDERS PVT LTD (--01), AT NAYGAON, POST KAMSHET, TALUKA MAVAL, DISTRICT PUNE, MAHARASHTRA (410405). - 410405
PH :8888881358.

KANKAVALI

1722. JAGRUT MOTORS PRIVATE LIMITED (--05), PLOT NO.32-33,SURVEY NO. -1886/1,,MUMBAI-GOA HIGHWAY (NH-17),JANAVLI,KANKAVLI,MAHARASHTRA - 416002

KANNAD

1723. AUTOMOTIVE MANUFACTURERS PVT. LTD. (--01), SURVEY NO 208/2, NEAR DEEPAK PETROL PUMPCHALISGAON ROAD , KANNAD - 431147

KARAD

1724. CHOWGULE INDUSTRIES PRIVATE LIMITED (--02), 112/3, PUNE-BANGALORE ROAD, NEAR RELIANCE GAS PUMP, A/P MALKAPUR, TAL. KARAD, DISTT. SATARA - 415110
PH :9922569835.

KARANJA

1725. ASPA BANDSONS AUTO (P) LTD (--01), MAA GODAVARI NAGAR, NAGPUR-AURANGABAD HIGHWAY, KARANJA, DISTRICT – WASHIM, MAHARASHTRA - 444104. - 444104

KARJAT

1726. SIMRAN MOTORS PVT LTD (--03), PANVEL-KARJAT ROAD, KARJAT, DIST. RAIGAD - 410201

1727. KANKARIYA AUTOMOBILES PRIVATE LTD (--01), KARJAT-NAGAR ROAD, KARJAT, MAHARASHTRA - 414402
PH :9890843771.

KARMALA

1728. CHAVAN MOTORS DIVISION INDIA PVT LTD (--01), GAT NO. 105, SURVEY NO. 3961, KARMALA-NAGAR ROAD, A/P- KARMALA, TALUKA - KARMALA, DIST.-SOLAPUR. - 413202
PH :8806665691.

KATOL

1729. SEVA AUTOMOTIVE PVT LTD (--01), SURVEY NO-241/1, PLOT NO 03, THOMA LAYOUT JALALKHEDA ROAD,KATOL, MAHARASHTRA - 441302

KAVATE MAHANKAL

1730. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), MAHANKALI BAAZAR, KAVATE MAHANKAL-JAT ROAD, KAVATE MAHANKAL, SANGLI, MAHARASHTRA - 416405

KHAMGAON

1731. MANRAJ MOTORS PVT LTD (--01), GAT NO 41, OLD SURVEY NO. 12/1A, NEAR AMRUT PETROL PUMP, AKOLA ROAD, KHAMGAON , MAHARASHTRA - 444303

KHANAPUR (SANGLI)

1732. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), KHANAPUR VITA ROAD, KHANAPUR, TAL-KHANAPUR, DIST-SANGLI - 415307
PH :9767899653.

KHARGHAR

1733. EXCELL AUTOVISTA PRIVATE LIMITED (--01), SURVEY NO.742/439, KOPRA VILLAGE, SECTOR-10, SION-PANVEL HIGHWAY, KHARGHAR, DIST. RAIGAD - 410210

KHED

1734. JAGRUT MOTORS PRIVATE LIMITED (--01), GAT NO - 43/B, MAUZA-BHARNE NAKA, TALUKA-KHED, DIST-RATNAGIRI. - 415709
PH :9689533472.

KHED SHIVAPUR

1735. SEHGAL AUTORIDERS PVT LTD (--01), GATE NO. 763A, PUNE BANGALORE HIGHWAY, VELU VILLAGE, TEHSIL BHOR, OPP. INDIAN - 412205

KHOPOLI

1736. KIRAN MOTORS LIMITED (--01), PLOT NO-68, VILLAGE-MULGAON, KHOPOLI INDUSTRIAL ESTATE, KHOPOLI, TALUKA-KHALAPUR DIST-RAIGARH - 410204

KOLAD

1737. EXCELL AUTOVISTA PVT LTD (--01), GATE NO.154,AT BHUVAN KOLAD,, MUM-GOA HIGHWAY,RAIGAD, - 402112

KOLHAPUR

1738. SAI SERVICE PRIVATE LIMITED (3802-38-01), PLOT NO. 1, E WARD, BEHIND PARVATI TALKIES, SHIVAJI UDYAMNAGAR, KOLHAPUR - 416008

1739. SAI SERVICE PRIVATE LIMITED (3803-38-01), C-6, SHIROLI MIDC, MENON OPP MENON PISTONS,NH-4, KOLHAPUR - 416122

1740. SAI SERVICE PRIVATE LIMITED (3802--06), R S NO. 1018/1, PLOT NO. 28, APATE NAGAR, KALAMBA RING ROAD, KOLHAPUR, MAHARASHTRA. - 416012

1741. KR MOTORS KOLHAPUR PVT LTD (3804-38-01), PLOT NO. 216/2, 216/3, 216/5, NH-4, GOKUL SHIRGAON, KOLHAPUR. - 416234

KONGAON

1742. PRAKASH AUTO PVT LTD (3903--02), SURVEY NO.126/127,98/38,AT & POST KONGAON, - 421302

KOPARGAON

1743. SHAAN CARS PVT LTD (--01), SURVEY NO. 15/36 GAWARE PATIL ESTATE, NAGAR MANMAD HIGHWAY, NEAR ASHOKA HOTEL, KOPARGAON. - 423601
PH :9075028780.

KOREGAON BHIMA

1744. SAI SERVICE PRIVATE LIMITED (--01), GAT NO-373, VILLAGE-KOREGAON BHIMA, TALUKA-SHIRUR, DIST-PUNE. - 415501
PH :7774997005.

KUDAL

1745. JAGRUT MOTORS PRIVATE LIMITED (--01), SURVEY NO. 50/5, 51/5, A/P PINGULI, TEMBDHURI, TALUKA – KUDAL, DISTRICT – SINDUDURG, MAHARASHTRA - 416520

KUDITRE

1746. SAI SERVICE PRIVATE LIMITED (--01), KUDITRE FACTORY PHATA, A/P –KOPARDE, TALUKA-KARVEER, DIST-KOLHAPUR-416205. - 416205
PH :9923208460.

KURUDWADI

1747. CHAVAN MOTORS DIVISION INDIA PVT LTD (--01), GAT NO.:256, BYPASS ROAD, A/P KURDA, TALUKA-MADHA, DISTT. SOLAPUR. - 413208
PH :8806665691.

KURUNDWAD

1748. SAI SERVICE PRIVATE LIMITED (--01), GAT NO. 250, AT POST - KURUNDWAD, TALUKA - SHUROO, DIST.-KOLHAPUR. - 416106
PH :9673339695.

LANJA

1749. JAGRUT MOTORS PRIVATE LIMITED (--01), GAT NO-663, TALUKA-LANJA, DIST - RATNAGIRI, MAHARASHTRA -416701 - 416701
PH :8108718346.

LASALGAON

1750. SHAAN CARS PVT LTD (--01), PLOT NO. 337, LASALGAON MAIN ROAD, LASALGAON, TALUKA – NANDGAON, DISTRICT – NASHIK. - 422306

LATUR

1751. AUTOMOTIVE MANUFACTURERS PVT LTD (--02), C-4/1319/1, SURVEY NO. 89/C, RING ROAD BETWEEN NANDED NAKA AND BABHALGAON NAKA, LATUR, PO & DIST-LATUR,PIN-413512. - 413512

LONAND

1752. SIDDHI WHEELS ( A UNIT OF TARALEKAR MOTORS PVT LTD) (--01), SR NO - 353/2, NEAR RAILWAY BRIDGE, PUNE-SATARA ROAD, LONAND, SATARA, MAHARASHTRA – 415521. - 415521

LONAVALA

1753. SEHGAL AUTORIDERS PVT LTD (--01), GATE NO. 120/1, VILLAGE – WAKSAI, TALUKA – MAVAL, LUNAVALA, DISTRICT – PUNE, MAHARASHTRA. - 410405

LONI

1754. MAHALAXMI AUTOMOTIVES PVT LTD (--01), GAT NO. 55/5, SANGAMNER LONI ROAD, LONI, TALUKA-RAHATA, AHMEDNAGAR MAHARASHTRA - 413736

MAHAD

1755. SIMRAN MOTORS PVT LTD (--04), NEAR RELIENCE PUMP, PANVEL-GOA ROAD, MAHAD, DIST. RAIGAD - 402301
PH :9870404323.

MALEGAON

1756. SHAAN CARS PVT LTD (3703--02), GAT NO. 273, POST-TEHARE, MALEGAON, AB HIGHWAY, NH-3, DISTRCT-NASHIK - 423203

MALKAPUR

1757. KR MOTORS KOLHAPUR PVT LTD (--01), AT PO - MALKAPUR, YELANE-SAHUWADI, KOLHAPUR-RATNAGIRI ROAD, DIST-KOLHAPUR, PIN-416105. - 416105

MANCHAR

1758. KOTHARI AUTO WHEELS PVT LTD (--01), SOHAM NAGARI, A-WING, SHOP NO.8 & 16, PUNE NASIK HIGHWAY, A/P MANCHAR, TALUKA: AMBEGAON, DISTT: PUNE, MAHRASHTRA - 410503
PH :8411003608.

MANGALVEDHA

1759. CHAVAN MOTORS DIVISION INDIA PVT LTD (--01), NEAR SWARAJYA HOTEL, PANDHARPUR ROAD, CHOKAMELANAGAR, MANGALWEDHA, MAHARASHTRA, PIN-413305 - 413305
PH :8805778881.

MANGAON

1760. SIMRAN MOTORS PVT LTD (--01), SURVEY NO.97, AT-POST-NANORE, NH-17, MUMBAI-GOA HIGHWAY, MANGAON, RAIGAD, MAHRASTHRA. - 402104
PH :9223181120.
1761. SIMRAN MOTORS PVT LTD (--02), GAT NO-65/2K, NANORE GAON, - 402104

MANMAD

1762. SHAAN CARS PVT LTD (--01), GAT NO. 11/3, PLOT NO. 1 AND SHOP NO. 3 & 4, NANDGAON ROAD, MANMAD. - 423104

MANOR

1763. SAI SERVICE PRIVATE LIMITED (--01), GUT NO. 37, NEAR MSEB POWER STATION, PALGHAR MANOR ROAD, AT POST – TAKVAHAL, DISTRICT – PALGHAR, MANOR. - 401403
PH :9167980005.

MARKAL

1764. MY CAR (PUNE) PVT LTD (--01), SRV NO 1283/2 & 1284, KAMALJAI WASTI, OPP. ENPRO INDUSTIRES, ON ALANDI MARKAL ROAD, A/P MARKAL, TEHSIL-KHED, DIST PUNE, PIN CODE NO. 412105. - 412105

MAUDA

1765. ARUN MOTORS PVT LTD (--01), NEAR NIRMAL UJJWAL BANK,, MAIN ROAD, - 441104

MAYANI

1766. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), GAT NO - 2101/1, 560/1,
MAYANI VADUJ ROAD, A/P- MAYANI,
TAL-KHATAV, DIST-SATARA-415102. - 415102
PH :8888866659.

MEDHA

1767. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), GAT NO-76-24/25,OPP.PWD OFFICE,A/P-JAWALWADI(MEDHA),TAL-JAOLI,DIST-
SATARA, MAHARASHTRA-415012 - 415012

MHASLA

1768. EXCELL AUTOVISTA PRIVATE LIMITED (--01), SURVEY NO-27, VILL- SAVAR, TALUKA-MHASLA, DIST- RAIGAD - 402105

MHASWAD

1769. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), GAT NO.287/5,SATARA-PANDHARPUR ROAD, , A/P-MHASWAD(MASAIWADI), MAHARASHTRA - 415509

MIRAJ

1770. CHOWGULE INDUSTRIES PRIVATE LIMITED (--03), 42C , OPP. WHISPERING WOODS, MIDC AREA, TALUKA MIRAJ, DISTT. SANGLI, MAHARASHTRA - 416410

MORGAON

1771. MAHALAXMI AUTOMOTIVES PVT LTD (--01), GAT NO-179, MORGAON, - TALUKA- BARAMATI, DIST-PUNE - 412304
PH :9850994014.

MUMBAI

1772. SAI SERVICE PRIVATE LIMITED (--01), 462 SENAPATI BAPAT MARG,WORLI NAKA,LOWER PAREL,MUMBAI - 400013
1773. SAI SERVICE PRIVATE LIMITED (--02), ARVIND CHAMBERS,194 ANDHERI KURLA ROAD, ANDHERI(EAST), MUMBAI - 400069
1774. VITESSE PRIVATE LIMITED (--01), SHAH INDL.ESTATE, PLOT 11 LINK ROAD, ANDHERI (WEST), MUMBAI - 400058
1775. VITESSE PRIVATE LIMITED (--02), 77 AF PALKY GULLY,OFF VEER SAVARKAR MARG, PRABHADEVI, MUMBAI - 400025
1776. SAH & SANGHI AUTO AGENCIES PVT LTD (--01), PRAKASH MILLS COMPOUND,OFF. GLOBE MILLS PASSAGE,WORLI,MUMBAI - 400013
1777. SAI SERVICE PRIVATE LIMITED (--04), C/O SHAKTI INDUSTRIAL WIRE COMPOUND,DATTA PADA ROAD,BORIVILI (EAST),MUMBAI - 400066
1778. AUTOMOTIVE MANUFACTURERS PVT LTD (3901--04), PLOT NO. 108, BAZAR WARD, KURLA(WEST) , MUMBAI - 400070
1779. FORT POINT AUTOMOTIVE CARS PVT LTD (--02), D-9, STREET NO. 21, OPP PATNI COMPUTERS, SEEEPZ, MIDC, ANDHERI, MUMBAI - 400096
1780. SHIVAM AUTOZONE INDIA PVT LTD (--01), CHARKOP INDUSTRIAL ESTATE, KANDIVLI(WEST), MUMBAI, MAHARASHTRA - 400067
1781. VITESSE PRIVATE LIMITED (--07), PLOT NO.A59, KANDIVALI INDUSTRIAL CO-OP. SOC., GOVERNMENT INDUSTRIAL ESTATE, CHARKOP, KANDIVALI (W), MUMBAI - 400067
1782. FORT POINT AUTOMOTIVE CARS PVT LTD (--03), C/O VARUN STEEL INDUSTRIES,AAM TOOL COMPOUND,BOAT HURT ROAD, BEHIND SEWARI POLICE STATION, DARUKHANA, REAY ROAD, MUMBAI - 400010
1783. SHIVAM AUTOZONE INDIA PVT LTD (--02), PLOT NO. 4&5, RAMCHANDRA LANE EXTN., OFF LINK ROAD, KANCHPADA, MALAD-WEST. MUMBAI. 400064. - 400064
1784. VELOX MOTORS PVT LTD (--01), PLOT NO.115/116/117 MIVERVA INDUSTRIAL ESTATE, MULUND-WEST, MUMBAI - 400080
1785. KIRAN MOTORS LIMITED (--01), CTS NO. 170 & 4081, BOMBAY AGRA ROAD, LB SHASTRI MARG, GHATKOPAR (WEST), MUMBAI, MAHARASHTRA, PINCODE: 400086. - 400086
1786. MY CAR (PUNE) PVT LTD (--01), PLOT NO-10, CHANDIVALI ESTATE, CHANDIVALI FARM ROAD, OPP LAKE HOMES, ANDHERI EAST, MUMBAI, MAHARASHTRA - 400072
PH :8104907081.

MURGUD

1787. SAI SERVICE PRIVATE LIMITED (--01), R.S. NO. 188/4, A/P MURGUD, TALUKA: KAGAL, DIST: KOLHAPUR - 416219

MURTIZAPUR

1788. KHANDELWAL AUTOWHEELS PVT LTD (--01), SURVEY NO 38, MAUJA SONORI, NH 06, NEAR HOTEL DEVA, MURTIZAPUR, DISTRICT-AKOLA - 444107
PH :8484063274.

NAGOTHANE

1789. SIMRAN MOTORS PVT LTD (--01), SURVEY NO.241, PLOT NO. 11, MOUJE CHIKANI, ROHA, RAIGADH, - 402106

NAGPUR

1790. SEVA AUTOMOTIVE PVT LTD (2002-20-01), 34/3, KACHIMET AREA, NEAR VAYUSENA NAGAR BUS STOP, WADI, AMRAVATI ROAD, NAGPUR - 440023
1791. AUTOMOTIVE MANUFACTURERS PVT LTD (2001-20-02), 575 KAMPTEE ROAD,NAGPUR-26,, - 440026
1792. SEVA AUTOMOTIVE PVT LTD (2002-20-03), PLOT NO. 33A, CENTRAL MIDC, HIGNA ROAD, NAGPUR, MAHARASHTRA, - 440016
1793. BARBATE AUTOMOTIVE INDIA PVT LTD (2004-20-01), NEAR PARDY NAKA (OUTSIDE), NH-6, BHANDARA ROAD,NAGPUR - 440035
1794. AUTOMOTIVE MANUFACTURERS PVT LTD (2001-20-05), PLOT NO. 38/1, NEAR BOUDDHA VIHAR, OPP. DELHI PUBLIC SCHOOL, KAMPTEE ROAD, NAGPUR, MAHARASHTRA - 441001
1795. BARBATE AUTOMOTIVE INDIA PVT LTD (2007--01), PLOT NO. 4, NEW COTTON MARKET, GHAT ROAD, NAGPUR, MAHARASTRA - 440018
PH :8888859542.
1796. BARBATE AUTOMOTIVE INDIA PVT LTD (2007--02), PLOT NO. 131, NH-6, BHANDARA ROAD, MAHALGAON, NAGPUR, MAHARASTRA. - 441202
PH :8888820312.
1797. SEVA AUTOMOTIVE PVT LTD (2002--04), PLOT NO.05, 12, 13A, 13B CHANDRABHAGA GRUHA NIRMAN SAHAKARI LIMITED, KH NO.45/3, CITY SURVEY NO.570, MANEWADA RING ROAD, NAGPUR, MAHARASHTRA - 440027
PH :8390446644.
1798. ARUN MOTORS PRIVATE LIMITED (2008--01), PLOT NO-9&10, PATNI PLAZA, KHAMLA RING ROAD, SAWARKAR NAGAR, NAGPUR, MAHARASHTRA - 440025
1799. ARUN MOTORS PRIVATE LIMITED (2008--02), C-48/1, MIDC HINGNA MAIN ROAD, WADI, NAGPUR, PIN-440028, MAHARASHTRA - 440028
PH :7757988800.
1800. SEVA AUTOMOTIVE PVT LTD (2009-20-01), P.S.K 14, REVENUE CIRCLE, KH NO.84, NEAR KORADI POLICE STATION, PANJARA - 480115

NALASOPARA

1801. SHIVAM AUTOZONE INDIA PVT LTD (--01), SURVEY NO. 91,92 , PLOT NO. 7, VILLAGE-DHANIV, NALASOPARA, DIST. PALGHAR, MAHARASHTRA. - 401209

NANDED

1802. SEVA AUTOMOTIVE PVT LTD (6801-68-01), GAT NO-126, NEAR SUNDER PETROL PUMP, A/P PIMPALGAON MAHADEO, TQ-ARDHAPUR, NAGPUR-NANDED HIGHWAY,NANDED, MAHARASHTRA-431704 - 431604
PH :7447415607.

NANDURBAR

1803. SEVA AUTOMOTIVE PVT LTD (--02), P NO.-324, BASILAL NAGAR SHAHADA BYPASS ROAD, NEAR HOTEL KAREN GARDEN, CHAUFULLY NANDURBAR-425412 - 425412
PH :7720017528.

NARAYANGAON

1804. KOTHARI AUTO WHEELS PVT LTD (--01), GATE NO. 747, PUNE NASIK HIGHWAY, WARULWADI, NARAYANGAON - 410504
PH :8411003608.

NASHIK

1805. AUTOMOTIVE MANUFACTURERS PVT LTD (3702-37-01), P-1-12,ADDITIONAL NASIK INDL. AREA,AMBAD,NASIK - 422010
1806. SEVA AUTOMOTIVE PVT LTD (3701-37-01), PLOT NO. X - 46,MIDC. AMBAD, NASIK - 422010
1807. SHAAN CARS PVT LTD (3703-37-01), E-3 MIDC AREA,SATPUR , NASIK,MAHARASHTRA - 422007
1808. SHAAN CARS PVT LTD (3703-37-04), 03/810, NEAR NASARDI BRIDGE, WADALA ROAD, NASIK ROAD, NASIK - 422011
1809. SEVA AUTOMOTIVE PVT LTD (3701-37-06), SEVA FARMS, GATE NO. 82/2, AMBE BAHULA ROAD, VILHOLI, TALUKA & DISTRICT: NASIK, MAHARASHTRA - 422010
PH :9146000709.
1810. SEVA AUTOMOTIVE PVT LTD (--07), PLOT NO.A-23, NICE INDUSTRIAL AREA, MIDC, SATPUR, NASIK (MAHARASHTRA) - 422006
1811. SEVA AUTOMOTIVE PVT LTD (-37-08), SHOP NO. 1 & 2, SER. NO. 241/1-B-1/2, OPPOSITE NMC SCHOOL, DINDORI ROAD, MAHSRUL, NASHIK, MAHARASHTRA - 422004

1812. SHAAN CARS PVT LTD (3703-37-05), SURVEY NO. / PLOT NO. 02, ADGAON, D-MART, MUMBAI AGRA HIGHWAY, NASHIK - 423101
1813. SHAAN CARS PVT LTD (--06), SURVEY NO.72/2, VIHITGAON-VADNER ROAD, DEOLALI, NASHIK - 422401

NASRAPUR

1814. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), GAT NO-152/2, PUNE SATARA HIGHWAY, AT POST: NASRAPUR CHELADI, TALUKA - BHOR, PUNE, MAHARASHTRA - 412213

NAVI MUMBAI

1815. AUTOMOTIVE MANUFACTURERS PVT LTD (3901--01), D-234 MIDC TTC INDL AREA,SHIRVANE NERUL,NEW BOMBAY, - 400706
1816. EXCELL AUTOVISTA PRIVATE LIMITED (--02), PLOT NO-9,MIDC,NAVADE,TALOJA, TAL-PANVEL ,DIST-RAIGAD - 410208
1817. SIMRAN MOTORS PVT LTD (3913--01), CAMEO FABRIC COMPANY, GEN 16, NEAR SULZER COMPANY, DIGHA, TTC AREA, AIROLI - 400701
1818. MY CAR (PUNE) PVT LTD (--01), A-751/2, MIDC TTC, TURBHE MAHAPE ROAD, PAWANE, NAVI MUMBAI - - 400071
1819. SAI SERVICE PRIVATE LIMITED (--06), D 42, TTC INDUSTRIAL AREA, NAVI MUMBAI, PIN-400705 - 400705

NERAL

1820. EXCELL AUTOVISTA PRIVATE LIMITED (--01), NEAR OLD JAKAT NAKA, GANESH NAGAR, PAYARMAL, NERAL, TALUKA - KARJAT, DISTRICT - RAIGAD, MAHARASHTRA (410101). - 410101

NESARI

1821. KR MOTORS KOLHAPUR PVT LTD (--01), S NO. 2452, SUNDAR NAGAR, A/P NESARI, TAL-GADINGLAJ, DIST- KOLHAPUR-416504. - 416504

NEVASA

1822. KANKARIYA AUTOMOBILES PRIVATE LTD (--01), BELOW ADARSH GRAMIN BANK, OPP. ILAKSHI MOTORS, NEVAS PHATA, AURANGABAD ROAD, TALUKA – NEVASA, DISTRICT – AHMEDNAGAR. - 414603
PH :9420494601.

NIPHAD

1823. SHAAN CARS PVT LTD (--01), GAT NO. 99/3, RASALPUR AURANGABAD HIGHWAY, NIPHAD, DISTRICT – NASHIK, MAHARASHTRA. - 422303
PH :9075028780.

OSMANABAD

1824. CHAVAN MOTORS DIVISION INDIA PVT LTD (--03), PLOT NO. A-53, INDUSTRIAL AREA, MIDC, OSMANABAD - 413501
PH :8888867861.

OTUR

1825. KOTHARI AUTO WHEELS PVT LTD (--01), GAT NO-184/3/B, ALEPHATA-KALYAN ROAD, OPP HP PETROL PUMP, VILLAGE-OTUR, TALUKA-JUNNAR, DIST-PUNE - 412409
PH :8411003608.

PABAL

1826. MAHALAXMI AUTOMOTIVES PVT LTD (--01), 3733, SHINALKAR WASTI, PABAL, TALUK SHIRUR, PUNE, PIN 412403 - 412403
PH :8956288087.

PADGHA

1827. SHIVAM AUTOZONE INDIA PVT. LTD. (--01), SHOP NO.7/8,TRADE CENTRE,, MUMBAI NASHIK HW,NEAR PADGHA TOLL PLAZA, - 421101

PAITHAN

1828. PAGARIYA AUTO PVT LTD (--01), GAT NO-277, MAUZA- PAITHAN, TALUKA- PAITHAN, DIST - AURANGABAD 431107. - 431107
PH :9922994237.

PALGHAR

1829. SAI SERVICE PRIVATE LIMITED (--01), SURVEY NO. 86/1, TEMBHODE, MANOR-MAHIM ROAD, PALGHAR, DISTRICT: THANE - 401404

PALUS

1830. CHOWGULE INDUSTRIES PRIVATE LIMITED (--04), PLOT NO.B-3, MIDC AREA, TALUKA PALUS, DISTT. SANGLI. - 416308
PH :8888870122.

PANDHARPUR

1831. CHAVAN MOTORS DIVISION INDIA PVT LTD (--05), 410/A/3, A/P- WAKHARI, PHALTAN ROAD,PANDHARPUR, DIST-SOLAPUR.

GAT NO.56, ESABAVI, PUNE ROAD, TAL:PANDERPUR, SOLAPUR - 413001
PH :7774997005.

PANVEL

1832. SIMRAN MOTORS PVT LTD (--01), PLOT2-8,SECTOR-15, OPP. HOTEL GARDEN,OLD MUMBAI PUNE HIGHWAY,PANVEL - 410206
1833. AUTOMOTIVE MANUFACTURERS PVT LTD (3901--03), PLOT NO:92/1, VILLAGE KOLAKHA, MUMBAI-GOA HIGHWAY, PANVEL, DISTT. RAIGAD - 410206
1834. K.T.S. AUTOMOTORS PVT LTD (--01), VILLAGE: APTA, OPP. APTA RAILWAY STATION, LADIWALI, DIST: RAIGAD, PANVEL (MAHARASHTRA) - 410207

PARATWADA

1835. ASPA BANDSONS AUTO (P) LTD (--01), SURVEY NO. 26/4A, RAMGAON, AMRAVATI PARATWADA ROAD, NEAR JAWARDI PHATA, PARATWADA TALUKA – ACHALPUR, DISTRICT – AMRAVATI . - 444805
PH :8888897629.

PARBHANI

1836. PAGARIYA AUTO PVT LTD (--01), SURVEY NO-301, PLOT NO-86/A, OPP GULMOHAR LODGE, BASMAT ROAD, PARBHANI - 431401
PH :9511868433.

PARGAON

1837. MAHALAXMI AUTOMOTIVES PVT LTD (--01), PARGAON PHATA, KEDGAON PARGAON ROAD, PARGAON, PUNE, MAHARASHTRA - 412203. - 412203

PATAN

1838. CHOWGULE INDUSTRIES PVT. LTD. (--01), GAT NO.1543/K/PLOT NO.2,, A/P-MHAVSHI,PATAN-MANDURE ROAD, - 415206

PATAS

1839. MAHALAXMI AUTOMOTIVES PVT LTD (--03), PUNE-SOLAPUR HIGHWAY, PATAS, TALUKA DAUND DISTT.-PUNE - 413106
PH :8888890957.

PEN

1840. SIMRAN MOTORS PVT LTD (--01), AT SURVEY NO 75, PLOT NO 2, MUMBAI-GOA HIGHWAY, WADHKAL (PEN) - 402107
PH :9503381198.

PHALTAN

1841. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), PLOT NO.83/1B/1, LONAND-PUNE ROAD, PHRANANDWADI, TALUKA:PHALTAN, DISTRICT: SATARA, MAHARASTRA. - 415523
PH :8888886301.

PIMPLEGAON

1842. AUTOMOTIVE MANUFACTURERS PVT LTD (--01), GAT NO.517/P NEAR MARKET COMMITTEE, MUMBAI AGRA HIGHWAY, NH3 A/P PIMPALGAON BASWANT, TALUKA: NIPHAD, DIST-NASHIK - 422202

PIRANGUT

1843. MY CAR (PUNE) PVT LTD (--01), GAT NO-314, AT VILLAGE-KASAR AMBOLI, PIRANGUT, TALUKA -AMBOLI, DIST-PUNE, PIN-412108. - 412108
PH :9325424613.

POYNAD

1844. MY CAR (PUNE) PVT LTD (--01), SURVEY NO-52/2, SUBASH NAGAR, MUMBAI-GOA HIGHWAY, A/P-AMBEPUR, POYNAD, TALUKA-ALIBAUG, DIST-RAIGAD, PIN-402108. - 402108

PULGAON

1845. SEVA AUTOMOTIVE PVT LTD (--01), PLOT NO. 33, MOUZA – CHITKI, MOUZA NO – 2/33, HINDUSTAN COLONY, WARDHA ROAD, GRAM PANCHAYAT – LAXMINARAYANPUR, AT POST – PULGAON, TEHSIL – DEOLI, DISTRICT -WARDHA. - 442302

PUNE

1846. SAI SERVICE PRIVATE LIMITED (1901-19-01), BOMBAY PUNE ROAD, FUGEWADI, PUNE - 411012
1847. SAI SERVICE PRIVATE LIMITED (1901-19-02), 889/90 J.M.ROAD, DECCAN GYMKHANA, PUNE - 411004
PH :9923208347.
1848. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-19-02), S.NO. 53,PUNE SATARA HIGHWAY,KATRAJ,PUNE - 411046
1849. SAI SERVICE PRIVATE LIMITED (1901-19-03), S.NO.15A GIDWANI COMPOUND, KONDWA BUDRUK, HAVELI, PUNE - 411046
PH :9923208345.
1850. WONDER CARS PVT LTD (1903-19-02), 12, NPS LINES,SOLAPUR ROAD,,OLD POOL GATE,CAMP, PUNE - 411001
1851. KOTHARI AUTO WHEELS PVT LTD (1984-19-01), 110/A, PUNE SOLAPUR ROAD, NEAR FATIMA NAGAR, PUNE - 411039
PH :7498272309.
1852. MY CAR (PUNE) PVT LTD (1907-19-01), SURVEY NO. 131, MUMBAI BANGALORE HIGHWAY, WAKAD, PUNE - 411057
1853. CHOWGULE INDUSTRIES PRIVATE LIMITED (1911-19-01), S.NO.1, NEXT TO PODAR INTERNATIONAL SCHOOL, KATRAJ BYPASS ROAD, AMBEGAON-B, TALUKA-HAVELI, PUNE - 411046
1854. SAI SERVICE PRIVATE LIMITED (1901-19-05), NEAR NIGDI-BHOSARI ROAD, CHINCHWAD, PUNE - 411019
1855. SEHGAL AUTORIDERS PVT LTD (1913-19-01), SURVEY NO. 51, BAVDHAN KHRUD, TAL: HAVELI, DIST: PUNE - 411021
1856. SAI SERVICE PRIVATE LIMITED (1901-19-06), SURVEY NO.244/1, PHASE-II, NEAR BANK OF MAHARASHTRA, HINGEWADI, TAL - MULSHI, DISTRICT-PUNE,MAHARASHTRA - 411057
PH :9923208302.
1857. KOTHARI AUTO WHEELS PVT LTD (1984--03), PLOT NO. 2B, D1 BLOCK, CHINCHWAD, PUNE, DIST. PUNE - 411019
PH :9168662302.
1858. MAHALAXMI AUTOMOTIVES PVT LTD (1912--03), 59/A, MUNDHWA KHARADI ROAD, OPP. MUNDHWA POLICE STATION, MUNDHWA, PUNE, MAHARASHTRA - 411036
PH :8888874980.

1859. SAI SERVICE PRIVATE LIMITED (1901--07), 4/A/1A, 1/3 A, SALUNKE VIHAR ROAD, BORADE NAGAR, KONDWA, PUNE, MAHARASHTRA. - 411048
PH :9923208358.
1860. WONDER CARS PVT LTD (1903--03), PLOT NO.52/1 BLOCK F2, MIDC, PIMPRI, PUNE. - 411018
1861. MAHALAXMI AUTOMOTIVES PVT LTD (1912--04), NO.485/1, CTS NO.1041, OM SUPER MARKET, GHOKALE CROSS ROAD, MODEL COLONY, SHIVAJI NAGAR, PUNE - 411016
PH :8888842887.
1862. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-19-05), 129/2/B/1, NEW PUNE MUMBAI HIGHWAY, KATRAJ DEHU ROAD BYPASS, TATHWADE, TAL-MULASHI, DISTT. PUNE (MAHARASHTRA) - 411033
1863. SAI SERVICE PRIVATE LIMITED (1901--08), SURVEY NO. 37, HISSA NO. 2, SITUATED AT WADGAON KHURD, NEAR NANDED CITY, SINHAGAD ROAD, TALUKA - HAVELI, DISTRICT - PUNE, MAHARASHTRA. - 411041
PH :9923208312.
1864. KOTHARI AUTO WHEELS PVT LTD (1984--05), PLOT NO. 24/B, HADAPSAR INDUSTRIAL ESTATE, PUNE. - 411028
1865. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908--06), SR. NO.- 43/44/S, 7 PARVATI INDUSTRIAL ESTATE, OPP. ADINATH SOCIETY, PUNE- SATARA ROAD, PUNE. - 411009
1866. EXCELL AUTOVISTA PRIVATE LIMITED (1917--01), GATE NO.1232, 10TH MALL, PUNE SASWAD ROAD, VILLAGE – WADKI, TAL – HAVELI, DIST PUNE. - 412308
1867. KOTHARI AUTO WHEELS PVT LTD (1984--06), SURVEY NO.46, HISSA 9/1 (CITY SURVEY NO.6181+6180), WADGAON SHERI, CHANDAN NAGAR, PUNE NAGAR ROAD, TAL-HAVELI, PUNE. - 411014
PH :8411003631.
1868. SUMANKIRTI CARS PVT LTD (1915-19-02), SURVEY NO. 9, NEAR BALEWADI SPORTS STADIUMM MUMBAI-BANGALORE HIGHWAYS, MAHALUNGE PUNE, MAHARASHTRA. - 411045
PH :8551990106.
1869. MY CAR (PUNE) PVT LTD (1918-19-01), GAT NO. 625, HISSA NO. 1/3/1, VILLAGE – KURULI, TALUKA – KHED, CHAKAN, DISTRICT – PUNE. - 410501
PH :7755900000.
1870. WONDER CARS PVT LTD (1903--04), SURVEY NO. 20, HISSA NO. 1/1/2, THERGAON, BAL KRISHNA MANGAL KARYALAYA, TALUKA – MULSHI, DANGE CHOWK, PUNE – 411 033. - 411033
PH :7887883311.
1871. MAHALAXMI AUTOMOTIVES PVT LTD (1912-19-05), LANE NO 9, SANT NAGAR, BEHIND IOCL PETROL PUMP, LOHEGAON, PUNE, MAHARASHTRA-411047 - 411047
PH :8956045026.
1872. MY CAR (PUNE) PVT LTD (1918-19-02), GAT NO 624. HISSA NO. 5/2, VILLAGE-KURULI, CHAKAN, TAL. KHED, DIST. PUNE, NEAR SAI EXPRESS WAY PETROL PUMP, PIN-410501. - 410501
1873. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908-19-07), SURVEY NO 245/6,7,9/1, KHARABWADI CHAKAN - 410501
1874. EXCELL AUTOVISTA PRIVATE LIMITED (1917-19-02), S.NO. 41/2B/1 PART CHOUDHARI VASTI, KHARADI, PUNE - 411014

PUSAD

1875. HIMALAYA CARS (--01), OPP P N COLLEGE, GAIMUKH NAGAR,YAVATMAL / DIGRAS ROAD, PUSAD – 445204 ( DIST YAVATMAL, MAHARASHTRA) - 445204

RAHATA

1876. KANKARIYA AUTOMOBILES PRIVATE LTD (--01), SHIRDI ROAD, SAKORI, RAHATA, - 423107
PH :8275033313.

RAHURI

1877. KANKARIYA AUTOMOBILES PRIVATE LTD (--01), TRIMURTI CRANE SERVICE, NAGAR-MANMAD ROAD, RAHURI, MAHARASHTRA. - 413705
PH :9420036767.

RAJAPUR

1878. JAGRUT MOTORS PRIVATE LIMITED (--01), SURVEY NO. 14/8, TARALWADI, RAJAPUR, DIST: RATNAGIRI - 416702

RAJGURUNAGAR

1879. MY CAR (PUNE) PVT LTD (--01), SURVEY NO.94, SANDBHORWADI, NEAR TUKAI MANDIR, PUNE-NASIK HIGHWAY, TAL-KHED, RAJGURUNAGAR DISTT. PUNE. - 410505
PH :9112231553.

RAMTEK

1880. SEVA AUTOMOTIVE PVT LTD (--01), MOUZA NO 275, P H NO 24, GRAM PANCHAYAT - MANSAR,TEHSIL - RAMTEK, DISTRICT - NAGPUR, MAHARASHTRA. - 441401
PH :7758028060.

RATNAGIRI

1881. JAGRUT MOTORS PRIVATE LIMITED (--01), D-25,,MIDC MIRJOLE,MAHARASTRA,RATNAGIRI - 415639

ROHA

1882. EXCELL AUTOVISTA PRIVATE LIMITED (--01), SHOP NO. 1 & 2, PANCHARATNA APARTMENTS, ROHA, ROHA KOLAD ROAD, RAIGAD - 402109
PH :9209200073.

SAKOLI

1883. AUTOMOTIVE MANUFACTURERS PVT LTD (--01), PLOT NO. 7, GAT NO. : 271/1/4, MOUZA - JAMBHALI, TAHSIL - SAKOLI, DIST : BHANDARA, PIN – 441802. - 441802

SANGAMNER

1884. SHAAN CARS PVT LTD (--01), GAT NO. 173/4/5/6, A/P VELHALE, NASHIK PUNE HIGHWAY, SANGAMNER , DIST AHMEDNAGAR, MAHARASHTRA - 422605

SANGLI

1885. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), GAT NO.243 SANGLI KOLHAPUR ROAD, OPP. TO GAJANAN MAHARAJ MANDIR, ANKALI, TAL-SANGLI, DISTT. SANGLI - 416416
PH :9850966805.
1886. SIDDHI WHEELS ( A UNIT OF TARALEKAR MOTORS PVT LTD) (--01), SR NO. 917//2/B, SANGLI MIRAJ ROAD, MIRAJ, DISTRICT - SAGLI. - 416410

SANGOLA

1887. CHAVAN MOTORS DIVISION INDIA PVT LTD (--01), GAT NO. 276/14/A, MAIN ROAD, KOLHAPUR HIGHWAY, A/P & TALUKA - SANGOLA, DIST. -SOLAPUR. - 413307
PH :8806665691.

SANKH

1888. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), SURVEY NO-394/5, VILLAGE- SANKH, TALUKA-JATH, DIST- SANGLI, MAHARASHTRA - 416413

SAPHALE

1889. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (--01), H.NO.1137/1138/1139, , NUTAN NAGAR,MAKNE THEMHIKODAWE ROAD, MAHARASHTRA - 401102

SASWAD

1890. CHOWGULE INDUSTRIES PRIVATE LIMITED (1908--03), SOLAPUR HIGHWAY, SASWAD, DIST. PUNE - 412301

SATANA

1891. SHAAN CARS PVT LTD (--01), GAT NO 322/2/A/7, PUNDLIK NAGAR MALEGAON ROAD, AT POST SATANA DIST NASHIK - 423301 - 423301
PH :9922969656.

SATARA

1892. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), PLOT NO. B-2,OLD MIDC,SATARA - 415002

SAVNER

1893. BARBATE AUTOMOTIVE INDIA PVT LTD (--01), PLOT NO.2, MADANE LAYOUT, MOUZA GUJARKHEDI, NR. INDIAN PETROL PUMP, NAGPUR ROAD, SAVNER DISTT. NAGPUR, - 441107
PH :8888859546.

SAWANTWADI

1894. JAGRUT MOTORS PRIVATE LIMITED (--01), SHIVSHAMBHO APARTMENT, 1190, A/P KOLGAON, SURVEY NO.187, HISSA NO.33B, TAL-SAWANTWADI, DISTT. SINDHUDURG. - 416510

SHAHAPUR

1895. SHIVAM AUTOZONE INDIA PVT LTD (--01), DR. DESHPANDE COMPOUND, NEAR BHATSA COLONY, VILLAGE – GOTHEGHAR, TALUKA – SHAHPUR, DISTRICT – THANE, MAHARASHTRA - 421601
PH :7718893483.

SHAHUWADI

1896. SAI SERVICE PRIVATE LIMITED (--01), GATE NO. 1213, R/AT DONOLI, TALUKA - SHAHUWADI, DIST.-KOLHAPUR - - 416213
PH :9923208448.

SHILTPATA

1897. VELOX MOTORS PVT LTD (--01), SURVEY NO-99/2B, VILLAGE-DAIGHAR, KALYAN SHIL-PHATA ROAD, NEAR DATTA MANDIR, POST-PADALE, DIST-THANE, PIN-421204. - 421204
PH :8419984188.

SHIRUR

1898. MAHALAXMI AUTOMOTIVES PVT LTD (1912--02), 1023/1, NEXT INDIAN OIL PETROL PUMP, SARADWADI, PUNE-AHMEDNAGAR HIGHWAY, TAL: SJIRUR, DIST: PUNE, MAHARASHTRA - 412210

SHIRWAL

1899. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), GAT NO.175, A/P SHINDEWADI, SHIRWAL-BHOR ROAD, SHIRWAL, TAL KHANDALA, DISTT. SATARA - 412801
PH :9637399003.

SHRIGONDA

1900. MAHALAXMI AUTOMOTIVE PVT. LTD. (--01), GAT NO.2378/1/1/1,, RAILWAY STATION ROAD,VILLAGE SHREEGONDA, - 413701

SHRIRAMPUR

1901. KANKARIYA AUTOMOBILES PRIVATE LTD (--01), S.NO.139/1/3, NEAR NAKA NO.4, SANGAMNER ROAD, SHRIRAMPUR DISTT. AHMEDNAGAR - 413709
PH :9420494543.

SIKRAPUR

1902. EXCELL AUTOVISTA PRIVATE LIMITED (--01), AT POST SHIKARPUR MALTHAN PHATA, OPP. CHAURASIYA CHANA CENTER, PUNE NAGAR ROAD, TALUKA SHIRUR, DIST. PUNE, PIN-412208, PUNE - 412208
PH :9146194973.

SILLOD

1903. PAGARIYA AUTO PVT LTD (2103--04), PLOT NO. 19/20, SURVEY NO. 386, AURANGABAD NAKA, SILLOD, AURANGABAD - 431112
PH :8600037213.

SINNAR

1904. SHAAN CARS PVT LTD (3703--03), A-24, MIDC AREA MALEGAON,SINNAR TAL- SINNAR,, - 422103

SOLAPUR

1905. CHAVAN MOTORS DIVISION INDIA PVT LTD (--02), 150, AKALKOT ROAD,OPP. SVCS HIGH SCHOOL,SOLAPUR, - 413006
1906. CHAVAN MOTORS DIVISION INDIA PVT LTD (--01), 18,39, INDUSTRIAL ESTATE,HOTAGI ROAD,SOLAPUR, - 413224
PH :8805778881.
1907. CHAVAN MOTORS DIVISION INDIA PVT LTD (--06), PLOT NO.95, IND. ESTATE, HOTAGI ROAD, SOLAPUR. - 413003
PH :8805986826.

TALASARI

1908. SHIVAM AUTOZONE INDIA PVT LTD (--01), SURVEY NO. 191/1 PLOT NO. 5, AT-POST – VADAVALI, NH-8, TALASARI, THANE, MAHARASHTRA - 401606

TALEGAON DABHADE

1909. MY CAR (PUNE) PVT LTD (--01), SR.NO.113, HISSA NO.1/3/2/A, MUMBAI PUNE OLD HIGHWAY, MAVAL, TALEGAON - 410506
PH :9730855855.

TASGAON

1910. SIDDHI WHEELS ( A UNIT OF TARALEKAR MOTORS PVT LTD) (--01), SHETKARI MARKET, NEAR ISHA HOTEL, TASGAON-SANGLI ROAD, TALUKA - TASGAON, DIST.-SANGLI. - 416312
PH :8275030748.

TEMBHURNI

1911. CHAVAN MOTORS DIVISION (I) PVT LTD (--01), GAT NO.560/2/A,OLD PUNE ROADNEAR SUMAN THEATRE, TEMBHURANI - 413221

THANE

1912. PRAKASH AUTO PVT LTD (3903-39-01), U NO-3,SHEET NO. 30,VITHALWADI STATION ROAD, ULHASNAGAR - 421003
1913. FORT POINT AUTOMOTIVE CARS PVT LTD (3906-39-01), KOTHARI WAREHOUSE NO. 111,POKHRAN ROAD NO. 11,MANPADA, CHATALSAR,THANE - 400607
1914. NAVNIT MOTORS PVT LTD (3908-39-02), B R T PLOT ,THANE (W) ,MAHARASHTRA - 400607
1915. VELOX MOTORS PVT LTD (--02), NEW SURVEY NO. 17/1/B, NEAR BLUE ROOF CLUB, VILLAGE - OWALE, GHODBUNDER ROAD, THANE (W). - 400615
1916. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (3915-39-01), BRILLIANT COMPLEX, WESTERN EXPRESS HIGHWAY, MIRA ROAD, THANE- 401107. - 401107
PH :8591942704.
1917. VELOX MOTORS PVT LTD (3914-39-01), PLOT NO: A-66, ROAD NO 21, NEHRU NAGAR, WAGLE INDUSTRIAL ESTATE, THANE WEST, MAHARASHTRA - 400604

TITWALA

1918. AHER AUTOPRIME LLP (--01), SURVEY NO. 23/2, SHOP NO. 3, NEAR GOVELI, TITWALA ROAD, GHOTSAI, TITWALA, PIN-421301, MAHARASHTRA - 421301
PH :18008334369.

TRIMBAK

1919. SHAAN CARS PVT LTD (--01), SURVEY NO. 260/3, OPPOSITE MSEB OFFICE, NEAR GOVT. GEST HOUSE; SWAMI SAMARTH BUS STOP; TRIMBAKESHWAR-NASHIK HIGHWAY; AT POST/TAL: TRIMBAKESHWAR DIST: NASHIK PIN: 422212 - 422212

TUMSAR

1920. AUTOMOTIVE MANUFACTURERS PVT LTD (--01), GAT NOS. 1350/149 & 1350/150, VILLAGE TUMSAR, TQ TUMSAR, DIST.- BHANDARA, STATE-MAHARASHTRA - 441912
PH :7391075992.

ULWE

1921. MY CAR (PUNE) PVT LTD (--01), SURVEY NO-97/8, HOUSE NO-1498, A/P JASAI, ULWE, TEHSIL-URAN, DIST-RAIGAD, PIN NO-410206. - 410206

UMADI

1922. SIDDHI WHEELS ( A UNIT OF TARALEKAR MOTORS PVT LTD) (--01), 182/2, INDRAYANI SANKUL, JATH ROAD, UMADI, TALUKA-JATH, PIN-416413. - 416413

UMBRAJ

1923. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), SHOP-4,5,6 - GANRAJ COMPLEX, GAT NO. -213, UMBRAJ, TAL-KARAD, DIST-SATARA - 415109

UNDRI, PUNE

1924. KOTHARI AUTO WHEELS PVT. LTD. (--07), 312/1/11, KATRAJ BYPASS ROAD,, OPP. INDIAN OIL PETROL PUMP, URALI - 412307

URALI KANCHAN

1925. EXCELL AUTOVISTA PRIVATE LIMITED (--01), GAT NO-244, VILLAGE-SORTAPWADI, TALUKA -HAVELI, URULI KANCHAN, DIST-PUNE, PIN-412201 - 412201
PH :8097452280.

VADUJ

1926. CHOWGULE INDUSTRIES PRIVATE LIMITED (--03), KALEVASTI, VADUJ DAHIWADI ROAD , VADUJ - 415506
PH :8888866659.

VAIJAPUR

1927. PAGARIYA AUTO PVT LTD (--01), NEAR SUBHASH BUNGLOW, STATION ROAD, VAIJAPUR, AURANGABAD. - 423701
PH :9922994237.

VASAI

1928. SAI SERVICE PRIVATE LIMITED (--01), ANDRADESH BHAVAN, SURVEY #27 A,NEAR UMELA PHATAK, VASAI (WEST), DIST. THANE, MAHARASTRA - 401202
1929. SAI SERVICE PRIVATE LIMITED (--03), C/O MR. KENNETH NICHOLAS D'SOUZA, SURVEY NO-89, SATIVALI ROAD, VILLAGE-WALIV, VASAI (EAST), DIST-PALGHAR, MAHARASHTRA, PIN-410208 - 401208
1930. SAI SERVICE PRIVATE LIMITED (--04), SURVEY NO. 152, VASAI MUMBAI HIGHWAY, BEHIND INDIA OIL PETROL PUMP, SASUNAVGARH - 401208

VASIND

1931. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (--01), NISARG GARDEN RESORT, MUMBAI NASHIK HIGHWAY NH3,VASIND WEST, - 421601

VELHE

1932. SUMANKIRTI CARS PVT LTD (--01), MAUZA NO-492/2, A/P-VELHA, TAL- VELHA, DIST-PUNE-412212 - 412212

VIKRAMGADH

1933. SHIVAM AUTOZONE INDIA PVT LTD (--01), NEAR GOVERNMNET DISPENSARY HOSPITAL, DAHANU ROAD, TEHSIL-VIKRAMGADH, DIST-PALGHAR-401605 - 401605
PH :8082551080.

VIRAR

1934. SAI SERVICE PRIVATE LIMITED (--02), SURVEY NO.16, AGASHI ROAD, PADMAN NAGAR, VIRAR-WEST, DISTT. PALGHAR. - 401301

VITA

1935. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), S NO. 900, HISSA NO. 1,2,3/1/2, SANGLI VITA ROAD, VITA, TALUKA – KHANAPUR, DISTRICT – SANGLI, MAHARASHTRA - 415311
PH :8888870120.

WADA

1936. SHIVAM AUTOZONE INDIA PVT LTD (--01), SURVEY NO-133/7/1, SAIKRUPA BUILDING, WADA-BHIWANDI ROAD, VILLAGE-GANDHARE, TAL-WADA, DIST -PALGHAR 421303. - 421303

WAGHOLI

1937. SAI SERVICE PRIVATE LIMITED (1901--04), GAT NO 2406/1440, VILLAGE- WAGHOLI,TAL- HAVELI, DIST- PUNE - 412207

WAI

1938. CHOWGULE INDUSTRIES PRIVATE LIMITED (--01), GAT NO. 407, A/P SHENDURJANE, MIDC ROAD, NEAR HOTEL GANDHARVA, OPP. DHOM LEFT CANAL, TAL – WAI, DISTT. SATARA - 412803
PH :8380080501.

WALUJ

1939. PAGARIYA AUTO PVT LTD (2103--03), E-16,WALUJ,AURANGABAD - 431001
PH :9860999466.

WARANANAGAR

1940. SAI SERVICE PRIVATE LIMITED (--01), GAT NO.:1122/A, KODOLI, TALUKA: PANHALA, DIST. KOLHAPUR - 416114
PH :9923204173.

WARDHA

1941. SEVA AUTOMOTIVE PVT LTD (2002--02), GOPURI CHOWK, ,OPP. BANK OF INDIA COLONY, NAGPUR ROAD, WARDHA - 442001
1942. SEVA AUTOMOTIVE PVT LTD (2002--05), PLOT NO. 177, WARDHA-NAGPUR HIGHWAY, AT. PAVNAR, TEHSIL – WARDHA, DIST.-WARDH, PIN-442111, MAHARASHTRA - 442111
PH :7720009444.

WARUD

1943. ASPA BANDSONS AUTO (P) LTD (--04), SURVEY NO. 50/3, SETURJANAGHAT ROAD, TALUKA: WARUD, DIST. AMRAWATI - 444906
PH :7248925687.

WASHIM

1944. ASPA BANDSONS AUTO (P) LTD (--02), NEAR RAILWAY CROSSING,HIGOLI ROAD,WASHIM, - 444505
1945. ASPA BANDSONS AUTO (P) LTD (--06), B-31, HINGOLI ROAD, MIDC-WASHIM, PIN-444505. - 444505

YAVATMAL

1946. HIMALAYA CARS (--01), OPPOSITE RAUT PETROL PUMP, DARWHA ROAD, YAVATMAL, MAHARASHTRA - 445001

YEOLA

1947. SEVA AUTOMOTIVE PVT LTD (--01), GAT NO. 65-A, PLOT NO. 41, AHMED NAGAR-MANMAD ROAD, NEAR TEHSIL OFFICE, YEOLA, TALUKA – YEOLA, DISTRICT – NASHIK, MAHARASHTARA. - 423401
PH :9130033944.

YEWAT

1948. MAHALAXMI AUTOMOTIVES PVT LTD (--01), SOLAPUR PUNE NATIONAL HIGHWAY, SAHAJAPUR, YEWAT, TALUKA: DAUND, DISTT: PUNE (MAHARASHTRA). - 412202
PH :8308818946.

## MANIPUR

BISHNUPUR

1949. EASTERN MOTORS (--01), BISHNUPUR BAZAR, TIDIM ROAD, BISHNUPUR DISTT. MANIPUR. - 795126

CHANDEL

1950. EASTERN MOTORS (--01), KAKCHING LAMKHAI, AH1 (INDO BURMA ROAD), CHANDEL (MANIPUR) - 795103

IMPHAL

1951. EASTERN MOTORS (7401-74-01), CHINGMEIRONG EAST, IMPHAL, MANIPUR - 795001
PH :8415945626.

1952. EASTERN MOTORS (7401-74-02), NH,39, CHINGMEIRONG, WEST, IMPHAL. - 795010
PH :8415945626.

1953. SAMADON ENTERPRISE (--01), 82 GHARI MAKHA LEIKAI, IMPHAL WEST, MANIPUR. - 795140
PH :7005987123.

JIRIBAM

1954. EASTERN MOTORS (--01), AT HILGHAT, IMPHAL SILCHAR ROAD, JIRIBAM - 788104
PH :8415945626.

MAYANG

1955. EASTERN MOTORS (--01), MAYANG IMPHAL, THANA-AWANG, LEIKAI, OPPOSITE PRAVABATI COLLEGE, PIN-795132, MANIPUR - 795132

SENAPATI

1956. EASTERN MOTORS (--01), DIST.-COUNCIL (POULEA) VILLAGE, P.O. - SENAPATI, SENAPATI, MANIPUR. - 795106
PH :8415945626.

THOUBAL

1957. EASTERN MOTORS (--01), THOUBAL ATHOKPAM KHUNOU, NEAR D.C. OFFICE COMPLEX, THOUBAL, MANIPUR - 795138

UKHRUL

1958. SAMADON ENTERPRISE (--01), KAMPHASOM, UKHRUL, MANIPUR - 795142
PH :9774216305.

## MEGHALAYA

BHAITBARI

1959. RANI MOTORS (--01), NEW BHAITBARI, WEST GARO HILLS, MEGHALAYA, (PATTA NO - 89 SONG - NEKEKONA, MOZUZA NO - VI- 3 LOT) - 794104

BHOIRYMBONG

1960. RANI MOTORS (--01), VILLAGE – UMROI MADAN, DISTRICT – RI BHOI, MEGHALAYA. - 793103
PH :9774478281.

JOWAI

1961. RANI MOTORS (--01), LADTHADLABHO, OPP. PWD OFFICE, JOWAI, DIST - JAINTIA HILLS, MEGHALAYA - 793150
PH :7085849525.

KHLIEHRIAT

1962. BANALARI WORLD CARS (8502--03), JOWAI-SICHAR ROAD, MEGHALAYA, KHLIEHRIAT - 793150

MAWKYRWAT

1963. RANI MOTORS (--01), DAK BANGLA, MAWKYRWAT, WEST KHASI HILLS, MEGALAYA - 793114
PH :9856005544.

MAWNGAP

1964. BANALARI WORLD CARS (--01), LAITPYNTER, SHILLONG NONGTION ROAD, MAWNGAP, DIST. -EAST KHASI HILLS, MEGHALAYA. - 793121

MOIRANG

1965. SAMADON ENTERPRISE (--01), MOIRANG LAISHANGBAM LEIKAI, PO AND PS: MOIRANG, DIST- BISHNUPUR, MANIPUR - 795133
PH :7005987122.

MYLLIEM

1966. BANALARI WORLD CARS (--01), MADANIING SYIEM, MYLLIEM, SHILLONG CHERRAPUNJI ROAD, DISTT: EAST KHASI HILLS, MEGHALAYA. - 793009

NONGPOH

1967. RANI MOTORS (8501--05), NEAR D.T.O. OFFICE, G.S. ROAD, NONGHPOH, RIBHOI DISTT. - 793102
PH :9774478281.

NONGSTOIN

1968. RANI MOTORS (8501--04), OPP.IRANI PETROL PUMP, NEW NONGSTEIN, DISTRICT-WEST KHASI HILLS ,MEGHALAYA - 793119
PH :9856005544.

PYNURSULA

1969. BANALARI WORLD CARS (--01), PHLANGSHLAIN MAIN ROAD, SHILONG DAWKI, PYNURSLA, DISTRICT - EAST KHASI HILLS, MEGHALAYA - 793110 - 793110
PH :8415942700.

SHILLONG

1970. RANI MOTORS (8501-85-01), SUNNY HILLS, GARIKHANA, G.S.ROAD, SHILLONG - 793014
PH :9862099400.

1971. RANI MOTORS (8501-85-02), MAWBLEI, NH-44, SHILLONG JOWAI ROAD, MEGHALAYA. - 793021
PH :8014734780.

1972. BANALARI WORLD CARS (8502-85-01), MAWLAI NONGKWAR, G.S. ROAD, SHILLONG - 793017

TURA

1973. RANI MOTORS (--01), AGILLANGRE, ARAIMILE, PO NEW TURA, TURA - 794101
PH :7005563791.

UMSAW

1974. BANALARI WORLD CARS (--01), UMSAWKHWAN RAID MAWBUH, MYLLIEM SYIEMSHIP, RI BHOI DISTRICT, MEGHALAYA. - 793123

## MIZORAM

AIZWAL

1975. GIG MOTORS (9103-91-01), EDENTHAR, AIZAWL, MIZORAM. - 796001
PH :8974559065.

LUNGLEI

1976. GIG MOTORS (--01), RAMTHAR VILLAGE, LUNGLEI, DISTRICT-LUNGLEI, MIZORAM - 796701
PH :8974559065.

## NAGALAND

DIMAPUR

1977. PROGRESSIVE MOTORS (3201--01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR - 797112
PH :7005254089.

1978. SEYIE AUTO (--02), 6TH MILE, NEAR ESAF BANK, CHUMOUKEDIMA, DIMAPUR, NAGALAND - 797112

KOHIMA

1979. SEIYE AUTO PRIVATE LIMITED (--01), TSIECIE, NH-29, PHEK ROAD, KOHIMA, NAGALAND - 797001

MOKOKCHUNG

1980. PROGRESSIVE MOTORS (--01), SUNGKONMEN ROAD, MOKOKCHUNG, NAGALAND. - 798601
PH :87877325534.

TUENSANG

1981. PROGRESSIVE MOTORS (--01), YUNPHANG , TUENSANG - 798612

TULI

1982. SEIYE AUTO PRIVATE LIMITED (--01), TULIYONGWARD TULI TOWN NEAR CO. OPERATIVE BANK - 798618

WOKHA

1983. PROGRESSIVE MOTORS (--01), NIROPEN COLONY, WOKHA-797111, NAGALAND - 797111
PH :9774070707.

## ODISHA

ANANDAPUR

1984. JYOTE MOTORS PVT LTD (--01), KHATA NO. 246/407, PLOT NO. 76, P.S. – GHASIPURA, MOUZA – SUDUSUDIA, DISTRICT – KEONJHAR, ANANDPUR, ODISHA . - 758021

ANGUL

1985. ODYSSEY MOTORS PVT LTD (--01), AT/PO KULAD (NEAR NALCO CPP PLANT), KANDASAR, NALCO NAGAR, ANGUL (DISTT: ANGUL). - 759145

ATTABIRA

1986. APARNAA MOTORS (A UNIT OF APARNAA VAHAN PVT LTD) (--01), LADERPALLI MAIN ROAD,, ATTABIRA, DIST.BARGARH, - 768027

ATTAGARH

1987. TUSHI MOTORS PVT LTD (--01), KHATA NO 212/420,MOUZA :BIRAKISHOREPUR ATHAGARH, DISTRICT: CUTTACK - 754029
PH :7504890838.

BALASORE

1988. JYOTE MOTORS PVT LTD (--01), PLOT NO. 276, GANESHWARPUR-NH-5, POST-JANUGANJ VIA REMUNA, DIST.-BALASORE - 756019

BALIGUDA

1989. SKY AUTOMOBILES (--01), KHATA NO.-370/451, TEHSIL-K NUAGAN, GEGURPADAR, BALIGUDA, - 762103

BALUGOAN

1990. JYOTE MOTORS PVT LTD (--01), .M/S PLOT NO 758/31,KHATA NO 350/30,MOUZA-GOBARDHANPUR,BALUGAON, DISTRICT-KHORDA,ODISHA-752030 - 752030
PH :9776615001.

BAMRA

1991. ODYSSEY MOTORS PVT LTD (--01), M/S ODYSSEY MOTORS,NEAR SATSANG KENDRA, DUMERMUNDA COLLEGE ROAD, BAMRA,GOVINDPUR-768221. - 768221
PH :9439314464.

BANEI

1992. ORBIT MOTORS PVT LTD (--01), PLOT NO -1683/2508,BBABUNUAGAON,KHATA NO-177/66,UPARGADA-98,ODISHA - 770038

BARBIL

1993. JYOTE MOTORS PVT LTD (--01), PLOT NO. 507,SUNDARA , UNIT NO. 13,P.S. BARBIL, ODISHA - 758035

BARGARH

1994. ODYSSEY MOTORS PVT LTD (--04), AT/PO -BARGARH, NH-6, DISTT.-BARGARH, ORISSA - 768028
PH :8908944206.

BARIPADA

1995. JYOTE MOTORS PVT LTD (--02), PLOT NO. 90/523/904, SWARUP VILLA, NH-5, BARIPADA - 757001

BELPAHAR

1996. APARNAA MOTORS (A UNIT OF APARNAA VAHAN PVT LTD) (--01), NH 49,, MAHIMA CHOWK, - 768217

BERHAMPUR

1997. SKY AUTOMOBILES (--01), PLOT NO.80/1191 DHARMA NAGAR, MAIN ROAD, BERHAMPUR - 760002
1998. SKY AUTOMOBILES (--02), PLOT NO. 876, WESTERN ROW NH-5, KONISI HATO, VILLAGE – KONISI, BERHAMPORE, GANJAM, ODISHA. - 761008

BHADRAK

1999. JYOTE MOTORS PVT LTD (--01), PLOT NO. 14/4837, KHATA NO. 1345/1087, TRISHALPUR, CHARMPA, BHADRAK , ODISHA - 756101

BHAWANIPATNA

2000. LEGEND CARS PRIVATE LIMITED (--02), NH-201, KESINGA ROAD, BHAWANIPATNA - 766001

BHUBANESHWAR

2001. NARAYANI MOTORS PVT LTD (--01), 217, CUTTACK ROAD, JHARPARA, BHUBANESWAR - 751006
2002. JYOTE MOTORS PVT LTD (--01), A-62, NAYAPALLI,NEAR CRPF SQUARE, BHUBANESWAR - 751003
2003. SKY AUTOMOBILES (--01), PLOT NO.-435/1866, NEAR KIIT SQUARE PATIA, BHUBNESHWAR, - 751022
2004. NARAYANI MOTORS PVT LTD (--02), PLOT NO 56 AND 57,RASULGARH, BHUBANESHWAR, ODISHA - 751010
2005. JYOTE MOTORS PVT LTD (--04), PLOT NO. 22 & 23, SECTOR-A, ZONE-D, MANCHESWAR INDUSTRIAL ESTATE AREA, BHUBANESHWAR. - 751010
2006. SKY AUTOMOBILES (--02), KHATA NO. 457/675, PLOT NO. 543, 756, 789 AND 546, SRIVIHAR, INFRONT OF IOCL OFFICE, P.S. -CHADRASHEKARPUR, BHUBANESHWAR, ODISHA. - 751024
2007. JYOTE MOTORS PVT LTD (--01), A/62, NAYAPALLI,NH-5,BHUBANESHWAR,ORISSA-751 003 - 751003
2008. NARAYANI MOTORS PVT LTD (--03), KHATA NO-652,PLOT NO 4493, MAUZA PANDRA THANA-RASULGARH,BHUABNESHWAR - 751025
2009. JYOTE MOTORS PVT LTD (--05), PLOT NO. 219/1088, AT-BADADHANPUR, PO-SISHUPALGARH, PURI BYPASS ROAD, BHUBANESWAR, KHURDHA - 751002

BOLANGIR

2010. ODYSSEY MOTORS PVT LTD (--03), NH-201, MADHIAPALI, SAMBHALPUR ROAD, BOLANGIR, ORISSA - 767001
PH :8895418122.

BOUDH

2011. ODYSSEY MOTORS PVT LTD (--01), BOLANGIR MAIN ROAD,BIJU PATNAIK CHOWK, NEAR SARASWATI PETROL PUMP,BOUDH - 762014

CHANDIKHOLE

2012. SKY AUTOMOBILES (--01), PLOT NO.285/3, SHANTI MANDAP MOUZA -SUNGUDA, TEHSIL-DARPANI, PO CHANDIKHOL, DIST. -JAJPUR, ODISHA, - 755044

CUTTACK

2013. SKY AUTOMOBILES (6701-67-02), BHANPUR, NH-5, CUTTACK - 753011
2014. TUSHI MOTORS PVT LTD (6702--01), PLOT NO. C-14, PLOT NO.C-13 ,INDUSTRIAL ESTATE ,KHAPURIA,TAHASIL - CUTTACK SADAR ,CUTTACK DISTRICT,BHUBANESWAR - 753001
PH :9692912345.
2015. SKY AUTOMOBILES (6701-67-07), LAXMINAGAR BIDANASI - 753014

DEOGARH

2016. ORBIT MOTORS PVT LTD (--01), KHATA NO. 270, OI MOUZA, DEOGARH, ODISHA - 768108

DHENKENAL

2017. SKY AUTOMOBILES (6701--04), PLOT NO-136/1103, KATHAGARA , NEARASSAM OIL, NH-42, DHENKANAL. - 759001

DUNGURIPALI

2018. APARNAA MOTORS (A UNIT OF APARNAA VAHAN PVT LTD) (--01), NH-26, BARGARH-BOLANGIR HIGHWAY, , DUNGURIPALI, DIST.SONEPUR, ODISHA - 767023

GANDAI

2019. SPARSH AUTOMOBILES PVT LTD (--01), M/S SPARSH AUTOMOBILES ,WARD NO – 7, NEAR KRISHI UPAJ MANDI,
GANDAI RAJNANDGAON ROAD,GANDAI – 491888 - 491888
PH :9926626662.

JAGATSINGHPUR

2020. NARAYANI MOTORS PVT LTD (--01), KHATTA NO. 827/221 & 827/222, PLOT NO. 1197 & 1199/3065, MOUZA-MARKHANDPUR, PO PUNABGA, DISTT. JAGATSINGHPUR, ODISHA - 754103

JAJPUR

2021. SKY AUTOMOBILES (6701--05), P.O JAHNA, P.S KORAI, KEONJHAR ROAD, JAJPUR, ORRISSA - 7553019

JALESWAR

2022. JYOTE MOTORS PVT LTD (--01), KHATA NO. 422/744, PLOT NO. 2304 AT P.O. - NAYABAZAR, JALESWAR, DIST.- BALASORE, ODISHA. - 756032

JEYPORE

2023. LEGEND CARS PRIVATE LIMITED (--03), SOURAGUDA,JEYPORE,DISTT-KORAPUT,ORISSA,INDIA - 764001

JHARSUGUDA

2024. ODYSSEY MOTORS PVT LTD (--01), KHATA NO. 466/502, PLOT NO. 966, JHARSUGUDA TOWN, UNIT NO. 7, SARBAHAL P.S. JHARSUGUDA, ORISSA - 768201

KAMAKHYANAGAR

2025. SKY AUTOMOBILES (--01), ALUTAMA, KAMAKHYANAGAR, DHENKANAL ODISHA - 759018

KANTABANJHI

2026. ODYSSEY MOTORS PVT LTD (--01), SH-42, UDING, KANTABANJHI, ODISHA-767039 - 767039

KARANJIA

2027. JYOTE MOTORS PVT LTD (--01), KARANJIAGOLEI,, KARANJIA,MAYURBHANJ, - 757037

KENDRAPARA

2028. JYOTE MOTORS PVT LTD (--01), M/S JYOTE MOTORS, KHATA NO: 351/85, PLOT NUMBER 633, MOUZA-ALBANKA, KENDRAPARA, ODISHA. - 754208
PH :9776615001.

KEONJHAR

2029. JYOTE MOTORS PVT LTD (--01), NH 215, DHRUPADA, BARBIL ROAD, KEONJHAR. - 758001

KUCHINDA

2030. ODYSSEY MOTORS PVT LTD (--01), /S ODYSSEY MOTORS ,PLOT NO 146,KHATA NO 76/9,MOUZA-KUNDAPOSHI,NEAR KUNDESHWAR
MANDIR,KUCHINDA,SAMBULPUR. - 768222
PH :9439314464.

NABRANGPUR

2031. LEGEND CARS PRIVATE LIMITED (--01), KHATA NO 204/155, PLOT NO 202, DHARNABDA MOUZA, NABRANGPUR ODISHA - 764059

NAYAGARH

2032. JYOTE MOTORS PVT LTD (--02), PLOT NO. 1319/3750, KHANDAPADA, NAYAGARH - 752069

NETAJI NAGAR,CUTTACK

2033. TUSHI MOTORS PVT LTD (--02), PLOT NO-819/1021, MOUZA-UNIT 39,, NETAJI NAGAR - 753014

NIMPARA

2034. NARAYANI MOTORS PVT LTD (--01), PLOT NO. 345/1344, GANESH BAZAR, NIMAPARA, DISTRICT – PURI, ODISHA. - 752106

NIRGUNDI

2035. NARAYANI MOTORS PVT LTD (--04), KHATA NO 251/255, PLOT NO 233,MALGOWDINI-MOUZA BLITERUA, NIRGUNDI,DISTRICT-CUTTACK, ORISSA. - 754025

PADAMPUR

2036. ODYSSEY MOTORS PVT LTD (--01), M/S ODYSSEY MOTORS, CHARPALLI,PADAMPUR, NEAR REGENCY HOTEL,DISTRICT:BARGARH, ORISSA - 770039
PH :9439314464.

PALLAHARA

2037. ODYSSEY MOTORS PVT LTD (--01), KHATA NO. 260, PLOT NO. 998/3720, PAHALLARA, ODISHA. - 759119

PANCHGAON

2038. ODYSSEY MOTORS PVT LTD (--01), KHATA 66/136 BEARING PLOT NO .565/980 (4 SHOPS) KISAM -GHARABARI,MOUZA PANCHGOAN ,TAHSIL -LAKHANPUR ,DIST-JHARSUGUDA, ODISHA - 768226

PANIKOILI

2039. TUSHI MOTORS PVT LTD (--01), PLOT NO. 3211/3776, AT-SOTI, PO-PANIKOILI - 755043

PARADEEP

2040. NARAYANI MOTORS PVT LTD (--01), PLOT NO. 1438, UDAYA VIHAR, NEAR DO CHOWKI SQUARE, PARADEEP, ODISHA. - 754141

PARLAKHEMUNDI

2041. SKY AUTOMOBILES (--01), PLOT NO. 273, KHATA NO. 78, WARD NO. 1, PARLAKHEMUNDI, GAJAPATI, ORISSA. - 761211
PH :9776999977.

PHULBANI

2042. SKY AUTOMOBILES (--01), PLOT NO. 54/533, GUDRISAHI, KHAJURIAPADA,DISTRICT – KANDHAMAL ODISHA. PIN CODE: 762001 - 762001
PH :9776900333.

PURI

2043. NARAYANI MOTORS PVT LTD (--01), PLOT NO.1797/2449, KHATA NO.187A/32, AT. BATAMANGLA,PO HAREKRISHNAPUR, BATAGAON, PURI, ODHISA - 752002

RAIRANGPUR

2044. JYOTE MOTORS PVT LTD (--01), PLOT NO.1077/2466, PURNAGHATI, RAIRANGPUR, DISTT: MAYURBHANJ, ODISHA - 757046

RAYAGADA

2045. LEGEND CARS PRIVATE LIMITED (--01), M/S LEGEND CARS, JK PUR ROAD, KOMTALPETA, NEAR ENFIELD SHOWROOM, RAYAGADDA, ODISHA - 765001 PH :7008771180.

ROURKELA

2046. ORBIT MOTORS PVT LTD (8701-87-01), VEDVYAS, NEAR PAAHADI BAR, ROURKELA,ORRISA - 769041

SAMBHALPUR

2047. ODYSSEY MOTORS PVT LTD (--01), AINTHAPALI, SAMBALPUR, ORISSA - 768004 PH :7381083571.

2048. APARNAA MOTORS (A UNIT OF APARNAA VAHAN PVT LTD) (--01), PLOT NO 969/4497,PANCHGACHIA SAMBALPUR - 768019 PH :8260966698.

2049. ODYSSEY MOTORS PVT LTD (--05), ODYSSEY MOTORS, AINTHAPALI, SAMBHALPUR

SEMILIGUDA

2050. LEGEND CARS PRIVATE LIMITED (--01), 1231/2076,KHATA NO 113/1503, MOUZA:LUNGURI,SEMILIGUDA. - 764036

SOHELA

2051. ODYSSEY MOTORS PVT LTD (--01), KHATA NO 325/892, PLOT NO 396.7579, KISAM-GHARABARI, MOUZA-SOHELA, DIST-BARGARH, ODISHA - 768033

SORO

2052. JYOTE MOTORS PVT LTD (--01), PLOT NO 15/1269,KHATA NO 442, SORO, BALASORE, ODISHA STATE. - 756045 PH :9776615001.

SUBARNAPUR

2053. ODYSSEY MOTORS PVT LTD (--01), KHATA NO. 32, MOUZA – SANJHINIK, SONEPUR (ALSO KNOWN AS SUBARNAPUR), DISTRICT – SUBARNPUR, ODISHA - 767017

SUNDERGARH

2054. ORBIT MOTORS PVT LTD (--01), M/S ORBIT MOTORS, AT - PATRAPALI, PO SUNDERGARH, BY PASS ROAD, NEAR BJP OFFICE, SUNDERGARH - 770001 PH :8249354447.

TANGI

2055. SKY AUTOMOBILES (--01), KHATA NO 731/18, PLOT NO,107,CHAMPAGARH NH 5,TANGI, DISTRICT – KHORDHA, - 752023 PH :9776900333.

TIRTOL

2056. NARAYANI MOTORS PVT LTD (--01), TIRTOL ,JADATIRA - 754137

TITLAGARH

2057. ODYSSEY MOTORS PVT LTD (--01), M/S PLOT NO 687/1216, MOUZA PIPALPADAR. TITLAGARH,BALANGIR, ODISHA - 767033 PH :9439314464.

UDALA

2058. JYOTE MOTORS PVT LTD (--01), MOUZA - UDALA, TOWN UNIT NO. 7, NAGBANI, TEHSIL NO. 325, THANA NO. 110, DIST.-MAYURBHANJ, ODISHA. - 757041 PH :8249877935.

## PUDUCHERRY

KARAIKAL

2059. SHENBAKA CARS PVT LTD (--01), R. S. NO. 173/3PT, T. S. NO. 9/5, WARD, L-BLOCK, NO. 3, KARAIKAL NAGORE MAIN ROAD, VILLAGE - ODUTHURAI REVENUE, NERAVY COMMUNE, KARAIKAL MUNICIPALITY, KARAIKAL. - 609602

2060. SHENBAKA CARS PVT LTD (--02), SURVEY NO # RS.NO:252, DOOR NO:192, VARICHIKKUDY VILLAGE, PORAYAR SALAI,KARAIKAL, PONDICHERY-609 609 - 609609

MADAGADIPET

2061. SHENBAKA CARS PVT LTD (--01), SURVEY NO. 129/4/A/2, MADAGADIPET REVENUE VILLAGE, MADAGADIPET, PONDICHERRY - 605107 PH :8220046178.

PONDICHERRY

2062. SHENBAKA CARS PVT LTD (9601-96-01), 133/1A, MOOLAKULAM, VILLUPURAM MAIN ROAD, PONDICHERRY - 605010

## PUNJAB

ABOHAR

2063. TARA AUTOMOBILES (--01), SHREE GURU JAMBHESHWAR CHOWK, MALOUT SHREE GANGA NAGAR BYPASS, ABOHAR, PUNJAB - 152116 PH :9876047847.

ADAMPUR

2064. LOVELY AUTOS (--01), KHASRA NO.10/7/1, JALANDHAR-HOSHIARPUR HIGHWAY, ADAMPUR DISTT. JALANDHAR - 144102

AJNALA

2065. SWANI MOTORS PVT LTD (--01), KHASRA NO. 71, AJNALA-AMRITSAR ROAD, VILLAGE - BHARKA TARA SINGH, TEHSIL - AJNALA, DISTRICT - AMRITSAR, PUNJAB. - 143102 PH :8872001731.

AMRITSAR

2066. SWANI MOTORS PVT LTD (1701-17-01), 81,COURT ROAD, AMRITSAR - 143001

2067. JAYCEE MOTORS PVT LTD (1704-17-01), 274 EAST MOHAN NAGAR, G.T.ROAD, AMRITSAR - 143006 PH :9780038335.

2068. RISHABH FOURWHEELS PVT LTD (1703-17-01), ADARSH SOAP COMPLEX, BATALA ROAD, AMRITSAR - 143004 PH :9914841577.

ANANADPUR SAHIB

2069. CM AUTO SALES PVT LTD (--01), VILLAGE MIYANPUR, NAINA DEVI ROAD, ANANDPUR SAHIB,TEHSIL ANANDPUR SAHIB, DISTT. ROPAR,PUNJAB - 140123 PH :9915022897.

APRA

2070. LOVELY AUTOS (--01), SAMRAI CHOWK PHILLAUR ROAD, VILLAGE - APRA, TEHSIL - PHILLAUR, DIST.-JALANDHAR, STATE - PUNJAB. - 144416 PH :9915020515.

AUR

2071. LOVELY AUTOS (--01), KHATUNI NO. 479/588, KHASRA NO. 27/20/04(2-18), 21/2(2-10), VILLAGE - AUR, TEHSIL - NAWASHAR, DIST.-SBS NAGAR, STATE - PUNJAB. - 144417 PH :9915020510.

BAGHA PURANA

2072. REMIRA MOTORS PVT LTD (--01), BUILDING NO.68, OPP. SHINA ENCLAVE, MOGA ROAD, BAGHA PURANA, DISTT. MOGA, PIN-142038 - 142038 PH :7087025009.

BALACHAUR

2073. LOVELY AUTOS (--01), NEAR MCDONALD – GHUGGI JUNCTION), VPO-GARHI KANUGO, NAWANSHAHR CHANDIGARH HIGHWAY, CHANDIGARH ROAD, BALACHAUR, DISTRICT-S.B.S NAGAR, PUNJAB (NAWANSHAHR) - 144521

BALBEHRA

2074. DIVINE AUTOWORLD LLP (--01), NEAR HDFC BANK LTD., SAMANA ROAD, BALBEHRA - 147101 PH :9888341118.

BANGA

2075. LOVELY AUTOS (3503--03), NAWASEHAR-JALANDHAR ROAD, BANGA - 144505 PH :9915028625.

BANUR

2076. TRICITY AUTOS (--01), SANDHU MARKET NEAR SALES TAX BARRIER, BANUR RAJPURA HIGHWAY, BANUR, PUNJAB - 140601 PH :9988882330.

BARNALA

2077. MAX AUTOMOBILES (--01), NR. HANDIYAN CHOWK,MANSA BYE PASS,BARNALA,PUNJAB - 151001

BATALA

2078. PATHANKOT VEHICLEADES PVT LTD (--05), NEAR VMS INSTITUTE, SAID MUBARAK, GT ROAD, BATALA - 143505

BEGOWAL

2079. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (--01), PELIA TOWN, BHADAS ROAD, WARD NO. 11, JALANDHAR ROAD, VPO. BEGOWAL, KAPURTHALA, PIN-144621, PUNJAB - 144621 PH :9779166004.

BHADSON

2080. HIRA AUTOMOBILES LTD (--01), VILLAGE CHASWAL, NABHA ROAD, BHADSON - 147202

BHAGTA BHAI KA

2081. TARA AUTOMOBILES (--01), NEAR SARPANCH HOUSE, BHAGTA BHAI KA, DISTRICT – BHATINDA. - 151206 PH :8437030666.

BHATINDA

2082. TARA AUTOMOBILES (7002-70-01), MANSA ROAD, OPP. I.T.I, BATHINDA - 151001

BHIKHIWIND

2083. RISHABH FOURWHEELS PVT LTD (--01), KHASRA NO. 67/3/2, 4/1, 7/2, 8/1, 8/2, PIND BHIKHIWIND, TEHSIL – PATTI, DISTRICT – TARN TARAN, PUNJAB. - 143303 PH :9914708577.

BHOGPUR

2084. LOVELY AUTOS (--01), KHASRA NO. 31/114, 17/2 18/2 23, MAIN JALANDHAR-PATHANKOT HIGHWAY,OPP- AJIT PALACE, BHOGPUR - 144201

BHULATH

2085. LOVELY AUTOS (--01), WARD NO. 1, NADALA-BEGOWAL ROAD, VPO BHULATH, DISTRICT – KAPURTHALA, PUNJAB.

BILGA

2086. LOVELY AUTOS (--01), VPO BILGA, NEAR GOVT. PRIMARY SCHOOL, TEHSIL PHILLAUR, JALANDHAR. - 144036
PH :9815069814.

CHUNNI KALAN

2087. HOSHIARPUR AUTOMOBILES (--01), NEAR RAJINDER MOTORS, SIRHIND-CHANDIGARH ROAD, VILLAGE CHUNNI, DIST. FATEHGARH SAHIB. - 140307

DASUA

2088. HOSHIARPUR AUTOMOBILES (--04), OPP CHEEMA PETROL PUMP, G.T. ROAD, DASUYA - 144205

DERABASSI

2089. AUTOPACE NETWORK PVT LTD (--02), AT NH-2, NEAR DERABASSI, TOLL BARRIER-DERABASSI - 140507

DEVIGARH

2090. HIRA AUTOMOBILES LTD (--01), CHANNA MOUR, PEHOWA PATIALA ROAD, DEVIGARH, DISTT. PATIALA (PUNJAB). - 147111

DHARAMKOT

2091. REMIRA MOTORS PVT LTD (--01), JOSAN MARKET, DHARAMKOT, MOGA - 142042

DHILWAN

2092. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (--01), MIANI BAKARPUR,AMRITSAR ROAD, OPP-INDIAN OIL PETROL PUMP, DHILWAN DISTT KAPURTHALA - 144804
PH :9779166004.

DORAHA

2093. GULZAR MOTORS PVT LTD (--01), G.T. ROAD, NEAR ARRICHAN CHOWK, DORAHA, DISTT. LUDHIANA, PUNJAB. - 141421
PH :9814191122.

FARIDKOT

2094. MAPSKO AUTO INDIA PVT LTD (--01), FARIDKOT- KOTKAPURA ROAD, FARIDKOT, PUNJAB - 151204

FATEHGARH CHURIAN

2095. PATHANKOT VEHICLEADES PVT LTD (--01), KHASRA NO. 17 R, DERABABA NANAK ROAD, FATEHGARH CHURIAN, TEHSIL - BATALA, DIST. -GURDASPUR, STATE - PUNJAB. - 143602

FAZILKA

2096. TARA AUTOMOBILES (--03), NH-10, NEAR SARVHITKARI BAL VIDYA MANDIR, FAZILKA - 152116
PH :9876047847.

FEROZPUR

2097. PLUTON DREAMWORKS PRIVATE LIMITED (--01), MOGA ROAD, NEAR HARYALI PETROL PUMP FEROZPUR PUNJAB - 152001

GARHSHANKAR

2098. HOSHIARPUR AUTOMOBILES (--02), OPP. COURT, CHANDIGARH ROAD, GARHSHANKAR, DIST. HOSHIARPUR - 144527

GHANAUR

2099. DIVINE AUTOWORLD LLP (--01), WARD NO. 1, OPPOSITE OLD PETROL PUMP GHANAUR PATIALA ROAD, SUB TEHSIL - GHANAUR, TEHSIL - RAJPURA, DIST.-PATIALA, STATE - PUNJAB. - 140401
PH :9217048437.

GHAROTA

2100. PATHANKOT VEHICLEADES PVT LTD (--01), VILLAGE AND PO GHAROTA, OPPOSITE PUNJAB GRAMIN BANK, TEHSIL & DISTT. PATHANKOT – 143533. - 143533
PH :8264105000.

GHOMAN

2101. PATHANKOT VEHICLEADES PVT LTD (--01), KHEWAT NO. 36, KHATAUNI NO. 122, KHASRA NO. 11//25 (7-18), VILLAGE - BALRAMPUR ADDA, KHASBA - GHOMAN. - 143514
PH :8054500130.

GORAYA

2102. LOVELY AUTOS (--01), NEAR MILAN PALACE, G.T. ROAD, GORAYA. - 144409
PH :9417804049.

GURDASPUR

2103. PATHANKOT VEHICLEADES PVT LTD (--03), V.P.O. BABRI NH-15, DIST. GURDASPUR - 143521

2104. PATHANKOT VEHICLEADES PVT LTD (--06), VPO - JEEWANWAL BABRI, NH-15, GURDASPUR (PUNJAB) - 143521
PH :9417900870.

HOSHIARPUR

2105. HOSHIARPUR AUTOMOBILES (--01), SINGRIWALA, JALLANDHAR ROAD, HOSHIARPUR, - 146001

JAGRAON

2106. SANDHU AUTOMOBILES PVT LTD (6206--05), NATIONAL HIGHWAY-64, JAGRAON - 142026
PH :8437025969.

JAITU

2107. MAPSKO AUTO INDIA PVT LTD (--01), NEAR CANAL, BATHINDA ROAD, JAITO, DISTRICT – FARIDKOT. - 151202
PH :7347000520.

JALALABAD-PB

2108. TARA AUTOMOBILES (--02), F.F. ROAD, NEAR THANA SADAR, JALALABAD - 152024
PH :9876047847.

JALLANDHAR

2109. LOVELY AUTOS (3503-35-01), DR. AMBEDKAR CHOWK, JALANDHAR CITY - 144001
PH :9915020515.

2110. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (3506-35-01), OPP DPS SCHOOL, G.T. ROAD, JALANDHAR - 144010
PH :9779166004.

2111. LOVELY AUTOS (-35-01), KHASRA NO. 24/20/4, B D ENCLAVE, VILLAGE - JALANDHAR, DIST. -JALANDHAR, PUNJAB. - 144001

JANDIALA GURU

2112. BABA AUTOS (--01), GT ROAD, NEAR TARN TARAN BYE PASS, JANDIALA GURU - 143115

JANDIALA MANJKI

2113. LOVELY AUTOS (--01), SANT MARKET, JANDIALA-BUNDALA ROAD, VILLAGE – JANDIALA MANJKI, TEHSIL – NOORMAHAL, DISTRICT – JALANDHAR, PUNJAB. - 144033
PH :7087439797.

JHANJERI

2114. AUTOPACE NETWORK PVT LTD (--01), STATE HIGHWAY 12A, JHANJERI,, SAHIBZADA AJIT SINGH NAGAR, - 140307

KAHNUWAN

2115. PATHANKOT VEHICLEADES PVT LTD (--01), KHASRA NO.606, VPO-KAHNUWAN, THE. & DISTT. GURDASPUR. - 143528
PH :8288993301.

KALA SANGHIAN

2116. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (--01), MAIN CHOWK, KALA SANGHIAN, DISTRICT KAPURTHALA, PUNJAB - 144623
PH :9779166004.

KALANAUR

2117. PATHANKOT VEHICLEADES PVT LTD (--01), KALANAUR-GURDASPUR ROAD, VILLAGE KALANAUR, TEHSIL AND DISTRICT GURDASPUR, PUNJAB - 143512
PH :9417900879.

KAPURTHALA

2118. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (--01), SIDHU COMPLEX, CIRCLE ROAD - KAPURTHALA, PUNJAB - 144602
PH :9779166004.

KATHU NANGAL

2119. JAYCEE MOTORS PVT LTD (--01), KHASRA NO.12/20/2, 21/1 KHATA NO.212/186/229 GILL KHETI STORE, GT ROAD, VILLAGE-KATHUNANGAL, DISTT. AMRITSAR, PUNJAB - 143502

KHANNA

2120. HOSHIARPUR AUTOMOBILES (--01), VILLAGE-KAUNI, NEAR GILL PETROL PUMP, GT ROAD, KHANNA, DIST.-LUDHIANA, PUNJAB. - 141401
PH :9888716261.

KHARAR

2121. CM AUTO SALES PVT LTD (--03), NH-95, MORINDA ROAD,KHANPUR, KHARAR. DIST. MOHALI - 140301
PH :9915022878.

KOTKAPURA

2122. MAPSKO AUTO INDIA PVT LTD (--01), MOGA ROAD, NEAR GREEN DHABA OPPOSITE FUN PLAZA, KOTKAPURA, DISTRICT – FARIDKOT - 151204
PH :7347000518.

LALRU

2123. AUTOPACE NETWORK PVT LTD (--01), VILLAGE – LALRU, DERA BASSI, SAS NAGAR MOHALI, PUNJAB. - 140501
PH :9815011669.

LUDHIANA

2124. GULZAR MOTORS PVT LTD (6204--01), G.T.ROAD, DHOLEWAL, OPP. MILITARY CARMP, LUDHIANA - 141003
PH :9814160099.

2125. SANDHU AUTOMOBILES PVT LTD (6206--01), DHOLEWAL CHOWK, LINK ROAD, LUDHIANA - 141203
PH :9815600095.

2126. LOVELY AUTOS (6209--01), BABA NAND SINGH NAGAR, NEAR AYALLI CHOWK, FEROZEPUR ROAD, LUDHIANA – 141001 - 141001

2127. LOVELY AUTOS (-62-02), GILL ROAD, NEAR CANAL BRIDGE, LUDHIANA, PUNJAB

2128. LOVELY AUTOS (6209--03), OPPOSITE BHAI BALA SAHIB GURUDWARA, VILLAGE DAD, PAKHOWAL ROAD, LUDHIANA, PIN-141001, PUNJAB - 141001
PH :9815069814.

2129. LOVELY AUTOS (6209-62-04), EURO MART COMPLEX, HAMBRAN ROAD, NEAR RADHA SWAMI SATSANG BHAWAN - 141008
PH :9815069814.

2130. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (6210-62-01), GT ROAD, OPPOSITE GOYAL HYUNDAI, VILLAGE DHANDHARI KHURD, LUDHIANA, DISTRICT – LUDHIANA, PUNJAB - 141010
PH :8054399990.

2131. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (6210-62-02), OPP SBI BANK , JAMALPUR, CHANDIGARH ROAD, LUDHIANA - 141010
2132. LOVELY AUTOS (6211-62-01), 2716/1, GURDEV NAGAR, NEAR FEROZ GANDHI MARKET, LUDHIANA, PUNJAB - 141001

MACHIWARA

2133. HOSHIARPUR AUTOMOBILES (--01), SAMRALA ROAD, MACHIWARA, NEAR SHEEVA MARRIAGE PALACE - 141115
PH :9875900147.

MAHILPUR

2134. HOSHIARPUR AUTOMOBILES (--05), NEAR NEW BUS STAND, CHANDIGARH ROAD, MAHILPUR, DIST. HOSHIARPUR - 146105
PH :9914720424.

MALERKOTLA

2135. MAX AUTOMOBILES (--01), MALERKOTLA-LUDHIANA MAIN ROAD, VILLAGE - BHOGIWAL, MALERKOTLA, DIST.-SANGRUR, PUNJAB. - 148023

MANDI GOBINDGARH

2136. HOSHIARPUR AUTOMOBILES (--01), PLOT GOYAL MOTORS, NEAR YES BANK, MANDI SIRHIND ROAD, NH-1, MANDIGOBINDGARH, PUNJAB. - 147301

MANSA

2137. TARA AUTOMOBILES (7002--02), BALATA ROAD, NEAR ARVIND NAGAR, MANSA , PUNJAB - 151505

MOGA

2138. REMIRA MOTORS PVT LTD (--01), INDUSTRIAL AREA, OPPOSITE ITI, GT ROAD, MOGA. - 142001
PH :7087025402.

MOHALI

2139. NAVDESH AUTOS LLP (--01), PLOT NO.C-89, INDUSTRIAL AREA, PHASE-7, MOHALI - 160059
PH :8872016453.
2140. CM AUTO SALES PVT LTD (--03), PLOT NO. B-64, INDUSTRIAL AREA PHASE-7, MOHALI – PUNJAB - 140110

MOONAK

2141. MAPSKO AUTO INDIA PVT LTD (--01), PATRAN ROAD, MOONAK, PUNJAB - 148028

MORINDA

2142. CM AUTO SALES PVT LTD (--01), KHASRA NO. 1092, CHANDIGARH-SAMRALA ROAD, MORINDA, DIST.-ROPAR, PUNJAB. - 140101
PH :9915022811.

MUKERIAN

2143. HOSHIARPUR AUTOMOBILES (--01), VILL. TALWANDI KALAN, GT ROAD, MUKERIAN - 144211

MUKTSAR

2144. PLUTON DREAMWORKS PRIVATE LIMITED (--01), NEAR SSP OFFICE, BATHINDA ROADSRI MUKTSAR SAHIB - 152026

MULLANPUR

2145. SANDHU AUTOMOBILES PVT LTD (--01), OPPOSITE DHAKA ROAD, FEROZEPUR ROAD, MULLANPUR - 141101

MULLANPUR GARIBDASS

2146. NAVDESH AUTOS LLP (--01), H NO. 341, POST OFFICE - MULLAPUR GARIBDASS, TEHSIL - MAJRI, DIST.-SAS NAGAR, STATE - PUNJAB. - 140901
PH :8872004676.

NABHA

2147. HIRA AUTOMOBILES LTD (6302--06), RADHA SWAMI ROAD, NABHA - 147201

NAKODAR

2148. LOVELY AUTOS (3503--04), JALANDHAR ROAD, NEAR MALARI GATE, NAKODAR - 144040

NANGAL

2149. CM AUTO SALES PVT LTD (--02), PLOT#36,AJOLI MOR, FOCAL POINT INDUSTRIAL AREA, NAPA NANGAL ,PUNJAB - 140126
PH :9592916811.

NAWANSHAHR

2150. LOVELY AUTOS (3503--02), NAWANSHAHR CHANDIGARH ROAD, VILL- LANGROHA, DISTT:- NAWANSHAHR, PUNJAB - 144514
PH :9915028682.

NIHAL SINGH WALA

2151. REMIRA MOTORS PVT LTD (--01), BARNALA ROAD, NEAR DEAR BABA SEWA DASS, TEHSIL-NIHALSINGHWALA, DIST.-MOGA. - 142055
PH :7067025009.

PATHANKOT

2152. PATHANKOT VEHICLEADES PVT LTD (--01), NEAR MAMOON CHOWK, DALHOUSIE ROAD, PATHANKOT, - 145001
2153. PATHANKOT VEHICLEADES PVT LTD (--04), NEAR A. B. COLLEGE, PATAHANKOT - 145001
2154. PATHANKOT VEHICLEADES PVT LTD (--07), PLOT NO. 58-C, 59-C, INDUSTRIAL GROWTH CENTRE, VILLAGE- CHACHELI, TEHSIL & DIST - 145001

PATIALA

2155. HIRA AUTOMOBILES LTD (6302-63-01), 13-B, FACTORY AREA, PATIALA - 147001
2156. HIRA AUTOMOBILES LTD (6302-63-04), C-20 & C-45, FOCAL POINT, PATIALA, PUNJAB - 147001
2157. HIRA AUTOMOBILES LTD (6302-63-07), D-1A, INDUSTRIAL FOCAL POINT, PATIALA (PUNJAB). - 147001
2158. DIVINE AUTOWORLD LLP (-63-02), BHARAT NAGAR,PATIALA-NABHA ROAD, PATIALA - 147001
2159. EAKANSH WHEELS PVT LTD (6305-63-01), KHASRA NO. 11/13/1, RAJPURA ROAD, PATIALA, 147001, PUNJAB - 147001

PATRAN

2160. HIRA AUTOMOBILES LTD (6302--02), NARWANA ROAD, PATRAN, PUNJAB, - 147105

PATTI

2161. JAYCEE MOTORS PVT LTD (--01), KHASRA NO. 64/19/2/1 KA 16/49 & KHASRA NO. 64/20 KA 29/94, NEAR RADHA SWAMI, TARN TARAN ROAD, VILLAGE - PATTI, DISTT.-TARN TARAN, PUNJAB. - 143416
PH :9780038335.

PHAGWARA

2162. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (--01), PLOT NO-62, INDUSTRIAL AREA, NEAR JCT BRIDGE LUDHIANA - 141001
PH :9779166004.

PHILLAUR

2163. LOVELY AUTOS (--01), OLD NAWANSHAHR ROAD CIVIL LINE, PHILLAUR, DISTRICT JALANDHAR - 144410
PH :9815069814.

POHIR

2164. LOVELY AUTOS (--01), LUDHIANA-MALERKOTLA ROAD, NEAR SODHI MARRIAGE PALACE, POHIR, DISTRICT LUDHIANA, PUNJAB. - 141204
PH :9915020513.

RAIKOT

2165. GULZAR MOTORS PVT LTD (--01), BARNALA BY PASS ROAD, RAIKOT - 141109
PH :9814160099.

RAJPURA

2166. DIVINE AUTOWORLD LLP (--01), VILLAGE BADHAK, RAJPUR PATIALA ROAD, RAJPURA - 140401

RAMPURA PHUL

2167. TARA AUTOMOBILES (--01), RAMPURA -BARNALA ROAD, RAMPURA PHUL - 151103

RAYYA

2168. RISHABH FOURWHEELS PVT LTD (--01), NH-1, GT ROAD RAYYA, TEHSIL – BABA BAKALA, DISTRICT – AMRITSAR. - 143112
PH :9914708577.

ROOPNAGAR

2169. CM AUTO SALES PVT LTD (--01), CHANDIGARH ROPAR ROAD, ROPAR - 140001
PH :9915022802.

SAMANA

2170. HIRA AUTOMOBILES LTD (--01), KEWAT NO. 948/950, KHATUNI NO. 1427, KHASRA NO. 101/27(4-7), PATIALA SAMANA ROAD, SAMANA, DIST.-PATIALA, STATE PUNJAB. - 147101
PH :9217048236.

SANGRUR

2171. MAX AUTOMOBILES (--01), DHURI ROAD, SANGRUR, - 148024

SHAHKOT

2172. LOVELY AUTOS (--01), PUBLIC SCHOOL ROAD, SHAHKOT, DISTRICT – JALANDHAR, PUNJAB. - 144702

SIRHIND

2173. HOSHIARPUR AUTOMOBILES (--01), KHEWAT KHATONI NO. 802/1049 & 821/1070 KHEWAT KHAS NO. 43/1/2/1 (1-0), BESIDE SBI BANK, BASSI ROAD, SIRHIND, TEHSIL AND DISTRICT – FATEHGARH SAHIB - 140406

SULTANPUR LODHI

2174. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PRIVATE LIMITED) (--01), NEAR TALWADI BRIDGE, TALWANDI ROAD, SULTANPUR LODHI, DISTRICT -KAPURTHALA - 144626
PH :9779166004.

SUNAM

2175. MAPSKO AUTO INDIA PVT LTD (--01), BHATINDA ROAD, SUNAM, DISTRICT - SANGRUR SUNAM, PUNJAB - 148028

TALWANDI BHAI

2176. PLUTON DREAMWORKS PRIVATE LIMITED (--01), MOGA ROAD,, NEAR FUN ISLAND, - 142050

TALWANDI SABO

2177. TARA AUTOMOBILES (--01), TALWANDI RAMA MAIN ROAD, NEAR VILLAGE-JAJJAL, RAMAMANDI,TALWANDI SABO, BHATINDA - 1551302

TALWARA

2178. HOSHIARPUR AUTOMOBILES (--07), DAM ROAD, NEAR KALI MATA MANDIR, VILLAGE-NAGAR, TALWARA, PUNJAB - 144216

TANDA

2179. HOSHIARPUR AUTOMOBILES (--06), VILL.PULPUKHATA, MIANI ROAD, TANDA - 144203

TAPA

2180. MAPSKO AUTO INDIA PVT LTD (--01), BHATINDA ROAD, TAPA, DISTRICT - BARNALA,, TAPA, PUNJAB - 148108

TARAGARH

2181. PATHANKOT VEHICLEADES PVT LTD (--01), VILLAGE - RAHIMPUR, VPO-TARAGARH, TEHSIL & DISTT. PATHANKOT, HIMACHAL PRADESH - 143534
PH :9988639963.

TARN TARAN

2182. JAYCEE MOTORS PVT LTD (--01), VILLAGE – KAKKA, KANDIALA, NEAR SANDHU PETROL PUMP, AMRITSAR ROAD, TARAN TARAN, PUNJAB - 143401
PH :9780038039.

TARSIKKA

2183. BABA AUTOS (--01), NEAR HDFC BANK, MAIN BAZAAR, TARSIKKA, PUNJAB - 143116

ZIRA

2184. PLUTON DREAMWORKS PRIVATE LIMITED (--01), MAKHU ROAD,NEAR HARBIR PETRO, - 142047

ZIRAKPUR

2185. TRICITY AUTOS (--01), PATIALA HIGHWAY,VILLAGE - NABHA, ZIRAKPIR, PUNJAB - 140603
PH :9988882330.

## RAJASTHAN

AANDHI

2186. K.P. AUTOMOTIVES PVT LTD (--01), KHASRA NUMBER 11 25 , VILL AANDHI , DISTT JAIPUR, RAJASTHAN- 303001 - 303001
PH :9549656559.

ABU ROAD

2187. NAVNEET MOTORS (--01), PLOT NO. E-26, RIICO AMBAJI INDUSTRIAL AREA, PALANPUR HIGHWAY, ABU ROAD DISTT. SIROHI - 307026
PH :7665000644.

ACHROL

2188. KTL AUTOMOBILE PRIVATE LIMITED (--01), KHASRA NO. 37/1522,GRAM ANI, ACHROL, DELHI ROAD,TEHSIL – ACHROL, DISTRICT – JAIPUR, 303002 - 303002
PH :7412077022.

AHORE

2189. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), MADHOPURA, NEAR KARNAWATI HOSPITAL, AHORE, DISTRICT – JALORE, RAJASTHAN PIN CODE: 307029 - 307029

AJMER

2190. AJMER AUTO AGENCIES PVT LTD (--01), SRINAGAR ROAD,AJMER (RAJASTHAN) - 305001
PH :9314955201.

2191. RELAN MOTORS PVT LTD (--01), NEAR BIRLA WATER TANK, PARABATPURA BYEPASS, AJMER - 305001

2192. RELAN MOTORS PVT LTD (--02), F-243 RIICO INDUSTRIAL AREA, PALRA, AJMER - 305001

2193. AJMER AUTO AGENCIES PVT LTD (--05), KHASRA NO.343/2, 344, 345, 347 GHUGHRA GHATI, JAIPUR ROAD, AJMER. - 305001
PH :9314955201.

AJMER ROAD, JAIPUR

2194. KTL AUTOMOBILE PRIVATE LIMITED (--06), PLOT NO:-39-40,MAA KARNI NAGAR-E PANCHAY, PANCHAYAWALA NEAR VAISHALI NAGAR ,SIRSI - 302017

AKLERA

2195. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), NH-52, RAM NAGAR COLONY, AKLERA, JHALAWAR, PIN-326033, RAJASTHAN - 326033
PH :9799299971.

ALWAR

2196. M G MOTORS (--01), MUKESH GENERAL FINANCE COMPANY, ROAD NO. 2, NEAR MEO BOARDING, ALWAR - 301001
PH :9001795520.

2197. M G MOTORS (--02), KHASRA NO.803/198, BHUGORE TIRAHA, NEAR ALWAR PUBLIC SCHOOL, JAIPUR ROAD, ALWAR - 301001
PH :9001795520.

2198. M G MOTORS (--03), VAISHALI NAGAR, OLD DELHI ROAD, ALWAR, PIN-301001, RAJASTHAN - 301001

AMET

2199. TECHNOY MOTORS INDIA PVT LTD (--01), AMET , DISTT RAJSAMAND, RAJASTHAN - 313332

ANOOPGARH

2200. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), PLOT NO. AMEDKAR CHARAHARA,RAILWAY STATION ROAD ,ANUPGARH (ANOOPGARH ),DISTT SRI GANGANAGAR . - 335701

ANTA

2201. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), KOTA-BARAN ROAD, ANTAH, DIST.-BARAN. - 325502
PH :9413379001.

ASIND

2202. CHAMPION CARS (PREM CARS PVT LTD) (--01), DEV TOWERS, BEAWAR ROAD, ASIND, DISTRICT – BHILWARA, RAJASTHAN - 311302 - 311302
PH :9887063862.

ATRU

2203. SUWALKA MOTORS PRIVATE LIMITED (--01), SALPURA ROAD, ATRU, NEAR DEPUTY OFFICE, PIN-325218, RAJASTHAN - 325218
PH :8306333731.

BADI SDADRI

2204. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), MAIN CHITTOR ROAD, NEXT TO HP PETROL PUMP, BHOPATPURA, BARI SADRI, DIST. CHITTORGARH, PIN-312403, RAJASTHAN - 312403

BAGRU

2205. PREM MOTORS PVT LTD (--01), KHASRA NO. 1185, NH 8 AJMER ROAD, BAGRU, JAIPUR DISTRICT, RAJASTHAN - 303007

BAJJU

2206. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (--01), BAJJU, DISTT BIKANER, RAJASTHAN - 334305

BALESAR

2207. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), KHASRA NO. 2167 JODHPUR JAISALMER ROAD, VILL:- BALESAR SATTA, TEH:- BALESAR , DIST:- JODHPUR ( RAJ.) - 342203
PH :7412087344.

BALOTRA

2208. L M J SERVICES LTD (6502--05), JODHPUR BALOTRA ROAD,BALOTRA, RAJASTHAN - 344022
PH :8005898360.

BANDANWARA

2209. RELAN MOTORS PVT LTD (--01), SHOP NO. 9 & 10, AJMER HIGHWAY, BANDANWARA, DIST. AJMER, PIN-305622 - 305622

BANSUR

2210. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (--01), KOTPUTLI ROAD, NEAR SUBHASH CHOWK, BANSUR, RAJASTHAN - 301402
PH :8875005116.

BANSWARA

2211. NAVNEET MOTORS (--01), NEAR J.C. MILL,OPPOSITE AKASHWANI,DAHOD ROAD,BANSWARA - 327001

BAORI

2212. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), SHOP NO. 04, SHRI BALAJI NAGAR, NEAR SBI, BAORI, DIST. JODHPUR, PIN-342037, RAJASTHAN - 342037

BARAN

2213. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101--03), BESIDE OJHA METAL, ATRU ROAD, BARAN - 325205
PH :8929854244.

BARMER

2214. L M J SERVICES LTD (6502--06), G-216, RIICO INDUSTRIAL AREA, BARMER - 344001
PH :8005898360.

2215. L M J SERVICES LTD (--01), NH# 68, OPP. SADAR THANA - 344001
PH :8005898360.

BASSI

2216. PREM MOTORS PVT LTD (--01), MOHAN PURA BASSI, JAIPUR, RAJASTHAN - 303301

BAYTU

2217. L M J SERVICES LTD (--01), NH-8 ,NEAR JAGDAMBA PETROL PUMP , BAYTU - 344034
PH :8094011126.

BEAWAR

2218. RELAN MOTORS PVT LTD (--01), PLOT NO 1, INDIRA GANDHI UDYOGPURI , AJMER ROAD ,BEAWAR, RAJASTHAN . - 305202
PH :9587687000.

BEGUN

2219. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), BHATIA & CO. (A UNIT OF BHATIA CORPORATION PVT LTD),IN FRONT OF GURUKUL, CHITTOR ROAD,BEGUN, TEHSIL – BEGUN, DISTRICT CHITTORGARH, 312023

BEHROR

2220. M G MOTORS (--01), B-168, RIICO INDUSTRIAL AREA, PHASE-II, OPP. APEX TUBE, BEHROR, DISTT: ALWAR. - 301701
PH :9001795520.

BHADRA

2221. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), CHAK NUMBER-8,BARANI, NEAR HISAR BYEPASS BHADRA -BALSAMAND ROAD ,BHADRA. - 335501

BHARATPUR

2222. TM MOTORS PVT LTD (--01), BRIJ VIHAR COLONY,,MADARPUR ROAD,BHARATPUR,RAJASTHAN - 321001
PH :9251423392.

BHAWANI MANDI

2223. SUWALKA MOTORS PRIVATE LIMITED (--01), K.NO. 327 MANDAVI OPPOSITE SDM OFFICE JHALAWAR ROAD, BHAWANIMANDI,JHALAWAR- 326502. - 326502
PH :9414242256.

BHILWARA

2224. CHAMPION CARS (PREM CARS PVT LTD) (--01), CHITTORGARH ROAD, BHILWARA, RAJASTHAN, - 311001

2225. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), PLOT NO. 1/316/2, AJMER ROAD, BHILWARA, RAJASTHAN - 311001

2226. CHAMPION CARS (UNIT OF PREM CARS PVT. LTD) (--02), ARATI NO.255-258, GRAM JODHRAS, BHILWARA. - 311011

BHINDER

2227. TECHNOY MOTORS INDIA PVT LTD (--01), NEAR RAILWAY STATION,SALUMBAR CHOURAHA, BHINDER - 313603
PH :8306111337.

BHINMAL

2228. SHRI KRISHNA AUTOSALES PVT LTD (--01), KHASRA NO. 2281, KARADA CROSSING, BHINMAL, DISTRICT - JALORE, RAJASTHAN. - 343029
PH :9610242790.

BHIWADI

2229. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (--01), OPP. INDAG RUBBER,MAIN ROAD ,BHIWADI - 301019
2230. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (--02), F-458-C,RIICO,INDUSTRIAL AREA,BHIWADI - 301019
2231. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (--04), KHASRA NO. 656/431, ALWAR ROAD, BHIWADI. - 301019

BIJAYNAGAR

2232. AJMER AUTO AGENCIES PVT LTD (--01), KHASRA NO 39 , AJMER -BHILWARA HIGHWAY CITY -BIJAYNAGAR DISTRICT – AJMER ,RAJASTHAN - 305624
PH :8890902472.

BIKANER

2233. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-01), OPP. URMUL DAIRY PLANT,GANGANAGAR ROAD,BIKANER - 334004
2234. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-04), JAIPUR BYE PASS,BIKANER , - 334004
2235. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-05), OPP. AVYYAPPA TEMPLE, K. K. COLONY, BIKANER - 334003
2236. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (7102-71-01), KHASRA NO. 376/33, JAIPUR ROAD, NH-11, BIKANER, RAJASTHAN. - 334001
PH :8929834417.
2237. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-07), ROAD NO.-4, IND. AREA, RANI BAZAAR,, RANI BAZAAR, BIKANER - 340323

BILARA

2238. L M J SERVICES LTD (--01), BANGANGA MOD, JODHPUR ROAD, BILARA , RAJASTHAN - 342602
PH :8104698935.

BONLI

2239. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), OPP. GOPAL AGRO PETROL PUMP NIWAI RD, BONLI, RAJASTHAN - 322023

BORUNDA

2240. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), 42/34, GOTAN ROAD, BORUNDA, DIST.-JODHPUR, PIN-342604, RAJASTHAN - 342604
PH :9413311745.

BUNDI

2241. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101--02), SUMAN PLAZA, NEAR TEACHER'S COLONY, CHITTOR ROAD, OPPOSAITE ICICI ATM, BUNDI - 323001
PH :8929853245.

CHAKSU

2242. K.P. AUTOMOTIVES PVT LTD (1104--03), TONK ROAD, CHAKSU - 303901

CHANDAN

2243. L M J SERVICES LTD (--01), JAISALMER ROAD ,CHANDAN , DISTT JAISALMER ,RAJASTHAN - 345031
PH :8094011126.

CHIRAWA

2244. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), NEAR PILANI CIRCLE, LOHARU ROAD, STATE HIGHWAY-8, CHIRAWA - 333026

CHITTORGARH

2245. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), PLOT NO. 1001/1-1002/1,NIMBAHERA ROAD,CHITTORGARH - 312001

CHOMU

2246. KTL AUTOMOBILE PRIVATE LIMITED (--01), KHARSA NO.695, JAIPUR SIKAR BYPASS ROAD, CHOMU, RAJASTHAN. - 303702
PH :7412077034.
2247. SATNAM MOTOCORP PVT LTD (--01), NEAR CM CHOPRA HOSPITAL, JAIPUR ROAD, CHOMU, DISTRICT – JAIPUR, RAJASTHAN - 303702
PH :8302090000.

CHURU

2248. T R SAWHNEY MOTORS PVT LTD (--01), KHASRA NO. 913/54, JAIPUR ROAD, VILLAGE RAMSARA, CHURU, PIN-331001, RAJASTHAN - 331001
PH :9782078531.

DABI

2249. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), KARITALAI-MAHADEV MARKET, CHARBHUJA ROAD, DESURI (DISTRICT PALI) - 323022

DANTA RAMGARH

2250. JAMU AUTOMOBILES PVT LTD (--01), KHASRA NO. 1016/256, VILLAGE - RAMGARH, TEHSIL - DATAH RAMGARH, DIST.-SIKAR. - 332703
PH :9116816905.

DAUSA

2251. VIPUL MOTORS PVT LTD (1102--03), AGRA JAIPUR ROAD, DAUSA - 303303
PH :9672211333.

DECHU

2252. L M J SERVICES LTD (--01), OPP INDIAN OIL PUMP, JODHPUR ROAD, DECHU - 342314

DEGANA

2253. SHRI MANGALAM AUTO PRIVATE LIMITED (--01), PLOT NUMBER -189 , NEAR NAGAUR RAILWAY STATION ROAD, DEGANA - 341503
PH :7230055955.

DEOLI

2254. K.P. AUTOMOTIVES PVT LTD (--01), KOTA-JAIPUR HIGHWAY, NH-12, DEOLI - 304804
PH :8696925259.

DESURI

2255. L M J SERVICES LTD (--01), MAHADEV MARKET, CHARBHUJA ROAD, DESURI, DISTT PALI , RAJASTHAN - 306703

DHARIYAWAD

2256. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), PRATAPGARH ROAD, DHARIYAWAD , DIST. - PRATAPGARH, RAJASTHAN - 313605 - 313605
PH :9829736081.

DHOLPUR

2257. TM MOTORS PVT LTD (--01), TM MOTORS PVT. LTD., GT ROAD DHOLPUR, RAJASTHAN. - 328001
PH :8094777862.

DIDWANA

2258. SHRI MANGALAM AUTO PRIVATE LIMITED (--01), KHASRA NO. 73, NEAR CHOTI DEVI SCHOOL, LADNU ROAD, DIDWANA , DISTRICT – NAGAUR.
KHARSA NO. 2778, DIDWANA BYPASS, DIDWANA, DISTRICT NAGAUR, RAJASTHAN - 341303
PH :7230055924.

DOONI

2259. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), NEAR POLICE STATION, DOONI, DIST. TONK, RAJASTHAN - 304802 - 304802

DUDU

2260. PREM MOTORS PVT LTD (--01), KHASRA NO.1107 & 1108, OPPOSITE POWER HOUSE SERVICE LANE, NH-8, DUDU. - 303008
PH :8058411181.

DUNGARPUR

2261. NAVNEET MOTORS (4902--02), G-71, INDUSTRIAL AREA, DUNGARPUR - 314001

FALNA

2262. L M J SERVICES LTD (--01), OPPOSITE PRAKASH DINING HOTEL ,FALNA - 306116

FATEHNAGAR

2263. TECHNOY MOTORS INDIA PVT LTD (4903--03), PLOT NO.15, FATENAGAR SANWAR ROAD, UDAIPUR-CHITTORGARH HIGHWAY NO.76, FATEHNAGAR-313205 DISTT. UDAIPUR - 313205

FATEHPUR (RJ)

2264. JAMU AUTOMOBILES PVT LTD (--01), NH-52, RATANGARH ROAD,, DISTT SIKAR - 332301

FATHEGARH

2265. L M J SERVICES LTD (--01), NEAR POLICE STATION, FATEHGARH, DIST. - JAISALMER, RAJASTHAN - 345027 - 345027

GANGAPUR CITY

2266. PREM MOTORS PVT LTD (--01), KHASRA NO. 5854, 5858, 5860, 5861, VILLAGE UDAI KALAN, THE GANGAPUR CITY - 322201
PH :8058794122.

GHARASNA

2267. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (--01), NH-11,BIKANER ROAD,, ABHISHEK(MEENA)FILLING STATION KE PASS, - 335707

GOGUNDA

2268. TECHNOY MOTORS INDIA PVT LTD (--01), NH 27, GOGUNDA, DISTRICT-UDAIPUR - 313705

GOVINDGARH

2269. VIPUL MOTORS PVT LTD (--01), JAI BHAWANI MARKET, NH-2, GOVINDGARH, DIST. JAIPUR, PIN-303712, RAJASTHAN - 303712
2270. M G MOTORS (--01), SIKRI ROAD,GOVINDGARH, - 301604

GUDAMALINI

2271. L M J SERVICES LTD (--01), KHARSA NO. 1360/5, RATHORO KI DHANI, JODHPUR ROAD, GUDAMALANI, DISTRICT – BARMER, RAJASTHAN – 344031. - 344031
PH :8094011126.

GUDHAGORJI

2272. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), BHORKI ROAD, GUDHAGORJI, DISTRICT – JHUNJHUNUN, RAJASTHAN. - 333022
PH :7412059848.

HANUMANGARH

2273. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101--03), JUNCTION TOWN ROAD,HANUMANGARH - 335512
2274. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101--06), PLOT NUMBER 134, INDUSTRIAL AREA, HANUMANGARH, RAJASTHAN. - 335512
PH :9413311745.

HINDAUN

2275. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (--01), KHASRA NO. 737, VILLAGE – PATTI NARAINPUR, NEAR HANUMAN MANDIR, HINDAUN-MAHWA ROAD, HINDAUN. - 322230

ITAWA

2276. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), NAHER KE PASS, KHATOLI ROAD, ITAWA, ITAWA, RAJASTHAN - 325004

JAIPUR

2277. VIPUL MOTORS PVT LTD (1102-11-01), F-124A,MALVIYA INDUSTRIAL AREA,MALVIYA NAGAR,JAIPUR - 302017
2278. K.P. AUTOMOTIVES PVT LTD (1104-11-01), E-198, SANGANER INDUSTRIAL AREA,MANSAROVAR,JAIPUR - 302020
2279. PREM MOTORS PVT LTD (1112-11-02), 12 13,SUDARSHANPURA INDUSTRIAL AREA, JAIPUR - 302006
2280. VIPUL MOTORS PVT LTD (1102-11-05), 29, INDUSTRIAL AREA, JHOTWARA, JAIPUR - 302012
2281. PREM MOTORS PVT LTD (1112-11-01), PLOT NO. E101/A, VKI , JAIPUR - 302039
2282. SATNAM MOTOCORP PVT LTD (1113-11-01), PLOT NO. E-524, SITAPURA INDUSTRIAL AREA, JAIPUR – 302 022, RAJASTHAN. - 302022
2283. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-01), PLOT NO. 13B, JHOTWARA INDUSTRIAL AREA, JAIPUR. - 302012
PH :7412077022.
2284. PREM MOTORS PVT LTD (1112-11-03), PLOT NO. B-12, MALVIYA NAGAR, JAIPUR. - 302017
2285. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-02), KHASRA NO 1210-1216/2959 , BHANKROTA , TEH SANGANER , DISTRICT JAIPUR. - 302026
PH :7412077007.
2286. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-03), ORBIT MALL CIVIL LINES METRO STATION AJMER ROAD ,JAIPUR. - 302006
PH :7412077007.
2287. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (1116-11-C1), COMMERCIAL PLOT NO. J4, COMMERCIAL BELT B, VT ROAD, NEW SANGANER ROAD, MANSAROVAR SCHEME, JAIPUR, RAJASTHAN 302020 - 302020
PH :9571105651.
2288. K.P. AUTOMOTIVES PVT LTD (1104-11-G1), B-1, GOVIND MARG, ADARSH NAGAR, JAIPUR – 302004 - 302004
PH :9549656559.
2289. KTL AUTOMOBILE PRIVATE LIMITED (1115-11-04), CHOKDI HAWALI SHAHAR, SHIRKI SHAHAR, NEAR IDGAH, BILOCHOYAN MOHALLA, TRANSPORT NAGAR, DELHI ROAD, JAIPUR - 302002 - 302002
PH :9772210922.
2290. K.P. AUTOMOTIVES PVT LTD (1104-11-G2), PLOT NO. 4, RAJIV COLONY, RPA ROAD, OPP. RADHA SWAMI SATSANG BHAWAN, SHASTRI NAGAR, JAIPUR 302016. - 302016
PH :9549656559.
2291. SANGA AUTONATION ( A UNIT OF TAYAL INDIA MOTORS PVT LTD) (1117-11-01), SECTOR 35, PRATAP NAGAR, SANGANER, JAIPUR, PIN-302023, RAJASTHAN - 302033
PH :9929365847.
2292. K.P. AUTOMOTIVES PVT LTD (1104-11-09), KHASRA NO. 74/4 & 75/1, NEW KHANDELWAL NAGAR, GONER ROAD, NEAR JAIPUR AGRA HIGHWAY, JAIPUR, RAJASTHAN 302031 - 302031
2293. K.P. AUTOMOTIVES PVT LTD (--08), PLOT NO. 280, RAJENDRA NAGAR A, NIRMAN NAGAR, JAIPUR - 302031

JAISALMER

2294. L M J SERVICES LTD (--01), PLOT NO.36, 37, MAHESH REFUGEE COLONY,HDC SOCIETY, DABLA ROAD, JAISALMER (RAJASTHAN) - 345001
PH :8005898360.

JAITARAN

2295. L M J SERVICES LTD (--01), KHASRA NO. 784, JAIPUR-JODHPUR BYE PASS ROAD, JAITARAN, DIST.-PALI. - 306302
PH :9269971266.

JALORE

2296. SHRI KRISHNA AUTOSALES PVT LTD (--01), KHASRA NO.6809/2616, 2623, INDUSTRIAL AREA, JALORE-BHINMAL ROAD, JALORE - 343001

JAMWA RAMGARH

2297. K.P. AUTOMOTIVES PVT LTD (--01), KHASRA NUMBER -228/169,OPP UDAY AUTOMOBILES,JAIPUR ALWAR ROAD –JAMWA RAMGRAH. - 303109

JAWAL

2298. TECHNOY MOTORS INDIA PVT LTD (--01), OPP. HP PETROL PUMP, SIROHI-JALORE ROAD, JAWAL, DIST. – SIROHI, RAJASTHAN - 307801. - 307801

JHADOL

2299. TECHNOY MOTORS INDIA PVT LTD (--01), KHASRA NO. 186/1, NH # 8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT, PIN-306104, RAJASTHAN - 306104
PH :8890673099.

JHALAWAR

2300. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6102--02), OPP. BALAJI KI CHHATRI , KHEL CIRCULAR STADIUM, BUS STAND ROAD, JHALAWAR - 326001
PH :9413350336.

JHUNJHUNUN

2301. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--02), E1-2, AUTOMOBILES SERVICE SECTOR, RIICO INDUSTRIAL AREA, PHASE-2, SIKAR JAIPUR ROAD, JHUNJHUNU. - 333001

JOBNER

2302. PREM MOTORS PVT LTD (--01), KHASRA NO. 758 & 754, BABER WALON KI DHANI, JOBNER, TEHSIL – PHULERA, DISTRICT – JAIPUR, RAJASTHAN - 303328
PH :8058411181.

JODHPUR

2303. L M J SERVICES LTD (6502-65-01), PRATAP NAGAR,JODHPUR - 340002
PH :9950496202.
2304. L M J SERVICES LTD (6502-65-04), OPP TO RFC OFFICE,NEW POWER HOUSE ROAD,JODHPUR - 342003
PH :8094011127.
2305. SHRI KRISHNA AUTOSALES PVT LTD (6503-65-01), 32-A,HEAVY INDUSTRIAL AREA,NR FCI GODOWNS, JODHPUR - 342005
2306. L M J SERVICES LTD (6502--09), B-8,9,10, MARUDHAR INDUSTRIAL AREA, PHASE 1, BASNI, JODHPUR - 342008
PH :8094011147.
2307. L M J SERVICES LTD (6502--0C), 21/1, PAL MAIN BALOTRA ROAD, NEAR D.P.S. CIRCLE, JODHPUR - 342002
PH :7230057721.
2308. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (6504-65-01), C-62 BASNI INDUSTRIAL AREA, PHASE-1, JODHPUR - 342005
PH :7412059839.
2309. L M J SERVICES LTD (6502-65-0D), PARSHWANATH COLONY, KAYLANA ROAD, JODHPUR. - 342001
PH :8696916455.
2310. L M J SERVICES LTD (6502-65-10), KHASRA NO. 357/5, BANAR ROAD, OPPOSITE VIDHYA PUBLIC SCHOOL, JODHPUR, RAJASTHAN - 342003
PH :7222002424.

KAPASAN

2311. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), OLD RASHMI ROAD,KAPASAN, , DISTT. CHITTORGARH, RAJASTHAN - 312202

KAPRAIN

2312. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), MEGA HIGHWAY ROAD, NEAR PETROL PUMP, KAPRAIN DISTT. BUNDI - 323301
PH :9413379001.

KEKRI

2313. AJMER AUTO AGENCIES PVT LTD (--03), KOTA SAWAR ROAD,KEKRI - 305404
PH :9314955201.

KHAJUWALA

2314. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), DANTOR ROAD, KHAJUWALA, DIST. - BIKANER, RAJASTHAN. - 340323
PH :9982299866.

KHANDAR

2315. PREM MOTORS PVT LTD (--01), SAWAI MADHOPUR-KHANDAR RD., KHANDAR, RAJASTHAN - 322025. - 322025
PH :8058899960.

KHANPUR

2316. SUWALKA MOTORS PRIVATE LIMITED (--01), BYPASS CHORAYA, MEGA HIGHWAY BARAN-JHALAWAR, KHANPUR, TEHSIL – KHANPUR, DISTRICT – JHALAWAR, RAJASTHAN PIN CODE: 326038 - 326038
PH :8306333731.

KHERLI

2317. M G MOTORS (--01), KHERLI KATHUMAR ROAD, VILLAGE KHERLI, DISTT. ALWAR, RAJASTHAN - 321606
PH :9001795520.

KHERWARA

2318. TECHNOY MOTORS INDIA PVT LTD (--01), OPP. ATITHI PALACE, VILLAGE BADLA, NH 8,KHERWARA, TEHSIL – KHERWARA, DISTRICT – UDAIPUR, RAJASTHAN PIN CODE: 313803

KISHANGARH

2319. AJMER AUTO AGENCIES PVT LTD (--01), R K LINK ROAD, - 305802
PH :9314391011.

KISHANGARH BAS

2320. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (--03), KISHANGARH BIWADI HIGHWAY, NEAR KISHANGARH, DISTRICT ALWAR - 301405

KOLAYAT

2321. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (--01), NEAR PANCHAYAT SAMITI JHAJJU ROAD, KOLAYAT - 334302

KOTA

2322. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-61-01), 13-16 B,INDUSTRIAL ESTATE, KOTA - 324007
PH :8929400447.
2323. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6102-61-01), AUTO MOBILE ZONE,G-11/12 INDUSTRIAL AREA, KOTA - 324005
2324. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101-61-04), 3(K),CHAMBAL INDUSTRIAL AREA,KOTA,RAJASTHAN - 324007
PH :8929400447.
2325. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101--05), E-46, CHAMBAL INDUSTRIAL AREA, KOTA - 324007
PH :8929400447.
2326. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (6101--06), PLOT NO. E-222, ROAD NUMBER 5, INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN. - 324005
2327. SUWALKA MOTORS PRIVATE LIMITED (--01), RIDDHI SIDDHI NAGAR, KUNHARI, BUNDI ROAD, KOTA, RAJASTHAN. - 324008
2328. SUWALKA MOTORS PRIVATE LIMITED (6104--02), PLOT NO. A172 (B-1) INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN. - 324003

KOTPUTLI

2329. PREM MOTORS PVT LTD (--01), NH-8, BUCHARA COLONY, OPP. SHAKTI VIHAR, KOTPUTLI, JAIPUR - 303108
2330. PREM MOTORS PVT LTD (--02), KHASRA NO-636, KOTPUTLI, DIST. JAIPUR, RAJASTHAN - 303108

KUCHAMAN

2331. SHRI MANGALAM AUTO PRIVATE LIMITED (--01), SUDARSHAN NAGAR, BURSU ROAD, KHASRA NO.148, KUCHAMAN. - 341508
PH :7230055928.

LADNU

2332. SHRI MANGALAM AUTO PRIVATE LIMITED (--01), KHASRA NO. 1011, SUJANGARH ROAD, LADNUN - 341306
PH :7412044506.

LAHAR

2333. NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT LTD) (--01), WARD NO.09,, BHIND BHANDER ROAD,LAHAR, - 477001

LALSOT

2334. VIPUL MOTORS PVT LTD (--01), PLOT NO.22,23, KHASRA NO.1502-03, NARAYAN VIHAR, SAWAI MADHOPUR ROAD, LALSOT, RAJASTHAN - 303502
PH :9672211333.

LOSAL

2335. JAMU AUTOMOBILES PVT LTD (--01), LOSAL-SALASAR-DIDWANA ROAD, OPPOSITE SHIV MANDIR, WARD NO. 1, LOSAL, RAJASTHAN - 332025. - 332025
PH :9057400761.

LUNI

2336. L M J SERVICES LTD (--01), NEAR SBI BANK, SALAWAS ROAD,LUNI, TEHSIL – LUNI,DISTRICT – JODHPUR,RAJASTHAN PIN CODE: 342802 - 342802
PH :8094011126.

LUNKARANSAR

2337. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (--01), VISWAKARMA MARKET, BIKANER ROAD, LUNKARANSAR, BIKANER, RAJASTHAN - 334603. - 301026

MAHWA

2338. VIPUL MOTORS PVT LTD (--01), KHASRA NO.37/384, BHARATPUR ROAD BYE-PASS, N.H. -11, MAHWA, DISTT. DAUSA (RAJASTHAN) - 321608
PH :9672211333.

MAKRANA

2339. SHRI MANGALAM AUTO PRIVATE LIMITED (--01), KHASRA NO. 609/4, NEAR BAJAJ SHOWROOM, MANGLANA ROAD, MAKRANA, DISTRICT – NAGAUR. - 341505
PH :7230055934.

MALPURA

2340. K.P. AUTOMOTIVES PVT LTD (--01), PLOT NO.07, SHRI KALYAN NAGAR COLONY, JAIPUR-KEKRI ROAD, MALPURA - 304502
PH :8696925262.

MANDALGARH

2341. CHAMPION CARS (PREM CARS PVT LTD) (--01), OPP. MODEL SCHOOL, BIJOLIA ROAD, MANDALGARH, DISTRICT – BHILWARA, PIN-311604, RAJASTHAN
PH :9837325267.

MANGALWAD

2342. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), NH-27, PAL KHERI,, MANGALWAD, CHHITORGARH, - 312024

MARWAR JUNCTION

2343. L M J SERVICES LTD (--01), 1-2 KRISHNA KUNJ.OPP ROADWAJ BUS STAND, MARWAR JUNCTION, PALI - 306001

MASUDA

2344. RELAN MOTORS PVT LTD (--01), BANDANWARA ROAD, MASUDA, RAJASTHAN- 305623 - 305623

MERTA

2345. SHRI MANGALAM AUTO PRIVATE LIMITED (--01), KHASRA NUMBER 1679, NH-89,MERTA ,RAJASTHAN. - 341510
PH :9116007201.

NADOTI

2346. FORTUNE CARS (--01), SH-25,VPO,NADAUTI ALWAR, GANGAPUR CITY STATE HIGHWAY - 322215

NAGAUR

2347. SHRI MANGALAM AUTO PRIVATE LIMITED (--01), KHASRA NO. 1479/982 & 1478/83, BIKANER ROAD, NAGAUR. - 341001
PH :9116008624.

NAINWA

2348. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), UNIARA ROAD, OPP: PETROL PUMP, NAINWA, DIST. KOTA - 323801
PH :9413379001.

NARAYANPUR

2349. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (--01), KHASRA NO. 2848, JAIPUR ROAD,NEAR NARAYANPUR BYPASS VILLAGE, NARAYANPUR TEHSIL – NARAYANPUR, DISTRICT – ALWAR,RAJASTHAN PIN CODE: 301024. - 301024
PH :8875004375.

NASIRABAD

2350. AJMER AUTO AGENCIES PVT LTD (--04), CHAVANI BOARD NO:1613, HAWA CHAKKI, NASIRABAD ROAD, NASIRABAD, DISTT. AJMER - 305601
PH :9314955201.

NAWALGARH

2351. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), KHATA NO. 76, PUNIA KI DHANI, SIKAR ROAD, NAWALGARH, DISTRICT – JHUNJHUNU, RAJASTHAN PIN CODE: 333042 - 333042
PH :9928720360.

NEEM KA THANA

2352. JAMU AUTOMOBILES PVT LTD (--03), NEAR TOLL PLAZA, KOTPUTLI ROAD, NEEM KA THANA, SIKAR - 332713

NEEMRANA

2353. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (--01), F-42 & 42(B), PHASE-1, NEEMRANA, TEHSIL: BEHROR, DISTT. ALWAR - 301705

NIMBAHERA

2354. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), PLOT NO. 7-8, 33-34, 35-36, NIMBAHERA, DIST. -CHITTORGARH. - 312601

NIWAI

2355. K.P. AUTOMOTIVES PVT LTD (--01), VANASTHALI CIRCLE, NEAR PRATEEK GAS AGENCY, TONK ROAD, NIWAI, DISTRICT – TONK. - 304021
PH :8696925262.

NOHAR

2356. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), OPP. RAILWAY STATION, NOHAR, DISTRICT-HANUMANGARH - 335523

NOKHA

2357. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), F-46, RIICO EXTENSION, NOKHA INDUSTRIAL AREA, NOKHA DISTT- BIKANER (RAJASTHAN) - 334803
PH :7412059805.

PADAMPUR

2358. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES PVT LTD) (--01), NEAR BASANT PLACE, BHAGAT SINGH CHOWK, KARANPUR ROAD, PADAMPUR SRI GANGANAGAR 335041 - 335041

PALI

2359. L M J SERVICES LTD (6502--03), KHASRA NO. 771/1, JODHPUR PALI ROAD, PALI - 306401
PH :9269971266.

PAOTA

2360. K.P. AUTOMOTIVES PVT LTD (--01), PATTA SANKHYA 31, MISAL SANKHYA 89, NEAR BAMORIA PETROL PUMP, NH-8, PAOTA, RAJASTHAN. - 303106

PARBATSAR

2361. SHRI MANGALAM AUTO PRIVATE LIMITED (--01), NEAR IFL HOUSING FINANCE CO., KISHANGARGH ROAD, PARBATSAR, DISTRICT - NAGAUR, RAJASTHAN - 341512. - 341512
PH :8740909096.

PARTAPUR

2362. NAVNEET MOTORS (--01), AAASHAPURA CHAURAHA, BHAGORA MOR, NEAR AAASHAPURA MANDIR, PARTAPUR ,RAJASATHAN - 327024
PH :9001550644.

PHALODI

2363. SHRI KRISHNA AUTOSALES PVT LTD (--01), OPP. RCP GUEST HOUSE, NAGAUR KHICHAN ROAD, PHALODI, RAJASTHAN - 342301
PH :9116011958.

PHULERA

2364. KTL AUTOMOBILE PRIVATE LIMITED (--01), KHASRA NO. 21 TO 24 AND PLOT NO. 189 IN RAM VIHAR COLONY, PANCHBHATI, PHULERA, DISTRICT - JAIPUR, RAJASTHAN - 303338
PH :7412077022.

2365. KTL AUTOMOBILE PRIVATE LIMITED (--02), KHASRA NO. 21 TO 24 AND PLOT NO. 189, IN RAM VIHAR COLONY - 303338

PILIBANGA

2366. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), HANUMANGARH ROAD, PILIBANGA, DISTRICT-HANUMANGARH, RAJASTHAN - 335803

PINDWARA

2367. NAVNEET MOTORS (--01), OPPOSITE WOLKEM FACTORY, SIROHI ROAD, PINDWARA, DIST. - SIROHI. - 307022

PIPAR

2368. L M J SERVICES LTD (--01), KHASRA NO. 1095, PIPAR CITY, DIST.-JODHPUR. - 342601
PH :9462616268.

PIRAWA

2369. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), PLOT NO.19,NEAR KRISHI UPAJ MANDI,SOYAT ROAD,PIRAWA,DIST.JHALAWAR, - 326034

PISANGAN

2370. AJMER AUTO AGENCIES PVT LTD (--01), PLOT NO.11, SHIV VIHAR COLONY, MANGLIYAWAS ROAD, PISANGAN, DISTRICT – AJMER, RAJASTHAN. - 305204
PH :9314955201.

POKHRAN

2371. L M J SERVICES LTD (--01), SUNDER NAGAR, TEHSIL POKHRAN, DISTRICT – JAISALMER, RAJASTHAN. - 345021
PH :9610115660.

PRATAPGARH (RAJASTHAN)

2372. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), CHITTORGARH-PRATAPGARH ROAD, GRAM-BAMBOTARA, PRATAPGARH (RAJASTHAN) - 312605
PH :9571274999.

RAIPUR

2373. L M J SERVICES LTD (--01), NATIONAL HIGHWAY, PALI ROAD, VILLAGE – RAIPUR, DISTRICT – PALI. - 306304
PH :9269971266.

RAISINGHNAGAR

2374. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), PLOT NO. H-2, INDUSTRIAL AREA, RAISINGHNAGAR, DISTRICT – SRIGANGANAGAR. - 335051

RAJGARH

2375. M G MOTORS (--01), ALWAR SIKANDRA MEGA HIGHWAY, VILLAGE DIGAWARA, TEHSIL RAJGARH DISTT. ALWAR - 301408
PH :9001795520.

2376. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), NH-65, OPP. BHAGAT SINGH CHOWK, RAJGARH DISTT. CHURU, - 331023
PH :9602261977.

RAJSAMAND

2377. TECHNOY MOTORS INDIA PVT LTD (--01), ARAJI NO 241 – 242, DHOINDA, RAJASMAND, RAJASTHAN - 313324

RAMGANJMANDI

2378. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), KHAIRABAD ROAD, KHASARA NO. 753, A.S.I COLONY, RAMGANJ MANDI - 326519
PH :9414085790.

RAMGARH

2379. M G MOTORS (--01), PLOT NO. 8, BALOT NAGAR, OLD DELHI ROAD, RAMGARH, ALWAR, RAJASTHAN - 301026

RANIWARA

2380. SHRI KRISHNA AUTOSALES PVT LTD (--01), NEAR RAILWAY GATE, BHINMAL ROAD ,RANIWARA, TEHSIL – RANIWARA, DISTRICT – JALORE, RAJASTHAN,PIN CODE: 343040 - 343040
PH :9928377669.

RATANGARH

2381. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), PLOT NO. AREA F-186 INDUSTRIAL AREA, RATANGARH. - 331022
PH :7412087301.

RAWATBHATA

2382. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), NEAR INDIAN OIL PETROL PUMP, KOTA ROAD, RAWATBHATA , DIST. CHITTORGARH, RAJASTHAN. - 323307

RAWATSAR

2383. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), CHAK 21-22,DWD,PLOT NUMBER -10 & 11, RAWATSAR (RAJASTHAN). - 335524

REENGUS

2384. JAMU AUTOMOBILES PVT LTD (--01), REENGUS HIGHWAY , REENGUS DISTT. SIKAR -332404 - 332404
PH :332404.

RENWAL

2385. PREM MOTORS PVT LTD (--01), 193, JAIPUR CHOMU ROAD, NEAR 10 DUKAN, , RENWAL KISHANGARH, JAIPUR, RAJASTHAN - 303904

RENWAL MANJHI

2386. PREM MOTORS PVT LTD (--01), KHASRA NUMBER 2286/110,OPP ROHINI NAGAR 1 ,JAIPUR BHILWARA HIGHWAY ,RENWAL,TEHSIL PHAGI JAIPUR ,RAJASTHAN (303904). - 303904

REVDAR

2387. TECHNOY MOTORS INDIA PVT LTD (--01), OPP. TIRUPATI PETROL PUMP, KAROTI ROAD, REVDAR, DISTT. SIROHI, RAJASTHAN. - 307514

SABLA

2388. TECHNOY MOTORS INDIA PVT LTD (--01), NEAR BP PETROL PUMP, SABLA ASPUR ROAD, SABLA, TEHSIL-ASPUR, DUNGERPUR, PIN-314022, RAJASTHAN - 314022

SAGWARA

2389. TECHNOY MOTORS INDIA PVT LTD (--01), BANSWARA ROAD, CHUNGINAKA, NR. CENTRAL JAIL, SAGWARA, DUNGARPUR DISTT., RAJASTHAN - 314025

SALUMBAR

2390. NAVNEET MOTORS (--01), GANESH GHATI, BANSWARA ROAD, SALUMBAR, DISTRICT – UDAIPUR. - 313027
PH :7665887444.

SAMBHAR

2391. KTL AUTOMOBILE PRIVATE LIMITED (--01), PLOT NUMBER -C1 NEAR SHAKUMARI PG COLLEGE , PHULERA ROAD , SAMBHAR 303604 - 303604
PH :7412077022.

SAMRANIYA

2392. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), KHASRA NO.857/394,GADRETA BYPASS, SANTOSHI NAGAR,SAMRANIYA, - 325217

SANCHORE

2393. SHRI KRISHNA AUTOSALES PVT LTD (--01), PLOT NO. 217, KHASRA NO. 844, 865, 867, MANMOHAN SINGH PARK, NH-15, BARMER ROAD, SANCHORE, DIST.-JALORE. - 343041
PH :9636224546.

SANGARIA

2394. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), HANUMANGARH ROAD NEAR KARMA PETROL PUMP - 335035
PH :7412059827.

SANGOD

2395. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (--01), KHASRA NO 1637 , SANGOD BAPAPAR MAIN ROAD ,SANGOD - 325601
PH :9413353999.

SAPOTRA

2396. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (--01), VPO SAPOTRA, NEAR PETROL PUMP DIST. KARAULI, PIN-322218 - 322218

SARDARSHAHAR

2397. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), KHASRA NO.134, MOTOR MARKET, RATANGARH SARDARSHAHAR ROAD, SARDARSHAHAR DISTT. CHURU, RAJASTHAN - 331403
PH :9799833995.

SARWAR

2398. RELAN MOTORS PVT LTD (--01), CHAMAN CHOURAHA, AJMER ROAD, SARWAR, DISTRICT – AJMER, RAJASTHAN 305403 - 305403
PH :9587687000.

SAWAI MADHOPUR

2399. PREM MOTORS PVT LTD (--01), PLOT NO.14, RIICO INDUSTRIAL AREA, KHERDA, SAWAI MADHOPUR - 322001

SAYALA

2400. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), NEAR PETROL PUMP, HANUMAN MANDIR SOUTH STYLE, MAIN ROAD SAYALA, SAYALA TEHSIL – SAYALA, DISTRICT – JALORE, RAJASTHAN PIN CODE: 343022 - 343022
PH :9460739993.

SHAHJAHANUR

2401. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (--01), KHASRA NO. 1258, VPO SHAHJAHANPUR, DELHI-JAIPUR HIGHWAY, DISTRICT –ALWAR, RAJASTHAN - 301706. - 301706

SHAHPURA

2402. K.P. AUTOMOTIVES PVT LTD (1104--05), VILLAGE RAJPURA,GRAM PANCHAYAT BIDARA,NH-8, SHAHPURA - 303103

SHEO

2403. L M J SERVICES LTD (--01), NEAR RIDDI SIDDHI HOTEL , OPPOSITE HP PETROL PUMP ,TEH SHEO, DISTT – BARMER - 335521
PH :8094011144.

SHEOGANJ

2404. NAVNEET MOTORS (--01), F 132 ,OPP. 33/11 KV STATION, RIICO INDUSTRIAL AREA, SHEOGANJ, DISTRICT – SIROHI, RAJASTHAN - 307027 - 307027
PH :9414159146.

SIKAR

2405. JAMU AUTOMOBILES PVT LTD (--01), F-54,,JAIPUR ROAD (NH-11),SIKAR - 332001

SIKRAI

2406. VIPUL MOTORS PVT LTD (--01), OPP NAYARA PETROL PUMP, MANPUR ROAD SIKRAI, DAUSA (RAJASTHAN) - 303508

SIMALWARA

2407. NAVNEET MOTORS (--01), RAJPUR PEETH ROAD, SIMALWARA, DISTRICT - DUNGARPUR, RAJASTHAN - 314403 - 314403

SINGHANA

2408. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), NARNAUL ROAD, SINGHANA, DIST. JHUNJHUNU,, PIN-333516, RAJASTHAN - 333516

SIROHI

2409. NAVNEET MOTORS (4902--03), PLOT NO. 8,BHADRANAGAR NAGAR, ANADRA ROAD, SIROHI - 307001
PH :779960989.

SIVANA

2410. L M J SERVICES LTD (--01), BALOTRA ROAD, SIWANA, DISTRICT - JODHPUR, RAJASHTHAN. - 344044
PH :8005898360.

SOJAT

2411. L M J SERVICES LTD (--01), KHASRA NO. – 186/1, NH-8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT , RAJASTHAN - 306104
PH :9269971266.

SRI DUNGARGARH

2412. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), 1563/1273, NH-11, MOMASAR BASS, DUNGARGARH, DISTRICT - BIKANER, RAJASTHAN. - 331803
PH :9414138511.

SRI GANGANAGAR

2413. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), NEW AUTOMOBILE MARKET,SURATGARH-HANUMANGARH ROAD, SRIGANGANAGAR - 335001

2414. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--03), CHAK 1G CHOTI, NH15, SRIGANGANAGAR, RAJASTHAN - 335001
PH :8875911503.

SRI KARANPUR

2415. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), PADAMPUR ROAD, NEAR DHAN MANDI, SRI KARANPUR,TEHSIL – SRI KARANPUR, DISTRICT – SRI GANGANAGAR,RAJASTHAN, PIN CODE: 335073
PH :8875088998.

SRI MADHOPUR

2416. JAMU AUTOMOBILES PVT LTD (--01), WARD NO.4, RINGUS ROAD, SRI MADHOPUR DISTT. SIKAR. - 332715
PH :9116816905.

SUJANGARH

2417. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), KHASRA NO.459/333, SALASAR ROAD, NEAR ANAJ MANDI, SUJANGARH , DISTT. CHURU - 331507
PH :8875011561.

SULTANPUR

2418. SUWALKA MOTORS PRIVATE LIMITED (--01), KHASRA NUMBER 485, NEAR PETROL PUMP , SULTANPUR ROAD , SULTANPUR , DISTT KOTA - 325204
PH :7742121212.

SUMERPUR

2419. L M J SERVICES LTD (6502--08), G-14 JAKHAMATA INDUSTRIAL AREA, OPP. DASHEREA GROUND, SUMERPUR - 306902
PH :8094002633.

SURATGARH

2420. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--02), OPP. RELIANCE PETROL PUMP,NH-15, SURATGARH - 335804
PH :8875012667.

SWAROOPGANJ

2421. NAVNEET MOTORS (--01), NEAR POLICE STATION, NAYI BHAWARI,, NATIONAL HIGHWAY 27, SWAROOPGANJ, - 307001

THANAGAZI

2422. M G MOTORS (--01), NEAR INDIA PETOL PUMP, THANAGAZI, ALWAR ROAD, DIST. ALWAR, PIN-301022, RAJASTHAN - 301022
PH :9799398200.

TIBBI

2423. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), NEAR KESARGARH PALACE, HANUMANGARH ROAD, TIBBI, DIST. HANUMNAGARH, PIN-335526, RAJASTHAN - 335526
PH :9413311745.

TINWARI

2424. L M J SERVICES LTD (--01), OPPOSITE NEW TEHSIL OFFI CE, TIWARI, MATHANIA ROAD, TIWARI -342306 - 342306
PH :809011126.

TODARAISINGH

2425. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (--01), JAKHAD COLONY, NEAR ESSAR PETROL PUMP, TODARAISINGH, DIST. – TONK, RAJASTHAN-304505. - 304505

TONK

2426. K.P. AUTOMOTIVES PVT LTD (--01), F-94, RIICO INDUSTRIAL AREA, TONK , RAJASTHAN - 304001
PH :9549651972.

TUNGA

2427. PREM MOTORS PVT LTD (--01), VILLAGE GWALANI, BASSI-LALSOT ROAD, TUNGA, TEHSIL- BASSI, JAIPUR - 303302 - 303302
PH :8058998123.

UDAIPUR

2428. NAVNEET MOTORS (4901-49-01), 7 CITY STATION ROAD,UDAIPUR - 313001
PH :7230046375.

2429. NAVNEET MOTORS (4902-49-01), S-140,MADRI INDUSTRIAL AREA,OPP. BSNL OFFICE, UDAIPUR - 313002

2430. TECHNOY MOTORS INDIA PVT LTD (4903-49-02), NH-8, GOVERDHAN VILLAS, DEVALI, NEAR JEEVAN TARA RESORT, UDAIPUR - 313002
PH :7073468292.

2431. TECHNOY MOTORS INDIA PVT LTD (4903-49-04), KHASRA NO. 546, 547, 554 AND 555, NEAR CHITRAKOOT NAGAR, OPP. BHIRAVGARH HOTEL, SUKHER, TEHSIL – BADGAON, UDAIPUR, RAJASTHAN. - 313001

UDAIPURWATI

2432. AURIC MOTORS PVT LTD (--01), INFRONT OF FRAMA TRACTOR,SIKAR ROAD, POWER HOUSE UDAIPURWATI JHUNJHUNU - 333307

VATIKA

2433. SANGA AUTONATION ( A UNIT OF TAYAL INDIA MOTORS PVT LTD) (--01), PLOT NO.3 & 8, VINAYAK VIHAR, VATIKA, SANGANER, JAIPUR, PIN-303905, RAJASTHAN - 303905

VIRATNAGAR

2434. K.P. AUTOMOTIVES PVT LTD (--01), KHASRA NUMBER 1156,,OPP HOTEL GULMOHAR ,,JAIPUR ROAD ,VIRATNAGAR,DISTT JAIPUR - 303102

## SIKKIM

GANGTOK

2435. ENTEL MOTORS (--01), 6TH MILE, P.O.TADONG, GANGTOK, SIKKIM - 737102

JORTHANG

2436. ENTEL MOTORS (--01), PIPALEY ROHTAK, NEAR JNU SCHOOL, WEST SIKKIM, JORTHANG - 737121

## TAMIL NADU

ALANDURAI

2437. AADHI CARS PVT LTD (--01), NO.69/1 A, SIRUVANI MAIN ROAD, URIPALLAM PUDHUR, ALANDURAI, COIMBATORE (TAMIL NADU) - 641101
PH :8754045816.

ALANGUDI

2438. PL.A MOTORS (--01), S. NO. 400/6-A-2, NO. 1/85, MANGALAPURAM, PUDDUKOTTAI TO ALANGUDI ROAD, NEAR KNP KALYANA MANDAPAM, ALANGUDI TOWN & TALUK, PUDUKKOTTAI DIST., TN - 622301 - 622301
PH :8870454466.

ALANGULAM

2439. AADHI CARS PVT LTD (--01), SURVEY NO. 495/7, TIRUNELVELI - TENKASI ROAD, ALANGULAM, TIRUNELVELI DISTRICT,TN - 627851
PH :8754044143.

AMBASAMUNDRAM (AMBAI)

2440. AADHI CARS PVT LTD (--01), DOOR NO. 2/253, SURVEY NO. 104/2, RTO OFFICE ROAD, VILLAGE - VAGAIKULAM, AMBASAMUNDRAM. - 627401

AMBUR

2441. SRI AMMAN CARS INDIA PVT LTD (--01), 25/2A,25/2B,26/1&26/2, PLOT NO:42,SIDCO INDUSTRIAL ESTATE,VINNAMANGALAM, CHENGILLIKUPPAM VILLAGE, AMBUR TALUK, TIRUPATHUR DIST., TAMILNADU - 631005

ANAMALAI

2442. ABT LIMITED (--01), SITE NO. 6/12, NEAR ABT SAMUGA KOODAM, SETHUMADAI ROAD, ANAMALAI, COIMBATORE DISTRICT, TAMILNADU - 642104
PH :9788174244.

ANDIPATTI

2443. ASIR AUTOMOBILES PVT LTD (--01), SURVEY NO. 459/1A1, THENI MAIN ROAD, ANDIPATTI, THENI DISTRICT,TAMILNADU - 625512

ANJUGRAMAM

2444. ATHEN CARS (--01), 994/6A, VARIYOOR, ANJUGRAMAM, AGASTHEESWARAM TALUK, , - 629401

ANNUR

2445. JAIKRISHNAA AUTOSALES PVT LTD (--01), SF NO.266/1B, OTTRAPALAYAM VILLAGE, OPP. TO KG SCHOOL, ANNUR,COIMBATORE (DIST), TAMILNADU - 641653
PH :9788850733.

ANTHIYUR

2446. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), SURVEY NO.495/4, OLD NO.724B, KANCHI THOTTI THOTTAM, BHAVANI MAIN ROAD,ANTHIYUR. - 638501
PH :8754086777.

ARACHALUR

2447. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), SF NO: 63/2, DOOR NO: 19, ST-1, NAGARAJAPURAM, KODUMUDI ROAD, ARACHALUR, ERODE DIST., TAMILNADU-638101. - 638101

ARAKKONAM

2448. GANESH CARS PVT LTD (--01), SURVEY NO. 556A/3, VILLAGE – ICHIPUDHUR, TALUKA – ARAKKONAM, VELLORE. - 631003
PH :9842345399.

ARIYALUR

2449. PILLAI & SONS MOTOR COMPANY (--01), NO.1/1 , NEAR ULAVAR SANTHAI, JAYAMKONDAM ROAD, ARIYALUR (TAMIL NADU). - 621704

ARNI

2450. GANESH CARS PVT LTD (--01), DOOR NO. 1151/3, VELLORE MAIN ROAD, OPPOSITE TO HERO MOTORS SHOWROOM, RATNAMANGALAM BUS STOP, ARNI , THIRUVANAMALAI, TAMIL NADU. - 632301
PH :9585553266.

ARUPPUKKOTTAI

2451. ASIR AUTOMOBILES PVT LTD (--01), SURVEY NO. 205/1, 5/5C, NEHRU NAGAR, ARUPPUKKOTTAI TO MADURAI BYPASS ROAD, ARUPPUKKOTTAI, DIST.-VIRUDHUNAGAR. - 626101
PH :9944059911.

ATTUR

2452. S M CAR PVT LTD (--01), SF NO. 351/10A, SALEM TO CHENNAI BY PASS ROAD, APPAMASAMDURAM, ATTUR, SALEM. - 636108
PH :7094440057.

AVADI

2453. VISHNU CARS PVT LTD (--01), SURVEY NO. 146, 147/1F & 147/G, NO. 17 VILLAGE – KAVARAPALAYAM, CTH ROAD, AVADI, DISTRICT – THIRUVALLUR, CHENNAI, TAMIL NADU - 600054

AVINASHI

2454. SHASHTI CAR PRIVATE LIMITED (--01), SURVEY NO. 373/1E, THEEKU THOTTAM, NALLIGOUNDANPALAYAM, PALANGARAI, KUPOUDAMPALAYAM POST, NH ROAD, AVINASHI EAST, TIRUPPUR DISTRICT, TAMILNADU - 641654
PH :9942903319.

BHAVANI

2455. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--05), NO.5/1072, LAKSHMI NAGAR, NH-47, VASAVI COLLEGE (P.O.), BHAVANI, ERODE (DIST), TAMIL NADU. - 638316
PH :9597385777.

CHENGALPETTU

2456. AIE CARS PVT LTD (--01), PLOT NO. 98/1, PULIPAKKAM VILLAGE, CHENGALPETTU, DISTRICT-KACHEEPURAM, TAMIL NADU. - 603002

2457. AIE CARS PVT LTD (--02), DOOR NO. 41, GST ROAD, PULIPAKKAM, CHANGELPET, TAMILNADU - 603202

CHENGAM

2458. GANESH CARS PVT LTD (--01), SURVEY NO. 293/3A, 3A1,VILLAGE - THUKAPETTAI, CHENGAM, DIST.-TIRUVANNAMALAI. - 606701
PH :7397395289.

CHENNAI

2459. ABT LIMITED (1401-14-01), # 355-A, GST ROAD, ALANDUR, CHENNAI, TAMILNADU - 600032

2460. KHIVRAJ MOTORS PVT LTD (1404-14-01), 623 MOUNT ROAD, CHENNAI - 600006
PH :9043014530.

2461. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-01), 16 & 17 INDUSTRIAL ESTATE, AMBATTUR, CHENNAI - 600058
PH :9952000089.

2462. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-02), NO.17, LATTICE BRIDGE ROAD, ADYAR, CHENNAI - 600020

2463. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-02), OLD NO.155, NEW NO.123, PONRANJITHAM COMPLEX, MEDAVAKKAM MAIN ROAD, NEAR BUS TERMINUS, KEEKATTALAI, CHENNAI - 600117

2464. ABT LIMITED (1401-14-05), A/A2, BHARANI STUDIO COMPLEX, DR. BHANUMATHI KRISHNA ROAD,22, ARCOT ROAD, SALIGRAMMAM, CHENNAI - 600093

2465. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-03), 4/321, OLD MAHABALIKPURAM RD. , KOTTIVAKKAM, CHENNAI - 600040

2466. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-01), NEW DOOR NO.256 (OLD DOOR NO. 93), ARCOT ROAD, VIRUGAMBAKKAM, CHENNAI, TAMIL NADU-600092 - 600093

2467. ABT LIMITED (1401-14-07), NO. 422, KOLAPERUMAL SCHOOL STREET, POONMA MALLE HIGH ROAD, CHENNAI - 600106

2468. CRESCO ( A UNIT OF NEXGEN VENTURES PVT LTD) (1493-14-01), 5,THIRUMURUGAN ST, KOYAMBEDU, CHENNAI - 600107
PH :7305087055.

2469. ABT LIMITED (1411-14-01), 29, WALLES ROAD, OPP. ALBERT THEATER, EGMORE, AMBATTUR, CHENNAI - 600058

2470. VISHNU CARS PVT LTD (1427-14-02), 176/1, LUZ CHURCH ROAD, NEAR KAMADHENU THEATRE MYLAPORE, CHENNAI - 600004

2471. VISHNU CARS PVT LTD (1427-14-01), NO. 91, GST ROAD, ALWITONE ESTATE, BEHIND LAXMI THEATRE, PALLAVARAM, CHENNAI - 600043

2472. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-03), NO. 3, 200 RING ROAD, RETTERI JUNCTION, RETTERI , CHENNAI - 600099

2473. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403-14-05), PLOT NO.- 80, BABU JAGAGEVAN RAM STREET, GERUGAMBAKKAM, CHENNAI - 600112
PH :9952000079.

2474. KHIVRAJ MOTORS PVT LTD (1404-14-03), SURVEY NO. A1& A2, SIDCO INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032
PH :7299971978.

2475. ABT LIMITED (1401-14-0D), NO.2/170, ECR ROAD, INJAMBAKKAM, CHENNAI TAMIL NADU. - 600041

2476. AIE CARS PVT LTD (1496--01), PLOT NO.1,2,3 & 4, SURVEY NO.91/2, B1, A2 & B, NEELANKARAI, EAST COAST ROAD, CHENNAI - 600115

2477. RAJALAKSHMI CARS PVT LTD (1486--01), OLD DOOR NO.69, NEW DOOR NO.20,GRAND NELLORE TRUNK ROAD, MADHAVARAM, CHENNAI . - 600060

2478. KHIVRAJ MOTORS PVT LTD (1480--02), PLOT NO.119 & 120, ELECTRICAL & ELECTRONICS INDUSTRIAL ESTATE, PERUNGUDI, CHENNAI - 600096

2479. ABT LIMITED (1401--0E), NO. 1/132, RAJEEV GANDHI SALAI, SHOLINGANALLUR, DISTRICT – CHENNAI, TAMIL NADU. - 600119

2480. VISHNU CARS PVT LTD (1427-14-03), 4/13 LOYAL GARDEN, KALAHATHAMMAN KOVIL STREET, RAMAPURAM, CHENNAI, TAMIL NADU. - 600089

2481. VISHNU CARS PVT LTD (1487-14-01), NO.203 TO 206 MOUNT POONAMALLE ROAD, KATTUPAKKAM, CHENNAI - 600056
PH :9677127432.

2482. VISHNU CARS PVT LTD (1487-14-02), NO.120, MAMBAKKAM MAIN ROAD, MEDAVAKKAM, CHENNAI - 600100

2483. VISHNU CARS PVT LTD (1427-14-04), NEW S. NO. 314/1B1A, PALLAVARAM – THORAIPAKKAM RADIAL ROAD, NEAR OLD CHETTINADU CEMENT GOWDOWN, KEELAKATTALAI, CHENNAI. - 600117
PH :9940057775.

2484. VISHNU CARS PVT LTD (1427--06), PLOT NO. 4, MORISON 4 STREET, ALANDUR, CHENNAI. - 600016

2485. RAJALAKSHMI CARS PVT LTD (1486--02), OLD NO. 27, NEW NO. 22A, ALAPAKKAM MAIN ROAD, MADURAVOYAL, CHENNAI. - 600095

2486. CRESCO ( A UNIT OF NEXGEN VENTURES PVT LTD) (1493--03), PLOT NO. G30, 3RD MAIN ROAD, 9TH STREET, AMBATTUR INDUSTRIAL ESTATE, DIAGONALLY TO TELEPHONE EXCHANGE, CHENNAI. - 600058
PH :7305087033.

2487. POPULAR VEHICLES AND SERVICES LIMITED (--06), PLOT NO. 10, NEW SURVEY NO. 88/1A1, 88/1C, 88/1B & 88/2B, NOOMBAL MAIN ROAD, VANAKARAM, CHENNAI. - 600077

2488. AIE CARS PVT LTD (1496-14-02), PLOT NO. L-1 SIDCO INDUSTRIAL ESTATE, VILLIVAKKAM, CHENNAI, TAMIL NADU. - 600049

2489. VISHNU CARS PVT LTD (1427-14-07), SURVEY NO. 19/1A2, 83/18, DOOR NO. 113, NEAR PARIMALAM THEATER, KUNDRATHUR MAIN ROAD, MANNADY THALAI, NALLUR, SAMBA THALAI, MOONRAMKATTALAI VILLAGE, ONDI COLONY, KUNDRATHUR, CHENNAI. - 600069

2490. VISHNU CARS PVT LTD (-14-08), SURVEY NO. 62/2B, DOOR NO. 1/63, AGARAM MAIN ROAD, THIRUVANCHERRY VILLAGE, TAMBARAM TALUK, SELAIYUR, KANCHIPURAM DIST., CHENNAI , TAMIL NADU. - 600073
PH :8056260022.

2491. ABT LIMITED (1401-14-10), S. NO: 32/2, NANDAMBAKKAM, PADMINI GARDEN, CHENNAI - 600089, TN.. - 600089

2492. VISHNU CARS PVT LTD (1488-14-01), DOOR NO. 8, NP INDUSTRIAL ESTATE, JAWAHARLAL NEHRU ROAD, EKKATUTHANGAL, CHENNAI,TN - 600032
PH :7550360444.

2493. KHIVRAJ MOTORS PVT LTD (1404-14-G1), SURVEY NO:76/A, NO:27, PLOT NO. D-2, KEELAKOTTAYUR, VANDALUR TO KELAMBAKKAM MAIN ROAD, MAMBAKKAM, CHENGALPET, CHENNAI,TN - 600127
PH :9841591558.

2494. POPULAR VEHICLES AND SERVICES LIMITED (1410-14-G1), SURVEY NO: 18/1B2A1A, NAZARATHPET VILLAGE, POONAMALLE, CHENNAI,TAMIL NADU- 600123 - 600123
PH :7994449644.

2495. ABT LIMITED (1401-14-11), OLD SURVEY NO: 84/1A & 85/1A, NEW TOWN SURVEY NO:1, RACE COURSE ROAD, GUINDY, CHENNAI, TAMILNADU - 600032
PH :9994437421.

2496. CRESCO ( A UNIT OF NEXGEN VENTURES PVT LTD) (-14-05), NO. 273,( OLD NO.191), TAMBARAM- VELACHERY MAIN ROAD, NARAYANAPURAM, PALLIKARANI, CHENNAI,TN - 600100

2497. POPULAR VEHICLES AND SERVICES LIMITED (1410--07), NEW S.NO:2/7B,3/2A3B,3/7B & 4/8B ( OLD S. NO:2/1B, 3/2,3/3B, 4/4) ,SEMBIUM- RED HILLS ROAD, NEAR AMBEDKAR STATUE, KATHIRVEDU, AAMBATTUR TALUK, THIRUVALLUR DIST., CHENNAI, TN-600066 - 600066

2498. INDUS MOTOR COMPANY PRIVATE LIMITED (1495-14-01), 51/1A,DOOR NO:6, NEARBY CHENNAI TRADE CENTRE, MOUNT POONAMALLE ROAD, NANDAMBAKKAM, CHENNAI, TAMILNADU-600089. - 600089
2499. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (--01), NO:503/1, GNT ROAD, THANDALKAZHANI, PUZHAL, REDHILLS, CHENNAI, TN-600066 - 600066
2500. ABT LIMITED (1401-14-12), SURVEY NO # NO: 27, VELACHERRY MAIN ROAD, RAM NAGAR NORTH, MADIPAKKAM, CHENNAI, TAMILNADU-600091 - 600091
2501. AIE CARS PVT LTD (1496-14-03), SURVEY NO: 160/2A,160/1C, 160/2A1 A2 &160/2B2, KRISHNA NAGAR, MUDICHUR ROAD, WEST TAMBARAM, TAMBARAM TALUK, CHENGALPET DISTRICT, CHENNAI, TAMILNADU-600045. - 600045
2502. VISHNU CARS PVT LTD (1427-14-09), SURVEY NO:44/1,44/1B1A &44/1A1A, RAJESH NAGAR, IRUMBULIYUR VILLAGE, SERVICE ROAD-MADURAVOYIL BYPASS, WEST TAMBARAM, CHENNAI, TAMILNADU - 600045
2503. CRESCO ( A UNIT OF NEXGEN VENTURES PVT LTD) (1493-14-06), G-17, 1ST MAIN ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI, TAMILNADU-600058 - 600058

CHETPET

2504. GANESH CARS PVT LTD (--01), DOOR NO: 35/C, CHETPET TOWN, CHETPET TALUKA, TIRUVANNAMALAI DIST.,TAMILNADU, - 606801

CHEYYAR

2505. GANESH CARS PVT LTD (--01), NO.16, KANCHEEPURAM ROAD, CHEYYAR, TIRUVANNAMALAI DISTT. - 604407
PH :9787669339.

CHIDAMBARAM

2506. VISHNU CARS PVT LTD (--01), SURVEY NO. 102/2 & 102/5, BHUVANAGIRI MAIN ROAD, KEERAPALAYAM, CHIDAMBARAM TOWN, CUDDALORE, TAMIL NADU. - 608602

CHINNAMANUR

2507. ABT LIMITED (--01), SF NO. 446 /1A, WARD A, BLOCK-2, TS NO.8/15, PERIYAKULAM TO CHINNAMANUR MAIN ROAD,KEELAPOOLANANDHAPURAM, CHINNAMANUR MUNICIPAL TOWN & TALUK, THENI DIST.,TN- 625515 - 625515
PH :9715863213.

COIMBATORE

2508. ABT LIMITED (4101-41-06), 744, PULIYAKULAM ROAD, P.N. PALAYAM, COIMBATORE - 641037
PH :9944400987.
2509. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-01), IYER HOSPITAL PREMISES, TRICHY ROAD, COIMBATORE - 641005
PH :8220862666.
2510. ABT LIMITED (4101-41-05), LAKSHMI THEATRE BUILDING, T.S. NO. 1199/2, TS WARD NO. 3, KEMPATTY COLONY, SOUTH UKKADAM, COIMBATORE - 641001
2511. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-03), 555, NSR ROAD, SAIBABA COLONY, COIMBATORE - 641011
PH :9047055667.
2512. ABT LIMITED (4101-41-08), 15/55-C, ALAGESAN ROAD (EAST), METTUPALAYAM ROAD, COIMBATORE - 641043
2513. JAIKRISHNAA AUTOSALES PVT LTD (4107-41-01), 8/60-C&8/62-D, METTUPALAYAM ROAD, G.N.MILLS POST , NEARJOHNBOSCO CHURCH,COIMBATORE - 641029
2514. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-07), NO 44, KANNUSAMY GOUNDER STREET, OORGOUNDER THOTTAM, SANGANUR, COIMBATORE - 641027
PH :9655219900.
2515. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-08), SF-94, SATHY MAIN ROAD, VISWASAPURAM, SARAVANNAMPATTI, COIMBATORE, - 641013
PH :9585877775.
2516. JAIKRISHNAA AUTOSALES PVT LTD (4107-41-02), DOOR NO. 48, KAMARAJAR ROAD, LAKSHMIPURAM, PEELAMEDU, COIMBATORE, TAMIL NADU - 641004
2517. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-0D), 98/1 VILANKURICHI MAIN ROAD, THANEER PANDAL ROAD, COIMBATORE - 641004
PH :9655345775.
2518. AADHI CARS PVT LTD (4108--01), SURVEY NO.469/2,DOOR NO: 46-2,SATHY MAIN ROAD, RAMAKRISHNAPURAM, GANAPATHY, COIMBATORE - 641035
2519. ABT LIMITED (4101-41-0D), 36-A GANDHI NAGAR, SUNDARAPURAM, COIMBATORE (DIST) COIMBATORE - 641024
2520. AADHI CARS PVT LTD (4108--02), NEAR KOVAI MEDICAL CENTRE & HOSPITAL, AVINASHI ROAD, CIVIL AERODROME POST, CHINNIYAMPALAYAM, COIMBATORE - 641004
2521. AADHI CARS PVT LTD (4108-41-03), NO.71, OLD SRIRAM THEATRE COMPLEX, MARUDHA MALAI MAIN ROAD, VADAVALLI, COIMBATORE - 641041
2522. AADHI CARS PVT LTD (4108-41-04), PLOT NO.295, RADHA RANI THEATER COMPLEX, NEAR JAYASHANTHI THEATER, TRICHY ROAD, ONDIPUDUR, COIMBATORE-. - 641005
2523. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103--0E), PLOT NO. 210, PALAKAD ROAD, BK PUDUR, COIMBATORE, TAMIL NADU. - 641008
2524. AADHI CARS PVT LTD (4108-41-06), SF NO. 14/78-A, RENUKA SHELTERS, VILANKURICHI MAIN ROAD, KALAPATTI, COIMBATORE, TAMIL NADU-641048. - 641006
PH :8754045840.
2525. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103--11), PLOT NO. 1, RAJA STREET, KALLIMADAI, NANJAPPA NAGAR, COIMBATORE, TAMIL NADU - 641005
PH :9344870035.
2526. AADHI CARS PVT LTD (4108-41-07), SF NO: 404/1, VAIKALPALAM, PERUR MAIN ROAD, PERUR, COIMBATORE,TAMILNADU-641010 - 641010
2527. ABT LIMITED (4101-41-12), D.NO 13/7-I THONDAMUTHUR ROAD, BOMMANAPALAYAM, PN PUDUR - 641041
2528. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-12), 313/1H1, KARASAKADU THOTTAM, GANESH NAGA MALLUMICHAMPATTI, POLLACHI MAIN ROAD - 641001

COONOOR

2529. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), 78 E, BRINDAVAN SCHOOL ROAD, CONOOR, NILGRIS DIST- TN - 643102

CUDDALORE

2530. ABT LIMITED (--01), K. V. SUBRAMANIAM NAGAR, CHIDAMBARAM MAIN ROAD, CUDDALORE O. T - 607003
2531. VISHNU CARS PVT LTD (--01), SURVEY NO. 35/8, 35/8A, 35/21, 35/6, 35/6A1A, 35/20, VILLAGE - PERIYA KANANGAKUPPAM, CUDDALORE - 607001
PH :7338884131.

CUMBUM

2532. MEENAKSHI AUTO ZONE PVT LTD (--01), PATTA NO. 4388, SURVEY NO. 1003/2 & 1003, VILLAGE - UTHAMAPURAM, SUB DIST.-CUMBUM, TAMIL NADU. - 625516
PH :9940094881.

DENKANIKOTTAI

2533. SRI AMMAN CARS INDIA PVT LTD (--01), SURVEY NO:766/ 1B11, THABILAGOUNDAN THOTTI, DENKANIKOTTAI , KRISHNAGIRI DISTRICT, TAMILNADU - 635107
PH :9585599935.

DEVAKOTTAI

2534. SIVA AUTOMOTIVE TRADING PVT LTD (--01), SURVEY NO. 5/1A, MULL IGUNDU (SOMANENTHAL VILLAGE), DEVAKOTTAI TALUK, SIVAGANGAI DISTRICT,TAMILNADU - 630303
PH :7094688870.

DHARAPURAM

2535. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--04), OPP. TO ANJANEYAR TEMPLE, NEAR FIVE CORNER, MADURAI ROAD, DHARAPURAM - 638656
PH :9597550777.
2536. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), SF 134/4A3, DINDIGUL BYPASS ROAD, NEAR INDIAN OIL PETROL PUMP, DHARAPURAM TOWN AND TALUKA, TIRUPPUR DIST,, TAMILNADU-638656 - 638656
PH :9787853000.

DHARMAPURI

2537. SRI AMMAN CARS INDIA PVT LTD (--02), NEAR COLLECTOR BUNGALOW, OLD HOSUR ROAD, JETTIHALLI (PO), DHARMAPURI , TAMILNADU - 636807

DINDIGUL

2538. PL.A. MOTORS FIRM (--01), NO. 5, TRICHY MADURAI BY PASS ROAD, NH-45, DINDIGUL - 624001
PH :7010075200.

EDAYARPALAYAM, COIMBATORE

2539. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), SITE NO. 2, SY. NO. 404/1A1, THADAGAM ROAD, TVS NAGAR, EDAYARPALAYAM, COIMBATORE. - 641025
PH :9047081914.

ERODE

2540. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), 23/1, PERUND, URAI ROAD, ERODE, - 638011
PH :9677987777.
2541. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--06), SURVEY NO. 1363/3, 1363/5, 1363/6, BEHIND MANIKAVASAKAR COLONY BUS STOP, OPPOSITE TO CANARA BANK, KARUR BYPASS ROAD, SOLAR, ERODE. - 638002
PH :6385805777.
2542. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (--01), OLD G.S. NO. 337 (1 TO 4), RS NO. 259/11A,10,9,8,, SATHY ROAD, PERIYA SEMUR VILLAGE, ERODE,TAMILNADU - 638003
PH :9171791991.
2543. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--08), RF. NO. 17/1, 2, CAVERI ROAD, KARUNGALPALAYAM, ERODE ,TAMILNADU - 638003
PH :8098825000.
2544. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--09), SF:N0:245, KANDHAIYAN THOTTAM, SOOLAI, SATHY ROAD, VEERAPPANCHATTIRAM, ERODE, TAMILNADU - 638004
PH :9655240486.

2545. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (--02), R.S. NO:1098/3, VINAYAGAR KOVIL STREET, TELEPHONE NAGAR, POONDURAI MAIN ROAD, ,ERODE, TAMILNADU - 638002
PH :9626671444.

GANGAVALI

2546. THRIVENI CAR COMPANY PVT LTD (--01), SURVEY NO # SF NO. 22/3A1A,106 ATTUR MAIN ROAD,GANGAVALLI,SALEM, TN - 636105
PH :9159722999.

GOPICHETTIPALAYAM

2547. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--03), NO. 318, CUTCHERY, GOBICHETTIPALAYAM - 638476
PH :9597560777.

GUDALUR

2548. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), 12/294 B6- B9, SURVEY NO:297/3A, SULTHAN BATHERY- DEVARSHOLA- GUDALUR ROAD, GUDALUR, NILGIRIS, TN- 643212 - 643212

GUDIMANGALAM

2549. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), SURVEY NO 347 7 347/1, GUDIMANGALAM, TAMIL NADU - 642201

GUDIYATHAM

2550. GANESH CARS PVT LTD (--01), SURVEY NO.250/1, NEAR NH-75, GANDHI NAGAR, SETHUVADAI, GUDIYATTAM. - 653803

GUDUVANCHERY

2551. VISHNU CARS PVT LTD (--01), 52, THAILAVARAM VILLAGE, BEHIND HOTEL PATTIKADU, GUDUVANCHERRY, KANCHEEPURAM DISTT. - 603203

GUMMIDIPOONDI

2552. RAJALAKSHMI CARS PVT LTD (--01), PLOT NO. F-13, SURVEY NO. 262/2, SIPCOT INDUSTRIAL COMPLEX, VILLAGE – PAPPANAKUPPAM, GUMMIDIPONNDI, THIRUVALLUR - 601201

HARUR

2553. SRI AMMAN CARS INDIA PVT LTD (--01), 429/9, HARUR SALEM MAIN ROAD, HARUR POST, DHARMAPURI, TAMIL NADU - 636903

HOSUR

2554. SRI AMMAN CARS INDIA PVT LTD (--01), P.O.-PERANDAPALLI,NH-7, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109

IDAPPADI

2555. THRIVENI CAR COMPANY PVT LTD (--01), SURVEY NO.330/3B1B, AVANI PERUR KILMUGAM VILLAGE, IDAPPADI DISTT. SALEM - 637101
PH :9003311488.

KALLAKURCHI

2556. ABT LIMITED (--01), SURVEY NO. 215/4,NEAR AKT SCHOOL, DURUGAM ROAD, NEAR DOORDARSHAN BLDG, NEELAMANGALAM VILLAGE., KALLAKURICHI TALUK & DIST., TAMILNADU - 606202
PH :9047514890.

2557. S M CAR PVT LTD (--01), SF: 31/3B, NO. 19 EMAPPER VILLAGE, KALLAKURICHI, TAMILNADU - 606213
PH :7094440010.

KANCHEEPURAM

2558. GANESH CARS PVT LTD (--02), ANBU NAGAR, DHIMMA SAMUDRAM POST, NEAR VELLA GATE, CHENNAI BANGALORE NH-4, KANCHEEPURAM - 631502
PH :9842306061.

KANGAYAM

2559. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), NO. 407/263, TIRUPPUR ROAD, KANGAYAM TALUK & TOWN, TIRUPPUR DIST. ,TAMIL NADU. - 638701
PH :7708531777.

KARAIKUDI

2560. ABT LIMITED (4202--05), 42-43 KOVILOOR ROAD, OPP. TNSTC DEPOT - 630302

2561. SIVA AUTOMOTIVE TRADING PVT LTD (--01), NO. 73, SUBRAMANIYAPURAM 9TH STREET, COLLEGE ROAD, KARAIKUDI, SIVAGANGA DIST, TAMILNADU-630002 - 630002
PH :7402710000.

KARUMATHAMPATTI

2562. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), SF: NO.281/B, NEAR BHARAT PETROL BUNK, VILLAGE - VAGUTHANKADU, SOMANUR ROAD, KARUMATHAMPATTI TOWN, TALUK-PALLADAM, DISTT. COIMBATORE. - 641659
PH :9159210008.

KARUNGAL

2563. ATHEN CARS (--01), SURVEY NO. 639/5, KARUNGAL TOWN, VILAVANCODE TALUK, KANYAKUMARI DISTRICT, TAMILNADU - 629157
PH :7094434179.

KARUR

2564. ABT LIMITED (--01), SF NO. 529/1, SALEM BY PASS,ROAD, VENGAMEDU CIRCLE, SEMMADAI - 639002

KATPADI

2565. GANESH CARS PVT LTD (--04), 170/2B THIRUVALLAM ROAD, ARUMPARUTHI VILLAGE, KATPADI, VELLORE DISTT. - 632004
PH :9842313139.

KATTUMANNARKOIL

2566. VISHNU CARS PVT LTD (--01), SURVEY NO. 6& 7, PERIYAKULAM VADA KARAI, OPP TO GNANAVINAYAGAR KOIL, KATTUMANNARKOIL TOWN AND TALUK, CUDDALORE DIST., TAMILNADU - 608301
PH :7358004555.

KAWALKINARU

2567. AADHI CARS PVT LTD (--01), SURVEY NO:1943/1, SURESH COMPLEX, KANYAKUMARI BYEPASS ROAD, KAVALKINARU JUNCTION, KAVALKINARU (VADAKANKULAM), TIRUNELVELI, - 627105
PH :7339111259.

KELAMBAKKAM

2568. CRESCO ( A UNIT OF NEXGEN VENTURES PVT LTD) (--01), AGP MAHAAL, SURVEY NO.43, OMR, 60 FEET VEERANAM HIGH ROAD, PADUR, KELAMBAKKAM, CHENGALPATTU DISTRICT, TAMIL NADU - 603103
PH :7305087002.

KINATHUKADAVU

2569. AADHI CARS PVT LTD (--01), NO.212, KAMARAJ NAGAR, SOLAVALAM PALAYAM PANJAAYATH, KINATHUKADAVU DISTT. COIMBATORE (T.N.) - 642109

KODUMUDI

2570. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), SURVEY NO.548/A, KARUR MAIN ROAD, NEAR BUS STAND, KODUMUDI. - 638151
PH :8754576777.

KOTAGIRI

2571. AADHI CARS PVT LTD (--01), SURVEY NO.89/79, OOTY MAIN ROAD, KOTAGIRI, DISTT. NILGIRIS, TAMIL NADU. - 643217

KOVILPATTI

2572. ASIR AUTOMOBILES PVT LTD (--01), OLD NO.1, NEW NO.13, SATTUR MAIN ROAD, KOVILPATTI (TAMIL NADU) - 628501

KRISHNAGIRI

2573. SRI AMMAN CARS INDIA PVT LTD (--03), NH-7,NR. AAVIN DAIRY,MOTTUR,SALEM BYE PASS ROAD, KRISHNAGIRI, TAMILNADU - 635001

KULASEKHARAM

2574. ATHEN CARS (--01), ITE NO : 409/17A – ARANIVILAI, NEAR RANGE OFFICE, CONVENT ROAD – KULASEKARAM, KALKULAM –TALUK,KANIYAKUMARI DIST. TN - 629161
PH :7094471569.

KUMBAKONAM

2575. PILLAI & SONS MOTOR COMPANY (--02), 369/2 B, KUMBAKONAM CHENNAI MAIN ROAD, KUMBAKONAM , TANJAVUR - 612501

2576. PILLAI & SONS MOTOR COMPANY (--06), D. NO. HP-1, GOVT. INDUSTRIAL ESTATE, SIDCO, THIRUBHUVANAM TOWN & POST, KUMBAKONAM, THANJAVUR DISTRICT, TAMILNADU - 612103
PH :8489900136.

2577. PL.A MOTORS (--01), 139/2, 139/3, VELAPETTAI AGRAHARAM, CHENNAI BYPASS ROAD, KUMBAKONAM - 612501

LALGUDI

2578. PILLAI & SONS MOTOR COMPANY (--01), SURVEY 98/4, ANGARAI VILLAGE, LALGUDI TALUK, TIRUCHIRRAPALLI VILLAGE,LALGUDI,TAMIL NADU - 621601

MADATHUKULAM

2579. ABT LIMITED (--01), SF NO:143/A2D, 143/A2B, NO-88,SY. NO. NH 209, NEAR UNION OFFICE, AGRAHARAKKANNADIPUTHUR VILLAGE,UDUMALAI MAIN ROAD, MADATHUKULAM, TIRUPPUR DIST,TN - 642113

MADURAI

2580. ABT LIMITED (4202--02), MADURAI-DINDIGAL BYE PASS ROAD,NEAR FATHIMA COLLEGE,MADURAI - 625018

2581. ABT LIMITED (4202-42-04), 09, 109A, GST ROAD, TIRUPARANKUNDRAM, MADURAI - 625005
PH :9600966164.

2582. SIVA AUTOMOTIVE TRADING PVT LTD (4205--01), 2C, GATE LOCK ROAD, NEAR NEW RAMNAD ROAD, MADURAI - 625016
PH :7402780000.

2583. ASIR AUTOMOBILES PVT LTD (4206--01), 9, CHAMBAKULAM, MELUR MAIN ROAD, MATTUTHAVANI, MADURAI, TAMIL NADU - 625007
PH :9944059911.

2584. SIVA AUTOMOTIVE TRADING PVT LTD (4205--02), NO. 6-A, TPK ROAD, NEAR SAIBABA TEMPLE, ANDALPURAM, MADURAI. - 625003

2585. MEENAKSHI AUTO ZONE PVT LTD (4207--01), PLOT NO. 25 D, SIDCO INDUSTRIAL ESTATE, KAPPALUR, MADURAI, TAMIL NADU. - 625008
PH :9442799581.

2586. MEENAKSHI AUTO ZONE PVT LTD (4207-42-02), SURVEY NO. 238/2A, PLOT NO. 36, 37, 38, TALLAKULAM VILLAGE, SIVAGAMI NAGAR, NATHAM MAIN ROAD, MADURAI - 652014
PH :9940224881.

2587. SIVA AUTOMOTIVE TRADING PVT LTD (4205-42-03), PATA NO. 615, SURVEY NO. 32/2, 32/4, THENI MAIN ROAD, ACHAMPATHU, MADURAI, TN - 625019
PH :7402738888.

MADURANTHAKAM

2588. AIE CARS PVT LTD (--01), SURVEY NO. 38/3 A2B, NH-45, MADURANTHAKAM, KANCHIPURAM. - 603306

MALLASAMUDRAM

2589. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), SF NO. 194/3C, MALLASAMUDRAM MAIN ROAD, MALLASAMUDRAM TOWN, TIRUCHENGODE TALUK, NAMAKKAL DIST., TAMIL NADU. - 637503
PH :9894932019.

MALLUR

2590. THRIVENI CAR COMPANY PVT LTD (--01), SURVEY NO.50/4A, AMANI AMMAPALAYAM VILLAGE, DISTT.: DADHAGAPATTY SUB REGISTRATION , MALLUR DISTT. SALEM - 636309

MANAMADURAI

2591. ABT LIMITED (--01), NO. 35, OLD RAMNAD ROAD, MANAMADURAI TOWN, DISTRICT – SIVGANGAI. - 630606
PH :9994450331.

MANAPPARAI

2592. PILLAI & SONS MOTOR COMPANY (--01), PLOT NO.262, TRICHY DINDIGUL BYPASS ROAD, VENGAIKURUCHI VILLAGE,MANAPPARAI, TRICHY,TN - 621307
PH :8489900908.

MANGALAPURAM

2593. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), DOOR NO. 1/518, SURVEY NO. 75/1, ATTUR MAIN ROAD, MANGALAPURAM (POST), TALUK – RASIPURAM, DISTRICT – NAMAKKAL. - 636202
PH :7094447871.

MANNARGUDI

2594. PILLAI & SONS MOTOR COMPANY (--01), NO. 37, THIRUTHURAIPOONDI ROAD, MANNARGUDI, THIRUVARUR DISTRICT, TAMIL NADU. - 614001
PH :7094411675.

MAYILADUTHURAI

2595. PILLAI & SONS MOTOR COMPANY (--04), 46,VELLALAGARAM VILLAGE, MAYILADUTHURAI, TAMILNADU - 609007

MECHERI

2596. S M CAR PVT LTD (--01), SURVEY NO. 139A/5, PATTA NO. 653, AMANI M.KALIPATTY VILLAGE, MECHERI TOWN, METTUR TALUK, SALEMN DIST., TAMIL NADU. - 636453
PH :7094440010.

MELUR

2597. SIVA AUTOMOTIVE TRADING PVT LTD (--01), OLD SN. 138/1, SURVEY WARD C, BLOCK NO. 1, T.S. NO. 21/7, VILLAGE AND TOWN – MELUR, MELUR , DIST.-MADURAI. - 625109
PH :8098120000.

METTUPALAYAM

2598. ABT LIMITED (4101--0C), PLOT NO. 6 TO 9,PONVIZHA NAGAR, KARAMADAI KOVAI MAIN ROAD, METTUPALAYAM - 641043

METTUR

2599. THRIVENI CAR COMPANY PVT LTD (--01), S.F. NO. 73/7A3C, METTUR TO BHAVANI ROAD, NEAR NATAMANGALAM BUS STOP, MADHAIYANKUTTAI (PO), METTUR TALUK, SALEM, TAMILNADU - 636452
PH :9159566999.

MINJUR

2600. RAJALAKSHMI CARS PVT LTD (--01), PLOT NO. 27, SRI JANAKI RATHINA NAGAR, VILLAGE AND TOWN – MINJUR, PONNERI – 601 203, DISTRICT – THIRUVALUR. - 601203

NAGAPATTINAM

2601. PILLAI & SONS MOTOR COMPANY (--01), NO.181, KEELA ANTHANAPETTAI, ANTHANAPETTAI, P.O. - MANJAKOLLAI, PUTHUR, NAGAPATTINAM DISTT. TAMIL NADU - 611106
PH :4365220250.

NAGERCOIL

2602. ATHEN CARS (--01), RESURVEY NO. G.3/9-7, BUILDING NO. 254-A/3 & 4 K.P ROAD ,PARAVATHIPURAM, NAGERCOIL ,KANYAKUMARI DISTRICT TAMILNADU - 629003
PH :8012029777.

2603. ATHEN CARS (--02), SURVEY NO. 54/1,2,4,6 & 11 KOTHAIGRAMAM OZHUGINASERY, THERAKALPUTHUR VILLAGE, NAGERCOIL, KANYAKUMARI DISTRICT, TN-629001 - 629001

2604. AADHI CARS PVT LTD (--05), PLOT NO. 14, INDUSTRIAL ESTATE, KONAM, NAGERCOIL, PIN-629004 - 629003

NAMAKKAL

2605. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), SURVEY NO. 1/10-11, NEAR MURUGAN TEMPLE, SALEM ROAD, NAMAKKAL - 637001
PH :937164888.

2606. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--03), 1/412/1 NEAR PON NAGAR, MUDALAIPATTY, SALEM ROAD, NH-7, NAMAKKAL (TAMIL NADU) - 637001
PH :737192888.

NANGUNERI

2607. AADHI CARS PVT LTD (--01), DOOR NO: 38 / 1, BHASKAR NAGAR, THAMBUPURAM, NANGUNERI, TIRUNELVELI DISTRICT. PIN: 627108 - 627108

NATRAMPALLI

2608. GANESH CARS PVT LTD (--01), NO:8/12-1, NEAR ARJUNA SULOCHANA MAHAL, BENGALURU-CHENNAI MAIN ROAD,VELAKALNATHAM, NATRAMPALLI, TIRUPATTUR DIST. TAMIL NADU - 635854. - 635854

NAZARETH

2609. ASIR AUTOMOBILES PVT LTD (--01), OLD NO. 49B, 49C & 49D, NEW NO. - 194, 195 & 196, CHURCH STREET, NAZARETH, TUTICORIN DIST. TN– 628617 - 628617

NEGAMAM

2610. ABT LIMITED (--01), 68, 69, ABT BUS STAND, PALLADAM ROAD, PERIA NEGAMAM, POLLACHI, TAMIL NADU - 642120

NEYVELI

2611. VISHNU CARS PVT LTD (--01), SURVEY NO:545/2A1A, NH-45C, OPP. NATIONAL COLLEGE,KUMBAKONAM - CHENNAI HIGH WAY, NEAR NEYVELI ARCH GATE, NEYVELI T.S, KEELAKOLLAI, MARUNGUR POST,PANRUTI,CUDDALORE DISTRICT, TAMILNADU - 607103
PH :9384059575.

OMALUR

2612. SRI AMMAN CARS INDIA PVT LTD (--04), 123, 3B, NH-7, BANGALORE BYE PASS ROAD, KOTTAMETTUPATTI, OMALUR, SALEM (DIST.), TAMIL NADU - 636012

2613. THRIVENI CAR COMPANY PVT LTD (--01), PLOT NO. 44 & 45, PALANIYAPPA NAGAR LAYOUT, NH-7, KAMALAPURAM VILLAGE, OMALUR, DISTRICT – SALEM, TAMIL NADU - 636309

OOTY

2614. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103--05), VIJAYANAGARAM FARM ROAD, NEAR ROSE GARDEN, OOTY - 643001

PADAPPAI

2615. VISHNU CARS PVT LTD (--01), SURVEY NO.368/2A/1, 368/2A/2, VANDALLUR-WALAJABAD MAIN ROAD, PADAPPAI EAST, CHENNAI. - 601301
PH :8754417168.

PALACODE

2616. SRI AMMAN CARS INDIA PVT LTD (--01), SURVEY NO 620/1A2, 620/1A2B,KARAKHATHAHALLI VILLAGE, PALACODE,DHARMAPURAM DISTRICT,TAMIL NADU - 636808

PALANI

2617. PL.A MOTORS (--02), NO:13-1-11C-1, WEST AYAKUDI, DINDIGUL ROAD, PALANI, DINDIGUL DISTRICT, TAMIL NADU - 624613

PANRUTI

2618. VISHNU CARS PVT LTD (--01), SURVEY NO: 87/4, 87/7 R V NAGAR, LAKSHMI NARAYANAPUR AM VILLAGE-PANRUTI - 607106

PARAMATHIVELUR

2619. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), SURVEY NO. 171, NEAR KONGU SCHOOL, NAMAKKAL BYPASS ROAD, PADAMUDI PALAYAM, TALUKA – PARAMATHIVELUR, NAMAKKAL , TAMIL NADU. - 638182
PH :8870666599.

PATTUKKOTTAI

2620. PILLAI & SONS MOTOR COMPANY (--01), SURVEY NO. 85/6, 85/4, 84/6, DOOR NO.314/11, SRI JANAGALAKSHMI NAGAR, THANJAVUR ROAD, ALADIKUMULAI VILLAGE, TALUK PATTUKOTTAI, THANJAVUR. - 614615
PH :7094433074.

PAVITHRAM

2621. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), SURVEY NO. 102/1B, NAMAKKAL MAIN ROAD, PAVITHRAM - 637021
PH :9600320888.

PENNAGARAM

2622. SRI AMMAN CARS INDIA PVT LTD (--01), SURVEY NO. 419/1, VILLAGE – PARUVADHANAALLI, PENNAGARAM, DHARMAPURI. - 636810
PH :9715044700.

PERAMBALUR

2623. PL.A MOTORS (2305--04), SURVEY NO.88/1, A3,NH45, ELAMBALUR VILLAGE, PERAMBALUR, TAMILNADU - 621212
PH :8870004960.

PERNAMBUT

2624. SRI AMMAN CARS INDIA PVT LTD (--01), SURVEY NO:708,PLOT NO: 87,88 & 89, PERNAMBUT TO GUDIYATTAM ROAD, PERNAMBUT,VELLORE DISTRICT, TAMIL NADU - 635810 - 635810
PH :7094403100.

PERUMBAKKAM

2625. KHIVRAJ MOTORS PVT LTD (--01), NO:1,VARALAKSHMI NAGAR, THIRUVALLUR ROAD, PERAMBAKKAM,KANCHIPURAM DIST, TAMILNADU- 631402 - 631402
PH :7338786693.

PERUNDURAI

2626. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), SF NO.542/1, KOVAI MAIN ROAD, PERUNDURAI VILLAGE, PERUNDURAI DISTT. ERODE, TAMIL NADU - 638052
PH :9597490777.

PN PALAYAM

2627. JAIKRISHNAA AUTOSALES PVT LTD (4107--04), NO.12/190 SRKV PORT, MTR ROAD, P.N. PALAYAM, COIMBATORE - 641020

2628. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), NO.: 12/90, TKV GARDEN, SRKV POST , MTP ROAD,P.N.PALAYAM, TAMIL NADU - 641020

POCHAMPALLI

2629. SRI AMMAN CARS INDIA PVT LTD (--01), NEW SURVEY NO. 561/5, VILLAGE – JUMBUKUTTANPATTI, POCHAMPALLI, KRISHNAGIRI. - 635206

POLLACHI

2630. ABT LIMITED (--01), NACHIMUTHU POLYTECHNIC CAMPUS, UDUMALPET ROAD, POLACHI - 642003

POLUR

2631. GANESH CARS PVT LTD (--01), AZHAGO COMPLEX, SURVEY NO:77/1, CUDADALOR TO CHITTOOR ROAD, POLUR, THIRUVANNAMALAI DISTRICT,TAMILNADU - 606803
PH :9842345200.

PONNAMARAVATHY

2632. PL.A MOTORS (--01), NO:4-1B2B & 4-1B3,PUDUKKOTTAI MAIN ROAD, PONNAMARAVATHI, PUDUKKOTTAI DIST., TAMILNADU-622407 - 622407

PONNERI

2633. ABT LIMITED (--01), DOOR NO.18(S.F.NO42/1A-3), KRISHNA PURAM,PONNERI TALUK, - 601204

PUDDUKOTAI

2634. PL.A MOTORS (2305--02), NO. 10, MARIAMALAI NAGAR, ALANGUDI- THIRUMAYAM ROAD, PUDUKOTTAI, - 622003

PULIYANGUDI

2635. AADHI CARS PVT LTD (---), TENKASI -PULIYANKUDI ROAD, PULIYANKUDI, DISTRICT-TENKASI, TAMILNADU - 627855

PUNJAI PULIAMPATTI

2636. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), SURVEY NO. 250/1, PANKAU PULIYAMPATTU MUNICIPALITY, PUNJAI PULIYAMPATTI - 638459, SATHY THALUK, ERODE. - 638459
PH :6385810777.

RAJAPALAYAM

2637. MEENAKSHI AUTO ZONE PVT LTD (--01), DOOR NO. 96, COTTON MARKET, TENKASI-MADURAI ROAD, RAJAPALAYAM, VIRUDHUNAGAR DIST., TAMILNADU - 626117
PH :9443785681.

RAMANATHAPURAM

2638. SIVA AUTOMOTIVE TRADING PVT LTD (--01), SURVEY NO. 172/1B2C, 172/2C, VILLAGE - ACHUNTHANVAYAL, ACHUNTHANGAL GROUP, TALUK - RAMANATHAPURAM, RAMANATHAPURAM. - 623502
PH :8098110000.

2639. MEENAKSHI AUTO ZONE PVT LTD (--01), SURVEY NO: 458/4, MADURAI - RAMESWARAM ROAD, NEAR RAMNAGAR BUS STOP, RAMANATHAPURAM, TAMIL NADU – 623503 - 623503

RAMESHWARAM

2640. SIVA AUTOMOTIVE TRADING PVT LTD (--01), NO:2307, SURVEY NO:279/3A, RAMNAD ROAD, ARIYANKADU, RAMESHWARAM, RAMANATHAPURAM DISTRICT, TAMILNADU
PH :7402788898.

RANIPET

2641. GANESH CARS PVT LTD (--01), SURVEY NO. 44/1, PLOT NO. 484, OPPOSITE TO THIRUMALAI CHEMICALS, SIPCOT LAYOUT OF HOUSE SITES, SIPCOTS INDUSTRIAL COMPLEX, RANIPET , TAMIL NADU. - 632403
PH :9842330388.

RASIPURAM

2642. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), SURVEY NO:41/1 B1A, MOOLAKADU VILLAGE, MASAKALIPATTI, SALEM MAIN ROAD, RASIPURAM DISTT. NAMAKKAL - 637401

REDHILLS

2643. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (1403--04), NO.503, G.N.T. ROAD, REDHILLS, CHENNAI - 600066
PH :9952000078.

SALEM

2644. ABT LIMITED (4101--03), 32 THAMANA CHETTY ROAD, ARISIPALAYAM, SALEM - 636009

2645. THRIVENI CAR COMPANY PVT LTD (--01), 12/2E1, SUBRAMANIA NAGAR, 2ND GATE, JUNCTION ROAD, SALEM. - 636005

2646. S M CAR PVT LTD (--01), SF NO. 64/2C3, ATTUR SALEM BYPASS ROAD, PINANGUKARAR THOTTAM, SEELANIKANPATTY, SALEM. - 636202

2647. THRIVENI CAR COMPANY PVT LTD (--03), SURVEY NO. 57, VILLAGE - MASINAICKENPATTY, AYOTHIAPATTINAM, AMMAPET, SALEM. - 636103

2648. S M CAR PVT LTD (--02), DOOR NO. 50/28, SF NO. 1/10B, SARADHA COLLEGE MAIN ROAD, ALAGAPURAM PUDHUR VILLAGE, HASTHAMPATTY, SALEM, TAMILNADU - 636007
PH :7094440053.

SANKAGIRI

2649. THRIVENI CAR COMPANY PVT LTD (--01), SURVEY NO.171/5B, KCK PLAZA, KACHERIDADU, DEPUTY COLLETCTOR ROAD, SALEM, SANKAGIRI (TAMIL NADU) - 637301

SANKARANKOVIL

2650. AADHI CARS PVT LTD (--01), PLOT NO. 132/H, OPPOSITE TO NEW TALUK OFFICE, TIRUVENGADAM ROAD, SANKARANKOVIL. - 627756
PH :7397728025.

SATHYAMANGALAM

2651. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--01), SURVEY NO. 51, 54 & RS NO. 37, KOTTUVEERAMPALAYAM VILLAGE, SATHYAMANGALAM – 638 401, DISTRICT – ERODE, TAMIL NADU - 638401
PH :9597592777.

SATTUR

2652. MEENAKSHI AUTO ZONE PVT LTD (--01), SURVEY NO. 18/10,CHATRAPATTI VILLAGE, MADURAI KANYAKUMARI NATIONAL HIGHWAYS, SATTUR, VIRUDHUNAGAR DISTRICT,TAMILNADU - 626203
PH :9940094881.

SEYDUNGANALLUR

2653. ASIR AUTOMOBILES PVT LTD (--02), SURVEY NO. 59/3E, TIRUCHENDUR ROAD, SEYDUNGANALLUR TOWN, TALUK - SRIVAIKUNTAM, TUTICORIN DIST., TAMIL NADU. - 628809
PH :8344992220.

SHOLINGUR

2654. GANESH CARS PVT LTD (--01), NO:401, ARAKKONAM MAIN ROAD,OPPOSITE TVS FOUNDARY, PANDIYANELLORE,SHOLINGHUR,WALAJA TALUK, RANIPET DISTRICT, TMILANADU - 631102
PH :7397395259.

SIVAGANGAI

2655. ASIR AUTOMOBILES PVT LTD (--01), S. NO: 144/1, SIVAGANGAI-THONDI ROAD, PAIYAURPILLAIVAYAL, SIVAGANGAI,TAMILNADU - 630561
PH :9750372220.

SIVAKASI

2656. MEENAKSHI AUTO ZONE PVT LTD (--01), 372 D & E, ARUNACHALAM COMPLEX, THIRUTHANGAL ROAD, SIVAKASI. - 626123

SRIPERUMBUDUR

2657. RAJALAKSHMI CARS PVT LTD (--01), SURVEY NO. 150/1A, DOOR NO 1C, THERADI STREET, NEW VILLAGE NO 42, SRIPERUMBADUR, KANCHEEPURAM DISTRICT, TAMIL NADU. - 602105
PH :8939995469.

SRIVILLIPUTHUR/RAJAPALAYAM

2658. ABT LIMITED (4202--03), NO. 10/32, PADIKKASUVAITHANPATTI , NEAR RTO OFFICE, SRIVILLIPUTHUR, VIRUDHUNAGAR, TAMIL NADU - 626125

SULUR

2659. JAIKRISHNAA AUTOSALES PVT LTD (4107--05), DOOR NO. 37 F, RANGANATHAPURAM, TRICHY ROAD, SULUR - 641402

TENKASI

2660. AADHI CARS PVT LTD (--01), DOOR NO. 3/50-1, SURVEY NO. 447B, TIRUNELVELI MAIN ROAD, VILLAGE – KUNARAMANALLUR, TENKASI. - 627814
PH :9500991475.

2661. AADHI CARS PVT LTD (--02), DOOR NO. 47, MADHALAMPARAI, TENKASHI AMBAI HIGHWAY, TENKASHI, TIRUNELVELI DIST., TAMILNADU. - 627814
PH :9500991475.

THALAIVASAL

2662. THRIVENI CAR COMPANY PVT LTD (--01), S NO: 5/268,NEAR NATHANKARAI TOLL PLAZA, VADAKKU KADU, NATHANKARAI, THALAIVASAL, SALEM, TAMILNADU - 636122

THAMMAPATI

2663. S M CAR PVT LTD (--01), SURVEY NO # SF: 328/11, NAGIAMPATTI, THAMMAPATTI,SALEM DISTRICT, TAMILNADU - 636113. - 636113
PH :7094440010.

THANJAVUR

2664. PILLAI & SONS MOTOR COMPANY (--01), 12A, SELVAM NAGAR, TANJAVUR, TAMILNADU - 613007

2665. PL.A MOTORS (--01), SURVEY NO. 173/6B4, TRICHY-THANJAVUR ROAD, NANJIKOTTAI BYPASS, THANJAVUR, TAMILNADU - 613005

THARAMANGALAM

2666. THRIVENI CAR COMPANY PVT LTD (--01), NO. 1/122, KATTAMPATTI, JALAKANDAPURAM, THARAMANGALAM, SALEM DIST. ,TAMIL NADU. - 636501

THELLAR

2667. SRI AMMAN CARS INDIA PVT LTD (--01), THIRUVANNAMALAI BYE-PASS ROAD, THELLAR - 604406

THENI

2668. MEENAKSHI AUTO ZONE PVT LTD (--01), DOOR NO. 871/1, RATHINAM NAGAR, PERIYAKULAM MAIN ROAD, THENI TOWN, DISTRICT – THENI - 625531
PH :9789703881.

THIRUKALUKUNDRAM

2669. AIE CARS PVT LTD (--01), SURVEY NO.113/38, DOOR NO.61, MADRAS ROAD, MANGALAM VILLAGE, TIRUKALUKUNDRAM, CHENGALPATTU DISTRICT, TAMIL NADU- 603 107 - 603107

THIRUKOVILUR

2670. ABT LIMITED (--01), S.NO: 729/10, NO:45, SANDAPET, AANUR, THIRUKOVILUR, KALLAKURICHI DIST - 605757

THIRUMAZHISAI

2671. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (--01), DP 30, SIDCO INDUSTRIAL ESTATE, THIRUMAZHISAI, - 600124
PH :9500064259.

THIRUMULLAIVOYAL

2672. CRESCO ( A UNIT OF NEXGEN VENTURES PVT LTD) (--01), NO. 48, BALAJI NAGAR, NEW SIR IRVANSTADE FORD HOSPITAL, THIRUMULAIVOYAL DISTT. CHENNAI - 600062
PH :7305087044.

THIRUTHURAIPOONDI

2673. PILLAI & SONS MOTOR COMPANY (--01), NO:246/3, SRI KRISHNA LODGE COMPLEX, THIRUVARUR ROAD,THIRUTHURAIPOONDI, THIRUVARUR DIST., TAMILNADU- 614713. - 614713

THIRUVAIYARU

2674. PILLAI & SONS MOTOR COMPANY (--01), NO.5, ODAURAI STREET, THIRUVAIYARU, 613204 - 613204

THIRUVALLUR

2675. KHIVRAJ MOTORS PVT LTD (1404--04), 2151, KAKKULUR ROAD, THIRUVALLUR - 602001
2676. KHIVRAJ MOTORS PVT LTD (1404--05), PLOT NOS.218,219,220,225,226,227.228 AND S.NOS.18/5,18/6, EMPIRE CITY PART-3, KAKKALLUR VILLAGE, THIRUVALLUR THALUK, THIRUVALLUR - 602001

THIRUVANNAMALAI

2677. GANESH CARS PVT LTD (--03), NO.-5, NH-78, KRISHANAGIRI PONDY ROAD, CHINA KANKEYANUR, OPP SKP ENGG. COLLEGE, THIRUVANNAMALAI - 606601
PH :9842305072.

THIRUVARUR

2678. PILLAI & SONS MOTOR COMPANY (--03), THANJAI NAGARI ROAD, OPP. TO S. P. OFFICE - 610001

2679. PILLAI & SONS MOTOR COMPANY (--01), NO. 9, WARD NO.-4, BLOCK NO. 10, NEW SY. NO. 601/6B1, SUNDARAVILAGAM, NARSINGHAMPET, THIRUVARUR TOWN & DIST., TAMIL NADU - 610001
PH :9442163509.

THISAYANVILLAI

2680. AADHI CARS PVT LTD (--01), SURVEY NO. 240/1, 7/1, HIGHWAYS ROAD, OPP. TO VO OFFICE, SELVA MARUTHUR, THISAYANVILLAI. - 627657
PH :7339511187.

THITTAKUDI

2681. VISHNU CARS PVT LTD (---), SURVEY NO 129/1, ERAMANGALAM VILLAGE, THITHAKUDI,CUDDALORE DISTRICT, TAMILNADU - 606106

THOPPUR

2682. SRI AMMAN CARS INDIA PVT LTD (--01), SITE NO. 422 /2A, BANGALORE TO SALEM HIGH WAY, AMMANI, THOPPUR VILLAGE & TOWN,NALLAMPALLI TK, DHARMAPURI DISTRICT, - 636352
PH :9790004273.

THUCKALAY

2683. ATHEN CARS (--01), DOOR NO. 5/76B, (RE SURVEY NO-530/7) THIRUVITHANCODE ROAD, KERALAPURAM, MUTHALAKURICHI, VILLAGE – MUTHALAKURUCHI, KALKULAM-TALUK, THUCKALAY, DISCTRICT – KANYAKUMARI, TAMILNADU - 629174
PH :8012029888.

THURAIYUR

2684. PL.A MOTORS (--01), D.NO.:5/300, SINGALANDHAPURAM VILLAGE, THURAIYUR DISTT. TRICHY (TAMIL NADU) - 621010
PH :9486763725.

TINDIVARAM

2685. VISHNU CARS PVT LTD (--01), SURVEY NO. 50/4, 50/5 & 63, NEAR RTO OFFICE, MOLASUR, TINDIVANAM, VILUPPURAM,TAMILNADU - 604102
PH :9500039023.

TIRUCHENDUR

2686. ASIR AUTOMOBILES PVT LTD (--01), SURVEY NO. 220/1D1A, 221/3, 221/4, 221/5, 221/5A, 221/5B, PODHIGAI NAGAR, VILLAGE-VEERAPANDIYAPATINAM, THIRUCHENDUR, TUTUCORIN. - 628215
PH :7373900220.

TIRUCHENGODE

2687. SREE SARADHAMBAL AUTOMOBILES PVT LTD (--02), PLOT NO-10, OPP TO PONNUSWAMY KALYANA MANDAPAM, KOOTAPALLI COLONY, TIRUCHENGODE - 637001

TIRUNELVELI

2688. AADHI CARS PVT LTD (--01), PLOT NO. 261, MADURAI MAIN ROAD, KARAIERUPPU, TIRUNELVELI , TAMIL NADU - 627357
PH :9500991610.
2689. AADHI CARS PVT LTD (--03), DOOR NO. 37, RAMNAGAR, KTC NAGAR, TIRUNELVELI, TAMIL NADU. - 627011
PH :9500991610.
2690. AADHI CARS PVT LTD (--04), SF NO:161/4, SF NO: 893/2, NORTH BYEPASS ROAD, GALAXY HOSPITAL BACKSIDE, PALAYANKOTTAI, TIRUNELVELI, TAMILNADU - 627001

TIRUPATHUR

2691. GANESH CARS PVT LTD (--01), SURVEY NO.54/4, TIRUPATHUR TO KRISHNAGIRI ROAD, PALLIPET VILLAGE, TIRUPATHUR DISTT. VELLORE - 635601
PH :9842308909.

TIRUPATTUR( SIVAGANGAI)

2692. ABT LIMITED (--01), DOOR NO. 8/2/29A, KARAIKUDI ROAD, TIRUPATHUR, DISTRICT – SIVAGANGAI. - 630211

TIRUPPUVANAM

2693. MEENAKSHI AUTO ZONE PVT LTD (--01), NO:21,BAKHYA NAGAR, WARD NO:1, MANDAPAM MAIN ROAD, TIRUPPUVANAM, SIVAGANGA DISTRICT, TAMIL NADU - 630611 - 630611
PH :9442799581.

TIRUPUR

2694. ABT LIMITED (4101--09), NO. 4, SABHAPATHI PURAM, NEAR TMF HOSPITAL, TIRUPUR - 641601
2695. SHASHTI CAR PRIVATE LIMITED (--01), SRI PADMINI GARDENS, KANGEYAM ROAD, OPP. ST JOSEPH SCHOOL, TIRUPUR - 641604

TIRUTHANI

2696. CARS INDIA (CRESCENT AUTO REPAIR & SERVICES INDIA PVT LTD) (--01), NO. 9/13, CHENNAI BY PASS ROAD, OLD CHENNAI ROAD, DISTT. THIRUVALLUR, TIRUTHANI,TAMILNADU - 631209
PH :7358773860.

TIRUVANNAMALAI

2697. SRI AMMAN CARS INDIA PVT LTD (--01), 2A/2, SURVEY NO. 3676/3, ANNA SALAI, TIRUVANNAMALAI-CHENNAI NH-101, TIRUVANNAMALAI TOWN AND DIST., TAMILNADU - 602601
PH :7094471293.

TONDI

2698. SIVA AUTOMOTIVE TRADING PVT LTD (--01), SURVEY NO: 85/16, WARD 10/78, SOUTH THOPU STREET, ECR MAIN ROAD, ECR, THONDI, RAMANATHAPURAM DISTRICT, TAMIL NADU - 623409
PH :7402788820.

TRICHY

2699. ABT LIMITED (2302-23-02), 4/40, COLLECTOR OFFICE ROAD, CANTONMENT, TRICHY - 620001
2700. PL.A MOTORS (2305-23-01), NO. 18/2, NA-45, DHEERAN NAGAR, TRICHY-DINDUGAL MAIN ROAD, TRICHY - 620009
2701. ABT LIMITED (2302-23-03), MADRAS TRUNK ROAD, MAMBALASALAI, TRICHY - 620005
2702. PL.A MOTORS (2305-23-03), 10A & B, ALXANDRIA ROAD, CANTONMENT, TRICHY - 620001
2703. PILLAI & SONS MOTOR COMPANY (2306-23-01), SURVEY NO. 10B, 1A/D, CHENNAI TRICHY BY-PASS ROAD, VILLAGE - THIRUNALLUR, TRICHY. - 620002
2704. ABT LIMITED (2302--04), NO.46/3, 46/5A, AGARAM VILLAGE, TIRUVERAMBUR TOWN & TALUK, TIRUCHIRAPPALLI (TRICHY) DISTRICT, TAMIL NADU – 620013. - 620013

TUTICORIN

2705. ASIR AUTOMOBILES PVT LTD (--01), SURVEY NO. 25/1B, MAPPILLAIURINI VILLAGE, ETTAYAPURAM ROAD, TUTICORIN, TAMIL NADU - 628002
PH :7373501220.

UDUMALPET

2706. ABT LIMITED (--01), 2/3, PERIYAKOTTAI PIRIVU, S.V. MILL POST, UDUMALPET - 642126

ULANDURPET

2707. ABT LIMITED (--01), S NO: 392/1A, DOOR NO: 2129/2020, ULANDURPET, KALLAKURICHI DIST, TAMIL NADU- 606107. - 606107

USILAMPATTI

2708. SIVA AUTOMOTIVE TRADING PVT LTD (--01), NO. 33/1B2A, USILAMPATTI - MADURAI HIGHWAY,POTTULUPATTI PANCHAYATH, USILAMPATTI, MADURAI DISTRICT, TAMILNADU-625532 - 625532
PH :7868088840.

UTHANGARAI

2709. SRI AMMAN CARS INDIA PVT LTD (--01), SURVEY NO. 104/1, 104/1B, VILLAGE – THANDIYAPANNUR, UTHANGARAI, KRISHNAGIRI. - 635304
PH :9715044600.

UTHIRAMERUR

2710. AIE CARS PVT LTD (--01), SURVEY NO:383/3B-B2, UTHIRAMERUR MAIN ROAD, UTHIRAMERUR, KANCHEEPURAM DISTRICT, TAMILNADU - 603406

UTHUKOTTAI

2711. KHIVRAJ MOTORS PVT LTD (--01), SURVEY NO. 442/1, NEHRU BAZZAR STREET, UTHUKOTTAI, DIST.-THIRUVALLUR - 602026
PH :7299635536.

VALLIYUR

2712. AADHI CARS PVT LTD (--01), DOOR NO. 314A/11-14, WITHIN VADAKU VALLIOOR, REVENUE VILLAGE, VADAKKU VALLIOOR PANCHAYAT, RADHAPURAM TALUK, VALLIOOR. - 627002
PH :7373091462.

VANDAVASI

2713. GANESH CARS PVT LTD (--01), SURVEY NO.272, KEELSATHAMANGALAM VILLAGE, CHETPET ROAD, VANDAVASI, TIRUVANNAMALAI, DISTT. T.N. - 604408
PH :7395802484.

VANIYAMBADI

2714. GANESH CARS PVT LTD (--01), NO. 197/1B1, NH-46 (AH-7), PETHAKALLUPALLI VILLAGE, NEAR TOLL GATE, VANIYAMBADI , VELLORE (DIST), TAMIL NADU. - 635801
PH :9842327709.

VELLAKOVIL

2715. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (--01), SURVEY NO:502/C &371/D, NO. 196,197,KOVAI KARUR MAIN ROAD, VELLAKOVIL, TIRUPUR DIST. , TAMILNADU - 638111
PH :9994606000.

VELLORE

2716. GANESH CARS PVT LTD (--01), 91 NEW BY-PASS ROAD, VELLORE - 632004
PH :9842377110.

2717. SRI AMMAN CARS INDIA PVT LTD (--01), DOOR NO. 68, SURVEY NO. 66/7, NEAR RANGALAYA KALYANA MANDAPAM, VELLORE-KATPADI ROAD, KALINJUR VILLAGE, KATPADI TALUKA, GANDHINAGAR, VELLORE DIST., TAMIL NADU. - 632006

2718. SRI AMMAN CARS INDIA PVT LTD (--02), SURVEY NO. 316/3B2, 316/8A, 316/8B, NEAR SHELL PETROL PUMP, MELMONAVUR VILLAGE,VELLORE TALUK & DIST. ON NH48 (CHENNAI – BENGALURU HIGHWAY), VELLORE, TAMILNADUR - 632010
PH :7094471320.

2719. GANESH CARS PVT LTD (--06), SY NO. 188/2B, EDAYANSATHU, ARANI ROAD, BAGAYAM, VELLORE - 632503

VENGAL

2720. VISHNU CARS PVT LTD (--01), NEW SURVEY NO:67/1B, 67/20, CHINMAYA NAGAR,THAMARAIPAKKAM VILLAGE, VENGAL,THIRUVALLUR DIST., TAMILNADU-601103 - 601103
PH :9500121559.

VEPPAMPATTU

2721. POPULAR VEHICLES AND SERVICES LIMITED (--01), SNO. 35/2A2, CTH ROAD 89,, VEPPAMPATTU,TIRUVALLUR DIST, TAMIL NADU - 602 024, - 602024

VILLUPURAM

2722. ABT LIMITED (--02), 264/1, GINGEE MAIN ROAD, AYINAMPALAYAM, VILLUPURAM - 605602

VIRUDHACHALAM

2723. ABT LIMITED (--01), PLOT NO. 56, JUNCTION ROAD, NEAR SHANMUGA LODGE, VIRUDHACHALAM, DISTRICT – CUDDALORE, TAMIL NADU. - 606101

VIRUDHUNAGAR

2724. MEENAKSHI AUTO ZONE PVT LTD (--0A), DOOR NO:6/504, SURVEY NO. 11/6, PELAMPATTI VILLAGE,VIRUDHUNAGAR MADURAI HIGH WAY,OPPOSITE TO VVV COLLEGE. , TALUK & DIST. VIRUDHUNAGAR, TAMILNADU - 626001
PH :9940094881.

WALAJABAD

2725. AIE CARS PVT LTD (--01), SURVEY NO: 334, KANCHEEPURAM- CHENGALPET ROAD, VENGUDI, WALAJABAD VILL AND TOWN, KANCHIPURAM DIST.,TAMIL NADU631605 - 631605

## TELANGANA

ACHAMPET

2726. SRI JAYARAMA MOTORS PVT LTD (--01), SURVEY :133/A/3/1 HYDERABAD ROAD ACHAMPET ,NAGARKURNOL DT - 509375

ADDANKI

2727. JAYALAKSHMI AUTOMOTIVES PVT LTD (--01), SURVEY NO-1020/2, RAMANAGAR, ONGOLE ROAD, ADDANKI - 523201

ADILABAD

2728. ADARSHA AUTOMOTIVES PVT LTD (--01), SURVEY NO:131/6 & 131/7, NH-44, ADILABAD TOWN ROAD, MAVALA, ADILABAD, TELANGANA. - 504001
PH :9133307724.

AMANGAL

2729. THE MITHRA AGENCIES (--01), VIDHAYA NAGAR COLONY,ROAD NO:5, OPPOSITE INDIAN OIL,MRO OFFICE,S NO:1439 - 509321

ARMUR

2730. VARUN MOTORS PVT LTD (--01), SURVEY NO.277, ARGUL VILLAGE, JAKARANPALLY (MANDAL), ARMUR, NIZAMABAD DISTT. (A.P.) - 503224
PH :9052901888.

BANSWADA

2731. VARUN MOTORS PVT LTD (--01), #2-138/5,SOMESHWAR SHIVAR, NEAR BIKNOOR "X" ROAD, BANSWADA(M) - 503187

BASARA

2732. ADARSHA AUTOMOTIVES PVT LTD (--01), URVEY NO 59/E, RAVINDRAPUR , BASARA, NIRMAL DISTRICT, TELANGANA - 504101
PH :8886092222.

BELLAMPALLY

2733. ADARSHA AUTOMOTIVES PVT LTD (--01), SURVEY NO 5/31, PEDANAPALLI, BELLAMPALLY, MANCHERIAL DISTRICT, TELANGANA - 504251
PH :8886092222.

BHADRACHALAM

2734. VARUN MOTORS PVT LTD (--01), H-NO 1-138/1B-OLD SARPAKA ROAD, BHADRACHALAM, BHADRADI-KOTHAGUDEM, TELANAGANA - 507111
PH :9885576602.

BHEEMGAL

2735. VARUN MOTORS PVT LTD (--01), SURVEY NO. 398, MORTHAD ROAD, - 503307

BHONGIR

2736. PAVAN MOTORS PVT LTD (--01), SURVEY NO 779, YADADRI BHONGIR DISTRICT, BHONGIR, TELANGANA - 508116

BHUPALAPALLY

2737. ADARSHA AUTOMOTIVES PVT LTD (--04), SY NO.314, HANAMKONDA ROAD, MANDAL BHUPALAPALLY, TELANGANA
6-113, JAWAHAR NAGAR, MAIN ROAD, SBH MAIN BRANCH ROAD, BHUPPALPALLY, DISTRICT - WARANGAL, ANDHRA PRADESH - 506169
PH :7799790526.

BODHAN

2738. VARUN MOTORS PVT LTD (--01), PLOT NO. 5/2, ACHANAPALLY CROSS ROAD, BODHAN, DIST. -NIZAMABAD, TELANGANA. - 503185

CHEGUNTA

2739. AUTOFIN LIMITED (--01), 1/45/3, CHEGUNTA, CHEGUNTA MANDAL, MEDAK DISTRICT, NATIONAL HIGHWAY NO - 44 FACING, TELANGANA - 502255

CHEVELLA

2740. GEM MOTORS (INDIA) PVT LTD (--01), SURVEY NO. 17/A, MANDAL – CHEVELLA, DISTRICT – RANGA REDDY, TELANGANA. - 510101

DAMMAPETTA

2741. VARUN MOTORS PVT LTD (--01), NEAREST H.NO 5-48 CPS SCHOOL,DAMMAPETA ,BADRI KOTHAGUDEM DT,TELANGANA

DORNAKAL

2742. ADARSHA AUTOMOTIVES PVT LTD (--01), SY NO.150, BY PASS JUNCTION, NTR CIRCLE, DORNAL, MAHBUBABAD DIST., DOORNAKAL, TELANGANA - 506381

DUBBAKA

2743. ADARSHA AUTOMOTIVES PVT LTD (--01), ADARSHA AUTOMOTIVE PVT LTD, OPP. BUS DEPOT, BYPASS ROAD, SIDDIPET, TELANGANA

ETUNAGARAM

2744. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT LTD) (--01), H.NO 12-412 & 12-413,AKULAVARI GHANPUR, ETURNAGARAM, MULUGU DISTRICT,TELANGANA - 506165
PH :8688828005.

GADWAL

2745. SRI JAYARAMA MOTORS PVT LTD (--02), PLOT NO. 5 & 6, BESIDE RURAL POLICE STATION, KURNOOL ROAD, MAHABUB NAGAR DISTRICT, ANDHRA PRADESH - 500125

GAJWEL

2746. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT LTD) (--01), SURVEY NO. 220, VILLAGE – PRAGNAYPUR, GAJWEL, DISTRICT – MEDAK, TELANGANA . - 502311

GHATKESAR

2747. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT LTD) (--01), 3-21, JODIMETLA, CHOUDA RIGID VILLAGE GHATKESAR MANDAL, DISTRICT – RANGA REDDY. - 501301

2748. JAYABHERI AUTOMOTIVES PRIVATE LTD (--01), SY NO. 581/B, GHATKESAR VILLAGE & MANDAL, MEDCHAL-MALKAJGIRI DIST - 501301

HUSNABAD

2749. ADARSHA AUTOMOTIVES PVT LTD (--01), SURVEY NO. 202/E, H. NO. 12-1/4 & 12-1/A, VILLAGE & MANDAL - HUSNABAD, DIST. -SIDDIPET, TELANGANA. - 505467

HUZURABAD

2750. ADARSHA AUTOMOTIVES PVT LTD (--01), SY NO 1687, ADJACENT TO KARIMNAGAR WARANGAL R&B ROAD, HUZURABAD - 505468

HYDERABAD

2751. THE MITHRA AGENCIES (1002-10-01), 1-8-670, NEAR RTC CROSS ROAD,AZAMABAD INDUSTRIAL AREA, HYDERABAD, - 500020
PH :9966838294.

2752. POPULAR VEHICLES AND SERVICES LIMITED (1088-10-01), SABOC TOWERS, RAJBHAVAN ROAD, SOMAJIGUDA, HYDERABAD - 500482
2753. POPULAR VEHICLES AND SERVICES LIMITED (1091-10-02), R-4/A,IDA BLOCK, INDUSTRIAL ESTATE,UPPAL, HYDERABAD - 500039
2754. VARUN MOTORS PVT LTD (4603-10-04), B-11 CO-OPERATIVE INDUSTRIAL ESTATE, BALANAGAR, HYDERABAD, - 500037
2755. VARUN MOTORS PVT LTD (4603-10-0B), ADITYA NAGAR COLONY, ,ADITYA NAGAR COLONY, TOLICHOWKI, SHAIKPET (VILLAGE, HYDERABAD, HYDERABAD - 500008
2756. VARUN MOTORS PVT LTD (1010-10-01), PLOT NO. VI- VII A & B,UNDER WARD NO. 10, AUTONAGAR, VANASTALIPURAM, HYDERABAD, R. R. DISTT - 500070
PH :9885208555.
2757. VARUN MOTORS PVT LTD (4603-10-06), SHOP NO. 31, SRIKRUPA MARKET, D.NO. 16-10-1/F/31, MALAKAPET, HYDERABAD - 500036
2758. POPULAR VEHICLES AND SERVICES LIMITED (1091-10-01), 16-11-19/5/2/C, SALEEM NAGAR COLONY,MALAKPET (NEAR FARHAT HOSPITAL),HYDERABAD - 500036
2759. THE MITHRA AGENCIES (1002-10-03), PLOT NO. 3-4-10,NEAR MADHAPUR POLICE STATION, MADHAPUR, HYDERABAD - 500081
2760. POPULAR VEHICLES AND SERVICES LIMITED (1088-10-02), 11-6-191/192,OPP. HOTEL HARSHA,PUBLIC GARDEN ROAD, NAMPALLY, HYDERABAD - 500001
2761. VARUN MOTORS PVT LTD (4603-10-0A), 1-11-200,SHAMLALA BUILDING BEGUMPET, HYDERABAD - 500016
PH :9885206555.
2762. THE MITHRA AGENCIES (1002-10-04), 8-18-138, PLOT NO. 8,NEAR MARGADARSI CHIT FUND,L.B. NAGAR RING ROAD, RR DIST,HYDERABAD - 500074
PH :9963551265.
2763. GEM MOTORS (INDIA) PVT LTD (1009-10-01), RAGHUVENDRA SOCIETY,KONDAPUR,,HYDERABAD , ANDHRA PRADESH - 500084
PH :9912899128.
2764. GEM MOTORS (INDIA) PVT LTD (1009-10-02), 2-11, SURVEY NO: 165,172,HYDERNAGAR, KUKATPALLY, HYDERABAD, ANDHRA PRADESH - 500072
PH :9912344538.
2765. SAI SERVICE PRIVATE LIMITED (1011-10-01), PLOT NO. 88, INDUSTRIAL AREA,C.I.E. GANDHI NAGAR, ,BALANAGAR, HYDERABAD - 500037
PH :9010827755.
2766. THE MITHRA AGENCIES (1002-10-05), PLOT NO. 19,20 & 21,ROAD NO. 10,IDA NACHARAM, HYDERABAD - 500076
2767. VARUN MOTORS PVT LTD (1012-10-01), MARUTI AUTHORISED DEALER, SURVEY NO.115, IT PARK, NANAKRAMGUDA, GACHIBOWLI, HYDERABAD - 500008
2768. POPULAR VEHICLES AND SERVICES LIMITED (1089-10-01), D.NO.1-10-1/285/1, OPP. VEGITABLE MARKET, ECIL CROSS ROADS, KUSAIGUDA, HYDERABAD - 500062
2769. SAI SERVICE PRIVATE LIMITED (1011--04), H.NO.16-2-839/4/10, SAIDABAD, L.B.NAGAR, HYDERABAD. - 500059
PH :7799352000.
2770. VARUN MOTORS PVT LTD (4603--0G), 1-10-28/1 SY. NO.285, KUSHAIGUDA, NEAR ECIL X ROADS, HYDERABAD - 500062
PH :7799600093.
2771. VARUN MOTORS PVT LTD (4603-10-0H), PLOT NO. 1354/1, ROAD NO. 1, NEAR IOC PETROL PUMP, JUBLEE HILLS, HYDERABAD, ANDHRA PRADESH - 500033
PH :8886322776.
2772. VARUN MOTORS PVT LTD (4603-10-0J), PLOT NO. 1-45, SY.NO:1 TO 7, GOPINATH COMPLEX, TARANAGAR, LINGAMPALLY, HYDERABAD, RANGAREDDY DISTRICT, TELANGANA STATE - 500019
PH :8886067847.
2773. SAI SERVICE PRIVATE LIMITED (1011--07), PLOT NO.B-21 & B-34, BHEL ANCILLARY INDUSTRIAL ESTATE, RAMACHANDRAPURM, HYDERABAD - 502032
PH :9703811411.
2774. ADARSHA AUTOMOTIVES PVT LTD (1014--01), 18-2-45 NEAR FLYOVER, CHANDRAYANGUTTA "X" ROAD, HYDERBAD - 500005
2775. POPULAR VEHICLES AND SERVICES LIMITED (1088--03), SURVEY NO.434, 5-5-33/19, BEHIND HUDA TRUCK PARKING, KUKATPALLY, DISTT: RANGAREDDY, HYDERABAD - 500072
2776. SAI SERVICE PRIVATE LIMITED (1011-10-08), DOOR NO.7-2-C33 & C34, INDUSTRIAL ESTATE, SANATH NAGAR, HYDERABAD. - 500018
PH :7799360003.
2777. KALYANI MOTORS PRIVATE LIMITED (1018--01), PLOT NO. A-23 & A31/1, I.D.A, NACHARAM, HYDERABAD. - 500076
PH :9100114863.
2778. ADARSHA AUTOMOTIVES PVT LTD (1014-10-02), H. NO. 8-64/1, RUDRA COLONY, SHAMSHABAD, HYDERABAD. - 501218
PH :9603296633.
2779. GEM MOTORS (INDIA) PVT LTD (1009-10-03), SURVEY NO. 135/A & 135/AA, MANIKONDA, RAJENDRA NAGAR MANDAL, RANGAREDDY DISTRICT, HYDERABAD, TELANGANA. - 500089
PH :9912341524.
2780. JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-01), PLOT NO. 113, 114, 115 IN LUMBINI ENCLAVE CB SQUARE, VILLAGE – GACHIBOWLI, SHERLINGAMPALLY MNADAL, HYDERABAD, TELANGANA STATE. - 500032
PH :9100909401.
2781. JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-02), SURVEY NO.11/36, PLOT NO.32, 39 & 40, NEAR N CONVENTION CENTRE, KHANAMET, HYDERABAD, SHERLINGAMPALLY MANDAL, HYDERABAD. - 500081
PH :7799916666.
2782. ADARSHA AUTOMOTIVES PVT LTD (1019-10-01), H. NO. 2-4-43/15, SURVEY NO. 34, SOGBOWLI (PILLER NO. 185 OF P.V. NARSIMHA RAO EXPRESSWAY), RAJENDRANAGAR, UPPERPALLY, ATTAPUR, RANGA REDDY, HYDERABAD, TELENGANA. - 500048
2783. KALYANI MOTORS PRIVATE LIMITED (1018--02), M/S VIDHATA BINNY MODERN RICE MILL, BEARING NO. 8-4-15 IN SURVEY NO. 239 & 240 OF VILLAGE – KARMANGHAT, MANDAL – SAROORNAGAR, DISTRICT – RANGA REDDY, HYDERABAD. - 500079
PH :9100222377.
2784. THE MITHRA AGENCIES (1002-10-06), SURVEY NO.57, D.NO.8-2-108, BIRAMALGUDA, KARMANGHAT NAGARJUN SAGAR ROAD, HYDERABAD, TELANGANA. - 500079
PH :8886621232.
2785. VARUN MOTORS PVT LTD (4603-10-0M), KSN GARDENS, 5-162/6, BORABANDA MAIN ROAD, HYDERABAD. - 500018
PH :9885579623.
2786. JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-03), SURVEY NO.283, PLOT NO.D-46 & 47, PHASE-V, IDA, JEEDIMETLA, QUTUBULLAPUR MANDAL, RANGA REDDY DISTT., HYDERABAD (TELANGANA). - 500055
PH :7799784567.
2787. ADARSHA AUTOMOTIVES PVT LTD (--03), SURVEY NO. 220/A, AMBEDKAR ROAD, OPP HERITAGE FRESH, NEAR AMBAEDKAR STATUE, NEAR ALWAL, SECUNDERABAD. - 500010
PH :9291859954.
2788. KALYANI MOTORS PRIVATE LIMITED (--03), SURVEY NO. 305, NIZAMPET, MANDAL - QUTBULLAPUR, DIST.-RANGA REDDY, HYDERABAD. - 500072
2789. SAI SERVICE PRIVATE LIMITED (1011--09), SURVEY NO 499/1, MIYAPUR TO BACHUPALLY ROAD,BACHUPALLY,HYDERABAD. - 500090
PH :7330771111.
2790. THE MITHRA AGENCIES (1002-10-07), SURVEY NO,12,13,14& 15, MEDIPALLY, GHATKESAR MANDAL, RANGA REDDY DISTRICT, HYDERABAD, TELANGANA - 500098
PH :8886697954.
2791. JAYABHERI AUTOMOTIVES PRIVATE LTD (1085-10-01), SURVEY NO 686,UPPAL, MEDCHAL-MALKAJGIRI DISTRICT,HYDERABAD,TELANGANA - 500013
PH :8142506666.
2792. PAVAN MOTORS PVT LTD (-10-02), PLOT NO 351,352,353,354,355,356,357 LEGALA CIRCLE ROAD, BHAGYALAKSHMI NAGAR, SERILINGAMPALLY, HYDERABAD - 500019
2793. JAYABHERI AUTOMOTIVES PRIVATE LTD (1017-10-04), SURVEY NO 7,14,15,16,IPM BLOOD BANK COLONY,HAYATHNAGAR-HYDERABAD. - 501504
2794. KALYANI MOTORS PRIVATE LIMITED (1018-10-05), SURVEY NO. 314/A/1, GOPANNAPALLY, SERILINGAMPALLY, HYDERABAD - 502032
2795. VARUN MOTORS PVT LTD (1086-10-01), SY NO. 90, NH-44, BESIDE DOLA RI DHANI, KOMPALLY, HYDERABAD, TELANGANA - 500100
2796. KALYANI MOTORS PRIVATE LIMITED (1018-10-04), SURVEY NO 314/A/1, GOPANNAPALLY, RC PURAM, HYDERABAD - 500019
2797. ADARSHA AUTOMOTIVES PVT LTD (--02), PLOT NO, 2B, 2C, 2D, 2E72F, VISHNU MARG, PARVATH NAGAR, MAIN ROAD MADHAPUR - 500081
2798. THE MITHRA AGENCIES (1002-10-08), SY NO. 575/1/2 & 576/1/2,ADIBATLA TCS RD, NEAR HP PETROL PUMP BUNK, NADARGUL - 501510
2799. VARUN MOTORS PVT LTD (--12), SURVEY NO.46, KEESARA MANDAL, NAGARAM, MEDCHAL, MALKAGIRI DIST., HYDERABAD - 500072

IBRAHIMPATNAM

2800. PAVAN MOTORS PVT LTD (--01), S.NO.123/E, MPP PATELGUDA, IBRAHIMPATNAM, RANGA REDDY - 501506
PH :8790144499.

JAGITIAL

2801. ADARSHA AUTOMOTIVES PVT LTD (--04), HOUSE NO.-1-5-216/A,OPPOSITE TO KVA SUBSTATION, KARIMNAGAR ROAD, JAGTIAL, - 505327
PH :8886152222.

JAMIKUNTA

2802. VARUN MOTORS PVT LTD (--01), SY NO. 794, KARIMNAGAR ROAD, AMMIKUNTA, DIST. KARIMNAGAR - 505152

JANGAON

2803. ADARSHA AUTOMOTIVES PVT LTD (--01), H.NO.339, HYDERABAD ROAD, JANGAON. - 506167
PH :7799626633.

JOGIPET

2804. VARUN MOTORS PVT LTD (--01), #8-65/12/C MAIN ROAD YARD ANDOLE MANDAL, OPP. MARKET YARD, SANGAREDDY, TELANGANA - 502270

JUKKAL

2805. VARUN MOTORS PVT LTD (--01), PLOT N9 OF SY NO 74/EE/3 AND 74/UU/I, KOWLAS VILLAGE, JUKKAL MANDAL, DIST-KAMAREDDY, TELANGANA - 503305

KADTHAL

2806. THE MITHRA AGENCIES (--01), S NO 8, KANDUKURU, KADTHAL, TELANGANA - 509358

KAGHAZNAGAR

2807. ADARSHA AUTOMOTIVES PVT LTD (--01), H.NO :1-61/3,BORIGAON,KAGHAZNAGAR,KOMARAMBHEEM - 504296
PH :8886092222.

KALWAKURTHY

2808. SRI JAYARAMA MOTORS PVT LTD (--01), D.NO.12-42, BESIDE INDIAN OIL, PETROL PUMP, DEVERAKONDA ROAD, KALWAKURTHY - 509324

KAMAREDDY

2809. VARUN MOTORS PVT LTD (--01), H.NO.11-107/61, BESIDE:GURU RAGHAVENDRA COLONY, CHINNA MALLAREDDY VILLAGE, KAMAREDDY. - 503111
PH :9985557570.

KARIMNAGAR

2810. ADARSHA AUTOMOTIVES PVT LTD (--01), H.NO. 8-6-313/1,HYDERABAD ROAD,BY-PASS JUNCTION,KARIMNAGAR - 505001

2811. ADARSHA AUTOMOTIVES PVT LTD (--05), H.NO.8-6-301/18, BY-PASS ROAD, AUTONAGAR, KARIM NAGAR, TELANGANA. - 505001

2812. VARUN MOTORS PVT LTD (--01), BEARING NO. 1-81/3/10/2, SURVEY NO. 221 & 222, REKURTHY VILLAGE, KARIMNAGAR-JAGTIAL ROAD, KARIMNAGAR MANDAL & DIST. , TELANGANA. - 505001

2813. VARUN MOTORS PVT LTD (--02), SURVEY NO. 277,278/B, AREPALLY VILLAGE, TEEGALAGUTTAPALLI GRAM PANCHAYAT, KARIMNAGAR - 505001
PH :9885210555.

2814. ADARSHA AUTOMOTIVES PVT LTD (--06), 1-81/3/10/2,JAGITYAL ROAD,REKURTHY, KARIMNAGAR - 505010

2815. VARUN MOTORS PVT LTD (--03), PLOT NO. 12,5,3 & 4, SY NO. 793, BOMMAKAL VILLAGE, KARIMNAGAR - 505001

KATARAM

2816. ADARSHA AUTOMOTIVES PVT LTD (--01), SY. NO. 131, H NO. 12-38, GAREPALLI, KATARAM(M), JAYASHANKAR(DIST.), TELANGANA. - 506169

KEESARA

2817. JAYABHERI AUTOMOTIVES PRIVATE LTD (--01), H-NO 3-56/9/6A, SURVEY NO 5,KEESARA, MEDCHAL-MALKAJGIRI, TELANGANA - 501301
PH :9676076666.

KHAMMAM

2818. MITHRA AUTO AGENCIES PVT LTD (2604--02), SURVY NO. 182,WARANGAL ROAD, OPP. FCI GODOWNS,PEDA THANDA,KHAMMAM - 507003
PH :8886063527.

2819. SANTOSH AUTOMOTORS PVT LTD (2607--03), SURVEY NO: 19, BESIDE ROYAL OAK FURNITUR, NEAR RTC BUS STAND, RAPARTHI NAGAR - 507318

KHANAPUR

2820. VARUN MOTORS PVT LTD (--01), NO:14-10A, NEAR SAI BABA TEMPLE, OPP. GIRLS HIGH SCHOOL, VILL & MANDAL: KHANAPOOR, DIST-NIRMAL

KODAD

2821. PAVAN MOTORS PVT LTD (--01), SURVEY NO. 42, KOMARBANDA REVENUE LIMITED, KODAD , DISTRICT – NALGONDA, TELANGANA - 508206
PH :8008899995.

KODANGAL

2822. POPULAR VEHICLES AND SERVICES LIMITED (--01), SURVEY NO 1156/AA1/2, BESIDE EESAIR PETROL PUMP, KODANGAL, VIKARABAD, TELANGANA - 509338

KOLLAPUR

2823. SRI JAYARAMA MOTORS PVT LTD (--01), SURVEY NO 259/AA2, 259/E2,KOLLAPUR, NAGAR KURNOOL DISTRICT, TELANGANA - 509102
PH :9985880015.

KOSGI

2824. SRI JAYARAMA MOTORS PVT LTD (--01), SY. NO. 1798/B, KOSGI TOWN, SITUATED TANDOR ROAD KOSGI(G.P & MANDAL), NARAYANPET DIST, TELANGANA

KOTHAGUDEM

2825. VARUN MOTORS PVT LTD (2603--04), DOOR NO. 5-35/4/B,LAKSHMIDAVI PALLI,BHADRACHALAM ROAD, KOTTHAGUDEM - 507101

LINGAMPET

2826. VARUN MOTORS PVT LTD (--01), 12-119, OPP:HONDA SHOWROOM, YELLAREDDY ROAD, LINGAMPET, DIST:KAMAREDDY - 503124

LUXITTIPET

2827. VARUN MOTORS PVT LTD (--01), SURVEY NO 289/E, NEAR BY SSR GARDENS,LUXETTIPET, MANCHERIAL DISTRICT, TELANGANA - 504215
PH :8297848999.

MADHIRA

2828. SANTOSH AUTOMOTORS PVT LTD (--01), SURVEY NO 33/A, H -NO : 1-780/8, MCN COMPLEX, WYRA ROAD, MADHIRA, KHAMMAM,TELANGANA - 507203

MAHABUBABAD

2829. ADARSHA AUTOMOTIVES PVT LTD (--01), SY. NO.38/A, MAHBUBABAD REVENUE VILLAGE AND MANDAL, MAHBUBABAD. - 506101

MAHBUBNAGAR

2830. SRI JAYARAMA MOTORS PVT LTD (--01), PLOT NO.C1 & C2, INDUSTRIAL ESTATE, METTUGADA, MEHBOOBNAGAR - 504001
PH :8096998846.

MAHESHWARAM

2831. ADARSHA AUTOMOTIVES PVT LTD (--01), (BEARING #5-187, SURVEY NO.:336/A1, VILLAGE & MANDAL: MAHESHWARAM DISTT. RANGA REDDY - 501359

MALL

2832. PAVAN MOTORS PVT LTD (--01), MALL HYDERABAD ROAD,, YACHARAM MANDALAM,RANGA REDDY DIST., - 501509

MANCHERIAL

2833. ADARSHA AUTOMOTIVES PVT LTD (--03), SURVEY NO 477 / 2, GARMILLA VILLAGE, MANCHERIAL, TELANGANA
BEHIND MAHINDRA TRACTORS SHOWROOM,BELLAMPALLY ROAD, MANCHIRIAL , DISTT. ADILABAD - 504208
PH :8886302222.

MANTHANI

2834. VARUN MOTORS PVT LTD (--01), SURVEY NO 1018, H NO 16-4/D2, PLOT NO 5, LAINGADDA STREET, MANTHANI, - 505184
PH :8886619373.

MANUGURU

2835. SANTOSH AUTOMOTORS PVT LTD (--01), MANUGURU MAIN RD, PILOT COLONY, MANUGURU (PT), TELANGANA - 507117

MARIPEDA BUNGLAW

2836. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT LTD) (--01), KHAMMAM - WARANGAL HWY, MARIPEDA BUNGLOW, MARIPEDA, TELANGANA 506315 - 506315

MEDAK

2837. VARUN MOTORS PVT LTD (--01), SY.NO.:1486/A3, HYDERABAD ROAD, MEDAK (MDL & TOWN) - 502110
PH :9154953337.

MEDCHAL

2838. AUTOFIN LIMITED (--01), H. NO. 11-27/1, SURVEY NO.401, MEDCHAL VILLAGE AND MANDAL, DIST. - MEDCHAL. - 501401
PH :8885040020.

METAPALLY

2839. ADARSHA AUTOMOTIVES PVT LTD (--01), SURVEY NO. 40/U/2 CHOULAMADHI, METPALLY PIN CODE 505325 - 505325
PH :8886092222.

MIRYALGUDA

2840. PAVAN MOTORS PVT LTD (--01), SURVEY NO-940 &943, (OPPOSITE TO MINA ENGINEERING COLLEGE) NARKETPALLY ADDANKI BY-PASS ROAD,MIRYALAGUDA ,NALGONDA DISTRICT,ANDHRA PRADESH - 508207
PH :8790900399.

MOINABAD

2841. GEM MOTORS (INDIA) PVT LTD (--01), SURVEY NO. 70, PLOT NO. 4, VILLAGE AND GRAM PANCHAYAT – HIMAYATH NAGAR, MANDAL – MOINABAD, DISTRCT – RANGA REDDY. - 500075

MOMINPET

2842. VARUN MOTORS PVT LTD (--01), SY NO.242/A/3, MOMINPET (VILL & MDL) - 501202

MORTHAD

2843. VARUN MOTORS PVT LTD (--01), H NO -16-1/3/B, KARIMNAGAR ROAD, MORTHAD, TELANGANA - 503225

MUSTABAD

2844. VARUN MOTORS PVT LTD (--01), OPP: NEW BUSTAND,MUSTABAD,RAJANNA SIRICILLA (D) - 521107

NAGARKURNOOL

2845. SRI JAYARAMA MOTORS PVT LTD (--01), SURVEY NO.44/A AND 45/A, UYYALWADA VILLAGE, NAGARKURNOOL, TELANGANA - 509209

NALGONDA

2846. PAVAN MOTORS PVT LTD (--01), CHERLAPALLY VILLAGE, NALGONDA ROAD, NALGONDA - 508001

NARAYANKHED

2847. VARUN MOTORS PVT LTD (--01), D. NO. 1-6-111/25/B/5/A/1, SY NO. 57/2, BHUMAN COLONY, GRAM PANCHAYAT & MANDAL - NARAYANKHED, DISTRICT – MEDAK, TELANGANA. - 502286
PH :9885210555.

NARAYANPET

2848. SRI JAYARAMA MOTORS PVT LTD (--01), SURVEY NO. 468/4, MAHABUBNAGAR ROAD, NARAYANPET TOWN, DIST.-MAHABUBNAGAR, STATE - TELANGANA. - 509210

NARSAMPET

2849. ADARSHA AUTOMOTIVES PVT LTD (--01), OPP. TRIVENI JUNIOR COLLEGE, WARANGAL TO NARSAMPET HIGHWAY - 506132

NARSAPUR

2850. KALYANI MOTORS PRIVATE LIMITED (--01), SURVEY NO 66, BLOCK NO-19,NARSAPUR,DISTRICT:MEDAK, TELANGANA. - 534275
PH :9100067766.

NELLAKONDAPALLI

2851. VARUN MOTORS PVT LTD (--01), SY.NO. 211 ,212 AT KUSUMANCHI ROAD , NELAKONDAPALLI ,KHAMMAM DISTRICT, TELANGANA - - 507160

NIRMAL

2852. ADARSHA AUTOMOTIVES PVT LTD (--02), SURVEY NO: 1246/1,1247 & 1248 , SHASTRI NAGAR, NIRMAL, TELANGANA.

H. NO. 1-1-131, ,SHASTRINAGAR, ,MANCHIRIAL ROAD, DISTT. ADILABAD, NIRMAL - 504106
PH :8886342222.

NIZAMABAD

2853. VARUN MOTORS PVT LTD (--01), PLOT NO. GP 1-57/4/1,PANGARA BORGOAN,NIZAMABAD - 503230

PALAKURTHY

2854. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT LTD) (--01), SURVEY NO 537/B,MAIN RAOD, PALAKURTHY,JANGAON DISTRICTTELANGANA. - 506317
PH :8688838005.

PALWANCHA

2855. VARUN MOTORS PVT LTD (--01), SURVEY NO.758 & 757, NEHRU NAGAR, PALWANCHA (NEW POLANCHA) MANDAL & TOWN, BHADRADRI KOTHAGUDEM DISTT., TELANGANA. - 507115
PH :8297163222.

PARGI

2856. VARUN MOTORS PVT LTD (--01), HOUSE NO. 2-356 JANGAIAH COMPLEX, SURVEY NO. 217/EE4, JAYANTHI NAGAR COLONY, MANDAL – PARGI, DISTRICT – RANGA REDDY. - 510501

PARKAL

2857. ADARSHA AUTOMOTIVES PVT LTD (--01), SY.NO 946, H.NO 5-27, VIKAS NAGAR, PARKAL,WARANGAL. - 506164
PH :8886742222.

PEDAPALLY

2858. ADARSHA AUTOMOTIVES PVT LTD (--01), SURVEY NO 142, H NO 185, RANGAMPALLI VILLAGE, PEDDAPALLI , TELANGANA - 505172

PILERU

2859. VISHNU CARS PVT LTD (--01), VISHNU CARS PVT LTD, BESIDE NAGI REDDY FUNCTION HALL, PILERU, MUDUPULAVEMULA, ANDHRA PRADESH - 517214

RAMAGUNDAM

2860. ADARSHA AUTOMOTIVES PVT LTD (--01), 5-6-172 SURVEY NO. – 259/B, MEDIPALLY SHIVAR, RAMAGUNDAM MUNICIPALITY, DISTRICT – KARIM NAGAR, ANDHRA PRADESH - 505209
PH :8886144550.

RAMAYAMPET

2861. VARUN MOTORS PVT LTD (--01), SURVEY NO. 1626 & 1626/2 SITUATED AT BLOCK NO. 16, RAMAYAMPET, DISTRICT – MEDAK. - 502101

SADASHIVA NAGAR

2862. VARUN MOTORS PVT LTD (--01), #17-48/C,NH-44,MAIN ROAD, BESIDE GEEENBAVARCHI, SADASHIVNAGAR - 503145

SADHASHIVPET

2863. SAI SERVICE PRIVATE LIMITED (--01), PLOT NO. 2, SY NO. 974, GURUNAGAR COLONY, OLD BOMBAY HIGHWAY ROAD, SADASHIVPET, SANGAREDDY DIST. 502291. - 502291
PH :9966377888.

SANGAREDDY

2864. SAI SERVICE PRIVATE LIMITED (1011--05), H.NO.4-8-92/1/4/5, AHMED NAGAR, OPP.GOVT.ITI, SANGAREDDY, MEDAK (DIST), ANDHRA PRADESH - 502001
PH :7661811000.

SATUPALLI

2865. MITHRA AUTO AGENCIES PVT LTD (--01), SURVEY NO. 75 NEAR VIVEKANANDA STATUE,SATHUPALLI, KHAMMAM. - 507303
PH :9848988312.

SECUNDERABAD

2866. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT LTD) (--01), A1, MOTI VALLEY,TRIMULGHERRY,SECUNDERABAD, - 500015

2867. AUTOFIN LIMITED (--01), SURVEY NO. 33, MEDCHAL ROAD, BOWENPALLY, SECUNDERABAD - 500011
PH :8885040130.

2868. VARUN MOTORS PVT LTD (4603--0I), 1-10-176/1, BEHIND VARUN TOWERS-I, OPP. HYDERABAD PUBLIC SCHOOL, BEGUMPET, SECUNDERABAD, HYDERABAD, TELANGANA STATE. - 500016
PH :9985552452.

2869. POPULAR VEHICLES AND SERVICES LIMITED (1088--04), PLOT NO. 207, TADBUND, SECUNDERABAD. - 500009

2870. PAVAN MOTORS PVT LTD (--02), PLOT NO. 1-12, 749, 750, SURVEY NO. 751/2, VENKATADRI NAGAR, NEW MIRJALGUDA, MALKAJGIRI, SECUNDERABAD, TELANGANA - 500047
PH :9121293690.

SHAD NAGAR

2871. SRI JAYARAMA MOTORS PVT LTD (--01), SERVEY NO.445, FAROOQ NAGAR, SHADNAGAR, MAHABUB NAGAR DISTT. ANDHRA PRADESH. - 500216
PH :8096996671.

SHAMIRPET

2872. POPULAR VEHICLES AND SERVICES LIMITED (--01), SHED NO 2-242, MAJEEDPUR CROSS ROADS,SHAMIRPET, MEDCHAL-MALKAJGIRI,TELANGANA - 500078

SHANKARPALLY

2873. SAI SERVICE PRIVATE LIMITED (--01), SURVEY NO. 203, HYDERABAD ROAD OPP. SM FUNCTION HALL ROAD, SHANKARPALLY, RANGA REDDY DISTT. - 501203

SIDDIPET

2874. ADARSHA AUTOMOTIVES PVT LTD (--01), SURVEY 197/A, VILLAGE – PONNALA, SIDDIPET, DISTRICT – MEDAK, TELANGANA. - 502103

SIRCILLA

2875. ADARSHA AUTOMOTIVES PVT LTD (--01), H. NO. 10-1-7/2, 10-1-7/3, 10-1-7/3/A/1, KARIMNAGAR ROAD, SIRCILLA, DISTRICT – KARIMNAGAR, TELANGANA - 505301

SURYAPET

2876. PAVAN MOTORS PVT LTD (--01), SURVEY NO. 493, THALLAGADDA, SURYAPET MANDAL, NALGONDA DISTRICT, ANDHRA PRADESH. - 508213

TALLADA

2877. MITHRA AUTO AGENCIES PVT LTD (--01), SURVEY NO 890/A, D.NO 7-8, NARAYANAPURAM, TALLADA, TELANGANA - 507167
PH :9848988312.

TANDUR

2878. VARUN MOTORS PVT LTD (--01), H. NO. 2-1-20/3, 2-1-20/3/A & 2-1-20/9, PLOT NO. 45, 46, 47, SURVEY NO. 57 OF MALREDDYPALLY VILLAGE, TANDUR MUNICIPALITY, VIKARABAD DISTRICT, TELANGANA. - 501141
PH :8886619370.

THIMMAPUR

2879. KALYANI MOTORS PRIVATE LIMITED (--01), SY NO.51/LUU, THIMMAPUR VILLAGE , KOTHUR MANDAL, RANGAREDDY, TELANGANA - 509325

THORRUR

2880. ADARSHA AUTOMOTIVES PVT LTD (--01), SURVEY NO.1 TO 5, BEARING M. NO.4-153/1, VILLAGE & MANDAL THORRUR DISTT. WARANGAL - 506163

TOOPRAN

2881. ADARSHA AUTOMOTIVES PVT LTD (--01), PLOT NO 7&8, SY NO 185,184,179U, NAGULAPALLY VILLAGE,TOOPRAN MANDAL,TELANGANA STATE: TELANGANA CITY: TOOPRAN PIN : 502334 CITY CATEGO - 502334

UTNOOR

2882. ADARSHA AUTOMOTIVES PVT LTD (--01), OPP., KB COMPLEX, UTNOOR, DIST- ADILABAD

VARNI

2883. VARUN MOTORS PVT LTD (--01), H.NO.9-54/1, SATYA NARAYANA PURAM,VARNI, - 503201

VEMULWADA

2884. ADARSHA AUTOMOTIVES PVT LTD (--01), SURVEY NO 438,NAMPALLI, VEMULWADA VILLAGE, RAJANNA SIRCILLA-DISTRICT, TELANGANA - 505302

VIKARABAD

2885. GEM MOTORS (INDIA) PVT LTD (--01), SHOP NO. 3-2-93/2, VILLAGE – YENNAPALLY, VIKARABAD MUNCIPALITY, VIKARABAD, DISTRICT – RANGA REDDY, TELANGANA . - 501101
PH :9912349840.

VM BANJAR

2886. MITHRA AUTO AGENCIES PVT LTD (--01), DOOR NO 6-101/1, VM BANJAR VILLAGE, NEAR RTC BUS STAND, PENUBALLY MANDAL, KHAMMAM - 507302

WANAPARTHY

2887. SRI JAYARAMA MOTORS PVT LTD (--01), SURVEY NO.1149, KURNOOL ROAD, WANAPARTHY (A.P.) - 509103
PH :8096903879.

WARRANGAL

2888. ADARSHA AUTOMOTIVES PVT LTD (--02), PLOT NO.10, INDUSTRIAL AREA, MULUGU ROAD, WARRANGAL - 506007
PH :8886132222.

2889. ADARSHA AUTOMOTIVES PVT LTD (--03), OPPOSITE TO ORUGALLU FILLING STATION, HUNTER ROAD, SHAYAMPET, HUNAMKONDA, WARANGAL - 506001
PH :8886492222.
2890. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT LTD) (--01), SURVEY NO. 16, 16/A & 16/B, OPPOSITE KAKATIYA UNIVERSITY GATE-2, LASHKERSINGARAM REVENUE VILLAGE, HANAMKONDA MANDAL, WARANGAL. - 506001
PH :8688828010.
2891. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT LTD) (--02), PLOT NUMBER 9,10,11 & 13/A ,SURVEY NUMBER 148/A&B OF BHEEMRAM VILLAGE, WARANGAL. - 506015
PH :8688828015.
2892. ADARSHA AUTOMOTIVES PVT LTD (--05), SY.NO742/A,753, 100FEETROAD,WADEPALLY,HANAMKONDA,WARANGAL, TELANGANA STATE - 506001

YELLANDU

2893. VARUN MOTORS PVT LTD (--01), 15-129, BESIDE SBI SUDIMALA BRANCH, MAIN ROAD, YELLANDU, BHADRADRI, - 507101

ZAHIRABAD

2894. SAI SERVICE PRIVATE LIMITED (--01), PLOT NO-5,NEAR IBP PETROL BUNK, NH-9,ALIPUR,ZAHIRABAD,MEDAK (DIST),ANDHRA PRADESH - 502220
PH :7660005206.

## TRIPURA

AGARTALA

2895. JAIN UDYOG (6901-69-01), ARUNDHUTI NAGAR, OPP. INDUSTRIAL ESTATE, AGARTALA - 799003
PH :9862149275.
2896. JAIN UDYOG (6901-69-05), 58-B/C, INDUSTRIAL AREA ARUNDHATI NAGAR, AGARTALA. - 799003
2897. JAIN UDYOG (6901-69-06), KHATIAN NO. 1843, MOUJA & TEHSIL – KHAYERPUR, JIRANIA SUBDIVISION, AGARTALA - 799008
2898. PALLAVI MOTORS PVT LTD (6902-69-01), 44 NH ROAD, DAG NO. 495, DAG NO. 1748, DAG NO. 867, POST OFFICE KHERPUR, AGARTALA (TRIPURA) - 799008
PH :9864052488.

AMARPUR

2899. JAIN UDYOG (--01), NEAR MOTOR STAND, AMARPUR,TRIPURA - 799101

AMBASSA

2900. JAIN UDYOG (--01), A.A. ROAD, OPPOSITE OF CHANDRAI PARA HS SCHOOL, AMBASSA, DHALAI, TRIPURA. - 799289

BELONIA

2901. JAIN UDYOG (--01), SUKANTA NAGAR, S.B.C NAGAR, BANKAR, BELONIA, PIN-799155, TRIPURA - 799155

DAMCHERA

2902. PALLAVI MOTORS PVT LTD (--01), DAMCHERRA, NARENDRA NAGAR NORTH TRIPURA - 799256

DHARMANAGAR

2903. JAIN UDYOG (6901--03), DHARMANAGAR COLLEGE ROAD, DHARMANAGAR, TRIPURA(NORTH). - 799250

KAMALPUR

2904. PALLAVI MOTORS PVT LTD (--01), KAMALPUR, NEAR MANIKVHANDER BAZAR,, KAMALPUR AMBASSA ROAD, - 799285

KANCHANPURA

2905. PALLAVI MOTORS PVT LTD (--01), KANCHANPUR, URICHERRA JUMPUI ROAD , TRIPURA 799270 - 781352

KUMARGHAT

2906. PALLAVI MOTORS PVT LTD (--01), UTTAR PABIA CHERRA KUMARGHAT, M/C WARD NO.06,UNOKOTI - 799264

MANU

2907. PALLAVI MOTORS PVT LTD (--01), MANU, MAIN BAZAR, DHALAI TRIPURA 799275 - 799275

NORTH LAKHIMPUR

2908. VISHAL CAR WORLD PVT LTD (--01), VILL-CHARAIMORIA (MOIDOMIA), IST-NORTH-LAKHIMPUR, STATE-ASSAM - 787001

SABROOM

2909. JAIN UDYOG (--01), VILL- PASCHIM JALEFA, TAHESIL- HARINA, SABROOM SOUTH TRIPURA, PIN-799145 - 799145

SANTIBAZAR

2910. PALLAVI MOTORS PVT LTD (--01), SANTIBAZARM NEAR SDM OFFICE,, SOUTH TRIPURA, - 799144

TELIAMURA

2911. PALLAVI MOTORS PVT LTD (--01), SOUTH KARAILONG,, PACHIM TELIAMURA, TRIPURA, - 799201

UDAIPUR

2912. JAIN UDYOG (--01), DHWAJANAGAR INDUSTRIAL ESTATE,UDAIPUR,TRIPURA (SOUTH) - 799116
PH :9774020152.

## UTTAR PRADESH

AFZALGARH

2913. SHAKUMBARI AUTOMOBILES PVT LTD (--01), VILL FATEHULLANAGAR,AFZAL GARH MARH,, NH-74,AFZALGARH,TEHSIL DHAMPUR, - 246722

AGRA

2914. KTL PVT LTD (6606-66-01), MUGHAL ROAD, KAMLA NAGAR, AGRA - 282004
2915. PREM MOTORS PVT LTD (--01), 45, OPPOSITE AGRA COLLEGE, GOKULPURA, AGRA, UTTAR PRADESH - 282002
PH :9690010799.
2916. KTL PVT LTD (6606--02), KHASRA NO. 171, SEWLA JAT, GWALIOR ROAD, AGRA, UTTAR PRADESH - 282001
PH :8449715099.
2917. MERAK VEHICLES (A UNIT OF ONE 3 VENTURES) (6609-66-01), KHASRA NO 65 & 74, MAUZA MOHAMMADPUR, AGRA-DELHI ROAD (NH-2), SIKANDRA, AGRA UTTAR PRADESH-282007. - 282007
PH :9690486139.

AJITMAL

2918. KULDEEP MOTORS PVT LTD (--01), MUGHAL ROAD AJITMAL, DIST : AURAIYA - 206121

AKBARPUR

2919. KTL PVT LTD (2801--03), KANPUR ROAD, AKBARPUR - 209206
PH :7408409348.
2920. SMARTWHEELS PRIVATE LIMITED (7201--08), TANDA ROAD, VILL-BUDHAEEPUR, PO-KATRIYA YAKOOBPUR, AKBARPUR , DIST-AMBEDKAR NAGAR (U.P.) - 224122
PH :7705803248.

ALIGANJ

2921. DEV MOTORS PVT LTD (--01), KAYAMGANJ ROAD, ALIGANJ, ETAH, - 226024

ALIGARH

2922. DEV MOTORS PVT LTD (--01), NEAR BANNA DEVI, G.T.ROAD, ALIGARH - 202001
2923. DEV MOTORS PVT LTD (--04), PLOT NO 97, VILLAGE SIKANDERPUR, BHUKRAVALI, GT ROAD BYE PASS, ALIGARH - 202002
PH :7351345577.

ALLAHABAD

2924. AMITDEEP MOTORS PVT LTD (2901-29-01), 26 SULEM SARAI, G.T ROAD, ALLAHABAD - 211001
2925. SARASWATI MOTORS LLP (2904-29-01), PLOT NO 24, INDUSTRIAL AREA MNIT COLLEGE, TELIYARGANJ, PRAYAGRAJ, UTTAR PRADESH. - 211004
PH :8090854053.
2926. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (2905-29-01), ARAZI NO 390 AND 389 AT KATKA, ANDAWA SAHSON BYPASS, PRAYAGRAJ - 211002
PH :9415324201.
2927. SARASWATI MOTORS LLP (2904-29-02), 342, BHAGIPUR, SARAI INAYAT, ANDWA,JHUNSI, PRAYAGRAJ - 211019
2928. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (2905-29-02), 46, DANDI REWA ROAD, OPPOSITE H.P JANTA PETROL PUMP, PRAYAGRAJ, UTTAR PRADESH. - 211008

AMETHI

2929. KTL AUTOMOBILE PRIVATE LIMITED (--01), PLOT NO – E 32, INDUSTRIAL AREA TEKARIA, UPSIDC, GAURIGANJ, DIST: C.S.M.NAGAR - 227409
PH :7379557377.

AMRITPUR

2930. KULDEEP MOTORS KANPUR LLP (--01), TEHSIL ROAD NEAR TEHSIL BHAWAN, AMRITPUR, DISTRICT FARRUKHABAD, UTTAR PRADESH - 209622

AMROHA

2931. AKANKSHA AUTOMOBILES PVT LTD (--01), AMROHA – JOYA ROAD, NEAR PUNJAB NATIONAL BANK, AMROHA, UTTAR PRADESH, PIN CODE: 244221 - 244221
PH :7247800064.

ANPARA

2932. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (--01), KAHUWA NALA, AURI-BINA ROAD, AURI ANPARA, DISTRICT – SONEBHADRA. - 232101

ANUPSHAHR

2933. SKUNIVERSE AUTOMOBILE PVT LTD (--01), KHASRA NO. 341, BULANDSHAHR ROAD, ANOOPSHAHR, DIST. BULANSHAHR, PIN-203390, UTTAR PRADESH - 203390
PH :7055118430.

AONLA

2934. KAVISHA MOTORS PVT LTD (--01), COMMERCIAL PLOT, RAN NAGAR ROAD, NEAR MUNICIPALITY OFFICE, TEHSIL - AONLA. DIST., BAREILLY, STATE- UTTAR PRADESH. - 243301

ATARRA

2935. MY CAR PVT. LTD. (--01), 14/292, AZAD NAGAR,, ATTARA, BANDA, - 210201

ATRAULI

2936. DEV MOTORS PVT LTD (--01), GATA NO. 126 TEHSIL ATRAULI NEAR HARIYAL, CENTER MOJA MADHAULI NISFI ASHARABAD - 202280

AURAI

2937. VARANASI MOTORS PVT LTD (--01), KHATA / KHATAUNI NO. 00045, GT ROAD (EHAK BHAURA), OPP. CHINI MILL,VILLAGE & TEHSIL AURAI, DISTT: BHADHOI, UTTARPRADESH, PIN 2221 301 - 2221301

AURAIYA

2938. KULDEEP MOTORS PVT LTD (--01), NEAR INDIAN OIL TIRAHA, KANPUR ROAD, AURAIYA. - 206241
PH :9235358444.

AZAMGARH

2939. DEEP MOTORS (--01), HARBANSHPUR NARAULI, AZAMGARH - 276001
PH :9838072905.
2940. DEEP MOTORS (--04), VILLAGE – BALDEV MADURI, TEHSIL – SAGRI, DISTRICT – AZAMGARH, UTTAR PRADESH. - 276138

BABRALA

2941. AKANKSHA AUTOMOBILES PVT LTD (--01), CHANDAUSI ROAD, BABRALA, DISTRICT SAMBHAL, UTTAR PRADESH. - 243751
PH :7895600005.

BACHRAWAN

2942. KTL AUTOMOBILE PRIVATE LIMITED (--01), VISHNUPUR, PHARWAN, RAEBARELI-LUCKNOW ROAD, DIST. -RAEBARELI. - 229301
PH :99184512222.

BAH

2943. KTL PVT LTD (--01), 16B, DHOBAIR, VILLAGE - BAH, DIST.-AGRA, UTTAR PRADESH. - 283104

BAHERI

2944. KAVISHA MOTORS PVT LTD (--01), KASRA NO. 530, 531, 532, 533. NAINITAL ROAD, OPP. RAMLILA GROUND, BAHERI, DISTRICT – BAREILLY, UTTAR PRADESH - 243201

BAHRAICH

2945. ANAND MOTOR AGENCIES LTD (1301--05), LUCKNOW ROAD,BEHRAICH,UTTAR PRADESH - 271801
PH :9519596080.

BAKSHI KA TALAB

2946. BRIGHT 4 WHEEL SALES PVT LTD (1305--04), PLOT NO: 57 TO 60, KAUSHALABAD, BADHAULI BKT, PARGANA MOHANNA, SITAPUR ROAD, BAKSHI KA TALAB, LUCKNOW - 226020
PH :7317049000.

BALLIA

2947. DEEP MOTORS (--03), MAIDEYPUR, RAJDHANI ROAD, BALLIA - 277001
PH :9838072917.

BALRAMPUR

2948. ANAND MOTOR AGENCIES LTD (--01), NEAR BALRAMPUR CHINI MILLS, GONDA ROAD,BALRAMPUR-UTTAR PRADESH - 271201
PH :6307995976.

BANDA

2949. MY CAR PVT LTD (2803--03), KALUKUAN, TINDWARI ROAD, BANDA - 210001
PH :9792971223.
2950. SUMITRA DS MOTORS PVT LTD (--01), PURANPUR ROAD, BANDA, TEHSIL BANDA, THANA BANDA, DISTT. SHAHJAHANPUR – U.P. - 242042
2951. MY CAR PVT LTD (--02), ARAZI NO 1180 & 1181, LADAKAPURWA, TINDWARI ROAD, BANDA, UTTAR PRADESH - 210001

BANSI

2952. ARBIT AUTOMOBILES PVT LTD (--01), KHASRA NO. 66 M, GRAM: BHAWNI, TAPPA: KUNDARANA, PARGANA: BANSI EAST, TEHSIL BANSI, DISTT : SIDARTHNAGAR - 272153

BANTHRA

2953. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (--01), KHASRA NO.1628 AMARPUR, SIKANDARPUR MARKET, BANTHRA, KANPUR ROAD LUCKNOW - 226401
PH :9919101456.
2954. ONE UP MOTORS INDIA PVT LTD (1306--05), KHASRA NO. 1166, KHANDEDEV, KANPUR ROAD, BANTHRA, LUCKNOW - 226401

BARABANKI

2955. BRIGHT 4 WHEEL SALES PVT LTD (1305--03), VILL. DHARSANIA, LUCKNOW ROAD, NAWABGANJ, BARABANKI - 225001
PH :9838075960.

BARAUT

2956. TANYA AUTOMOBILES PVT LTD (--01), 240/2 SHAHPUR-BADOLI, DELHI SAHARANPUR ROAD, BARAUT, BAGHPAT, UTTAR PRADESH. - 250611
PH :7055300019.

BAREILLY

2957. CORAL MOTORS (P) LTD (5602-56-01), STATION ROAD, BAREILLY - 243001
2958. CORAL MOTORS (P) LTD (5602-56-03), PILIBHIT BYE PASS ROAD, EXECUTIVE CLUB CROSSING, BAREILLY, UTTAR PRADESH - 243002
2959. KAVISHA MOTORS PVT LTD (5601-56-01), 4TH KM, RAMPUR ROAD, CLUTTER BUCKGANJ, BAREILLY - 243502
2960. NANDINI MOTORS (A UNIT OF PARK LANE ENTERPRISES PRIVATE LIMITED) (5604-56-01), APEX MULTISPECIALITY HOSPITAL PILIBHIT BYPASS RD BAREILLY - 243001

BARHAJ

2961. SMARTWHEELS PRIVATE LIMITED (--01), VILL. -LAWARCHHI,, BARHAJ DEORIA ROAD, - 274601

BARHAN

2962. KTL PVT LTD (--01), VILLAGE BARHAN, ETMADPUR, AGRA, UTTAR PRADESH. - 283201

BASTI

2963. SMARTWHEELS PRIVATE LIMITED (7201--05), MANORI CHAURAHA, DUMARIYA GANJ ROAD, BASTI - 270002
2964. ARBIT AUTOMOBILES PVT LTD (7203-72-03), SANSARPUR FUTAHIA POST GANDHI NAGAR DISTRCIT BASTI UTTAR PRADESH - 272182
PH :8953412821.

BEHTA

2965. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (--01), KHASRA NO. 254, OPPOSITE SANGAM MOTORS, KURSI ROAD, BEHTA - 226026
PH :6388901514.

BELA

2966. KULDEEP MOTORS LUCKNOW PVT LTD (--01), TIRWA ROAD BELA,DISTRICT AURAIYA U.P. - 206251

BHADOHI

2967. VARANASI MOTORS PVT LTD (8402--02), VARNASI ROAD, BHADOHI - 221401
PH :9838360662.

BHARTANA

2968. KULDEEP MOTORS PVT LTD (--01), RAJA GANJ,BHARTANA,DISTRICT ETAWAH - 206242

BHINGA

2969. ANAND MOTOR AGENCIES LTD (--01), PATNAKHARGAURA, BHINGA, SHRAVASTI - 271831
PH :9415013059.

BHOGNIPUR

2970. KULDEEP MOTORS KANPUR LLP (--01), NEAR CHANDRA PETROL PUMP,KANPUR JHANSI ROAD,TEHSIL BHOGNIPUR,KANPUR DEHAT,UP - 209112

BHOJPUR

2971. MOTORCRAFT SALES PVT LTD (--01), OPPOSITE PRIMARY GOVERNMENT SCHOOL, HAPUR ROAD, VILLAGE BHOJPUR, TEHSIL – MODINAGAR, DISTRICT – GHAZIABAD. - 201204
PH :9410038456.

BIJNOR

2972. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (--01), KHASRA NO. 1573, NEAR GROUP CENTRE, CRPF, CAMP, BIJNORE, LUCKNOW, PIN-226002, UP - 226002

BIJNORE

2973. SHAKUMBARI AUTOMOBILES PVT LTD (--01), PLOT & KHASRA NO. 253/3 & 258/1 ADJACENT KHEDI CHAURAHA, NEAR PULKIT HOSPITAL, DELHI-BIJNOR HIGHWAY, BIJNOR, DIST. – BIJNOR, UTTAR PRADESH. - 246701
PH :8630881409.

BILARI

2974. AKANKSHA AUTOMOBILES PVT LTD (--01), 2KM-BILARI NH 509, NEAR SBS SCHOOL, BILARI, MORADABAD 244001 - 244001
PH :7900600008.

BILASPUR-UP

2975. AKANKSHA AUTOMOBILES PVT LTD (--01), NH-87 ,OPPOSITE SHAGUN BANQUET HALL, NEAR MILTON ACADEMY SCHOOL, RAMPUR NAINITAL ROAD, BILASPUR, DISTRICT – RAMPUR. - 244921
PH :9105370007.

BISALPUR

2976. CORAL MOTORS (P) LTD (--01), KHASRA NO. 668, VILLAGE : BISALPUR, DISTT: PILIBHIT, UTTAR PRADESH - 262201
PH :9837891846.

BISWAN

2977. CONCEPT CARS LIMITED (--01), BILJHARIYA, OPPOSITE-555, BRICK FIELD, BISWAN - 261201 - 261201
PH :7607696666.

BUDAUN

2978. CORAL MOTORS (P) LTD (5602--04), PLOT NO.-72, BAREILY-MATHURA HIGHWAY, BUDAUN, UTTAR PRADESH - 132103
PH :9837891846.

BUDHANA

2979. RADHA GOVIND AUTOMOBILES PVT LTD (--01), BARAUT ROAD,, NEAR BALWALA POLICE STATION, - 251309

BULANDSHAHR

2980. SKUNIVERSE AUTOMOBILE PVT LTD (--01), KHASRA NO 561 , BHOOR, OPP PANDIT PETROL PUMP , BULANSHAHR - 203001
PH :9219694600.
2981. SKUNIVERSE AUTOMOBILE PVT LTD (--02), KHASRA NO.2261, NEAR T POINT , BYPASS SIKARPUR ROAD ,BULANDSHAHR - 203001
PH :7055118430.

CHAIL

2982. SARASWATI MOTORS LLP (--01), MAUJA CHAIL, TEHSIL CHAIL, KAUSHAMBI, UTTAR PRADESH - 212202

CHAKARNAGAR

2983. KULDEEP MOTORS PVT LTD (--01), RAJPUR ROAD, CHAKARNAGAR, DISTT : ETAWAH - 206125

CHAKIA

2984. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (--01), KATHSILA NAHER, NEAR SAINT JOHN'S SCHOOL CHAKIA, DISTRICT – CHANDAULI. - 232101
PH :9450544961.

CHANDAUSI

2985. AKANKSHA AUTOMOBILES PVT LTD (--01), AZAD ROAD, NEAR ROADWAYS, CHANDAUSI (BHEEM NAGAR) - 202412
PH :7248000002.

2986. AKANKSHA AUTOMOBILES PVT LTD (--02), PATHRA CHOWK, BADAUN ROAD (NEAR INDIAN OIL FILLINGSTATION), CHANDAUSI, DISTRICT SAMBHAL, UTTAR PRADESH - 202414. - 202414

CHAURE BAZAR

2987. SMARTWHEELS PRIVATE LIMITED (--01), PLOT NO 366, GRAM CHAURE CHANDAULI, CHAURE BAZAAR, BIKAPUR TEHSIL, DISTT AYODHYA - 224209

CHAURI CHAURA

2988. ARBIT AUTOMOBILES PVT LTD (--01), ARAZI NO 561 DOMARI KHURD, CHAURI CHAURA, GORAKHPUR - 273201
PH :8953412821.

CHIBRAMAU

2989. KTL PVT LTD (--01), PLOT GHATA NO. 70, MAUJA - LALAKPUR, VILLAGE - CHHIBRAMAU, DIST.-KANNAUJ, UTTAR PRADES. - 209721

CHITRASENPUR

2990. AGR AUTOMOBILES PVT LTD (--01), KHASRA NO-194,CHITRASENPUR, KACHHUWA ROAD, VARANASI, PIN -221313 - 221313
PH :9889803355.

COLONELGANJ

2991. SMARTWHEELS PRIVATE LIMITED (--01), OPPOSITE BHARAT PETROL PUMP, PIPRI, COLONELGANJ, DISTT- GONDA, UTTAR PRADESH - 271502

DADRI

2992. RANA MOTORS PVT LTD (--01), KHASRA NO -1242, KHATONI NO – 56, VILLAGE DHOOM MANIKPUR, DADRI, UTTAR PRADESH - 203207

DALMAU

2993. KTL AUTOMOBILE PRIVATE LIMITED (--01), DALMAU ROAD, OPPOSITE BHAGIRATHI GUEST HOUSE - 229203
PH :9918451222.

DANKAUR

2994. MOTORCRAFT SALES PVT LTD (--01), OPP. SHRI DRONACHARYA DEGREE COLLEGE, DANKAUR, DIST. - GAUTAM BUDH NAGAR, HARYANA. - 203201
PH :9810289355.

DEBAI

2995. SK UNIVERSE AUTOMOBILE PRIVATE LIMITED (--01), KHASRA NO. 299/2, SABALPUR DEBAI DISTT, BULANDSHAHR - 203393

DEOBAND

2996. ATELIER AUTOMOBILES (--01), OPPOSITE CIVIL COURT, MUZZAFARNAGAR HIGHWAY, DEOBAND - 247001
PH :7500220011.

DEORIA

2997. SMARTWHEELS PRIVATE LIMITED (--01), CFC BUILDING, INDUSTRIAL ESTATE, DEORIA, DISTRICT DEORIA, UTTAR PRADESH
PLOT NO. C-7, AND SHED NO. D-3, GOVERNMENT INDUSTRIAL ESTATE MEHRA, DEORIA, DIST.-DEORIA, UTTAR PRADESH. - 274001

2998. ARBIT AUTOMOBILES PVT LTD (--01), ARAZI NO 467 MI & 607 MAUJA SONUGHAT PARGANA SALEMPUR MAJHAULI, DEORIA, UTTAR PRADESH - 274001
PH :8953412821.

DERAPUR

2999. KTL PVT LTD (--01), VILLAGE - DERAPUR, KANPUR DEHAT, UTTAR PRADESH. - 209301

DHAMPUR

3000. SHAKUMBARI AUTOMOBILES PVT LTD (--01), KHASRA NO. 205, OPPOSITE, UHSA SMARAK SCHOOL, MORADABAD ROAD, TEHSIL - DHAMPUR, MOJA - ALEHPUR, DIST.-BIJNOR, UTTAR PRADESH. - 246761
PH :9675970960.

DHAURAHARA

3001. SUMITRA DS MOTORS PVT. LTD. (--01), DHAKHERWA ROAD, NEAR HAMID PETROL PUMPBPCL, DHAURAHRA, LAKHIMPUR KHERI - 262723

DIBYAPUR

3002. KULDEEP MOTORS PVT LTD (--01), AURAIYYA ROAD, DIBIYAPUR - 206244
PH :9235258425.

DOMARIAGANJ

3003. SMARTWHEELS PRIVATE LIMITED (--01), VILL & POST – CHAUKHARA, DOMARIAGANJ, DISTT – SIDDHARTH NAGAR - 272193
PH :7705800602.

ETAH

3004. DEV MOTORS PVT LTD (--01), GATA NO 685/4 VILL GIRORA, ETAH-KASGANJ ROAD, ETAH, UP - 207001
PH :7351345577.

ETAWAH

3005. KULDEEP MOTORS PVT LTD (--01), PAKKA BAGH, KANPUR ROAD, ETAWAH - 206001
PH :257029.

FAIZABAD

3006. SMARTWHEELS PRIVATE LIMITED (7201--02), SAHADAT GANJ, LUCKNOW ROAD, FAIZABAD, UTTAR PRADESH. - 224001
PH :7705803245.

3007. SMARTWHEELS PRIVATE LIMITED (7201-72-03), GHATAMPUR MAGALSI, OPP TRIMURTI HOTEL, TEHSIL SOHAWAL, FAIZABAD, UTTAR PRADESH - 224001
PH :7705800602.

FAKHARPUR

3008. ONE UP MOTORS INDIA PVT LTD (--01), GHASIPUR, FAKHARPUR, BAHRAICH (UP) - 271902
PH :9935275786.

FARIDPUR

3009. KAVISHA MOTORS PVT LTD (--01), GATE NO. 216, KASBA SARAI, TEHSIL – FARIDPUR, DISTRICT – BAREILLY, UTTAR PRADESH. - 243503

FARRUKHABAD

3010. MY CAR PVT LTD (2803--04), NEKPUR KALAN, FARRUKHABAD - 209625
PH :9792970093.

FATEHABAD

3011. KTL PVT LTD (--01), KHASRA NO. 730/731, GRAM MAUJA, MADAYNA SIKRARA MODE, FATEHABAD, DISTRICT – AGRA, UTTAR PRADESH - 283111
PH :8449710051.

FATEHPUR

3012. KTL PVT LTD (2801--04), NH-2, OPP. RTO OFFICE, KANPUR ROAD, FATEHPUR - 212601

3013. BRIGHT 4 WHEEL SALES PVT LTD (--01), GATA NO-637 VILL.ISRAULI, TEHSIL, FATEHPUR, BARABANKI - 212601

FAZILNAGAR

3014. SMARTWHEELS PRIVATE LIMITED (--01), NEAR BAGHAUCH GHAT TURN FAZILNAGAR, UTTAR PRADESH - 274401

FIROZABAD

3015. DEV MOTORS PVT LTD (--01), GATE NO.435, MOUJA-DHOLPURA, , NEAR ST JOHNS CHAURAHA, AGRA ROAD, FIROZABAD UTTAR PRADESH - 283203

GAJRAULA

3016. AKANKSHA AUTOMOBILES PVT LTD (--01), JHANAKPURI OPPOSITE RELIANCE PETROL PUMP, DELHI ROAD, GAJRAULA - 244235
PH :7895400003.

GARH MUKTESHWAR

3017. ROHAN MOTORS LTD (--01), "EAST WARD NO. 8, ADARSH NAGAR, GARH, MUKTESHWAR, DIST. HAPUR, PIN-245202 - 245202

GHATAMPUR

3018. MY CAR PVT LTD (--01), TRANSPORT NAGAR, NEAR INDIAN OIL PETROL, HAMIRPUR ROAD, GHATAMPUR, PIN-209206, - 208003

GHAZIABAD

3019. ROHAN MOTORS LTD (5904-59-01), 432 MUKAND NAGAR, G.T.ROAD, GHAZIABAD - 201001

3020. REGENT AUTOLINKS PVT LTD (5902-59-01), A-10/9 INDUSTRIAL AREA, SITE NO 3, MEERUT ROAD, GHAZIABAD - 201001

3021. ROHAN MOTORS LTD (5904--02), PLOT NO.46, MEERUT-DELHI ROAD, MORTA, GHAZIABAD - 201102

3022. T R SAWHNEY MOTORS PVT LTD (5905--01), PLOT N0. 96, RAJINDER NAGAR INDUSTRIAL AREA, MOHAN NAGAR, GHAZIABAD, DISTT. - GHAZIABAD, U.P. - 201007

3023. SNV AUTOMOBILES PVT LTD (5906-59-01), PLOT NO. 15, SOUTH SIDE GT ROAD INDUSTRIAL AREA, GHAZIABAD, UTTAR PRADESH - 201001 - 201001
PH :9650324325.

3024. GLOBUS AUTO LLP (5907-59-01), 139, PANDAV NAGAR, GHAZIABAD, PIN-201001, UTTAR PRADESH - 201001
PH :8588872804.

3025. GLOBUS AUTO LLP (-59-02), 139, PANDAV NAGAR, GHAZIABAD, PIN-201001 139, PANDAV NAGAR, GHAZIABAD, PIN-201001 - 201001

GHAZIPUR

3026. AGR AUTOMOBILES PVT LTD (8403--03), RKBK PETROL PUMP, NEAR BANSI BAZAR, GAZIPUR - 2333001
PH :2361136.

GHIROR

3027. KULDEEP MOTORS PVT LTD (--01), NEAR SSD COLLEGE, KARHAL ROAD, GHIROR, DISTRICT – MAINPURI, UTTAR PRADESH.
KARHAL ROAD, TEHSIL – GHIROR, DISTRICT – MAINPURI, UTTAR PRADESH.
PH :9536755555.

GOLA

3028. SMARTWHEELS PRIVATE LIMITED (--01), NEAR KANYA INTER COLLEGE, BHARASADA, GOLA, DISTT – GORAKHPUR, UTTAR PRADESH - 273408
PH :7705800602.

GONDA

3029. SMARTWHEELS PRIVATE LIMITED (7201--07), JANKI NAGAR, OPP INDIAN OIL DEPOT, BAHRAICH ROAD, GONDA, UTTAR PRADESH, - 271001
PH :7705803261.

GORAKHPUR

3030. SMARTWHEELS PRIVATE LIMITED (7201--01), MOHADDIPUR, (NEAR RAMGARH TAL), GORAKHPUR (U.P.) - 273012
PH :7705803152.

3031. SMARTWHEELS PRIVATE LIMITED (7201--06), NEAR T B HOSPITAL, LACHCHIPUR, NEPAL ROAD, GORAKHPUR - 273012
PH :7705803109.

3032. SMARTWHEELS PRIVATE LIMITED (7202--01), PLOT NO.AL-4, SECTOR-9, GIDA, GORAKHPUR. - 273209

3033. ARBIT AUTOMOBILES PVT LTD (7203-72-01), ARAZI NO. 66/1/1 MI & 66/2/1MI, 66 MI, MAUZA - MAHEWA MUSTAKIL, NEAR FALMANDI CHOWK, TRANSPORT NAGAR, GORAKHPUR, UTTAR PRADESH. - 273016

3034. ARBIT AUTOMOBILES PVT LTD (7203-72-1B), MEDICAL COLLEGE ROAD, NEAR SPORTS COLLEGE, GORAKHPUR, UTTAR PRADESH - 273016

GOSAIGANJ

3035. BRIGHT 4 WHEEL SALES PVT LTD (--01), KHASRA NO. 24, VILLAGE - SHEKHANPUR, PARGANA MOHANLALGANJ, TEHSIL - MOHANLALGANJ, DIST.-LUCKNOW, UTTAR PRADESH. - 226501
PH :9838075929.

GREATER NOIDA

3036. ROHAN MOTORS LTD (--01), 63-A, UDYOG VIHAR, GREATER NOIDA, UTTER PRADESH - 201306

3037. VIPUL MOTORS PVT LTD (--01), PLOT NO. 64, ECOTECH 12, GREATER NOIDA (WEST), UP. - 201009
PH :9811233385.

HAIDERGARH

3038. BRIGHT 4 WHEEL SALES PVT LTD (--01), PROPERTY SHOP NO. 5, 6 AND 7, VILLAGE - GOTAUNA, PARGANA - HAIDERGARH, TEHSIL - HAIDERGARH, DISTRICT - BARABANKI. - 225124

HAMIRPUR

3039. KTL PVT LTD (--01), VILLAGE RAMEDI,KANPUR ROAD, HAMIRPUR - 210301
PH :7704907587.

HAPUR

3040. ROHAN MOTORS LTD (--01), KHASRA NO – 2225 , BAHADUR DHARAM KANTA, NEAR SUPREME PETROL PUMP, GARH ROAD, HAPUR, UTTARPRADESH - 245101 - 245101

HARDOI

3041. CONCEPT CARS LIMITED (--01), NANAK GANJ, LUCKNOW ROAD, HARDOI - 241001

3042. CONCEPT CARS LIMITED (--04), PLOT NO. 1609 & 1605 GANGA BUX PURVA, BILGRAM ROAD, HARDOI KANPUR HIGHWAY, HARDOI, UTTAR PRADESH. - 241001

HARGAON

3043. CONCEPT CARS LIMITED (--01), SITAPUR TO LAKHIMPUR ROAD, NEAR HARGAON DRAM KANTA KESHRUWA, TEHSIL. HARGAON, DIST. SITAPUR, UTTAR PRADESH. - 261121

HATHRAS

3044. DEV MOTORS PVT LTD (--03), NEAR NAGLA UMMED, ALIGARH ROAD, HATHRAS - 204101
PH :9917435500.

IGLAS

3045. DEV MOTORS PVT LTD (--01), MATHURA ROAD, IGLAS, DISTRICT ALIGARH. - 202124
PH :9837549000.

ITUNJA

3046. BRIGHT 4 WHEEL SALES PVT LTD (--01), 90M GATA GRAM MANDOLI, ITTAUNJA, LUCKNOW, UTTAR PRADESH-226203. - 226203
PH :7011482503.

JAGATPUR

3047. KTL PVT LTD (--01), GATA NO.331, JOGMAGDIPUR POORE TAYN, NEAR MADRASA ROAD, LUCKNOW PRAYAGRAAJ HIGHWAY, JAGATPUR, 229402 - 229402

JAGDISHPUR

3048. BRIGHT 4 WHEEL SALES PVT LTD (--01), KATHORA,MUSAFIRKHANA,LUCKNOW SULTANPUR ROAD,JAGDISPUR-UTTAR PRADESH - 227817

JAGNER

3049. MERAK VEHICLES (A UNIT OF ONE 3 VENTURES) (--01), SHRI RAM GARDEN, AGRA ROAD, NEAR RADHA KRISHNA MANDHIR, JAGNER, UTTAR PRADESH, 283115 - 283115
PH :7896500400.

JALALABAD

3050. SUMITRA DS MOTORS PVT LTD (--01), GRAM: SUJAWALPUR, BARIELLY ROAD, TEHSILL: JALALBAD, DIST. SHAHJHANPUR - 242221

JALALPUR

3051. SMARTWHEELS PRIVATE LIMITED (--01), SURHURPUR, TEHSIL - JALALPUR, UTTAR PRADESH - 224149

JALAUN

3052. KULDEEP MOTORS KANPUR LLP (--01), PARSHURAM NAGR, JALAUN KONCH ROADJALAUN, UTTAR PARDESH - 285123

JAUNPUR

3053. KIRTI KUNJ AUTOMOBILES PVT LTD (--01), KHANPUR AKBAR, KUTTUPUR TIRAHA - 222001
PH :9554951026.

JHANSI

3054. SURI AUTOMOBILES (6001-60-01), BALAJI UNNA ROAD, ANSAL COLONY, JHANSI PIN – 284002. - 284002
PH :8881811383.

3055. VELOCITY CARS ( A UNIT OF BASERA VELOCITY AUTOHUB PVT LTD) (6002--01), PLOT NO 486, 487, 488, 489 AND 477 (PATTA NUMBERS), MAUZA - KOCCHABHANWAR, BLOCK - BADAGAON, TEHSIL AND DISTT - JHANSI. - 284128

KAKOD

3056. SKUNIVERSE AUTOMOBILE PVT LTD (--01), GATA NO.1738,V-KAKORE DEHAT, TEHSIL SIKANDRABAD,DIST.BULANDSHAHR, - 203203

KANNAUJ

3057. KTL PVT LTD (2801--05), PLOT NO. - 377, AKBARPUR, KANNAUJ - 209725
PH :7408409305.

KANPUR

3058. KTL PVT LTD (2801-28-01), 9/46, BENAJHABAR ROAD, HARSH NAGAR, KANPUR - 208002
PH :7408409341.

3059. MY CAR PVT LTD (2803-28-01), 84/54 C, JARIB CHOWKI ,G.T. ROAD, KANPUR - 208003
PH :9792970511.

3060. KTL PVT LTD (2801-28-02), SHVAATRA KRISHNA NAGAR, G T ROAD, KANPUR - 208007
PH :7408409253.

3061. MY CAR PVT LTD (2803-28-02), C-16, SITE-1, PANKI INDUSTRIAL AREA, KANPUR - 208022
PH :9792970086.

3062. S B CARS PVT LTD (2806-28-01), 77B , FAZALGANZ, KANPUR - 208012

3063. MY CAR PVT LTD (2803-28-05), 88, BLOCK-T, FACTORY AREA, FAZALGANJ, KANPUR - 208004
PH :9792970081.

3064. S B CARS PVT LTD (2806-28-05), 1/6-7 AMBEDKAR PURAM, AWAS VIKASH, KALYANPUR, KANPUR - 208017
PH :7408525252.

3065. KULDEEP MOTORS KANPUR LLP (--01), BUKHAND NO. 756, 756A, 757, BLOCK: W, YOJNA: 2, JUHI KALAN, BARRA BYE PASS, KANPUR. - 208017
PH :9076608701.

3066. KTL PVT LTD (2801--07), ARAZI NO. 1110, VILLAGE BAIRI, AKBARPUR, KACHHAR, INDIRA NAGAR, KANPUR, UTTAR PRADESH - 208026
PH :7408409379.

3067. KULDEEP MOTORS KANPUR LLP (-28-02), PROPERTY NO. C-4 SITE-II, PANKI INDUSTRIAL AREA, KANPUR. - 208020

3068. MY CAR PVT LTD (2803-28-06), PLOT NO.64A, PAHARPUR, NEAR INDIRA PETRO, HAMIRPUR ROAD, NAUBASTA, PIN-208021 - 209401

KANTH

3069. AKANKSHA AUTOMOBILES PVT LTD (--01), GOSIPURA, HARIDWAR ROAD KANTH, DISTRICT - MORADABAD, UP - 244501

KAPTANGANJ

3070. SMARTWHEELS PRIVATE LIMITED (--01), IN FRONT OF BHARAT PETROL PUMP, RAMKOLA ROAD, KAPTANGANJ, DISTT- KUSHINAGAR, PIN- 274301. - 274301

KARHAL

3071. KULDEEP MOTORS PVT LTD (--01), SAFAI KARHAL ROAD, KARHAL, - 205264

KARWI

3072. MY CAR PVT LTD (--01), ARAJI NO. 58, MAUJA - AMANPUR, TEHSIL - KARWI, DIST. -CHITRAKOOT, UTTAR PRADESH. - 210205

KASIA

3073. ARBIT AUTOMOBILES PVT LTD (--01), MAUJA BHAISAHA, HETIMPUR KASIA, KUSHINAGAR, UTTAR PRADESH - 274206
PH :8953412821.

KATRA

3074. SUMITRA DS MOTORS PVT LTD (--01), GRAM: SAALPUR NAVADIYAM, NH24, KATRA, TEHSIL - TILHAR, SHAHJAHANPUR - 242301
PH :9336408074.

KAUSHAMBI

3075. SARASWATI MOTORS LLP (--01), ARAZI NO 1228, KORRO MANJHANPUR, KAUSHAMBI, UTTAR PRADESH. PINCODE - 212207. - 212207
PH :8090854005.

KAYAMGANJ

3076. MY CAR PVT LTD (--01), BYE PASS ROAD , NEAR KHAN PETROL PUMP, VILLAGE : KAYAMGANJ , DISTT: FARUKHABAD - 209502

KHAIR

3077. DEV MOTORS PVT LTD (--01), PLOT 117, ALIGARH PALWAL ROAD, VILLAGE CHAMAN NAGARIYA, KHAIR - 202138
PH :7351345577.

KHURJA

3078. SKUNIVERSE AUTOMOBILE PVT LTD (--01), OLD GT ROAD, KHURJA, DISTRICT- BULANDSHAHAR, UTTAR PRADESH - 203131. - 203131
PH :7055118430.

KIRAOLI

3079. PREM MOTORS PVT LTD (--01), GOVIND PALACE, NEAR KIRAWALI TEHSIL, AGRA – JAIPUR HIGHWAY, KIRAWALI, DISTRICT – AGRA, UTTAR PRADESH. - 283122
PH :9690010799.

KITHORE

3080. RADHAGOVIND AUTOMOBILES PVT LTD (--01), MANSAB PURA, ISLAMABAD, OPP. HP PETROL PUMP, KITHORE, MEERUT, UTTAR PRADESH - 250104

KONCH

3081. KULDEEP MOTORS KANPUR LLP (--01), NEW PATEL NAGAR, CITY KONCH, DISTRICT - JALAUN, UTTAR PRADESH - 285205
PH :9839015046.

KOSI

3082. UMA MOTORS PVT LTD (--01), KHASRA NO. 245, CITY - KOSI, DIST.-MATHURA. - 281004

KUBERPUR

3083. KTL PVT LTD (6606--04), KHASRA NO.248,249,251, NAWALPUR, BHAGPUR, POST-ETHMADPUR, NH-2, KUBERPUR, AGRA, UTTAR PRADESH - 282006
PH :8449715099.

KUNDA

3084. SARASWATI MOTORS LLP (--01), ALLAHABAD-LUCKNOW HIGHWAY, KUNDA, DISTRICT PRATAPGARH. - 230204
PH :8090854005.

KURAWALI

3085. KULDEEP MOTORS PVT LTD (--01), GT ROAD,NEAR SWARAJ MEMORIAL PUBLIC SCHOOL, - 205265

KURSI

3086. BRIGHT 4 WHEEL SALES PVT LTD (--01), GATA NO. 261, VILLAGE BASARA,, PARGANA KURSI, TEHSIL FATEHPUR, - 225302

LAHARPUR

3087. CONCEPT CARS LIMITED (--01), KHASARA NO: 1639 VILLAGE LACHCHHAN NAGAR TEHSIL LAHARPUR DISTRICT SITAPUR UP - 261135

LAKHIMPUR

3088. SUMITRA DS MOTORS PVT LTD (--02), GATA NO. 66, LRP ROAD, TOWARDS GOLA, LAKHIMPUR KHERI - 242001

3089. SUMITRA DS MOTORS PVT LTD (--01), GATE NO 604, PALIA ROAD, NEAR FCI WEAR HOUSE, VILLAGE - BHARDSARIYA, KHERI, LAKHIMPUR - 262702

LALGANJ

3090. KTL AUTOMOBILE PRIVATE LIMITED (--01), JEEWAN DEEP COMPOUND, ALLAHABAD ROAD, LALGANJ, DISTT. RAIBARELLI - 229206

LALITPUR

3091. SURI AUTOMOBILES (6001--03), JAHANSI SAGAR ROAD, LALITPUR - 284001
PH :945149605.

3092. VELOCITY CARS ( A UNIT OF BASERA VELOCITY AUTOHUB PVT LTD) (--01), LALITPUR BYPASS ROAD, NH26 (LALITPUR-MEHRAUNI HIGHWAY), IN FRONT OF RMV COLLEGE ROAD, MAIN HIGHWAY, LALITPUR, UTTAR PRADESH - 284403
PH :9560998709.

LONI

3093. T R SAWHNEY MOTORS PVT LTD (--G1), PLOT NO. 16, DELHI SAHARANPUR ROAD, KHANNA NAGAR, LONI, GHAZIABAD, UTTAR PRADESH - 201102

LUCKNOW

3094. ANAND MOTOR AGENCIES LTD (1301-13-01), 11TH KMS, FAIZABAD ROAD, CHINHAT, LUCKNOW - 227105
PH :7080000462.

3095. KTL AUTOMOBILE PRIVATE LIMITED (1311-13-01), MATIYARI CHAURAHA, CHINNHAT, FAIZABAD ROAD, LUCKNOW - 227105
PH :7408411453.

3096. ANAND MOTOR AGENCIES LTD (1301-13-02), 47, NEHRU ROAD, SADAR BAZAR, LUCKNOW - 226016

3097. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-01), 11/CP- 6, VIKAS NAGAR, RING ROAD, LUCKNOW - 226022

3098. ONE UP MOTORS INDIA PVT LTD (1306-13-01), C-16A,TRANSPORT NAGAR,KANPUR ROAD, LUCKNOW, KANPUR ROAD, LUCKNOW - 226012

3099. KTL AUTOMOBILE PRIVATE LIMITED (1311-13-02), INDRA NAGAR, OPP. HALFAIZABAD ROAD, LUCKNOW, UTTAR PRADESH - 226016
PH :7408411478.

3100. KTL AUTOMOBILE PRIVATE LIMITED (1311-13-03), BEHIND N S KOHLI PETROL PUMP, SARDARI KHEDA, KANPUR ROAD, ALAMBAGH, LUCKNOW - 226005

3101. ANAND MOTOR AGENCIES LTD (1301-13-04), G-3, LDA MARKET, ALIGANJ, LUCKNOW - 226024

3102. ONE UP MOTORS INDIA PVT LTD (1306-13-03), CHHANNILAL CROSSING, MANDIR MARG, LUCKNOW - 226005
PH :9918500451.

3103. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-02), PARGANNA MOHANNA, STP ROAD, CHATMEEL, LUCKNOW - 226021
PH :9838075960.

3104. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-05), PLOT NO. 68, BUTLER GANJ, BAALU ADDA, LUCKNOW. - 226001

3105. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (--01), CP1 (COMMERCIAL PLOT 1), VIBHAV KHAND, GOMTI NAGAR, LUCKNOW. - 226010

3106. KTL AUTOMOBILE PRIVATE LIMITED (-13-07), B-6/1A, AMAUSI INDUSTRIAL AREA, NADARGANJ, LUCKNOW, UTTAR PRADESH. - 226008
PH :7800007376.

3107. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-06), KHASRA NO. 418, MISHRAPUR PARGANA MAHONA, KURSI ROAD, LUCKNOW. - 226022
PH :9935275786.

3108. ONE UP MOTORS INDIA PVT LTD (1314-13-01), KHASRA NO. 20 TO 25, 30, 35, 37, 42, 43, 45, 47, 48, 49, 67, 68, 71 & 99, RAJJABGANJ, HARDOI ROAD, LUCKNOW. - 226003

3109. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (1313--02), KHASRA NO. 614, VILLAGE: BHADRUKH, VIP CANNEL RINGI ROAD, DEVI KHERA, TELIBAGH (VIP ROAD), TEHSIL: SAROJNI NAGAR,
LUCKNOW, U□AR PRADESH 226002 - 226002
PH :6388901514.

3110. KULDEEP MOTORS LUCKNOW PVT LTD (1315-13-01), PLOT NO F-01, SECTOR-B, PRIYADARSHINI, LUCKNOW, UTTAR PRADESH - 226006

3111. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (1313-13-03), KHASRA NO 326, IIM ROAD, MUKATIPUR, LUCKNOW, UTTAR PRADESH - 226013

3112. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (1313--04), 671,BADRUK VIP ROAD, TELIBAGH, LUCKNOW, UTTAR PRADESH - 226010

3113. BRIGHT 4 WHEEL SALES PVT LTD (1305-13-09), CP-195, SITUATE AT VIRAJ KHAND, GOMTI NAGAR, LUCKNOW, PIN-226010 - 226010

MADHOGANJ

3114. CONCEPT CARS LIMITED (--01), KANPUR ROAD, NEAR RAILWAY CROSSING, MADHOGANJ DIST. HARDOI. - 241302

MADHOGARH

3115. S B CARS PVT. LTD. (--01), MADHOGARH ORAI, JALAUN HIGHWAY, - 285126

MAHARAJGANJ

3116. SMARTWHEELS PRIVATE LIMITED (--01), BESIDES SHUBHAM HERO, RAMPUR, MAHARAJGANJ, UTTAR PRADESH.
NEAR PHARENDA TAXI STAND, NAHAR ROAD, PIPAR DEORA, MAHARAJGANJ, DIST. MAHARAJGANJ, UTTAR PRADESH. - 273303

3117. KTL AUTOMOBILE PRIVATE LIMITED (--01), MUNNA MARKET HAIDERGARH ROAD TOWN AREA, TEHSIL – MAHARAJGANG, DISTRICT – RAIBAREILLY, UTTAR PRADESH.
PH :99184512222.

MAHIRPURWA

3118. ONE UP MOTORS INDIA PVT LTD (--01), NEAR KURWA RAILWAY CROSSING, , LAKHIMPUR BAHRAICH ROAD, UTTAR PRADESH - 271855

MAHMUDABAD

3119. CONCEPT CARS LIMITED (--01), OPPOSITE INDIAN PETROL PUMP, MAHMUDABAD SIDAHULI ROAD, MAHMUDABAD, DISTRICT SITAPUR, UTTAR PRADESH. - 261203

MAHOBA

3120. SURI AUTOMOBILES (6001--02), NEAR PARMANAND CHOWK, GANDHINAGAR, MAHOBA, UTTAR PRADESH, - 284001

3121. VELOCITY CARS ( A UNIT OF BASERA VELOCITY AUTOHUB PVT LTD) (--01), BAJRANG CHOWK, SAGAR-KANPUR HIGHWAY, MAHOBA - 210427
PH :9560998709.

MAHOLI

3122. CONCEPT CARS LIMITED (--01), MUSKAN TRACTORS, NEAR MELA MAIDAN, SHAHJHANPUR ROAD, MAHSUNIYAGANJ, MAHOLI, DIST.-SITAPUR, UTTAR PRADESH. - 261141
PH :7607696666.

MAINPURI

3123. KULDEEP MOTORS PVT LTD (--02), SKP-4A, MAINPURI - 205001
PH :9235258444.

MALIHABAD

3124. ONE UP MOTORS INDIA PVT LTD (--01), KHASRA NO. 326/1 AND 327, VILLAGE PARGANA, TEHSIL – MALIHABAD, DISTRICT – LUCKNOW, UTTAR PRADESH. - 227111
PH :9918100781.

MANDI DHANORA

3125. AKANKSHA AUTOMOBILES PVT LTD (--01), CHANDPUR ROAD,NEAR NEEDARMAL SUGARCIMCRASHER,DHANORA - 244131

MATHURA

3126. UMA MOTORS PVT LTD (--01), 68, MAHOLI,NEAR JAI GURUDEV TEMPLE, NH-2, KM STONE 146, MATHURA - 281004

MATI

3127. MEGA MOTORS (A UNIT OF AKM MOTORS PVT LTD) (--01), GATA NO 761, NEAR MATI POLICE CHOWKI, VILLAGE- MATI, PARGANA- DEWA, TEHSIL- NAWABGANJ, BARABANKI, UTTAR PRADESH - 225003
PH :6388901514.

MAU

3128. DEEP MOTORS (--01), DARI CHATTI , KHUKHUNDVA, MAU, UTTAR PRADESH. - 275305
PH :7704000552.

MAUDAHA

3129. KTL PVT LTD (--01), MAUDAHA, DISTRICT - HAMIRPUR, UTTAR PRADESH - 210507

MAURANIPUR

3130. VELOCITY CARS ( A UNIT OF BASERA VELOCITY AUTOHUB PVT LTD) (--01), BASERA CITY, MAURANIPUR - GARUTHA ROAD, MAURANIPUR, DISTT: JHANSI, UTTAR PRADESH - 284204
PH :8299202863.

MAWANA

3131. RADHAGOVIND AUTOMOBILES PVT LTD (--01), MAIN SHANTI NAGAR ROAD, MAWANA KALAN, SUBDIVISION HASTINAPUR, TEHSIL MAWANA, DISTRICT MEERUT - 250401
PH :7456001002.

MEERGANJ

3132. KAVISHA MOTORS PVT LTD (--01), SINDHAULI CHAURAHA, ADJACENT TO OBC BANK, NH-24, MEERGANJ, TEHSIL & DISTT - BAREILLY, UTTAR PRADESH - 243504

MEERUT

3133. TANYA AUTOMOBILES PVT LTD (4802-48-01), GOVT. INDUSTRIAL TRAINING INSTITUTE, BACHHA PARK, MEERUT - 250001
PH :9837077003.
3134. TANYA AUTOMOBILES PVT LTD (4802-48-03), 90, NAUCHANDI GROUND,GARH ROAD, MEERUT - 250001
PH :9837077004.
3135. RADHAGOVIND AUTOMOBILES PVT LTD (4807--01), VILLAGE – BARAL, KUNDA GATE NEAR YOGI FARM HOUSE, PARTAPUR, DELHI ROAD, MEERUT. - 250002
3136. TANYA AUTOMOBILES PVT LTD (4802-48-04), MUNICIPAL NO. 9, 9/2, 9/3, 9/4, 11, 11/1, VILLAGE - ROSHANPUR DORLI, OPP. KONARK COLONY, NEAR RAJMANDIR MANDAP, ROORKEE ROAD, TEHSIL - SARDHANA, MEERUT, U.P. - 250001
PH :7900201515.
3137. T R SAWHNEY MOTORS PVT LTD (4808-48-01), MUNICIPAL NO 101, KHASRA NO 1926/ MINJUMLA & 1927/1, MAHAL LEKHRAJ MUJBITA, MAIN DELHI ROAD, MEERUT, UP - 250002 - 250002
PH :9999163125.

MEHRONI

3138. VELOCITY CARS (--01), INDIRA CHAURAHA,, MEHRONI MADWARA ROAD, - 284405

MEJA

3139. SARASWATI MOTORS LLP (--01), MEJA ROAD, MEJA KHAS, PRAYAGRAJ, - 212302

MIRZAPUR

3140. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (--01), PILI KOTHI, STATION ROAD, MIRZAPUR, UTTAR PRADESH - 231001

MISHRIKH

3141. CONCEPT CARS LIMITED (--01), NEAR ARYAVART BANK, SITAPUR ROAD, MISHRIKH, SITAPUR, U.P, PINCODE: 261401 - 261401
PH :7607696666.

MODINAGAR

3142. MOTORCRAFT SALES PVT LTD (5903--02), OPPOSITE SONIA ENCLAVE, ADJACENT SUMAN CINEMA, NH-58, MODINAGAR - 201204

MOHANLAL GANJ

3143. BRIGHT 4 WHEEL SALES PVT LTD (--01), KHASARA PLOT NO.581, VILLAGE PURSANI, PARGANA AND TEHSIL MOHANLALGANJ, LUCKNOW DISTT., UTTAR PRADESH - 227305

MOOSANAGAR

3144. MY CAR PVT LTD (--01), VILL GAUSGANJ, POST MOOSANAGAR, KANPUR DEHAT, UTTAR PRADESH. - 209208

MORADABAD

3145. AKANKSHA AUTOMOBILES PVT LTD (--01), DELHI ROAD, 5TH.KM, MORADABAD (U.P.) - 244001
PH :7247800008.
3146. AKANKSHA AUTOMOBILES PVT LTD (--03), LAKRI FAZALPUR MINI BYPASS, MORADABAD. 5TH KM DELHI ROAD, MORADABAD - 244001
PH :9568200001.
3147. AKANKSHA AUTOMOBILES PVT LTD (--04), KHASRA NO. 569-570, VILLAGE – KAJIPURA, KANT ROAD, MORADABAD, UTTAR PRADESH. - 244001
PH :7895600007.

MUGHALSARAI

3148. AGR AUTOMOBILES PVT. LTD. (--01), ARAJI NO.23,MAUJA CHANDASHI,, PARGANA RALHUPUR,DDU NAGAR,MUGHALSARAI, - 232101

MURADNAGAR

3149. MOTORCRAFT SALES PVT LTD (--01), KHASRA NO. 317, ASHLAT NAGAR, BESIDE HOTEL SR GRAND, MURADNAGAR, PIN-201206, UTTAR PRADESH - 201206

MURATGANJ

3150. SARASWATI MOTORS LLP (--01), A-ONE MARKET, IN FRONT OF MELA GROUND, MURATGANJ, KAUSHAMBHI, 212201 - 212201

MUZZAFARNAGAR

3151. RADHAGOVIND AUTOMOBILES PVT LTD (--01), NH -58 ,121 KM STONE, BY-PASS ROAD, NEAR TRANSPORT NAGAR, MUZAFFARNAGAR - 251001

NAGINA

3152. SHAKUMBARI AUTOMOBILES PVT LTD (--01), RAIPUR ROAD, NEAR AKBARABAD CHOWK, , NAGINA, DIST. BIJNOR, UTTAR PRADESH - 246762

NAJIBABAD

3153. SHAKUMBARI AUTOMOBILES PVT LTD (--01), NEAR BUS STAND, BIJNORE BYPASS ROAD, NAJIBABAD, DIST.-BIJNORE, UTTAR PRADESH. - 246701
PH :8630881459.

NANPARA

3154. KTL AUTOMOBILE PRIVATE LIMITED (--01), GATA NO. 3730, NANPARA DEHAT, PARGANA TE, TEHSIL, NANPARA, DIST. BAHRAICH - 271865

NARWAL

3155. MY CAR PVT LTD (--01), GATA NO. 821 , KARIBGWANA ROAD , NARWAL , KANPUR, UTTAR PRADESH. - 209401
PH :9792970005.

NAUGARH

3156. SMARTWHEELS PRIVATE LIMITED (--01), NEAR PAKARI CHAURAHA, NAUGARH ROAD, SIDDHARTHNAGAR - 272205
PH :7705803129.

NAUTANWA

3157. SMARTWHEELS PRIVATE LIMITED (--01), OPP. RAJIV GANDHI DEGREE COLLEGE, BYPASS ROAD, NAUTANWA, DISTT – MAHARAJGANJ - 273164

NAWABGANJ

3158. KAVISHA MOTORS PVT LTD (--01), VILLAGE – EIDH JAGIR NEAR GURUDWARA AT NH-74, TEHSIL – NAWABGANJ, DISTRICT – BAREILLY.
3159. S B CARS PVT LTD (--01), NAWABGANJ (UNNAO), UTTAR PRADESH. - 209859

NIGOHA

3160. BRIGHT 4 WHEEL SALES PVT LTD (--01), GATA NO 146, VILL NIGOHA, TEHSIL MOHANLALGANJ, LUCKNOW - 226302
PH :7011482503.

NOIDA

3161. ROHAN MOTORS LTD (--01), C-8/9, SECTOR - I, NOIDA - 201301
3162. ROHAN MOTORS LTD (--02), C-11, SECTOR-1, NOIDA, UTTAR PRADESH - 201301
3163. FAIR DEAL PREMIUM WHEELS PVT LTD (--01), D-39, SEC-10, NOIDA - 201301
3164. VIPUL MOTORS PVT LTD (--02), A-111, SECTOR 5, NOIDA - 201301
3165. VIPUL MOTORS PVT LTD (--01), J-14, SECTOR-63, NOIDA, DISTT. GAUTAM BUDDH NAGAR (U.P.) - 201301
3166. MOTORCRAFT SALES PVT LTD (5903--04), PLOT NO.15, SECTOR-140, NOIDA (U.P.) - 201305
3167. MOTORCRAFT SALES PVT LTD (5903--05), PLOT NO 19 ECOTECH 12 GREATER NOIDA WEST ,GB NAGAR , UP - 201306
PH :8826312222.
3168. DEV MOTORS PVT LTD (--01), GATA NO -582, VILLAGE SALARPUR, SECTOR-49, VISHWAKARMA ROAD, NOIDA, UTTAR PRADESH - 201304
3169. COMPETENT AUTOMOBILES CO LTD (--01), KHASRA NO. C-12, SECTOR-85, NOIDA - 201301

ORAI

3170. S B CARS PVT LTD (2806--02), KANPUR ROAD, ORAI - 285001
PH :9307219303.
3171. KTL PVT LTD (--01), KHASRA NO.155, MAUJA LAHARIYAPURWA, JALAUN, ORAI, PIN-285001, UTTAR PRADESH - 285001

PADRONA

3172. SMARTWHEELS PRIVATE LIMITED (--01), AARJI NO. 37 & 38, MAUJA - BELWA MISRA, TAPPA PAKDI, PARAGNA - SIDHUWA JAUBNA, TEHSIL - PADRAUNA, DIST.-KUSHINAGAR, UTTAR PRADESH. - 274304
PH :7705803259.

PANWARI

3173. SURI AUTOMOBILES (--01), PANWARI, NEAR RAM LEELA GROUND, TEHSIL KULPAHAR, DISTRICT MAHOBA. - 210429
PH :9452287690.

PAPHUNDA

3174. TANYA AUTOMOBILES PVT LTD (4802--05), 354/1, MAIN HAPUR ROAD, PHAPHUNDA. - 245206
PH :9917547777.

PATIYALI

3175. KTL PVT LTD (--01), PATIYALI, KASGANJ, UTTAR PRADESH. - 207243

PATTI-UP

3176. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (--01), KHASRA NO.65,WARD NO.7, , KUMHIYA,BYPASS ROAD, PATTI, UTTAR PRADESH - 230135

PAYAGPUR

3177. KTL AUTOMOBILE PRIVATE LIMITED (--01), ACHAL COMPLEX, NEAR BANK OF BARODA, PAYAGPUR - 271871

PEPPEGANJ

3178. ARBIT AUTOMOBILES PVT LTD (--01), GHATA NO. 466, 465 & 472, PEPPEGANJ, MOUZA - SAHABGANJ, TEHSIL - CAMPIERGANJ, DISTT: GORAKHPUR - 273165

PILIBHIT

3179. CORAL MOTORS (P) LTD (--01), BISALPUR ROAD, PILIBHIT, U.P. - 262001
PH :9837891846.

3180. KAVISHA MOTORS PVT LTD (--01), OPP. ANKUR INDUSTRIES, PILIBHIT PURANPUR 1.5 KMS FROM ASSAM ROAD CHAURAHA, - 262001

POOTH KHAS

3181. T R SAWHNEY MOTORS PVT LTD (--01), POOTH KHAS, ROHTA ROAD, MEERUT, UTTAR PRADESH. - 250502
PH :9999790229.

PRATAPGARH

3182. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (--01), KHASRA NO 1390, VILL: GONDEY, CHILBILA, PRATAPGARH, DIST. PRATAPGARH - 230001

3183. AMITDEEP MOTORS PVT LTD (--01), CHILBILA PATTI ROAD, NEAR TALA MODE, PIPARI, KHALSA, PRATAPGARH - 230001

PURANPUR

3184. CORAL MOTORS (P) LTD (--01), KHASRA NO. 768 & 770, VILLAGE – KHAMRIYA PATTI, PURANPUR – PILIBHIT ROAD, TEHSIL AND PARGANA – PURANPUR, DIST. PILIBHIT. - 262124

PURWA

3185. KULDEEP MOTORS KANPUR LLP (--01), GAURAWA PURWA ROAD DURGAPUR, PURWA, DISTRICT - UNNAO, UTTAR PRADESH - 209825

RAIBAREILLY

3186. KTL AUTOMOBILE PRIVATE LIMITED (--01), PLOT NO. 1550, GULLUPUR, P O KATWARA, HIJARCHANDRAPUR, RAIBAREILLY - 229303
PH :7800001601.

RAM SANEHI GHAT

3187. BRIGHT 4 WHEEL SALES PVT LTD (--01), GATA NO 76, VILLAGE - BHENDUWA BRAHMANAN, TEHSIL - RAM SANEHI GHAT, BARABANKI, UTTAR PRADESH, PIN 225409 - 225409
PH :9935275786.

RAMNAGAR

3188. BRIGHT 4 WHEEL SALES PVT LTD (--01), KHASRA NO. 629, VILLAGE - BUDHAWAL, TEHSIL - RAMNAGAR, DIST.-BARABANKI, UTTAR PRADESH. - 225205

RAMPUR (UP)

3189. AKANKSHA AUTOMOBILES PVT LTD (--02), SHAHZAD NAGAR BAREILLY ROAD RAMPUR UTTAR PRADESH - 244901
PH :7895500007.

RATH

3190. MY CAR PVT LTD (--01), ETAYAL ORAI ROAD,, RATH,HAMIRPUR, - 210431

RAYA

3191. UMA MOTORS PVT LTD (--01), CHAUDHARY PADAM SINGH MARKET, NEAR INDIA INTER COLLEGE, RAYA - MAANT ROAD, RAYA, DISTT. MATHURA (U.P.) - 281204

RISIA BAZAR

3192. ONE UP MOTORS INDIA PVT LTD (--01), NANAPARA ROAD NEAR HP PETROL PUMP RISIA BAZAAR BAHRAICH PIN:- 271875 - 271875

ROBERTSGANJ

3193. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (--01), UMRAURA, PIMPRI ROAD, ROBERTSGANJ, UTTAR PRADESH. - 231216

RUNKATA

3194. PREM MOTORS PVT LTD (--01), ROYAL BANDHAN RESORT, KHASRA NO 108, NH-2, RUNKATA, AGRA. - 282101
PH :7060111245.

RUPAIDIHA

3195. ANAND MOTOR AGENCIES LTD (--01), RAMLEELA CHAURAHA, RUPAIDIHA, UTTAR PRADESH - 271881

SADABAD

3196. DEV MOTORS PVT LTD (--01), VILLAGE KUTKAI, AGRA ROAD SADABAD, DISTRICT HATHRAS, UTTAR PRADESH - 281306

SAHARANPUR

3197. ATELIER AUTOMOBILES (--01), NEAR BARI NAHAR, AMBALA ROAD, SAHARANPUR - 247001
PH :7500250070.

3198. TANYA AUTOMOBILES PVT LTD (--01), AAWAS VIKAS YOJNA, DELHI ROAD, SAHARANPUR, UTTAR PRADESH - 247001
PH :9837077004.

SAHASWAN

3199. CORAL MOTORS (P) LTD (--01), OPP BHARAT PETROL PUMP, BADAUN ROAD, SAHASWAN, DISTT. BADAUN. - 243638
PH :9837891846.

SAHIBABAD

3200. FAIR DEAL WHEELS PVT LTD (--01), 12/67 SITE 4, INDUSTRIAL AREA,,SAHIBABAD, GHAZIABAD - 110095

3201. MOTORCRAFT SALES PVT LTD (5903--01), S-7 SITE-IV, SAHIBABAD INDUSTRIAL AREA, NEAR DABUR CHOWK, SAHIBABAD - 201010

3202. T R SAWHNEY MOTORS PVT LTD (--03), 28/1/1, SITE-IV, SAHIBABAD INDUSTRIAL AREA,DISTT-GHAZIHABAD, UTTAR PRADESH - 201010

SALEMPUR

3203. SMARTWHEELS PRIVATE LIMITED (--01), GHATA NO. 48, GRAM: DEVPAR, TEHSILL: SALEMPUR, PARGANA: SALEMPUR MAUJHAULI, DISTT: DEORIA - 274509

SALON

3204. KTL AUTOMOBILE PRIVATE LIMITED (--01), SALON BYPASS, PARSHEDAPUR ROAD, SALON, DISTRICT RAIBARELLI, UTTAR PRADESH - 229127
PH :9918451222.

SAMBHAL

3205. AKANKSHA AUTOMOBILES PVT LTD (--01), PLOT NO. 303, NEAR TAJ MILK FACTORY, MORADABAD SAMBHAL ROAD, SAMBHAL, UTTAR PRADESH - 244302
PH :7248000028.

SANDILA

3206. CONCEPT CARS LIMITED (--01), PLOT NO.371, SARAY MARUFPUR, LUCKNOW ROAD, SANDILA-241204 DISTT. HARDOI. - 241204

SARDHANA

3207. RADHAGOVIND AUTOMOBILES PVT LTD (--01), DAURALA ROAD, NEAR RADHASWAMI SATSANG, SARDANA - 250342
PH :7456001030.

SHAHABAD

3208. CONCEPT CARS LIMITED (--01), VILLAGE MUJAGADH, SHAHABAD - 241124

SHAHJAHANPUR

3209. SUMITRA DS MOTORS PVT LTD (--01), SITAPUR ROAD, NH-24, SHAHJAHANPUR - 242001

SHAMLI

3210. RADHAGOVIND AUTOMOBILES PVT LTD (--01), KHERI KARMU, OPPOSITE POWER HOUSE, PANIPAT-KAIRANA ROAD, SHAMLI UTTAR PRADESH - 247776

SHAMSHABAD

3211. KTL PVT LTD (--01), BAKALPUR, TEHSIL SHAMSABAD, AGRA SHAMSHABAD ROAD , UTTAR PRADESH. - 283125

SHIVRAJPUR

3212. KTL PVT LTD (--01), ARAZI NO. 67K, DUBIYANA, GT ROAD, SHIVRAJPUR, KANPUR, UTTAR PRADESH - 209205
PH :9414113666.

SIDHAULI

3213. CONCEPT CARS LIMITED (--01), R/O MISHRIKH ROAD NOROTTAM NAGAR, DAKSHIDI, OPP. BLOCK, SIDHAULI, SITAPUR. - 261303
PH :7607596666.

SIDHOUR

3214. BRIGHT 4 WHEEL SALES PVT LTD (--01), KHASRA NO.1632, VILLAGE SIDHAUR KHAS, TEHSIL HAIDERGARH, DISTRICT BARABANKI - 225413

SIKANDRA

3215. KTL PVT LTD (--01), YADAV MARKET, NEAR SURYA DHABA, NH-19, ETAWAH-KANPURROAD, SIKANDRA, U.P. - 209715
PH :9414113666.

SIKANDRABAD

3216. SKUNIVERSE AUTOMOBILE PVT LTD (--01), NEAR R K SCHOOL, VILLAGE – SANWALI SIKANDRABAD , DIST - BULANDSHAHR UTTAR PRADESH , PIN 203202
PH :7310106565.

SIRATHU

3217. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (--01), KHASRA NO 584, SAYARA MEETHEPUR, SIRATHU, DISTRICT ¿ KAUSHAMBI, UTTAR PRADESH. - 212217

SIRAULI GHAUSPUR

3218. BRIGHT 4 WHEEL SALES PVT LTD (--01), KHASRA 77, GRAM GHUSEDIYA, POST & TEHSIL SIRAULI GAUSPUR, BARABANKI UTTAR PRADESH- 225207 - 225207
PH :7011482503.

SISWA BAZAR

3219. ARBIT AUTOMOBILES PVT LTD (--01), WARD NO. 4 , SAMRAT NAGAR SISWA BAZAR MAHARAJGANJ - 273162

SITAPUR

3220. CONCEPT CARS LIMITED (--02), LUCKNOW-DELHI ROAD, NH-24, VILLAGE JAMMAYAPUR, SITAPUR - 261001

SIYANA

3221. SKUNIVERSE AUTOMOBILE PVT LTD (--01), BULANDSHAHR ROAD, SIYANA DIST-BULANDSHAHR, UTTAR PRADESH PIN CODE 203412

SULTANPUR

3222. KIRTI KUNJ AUTOMOBILES PVT LTD (--01), SHAURYAMAU, MIRANPUR, VARANSI-LUCKNOW HIGHWAY, NH-56 (FAIZABAD BYPASS) SULTANPUR - 228001

SWAR

3223. AKANKSHA AUTOMOBILES PVT LTD (--01), IN FRONT OF EIDGAH, TEHSIL – SWAR, DISTRICT – RAMPUR, UTTAR PRADESH. - 244924
PH :7900600041.

TAMBOUR

3224. CONCEPT CARS LIMITED (--01), NEAR INDIAN GAS GANJAR, SITAPUR ROAD TAMBOUR - 261208
PH :7607696666.

THAKURDWARA

3225. AKANKSHA AUTOMOBILES PVT LTD (--01), KASHIPUR ROAD, THAKURDWARA, UTTAR PRADESH
2 KM. MORADABAD ROAD, NEAR JEETA KA DHABA, SAHAB GANJ (MUNSHI GANJ), THAKURDWARA, DISTT. MBD. UTTAR PRADESH - 244601
PH :7248000040.

TIKAITGANJ

3226. KTL AUTOMOBILE PRIVATE LIMITED (--01), KANAUJIA CITY, PHASE 2, MADARPUR, MOHAN ROAD, LUCKNOW. - 226013
PH :9918451222.

TILOI

3227. KTL AUTOMOBILE PRIVATE LIMITED (--01), VILLAGE PURE LANGDA, PAKAR GAON, MOHAN GUNJ, TEHSIL - TILOHI, DIST.-RAIBARELI. - 229309
PH :99184512222.

UNCHAHAR

3228. KTL AUTOMOBILE PRIVATE LIMITED (--01), ALLAHABAD LUCKNOW ROAD, NEAR PURANA PETROL PUMP, WARD NO. 5, UNCHAHAR, DISTT: RAIBARELI - 229404
PH :99184512222.

UNNAO

3229. S B CARS PVT LTD (2806--04), HUSSAIN NAGAR BYPASS,KANPUR-LUCKNOW HIGHWAY ROAD, UNNAO,U.P. - 209801
PH :9839806451.

UTRAULA

3230. KTL AUTOMOBILE PRIVATE LIMITED (--01), SH-9 , BESIDES SR PLOTTING OFFICE MANKAP, JOGIVEER - 271604

VARANASI

3231. VARANASI MOTORS PVT LTD (8402-84-01), THE MALL, CANTONMENT, VARANASI - 221001
3232. AGR AUTOMOBILES PVT LTD (8403-84-01), B-38/2A, MAHMOORGANJ, GOPAL VIHAR, VARANASI - 221010
3233. VARANASI MOTORS PVT LTD (8402-84-03), AARAJI NO.2 AND 48, G.T. ROAD, TODAPUR, MOHANSARAI, RAJATALAB, VARANASI (U.P.) - 221311
3234. AGR AUTOMOBILES PVT LTD (8403-84-04), ARAZI NO. 399, 398, 400, 401,NH2 PANDITPUR, DEHAT AMANAT, TEHSIL - RAJATALAB, VARANASI - 221112

VRINDAVAN YOJNA, LUCKNOW

3235. KTL AUTOMOBILE PVT. LTD (1311-13-08), PLOT NO 6&7 SARAWATIPURAM, NEAR SGPGI, RAI BARELI ROAD LUCKNOW - 226029

## UTTARAKHAND

ALMORA

3236. NAINITAL MOTORS PVT LTD (--04), PAWAR BHAWAN, JOSHI KHOLA RAJPURA, PITHRAGARH ROAD, ALMORA - 263601
PH :9997194132.

BAGESHWAR

3237. NAINITAL MOTORS PVT LTD (--05), VILL. BILOMA,SERA, BAGESHWAR, UT, BAGESHWAR - 263642
PH :9557200522.

BARKOT

3238. FUTURE AUTO WHEELS PVT LTD (--01), YAMNOTRI ROAD, BARKOT, DISTRICT UTTARKASHI, UTTARAKHAND - PINCODE - 249141 - 249141

BAZPUR

3239. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (--01), KHASRA NO. 96/2, VILLAGE – BHONA, ISLAM NAGAR, TEHSIL – BAZPUR, UTTARAKHAND. - 262401

CHAMPAWAT

3240. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (--01), TANAKPUR LOHAGHAT ROAD, CHAMPAWAT, UTTARAKHAND - 262523

CHANDRAPURI

3241. SHAKUMBARI AUTOMOBILES PVT LTD (--01), KEDARNATH ROAD, BANASBARA, CHANDRAPURI, DISTRICT RUDRAPRAYAG, UTTARAKHAND - 246425

CHAUKHUTIYA

3242. NAINITAL MOTORS PVT LTD (--01), NH-58, BADRINATH ROAD, CHAUKHUTIYA, DIST. -ALMORA, UTTARAKHAND - 263656
PH :9997026565.

CHINIYALISOUR

3243. ROHAN MOTORS LTD (--01), VILL- NAGNI DHANPUR (CHINYALISAUR), WARD NO-6,NAGAR PALIKA PARISHAD,DISTT- U - 249196

DEHRADUN

3244. ROHAN MOTORS LTD (5702-57-01), 130/1 CHAKRATA ROAD, YAMUNA COLONY, DEHRADUN - 248001
3245. DD MOTORS (A DIVISION OF D.D. MOTORS MOBILITY) (5709-57-01), 918/221, PATEL NAGAR, INDUSTRIAL AREA, DEHRADUN
3246. ROHAN MOTORS LTD (5702-57-02), 257/2, GMS ROAD,,VILL. NIRANJANPUR, ADJ TO KAMLA PALACE, DEHRADUN - 248001
3247. FUTURE AUTO WHEELS PVT LTD (5706-57-01), KHASRA NO. 8KHA, MOHABEWALA INDUSTRIAL AREA, DEHRADUN, - 248001
3248. FUTURE AUTO WHEELS PVT LTD (5706-57-02), MUNICIPAL NUMBER 45 AND 46, RAJPUR ROAD, DEHRADUN, PIN: 248001 - 248001
PH :9760444430.
3249. SHAKUMBARI AUTOMOBILES PVT LTD (5708-57-01), KHASRA NO.15-ANA, MOHABBEWALA, SAHARANPUR ROAD, DEHRADUN, PIN-248001, UTTARAKHAND - 248001

DIDIHAT

3250. NAINITAL MOTORS PVT LTD (--01), SUBHASH CHANDRA BOSE WARD, NEAR D.I.E.T, DIDIHAT, DISTT PITHORAGARH, PINCODE: 262551. - 262551
PH :9634092692.

DOIWALA

3251. FUTURE AUTO WHEELS PVT LTD (--01), 26, MISSARAWALA, DOIWALA, DISTRICT – DEHRADUN, UTTARAKHAND. - 248140
PH :7883473506.

GADARPUR

3252. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (--01), BHASIYA MOD, RUDRAPUR ROAD, GADARPUR, UDHAM SINGH NAGAR, UTTARAKHAND. - 263152

GAIRSAIN

3253. ROHAN MOTORS LTD (--01), KHASRA NO. 1048, RANIKHET ROAD, OPP. GIC GROUND, GAIRSAIN, DISTRICT – CHAMOLI, UTTARA KHAND. - 246428
PH :8126484626.

GANGOLIHAT

3254. NAINITAL MOTORS PVT LTD (--01), VILL-KHETIGARA, PITHORAGARH-GANGOLIHAT ROAD, GANGOLIHAT, DISTT: PITHORAGARH - 262522
PH :9997093043.

GOPESHWAR

3255. ROHAN MOTORS LTD (5702--03), CHOPTA MANDAL ROAD, NEAR FOREST GATE, GOPESHWAR - 131028
PH :9634852898.

HALDWANI

3256. NAINITAL MOTORS PVT LTD (--01), VILLAGE JEETPUR NEGY, 5TH KM RAMPUR ROAD, HALDWANI - 263139
PH :7060201024.
3257. NAINITAL MOTORS PVT LTD (--02), KALA DUNGI, NEAR ABDULLAH PETROL PUMP, HALDWANI - 263139
PH :8126359222.

HARIDWAR

3258. SHAKUMBARI AUTOMOBILES PVT LTD (--01), E-5/6, INDUSTRIAL AREA, HARDWAR - 249407

JASPUR

3259. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (--01), GANGUWALA, INFRONT OF ROOPAM CONVENT, KASHIPUR ROAD, JASPUR, UTTARAKHAND. - 244712
PH :8192000724.

KARANPRAYAG

3260. ROHAN MOTORS LTD (--01), BADRINATH ROAD, KARANPRAYAG, DISTRICT – CHAMOLI, UTTARAKHAND. - 246444
PH :8126129148.

KASHIPUR

3261. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (--01), BAZPUR ROAD, KASHIPUR - 244713

KHATIMA

3262. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (--01), VILLAGE: CHARUBETA,NEAR RTO CHECK POST,PILIBHIT ROAD KHATIMA, U.S NAGAR,UTTRAKHAND - 262308

KOTDWAR

3263. SHAKUMBARI AUTOMOBILES PVT LTD (--02), PLOT NO.23 & 30 INDUSTRIAL ESTATE, SITABPUR, KOTDWAR, DIS. PAURI (GARHWAL), UTTRAKHAND - 249001

LAKSAR

3264. SHAKUMBARI AUTOMOBILES PVT LTD (--01), HARIDWAR ROAD, LAKSAR - 247664
PH :9927877715.

NANAKMATA

3265. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (--01), KHATIMA ROAD, OPP GURURAMDAS HOSPITAL, NANAKMATTA, U.S. NAGAR, UTTARAKHAND. - 262311
PH :9012172084.

NARENDAR NAGAR

3266. SHAKUMBARI AUTOMOBILES PVT LTD (--01), MAIN MARKET, NARENDAR NAGAR, DISTRICT - TEHRI GARHWAL, UTTARAKHAND - PIN CODE - 249175 - 249175

NOORPUR

3267. SHAKUMBARI AUTOMOBILES PVT LTD (--01), MORADABAD ROAD, NOORPUR, TEHSIL CHANDPUR, DISTRICT BIJNOR, UP - PIN CODE - 246734 - 246734

PATI

3268. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (--01), LOHAGHAT- HALDWANI MAIN ROAD, NEAR PITHORAGARH CO-OPERATIVE BANK, PATI-262528 - 262528
PH :9917467820.

PAURI

3269. SHAKUMBARI AUTOMOBILES PVT LTD (--01), PAURI KOTDWAR ROAD NEAR GMO PETROL PUMP PAURI GARHWAL UTTARAKHAND - 246001

PIPLAKOTHI

3270. SHAKUMBARI AUTOMOBILES PVT LTD (--01), BADRINATH ROAD,MAYAPUR, BATULA,PIPALKOTI, - 246472

PITHORAGARH

3271. NAINITAL MOTORS PVT LTD (--03), VILLAGE PANDA, ODSAINI, DHARCHULA ROAD, PITHORAGARH - 262501
PH :9634092692.

PRATAPNAGAR

3272. SHAKUMBARI AUTOMOBILES PVT LTD (--01), NEAR AISHWARYA FILLING STATION, LAMBGAON, PRATAPNAGAR, DISTRICT TEHRI., UTTARAKHAND - 249165
PH :9927877715.

RAIWALA

3273. SHAKUMBARI AUTOMOBILES PVT LTD (--01), KHAND,GAON-1,RAIWALA,, TEHSIL RISHIKESH, - 249205

RAMNAGAR

3274. NAINITAL MOTORS PVT LTD (--01), BASAI, KASIPUR ROAD, RAMNAGER - 244137

RANIKHET

3275. NAINITAL MOTORS PVT LTD (--01), GANYADYOLI, NEAR DRUG FACTORY, RANIKHET DISTT. ALMORA (UTTARAKHAND) - 263645
PH :9557243222.

RISHIKESH

3276. FUTURE AUTO WHEELS PVT LTD (--01), 640, LAXMAN JHULA ROAD, RISHIKESH. DISTT. DEHRADUN, UTTARAKHAND - 249201

ROORKEE

3277. SHAKUMBARI AUTOMOBILES PVT LTD (--01), 3RD KM STONE, DELHI-ROORKEE HIGHWAY, NEAR IOC PETROL BUNK, ROORKEE DISTT HARIDWAR - 247667
PH :7055104191.

RUDRAPRAYAG

3278. ROHAN MOTORS LTD (--01), GULABRAI-BADRINATH ROAD, RUDRAPRAYAG - 246171
PH :8650876815.

RUDRAPUR

3279. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (--01), KICHHA BYE PASS ROAD, INDUSTRIAL AREA, RUDRAPUR - 263153

SELAQUI

3280. ROHAN MOTORS LTD (--01), KHASRA NO.783, BAHADURPUR ROAD, NH-72, SELAKUI, DISTT. -DEHRADUN, UTTARAKHAND. - 248011
PH :8006000439.

SITARGANJ

3281. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (--01), PLOT NO.228/5 AND 228/6 KHATIMA ROAD, SITARGANJ, DISTT - RUDRAPUR, UTTARAKHAND. - 262405

SRINAGAR

3282. SHAKUMBARI AUTOMOBILES PVT LTD (--01), SRICOT GANAGANALI , NEAR MEDICAL COLLEGE, PO- SRICOT, SRINAGAR - 246174

TEHRI

3283. DD MOTORS (A DIVISION OF D.D. MOTORS MOBILITY) (--01), PLOT NO. 541, SECTOR-8E, DISTT. - NEW TEHRI - 249001

UTTARKASHI

3284. DD MOTORS (A DIVISION OF D.D. MOTORS MOBILITY) (--01), HOTEL RAMOLA, BARETHI CHUNGI, GANGOTRI NATIONAL HIGHWAY, UTTARKASHI. - 249151

VIKAS NAGAR

3285. ROHAN MOTORS LTD (--01), KHASRA NO. 433/79/2, JEEVANGARH, POST OFFICE-AMBARI, CHAKRATA-BARKOT ROAD, VIKAS NAGAR. - 248198
PH :9897507410.

## WEST BENGAL

ALIPURDUAR

3286. PODDAR CAR WORLD PVT LTD (--01), BIRPARA MORE, COOCH BEHAR ROAD, BESIDE GOYENKA PETROL PUMP, ALIPURDUAR, WEST BENGAL. - 736121

AMTALA

3287. BHANDARI AUTOMOBILE PVT LTD (--01), VILLAGE - UDAYRAMPUR, P.O. - KANYANAGAR, P.S. - BISHNUPUR, AMTALA, DIST.-24 PARGANAS SOUTH, WEST BENGAL - 743398
PH :9903850402.

ARAMBAGH

3288. SANEI MOTORS PVT LTD (--01), R.S. DAG NO. 1887, R.S. KHATIAN NO. 104, HAL KHATIAN NO. 1233, MOUZA-PARUL, J.L.NO. 38, R.S.NO. 3111, P.S. ARAMBAGH, DISTT. HOOGHLY, WEST BENGAL - 712601
PH :8584050184.

ASANSOL

3289. BEEKAY AUTO PVT LTD (--01), CHANDA MORE, N.H.-2, ASANSOL - 713301

ASHOKNAGAR

3290. STARBURST MOTORS PVT LTD (--03), JESSORE ROAD, MANIKNAGAR, KHOSDELPUR MORE, P.S. – ASHOKNAGAR, NORTH 24 PARGANAS, WEST BENGAL. - 743222

BADURIA

3291. PREMIER CAR WORLD PVT LTD (--01), VILL-KIRRTIPUR, P.O- MANDRA, P.S - BADURIA, DIST - NORTH 24 PARGANAS, WEST BENGAL. PIN - 743438. - 743438
PH :9831414956.

BAGDAH

3292. SANEI MOTORS PVT LTD (--01), C/O, DINABANDHU TARAFDAR, S/O LATE NARENDRANATH TARAFDAR, VILLAGE – HALENCHA SOUTH, P.O. – HALENCHA COLONY, P.S. – BAGDAH, DISTRICT – NORTH 24 PARGANAS, WEST BENGAL. - 743270

BAHRAMPUR

3293. BEEKAY AUTO PVT LTD (--01), BOKULTALA (PASCHIM GAMINI), NH-34, BAHARAMPUR, DISTT. MURSHIDABAD. - 742101
PH :267340.

BAJKUL

3294. BHANDARI AUTOMOBILE PVT LTD (--01), VILLAGE – KAPTYAPA BARI, P.O. – KAJLAGARH, P.S. – BHAGWANPUR, BAJKUL, DISTRICT – PURBA MIDNAPORE. - 721626

BAKSHIRHAT

3295. PODDAR CAR WORLD PVT LTD (--01), JORAIMORE, BAKSHIRHAT, BALA KUTHI,BAKSHIRHAT - 736131

BALAGARH

3296. SANEI MOTORS PVT LTD (--01), DAG NO. 671, MOUZA - BARUIPARA, J L NO. 100, P.O. - BALAGARH, DIST.-HOOGLY, WEST BENGAL - 712501
PH :8584050184.

BALURGHAT

3297. J K WHEELS PVT LTD (--01), BARO RAGHUNATHPUR, P.O. - BELTALA PARK, P.S. - BALURGHAT, DIST.-DAKSHIN DINAJPUR. - 733103
PH :9064301464.

BANDARGACHH

3298. PODDAR CAR WORLD PVT LTD (--01), OPPOSITE COMMUNITY HEALTH CENTRE, PHANSIDEWA, BANDAR GACHH, WEST BENGAL 734014 - 734014

BANDEL

3299. SANEI MOTORS PVT LTD (--03), C/O G.S. LAMINATOR, BANDEL STATION ROAD, HOOGLY 712123 - 712123

BANKURA

3300. BHANDARI AUTOMOBILE PVT LTD (--02), PLOT NO.-156, KH NO.-173, MITHILA MOUZA, AT/PO-BANKURA (WB) - 722101
PH :256766.

BARASAT

3301. PREMIER CAR WORLD PVT LTD (--01), R.S DAG NO. 512 AND PARTY IN DAG NO. 513, MOUZA-KHILKAPUR, P.O BARASAT, POLICE STATION: DUTTA PUKUR, TOUZI NO. 146, J.L NO. 4, DISTRICT – NORTH 24 PARGANAS, WEST BENGAL - 700125
PH :8420122407.

BARDDHAMAN

3302. BEEKAY AUTO PVT LTD (--03), NH-2, PAMRA VILLAGE ROAD, CHANDNI MORE, SATTAR MILE, BURDWAN, WEST BENGAL - 713101

BARJORA

3303. BHANDARI AUTOMOBILE PVT LTD (--01), VILLAGE + P.O. + P.S. – BARJORA, MOUZA – BARJORA, JL NO. 46, KHATIAN NO. 3380, PLOT NO. 2795, BARJORA DISTRICT – BANKURA, WEST BENGAL. - 722202
PH :8016087297.

BAROBISHA

3304. PODDAR CAR WORLD PVT LTD (--01), NH-17, BALAKUTHI, BAKSHIRHAT, COOCHBEHAR,, WEST BENGAL (NH 31C, ALIPURDWAR ROAD, BAROBISHA, - 736131

BARRACKPORE

3305. STARBURST MOTORS PVT LTD (--02), NEAR RAIL GATE, WARD NO. 24, WEST BARASAT ROAD, P.S. – TITAGARH, BARRACKPORE, DISTRICT – NORTH 24 PARGANAS, KOLKATA. - 700120
PH :8335061333.

BARSUNDARA

3306. BHANDARI AUTOMOBILE PVT LTD (--05), PLOT NO. 610, BARSUNDARA, ISHWARDAHA, JALPAI, P.S. BHAWANIPUR, EAST MIDNAPORE. WEST BENGAL - 721654
PH :9933055539.

BASIRHAT

3307. BHANDARI AUTOMOBILE PVT LTD (--03), RAGHUNATHPUR, TALKI ROAD, BASIRHAT NR. INDIAN PERTOL PUMP, NORTH-24 PARGANAS. - 743428

BELACOBA

3308. PODDAR CAR WORLD PVT LTD (--01), PRASANNA NAGAR, BELACOBA, BATTALA, JALPAIGURI - 735133 - 735133
PH :8945533002.

BELDA

3309. BHANDARI AUTOMOBILE PVT LTD (--01), AT VILLAGE BARAMATKATPUR, P.O -LALNAGAR,BELDHA - 721424

BIDHANNAGAR

3310. SEVOKE MOTORS PVT LTD (--01), MURALIGANG BIDHAN NAGER, OPP OF MURALIGANG HIGH SCHOOL - 734426

BIRPARA

3311. SEVOKE MOTORS PVT LTD (--01), BHAGAT PARA, NH - 31, MADARIHAT ROAD, BIRPARA, BESIDE TASHI HOTEL, OPP - HIMALYAN HOTEL, P.S - MADARIHAT, DIST - ALIPURDUAR, PIN - 735204 - 735204
PH :9800069144.

BISHNUPUR

3312. BHANDARI AUTOMOBILE PVT LTD (--01), STATION ROAD, P.O+P.S- BISHNUPUR, DIST: BANKURA, WEST BENGAL - 722122
PH :9933055539.

BOLPUR

3313. SAINATH AUTOLINKS PVT LTD (4402--03), KABI JOYDEB ROAD, NEAR BOLPUR BY PASS, BOLPUR, DIST: BIRBHUM

BONGAON

3314. STARBURST MOTORS PVT LTD (--01), 376/D, R D B ROAD, NEAR JESSORE ROAD, BAKSHIPALLY, BONGAON, NORTH 24 PARGANAS, WEST BENGAL - 743235
PH :9748298939.

BUDGE BUDGE

3315. ONE AUTO PVT LTD (--01), MAHESH TALA, NEAR DAKGHAR KALIMANDIR, BUDGE BUDGE TRUNK ROAD, DAKGHAR, WARD NO. 22, POLICE STATION-MAHESHTALA, WEST BENGAL - 700141

C K ROAD

3316. BHANDARI AUTOMOBILE PVT LTD (--01), P.O:SAT BANKURA, PS:GARBETA, CHANDRAKONA ROAD, DIST. PASCHIM MIDNAPORE, WEST BENGAL - 721252

CANNING

3317. ONE AUTO PVT LTD (--01), SUSUMAPALLY, CANNING, DIST – SOUTH 24 PARGANAS, WB - 743329
PH :8442830001.

CHAKDAH

3318. BHANDARI AUTOMOBILE PVT LTD (--01), VILLAGE – PUMLIA, P.O. – CHAKDAHA, DISTRICT – NADIA, WEST BENGAL. - 741222

CHANCHAL

3319. J K WHEELS PVT LTD (--01), CHANCHAL AZAD PALLY, OPPOSITE OF PWD 2ND GATE, P.O - CHANDRAPARA, P.S - CHANCHAL, DIST - MALDA - 732123 - 732123
PH :9734963360.

CHANDITALA

3320. BHANDARI AUTOMOBILE PVT LTD (--01), RS DAG NO.2986, LR DAG NO. 3150, UNDER L R KHATIAN NO.3859, MOUZA- KRISHNARAMPUR, J.L. 59, POLICE STATION- CHANDITALA, HOOGHLY, WEST BENGAL - 712702
PH :6296900498.

CHANDRAKONA

3321. BHANDARI AUTOMOBILE PVT LTD (--02), AT. VILL. GOSAI PO+PS CHANDRAKONA TOWN, MOUZA DHARABILA, J.L.NO. 095, KHATIAN NO. 315, PLOT NO. 203 & 189, NEAR MUNIPAL GATE TOWARDS C.K. ROAD. - 721201
PH :8945526833.

CHHATNA

3322. BHANDARI AUTOMOBILES PVT LTD (--01), VILLAGE: DUBRAJPUR, P.O. GORH, DUBRAJPUR, P.S. CHHATNA DIST: BANKURA - 722132

CONTAI

3323. BHANDARI AUTOMOBILE PVT LTD (--03), SERPUR BAMUNBAR,P O- MARISHDA, NEAR MECHEDA BYPASS, CONTAI, WEST BENGAL - 721401

COOCHBEHAR

3324. PODDAR CAR WORLD PVT LTD (--01), CHAKCHAKA, NEELKUTHI BAZAR, NEAR ADA FACTORY, NH-31, COOCH BEHAR, WEST BENGAL. - 736101

DARJEELING

3325. BEEKAY AUTO PVT LTD (4301--05), MERRY VILLA, DARJEELING, DISTRICT-DARJEELING. - 734101

DHUPGURI

3326. BEEKAY AUTO PVT LTD (--01), MOUZA – DHUPGURI, PLOT NO. 1814, WARD NO. 16, DHUPGURI, DISTRICT – JALPAIGURI, WEST BENGAL. - 735210

DIAMOND HARBOUR

3327. ONE AUTO PVT LTD (--01), VILLAGE – CHEWRA, OPPOSITE – K.E. CARMEL SCHOOL, P.O. – SARISHA HAT, P.S. – DIAMOND HARBOUR, DISTRICT – 24 PARGANAS (S) , WEST BENGAL. - 743368
PH :8584862243.

DINHATA

3328. BEEKAY AUTO PVT LTD (--01), ADDRESS: VILLAGE - KARISHAL, MAIN ROAD, P.O-DINHATA, DIST - COOCHBEHAR, - 736135
PH :9932049347.

DUDHIA

3329. PODDAR CAR WORLD PVT LTD (--01), MIRIK ROAD, DUDHIA, WEST BENGAL - 722133

DURGAPUR

3330. SAINATH AUTOLINKS PVT LTD (4402-44-01), PLOT NO-743, MAUZA FRIDPUR, BURDWAN, DURGAPUR - 713213

DURLAVPUR

3331. PODDAR CAR WORLD PVT LTD (--01), VILL+PO – DURLAVPUR, PS- GANGAJALGHATI, DIST-BANKURA, PIN- 722133 - 722133

FALAKATA

3332. PODDAR CAR WORLD PVT LTD (--01), DAKSHIN PARANGAPAR, KHATIAN NO. 167/1 JL NO. 60, DAG NO. 652/1159, P.S. – FALAKATA , DISTT ALIPURDWAR - 735211
PH :8945533002.

GAZOLE

3333. J K WHEELS PVT LTD (--01), MOUZA-BAJEGAIRAL, RANIGANJ, PURBAPARA, KAMALDANGA, P.S- GAZOLE, DIST-MALDA, PIN - 732138 - 732138
PH :9734963360.

GHATAKPUKUR

3334. DEWARS GARAGE LTD (--01), BASANTI HIGHWAY,MOUZA NARAYANPUR , POLICE STATION,BHANGAR, WEST BENGAL - 743502

GHATAL

3335. BHANDARI AUTOMOBILE PVT LTD (--01), VILL. NIMTOLA, P.O. & P.S. DASPUR, GHATAL,WEST MIDNAPORE,WEST BENGAL - 721211

GOPIBALLAVPUR

3336. BHANDARI AUTOMOBILE PVT LTD (--01), JL NO. 1103, KHATIAN NO. 1103, PLOT NO. 438, VILLAGE + P.O. + P.S. – GOPIBALLVPUR , MOUZA – GOPIBALLVPUR, WEST MIDNAPUR, WEST BENGAL. - 721506

HALDIA

3337. BHANDARI AUTOMOBILE PVT LTD (--04), BALGHASIPUR, BHABANIPUR, PURBA MEDIANPUR, HALDIA - 721657

HOWRAH

3338. BHANDARI AUTOMOBILE PVT LTD (--01), BANKRA THANA,DOMJUR,HOWRAH. - 711403

3339. PREMIER CAR WORLD PVT LTD (--02), MOUZA – PRASASTHA, P.S. – DOMJUR, UNDER MOHIARY 2 NO. GRAM PANCHAYAT, ANKURHATI, HOWRAH, WEST BENGAL. - 711302

ILLAMBAZAR

3340. BEEKAY AUTO PVT LTD (--01), PLOT NO-615,616,618,JL NO-87,MOUZA-PAYER - 731214

JAGULI

3341. OSL MOTOCORP PVT LTD (--01), DAG NO-947,KHATIANNO: 54/1,P.S HARINGHANTA - 741221

JALPAIGURI

3342. PODDAR CAR WORLD PVT LTD (--01), COLLEGE PARA, SIRISHTALA, NEAR ASSAM MORE, JALPAIGURI, WEST BENGAL. - 735101
PH :8945533002.

JAYGAON

3343. SEVOKE MOTORS PVT LTD (--01), HOUSE NO.43, WARD NO.11/22, N.S ROAD DARAGAON, P.S - JAYGAON, DISTT. ALIPURDUAR, WEST BENGAL - 736182
PH :9433825851.

JHARGRAM

3344. BHANDARI AUTOMOBILE PVT LTD (--01), DAG NO.383, KHATAN NO. JL396, WARD NO.11, RAJBATI CAMPUS, JHARGRAM, WEST BENGAL - 721507

KADAMBAGACHI

3345. STARBURST MOTORS PVT LTD (--04), MOUZA - PURBA ICHAPUR, J L NO. 111, RESU NO. 131, DAG NO. 385, KHATIAN NO. L R 754, KADAMBAGACHI, P.S. - BARASAT, DIST.-NORTH 24 PARGANAS, WEST BENGAL. - 700125
PH :8336933410.

KALIMPONG

3346. BEEKAY AUTO PVT LTD (--01), 10TH MILE, GUMBA HATTA, PO&PS -KALIMPONG, DIST - KALIMPONG, WB. - 734301
PH :9932049347.

KALNA

3347. BEEKAY AUTO PVT LTD (--01), KALNA ROAD, NEAR KALNA SUB DIVISIONAL HOSPITAL, KALNA, PO+PS: KALNA, DISTT. BURDWAN, (W.B.) - 713409
PH :9932251483.

KALYANI

3348. STARBURST MOTORS PVT LTD (--01), KALYANI INDUSTRIAL GROWTH CENTRE, PHASE-III, A-5 (OPP. U I C UDYOG, NEAR: J I S COLLEGE), KALYANI. - 741234

KHARAGPUR

3349. BHANDARI AUTOMOBILE PVT LTD (--01), BHANDARI BUILDING, JHAPATAPUR, KHARAGPUR, WEST BENGAL - 721301

3350. PODDAR CAR WORLD PVT LTD (--01), RS DAG NO - 147, RS KHATIAN NO 7, MOUZA - MOBARAKCHAK, JL NO-210, PS - KHARAGPUR - 721301
PH :9831348626.

KHATRA

3351. BHANDARI AUTOMOBILE PVT LTD (--01), VILLAGE - SENAPATI, P.O & P.S - KHATRA, MOUZA-SENAPATI, JL NO.189, KHATIAN NO.659, PLOT NO.33/34, DISTT. BANKURA, WEST BENGAL. - 722140

KHORIBARI

3352. PODDAR CAR WORLD PVT LTD (--01), DOHAGURI, KHORIBARI, WEST BENGAL 734427 - 735222

KOLKATA

3353. MACHINO TECHNO SALES LTD (--02), 48 A, TARATALA ROAD, KOLKATA - 700066
3354. DEWARS GARAGE LTD (--01), (PROP. DELTA INTERNATIONAL LTD.), 14 BRITISH INDIAN STREET, CALCUTTA - 700069
3355. MACHINO TECHNO SALES LTD (--01), 21/1 DARGA ROAD, (PARK CIRCUS), CALCUTTA - 700017
3356. PREMIER CAR WORLD PVT LTD (--01), AGARPARA JUTE MILL, 28-B.T.ROAD, P.O.: -KAMARHATI, DISTT.-KOLKATA - 700058
3357. BHANDARI AUTOMOBILE PVT LTD (--01), BUDGE BUDGE TRUNK ROAD, NEW GOPALPUR, SARKARPOOL, MAHESHTALA, DISTT. SOUTH 24 PARGANAS, WEST BENGAL - 700143
3358. SANEI MOTORS PVT LTD (--01), 16/2 CANAL EAST ROAD, NEAR MANIKTALA POLICE STATION,KOLKATA - 700067
3359. ONE AUTO PVT LTD (--02), 62 EAST TOPSIA ROAD, P.S. TILJALA, ARUPOTA, KOLKATA , WEST BENGAL - 700105
3360. ONE AUTO PVT LTD (--01), JL NO.3, MOUZA-JAGADIPOTA, P.S:SONARPUR, KHEYADAHA NO.2, GRAM PANCHAYAT, DISTT. SOUTH 24 PARGANAS. - 700099
3361. SANEI MOTORS PVT LTD (--02), 235, HATIYARA ROAD, SITALATALA, BAGUIATI, KOLKATA, WEST BENGAL - 700059
3362. OSL MOTOCORP PVT LTD (--01), 49 DEBENDRA CHANDRA DEY ROAD, LANE BESIDE SILVER SPRING CLUB, E.M. BYE-PASS, KOLKATA - 700015
3363. STARBURST MOTORS PVT LTD (--05), R.S & L.R. DAG NO. 3434, MOUZA- GOPALPUR, JL NO. -02, RS NO. -140, LR KHATIAN NO. -5638, NEW TOWN, RAJARHAT - 700136
PH :9681080301.
3364. BHANDARI AUTOMOBILE PVT LTD (--C1), PLOT NO. IID/15, ACTION AREA 2D, NEW TOWN, P.S. RAJARHAT, KOLKATA, WEST BENGAL PIN-700156 - 700156
3365. JYOTE MOTORS PVT LTD (--01), NAZIRABAD MAIN ROAD, NAZIRABAD, ANANDAPUR, NEAR BISHNU BIJOLI GARDEN, KOLKATA, PIN-700150, WEST BENGAL - 700150

KOTULPUR

3366. BHANDARI AUTOMOBILE PVT LTD (--01), KHATIAN NO.644, PLOT NO.373, JL NO. 101, VILLAGE - MULDARA, P.S. + P.S. - KOTULPUR, DISTT.-BANKURA, WEST BENGAL. - 722141

KRISHNANAGAR

3367. BHANDARI AUTOMOBILE PVT LTD (--02), PLOT NO.-1874, MOUZA-GOBINDSARAK ,J.K. NO. 94, PS-KOTWAL, OLD WARD NO. 20, LAL MOHAN GHOSH ROAD, KRISHNANAGAR - 742011

LALGARH

3368. BHANDARI AUTOMOBILE PVT LTD (--01), PO & PS- LALGARH, DISTRICT- JHARGRAM. - 721516

MADHYAMGRAM

3369. STARBURST MOTORS PVT LTD (--01), 9/1, HEMANTA BOSE SARANI, BASUNAGAR, NEAR DEAF & DUMB SCHOOL, UDAYRAJPUR, MADHYAMGRAM - 700129

MALBAZAR

3370. BEEKAY AUTO PVT LTD (--01), CALTEX MORE, VILLAGE + P.S. – MALBAZAR AND DISTRICT – JALPAIGURI . - 735221

MALDA

3371. J K WHEELS PVT LTD (--01), GABGACHHI, N.H. 34, MALDA, - 732103

MANGPOO

3372. PODDAR CAR WORLD PVT LTD (--01), OPPOSITE QUININER FACTORY, MUNGPOO , CINCHONA PLANTATION, WEST BENGAL - 734313

MATHABHANGA

3373. BEEKAY AUTO PVT LTD (--01), SITAKULCHI ROAD, WARD NO.9,MATHABHANGA, DISTRICT – COOCHBEHAR. - 736146

MIDNAPORE

3374. BHANDARI AUTOMOBILE PVT LTD (--01), JL NO.190, KHAITAN NO. 889 VILL + P.O. TALKUI, N.H.60, - 721101

MOHANPUR

3375. BHANDARI AUTOMOBILE PVT LTD (--01), VILLAGE-NAYAGAON, P.O.-PAROI, P.S. -MOHANPUR, MOUZA - NAYAGAON, JL NO.395, KHATIAN NO.175/1, PLOT NO.895, DISTT. -PASCHIM MIDNAPUR,W.BENGAL. - 721436
PH :9933055539.

NAGRAKATA

3376. PODDAR CAR WORLD PVT LTD (--01), OPPOSITE HERO SHOWROOM, NEAR B.D.O OFFICE, SUKHANIBASTI, NAGRAKATA,WEST BENGAL - 735225

NAIHATI

3377. PREMIER CAR WORLD PVT LTD (--01), P.O. BHATPARA, GRAM-MUKTARPUR, P.S. - JAGATDAL, DIST-24 PGS (N), NAIHATI (WB) - 743123
PH :801700824.

NAKASHIPARA

3378. BHANDARI AUTOMOBILE PVT LTD (--01), L R DAG NO. 7271, UNDER L R KHATIAN NO. 6734, MOUZA - DEBAGRAM, J L NO. 60, POLICE STATION - KALIGANJ, BLOCK - KALIGANJ, NAKASHIPARA, DIST.-NADIA, WEST BENGAL. - 741138
PH :9163314418.

NAXALBARI

3379. BEEKAY AUTO PVT LTD (--01), MOUZA – GENI, KHATIAN NO.275, PARGANA-HATIGHISHA, P.S. NAXALBARI, DISTT. DARJEELING, WEST BENGAL - 734429

OODLABARI

3380. PODDAR CAR WORLD PVT LTD (--01), PLOT NO : 1144, TOUZI NO -84, OODLABARI , 735222 - 735222

PANCHLA

3381. BHANDARI AUTOMOBILE PVT LTD (--01), L.R DAG NO 3274, UNDER L.R KHATIAN NO 3044, MOUZA-MALLICKBAGAN, JL NO-7, POLICE STATION – PANCHLA, DIST- HOWRAH - 711310
PH :9073664926.

PANDUA

3382. BHANDARI AUTOMOBILE PVT LTD (--01), GT ROAD, PANDUA, NEAR KAKOLI CINEMA HALL, OPP. POWER HOUSE, HOOGLY, WEST BENGAL. - 712149
PH :9073912566.

PANSKURA

3383. BHANDARI AUTOMOBILE PVT LTD (--01), MOUZA – PASCHIM NEKRA, JL NO.98, LR NO.1154, LR NO.1156, PANSKURA, WEST BENGAL. - 721139
PH :9933055539.

PATASHPUR

3384. PODDAR CAR WORLD PVT LTD (--01), VILL - MOTIRAMPUR, PO MOTIRAMPUR, PS - PATASHPUR, DIST PURBA MIDNAPORE - 721439

PEDONG

3385. SEVOKE MOTORS PVT LTD (--01), TOPKHANA, DOKYONG 1, PEDONG, DIST: KALIMPONG, PIN:734311 - 734311

PURULIA

3386. SAINATH AUTOLINKS PVT LTD (4402--02), PO. LAKDA, VILLAGE-DADKA , ON RANCHI ROAD, PURULIA - 723149

RAGHUNATHPUR

3387. BEEKAY AUTO PVT LTD (--01), MOUZA – BUNDLA, J.L. NO. 197, PLOT NO. 2656, KHATIAN NO. LR 207, P.O. – RAGHUNATHPUR, P.S. – RAGHUNATHPUR, DISTRICT – PURULIA. - 723133

RAIGANJ

3388. J K WHEELS PVT LTD (--01), JL NO. 150, KHATIAN NO. 168/3 & 168/4, PLOT NO. 4158., P.S. – RAIGANJ, MUNICIPALITY – RAIGANJ, WARD NO. 11, HOLDING NO. 577/N, MOUZA – RAIGANJ, DISTRICT – UTTAR DINAJPUR, - 733134
PH :9735008842.

RAMPURHAT

3389. BEEKAY AUTO PVT LTD (--01), PLOT NO 131, JL NO 104, MOUZA -BATAIL,RAMPURAHAT - 731221

RANAGHAT

3390. STARBURST MOTORS PVT LTD (--01), THANA: GANGNAPUR, ADSR OFFICE, 151 NO.MOUZA PATULI, PLOT NO.309, RANAGHAT, DISTT: NADIA - 741256

RUPNARAYANPUR

3391. BEEKAY AUTO PVT LTD (--01), P.S. – SALANOUR, UNDER MOUZA – JEMARI, J.L. NO. 32, PLOT NO. 343-344, KHAITAN NO. 933, RUPNARAYANPUR, PASCHIM BARDHAMAN DISTRICT, WEST BENGAL. - 713335

SABANG

3392. BHANDARI AUTOMOBILE PVT LTD (--01), VILLAGE - PAIKAN DAKSHINBARH, P.O. - DHANSWARPUR & P.S. - PINGLA, DIST. -PASCHIM MIDNAPORE, SABANG - 721 166, WEST BENGAL. - 721166
PH :9933055539.

SAINTHIYA

3393. SAINATH AUTOLINKS PVT LTD (--01), SAINTHIA SURI ROAD,, OPPOSITE YAMAHA SHOWROOM, - 731234

SEORI

3394. BEEKAY AUTO PVT LTD (--01), RAMBADANPUR, NEAR SP MORE, SIURI, BIRBHUM - WEST BENGAL - 731101

SHYAMPUR

3395. SANEI MOTORS PVT LTD (--01), VILLAGE + P.O. – GOBINDAPUR, P.S. – SHYAMPUR, DISTRICT – HOWRAH, WEST BENGAL . - 711314
PH :8584050184.

SILIGURI

3396. BEEKAY AUTO PVT LTD (4301-43-01), NH-31, P.O. MATIGARA,SILIGURI. - 734428
3397. BEEKAY AUTO PVT LTD (4301-43-04), AMAI DIGHI, PHOOL BARI,STATE HIGHWAY -12, SILIGURI - 734001
3398. SEVOKE MOTORS PVT LTD (4302-43-01), 233, SEVOKE ROAD,2ND MILE, SILIGURI - 734001
PH :9706010366.
3399. PODDAR CAR WORLD PVT LTD (--02), VILL. EAST DHANTALLA, FULBARI II G.P, P.O SATELLITE TOWNSHIP, DIST- JALPAIGURI - 734015
PH :8945533002.

3400. PODDAR CAR WORLD PVT LTD (--03), OPPOSITE TO GANAPATI PETROL PUMP, KHAPRAIL MORE, SILIGURI - 734005

SINGUR

3401. ONE AUTO PVT LTD (--03), OPPOSITE TO TAPSI MAILIK KRISHAK BAZZAR - 712409

SITAI

3402. PODDAR CAR WORLD PVT LTD (--01), NETAJI MORE, NEAR NETAJI BAJAR , P.S SITAI , DISTRICT : COOCH BEHAR, PIN 736167 - 736167

SONADA

3403. SEVOKE MOTORS PVT LTD (--01), RATO MATEY DARA, NEAR PETROL PUMP,P.O- SONADA, WEST BENGAL PIN - 734209 - 734209
PH :9800069144.

SONAMUKHI

3404. BHANDARI AUTOMOBILE PVT LTD (--01), J L NO. 77, KHATIAN NO. 360, PLOT NO. 114/287, SONAMUKHI BISHNUPUR ROAD, VILLAGE - CHURAMANIPUR, P.O. & P.S. - SONAMUKHI, WEST BENGAL. - 722207
PH :9933055539.

SREERAMPUR

3405. BHANDARI AUTOMOBILE PVT LTD (--01), BANGIHATI (MADPUR) DELHI ROAD, SREERAMPUR, DISTT: HOOGHLY, WB - 712203

SUNDARA

3406. PODDAR CAR WORLD PVT LTD (--01), NH 14, SITARAMPUR, OPP. INDIAN OIL PETROL PUMP, SUNDARA , PASCHIM MEDINIPUR - 488333

TAMLUK

3407. BHANDARI AUTOMOBILE PVT LTD (--01), MOUZA PADUMBASAN, WARD NO 10, JL NO:144, DISTT: EAST MIDNAPUR, WEST BENGAL - 721636

TARAKESHWAR

3408. SANEI MOTORS PVT LTD (--01), MOUZA BAIDYAPUR, UNDER BALIGORI(1), GRAM PANCHAYET, TARAKESHWAR, DISTT. HOOGLY, WEST BENGAL.
PH :8584050184.

TOOFANGANJ

3409. PODDAR CAR WORLD PVT LTD (--01), POWER HOUSE PARA, PO ANDARANFULBARI (WEST), TUFANGANJ, COOCHBEHAR, PIN-736159, WEST BENGAL - 736159
PH :8945533002.

UDAYNARAYANPUR

3410. BHANDARI AUTOMOBILE PVT LTD (--01), VILLAGE-JANGALPARA BELGRAM, PS-UDAYNARAYANPUR, DIST- HOWRAH, WEST BENGAL. - 711226
PH :9073664902.

ULUBERIA

3411. BHANDARI AUTOMOBILE PVT LTD (2401--01), HOLDING 1242A, BANITABLA, P.O+P.S: ULUBERIA, NH-6, DISTT: HOWRAH, WEST BENGAL - 711316

## ANDHRA PRADESH

ANANTAPUR

1. JAYALAKSHMI AUTOMOTIVES PVT LTD (1BNB-1B-01), SY. NO. 239 - 2CIA, KAKALAPALLI, ANANTAPUR

CHITTOOR

2. BHARGAVI AUTOMOBILES PVT. LTD. (1CNA-1C-01), D.NO. 23-1/2, DR. JYOTHI REDDY NAGAR, CK PALLI, CHITTOR, PIN-517001

CUDDAPAH

3. ADARSHA AUTO WORLD PVT LTD (1DNA-1D-01), #30/205-1-1-2, REVENUE WARD 31,DUVUNI KA, #30/205-1-1-2, REVENUE WARD 31,DUVUNI KA

GUDIVADA

4. VARUN MOTORS PVT LTD (CLNA-CL-01), SY.NO:75/2 & 75/3,BANTUMILI ROAD,GUDIVADA,,AP

GUNTUR

5. JAYALAKSHMI AUTOMOTIVES PVT LTD (G5NA-G5-01), D-NO:199/2, OPP.AUTONAGAR, NH 16, VJA - GNT SERVICE ROAD, GUNTUR, ANDHRA PRADESH - 522001
PH :9959844644.
6. JAYALAKSHMI AUTOMOTIVES PVT LTD (G5NA-G5-02), SURVEY NO 110 , AMRAVATHI ROAD , INNER RING ROAD , GUNTUR

KAKINADA

7. VARUN MOTORS PVT LTD (W7NA-W7-01), BHASKARA GARDENS JAGANDHAPURAM ,KAKINADA - 533016

KURNOOL

8. MSA MOTORS (C2NA-C2-01), PLOT NO. 1, 1A, 2, 2A, WARD NO. 96, NH 44, AUTO NAGAR, KURNOOL, ANDHRA PRADESH 518003 - 518003

NANDYAL

9. MSA MOTORS (CKBN-CKB-01), SURVEY NO. 144, PYKI, UDUMALAPURAM(V), NEAR VENKATESWARAPURAM, NANDYAL

NARASARAOPET

10. JAYALAKSHMI AUTOMOTIVES PVT LTD (JTNA-JT-01), NH 167A, SRINIVASA NAGAR, NARASARAOPETA, ANDHRA PRADESH 522601

NARSIPATNAM

11. JAYABHERI AUTOMOTIVES (WTNA-WT-01), SY NO 133/1, PEDA BODDEPALLE, NARSIPATNAM,ANDHRA PRADESH - 531116

NELLORE

12. BHARGAVI AUTOMOBILES PVT LTD (A8NA-A8-01), SURVEY NO 245B, CHEMUDUGUNTA VILLAGE, NH-16, ADJACENT TO SRIDS KALYANA MANDAPAM, NELLORE, ANDHRA PRADESH - 524002
PH :8886682222.

ONGOLE

13. JAYALAKSHMI AUTOMOTIVES PVT LTD (8YNA-8Y-01), SURVEY NO:194/2, BESIDE NH 5, MUKTHINUTHALAPADU, ONGOLE, ANDHRA PRADESH – 523225 - 523225
PH :9492133433.

PENDURTHI

14. VARUN MOTORS PVT LTD (BAPN-BAP-01), Y.NO:204/2 D.NO:6-36/1,OPP AYYAPA SWAMY TEMPLE,PENDURTHI,VISHAKAPATNAM.AP

RAJAHMUNDRY

15. SB MOTOR CORP (C5NA-C5-01), D.NO:84-1-12, PADMAVATI NAGAR, BESIDE ONGC BASE COMPLEX, NH-45, RAJAHMUNDRY, ANDRAPRADESH-533106. - 533016
PH :9248727888.

SRIKAKULAM

16. VARUN MOTORS PVT LTD (W6NA-W6-01), PEDDAPADU ROAD, ARASAVALLI POST, SRIKAKULAM DISTRICT, ANDHRA PRADESH - 532401
PH :9885317344.
17. VARUN MOTORS PVT LTD (W6NA-W6-S1) - 0

TIRUPATI

18. BHARGAVI AUTOMOBILES PVT LTD (N9NA-N9-01), D NO:9-91/1, BANGLORE BY PASS ROAD,DHAMINEDU VILLAGE, TIRUPATI RURAL, ANDHRA PRADESH - 517503
19. VISHNU CARS PVT LTD (N9NB-N9-01), 150, TIRUPATI BYPASS ROAD, NEAR SOUTHERN SPICE HOTEL, TIRUPATI

VIJAYAWADA

20. VARUN MOTORS PVT LTD (26NA-26-01), OPP TO PRIYA PICKLES, BANDAR ROAD, PORANKI, VIJAYAWADA, ANDRAPRADESH-521137. - 521137
PH :6309955655.
21. VARUN MOTORS PVT LTD (26NA-26-02), DOOR NO1-1-153,REVENUE WARD NO.1,BLOCK NO3,VIDHYADARARPURAM,VIJAYAWADA - 0
22. SANTOSH AUTOMOTORS PRIVATE LIMITED (26NC-26-01), TCR COLONY, KCP COLONY, PORANKI, VIJAYAWADA, ANDHRA PRADESH 521137 - 521137

VISHAKHAPATNAM

23. VARUN MOTORS PVT LTD (46NA-46-S1) - 0
24. VARUN MOTORS PVT LTD (46NA-46-01), DOOR NO 38-22-27, SURVEY NO 39, KAPARADA VILLAGE, INDUSTRIAL ESTATE, VISHAKHAPATNAM - 533016
25. VARUN MOTORS PVT LTD (46NA-46-02), NO:88/B, D BLOCK, VARUN AUTO PARK, SRINAGAR, OLD GAJUWAKA, VISAKHAPATNAM-530026. A.P - 530026

VIZAG

26. JAYABHERI AUTOMOTIVES PVT LTD (46NB-46-01), D.NO:8-238; SY NO:7/1A; GOPALAPATNAM; VISAKHAPATNAM (AP) - 530027

VIZIANAGARAM

27. JAYABHERI AUTOMOTIVES PVT LTD (N8NA-N8-01), OPPOSITE RELIANCE MART, BALAJI JUNCTION, 100 FEET RING ROAD , VIZIANAGARAM - 535002

VSKP (ADAVIVARAM)

28. VARUN MOTORS PVT LTD (46NA-46-3), PLOT NO 47, BANGARUTHALLI NAGAR, DARA PALEM, ADAVIVARAM VISAKHAPATNAM.– 530028 - 530028

## ASSAM

AIZWAL

29. GIG MOTORS (91NA-91-01), ITI WORLD BANK ROAD, AIZAWL, MIZORAM - 796005

BAIHATA CHAIRILI

30. PALLAVI MOTORS PVT LTD (BNLN-BNL-01), DAG NO. 187, PATTA NO.138, MAUZA-BAR-BANGSHAR, VILLAGE KSHUDRA PALAHA, BAIHATA CHARIALI, ASSAM - 781381

BARPETA TOWN

31. PODDAR CAR WORLD PVT LTD (SQTN-SQT-01), DEWRIKUCHI,HOWLY BARPETA ROAD,

BIJOYNAGAR

32. PODDAR CAR WORLD PVT LTD (09NA-IA-03), DAG NO. 1093/1598 PATTA NO 709, BARTEZPUR PO KUKURMARA PS PALASHBARI , DIST KAMRUP

BISWANATH CHARALI

33. R D MOTORS (RAMLAL DURGADUTT MOTORS PVT LTD) (BXIN-BXI-01), BRAHMAPUTRA CHAPORI, NEAR POWER GRID OFFICE,

BAGHMARI, BISWANATH CHARALI, ASSAM 784176

BONGAIGAON

34. BHARATI MOTORS PVT LTD (7NNA-7N-01), CHAPAGURI RD, NEAR POST OFFICE, NORTH BONGAIGAON, AMGURI, BONGAIGAON, ASSAM 783380 - 783380
PH :7002350887.

CHANGSARI

35. PODDAR CAR WORLD PVT LTD (09NA-TED-04), DAG NO 640 K P PATTA NO. 464 VILLAGE - CHANGSARI MOUZA - SILA SENDURI KAMRUP RURAL

DIBRUGARH

36. VISHAL CAR WORLD PVT LTD (C1NA-C1-01), MOHPUALIMORA GOHAIN GAON, A.T ROAD, DIBRUGARH, ASSAM - 786008
PH :8000900008.

GOLAGHAT

37. R D MOTORS (RAMLAL DURGADUTT MOTORS PVT LTD) (J3NA-J3-01), DAG NO-308,PATTA NO-53, VILLAGE RANGAJAN BAGAN GAON, MARANGI, MOUZA, MARANGI REVENUE CIRCLE, GOLAGHAT - 785702

GUWAHATI

38. BIMAL AUTO AGENCY (09NB-`09-01), DREAMLAND APPARTMENT,NAHRANI PATH, DISPUR LAST GATE, GUWAHATI - 781006 (ASSAM)
PH :9864074525.
39. PALLAVI MOTORS PVT LTD (09NC-09-01), NARENGI, KALITAKUCHI, SATGAON, GUWAHATI, ASSAM - 781026
40. PODDAR CAR WORLD PVT LTD (09NA-09-01), AT ROAD ,KAMAKHYA GATE ,GUWHATI ,KAMRUP-781009 - 781009
PH :8085957586.

HOJAI

41. RD MOTORS (ARAN-ARA-01), DAG NO-665,PATTA NO-467,VILLAGE DIMAPUR, DISTRICT HOJAI ASSAM- 782435

JORHAT

42. R D MOTORS (RAMLAL DURGADUTT MOTORS PVT LTD) (G9NB-G9-01), M/S R D MOTORS PVT LTD , DHAPKATA, NEAR TINALI, JORHAT -785006 - 785006
PH :7002099547.

MANGALDOI

43. PODDAR CAR WORLD PVT LTD (09NA-YW-02), WARD NO 2 NH - 15, MANGALDOI TOWN, DARRANG - ASSAM

NAGAON

44. R D MOTORS (RAMLAL DURGADUTT MOTORS PVT LTD) (7JNA-7J-S1) - 0

NALBARI

45. BIMAL AUTO AGENCY (92NA-92-01), BIMAL AUTO AGENCY NALBARI HAJO ROAD AMAYAPUR, ASSAM - 781334 - 781334

NORTH LAKHIMPUR

46. SAIKIA (7PNA-7P-01), NH - 15, CHARAIMORIA, NORTH LAKHIMPUR, ASSAM 787032

SIBSAGAR

47. JAINCO AUTOTECH PRIVATE LIMITED (L9NA-L9-01), DAG NO. 531 OF P.P. NO. 4, OF VILLAGE CHANGMAI GAON, MOUZA BETBARI, SIVASAGAR REVENUE CIRCLE, SIVASAGAR

SILCHAR

48. JAIN UDYOG (J2NA-J2-01), R.S. PATTA NO.149, DAG NO.579, MOUZA RONGPUR, SILCHAR, ASSAM - 788009 PH :9436121557.

SONARI

49. JAINCO AUTOTECH PRIVATE LIMITED (BFCN-BFC-01), NAMRUP SAFEKHATI ROAD, WARD NO-6, SONARI - 785690 - 785690

TEZPUR

50. R D MOTORS (RAMLAL DURGADUTT MOTORS PVT LTD) (T1NA-T1-01), SOLAGAN VILLAGE , GOROIMARI , SONABEEL, BEFORE MAA KALYANI PETROL PUMP, TEZPUR -784105 PH :9836872710.

TINSUKIA

51. VISHAL CAR WORLD PVT LTD (J4NA-J4-01), NEXA SHOWROOM (BESIDE VISHAL BIKER'S WORLD),A.T. ROAD, LAIPULI,TINSUKIA ,ASSAM -786183 PH :9864211022.

## BIHAR

BEGUSARAI

52. GS MOTORS PVT LTD (1UNA-1U-01), NALA ROAD, BEGUSARAI, PIN-851101, BIHAR - 851101

BHAGALPUR

53. SEEMANCHAL MOTORS (G8NA-G8-S1)

DARBHANGA

54. RAJKRISHNA MOTORS LLP (1VNA-1V-S1) - 0

55. RAJKRISHNA (1VNA-1V-01), MADHPUR, KHATA NO. 28, KHASRA NO 107, 108 NH 57 – DARBHANGA (BIHAR)

GAYA

56. KARLO AUTOMOBILES PRIVATE LIMITED (Y6NA-Y6-01), GAYA DOBHI MAIN ROAD, NEAR DOMUHAN, BODHGAYA, PIN -824231, BIHAR.

PATNA

57. ALANKAR AUTO SALES & SERVICE PVT LTD (15NA-15-01), OPP.RUPASPUR THANA, BAILEY ROAD NEAR GOLA ROAD, PATNA - 800002 PH :9262899356.

58. REESHAV AUTOMOBILES PVT LTD (15NB-15-01), MUKDUMPUR,DIGHA,90 NO GATE, PATNA - 800012 PH :7369944132.

59. SHREE GOPAL AUTO PVT LTD (15NC-`15-01), BIKHACHAK ANISHABAD NEW BYPASS ROAD, OPPOSITE SITA RAM COMMUNITY HALL, PATNA, BIHAR - 800002 - 800002 PH :9262853333.

60. REESHAV AUTOMOBILES PVT LTD (15NB-15-02), MAULANA AZAD NAGAR, F.C.I MORE PHULWARISHARIF PATNA – BIHAR

PURNEA

61. SEEMANCHAL MOTORS PVT LTD (6VNA-6V-01), DAMKA CHOWK,KISHANGANJ ROAD, NH-31,GUALBBAGH,PURNEA,BIHAR - 854326 PH :9334710055.

SIWAN

62. SHREE GOPAL AUTO PVT LTD (O5NA-O5-01), KHATA NO 410, SURVEY NO 464 JASAULI PAKULI CHHAPRA SIWAN ROAD NH 85, SIWAN BIHAR 841241 - 841241

SUPAUL

63. GS MOTORS PVT LTD (SKUN-SKU-01), KHATA NO. 216,218, KHESA NO. 500-504, PIPRA ROAD, SUPAUL

## CHANDIGARH

CHANDIGARH

64. AUTOPACE NETWORK PVT LTD (07NA-07-01), PLOT NO. 37, INDUSTRIAL AREA – PHASE 1, CHANDIGARH - 160002 PH :7087119796.

65. AUTOVOGUE PVT LTD (07NC-07-S1) - 0

66. AUTOVOGUE PVT LTD (07NC-07-02), PLOT NO - 29/4 INDUSTRIAL AREA PHASE -2, CHANDIGARH - 160002 PH :8725099835.

67. NAVDESH AUTOS LLP (07NE-07-01), PLOT NO 182/11, INDUSTRIAL AREA PHASE 1, CHANDIGARH - 160002 PH :8827057534.

## CHHATTISGARH

AMBIKAPUR

68. MAHAMAYA AUTOCARS PRIVATE LIMITED (AENA-AE-01), AJAB NAGAR,MAHATHMA GANDHI ROAD,AMBIKAPUR - 497001 PH :9516609632.

BALODABAZAAR

69. SKY AUTOMOBILES (GJNA-GJ-01), AMBEDKAR CHOWK, RAIPUR RD, BALODA BAZAR, CHHATTISGARH 493332. - 493332

BEMETARA

70. CHOUHAN AUTOMOBILES LLP (CBCN-CBC-01), NEAR AK MULTISPECIALTY HOSPITAL, KRISHNA VIHAR, RAIPUR ROAD, BEMETRA, BEMETRA DISTRICT, CHHATTISGARH

BHILAI

71. SPARSH AUTOMOBILES PVT LTD (83NB-83-S1) - 0

BILASPUR-CG

72. SATYA AUTO PVT LTD (C3NB-C3-01), PLOT NO 53, SECTOR C, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHHATTISGARH - 495001 PH :6372803057.

DURG

73. CHOUHAN AUTOMOBILES LLP (7WNA-7W-01), KH NO 215/2, PLOT NO 6 BESIDES D MART DURG BY PASS PIN - 490020 - 490020

JAGDALPUR

74. SKY AUTOMOBILES (ECNA-EC-01), NEAR BR COLD STORAGE, GEEDAM ROAD, JAGDALPUR. (3S)

JANJGIR

75. SATYA AUTOMOBILES (9NNA-9N-01), NEAR KHOKSA RLY CROSSING, CHAMPA RD, JANJGIR, CHHATTISGARH - 495668

KAWARDHA

76. CHOUHAN AUTOMOBILES LLP (DINA-DI-01), KHASRA NO. 37/10, VILLAGE CHHIRAHA CHOWK,KAWARDHA, DISTRICT KABEERDHA

KORBA

77. SATYA AUTO PVT LTD (U7NB-U7-01), SHED NO 10, PART OF KHASRA NO 885, INDUSTRIAL AREA, RAJGAMAR ROAD, KORBA (C.G)

MUNGELI

78. SATYA AUTO PVT LTD (C3NB-BLE-02), BILASPUR ROAD , GIDHA , CHHATTISGARH - 495334

RAIGARH

79. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTOCORP PRIVATE LIMITED) (7YNA-7Y-01), BESIDE MSQUARE NEXA SHOWROOM,KOTRA ROAD BYPASS,RAIGARGH,CHATTISGARGH,496001(COPY OF LAYOUT ATTACHED AS ANNEXURE)

RAIPUR

80. SKY AUTOMOBILES (50NB-50-01), NEXA MAGNETO, LABHANDHI ,G. E. ROAD, RAIPUR

81. SPARSH AUTOMOBILES PVT LTD (50NA-50-01), NEAR TCI GODOWN, NH-6, CHANDANDIH, TATIBANDH, RAIPUR, CHATTISGARH - 492029 PH :9926626662.

82. VISHWABHARTI AUTOMOBILES PVT LTD (50NC-50-01), SADDU RD, DALDAL SEONI, RAIPUR,CHHATTISGARH. - 492001

83. VISHWABHARTI AUTOMOBILES PVT LTD (50NC-50-S1) - 492010

84. VISHWABHARTI AUTOMOBILES PVT LTD (50NC-50-02), MAIN ROAD DEOPURI, RAIPUR-DHAMTARI ROAD, 492001

RAJNANDGAON

85. SPARSH AUTOMOBILES (LQNA-LQ-01), MUMBAI - KOLKATA HWY, ATAL VIHAR COLONY, RAJNANDGOAN, CHHATTISGARH - 491441

## DELHI

DELHI

86. AAA VEHICLEADES PVT LTD (08NW-08-01), BLOCK C, NAJAFGARH ROAD INDUSTRIAL AREA, NEW DELHI, DELHI 110015 - 110015 PH :8750611111.

87. COMPETENT AUTOMOBILES COMPANY LIMITED (08NF-08-01), PLOT NO-34,RAJASTHAN UDYOG NAGAR, GT AKRNAL ROAD ,DELHI - 110033 PH :9932049425.

88. JAGMOHAN AUTOMOTIVES PVT LTD (08NX-08-01), C133-136(PART, PHASE I, INDUSTRIAL AREA, MANGOLPURI S BLOCK, NEW DELHI, DELHI 110083 - 110083 PH :9812259000.

89. MAGIC AUTO PVT LTD (A UNIT OF MAGIC LEASING & FINANCE PVT LTD) (08NA-08-01), CISF GATE NO 1, D-21, CORPORATE PARK, NEAR DWARKA SEC-8 METRO STATION, NEW DELHI - 110075 PH :9873052000.

90. MAGIC AUTO PVT LTD (A UNIT OF MAGIC LEASING & FINANCE PVT LTD) (08NA-08-S1) - 110075

91. PLATINUM MOTOCORP LLP (08NQ-08-01), PLOT NO-H4,BLOCK-B1,MOHAN CO-OPERATIVE INDEX,MATHURA ROAD,PIN-110044 - 110044

92. RANA MOTORS PVT LTD (08NE-08-01), B-242, OKHLA INDUSTRIAL AREA PHASE 1, OKHLA, NEW DELHI

93. SHREYASH AUTOMOTIVES PVT LTD (08N4-08-S1), B-91 , PHASE 1 , MAYAPURI , DELHI - 110064

94. SHREYASH AUTOMOTIVES PVT LTD (08N4-08-01), B-91, MAYAPURI PHASE-1, NEW DELHI

95. TR SAWHNEY AUTOMOBILES PVT LTD (08NN-08-01), C-46, OKHLA INDUSTRIAL AREA PHASE 2, OKHLA NEW DELHI PH :9953350008.

## GOA

(TISWADI) GOA

96. SAI POINT (34NC-34-01), SR NO 183/13, MORGADO VADDO ROAD, NEAR INDIAN OIL PETROL PUMP, GOA VELHA, TISWADI, GOA - 403108

BICHOLIM

97. SAI SERVICE (BHNN-BHN-01), H. NO. 192, SURVEY NO. 103/1, ASHWAMED HEIGHTS, CARAPUR SARVANA VILLAGE, BICHOLIM, GOA - 403505 - 403505

GOA

98. CHOWGULE INDUSTRIES PVT LTD (34NB-34-S1) - 0
99. CHOWGULE INDUSTRIES PVT LTD (34NB-34-01), SY. NO. 267/1, NEXT TO ARLEM RTO, ARLEM, RAIA, SALCETE - (GOA) - 403720. - 403720
PH :9850966950.
100. SAI POINT CARS PVT LTD (34NC-34-S1) - 0

MAPUSA

101. SAI SERVICE PVT LTD (34NA-34-02), PLOT NO 41, TIVIM INDUSTRIAL ESTATE, KARASWADA, MAPUSA BARDEZ GOA
102. CHOWGULE INDUSTRIES PVT LTD (34NB-34-02), PLOT NO 23, TIVIM INDUSTRIAL ESTATE, KARASWADA, MAPUSA GOA 403517. - 403517

PANAJI

103. SAI SERVICE PVT LTD (34NA-34-01), EMPRESSA INDUSTRIAL CHODANKAR, SURVEY NO. 114/2, SALVADOR DO MUNDO, PORVORIM, BARADEX, GOA - 403521

## GUJARAT

AHMEDABAD

104. PEGASUS (A UNIT OF VISUAL MOTORS PVT LTD) (01NG-01-01), PLOT NO 9, OPP RABARI COLONY BRTS STOP, CTM, NAROL - NARODA HIGHWAY, NH-8, AHMEDABAD, GUJARAT. - 380026
PH :9909023000.
105. POPULAR WHEELERS (INDIA) PVT LTD (01NC-01-01), T P 20, F P 78, OPPOSITE SUN SQUARE COMPLEX OFF, C G ROAD, NEAR HL COLLEGE, NAVRANGPURA GULBAI TEKRA, AHMEDABAD, GUJARAT - 380009
PH :9925203344.
106. STARLINE CARS PVT LTD (01NE-01-01), PLOT NO 236, GIDC, NARODA, AHMEDABAD, GUJARAT. 382 330 - 382330
PH :7436003235.
107. PEGASUS (A UNIT OF VISUAL MOTORS PVT LTD) (01NG-01-02), SURVEY NO. 407/1, FP NO. 308/1, VIP ROAD, SHELA, SOUTH BOPAL, AHMEDABAD
108. KATARIA AUTOMOBILES PRIVATE LIMITED (01NF-01-01), PLOT NO. 14-23, T.P SCHEME NO. 1, BOPAL, AHMEDABAD-380058. - 380058
109. KIRAN MOTORS LIMITED (01NB-01-01), RAJTHAL BANQUET, -SHILAJ ROAD,

ANAND

110. AMAR CARS PVT LTD (F7NA-F7-01), SURVEY NO 1583, PLOT NO 144, NEAR GANESH CROSSING, ANAND SOJITRA ROAD, ANAND, GUJARAT - 388001
PH :9925407666.

ANKLESHWAR

111. RAVIRATNA MOTORS PVT LTD (P9NA-P9-01), S. NO. 449 & 455, PLOT NO. 4 & 5, MAHAVIR TURNING POINT, ANKLEHSWAR, GUJARAT - 393001 - 393001

BHARUCH

112. RAVIRATNA MOTORS PVT LTD (F8NA-F8-01), SURVEY NO 185/3, NH8, ZARDESHWAR, BHARUCH, GUJARAT. - 392001
PH :9727700823.

BHAVNAGAR

113. KIRAN MOTORS LIMITED (C9NB-C9-01), RAMDEV SOCIETY, CHITRA GIDC, BHAVNAGAR - GUJARAT

BHUJ

114. K D MOTORS (P5NA-P5-01), 33, UMA PARK, BEHIND MARUTI SUZUKI SHOWROOM, MIRZAPAR HIGHWAY, BHUJ - 370040
PH :9879898799.

BOTAD

115. KATARIA AUTOMOBILES PRIVATE LIMITED (APNA-AP-01), PLOT NO. 30/2, PALIYAD ROAD, BOTAD, GJ

DABHOI

116. KATARIA AUTOMOBILES PRIVATE LIMITED (UUNA-UU-01), SATYAM COMPLEX, NEAR VEGA BRIDGE, VEGA CHOKDI. DABHOI

DAHOD

117. R B CARS PVT LTD (2CNA-PL-02), PLOT NO. 142, BAPUNAGAR, DAHOD-INDOR HIGHWAY ROAD, DAHOD.

DEHGAM

118. NANDA AUTOMOBILES PVT LTD (NRNA-NR-01), SURVEY NO. 4536/2, BESIDES SHREENATH SOCIETY, OPP. SABARMATI GAS STATION, DEHGAM, GUJARAT-382305.

GANDHIDHAM

119. B M AUTOLINK (77NA-77-01), SURVEY NO 129/26, GALPADAR - ANJAR HIGHWAY, AIRPORT ROAD, GANDHIDHAM, KUTCH , GUJARAT - 370201
PH :7211120014.

GANDHINAGAR

120. NANDA AUTOMOBILES PVT LTD (2BNA-2B-01), BLOCK NO 403, NR SANGATH GATEWAY, OPP RAISAN PETROL PUMP, KUDASAN, GANDHINAGAR, GUJARAT. - 382421
PH :9687641974.

GODHRA

121. R B CARS PVT LTD (2CNA-2C-01), SURVEY NO. 38/2 PAIKE 1 PAIKE 2, LUNAWADA ROAD, OPP. GIDC, GODHRA - 389001 - 389001
PH :9925051444.

HALOL

122. RB CARS (BKCN-BKC-01), SURVEY NO. 1684, PLOT NO124/5-7, HALOL BYPASS, DISTRICT PANCHMAHAL, HALOL, GUJARAT – 389350 - 389350

HALVAD

123. DREAM VEHICLES PVT LTD (GXNA-GX-01), NEAR JANTA FOOD MALL, HALAVAD-DHRANGADHRA HIGHWAY, HALVAD-36300. DISTRICT MORBI - 363330

HIMATNAGAR

124. KIRAN MOTORS LIMITED (P6NA-P6-01), SURVEY NO. 114, OPP. SABAR DAIRY, BORIYA KHURD, HIMMATNAGAR, DIST. SABARKANTHA (GUJARAT).

JUNAGADH

125. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (K8NA-K8-01), GIDC 2, RAJKOT HIGHWAY, JUNAGARH - 362037
PH :9909022619.

KADI

126. STARLINE CARS PVT LTD (URNA-UR-01), CHHALTRAL KADI HIGHWAY, IRANA ROAD, MONJE BUDASAN, TALUKA KADI, DIST MEHSANA - 382715

MANDVI

127. KIRAN MOTORS LIMITED (UYNA-UY-01), SR. NO. 62, MANDVI ZANKHVAV ROAD, AT & PO RUPAN, TALUKA MANDVI, DISTT. SURAT.

MEHSANA

128. STARLINE CARS PVT LTD (D1NA-D1-01), REVENUE SURVEY NO. 342, PLOT NO.1, 4, 5 AND 6 TO 12, VILLAGE NAGALPUR, DISTRICT MEHSANA, GUJARAT - 384002

MORBI

129. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (X5NA-X5-01), RAJKOT MORBI HIGHWAY, VILLAGE SANALA, MORBI - GUJARAT (363641) - 363641

NADIAD

130. KIRAN MOTORS LIMITED (P7NA-P7-01), SURVEY NO. PAIKI 1253/1,2,3,4 NEAR BHAVAN SCHOOL , BEHIND MC DOWNLOAD , NADIAD UTTARSANDA ROAD , NADIAD (GUJARAT).

NAVSARI

131. KATARIA AUTOMOBILES PRIVATE LIMITED (Q7NA-Q7-01), BLOCK NO 1064 AT VILLAGE GANESH SISODARA, TALAND DISTRICT NAVSARI

PALANPUR

132. TANU MOTORS PVT LTD (Q8NA-Q8-01), NR. MARUTI SUZUKI COMMERCIAL SHOWROOM, PALANPUR - DEESA HIGHWAY, PALANPUR-385001 - 385001

PATAN

133. STARLINE CARS PVT LTD (Q9NA-Q9-01), ADJACENT ARENA SET UP, PATAN UNJHA ROAD, PATAN (GUJARAT) - 382465 - 382465
PH :9909043244.

RAJKOT

134. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (55NB-55-01), PLOT NO. 110, 111, 127 & 128, KOTHARIYA, NEAR PERFECT HOUSE, GONDAL ROAD, RAJKOT - 360004
PH :9512035501.

RAJPIPLA

135. RAVIRATNA MOTORS PVT LTD (9XNA-9X-01), S.NO. 779, RAJPIPLA VADODARA HIGHWAY, RAJPIPLA, DISTRICT NARMADA

SURAT

136. AMAR CARS PVT LTD (40ND-40-01), SURVEY NO 139,BLOCK NO-"218"\A,OPPOSITE TO AWADH ARENA MALL,V.I.P ROAD ,BHARTHAMA,SURAT,GUJRAT - 395007
PH :9871389795.
137. KATARIA AUTOMOBILES PRIVATE LIMITED (40NA-40-01), OPP. KAMNATH MAHADEV TEMPLE, NEAR SOHAM CIRCLE, ALTHAN CANAL ROAD, ALTHAN, SURAT. GUJARAT - 395017 - 395017
138. KIRAN MOTORS LIMITED (40NB-40-01), BLOCK NO 443, FP NO 26 MOJE PALGAM, ADAJAN, SURAT, GUJRAT -395009 - 395009
PH :7020569426.
139. PEGASUS (A UNIT OF VISUAL MOTORS PVT LTD) (40NE-40-01), TP NO.6,FP NO.380,CS NO.1207,DHAMANWALA COMPOUND,NEAR GAYWALA CHAMBERS, CANAL ROAD, KHATODARA UDHANA

SURENDRANAGAR

140. DREAM VEHICLES PVT LTD (LCNA-LC-01), PLOT NO. 302, GIDC AREA, WADHWAN CITY, SURENDERNAGAR, GUJARAT. - 363035
PH :8511104644.

VADODARA

141. AMAR CARS PVT LTD (22NB-22-01), SHED NO. 56, SARDAR INDUSTRIAL ESTATE, AJWA ROAD, VADODARA - 390019 - 390019
142. KATARIA AUTOMOBILES PRIVATE LIMITED (22NA-22-01), WARD NO 11 CIRCLE SAINATH ROAD, HARINAGAR-VASNA ROAD VADODARA - 390007
PH :9824701590.

VAPI

143. KATARIA AUTOMOBILES PRIVATE LIMITED (97NA-97-01), NEAR CROMA OUTLET, RATHOD CHAMBERS, DAMAN ROAD,CHALA VAPI - 396191
PH :9714799985.

## HARYANA

AMBALA

144. EAKANSH WHEELS (18NA-18-01), AMBALA-CHANDIGARH HIGHWAY ADJOINING AAJ SAMAJ VILLAGE-SADDOPUR, AMBALA
PH :8395903111.

ASSANDH

145. KARNAL MOTORS PVT LTD (CSNA-CS-01), KAITHAL BYE-PASS, BEHIND CAR CREW CENTER, ASSANDH

ATELI

146. PLATINUM MOTOCORP LLP (9QNA-9Q-02), OPP. ANARKAUR HOSPITAL, WARD NO.-11, KANINA ROAD, ATELI (HR)

BHIWANI

147. PASCO AUTOMOBILES (X3NA-X3-01), NEAR HUNNAMAL PIAYU, ROHTAK ROAD, BHIWANI-HARYANA-127021 - 127021
PH :9289192582.

CHARKHI DADRI

148. JAGMOHAN MOTORS PVT LTD (A6NA-CT-02), PLOT NUMBER 1142, KHATAUNI NUMBER 1206, CHARKHI DADRI, HARYANA

FARIDABAD

149. BVA AUTO PRIVATE LIMITED (58NC-58-01), 2J/53-54, NH-2, NIT FARIDABAD, HARYANA
PH :9911259288.

150. PASCO AUTOMOBILES (58NB-58-S1) - 0

151. PASCO AUTOMOBILES (58NB-58-01), 14/4, MATHURA ROAD, FARIDABAD, HARYANA - 121003
PH :9999790229.

152. VIPUL MOTORS PVT LTD (58NA-58-01), SUB DIVISION NO-3, INDUSTRIAL PLOT NO. -34, N.I.T, FARIDABAD HARYANA - 121001
PH :8562019252.

FARIDABBAD

153. AUTONATION (58NC-58-E1) - 121006

FARRUKHNAGAR

154. PLATINUM MOTOCORP LLP (KENA-KE-01), KHEWAT NO. 4/21/8 & 21/6 PTAUDI ROAD, FARRUKHNAGAR, HARYANA

GOHANA

155. JAGMOHAN AUTOMOTIVES PVT LTD (CUNA-CU-01), KILLA NO 36//16/2-25, KHEWAT NO 35//30 BAROTA VILLAGE SONIPAT ROAD, GOHANA, SONIPAT, 131301

GURGAON

156. PASCO AUTOMOBILES (95NA-95-01), SEC 17-18 DIVIDING ROAD, GURGAON- HARYANA, 122015 - 122015

157. PREM MOTORS PVT LTD (95ND-95-01), PLOT NO. 5, IDC, SECTOR-16, GURGAON, HARYANA - 122001
PH :1292565666.

158. TR SAWHNEY AUTOMOBILES PVT LTD (95NB-95-01), CRPF CAMP ROAD, VILLAGE ULLAWAS, NR. PIONEER PARK SECTOR-62, GURGAON, HARYANA - 122001
PH :1274254441.

159. PLATINUM MOTOCORP LLP (2LNA-95-02), KHEVAT NO 406,KHATONI NO 411, ALMORA CHOWK,SPR RD, SEC 75 A GURGAON - 122012

HISSAR

160. SARAOGI AUTOMOBILES PRIVATE LIMITED (76NB-76-01), PLOT NO -180, SECTOR 27-28, SATROD INDUSTRIAL AREA, HISAR - 125001

JHAJJAR

161. COMPETENT AUTOMOBILES COMPANY LIMITED (0BNA-0B-01), PLOT NO - 309 , OFFICER COLONY , BADLI ROAD , NEAR ANAJ MANDI , JHAJJAR , HARYANA

JIND

162. EAKANSH MOTORS PVT LTD (2KNA-2K-01), KHEWAT NO. - 155, KHASRA NO. - 142, MURRABA NO. - 210 OPP. HP LPG BOTTLING PLANT, ROHTAK-JIND ROAD, JIND. PIN - 126102. - 126102

KAITHAL

163. EAKANSH MOTORS PVT LTD (U8NA-U8-01), NH-65, OPP RKM FARM, AMBALA ROAD, KAITHAL - 136027

164. EAKANSH MOTORS PVT LTD (U8NA-U8-02), KHEWAT NO -458, KHATONI - 563, KITTAS - 20/87K 01M ADJOINING NEXA SHOWROOM, AMBALA HISAR ROAD, KAITHAL - 136027
PH :8813038777.

KARNAL

165. KARNAL MOTORS PVT LTD (89NA-89-01), 118-119 KM MILESTONE, G.T. ROAD, KARNAL, HARYANA - 132001

KHARKODA

166. JAGMOHAN AUTOMOTIVES PVT LTD (BUNA-BU-01), KHEWAT NO 885, KHATA NO 1151-53, KILA NO 153/16/2/2/4-11, SERVICE ROAD, KHARKHODA BYPASS, KHARKHODA SONIPAT.

KOSLI

167. DINCO 4 WHEELS LLP (AUTO VIBES) (CANN-CAN-01), KHEWAT NO.- 857& 900, RECT. NO-75/2/2, KOSLI, DIST.-REWARI (HARYANA).

KURUKSHETRA

168. KARNAL MOTORS PVT LTD (U6NA-U6-01), 155-200 MILESTONE GT ROAD KURUKSHETRA - 136038

MANESAR

169. PLATINUM MOTOCORP LLP (2LNA-2L-S1) - 0

NARAINGARH

170. EAKANSH WHEELS (CVNA-CV-01), KHEWAT NUMBER 118, W. NO. 5, NAHAN ROAD, NARAINGARH

NARNAUL

171. PLATINUM MOTOCORP LLP (9QNA-9Q-01), KAILASH NAGAR, REWARI ROAD, NARNAUL, HARYANA - 123001

NARWANA

172. EAKANSH MOTORS PVT LTD (CWNA-CW-01), KHEWAT & KHATA NO 441/626, OPPOSITIVE MAHINDRA SHOWROOM, HISSAR UKLANA ROAD, NARWANA, HARYANA.

NUH

173. PASCO AUTOMOBILES (7LNA-7L-01), KHATAUNI NO. 550, KILA NO. 14/1, SADDIK NAGAR, ALWAR ROAD, NUH (HARYANA).

PALWAL

174. AUTONATION (A UNIT OF TAYAL INDIA MOTORS PVT LTD) (EENA-EE-01), KILA NO.-15/2 & 16/1, 57 MILESTONE, NEAR ECHS HOSPITAL, MATHURA ROAD, PALWAL

PANIPAT

175. AUTOGALLERY (A UNIT OF RKH AUTOMOBILES PVT LTD) (D3NB-D3-01), NANGAL KHERI, NEAR BBMB POWER HOUSE, OPP. SEC-29, PANIPAT, HARYANA - 132103
PH :9812615000.

PATAUDI

176. PLATINUM MOTOCORP LLP (BYNB-BY-01), 422/2 , MITTAL & SONS , HAILYMANDI , WARD NO. 4 KULALNA ROAD , PATAUDI

REWARI

177. DINCO 4 WHEELS LLP (AUTO VIBES) (U1NA-U1-01), OPP. TULARAM STADIUM, DELHI ROAD, REWARI - 123401

ROHTAK

178. JAGMOHAN MOTORS PVT LTD (A6NA-A6-01), NORTHERN BYEPASS, SUKHPURA CHOWK, JIND ROAD, ROHTAK, HARYANA
PH :8754045446.

SIRSA

179. SHAKTI MOTORS PVT LTD (E4NA-E4-01), OPP. DELHI PUBLIC SCHOOL, NH-09, HISSAR ROAD, SIRSA - 125055

SONEPAT

180. JAGMOHAN AUTOMOTIVES PVT LTD (J5NB-J5-01), SONIPAT MURTHAL ROAD, OPPOSITE ASR CNG PUMP, SONIPAT - 131001

YAMUNANAGAR

181. PANDIT AUTOMOBILES PVT LTD (D2NA-D2-S1) - 0

## HIMACHAL PRADESH

BADDI

182. GOYAL MOTORS PVT LTD (CIFN-CIF-01), KHASRA NO. 968/800, OPP. HOTEL APEX, BHUD, BADDI, DISTRICT SOLAN, HIMACHAL PRADESH - 173205

BILASPUR-HP

183. COMPETENT AUTOMOBILES COMPANY LIMITED (6YNA-6Y-01), KHASRA NO. 259/76 & 261/77 KHATONI : 18 , VILLAGE BEHAL PO BAMTA TEHSIL SADAR

CHAMBA

184. PATHANKOT VEHICLEADES PVT LTD (JFNA-JF-01), KHASRA NO. 780/370/2, GHOTI, PO- SAROL, TEH AND DISTT- CHAMBA, HIMACHAL PRADESH

HAMIRPUR

185. COMPETENT AUTOMOBILES COMPANY LIMITED (W9NA-W9-01), KHEWAT 13 MIN, KHATUANI 13 MIN, KHASRA NO. - 492,493, MOHAL CHATTER MOUZA, UGIALTA TEH, DIST. HAMIRPUR.

NAGROTA

186. KANGRA VEHICLEADES (A UNIT OF PATHANKOT VEHICLEADES PVT LTD) (D9NA-D9-01), VILL HATWAS, PATHANKOT - MANDI HIGHWAY, NAGROTA BAGWAN DISTT. KANGRA - 176047
PH :7018145653.

PALAMPUR

187. KANGRA VEHICLEADS (2TNA-2T-01), VPO BHATTU SAMULA, SUB. TEHSIL SULAH (PALAMPUR), DISTT. – KANGRA, HIMACHAL PRADESH - 176064 - 176064

PAONTA SAHIB

188. GOYAL MOTORS PVT LTD (8GNA-8G-01), SHAMSHERPUR, NH-72, POANTA SAHIB, HIMACHAL PRADESH.

RAMPUR (HP)

189. GOYAL MOTORS PVT LTD (CEZN-CEZ-01), VILLAGE NIRSU, PO DUTT NAGAR, NEAR NEW RELIANCE PETROL PUMP, RAMPUR BUSHAHR, HP - 172001

ROHRU

190. GOYAL MOTORS PVT LTD (JZNA-JZ-01), VILLAGE MEHENDLI, ROHRU - SHIMLA ROAD, ROHRU, HIMACHAL PRADESH - 171207

SHIMLA

191. MODERN AUTOMOBILES (A9NA-A9-S1) - 0

192. GOYAL MOTORS PVT LTD (A9NB-A9-01), RANJEET NAGAR , BHATTAKUFER , NEAR APPLE MARKET, SHIMLA - 171010

SOLAN

193. GOYAL MOTORS PVT LTD (7DNA-7D-S1) - 0

194. GOYAL MOTORS PVT LTD (7DNA-7D-01), DEONGHAT ,SOLAN, HIMACHAL PRADESH

UNA

195. COMPETENT AUTOMOBILES CO LTD (QDNA-QD-01), VILLAGE LAL SINGHI (OPPOSITE PRAKASH HONDA), NH 503, UNA, HIMACHAL PRADESH.

## JAMMU AND KASHMIR

AKHNOOR

196. JAMMU MOTORS PVT LTD (2XNA-2X-01), KHASRA NO 680 MIN/52 KHEWAT NO 5/34 KHATA NO 90/203 MIN/204 MIN, BANGTI DASKAL, AKHNOOR, JAMMU

BARAMULLA

197. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (8CNA-8C-01), KHUSHAL PORA, CHANAD, SANGRAMA, BARAMULLA, PIN-193202, JAMMU & KASHMIR - 193202

JAMMU

198. JAMKASH VEHICLEADES PVT LTD (33NB-33-01), NH-1A BYE PASS OPPOSITE CHANNI HIMMAT, JAMMU (J&K)

199. JAMMU MOTORS PVT LTD (33ND-33-01), KHASRA NO. 421, TOPE SHERKHANIA, AKHNOOR ROAD, OPPOSITE BEST PRICE, JAMMU, JAMMU & KASHMIR - 180016

KATHUA

200. JAMMU MOTORS PVT LTD (3BNA-3B-01), KHASRA NO 406/213/73, KHATA NO 1, KHEWAT NO 1, NATIONAL HIGHWAY, KALIBARI CHOWK, JAMMU AND KASHMIR

RAJAURI

201. JAMKASH VEHICLEADES PVT LTD (AINA-AI-01), 449/1,MAIN CHOWK MURADPUR - TEHSIL, RAJOURI

SRINAGAR

202. PEAKS AUTO PVT LTD (12NA-12-01), DR. ALI JAN ROAD, SOURA, SRINAGAR PIN - 190001 - 190001
PH :7006285604.

203. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (12NB-12-S1) - 190001

204. COMPETENT KASHMIR AUTOMOBILES PVT LTD (12NC-12-01), KHASRA NO. 2745/1593/638 , KHEWAT NO. 352, MOUJA, BATAMALOO, SRINAGAR, J&K

## JHARKHAND

BOKARO

205. HINDUSTAN AUTO AGENCY (B5NA-B5-01), KHATA NO. 752, PLOT NO. 7792, NH-32, CHAS, BOKARO. - 827013
PH :9304807318.

CHATRA

206. HINDUSTAN AUTO AGENCY (B5NA-B5-02), PLOT NO - 1110, 1111, 1112 ; KHATA NO 112,163,22 THANA – CHATRA, DIST - CHATRA JHARKHAND

CHIRKUNDA

207. RELIABLE INDUSTRIES (52NA-CQT-02), NEHRU ROAD , CHIRKUNDA - 828202

DALTONGANG

208. PREMSONS MOTOR UDYOG PVT LTD (MPNA-MP-01), RANCHI ROAD, NORTH REDMA MEDININAGAR PS DALTONGANJ, DIST PALAMU - 822102

DEOGHAR

209. PREMSONS MOTOR UDYOG PVT LTD (SGWN-SGW-01), PLOT NO 318/319 UNDER THANA NO 583,MAHESHMARA MOUJA ,DEOGHAR - 814112
PH :9835507004.

DHANBAD

210. RELIABLE INDUSTRIES (52NA-52-01), RELIABLE INDUSTRIES NEXA WORKSHOP AMAGHATA ,BY PASS ROAD SUGIADIH,PIN -828109 - 828109
PH :7992470853.

DUMKA

211. RELIABLE INDUSTRIES (L7NA-L7-01), TATA CHOWK,

GIRIDIH

212. RELIABLE INDUSTRIES (3DNA-3D-01), KHATA NO-51,PLOT NO-596,598 & 599, PO - PACHAMBA, GIRIDIH , JHARKHAND-815316

HAZARIBAGH

213. PREMSONS MOTOR UDYOG PVT LTD (Y9NA-Y9-01), PREMSON MOTOR UDYOG PVT LTD ,NEXA SHOWROOM NEXT TO GST OFFICE,ARYA NAGAR,HURHURU,HAZARIBAGH,JHARKHAND 825301 - 825301
PH :9835507004.

JAMSHEDPUR

214. MOTOR WORLD (A UNIT OF KALIMATI MOTORS PVT LTD) (31NB-31-01), NS-6, 2ND PHASE, ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR - 831013

215. PEBCO MOTORS LTD (31NA-31-01), KANDRA ROAD, ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR - 831013
PH :9334183260.

RAMGARH

216. HINDUSTAN AUTO AGENCY (AVNA-AV-01), KHATA NO -01, PLOT NO 195 MURRAMKALAN NEAR RAMGARH BAZAAR , RAMGARH JHARKHAND

RANCHI

217. PREMSONS MOTOR UDYOG PVT LTD (51NC-51-01), PLOT NO 2651/2652, KHATA NO 239, MAUJA,
VILLAGE BARAGAI , BARIATU MAIN ROAD, RANCHI, JHARKHAND - 834009
PH :9334811248.

218. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PRIVATE LIMITED) (51ND-51-01), PLOT NO. 967, 972, 973, 974, 975, BIRSA CHOWK, VILLAGE HINOO, RANCHI

219. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PRIVATE LIMITED) (51ND-51-02), KATHALMORE, OPP. MANER DHABA, RANCHI - 834005

## KARNATAKA

ANEKAL

220. PRATHAM MOTORS PVT LTD (FANA-FA-01), SY.NO.36/5,KAVALA HOSAHALLI,ANEKAL-CHANDAPURA MAIN ROAD,SIDIHOSAKOTE POST,ANEKAL TALUK,ANEKAL-562106. - 562106

BANGALORE

221. BIMAL AUTO AGENCY INDIA PVT LTD (02NL-02-01), NO.1, 3RD BLOCK, 2ND STAGE, NAGARABHAVI, OUTER RING ROAD, BANGALORE – 560072 - 560072

222. BIMAL AUTO AGENCY INDIA PVT LTD (02NC-02-01), SY.NO.9/04, NEAR KATAMANALLUR GATE, KANNAMANGALA, KADUGODI MAIN ROAD, BANGALORE - 560067
PH :9742269137.

223. BIMAL AUTO AGENCY INDIA PVT LTD (02NC-2-03), SY NO. 2/2, MARATHAHALLI TO KR PURAM OUTER RING ROAD, MAHADEVAPURA, K R PURAM HOBLI, BANGALORE

224. KALYANI MOTORS PVT LTD (02NI-02-01), SURVEY NO.17/2, KENCHENAHALLI VILLAGE, RAJARAJESHWARI NAGAR, MYSORE ROAD,BANGALORE, KARNATAKA - 560032
PH :9845049626.

225. KALYANI MOTORS PVT LTD (02NN-02-01), 152/7, OUTER RING ROAD, DODDA BANASWADI, HORAMAVU, KR PURAM HOBALI, BANGALORE -560043. - 560043
PH :9900020454.

226. MANDOVI MOTORS PVT LTD (02NJ-02-01), SURVEY NO.33/2,ALLALASANDRA, YELAHANKA NORTH, BANGALORE, KARNATAKA - 560064
PH :9513729888.

227. PRATHAM MOTORS PVT LTD (02NK-02-01), 120,SARJAPUR MAIN ROAD,DODDAKANAHALLI, VARTHUR HOBLI, BANGALORE EAST, KARNATAKA- 560035. - 560035
PH :8884000579.

228. SURAKSHAA CAR CARE PVT LTD (02NF-02-01), 2/6, BERTEN AGRAHARA, OPP TO METRO CASH & CARRY, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE, KARNATAKA - 560100
PH :9845047393.

229. VARUN MOTORS PVT LTD (02NG-02-01), NO.23/A, INDUSTRIAL SUBURB, 2ND STAGE, TUMKUR ROAD,YESHWANTPUR, BANGALORE, KARNATAKA- 560022. - 560022
PH :8971888885.

230. VARUN MOTORS PVT LTD (02NM-02-01), 37/56 NAGAVARA VILLAGE,HEBBAL RING ROAD ,BANGALORE - 560024
PH :9513394753.

231. KALYANI MOTORS PVT LTD (02NA-02-01), MUNICIPAL NO 1, EVEREST TALKIES, NEW WARD NO 78, PID NO 91-4-1,KENCHAPPA ROAD, FAZER TOWN, BANGALORE - 560005

232. SURAKSHAA CAR CARE PVT LTD (02NP-02-01), SY. NO.16/3, THALAGHATTAPURA VILLAGE, UTTARAHALLI HOBLI, BANGALORE, KARNATAKA

233. SURAKSHAA CAR CARE PVT LTD (02NP-02-02), #47/2, 80FT ROAD, BANASHANKARI 6TH STAGE, 4TH BLOCK, TURAHALLI, BANGALORE -56006 - 56006

234. VARUN MOTORS PVT LTD (02NO-02-01), OPP TO SOUTH EAST ASIAN TRUST, AYAPPA NAGAR,HOODI, KR PURAM,BANGALORE

235. KALYANI MOTORS PVT LTD (02NQ-02-01), SURVEY NO. 23/6,CHIKKABIDARAKALUU VILLAGE, ANCHAPALYA, DASANAPURA-HOBLI,BANGALORE NORTH TALUK BANGALORE - 560073,KARNATAKA.

BANGARPET

236. SURAKSHA (ORNA-OR-01), OPP TO SUGAR FACTORY, AMARAVATHI LAYOUT BUS STOP, KGF MAIN ROAD, BANGARPET - 563114

BELGAUM

237. SHANTESHA MOTORS PVT LTD (E8NA-E8-01), PLOT NO. 6/B, R.S NO. 34, BOUXIDE ROAD, KANGRALI B K, BELGAUM, KARNATAKA-590010. - 590010
PH :9538195381.

BELLARY

238. KPF PVT LTD (G2NA-G2-01), DOOR NO. 14&15, 1ST CROSS, GANDHI NAGAR, BELLARY- 583103 - 583103

BIJAPUR

239. CHAVAN MOTORS (KTK) PRIVATE LIMITED (T7NA-T7-S1) - 586109

240. CHAVAN MOTORS (KTK) PRIVATE LIMITED (T7NA-T7-01), R SY NO. 26/D1, KASABA VIJAYAPURA, BYE PASS CROSS, NH50 HIGHWAY ROAD, VIJAYAPURA (BIJAPUR) - 586109
PH :8799957100.

CHICKBALLAPUR

241. BIMAL AUTO AGENCY INDIA PVT LTD (KJNA-KJ-01), SY NO. 158 & 159, KANDAVARAKERE KASABA HOBLI, - 503224

CHITRADURGA

242. SAKETH AUTOMOBILES (ALNA-AL-01), SITE NO.4181/4024/10782/2, SAROJABHAI KALYANA MATAPA, NH-04 SERVICE ROAD, CHITRADURGA - 577501. - 577501

DAVANGERE

243. SHRUTI MOTORS PRIVATE LIMITED (S1NB-S1-01), AVARAGERE ROAD, OLD, PB RD, DAVANAGERE, KARNATAKA 577003 - 577003

DEVANHALLI

244. BIMAL AUTO AGENCY INDIA PVT LTD (02NL-WH-02), SURVEY NO 113,113/A, HISREAMANIKERE VILLAGE, KASABA HOBLI, DEVANAHALLI, BANGALORE RURAL DISTRICT - 562110

DHARWAD

245. RNS MOTORS PRIVATE LIMITED (BIXN-BIX-01), CTS NO. 29A/1, 29A/2, 29A/3, ASHOK NAGAR, GOA ROAD OPPOSITE PAVAN PARK, DODDNAYAKANA KOPPA DHARWAD - 580021

GADAG

246. RNS MOTORS PRIVATE LIMITED (RKNA-RK-01), SY NO. 48, BINKADAKATTI VILLAGE,GADAG, KARNATAKA.

GOKAK

247. SHANTESHA MOTORS PVT LTD (IRNA-IR-01), SY NO 106/3D/2 GOKAK- BELGAUM HIGHWAY

GULBARGA

248. LAHOTI MOTORS PVT LTD (E9NA-E9-01), #7-1211/A, OPP GUNJ BUS STAND HUMNABAD ROAD, GULBARGA - 585104

HASSAN

249. VENKAT MOTORS (C8NA-C8-01), KHATA NO 200-201, DM HALLY, BANGALORE - MANGALORE ROAD, HASSAN, KARNATAKA - 0

HOSKOTE

250. BIMAL AUTO AGENCY INDIA PVT LTD (SMNA-SM-01), SY NO. 102. NO.56, HOSAKOTE SANTE GATE FLYOVER, KAMMAVARI PETE, HOSKOTE, KARNATAKA - 562114

HOSPET

251. MUNEER ENTERPRISE PRIVATE LIMITED (MUNEER NEXA) (N7NA-N7-01), 7TH WARD, A.S. GUDI, HAMPI ROAD, HOSPET ROAD, HOSPET, KARNATAKA

HUBLI

252. RNS MOTORS PRIVATE LIMITED (73NC-73-01), SITE NO. 415/2A, P.B. UNKAL ROAD, HUBLI, KARNATAKA

KOLAR

253. MANDOVI MOTORS PVT LTD (02NJ-QU-02), KATHA NO2790,2790/1,PETECHAMANAHALI,KASABA HOBLI,KOLAR, KARNATAKA.

MANGALORE

254. MANDOVI MOTORS PVT LTD (45NA-45-01), SUMIT APARTMENT BUILDING, AIRPORT ROAD, MARY HILL, MANGLORE - 574142
PH :9845133077.

255. BHARATH AUTOCARS PVT LTD (45NB-45-01), GODOWN 17-106/P, V.S KUDVA ROAD,MAROLI, MANGALORE - 575005

MOODBIDRI

256. BHARATH AUTO CARS PVT LTD (HNNA-HN-01), BHARATH BEEDI COMPOUND, NEAR ALVA'S HOSPITAL, MOODBIDRI, KARNATAKA.

MYSORE

257. KALYANI MOTORS PVT LTD (25NC-25-01), PLOT NO.262, HEBBAL INDUSTRIAL AREA, MYSORE, KARNATAKA- 570016. - 570016

258. MANDOVI MOTORS PVT LTD (25NA-25-01), SURVEY NO. 90/7, RT NAGAR, RING ROAD, DATTAGALLY, MYSORE, KARNATAKA -570023 - 570023

NEELAMANGALA

259. RNS MOTORS PVT LTD (BBHN-BBH-01), SY NO. 216/9, KASABA HOBLI, KUNIGAL BYPASS ROAD, NEELAMANGALA TALUK,BANGALORE RURAL DISTRICT. - 562123

PUTTUR

260. BHARATH AUTOCARS PVT LTD (CZNA-CZ-01), PLOT NO. 5-28/4, NEAR GOWDA SAMAJ HALL, BYEPASS ROAD, TENKLA, PUTTUR -574201.

SAGARA

261. SHRUTI MOTORS PRIVATE LIMITED (WFNA-WF-01), NEAR INDIAN OIL PETROL BUNK,BASAVANA HOLE, JAMBAGARU, SAGARA, KARNATAKA - 577401

SHIMOGA

262. SHRUTI MOTORS PRIVATE LIMITED (B7NB-B7-01), 217/215/91/79/1, OPP TO FOREST OFFICE, SHANTI NAAGARA, HONNALI ROAD, SHIMOGA,KARNATAKA - 577201

SIRSI

263. RNS MOTORS PVT LTD (MQNA-MQ-01), SY NO,260/A5, SHIVA COMPLEX,NEJJUR COMPO, BANAVASI ROAD. TALUK SIRSI, KARNATAKA

UDUPI

264. ABHARAN MOTORS PVT LTD (G6NA-G6-01), SY NO. : 94/35 & 94/18B, UPPOR VILLAGE, UDUPI, KARNATAKA. - 576105

## KERALA

ALLEPPEY

265. POPULAR VEHICLES & SERVICES LTD (E5NB-E5-01), 12/287A, PARAVOOR, ALLEPPEY - 0

CALICUT

266. A M MOTORS (47NA-47-01), 18/1472, OPP TO COMTRUST EYE HOSPITAL,SRAMBIKKAL PARAMBA,MINI BYPASS JAIL ROAD JUNCTION,PUTHIYARA POST,CALICUT, KERELA-673004. - 673004
PH :7708833966.

267. POPULAR VEHICLES & SERVICES LTD (47NB-47-01), BYPASS SERVICE ROAD, BEHIND JAYA ARCADE, THONDAYADU, CALICUT, KERALA - 673017
PH :9946104660.

268. BIMAL AUTO AGENCY INDIA PVT LTD (47NC-47-01), KTC NAGAR (OLD FORD SHOWROOM), CALICUT ROAD, MEENCHANDA, KOZHIKODE, KERALA 673018

COCHIN

269. INDUS MOTOR COMPANY PVT LTD (27NC-27-01), NH 47,THAIKATTUKARA PO,THAIKAVU, ALUVA, COCHIN - 683106 - 683106
PH :9747508822.

270. SAI SERVICE PVT LTD (27NA-27-01), 723/7,6,18,OPP TO HOTEL AARYAS, SEAPORT-AIRPORT, POOJARY VALAVU, KANAYANNOOR TALUK, THIRRAKKARA NORTH, COCHIN-682021. - 682021
PH :9645106193.

271. GEORGE MAIJO AUTOMOBILES PVT LTD (27ND-27-01), 32/1219,THIRAKKAKARA MUNICIPALITY, CIVIL LINE ROAD,VAZHAKALA JUNCTION, COCHIN

272. POPULAR VEHICLES AND SERVICES (27NB-27-01), MANAKKAPPADY JN, IRUMPANAM, COCHIN

KAIPAMANGLAM

273. SAI SERVICE PRIVATE LIMITED (RPNA-RP-01), EDAMUTTOM, EDAMUTTOM, P.O, KAIPAMANGALAM RD, THRISSUR

KANNUR

274. KVR AUTO MALL PVT LTD (K1NA-K1-01), SURVEY NO. 54/2, BYE PASS ROAD KANNUR-KOZHIKODE, ELAYAVOOR VILLAGE, KUZHUTHALY DESAM, KANNUR TALUK

KASARGOD

275. INDUS MOTOR COMPANY PVT LTD (3LNA-3L-01), SURVEY NO.384/3C,10, MUTTATHODY VILLAGE, INDIRA NAGAR, CHENGALA POST, KASARGODE, KERALA-671541 - 671541

KATTAPPANA

276. BIMAL AUTO (ZNNA-ZN-01), SERIAL NO. 53/14, OPP. VELLAYAMKUDI POST OFFICE, THODUPUZHA - PULIYANMALA ROAD, VELLAYAMKUDI, KATTAPPANA, KERALA - 685515

KAYAKULAM

277. SAI SERVICE PVT LTD (8LNA-8L-01), SAI SERVICE PVT LTD, WEST OF RAILWAY BRIDGE, K P ROAD, KAYAMKULAM, PIN : 690502 - 690502
PH :9288024222.

KODANGALLUR

278. SAI SERVICE PVT LTD (8KNA-8K-01), SURVEY NO. 506/3-2, KODUNGALLUR, THRISSUR

KOLLAM

279. SARATHY CARS PVT LTD (C7NA-C7-01), NH-47 BYE PASS ROAD, AYATHIL.P.O KOLLAM DIST, KERALA STATE PIN 691021 - 691021
PH :9848659456.

KOTTAYAM

280. AVG MOTORS LTD (B8NA-B8-01), SY. NO. 182/3,182/4, WARD NO. 10, PEROOR VILLAGE, ETTUMANOOR MUNICIPALITY, KOTTAYAM - 686630

281. SAI SERVICE PVT LTD (B8NB-B8-01), SY. NO. 341/11, 341/12, PERUR VILLAGE, MC ROAD, THELLAKOM, KOTTAYAM - 686630

MUVATTUPUZHA

282. INDUS MOTOR COMPANY PVT LTD (7ENA-7E-01), NELLIPPILLIL HOUSE, ADOOPARAMBU, MUVATTUPUZHA P.O., ERNAKULAM. - 686661

PALA

283. AVG MOTORS LTD (GNNA-GN-01), SURVEY NO 11/37,BLOCK NO -80, PULIYANNOOR VILLAGE, PALA MUNICIPALITY, KOTTAYAM DISTRICT, KERALA.

PALAKKAD

284. INDUS MOTORS (Y2NA-Y2-01), SURVEY NO. 133,135, NEARBY MOYANS SCHOOL, PALAKKAD CITY, KERALA.

TALIPARAMBA

285. POPULAR VEHICLES & SERVICES LTD (9WNA-9W-01), SY NO. 34/196 & 34/207, NH-66, TALIPARAMBA, KERALA - 670141

THIRUVANANTHAPURAM

286. INDUS MOTOR COMPANY PVT LTD (16NB-16-01), OPPOSITE EVM ASHOK LEYLAND,ALUMOOD JN,NH 47,KANNIYAPURAM, TRIVANDRUM - 695301. - 695301 PH :9656685678.

287. POPULAR VEHICLES & SERVICES LTD (16NC-16-01), SURVEY NO 39,40,59 & 75, NEAR LOURDE FORANE CHURCH, NEAR PMG JN, TRIVANDRUM - 695004

THRISSUR

288. BRD CARWORLD LIMITED (A4NA-A4-S1) - 0

289. POPULAR VEHICLES & SERVICES LTD (A4NB-A4-01), SURVEY NO 62/P, CHUNGAM,OLLARI, KANJANI ROAD, ARANATTUKARA VILLAGE, THRISSUR - 680618 - 680618

290. BRD CARWORLD LIMITED (A4NA-A4-01), CHIYYARAM VILLAGE , VILLAGE THRISSUR

## MADHYA PRADESH

ASHOK NAGAR

291. PREM MOTORS PVT LTD (DSNA-DS-01), WARD NO 1 , KHASRA NO 67/2/3 , NEAR RAJMATA CHAURAHA , GUNA BYPASS ROAD , AKSHARDHAM COLONY , ASHONAGAR

BHOPAL

292. JEEWAN MOTORS PVT LTD (03NB-03-S1) - 0

293. OCEAN MOTORS PVT LTD (03ND-03-S1) - 0

294. OCEAN MOTORS PVT LTD (03ND-03ND-01), PLOT NO-54 & 55, SECTOR-A, GOVINDPURA INDUSTRIAL AREA, JK ROAD, BHOPAL

295. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (03NC-`03-01), 42, 6_BLOCK, BHEL INDUSTRIAL ESTATE, HABIBGANJ, HOSHANGABAD ROAD, BHOPAL (M.P.)

296. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (03NC-03-S2)

297. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (03NC-03-S1) - 0

BIAORA

298. UNITARA (0FNA-0F-01), 38/9/3, GRAM PADONIYA, OLD A.B ROAD, BIAORA (M.P.). - 465674

CHHINDWARA

299. KAMTHI MOTORS LLP (U5NA-U5-01), WARD NO.16, MAHATMA GANDHI WARD, SEONI PRAN MOTI, SEONI ROAD, CHHINDWARA (M.P.) - 480001

DAMOH

300. ADINATH CARS PVT LTD (RDNA-RD-01), KHASRA NO. 39/11/2/2, GRAM HIRDAYPURA, SAGAR NAKA, DAMOH, MADHYA PRADESH - 470661 - 470661

DATIA

301. PREM MOTORS (WENA-WE-01), NEAR TATA COMMERCIAL SERVICE STATION, JHANSI ROAD, DATIA (MADHYA PRADESH) - 475661

DEPALPUR

302. OCEAN MOTORS PVT LTD (WBNA-WB-01), SURVEY NO. 27/1 TAKIPURA, BETMA ROAD, DEPALPUR, INDORE, MADHYA PRADESH - 453115

DEWAS

303. UNITARA MOTORS PVT LTD (3QNB-3Q-01), 3, YAMUNA NAGAR, AB ROAD, DEWAS 455001 - 455001

304. UNITARA MOTORS PVT LTD (3QNB-3Q-S1)

DHAR

305. RUKMANI MOTORS PVT LTD (LMNA-LM-01), SURVEY NO.-472/2/1, VILLAGE JETPURA, DHAR (M.P.)

GUNA

306. PREM MOTORS PVT LTD (S3NA-S3-01), SURVEY NO. 352, KASHONDA, AB ROAD, GUNA (M.P.)

GWALIOR

307. NIKUNJ MOTORS (A UNIT OF RSKS AUTOMOTIVES PVT. LTD.) (30NB-30-01), MAHARANA PRATAP CHOWRAHA, GOLE KA MANDIR, GWALIOR, MADHYA PRADESH. - 474005

308. PREM MOTORS PVT LTD (30NA-30-S1) - 0

309. PREM MOTORS PVT LTD (30NA-30-01), SURVEY NO 442/2 , JHANSI ROAD , MAHAGAON , GWALIOR

INDORE

310. OCEAN MOTORS PVT LTD (53NB-53-01), BICHOLI MARDANA NEAR SAMPATH PALACE OPP HOTEL PRIDE - 452001

311. PATEL MOTORS (INDORE) PVT LTD (53NA-53-01), 1105/1528/5/2, MIN-1 AND 1105/1528/4/5, GRAM: KHAJRANA, DISTRICT: INDORE, KANADIA ROAD, INDORE (M.P.) - 452016 PH :7771002581.

312. RANA MOTORS PVT LTD (53ND-53-01), LASUDIA MORI, DEWAS NAKA, INDORE, PIN CODE 452010 - 452010 PH :9933055539.

313. RUKMANI MOTORS PVT LTD (53NC-53-01), RUKMANI MOTORS NEXA SERVICE,FOOTHI OTHI SQUARE,OPP.DASTOOR GARDEN,INDORE - 452002 PH :9755512100.

314. RUKMANI MOTORS PVT LTD (53NC-53-S1) - 0

315. RUKMANI MOTORS PVT LTD (53NC-53-02), 370/1/5/2P, IN FRONT OF BHARAT PETROL PUMP, NEMAWAR ROAD, PALDA, INDORE (M.P.)

JABALPUR

316. SHUBH VEHICLES LLP (54ND-54-S1) - 0

317. SHUBH VEHICLES LLP (54ND-54-01), 297/1 4 MILE LAL BUNGLOW TILHARI JABALPUR - 482020

318. STANDARD MOTOCORP PVT LTD (54NC-54-01), KHARSA NO-529/1/1 ,NEAR TRIPURI CHOWK GARHA JABALPUR M. P - 482003 PH :9773543358.

319. STANDARD MOTOCORP PVT LTD (54NC-54-03), UKHARI TIRAHA, OPPOSITE TO RAMESHWARAM WATER TANK, MR-4 ROAD, VIJAY NAGAR, JABALPUR ( M.P.)

KATNI

320. SHUBH VEHICLES LLP (FKNA-FKN-01), KHASARA NUMBER 24/2, 25/1 PANNA MOD, MAIHAR ROAD, NEAR JOHN DEER REACTOR AGENCY, KATNI (MP)

KHARGONE

321. NIMAR MOTORS PRIVATE LIMITED (NEXA DIVISION) (AUNA-AU-01), SANAWAD ROAD ,JETAPUR KHARGONE - 451001

KUKSHI

322. OCEAN MOTORS PVT LTD (BION-BI-01), PLOT NO 464 , VINAYAK COMPLEX INDORE KUKSHI ROAD

MANDLA

323. STANDARD AUTO (WDNA-WD-01), KHASRA NO-44/1, BINJHIA, JABALPUR ROAD, MANDLA, MADHYA PRADESH-481661.

MANDSAUR

324. PATEL MOTORS (INDORE) PVT LTD (WCNA-WC-01), SURVEY NO 362/6, OPP KRISHI UPAJ MANDI, MHOW NEEMUCH ROAD, MANDSAUR (MP).

MORENA

325. PREM MOTORS PVT LTD (RGNA-RG-01), OPP. SHREE BAJRANG DHARAMKANTA, A B ROAD, MORENA, MP - 476001

NEEMUCH

326. PATEL MOTORS (INDORE) PVT LTD (3TNA-3T-01), KHASRA NO -1973/1&1975/2, MHOW - NEEMUCH ROAD, NEEMUCH - MADHYA PRADESH - 458441

SAGAR

327. ADINATH CARS PVT LTD (G1NA-G1-01), KHASRA NO 155, P H NO. -77, BAHERIA GADGAD, SAGAR JABALPUR ROAD, SAGAR - 470004, MADHYA PRADESH, INDIA - 470004 PH :9752447690.

SANWER

328. RANA MOTORS PVT LTD (CWXN-CW-01), SURVEY NO. 217, KUDANA ROAD BYPASS, SANWER (MP).

SATNA

329. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (D7NA-D7-01), BEHIND NEXA SHOWROOM, 666/2, AMOUDHA, PANNA ROAD, SATNA, MADHYA PRADESH - 485001 PH :6262230999.

SHAHDOL

330. STANDARD MOTOCORP PVT LTD (SFAN-SAF-01), KHASRA NO-459, VILLAGE JAMUI NEAR BAGHEL DHABA, BUDHAR ROAD, SHAHDOL (M.P.)

SINGRAULI

331. CITY CARS (A UNIT OF AGARWAL WHEELS PVT LTD) (JJNA-JJ-01), KHASRA NO.- 3055, NAUGARD TEHSIL, SINGRAULI (MP)

UJJAIN

332. YUG CARS (A UNIT RUKMARANI MOTORS PVT LTD) (3WNA-3W-01), 59/1, DEWAS ROAD, ADARSH NAGAR, NAGZIRI, UJJAIN - 456664 PH :9755512100.

333. YUG CARS (A UNIT RUKMARANI MOTORS PVT LTD) (3WNA-3W-02), 1/2/3, UJJAIN DEWAS ROAD, UJJAIN, MADHYA PRADESH. - 456001

VIDISHA

334. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (AYNA-AY-01), PLOT NO.349-3 (RG.NO.239/1, 240,242), AHMADPUR CHAURAHA, WARD NO. 29, VIDISHA (MP)

## MAHARASHTRA

AHMEDNAGAR

335. KANKARIYA AUTOMOBILES PVT LTD (A5NA-A5-01), SH-60,NEWASA ROAD ,NAGARDEOLE,AHEMDANAGAR,MAHARASTRA - 414601 PH :9403961522.

AKOLA

336. ASPA BANDSONS AUTO PVT LTD (F1NA-F1-01), SHIVANI AIRPORT AREA, AKOLA - MAHARASHTRA (444001) - 444001

ALANDI

337. MY CAR (PUNE) PVT LTD (GJPN-GJP-01), SURVEY NO 214/1, PUNE ALANDI ROAD, KALE WASTI , VILLAGE CHARHOLI BURDUK , ALANDI - 412105

ALIBAG

338. SIMRAN MOTORS PVT LTD (3XNA-3X-01), 31/1/B MOUJE VESHWI , GRAM PANCHAYAT VESHWI, TALUKA ALIBAUG, DISTT RAIGAD

AMRAVATI

339. ASPA BANDSONS AUTO PVT LTD (F2NA-F2-01), F32/1 MIDC , AURANGABAD NAGPUR EXPRESS HIGHWAY, AMRAVATI, MAHARASHTRA - 444607
PH :9130041513.

AURANGABAD

340. AUTOMOTIVE MANUFACTURERS PVT LTD (21NB-21-01), PLOT NO :- L- 3 / 1 , BETWEEN GARWARE & WOCKHARDT LTD, JALGAON ROAD, MIDC CHIKALTHANA,AURANGABAD PIN : - 431006, MAHARASHTRA - 431006
PH :9970499273.

341. PAGARIYA AUTO PVT LTD (21NA-21-01), OPP AIRPORT, NEXT TO INDIAN OIL PETROL PUMP, JALNA ROAD, AURANGABAD, MAHARASHTRA - 431006
PH :8888859502.

BADLAPUR

342. AHER AUTOPRIME LLP (9ONA-9O-01), MUKTA AUTOMOBILES, BHARAT COLONY, NEAR SHANTI NAGAR, WATER TANK ROAD, BADLAPUR WEST 421503 - 421503

BARAMATI

343. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD (7RNA-7R-01), BHIGWAN ROAD, SHIV NAGAR, BARAMATI (MAHARASHTRA)
PH :9850994014.

CHANDRAPUR

344. BARBATE AUTOMOTIVE (INDIA) PVT LTD (H3NA-H3-01), PLOT NO 15-18, OUT OF SURVEY NO 14/4, 15/5, MAUZA BADOLI, NAGPUR CHANDRAPUR HIGHWAY, CHANDRAPUR, MAHARASHTRA - 440025
PH :8380887666.

345. BARBATE AUTOMOTIVE (INDIA) PVT LTD (H3NA-H3-S1) - 0

CHIKHLI

346. KATARIA AUTOMOBILES (BCBN-BCB-01), SURVEY NO. 678/5 AND 7, NEAR SHIV KRUPA HOTEL, NH 48 HIGHWAY, THALA, CHIKHLI, GUJARAT - 396521 - 396521

DHULE

347. SEVA AUTOMOTIVE PRIVATE LIMITED (P3NA-P3-01), PLOT NO. F-1, ADDITIONAL DHULE INDUSTRIAL AREA, DHULE, MAHARASHTRA - 424006

GONDIA

348. BARBATE AUTOMOTIVE (INDIA) PVT LTD (20NA-4C-03), HIMGIRI LAYOUT , KAWLEWADA ROAD , GONDIA - 795140

INDAPUR

349. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD (NQNA-NQ-01), GAT NO 212/1/B, PUNE SOLAPUR ROAD , INDAPUR, DISTRICT PUNE

JALGAON

350. MANRAJ AUTOMOBILES PVT LTD (C4NB-C4-01), P 93, MIDC, R L CHOWK, AJANTA ROAD, JALGAON, MAHARASHTRA – 425003 - 425003

JALNA

351. AUTOMOTIVE MANUFACTURERS (BCNA-BC-01)

KALYAN

352. AHER AUTOPRIME LLP (IXNA-IX-01), SHOP NO-2, ALLIANCE HERITAGE, NEXT TO RELIANCE PETROL PUMP, KON GAON, KALYAN-BHIWANDI ROAD, TAL - BHIWANDI 421311 - 421311

KHARGHAR

353. SIMRAN MOTORS PVT LTD (AACN-AAC-01), 60/72, JAWAHAR COOPERATIVE INDUSTRIAL ESTATE, KALAMBOLI, KHARGHAR, MUMBAI, MAHARASHTRA. - 410209

KOLHAPUR

354. SAI SERVICE PVT LTD (38NA-38-01), 1243/66, E WARD, SHIVAJI UDHYAMNAGAR, KOLHAPUR - 416001
PH :9923208401.

355. SAI SERVICE PVT LTD (38NA-38-02), PLOT NO. C-6, SHIROLI MIDC, KOLHAPUR, MAHARASHTRA.

LATUR

356. AUTOMOTIVE MANUFACTURERS PVT LTD (V8NA-V8-01), C-4/1319/1, SURVEY NO. 89/C, RING ROAD BETWEEN BABHALGAON CHOWK AND GARUD CHOWK, PO & DIST LATUR, MAHARASHTRA - 413512 - 413512

LONAVALA

357. SEHGAL AUTORIDERS PVT LTD (CGAN-CG-01), GALI NO. 735/1, WAKSAI,LONAVALA, TALUKA MAVAL, DISTRICT PUNE , MAHARASHTRA-410405 - 410405

MANGAON

358. MY CAR (PUNE) PVT LTD (BAMN-BA-01), SHOP NO 17,18,19,20, SURVEY NO 55/1 , 55/2 MUMBAI GAO HIGHWAY,
TAHSIL MANGAON, DISTRICT RAIGAID

MUMBAI

359. FORTPOINT AUTOMOTIVE (CARS) PVT LTD (05NJ-05-S1) - 0

360. KTS AUTOMOTORS PVT LTD (05NH-05-01), UNIT NO A1, PANNALAL COMPOUND, LBS KANTILAL MAGANLAL ESTATE, L.B.S MARG, BHANDUP (W), MUMBAI - 400078

361. MY CAR (PUNE) PVT LTD (05NK-05-01), PLOT NO- GEN-25 & GEN-25 B/1, TTC INDUSTRIAL AREA, PAWANE, NAVI MUMBAI, MAHARASHTRA (400709) - 0

362. MY CAR (PUNE) PVT LTD (05NK-05-S1) - 0

363. MY CAR (PUNE) PVT LTD (05NL-05-01), PLOT NO. B-21 & B-24/1, THANE INDUSTRIAL AREA, THANE, MAHARASHTRA - 400604

364. SAI SERVICE PVT LTD (05NB-`05-01), JOSEPH CARDIJN TECHNICAL SCHOOL , KHASHABA JADHAV MARG , OFF DR. AMBEDKAR ROAD , DADAR (EAST) MUMBAI, MAHARASHTRA. - 400014

365. SHIVAM AUTOZONE INDIA PVT LTD (05ND-05-S1) - 0

366. SHIVAM AUTOZONE INDIA PVT LTD (05NE-05-01), PLOT NO. 1 & 2, RAMCHANDRA LANE EXTN., KANCHPADA, OFF LINK ROAD, MALAD-WEST. - 400064
PH :9870938888.

367. SHIVAM AUTOZONE INDIA PVT LTD (05ND-`05-01), PLOT NO SILVER HOUSE, 110 MIDC, ROAD NO 13, MAROL, ANDHERI (EAST), MUMBAI, MAHARASHTRA. - 400069

NAGPUR

368. BARBATE AUTOMOTIVE (INDIA) PVT LTD (20NA-20-01), 37/2, MANISH NAGAR, BESA T POINT, BESA ROAD NAGPUR 440025 - 440025

369. BARBATE AUTOMOTIVE (INDIA) PVT LTD (20NA-20-02), C-48/1, MIDC HINGNA MAIN ROAD, WADI, NAGPUR, PIN-440028, MAHARASHTRA. - 440028

370. ARUN MOTORS PRIVATE LIMITED (20ND-20-01), PATNI ARCADE , C-48/1, MIDC HINGNA MAIN ROAD , NAGPUR - 440028

NANDED

371. SEVA AUTOMOTIVE PRIVATE LIMITED (68NA-68-01), AIRPORT ROAD,SANGVI - 431605
PH :7065026520.

NARAYANGAON

372. KOTHARI AUTO WHEELS PRIVATE LIMITED (FVNA-FY-01), WARULWADI, NH-50, NARAYANGAON - 410504

NASHIK

373. SEVA AUTOMOTIVE PRIVATE LIMITED (37NA-37-01), PLOT B-17, MIDC, AMBAD, NASIK, MAHARASHTRA - 422010
PH :8975762303.

374. SHAAN CARS PVT LTD (37NB-37-01), PLOT E-2, MIDC SATPUR, NASHIK, MAHARASHTRA - 422010

375. AUTOMOTIVE MANUFACTURERS LIMITED (37NC-37-01), PLOT NO P/1/2 , MIDC , AMBAD ,NASHIK - 422010

PALGHAR

376. SAI SERVICE PVT LTD (TENA-TE-01), MAHAVIR NIRMAN, RAILWAY STATION ROAD, PALGHAR.

PANDARPUR

377. CHAVAN MOTORS DIVISION INDIA PVT LTD (0HNA-0H-01), GAT NO. 94/1/42 & 94/1/43, ISBAVI, WAKHARI ROAD, PANDHARPUR, DISTRICT SOLAPUR, MAHARASHTRA - 413304 - 413304

PARBHANI

378. PAGARIYA AUTO PVT LTD (LNNA-LN-01), PLOT NO. 857, OPPOSITE IOC PUMP, BASMAT ROAD, PARBHANI

PHALTAN

379. CHOWGULE INDUSTRIES PVT LTD (KHNA-KH-01), SR NO 83/2A/A2 , PUNE PANDHARPUR ROAD , PHALTAN, DIT SATARA

PUNE

380. EXCELL AUTOVISTA PVT LTD (19NG-19-01), SURVEY NO 98/2A/P, NEW PUNE - MUMBAI HIGHWAY, NEAR BALEWADI STADIUM, BANER TALUKA, PUNE - 411045

381. KOTHARI AUTO WHEELS PRIVATE LIMITED (19NJ-19-01), GATE NO 1605, OLD 1099, KESNAND ROAD, WAGHOLI, TAL-HAVELI, DISTRICT - PUNE, MAHARASHTRA - 412207

382. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD (19NI-19-01), NEAR SADGURU PETROL PUMP, PUNE NASHIK HIGHWAY, AT KURALI, KHED TALUKA, CHAKAN, PUNE - 410501
PH :9923589214.

383. MY CAR (PUNE) PVT LTD (19NA-19-S1) - 0

384. SAI SERVICE PVT LTD (19NC-19-01), SINHAGAD ROAD, NEAR NANDED CITY, VADGAON KHURD, PUNE.(MAHARASHTRA)
PH :9923308333.

385. SEHGAL AUTORIDERS PVT LTD (19NE-19-01), SURVEY NO 63/2, SHEWALEWADI, MANJARI BUDRUK, PUNE SOLAPUR HIGHWAY, PUNE, MAHARASHTRA - 412307
PH :9158000049.

386. WONDER CARS PVT LTD (19ND-19-S1) - 0

387. WONDER CARS PVT LTD (19ND-19-01), PLOT NO 52/1 BLOCK F2, MIDC PIMPRI, PUNE - 411019
PH :9850094151.

388. CHOWGULE INDUSTRIES PVT LTD (19NH-19-01), 43/1, OFF KARVE ROAD, KOTHRUD, OPPOSITE LILAVATI APARTMENT, PUNE - 111045

PUNE (AMBEGAON)

389. MY CAR (PUNE) PVT LTD (19NM-19-01)

RATNAGIRI

390. JAGRUT MOTORS PVT LTD (G3NA-G3-01), 410/6/1B, SALVI STOP, SHIVAJI NAGAR MAIN ROAD RATNAGIRI, MAHARASHTRA - 415612
PH :9820039626.

SANGAMNER

391. MAHALAXMI AUTOMOTIVES VEHICLES PVT LTD (HENA-HE-01), AHMADNAGAR

SANGLI

392. CHOWGULE INDUSTRIES PVT LTD (J1NA-J1-01), 118/2/1 KUBERA CHAMBERS, MAHAVIRNAGAR, SANGLI (MAHARASHTRA) - 416416
393. CHOWGULE INDUSTRIES PVT LTD (J1NA-J1-S1) - 0

SASWAD

394. CHOWGULE INDUSTRIES PVT LTD (PHNA-PH-01), SURVEY NO. 611/1, NEAR INDIAN OIL PETROL PUMP, VILLAGE SASWAD, PUNE, MAHARASHTRA - 412301

SATARA

395. CHOWGULE INDUSTRIES PVT LTD (F3NA-F3-01), GATE NO 158/1/5/B, PROPERTY NO.823, NEAR VIGHANHARTA SOCIETY COLONY B, MEDHA ROAD, AT/POST-KONDAVE, TALUKA-SATARA

SHIKRAPUR

396. KOTHARI AUTO WHEELS PRIVATE LIMITED (GKJN-GKJ-01), GAT NO. 1491/1B, PUNE NAGAR ROAD, SHIKRAPUR, TALUKA SHIRUR, PUNE - 412208 - 412208

SHILPHATA

397. VELOX MOTORS PRIVATE LIMITED (SGJN-SGJ-01), PLOT NO. 99, KALYAN SHIL ROAD, SHILPHATA. - 410203

SINNAR

398. SHAAN CARS PVT LTD (FUNA-FU-01), SURVEY NO 932/2, NEAR UDYOG BHAVAN, SINNAR, MAHARASHTRA - 422103 - 422103

SOLAPUR

399. CHAVAN MOTORS DIVISION INDIA PVT LTD (B1NA-B1-01), SURVEY NO. 534/4, BALE PUNE ROAD, SOLAPUR, MAHARASHTRA - 413224 - 413224
PH :8888881314.

TALEGAON DABHADE

400. MY CAR (PUNE) PVT LTD (4KNA-4K-01), SR. NO. 408/8, OLD MUMBAI FUNE HIGHWAY, LIMB PHATA, TALEGAON DABHADE, TAL - MAVAL, DIST. - PUNE

THANE

401. AUTOMOTIVE MANUFACTURERS PVT LTD (39NB-39-01), NERUL, MUMBAI PUNE HIGHWAY, NAVI MUMBAI - 400706
PH :9769206120.
402. AUTOMOTIVE MANUFACTURERS PVT LTD (39NB-39-S1) - 400706
403. EXCELL AUTOVISTA PVT LTD (39NA-39-01), MOHAN MILL COMPOUND, GHODBUNDER ROAD , THANE , MAHARASTHRA - 400607
PH :9967331726.
404. EXCELL AUTOVISTA PVT LTD (39NA-39-02), NEAR ARIHANT COMPOUND, KALHER, BHIWANDI, THANE - 400607
PH :9967331726.
405. KIRAN MOTORS MAHARASHTRA (A DIVISION OF KIRAN MOTOS LIMITED) (39ND-39-01), BHOIR COMPOUND, FOUNTAIN JUNCTION, OFF NATIONAL HIGHWAY 8, VILLAGE - VARSOVA, GHODBUNDER, DISTRICT - THANE (MAHARASHTRA) 401104 - 401104
406. SUPREME AUTOMOBILES (A UNIT OF RELIABLE AUTOMOTIVE PVT LTD) (39NE-39-01)

WADA

407. SHIVAM AUTOZONE INDIA PVT LTD (BXDN-BXD-01), NO. 417/15, NEAR SNEH GARDEN, VILLAGE GANDHARE, WADA KUDUS BHIWANDI ROAD, WADA, DISTRICT PALGHAR, MAHARASHTRA - 421303

YAVATMAL

408. HIMALAYA CARS (4MNA-4M-01), PLOT NO. 14, MIDC, YAVATMAL INDUSTRIAL AREA, YAVATMAL

## MANIPUR

IMPHAL

409. EASTERN MOTORS (74NA-74-01), NEW PATTA NO.30, DAG NO. 99, ASIAN HIGHWAY 1(NH 102) , IMPHAL. - 795140

## NAGALAND

DIMAPUR

410. PROGRESSIVE MOTORS (32NA-32-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, - 797115
PH :7669223736.

KOHIMA

411. SEYIE AUTO (4NNB-4N-01), NEAR IG STADIUM, MARIEMA, KOHIMA, NAGALAND - 797001

## ODISHA

BALASORE

412. JYOTE MOTORS (BALASORE) PVT LTD (L5NA-L5-01), PLOT NO: 385, GANESWARPUR, REMUNA, JANUGANJ,BALASORE, ODISHA 756019 - 756019

BARIPADA

413. JYOTE MOTORS PRIVATE LIMITED (RQNA-RQ-01), KARTABASHA , WARD NO 32 BALASORE JHARPOKRIA ROAD , BAGDIHA , BARIPADA - 757001

BERHAMPUR

414. SKY AUTOMOBILES (E2NA-E2-01), PLOT NO 373/2229 & 373/1204, AMABAPUA MOUZA, BRAHMAPUR (ODISHA) - 760007

BHUBANESHWAR

415. JYOTE MOTORS PVT LTD (04NA-04-S1) - 0
416. NARAYANI MOTORS PVT LTD (04NC-04-01), PLOT NO 140/2004, KHATA NO -1152/364, UNIT-20, JAGAMARA, KHANDGIRI, CHAWAK, BHUBANESHWAR - 0
417. NARAYANI MOTORS PVT LTD (04NC-04-S1) - 0
418. SKY AUTOMOBILES (04NB-04-01), BAPUJI NAGAR, SHREE VIHAR CHANDRASEKHARPUR ROAD, BHUBANESWAR - 751017 - 751017

BHUBANESWAR

419. TUSHI MOTORS PRIVATE LIMITED (04ND-04-01), IDCO SHED NO.: B/18, UNIT NO.: 12, BOMIKHAL, PS.: RASULGARGH - 751010

JEYPORE

420. LEGEND CARS PRIVATE LIMITED (SWNA-SW-01), NH26, OPPOSITE HOTEL HELLO, INDUSTRIAL ESTATE, JEYPORE, ODISHA

JHARSUGUDA

421. ODYSSEY MOTORS PVT LTD (D4NA-BJU-02), POWER HOUSE ROAD, SARBAHAL,JHARSGUDA-768201 (ODISHA) - 768201

PARADEEP

422. NARAYANI MOTORS PVT LTD (OENA-OE-01), DO-CHHAKI, PARADEEP - CHANDIKHOL RD, PARADEEP, ODISHA 754141

ROURKELA

423. ORBIT MOTORS PVT LTD (87NA-87-01), PLOT NO 5G/3, VED VYAS, SUNDARGARH, ROURKELA - 769041
PH :9165071234.

SAMBHALPUR

424. ODYSSEY MOTORS PVT LTD (D4NA-D4-01), SAMBALPUR, CHOWK, REMED, ODISHA 768006 - 768006

## ORISSA

JAJPUR

425. SKY AUTOMOBILES (RZNA-RZ-01), PANIKOILI JAJPUR ROAD,JAJPUR

## PUDUCHERRY

KARAIKAL

426. SHENBAKA CARS (CCFN-CC-01), RESY. NO. 38/16-A, POOVAM VILLAGE, KARAIKAL, PUDUCHERRY. - 609609

## PUNJAB

AMRITSAR

427. JAYCEE MOTORS PRIVATE LIMITED (17NC-17-01), JAYCEE MOTORS, VERKA BYE PASS, OUTSIDE ASHBERRY HOMES, VILLAGE VALLAH, AMRITSAR, PUNJAB - 143501

BATALA

428. PATHANKOT VEHICLEADES PVT LTD (V5NA-V5-01), HARDO JANDE , GT ROAD, BATALA

BHATHINDA

429. TARA AUTOMOBILES (70NA-70-01), KHASRA NO. 3534, NEAR ITI CHOWK, MANSA ROAD, BHATHINDA, PUNJAB - 151001
PH :8437019666.

GURDASPUR

430. PATHANKOT VEHICLEADES (4XNA-4X-01), KHASRA NO. 24/1, 24/2, 25/1, KHEWAT NO. 54/55, SITUATED AT BABRI NATIONAL HIGHWAY, GURDASPUR, PUNJAB.

HOSHIARPUR

431. HOSHIARPUR AUTOMOBILES (H4NA-H4-S1) - 0
432. HOSHIARPUR AUTOMOBILES (H4NA-H4-01), SHED NO 11 A & 12 A, INDUSTRIAL ESTATE JALANDHAR ROAD HOSHIARPUR, 14602 - 14602

JALANDHAR

433. LOVELY AUTOS (35NA-35-01), NH 1 GT ROAD, PRAGPUR, JALANDHAR PUNJAB
434. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT LTD) (35NC-35-01), KHASRA NO - 16450, SITUATED AT RAJA GARDEN, KAPURTHALA ROAD, JALANDHAR CITY. - 144003
PH :9915944600.

KAPURTHALA

435. LOVELY AUTOS (4ZNA-4Z-01), KEVAT KHATA NO. 1140/1400, KHASRA NO. 2362/2/73-19, OPPOSITE NEW SABJI MANDI, SULTANPUR ROAD, KAPURTHALA CITY, PUNJAB

KHANNA

436. HOSHIARPUR AUTOMOBILES (N3NA-N3-01), H B NO. 221, KHAWAT NO. 231, ALOUR, KHANNA

LUDHIANA

437. GULZAR MOTORS PVT LTD (62NE-62-01), PLOT NO 2662 NEAR SILVER ARC MALL, AARTI CHOWK, LUDHIANA, PUNJAB - 141003
PH :9814839777.
438. HOSHIARPUR AUTOMOBILES (62NG-62-01), S-46/1616/1, G.T. ROAD, DHOLEWAL CHOWK, LUDHIANA, PUNJAB - 141003
PH :8872501234.
439. LOVELY AUTOS (62NF-62-01), 287/1, MOTI NAGAR, SHERPUR BYPASS, GT ROAD, LUDHIANA - 141010
PH :9875999161.

440. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT LTD) (62NH-62-01), OPP. MEDIWAYS HOSPITAL, FEROZPUR ROAD, LUDHIANA - 141015
PH :8872000357.

MANSA

441. TARA AUTOMOBILES (TLNA-TL-01), NEAR TEENKONI ,SIRSA MANSA FLY OVER , MANSA, PUNJAB.

MOGA

442. REMIRA MOTORS PVT LTD (H6NA-H6-S1) - 0

MOHALI

443. CM AUTOSALES PRIVATE LIMITED (L1NA-L1-01), C-155, INDUSTRIAL AREA, PHASE-7, MOHALI

NABHA

444. DIVINE AUTOWORLD LLP (UFNA-UF-01), RADHA SWAMI BYPASS ROAD, ADJOINING PUNJAB FURNITURE PALACE, NABHA, DIST. PATIALA, PUNJAB - 147201

NAKODAR

445. LOVELY AUTOS (35NA-5B-02), KHASRA NO. 46/26 SHOWROOM NO. 1, NEAR ST. JUDE'S CONVENT SCHOOL, OPP. THE PALM, NAKODAR, JALANDHAR - 144040

NAWANSHAHR

446. LOVELY AUTOS (J7NA-J7-01), VILL. LANGROYA, CHANDIGARH-NAWANSHAHR ROAD, DIST. NAWANSHAHR (S.B.S. NAGAR) - 144516
PH :9915028682.

PATHANKOT

447. PATHANKOT VEHICLEADES PVT LTD (A7NA-A7-01), PLOT NO.-C-30, INDUSTIAL GROWTH CENTRE, VILL. CHACELI, PATHANKOT - 145023
PH :7527006800.

RAJPURA

448. DIVINE AUTOWORLD LLP (HKNA-HK-01), VILLAGE BHADAK, RAJPURA -PATIALA HIGHWAY, RAJPURA, PATIALA

SANGRUR

449. MAX AUTOMOBILES (G4NB-G4-01), VILL. BHINDRAN, PATIALA ROAD, SANGRUR PIN - 148001 - 148002

TARN TARAN

450. JAYCEE MOTORS PRIVATE LIMITED (BLPN-BL-01), KHASRA NO 22/2/2(1-6), 22//9(3-4) 22//15/1/1(1-8) 22//12(0-8) 22//15/1/2(3-0) 2//17(0-16) SARHALI- AMRITSAR ROAD, NEAR MAJHA PUBLIC SCHOOL, TARN TARAN, PUNJAB

## RAJASTHAN

AJMER

451. NAVNEET MOTORS (B2NA-B2-01), PLOT NO7 -8,RIICO INDUTRAIL ESTATE MAKHAPURA NASIRBAD ROAD,AJMER(RAJASTHAN)-PIN CODE-305002 - 305002
PH :9414149149.

ALWAR

452. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (F9NA-F9-01), 6TH MILESTONE VILLAGE JATIYANA,OPP. PETROL BEHROR ROAD ALWAR - 301001
PH :9982341741.

ANGUL

453. ODYSSEY MOTORS PVT LTD (W1NA-W1-01), NH 55, KANDASAR, NALCO NAGAR, ANGUL, ODISHA, 759145

BAGRU

454. PREM MOTORS PVT LTD (USNA-US-01), KHASRA NO. 64/1104, NH-8, AJMER ROAD, NEAR SANSKAR COLLAGE, BAGRU (RAJASTHAN)

BARAN

455. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (PMNA-CTG-01), ATRU ROAD, BARAN, RAJASTHAN. - 325205

BARMER

456. LMJ SERVICES LTD (SHNA-SH-01), KHASRA NO. -1665/4/2, NH-68, OPP. CHOWDHARY PETROL PUMP, BARMER, RAJASTHAN.

BHARATPUR

457. TM MOTORS PVT LTD (5JNA-5J-S1) - 0

BHILWARA

458. CHAMPION CARS (A UNIT OF PREM CARS PVT LTD) (E3NA-E3-01), NEXA SUKHADIA CIRCLE, CHAMPION CARS, AJMER ROAD, BHILWARA - 311001
PH :9001027933.

BHIWADI

459. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9HNA-9H-01), KHASRA NO 990/1329 VILLAGE KHIJURIWAS, OPP MATILA POLICE CHOWKI, BHIWADI (RJ) - 301019

BIKANER

460. AURIC MOTORS PRIVATE LIMITED (71NA-71-01), PLOT NO. F-189, SRI GANAGANAGAR ROAD, OPPOSITE RAC-3RD , BICHHWAL INDUSTRIAL AREA , BIKANER 334001 - 334001
PH :9887222786.

461. VIPUL MOTORS (71NB-71-01), E-62, PHASE -1, BICHHWAL INDUSTRIAL AREA, BIKANER (RJ) - 334001

CHAKSU

462. KTL AUTOMOBILE (JMNA-JM-01), KHASRA NO. 2937, TONK ROAD CHAKSU, JAIPUR - 303901

CHIRAWA

463. AURIC MOTORS PRIVATE LIMITED (SYNA-SY-01), WARD NO.-15, NEAR DOBI, CHIRAWA (RAJASTHAN)

CHITTORGARH

464. TECHNOY MOTORS INDIA PVT LTD (K9NA-K9-01), PLOT NO-28, OLD RIICO INDUSTRIAL AREA, CHITTORGARH, RAJASTHAN - 312001

465. TECHNOY MOTORS INDIA PVT LTD (K9NA-`03-S1) - 0

DAUSA

466. VIPUL MOTORS PVT LTD (FMNA-FM-01), 1365, RAJPOOT COLONY, JAIPUR ROAD, DAUSA

HINDAUN

467. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (S0NA-S0-01), (KHASRNA NO 771,772, SH 1 , ROAD WAYS BUS STAND , PHULWARA , HNDDAUN CITY , KARAULI

JAIPUR

468. KP AUTOMOTIVES PVT LTD (11NB-11-01), PLOT NO.3-4,MANGLAM RIICO INDUSTRIAL AREA,NEAR KANAKPURA RAILWAY STATION,SIRSI ROAD - 302034
PH :7412059823.

469. PREM MOTORS PVT LTD (11NC-11-01), PLOT NO- 12,13,14, SUDARSHANPURA INDUSTRIAL AREA, NEAR 22 GODAM, JAIPUR

470. PREM MOTORS PVT LTD (11NC-11-S1) - 0

471. SATNAM MOTOCORP PVT LTD (11ND-11-S1) - 0

472. SATNAM MOTOCORP PVT LTD (11ND-11-01), D-27, K/L/M, ROAD NO-3,SIKAR ROAD, VISHWAKARMA INDUSTRIAL AREA ,JAIPUR, RAJASTHAN-302023. - 302023
PH :9649373311.

473. VIPUL MOTORS PVT LTD (11NA-11-S1) - 0

474. KTL AUTOMOBILE PVT LTD (11NF-11-01), PLOT NO.- F-131, RIICO, MALVIYA NAGAR, JAIPUR (RAJ) - 302034

475. SATNAM MOTOCORP PVT LTD (11ND-11-02), E-50, ROAD NO.3, SIKAR ROAD, VKIA, JAIPUR, PIN-302013

JHALAWAR

476. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (RVNA-RV-01), NEAR RAILWAY BRIDGE , GINDORE, TALUKA JHALARAPATAN, JHALAWAR, RAJASTHAN

JHUNJHUNU

477. AURIC MOTORS PRIVATE LIMITED (FNNA-FN-01), NEAR TVS TWO WHEERLER SHOWROOM ROAD NO 3 GUDHA MOD, RAJASTHAN 333001 - 333001
PH :7970006402.

JODHPUR

478. AURIC MOTORS PRIVATE LIMITED (65NA-65-01), 14 A, HEAVY INDUSTRIAL AREA, ITI CIRCLE, SARASH DAIRY ROAD, JODHPUR - 334001
PH :7300077394.

479. LMJ SERVICES LTD (65NB-65-01), B-8, C-9,10, MIA, BASNI, PHASE-1 JODHPUR - 342009
PH :7412087320.

480. LMJ SERVICES LTD (65NB-65-02), PLOT NO.-61, GERU MARKET, BHADWASIYA FRUIT MANDI, JODHPUR, RAJASTHAN - 342001
PH :8094011126.

KOTA

481. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT LTD) (61NA-61-01), G-11A, AUTOMOBILE ZONE, IPIA, NEAR DAKANIYA RAILWAY STATION, KOTA - 324005
PH :8094011126.

NAGAUR

482. SHRI MANGALAM AUTO PVT LTD (HLNA-HL-S1) - 0

PALI

483. LMJ SERVICES LTD (J9NA-J9-01), PLOT NO. 21, SUMERPUR ROAD, PALI, RAJASTHAN. - 306401

RAJSAMAND

484. TECHNOY MOTORS INDIA PVT LTD (X2NA-X2-01), P.NO. F-28,29,30, RICCO INDUSTRIAL AREA, DHOINDA, RAJSAMAND (RAJ)

SAWAI MADHOPUR

485. PREM MOTORS PVT LTD (FYNA-FY-01), PLOT NO 9 & 10 , RAMNAGAR VANJYAK YOJNA , OPPOSITE INDIAN PETROL PUMP , KHERDA , JEENAPUR,SAWAI MADHOPUR

SHAHPURA

486. K.P. AUTOMOTIVES PVT LTD (NHNA-NH-01), 1876/715, DHANI HANUMAN SAGAR, WARD NO. -23, NH-48, SHAHPURA (RAJASTHAN).

SIKAR

487. JAMU AUTOMOBILES PVT LTD (K7NA-K7-01), THAR PETROL PUMP,JAIPUR ROAD,SIKAR - 332001
PH :9414037515.

SUJANGARH

488. AURIC MOTORS PRIVATE LIMITED (BRBN-BRB-01), NEAR AABKAAN THANA, CHAPPAR ROAD, SUJANGARH

SURATGARH

489. AURIC MOTORS PVT LTD (LGNA-LG-01), PLOT NO. S-6, VRINDAVAN VIHAR, IN FRONT SURATGARH PG COLLEGE, OPP. GSS, MAIN GANGA NAGAR ROAD, SURATGARH, RAJASTHAN

TONK

490. KP AUTOMOTIVES PVT LTD (GMNA-GM-01), PLOT NO - 36~39 , NEAR KAMDHENU CIRCLE , JAIPUR ROAD , TONK

UDAIPUR

491. TECHNOY MOTORS INDIA PVT LTD (49NB-49-01), OPP. NAND BHAWAN, GOVERDHAN VILLAS , UDAIPUR
492. NAVNEET MOTORS (49NA-49-01), NEAR MEGNUS HOSPITAL, BHUVANA, UDAIPUR (RAJASTHAN)- 31

## TAMIL NADU

ATTUR

493. SM CAR PVT LTD (QTNA-QT-01), APPAMASAMUDRAM, ATTUR MAIN ROAD, TAMIL NADU. - 636010

CHENGALPET

494. AIE CARS PRIVATE LIMIED (BBSX-BBS-01), NO. 1/7-A, GST ROAD, CHENGALPET – 603001 - 603001

CHENNAI

495. ABT LIMITED (14NJ-14-01), NO123, KANNIGAPURAM, VELACHERY MAIN ROAD, BEHIND RACE COURSE, GUINDY, CHENNAI, TAMIL NADU - 600032
PH :9994444303.
496. KHIVRAJ MOTORS PVT LTD (14NA-14-01), PLOT NO.21, AMBIT IT PARK ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI-600058. - 600058
PH :9626099999.
497. KHIVRAJ MOTORS PVT LTD (14NA-14-02), OLD S.NO. 11/1 & 2, NEW S.NO.11/2 - B, NO.100, NERKUNDRAM VILLAGE, SAIDAPET TALUK, CHENNAI - 600107
498. PILLAI & SONS MOTOR COMPANY (14NC-14-01), DOOR NO.46, MEDAVAKKAM MAIN ROAD, KEELAKATTALAI, CHENNAI, TAMILNADU - 600117
PH :9994950505.
499. POPULAR VEHICLES & SERVICES LTD (14NB-14-01), 69/A & 69/B, SAMAYAPURAM MAIN ROAD, PORUR, CHENNAI,TAMILNADU- 600116. - 600116
PH :9842389111.
500. VISHNU CARS PVT LTD (14NG-14-01), SURVEY NO 219, ADJOINING HP PETROL PUMP, POONAMALLE HIGH ROAD, KATTUPAKKAM, CHENNAI, TAMIL NDU - 600056
PH :7339359111.
501. VISHNU CARS PVT LTD (14NG-14-02), POONAMALLE HIGH ROAD, ARUMBAKKAM, KOYAMBEDU, CHENNAI, TAMIL NADU. - 600056
PH :7550333622.
502. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD). (14NK-14-01), SY NO. 56/2, PERIYAR E.V.R SALAI (POONAMALLEE HIGH ROAD), PERIYAMET, CHENNAI -600003.
503. KALYANI MOTORS PVT LTD (14NM-14-S1)

CHIDAMBARAM

504. VISHNU CARS PVT LTD (CPKN-CPK-01), TS NO: 1375/5A & 5B, RAJALAKSHMI NAGAR, CHIDAMBARAM BY-PASS LINK ROAD, CHIDAMBARAM -608001.

COIMBATORE

505. AADHI CARS PRIVATE LIMITED (41NB-41-01), PLOT NO.50-55, ASHOK NAGAR, C-COLONY,TAKKAL PURAM, TRIVANDRUM ROAD,KOKKARAKULAM VILLAGE, PALAYAMKOTTAI, TIRUNELVELI,TAMILNADU - 627007
PH :9003977577.
506. ABT LIMITED (41NC-41-S1) - 0
507. ABT LIMITED (41NC-41-01), 56, BHARATHI NAGAR, SATHY MAIN ROAD, GANAPATHY, COIMBATORE - 641006
508. JAIKRISHNAA AUTOSALES PVT LTD (41ND-41-01), NO. 656, TRICHY ROAD, NEAR ORTHO ONE HOSPITAL, COIMBATORE, TAMIL NADU- 641012 - 641012
509. SREE SARADHAMBAL AUTOMOBILES PVT LTD (41NA-41-01), 18/1472, S.N.R COLLEGE ROAD, NAVA INDIA, COIMBATORE, AND TAMILNADU-641004. - 641004
PH :9790004271.

CUDDALORE

510. VISHNU CARS PVT LTD (5QNA-5Q-01), SY NO. 1898 &1909/4, WARD NO.5, BLOCK NO. 50, RAMAKRISHNA AVENUE, CUDDALORE - 607002

DHARMAPURI

511. SRI AMMAN CARS INDIA PVT LTD (5RNA-5R-01), SY NO. 5/1 & 11/2, KRISHNAGIRI MAIN ROAD, DHARMAPURI, TAMILNADU.

DINDIGUL

512. PL.A MOTORS FIRM (S4NA-S4-01), SEELAPADI, TRICHY HIGHWAY, DINDIGUL, TAMIL NADU - 624001

ERODE

513. SREE SARADHAMBAL AUTOMOBILES ERODE PVT LTD (H7NA-H7-01), NO.75, NEAR SURABI NURSERY, PERUNDURAI ROAD, ERODE, TAMILNADU-638011. - 638011
PH :9786022272.

GUDUVANCHERRY

514. VISHNU CARS PVT LTD (BADN-BAD-01), SY NO. 5/2B & 6/3, GST ROAD, POTHERI, GUDUVANCHERY, CHENGALPATTU DISTRICT, TAMIL NADU

HOSUR

515. SRI AMMAN CARS INDIA PVT LTD (7QNA-7Q-01), NEAR CATER PILLAR WARE HOUSE, SEETHA RAMNAGAR,NH-44,OPP TO ANAND ELECTRONICS, HOSUR, KRISHNAGIRI DISTRICT, TAMILNADU - 635109
PH :9841033464.

KARAIKUDI

516. MEENAKSHI AUTO ZONE PRIVATE LIMITED (HXNA-HX-01), T S NO 624/1, DOOR NO. 5, 1ST STREET, SUBRAMANIAPURAM, KARAIKUDI, TAMIL NADU - 630001
PH :9940094881.

KARUR

517. AADHI CARS PRIVATE LIMITED (K4NA-K4-01), SF NO. 364 ,SALEM BYPASS, KARUR, TAMIL NADU - 639006

KATPADI

518. GANESH CARS PVT LTD (C6NA-C6-3), SYNO 613/SA3, CHENNAI ROAD, KATPADI, VELLORE

KRISHNAGIRI

519. AMMAN CARS (QLNA-QL-01), SY NO.410/5, 410/3B1, CHENNAI BYEPASS ROAD, BOGANAPALLI, KRISHNAGIRI. - 635001

KUMBAKUNAM

520. PILLAI & SONS MOTOR COMPANY (N4NA-N4-01), 3133/A, CRESANT NAGAR, CHENNAI BYPASS ROAD, KORANATTU KARUPPUR, KUMBAKONAM – 612501. - 612501

MADURAI

521. ASIR AUTOMOBILES PVT LTD (42NA-42-01), 176, MAIN ROAD, KAMARAJAR ROAD, MADURAI, TAMIL NADU – 625001 - 625001
522. SIVA AUTOMOTIVE TRADING PVT LTD (42NB-42-01), 4-113/H,RING ROAD, UTHANGUDI, MADURAI, TAMILNADU

MAYILADUTHURAI

523. PILLAI & SONS (AGNA-AG-01), NO.46, VALLALAGARAM, SS NALLUR POST, SIRKALI MAIN ROAD, MAYILADUTHURAI. - 609118

NAGERCOIL

524. ATHEN CARS (S5NA-S5-01), NO. G. 3/9, NO. 1197, NELSON COMPOUND, KP ROAD, PARVATHIPURAM, NAGERCOIL, TAMILNADU - 629003
PH :9751196436.

NAMAKKAL

525. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (X4NA-X4-01), SURVEY NO. A, 96/5, SALEM - NAMAKKAL ROAD, NAMAKKAL, TAMIL NADU 637001 - 637001

OOTY

526. SREE SARADHAMBAL AUTOMOBILES PVT LTD (41NA-Y1-02), DOOR NO 155/A IN ASSESSMENT NO 60466,UDHAGAMDALAM(OOTY),TAMIL NADU

PONDICHERRY

527. SHENBAKA CARS PVT LTD (96NA-96-01), RS NO 50/5A, PONDICHERRY CUDDLORE MAIN ROAD ,KIRUMAMBAKKAM, BAHOOR COMMUNE,PONDICHERY - 607402
PH :7338322220.

RAJAPALAYAM

528. ABT (5VNA-5V-01), NO.490/3, OPPOSITE TO N.A MANJAMMAL POLYTECHNIC COLLEGE, IDYANKULAM PANCHAYAT, RAJAPALAYAM MAIN ROAD, MAMSAPURAM, RAJAPALAYAM – 626110. - 626110

SALEM

529. SM CAR PVT LTD (A2NB-A2-01), S NO 131/1A,BYPASS ROAD, NEAR INDIAN OIL ASSOCIATION, PETROL BUNK, KONDALAMPATTY, SALEM - 636010
PH :7094440010.
530. THRIVENI CAR COMPANY PVT LTD (A2NA-A2-01), 2/6, KANDHAMPATTY,BYE PASS ROAD, SALEM, TAMILNADU - 636005
PH :9786022272.

SRIPERUMBADUR

531. VISHNU CARS PVT LTD (7BNA-7B-01), SURVEY NO 147/2A, NEW SR. NO : 147/10, CHENNAI -BANGALORE HIGHWAY, SRIPERUMBUDUR, TAMIL NADU 602105. - 602105

SULUR

532. AADHI CARS PRIVATE LIMITED (TKNA-TK-01), 3/147-4C, ASHWINI MAHAL COMPLEX, TRICHY MAIN ROAD, SULUR, 641401

TENKASI

533. AADHI CARS PRIVATE LIMITED (BXRN-BXR-01), D.NO. 166/4 & 166/5, KUTHUKKALVALASAI, TENKASI

THANJAVUR

534. PILLAI & SONS MOTOR COMPANY (E7NA-E7-01), SURVEY NO 237/1, NEELAGIRI THAKUR THOTTAM, VALLAM ROAD, THANJAVUR, TAMIL NADU - 613403
PH :9443264165.

THENI

535. MEENAKSHI AUTO ZONE PRIVATE LIMITED (9UNA-9U-01), SURVEY NO. 120, EAST RATHINAM NAGAR, PERIYAKULAM MAIN ROAD, THENI-625531

TIRUNELVELI

536. AADHI CARS PRIVATE LIMITED (A3NA-A3-01), PLOT NO.50-55, ASHOK NAGAR, C-COLONY, TAKKALPURAM, TRIVANDRUM ROAD, C1 KOKKARAKULAM

TIRUPUR

537. SHASHTI CAR PVT LTD (Y7NA-Y7-01), 16A-1,SHREE PADMINI GARDENS, KANGAYAM RD, TIRUPPUR, TAMIL NADU - 641604
PH :9942903310.

TIRUVALLUR

538. KHIVRAJ MOTORS PVT LTD (HHNA-HH-01), 173 A, POONAMALLEE HIGH ROAD, VENGATHUR, TIRUVALLUR - 602002

TIRUVANNAMALI

539. GANESH CARS PVT LTD (C6NA-LX-02), SURVEY NO. 63/1A, VENGIKKAL, VELLORE MAIN ROAD, TIRUVANNAMALAI, PIN-606604, TAMILNADU - -606604

TRICHY

540. PLA MOTORS (23NA-23-01), TS NO.29P,31P & 32P,36P, NEW WARD "E", NEW BLOCK NO.27, ANNA NAGAR, TRICHY, TAMILNADU - 620017. - 620017
PH :8110099991.

TUTICORIN

541. ASIR AUTOMOBILES PVT LTD (S6NA-S6-S1) - 0

VELLORE

542. GANESH CARS PVT LTD (C6NA-C6-01), 96/6, CHENNAI-BANGALORE HIGHWAY, NH-46, PERUMUGAI,VELLORE, TAMILNADU - 632009
PH :9884722126.

VILUPPURAM

543. ABT LIMITED (QQNA-QQ-01), NO. 526, 1, MAMBALAPATTU ROAD, NEAR ES SCHOOL, MOOVENDAR NAGAR, VILUPPURAM, TAMILNADU. - 605602

## TELANGANA

ARMUR

544. VARUN MOTORS PVT LTD (1HNA-BBN-03), CHIKKABALLAPUR, KARNATAKA - 562101.

ATTAPUR (HYDERABAD)

545. ADARSHA AUTO (10NM-10-03), H.NO 13-6-434/C/1,PILLAR NO 85,ATTAPUR,HYDERABAD - 500048

BODUPAL (SECUNDRABAD)

546. VARUN MOTORS PVT LTD (K6NA-K6-02), SURVEY NO 63, PEERZADIGUDA, BODUPPAL, MEDCHAL MALKAGIRI DISTRICT, HYDERABAD

HYDERABAD

547. ADARSHA AUTO WORLD PVT LTD (10NG-10-01), PLOT NO 6/P, 54, SURVEY NO. 204, PRAGATI NAGAR, BALANAGAR, KUKATPALLY, HYDERABAD - 500072
548. ADARSHA AUTO WORLD PVT LTD (10NG-`10-02), SHAMSHABAD, NH44, HYDERABAD, TELANGANA – 501218 - 501218
PH :8297116633.
549. ADARSHA AUTO WORLD PVT LTD (10NG-10-S1) - 0
550. ADARSHA AUTO WORLD PVT LTD (10NM-10-01), SY NO 382 TO 385, RAMAPALLY, HYDERABAD - 500051
551. GEM MOTORS (INDIA) PVT LTD (10NH-10-01), D.NO.8-96, SURVEY NO.128/2 & 129, TYAGARAYANANAGAR COLONY, KOTHAPET, HYDERABAD, TELANGANA. - 500084
PH :9912345899.
552. JAYABHERI AUTOMOTIVES PVT LTD (10ND-10-01), HNO 2-40/64, SURVEY NO 23 TO 28, JUBILEE GARDENS, KOTHAGUDA, HYDERABAD, TELANGANA-500032. - 500032
553. JAYABHERI AUTOMOTIVES PVT LTD (10NN-10-01), STALL NO MI-1, MIYAPUR, HYDERABAD -500049 - 500049
554. KALYANI MOTORS PVT LTD (10NE-10-01), SURVEY NO.184, KARMAGHAT VILLAGE, BESIDE KHARMANGHAT HANUMAN TEMPLE, R.R DISTRICT, HYDERABAD, TELANGANA - 500079
PH :9347121212.
555. THE MITHRA AGENCIES (10NK-10-01), USHA MAYURI THEATER, OPP TO SPENCERS MARKET, MUSHEERABAD, SECUNDERABAD, ANDRAPRADESH-500020. - 500020
556. POPULAR VEHICLES & SERVICES LTD (10NO-10-S1) - 0
557. POPULAR VEHICLES & SERVICES LTD (10NO-10-01), KOMPALLY,BASHIRABAD, JEEDIMETLA, SECUNDERABAD, TELANGANA 500010 - 500014
558. POPULAR VEHICLES & SERVICES LTD (10NO-10-02), PLOT NO 8 MINI INDUSTRIAL ESTATE,SERILINGAMPALLY, HAFEEZPET, HYDERABAD - 500050
559. SAI SERVICE PVT LTD (10NC-10-01), SURVEY NO 78, ADJACENT TO HP PETROL PUMP, GOPANAPALLY, GACHIBOWLI, HYDERABAD -500046. - 500046
PH :9966377888.
560. VARUN MOTORS PVT LTD (10NB-10-01), B-54, CO.INDUTRIAL ESTATE, BALANAGAR, HYDERABAD, TELENGANA - 500037
561. VARUN MOTORS PVT LTD (10NB-10-02), H.NO. 8-2-120/117/A/2. PLOT NO. 83,83A,83B, ROAD NO. 2, BESIDES SBI BANK, BANJARA HILLS, HYDERABAD - TELANGANA - 500033
PH :9885610555.
562. KALYANI MOTORS PVT LTD (10NE-10-02), NO.611 PEDDA AMBERPET MUNICIPALITY, PEDDA AMBERPET, TELANGANA, HYDERABAD - 501505

IBRAHIMPATNAM-TL

563. KALYANI MOTORS PRIVATE LIMITED (CSFN-CSF-01), PLOT NO. 3, 4, 11 & 12, SHERIGUDA, IBRAHIMPATNAM, TELANGANA

JANGAON

564. ADARSHA AUTO WORLD PVT LTD (KINA-KI-01), SY NO:289,HYDERABAD ROAD,JANGOAN

KAMAREDDY

565. VARUN MOTORS PVT LTD (1HNA-KX-02), BESIDES SK FUNCTION HALL , KAMAREDDY - 507125

KARIMNAGAR

566. ADARSHA AUTO WORLD PVT LTD (N6NA-N6-01), 8-6-301, BY PASS ROAD, AUTO NAGAR, KARIMNAGAR, TELANGANA - 505001
PH :9847073265.
567. ADARSHA AUTO WORLD PVT LTD (N6NA-N6-02), PADMANAGAR, SIRICILLA ROAD, KARIMNAGAR - 505001

KHAMMAM

568. PARAMASHIVA MOTORS PVT LTD (1GNA-1G-01), SY NO. 507,VELUGUMATLA, VILLAGE, KHAMMAM, TELANGAN

KOTHAGUDEM

569. VARUN MOTORS PVT LTD (26NA-HF-03), TALLADA - KOTHAGUDEM RD, BABUCAMP, KOTHAGUDEM, TELANGANA 507125 - 507125

MAHBUBNAGAR

570. SRI JAYARAMA MOTORS PRIVATE LIMITED (WPNA-WP-01), CHRISTIANPALLY, BHOOTPOOR ROAD, MAHBUBNAGAR, TELANGANA - 509001
PH :8096990074.

MANCHERIAL

571. ADARSHA AUTO WORLD PVT LTD (CMNA-CM-01), SURVEY NO-417,BELLAMPALLI MANCHERIAL ROAD ,MANCHERIAL,TELANGANA - 504208
PH :9133329709.

MEDAK

572. VARUN MOTORS PVT LTD (KHFNA-KF-01), PLOT NO 74,SY NO 248/3 ,NEAR CWHC GODOWNS,MEDAK

MEDCHAL

573. AUTOFIN LIMITED (CIDN-CID-01), OPP BHARATH PETROLEUM HYDERBAD-KAMREDDY HIGHWAY,MEDCHAL

NIRMAL

574. ADARSHA AUTO WORLD PVT LTD (10NG-AA-03), SY 79,80,83/A,KADTHAL VILLAGE,M/O SOAN,NIRMAL

NIZAMABAD

575. VARUN MOTORS PVT LTD (1HNA-1H-01), 1-51/4/1/D4 MADAHAVA NAGAR,HYDERABAD ROAD,NIZAMABAD,TELANGANA,503230 - 503230
PH :9542222486.

SANGAREDDY

576. SAI SERVICE (OINA-OI-01), SY NO 772/A,HYDERABAD TO MUMBAI HIGHWAY, SANGAREDDY

SECUNDERABAD

577. AUTOFIN LIMITED (K6NB-K6-01), PLOT NO.6, SURVEY NO.267/1 & 267/2, BOWENPALLY, BALANAGAR MAIN ROAD, SECUNDERABAD, TELANGANA - 500011
PH :8886144551.
578. VARUN MOTORS PVT LTD (K6NC-K6-01), VARUN MOTORS,2ND CROSS ROAD,SAINIKPURI,SECUNDERABAD
PH :779960094.

SHADNAGAR

579. SRI JAYARAMA MOTORS PRIVATE LIMITED (WSNA-WS-01), SY.NO 204,BESIDE VIVA HOSPITALS,SHADNAGAR

SIDDIPET

580. ADARSHA AUTO WORLD PVT LTD (10NM-CAL-02), SY.NO.194/4.PONNALA CROSS. BESIDE HP PETROL, SIDDIPET - 502375

WARRANGAL

581. ADARSHA AUTO WORLD PVT LTD (D5NA-D5-01), H.NO: 23-6-132, HUNTER ROAD, OPP TO CITIZENS CLUB, WARANGAL, TELANGANA - 506007
PH :8978944414.

ZAHEERABAD

582. JAYABHERI AUTOMOTIVES PVT LTD (BATN-BAT-01), SITE AT SY NO. 271 & 275, MAIN ROAD, ZAHIRABAD

## UTTAR PRADESH

AGRA

583. KTL PVT LTD (66NC-66-01), KHASRA NO - 246/1, 249/1, 251 , KUBERPUR, AGRA. - 282006
584. PREM MOTORS PVT LTD (66NB-66-S1) - 0
585. PREM MOTORS PVT LTD (66NB-66-01), KHASRA NO.-655, VILL ARTONI, DELHI-AGRA HIGHWAY, AGRA - 282007

586. MERAK VEHICLES LLP (66NE-66-01), 30, MUNRO ROAD, SADAR BAZAAR, AGRA CANTT, 282001. - 282001

AKBARPUR

587. KTL PVT LTD (LHNA-LH-01), GRAM BARA TEHSIL AKBARPUR, NEAR PRABHAT ENGINEERING COLLEGE. KANPUR DEHAT, (UTTAR PRADESH)

AKBARPUR-A NAGAR

588. SMARTWHEELS (BINA-BI-01), PLOT NO 486 MI MAUJA BAIRAMPUR BARWAN , AKBARPUR DISTT,
AMBEDKAR NAGAR, UTTAR PRADESH

ALIGARH

589. ANIL MOTORS (A UNIT OF CLML VEHICLES PVT LTD) (B6NA-B6-01), PLOT NO. 5/129, GT ROAD, RAM NAGAR COLONY, SARSOL, ALIGARH, UTTAR PRADESH. - 202002
PH :9639775522.
590. ANIL MOTORS (A UNIT OF CLML VEHICLES PVT LTD) (B6NA-B6-02), VILL KARSUA, PALWAL-DELHI ROAD, ALIGARH PIN 202140 - 202140
PH :9358373099.
591. ANIL MOTORS (A UNIT OF CLML VEHICLES PVT LTD) (B6NA-B6-S1)

ALLAHABAD

592. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (29NC-29-01), PLOT NO. C-23, INDUSTRIAL AREA - NAINI, PRAYAGRAJ - 211009
593. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (29NC-29-S1) - 0
594. AMITDEEP MOTORS (29NA-29-S1)

ALMORA

595. NAINITAL MOTORS PVT LTD (SQNA-SQ-01), NH109, PALTAN BAZAR, DHARANAULA, ALMORA, UTTARAKHAND

AMROHA

596. AKANKSHA MBD (AONA-AO-01), GATA NO. 2993, MOHALLA SARAI KOHNA, BIJNOR ROAD, AMROHA - 244221

BAREILLY

597. CORAL MOTORS PVT LTD (56NA-56-01), DELHI RAMPUR ROAD, IN FRONT OF MINI BYPASS, CB GANJ, BARIELLY, UP - 243001
PH :9359101010.

BARHALGANJ

598. ARBIT AUTOMOBILES PVT LTD (72NB-SHK-02), AARAZI NO- 395 & 395 SINDHUAPUR TEHSIL GOLA DIST GORAKHPUR

BIJNOR

599. SHAKUMBARI AUTOWHEELS PVT LTD (6DNA-6D-01), 4TH KM. MILESTONE, BIJNOR - NAJIBABAD RD, NEAR DPS SCHOOL, BIJNOR, UTTAR PRADESH 246701 - 246701

BULANDSHAHR

600. SKUNIVERSE AUTOMOBILES PVT LTD (M5NA-M5-01), 578M,DELHI ROAD,TRANSPORT NAGAR,BULANDSHAHR-203001 - 203001

ECOTECH (NOIDA)

601. J J IMPEX (MSM) (T283-T2-S1) - 421503

ETAH

602. DEV MOTORS PVT LTD (XGNA-XG-01), GATA NO.164, VIRAMPUR, ETAH DELHI G.T ROAD, IN FRONT OF MAHINDRA SHOWROOM, ETAH, UTTAR PRADESH, PIN CODE - 207001 - 207001

ETAWAH

603. KULDEEP MOTORS PVT LTD (6ENA-6E-01), PILKHAR, KANPUR-ETAWAH ROAD, ETAWAH. - 206001

FATEHPUR

604. KULDEEP MOTORS KANPUR LLP (TMNA-TM-01), 466, G.T ROAD, NAUWA BAGH, FATEHPUR, UTTAR PRADESH - 212601 - 212601

FIROZABAD

605. DEV MOTORS PVT LTD (DFNA-DF-01), DHOLPURA, NEAR ST. JOHNS CHAURAHA, AGRA ROAD, FIROZABAD - 283203

GAJRAULA

606. AKANKSHA AUTOMOBILES PVT LTD (XDNA-XD-01), KHASRA NO. 1411F, ADJ. HYUNDAI SHOWROOM, OPP. RELIANCE PETROL PUMP, DELHI ROAD, GAJRAULA

GHAZIABAD

607. MOTORCRAFT SALES PVT LTD (59NB-59-S1) - 0
608. MSM (JJ IMPEX) (5982-59-N1), PLOT NO C, J J IMPEX (DELHI) LIMITED, 224, SITE-1, INDUSTRIAL AREA, BULANDSHAHR ROAD INDUSTRIAL AREA, GHAZIABAD, UTTAR PRADESH 201003 - 201003
609. REGENT AUTOLINKS PVT LTD (59NC-59-01), A-10/32,33,34, MEERUT ROAD INDUSTRIAL AREA, GHAZIABAD - 201002
610. ROHAN MOTORS LTD (59NA-59-S1) - 0
611. ROHAN MOTORS LTD (59NA-59-01), KHASRA NO 46 , DELHI MEERUT ROAD MEERUT ROAD INDUSTRIAL AREA, MORTA, GHAZIABAD, UTTAR PRADESH 245101 - 245101
PH :8178839830.
612. TR SAWHNEY AUTOMOBILES PVT LTD (59ND-59-01), A-8 AMBEDKAR ROAD, GHAZIABAD UP - 201001
613. MOTORCRAFT SALES PVT LTD (59NB-T2-02), D-40, SITE IV, GREATER NOIDA (U.P.)

GORAKHPUR

614. SMARTWHEELS PVT LTD (72NA-72-01), ARAZI NO. 623, 624 & 625, GULHARIA BAZAR, MEDICAL COLLEGE ROAD, GORAKHPUR, UTTAR PRADESH - 273009
PH :8222002147.
615. ARBIT AUTOMOBILES PVT LTD (72NB-72-01), PLOT NO - A & B, BUDDH VIHAR YOJNA, PART-B, TARAMANDAL ROAD, GORAKHPUR - 273009

GREATER NOIDA

616. MSM (JJ IMPEX) (T283-T2-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NO 02, ECOTECH 12, GREATER NOIDA, GAUTAM BUDDHA NAGAR, UTTAR PRADESH - 201009
617. RANA MOTORS PVT LTD (T2NB-T2-01), PLOT NO.26, SECTOR ECOTECH-12, GREATER NOIDA, GAUTAM BUDH NAGAR, GREATER NOIDA, PIN-201310, UTTAR PRADESH

HARDOI

618. CONCEPT CARS LIMITED (QENA-QE-01), PLOT NO. 1609 & 1605, GUNGABUX PURVA, BILGRAM RD, HARDOI, UTTAR PRADESH - 241001
PH :7607696666.

HATHRAS

619. DEV MOTORS PVT LTD (LPNA-LP-01), NAGLA UMMED, NEAR COCA COLA FACTORY, BANNA DEVI, ALIGARH ROAD, HATHRAS

JHANSI

620. SURI AUTOMOBILES (60NA-60-01), SHIVPURI - JHANSI ROAD, OPPOSITE HANSRAJ MODERN SCHOOL, JHANSI, UTTAR PRADESH - 284003
PH :7705000558.
621. BASERA VELOCITY CARS (A UNIT OF BASERA HOTELS AND RESORTS LLP) (60NB-60-01), 329, BUDHA, BADAGAON,GWALIOR ROAD, JHANSI

KANNAUJ

622. KTL PVT LTD (EMNA-EM-01), ARAZI GATA NO. 1247, NEAR MAA GAYATRI FILLING STATION, ASHOK NAGAR, SARAIMEERA, KANNAUJ, UTTAR PRADESH

KANPUR

623. KTL PVT LTD (28NB-28-01), ARAZI NO. 352, SINGHPUR KACHHAR, BITHOOR ROAD, NORTHERN RAILYWAY COLONY, KANPUR, UTTAR PRADESH. - 208017
PH :7408409312.

KHURJA

624. SKUNIVERSE AUTOMOBILES PVT LTD (SKPN-SKP-01), 206, V-TAINA GOSPUR, KHURJA JEWAR ROAD, KHURJA,

LAKHIMPUR KHERI

625. SUMITRA DS MOTORS PVT. LTD. (M3NA-M3-01), KHASRA NO - PLOT NO. 706, VILLAGE BHANDSARIYA, SH 730, LAKHIMPUR KHERI, UTTAR
PRADESH

LUCKNOW

626. KTL AUTOMOBILE PVT LTD (13ND-13-S1) - 0
627. KTL AUTOMOBILE PVT LTD (13ND-13-S2) - 0
628. KTL AUTOMOBILE PVT LTD (13ND-13-01), PLOT NO - 513, VILL HARIHARPUR BIJNAUR, OPP ANSAL API, AMAR SHAHEED PATH, LUCKNOW - 227105
PH :7311190503.
629. KTL AUTOMOBILE PVT LTD (13ND-13-02), GODAWARI ESTATE, SITAPUR ROAD, LUCKNOW
630. KULDEEP MOTORS (LUCKNOW) PVT LTD (13NE-13-S1) - 0
631. MEGA MOTORS (A UNIT OF AKM MOTORS PRIVATE LIMITED) (13NF-13-01), B-107, SECTOR-C, MAHANAGAR, LUCKNOW - 226006
632. ANAND MOTOR AGENCIES LTD (13NC-13-01), GATA NO. 1062 PARGANA RAJA BIJLI PASI VILLAGE AURANGABAD, SHAHEED PATH (OPPOSITE TO RAMABAI AMBEDKAR MAIDAN), LUCKNOW, UTTAR PRADESH - 226012
633. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-S2)
634. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-S1) - 0
635. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-01), PLOT NO - D10, SAROJINI NAGAR INDUSTRIAL AREA, LUCKNOW. PIN - 226008 - 226008
636. BRIGHT 4 WHEEL SALES PVT LTD (13NB-13-02), KHASRA NO. 197, 198, 200, 201, 202 SEMRA, FAIZABAD ROAD, LUCKNOW.
637. ONEUP MOTORS INDIA PRIVATE LIMITED (13NG-13-01), KHASRA NO. 1040, MUBARAKPUR, LUCKNOW, UTTAR PRADESH 226201 - 226201

MAHARAJGANJ

638. ARBIT AUTOMOBILES PVT LTD (EINA-EI-01), 120, VILL RAMPUR, TEHSIL SADAR, MAHARAJGANJ, UTTAR PRADESH.

MAHOBA

639. VELOCITY CARS (RMNA-RM-01), 12/1, SHOP AT CHARKHARI, BYPASS ROAD, NEAR PARMANAND CHOWK, MAHOBA, UTTAR PRADESH

MAINPURI

640. KULDEEP MOTORS PVT LTD (SGNA-SG-01), KHASRA NO. 1457, NAGAR PALIKA CHATRA, MAINPURI, 205001

MATHURA

641. UMA MOTORS PVT LTD (H8NA-H8-01), PLOT NO 222, MAHOLI, NEAR KIRAN HOSPITAL, MATHURA - 281004
PH :9997385999.

MEERUT

642. RADHAGOVIND WHEELS INDIA PRIVATE LIMITED (48NC-48-S1) - 0
643. TR SAWHNEY AUTOMOBILES PVT LTD (48NB-48-01), 1183/17 RITHANI, ZONE - A, SECTOR 4 NEAR PETROL PUMP, MEERUT, UTTAR PRADESH - 250103
PH :18002704142.
644. TANYA AUTOMOBILES PVT LTD (48ND-48-01), KHASRA NO. 150, VILLAGE RALI CHAUHAN, MEERUT.

MIRZAPUR

645. VARANASI MOTORS PVT LTD (6KNA-6K-01), PURJAGIR, MIRZAPUR BHADOHI ROAD, MIRZAPUR

MODINAGAR

646. SNV AUTOMOBILES PVT LTD (M7NA-M7-01), KHASRA ANO- 564 , SIKARI KALAN , MEERUT ROAD , MODINAGAR - 201204

MORADABAD

647. AKANKSHA AUTOMOBILES PVT LTD (B4NA-B4-01), RTO ROAD, LAKRI FAZALPUR, NEAR RAJAN OVERSEAS, MORADABAD - 244001
648. AKANKSHA AUTOMOBILES PVT LTD (B4NA-B4-S1) - 0

NAUGARH

649. SMARTWHEELS (QGNA-QG-01), GATA NO. 110, 111, 112 & 113, GRAM-PIPRA, POST- CHAURI MAHULANI, NEAR PAKDI CHAURAHA, TEHSIL-NAUGARH DIST. SIDDHARTHNAGAR, UTTAR PRADESH, 272153 - 272153

NOIDA

650. FAIR DEAL PREMIUM WHEELS PRIVATE LIMITED (A1ND-A1-01), A-107, SECTOR-5. NOIDA - 201301
651. MOTORCRAFT SALES PVT LTD (59NB-59-01), C 42 SECTOR 57, NOIDA, UTTAR PRADESH - 201301
652. VIPUL MOTORS PVT LTD (A1NB-A1-S1) - 0
653. VIPUL MOTORS PVT LTD (A1NB-A1-01), C1 SECTOR 57, NOIDA - 201301 - 201301
654. MAGIC AUTO PVT LTD (A UNIT OF MAGIC LEASING & FINANCE PVT LTD) (A1NE-A1-01), B-51, HOSIERY COMPLEX, NOIDA (U.P.) - 110025

PRATAPGARH

655. BRIGHT 4 WHEEL SALES PRAYAGRAJ PRIVATE LIMITED (NKNA-NK-01), GATA NO 287,VILLAGE GOPALPUR, SADAR, PRATAPGARH ,UTTAR PRADESH.

PRAYAGRAJ

656. SARASWATI (29ND-29-01), KHASRA NO. 638, ANDHAWA, TEHSIL PHOOLPUR, PRAYAGRAJ.

RAEBARELI

657. KTL AUTOMOBILE PVT LTD (HSNA-HS-01), 1481, NEAR KATHWARA BUS STAND, LUCKNOW RAIBARELI HIGHWAY, HARCHANDPUR, RAIBARELI - 229303
PH :7311190503.

RAMPUR

658. AKANKSHA AUTOMOBILES PVT LTD (6LNA-6L-01), PLOT NO 95 , ADJACENT HONDA BIKE SHOWROOM, VILLAGE- TASHKA, NEAR RAMPUR HOSPITAL, NAINITAL ROAD, RAMPUR, UTTAR PRADESH

SAHARANPUR

659. TANYA AUTOMOBILES PVT LTD (S2NA-S2-01), OPP. PHULWARI GARDEN, DELHI ROAD, SAHARANPUR PIN - 247001 - 247001

SAHIBABAD

660. MSM (JJ IMPEX) (M983-M9-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NUMBER 58/4, SITE 4, SAHIBABAD INDUSTRIAL AREA - 201010
PH :9711474930.

SHAHJAHANPUR

661. SUMITRA DS MOTORS PVT LTD (W2NA-W2-01), SH25 , RETI ROAD SHAHJAHANPUR

SIKANDRABAD

662. SKUNIVERSE AUTOMOBILE PVT LTD (CWQN-CWQ-01), 2328, OPP. AGRASEN INTER COLLEGE, DANKAUR ROAD, SIKANDRABAD, DIST.-BULANDSHAHR (UTTAR PRADESH). - 203205

SITAPUR

663. CONCEPT CARS LIMITED (6MNA-6M-01), PLOT NO 279 , CANTT STATION

SRINAGAR (UK)

664. SHAKUMBARI AUTOWHEELS PVT LTD (ANAN-AN-01), KHATA NO 26/339 , KHET NO 221 , KATULASYUN , SRINAGAR, PAURI

VARANASI

665. AGR AUTOMOBILES PVT LTD (84NA-84-01), ARAZI NO - 285,286 LUCCHERPUR, PARGANA-ATHGAWA TEHSIL, HARHUA , VARANASI - 221105
666. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (84NB-84-01), HARDATTPUR, MOHANSARAI, VARANASI-ALLAHABAD ROAD, VARANASI - 221001

## UTTARAKHAND

DEHRADUN

667. ROHAN MOTORS LTD (57NA-57-S1) - 0
668. SHAKUMBARI AUTOWHEELS PVT LTD (57ND-57-01), KHASRA NO.-15-ANA, MOHABBEWALA, SAHARANPUR ROAD, DEHRADUN-248001 - 248001
669. SHAKUMBARI AUTOWHEELS PVT LTD (57ND-57-S1) - 0
670. TANYA AUTOMOBILES PVT LTD (57NF-57-01), MOHBEWALA CHOWK, SAHARANPUR ROAD, DEHRADUN PIN 248002 - 248002
671. PREM MOTORS (57NG-57-S1)

HALDWANI

672. NAINITAL MOTORS PVT LTD (J6NA-J6-01), 5TH KM RAMPUR ROAD, JEETPUR NEGI, NEAR AMAR UJALA PRINTING PRESS, HALDWANI, UTTARAKHAND - 263139

RAJSAMAND

673. TECHNOY MOTORS INDIA PVT LTD (X2NA-X2-S1)

RISHIKESH

674. SHAKUMBARI AUTOMOBILES (AASN-AAS-01), GURUDEV PLAZA, 279/1, HARIDWAR ROAD, OPPOSITE GOVERNMENT P.G. COLLEGE, RISHIKESH, DISTRICT DEHRADUN

ROORKEE

675. SHAKUMBARI AUTOWHEELS PVT LTD (H2NA-H2-01), 5 KM MILESTONE ,NH-58,ROORKEE-DELHI ROAD ,NEAR HOTEL GODWARI,ROORKEE, UTTARAKHAND - 247667

RUDRAPUR

676. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (U4NB-U4-01), KASHIPUR ROAD, OPPOSITE GREEN PARK COLONY, VILLAGE DIBDIBA, TEHSIL BILASPUR, RAMPUR, UTTRAKHAND - 244901

VIKASNAGAR

677. ROHAN MOTORS LTD (RINA-RI-01), KHASRA NO 5587, C/O BHARAT NEGI, NEAR SVM INTER COLLEGE, BABU GHAR, VIKASNAGAR, DEHRADUN WARD NO 6, UTTARAKHAND

## UTTRAKHAND

RUDRAPRAYAG

678. ROHAN MOTORS (IKNA-IK-01), KHASRA NO. 149, 150, 151, KHATA NO. 7, RAINTOLI PUNAR, NEAR BATALION 10 HOTEL, BADRINATH ROAD, RUDRAPRAYAG

## WEST BENGAL

ASANSOL

679. BEEKAY AUTO PVT LTD (F6NA-F6-01), NH-2 ,CHANDA MORE ,POST KALI PAHARDI, JAMMURIA DISTRICT WEST BARDHAMAN - 713339
PH :9932049425.

BANKURA

680. BHANDARI AUTOMOBILES PVT LTD (G7NA-6Q-02), VILLAGE KAMRAR MATH , CINEMA ROAD , MOUZA BIKNA

COOCHBEHAR

681. SEVOKE MOTORS PVT LTD (BWZN-BWZ-01), NEXA COOCH BEHAR CENTRAL VILL & P.O. - MAHISHBATHAN P.S. - KOTWALI, NH - 31 COOCHBEHAR,W.B. -734617 - 734617

DARJEELING

682. BEEKAY AUTO (6UNA-6U-01), BATASIA HILL CART ROAD, PO GHOOM, PS - JOREBUNGLOW, DARJEELING - 734102 WEST BENGAL - 734102

GANGTOK

683. ENTEL AUTOS (B9NA-B9-S1)

HOWRAH

684. MACHINO TECHNO SALES LTD (X7NA-X7-01), 109, 1, UPPER FORESHORE RD, CHOURA BUSTEE, SHIBPUR, HOWRAH, WEST BENGAL 711102 - 711102
PH :9830081632.

JALPAIGURI

685. PODDAR CAR WORLD PVT LTD (XYNA-XY-01), ASSAM MORE BUS STOP, SH12A, JALPAIGURI, WEST BENGAL 735102 - 735102
PH :8945533002.

JHARGRAM

686. BHANDARI AUTOMOBILES PVT LTD (BUGN-BUG-01), PLOT NO 200, KHAITAN NO 502 JL NO 370, MOUZA - JHAMDA PS JHARGRAM, DIST - JHARGRAM - WEST BENGAL

KHARAGPUR

687. BHANDARI AUTOMOBILES PVT LTD (G7NA-G7-01), CHOWRANGEE, PLOT NO-138 & 139, O T ROAD, KHARAGPUR - 721301
PH :7603076061.

KOLKATA

688. JYOTE MOTORS (BENGAL) PVT LTD (06ND-06-01), MIRANIA ROAD, ARUPOTA ON BASANTI HIGHWAY, - 700105
PH :9074158220.
689. MACHINO TECHNO SALES LTD (06NG-06-01), 98/A/2 BT ROAD,P.S - BARANAGAR, P.O. - ISI BT ROAD, KOLKATA, WEST BENGAL – 700090.
690. PREMIER CARWORLD PVT LTD (06NB-06-C1), PLOT NO 123,MICHEAL NAGAR, BESIDE NATIONAL MODEL HIGH SCHOOL, NEAR HP GYANI PETROL PUMP, KOLKATA , WEST BENGAL - 700133 - 700133

691. DEWARS GARAGE LIMITED (06NH-6-01), 1696/A, LASKARAHAT, NAZIRABAD, P.S. - SONARPUR, KOLKATA - 700150 - 700150
692. ONE AUTO (06NI-06-01), LR DAG NO 273,274,275,276 JL NO 20, RS NO 36 LR KHAITAN NO 217, PS THAKURPUKUR DIST - SOUTH 24 PARGANAS PIN 700104 - 700104

KOLKATA (TARATALA)

693. BHANDARI AUTOMOBILES (06NA-06-01), 1/NEW, TARATALA ROAD, KOLKATA, WEST BENGAL - 700088

RANAGHAT

694. STARBUST MOTORS PVT LTD (BBTN-BBW-02), NH 34 RANAGHAT, NEAR BEGOPARA, CATHOLIC CHURCH NADIA WEST BENGAL - 741232 - 741232

SILIGURI

695. SEVOKE MOTORS PVT LTD (43NA-43-01), WARD NO 42, 3RD MILE, NEXA, SEVOKE RD, NEAR SONA PETROL PUMP, CHAYAN PARA, SALUGARA, SILIGURI, WEST BENGAL - 734008

SREERAMPORE

696. STARBUST MOTORS PVT LTD (BBTN-BBT-01), NEAR ALLAHABAD BANK, MOLLARBER, SERAMPORE.

## ANDHRA PRADESH

CUDDAPPAH

1. SIVAJI MOTORS (3275--), BESIDES PADMASHALI KALYANA MANDAPAM, MADRAS ROAD, KADAPA-516002, ANDHRA PRADESH - 516002
PH :9849113189.
2. S V AUTO MOBILES WORKS (1030--), SANKARA PURAM, CUDDAPAH (A.P)., , - 516002
PH :9704209620.

GUNTAKAL

3. S. MAHABOOB AUTOMOBILES (4075--), ALUR ROAD, GUNTAKAL-515802, , - 515802
PH :9440208312.

GUNTUR

4. S. S. MOTORS (4946--), OPP. JKC COLLEGE, JKC COLLEGE ROAD, GUNTUR-522006, ANDHRA PRADESH - 522006
PH :9848936363.

KAKINADA

5. SATISH AUTO CARE (5038--), BEHIND KALPANA THEATRE, BEACH ROAD KAKINADA, DISTRICT EAST GODAVARI, ANDHRA PRADESH - 533005
PH :9848313599.
6. SRI SHIRDI SAI TECHNOCRAFTS (1459--), FLAT NO 36/2, I.D.A, RAMANAYYAPETA, BESIDE MAHINDRA SHOW ROOM, OPP: BHAVANI CASTING ROAD, KAKINADA – 533005 - 533005
PH :9848633336.

KAVALI

7. KAMAL MOTORS (3842--), 10-15-43/J3A OPP LIC, TANK RAOD, KAVALI, - 524201
PH :9440928888.

KURNOOL

8. SRI SRINIVASA AUTO GARAGE (5170--), KALLUR ROAD, KURNOOL, DISTRICT - KURNOOL, ANDHRA PRADESH - 518002
PH :9440244660.

MACHILIPATNAM

9. SRI MARUTI MECHANICAL WORKS (4172--), D.NO 4-121, PLOT NO 26,27, , POTEPALLI INDUSTRIAL PARK, MACHLIPATNAM- 521002, - 521002
PH :9440538012.

MANDAPETA

10. MODERN MARUTI CARE (4866--), D.NO. 4-1-59/2, MAIN ROAD, MANDAPETA-533309, DISTRICT-EAST GODAVARI, ANDHRA PRADESH - 533309
PH :9133198494.

MATHURAWADA

11. ANY TIME SERVICE CENTRE (4860--), D. NO. 1-56 (NH-16), POTHINAMALLAYYA PALEM, MADHURAWADA, VISAKHAPATNAM - 530041, ANDHRA PRADESH. - 530048
PH :8977799888.

NAGARI

12. PUJITHA SERVICE CENTER (5872--), TIRUPATI ROAD, NAGARI-517583, DISTRICT-CHITTOOR, ANDHRA PRADESH - 517583
PH :9966106128.

NANDYAL

13. MARUTI MOTORS (2635--), PLOT NO 428, NH-18 , NEAR RAILWAY GATE , NANDYAL- 518501, - 518501
PH :9440554617.

NELLORE

14. MARUTI AUTO SERVICE STN. (2620--), 16/796 SANKARA AGRAHARAM, NELLORE-524 001 (A.P), , - 524001
PH :9885881905.
15. MARUTI MOTORS (176--), 16-3-995, MINI BYPASS ROAD,, RAMALINGAPURAM, NELLORE-524 003,(A.P.), - 524003
PH :9440278243.

PATTIKONDA

16. ROYAL MOTORS (5776--), ADONI ARTS & SCIENCE, COLLEGE ROAD ADONI,PATTIKONDA-518302, DISTRICT-KURNOOL, ANDHRA PRADESH - 518302
PH :9866362847.

PRODDATTUR

17. SRI RAM MOTORS (3642--), 189 INDUSTRIAL AREA, NEAR SRI LAKSMI NAGAR, MYDUKUR ROAD, PRODDATUR (A.P.) - 516360
PH :9666890525.

RAJAHMUNDRY

18. MARUTHI MOTORS (1257--), D.NO 88-30-04, OPP I.T.C. GADALAMMA NAGAR, NH-16, RAJAMAHENDRAVARAM -533107, - 533107
PH :9848253434.

SRIKALAHASTI

19. SUNDEEP CARS (5972--), 16/550, PANAGAL ROAD, OPP. NTR PARK, SRIKALAHASTI - 517644, TIRUPATI DISTRICT, ANDHRA PRADESH - 517644
PH :9848294869.

TENALI

20. RAHUL MOTORS (5157--), D. NO. – 19-15-26, BESIDE NUKALA RAMA KOTESWARA RAO KALYANA MANDAPAM (OLD THEATRE), BOSE ROAD, TENALI, ANDHRA PRADESH - 522201
PH :9490187453.

VISAKHAPATNAM

21. SIRI AUTOMOBILES (5232--), PLOT O 94/A IDA E BLOCK, AUTO NAGAR.GAJUWAKA, VISHAKHAPATNAM, ANDHRA PRADESH - 530012
PH :9963296667.
22. SRINIVASA AUTO GARAGE (5440--), OPP. KANTI ROAD,, NEAR RAYS PETROL PUMP - VISHAKHAPATNAM, DISTRICT - VISHAKHAPATNAM, ANDHRA PRADESH - 530031
PH :9912688943.
23. VIZAG AUTO SCANS (461--), 49-52-1/4/2, 80 FEET ROAD, OPP. HNR VIHAR APARTMENTS, SANTHIPURAM, SANKARAMATAM ROAD, VISAKHAPATNAM -530016 - 530016
PH :9246625885.

VIZIANAGARAM

24. VIKRAMA AUTOMOBILES (4621--), 17-13-4 TEMPLE STREET, VIZAINAGARAM - 531 202 (A.P.), , - 535003
PH :9440192224.

## ARUNACHAL PRADESH

ALONG

25. BAANU MOTORS (1744--), SIYOM MARKET, ALONG, WEST SIANG DISTT., (ARUNACHAL PRADESH) - 791001

BOMDILA

26. GURU MOTORS (3921--), BIRPUR, RUPA, ARUNACHAL PRADESH 790003, - 790003
PH :7640898278.

NIRJULI

27. SANGO SERVICE CENTRE (5742--), LEKHI VILLAGE, NH-415, NEAR MAHINDRA AUTOMOBILE, NAHARLAGUN, ARUNACHAL PRADESH - 791110 - 791110

TAWANG

28. TAWANG MARUTI SERVICING STATION (4255--), OLD BAZAR LINE, P.O. & P.S., TAWANG, ARUNACHAL PRADESH - 790104
PH :9402493456.

ZIRO

29. HILLS AUTO AGENCY (3922--), POLICE RESERVE & PETROL PUMP ROAD, HAPOLI BAZAR P.O. ZIRO, DISTT. LOWER SUBANSIRI, ARUNACHAL PRADESH - 791 120 - 791120
PH :9436047232.

## ASSAM

BADARPUR

30. MARUTI CAR PLAZA (3635--), NEAR INDUSTRIAL AREA, S.T. ROAD, BADARPUR, DISTT. KARIMGANJ (ASSAM) PIN-788 806 - 788806
PH :9854970591.

BISHAWANATH CHARIALI

31. BINA AUTOMATION (3677--), , P.O. BISHAWANATH CHARIALI, DISTT. SONITPUR, ASSAM-784 176 - 784176
PH :9957309744.
32. DISHANG DONE (1058--), 52 N.H., BISHWANATH CHARIALI-784176, DISTT. SONITPUR, ASSAM - 784176
PH :9854004161.
33. BINA AUTOMATION (--), P.O. BISHAWANATH CHARIALI, DISTT. SONITPUR, ASSAM-784 176 - 784176
PH :9957309744.

BOKAJAN

34. SHREE GANESH MOTORS (6040--), SUKHANJAN GF ROAD,P.O:BOKAJAN(C.F.), DISTRICT KARBI ANGLONG, ASSAM - 782480
PH :9435167138.

BOKAKHAT

35. GOENKA AUTOMOBILES (2878--), P.O. BOKAKHAT, DISTT. GOLAGHAT, ASSAM-785 612, - 785612
PH :9854048910.

DHALIGAON

36. ADHIKARY MOTOR WORKS (4049--), KUKURMARI, DHALIGAON, DIST. - CHIRANG, ASSAM - 783385 - 783385
PH :9435020938.

DHEMAJI

37. NARAH AUTOMOBILES (3852--), C/O BLUE HILL COUNTER, P.O. DHEMAJI, DISTT. DHEMAJI, PIN-787 057 (ASSAM) - 787057
PH :9954390916.

DHUBRI

38. BRAHMAPUTRA MOTOR SERVICING STATION (3127--), G.T.B ROAD, DHUBRI-783 301, (ASSAM), - 783324
PH :9101176148.

DIBRUGARH

39. GEE DEE AUTO SERVICE (953--), JHALUKPARA, DIBRUGARH-786 001, ASSAM, - 786001
PH :9435131119.
40. MEHBOOB AUTOMOBILES & TYRE SERVICES (1760--), CHOWKIDINGHEE, NEAR STATE TRANSPORT, DIBRUGARH-3, - 786005
PH :9854432207.

DIGBOI

41. GAURI AUTOMOBILES (3760--), MULIABARI, DIGBOI 786 171, , - 786171
PH :9435137556.

DOOM DOOMA

42. S K AUTO CARE (3962--), UCHAMATI, NATIONAL HIGHWAY, DOOM DUMA, ASSAM 786151 - 786151
PH :9435135876.

GOALPARA

43. BHARAT ENGINEERING WORKS (969--), PO - BALDMARI, AGIA ROAD, GOALPARA (ASSAM) -783 102, - 783102
PH :9864767777.

GOLAGHAT

44. KAKOTI MOTOR WORKS (1074--), NEW AMOLAPATTY, RANGPUR, P.O. GOLAGHAT-785 621, DISTT. GOLAGHAT (ASSAM) - 785621
PH :9435053663.

GOSSAIGAON

45. A.R. AUTOMOBILES (4544--), NH-31C, HABRUBIL, GOSSAIGAON, DIST KOKRAJHAR, ASSAM-783360 - 783360
PH :9435109765.

HAILAKANDI

46. RONOK AUTOMOBILES (5978--), LALA ROAD,NEAR CIVIL HOSPITAL, HAILAKANDI-788151, DISTRICT-HAILAKANDI, ASSAM - 788151

HOJAI

47. PRAMAN MOTORS (5730--), WARD NO. 12, HOLDING NO. 14, COLLEGE ROAD, HOJAI, ASSAM-782435, - 782435
PH :9954369700.

JONAI

48. BOROOAH MOTORS (4545--), NH-515, MURKONG SLEEK, DIST. DHEMAJI, JONAI-787060, ASSAM - 787060
PH :9864590237.

KARIMGANJ

49. S D AUTOMOBILE (4931--), SILCHAR ROAD, KARIMGANJ - 788710, , - 788710

LUMDING

50. BEDI MOTORS (5827--), MAIN ROAD,NORTH LUMDING,LUMDING-782447, DISTRICT - NAGAON, (ASSAM), - 782447
PH :9957333991.

MANGALDAI

51. PRIYAM AUTOMOBILES (2424--), NH 52 COLLEGE ROAD, MANGALDOI, ASSAM, PIN-784 125 - 784125

MARGHERITA

52. VIRDI MOTOR WORKS (955--), MISSION ROAD, P.O. MARGHERITA-786 181, DIST. TINSUKIA, (ASSAM) - 786181
PH :8011164932.

MARIANI

53. VASKAR AUTOMOBILES (5237--), NEAR NST TINALI. P.O. :MARIANI, DISTRICT - JORHAT, ASSAM, - 785634
PH :9508486813.

MORANHAT

54. CHINAKI SERVICE STATION (8963--), (MARUTI AUTHORISED SERVICE STATION), NATUN NAGAR A.T. ROAD, MORANHAT-785 670, (ASSAM) - 785670
PH :9401512821.

MORIGAON

55. PRAGATI MOTORS (5273--), MORIGAON TOWN, WARD NO.1, BHATBOR-, DOLON PATH, P.O.: MORIGAON, DISTRICT - MORIGAON, ASSAM - 782105
PH :9435064356.

NAGAON

56. DAS MARUTI MOTOR WORKS (3734--), NAGAON -782001, , , (ASSAM) - 782002
PH :9435360246.

NALBARI

57. B.R.K. AUTOMOBILES ENGINEERING WORKS (2838--), HAJO ROAD, NALBARI-781 335, (ASSAM), - 781335
PH :9954895264.

NAMRUP

58. RAJ ENTERPRISES (3849--), NAMRUP INDUSTRIAL ENTERPRISES, SONARI TINIALI, PARBATPUR, NAMRUP-786 623 (ASSAM) - 786623
PH :9854135646.

NORTH LAKHIMPUR

59. GREENLAND MARUTI WORKS (2974--), TOWN BANTOW, NH-15, WARD NO.-14, NORTH LAKHIMPUR, LAKHIMPUR, ASSAM - 787001 - 787031
PH :9435086197.

PATHSALA

60. USHA AUTOMOBILES (4240--), N.H 31,PATHSALA-781325, DISTRICT-BARPETA, ASSAM, - 781325
PH :9401310431.

SILAPATHAR

61. BORLUIT MOTOR (9035--), KHANAMUKH, P.O/P.S -SILAPATHAR, DIST-DHEMAJI, ASSAM PIN-787059 - 787059
PH :8638981308.

SILCHAR

62. CARDROME (1559--), 2ND LINK ROAD JUNCTION, SONAI ROAD (M H C ROAD), SILCHAR-788 006, (ASSAM) - 788006
PH :9435071212.

TEZPUR

63. POOJA MOTOR WORKS (4373--), N.T. ROAD, MURATETLI, TEZPUR-784001, ASSAM - 784001
PH :9957907256.

TINSUKIA

64. AUTO MAKERS (934--), MAKUM ROAD, UDYOG NAGAR, TINSUKIA -786 146 (ASSAM), - 786146
PH :9435035341.

TITABAR

65. SHANKAR AUTO WORKS (5174--), C/O:SHIV SHAKTI AUTO WORKS.BALAJI, MARKET TITABAR CHARIALI TITABAR, DISTRICT - JORHAT, ASSAM - 785630

UDALGURI

66. RENU MOTORS (4543--), WARD NO. 2, U.T. ROAD, UDALGURI TOWN, UDALGURI-784509, ASSAM - 784509
PH :9854348875.

## BIHAR

ARRAH

67. ANJALI ENTERPRISES (5533--), ARRAH - PATNA MAIN BYPASS ROAD, NH-30, AHIRPURWA, OPPOSITE SURYA MANDIR, ARRAH, BIHAR -802232 - 802232
PH :9304910843.

AURANGABAD (BIHAR)

68. K R N AUTOMOBILE (2242--), NEW G.T. ROAD, (NH-2), AURANGABAD-824 101, (BIHAR) - 824101
PH :9304930657.

BEGUSARAI

69. K.B. MOTORS (4768--), NH-31, SINGHAUL, POKHAR, BEGUSARAI-851134, BIHAR - 851134
70. NATIONAL AUTO WORKS (1536--), INDUSTRIAL AREA, BARAUNI, BEGUSARAI-851 122, - 851122
PH :9973381733.

BHAGALPUR

71. RUPRA AUTOMOBILE (1577--), EAST OF AIRPORT, BHAGALPUR-813 210, P.O. BAHADURPUR, (BIHAR) - 813210
PH :9334385521.

BIHAR SHARIF

72. SARVODAY ENGG. & AUTO SERVICE (1549--), INDUSTRIAL ESTATE, RAMCHANDRAPUR, BIHARSHARIF,NALANDA, BIHAR - 803101
PH :9334672919.

CHAPRA

73. PRASAD AUTOMOBILES (1974--), BHAGWAN BAZAR, CHAPRA-841 301, (BIHAR), - 841301

DARBHANGA

74. SINGH MARUTI CARE (2277--), RAJKUMARGANJ, P.O. LALBAGH, DARBHANGA-846 004, (BIHAR), - 846004
PH :9431293796.

GAYA

75. AUTO CARE (3027--), DURGA BARI, HARIDAS CHATTERJEE LANE, NEAR SAINT PAUL SCHOOL, GAYA-823 001 (BIHAR) - 823001
PH :9102060955.

HAJIPUR

76. ALFA AUTO (5454--), PASWAN CHOWK, NH-13, HAJIPUR, DISTRICT - VAISHALI, BIHAR - 844101, - 844101
77. HI-TECH AUTOMOBILES (3123--), GANDHI SETU PATH, N.H.-19, HAJIPUR, VAISHALI (BIHAR) - 844101
PH :9835044502.

KAHALGAON

78. MAHA GAURI ENTERPRISES (5822--), NTPC ROAD,GANGANAGAR ,CHOWRATHIYASTHAN, KAHALGAON-813203, DISTRICT-BHAGALPUR, BIHAR - 813203
PH :9431463558.

MADHEPURA

79. KRISHNA AUTOMOBILES (2639--), SINGHSWAR ROAD, PATHRAHA, MADHEPURA-852 213, (BIHAR) - 852213
PH :9430583338.

MADHUBANI

80. VIDYAPATI AUTOMOBILE (4234--), BHAUARA, GANGASAGAR, MADHUBANI, BIHAR - 847212 - 847212

MUNGER

81. SUNBEAM ENGINEERING WORKS (1533--), 150 BETWAN BAZAR, NEAR KHANKAH, P.O.& DISTT. MUNGER, BIHAR - 811201 - 811201
PH :9931962944.

MUZAFFARPUR

82. DYNAMIC MARUTI SERVICE CENTRE (1163--), HARI SHARAN MARG, AMGOLA, POST OFF RAMNA, MUZAFFARPUR-842 002, - 842002
83. PERFECT MOTORS (3465--), NEAR CHANDNI CHAUK, JHITKAIYA, POST: MIT PS: BRAHAMPURA, MUZAFFARPUR-842 003 (BIHAR) - 842003
PH :9835007407.

PATNA

84. CAR SCANNER (9039--), OPP. BATA, KANKAR BAGH COLONY, PATNA-800 020, - 800020
PH :9431016342.
85. GOOD WRENCH SERVICES (3364--), NH 30, BETWEEN BHARAT PETROLEUM & HP PETROL PUMPS, , 1 KM WEST OF "0" MILE, ASHOCHAK, NANDLAL CHAPRA, PATNA - 800007, - 800007
PH :7277772777.
86. MOHINI AUTOMOBILES (1049--), BEHIND RESERVE BANK OF INDIA, EXHIBITION ROAD, PATNA-800 001, - 800001
87. TIRUPATI AUTO (1956--), ASHIANA MORE, BAILEY ROAD OPPOSITE UNION BANK, RAJABAZAR, PATNA-14 - 800014

PURNEA

88. AUTO INDIA (3026--), SRI DHAM MANDIR, PURNEA CITY, PURNEA 854302 - 854301
PH :9470204501.

SASARAM

89. TRIPTY CAR SERVICE CENTRE (5535--), NEAR RELIANCE PETROL PUMP, G.T. ROAD,NH-2,SASARAM-821115, DISTRICT-SASARAM, BIHAR - 821115
PH :9934792421.

SITAMARHI

90. SITAMARHI AUTO CARE (6050--), INDUSTRIAL AREA,RAJOPATTI, PO.SITAMARHI-843302, DISTRICT-SITAMARHI , BIHAR - 843302
PH :9430012437.

## CHANDIGARH

CHANDIGARH

91. CAR CLINIC (179--), PLOT NO-81, INDUSTRIAL AREA, PHASE-2, CHANDIGARH, - 160002
PH :9417216782.
92. HI-TEK MOTORZ (4743--), PLOT NO. 695, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002
PH :9872567868.
93. RATTAN MOTORS (1155--), SECTOR 23-C, CHANDIGARH-160 023, , - 160023
PH :9814008335.

## CHHATTISGARH

AMBIKAPUR

94. MARUTI AUTO CARE (4839--), KHARSIA NAKA, AMBIKAPUR -497001, DISTRICT-SURGUJA, CHATTISGARH - 497001
PH :9425256087.

JAGDALPUR

95. VISHWAKARMA AUTOMOBILES (4467--), RAJMAHAL PARISHAR, CHAMBER OF COMMERCE ROAD, JAGDALPUR, CHATTISGARH- 494001 - 494001
PH :9753300033.

KORBA

96. AUTO SELF SERVICE (8940--), RAILWAY STATION CANAL ROAD, NEAR SUNALIYA RAILWAY CROSSING, , MURARKA GALI, KORBA, CHATTISGARH -495678 - 495678
PH :9229495000.

MANENDRAGARH

97. SHARMA AUTO CENTRE (5354--), MAIN ROAD - MANENDRAGARH, DISTRICT - KOREA , PIN - 497442, CHHATISGARH - 497442
PH :7771011802.

RAIPUR

98. SHIVAM CAR SERVICES (4774--), BILASPUR ROAD, KHAMTARAI, RAIPUR-492006, CHATTISGARH - 492006
PH :9039090522.

## AND NAGAR HAVELI AND DAMAN A

DAMAN

99. CAR ZONE (4358--), SURVEY NO. 70/3, VARKUND, OPP VEERA DA DHABA, VAPI DAMAN ROAD, DAMAN-396210 - 396210
PH :9824184449.
100. TOP GEAR (5469--), DAMAN-KUNTA ROAD.KUNTA DAMAN-396210, DISTRICT - UNION TERRITORY , GUJARAT, - 396210
PH :9825631264.

## DELHI

DELHI

101. AAPKA KARKHANA (MOTORS) PVT. LTD. (869--), 62/I POSANGIPUR MAIN MARKET, A-3 BLOCK JANAKPURI, NEW DELHI-58, - 110058
PH :9811034869.
102. ANAND MOTORS (4471--), B-27, G.T. KARNAL ROAD, INDUSTRIAL AREA, NEW DELHI-110033 - 110033
PH :9582379699.
103. A-ONE AUTOMOBILES (3362--), 487/35 NATIONAL MARKET, PEERAGARHI, DELHI-110 087, - 110087
PH :9810257472.
104. AUTO ENGRS.SERVICE STN. (8023--), OPP.MODEL TOWN, DERAWAL NAGAR, DELHI-9, - 110009
PH :9811137929.
105. AUTO POINT SERVICE (1267--), 70B RATTAN PARK, OPP. RAMESH NAGAR, NEW DELHI-110 015, - 110015
PH :9958062220.
106. AUTOTECH ENGINEERS (4551--), PLOT NO. 20-24, MATIYALA VILLAGE, SECTOR-3, NEAR DPS DWARKA, NEW DELHI-110075 - 110075
PH :9811608008.
107. BASANT MOTORS (8003--), 78 TOLSTOY LANE, BEHIND SCINDIA HOUSE, NEW DELHI-110 001, - 110001
PH :9811522266.
108. BHAGIRATHI MOTORS (4737--), PLOT NO. 153/543, POOTH KHURD, DELHI-110039, - 110039
PH :9810804556.
109. BHASIN SERVICE STATION (830--), DR.K.S.KRISHNAN ROAD, NEAR PUSA GATE, NEW DELHI-110 012., - 110012
PH :9971977992.
110. BRIGHT MOTORS (P) LTD. (885--), C-263 PEERAGARHI, OUTER RING ROAD, DELHI - 110 087, - 110087
PH :9810203018.
111. DRIVEWELL SERVICE STATION (866--), 1/486,G.C.S. COMPLEX,MAIN G.T. ROAD , DILSHAD GARDEN,NEW DELHI-110095 , DELHI , - 110095
PH :9811020603.
112. ENGINEERS SERVICE STATION (834--), SHRI AUROBINDO MARG, (SAFDARJANG AIRPORT), NEW DELHI-110 003, - 110003
PH :9654262692.
113. EXCEL AUTOMOBILES (3342--), PLOT NO.78, BAGDOLA VILLAGE, SECTOR-8, DWARKA, NEW DELHI - 110077 - 110077
PH :7011765194.
114. EXCLUSIVE AUTOMOBILES PVT. LTD. (3546--), 98 MANGOLPUR KALAN, SECTOR-2 NEAR JAIPUR GOLDEN HOSPITAL, ROHINI, DELHI-110 085 - 110085
PH :9910782127.
115. GLOBE SERVICE STATION (8961--), A-17, B1, EXTENSION MCIE, MATHURA ROAD, BADARPUR, DELHI-110 044, - 110044
PH :9540944009.
116. HUNDRED PERCENT (8967--), LSC, SECTOR-9, OPP. NHAI, DWARKA, NEW DELHI-110075 - 110075
PH :8130301833.
117. IMAGE (2561--), IOC PUMP, NEAR SAMACHAR APT. OPP. KIRTI APT., MAYUR VIHAR PHASE-I EXT., DELHI-110 091 - 110091
PH :9312082213.
118. R S AUTOMOBILES (273--), 111/9 KISHANGARH, OPP. CNG PUMP NEAR SPYM INSTITUTE, ARUNA ASAF ALI ROAD, VASANT KUNJ, NEW DELHI – 110070 - 110070
PH :9540944009.
119. KUMAR AUTOMOBILES (855--), B-281 OKHLA INDUSTRIAL AREA, PHASE-I, NEW DELHI-110 020, - 110020
PH :9810001625.
120. NAVEEN AUTOMOBILES (4934--), 37, PATPARGANJ INDUSTRIAL AREA, NEW DELHI-110092, , - 110092
PH :9911278537.
121. NORTHERN SERVICE STATION (337--), SARAI BASTI, ROAD NO.40, OPP. SHASTRI NAGAR, DELHI-35 - 110035
PH :9213710643.
122. P R G MOTORS (365--), A-99.103CH.TEKCHAND MARKET, GANESH NAGAR - TILAK NAGAR, DELHI-110 018, DELHI - 110018
PH :9711196811.
123. QUTAB SERVICE STATION (8078--), MEHRAULI ROAD, NEW DELHI-110 017, , - 110017
PH :9811021862.
124. RAJINDRA SERVICES P.LTD. (826--), B-55 G.T.KARNAL ROAD, INDUSTRIAL AREA, DELHI-110 033., - 110033
PH :9899580820.
125. ROHAN SERVICES (5444--), PLOT NO:125.VILLAGE POCHANPUR, SECTOR - 23 DWARKA, DISTRICT - DELHI (WEST), DELHI - 110075
PH :9911180827.
126. SATYA SERVICE STATION PVT. LTD. (3625--), L-BLOCK HARI NAGAR, JAIL ROAD, NEW DELHI-64, - 110064
PH :9873461414.
127. SEVEN HILLS AUTOMOBILES PVT LTD. (848--), D-20/1 OKHLA INDUSTRIAL AREA, PHASE II, NEW DELHI-110 020., - 110020
PH :9811037954.
128. SHALIMAR AUTOMOBILES PVT. LTD (871--), C-91/9 WAZIRPUR INDUSTRIAL AREA, ASHOK VIHAR CROSSING, DELHI-110052, DELHI - 110052
PH :9811171489.
129. SRI BALAJI AUTOMOBILE (8038--), KHASRA NO.33, 13/2-12 MAIN BAWANA ROAD, SAMEYPUR (NEAR DELHI COLLEGE OF ENGG.), DELHI - 110085
PH :9811039601.
130. SRI SAI AUTO ENGINEERS (8074--), 487/59 PEERA GARHI, INDUSTRIAL AREA, DELHI, - 110087
PH :9650531612.
131. WIG AUTOMOBILES (8012--), D-3, S.M.A CO-OP. INDL. ESTATE, (OPP. JAHANGIR PURI CHOWK), G.T. KARNAL ROAD, DELHI-110 033 - 110033
PH :9811297607.
132. YASHWANT PLACE SER.STN. (8022--), AFRICA AVENUE, (OPP.CHANAKYA CINEMA), NEW DELHI-21, - 110021
PH :9868255788.

## GOA

BICHOLIM

133. SHREEGURUKRUPA AUTOWORLD (1249--), PLOT NO.76, BICHOLIM INDUSTRIAL ESTATE, BICHOLIM, GOA - 403529 - 403529
PH :9637137129.

CURCHOREM

134. VIPUL AUTOMOBILES (5376--), PLOT NO.7,8,9,KAKODA INSUSTRIAL ESTATE, KAKODA CURCHOREM, DISTRICT - SOUTH GOA, GOA - 403706
PH :9422018746.

KUNDAIM

135. VIKAS ENGINEERING WORKS (4953--), BHOMA, KUNDAIM, GOA-403107, - 403107
PH :9823780335.

MAPUSA

136. SARDESAI AUTOMOBILES (2176--), 194, GAUNSAWADA, , NEAR MILAGRES CHURCH, MAPUSA, GOA-403 507 - 403507
PH :9764448741.

PONDA

137. DHAVLIKAR AUTOMOBILES (2041--), NO.5 TIP TOP MANSION IV, INDIRA NAGAR, DHAVALI, PONDA, GOA-403 401 - 403401
PH :9890669879.

VERNA

138. LUBRICARE SERVICES (261--), 7-D GOULLOY, NH.17 NUVEM, SALCETE, GOA-403 601 - 403601
PH :9822124376.

## GUJARAT

AHMEDABAD

139. AUTOWAY (125--), MANGALYA COMPLEX, NEAR ANJALI CINEMA CROSS ROAD, BATTHA, AHMEDABAD - 380007
PH :9825016888.
140. DAHISON MOTORS (143--), NEAR MANAV MANDIR, DRIVE IN ROAD, AHMEDABAD-380 052, - 380052
PH :9898096242.
141. MEGHDOOT MOTORS (3437--), SURVEY NO. 478/3, NEAR SABARTAL CROSS ROAD, OPPOSITE BHIMJIPURA SWIMMING POOL, NAVA VAJAD, AHMEDABAD, GUJARAT - 380013 - 380013
PH :9825972345.
142. POKAR AUTO REPAIRERS (2479--), NEAR UNION CO. BANK, SAIJPUR BOGHA, NARODA ROAD, AHMEDABAD-382 345 - 382345
PH :9428608515.
143. RAJAN MOTORS (8968--), 60, MADHUVAN PARK SOCIETY, B/H. TRAFFIC CHOWKDI, GHODASAR CHAR RASTA, GHODASAR, AHMEDABAD - 380050 - 380008
PH :9825972345.
144. SPEED AUTO CARE PVT. LTD (5524--), GIDC PLOT NO 12, ODHAV INDUSTRIAL ESTATE, NEAR BRTS GRID STATION, NEXT TORRENT POWER SUB STATION, ODHAV, AHMEDABAD - 380023
PH :9979992779.

AMRELI

145. CAR CARE CENTRE (2734--), PATEL GARAGE, CHAKRAGADH ROAD, AMRELI-365 601, (GUJARAT) - 365601
PH :9825422922.

ANAND

146. PATEL TRACTOR COMPANY (2221--), (SERVICE DIVISION), BEHIND SUNIL CHAMBERS, STATION ROAD, ANAND-388 001 - 388001
PH :9925534494.
147. SHAKTI MOTORS (2226--), OPP. J.K. PARK, NATIONAL HIGHWAY NO. 48, P.O. VAGHASHI-388 320, TA: ANAND DISTT. ANAND - 388320
PH :9825792999.

ANJAR

148. CAR AGE (5542--), PLOT NO.11, MAHATMA NAGAR-1,ANJAR- , GADHPADAR ROAD,NR.MAHAKALESHWAR, MAHADEV MANDIR,ANJAR , GUJARAT - 370110
PH :9427216886.

BARDOLI

149. POOJA MOTORS (361--), NEAR GIDC, SURAT ROAD, BARDOLI-394 601, (GUJARAT) - 394601
PH :9825762621.

BHARUCH

150. NEW MARUTI MOTORS (5156--), 9/16 AKASH GANGA.B/H CNG PUMP, OLD NH -8.BHOLAV , DISTRICT - BHARUCH, GUJARAT - 392001
PH :9898611424.

BHAVNAGAR

151. VIKRAM MOTOR GARAGE (127--), TAKHTESHWAR PLOT, NEAR CHANDRA BHUVAN, BHAVNAGAR - 364 002., - 364002
PH :9427145452.

BHUJ

152. ASHA MOTORS (3629--), NEAR JAY NAGAR BUS STOP, MIRZAPUR HIGHWAY, BHUJ KUTCH, GUJARAT - 370001. - 370001
PH :9825225088.

BILIMORA

153. PATEL AUTOMOBILES (4030--), DANDEKAR COMPOUND, GANDEVI ROAD, BILIMORA, - 396321
PH :9824123875.

BORSAD

154. SPEED AUTO (8953--), I B PETROL PUMP, VASAD-TARAPUR HIGHWAY ROAD, VILLAGE BORSAD, TALUKA BORSAD, DISTRICT ANAND, GUJARAT- 388540 - 388540
PH :9979992779.

CHAND KHEDA

155. BALVINDER AUTOMOBILES (8948--), ZUNDAL CIRCLE, BEHINDDWARIKESH PARTY PLOT,NEAR SHAGUN 108,CHANDKHERA, VILLAGEZUNDAL, DISTRICTGANDHINAGAR, GUJARAT -382421 - 382424
PH :9924016000.

CHIKHLI (GUJ.)

156. INAL MOTORS (3929--), POST MAJIGAM, CHIKLI BILIMORA ROAD, DISTT NAVSARI, - 396521
PH :9099033773.
157. SHREE AMBICA MOTORS (2663--), KUNDI FATAK, NEAR ADARSH NURSERY, N.H.8, CHIKHLI DISTT. VALSAD (GUJARAT)-396 001 - 396001
PH :9825131520.

DAHOD

158. CAR SEVA (2438--), SAINT STEPHEN SCHOOL ROAD, GODHRA ROAD,, DAHOD. PIN-389151, - 389151
PH :9426469122.

DEESA

159. VAKHARIA MOTORS (3970--), PLOT NO. 57-60, SURVEY NO. – 16/1, DEESA – PALANPUR HIGHWAY, DEESA, DISTT. – BANASKANTHA, GUJARAT - 385535
PH :9377728841.

DHARI

160. GURUKRUPA MOTORS (5876--), NR. NARMADESHWAR MAHADEV TEMPLE, DHARI,AMRELI ROAD,DHARI-365640, DISTRICT-AMRELI, GUJARAT - 365640
PH :9825374658.

DHORAJI

161. UNIVERSE AUTO (5837--), SARDAR CHOWK,DHORAJI-360410, DISTRICT- RAJKOT, GUJARAT, - 360410
PH :9727714643.

GANDHI NAGAR

162. LABH MOTORS (4527--), PLOT NO - B - 206+207 ,, GIDC, SECTOR -25,, GANDHINAGAR GUJARAT, - 382024
PH :9825020030.
163. SHREE ARBUDA MOTORS PVT. LTD. (2151--), G.I.D.C. E-19/10/B, NEAR K-7, SECTOR 26, GANDHINAGAR, GUJARAT - 382026 - 382044
PH :9825041331.
164. SHITAL MOTORS (134--), 304 G.I.D.C., SECTOR-28, GANDHINAGAR - 382 028 (GUJARAT)., - 382028
PH :9924127065.

HALOL

165. MAA MOTORS (4767--), GODHRA ROAD, NEAR TELEPHONE EXCHANGE, HALOL, GUJARAT - 389350
PH :9898610212.

HIMMATNAGAR

166. MEHTA SERVICE STATION (135--), NEAR SHANTI GARDEN, RESTAURANT, DIWALI BAUG MOTIPURA, N.H.8, HIMMATNAGAR, GUJARAT-383 001 - 383001
PH :9426555664.

IDAR

167. SUN MOTORS (5175--), IDAR-HIMMATNAGAR HIGHWAY ROAD, AT.KRUSHNAGAR.PO NETRAMLI., TA.IDER DISTRICT SABARKANTA, GUJARAT - 383430
PH :9228286768.

JAMKHAMBHALIA

168. SHRI HARI OM MOTORS (9023--), AT. JAMNAGAR DWARKA HIGHWAY ROAD, OPP. AIR FORCE GATE, JKV NAGAR-8, DHARAMPUR, JAM-KHAMBHALIYA, DIST. DEVBHUMI DWARKA, GUJARAT, PIN – 361305. - 361305
PH :9426955344.

JAMNAGAR

169. LANDMARK AUTOMOBILES (1973--), PLOT NO-4/2, JAMNAGAR- KALVAD ROAD, MAHAPRABHUJI BETHAK ROAD, OPP SUBHASH BRIDGE, JAMNAGAR-361 006, (GUJARAT) - 361006
PH :7600000733.

JETPUR

170. GIRIRAJ MOTORS (3971--), JUNAGADH HIGHWAY, NEAR JALARAM TEMPLE, JETPUR, - 360370
PH :9727154392.

JUNAGADH

171. MARUTI MOTORS (266--), G.I.D.C. - I, RAJKOT HIGHWAY, DOLATPARA, JUNAGADH(GUJARAT) - 362001
PH :9099849888.

KALOL

172. SUNRISE AUTO CENTRE (146--), BLOCK SURVEY NO. 1141, OPP JANPATH PETROLEUM, NEAR SINDBAD HOTEL, AHMEDABAD-MEHSANA HIGHWAY, KALOL, DISTRICT – GANDHINAGAR, GUJARAT - 382721
PH :9879542207.

KAMREJ

173. PATEL MOTOR GARAGE (2764--), PLOT NO 1,2,3, NAVAGAM,, NR. MANISHA HOTEL, OPP. DADABHAGWAN TEMPLE, NAVAGAM, KAMREJ,, DIST: SURAT-394185 - 394185
PH :9825127413.

KAPADVANJ

174. DISHA MOTORS (5960--), MAHAMADPURA,KAPADVANJ-NADIAD ROAD, KAPADVANJ-387620, DISTRICT-KHEDA, GUJARAT - 387620
PH :9825641244.

KESHOD

175. PRASAD MOTORS (3969--), VERAVAL HIGHWAY, KESHOD, , - 362220
PH :9825024488.

LIMDI

176. PARTH AUTOMOBILES (4171--), OPP.SWAMINARAYAN TEMPLE, NH NO-8A, LIMBDI DIST, SURENDERNAGAR , PIN-363421 - 363421
PH :9426714510.

LUNAWADA

177. N.J. MOTORS (4370--), R SURVEY NO 358, MODASA HIGHWAY, MOTA SONELA, LUNAWADA, DIST. MAHISAGAR 389230 - 389230
PH :9924252700.

MEHSANA

178. SANSKAR MOTORS (5468--), PALAVASANA -BECHARAJI ROAD, , NR.ONGC FIRE STATION ,MEHSANA-384002 , DISTRICT-MEHSANA, GUJARAT - 384002
PH :9825106359.
179. SHUBH AUTO SERVICES (3367--), NEAR AGRO PETROL PUMP, OLD RTO, RAMOSNA JAKAT NAKA, MEHSANA (GUJARAT) - 384001
PH :9825322460.

MORBI

180. ARUN MOTORS SERVICE (2071--), SANALA BYE PASS, NEAR G.P. GINING MILLS, MORBI -363641, GUJARAT - 363641
PH :9825222825.

NADIAD

181. SHIVAM MOTORS (4430--), PLOT NO 35/1, QUALITY SEEDS COMPOUND, NEAR BHUTIA BUNGLOW, DABHAM, NADIAD, DISTRICT KHEDA, GUJARAT- 387320 - 387320
PH :9825021960.

NAKHATRANA

182. ASHA MOTORS (4340--), NANA ANGLADESH, NAKHATRANA HIGHWAY ROAD, NAKHATRANA, KUTCH - 370615
PH :9727499383.

PETLAD

183. SIDDHI MOTORS (4166--), OPP. GEB, NEAR RAILWAY CROSSING, NADIAD-KHAMBHAT HIGHWAY, PETLAD, ANAND, PIN-388450 - 388450
PH :7359465067.

RAJKOT

184. KHODIYAR MOTORS (356--), DHEBAR ROAD (SOUTH), ATIKA INDUSTRIAL ESTATE, RAJKOT-360 001, - 360001
PH :9426202885.
185. UNIVERSE AUTO (5544--), C/O DELHI GUJARAT TRANSPORT,NR. NAVAGAM, OCTROI POINT,AHMEDABAD HIGHWAY, RAJKOT-380002, DISTIRCT - RAJKOT , GUJARAT - 380002
PH :9879616643.

RAJPIPLA

186. R. N. MOTORS (5255--), 22-GIDC NEAR PETROL PUMP , RAJPIPLA, DISTRICT - NARMADA , GUJARAT - 393145
PH :9925325300.

SAVARKUNDLA

187. SHYAM MOTORS (8925--), OPP. ESSAR PETROL PUMP, AMRELI ROAD,SAVARKUNDLA-364515, DISTRICT-AMRELI, GUJARAT - 364515
PH :9427742134.

SIDDHPUR

188. GOOD LUCK MOTORS (5341--), 2.UMIYA COMPLEX .NEAR GURUKUL , HIGH SCHOOL SIDDHPUR , DISTRICT - PATAN, GUJARAT - 384151
PH :9898428989.

SIHOR

189. MOMAI MOTORS (6032--), NR. RAJ MOMAI PETROLIUM , BHAVNAGAR-RAJKOT HIGHWAY,SIHOR-364240, DISTRICT-BHAVNAGAR, GUJARAT - 364240
PH :9510201800.

SURAT

190. EMPEROR CAR TECH (1748--), F.PLOT NO.124 NEAR RELIANCE COMPLEX, BESIDE SHEETAL MARBLE, SURAT-DUMAS ROAD PIPLOD, SURAT-395 007 - 395007
PH :9825033396.
191. J.K.MOTORS (5158--), TP-16, FP-8, GAURAV PATH ROAD, PAL, SURAT - 394510, GUJARAT - 394510
PH :9909920902.
192. NILESH MOTORS (5347--), AMBER SHOPPING CENTRE.OPP.SADHNA CHAMBERS, VARACHHA ROAD , DISTRICT - SURAT , GUJARAT - 395004
PH :9377762660.
193. PATEL MOTORS (3060--), 64 BAJRANG NAGAR, NEAR OCTROI CHECK POST, NANA VARCHA, SURAT-395 006 - 395006
PH :9909149498.
194. J.K.MOTORS (--), TP-16, FP-8, GAURAV PATH ROAD, PAL, SURAT - 394510, GUJARAT - 394510
PH :9909920902.

TALALA

195. RUBY MOTORS (5942--), TALALA ROAD , RAMRECHI(GIR), DIST - GIR, SOMNATH - 362150, , - 362150
PH :9824061044.

UMBERGAON

196. KARAN AUTOMOBILES (2571--), OPP. DAMRUWADI, UMBERGAON SANJAN ROAD, UMBERGAON, DIST. - VALSAD, GUJARAT - 396170 - 396170
PH :9824336583.

UNJHA

197. AMBIKA MOTORS (3932--), SADGURU COMPLEX, AHMEDABAD PALAM PUR HIGHWAY ROAD, UNJHA, MEHSANA-384170 - 384170
PH :9824517382.

VADALI

198. VRAJ MOTORS (4560--), UMIYA PARK, HIGHWAY ROAD, VADALI TA, VADALI, SABARKANTA (GUJARAT) - 383235
PH :9427364109.

VADGAM

199. CHAUDHARY & CHAUDHARY MOTORS (5651--), OPP.RELIANCE PETROL PUMP, PALAMPUR ROAD - VADGAM, DISTRICT - BANASKANTHA, GUJARAT - 385410
PH :9664590698.

VADODARA

200. CAR CARE (2229--), NEAR GANDHI OIL MILL, GORWA INDUSTRIAL ESTATE, BARODA-390 016, - 390016
PH :9825044610.
201. CAR CLINIC (4640--), PLOT NO. B-7 (PART), ANUR ESTATE, NEAR DABHOI ROAD, JAKATNAKA, VADODARA (GUJARAT) - 390004
PH :9925003558.
202. DREAM MACHINES (2933--), 19 MULJINAGAR COLONY, OPP. GHELANI PETROL PUMP, NIZAMPURA, VADODARA-390 002 - 390005
PH :7575809940.
203. GENERAL MOTOR REPAIRING WORKS (2529--), NEAR LOK SATTA PRESS, NAGARWADA, VADODARA-390 001, - 390001
PH :9825026106.
204. HONEST AUTO STRUCTURE WORKS (279--), 9, VINODBAUG BEHIND HOTEL SANMAN, JETPUR ROAD, VADODARA, PIN : 390005, - 390002
PH :9824014046.
205. MAYUR SERVICE STATION (2224--), NEAR POLICE STATION, PRATAPNAGAR ROAD, BARODA-390 004, - 390001
PH :9879453031.
206. CAR CARE (--), NEAR GANDHI OIL MILL, GORWA INDUSTRIAL ESTATE, BARODA-390 016, - 390016
PH :9825044610.

VALIA

207. HARI OM AUTO CARE (5750--), NEAR MAZDA HOTEL - VALIA, ANKALESHWAR ROAD-VALIA, DISTRICT-BHARUCH, GUJRAT - 393135
PH :9427336094.

VALSAD

208. HONEST AUTO GARAGE (2220--), SUGHAR FALIA, BEHIND MOTA GHANCHIWAD, VALSAD-396 001 (GUJARAT), - 396001
PH :9426110767.

VANTHLI

209. INFINITY MOTORS (5963--), RAVI RATAN' VADLA FATAK , OPP.HP PETROL PUMP ,POST VADLA,TAL VANTHLI-362205, DISTRICT-JUNAGADH, GUJARAT - 362001
PH :9898990120.

VIRAMGAM

210. KRISHNA MOTOR GARAGE (4038--), OUTSIDE BHARWADI GATE, NEAR BHARAT PETROL PUMP, VIRAMGAM, - 382150
PH :9426415274.

VYARA

211. PARTH MOTORS (8928--), D-1.CITY LIGHT TOWER KAKRAPAR, BYPASS ROAD-VYARA, DISTRICT-SURAT, GUJARAT - 394650
PH :9898292020.

## HARYANA

AMBALA

212. BASSAN MOTORS (4964--), 99 TH MALL, AMBALA CATT - 133001, HARYANA, - 133001
PH :9466000000.
213. GURU NANAK MOTORS (2036--), POLICE LINES CHOWK, AMBALA CITY, , - 134003
PH :8708357725.
214. HIRA MOTORS (2740--), AMBALA CHANDIGARH NATIONAL HIGHWAY, BALDEV NAGAR, AMBALA CITY - 134002
PH :9255285212.
215. RAVI MOTORS (8988--), 125 STAFF ROAD, HOTEL SAVOY, AMBALA CANTT-126 102, - 133001
PH :9315110209.

BADHARA

216. S.S MOTORS (5735--), 3 KM, SATNALI ROAD, BADHRA – 127308, DISTRICT – CHARKI DADRI, HARYANA - 127308
PH :9255141288.

BAHADURGARH

217. G L AUTOMOBILE (5263--), MAIN DELHI ROHTAK ROAD, NEAR LAST METRO PILLAR NO. 912, BAHADURGARH, DISTRICT- JHAJJAR, HARYANA - 124507 - 124507
PH :9416303473.

BARARA

218. LUXMI AUTOZONE (5334--), VPO BARARA , DISTRICT - AMBALA, HARYANA, - 133201
PH :8222024046.

BARWALA (HARYANA)

219. FAQIR CHAND QUALITY FUELS (5435--), KILLA NO.20L.H.S. NH-65., CHANDIGARH ROAD - BARWALA, DISTRICT - HISAR, HARYANA - 125121
PH :9991000764.

BHIWANI

220. VEER MOTOR WORKSHOP (8958--), 22,23,24 AUTO MARKET, LOHARU ROAD, BHIWANI, HARYANA-127021 - 127021
PH :9416057857.

BHUNA

221. MITTAL AUTOMOBILES (5748--), NEAR BUS STAND ,JAKHAL ROAD - BHUNA, PIN-125111, DISTRICT-FATEHABAD, HARYANA - 125111
PH :9813207221.

FARIDABAD

222. BALAJI SERVICE STATION (4956--), SECTOR 23-24, MAIN ROAD, NEAR BALAJI DHARM KATA, FARIDABAD-121004, HARYANA - 121001
223. INSUH AUTO (377--), 13/3 MAIN MATHURA ROAD, NEAR NHPC CHOWK, FARIDABAD, HARYANA - 121003 - 121003
224. KHURANA AUTOMOBILES (2863--), 3C/60 B.P. (OPPOSITE ESI HOSPITAL), N.I.T., FARIDABAD, - 121001
225. PERFECT AUTOZONE (P). LTD. (5667--), PLOT NO 9, ADJACENT TO UNION BANK OF INDIA, ANKHIR, OPP SEC 21-D, MAIN BADHKAL ROAD, DISTT FARIDABAD, HARYANA - 121001 - 121001
226. SARASWATI AUTOMOBILES (4465--), 44 B.P, NEELAM BATA ROAD, N.I.T, FARIDABAD - 121001

FARRUKHNAGAR

227. M R MOTORS (5946--), GURGAON-JHAJJAR ROAD,OPP. ANAAZ MANDI, FARRUKHNAGAR-123506, DISTRICT-GURGAON, HARYANA - 122506
PH :9810831200.

FATEHABAD (HARYANA)

228. DHINGRA AUTOMOBILES (1856--), G.T. ROAD, FATEHABAD, (HARYANA), - 125050
PH :9896012906.
229. MOTOR CRAFT (3064--), OPPOSITE M M COLLEGE, SIRSA ROAD, FATEHABAD, 125050 - 125050
PH :9254080200.

GANAUR

230. SITA AUTOMOBILES (4260--), 347, WARD NO. 10, BST ROAD, GANAUR, DISTT- SONEPAT - 131101
PH :9992022047.

GANGWA

231. PANCHMUKHI AUTOMOBILES (5968--), HISSAR RAJGARH ROAD,, GANGWA-125001, DISTRICT-HISSAR, HARYANA - 125001
PH :9728100029.

GOHANA

232. KRISHNA MOTORS (4132--), ROHTAK ROAD, GOHANA, , - 131301
PH :9017062999.

GURGAON

233. A & A ENTERPRISES (4639--), 396, PHASE-IV, UDYOG VIHAR, GURGAON (HARYANA) - 122015
PH :8851819511.
234. GANGA MOTORS (363--), SHIVPURI, GURGAON-122 001 - 122001
235. KUMAR AUTOMOBILES (4848--), KILLA NO 12/2, NEAR BMW TRAINING CENTER, SPR ROAD, GURUGRAM, HARYANA - 122002
236. MANISH AUTOMOBILES (4777--), GHATA ROAD, WAZIRABAD, NEAR SECTOR-56, GURGAON-122001, HARYANA - 122001
237. QUTAB AUTO PVT. LTD. (3668--), KHEWAT/ KHATA NO 714/909, VILLAGE JHARSA, UNITECH CYBER PARK ROAD, SECTOR 39, GURGAON, HARYANA 122001 - 122001
PH :9811687333.
238. RAJASTHAN AUTO WORKS (4760--), LT. ATUL KARATIA MARG, NEAR PETROL PUMP, AKASHI FILLING STATION, AMAN PURA, SECTOR-5 ROAD, GURGAON-122001 (HARYANA) - 122001
PH :9910070220.
239. S G MOTORS (5756--), PLOT NO.494,SECTOR 37,, PACE CITY II,VUDYOG VIHAR VI - GURGAON, DISTRICT-GURGAON, HARYANA - 122001
PH :9711770092.
240. M R MOTORS (8946--), VIJAY VIHAR,MAIN SILOKHRA ROAD,SEC-30, GURGAON- 122002 , HARYANA , - 122001
PH :9992111244.
241. SOMESH AUTOMOBILES (455--), PLOT NO 249/2/8, BLOCK A, ROAD NO A-56, DLF PHASE 1, GURGAON 122002 - 122002
PH :9650690000.
242. TOP GEAR AUTOMOTIVE ENGINEERS (4464--), G-34, REZANG LA ROAD, ASHOK VIHAR PHASE 2, GURGAON 122006 - 122001
243. SOMESH AUTOMOBILES (--), PLOT NO 249/2/8, BLOCK A, ROAD NO A-56, DLF PHASE 1, GURGAON 122002 - 122002
PH :9650690000.

HANSI

244. VIKAS AUTOMOBILES (4744--), SHANTI NIKETAN, OPP. JIND BYE PASS, G.T. ROAD, HANSI, DISTRICT-HISSAR (HARYANA) - 125033
PH :9466248037.

HISSAR

245. SAI AUTOMOBILES (5267--), TOSHAM ROAD, NEAR AAKASH INSTITUTE, SECTOR-13, HISSAR, HARYANA, - 125001
PH :7988238034.
246. SALASAR AUTO (4735--), OPP. VIDYUT NAGAR GATE NO. 2, DELHI ROAD, HISSAR-125001, HARYANA - 125001
PH :9355486716.

HODAL

247. VED MOTORS (2247--), HIGHWAY ROAD, NEAR RAILWAY STATION CHOWK, HODAL-121 106, (FARIDABAD) - 121106
PH :7988978936.

INDRI

248. ASHOKA MOTORS (6041--), OPP. PARTAP FILLING STATION,LADWA ROAD,, TEHSIL-INDRI,DISTRICT-KARNAL, HARYANA, - 132041
PH :8813000316.

ISMAILABAD

249. VINAYAK MOTORS (9024--), OPP. MAHARAJA PALACE , AMBALA HISSAR ROAD , ISMAILABAD-136129 , HARYANA - 136129
PH :9034820190.

ISRANA

250. SHIV DARSHAN AUTOMOBILES (6051--), ISRANA PANIPAT ROAD, NR. NC COLLEGE,ISRANA-132103, DISTRICT-PANIPAT , HARYANA - 132107
PH :9911366230.

JHAJJAR

251. VASUNDHRA MOTORS (1467--), REWARI ROAD, JHAJJAR-124 103, (HARYANA), - 124103
PH :9812012180.

JIND

252. MOHIT MOTORS (1574--), SAFIDON GATE, JIND-126 102, , - 126102
PH :9355129844.

KAITHAL

253. HIND AUTOMOBILES (1858--), AMBALA ROAD, KAITHAL, , - 136027
PH :7015806781.

KANINA

254. SHREE KRISHNA MOTORS (5953--), BHOOP SINGH MARKET,NEAR PETROL PUMP, MAHINDERGARH ROAD,KANINA-123027, DISTRICT-MAHINDERGARH, HARYANA - 123027
PH :9467641678.

KARNAL

255. RUBY MOTORS (4734--), 28/3 HSIDC, NEAR NAMASTEY CHOWK INDUSTRIAL AREA, KARNAL-132001, HARYANA - 132001
PH :9896345633.

KHARKHODA

256. PRANAV MOTORS (5771--), SAMPLA ROAD,KHARKAUDA-131402, DISTRICT-SONEPAT, HARYANA, - 131402
PH :9896145161.

KUNDLI

257. SHIV SHAKTI AUTOMOBILES (4628--), SECTOR 53, HSIIDC, JANTI ROAD, NEAR K.H.I COLD STORAGE, KUNDLI, SONEPAT, HARYANA - 131028 - 131001
PH :9811047480.

KURUKSHETRA

258. KARTAR MOTORS (1645--), RED ROAD, KURUKSHETRA-132 118, , - 136118
PH :9896245900.
259. KARTAR MOTORS (5349--), PLOT O 65-66, SECTOR -2, HUDA INDUSTRIAL, AREA KURUKSHETRA - 136118
PH :9896245900.
260. SAINI MOTORS (2131--), G.T. ROAD, UMRI CHOWK, KURUKSHETRA, (HARYANA) - 136118
PH :9896183931.

LOHARU

261. BHAWNA MOTORS (6028--), BHIWANI ROAD, LOHARU-127201, DISTRICT-BHIWANI , HARYANA - 127201
PH :8901276555.

MAHENDERGARH

262. SHREE SHYAM MOTORS (8960--), NEAR I.O.C PETROL PUMP, MAHENDERGARH-123029, DISTRICT-MAHENDERGARH, (HARYANA) - 123028

MANDI ADAMPUR

263. MITTAL AUTO AGENCIES (2966--), 113-15 AUTO MARKET, MANDI ADAMPUR, (HARYANA), - 125052
PH :9729173300.

MANESAR

264. MAITRI SERVICE STATION (2378--), N.H.8, DELHI-JAIPUR ROAD, MANESAR (GURGAON), - 122001
PH :9818001128.

NILOKHERI

265. SAHIL MOTORS (8974--), NEW NEHSIL ROAD.NILOKHERI, DISTRICT KARNAL , NILOKHERI-132117, HARYANA - 132117
PH :9812510190.

PALWAL

266. D.K. & R.K. MOTORS (1159--), NEAR BUS STAND, , NH-2 PALWAL, PALWAL, - 121102
267. SHEELA MOTORS (5141--), OPP MUNICIPAL COUNCIL OFFICE, OLD G T ROAD, PALWAL, DISTRICT - FARIDABAD, HARYANA - 121102

PANCHKULA

268. PANCHKULA AUTO SERVICES (1949--), PLOT NO.300, PHASE-II INDUSTRIAL AREA, PANCHKULA-134 109, (HARYANA) - 134109
PH :9872441546.

PANIPAT

269. PREM MOTORS (2266--), PLOT NO.134, SECTOR 25 INDUSTRIAL AREA, PANIPAT, - 132103
PH :9896306380.

PATAUDI

270. SHUBHAM AUTOMOBILES (4641--), REWARI ROAD, PATAUDI, DISTT. GURGAON, - 122413

PEHOWA

271. AMAR AUTOMOBILES (2270--), OPP. DAV COLLEGE, AMBALA ROAD, PEHOWA DISTT. KURUKSHETRA, (HARYANA) - 136128
PH :9896002974.

RADAUR

272. SHRI SHIVAM AUTOMOBILES (5852--), S.K. ROAD,OPP. ESSAR PETROL PUMP, RADAUR-135133, DISTRICT-YAMUNANAGAR, HARYANA - 135133
PH :9034384003.

REWARI

273. GAUTAM MOTORS (1837--), NARNAUL ROAD, REWARI -123401 (HARYANA)., , - 123401
PH :9416064894.

274. PULYANI MOTORS (8994--), OPPOSITE POLICE LINE, DELHI ROAD, REWARI - 123401
PH :9813433433.

275. SHIVAM SERVICES (1466--), OPPOSITE B.D.O. BLOCK OFFICE, GARHI BOLNI ROAD, REWARI, HARYANA - 123401 - 123401

SADHAURA

276. SHREE GANESH MOTORS (5959--), NEAR INDIAN OIL PETROL PUMP, KALA AMB ROAD,SADHAURA-133204, DISTRICT-YAMUNANAGAR, HARYANA - 133204
PH :9813376260.

SHAHABAD

277. MAHALAXMI MOTORS (354--), LADWA ROAD, SHAHABAD MARKANDA-136 135, (HARYANA), - 136135
PH :9812036433.

SIWANI

278. GANESH AUTOMOBILES (5931--), NEAR RELIANCE PETROL PUMP,HISAR ROAD,SIWANI, DISTRICT-BHIWANI, HARYANA - 127046 - 127046
PH :8607113000.

SOHNA

279. SHRI SHYAM MOTORS (8978--), OPP.RAGHUNANDAN PETROL PUMP, NEAR GD GOENKA INTERNATIONAL SCHOOL, SOHNA-122103, HARYANA - 122103
PH :9416455660.

SONIPAT

280. NEW HIGHWAY MOTORS (8923--), MAIN DELHI ROAD, SONEPAT, HARYANA, - 131001
PH :9416672009.

TAURU

281. R M MOTORS (5842--), SOHNA ROAD, WARD NO. - 4, OPPOSITE UCO BANK, TAURU, DISTRICT - NUH, HARYANA - 122105 - 122105
PH :9812378663.

TOSHAM

282. MOHINI AUTOMOBILES (6026--), OPP.NEW ANAJ MANDI , NEAR MINI BANK,TOSHAM-127040 , DISTRICT-BHIWANI, HARYANA - 127040

UKLANA

283. SHREE GANESH MOTORS (5747--), PLOT NO#29,UKLANA MANDI, DISTRICT-HISSAR, PIN-125113, HARYANA - 125713
PH :8168399836.

## HIMACHAL PRADESH

ALAMPUR

284. SUBH AUTOMOBILES (5964--), SH-39,ALAMPUR-176110, DISTRICT-KANGRA, HIMACHAL PRADESH, - 176082
PH :9816675551.

AMB

285. SHUBHAM MOTORS (5933--), NEAR PINDI ASHRAM,HAMIRPUR ROAD, AMB-177203, DISTRICT-UNA, HIMACHAL PRADESH - 177203
PH :9418114176.

ANNI

286. SARAJ AUTO WORLD (6044--), VERMA BUILDING,NR. NAGAN HARIPUR , TEHSIL,ANNI-172026 , DISTRICT-KULLU , HIMACHAL PRADESH - 172026

BADDI

287. LAJ MOTORS (5541--), 436.MAUJA SURAJ.MAJRA LABANA, BADDI, DISTRICT - SOLAN, HIMACHAL PRADESH - 173205
PH :9816039189.

BANGANA

288. TRISHLA AUTOMOBILES (5869--), VILLAGE BPO & TEHSIL BANGANA, BANGANA-174307, DISTRICT-UNA, HIMACHAL PRADESH - 174307
PH :9817645350.

BANOI

289. BABA SERVICE STATION (4634--), VILL BANOI, TEH SHAHPUR P.O., BANOI, DIST KANGRA (HIMACHAL PRADESH) - 176209
PH :9418051290.

BARMANA

290. AVER AUTO (9038--), VILLAGE LAGHAT,TEHSIL SADAR, PO BARMANA-174013, HIMACHAL PRADESH, - 174013
PH :9418064130.

BHAMBLA

291. DHIMAN MOTORS (3837--), PLOT NO. 42,, INDUSTRIAL AREA, BHAMBLA, JAHU, DISTT MANDI - 175004
PH :9816227437.

BHUNTAR

292. HANDA MOTORS (4262--), HANDA COMPLEX, NEAR AIRPORT, BHUNTAR, KULLU (H.P) - 175125
PH :9816007003.

BILASPUR (H.P)

293. BHASKAR AUTO SPARE & SERVICE (1730--), 8-B ROURA SECTOR II, (NEAR DURGA MANDIR), BILASPUR-174 001 (H.P.), - 174001
PH :9816436001.

CHAMBA

294. AUTOZONE (5247--), PATHANKOT RAOD .PAREL , SULTANPUR - CHAMBA , DISTRICT - CHAMBA , HIMACHAL PRADESH - 176310
PH :9418214848.

295. KAILASH SERVICE STATION (3527--), MOHALLA TATWANI, NEAR NEW BUS STAND, CHAMBA, HIMACHAL PRADESH - 176310
PH :9896679445.

DARLAGHAT

296. CHANDEL SERVICE STATION (5233--), DARLAGHAT , DISTRICT-SOLAN, HIMACHAL PRADESH, - 171102
PH :9816039865.

DHARAMSHALA

297. HIM AUTO STATION (8964--), VPO DARI, DHARAMSHALA, (H.P.), - 176057
PH :9418029655.

298. SHIV SHAKTI CAR CARE (1277--), NEAR RAINBOW SCHOOL, DARI ROAD, DHARAMSHALA-176 057, - 176057
PH :9318752074.

GHUMARWIN

299. BHASKAR AUTO SPARE & SERVICE (5147--), VILLAGE KULARU, GHUMARWIN, DISTRICT - BILASPUR, HIMACHAL PRADESH - 174021
PH :9816090504.

GUMMA

300. CHAUHAN ENTERPRISES (5660--), VILLAGE GUMMA,TEHSIL KOTKHAI, GUMMA, DISTRICT - SHIMLA, HIMACHAL PRADESH - 171202
PH :9218690917.

JAWALA JI

301. SRI PARBHAT MOTORS (8965--), VPO & TEHSIL, JAWALI-(BHANEI), DISTRICT - KANGRA, (HIMACHAL PRADESH), - 176023
PH :9805511205.

JAWALAMUKHI

302. LAKSHMI AUTO SPARE & SERVICE CENTRE (4630--), NEAR GANJU BAGH, DEHRA ROAD, JWALAMUKHI, TEH. DEHRA, DIST. KANGRA (HIMACHAL PRADESH) - 176031
PH :9418091048.

KARSOG

303. DEEPAK AUTOMOBILES (4057--), MR. DEEPAK SHARMA, C/O SHARMA GENERAL STORE, KARSOG, MAIN BAZAR, DIST MANDI, HIMACHAL PRADESH - 175011

KAZA

304. SPITI MOTORS (6033--), VILL. & PO,KAZA-172114, DISTRICT-LAHAUL & SPITI, HIMACHAL PRADESH, - 172114
PH :9418758974.

KEYLONG

305. YOLAX MOTORS (3830--), KEYLONG, DISTT. LAHAUL & SPITI, , - 175133
PH :7651031580.

KULLU

306. PURI BROTHER'S (4242--), I.O.C DEALER, DHALPUR, KULU, H.P - 175101
PH :9418395358.

KUMARHATTI

307. SOLAN AUTOMOBILES PVT. LTD. (6420--), DAGHOTA(SOLAN), P.O.KUMAR HATTI-173 229 (H.P)., , - 173229
PH :9816030330.

KUMARSAIN

308. RED LINE (5965--), VILL. KEPU,PO KIRTI SAINZ, TEHSIL,KUMARSAIN-172030, DISTRICT-SHIMLA, HIMACHAL PRADESH - 172030
PH :9816027007.

MANDI

309. BHAGWATI AUTOMOBILES (269--), PLOT NO. 3, INDUSTRIAL AREA PHASE 3, SAULI KHAD, MANDI, HIMACHAL PRADESH - 175001
PH :9418461897.

MARANDA

310. MODERN SERVICE CENTRE (1175--), PUSHP COMPLEX, MARANDA-176 102, (H.P.), - 176102
PH :7018243011.

MUBARAKPUR

311. SHIV SHAKTI AUTOMOBILES (1732--), HOSHIARPUR ROAD, MUBARKPUR, DISTT. UNA, (H.P.) - 177202
PH :9418328361.

NADAUN

312. CAR CARE ENGINEERS (4423--), HOSHIARPUR ROAD, MANPUL, NADAUN DISTT, HAMIRPUR, HP - 177033
PH :9857799080.

NAHAN

313. AGGARWAL MOTORS (3334--), GUNNU GHAT, NEAR TELECOM COLONY, NAHAN-173 001, - 173001
PH :9418023558.

NALAGARH

314. KRISHNA MOTOR (5275--), PEERTHAN.PO NALAGARH, DISTRICT - SOLAN, HIMACHAL PRADESH, - 174101
PH :9418094064.

PALAMPUR

315. SANGRAI AUTO SERVICE (6430--), OPP. SITLA MATA MANDIR, PALAMPUR-176 061, DISTT. KANGRA (H.P.), - 176061
PH :9418085915.
316. SANTOSHI AUTOMOBILES (4776--), VILLAGE & P.O, BHAWARNA, TEHSIL, PALAMPUR, DISTRICT- KANGRA (HIMACHAL PRADESH) - 176083
PH :9418184367.

PAONTA SAHIB

317. SUMEET MOTORS (1441--), SHAMSHERPUR, PAONTA SAHIB-173 025, (H.P.), - 173025
PH :9418018329.

PAPROLA

318. ABROL AUTOMOBILES (3470--), VPO PAPROLA, TEHSIL BAIJNATH, DISTT KANGRA, HIMACHAL PRADESH -176115 - 176115
PH :9418066917.

PARWANOO

319. DIVYA SALES (6428--), DIVYA BHAWAN VILL. KAMLI, SECTOR-1, PARWANOO, - 173220
PH :9816032002.

PATLI KUHAL

320. JAMDAGNI MOTORS (760--), VILLAGE PATLI KUHAL, P.O.KATRAIN, DISTT.KULLU (H.P.), - 175129
PH :9816040247.

RAJGARH (H.P)

321. RAJGARH AUTOMOBILES (5458--), PO RAJGARH.TEH RAJGARH, DISTRICT - SIRMOUR, HIMACHAL PRADESH, - 173101
PH :9418021344.

RAMPUR BUSHAHR

322. HIGHWAY SERVICE STATION (2649--), CHUHA BAG, RAMPUR BUSHAHR, (H.P.) - 172001 - 172001
PH :9805831627.
323. KRISHNA AUTOMOBILE (4438--), VILL CHUHA BAG, RAMPUR BUSHAHR-172001, , - 172001
PH :9418036091.

RECONG PEO

324. KRISH AUTO (4134--), RECONG PEO, TEHSIL KALPA, DISTT KINNAUR, HIMACHAL PRADESH - 172707 - 172107
PH :9816579999.

ROHRU

325. KAMTA SERVICE STATION (2338--), ROHRU, DISTT. SHIMLA, (H,P.), - 171207
PH :9418040106.

SALASHI

326. THAKUR AUTOMOBILES (3838--), JALANDHAR MANALI NATIONAL HIGHWAY (NH70), NEAR DAV SCHOOL, VILLAGE SALASHI, DISTT HAMIRPUR - 177001
PH :9418490904.

SARKAGHAT

327. SHAKUNTLA MOTORS (5755--), MANDI ROAD-SARKAGHAT, DISTRICT-MANDI, PIN-175024, HIMACHAL PRADESH - 175024
PH :9817818822.

SHIMLA

328. GURRAJ AUTO SERVICE (757--), NEAR CPRI ROAD, BEMLOI, SHIMLA-171 001, - 171001
PH :9816233030.
329. MOTO WORLD (6433--), NAVBAHAR, SHIMLA-171 002, , - 171002
PH :9459050769.

SOLAN

330. SOLAN SERVICE CENTRE (764--), BYE PASS, NEAR PWD OFFICE, SOLAN-173 212, - 173212
PH :9816022640.

SUBATHU

331. SHYAM AUTOMOBILES (4558--), NEAR SHANTI FILLING STATION, V.P.O RADYANA, SUBATHU, DIST SOLAN (HIMACHAL PRADESH) - 173206
PH :9418061757.

SUNDERNAGAR

332. V.M. SERVICE STATION (3777--), CHAMUKHA, P O HARABAGH, NH-21, SUNDER NAGAR-174 402 (H.P.) - 175019
PH :9418064130.

THEOG

333. JOSHI MOTORS (2778--), SHALLI BAZAR, THEOG, DIST. SHIMLA, (H.P.) - 171201
PH :9459100051.

UNA (H.P)

334. RUDRA MOTORS (3925--), NEAR OLD HOSPITAL CHOWK, NH-22, UNA - 174303 (H.P.), - 174303
PH :8628803717.
335. TRINITY AUTO FAST ENGINEERS (1755--), JALGRAN TABBA, NANGAL ROAD, UNA, HIMACHAL PRADESH - 174303 - 174303
PH :9816628020.

## JAMMU AND KASHMIR

AWANTIPORA

336. KESAR AUTOMOBILES (5938--), KHAR ,MORH,NATIONAL HIGHWAY 1A, AWANTIPORA-192122, DISTRICT-PULWAMA, JAMMU & KASHMIR - 192122
PH :7780873161.

BARAMULA

337. MARUTI MASTERS (4369--), KANISPORA, BARAMULA, KASHMIR, - 193101
PH :9906864748.

CHADOORA

338. VEHICLE MASTERS (4661--), MAIN ROAD, CHADOORA-190001, DIST. BUDGAM, JAMMU & KASHMIR - 190001
PH :9419441217.

JAMMU

339. CARE POINT AUTOMOBILES (4652--), OPP. BSF CAMPUS ROAD, AKHNOOR ROAD, JAMMU-180002, - 180002
PH :9419283151.
340. CHECK N CARE AUTOMOBILE CENTRE (1773--), OPP. GURUDWARA SRI SINGH SABHA, NARWAL BYE PASS ROAD, JAMMU, - 180001
PH :9419190796.
341. KWIK FIT (2343--), AMBPHALLA, B.C. ROAD, JAMMU-180 001, - 180001
PH :9419104400.
342. MAGNA GARAGES (441--), NARWAL CHOWK, TRANSPORT NAGAR, JAMMU-180 006 - 180006
PH :9796800000.
343. NATIONAL MOTORS (5074--), OPP APNA VIHAR.B.P. PETROL PUMP , NH-1A.KUNJWANI JAMMU, DISTRICT - JAMMU, JAMMU & KASHMIR - 180010
PH :9419322222.

KATHUA

344. KATHUA MOTORS (3323--), HATLI MORE, KATHUA-184 102, (J&K), - 184102
PH :9419150694.

KATRA

345. VIDYA AUTOMOBILES (1165--), JAMMU ROAD, KATRA, (J&K) - 182320
PH :9596676576.

KISHTWAR

346. MINTOO MOTORS (4133--), NEAR H.H.P.C SCHOOL, KISHTWAR, DISTT DODA (J & K), - 182204
PH :9622055250.

MATTAN

347. DANISH AUTOMOBILES (5478--), PAHAL GAM ROAD, STATE HIGHWAY - MATTAN, DISTRICT - ANANTNAG, JAMMU & KASHMIR - 192125
PH :9419041724.

PHINTER

348. BADYAL AUTOMOBILES (4149--), C/O BADYAL AUTOMOBILE, PHINTER, TEH BILLAWAR, DISTT KATHUA PHINTER (J & K) - 184203
PH :9419691916.

PULWAMA

349. KASHMIR AUTOMOBILES (8969--), NEAR FRUIT MANDI, PRICHOO PULWAMA, KASHMIR - 192301
PH :9622742291.

RAJOURI

350. MILLENNIUM MOTORADES (2937--), ALPHA GATE, T.C.P., RAJOURI-185 132, (J&K) - 185132
PH :7006122022.

REASI

351. U LIKE CAR CLINIC (4771--), GITA NAGAR, REASI JYOTIPURAM ROAD, REASI, DISTRICT-REASI (JAMMU & KASHMIR) - 182311
PH :7006083550.

SAMBHA

352. DHANSAR CAR CLINIC (5146--), NATIONAL HIGHWAY , SUPWAL SAMBHA , DISTRICT - JAMMU, J&K - 184120
PH :9419393949.

SOPORE

353. HASSAN MOTORS (2434--), BPC DEALER, SOPORE, KASHMIR, - 193201
PH :9906506786.

SRINAGAR

354. A.B. MOTORS (5072--), BEHIND NEW SECRETARIAT ROAD, SRINAGAR, DISTRICT - SRINAGAR, JAMMU & KASHMIR - 190009
PH :9419007966.
355. ADAM'S AUTOAIDES (5766--), SIDCO INDUSTRIAL ESTATE,SHALTENG, SRINAGAR - 190015, DISTRICT-SRINAGAR, JAMMU & KASHMIR - 191202
PH :9906580089.
356. HASEEN MOTORS (5249--), BY-PASS BRIDGE .BAGH MEHTAB, SRINAGAR , JAMMU & KASHMIR , - 190019
PH :9419006847.
357. NEW NATIONAL AUTOMOBILES (5073--), RAM BAGH.AIRPORT ROAD.SRINAGAR, DISTRICT - SRINAGAR, JAMMU & KASHMIR, - 190009
PH :9419013778.

SURNKOTE

358. A.S. AUTOMOBILES (5976--), IQBAL NAGAR,SURANKOTE, DISTRICT-POONCH, JAMMU & KASHMIR , - 185121
PH :9469014765.

VIJAYPUR

359. BANSI LAL MARUTI SERVICE STATION (4748--), SWANKHA MORH, NATIONAL HIGHWAY, VIJAYPUR-180001, DISTRICT-SAMBA (JAMMU & KASHMIR) - 180001
PH :9419106798.

## JHARKHAND

BOKARO

360. UUEA (4845--), S-21 CITY CENTRE, BOKARO STEEL CITY, BOKARO-827004, JHARKHAND - 827004
PH :9431127441.

DEOGHAR

361. GARGEE AUTOMOBILES (2276--), OPP. D.C. RESIDENCE, CIRCULAR ROAD, BARMASIA, DEOGHAR-814 112 (JHARKHAND) - 814112
PH :9940580983.

DHANBAD

362. MAZUMDAR CAR SCAN (5135--), BHUIFORE, K G ASHRAM ROAD , SARAIDELA, DISTRICT - DHANBAD, JHARKHAND - 828301 - 828301
PH :9835361472.
363. PRIYA AUTO (4868--), OPPOSITE MINNING SCHOOL, SINDRI ROAD, BHAGA, DHANBAD-828301, JHARKHAND - 828301
PH :9431124817.

HAZARIBAGH

364. ALOK MOTORS (379--), NEAR INDRAPURI CHAWK, HAZARIBAG-825 301, (JHARKHAND), - 825301
PH :9431140740.
365. SRI RAM MARUTI SERVICE STATION (3663--), DEVI DAYAL LANE, HAZARIBAG-825 301, (JHARKHAND), - 825301
PH :9431384877.

JAMSHEDPUR

366. MAHESHWARI BROS. (5124--), NATIONAL HIGHWAY 33, BALIGUMA MANGO, P.O.-M.G.M. MEDICAL COLLEGE, JAMSHEDPUR-831 018 - 831018
PH :9031144444.

KHUNTI

367. MOD MOBILES (5579--), MAIN ROAD,RANCHI ROAD - KHUNTI, DISTRICT - KHUNTI, PIN - 835210, JHARKHAND - 835210
PH :9304468855.

MAITHON

368. MAITHON SERVICING CENTRE (5838--), MAITHON ROAD,NEAR VMC COLONY, SANJAY CHOWK ,PO CHIRKUNDA-MAITHON, DISTRICT-DHANBAD, (JHARKHAND) - 828203
PH :7209423707.

PAKUR

369. SPEED WHEEL SERVICE CENTRE-PAKUR (4976--), MAIN ROAD, PAKUR - 816107, , - 816107
PH :9434101917.

RAMGARH

370. RAHIL MOTORS (5054--), C/O NIYAMAT MISTRI, DUSHAD MOHLA, DISTRICT RAMGARH CANTT., - 829122
PH :9771577422.
371. SAINI MOTORS (5126--), NEAR VISWAKARMA MANDIR, MAIN ROAD, RAMGARH CANTT 829 122, DISTT. HAZARIBAG - 829122
PH :9835141302.

RANCHI

372. BHARAT MOTORS (5970--), SHIV JEE CHOWK,HARMU ROAD,RANCHI-834001, DISTRICT-RANCHI, JHARKHAND - 834001, - 834001
PH :9608502258.
373. MARUTI AUTOMOBILES (5127--), HOTEL AKASHWANI MANSION, RATU ROAD, RANCHI-834 001, - 834001
PH :9835156186.
374. MARUTI CLINIC (2548--), LAL KOTHI, OLD HAZARIBAGH ROAD, KANTA TOLI, RANCHI-1, JHARKHAND - 834001
PH :9431109214.

## KARNATAKA

ATHANI

375. CHOUGULE MOTORS (3874--), MIRAJ ROAD, ATHANI, , , - 587314
PH :9448436776.

BAGALKOT

376. NARA AUTOMOBILES (4357--), TP NO. 158 A/2, WARD NO. 10, SHABADI COMPOUND EXTN, BAGALKOT-587101 - 587101
PH :9880875595.

BAILHONGAL

377. MAHANTH MOTORS (5763--), RTO ROAD BAILHONGAL ,TALUK-591102, DISTRICT-BELGAUM, KARNATAKA, - 591102
PH :9535653166.

BALEHONNUR

378. CREST MOTORS (5253--), MALLE GOWDA COMPLEX, 278, JAYAPURA-KOPPA MAIN ROAD, BALEHONNUR, CHIKKAMAGALURU DISTRICT-577112, KARNATAKA - 577204
PH :9448000131.

BANGALORE

379. ADARSHA AUTOMOBILES (4553--), 108/9, HALASAHALLI ROAD, OPP HP GAS GODOWN, NEXT TO SK FLOOR MILL, VARTHUR, BANGALORE – 560087 - 560037
PH :9880195465.
380. ANEKAR MOTORS (227--), 230 MAGADI ROAD, BANGALORE-560 023, (KARNATAKA)., PH :9845889911.
381. ASHWA CARS (8982--), #14, 1ST MAIN, 6TH CROSS, SANJEEVNI NAGAR, MOODAPALYA, BANGALORE 560072, - 560072
PH :9611413516.
382. BENAKA MOTORS (3237--), NO.158/2 VIBHUTIPURA, VIGNAN NAGAR BEHIND B.E.M.L., NEAR RENUKA SWIMMING POOL, BANGALORE-560 017
PH :9845212416.
383. CHANDANA MOTORS (4872--), NO. 9 UNIVERSITY ROAD, GNANABHARTHI (POST), MARIYAAPPANA PALYA, BANGALORE-560056 (KARNATAKA) - 560056
PH :9880659864.
384. GIRIMAJI ENTERPRISES (258--), NO.2 27TH CROSS, K R ROAD, B S K II STAGE, BANGALORE-560 070
PH :9844004403.
385. GREEN CARS PVT. LTD. (2154--), NO.12/6 80 FEET ROAD, 6TH BLOCK KORAMANGALA, BANGALORE-560 095,
PH :9845020796.
386. KESHKAMAL MOTORS (2075--), NO.943 21ST MAIN, BANASHANKARI 2ND STAGE, (NEAR KIMS MEDICAL COLLEGE), BANGALORE-560 070
PH :9448071067.
387. LE MANS MOTORS (3460--), NEAR AYYAPPA TEMPLE, S.M. ROAD, T. DASARAHALLY, BANGALORE-560 057
PH :9845145001.
388. CANARA MOTORS (8987--), 9TH MAIN, NEAR PARLE G, TUMKUR ROAD, CHIKKABIDARAKALLU VILLAGE, BANGALORE-560073. - 560058
PH :9845842288.
389. NEXUS (1153--), 2ND MAIN KHB COLONY, GANDHI NAGAR, YELAHANKA, BANGALORE-560 064
PH :9844013436.
390. NEXUS (2768--), #275/301, 80 FEET ROAD, OPP. M.S. RAMAIAH HOSPITAL (BEL ROAD), RMV 2ND STAGE, BANGALORE-560 094
PH :9844013436.
391. PACE AUTOMOBILES (1057--), 6TH MAIN HMT LAYOUT, R.T. NAGAR, BANGALORE-560 032, PH :9845004710.
392. PUSHPAK MOTORS (4642--), 105/1 2ND MAIN NANJAPPA LAYOUT, VIDYARANYAPURA MAIN ROAD, (OPP KRUTHIKA HOSPITAL), BANGLAORE-560097 - 560097
PH :9845087842.
393. RAJ MOTORS (2829--), NO.10 MAGADI MAIN ROAD, OPP. UNANI MEDICINE INSTITUTE, KOTIGEPALYA, BANGALORE-560 091
PH :9663555677.
394. SMART CARS (3571--), 3RD CROSS NEAR J.B. TILES, KAGGADASA PURA MAIN ROAD, C.V. RAMAN NAGAR, BANGALORE-560 093
PH :9663324361.
395. SOLOTECH MOTORS (2760--), SURVEY NO.82/2,D'SOUZA NAGAR, HOSAKEREHALLI-BANGALURU, DISTRICT-BANGALURU 560085, KARNATAKA - 560085
396. SOLOTECH SERVICE CENTRE (5245--), 50 FEET MAIN ROAD .AVALAHALLI, MUNESHWARA BLOCK , DISTRICT - BANGALORE, KARNATAKA - 560010
PH :9845772634.
397. SPEED MOTORS (1750--), 17/1 SUBRAMANYAPURA MAIN ROAD, KADIRENAHALLI, PADMANABHA NAGAR, BANGALORE-560 070
PH :9845153102.
398. TEAM TECH AUTOMOBILES (5662--), 78/1,SULEKUNDE, NEAR MUTHANALLUR CROSS,, SARJAPURA MAIN ROAD, BANGALORE -562125 - 562125
PH :9538516111.
399. TRINITY CAR CARE PVT. LTD (5851--), SURVEY NO 52/1,SRI GANDHADAKAVAL VILLAGE, NAGARBHAVI,BANGALORE-560091, DISTRICT-BANGALORE , KARNATAKA - 560091
PH :9880793980.
400. TRINITY MOTORS (4638--), NO. 36, 4TH STAGE, W.C. ROAD, BASAVESHWARANAGAR, BANGALORE-560079 - 560079
PH :9845539474.
401. VISWAS CAR SERVICES PVT. LTD. (3238--), NO 2 , (OUT NO OF SY.NO 100/2) OFF SERVICE ROAD , KALYAN NAGAR ROAD, CHELEKERE , BANASWADI POST BANGALORE -560043 - 560043
PH :9591313379.

BELGAUM

402. BHARAT AUTO SCAN (350--), 892/1 PB ROAD, BELGAUM-590 016, ,
PH :9448120495.

BIJAPUR

403. BAGALI MOTORS (5159--), SHIKARKHANA ROAD, BIJAPUR - 586104, DISTRICT - BIJAPUR, KARNATAKA - 586104
PH :9448100444.

CHIKBALLAPUR

404. SUKOVE ENTERPRISES (3426--), B.B. ROAD N.H.7, CHIKBALLAPUR-562 101, (KARNATAKA), PH :9880607034.

CHIKMAGALUR

405. AAMANTHRANA MOTORS (4346--), K.M. ROAD, CHIKMAGALUR, , - 577101
PH :9945462658.
406. FORMULA MOTORS (338--), K.M. ROAD, CHIKMAGALUR-577 101, ,
PH :9448743284.

CHIKODI

407. OM MOTORS (9026--), 1751, ANKALI ROAD, NEAR B K COLLEGE, CHIKODI-591201, KARNATAKA - 591201
PH :8861555999.

CHINTAMANI

408. TIPPU AUTO GARAGE (5770--), MG ROAD,NEAR BAGEPALLI CROSS, CHINTAMANI-563125, DISTRICT-KALOR, KARNATAKA - 563125
PH :9036698340.

CHITRADURGA

409. PRINCIPAL (255--), J.M.I.T, N.H.4, P.B. NO.73, CHITRADURGA-577 502
PH :9731330300.

DAVANGERE

410. HEGDE AUTO CENTER (172--), NO 2007/37, NEAR BIET, SHAMANUR ROAD, DAVANGERE, KARNATAKA-577004 - 577004
PH :8494853646.

411. SREE MALLIKARJUNA MOTOR (229--), NO 68, RMC ROAD, NEAR KSRTC BUS STAND, DAVANGERE, KARNATAKA - 577003
PH :9880701015.

DEVANAHALLI

412. SAHARA AUTOMOBILES (8983--), OPP. A . RTO OFFICE, NH-7, B.B. ROAD, DEVANAHALLI-562110, KARNATAKA - 562110
PH :9611150788.

DHARWAD

413. MYSORE GARAGE (2468--), BELGAUM ROAD, DHARWAD-580 001, (KARNATAKA),
PH :9844133273.

DODDABALLAPUR

414. PRESTIGE MOTORS (8996--), NEAR RAILWAY STATION KHASBHAG, DODDABALLAPUR, , - 560026
PH :9900274594.

GADAG

415. MODERN MOTORS (8939--), HUBLI ROAD, GADAG-582 103, (KARNATAKA),
PH :9448746579.

GULBARGA

416. DELUX AUTO SERVICE (5840--), SURVEY NO 77/8,VILLAGE KUSNOOR,NEAR -, UNIVERSITY,SEDAM ROAD,GULBARGA-585104, DISTRICT-GULBARGA, (KARNATAKA) - 585104
PH :9242991292.

HOSPET

417. SUPREME AUTO SERVICE (2569--), NEAR RTO OFFICE, HARIHAR ROAD, HOSPET-583 203, (KARNATAKA)
PH :9845307361.

HUBLI

418. SRI BASAVA MOTORS (4968--), OPP SANA COLLEGE,APMC PB ROAD, BHIRIDEVARKOPPA,HUBLI-580025, , - 580025
PH :9980025644.

KADUR

419. SRI SAI MARUTHI SERVICE STATION (5725--), ULUKINAKALLU, NH 206, KADUR, , - 583201
PH :9916947196.

KARKALA

420. KARKALA MOTORS (3549--), TELLAR ROAD, KARKALA-574 104, (KARNATAKA),
PH :9845356244.

KOLAR

421. SHIVA SERVICE POINT (2472--), M.B. ROAD, KOLAR-563 101, (KARNATAKA),
PH :9448228604.

KOLLEGAL

422. FIX PLUS AUTO CARE CENTRE (4249--), C-8, IND. ESTATE, MAHADESHWARA COLLEGE ROAD, KOLLEGAL-571440, - 571440
PH :9448807237.

KOPPA

423. AUTO TECH (3448--), MAIN ROAD, UPPERPET, KOPPA-577 126, (CHIKMAGALUR DIST.)
PH :9448156950.

KUMTA

424. SOLOTECH (4547--), NEAR MARUTI TEMPLE, HANDIGON, KUMTA- 581343, - 581362
PH :9448149607.

KUNDAPUR

425. PRAKASH AUTO SERVICE (4522--), NH-66, NEAR K.E.B., VODERHOBLI, KUNDAPURA, KARNATAKA - 576201
PH :9341035642.

MANIPAL

426. MANIPAL MARUTI AUTO WORKS (4578--), BUILDING NO.1, FLAT NO.: 16 181 N7 & N8, SIDDESH COMPLEX, NEAR R.C.CHURCH, OPP. SIGMA BAR, MANIPAL, UDIPI DISTRICT, KARNATAKA - 591102
PH :9448108318.

MUDHOL

427. OM MOTORS (5857--), PLOT NO. 21 & 29, LOKAPUR ROAD, VISHWESHWAR NAGAR, MUDHOL – 587313, KARNATAKA - 587313
PH :9663830660.

MUDIGERE

428. BADRIYA CAR SERVICE POINT (5364--), K.M. ROAD,MUDIGERE , DISTRICT-CHIKAMANGALORE , PIN - 577132 , (KARNATAKA) - 577132
PH :9448007094.

MYSORE

429. CAR CLINIC (346--), 1959/A, BOGADI RING ROAD, NEAR GLN CONVENTION HALL, BOGADI, MYSORE, - 585106
PH :9342184831.

NELAMANGALA

430. GOUTHAM MOTORS (4332--), PATEL CHANNAPPA EXTN, NELAMANGALA-562123, KARNATAKA, - 562123
PH :9880251546.

RABAKAVI BANAHATTI

431. SANGAMA MOTORS (5726--), BESIDE CMC,RAMPUR MAIN ROAD, RABAKAVI-587314, DISTRICT-BAGALKOT, KARNATAKA - 587314
PH :9480035617.

RAICHUR

432. HEERA MOTORS (3730--), OPP. MOTI MASJID, SHIVJI OIL MILL COMPOUND, TIPU SULTAN ROAD, RAICHUR-584 101 (KARNATAKA)
PH :9845156322.

RANEBENNUR

433. KIZEN MOTORS (4568--), P.B.ROAD, RANEBENNUR, KARNATAKA - 581115 - 581115
PH :9900922022.

SAGAR (KARNATAKA)

434. ADITYA AUTOMOBILES (2077--), JOG ROAD, SAGAR-577 401, (KARNATAKA),
PH :9448024395.

435. MALLIKA AUTO CENTRE (2133--), NO. 459/1204, GANDHI NAGAR, BEHIND BHARAT PETROLEUM, NH 206, SAGARA - 577401, KARNATAKA
PH :9448139605.

SHIMOGA

436. NEPTUNE AUTO WORKS (5271--), PLOT -5 AUTO COMPLEX , SAGAR ROAD - SHIMOGA , DISTRICT - SHIMOGA , KARNATAKA - 577204
PH :9448319758.

437. SHIMOGA AUTO ENGINEERING WORKS (8955--), GARDEN AREA, 2ND CROSS, SHIMOGA KARNATAKA-577 201
PH :7899114872.

SIDDAPUR

438. MARUTI AUTO WORKS (5335--), KARNATAKA - 581355
PH :9448525801.

SIRSI

439. ARUNDHATI MOTORS (1258--), HUBLI ROAD, SIRSI-581 402, (UTTAR KARNATAKA),
PH :9845098822.

SRINGERI

440. SHUBHASHREE MOTORS (5434--), AGUMBLE ROAD ,SRINGERI , DISTRICT - CHIKAMAGALUR , SRINGERI - 577139, KARNATAKA - 577139
PH :9448170400.

TIRTHALLI

441. SUMUKA AUTOMOBILES (5133--), AP ROAD.CEEBENE KERI, DISTRICT-SIMGA, SHIMGA-577414, KARNATAKA - 577414
PH :9686944949.

TUMKUR

442. APOORVA CAR CARE CENTRE (5327--), B.N.P. COMPOUND .BEHIND KRISHNA THEATRE, M.G. ROAD - TUMKUR, DISTRICT - TUMKUR, KARNATAKA - 571440
PH :9901515516.

UDUPI

443. ST. JUDE AUTOMOBILE ENGG. WORKS (4521--), B.D.MARG, AMBALAPADI, UDIPI-576 103,
PH :9844991241.

UPPINANGADI

444. RATHNA ENTERPRISES (5447--), 5/514, KUKKAJE, SUBRAMANYA ROAD, UPPINANGADY, DAKSHIN KANNADA - 574241, KARNATAKA - 587313
PH :9972995341.

## KERALA

ADIMALY

445. PLATHOTTAM AUTOMOBILES (3864--), NH-49, OPPOSITE TO MINI INDUSTRIAL ESTATE, ADIMALI-685561, - 685561
PH :9447023073.

ADOOR

446. AUTO CLUB (2132--), NEAR H.P. PUMP, VADAKKADATHUKAVU P.O, ADOOR, PATHNAMTHITTA DISTT - 691523
PH :9447440184.

ALAPPUZA

447. ESSAR MOTORS (4959--), KALARKODE, NEAR CHINMAYA SCHOOL, NH-47, ALAPPUZHA-688003, KERALA - 688003
PH :9249938474.

ALUVA

448. AUTO TEAM (2630--), A/189 A, PARUR JUNCTION, ALUVA, (KERALA) - 683108
PH :9947333760.

AMBALLUR

449. LAKSHMI DEVI AUTO GARAGE (4137--), AMBALLUR, P.O. PUDUKAD, TRICHUR, KERALA - 680301
PH :9847903949.

ANCHAL

450. NAMI-TAJ (2534--), NEAR ST. GEORGE CENTRAL SCHOOL, R.O. JUNCTION, ANCHAL, KERALA -691 306. - 691306
PH :9447453745.

ANJUMOORTHY

451. SAFA AUTO CARE (3847--), N H ROAD, MANGALAM PALAM, ANJUMOORTHY POST, VADAKKENCHERY, PALAKKAD DISTT, KERALA - 678682
PH :9447303347.

AYOOR

452. MAKKATTU AUTO CLINIC (5051--), AYOOR-ANCHAL ROAD.PANACHAILA, AYOOR - 691306, DISTRICT - KOLLAM, KERALA - 691306
PH :9847288624.

CALICUT

453. MALABAR MOTORS (4655--), EAST NADAKKAVU, P.O. ERANIPALAM, CALICUT-673006, KERALA - 673006
PH :9846089190.
454. MARUTI SCAN (1675--), BYE PASS JUNCTION, MEENCHANDA, CALICUT-673 018, - 673018
PH :9847130508.

CHALAKUDY

455. STAR MARUTI GARAGE (5367--), NH47 BYE PASS, NEAR CRESCENT PUBLIC SCHOOL, .CHALAKKUDY, DISTRICT - THRISSUR - 680307
PH :9946009375.
456. VIJAY AUTO SERVICE (1626--), POTTA, CHALAKUDY-680 307, , - 680307
PH :9995074628.

CHANGANACHERRY

457. PALATHRA MOTORS & SERVICE CENTRE (1072--), VADAKKEKARA, VEROOR P.O., CHANGANACHERRY-686 104, - 686104
PH :9447195154.
458. SAAFAA AUTOMOBILES (1148--), PALATHARA CHIRA, BY PASS ROAD, CHANGANACHERRY, KOTTAYAM-686104, , - 686104
PH :9447042517.

CHENGANNUR

459. NEW TECH AUTOMOBILES (1978--), INDUSTRIAL ESTATE, MUNDANCAVU, CHENGANNUR-689 121, KERALA - 689121
PH :9388915757.

CHERTHALA

460. POZHICKAL CAR WORLD (3037--), NEAR BOYS HIGH SCHOOL, CHERTHALA, ALAPPUZHA DIST., KERALA-688 524 - 688524
PH :9947474752.

ETTUMANOOR

461. ROHIT MOTORS (4636--), THELLAKOM P.O., M.C. ROAD, ETTUMANOOR, KERALA - 686630
PH :9447079010.
462. ROHIT MOTORS (--), THELLAKOM P.O., M.C. ROAD, ETTUMANOOR, KERALA - 686630
PH :9447079010.

KALANJOOR

463. AGT MOTORS (5937--), KIP JUNCTION, KALANJOOR-689694,
DISTRICT-PATHANAMTHITTA, KERALA - 689698
PH :9744409444.

KALLAMBALAM

464. PRAKASH AUTO ENGINEERS (5548--), VADASSERIKONAM P.O. KALLAMBALAM, VARKALA,KALLAMBALAM-695143, DISTRICT-TRIVANDRUM, KERALA - 695143
PH :9847159618.

KALLUMUTTY

465. MARUTI CARE (4179--), KALLUMUTTY, IRITTY P.O., KANNUR, KERALA - 670703 - 670703
PH :9946703070.

KALPETTA

466. VARCO MOTORS (4724--), 18/226-1, NEAR VELLARAMKUNNU, NH 212, KALPETTA - 673121, , - 673121
PH :9961569898.

KANJIRAPPALLY

467. MACK ENTERPRISES (2729--), NH-183, NEAR AKJM SCHOOL, KANJRAPALLY, KERALA - 686507. - 686507
PH :9447093739.

KANNUR

468. AREN MOTORS (5139--), CHAKKARAKAL.P.O. MUZHAPPALA, DISTRICT - KANNUR, KERALA, - 670613
PH :9446771237.
469. PIONEER AUTO & ENGG.WORKS (4722--), KANNOTHUMCHAL ROAD, KANNUR - 2, (KERALA), - 670005
PH :9447798255.

KARIMANOOR

470. JAWAN MARUTI SERVICE (8976--), XIV/359B, THODUPUZHA - UDUMBANNOOR ROAD, KARIMANOOR PO, KARIMANOOR, THODUPUZHA, KERALA - 685581
PH :9544545500.

KATTAKADA

471. CITY ENGINEERS (4947--), MARUTI SERVICE CENTRE, NEYYATTINKARA ROAD, KATTAKADA-695572, DISTRICT-TRIVANDRUM (KERALA) - 695572
PH :9447206257.
472. MADATHIL MOTORS (5456--), MADATHIL HOUSE,CHOONDUPALAKA , KATTAKADA P.O. - TRIVANDRUM , DISTRICT - TRIVANDRUM , (KERALA) - 695543
PH :9495192389.

KATTAPPANA

473. UNITED SERVICE CENTER (4433--), EDASSERT JUNCTION, KATTAPPANA-685508, KERALA, - 685508
PH :9961432941.

KAYAMKULAM

474. PERFECT MOTORS (8995--), MARUTI SERVICE CENTRE, NH-47, CHEPPAD, KAYANKULAM-690507, DISTRICT-ALAPPUZHA (KERALA) - 690507
PH :9447048338.
475. PERFECT MOTORS (--), MARUTI SERVICE CENTRE, NH-47, CHEPPAD, KAYANKULAM-690507, DISTRICT-ALAPPUZHA (KERALA) - 690507
PH :9447048338.

KONNI

476. MUTTATH AUTOMOBILES (5525--), AROORPALAM,KONNI-689691, DISTRICT - PATHANANTHITTA, KERALA, - 689691
PH :9447431751.

KOOTHATTUKULAM

477. EXTRA CARE SERVICES (3232--), 38A, RAMAPURAM JUNCTION, PALA ROAD, KOOTHATTUKULAM, ERNAKULAM DIST., KERALA - 686662 - 689121
PH :9544552080.

KOTHAMANGALAM

478. EXCEL MARUTI SERVICE (4342--), BYE-PASS ROAD, KOTHAMANGALAM, ERNAKULAM-686691, - 686691
PH :8848605865.
479. JAWAN AUTOMOBILES (8985--), NEAR THANKALAM BYE-PASS ROAD, KOTHAMANGALAM-686 691, KERALA, - 686691
PH :9673102460.

KUNDARA

480. SPARK SERVICE (5772--), ELAMPALLOOR,P.O. KUNDARA-691501, DISTRICT-KOLLAM, (KERALA), - 691501
PH :9809608020.

KUTHUPARAMBA

481. KRISHNA MOTORS (3435--), KUTTIKKUNNU, NEAR 66 KV SUB STATION, KUTHUPARAMBA-670 643, KANNUR DIST. (KERALA) - 670643
PH :9497296380.

MANJERI

482. MARUTI AUTO HOUSE (4726--), CHERANI, KARUVAMBARAM PO, MANJERI, KERALA. PIN 676123 - 676123
PH :9447129289.

MANNAR

483. MOHANS AUTOMOBILES (5457--), MOHANS AUTOMOBILES & ENGINEERS , KUTTEMPEROOR P.O. MANNAR, DISTRICT - ALAPPUZHA , (KERALA) - 689622
PH :9447877377.

MANNUTHY

484. TOP CLEAN SERVICES (2834--), 13/450 MANNUTHI BYE PASS, P.O. OLLUKKARA, THRISSUR, (KERALA) - 680651
PH :8592947776.

MEENANGADI

485. MOTOR TECH (2440--), EAST MEENANGADI, KRISHNAGIRI P.O., WAYANAD-673 591, (KERALA) - 673591
PH :9539195850.

MOOCHIKKAL

486. CHELADANS MARUTI ENGINEERS (4659--), THANUR ROAD, MOOCHIKKAL-676307, MEENADATHUR, TIRUR, MALAPURAM DIST (KERALA) - 676307
PH :9895443563.

MUNNAR

487. PLATHOTTAM AUTOMOBILES (4447--), COLONY ROAD, IKKA NAGAR, MUNNAR, IDUKKI, KERALA - 685612 - 685612
PH :9447023073.

MUVATTUPUZHA

488. JAWAN AUTOMOBILES (2730--), MADAVOOR POST, MUVATTUPUZHA-686 669, , - 686669
PH :8943345500.

NEYYATTINKARA

489. XANON ENGINEERS (8951--), RAVELI TOLL JUNCTION, NEYYATTINKARA, TRIVANDRUM-695121, - 695121
PH :9946357813.

NILAMBUR

490. CONFIDENCE MOTORS (5140--), PALUNDA.CHUNGATHARA, NILAMBUR-679334, DISTRICT - MALLAPURAM, KERALA - 679334
PH :8075272281.

NILAMEL

491. LIBRA (8975--), M.C. ROAD, NILAMEL-691 535, KOLLAM DIST., (KERALA) - 691535
PH :9895629768.

OCHIRA

492. MANGALATH AUTOMOBILES (3836--), NH 47 VALIYAKULANGARA, OCHIRA P O, KOLLAM DIST, KERALA-690526 - 690526
PH :9847258696.

OLLUR

493. TOPCLEAN SERVICES (4468--), 10/153, CHRISTOPHER NAGAR, P.O OLLUR, TRICHUR (KERALA) - 680306
PH :9846037818.

PALAKKAD

494. CAR CRAFT (2139--), 5/682 (1), MANALI, PALAKAD-678 001, (KERALA) - 678001
PH :9349607619.

PANDALAM

495. AISHWARYA AUTOMOBILES (2067--), NEAR K.S.R.T.C. BUS STOP, PANDALAM-689 501, , - 689501
PH :9847049140.

PARIPALLY

496. ALLIANCE MARUTI SERVICES (3243--), NH-47, PARIPPALLY-691 574, KOLLAM DIST. (KERALA), - 691574
PH :9349926440.

PATHANAPURAM

497. MANNIL AUTOMOBILES (4150--), NEAR PANCHAYAT OFFICE, PATHANAPURAM, KERALA-689695, - 689695
PH :9447258496.

PATHNAMTHITTA

498. C.J. MARUTI CARE CENTRE (1255--), VARIYAPURAM, ELANTHOOR EAST P.O., PATHANAMTHITTA-689 643, (KERALA) - 689643
PH :9446913874.

PERAVOOR

499. CAR CARE AUTOMOBILES (4422--), KODENCHAL, PERAVOOR, NIDUMPOYIL P.O, , KANNUR- 670650, - 670650
PH :9946444691.

PERUMBAVOOR

500. MILLENNIUM MOTORS (4873--), OLD VALLAM ROAD, KADUVAL, PERUMBAVOOR-683542, DISTRICT-ERNAKULAM (KERALA) - 683542
PH :9446661111.

QUILANDY

501. HITECH MARUTI (3025--), MAIN ROAD, KOYILANDY, PIN-673 305, CALICUT DISTT. - 673305
PH :9447457996.

RANNY

502. DEEPA AUTOMOBILES (5177--), DEEPA AUTOMOBILES.PAZHAVANGADI, P.O. RANNY .689673, DISTRICT-PATHANAMTHITTA, KERALA - 689673
PH :9447216725.

SASTHA MANGALAM

503. MARSHAL AUTOMOBILES (4035--), SWATHI NAGAR, TC 22/1565, PIPPINMOOD, SASTHAMANGALAM - PEROORKADA ROAD, PEROORKADA PO, THIRUVANANTHAPURAM - 695005, KERALA - 695005
PH :9447461101.

SULTAN BATHERY

504. AUTOMEK (4725--), BEENCHI P.O., SULTAN BATTERY-673 592, , - 673592
PH :9249999515.

505. NEW INDIAN (8970--), MYSORE ROAD, SULTAN BATHERY, WAYANAD DISTRICT, KERALA-673592 - 673592
PH :8281682822.

506. TEE PEE MOTORS (4773--), 9/668-B OOTY ROAD, NEAR BLOCK OFFICE, SULTAN BATHERY, WAYANAD (KERALA) - 673592
PH :8547201421.

THALASSERY

507. SAFE HANDS AUTOMOBILES (3038--), ERANHOLI, CHUNGAM, THALASSERY -670 107, (KERALA) - 670107
PH :9744322317.

THALAYOLAPARAMBU

508. MYALIPARAMPIL MOTORS (3233--), SILON JUNCTION, NEAR THALAYOLARAMBU, POOZHIKOL P O 686604, - 686604
PH :9447562050.

THAMARASSERY

509. MALABAR MOTORS (4645--), WARD NO. 12, BLDG NO. 121, WAYANAD ROAD, KARADY, THAMARASSERY, CALICUT - 673573
PH :9349114119.

THIRUVALLA

510. MARUTI AUTO SPOT (1628--), AYROOKUZHIYIL HOLDINGS, OPPOSITE PUSHPAGIRI MEDICITY, PERUMTHURUTHY, THIRUVALLA, KERALA - 689107 - 689107
PH :9447860777.

THODUPUZHA

511. UNIVERSAL MARUTI (2563--), VENGALLOOR P.O., THODUPUZHA, (KERALA), - 685585
PH :9447023024.

TRIVANDRUM

512. EMINENT MARUTI SERVICE (2360--), T.C. 610 M.C. ROAD, MANNANTHALA, TRIVANDRUM-695 015, - 695015
PH :9447713639.

513. HITECH INDUSTRIES (1951--), NEAR ULLOOR BRIDGE, PATTOM P.O., THIRUVANANTHAPURAM-695 004, (KERALA) - 695004
PH :9447732057.

514. KICHU MOTORS (5453--), TC.49/962 ,SREEMOOLAM NAGAR CHIRAMUKKU , MANACAUR (PO) TRIVANDRUM, DISTRICT - TRIVANDRUM, KERALA - 695572
PH :9847023025.

515. MUKUNDANS (3434--), POONTHI ROAD, KUMARAPURAM, MEDICAL COLLEGE P.O., THIRUVANATHAPURAM, KERALA - 695011 - 695011
PH :9349882788.

516. PROFESSIONAL MOTORS (1256--), NEAR ELECTRICITY BOARD, PEROORKADA, TRIVANDRUM-695 005, - 695005
PH :9947175650.

517. SREEKARIYAM AUTOMOBILES (353--), SREEKARIYAM P.O., THIRUVANANTHAPURAM-695 017, , - 695017
PH :9447050313.

VADANAPPALLY

518. MONARCH MARUTI SERVICE CENTRE (4079--), NEAR NORTH JUMA MASJID, GANESHA MANGALAM, P O VADANAPALLY, TRICHUR DIST (KERALA) - 680614
PH :9847792698.

VADAVATHOOR

519. C CARS (5754--), VADAVATHOOR PO-KOTTAYAM, DISTRICT-KOTTAYAM, PIN-686503, KERALA - 685503
PH :9447208558.

VARKALA

520. S.S. MOTORS (2979--), NEAR POLICE STATION, VARKALA-695 141, TRIVANDRUM DISTT., - 695141
PH :9446104991.

VATAKARA

521. RANI CARS (8957--), BUILDING NO. 10/496A, NADAPURAM ROAD,MADAPPALLI COLLEGE POST, VATAKARA, DISTRICT KOZHIKODE, KERALA- 673102. - 673102
PH :9400513139.

## LADAKH

KARGIL

522. ZOZILA ENGG. WORKS (374--), KARGIL, LADAKH-194 105 - 194105
PH :9419176212.

## LAKSHADWEEP

LAKSHADWEEP

523. POPULAR REPAIR & SERVICE CENTRE (2944--), SECRETARIAT ROAD, KAVARATTI, LAKSHADWEEP-682 555, - 682555
PH :9448463737.

## MADHYA PRADESH

BALAGHAT

524. SAURAV MOTORS (4069--), DEENHI ROAD, GARRA INDUSTRIAL AREA, BALAGHAT, MADHYA PRADESH - 481001
PH :9300963731.

525. GULAB AUTOMOBILES (1553--), VARDHMAN NAGAR, NEAR SHUBHARAMB LAWN, GONDIYA ROAD, KOSMI, BALAGHAT, MP - 481001 - 481001
PH :9425402926.

BARWANI

526. SPEED AUTOMOBILES (5260--), KHANDWA BARODA ROAD, NR. BALAJI TOLL KANTA,BARWANI-451552, DISTRICT-BARWANI, MADHYA PRADESH - 451552
PH :9926146073.

BETUL

527. ADITYA MOTORS (1263--), NAGPUR BHOPAL ROAD, SADAR, BETUL-461 001, MADHYA PRADESH - 460001
PH :9425381581.

BHIND

528. MAA PITAMBARA MOTORS (5241--), OPP.RAJENDERA CONVENT SCHOOL , LAKSHAR ROAD - BHIND , MADHYA PRADESH, - 477001
PH :9826240582.

BHOPAL

529. SHRI KRISHAN CAR CARE (1679--), POLYTECHNIC ROAD, NEAR PETROL PUMP, BHOPAL, (M.P.) - 462002
PH :9424454030.

530. SHUBHAM AUTOMOBILES (5052--), PLOT NO. 1 & 2, TIRANGA ROAD, SHAHPURA, BHOPAL, MADHYA PRADESH -462039 - 462039
PH :9425009869.

531. TAURUS AUTOMOBILES (3372--), ALAKNANDA COMPLEX, OPP.VIJAY STAMBH PRESS COMPLEX, M.P. NAGAR ZONE-I, BHOPAL (M.P.) - 462011
PH :9303131403.

BIAORA

532. GURUKRIPA MOTORS (5670--), OPP PRABHAT BREAD INDUSTRY, AB ROAD - BIAORA, DISTRICT - BIAORA, MADHYA PRADESH - 465674
PH :9425038727.

BURHANPUR

533. SWADESHI MOTORS (4229--), NEAR GANPATI MANDIR, GANPATI NAKA, BURHANPUR, MADHYA PRADESH - 450331

DABRA

534. MODI MOTORS (3857--), BALLA KA DERA, JHANSI ROAD, DABRA, GWALIOR - 475110
PH :8770360194.

DAMOH

535. MARUTI PRIME (1156--), BUS STAND, STATION ROAD, DAMOH-470 661,
PH :8319706998.

DATIA

536. HIND MOTORS (4470--), NH-75, JHANSI BYPASS ROAD, NEAR S.R.I COLLEGE, KALAMPURAM TIRHA, DATIA, MADHYA PRADESH - 475661 - 475661
PH :9406969206.

DEWAS

537. AZAD MOTORS (4534--), 10, JAWAHAR NAGAR COMPLEX AB ROAD DEWAS(MP)404051 - 455001
PH :9827533591.

GWALIOR

538. MARUTI ENTERPRISES (3021--), KHERAPATI ROAD, GWALIOR-474 002, (M.P), - 474002
PH :9425116466.

539. CLASSIC MOTORS & SERVICE STATION (5242--), CHAUHAN PIAO.M.G. ROAD, THATIPUR .MORAR, GWALIOR , MADHYA PRADESH - 474011
PH :9329603001.

HARDA

540. MANOJ UDYOG & SERVICE CENTER (4145--), 87-88, INDUSTRIAL AREA, CHHIPANER ROAD, HARDA, M.P - 461331
PH :9826227245.

INDORE

541. BOMBAY MOTORS (1655--), 10 Y.N. ROAD, INDORE-452 003, (M.P.), - 452003
PH :7314222786.

542. JYOTI RAGHUNATH MOTORS (5149--), 3/3 RAMBAGH, BEHIND PETROL PUMP , INDORE -452001, MADHYA PRADESH - 452001
PH :9425353568.

ITARSI

543. PITAMBARA MOTORS (5041--), NH-69.BETUL ROAD.NEAR PLYBOARD, FACTORY ITARSI , DISTRICT - ITARSI, MADHYA PRADESH - 461111
PH :9406525060.

544. UNITY ENTERPRISES (3270--), PLOT NO.97, INDUSTRIAL AREA, KHEDA, ITARSI-461 111 (M.P.)
PH :8120025666.

JABALPUR

545. SUPER MARUTI SERVICE (4952--), 375-A PREM NAGAR, OPP. GURUDWARA, JABALPUR-482001, MADHYA PRADESH - 482001
PH :7999993375.

546. YASH VEHICLES CARE (2169--), 1664, WRIGHT TOWN ,OPP. TELEGRAPH GATE NO. 2 JABALPUR (M.P) - 482002
PH :9893237505.

JAWAD

547. SHARMA MOTORS (5764--), IN FRONT OF PAWAN MILL, STATION ROAD,JAWAD-458330, DISTRICT-NEEMUCH, MADHYA PRADESH - 458330
PH :9425441270.

KATNI

548. KATNI MOTORS (4949--), C/O MAHURANIPUR UNION, TRANSPORT CORPORATION, NH-7, PANNA MORH, KATNI-483501 (MADHYA PRADESH) - 483501
PH :9425162660.

KHANDWA

549. M.K.AUTOMOBILES (5326--), SANTOSH NAGAR, OPP. JHEELODHYAN, INDORE ROAD, KHANDWA - 450 001 - 450001
PH :9425085666.

KUKSHI

550. DILIP MARUTI SERVICE CENTER (4649--), OPP. GAYATRI SAROVAR, KUKSHI, DISTT DHAR, - 454331
PH :9179649974.

MANDSAUR

551. DEV MOTORS (4562--), SITAMAU FATAK, MANDSAUR-458001, MADHYA PRADESH, - 458001
PH :9826751534.

552. JANGID MOTORS (2735--), NAYAPURA ROAD, NEAR R.K. HOSPITAL, MANDSAUR-458 001, (M.P.) - 458001
PH :9827266583.

MHOW

553. HIGHWAY MOTORS (8979--), A.B. ROAD, DONGRAGAON, MHOW-453441, INDORE M.P - 453441
PH :9826035653.

NAGDA

554. MARUTI NANDAN (3939--), 15 VERDHAMAN NAGAR, MEHATWASA, BIRLAGRAM, NAGDA, DISTT UJJAIN - 456335
PH :9910074658.

SAGAR (M.P)

555. SHREE SAGAR MOTORS (4955--), NEAR GURUDWARA, JHANSI BHOPAL ROAD, BHAGWANGANJ, SAGAR-470002, MADHYA PRADESH - 470002
PH :9826070549.

SARNI

556. JHANVI SERVICE STATION (3738--), MAIN ROAD, BAGDONA, SARNI-460 449, DISTT. BETUL (M.P.) - 460449
PH :9589650034.

SATNA

557. KAPOOR SERVICING CENTRE (1162--), 90 PREM NAGAR, SATNA-485 001, (M.P.), - 470661
PH :9827095182.

558. KAPOOR SERVICING CENTRE (--), 90 PREM NAGAR, SATNA-485 001, (M.P.), - 470661
PH :9827095182.

SEONI

559. HIGHWAY MOTORS (2262--), NEAR MOTEL CENTER POINT, SEONI-JABALPUR HIGHWAY, SEONI, (M.P.) - 480882
PH :9424928978.

SHAHDOL

560. PACE CRAFTERS (2145--), NEAR VIRAT TEMPLE, BANGANGA TIRAHA, REWA ROAD, SHAHDOL, (M.P.) - 484001
PH :9424701495.

SHAJAPUR

561. SHRIYA MOTORS (2568--), 174 A.B. ROAD, SHAHJAPUR-456 001, (M.P.), MADHYA PRADESH
PH :9826783993.

SHEOPUR

562. GOYAL AUTO (5446--), NEAR NABBAN MARKET, BARODA ROAD, SHEOPUR, DISTRICT - SHEOPUR, MADHYA PRADESH - 476337
PH :9826240944.

SHIVPURI

563. KARUN MOTORS (4273--), NEAR ARUN DHARAMKANTA, GUNA NAKA, A.B. ROAD, SHIVPURI - 473551
PH :9425728285.

SIDHI

564. KHARE MOTORS (4068--), NH-75, SINGRAULI ROAD, SIDHI, MADHYA PRADESH - 486661
PH :9425177518.

TIKAMGARH

565. ASHENDRA AUTOMOBILES (2636--), 350 OPP. JAWAHAR NAVODAYA VIDYALAYA, KUNDESHWAR, TIKAMGARH-472 001, MADHYA PRADESH - 472001
PH :9009129909.

UJJAIN

566. SUGANDHI BROTHERS (324--), DEWAS ROAD, UJJAIN (M.P), , MADHYA PRADESH - 456010
PH :9406822255.

567. ZALANI AUTO SERVICE (1554--), A 15/9, MAHAKAL VANIJYA KENDRA,, NANAKHEDA, UJJAIN 456010, , - 456010
PH :9713884177.

VIDISHA

568. SAMAY MOTORS (5179--), NEAR SC/ST SHED , PITALMIL CHOURAHA, SAGAR ROAD NH-86, VIDISHA, MP-464002 - 464002
PH :9425392521.

WAIDHAN

569. ANANT MOTORS (5732--), NEAR ESSAR TOWNSHIP, BILAUNJI ,WAIDHAN, DISTRICT-SINGRAULI, PIN-486886, MADHYA PRADESH - 486886
PH :8319050124.

## MAHARASHTRA

AHMEDNAGAR

570. AMIT SERVICE STATION (4158--), NEAR NAGAPUR HIGHWAY BRIDGE, NAGAR-MANMAD HIGHWAY, NAGAPUR DIST-AHMADNAGAR, MAHARASHTRA - 414111

AKLUJ

571. SONAJ AUTOMOTIVES PVT. LTD. (2665--), SHANKARRAO MOHITE PATIL, CO-OP INDUSTRIAL ESTATE, PLOT NO.36 P.O. BOX NO.-11, AKLUJ -413 101 (MAHARASHTRA) - 413101
PH :9657713360.

AKOLA

572. AUTOLAND (5936--), RAM NAGAR,TOSHNIWAL LAYOUT, AKOLA-444005, DISTRICT-AKOLA, MAHARASHTRA - 444005
PH :9422164050.

AKOLE

573. SAMARTH CAR CARE (5555--), MAHALAXMI COLONY,K.G. ROAD-AKOLE, DISTRICT - AHMEDNAGAR, PIN-422601, MAHARASHTRA - 422601
PH :9881759099.

AMALNER

574. LUCKY AUTO CARES (5853--), R.K. COMPLEX,R.K. NAGAR,DHULE ROAD, AMALNER-425401, DISTRICT-JALGAON, MAHARASHTRA - 425401
PH :9422789764.

AMBERNATH

575. J.S. AUTOMOBILES (4567--), B-31/3, MIDC, KALYAN AMBERNATH ROAD, AMBERNATH-421501, MAHARASHTRA - 421501
PH :9370116436.

AURANGABAD

576. CAR CARE (5173--), #85.SERVICE INDUSTRIAL SECTOR, TOWN CENTRE.CIDCO, DISTRICT-AURANGABAD, MAHARASHTRA - 431006
PH :9158000029.

577. MARUTI AUTOMOBILES (3441--), SHREYANAGAR, KALDA CORNER, SAMBHAJI NAGAR (AURANGABAD) - 431101
PH :9767301999.

BADLAPUR

578. OMKAR AUTO SERVICES (3376--), PLOT NO-A/54/1, KARJAT - BADLAPUR ROAD, MIDC BADLAPUR, MAHARASHTRA 421503 - 421503
PH :9326080457.

BARSHI

579. OM SERVICING CENTRE (5359--), KURWEDI ROAD - BARSI, DISTRICT - SOLAPUR , PIN - 413401, (MAHARASHTRA ) - 413401
PH :9850437003.

BEED

580. NEW AGWAN SERVICES (2235--), 850 SHYOG NAGAR, JALNA ROAD, BEED-431 122, - 431122
PH :9822217321.

BOISAR

581. SIFAR CAR CARE (4055--), PLOT NO. 15 AT-KURGAON, P O KUNDAN, BOISAR TARAPUR ROAD, TAL PALGHAR, DISTT THANE - 401506
PH :9765509990.

CHANDRAPUR (MAHARASHTRA)

582. SHEIKH AUTOMOBILES (5379--), APPOSITE GOVT. ITI.CIVIL LINES , CHANDRAPUR, DISTRICT - CHANDRAPUR, MAHARASHTRA - 442401
PH :9422171896.

CHIPLUN

583. MANORKAR AUTOMOBILES (270--), NEAR RAILWAY STATION, BOMBAY-GOA HIGHWAY, WALOPE CHIPLUN-415 605, DISTT. RATNAGIRI - 415605
PH :9421239999.

584. MAYUR MOTORS (168--), SITA APARTMENTS, NEAR BAHADUR SHEIKH NAKA, CHIPLUN DISTT. RATNAGIRI, MAHARASHTRA - 415605
PH :9422431112.

DAPOLI

585. ROYAL AUTO SERVICE STATION (3444--), DAPOLI-MANDANGAD ROAD, MAUJE-DAPOLI, TAL- DAPOLI, DIST. RATNAGIRI-415 712 (MAHARASHTRA) - 415712
PH :8888101776.

DEOPUR

586. AGRO ENGINEERING SERVICES (2244--), DIVERSION ROAD, DEOPUR, DHULE-424 005, - 424005
PH :9823059471.

DOMBIVLI

587. MEGA SERVICES (2573--), A-173,PHASE-1,, NEW KALYAN BYPASS ROAD , OPPOSITE ADARSH PARK,MIDC, DOMBIVLI (E)-421203 - 421203
PH :8424070777.

GADACHIROLI

588. VENUS AUTOMOTIVE (4170--), PLOT # 2, NR GOVERNMENT ITI COLLEGE, ADJ TO CHANDRAPUR GADACHIROLI HIGHWAY, GADACHIROLI, MAHARASHTRA-442605 - 442605
PH :9689228222.

ICHALKARANJI

589. SAI AUTO LEADS (3821--), 6/1108, SANGLI VES, ICHALKARANJI - 416115, DIST. KOLHAPUR, MAHARASHTRA - 416115
PH :9822009788.

ISLAMPUR

590. VIJAY MOTORS (5134--), PETH ISLAMPUR ROAD , NEAR PETH NAKA -ISLAMPUR, DISTRICT - SANGLI, MAHARASHTRA - 415409
PH :9860446084.

JALGAON

591. SHREE MOTORS (3040--), 362 SHIVAJI NAGAR, JALGAON-425 001, , - 425001
PH :9823150704.

KALWA

592. SHREE SIDDHI MOTORS (5668--), NEXT TO LILAVATI CO-OP SOCIETY,DATTAWADA, KALWA KHAREGAON ROAD-KALWA(W)-400605, DISTRICT - THANE, (MAHARASHTRA) - 400605
PH :9769775444.

KALWAN

593. KRISHNA AUTOMOTIVE (4037--), GANESH NAGAR, AT POST & TALUKA, KALWAN, DIST NASHIK-423501 - 423501
PH :8087988735.

KANKAVLI

594. SAPALE AUTO SERVICE PVT. LTD. (1975--), MUMBAI GOA ROAD, N.H.17, KALMATH, KANKAVLI DISTT. SINDHUDURG-416 602 - 416602
PH :9422434701.

KATOL

595. BALAJI SERVICE STATION (5962--), PLOT NO. XI,MIDC,SAWARGAON ROAD,DONGARGAON-, KATOL,NAGPUR-441302, DISTRICT-NAGPUR, MAHARASHTRA - 441302
PH :9763867144.

KHAMGAON

596. JAIDEEP MOTORS (4779--), NEAR RELIANCE PETROL PUMP, NANDURA ROAD, KHAMGAON-444303, DISTRICT-BULDHANA (MAHARASHTRA) - 444303
PH :9850352826.

KHED

597. BHARAT AGENCIES (4548--), NEAR KAMAKSHI PETROL PUMP, AT POST KALBANI, TALUKA KHED, DISTRICT RATNAGIRI, 415621 - 415621
PH :9049024781.

KOLHAPUR

598. VAKRATUNDA MOTORS (3142--), OPP MAHAVIR COLLEGE, NAGALA PARK, KOLHAPUR, - 416003
PH :9822611559.

KOPARGAON

599. SAI MOTORS (4449--), NAGAR MANMAD HIGHWAY, NEAR HOTEL ASHOKA, KOPARGAON, DIST. AHMEDNAGAR (MAHARASHTRA) - 423601
PH :9850684384.

LONAVALA

600. APPOLO MOTOR REPAIRING WORKS (2543--), MUMBAI-PUNE ROAD, LONAVALA, MAHARASHTRA-410 401, - 415409
PH :9370721905.

MAHAD

601. SHREE AUTO (2572--), NAGALWADI PHATA BOMBAY-GOA HIGHWAY, AT & TALUKA - MAHAD, DISTT. RAIGAD, MAHARASHTRA-402 301 - 402301
PH :9422495799.

MALEGAON

602. MALEGAON AUTO CENTRE (3721--), NEAR MOTI BAUG NAKA, MALEGAON-423 203, , - 423203
PH :9371376911.

MANGAON

603. KRUPA SERVICES (574--), KRUPA SERVICES, AT : NANORE, POST : MANGAON, DISTT-RAIGAD-402 104 - 402104
PH :9422375444.

MIRAJ

604. ASHOK AUTOMOBILES (5672--), C.S. NO:70-C,CHH - SHIVAJI ROAD, MIRAJ, DISTRICT - SANGLI, MAHARASHTRA - 416410

MUMBAI

605. ALLIED AUTO AGENCIES (2666--), 86/20 DR. AMBEDKAR ROAD, KHAR, MUMBAI-400 052, - 400052
PH :9768257450.

606. ASHA AUTO SERVICE (570--), I.O.C. DEALER, L.B.SHASTRI MARG, KURLA, MUMBAI-400 070 - 400070
PH :9833728833.

607. AUTO CRAFT (4759--), PLOT NO. 1-B, NEXT TO DAMJI SHAMJI IND ESTATE, LBS MARG, VIKHROLI (W), MUMBAI-400083 - 400083
PH :9820022227.

608. AMAR AUTOMOBILES (526--), KING'S CIRCLE, MATUNGA, MUMBAI-400 019 (MHRS)., - 400019
PH :9869473310.

609. CARKRAFT AUTOMOBILES AND INFRASTRUCTURE PVT. LTD. (4654--), ABC GODOWN, MINERVA INDUSTRIAL ESTATE, OFF P.K. ROAD, NEAR SAI DHAM MANDHIR, MULUND (W), MUMBAI - 400080
PH :9820296924.

610. CHAMUNDA MOTORS (P) LTD. (520--), RAMBAUG NEAR SUNDAR DHAM, OFF S.V.ROAD, BORIVILI (W), MUMBAI-400 092 - 400092
PH :9820063626.

611. CHEMBUR MOTORS (2526--), 31/A ANAND NAGAR, OFF SION TROMBAY ROAD, SINDHI SOCIETY CHEMBUR, MUMBAI-400 071 - 400071
PH :9820475704.

612. CHHAGAN MITHA (8945--), CORNER OF WARDEN ROAD & PEDDAR ROAD, POST BOX NO. 6521, MUMBAI -400026, MAHARASHTRA - 400026
PH :9820861441.

613. HIND AUTOMOBILES (550--), 29 SEWREE WADALA ROAD, KING'S CIRCLE, MUMBAI - 400 019 (MHRS)., - 400019
PH :9833876440.

614. LAXMI AUTO WORKS (2542--), PLOT NO.1041, SAYANI ROAD, PRABHADEVI, MUMBAI-400 025 - 400025
PH :9820303646.

615. ORIX AUTO INFRASTRUCTURE SERVICES LTD (1971--), 94 MAROL INDUSTRIAL ESTATE, ANDHERI KURLA ROAD, ANDHERI (EAST), MUMBAI-400 059 - 400059
PH :9820409079.

616. POWAI AUTO WORKS (1660--), OPP. PANCH KUTIR BUS STOP, 19 ADI SANKARACHARYA MARG, POWAI, MUMBAI-400 076 - 400076
PH :9820635317.

617. POWAI AUTO WORKS (4966--), GALA NO 14/15/16, BUILDING NO1, C WING, KAILAS INDUSTRIAL COMPLEX, PARKSITE VIDHROLI (W), - 400079
PH :9820635317.

618. PRINCE SERVICE CENTRE LLP (8931--), 34 GAMDEVI ROAD, SANGHANI ESTATE, GHATKOPAR (WEST), MUMBAI-400 086 - 400086
PH :9869034445.

619. RAVI AUTOMOBILE SERVICES (553--), GHATKOPAR-MAHUL ROAD, TILAK NAGAR, CHAMBUR, MUMBAI-400 089, - 400089
PH :8657442190.

620. SHAH CAR CARE (5436--), SADANWADI.LAKE ROAD.OFF LBS MARG, NEAR KRISHNA TALKIES, DISTRICT - MUMBAI , (MAHARASHTRA) - 400078
PH :9820068380.

621. SHAMAL MOTORS (1154--), VAITY WADI, BHANDUP-SONAPUR ROAD, BHANDUP (WEST), MUMBAI-400 078 - 400078
PH :9773911111.

622. ST. FRANCIS AUTOMOBILE (5154--), MOUNT POINSUR BORIVALI (WEST), MUMBAI - 400103, DISTRICT - MUMBAI, MAHARASHTRA - 400103
PH :8828904552.

623. SUPER AUTO SERVICES PVT. LTD. (2430--), DESAI WADI JAYWANT SAWANT ROAD, NEAR HAPPY HOME SOCIETY, DAHISAR (W), MUMBAI-400 068 - 400068
PH :9867253000.

624. SURAJ SANGHI SERVICE STATION (438--), DR. ANNIE BESANT ROAD, WORLI, MUMBAI-400 018, - 400018
PH :9821115492.

MURBAD

625. JAYDEEP AUTOMOBILES (5676--), MURBAD KALYAN HIGHWAY(NH-222),NEAR NAVDURGA HOTEL, AT-PO-TAL:MURBAD-421401, DISTRICT-THANE, MAHARASHTRA - 415621
PH :9423370219.

NAGPUR

626. BALAJI MOTORS (3078--), PLOT NO.18/27, NEAR NAKA NO.-1, KORADI ROAD, NAGPUR-20 - 440020
PH :9960634068.
627. HASAN GARAGE (2021--), MOHAN NAGAR, NAGPUR - 440 001 (MHRS)., , - 440001
628. M S SERVICES (5339--), 14 HILL ROAD , GANDHI NAGAR - NAGPUR , DISTRICT - NAGPUR , MAHARASHTRA - 440010
PH :9373422822.
629. R K MOTORS (8977--), 69 A V A LAYOUT, LAKADGANJ, NAGPUR-440 008, - 440008
PH :9890424190.
630. SAGAR AUTOMOBILES (2667--), MARUTI AUTHORISED SERVICE STATION, PLOT NO.3 NEAR PETROL PUMP, WARDHA ROAD UJJWAL NAGAR, NAGPUR-440 025 - 440025
PH :9960695823.
631. SAGAR AUTOMOBILES (4971--), WARDHA ROAD,, CHINCHBHAWAN, NAGPUR – 441108, - 441108
PH :9422145365.
632. SHREEJEE SERVICES (2027--), CHANDAK KOTHI, SUBASH ROAD, NAGPUR-440 018, - 440018
PH :9766699321.

NANDED

633. MARUTI CARES AND COLOURS (5778--), LABH NAGAR,BACK SIDE OF SURABH HOTEL, NANDED-431605, DISTRICT-NANDED, MAHARASHTRA - 431605
PH :9225751444.

NANDURBAR

634. MAULEE MOTORS (4736--), SURVEY NO. 130/2, PLOT NO. 43, ADARSHA NAGAR, NIZAR ROAD, NANDURBAR-425412, MAHARASHTRA - 425412
PH :9822377931.

NASHIK

635. HI TECH AUTO SERVICES (4451--), SURVEY NO 89/2, PLOT 1 & 2, OPP MOTIWALA MEDICAL COLLEGE, GANGAPUR-SATPUR LINK ROAD, NASHIK – 422012, MAHARASHTRA - 422007
PH :9225142471.
636. RACCA SERVICES (3720--), RACCA ESTATE, OLD GANGAPUR NAKA, HANUMAN WADI LINK ROAD, PANCHVATI, NASHIK - 422003 - 422003
PH :9096846468.
637. SAI AUTOMOBILES (3722--), SAPAT COMPLEX, OPP. PRESS HOSPITAL, NASIK ROAD-422 101, - 422101
PH :9822027931.

NAVI MUMBAI

638. BOSS (265--), AT/P.O. - TURBHE, SECTOR-22, VASHI, NAVI MUMBAI-400 705 - 400705
PH :9167766474.
639. C G MOTORS (4138--), PLOT NO R-966, NEAR MK ENGINEERING, RABALE MIDC, RABALE, NAVI MUMBAI, PINCODE 400701 - 400701
PH :9920205756.
640. CHETAN MOTORS (3143--), PLOT NO.-45, SECTOR-19A, OPP. DANA BAZAR EXIT GATE NO.3, BEHIND SHAMRAO VITHAL CO-OP BANK, VASHI, NAVI MUMBAI - 400705 - 400705
PH :9892067288.

NIGDI

641. SHALU AGENCY (2872--), 516/27 PRADHIKARAN, NIGADI, PUNE-411 044, - 411014

NIPHAD

642. SHRI SAI SERVICE STATION (4452--), NIPHAD AURANGABAD ROAD, NIPHAD, NASIK, MAHARASHTRA - 422303
PH :9823679999.

PACHORA

643. POOJA MARUTI AUTHORISED SERVICE CENTER (5564--), PLOT NO 75,PREM NAGAR ,KRISHNA PURI SHEVAR, PACHORA, DISTRICT - JALGAON , MAHARASHTRA - 424201
PH :9890320803.

PALGHAR

644. SIDDHI MOTORS (5553--), THEMBHEDE ROAD,GANESH KUND,, PALGHAR,DISTRICT - THANE, MAHARASHTRA, - 401404
PH :9890609107.

PANVEL

645. GANGAL MOTORS (2934--), PLOT NO.:132,133 &117, SECTOR 1-S, ROAD NO-5, BEHIND CIDCO GODOWN, NEW PANVEL, DISTRICT - RAIGAD, (MAHARASHTRA) - 410206
PH :9320226072.
646. IDEAL AUTOMOBILES (2279--), IDEAL HOUSE,PLOT NO-83,, PANVEL INDUSTRIAL CO OP ESTATE LTD., PANVEL, DISTRICT - RAIGAD, (MAHARASHTRA) - 410206
PH :9969602650.

PARBHANI

647. SAI SERVICING CENTRE (5252--), P7/5 MIDC, PARBHANI-431 401, MAHARASHTRA, - 431401
PH :9404504111.

PASHAN

648. MARUTI CAR SANJIVANI (5278--), SURVEY NO 5/2.SUTARWADI .SUSROAD.PASHAN, DISTRICT - PUNE, PUNE - 411021, MAHARASHTRA - 411021
PH :9960733360.

PATHARDI

649. SAGAR MOTORS (5979--), MALIBABHULGAON, NAGAR ROAD PATHARDI, MAHARASHTRA 414102 - 414102
PH :9822197969.

PEN

650. NAVNATH AUTO (5677--), OPPOSITE RAMWADI,S.T. STAND, NATIONAL HIGHWAY-17,TAL PEN-402107, DISTRICT-RAIGAD, MAHARASHTRA - 402107
PH :9834279228.

PHALTAN

651. VORA AUTOMOTIVE (2436--), SHINGNAPUR ROAD, KOLKI, PHALTAN-415523, - 415523
PH :7709436262.

PIMPALGAON

652. ASHWAMEDHA AUTO (2435--), "ASHWAMEDH", MUMBAI-AGRA HIGHWAY, PIMPLEGAON (B), DISTT. NASHIK - 422209
PH :9766600064.

PUNE

653. APPU AUTOMOBILES (5029--), SR. NO. 165, PLOT NO. 801, TALAWADE ROAD, PUNE - 412114, MAHARASHTRA. - 411062
PH :9371017595.
654. APPU SERVICE STATION (8966--), T BLOCK, S-32, NEAR PAWANA COMPLEX, MIDC, PUNE-411026 (MAHARASHTRA) - 411026
PH :9763538871.
655. ATHARVA CAR SERVICES (5161--), 5, BHUSARI COLONY, PAUD ROAD, KOTHRUD,PUNE-411038 , MAHARASHTRA - 411038
PH :9665024803.
656. MANAS AUTOMOTIVE (5443--), SURVEY NO 9/20A , ANAND THORAT ROAD , NEAR APJ ABDUL KALAM E LEARNING SCHOOL, KARVE NAGAR, PUNE - 411052. - 411052
PH :9822043007.
657. MARUTI CARE POINT (3337--), S. NO 273/5,BANER ROAD,OPP. VARSHA PARK, BANER,PUNE-411045, MAHARASHTRA, - 411045
PH :9689901475.
658. SAINATH AUTOMOBILES INDUSTRIES (1569--), SURVEY NO.36 PLOT NO.1, VADGAON KHURD SINHAGAD ROAD, NEAR GREEN FIELD HOTEL, PUNE-411 041 - 411041
PH :9822214282.
659. SANTOOR CAR CARE (2053--), ASHOK PLAZA, 32/2 WADGAON SHERI NEAR WEIKFIELD, PUNE NAGAR ROAD, PUNE-411 014 - 411014

RAHURI

660. ANAND MOTORS (4152--), IN FRONT OF ASHWINI HOTEL, NAGAR MANMA ROAD, A/P RAHURI DIST- AHMADNAGAR, MAHARASHTRA - 413705
PH :7350008501.

RAVER

661. RUCHI MOTORS (2631--), MARUTI AUTHORISED SERVICE STATION, RAVER-425 508, DISTT. JALGAON, (MAHARASHTRA) - 425508
PH :8805373406.

ROHA

662. AMIT MOTORS (4972--), NANA SHANKAR SHETH ROAD , NEAR GOVT REST HOUSE, DISTRICT - RAIGAD , ROHA - 402109, MAHARASHTRA - 402109
PH :9028376141.

SAKURI

663. SHREE SAI SERVICE CENTRE (5344--), NAGAR-MANMAD ROAD .GODAVARI, HOTEL JEWEL .PO:SAKURI ,TAL:RAHATA, DISTRICT - AHMEDNAGAR , MAHARASHTRA - 423107
PH :9970741777.

SANGAMNER

664. SAI MOTORS (2840--), NEAR GULEWADI PHATA, PUNE NASIK ROAD, SANGAMNER DIST. AHMEDNAGAR, PIN-422 608 (MHRS.) - 422608
PH :9860027513.

SANGLI

665. ASHOK AUTOMOBILES (3723--), 595/B, M.G.ROAD, SANGLI-416 416, - 416416
666. AWATI MOTORS (4772--), PADMAVATI COLONY, NEMINATH NAGAR VISHRAMBHAG, SANGLI-416415, MAHARASTRA - 416415
PH :9422407284.
667. BALAJI AUTO SERVICE (1564--), PLOT NO.43,GOLDEN PARK , BYPASS ROAD,SANGLI-416416 , DISTRICT-SANGLI , MAHARASHTRA - 416416
PH :9822106126.

SATANA

668. PATHAK MOTORS (5037--), YASHWANT NAGAR,TAHARABAD ROAD,, SATANA - 423301, DISTRICT - NASIK, (MAHARASTRA) - 423301
PH :9890216257.

SATARA

669. SIDDHI AUTOMOBILES (5464--), 294/A.DEGAON PATA - SATARA, RAHAMTPUR ROAD.MIDC SATARA, DISTRICT - SATARA , (MAHARASTRA) - 415002
PH :9422403178.

SAWANTWADI

670. CARKRAFT SERVICES PRIVATE LIMITED (8990--), PLOT NO.21 MUMBAI GOA HIGHWAY, KOLGAON-BHOM, SAWANTWADI-416 510, DIST. SINDHUGARH, MAHARASHTRA - 416510
PH :9423304639.

SHAHADA

671. MATOSHREE AUTOMOBILES (2870--), NO.558 SHAHADA DHONDAICHA ROAD, TAL. SHAHADA, NANDURBAR DISTT., (MAHARASHTRA) - 425409
PH :9421726230.

SHIRDI

672. SHREE GANESH AUTO CARE (4268--), POST SAKURI, TALUKA RAHATA, AHMEDNAGAR-423107, - 423107

SHRIRAMPUR

673. G.K. MOTORS (2871--), K.V. ROAD, SHRIRAMPUR, DISTT. AHMEDNAGAR, PIN-413 709. - 413709
PH :9822094098.

SOLAPUR

674. BALAJI MOTORS (1930--), 8536 B/1 MURARJI PETH, OPP. OLD PUNE NAKA OFFICE, SOLAPUR-413 002, - 413008
PH :9765111110.

THANE

675. PATRICIA AUTOMOBILES (529--), ALIGHT CHAMBER, ADJACENT GOLDEN DYES, OLD AGRA ROAD, HARDAS NAGAR, GOKUL NAGAR, THANE, WEST - 400601 - 400601
PH :9987175866.
676. SEAN MOTORS (5377--), DONTOLAV – VATAR, VIRAR (W), VIRAR SATPALA ROAD, TAL VASAI, DISTRICT – PALGHAR, MAHARASHTRA - 401301
PH :9324003123.
677. STERLING MOTOR GARAGE (555--), B1/B2, KOTHARI COMPOUND NO.3, 27 ACRES, NEXT TO D'MART, OFF GHODBUNDER ROAD, MANPADA, THANE (WEST), MAHARASHTRA - 400610 - 400601
PH :9820252926.
678. THANAWALA MOTOR AGENCY PVT. LTD. (3724--), DHIRAJ BAUG, L.B.S. MARG, NAUPAD, NEAR HARINIWAS CIRCLE, THANE-400 602 - 400602
PH :9820106904.
679. CARKRAFT SERVICES PRIVATE LIMITED (8973--), SAINATH NAGAR, GHODBUNDER ROAD, KASARVADAVALI, THANE (W) - 400615
PH :9833795855.

ULHASNAGAR

680. CHIMAN AUTOMOBILES (3845--), NEAR KAJAL PETROL PUMP, BALANI COMPOUND, VITHALWADI STATION ROAD, ULHASNAGAR 421003 - 421003
PH :9850223422.
681. MODERN CAR CARE (3260--), SHED NO 1/2/3, OPPOSITE SUPPER POINT HOTEL, SECTION 17, ULHASNAGAR – 421003, MAHARASHTRA - 421003
PH :9819774588.

URAN

682. SAI AUTOMOBILES (5665--), STATE HIGHWAY NO.56,NEAR JASAI NAKA, JASAI VILLAGE,URAN-410206, DISTRICT - RAIGAD, MAHARASHTRA - 410206
PH :9821806806.

VADA

683. SAI MOTORS & SERVICE CENTRE (5675--), VARALA, OPP. LAKE CITY, MANOR ROAD, WADA, , - 421303
PH :9226338578.

VITA

684. SONA AUTOMOTIVE (5671--), MAYANI ROAD, NEAR PRUTHVIRAJ HOTEL, OPP. LAKADE PETROL PUMP, DISTT VITA- 415311, - 415311
PH :9890223938.

WAI

685. ADITYA AUTO SERVICE (4271--), WAI SATARA ROAD, WAI-412803, SATARA DIST., - 412803
PH :9423862119.

WANI

686. SHEIKH AUTOMOBILES (8950--), PLOT NO 101, WANI GHUGUS ROAD, OM NAGRI, LAL GUDA TALAO, WANI, DIST. YAVATMAL, MAHARASHTRA 445304 - 445304
PH :9422171896.

WARDHA

687. BHARAT MOTOR (1631--), NAGPUR ROAD, NALWADI, WARDHA, MAHARASHTRA - 442001
PH :9881588388.

WARORA

688. ROHIT AUTOMOTIVE (5873--), NAGPUR,CHANDRAPUR ROAD,VINAYAK-, LAYOUT,TILAK WARD,WARORA-442907, DISTRICT-CHANDRAPUR, MAHARASHTRA - 442907
PH :9172060099.

YAVATMAL

689. M.S. MOTORS (460--), AMRAVATI ROAD HIGHWAY, LOHARA, YAVATMAL-445 001, - 445001
PH :9822222579.
690. RAMESH MOTORS (2024--), GARDEN ROAD, YAVATMAL, MAHARASHTRA-445 001, - 445001
PH :9422865222.

YEOLA

691. BIJASANI AUTOMOTIVE (3041--), PLOT NO 46, SURVEY NO 35/3, VINCHUR ROAD, YEOLA. DIST. NASIK, MAHARASHTRA - 423401
PH :9423185025.

## MANIPUR

IMPHAL

692. BORDIN MARUTI GARAGE (4879--), SANGAIPROU AIRPORT ROAD,, IMPHAL WEST, MANIPUR - 795001, , - 795001

SENAPATI

693. KOMUO MARUTI WORKS (4644--), NH-2, MAO TAPHOU, SENAPATI HQ, SENAPATI DISTRICT, MANIPUR - 795106 - 795106
PH :8794109474.

## MIZORAM

CHAMPAI

694. IRDIV- TC AUTO WORKS (5744--), SVENTH DAY TLANG,ZOTLANG ROAD, NEW CHAMPHAI-CHAMPHAI, DISTRICT-CHAMPHAI, MIZORAM - 796321
PH :9862405715.

LUNGLEI

695. LAWMA ENGINEERING WORKS (3125--), , A O C SQUARE, LUNGLEI, MIZORAM-796 701 - 796701
PH :9436147141.

## NAGALAND

DIMAPUR

696. ERJO MOTORS (4871--), EAST BLOCK, BURMA CAMP, NEAR BIBLE HOUSE, DIMAPUR, NAGALAND - 797112. - 797112
PH :9436004350.

## ODISHA

ANGUL

697. ZEET AUTOMOBILES (1573--), NALCO NAGAR, KANDASAR, ANGUL - 759 145, ORISSA - 759145
PH :9437021285.

BALANGIR

698. ASHIRWAD AUTOMOBILE WORKS (3177--), DAMJI GARAGE, THIKADARPARA, , , BALANGIR-767 001 - 767001
PH :9437223452.

BALASORE

699. AUTO CARE (432--), AT-BAMPADA, PO-CHHANPUR, CITY - BALESHWAR (BALASORE), ODISHA - 756056 - 756056
PH :9437051944.
700. TEKNO INDIA (3666--), D-2/9 INDUSTRIAL AREA, O.T. ROAD, BALASORE-756 003, (ORISSA) - 756001
PH :9861034990.

BARBIL

701. INDU MOTORS (3241--), IN FRONT OF UTKAL AUTOMOBILES, JODA-BARBIL HIGHWAY, BARBIL-758 035, (ORISSA) - 758035
PH :9437718008.
702. INDU MOTORS (--), IN FRONT OF UTKAL AUTOMOBILES, JODA-BARBIL HIGHWAY, BARBIL-758 035, (ORISSA) - 758035
PH :9437718008.

BHUBANESWAR

703. INDO JAPAN SERVICE (4936--), PLOT NO. 18, 19, 30 & 31, BHAGABANPUR INDUSTRIAL ESTATE, PO: PATRAPADA, BHUBANESHWAR-752019, ORISSA - 752019
PH :9861095444.

CUTTACK

704. AUTO MATES (426--), 3B/1325, SECTOR-11, CDA, CUTTACK, ODISHA - 753014 - 753008
PH :9437020646.
705. DURGA SERVICE CENTRE (8984--), NEAR PALAMANDAP, BADAMBADI, PO - ARUNODAY MARKET, DISTT - CUTTACK, PIN-753012 - 753012
PH :9937035762.

DHENKANAL

706. SHREE AUTO (8997--), GOUDUNIBEDIA, DHENKANAL - 759013, ODISHA - 759001
PH :9437414972.

JHARSUGUDA

707. AUTO MECHANIKA (2638--), S.H.-10 BEHERAMAL, JHARSUGUDA-768 203, ORISSA, - 768203
PH :9040380001.

PURI

708. URMILA MOTORS (5040--), HERA GOHIRI SAHI CHOWK ,PURI -1, DISTRICT - PURI, (ORISSA), - 752001
PH :7008651960.

SAMBALPUR

709. ANITA AUTO CARE (4834--), SALIA BAGICHA, LIONS CLUB ROAD, KUMBHARPARA, SAMBALPUR-768001 (ORISSA) - 768001
PH :9861248403.

SEMILIGUDA

710. ASHUTOSH MOTORS (5035--), MAIN ROAD. NH-43,, SEMILIGUDA, DISTRICT-KORAPUT, (ORISSA) - 764036
PH :9437405417.

## PONDICHERRY

KARAIKAL

711. MARUTI TECH (2669--), NO.1,AKKARAIVATTAM,NAGAORE MAIN ROAD , OPP TO ONGC,KARAIKAL-609604, DISTRICT-KARAIKAL, PONDICHERRY - 609604
PH :7373788705.

PUDUCHERRY

712. S D K MOTORS (471--), PLOT NO.12, 100 FEET ROAD, OZHANDAI KEERAPALAYAM MUDALIARPET, PONDICHERRY-605 004 - 605004
PH :9843045689.
713. A.P.P. MARUTI MOTORS (2670--), PLOT NO.6 GUNDU SALAI ROAD, NATESAN NAGAR, NEAR 100 FEET ROAD, PONDICHERRY-605 005 - 605009

714. MARUTI MISSION (5067--), 60 RAGAVENDIRA NAGAR.KAMARAJ SALAI, THATTANCHAVADY PONDICHERRY, TINDIVANAM ROAD PONDICHERRY-9, PONDICHERRY - 605009
PH :9786589000.

## PUNJAB

### AHMEDGARH

715. GAHIR AUTOMOBILES (2877--), LUDHIANA MALER KOTLA ROAD, VILL. GOPALPUR CITY, AHMEDGARH, (PUNJAB) - 148021
PH :9417553627.

### AJNALI

716. VISHWAKARMA MOTORS (5666--), NEAR VIMAL DHARAMKANTA - AJNALI, DISTRICT - FATEHGARH SAHIB, PUNJAB, - 147301
PH :9814528084.

### AMLOH

717. BINDRA MOTORS (5844--), NEAR DESH BHAGAT COLLEGE SONTI, AMLOH, DISTRICT-FATEH GARH SAHIB, PUNJAB - 147203

### AMRITSAR

718. HANSON AUTOMOBILES (1722--), MAQBOOL PURA, G.T. ROAD, AMRITSAR, - 143001
PH :9815167669.
719. JACKSON LUBRICANTS (364--), 16 COURT ROAD, NEAR RAVI GAS AGENCY, AMRITSAR-143 001, - 143001
PH :9814299944.
720. KAPOOR'S KAR KARE PVT. LTD. (737--), I/S MAHA LAKSHMI, CALICO PRINTING MILLS, OLD JAIL ROAD, AMRITSAR(PUNJAB). - 143001
PH :9814213113.
721. SAGGU SERVICE CENTRE (733--), HIDE MARKET, AMRITSAR-143 001 (PUNJAB)., , - 143001
PH :8968497779.

### BANUR

722. AMRIK SERVICE STATION (2433--), PATIALA ROAD, BANUR, DISTT. MOHALI(PUNJAB), - 140601
PH :9815591325.

### BARNALA

723. GAURAV MOTORS (4962--), DHANAULA ROAD, BARNALA - 148101, DISTRICT SANGRUR, PUNJAB - 148101
PH :9317512916.
724. PUNJAB MOTOR GARAGE (6222--), DHANAULA ROAD, BARNALA (PUNJAB), , - 148101
PH :9317512360.

### BHADSON

725. FRIENDS MOTORS (2233--), NABHA ROAD, BHADSON-147 202, DISTT. PATIALA, (PUNJAB) - 147202
PH :9815700778.

### BHATINDA

726. KRISHNA AUTOS (4571--), 40FT ROAD NAMDEV MARG NEAR INDRANI HOSPITAL ,BATHINDA (PUNJAB) 151001 - 151001
PH :9888671810.
727. MODERN MOTORS (6234--), OPP. T.V. TOWER, MANSA ROAD, BHATINDA, - 151001
PH :9814177075.
728. SUPER AUTOMOBILES (6232--), TINKONI, GONIANA ROAD, BHATINDA, - 151001
PH :9814036163.

### BUDHLADHA

729. JINDAL AUTOMOBILES (2147--), NEAR P.S.E.B., BHIKHI ROAD, BUDHLADA-151 502, DISTT. MANSA - 151502
PH :9815516964.

### DERABASSI

730. BINDAL AUTOMOBILES (1248--), CHANDIGARH AMBALA ROAD, PARAS RAM MARKET, DERA BASSI-140 507, - 140507
PH :9914449711.

### DHURI

731. SHIV MOTORS (1962--), NEAR SDM OFFICE, SANGRUR ROAD, DHURI-148 024, - 148024
PH :9872851068.

### DINANAGAR

732. D.S. MARUTI SERVICE STATION (3333--), G.T. ROAD, DINA NAGAR, DIST. GURDASPUR-143 531, (PUNJAB) - 143531
PH :9814873101.

### DIRBA

733. PENTAGON MECHANICAL WORKS (2564--), JIND-SANGRUR ROAD, DIRBA, DISTT. SANGRUR, (PUNJAB) - 148035
PH :9876543400.

### DORAHA

734. FATEH MOTORS (2048--), G.T. ROAD, DORAHA, (LUDHIANA), - 141421
PH :9814031784.

### FAZILKA

735. BAHL MOTORS (6229--), ABOHAR ROAD, FAZILKA-152 123, , - 152123
PH :9815700550.

### FIROZPUR

736. SUTLEJ AUTOMOBILES (3568--), G.T. ROAD, FEROZEPUR CANTT., PIN-152 001 (PUNJAB), - 152001
PH :9417009985.

### GIDDARBAHA

737. JIWAN CAR CENTRE (9021--), BHATINDA ABOHAR, NATIONAL HIGHWAY, GIDDERBAHA-152 101, DIST. MUKETSAR (PUNJAB) - 152101
PH :9779600086.

### GOINDWAL SAHIB

738. DASS MOTORS (8941--), NEAR KALAYAN JEWELLERS MINI SHOWROOM, KHADOOR SAHIB CHOWK, GOINDWAL SAHIB, TARN TARAN, PUNJAB - 143422. - 143429
PH :9914699121.

### GURDASPUR

739. VIJAY SERVICE STATION (749--), NEAR RAILWAY CROSSING, PATHANKOT ROAD, GURDASPUR, (PUNJAB) - 143521
PH :9814437637.

### HOSHIARPUR

740. JOGINDER MOTORS (2268--), BYE PASS TANDA ROAD, HOSHIARPUR-146 001, , - 146001
PH :9803227000.

### JAGRAON

741. DHALIWAL AUTOMOBILES (2035--), NEAR AJANTA PETROL PUMP, G.T. ROAD, JAGRAON DISTT. LUDHIANA, (PUNJAB) - 142026
PH :9814318600.

### JALANDHAR

742. CITY POINT SERVICE STATION (4528--), AVTAR NAGAR ROAD, BEHIND T.V. CENTRE, OPP HOTEL REGENT PARK, JALANDAHR - 144003
PH :9779613576.
743. KAAR KARES (725--), G.T.ROAD, JALANDHAR, 144 001 (PUNJAB)., - 144001
PH :9569295585.
744. KAPOOR MOTOR GARAGE (1649--), OPP. SPORTS COLLEGE, KAPURTHALA ROAD, JALANDHAR CITY, - 144623
PH :9815040411.
745. PUNJAB MOTOR GARAGE (8959--), HMV CHOWK, NEW GRAIN MARKET ROAD, JALANDHAR CITY-144 008 - 144008
PH :9814675433.

### KAPURTHALA

746. T.S. WALIA MOTORS (267--), MANSOORWAL, JALLANDHAR ROAD, KAPURTHALA, - 144601
PH :9357211525.

### KHARAR

747. AUTOXON (9027--), SCF 2, CHANDIGARH ROAD, KHARAR, SAS NAGAR,140301 - 160055
PH :9781815959.

### KURALI

748. V K MOTORS (8943--), CHANDIGARH ROPAR ROAD, KURALI, DISTRICT SAS NAGAR (MOHALI), PUNJAB -140103 - 140103
PH :9814273873.

### LALRU

749. HITECH MOTORS (2777--), IOC PETROL PUMP, AMBALA CHANDIGARH ROAD, LALRU DISTT. PATIALA, PUNJAB - 140501
PH :9888191444.

### LUDHIANA

750. PUNJAB AUTO CENTRE (6221--), OPP TELEPHONE EXCHANGE, BHARAT NAGAR CHOWK, LUDHIANA-141 001, - 141001
PH :9855117003.
751. REEHAL AUTOMOBILE SERVICES (1176--), OPP. JAMALPUR POWER HOUSE, CHANDIGARH ROAD, LUDHIANA-141 010, - 141015
PH :9357110000.
752. SATNAM MOTOR WORKSHOP (4533--), OPP MILK PLANT, FIROZPUR ROAD, LUDHIANA, - 141003
PH :9855228591.
753. STAR AUTOS (4650--), JALANDHAR BY PASS, G.T. ROAD, LUDHIANA, - 141012
PH :9216844220.
754. VISHAL AUTOMOBILES (1262--), G.T. ROAD, DHOLEWAL, LUDHIANA-141 003, - 141003
PH :9815206060.

### MANDI GOBINDGARH

755. NATIONAL MOTORS (1070--), G.T. ROAD, NEAR P & S BANK, MANDI GOBINDGARH-147 301, - 147301
PH :9317862000.

### MANSA (PUNJAB)

756. LOVEKESH ENTERPRISES (2162--), NEAR N.M. COLLEGE, MANSA-151 505, (PUNJAB), - 151505
PH :9216524143.

### MOGA

757. GURU NANAK MOTOR REPAIRING WORKS (732--), G.T.ROAD, MOGA-142 001 (PUNJAB)., , - 142001
PH :9914121387.

### MOHALI

758. BENZ AUTO SCAN (5734--), E-153,PHASE 7, INDUSTRIAL AREA -MOHALI, DISTRICT-MOHALI, PUNJAB - 160055
PH :9876101806.
759. SETHI MOTORS (4742--), PLOT NO. E-159, INDUSTRIAL AREA, PHASE-7, MOHALI, PUNJAB - 160055
PH :9814307002.
760. UNIPOINT (5043--), PLOT NO,593., INDUSTRIAL AREA PHASE-IX.MOHALI., DISTRICT - MOHALI, (PUNJAB) - 160062
PH :7814402838.

### MORINDA

761. SONY MOTOR PALACE (1077--), SIRHIND ROAD, MORINDA-140 101, , - 140101
PH :9815612477.

### MUKERIAN

762. MARSHAL SALES CORPORATION (5251--), NEAR RADHA SOAMI SATSANG, PATHANKOT ROAD, MUKERIAN - 144211, DISTRICT HOSHIARPUR,PUNJAB - 144211
PH :8283835926.
763. NEW MODERN AUTOMOBILES (4437--), G.T. ROAD, MUKERIAN, PUNJAB, - 144211
PH :9463292013.

MUKTSAR

764. MALWA MARUTI CENTRE (4764--), OPP GOVT COLLEGE KOTKAPURA ROAD, MUKTSAR, PUNJAB, - 152026
PH :9814622081.

NAKODAR

765. MEHTA MOTORS (3531--), KHADDAR BHANDAR ROAD, NAKODAR-144040 - 144040
PH :9815600082.

PATIALA

766. PARAS MOTORS (4778--), PLOT NO. 25-A, NEAR HOTEL FLYOVER FACTORY AREA, PATIALA-147001, PUNJAB - 147001
PH :9814089861.
767. RAJINDRA MOTORS (8924--), C-177, INDUSTRIAL FOCAL POINT, PATIALA, PUNJAB - 147003
PH :9316200335.

PATTI

768. ANU AUTOMOBILE (2747--), AMRITSAR ROAD, NEAR RADHA SWAMI SATSANG, PATTI DISTT. AMRITSAR, (PUNJAB) - 143416
PH :8575210003.

PHAGWARA

769. SWAMI MOTORS (3774--), (PAMMI W/SHOP), OPP. B.N. DUGGAL PETROL PUMP, G.T. ROAD, PHAGWARA DIST. KAPURTHALA - 144401
PH :9815107989.

QADIAN

770. HI-TECH AUTOMOBILES (4945--), NEAR VILLAGE NATHPURA, BATALA ROAD, QADIAN, DISTT. - GURDASPUR, PIN - 143516, PUNJAB - 143516
PH :9877510294.

RAIKOT

771. RANA SUPREME MOTOR GARAGE (3732--), NEAR GURUDWARA TAHLIANA SAHIB, BARNALA BYE PASS ROAD, RAIKOT, DISTT. LUDHIANA (PUNJAB) - 141109
PH :9814265791.

RAJPURA

772. NOOR MOTORS (3045--), PATIALA ROAD, RAJPURA-140 401, (PUNJAB), - 140401
PH :9814507867.

RAMPURAPHUL

773. BALAJI AUTOMOBILES (4443--), OPPOSITE FCI GODOWN, RAMPURA PHUL - 151103 - 151103
PH :9417172671.
774. VIRDI MOTOR GARAGE (3046--), BARNALA ROAD, RAMPURAPHUL-151 103, DISTT. BATHINDA, (PUNJAB) - 151103
PH :9872874175.

SANGRUR

775. RAKESH MARUTI SERVICE (6325--), JIND - DELHI ROAD, NEAR E.S.I. DISPENSARY, SANGRUR-148 001, - 148001
PH :9815103944.
776. SANGRUR MARUTI CENTRE (1632--), PATIALA ROAD, OPP. MILITARY CAMPUS, SANGRUR-148 001, (PUNJAB) - 148001
PH :9417510111.

SIRHIND

777. BADRI DHAM CAR SERVICE (1062--), G.T. ROAD, SIRHIND-140 406, , - 140406
778. MALHOTRA MOTORS (4657--), OPP. INCOME TAX OFFICE, SIRHIND, DISTT FATEHGARH SAHIB, PUNJAB - 140406
PH :9815844008.

SULTANPUR LODHI

779. HANDA MOTORS (2776--), TALWANDI ROAD, SULTANPUR LODHI, DISTT. KAPURTHALA, (PUNJAB) - 144626
PH :9815623392.

SUNAM

780. SUNAM AUTOMOBILES (3924--), PATIALA ROAD, NEAR OCTROI POST, SUNAM, DISTT. SANGRUR - 148028
PH :9417076315.

TANDA

781. MALWA AUTO CARE CENTRE (2073--), G.T. ROAD BY-PASS, TANDA, DISTT. HOSHIARPUR, (PUNJAB) - 144204
PH :9814392103.

ZIRA

782. NEW AUTOMOBILES (5477--), NEAR BYE PASS, FEROZPUR ROAD, ZIRA, TEHSIL ZIRA, DIST. FEROZPUR, PUNJAB - 142047. - 142047
PH :9463240231.

## RAJASTHAN

ABU ROAD

783. UNIQUE MOTORS (4923--), MOUNT ROAD, AKRABHATTA, ABU ROAD-307 510, (RAJASTHAN) - 307510
PH :9929177781.

AJMER

784. ASHOK AUTOMOBILES (1121--), BYEPASS ROAD, PARVATPURA, IND.AREA, AJMER (RAJASTHAN) - 305002

ALWAR

785. POOJA MOTORS (5439--), POOJA MOTORS,NEAR AMARNATH PETROL PUMP,DELHI ROAD ,MUNGSKA - ALWAR , DISTRICT - ALWAR , RAJASTHAN - 301001
786. VERTEX AUTOMOBILES PVT. LTD. (1944--), CHANDUKA BHAWAN, SWARG ROAD, ALWAR-301 001, - 301001

BARMER

787. VEW SERVICE (1238--), S-181 & 182, RIICO, BARMER-344 001, (RAJASTHAN) - 344001

BASSI

788. VARDHANI MOTORS (5358--), NEAR NALAYA BASSI, DISTRICT - JAIPUR , RAJASTHAN, - 303301
PH :9950107203.

BEHROR

789. K.L. INTERNATIONAL AUTOMOBILES (1763--), DELHI JAIPUR HIGHWAY, VILLAGE DHAMI, P.O. KANKARDOPA, TEHSIL BEHROR DIST. ALWAR (RAJASTHAN) - 301701

BHARATPUR

790. CLASSIC MOTORS (2348--), DEEG ROAD, KUMHER GATE, BHARATPUR-321 001, (RAJASTHAN) - 321001
PH :9414026545.

BHILWARA

791. NATIONAL SERVICE CENTER (4761--), SANGANER COLONY, KOTA ROAD, BHILWARA-311001, RAJASTHAN - 311001
PH :9829120285.
792. QUICK SERVICES (3473--), SABUN MARG, PURAN DAS JI KI BAGICHEE, BHILWARA-311 001, - 311001

BHINIMAL

793. GURJAR MOTORS (5567--), RAMSIN ROAD,OPP PRADEEP PETROL PUMP, BHINMAL, DISTRICT - JALOR, RAJASTHAN - 343029
PH :9414374962.

BHIWADI

794. WHEEL-O-CITY (4246--), E-7D (A) PHASE-1, NEAR RIICO CHOWK, BHIWADI, RAJASTHAN - 301019

BIKANER

795. GENERAL AUTOMOBILES (1123--), RANI BAZAR, RAIWAY CROSSING, BIKANER (RAJASTHAN), - 334001
796. VISHI MOTORS (5559--), PLOT NO 55(A) ,I.A. RANI BAZAR-BIKANER, DISTRICT - BIKANER, RAJASTHAN, - 334001

BUNDI

797. SHRI JI MOTORS (2174--), OPP. KUMBHA STADIUM, KHOJA GATE, BUNDI, (RAJASTHAN) - 323001
PH :9990270676.

CHOMU

798. SHREE LAXMI MOTORS (3072--), MORIJA ROAD, CHOMU, JAIPUR-303702, (RAJASTHAN) - 303702
PH :9828160281.

CHURU

799. ABS MOTORS (2978--), JAIPUR ROAD, CHURU-331 001, (RAJASTHAN), - 331001

DAUSA

800. BALAJI MOTORS (4564--), NEW MANDI ROAD, NEAR TRANSFORMER, DAUSA-303303, - 303303

DHAULPUR

801. NARAYAN MOTORS (3345--), G.T. ROAD, DHOLPUR, (RAJASTHAN), - 328001
PH :9116013413.
802. NARSING SERVICE CENTRE (3074--), NEAR JAGDISH TALKIES, BARI ROAD, DHOLPUR-328 001, (RAJASTHAN) - 328001
PH :9414026820.

DIDWANA

803. SANTOSH AUTOMOBILES (5450--), SANTOSH ATUOMOBILES ,KUCHAMAN ROAD , DIDWANA , DISTRICT - NAGAUR , (RAJASTHAN) - 341303
PH :9828833363.

DUDU

804. NEETA AUTOMOBILES (4855--), C/O NEW JAIN GUEST HOUSE, NH-8, JAIPUR AJMER ROAD, DUDU, RAJASTHAN, - 303008
PH :9667031098.

JAIPUR

805. J.K. AUTOMOBILES (2058--), 38 SUSHILPURA, AJMER ROAD, JAIPUR-302 007, - 302007
806. JAI SHRI RAM AUTO SERVICE CENTRE (1140--), OPP. SHYAM NAGAR TURN, MAIN AJMER ROAD, SODALA JAIPUR, RAJASTHAN - 302019
807. KATARIA MOTORS (2577--), 9-A NEMINAGAR VISTAR , AMRAPALI MARG, VAISHALI NAGAR, JAIPUR -302021 - 302021
808. KRISHNA AUTOMOBILES (5363--), B-27 SUNDAR NAGAR ,MANSAROVAR , JAIPUR, DISTRICT - JAIPUR, RAJASTHAN - 302020
PH :9829968075.
809. LAXMI MOTORS (2576--), OPP METRO PILLAR NO 34, GANGA JAMUNA CROSSING, NIRMAN NAGAR, JAIPUR, RAJASTHAN - 302019 - 302019
PH :9351551181.
810. M. R. MOTORS (8933--), PLOT NO. 120-121 & 125-126, VANE VIHAR, 200FT BYE PASS, JHOTWARA, JAIPUR (RAJASTHAN) - 302012
811. A-1 MOTORS (4856--), D-28 MALVIYA NAGAR., INDUSTRIAL AREA JAIPUR., DISTRICT - JAIPUR , RAJASTHAN - 302017
PH :9414047628.

812. AMGI AUTOMOBILES (8993--), DIGGI MALPURA ROAD, SANGANER, JAIPUR - 302029, RAJASTHAN - 302029
PH :9828012009.
813. AUTONITY JAIPUR (4852--), GOPALPURA BYPASS, DELHI KISHANGARH, HIGHWAY JAIPUR, DISTRICT - JAIPUR - 302019, RAJASTHAN - 302019
PH :9784377503.
814. AUTONITY VKIA (8927--), PLOT NO.6, GIRDHAR COLONY, SIKAR ROAD, JAIPUR-302 013 - 302039
815. RIGHTWAYS CO. (1131--), KISHANPOLE BAZAR, JAIPUR, , - 302002
816. SAISHA MOTORS (1764--), MAIN SHIPRA PATH, OPP. SECTOR 93, AGARWAL FARM, MANSAROVAR, JAIPUR-302 020 - 302020
817. SERVICE CENTRE (1139--), OPP. TOURIST HOTEL, M.I. ROAD, JAIPUR-1, - 302001
PH :9351551181.
818. SHARP MOTORS (2032--), J-3 HIMMAT NAGAR, MAIN TONK ROAD, GOPAL PURA CIRCLE, JAIPUR-302 004 - 302004
PH :9694420002.
819. SUPREME MOTORS (8952--), A-25 ASSAM MANSION, TRANSPORT NAGAR, JAIPUR-302 003, - 302003
PH :7737279332.
820. TOSHNIWAL AUTOMOBILES (3475--), 131 SHRI GOPAL NGAR, GOPALPURA BYEPASS, JAIPUR, (RAJASTHAN) - 302015
PH :9887553836.

JHUNJHUNU

821. DADHIMATI MOTORS (1648--), OPPOSITE RSEB OFFICE, BAGAR ROAD, JHUNJHUNU, (RAJASTHAN) - 333001
PH :9587007122.
822. VISHWAKARMA AUTOMOBILES (3071--), HPC DEALER, RANI SATHI ROAD, JHUNJHUNU-333 001, (RAJASTHAN) - 333001
PH :9461058839.

JODHPUR

823. DEORA MOTORS (5353--), UPPER UNDER BRIDGE .PAOTA 'C' ROAD, JODHPUR, DISTRICT - JODHPUR, RAJASTHAN - 342006
PH :9829026069.
824. P.D. MOTORS (3340--), NATIONAL HIGHWAY NO. 62, NEW PALI ROAD, NEAR JHALAMAND CIRLCE, JODHPUR, RAJASTHAN - 342005. - 342005

KISHANGARH

825. RADHA SWAMI AUTOMOBILES (440--), NEAR AJMER ROAD - BUS STAND,

, KISHANGARH., DISTRICT AJMER, RAJASTHAN , - 305801
PH :9252059798.

KOTA

826. FRIENDS AUTOMOBILES (--), KOTA BUNDI ROAD, NH 12, OPP. HOTEL MENAL RESIDENCY, KOTA - 323021
PH :9829529479.

KOTPUTLI

827. VIKAS MARUTI SERVICE CENTRE (4970--), NH-8, NEAR MEENA GAS AGENCY GODOWN, KOTPUTLI - 303108, RAJASTHAN - 303108
PH :9929383045.

KUCHAMAN

828. DALUKA AUTO SALES (4565--), NEARBY SHARDA PALACE HOTEL,, KUCHAMAN BYE PASS,, KUCHAMAN CITY, 341508, - 341508
PH :9414433240.

MAKRANA

829. GEHLOT MOTORS (454--), OPPOSITE TO G.S.S, MANGLANA ROAD, MAKRANA, RAJASTHAN - 341505
PH :9829024687.

MERTA

830. DELUX CAR SERVICE CENTRE (3856--), KUCHERY ROAD, MERTA CITY, DISTT. NAGAUR, - 341510
PH :9414004543.

NAGAUR

831. CLASSIC AUTOMOBILES (1179--), DIDWANA ROAD, (DELHI GATE), NAGAUR-341 001, (RAJASTHAN) - 341001
PH :9672501234.

NEWAI

832. HEENA MOTORS (5568--), NEWAI BYEPASS ,NEAR JHILAY MOAD, NEWAI, DISTRICT - TONK, RAJASTHAN - 304021
PH :9414228066.

PILANI

833. MARUTI CARE CENTRE (3073--), CHIRAWA ROAD, DHANI POPSINGH, PILANI- 333031, RAJASTHAN - 333031
834. MARUTI CARE CENTRE (--), CHIRAWA ROAD, DHANI POPSINGH, PILANI- 333031, RAJASTHAN - 333031

PINDWARA

835. RUNEJA MOTORS (5758--), NH-14,OPP PATHIK MIDWAY , PINDWARA-307022, DISTRICT-SIROHI, RAJASTHAN - 307022
PH :9610451492.

RAJSAMAND

836. VIPUL AUTOMOBILES (2170--), NH -8, BHAGWANDA, , BEHIND GOVT. PRIMARY SCHOOL, , RAJSAMAND, RAJASTHAN, - 313333

RAWATBHATA

837. APNA MARUTI GARAGE (5940--), OPP. RAM TEKRI MANDIR,PRATAP MARKET, MAIN ROAD,RAWATBHATA-323305, DISTRICT-CHITTORGARH, RAJASTHAN - 323305

SIKAR

838. RAJ AUTOMOBILES (8949--), NEAR RTO ROAD, JAIPUR JHUNJHUNU BYEPASS, SIKAR, DISTRICT - SIKAR, RAJASTHAN - 332001

SRI MADHOPUR

839. BHARAT MOTORS (5757--), WARD NO 4,BYE PASS ROAD , SRI MADHOPUR-332715, DISTRICT- NEEMKATHANA, (RAJASTHAN) - 332715
PH :9251377020.

SRIGANGANAGAR

840. ROHIT UDYOG (1132--), 75 K-BLOCK, SRIGANGANAGAR, , - 335001

SUJANGARH

841. SHRI CHARBHUJA MARUTI (4924--), LANDU ROAD, SUJANGARH, DISTRICT-CHURU, RAJASTHAN - 331507
PH :9828118827.

SURATGARH

842. ROHIN SERVICE STATION (2646--), N.H.15 BIKANER ROAD, OPP. G.S.S. POWER HOUSE, SURATGARH-335 804, (RAJASTHAN) - 335804

TIJARA

843. M D MOTORS (5875--), ALWAR ROAD,NEAR BOLLYWOOD FARM, TIJARA-, DISTRICT-ALWAR, RAJASTHAN - 301411
PH :9351607080.

TONK

844. SUMIT MARUTI (4566--), G 1 – 103, RIICO INDUSTRIAL AREA, JAIPUR ROAD, TONK-304001, RAJASTHAN, - 304001
PH :9214494900.

UDAIPUR (RAJASTHAN)

845. ALOK AUTOMOBILES (8999--), PLOT NO. 1, ZHAMAR KOTRA ROAD, OPPOSITE SAHKARI UPBHOKTA MARKET, SECTOR-6, UDAIPUR-313001 - 313001
PH :9414166305.
846. SHREE SAI CAR CARE (2376--), PUNJAWATI, PULLA, UDAIPUR-313 001, - 313001
PH :9414167605.

## TAMIL NADU

ARAVAKURICHI

847. GOWRI MARUTI (5570--), OPPOSITE IOCL PETROL PUMP,NH-7, ARAVAKURICHI, DISTRICT - KARUR, TAMILNADU - 639201
PH :9994818043.

ARCOT

848. HARI AGENCIES (468--), #27, ANNA SALAI, ARCOT , TAMIL NADU -632503, - 632503

ATTUR

849. GANESAA MOTORS (4538--), 1/1D, ARANGABALA NAGAR, SALEM CUDDALORE MAIN ROAD, NARASINGAPURAM, ATTUR (TK), SALEM, TAMIL NADU, PIN - 636108 - 636108
PH :9443273866.

AVINASHI

850. K.P.K AUTOMOTIVE (5547--), SF NO.460/2,TIRUPPUR MAIN ROAD, AVINASHILINGAMALAYAM,AVINASHI-641654, DISTRICT-COIMBATORE, TAMILNADU - 641654
PH :9443301732.

BHAVANI

851. CAR ZONE AUTO SERVICE (5332--), METTUR MAIN ROAD , NATARAJAPURAM BHAVANI, DISTRICT - ERODE , TAMILNADU - 638301
PH :9842085670.

CHENGLEPUT

852. MARUTI PRO CARE (2941--), 57-A/1 THIRUKAZHUKUNDRAM ROAD, CHENGALPATTU-603 002, (T.N.), - 603002

CHENNAI

853. NSK MARUTI (4975--), 2/547, EAST COAST ROAD, NEELANKARAI, CHENNAI, TAMIL NADU - 600115
PH :9841047232.
854. P.A. SERVICE STATION (2346--), NO. 1 GOVINDARAJ ALUMEL AMMAL NAGAR, NEAR 100 FEET ROAD, AGRAHARAM, KORATTUR, CHENNAI-600 076 - 600076
PH :9840378025.
855. SWAMY AUTOMOBILES (456--), NO. 5, TANK BUND ROAD, NUNGAMBAKKAM, CHENNAI, TAMIL NADU - 600034 - 600008
PH :9840891916.
856. UNIQUE CAR CARE (5868--), NO.54, FIRST STREET, MANIKANDAPURAM, MTH HIGH ROAD, THIRUMULLAIVOYAL, CHENNAI, TAMILNADU - 600062 - 600062
857. VAISHALI MOTORS (4529--), 4/577 RAJIV STREET, OLD MAHABALIPURAM ROAD, KOTTIVAKAM, CHENNAI-600041 - 600041
PH :9840138888.
858. WHEELS AUTO (469--), 40 KASTURIBA NAGAR, 1ST CROSS ROAD, ADYAR, CHENNAI-600 020 - 600020
PH :9840138888.
859. ABIRAMI MOTORS (5131--), 6.ANNA NEDUMATHAI , CHOOLABEDU, CHENNAI-600094, TAMILNADU - 600094
PH :9840017558.
860. AUTO TECH (3445--), NO.6, 1ST STREET, KAMATCHI COLONY, CHENNAI, KANCHIPURAM, TAMIL NADU - 600047 - 600047
PH :9941019455.

861. EASVARI MOTORS PRIVATE LIMITED (1431--), W-110 ANNA NAGAR, CHENNAI-600 040, , - 600010
PH :9840855655.
862. KARS KARE SERVICE CENTRE (2579--), 648 T.H. ROAD, TONDIARPET, CHENNAI-600 081, - 600081
PH :9841097259.
863. MARUTI NEEDS (2531--), NO.2 PARK ROAD, PADI, CHENNAI-600 050, - 600050
PH :9940099500.

CHIDAMBARAM

864. HI-TECH MARUTI (3231--), NO.45,SITHIVEL NAGAR,SALIYANTHOPPU , BYE PASS ROAD,CHIDAMBARAM-608001 , DISTRICT-CUDDALORE , TAMILNADU - 608001
PH :9585538671.

COIMBATORE

865. SOUTH INDIA MOTORS (MARUTI) (4752--), 9A/3 AVINASHI ROAD, NEAR KMCH POLICE CHECK POST, CIVIL AERODROME POST, SITRA, COIMBATORE-641014 (TAMIL NADU) - 641014
PH :9843027601.
866. GURU AUTO GARAGE (4965--), 2/98, IRUGUR ROAD, NEAR BSNL OFFICE, CHINNAMPALAYAM, COIMBATORE, TAMIL NADU - 641062
PH :9843256247.
867. LOTUS AUTOMOBILES (4758--), 1647-A AVINASHI ROAD, HOPE COLLEGE, PEELAMEDU, COIMBATORE-641004 (TAMILNADU) - 641004
PH :9842265133.

COONOOR

868. SHANTHI AUTO CARE (6054--), FIGURE OF 8 ROAD, COONOOR-643101, NILGRIS, (TAMIL NADU) - 643101
PH :9443273888.

CUDDALORE

869. SUNTAR AUTOS (2134--), KTR BUILDINGS, CHIDAMBARAM ROAD, CUDDALORE-607 002, - 607002
PH :9842345690.

CUMBUM

870. SRI BALAJI MOTOR WORKS (3139--), 221-A 1/3 THENI ROAD, NEAR REGULATED MARKET, UTHAMAPURAM, CUMBUM-625 516 - 625516
PH :9994169309.

DINDIGUL

871. MAGNUM MOTORS (1241--), MEENAKSHI NAICKAN PATTY, NH-83 BYE PASS ROAD, DINDIGUL - 624002, TAMIL NADU - 624002
PH :9842231340.

ERODE

872. SRI KRISHNA AUTOMOBILE ENTERPRISES (2320--), 184, CAUVERY ROAD, ERODE - 638003, TAMIL NADU - 638003
PH :9842721805.
873. SRI SAKTHI CARE (8937--), 13, NGGO COLONY MAIN STREET, ERODE, TAMILNADU, 638009 - 638009
PH :9597726311.

GADALUR

874. GREENWAY MARUTI SERVICE CENTER (5471--), KALAMPUZHA,D.O. NO 12/59-3, GUDALUR, DISTRICT - NILGIRLS, TAMILNADU - 643212
PH :9443603815.

GOBICHETTIPALAYAM

875. HI-TEC AUTO GARAGE (2426--), 426,ASIRIYAR NAGAR, KULLAMPALAYAM POST , ERODE MAIN ROAD, GOBICHETTYPALAYAM-638 476, - 638476
PH :9842447725.

HOSUR

876. SRI VINAYAKA MOTORS (3848--), 5/2C/1 (OPP TAMIL NADU HOTEL), BYE PASS ROAD, HOSUR, - 635109
PH :9443245096.
877. AUTO SCAN (2070--), DOOR NO. OLD NO.-77. NEW NO. 58 -D2, BANGALORE ROAD, NEW VIVEK GARDEN, HOSUR TALUK, KRISHNAGIRI DISTRICT, TAMILNADU - 635109. - 635109
PH :8122904091.
878. BALAJI MOTORS (5136--), PLOT NO. 11 & 18, MARUTHI NAGAR, KRISHNAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109 - 635109
PH :9842755402.

KALPAKKAM

879. MARUTI MOTORS (4253--), NO. 374, HAJIYAR NAGAR, ECR ROAD, PUDUPATTINAM VILLAGE, THIRUKALUKUNDRAM TALUKA, CHENGALPATTU DISTRICT, KALPAKKAM-603102, TAMIL NADU - 603102
PH :9443366535.

KANCHEEPURAM

880. SVS MARUTI SERVICE CENTRE (5466--), NO1 MILITARY ROAD, SEVILIMEDU, OPP BRINDAVANAM NAGAR, KANCHIPURAM, TAMILNADU 631501 - 631501

KANGAYAM

881. SRI KANGEYAM MARUTI (3949--), COIMBATORE ROAD, NEAR IBP PETROL BUNK, KANGAYAM - 638701, - 638701
PH :9443329526.

KARAIKUDI

882. SURABI MOTORS (2340--), NO.11 TRICHY MAIN ROAD, (NEAR RAILWAY CROSS), SRIRAM NAGAR, KOTAIYUR, KARAIKUDI-630 001 - 630106
PH :9443351484.

KARUMATHAMPATTY

883. SIVAN MOTORS (3832--), OPP IBP NH47, NEAR KONGU VELLALAR SCHOOL, KARUMATHAMATTY, - 641659
PH :9842231819.

KARUR

884. SRI SAKTHI AUTO CARE (2532--), NO. 3/244, BHARATHIYAR STREET, COVAI ROAD, VADIVEL NAGAR, L.N.S. POST, KARUR - 639002, TAMILNADU - 638009
PH :9842426585.

KOVILPATTI

885. CLASSIC AUTOMOBILES (6037--), 3/531 – B, TIRUNELVELI TO MADURAI BYPASS ROAD, NH-7, INAM MANIYACHI, KOVILPATTI, TAMIL NADU– 628502. - 628502
PH :9442552000.

KRISHNAGIRI

886. THIRUTHANIGAI MOTORS (2427--), SALEM-CHENNAI BYE PASS ROAD, KRISHNAGIRI-635 001, (TAMILNADU), - 635001
PH :9842129890.

KUMBAKONAM

887. SRI SAKTHI MOTORS (4330--), #7/228, PULIYAMPETTTAI, MAYILADUTHURAI MAIN ROAD, KUMBAKONAM, TAMILNADU -612103 - 612103
PH :9443131513.

MADURAI

888. SHALOM MOTORS (4629--), THENI MAIN ROAD, ACHAMPATHU, NEAR BHARAT PETROLEUM, MADURAI-625019 - 625019
PH :8754033244.
889. FRIENDLY MOTORS (3141--), 32 PALAM STATION ROAD, NEAR LIC BUS STOP, SELLUR, MADURAI-625 002 - 625002
PH :9842714047.

MADURANTHAKAM

890. MARUTHI MOTORS (6036--), NO.33,G.S.T. ROAD,KARUNGUZHI, MADURANTHAKAM-603303, DISTRICT-KANCHIPURAM, TAMILNADU - 603303
PH :9443354073.

MAYILADUTHURAI

891. R.M.S. MARUTI AUTO (2237--), 53/54 MAHADHANA STREET, MAYILADUTHURAI-609 001, (TAMIL NADU), - 609001
PH :9842922685.

NAGAPATTINAM

892. MARUTI-TECH (1671--), PUTHUR ROUNDANA E C R ROAD, NAGAPATTINAM, , - 611001
PH :9842653718.

NAGERCOIL

893. SREE GANAPATHY MOTORS (1629--), NO.12 JAWAHAR STREET, R.V. PURAM, NAGERCOIL-629 001, - 629001
PH :9345322333.

NAMAKKAL

894. ARUNA MOTORS (1461--), MARUTI SERVICE CENTRE, OPP. N.S.R. BUILDING, SALEM MAIN ROAD, NAMAKKAL-637 001 - 637001
PH :9842775761.

PALLADAM

895. CHENDU MOTORS (4333--), KALIVELAMPATTI PIRIVU, TRICHY ROAD, PALLADAM-641662, COIMBATORE DIST - 641662
PH :9842225058.

PALLAVARAM

896. VBK MOTORS (4463--), NO. 91, G.S.T ROAD, ALVITONE ESTATE, PALLAVARAM, CHENNAI - 600043. - 600043
PH :9841425030.

PARAMAKUDI

897. SIVA AUTOMOBILES (4542--), NEAR SRIKUMARA SUBRAMANIYA SWAMY TEMPLE, OPP FIRE STATION, MADURAI RAMESWARAM ROAD, PARAMAKUDI-623707 RAMNAD DIST - 623707
PH :9388405305.

PARAMATHIVELUR

898. RADHA CAR CARE (5828--), NO 96/1,BYE PASS ROAD,VETTUKATTU PUDAR, PIRIVUR ROAD,PARAMATHIVELUR-638182, DISTRICT-NAMAKKAL, TAMILNADU - 638182
PH :8608090140.

PERUNDURAI

899. PRIYAM AUTOMOBILES (3036--), 28/4, JJ NAGAR, KOVAI MAIN ROAD, PERUNDURAI, ERODE DISTRICT, TAMIL NADU - 638052 - 638052

POLACHI

900. J D & COMPANY (6055--), 160 COIMBATORE ROAD, POLLACHI - 642002, TAMIL NADU - 642002
PH :9443565785.

RAJAPALYAM

901. RAJA MOTORS (4128--), 52/ A, SRI JANAKIRAM MILLS ROAD, SRIVILLIPUTTUR MAIN ROAD, RAJAPALAYAM, VIRUDHUNAGAR- 620117, - 626117
PH :7094597178.

RASIPURAM

902. ROYAL AUTO CARS (4052--), 5/120 NH-7, SALEM MAIN ROAD, NEAR TSTC DEPOT, MUTHUKALIPATTI POST, RASIPURAM TALUK, NAMAKKAL DISTRICT-637408 - 637401
PH :9443230339.

SALEM

903. MEENATCHI AUTO (2940--), 57 KALARAMPATTY MAIN ROAD, (NEAR DEVI THEATRE), SALEM-636 015, (T.N.) - 636015
904. NATSUN MOTORS (8998--), 18/1 & 18/2, BANGALORE BYE PASS ROAD, KANDHAMPATTY, SALEM, TAMIL NADU - 636005 - 636005
PH :9788497788.

SANKAGIRI

905. TECH ZONE AUTO SERVICE (2640--), 10/78 BHAVANI MAIN ROAD, (NEAR ERODE PIRIVU), SANKAGIRI SALEM DISTT., PIN-637 303 - 637303

SANKARANKOIL

906. RAJA MOTORS (4555--), RALAPALAYAM ROAD, OPPOSITE TO LIC BUILDING, SANKARANKOIL-627756, - 627756
PH :9994409363.

TENKASI

907. CARE ZONE (3766--), 5/165, MADURAI ROAD, KUTHUKKAL VALASAI, TENKASI, TAMILNADU - 627803 - 627811
PH :9842133134.

THANJAVUR

908. R K P MOTORS (5238--), 121/7.THANJAVUR KUMBAKONAM, HIGHWAY PALLIAGRAHARAM, THANJAVUR, TAMILNADU - 613003

THENI

909. SATHURAGIRI MOTOR WORKS (1650--), DOOR NO. 21/5, RAVENTHIRA OIL MILL COMPOUND, CUMBUM ROAD, THENI - 625531, TAMIL NADU - 625531
PH :9047033678.

TIRUNELVELI

910. FRIENDS INDIA AUTO CLINIC (5030--), 16D, NORTH BYE PASS ROAD, VANNARPETTAI, TIRUNELVELI - 627003, TAMIL NADU - 627003
PH :9786606111.

TIRUPUR

911. LAKSHMI MOTORZ (2461--), 263/3E, PALLADAM ROAD, CHINNAKARAI, TIRUPUR - 641604, TAMIL NADU - 641604
PH :9842377959.

TRICHY

912. VYTHES MOBILE PARK (443--), 8/6 TANJORE ROAD, THIRUCHIRAPALLI-620 008, , - 620008
PH :6383353727.

UDAMALAPET

913. S.R.K. MOTORS (1456--), 123, PALANI ROAD, MUNEER RICE MILL COMPLEX, UDUMAPLET, TIRUPPRUR, TAMIL NADU - 642126. - 642126
PH :9843011520.

VELLORE

914. MARUTI AUTO SERVICE (2844--), 106 (OLD NO.: 78), KATPADI ROAD, GANDHI NAGAR, VELLORE-632 006 (T.N.) - 632006
PH :9843093422.

VILLUPURAM

915. RAGAVENDRA MOTORS (2361--), 2/3 MADRAS TRUNK ROAD, VILLUPURAM-605 602, (TAMIL NADU), - 605602
PH :9244555860.

VRIDDHACHALAM

916. VISHWA MARUTI CARE CENTER (8934--), NO 11, NEAR FIRE SERVICE STATION, NAVANEETHAM STREET, PERIYAR NAGAR NORTH, VRIDDHACHALAM, CUDDALORE DISTRICT, TAMIL NADU - 606001 - 606001
PH :9842246092.

## TELANGANA

ADILABAD

917. MAHA LAXMI AUTOMOTIVES (2240--), NH# 7 OPP. H.P. PETROL BUNK, TIRUPALLY, ADILABAD-504 001, (A.P.)
PH :9000345313.

BHADRACHALAM

918. SRI VENKATARAMANA AUTO CARE (2831--), MARUTI SERVICE STATION, OPP. COLLEGE GROUNDS, GOLLAGATTA ROAD, BHADRACHALAM-507 111 (A.P.) - 507111
PH :9290792269.

GAJWEL

919. VIJAY MOTORS (4864--), HYDERAAD ROAD, STATE HIGH WAY FROM HYDERABAD, TO KARIMNAGAR, PREGHAPUR - GAJWL, TELANGANA - 502278
PH :9849883665.

HYDERABAD

920. ARYAN MOTORS (3264--), D.NO.17-1-382/K/5 & 6, CHAMPAPET SAIDABAD, SAGAR ROAD, HYDERABAD - 500059
PH :9246155464.
921. COSMO AUTO CLINIC PVT. LTD. (1045--), PLOT NO 1, RD NO 5,, CHANDRAPURI COLONY , LB NAGAR, HYDERABAD - 500074, - 500074
922. PISTONS & SPANNERS (2766--), 2-3-37 MAHARANA PRATAP FUNCTION HALL, AMBERPET, HYDERABAD-500 013,
PH :9990649504.
923. SERWELL AUTOMOBILES GARAGE (5234--), PLOT NO 202&203, ADITYA NAGAR, OPP. JNTU, KUKATPALLY, HYDERABAD, TELANGANA - 500072
PH :9490105147.

JAGTIAL

924. KRK MOTORS (3851--), OPPOSITE 132 KV SUBSTATION, DHAROOR CAMP, KARIMNAGAR ROAD, DISTRICT - JAGTIAL, TELANGANA - 505327 - 505455
PH :9912664659.

KARIMNAGAR

925. MYTRI MOTORS (5152--), 8-6 188.KOTHI RAMPUR, KARIMNAGAR, DISTRICT - KARIMNAGAR , TELANGANA - 505001
PH :9441475357.
926. PUSHPAK MOTORS (1032--), SY-772, KOTHIRAMPUR, NEAR MGB MOTORS - JCB SHOWROOM, BEHIND LAKSHMI NIVAS INDUSTRIES, KARIMNAGAR, TELANGANA - 505001. - 505001
PH :9849489431.

KHAMMAM

927. EXCEL AUTO CARE (1043--), RAPARTHI NAGAR, BYPASS ROAD, KHAMMAM - 507001, , - 507001
PH :9848156363.

KODAD

928. SAI KAKATIYA SERVICE STATION (4664--), SURYAPETA ROAD, OPPOSITE LORRY ASSOCIATION BUILDING, KODAD-508206, DISTRICT-NALGONDA (TELANGANA) - 508206
PH :9848057813.

MAHABUB NAGAR

929. SRI AYYAPPA MARUTI CLINIC (3941--), OPP HOSPITAL, HYDERABAD ROAD, YEMUGONDA, MAHABUB NAGAR (TELANGANA) - 509002
PH :9440569259.

MANCHERIAL

930. PARVATHI MOTORS (4129--), 4-53 BPL ROAD, MANCHERIAL, DISTRICT ADILABAD, TELANGANA. - 504208
PH :9885554888.

MIRYALGUDA

931. GANESH MOTORS (4536--), D.NO. 6-366, P.V. COMPLEX, NALGONDA ROAD, MIRYALGUDA, NALGONDA DISTT (TELANGANA) - 508207
PH :9393900666.

NALGONDA

932. SRIRAM AUTHORISED SERVICE STATION (4627--), HYDERABAD ROAD, OPP. SUB STATION, NALGONDA, TELANGANA - 508001
PH :9848378133.

NIZAMABAD

933. PRIYA SERVICING (1771--), C/O TIRUMALA CHITRA MANDIR, HOUSE NO.1-9-833, PHULANG ROAD, NIZAMABAD-503 003 (A.P.)
PH :9948034523.

RAMAGUNDAM

934. ALI AUTOMOBILES (2849--), NEAR TV RELAY STATION, NTPC JYOTHINAGAR, RAMAGUNDAM-505 215, DISTT. KARIMNAGAR (TELANGANA) - 505208
PH :9848219102.

SIRSILLA

935. SATHVIKA MOTORS (5649--), KARIMNAGAR ROAD,OPP HP PETROL PUMP, SIRSILLA-505301, DISTRICT - KARIMNAGAR , TELANGANA - 505301
PH :9490284726.

SURYAPET

936. SAI GLOBAL AUTO SERVICES (4550--), OPP. AYYAPPA SWAMY TEMPLE, BY PASS ROAD, NH-9, SURYAPET-508213, TELANGANA - 508213
PH :9848076108.

WANAPARTHY

937. SMC MOTORS (5658--), K.K.T. ROAD,BASAVANNA GADDA, WANAPARTHY, DISTRICT -MAHABUBNAGAR, TELANGANA - 509103
PH :9440142927.

WARANGAL

938. VAISHNAVI AUTOMOBILES (470--), OPP. NEW SCIENCE DEGREE COLLEGE, HUNTER ROAD, HANAMKONDA, WARANGAL-506 001
PH :9849002528.

## TRIPURA

AMBASSA

939. CHAKRABORTY MECHANICAL WORKSHOP (5351--), NH-44.NEAR ZILLA PARISWAD OFFICE , AMBASSA, DISTRICT - DHALAI, TRIPURA - 799289
PH :9436136054.

DHARMANAGAR

940. RAJ AUTOMOBILES (2868--), STATION ROAD, RAJABARI, DHARMANAGAR, TRIPURA (NORTH) -799 253 - 799253
PH :9436477578.

UDAIPUR

941. SUR UDYOG (3963--), TOWN FULKUMARI NO. 1, BRAMHABARI, P O UDAIPUR COURT, UDAYPUR, TRIPURA SOUTH - 799120
PH :9862276650.

## UTTAR PRADESH

AGRA

942. GAYATRI MOTORS (4730--), IN FRONT OF NEEL FLORENCE APARTMENT, GOVINDPURI COLONY, VILLAGE BABARPUR, POST SIKENDRA, AGRA, UTTAR PRADESH-282007 - 282007
PH :8077786331.

ALIGARH

943. KAPIL AUTOMOBILES (1344--), OLD KHURJA BUS STAND, G.T.ROAD, ALIGARH(U.P.), - 202002
PH :9837007636.
944. KAR SCAN CENTRE (449--), RAMGHAT ROAD, KWARSI, ALIGARH-202 002, - 202002
PH :8937000111.

ALLAHABAD

945. ANSHUMAN AUTOMOBILES (4933--), 6D, DAUD NAGAR, OPPOSITE BAIDYANATH COMPANY, MIRZAPUR ROAD, NAINI, ALLAHABAD, UTTAR PRADESH - 211008 - 211008
PH :9335138119.
946. KAY CEE AUTOMOBILES (2155--), 72/60 L.B. SHASTRI MARG, ALLAHABAD, , - 211001
PH :9415317225.
947. TRIBENI MOTORS (2539--), 23 KANPUR ROAD, ALLAHABAD-211 001, (U.P.), - 211001
PH :9415324244.

AMROHA

948. SUNNY MOTORS (2165--), BIJNORE ROAD, J.P. NAGAR, AMROHA-244 221, (U.P.) - 244221
PH :9412248884.

AURAIYA

949. SINGH AUTOMOBILES (8989--), KANPUR ROAD.AURAIYA , DISTRICT - AURAIYA , PIN - 206122, UTTAR PRADSH - 206122
PH :9808403258.

BABUGARH

950. GURUNANAK AUTOMOBILES (5977--), NH- 9, VILL SIMROLI , BABUGARH CANTT. , DISTRICT-HAPUR, UTTAR PRADESH - 245102

BAGHPAT

951. KAUSHIK MOTORS (4473--), PLOT NO 525, DELHI SAHARANPUR ROAD,PALI, BAGHPAT, UTTAR PRADESH 250609 - 250609
PH :9837800582.

BALRAMPUR

952. D M AUTOMOBILES (3933--), NEAR S.P.AWAS, GONDA ROAD, BAHADURAPUR, DISTT: BALRAMPUR, UTTAR PRADESH - 271201 - 271201
PH :9415071840.

BANDA

953. CHAUDHARY TRACTORS (2249--), STATION ROAD, BANDA-210 001, (U.P.), - 210001
PH :9415143033.

BARAUT

954. HIGH TECH ENGINEERS (4821--), 216/5 SAHARANPUR ROAD, BARAUT, , - 250611
PH :7302352660.
955. SIGNET AUTOMOBILES (4441--), NEAR INDUSTRIAL POLICE CHOWKI, DELHI ROAD, BARAUT-250611, DISTT BAGHPAT (U.P) - 250611
PH :8218779429.

BAREILLY

956. S P MOTORS (5746--), 383,SURKHA CHAWNI,NAINITAL ROAD, BAREILLY-243001, DISTRICT-BAREILY, UTTAR PRADESH - 243001
PH :9568033111.

BIJNOR

957. SARDAR MOTORS (4671--), DELHI HIGHWAY ROAD , 4TH KM MILE STONE , BIJNOR - 246701, UTTAR PRADESH - 246701
PH :9837265076.

BULANDSHAHR

958. DELHI AUTO ENGRS (1351--), PLOT NO-106, NEAR TAFE TRACTOR AGENCY, NEAR CHANDPUR VILLAGE, DELHI ALIGARH BYPASS ROAD, BULANDSHAHR (UP) 203001. - 203001

CHANDPUR

959. BHARTI AUTOMOBILES (1777--), DHANORA ROAD, CHANDPUR, DISTT. BIJNOR, (U.P.) - 246725
PH :9837380551.

CHITRAKOOT

960. SHYAM MOTORS (4367--), BUS STAND, KARWI, CHITRAKOOT-210205, - 210205
PH :9415143900.

DADRI

961. NATIONAL MOTOR AGENCY (5143--), NOIDA ROAD , DADRI -203207, DISTRICT - GAUTAMBUDH NAGAR , UTTAR PRADESH - 203207

DANKAUR

962. MARUTI CARS CARE (5934--), SIKANDRABAD ROAD,NEAR KISAN INTER COLLEGE, DANKAUR-203201, DISTRICT- GAUTAM BUDH NAGAR, UTTAR PRADESH - 203201
PH :7599195174.

DEOBAND

963. PRACHI MOTORS (3361--), ADJACENT TO CIVIL COURTS, G.T. ROAD, DEOBAND, DISTT. SAHARANPUR (U.P.) - 247554
PH :7017803402.

DEORIA

964. CLASSIC MOTORS (2971--), D-13/14 INDUSTRIAL ESTATE, OPPOSITE RTO OFFICE, GORAKHPUR ROAD, DEORIA-274 001 (U.P.) - 274001
PH :9415313939.

DHAMPUR

965. AUTAR AUTOMOBILES (4846--), NOORPUR ROAD, DHAMPUR-246761, DISTRICT-BIJNOR, UTTAR PRADESH - 246761
PH :7017211986.

FAIZABAD

966. S K MOTORS (4672--), CHANDPUR HARBANS ALLAHABAD ROAD, NH-96, FAIZABAD-224001, UTTAR PRADESH - 224001
PH :9307088750.

FARUKHABAD

967. APOORVA MOTORS (4675--), SATANPUR MANDI ROAD, FARRUKHABAD, DISTRICT FARRUKHABAD, UTTAR PRADESH - 209625
PH :9044498958.
968. SANDEEP MOTORS (4161--), THANDI SADAK, OPP. JITENDRA GAS GODOWN, FARUKHABAD, UTTAR PRADESH - 209625
PH :9838840322.

FATEHPUR SIKRI

969. LAXMI MOTORS (5943--), FATEHPUR SIKRI ROAD,KHEDA KORAI , FATEHPUR SIKRI-283110, DISTRICT-AGRA, UTTAR PRADESH - 283110
PH :9837749949.

FIROZABAD

970. AMAN MOTORS (4366--), USAYANI CHAURAHA, RAJA KA TAAL, BYE PASS ROAD, FEROZABAD, UTTAR PRADESH - 283103
PH :9837500220.
971. GOVIND AUTOMOBILES (1739--), NH-2, INFRONT OF SUB POWER STATION, MODHA, ASFABAD CHAURAHA, FIROZABAD, UTTAR PRADESH, 283203 - 283203
PH :9837169332.

GANGOH

972. SHRI KRISHNA MOTORS (5939--), BYE PASS ROAD RAM GARH,GANGOH-247341, DISTRICT-SAHARANPUR, UTTAR PRADESH, - 247341
PH :9997102785.

GHAZIABAD

973. CHAWLA AUTOMOBILES (2643--), 67 AMBEDKAR ROAD, OPP. NEHRU YUVA KENDRA, GHAZIABAD, - 201001
PH :9811720929.
974. D.N. AUTOLAND (272--), E-4 MEERUT ROAD, INDUSTRIAL AREA, (NEAR OLD MEERUT CHUNGI), GHAZIABAD. - 201003
975. KRISHNA AUTOMOBILES (5356--), 101.LAL KUAN .SHIV MANDIR , BULANDSHAHAR ROAD , DISTRICT - GHAZIABAD, UTTAR PRADESH - 201009
976. S P MOTORS (4973--), HAPUR BYPASS ROAD, MEHRAULI, GHAZIABAD, - 201001
977. SHIVA MOTORS (--), 17TH KM STONE, 118-119 SHIVPURI, SECTOR-9 VIJAY NAGAR BYEPASS NH-24, GHAZIABAD-201 009 (U.P.) - 201009
PH :9873000571.

GONDA

978. AMAN MOTORS (3858--), PORTER GANJ, LUCKNOW ROAD, GONDA, UTTAR PRADESH - 271001
PH :9415120101.
979. PANKAJ AUTOMOBILES (1370--), C/O NEW DELHI MOTOR WORKS, BARAICH ROAD, GONDA, - 271801
PH :9415664930.
980. AMAN MOTORS (--), PORTER GANJ, LUCKNOW ROAD, GONDA, UTTAR PRADESH - 271001
PH :9415120101.

GREATER NOIDA

981. JAISWAL MOTORS (5078--), PLOT NO. 31, SECTOR MUP-II GREATER NOIDA , DISTRICT - GAUTAM BUDH NAGAR, UTTARPRADESH - 201308
982. KUMAR MOTORS (8926--), M-8, SITE-5, UPSIDC, KASNA INDUSTRIAL AREA, GREATER NOIDA, DISTRICT-GOUTAM BUDH NAGAR, UTTAR PRADESH - 201312

HAPUR

983. SRASTHI MOTORS (3076--), NEAR HDFC BANK, DELHI ROAD, HAPUR, (U.P.) -245 101 - 245101

HARDOI

984. M. MOTORS & SERVICE CENTRE (3371--), CHAND BEHTA, LUCKNOW ROAD, HARDOI-241 001, (U.P.) - 241001
PH :9415175610.
985. TAYAL AUTOMOTIVES (4265--), SOHRA KOTHI, BAWAN CHUNGI, HARDOI-241001, - 241001
PH :9415149951.

HATHRAS

986. RADHEY RADHEY AUTOMOBILES (4344--), NEAR BUS STAND, AGRA ROAD, HATHRAS-204101, - 204101
PH :9897069159.

JAGDISHPUR

987. SUPER AUTOMOBILES (3564--), JAFARGANJ P.O., INDUSTRIAL AREA, JAGDISHPUR, DISTT. SULTANPUR-227 817 (U.P.) - 227817
PH :9415177882.

JAUNPUR

988. SADGURU MOTORS (5071--), FAIZBAGH (NEAR TDM OFFICE), UMARPUR,JAUNPUR, JAUNPUR-222142, UTTAR PRADESH - 222142
PH :8318984440.

JHANSI

989. A.B. MOTORS (8938--), EDULJEE BOYCEE COMPOUND, NEAR ALLAHABAD BANK CROSSING, CIVIL LINES, JHANSI - 284001, UTTAR PRADESH - 284001
PH :9415059820.

KANNAUJ

990. SARALA AUTO CARE (5854--), G.T. ROAD.KANNAUJ, DISTRICT-KANNAUJ, UTTAR PRADESH, - 209725
PH :9918692324.

KANPUR

991. AJAY SALES (3134--), 117/N/81 KAKADEVO, KANPUR, , - 208025
PH :9919828000.
992. AUTO GARAGE (4266--), P-22-A, PRATAP GANJ, FACTORY AREA, OPP GANDA NALA, KANPUR-208012 - 208012
PH :9415126189.
993. CHANDRA MOTORS (4458--), 621/3 W-2 JUHI, BEHIND SACHAN GUEST HOUSE, KANPUR, - 208027
PH :9839928280.
994. EXCELLENT MOTORS (9022--), 123/793 FAZALGANJ, KANPUR-208 012, , - 208012
PH :9336119874.
995. SUJIPA MOTORS (4337--), 127/465, U-BLOCK, NIRALA NAGAR, KANPUR - 208014
PH :9415050146.

KHALILABAD

996. RATAN MOTORS (5645--), NEAR VAISHNO MATA MANDIR, CHOTI SARAULI, NH- 27, KHALILABAD, UTTAR PRADESH - 272175
PH :9621294899.

KHATAULI

997. EAGLE MOTORS (5142--), OPPOSITE EW ROADWAYS , G.T. ROAD. NH -58.KHATAULI, DISTRICT - MUZAFFARNAGAR, UTTAR PRADESH - 251201
PH :9997039786.

KHEKRA

998. KAILASH MOTORS (5767--), OPP TEHSIL ,DELHI BAGHPAT ROAD, KHEKRA-201101, DISTRICT-BAGHPAT, UTTAR PRADESH - 250101
PH :9760027001.

KOSIKALAN

999. ADITYA MOTORS (1940--), IOC PUMP, NATIONAL HIGHWAY, KOSIKALAN, (U.P.) - 281403
PH :9837050778.

LAKHIMPUR KHERI

1000. AJMANI TRACTORS (4143--), NIGHASAN ROAD, LAKHIMPUR KHERI, UTTER PRADESH, - 262701
PH :9918802167.

LAMBHUA BAZAR

1001. VIKRAM MOTORS (3729--), LAMBHUA BAZAR, SULTANPUR (DIST.), UTTAR PRADESH-222 302, - 222302
PH :9450215996.

LONI

1002. SAMBHAV AUTOMOBILES (5168--), 31.RURAL INDUSTRIAL ESTATE , ARYA NAGAR INDUSTRIAL AREA, MAIN DELHI SHAHRANPUR HIGHWAY, UTTAR PRADESH - 201102

LUCKNOW

1003. B.K. MOTORS (2537--), KALYANPUR, RING ROAD, OPP. CARRIER CONVENT BOARD, LUCKNOW-226 015 - 226015
PH :9335908130.
1004. BALAJI MOTORS (1336--), 1 NEWAL KISHORE ROAD, LUCKNOW-226 001.(U.P), , - 226001
PH :9336253838.
1005. GALAXY MOTORS (5274--), KASHANA SITAPUR ROAD,NEAR SHIA, P G COLLGEG - LUCKNOW , DISTRICT - LUCKNOW, UTTAR PRADESH - 226021
PH :9305567878.
1006. GUD'S CAR CARE (2538--), MAIN ROAD, NISHATGANJ, LUCKNOW-226 006, - 226006
PH :9415024495.
1007. KALYAN MOTORS (1161--), GOVT. POLYTECHNIC CROSSING, FAIZABAD ROAD, GOMTI NAGAR, LUCKNOW - 226010
PH :9936942527.
1008. KAPOOR MOTORS (1751--), PLOT NO.380, NEAR GUNGA BAHARA SCHOOL, TILAK NAGAR , UTTAR PRADESH - 206122
PH :9795457050.
1009. KAPOOR MOTORS (5044--), 555/GA/50,BARA BIRWA, KANPUR ROAD-, ALAMBAGH LUCKNOW., DISTRICT - LUCKNOW, (UTTAR PRADESH) - 226005
PH :9795457050.
1010. KRISHNA MOTORS (5026--), BALAGANJ HARDOI ROAD, CHOWK LUCKNOW, DISTRICT LUCKNOW, UTTAR PRADESH - 226020
PH :9839177777.
1011. MVV MOTORS (5531--), A1/14,VIJAY KHAND,GOMTI NAGAR, LUCKNOW-226010, DISTRICT - LUCKNOW, UTTAR PRADESH - 226010
PH :9792877779.
1012. RELIANCE MOTORS CARE (1236--), 7-B/1 PRIME PALACE, FAIZABAD ROAD, INDIRA NAGAR, LUCKNOW-226 016 - 226016
PH :9918100051.
1013. S.K. MOTORS (2449--), 8/881 VIKAS NAGAR, PICNIC SPOT ROAD, KHURAM NAGAR, LUCKNOW-226 013 - 226013
PH :9415005564.
1014. THE GARAGE (5479--), BEHIND NEW HANUMAN MANDIR,MADIR PARK , MAHANAGAR - LUCKNOW , DISTRICT - LUCKNOW, UTTAR PRADESH - 226006
PH :9236711634.
1015. V.S. MOTORS (4745--), RAMADHIN SINGH INTER COLLEGE CAMPUS, BABU GANJ, LUCKNOW-226007, UTTAR PRADESH - 226020
PH :9984749000.

MAHOBA

1016. ROYAL SERVICE STATION (2238--), HAMIRPUR CHUNGHI, KANPUR ROAD, MAHOBA, (U.P.) - 210427
PH :9450269053.

MAINPURI

1017. JATIN MOTORS (5540--), GANESH MILL COLONY.RADHA RAMAN ROAD, MAINPURI-205001, DISTRICT-MAINPURI, UTTAR PRADESH - 205001
PH :8193825000.

MARIAHU

1018. BABU MOTORS (5740--), MACHALISHAHAR ROAD,NEAR POST OFFICE, MARIAHU-222161, DISTRICT - JAUNPUR, UTTAR PRADESH - 222161
PH :9919263663.

MATHURA

1019. GIRIRAJ CAR CARE (5624--), BIMAL ENGG COMPLEX, BAD, MATHURA-281 006, - 281006
PH :9837071321.
1020. NAND SERVICE STATION (3578--), GOPAL PURA VILLAGE, REFINDERY TOWNSHIP, NH-2, MATHURA - 281001
PH :9997982828.
1021. SHREE GOPAL AUTOMOBILES (5664--), DELHI BYE PASS ROAD,NEAR GOKUL RESTAURANT, MATHURA - 281001, DISTRICT - MATHURA, UTTAR PRADESH - 281001
PH :9412726760.
1022. SIYA RAM MOTORS (1666--), JAYSINGHPURA, NEAR BIRLA MANDIR, MATHURA-281 003, (U.P.) - 281003
PH :9897053962.

MEERUT

1023. EXPERT CAR SCANNER (1174--), 83 HILL STREET (KATH-KA-PUL), BEHIND ABU LANE, MEERUT CANTT., (U.P.) - 250001
PH :9412201195.
1024. KRISHNA AUTOMOBILES (5573--), PLOT NO D-10,SHRADHA PURI,, KANKARKHERA - MEERUT, DISTRICT - MEERUT, UTTAR PRADESH - 250001
PH :9927241738.
1025. SARAN AUTOMOBILES LTD. (1078--), DELHI ROAD, RITHANI, MEERUT, - 250001
PH :93594506555.

MIRZAPUR

1026. PRABHAT MOTORS (4131--), NH-7 REWA ROAD, CHANDAIPUR LAKHAMPUR, MIRZAPUR, U P - 231309
PH :9838940382.

MOHANLAL GANJ

1027. GURU TEG BAHADUR AUTO ENTERPRISES (4072--), 4 SENANI VIHAR, RAI BAREILLY ROAD, MOHANLAL GANJ, LUCKNOW U P - 226027
PH :9415229172.

MORADABAD

1028. ASHISH AUTOMOBILES (1477--), KANTH ROAD, MORADABAD-244 001, , - 244001
PH :9837055258.

NAJIBABAD

1029. SETHI MOTORS (4557--), C/O SETHI BOARD INDUSTRIES LIMITED, OPP. HINDUSTAN COCO-COLA BOTTLING PLANT, NAGINA ROAD, NAJIBABAD-246763, DISTT. BIJNOR (UTTAR PRADESH) - 246732
PH :9837590800.

NOIDA

1030. RAHUL MOTORS (4662--), A-59 SECTOR-80, PHASE-II, NOIDA-201303, UTTAR PRADESH - 201305
1031. RAJESH & ANIL MOTOR CO (5330--), B-110. SECTOR 2. NOIDA, DISTRICT - GAUTAM BUDH NAGAR , UTTAR PRADESH, - 201301
1032. SKUNIVERSE AUTOMOBILE PRIVATE LIMITED (8922--), C-2 SECTOR 63, NOIDA - 201301, - 201301
1033. RAHUL MOTORS (--), A-59 SECTOR-80, PHASE-II, NOIDA-201303, UTTAR PRADESH - 201305

OBRA

1034. APPRECIATE SERVICES (4678--), BILLI RAILWAY STATION ROAD, OBRA, SONEBHADRA, UTTAR PRADESH - 231219 - 231219
PH :8765833557.

PILIBHIT

1035. UNIVERSAL MARUTI SERVICE STATION (4365--), BYE PASS ROAD, PILIBHIT, UTTAR PRADESH, - 243006
PH :9412313499.

PILKHUWA

1036. SHREE BANKEY BIHARI MOTORS (6025--), NH-24,DELHI-GARH ROAD,PILKHUWA-245307, DISTRICT-GHAZIABAD, UTTAR PRADESH, - 245304
PH :9045548101.

PRATAPGARH (U.P)

1037. SHREE MOTORS (4146--), 10, CHIBILA RANJEETPUR, PRAYAGRAJ AYODHYA HIGHWAY, NH-330, PRATAPGARH, UTTAR PRADESH, PIN-230001 - 230001
PH :9415229257.

RAI-BARELI

1038. STANDARD GARAGE (4429--), MANIKA CENEMA ROAD, NEAR INSPECTION HOUSE, RAE BAREILLY, - 229206
PH :9415190703.

RAMPUR

1039. FIZZA MOTORS (2241--), NEAR AMBEDKAR PARK, CIVIL LINES, RAMPUR (U.P.), PIN-244 901 - 244901
PH :9897879711.

RATH

1040. MARUTI POINT (4228--), ROOP NAGAR, BUDHOLIYANA, NEAR BUS STAND, ORAI ROAD, RATH, DIST. HAMIRPUR (U.P) - 210431
PH :9415331735.

RENUKUT

1041. AMBIKA MOTORS (1050--), PATEL NAGAR, MURDHAWA, RENUKUT-231 217, SONBHADRA (U.P.) - 231217
PH :9415251724.

ROBERTSGANJ

1042. KAMAKHYA AUTOMOBILES (4163--), PIPRI ROAD, ROBERTSGANJ, SONEBHADRA (U.P), - 231216
PH :9918301052.

SADABAD

1043. ASHU SERVICE CENTRE (8972--), AGRA BYE PASS R0AD, SADABAD-281306, DISTRICT-HATHRAS, UTTAR PRADESH - 281306
PH :9058832658.

SAHARANPUR

1044. GANESH CAR SERVICES (1871--), OPP. REMOUNT DEPOT GATE, DEHRADUN ROAD, SAHARANPUR-247 001, - 247001
PH :9358306804.

SAHIBABAD

1045. HINDON MOTORS (3576--), S-69, SITE 2, INDUSTRIAL AREA, MOHAN NAGAR, NEAR HINDON AIRFORCE ROUND ABOUT, SAHIBABAD, UTTAR PRADESH - 201007
1046. MOTOR MAGIC AUTO ZONE (4462--), 4/29-A SITE-IV, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD - 201005
1047. PANDIT AUTOMOBILES (4647--), 3/1/1, SITE-IV, INDUSTRIAL AREA, SAHIBABAD, OPP. KAUSHAMBI, GHAZIABAD (UTTAR PRADESH - 201010
1048. POOJA MOTORS (3562--), TEELA MORE, SHAHBAJPUR, LONI, DISTT. GHAZIABAD (U.P.) - 201102

SANDILA

1049. SHUBHAM SERVICE CENTRE (4042--), NEAR NEHAR KOTHI ROAD, SANDILA, HARDOI, UTTAR PRADESH - 241204 - 241204
PH :9506181818.

SHAHJAHANPUR

1050. SUPER AUTO (3135--), OLD DIST. HOSPITAL ROAD, SHAHJAHANPUR (U.P.), PIN-242 001, - 242001
PH :9415035644.

SHAMLI

1051. ROYAL MOTORS (5277--), PANIPAT KARANA ROAD, SHAMLI, SHAMLI-247776, UTTAR PRADESH - 247776
PH :9927272766.

SHIKOHABAD

1052. KUMAR MOTORS (5575--), SUBHASH TIRAHA ,AGRA GATE - SIKOHABAD, DISTRICT - FEROZABAD, UTTAR PRADESH, - 283203
PH :9411937033.

SIDDHARTH NAGAR

1053. MARUTI CARE CENTRE (8992--), OPP. SIDDHARTH SCHOOL, AZAD NAGAR, SIDDHARTH NAGAR-272 207, (U.P.) - 272207
PH :9935642651.

SIKANDRABAD

1054. NALIN AUTO (8921--), G.T. ROAD, SIKANDRABAD, DISTT. BULANDSHAHAR, (U.P.) - 203205

SIRSAGANJ

1055. SATGURU MOTORS (3739--), BYE PASS KAURARA ROAD, SIRSAGANJ DISTT. FIROZABAD, ETAWAH-AGRA ROAD, SIRSAGANJ (U.P.) - 283151
PH :9412316660.

SONEBHADRA

1056. OUDH SERVICE STATION (8956--), SHAKTI NAGAR, SONEBHADRA-231 222, , - 231222
PH :7408434860.

SULTANPUR

1057. HINDUSTAN AUTO GARAGE (1360--), BARHAIYA BEER RD., (ADJ.BUS STAND), SULTANPUR-228 001 (U.P), - 228001
PH :9984154002.

VARANASI

1058. MISHRA ENGINEERS (4957--), S-4/68, NAI BASTI, PAHARIA, VARANASI-221002, UTTAR PRADESH - 221002
PH :9415301483.

## UTTARAKHAND

ALMORA

1059. AROMA AUTOMOBILES (3149--), THE MALL, ALMORA, (UTTRAKHAND), - 263601
PH :9412093410.

BAZPUR

1060. TARAI AUTOMOBILE ENGG WORKS (4459--), GURUTEG BAHADUR ROAD, U.S. NAGAR, BAZPUR-262401, UTTRAKHAND - 263401
PH :9837506765.

BHAGESWAR

1061. SHREE ISHT DEV AUTOMOBILES (4570--), GARUR ROAD, MOTA SIMAL, DIST. BAGESHWAR, UTTRAKHAND - 262642
PH :9997895347.

DEHRADUN

1062. ASHIRWAD MOTORS (5144--), CANAL ROAD, NEAR BALLUPUR CHOWK, DEHRADUN-248001, UTTRAKHAND - 248001
PH :9219594748.
1063. HANS LAKHERA MOTORS (5032--), JOGI WALA RING ROAD, NATHAPUR APPARTMNT,, NAR NEHRU GRAM POST OFFC, MASSOORI BYEPASS, DEHRADUN - 248001
PH :9897456677.
1064. KRIPALAISHWARI MOTORS (8947--), HARIDWAR ROAD, NEAR LIC BUILDING, DEHRADUN-248001, UTTRAKHAND - 248001
PH :9412963384.

HALDWANI

1065. ANJINI SERVICE CENTRE (8980--), NEAR BLOCK OFFICE,KALADHUNGI ROAD, LOHRIASAL MALLA, CITY - HALDWANI, UTTARAKHAND - 263139. - 263139
PH :9837098699.
1066. EXCEL MOTORS & ENGG. WORKS (3827--), RAMPUR ROAD, NEAR STM FOREST HOSPITAL, HALDWANI, NAINITAL - 263139
PH :9837191688.
1067. HARYAL SERVICE CENTRE (5340--), BAREILY ROAD.GUAJALI - TALLI, HALDWANI, DISTRICT - NAINITAL, UTTARAKHAND - 263139
PH :9997200227.

HARIDWAR

1068. PREET MOTORS (5561--), SHRI NATH NAGAR, RAILWAY ROAD,JAWALPUR - HARDWAR, DISTRICT - HARDWAR, UTTRAKHAND - 249408
PH :9012010497.

KANKHAL

1069. HIGHWAY MOTORS (4261--), NEAR SINGH DWAR CHOWK, ROORKEE-HARDWAR BY PASS ROAD, POST OFFICE, GURUKUL KANGRI, KANKHAL, DISTT HARDWAR - 249408
PH :9412072889.

KASHIPUR

1070. OM MOTORS (4329--), OPPOSITE SWAGAT MANDAP, BAZPUR ROAD, KASHIPUR DIST., U.S. NAGAR (UTTRAKHAND) - 244713
PH :9927500007.
1071. KRISHNA AUTOMOBILES (4824--), MORADABAD ROAD, KASHIPUR, , - 244713
PH :9870998368.

KICHHA

1072. SHRI SHYAMJI AUTO SERVICE CENTER (5648--), BAREILY ROAD,KICHHA, PIN-263148, DISTRICT-UDHAM SINGH NAGAR, UTTRAKHAND - 263148
PH :9837033377.

KOTDWAR

1073. BHATT MOTORS (1775--), NAJIBABAD ROAD, KOTDWARA, (GARHWAL), UTTRAKHAND - 246149
PH :9917005404.

LAKSAR

1074. SHIV AUTOMOBILES (5560--), 110/1/3 BALAWALI ROAD - LAKSAR, DISTRICT - HARIDWAR, PIN - 247663, UTTRAKHAND - 247663
PH :9690111444.

NEW TEHRI

1075. BHAGWATI SERVICE CENTER (4472--), SECTOR-8E/537, NEAR STADIUM, BARURI, NEW TEHRI, GARWAL (UTTARAKHAND) - 249001
PH :7895219517.

PAURI

1076. KRISHNA MOTORS (5957--), SHRINAGAR ROAD,NEAR KARGIL SHAHEED PETROL, PUMP,PAURI-246001, DISTRICT-PAURI GARHWAL, UTTARAKHAND - 246001
PH :9719723484.

PITHORAGARH

1077. CAR CARE CENTER (4371--), CANTT ROAD, PITHORAGARH, UTTRAKHAND, - 262501
PH :9756284676.
1078. MAA MAHAKALI MOTORS (4142--), DHARCHULA ROAD, RAI BRIDGE, PITHORAGARH, UTTRAKHAND - 262501
PH :9634713124.

RANIKHET

1079. LATIF MOTOR WORKS (3269--), SADAR BAZAR, GANDHI CHOWK, RANIKHET, (UTTRAKHAND) - 263645
PH :9761250801.

RISHIKESH

1080. GARHWAL GASOLINE STATION (3639--), , H.P. PETROL PUMP, LAXMAN JHULA ROAD, RISHIKESH-249 201 - 249137
PH :9837377767.
1081. RAKESH AUTOMOBILE ENGINEERS (1464--), OPP. BHARAT MANDIR INTER COLLEGE, HARDWAR ROAD, RISHIKESH-249 201, - 249137
PH :9412051655.

ROORKEE

1082. DUM DUM ENGG. WORKS (1343--), GROUND FLOOR, A TO Z TOWER, NEAR SOLANI BRIDGE, HARIDWAR ROAD, ROORKEE, - 247664
PH :8449155002.

1083. ROORKEE AUTO SCANNERS (2675--), 786 WEST AMBER TALAB, RAM NAGAR CHOWK, ROORKEE-247 667, - 247664
PH :9837032367.

RUDRAPRAYAG

1084. RAJESHWARI AUTOMOBILES (5669--), BADRINATH ROAD,GHOLTIR, RUDRAPRAYAG, DISTRICT - RUDRAPRAYAG, UTTRAKHAND - 246171
PH :9997217788.

RUDRAPUR

1085. BALAJI SERVICE CENTRE (1335--), HALDWANI ROAD, RUDRAPUR(NAINITAL), (UTTARAKHAND)., - 263153
PH :9897057385.

1086. CORUS MOTORS (5059--), D1 D2.20/1.NAINITAL ROAD, DISTRICT - U.S. NAGAR , UTTARAKHAND, - 263153
PH :9927500007.

SIMLI

1087. PINDER AUTOMOBILES (5527--), PLOT # C6-C9, INDUSTRIAL AREA , NEAR KARNAPRAYAG - SIMLI, UTTRAKHAND - 246449
PH :9627687196.

SITARGANJ

1088. SHRI RAM MOTORS (5833--), AGARWAL BHAWAN,BYE PASS ROAD, SITARGANJ-242605, DISTRICT-UDHAM SINGH NAGAR, UTTRAKHAND - 262405
PH :8859485786.

VIKASNAGAR

1089. SHREE RAM AUTOMOBILES (5066--), NEAR TEHSIL, CHAKROTA ROAD, VIKAS NAGAR-DEHRADUN, UTTRAKHAND - 248198
PH :9897731200.

1090. SOUMYA MOTORS (4272--), CHAKRATA ROAD, BEHIND STATE BANK OF INDIA, VIKASNAGAR, DISTT. DEHRADUN (U.A) - 248198
PH :9412382490.

## UTTRAKHAND

RAMNAGAR

1091. MAHI AUTOMOBILES (5532--), SHANKARPUR RAMNAGAR, DISTRICT - NAINITAL, UTTRAKHAND, - 244715
PH :9837920845.

## WEST BENGAL

ALIPURDUAR

1092. PRADYOUT AUTOMOBILE WORKS (653--), PURAN BAZAR, P.O.ALIPURDUAR, JALPAIGURI, WEST BENGAL - 736121
PH :9832487473.

ASANSOL

1093. AGARWALLA AUTO SERVICE (3122--), 181 BURNPUR ROAD, P.O. BURNPUR, DT. BURDWAN-713 325, (WEST BENGAL) - 713325
PH :9832179346.

1094. WEST END MOTORS (1665--), KALYANPUR SATELITE TOWNSHIP PROJECT, KANYAPUR LINK ROAD, PALASHDIAH MORE, PO-KANYAPUR, PIN-713341, ASANSOL, WESTBENGAL - 713341
PH :8798107541.

BAHRAMPUR

1095. MARUTI CARE (3674--), NH-34 UTTARPARA MORE, P.O. RADHARGHAT, BERHAMPORE, MURSHIDABAD -742 187 (WEST BENGAL) - 742187
PH :9434394040.

1096. NARAYAN BUS SERVICE (656--), NH-34, CHOUYANPUR, PO - CHALTIA, PS - BERHAMPORE, MURSHIDABAD, WEST BENGAL, PIN - 742165 - 742101
PH :9732628065.

BALURGHAT

1097. GHOSH AUTOMOBILES (2644--), NARAYANPUR, BALURGHAT, DAKSHIN DINAJPUR-733 101, - 733101
PH :9434963493.

BANDEL

1098. CAR HOSPITAL (3675--), 2 NO. NETAJI PARK, G.T. ROAD, (OPP. MILITARY COLONY), BANDEL (WEST BENGAL) - 712102
PH :9038021085.

BARRACKPORE

1099. SAMANTA AUTOMOBILES PVT LTD (268--), CHIRIMORE, BARRACKPORE-743 101, NORTH -24 PARGANAS, WEST BENGAL - 743101
PH :9831054432.

BIRPARA

1100. PARTAP ENGINEERING WORKS (8942--), VILLAGE DEMDIMA, PO-BIRPARA, DISTRICT ALIPURDUAR, WEST BENGAL, PIN -735204 - 735204
PH :9832429319.

BOLPUR

1101. BASUNDHARA AUTOMOBILES (4241--), GOAL PARA, BOLPUR SURI ROAD, BOLPUR, - 731235
PH :9832132851.

CHINSURAH

1102. UNIVERSAL AUTO REMEDY (648--), C/O MR.BN CHATTERJEE, BHAGABOTI DANGA KHADINA MORE, PO CHINSURAH, HOOGHLY-712102 - 712102
PH :9830056592.

COOCH BEHAR

1103. PROVA AUTOMOBILES (8936--), NH-17 (FORMERLY NH-31), CHAKCHAKA CHECK POST, P.O. - NILKUTHI BABURHAT, DIST. - COOCH BEHAR, PIN-736156, WEST BENGAL - 736101
PH :9434174309.

DINHATA

1104. DINHATA AUTOMOBILES (5739--), NEAR J K DHABA, NEAR CHECK POST, DINHATA COOCH BEHAR MAIN ROAD, PO: PUTIMARI, DINHATA, WEST BENGAL-736135 - 736135
PH :9434256518.

DURGAPUR

1105. THE QUICKEST (2879--), BANS KOPA, (NEAR PARADISE INN), G.T. ROAD, DURGAPUR-713 212 - 713212
PH :9832165126.

FARAKKA

1106. SPEED WHEEL SERVICE CENTRE (1056--), TTS HCC COLONY, FARAKKA, P.O. NABARUN, DISTT. MURSHIDABAD (W.B.) - 742236
PH :9434101917.

HALDIA

1107. S.D. REPAIRING CENTRE (2168--), I.O.C. GATE NO.1, P.O. HALDIA OIL REFINERY, HALDIA-721 606, DISTT. MIDNAPORE (W.B.) - 721606
PH :9434021405.

HOWRAH

1108. GREWAL AUTO SERVICE (1570--), 97/1 FORESHORE ROAD, SHIBPUR, HOWRAH-711 102, - 711102
PH :9831017806.

JAIGAON

1109. SHAKTI TRADING CO. (770--), M.G. ROAD, JAIGAON-736 182, , - 736182
PH :7760808990.

JALPAIGURI

1110. AUTOSTEL (646--), SAKOAJHORA, P.O. GAIRKATA-735 212, DIST.JALPAIGURI, (W.B.) - 735212
PH :9934111868.

1111. S.S. AUTOMOBILES (3664--), ASSAM MORE, JALPAIGURI, WEST BENGAL-735 101, - 735101
PH :9434340252.

KALYANI

1112. GOPAL AUTO SERVICE CENTRE (3373--), B.K. EXPRESSWAY, BUDHHA PARK, KALYANI-741 235, NADIA (WEST BENGAL) - 741235
PH :9831319161.

1113. KRISHNA ENGINEERING WORKS (5270--), PLOT NO.199,KANTABELE.O.N.G.C ROAD, KALYANI EXPRESS ROAD,PO:GHORAGACHHA, PS - KALYANI, WEST BENGAL - 741245
PH :7439007218.

KOLKATA

1114. ADAMS MOTOR WORKS (465--), 61 A SHAKESPEARE SARANI, CALCUTTA-700 017, , - 700017
PH :9830703287.

1115. AUTO SCAN (2272--), 100/1, B.T.ROAD, BARANAGAR, DISTRICT - NORTH 24 PARGANAS, WEST BENGAL - 700090 - 700090
PH :9231622309.

1116. AUTOKRAFT (620--), F 1/G-3, RIC IND.ESTATE UPEN BANERJEE ROAD, PARNASREE, CALCUTTA - 700060 (W.B) - 700060
PH :9830053331.

1117. BHAWANIPUR AUTO CENTRE (628--), 49 S.P.MUKHERJEE ROAD, CALCUTTA - 700 026 (W.B), , - 700026
PH :9831783130.

1118. CAMAC (621--), 2/E CAMAC STREET, CALCUTTA-700016(W.B), , - 700016
PH :9831493716.

1119. CLASSIC ENGINEERING WORKS (3171--), C/O CLASSIC ENGINEERING WORKS, 620 D H ROAD BEHALA INDUSTRIAL ESTATE, PLOT NO.G-1, KOLKATA-700 034 - 700034
PH :9903390559.

1120. DELUXE SERVICE STATION (672--), P-256 257 CIT ROAD, CALCUTTA-700 010, , - 700010
PH :9836490083.

1121. DIAL AUTOMOBILES PVT.LTD. (643--), 162A, PEARY MOHAN ROY ROAD, P.S.: CHETLA, KOLKATA - 700027 - 700027
PH :9830552191.

1122. FORTUNE AUTO CARE (3167--), 16 G/6 KHANPUR ROAD, KOLKATA-700 047, (W.B.), - 700047
PH :9831754527.

1123. SONA AUTO UDYOG (3144--), 1404 PURBACHAL MAIN ROAD, OPP. KALIKAPUR MARKET, KOLKATA-700 099, - 700099
PH :9804608684.

1124. TECHNO AUTO WORKS (4669--), 619, RAJA RAM MOHAN ROY ROAD, BIREN ROY ROAD EAST, BEHALA, KOLKATA-700008 - 700008
PH :9830111258.

1125. ULTRA CRAFT (4643--), 103/1B, RAJA DINENDRA STREET, KOLKATA-700006, WEST BENGAL - 700006
PH :9831313321.

1126. YOUNG AUTOMOBILES (637--), 50/2 HAZARA ROAD, CALCUTTA-700 019.(W.B), , - 700019
PH :9830778611.

1127. ZENITH AUTO (5529--), BHOLA NATH SARANI,CHINAR PARK, RAJARHAT , KOLKATA-700157, DISTRICT - KOLKATA, WEST BENGAL - 700157
PH :9830643781.

1128. ZOVAN AUTOMOBILES PVT. LTD (5578--), 42A/1B, RAJA SANTOSH ROAD, KOLKATA, DISTRICT - KOLKATA, WEST BENGAL - 700027
PH :9831082193.
1129. INTERNATIONAL AUTO WORKS (2648--), 48-C SOUTH TANGRA ROAD, KOLKATA-700 046, , - 700046
PH :9163703015.
1130. MARUTI LINK (1633--), CK-12 SECTOR 2, SALT LAKE, CALCUTTA-700 091, - 700091
PH :9831180421.
1131. MOTORKRAFT (635--), P-149 REMOUNT ROAD, CALCUTTA-700 027.(W.B), , - 700027
1132. NORTH POINT MOTORS PVT. LTD. (344--), DUTTO BAGAN - 3D/1 BUS TERMINUS, 64/2B BELGACHIA ROAD, CALCUTTA-700 037, - 700037
PH :9830220069.
1133. PRINCE MOTOR WORKSHOP (9031--), RAIGACHI (AZADNAGAR), P.S. RAJARHAT, RAJARHAT ROAD, NORTH 24 PARGANAS, KOLKATA - 700135 - 700059
PH :9875625595.
1134. R.S. SERVICE CENTRE (1948--), 1/2 MAHENDRE ROY LANE, CALCUTTA-700 046, , - 700046
PH :9831170273.
1135. RAJ AUTO SERVICE (5338--), 35.CANAL EAST ROAD, KOLKATA , PIN - 700011, WEST BENGAL - 700011
PH :9831103901.
1136. ROYAL CALCUTTA AUTOMOBILES (4651--), 68 BROAD STREET, KOLKATA-700019, , - 700019
PH :8777762005.
1137. RUSSA ROAD SERVICE STATION (622--), 30 SP MUKERJEE RROAD, CALCUTTA - 700025 (W.B), , - 700025
PH :9748757842.

KRISHNANAGAR

1138. TARA MA AUTOMOBILES (1947--), AUROBINDRA SARANI (NEAR KRISHNANAGAR WOMEN'S COLLEGE), KRISHNANAGAR,NADIA, , WEST BENGAL 7411011, - 741101
PH :8001100930.
1139. HIGHWAY SERVICE CENTRE (4455--), ASHA DEEP, N,H-34, KRISHNANAGAR, NADIA-741101, WEST BENGAL - 741101
PH :9434165494.

MADHYAMGRAM

1140. J G BEHAL AUTO (4653--), DOLTALA, GANGANAGAR, MADHYAMGRAM, KOLKATA-700129 (WEST BENGAL) - 700129
PH :9831094430.
1141. PAUL AUTOMOBILE (671--), JESSORE ROAD, MADHYAMGRAM, DOHARIYA PO GANGANAGAR, DISTT 24 PGNS NORTH - 700132
PH :9830239001.

MALDA

1142. ABHISEK AUTO CENTRE (1976--), N.H.34, NEAR ST. XAVIER SCHOOL, P.O. MOKDUMPUR, DISTT. MALDA-732 101 (W.B.) - 732101
PH :9434065360.

MIDNAPORE

1143. CHATTERJEE AUTOMOBILE (4960--), INDUSTRIAL GROWTH AREA, KHASJANGAL (NEAR KERANICHOTI), MIDNAPORE-721101, DISTRICT-PACHIM MIDNAPORE - 721101
PH :9434043558.

NARENDRAPUR

1144. A.M. AUTOMOBILES (3175--), KAMALGAZI, NARENDURPUR, KOLKATA-700 103, (WEST BENGAL) - 700103
PH :8335860051.

PURULIA

1145. BANERJEE AUTO SERVICE (640--), ANABILA VILLA, RANCHI ROAD, PURULIA.(W.B), - 723101
PH :9434656942.

RAGHUNATHGANJ

1146. AUTO WHEEL (4427--), NH 34, UMARPUR, PO GHORSALA, DO MURSHIDABAD, WEST BENGAL, PIN 742235 - 742235
PH :9434101917.

RUPNARAYANPUR

1147. L K MOTORS (3477--), NH 2 BYPASS, POINT (CHOWRANGI), RUPNARAYANPUR (CHALBALPUR), BURDWAN-713 343 - 713343
PH :9091392314.

SILIGURI

1148. BHAWANI MOTOR GARAGE (4844--), BIDYASAGAR PALLY, NEAR RISHI BHAWAN, BURDWAN ROAD, SILIGURI-734405, WEST BENGAL - 734405
PH :9641162127.
1149. MUM AUTO WORKS (4835--), NEAR DELHI PUBLIC SCHOOL, PANCHANAI (DAGAPUR), SILIGURI, WEST BENGAL-734003 - 734003
PH :9832068537.

SODEPUR

1150. CAR CARE (8986--), B.T. ROAD, SODEPUR, P.O.: SUKCHAR, 24 PARGANAS (NORTH) - 700115
PH :9674907411.

SRIRAMPUR

1151. MARUTI AUTO CENTRE (2167--), 85/18 G.T. ROAD (WEST), PO : MULLIKPARA, SRIRAMPUR, HOOGLY-712 203 (W.B.) - 712203
PH :8777417901.

SURI

1152. PANCHANATH AUTOMOBILES (4456--), BROJARGRAM BARABAGAN, BAKRESWAR PATHARCHAPURI HIGHWAY MORE, SURI, WEST BENGAL-731101 - 731101
PH :9732026250.

ULUBERIA

1153. APSARA SERVICE STATION (3374--), NEAR BANITABLA CHECKPOST, ON NH-6, ULUBERIA-711 316, (W.B.) - 711316
PH :7797484735.

## DELHI

DELHI

1. MSM (0883-08-01), F-39,OKHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI - 110020

## TAMIL NADU

CHENNAI

2. MSM (1485-14-01), # 9, (SP),THIRU-VI-KA INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032

## ARUNACHAL PRADESH

ITANAGAR

1. HIBRO AUTOMOBILES (7581-75-01), D-SECTOR, DISTT: PAPUMPARE, ITANAGAR - 791111

## ASSAM

BARPETA

2. ROY AUTO ENGINEERING WORKS (7Z81-7Z-01), POST OFFICE, BARPETA ROAD, MAIN ROAD , WARD NO.-4, ASSAM - 781315

DULIAJAN

3. B.S. MOTORS (X881-X8-01), NO. 01, BORPOTHAR TINALI, DULIAJAN. - 786602

## BIHAR

PATNA

4. CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE, PATLIPUTRA , PATNA - 800013

## DELHI

DELHI

5. GALAXY AUTOMOBILES (0881-08-01), 8 INDUSTRIAL AREA,TILAK NAGAR,NEW DELHI, - 110018
6. A M AUTOMOBILES ( A UNIT OF BLUE BIRD ENTERPRISES) (0891-08-01), 189-91, ,LAWRANCE ROAD,,DELHI - 110035

## HARYANA

BALLABHGARH

7. ROYAL MOTORS (9R82-9R-01), 21/5, G.T. ROAD, BALLABHGARD, DISTT-FARIDABAD - 121004

MURTHAL

8. MURTHAL AUTO PVT. LTD. (BV81-BV-01), 44 HSIIDC, MURTHAL - 131027

PANCHKULA

9. CARE TAKER (K381-K3-01), PLOT NO. 36, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113

PANIPAT

10. VIJAY MOTORS (D381-D3-01), PLOT# 136, INDUSTRIAL AREA, PHASE-1 - 132103

SAHA

11. PUNJAB MOTOR & ENGG WORKS (1881-18-01), NH-73, SHAHZADPUR ROAD, SAHA, DISTT.-AMBALA - 133104

YAMUNANAGAR

12. HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA - 135001

## HIMACHAL PRADESH

JASSUR

13. CLASSIC MOTOR GARAGE (8H81-8H-01), TEHSEEL NOOPUR, KANGRA, JASSUR, HIMACHAL PRADESH - 176201

## JAMMU AND KASHMIR

SRINAGAR

14. RAHIM MOTORS (1281-12-01), SIDGO INDUSTRIAL AREA, RANGRETH, SRINAGAR - 241384

## JHARKHAND

RANCHI

15. PODDAR CAR WORLD PVT LTD (5181-51-01), 47, 48 , KOKAR INDUSTRIAL AREA, RANCHI. - 834001

## KERALA

PATHANAMTHITTA

16. AGT MOTORS (W881-W8-01), AGT TOWERS, PUTHENPEEDI, OMALLUR, PATHANAMTHITTA - 689640

## MADHYA PRADESH

NEEMUCH

17. AUTO SCAN (3T81-3T-01), MHOW ROAD,NEEMUCH,MADHYAPRADESH, - 454775

## MAHARASHTRA

PUNE

18. MARUTI CARE POINT (1983-19-01), 17/1, RAHATANI, AUNDH-CHINCHWAD ROAD. OPP PCMC 'D' PRABHAG KARYALAY, NEXT TO HP SUBHIKA PETROL PUMP, RAHATNI, PUNE, MAHARASHTRA - 411017

THANE

19. THANAWALA MOTOR AGENCY (P) LTD (3981-39-01), B-31, OPPOSITE ITI,WAGLE ESTATE MAIN ROAD,WAGLE ESTATE,THANE - 400007

## ODISHA

KEONJHAR

20. KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA - 758001

## PUNJAB

BATALA

21. CITI AUTOMOBILES (V581-V5-01), NEAR GURUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA, - 143505

MOGA

22. SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI , G.T. ROAD, MOGA - 142001

## RAJASTHAN

JAIPUR

23. KATARIA AUTOZONE PVT.LTD (1181-11-01), 1-A ; NARAYANPURI,KATARIA KRISHI FARM,SIRSI ROAD,JAIPUR - 302034

## TELANGANA

HYDERABAD

24. RETOUCH (1082-10-01), H.NO. 3-67/A, B, C, D,NEW NAGOLE COLONY,NAGOLE VILLAGE, HYDERABAD,NAGOLE, HYDERABAD - 500068

## UTTAR PRADESH

ALIGARH

25. VINEET MOTORS (B681-B6-02), PLOT NO.D-138 &139, SECTOR-1, TALA NAGARI, RAMGHAT ROAD, ALIGARH - 202001

GHAZIABAD

26. KAP AUTOMOBILES PVT. LTD. (5981-59-01), D-BLOCK SHASHTRI NAGAR,HAPUR ROAD,GHAZIABAD
27. CHIRAG AUTOMOBILES (5983-59-01), PLOT NO. B1, SECTOR-B3, TRONICA CITY, GHAZIABAD - 201102

LUCKNOW

28. K M AUTOCRAFT (1381-13-01), 76/3, BARAURA, HUSSAIN BARI, HARDOI ROAD, LUCKNOW - 226003

MEERUT

29. UNIQUE CAR SCANNERS (4882-48-01), PLOT NO:514/4, SURAJ KUND ROAD, MEERUT, - 250001

NOIDA

30. MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8 & 9,SECTOR-8,NOIDA
31. MOTORCRAFT INDIA PVT LTD (A181-A1-02), C-125,SECTOR-63,NOIDA,
32. JKM MOTORS (A184-A1-01), A-25,SECTOR 9,DISTT. GAUTAM BUDH NAGAR,NOIDA - 201301
33. FAST TRACK AUTOCARE(INDIA) PVT. LTD. (A185-A1-01), A-13, SECTOR 63, NOIDA, G.B. NAGAR - 201301

SAHIBABAD

34. FAST TRACK SERVICES (M981-M9-01), PLOT NO.40/1B/2, 3 & 4, SITE 4, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD (U.P.). - 201010

UNNAO

35. VISHAL WHEELERS PVT. LTD. (1382-KL-01), PLOT NO. 1164, KANPUR-LUCKNOW BYE PASS, UNNAO, UTTAR PRADESH, - 209801

VARANASI

36. PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2, CLUB ROAD, VARANASI - 221002

## WEST BENGAL

KOLKATA

37. MANOCO SALES (P) LTD. (0681-06-01), 25/1, CHETLA CENTRAL ROAD, OPPOSITE CHETLA PARK, KOLKATA - 700027

## BATTERY LABEL SYMBOL MEANINGS

| | | | | |
|---|---|---|---|---|
|  | No smoking, no naked flames, no sparks | |  | Battery acid |
|  | Shield eyes | |  | Note operating instructions |
|  | Keep away from children | |  | Explosive gas |


Prepared by

**MARUTI SUZUKI INDIA LIMITED**

Service Division

August, 2026

Part No. 99011M71UD0-74W

Printed in India


**For round-the-clock on-road assistance,**
**call Maruti On-road Service at 1800 102 1800[#] / 1800 1800 180[#]**

***# No STD code to be prefixed.***

MARUTI SUZUKI
GENUINE ACCESSORIES

MARUTI SUZUKI
GENUINE PARTS

MARUTI SUZUKI
COST PROTECT

MARUTI SUZUKI
HELPLINE

MARUTI SUZUKI
ROAD SERVICE

SERVICE DIVISION
MARUTI SUZUKI INDIA LIMITED
Palam-Gurgaon Road, Gurgaon – 122 015 (Haryana), India
Visit us at: www.marutisuzuki.com