Your Owner's Manual

Digital version available on the Internet

http://go.skoda.eu/owners-manuals

ŠKODA FABIA 07.2020
Angličtina/English
V2, R1, RoW, en_GB

OWNER´S MANUAL

ŠKODA FABIA

ŠKODA
SIMPLY CLEVER



Documentation of vehicle delivery
Vehicle Identification Number (VIN)

Date of vehicle delivery _____ / _____ / _____

ŠKODA Partner

Stamp and signature of the vendor

I confirm that I have taken delivery of the vehicle in good condition, have received information on how to operate it correctly, and have had the terms of the warranty explained to me.

Signature of the customer

Does the vehicle have an extended warranty?

☐ **YES**

☐ **NO**

Limitations of the ŠKODA extended warranty[a)]

Years: _____

or

km: _____

or

Miles: _____

[a)] Depending on which comes first.

Reprinting, reproduction or translation, either in whole or in part, is not permitted without the written consent of ŠKODA AUTO a.s..

ŠKODA AUTO a.s. expressly reserves all rights relating to copyright laws.

Subject to change.

Issued by: ŠKODA AUTO a.s.

© ŠKODA AUTO a.s. 2020

Vehicle owner

First Vehicle owner

This vehicle with the registration plate

_____

belongs to:
Title, name/company:

_____

_____

Address:

_____

_____

_____

Telephone:

_____

ŠKODA Partner:

Service consultant:

_____

Telephone:

_____

Second Vehicle owner

This vehicle with the registration plate

_____

belongs to:
Title, name/company:

_____

_____

Address:

_____

_____

_____

Telephone:

_____

ŠKODA Partner:

Service consultant:

_____

Telephone:

_____

Table of Contents

1 Vehicle owner

5 About the Owner's Manual

5 About the Owner's Manual

6 Explanations

7 Vehicle overviews
7 Front vehicle area
9 Rear vehicle area
10 Driver's seat
10 Centre console and passenger seat
11 Engine compartment
11 Buttons/dials on the multifunction steering wheel

11 Warning lights
11 Functionality
11 Warning lights overview
13 Indicator lights overview

16 Correct and safe
16 Introductory information on correct use
16 New vehicle or new parts
16 Regular checks
16 No improper vehicle adjustments
16 Keeping sensors and cameras in working order
17 Engine compartment
17 Vehicle battery
17 Using electrical sockets in the vehicle
17 Before your journey
19 Safe driving
20 Emergency call
21 After an accident

22 Keys, locks and alarm system
22 Key
22 Central locking
24 Keyless locking (KESSY)
25 Alarm system

26 Doors, windows and boot lid
26 Doors
26 Child safety lock on the rear doors
26 Window - with manual operation
26 Window - with electrical operation
28 Sunblind - with manual operation
28 Sun visors
28 Boot lid - with manual operation
28 Unlocking the boot lid

29 Seats, steering wheel and mirror
29 Front seat - with manual operation
29 Rear seats
30 Parking position of the rear seat belts
30 Headrests
30 Front armrest
30 Steering wheel
31 Interior rear-view mirror
31 Wing mirror

32 Restraint systems and airbags
32 Seat belts
33 Child seat
35 Fasteners for child seats
36 Airbags
37 Key switch for the front passenger airbag

38 Lighting, windscreen wipers and washers
38 Exterior lighting
41 COMING HOME, LEAVING HOME exterior lighting
41 Light Assist high-beam assist system
41 Replace light bulbs
45 Interior lighting
45 Windscreen wipers and washers

47 Heating and air conditioning system
47 Heating
47 Manual air conditioning
48 Climatronic automatic air conditioning system
49 Heated windscreen
49 Seat heating

50 Driver information system
50 Analogue instrument cluster
51 Driving data
52 Speed limit warning
53 Vehicle status

54 Infotainment Blues
54 Infotainment overview
54 System
54 Screen
54 Radio
55 Media

58 Infotainment Swing
58 Infotainment overview
58 System
59 Screen
59 Infotainment keyboard
60 Radio
62 Media
65 Mobile device management
67 Telephone
68 SmartLink

71 Infotainment Amundsen
71 Infotainment overview
71 System
72 Screen
73 Infotainment keyboard
74 Voice control
75 Radio
78 Media
81 Images

82 Media Command
84 Mobile device management
86 Telephone
88 Wi-Fi
89 Data connection
89 SmartLink
92 Navigation

97 Online Services
97 ŠKODA Connect
97 User registration and activation of the ŠKODA Connect services
98 Setting personal data protection
98 User account
99 Management of online services
100 Information call
100 Breakdown call
101 Service schedules
101 Vehicle status report
101 Remote access to the vehicle

102 Starting and driving
102 Starting with the key
102 Start at the push of a button
103 Starting issues
103 START STOP
104 Manual gearbox
104 Automatic gearbox
105 Economical driving style
106 Towing a trailer
107 Towing eye and towing procedure
108 Brakes
109 Handbrake

110 Driver assist systems
110 Braking and stabilising systems
110 Front Assist
111 Speed limiter
112 Cruise control system
113 Adaptive Cruise Control (ACC)
115 Blind Spot Detect
116 Driver Alert fatigue detection assistant

116 Park Assist systems
116 Park Pilot parking aid
117 Rear view camera
118 Rear Traffic Alert

119 Engine, exhaust system and fuel
119 Bonnet
119 Engine oil
120 Coolant
121 Engine electronics
121 Particle filter
121 Exhaust control system
121 Fuel filler flap
122 Petrol

123 Vehicle battery and fuses
123 Vehicle battery
124 Using the jump-starting cable
125 Fuses
126 Fuses in the dash panel
127 Fuses in the engine compartment

128 Wheels
128 Tyres and rims
129 All-season or winter tires
129 Snow chains
129 Spare and emergency spare wheel
130 Changing the wheel and raising the vehicle
131 Breakdown kit
132 Tyre pressure
133 Tyre pressure monitor
134 Wheel bolt cover caps
134 Full wheel frame

134 Storage space and interior equipment
134 Equipment in the boot
134 Emergency equipment
135 Storage compartment for the reflective vest
135 Fasteners in the boot
136 Bag hooks in the boot
136 Flexible storage compartment
136 Cargoelements in the luggage compartment
136 Fastening nets
137 Net partition
137 Double-sided floor covering
137 Rigid boot cover
138 Lowered position of the luggage compartment cover
138 Roll-up luggage compartment cover
138 Variable loading floor in the boot
139 Overview of passenger compartment
140 Parking ticket holder
140 Bottle tray in the storage compartment of the front door
140 Bottle tray in the storage compartment of the rear door
140 Bottle tray in the storage compartment on the passenger side
141 USBConnections
141 Glasses compartment
141 Storage compartment for an umbrella
142 Cup holder
142 Waste container
142 Ashtray and cigarette lighter
142 Tablet holder
143 12-Volt power socket

144 Roof rack and hitch
144 Roof rack
144 Removable tow coupling

148 Maintaining and cleaning
148 Service events
148 Service work, adjustments and technical changes
149 Interior
150 Exterior

151 Ice scraper on the fuel filler flap

151 Technical data and specifications
151 Requirements for the technical data
151 Vehicle identification data
152 Maximum permissible weights
152 Operating weight
153 Vehicle dimensions
153 Engine specifications
155 Personal data
155 Information about the radio systems in the vehicle
156 Rights arising from defective performance, ŠKODA warranties

158 Index

About the Owner's Manual

General points
This Owner's Manual applies to all **chassis variants** of the vehicle, including all **models** and **trim levels**.

All possible **trim levels** are described here without identifying them as special trims, model variants or market-dependent equipment. This means that **not all the trim components** described in this Owner's Manual are available in your vehicle.

The **images** in this Owner's Manual are for illustrative purposes only. The images may differ from your vehicle; these are for general information purposes only.

ŠKODA AUTO is constantly working on the further development of all vehicles. It is therefore possible for changes to be made at any time to the scope of delivery in terms of shape, equipment and technology. The information contained in this Owner's Manual corresponds to the information available at the time of going to press.

No legal claims can therefore be derived from the technical data, illustrations and information in this Owner's Manual.

Digital version of the Owner's Manual
Keeping environmental protection in mind, the printed Owner's Manual only contains the most important information regarding vehicle operation and vehicle maintenance.

The digital version of the Owner's Manual includes full information regarding vehicle operation.

The digital version is available at the following locations.

- On the ŠKODA internet pages.
- In the mobile application - MyŠKODA.

http://go.skoda.eu/owners-manuals

About the Owner's Manual

General
This Owner's Manual applies to all **chassis variants** of the vehicle, including all **models** and **trim levels**.

All possible **trim levels** are described here without identifying them as special trims, model variants or market-dependent equipment. This means that **not all the trim components** described in this Owner's Manual are available in your vehicle.

The **images** in this Owner's Manual are for illustrative purposes only. The images may differ from your vehicle; these are for general information purposes only.

ŠKODA AUTO is constantly working on the further development of all vehicles. It is therefore possible for changes to be made at any time to the scope of delivery in terms of shape, equipment and technology. The information contained in this Owner's Manual corresponds to the information available at the time of going to press.

No legal claims can therefore be derived from the technical data, illustrations and information in this Owner's Manual.

Explanations

Terms used

“Specialist garage” - A workshop that carries out specialist service tasks for ŠKODA vehicles. A specialist can be a ŠKODA Partner, a ŠKODA Service Partner, or an independent workshop.

“ŠKODA Service Partner” - A workshop that has been contractually authorised by ŠKODA AUTO or its distribution partner to perform service work on ŠKODA vehicles and to sell ŠKODA Genuine Parts.

“ŠKODA Partner” - A company that has been contractually authorised by ŠKODA AUTO or its distribution partner to sell new ŠKODA vehicles and, when applicable, to service them using ŠKODA Genuine Parts and sell ŠKODA Genuine Parts.

Text notes

“Press” - short press (e.g. a button) within 1 second

“Hold” - long press (e.g. a button) for more than 1 second

Direction indications

All direction indications, such as “left”, “right”, “front”, “rear”, relate to the forwards direction of travel of the vehicle.

⚠ **DANGER**

Texts with this symbol indicate dangerous situations which, if the safety instructions are not observed, will result in death or serious injury.

⚠ **WARNING**

Texts with this symbol indicate dangerous situations which, if the safety instructions are not observed, could result in death or serious injury.

⚠ **CAUTION**

Texts marked with this symbol indicate dangerous situations which, if the safety instructions are not observed, could result in minor or moderate injury.


ⓘ **NOTICE**

Texts with this symbol indicate situations which, if the corresponding instructions are not observed, will result in damage to the vehicle.

🛈 Texts with this symbol contain additional information.

Vehicle overviews

Front vehicle area

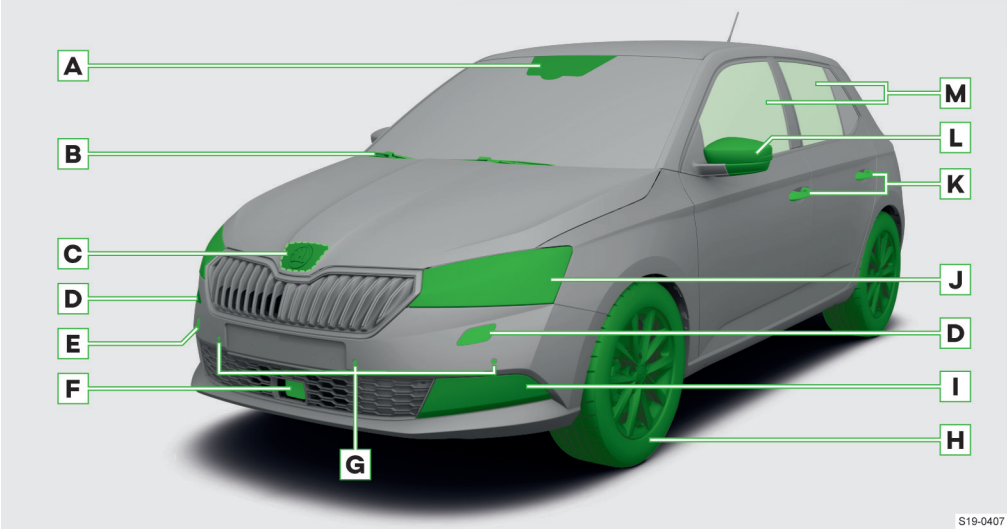

A Under the windscreen:
- ▸ Camera for assist systems.
- ▸ Light sensor for automatic driving light circuit » page 38.
- ▸ Rain sensor for automatic wiping » page 45.

B Wiper - Operation » page 45.

C Unlocking lever for engine compartment flap (on the inside of the flap) » page 119.

D Headlight cleaning system » page 45.

E Cover for the holder for the screw-in towing eye » page 107.

F Front radar sensor for assist systems.

G Ultrasonic sensors for assist systems.

H Wheels:
- ▸ Tyres and rims » page 128.
- ▸ Changing the wheel and raising the vehicle » page 130.
- ▸ Breakdown set » page 131.
- ▸ Tyre pressure » page 132.
- ▸ Tyre control display » page 133.

I Fog lights:
- ▸ Operation » page 39.
- ▸ Replacing the bulb » page 41.

J Headlights:
- ▸ Operation » page 39.
- ▸ High-beam assistant Light Assist » page 41.
- ▸ Replacing the bulb » page 41.

K Door handles:
- ▸ Opening the door » page 26.
- ▸ Keyless entry (KESSY) » page 24.


L Outer mirror - Operation » page 31.

M Side door windows:

- ▸ Electric windows » page 27.
- ▸ Mechanical window » page 26.

› Keep the sensors and cameras for the assist systems clean » page 16.

Rear vehicle area

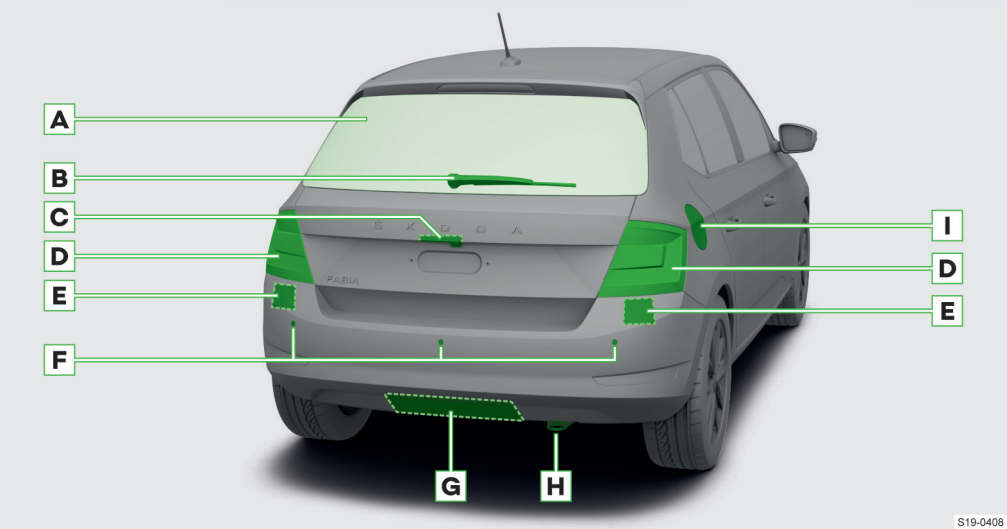

A Rear window - Heating » page 49.

B Rear window wiper and washer - Operation » page 45.

C Luggage compartment lid handle:
- ▸ Flap operation » page 28.
- ▸ Camera for assist systems.

D Tail lights:
- ▸ Operation » page 39.
- ▸ Replacing the bulb » page 41.

E Radar sensors for assist systems (in the bumper).

F Ultrasonic sensors for assist systems.


G Hitch » page 144.

H Towing eye » page 107.

I Fuel filler flap:
- ▸ Open » page 121.
- ▸ Label with tyre pressure values » page 133.
- ▸ Label with prescribed fuel.
- ▸ Ice scraper.

› Keep the sensors and cameras for the assist systems clean » page 16.

Driver's seat

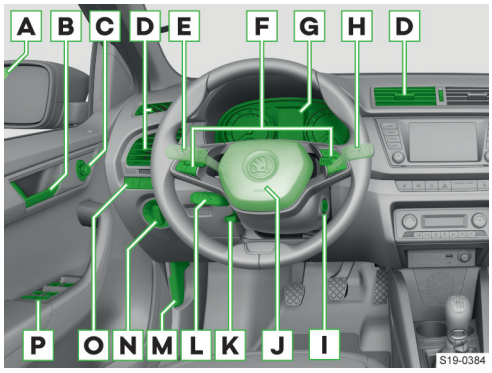

A Indicator light of the “blind spot”assistants » page 115.

B Door opening lever » page 26.

C Operating the external mirror » page 31.

D Air outlet nozzle.

E Operating lever:
- ▸ Turn signal and main beam » page 39.
- ▸ Cruise control » page 113.
- ▸ Speed limiter » page 112.
- ▸ High beam assistant » page 41.

F Buttons/dials on the multifunction steering wheel » page 11.

G Analogue instrument cluster » page 50.

H Operating lever:
- ▸ Windshield wipers and washers » page 45.
- ▸ Information system » page 50.

I Depending on the equipment:
- ▸ Ignition lock » page 102.
- ▸ Starter button » page 102.

J Steering wheel with horn/with driver's front airbag » page 36.

K Safety lever for steering wheel adjustment » page 30.

L Operating the automatic distance control » page 113.


M Unlocking the engine compartment lid » page 119.

N Light switch » page 39.

O Buttons (depending on the equipment):
- ▸ Ⓐ START-STOP » page 103.
- ▸ Traction control TCS » page 110.
- ▸ P Parking assist » page 116.
- ▸ Saving the tyre pressure values » page 133.

P Operating the windows » page 27.

Centre console and passenger seat

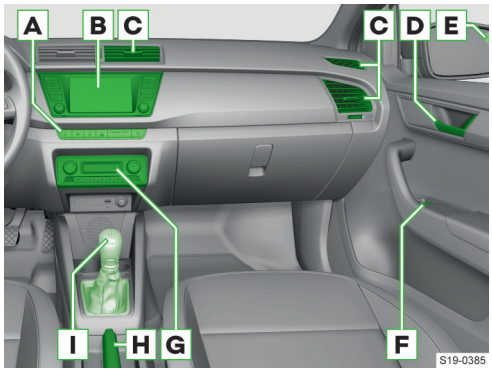

A Buttons and indicator lights (depending on the specification).

Buttons:
- ▸ Left seat heating » page 49.
- ▸ Rear window heating » page 49.
- ▸ Central locking system » page 23.
- ▸ Hazard warning system » page 39.
- ▸ Seat heating on the right » page 49.

Indicator lights:
- ▸ Front passenger airbag ON / OFF » page 37.

B Infotainment (depending on trim level):
- ▸ Amundsen » page 71.
- ▸ Swing » page 58.
- ▸ Blues » page 54.

C Air outlet nozzle.

D Door opening lever » page 26.

E Indicator light of the “blind spot”assistants » page 115.


F Window operation in the passenger door » page 27.

G Operation (depending on the trim level):
- ▸ Heating » page 47.
- ▸ Manual air conditioning » page 48.
- ▸ Climatronic » page 48.

H Parking brake » page 109.


I Depending on the equipment:
- ▸ Shift lever (manual transmission) » page 104.
- ▸ Selector lever (automatic transmission) » page 104.

Engine compartment

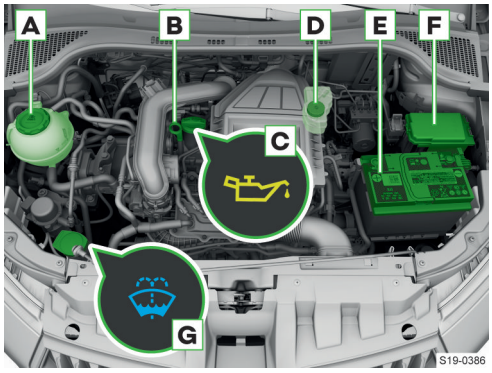

A Coolant expansion tank » page 120.
B Engine oil dipstick » page 119.
C Engine oil filler opening » page 119.
D Brake fluid reservoir » page 108.
E Vehicle battery » page 123.
F Fuse box » page 127.
G Washer fluid reservoir » page 46.

Buttons/dials on the multifunction steering wheel

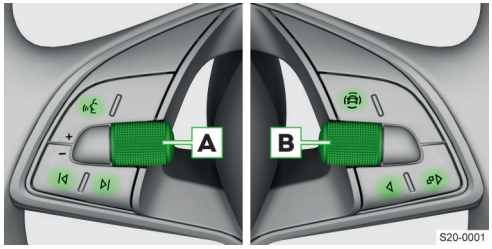

Switch voice control on / off.
A **Rotate** - Adjust Volume.
Press – Switch sound off/on.
Switch to the next track/station.
Switch to the previous track/station.
Show menu of assistance systems.
B Operate display of the instrument cluster » page 50.
Operate display of the instrument cluster » page 50.
Operate display of the instrument cluster » page 50.

Warning lights

Functionality

The warning lights in the instrument cluster indicate certain functions or faults.

The illumination of some of the indicator lights may be accompanied by acoustic signals and messages in the instrument cluster display.

Additional indicator lights
Depending on the meaning, the additional indicator light will also light up in the display along with some of the indicator lights.

⚠ - Hazard

⚠ - Warning

⚠ **WARNING**
Disregarding the lighting up of the warning lights and the associated messages on the display of the instrument cluster can lead to accidents, serious injuries or damage to the vehicle.

Warning lights overview

After switching on the ignition, some indicator lights light up briefly as a function test of the vehicle systems. If the tested systems are in order, the respective indicator lights go out a few seconds after the ignition is switched on or after the engine has been started.

For further details » page 11, *Functionality*.

Symbol	Meaning
	Indicates a warning together with another warning light » page 11.
	Front seat belt not fastened » page 32.
	Brake fluid level is too low » page 109.
	Together with - Brake system and ABS faulty » page 110.
	Parking brake on » page 109.
	Illuminates - Power assisted steering faulty » page 31.
	Flashing - Steering lock faulty » page 31.
	ACC does not decelerate sufficiently » page 113.
	Indicates a warning along with another warning light » page 11.

Symbol	Meaning
	The fuel supply has reached the reserve area. » page 123.
	Rear fog light switched on » page 39.
	ABS faulty » page 110.
	Tyre pressure control system faulty » page 133.
	Tyre pressure change » page 129, » page 133.
	**Illuminates** - Power assisted steering faulty » page 31.
	Flashing - Steering lock not unlocked » page 31.
	Flashing - Steering lock faulty » page 31.
	KESSY - starting problem » page 103.
	KESSY - no key found » page 25.
EPC	Petrol engine control faulty » page 121.
	Emission control system faulty » page 121.
ON	**Flashes** together with OFF - Key switch for airbag deactivation faulty » page 38.
OFF	Front passenger airbag switched off » page 38.
ON	Front passenger airbag switched on » page 38.
	Airbag system faulty » page 37.
	Illuminates for 4 seconds **and then flashes** - Airbag or belt tensioner deactivated with diagnostic device » page 37.
	ASR deactivated » page 110.
	**Illuminates** - ESC or ASR faulty » page 110.
	Flashing - ESC or ASR is engaged » page 110.
	Turn signal light, left » page 39, » page 40.
	Turn signal light, right » page 39, » page 40.

Symbol	Meaning
	Trailer turn signal light » page 40.
	Front fog lights switched on » page 39.
	The selector lever is locked » page 104.
	ACC controls the driving speed » page 113.
	The cruise control system controls the driving speed » page 112.
	Speed limiter controls the driving speed » page 112.
	High beam or flasher activated » page 39.
	Rear seat belt not fastened » page 32.
	A rear seat belt is fastened » page 32.
	Low outside temperature » page 50.
	High beam Assist System switched on » page 41.
	Bulb in the vehicle exterior lights failed » page 40.
	battery charging » page 121, » page 124, » page 124.
	Engine oil pressure too low » page 120.
	Engine oil level too high **or** engine oil level sensor impaired » page 120.
	Engine oil level too low » page 120.
	Coolant temperature too high » page 121.
	Coolant level is too low » page 120.
	together with - engine fault » page 124.
	Windscreen washer fluid level too low » page 46.
	Clogged particle filter » page 121.
	Automatic gearbox overheated » page 105, » page 105.
	Automatic gearbox impaired » page 105, » page 105.


Symbol	Meaning
	Service event » page 148.
	Engine was switched off automatically by START-STOP » page 103.
	Engine was not automatically switched off via START-STOP » page 103.
LIM	Speed limiter faulty » page 112.
LIM	Speed limiter activated » page 111.
LIM ERR	Speed limiter disturbed » page 112.
	ACC not available » page 115.
	ACC activated » page 113.
	Cruise control system faulty » page 113.
ERR	Cruise control system disturbed » page 113.
	Cruise control activated » page 112.
	Warning if there is a risk of a collision » page 111.
OFF	Front Assist deactivated » page 111, » page 111.
	Safety distance too small » page 111.
eco	Consumption-friendly driving » page 106.
	Break recommendation » page 116.

Indicator lights overview

After switching on the ignition, some indicator lights light up briefly as a function test of the vehicle systems. If the tested systems are in order, the respective indicator lights go out a few seconds after the ignition is switched on or after the engine has been started.

Symbol	Meaning
	Indicates a warning together with another warning light » page 11.
	Front seat belt not fastened » page 32.
	Brake fluid level is too low » page 109.
	Together with - Brake system and ABS faulty » page 110.
	Parking brake on » page 109.
	Illuminates - Power assisted steering faulty » page 31.
	Flashing - Steering lock faulty » page 31.
	ACC does not decelerate sufficiently » page 113.
	Indicates a warning along with another warning light » page 11.
	The fuel supply has reached the reserve area. » page 123.
	Rear fog light switched on » page 39.
ABS	ABS faulty » page 110.
	Tyre pressure control system faulty » page 133.
	Tyre pressure change » page 129, » page 133.
	Illuminates - Power assisted steering faulty » page 31.
	Flashing - Steering lock not unlocked » page 31.
	Flashing - Steering lock faulty » page 31.
	KESSY - starting problem » page 103.
	KESSY - no key found » page 25.
EPC	Petrol engine control faulty » page 121.
	Emission control system faulty » page 121.
ON	**Flashes** together with OFF - Key switch for airbag deactivation faulty » page 38.
OFF	Front passenger airbag switched off » page 38.
ON	Front passenger airbag switched on » page 38.

Symbol	Meaning
	Airbag system faulty » page 37.
	**Illuminates** for 4 seconds **and then flashes** - Airbag or belt tensioner deactivated with diagnostic device » page 37.
	ASR deactivated » page 110.
	**Illuminates** - ESC or ASR faulty » page 110.
	Flashing - ESC or ASR is engaged » page 110.
	Turn signal light, left » page 39, » page 40.
	Turn signal light, right » page 39, » page 40.
	Trailer turn signal light » page 40.
	Front fog lights switched on » page 39.
	The selector lever is locked » page 104.
	ACC controls the driving speed » page 113.
	The cruise control system controls the driving speed » page 112.
	Speed limiter controls the driving speed » page 112.
	High beam or flasher activated » page 39.
	Rear seat belt not fastened » page 32.
	A rear seat belt is fastened » page 32.
	Low outside temperature » page 50.
	High beam Assist System switched on » page 41.
	Bulb in the vehicle exterior lights failed » page 40.
	battery charging » page 121, » page 124, » page 124.
	Engine oil pressure too low » page 120.

Symbol	Meaning
	Engine oil level too high **or** engine oil level sensor impaired » page 120.
	Engine oil level too low » page 120.
	Coolant temperature too high » page 121.
	Coolant level is too low » page 120.
	together with  - engine fault » page 124.
	Windscreen washer fluid level too low » page 46.
	Clogged particle filter » page 121.
	Automatic gearbox overheated » page 105, » page 105.
	Automatic gearbox impaired » page 105, » page 105.
	Service event » page 148.
	Engine was switched off automatically by START-STOP » page 103.
	Engine was not automatically switched off via START-STOP » page 103.
	Speed limiter faulty » page 112.
	Speed limiter activated » page 111.
	Speed limiter disturbed » page 112.
	ACC not available » page 115.
	ACC activated » page 113.
	Cruise control system faulty » page 113.
	Cruise control system disturbed » page 113.
	Cruise control activated » page 112.
	Warning if there is a risk of a collision » page 111.
	Front Assist deactivated » page 111, » page 111.
	Safety distance too small » page 111.
	Consumption-friendly driving » page 106.

Symbol	Meaning
	Break recommendation » page 116.

Correct and safe

Introductory information on correct use

- Read this Owner's Manual carefully, as proceeding in accordance with this manual is a prerequisite for the correct use of the vehicle. This Owner's Manual should therefore always be in the vehicle.
- When using the vehicle, the generally binding legal provisions that are specific to the country must be observed. Such as those for transporting children, switching off airbags, using tyres, road traffic and the like.
- Do not exceed the maximum permissible weights and loads.
- Do not exceed the maximum permissible roof load.
- Use the specified fuel and operating fluids.
- Drive on roads that correspond to the technical vehicle parameters. Obstacles that exceed the ground clearance of the vehicle can damage the vehicle when driving over them.
- Care must be taken during operations related to operation, maintenance and self-help to avoid damage to the vehicle or injury. If necessary, seek the help of a specialist company.
- All work on the vehicle's safety systems e.g. on the seatbelts or the airbag system, may only be carried out by a specialist garage.
- When using the accessories, observe the instructions in the operating instructions of the accessories manufacturer. These include child seats, roof racks, compressors etc.
- Observe the service intervals.

New vehicle or new parts

New vehicle - Running in the engine
Driving style during the first 1500 km determines the quality of the engine run-in process.

- During the first 1000 km, rev the engine to max. 3/4 of the highest permissible engine speed and avoid using a trailer.
- Over the next 500 km, the engine speed can be slowly increased.

Depending on driving style and operating conditions, the engine consumes some oil, up to 0.5 l/1000 km. Consumption may be higher over the next 5000 km.

New brake pads
New brake pads do not provide the optimum braking effect during the first 200 km, they have to be worn in first. Therefore, drive very carefully.

New tyres
New tyres do not have optimum grip for the first 500 km. Therefore, drive very carefully.

Regular checks

What should be taken into account before driving?
A vehicle with technical defects can increase the risk of accidents and injuries.

Eliminate any defects before driving. If required, seek the help of a specialised garage.

Pay special attention to the following points.

- Is the tyre undamaged?
- Is the tyre tread sufficient?
- Is the tyre pressure sufficient?
- Do the headlamps, brake and turn signals work?
- Is the windscreen in good condition?
- Is the engine oil, brake fluid and coolant level OK?
- Is the air intake in the engine compartment free from obstruction?
- Are the air outlet nozzles or air intake in front of the windscreen free from obstruction?
- Are the windscreen wiper and washer system and windscreen wiper blades functional?
- Is the windscreen washer fluid level sufficient?
- Are the windscreen wiper blades in good condition?
- Are all seatbelt system components in good working order? Are the seatbelts clean and have the buckles been unclogged?
- Is the spoiler working properly?
- Are parts and components of the vehicle still visibly attached?
- Are there no oil stains or other operating fluids under the vehicle?

No improper vehicle adjustments

Improper modifications can cause interference and affect safety-related functions and other functions of the vehicle.

- Adjustments and technical modifications to the vehicle should only be carried out by a specialist garage.
- Do not cover the engine with additional insulation materials, e.g. a blanket.

Keeping sensors and cameras in working order

Some functions of your vehicle are supported by sensors and cameras inside and outside the vehicle.

The rear-mounted accessories, e.g. bike rack, may affect system and camera functionality.

- Do not cover or put a sticker over the sensors and cameras and keep them clean.

- If there is damage suspected to the sensors or cameras, seek the help of a specialist garage.

Engine compartment

Before opening the engine compartment flap
Risk of scalding! Do not open the engine compartment flap if steam or coolant comes out of the engine compartment.

- Stop the engine and allow it to cool.
- Remove the ignition key. On vehicles with a keyless locking system, open the driver's door.

When working in the engine compartment
- Keep children away from the engine compartment.
- Do not touch the radiator fan. The radiator fan can turn itself on, even when the ignition is off.
- Do not touch electrical cables. Avoid short circuits in the electrical system, especially on the vehicle battery.
- Do not smoke near the vicinity of the engine and refrain from handling open flames or sparks.
- If you need to work in the engine compartment with the engine running, be mindful of rotating engine parts and electrical equipment.
- Do not leave any objects in the engine compartment.

Handling operating fluids
Your vehicle needs various fuels to operate that can affect health or the environment when they are emitted. These include fuel, oils, battery acid, coolant and brake fluid.

- Only use operating fluids outdoors or in well-ventilated areas. If required, wear protective equipment.
- Do not use or check operating fluids with the engine running.
- In the event of contact with operating fluids, wash affected areas with warm water. If required, seek medical help.
- The leaked engine oil in the engine compartment can cause a fire, so wipe it off with a cloth.
- Store cloths soiled by brake fluids in a well-ventilated place until disposal. Cloths with residues of engine oil can ignite and cause a fire.

Vehicle battery

Handling the vehicle battery
Battery acid is highly corrosive. Improper handling of the vehicle battery can cause an explosion, fire, chemical burns or poisoning!

- When handling the vehicle battery, eye and skin protection must be worn.
- Do not tilt the vehicle battery, as it may leak battery acid.
- If battery acid comes into contact with skin, wash the affected areas with water for a few minutes. Get medical help without delay.
- Do not charge a frozen or thawed vehicle battery. Replace a frozen vehicle battery.
- Do not use a damaged vehicle battery.
- Short circuit! Do not connect the battery terminals.

Using electrical sockets in the vehicle

Improper handling of sockets can lead to life-threatening electric shock or fire.

- The sockets may get hot during operation. Do not touch hot sockets.
- Protect sockets from liquids.
- If moisture gets into the socket, let the socket dry before reusing it.
- Do not insert any objects into the socket contacts.

Before your journey


Adults and children, cargo and objects - everything has its place in the vehicle. Observe the following instructions so that all occupants are protected in the best possible way in the event of an accident.

Before you go
- Ensure that you have a good view of outside the vehicle. Attach external devices (e.g. navigation system) so that they do not restrict the view externally.
- Adjust the rearview mirrors.
- Close all doors and the engine compartment and boot flap.
- Take up the correct sitting position, adjust the seats correctly and fasten the seat belt properly. Ensure that passengers do likewise. Always leave the seat belt on while driving.
- Only one person can be secured with a seat belt.
- Make sure that the seat belts are not trapped, e.g. in the door or in the seat.
- Check seat belts, their locks and attachment points for damage.

Sitting safely
For the safety of the occupants and to reduce the risk of injury in the event of an accident, the following instructions must be observed.


- Stand the backrests upright. If the front passenger seat backrest has been folded forward, only the seat behind the driver's seat may be used for transporting passengers.
- Engage the rear seat backrests correctly.

- ▶ Adjust the height-adjustable headrest so that the top of the headrest is as close as possible to the top of the head.
- ▶ On the occupied rear seat, the headrest should not be in the lower position although the upper edge of the headrest should be at the same height as the top of the head.
- ▶ Keep your feet in the footwell.
- ▶ Use the entire seat.
- ▶ Do not lean forward or sit to the side.
- ▶ Do not hold your limbs out the window.

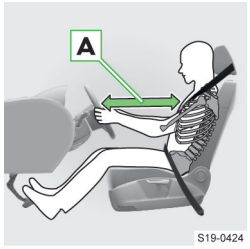

- › Adjust the driver's seat in the longitudinal direction so that the pedals can be fully pushed through with slightly bent legs.
- › Adjust the steering wheel in such a way that the distance A between the steering wheel and sternum is at least 25 cm.
- › Adjust the angle of the backrest so that the steering wheel can be reached at the top with your arms slightly bent.
- › Move the passenger seat back as far as possible. The front passenger must maintain a minimum distance of 25 cm from the dash panel.

Correct belt webbing arrangement

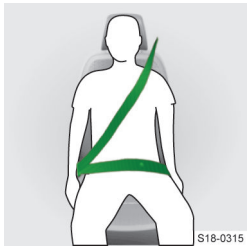

The webbing arrangement is extremely important for the seat belts to offer the best possible protection.

- ▶ The shoulder strap must run over the middle of the shoulder, must never run over the neck, and must lie firmly against the body (it must not run over loose layers of clothing).
- ▶ The lap belt part must be placed in front of the pelvis and fit tightly.
- ▶ In pregnant women, the lap belt part must be as low as possible on the pelvis, so that no pressure is exercised on the abdomen.
- ▶ The webbing must not be pinched or twisted and rub against sharp edges.
- ▶ The webbing must not pass over solid or fragile objects in clothing, such as a key ring, etc.
- ▶ The tongue may only be inserted into the buckle of the associated seat.
- ▶ The webbing must be tight. Therefore, do not attach clamps or similar items to the webbing for adjusting the seat belt according to body size.

Correct steering wheel position



- ▶ Hold the steering wheel with both hands on the outer edge in the "9 o'clock" and "3 o'clock" position. Otherwise, you may experience serious injury to the arms, hands and head when deploying the airbag.

Be mindful of the effect of the airbag system

Airbag systems can only properly protect if all occupants have been secured and they are in the correct seating position.

No persons, animals or objects such as cup holders or hangers for clothes may be in the deployment area of the airbags » page 37.

- ▶ Do not cover or stick anything over the steering wheel or the dash panel. The front airbags were not able to deploy.

The front passenger airbag should be switched off in some situations » page 37.

Securing children properly

- ▶ Do not carry a child on your lap, and secure the child and yourself with a seat belt.
- ▶ Only transport children in a suitable child seat » page 34.

Children under 150 cm tall will not be properly protected without a child seat. Children that have been inadequately secured can be thrown through the vehicle in the event of an accident or a sudden manoeuvre. You can cause life-threatening injuries to yourself and other occupants.

If children lean forward or assume a wrong sitting position while driving, they are more likely to be injured in the event of an accident. This is especially true for children who are carried in the passenger seat - when the airbag system triggers, they can be seriously injured or killed!

A child that has been incorrectly secured in the wrong sitting position - endangered by the side airbag



The child should not be in the deployment area of the side airbag.

A child that has been properly secured in a child seat



There must be enough room between the child and the exit area of the side airbag for the side airbag to offer the best possible protection.

Transporting objects safely
When moving heavy objects, there is a shift in emphasis. Thus, the driving behaviour of the vehicle changes.

- ▶ Adjust driving speed and driving style to this changed driving behaviour.

Unsecured or misplaced items may be thrown around in the event of an accident or sudden manoeuvre. There is a risk of serious injury and loss of control of the vehicle!

In a rear-end collision at 50 km/h unsecured objects are thrown forward with up to 50 times their weight. A 1.5 litre water bottle is thrown with up to 75 kg.

- ▶ Transport objects securely.
- ▶ Stow objects so they do not hinder the driver. Keep the driver footwell clear.
- ▶ Stow small items in the storage compartments.
- ▶ Do not leave lockable storage compartments open.
- ▶ Do not let items protrude out of the slots. This note does not apply to bottles in bottle trays.
- ▶ Do not place any objects on the dash panel or on the luggage compartment cover.
- ▶ Do not exceed the maximum permissible load of fasteners and shelves.
- ▶ Distribute the load evenly in the luggage compartment and fasten it so it cannot slip.
- ▶ Place heavy objects in the luggage compartment as far forward as possible.

Safe driving

Introductory notes
- ▶ Pay attention when you are driving! As a driver, you are fully responsible for road safety.
- ▶ Always adjust driving speed to the road conditions as well as the traffic and weather conditions.

Paying attention to warning signals
The driver information system warns you with indicator lights and messages in the event of any faults.

Failure to follow the warnings may increase the risk of accidents and injuries.

- ▶ If the vehicle issues a warning signal, then park the vehicle safely and follow the information in the instrument cluster, and in this Owner's Manual.

Using assistance systems in a clever way
The assistance systems are only for support and do not absolve you from your responsibility for driving the vehicle.

The assistance systems are subject to physical and technical limitations. Therefore, in certain situations, system reactions may be perceived as undesirable or delayed.

- ▶ Stay alert and be ready to intervene.
- ▶ Familiarise yourself with the assistance systems, their limitations and operating conditions.
- ▶ Activate, deactivate and adjust the assistance systems so that you have full control of the vehicle in any traffic situation.

Driving with a substitute spare wheel or emergency wheel
A substitute spare wheel or emergency wheel is only used to reach the nearest specialist garage.

- ▶ Inflate the wheel with the max. prescribed inflation pressure.
- ▶ Follow the instructions on the warning label on the rim.
- ▶ Do not cover the warning sign.
- ▶ Avoid full accelerations, strong braking and fast cornering.
- ▶ Do not drive with more than one mounted spare wheel.
- ▶ Avoid using snow chains on the temporary spare wheel.

Driving with a loaded roof rack
When transporting objects on the roof rack, the vehicle's driving behaviour changes.

- ▶ Adapt your speed and driving style to this.

Towing a trailer
The vehicle's handling characteristics change with a trailer. The assistance systems may behave differently.

- ▶ Drive more slowly, excessive speed can lead to loss of control of the vehicle.
- ▶ Keep a larger distance from the vehicle in front.
- ▶ Do not exceed the max. vertical load and the permissible trailer load.

Driving through water
There must be no water ingress into the vehicle systems e.g. into the engine's air intake system!

- ▶ Therefore, determine the water depth before driving through water. The water level must not exceed the lower edge of the lower beam.
- ▶ Drive at max. walking speed. Otherwise, a wave may form in front of the vehicle, increasing the water level.
- ▶ Never stop in the water, do not drive backwards and never stop the engine.

Vehicle operation in different weather conditions
If you wish to run your vehicle in countries with different weather conditions from those specified, please contact a ŠKODA partner. They will advise you if certain precautions need to be taken to ensure the full functioning of the vehicle or to prevent damage (e.g. coolant, battery replacement, etc.).

Is something wrong?
- ▶ Pay attention to changes in vehicle handling.
- ▶ If in doubt about safety, stop driving and seek the help of a specialist garage.
- ▶ Unusual vibrations or the vehicle 'pulling' to the side may indicate a puncture.
- ▶ If tyre pressure loss is very quick, try to stop the vehicle carefully without heavy steering or heavy braking.
- ▶ Immediately remove foreign bodies stuck in the tyre tread.
- ▶ Do not remove foreign objects that have penetrated into the tyre. Check the tyre pressure and seek the help of a specialised garage.
- ▶ Immediately remove any objects jammed under the floor of the vehicle. These can damage the vehicle or ignite and cause a fire.

Parking the vehicle safely
A vehicle that has not been secured may roll away and cause accidents.

- ▶ For parking, look for a place with suitable ground. Do not park the vehicle on flammable materials such as dried leaves, spilt fuel. Hot vehicle parts can cause a fire.

Carry out the following activities in the specified order when parking.

- › Stop the vehicle and keep the brake pedal depressed.
- › Secure the vehicle with the parking brake.
- › For vehicles with an automatic gearbox, put the selector lever in the **P** position.
- › Turn off the engine.
- › For vehicles with manual transmission, engage 1st gear or reverse gear.
- › Release the brake pedal.

Exiting the vehicle
Do not leave children unattended in the vehicle!

- ▶ Children may injure themselves when handling the seats, releasing the parking brake etc.
- ▶ In emergency situations, children are not able to leave the vehicle on their own or help themselves.
- ▶ At very high or very low temperatures, there is danger to life!
- ▶ When locking the vehicle, the SAFE function switches on. As a result, no doors or windows can be opened from the inside. Turn off the SAFE function if people are left behind in the locked vehicle » page 22.

Emergency call

⚠ **WARNING**
Availability of a mobile network is indispensable for establishing a connection to the emergency number.

⚠ **WARNING**
This emergency service is only available in some countries.

⚠ **WARNING**
If the vehicle is located in an area without a functioning emergency call system infrastructure, no vehicle data shall be transmitted to the emergency call centre.

After the start of the conversation, the emergency call centre also contains information as to the accident location and the severity of the accident, the number of occupants with seatbelts on who are in the front seats, and the vehicle identification number (VIN).

Once the connection has been established, communication with the emergency call centre takes place via the loudspeaker and microphone installed in the vehicle.

Personal data
Personal customer data is collected, processed and used by ŠKODA AUTO in accordance with the provisions of the generally binding legal provisions in the area of personal data protection.

The current declaration on the protection of personal data can be found on the following website:

https://www.skoda-auto.com/other/personal-data

Automatic start of a call with the emergency call centre
In the event of an accident, a call is automatically started with the emergency call centre.


Manual call



› Keep the SOS button pressed down.
› Confirm the connection to the emergency call centre in the Infotainment screen.
› To cancel the connection to the emergency call centre before starting the call, press the SOS button again or confirm the cancellation of the connection in the Infotainment screen.

Starting a manual conversation can then be used, for example, if you also report an accident in which you are not directly involved.

Indicator light

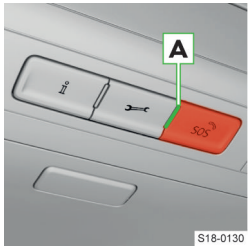

The system status is displayed after the ignition is switched on, by the illumination of indicator lamp A .

▸ Green - lit up - the system is functional.
▸ Green - flashing - a call is being made to the emergency call centre.
▸ Red - lit up - there is a system failure, immediately seek the help of a specialist garage.
▸ Not lit up - the system is out of order due to a long term unavailable mobile network, if this circumstance persists, the system will require the assistance of a specialist garage.

⚠ **WARNING**
If there is a system fault, no emergency call is possible.

After an accident

What to do after an accident
Where possible, please observe the following instructions.

› Switch off the ignition.
› Turn on the hazard warning lights.
› Set up the warning triangle to warn other road users.
› Stay at a safe distance from the vehicle, along with any passengers.
› Report the accident to the emergency services.
› Wait for the emergency services to arrive.

Safety systems
After an accident, the safety systems of the vehicle, e.g. seatbelts and airbag system, may be out of action.

▸ Have the vehicle's safety systems checked by a specialist garage, even if no load or trip has occurred.
▸ Have damaged, loaded or triggered components of the safety systems replaced by a specialist garage.


What to do in the event of a fire
Where possible, please observe the following instructions.

› Switch off the ignition.
› Turn on the hazard warning lights.
› Set up the warning triangle to warn other road users.
› Stay at a safe distance from the vehicle, along with any passengers.
› Report the fire to the emergency services.
› Wait for the emergency services to arrive.

Keys, locks and alarm system

Key

Key overview

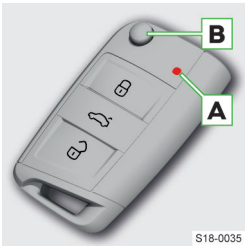

- Lock the vehicle
- Operate the luggage compartment lid
- Unlock vehicle

A Battery status indicator light

B Safety button for opening and closing the key bit

NOTICE

- Protect the key from moisture and strong vibrations.
- Keep the grooves in the key bit clean.

The effective range of the key signal is approximately 30 m. The effective area can be reduced, e.g. due to signal interference from other transmitters.

Troubleshooting

The battery in the key is almost empty

- After pressing a button on the key, the warning light does not flash.

Or:

- A message stating it is necessary to change the battery will be displayed.

› Replace the battery » page 22.

The vehicle cannot be unlocked or locked with the remote control

There may be the following reasons.

- The battery in the key is empty.

› Replace the battery » page 22.

- The key is not synchronized.

Synchronize the key as follows.


› Press one of the buttons on the key.

› Unlock the door within 1 minute with the key via the locking cylinder » page 23.

If necessary, the key must be synchronized if one of the buttons on the key has been repeatedly pressed outside of the effective range of the remote control.

Changing the key battery

The new battery must meet the specifications of the original battery.

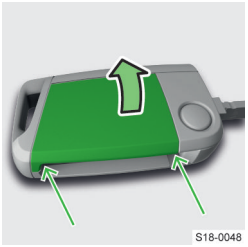

› Fold out the key bit.

› Loosen the battery cover with your thumb or with a flat-blade screwdriver at the marked positions.

› Open the battery cover.



› Take out the battery.

› Press any key on the radio key, and the key resets.

› Insert the new battery.

› Fit the battery cover and press until it clicks into place.

Central locking

Functionality

Central locking system

The system unlocks and locks all doors, the fuel filler flap and the luggage compartment flap at the same time.

Unlock indicator: the flashing lights flash twice.

Lock indicator: the flashing lights flash once.

The warning light in the driver's door will flash for about 2 seconds in quick succession after the vehicle is locked, then it will start flashing regularly at longer intervals.

If none of the doors or the boot lid is opened within 45 seconds of unlocking, the vehicle automatically locks again.

SAFE-Function

Depending on the equipment, the SAFEFunction can be incorporated into the central locking system.

The SAFEFunction prevents the doors from opening from the inside after locking the vehicle.

The SAFEFunction turns on when the vehicle is locked from the outside.

After the ignition is switched off, a message regarding the SAFEFunction is displayed on the instrument cluster display.

⚠ DANGER

Risk of death!

- When the vehicle is locked and SAFEFunction is switched on, no people may remain in the vehicle.

SAFE-Turn off the function

- By double locking within 2 seconds.

Or:

▸ Together with the deactivation of the interior surveillance » page 25, *Settings*.

The warning light in the driver's door will flash for about 2 seconds in quick succession after the vehicle is locked, then goes out and starts flashing regularly at longer intervals after about 30 secs.

If the SAFEFunction is switched off, the door can be opened from the inside by pulling the opening lever once.

The SAFEFunction is switched on again after unlocking and locking the vehicle.

Operation

Means for operating the central locking
Depending on the equipment:

▸ Key » page 22.
▸ Keyless Entry (KESSY) » page 24.
▸ Central locking button.

Lock / unlock with the central locking button
› Press the button in the centre console.

The symbol in the button lights up when locking.

The button locks all doors and the boot lid.

Unlocking of the vehicle also takes place when opening a door from the inside or when removing the key from the ignition.

⚠ **WARNING**
A locked vehicle with a central locking button makes it difficult for responders to enter the vehicle in an emergency.

Setting the unlocking and locking function

The lock and unlock functions are set in the following menu in the Infotainment system.

CAR > > >

Or:

MENU > > > >

All doors
Unlocking all doors, the luggage compartment lid and the fuel filler flap.

Single door
The driver's door and the fuel filler flap are unlocked with the button on the key.

In vehicles equipped with a keyless locking system, the door near to which the key is located and the fuel filler flap are unlocked by touching the door handle.

When unlocked again, the other doors and the boot lid are also unlocked.

Doors on one side of the vehicle
The doors on the driver's side and the fuel filler flap are unlocked with the button on the key.

In vehicles equipped with a keyless locking system, the doors on the passenger's side near to which the key is located and the fuel filler flap are unlocked by touching the door handle.

When unlocked again, the other doors and the boot lid are also unlocked.

Automatic locking after starting
After starting, all doors and the boot lid are locked when a speed of 15 km/h is reached.

Unlocking of the vehicle takes place when opening a door from the inside or when removing the key from the ignition.

⚠ **WARNING**
An automatically locked vehicle makes it difficult for responders to enter the vehicle in an emergency.

Troubleshooting


Central locking fault
▸ The warning light in the driver's door first flashes for 2 secs in quick succession.
▸ Then it lights up continuously.
▸ After 30 secs, it flashes slowly.
› Seek the help of a specialist garage.

Unlock and lock the door mechanically

Unlocking and locking the door with the lock cylinder



Remove cover
› Pull the handle on the front left door and hold it.
› Insert the key into the recess on the underside of the cover.
› Open the cover in the direction of the arrow.
› Let go of the door handle.

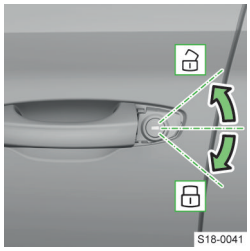

Unlock and lock

› Insert the key with the buttons facing upwards into the lock cylinder and unlock or lock.

Install cover

› Pull and hold the door handle.

› Replace the cover.

› Let go of the door handle.

Lock the door without the locking cylinder



› Open the door.

› For vehicles with a panel over the opening, remove the panel.

› Insert the key or a flat-head screwdriver into the slot.

› Turn the key or flat-head screwdriver towards the outside of the vehicle (spring-loaded position).

After closing, the door is locked.

Keyless locking (KESSY)

Usage


The keyless locking system, KESSY, enables unlocking and locking of the vehicle without actively using the remote control key.

Operation

Keep the key with you when unlocking and locking.

The sensors on the handle are intended to be operated with bare hands, e.g. wearing gloves may affect the function of the sensors.


Unlock

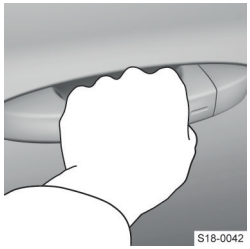

› Grip the door handle.

› Open the door.

Lock

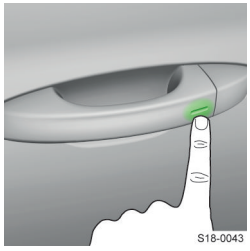

› Touch the sensor.

After locking, it is not possible to unlock within 2 seconds by touching the door handle. This can be used to check whether the vehicle is locked.

Unlock the boot lid

› Push the handle of the boot lid.

Protection against inadvertently locking the key in the vehicle

When the key is locked in the vehicle, the vehicle is automatically unlocked. If no door is opened within 45 seconds, the vehicle automatically locks again.

When the key is locked in the luggage compartment, the luggage compartment lid is automatically unlocked.

Settings

Deactivate keyless locking

› Lock the vehicle with the button on the key.

› Within 5 s, touch the sensor on the door handle with your finger.

Deactivation is confirmed by a single flash of the direction indicators.

› To check the deactivation, wait at least 10 seconds and then pull the door handle.

The door must remain locked.

Keyless locking is automatically activated once again after the vehicle is unlocked.

Troubleshooting

The vehicle cannot be unlocked or locked using the sensors on the handle

› Lock or unlock the vehicle with the button on the key.

› Then try to unlock or lock the vehicle using the sensors on the handle.
› If keyless locking does not work, get the help of a specialist garage.

If the vehicle is not unlocked for a longer period of time, the function can be deactivated automatically.

No key was found when the ignition was switched on

 illuminates
A message that no key was found in the vehicle.

› Insert the key into the vehicle.

Alarm system

Functionality

The alarm system triggers acoustic and optical signals in the event of a break-in or towing attempt.

The alarm system is activated automatically approximately 30 seconds after the vehicle is locked.

The alarm system is automatically deactivated after the vehicle is unlocked.

Alarm trigger
The activated alarm system triggers an alarm when one of the following events occurs.

▸ Open the engine compartment lid.
▸ Open the boot lid.
▸ Opening the door.
▸ Manipulation of the ignition lock.
▸ Towing the vehicle.
▸ Movement in the vehicle.
▸ Sudden and significant voltage drop in the electrical system.
▸ Unhitch the trailer.
▸ Opening the door unlocked via the lock cylinder.

Switch off the triggered alarm
› Unlock the vehicle.

Or:

› Turn on the ignition.

Functional conditions

All windows must be closed for the alarm system to function correctly.

A trailer is integrated into the alarm system under the following conditions.

✓ The vehicle is factory-fitted with a towing device.
✓ The trailer is electrically connected to the vehicle via the trailer socket.
✓ The trailer is not equipped with LED tail lights.

If the electrical connection to the trailer is interrupted in a vehicle with an activated alarm system, warning signals are triggered.

Disable the alarm before connecting or disconnecting a trailer.

Settings

The following functions of the alarm system can be deactivated at the same time.

▸ Interior surveillance.
▸ Towing protection.

By deactivating the SAFEFunction will also be switched off » page 22, *Functionality*.

Deactivation
▸ By double locking within 2 seconds.

Or:

▸ In Infotainment, in the menu: CAR > > > Menu item for interior monitoring.

Or:

▸ In Infotainment, in the menu: MENU > > > > Menu item for interior monitoring.

The deactivated functions are reactivated after unlocking and locking the vehicle.


Deactivation is to be carried out if the vehicle is, for example, towed or transported.

Doors, windows and boot lid

Doors

Open / close door

Open from the outside

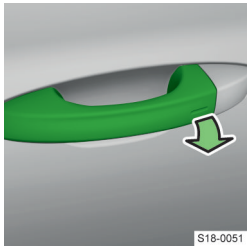

› Unlock the vehicle and pull on the door handle.

Open from the inside



› Pull the door opening lever and push the door away from you.

Close from the inside


› Grasp the pull handle and close the door.

Child safety lock on the rear doors

Operation

The child lock prevents the rear doors from being opened from the inside.

Switching on and off

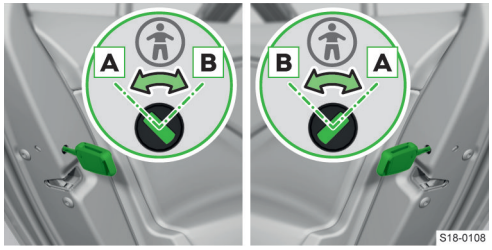

› Turn the child lock with the vehicle key or a flat-head screwdriver.

Child lock A switched off

Child lock B switched on

Window - with manual operation

service



› Turn the crank in the appropriate direction.

Window - with electrical operation

What you should be mindful of

Force limitation

To reduce the risk of pinch injuries when closing the windows, the vehicle has a force limiter.

If there is an obstacle, the window closing process is stopped and the pane retracts by several centimetres.

If the obstacle prevents it from being closed for the next 10 seconds, the closing process is interrupted once again and the window goes down by several centimetres.

If you attempt to close the window again within 10 seconds of the window being moved down for the second time, even though the obstacle was not yet been removed, the closing process is only stopped. During this time, it is not possible to automatically close the windows by pulling the button all the way. The force limiter is, however, switched on.


The force limiter is only not operational if you attempt to close the window again within the next 10 seconds – the window will now close with full force! If you wait longer than 10 seconds, the force limiter is switched on again.

⚠ **CAUTION**

Risk of injury!

▸ Close the windows carefully, even though they have a force limit.

Overview of the operating buttons on the driver's door

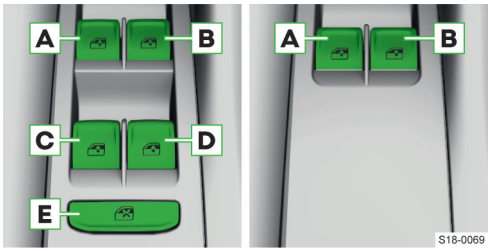

Depending on the equipment:

A Front left window

B Front right window

C Rear left window

D Right rear window

E Deactivation / activation of the buttons in the rear doors

Operation

Open

› Press the corresponding button slightly downwards and hold it until the window has reached the desired position.

Or:

› Press the corresponding button until it stops; the window opens automatically. Press the button again to stop the opening process.

Close

› To close, pull gently upwards on the top edge of the corresponding button and hold until the window has reached the desired position.

Or:

› Pull the corresponding button until it stops; the window closes automatically. The closing process is stopped by pulling the button again.

After switching off the ignition, the windows can still open and close for about 10 minutes so long as none of the doors are opened.

Open all windows at the same time

› Hold down the button on the key.

Or:

› Turn off the ignition, open the driver's door, and hold down the driver's window button until it stops.

Depending on the setting, only the driver's window can be opened in this way.

Close all windows at the same time

› Press the button on the key.

Or:

› Turn off the ignition, open the driver's door, and pull upwards on the driver's window button until it stops.

Or:

› For vehicles with a keyless locking system, hold one finger on the sensor on the outside of the handle on the front door.

Depending on the setting, only the driver's window can be closed in this way.

Settings

The window operation is set in the following menu in the Infotainment system.

CAR > > > Menu item for window operation

Or:

MENU > > > > Menu item for window operation

Troubleshooting

The window regulator has stopped working after repeated opening and closing

The window regulator mechanism could have overheated.

› Let the window regulator mechanism cool down.

The automatic window operation does not work after disconnecting the vehicle battery

› Activate the automatic window control » page 27.

Activation after disconnecting the vehicle battery

Activate automatic window operation

› Turn on the ignition.

› Pull the corresponding button upwards and the window closes.

› Release the button.

› Pull up the respective button and hold for 1 second.

Sunblind - with manual operation


service



› Pull the handle in the appropriate direction.

Sun visors

Fold up and fold down

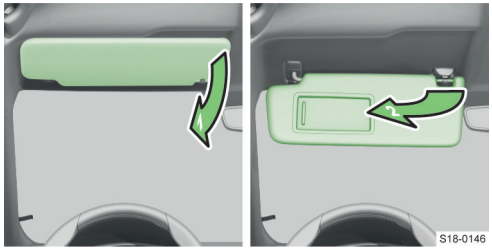

1 Swivel the panel towards the windscreen

2 Swivel the visor towards the door

⚠ **CAUTION**

Objects attached to the sun visors can restrict vision outside.

In the event of sudden braking or an impact, these can also cause injuries.

▸ Do not attach anything to the sun visor.

Boot lid - with manual operation

Operation


Open



› Push the handle and lift the flap.

The option to open by pressing the handle is deactivated once a speed of 5 km/h is reached. This is activated again after the vehicle has stopped and a door is opened.

Close

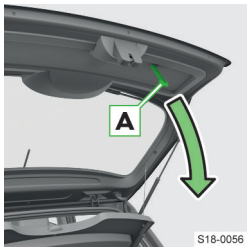

› Grasp the bracket A and pull the flap down.

⚠ **CAUTION**

Danger of opening the tailgate while driving!

▸ Make sure that the latch engages after the flap is closed.

Set a delayed lid lock


If the lid is unlocked with the button on the key, the lid is automatically locked again after closing.

The period after which the lid is locked automatically can be extended by a specialist garage.

Unlocking the boot lid

Release

If the boot lid does not open, it can be unlocked manually by the following procedure.

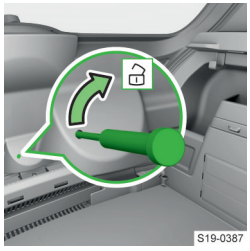


› Insert a screwdriver into the opening in the panel.

› Release the tailgate by moving it in the direction of the arrow.

Seats, steering wheel and mirror

Front seat - with manual operation

Controls on the seat

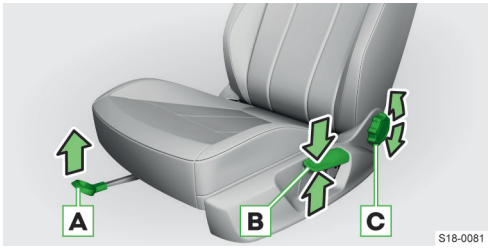

A Adjust lengthways - after releasing the operating lever, the locking mechanism must audibly engage

B Adjust height

C Adjusting the angle of the backrest - do not lean against the backrest during adjustment

After a certain time, play can develop within the adjustment mechanism of the backrest angle.

Rear seats

Fold the backrests forward


Before folding down

› Insert the rear headrests as far as they will go or remove them.

› Adjust the position of the front seats so that they are not damaged by the folded backrests.

› Pull the outer seat belt to the side trim.

Fold up

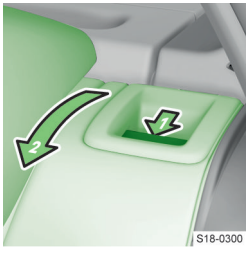


Split seat back

› Press the release handle and fold the seat back forward.

Undivided seat back

› Press the release handles on both sides of the seat back simultaneously and fold the back forward.

Fold back

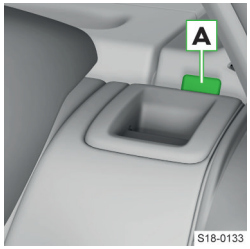

› Pull the outer seat belt to the side trim.

› Fold back the seat back.

The release handle must audibly click into place.

› Check the locking of the seat back. The pin A must not be visible.

Rear seats

Fold up the seats


Applies to the vehicles Fabia Combi.



› Pull the seat up a little and fold it up.

Remove seats

Applies to the vehicles Fabia Combi.

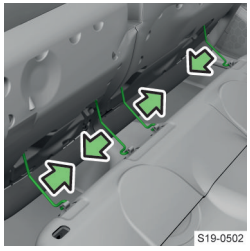


› Press the wire clips and unhook from the brackets.

› Remove the seat.

Insert seats

Applies to the vehicles Fabia Combi.

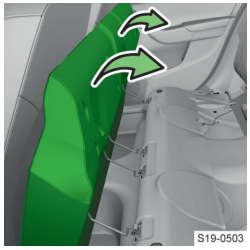

› Press the wire straps and insert into the brackets.

› Fold the seat back.



› Attach the seat to the ISOFIX system retaining eyelets so that the eyelets snap into the recesses in the plastic caps.

⚠ **CAUTION**
There is a risk that the seat will be damaged and will engage incorrectly.
When inserting the seat, do not pull it under the retaining eyelets of the ISOFIX system.

Parking position of the rear seat belts



Headrests

Adjust headrests

Headrests in front
Adjustment of the headrest heights is the same in the front and rear.



› Move the headrest in the desired direction.

When moving downwards, the safety button must be kept pressed.

Remove and insert the rear head restraints

Remove



› Partially fold forward the respective seat back.
› Move the headrest up to the stop.
› Press the safety button and remove the support.

Deploy
› Slide the support into the seat back.

The safety button must audibly click into place.

Front armrest

Settings



Adjust height
› Raise the backrest into one of the resting positions.

Fold down
› Raise the backrest beyond the highest resting position and fold it down again.

Steering wheel

Adjust the steering wheel

⚠ **WARNING**
Risk of accident!
▸ Do not adjust the steering wheel while driving.



› Swing the safety lever downwards.



› Adjust the steering wheel to the desired position.



› Press the safety lever as far as it will go.

Troubleshooting

Power assisted steering faulty

lights up - total failure of the power steering, failure of the steering assistance

› Turn off the ignition, start the engine and drive a few meters.
› If the indicator light does not go out, do not continue driving. Get the help of a specialist company.

lights up - partial failure of power steering, possible reduction in power steering

› Turn off the ignition, start the engine and drive a few meters.
› If the indicator light does not go out, it is possible to continue driving with the appropriate careful driving style. Get the help of a specialist company.

Steering column lock faulty

flashes
Message regarding a fault in the steering column lock

› Stop the vehicle.
› Get the help of a specialist company.

After switching off the ignition, it is then no longer possible to switch on the ignition, to lock the steering and to switch on the electrical components.

flashes
Message regarding a fault in the steering lock

› You may continue driving, exercising appropriate caution. Get the help of a specialist company.

Steering column lock not unlocked


flashes
Message regarding the necessary steering wheel movement

› Move the steering wheel slightly back and forth.
› If the steering does not unlock, stop the vehicle and seek the help of a specialist garage.

Interior rear-view mirror

service

Interior mirror with manual darkening

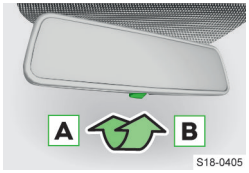

A Mirror is not darkened
B Mirror darkens

Interior mirror with automatic darkening


Darkening of the mirror is automatically controlled through the sensors in the mirror once the engine is started.

⚠ **CAUTION**
Risk of accident!
A glowing display e.g. a mobile phone or navigation device may affect the function of the automatic mirror darkening.
▸ Do not mount these devices near the mirror.

Wing mirror

service

Rotary knob positions

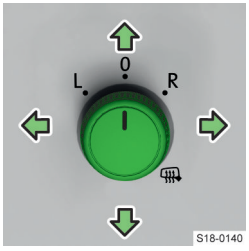

L Adjust the left mirror surface
0 Switch off operation
R Adjust the mirror surface on the right
Heat the mirror while the engine is running

Adjust the mirror surface

› Select position L or R.
› Turn the rotary knob in the direction of the arrows.

folding in mirror

› Fold the mirror towards the side window by applying pressure with your hand.

⚠ **WARNING**
Risk of accident!
The exterior mirrors make objects appear further away.
▸ Use the inside mirror to determine the distance to the following vehicles.

Troubleshooting

Electric mirror control disrupted

› Adjust the mirror surface by lightly pressing your finger.

⚠ **CAUTION**

Risk of burns!

▸ Do not touch heated exterior mirror surfaces.

Restraint systems and airbags

Seat belts

Functionality

Seat belts that are fastened correctly offer very good protection in the event of an accident. They reduce the risk of an injury and increase the chance of survival in the event of a major accident.

⚠ **WARNING**

▸ The seat belts must not be removed or altered in any other way.

▸ Do not attempt to repair the seat belts yourself. Have a damaged seat belt replaced immediately by a specialist garage.

Automatic belt retractor

The automatic retractor locks the belt in the event of a jerky pull on the belt. The belts lock, for example, when brakes are applied fully, when the car accelerates, when taking turns as well as when being close to a vehicle.

⚠ **WARNING**

▸ If the seat belt does not lock when pulled jerkily, have the retractor checked by a specialist garage.

Belt tensioners

Safety for the driver and front passenger **wearing their seat belts** is enhanced by the belt tensioners fitted to the inertia reels of the front seat belts.

If there is a collision with a certain severity, the seat belt is tightened by the belt tensioner so that unwanted body movement is prevented.

The belt tensioner can also be deployed when the seat belt is not fastened.

Belt tensioners are **not activated** in the event of a roll-over, **minor** collisions or in accidents in which no major forces are produced.

ⓘ Smoke is released when the belt tensioner is deployed. This does not indicate a vehicle fire.

Status display in the instrument cluster display


 illuminated – a front seat belt is not fastened

 illuminated – a rear seat belt is not fastened

 illuminated – a rear seat belt is fastened.

service

Fastening the seat belt

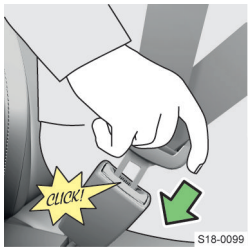


› Grasp the buckle latch and slowly pull the belt over the chest and pelvis towards the buckle.
› Insert the buckle latch into the buckle until there is an audible click.
› Carry out a tensile test to determine whether the lock tongue is securely engaged.

Unfastening the seat belt




› Grab the lock tongue and release it by pressing the red button.
› Hold the belt so it does not twist when rolling up.

Settings

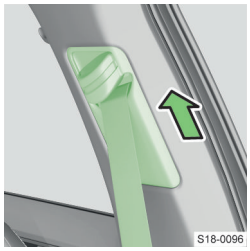

› Move the seat belt height adjuster upwards to increase the height.

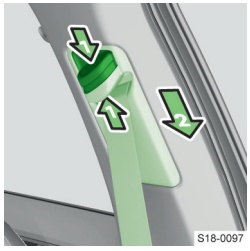

› Press the safety button and move the seat belt height adjuster down to reduce the height.
› After adjustment, firmly pull on the belt to ensure that the seat belt height adjuster has correctly locked in place and that the belt is locked securely.

Troubleshooting

Blocked automatic belt retractor



› Grasp the strap in the middle and pull quickly in the direction of the arrow.
› Hold the strap and let it roll up slowly.
› Pull on the strap to see if the retractor is working properly.
› If the strap is still blocked, repeat the unlocking procedure once or twice.
› If the strap is still blocked, seek the help of a specialist garage.

Child seat

What you should be mindful of

For how to install and use the child seat, please note the instructions in this Owner's Manual as well as the instructions of the child seat manufacturer.

For safety reasons, we always recommend that children are transported on the back seats. Carry children on the front passenger seat only in exceptional cases.

Child seats according to the standard ECE-R 44 of the European Economic Commission.

Child seats according to standard ECE-R 44 are marked with the test symbol: large E in a circle, with the test number under it.

We recommend using child seats from the ŠKODA Genuine Accessories range. These child seats have been developed and tested for use in ŠKODA vehicles. They comply with the standard ECE-R 44.

⚠ **WARNING**

▸ When installing the child seat on the rear seat, adjust the front seat so that there is no contact between the front seat and the child seat or the child carried in the child seat.
▸ Before installing a forward-facing child seat, adjust the headrest so that it is as low as possible.
▸ If the headrest prevents the child seat from being fitted, adjust the headrest to the highest position.
▸ When installing the child seat, avoid contact with the area of the roof and the rear pillar. There is a risk of injury when the head airbag is deployed.
▸ If using a separate child seat cushion, adjust the headrest so that the child's head is flush with, but not protruding above the height of the top edge of the headrest.

Using a child seat on the front passenger seat

When using a child seat on the passenger seat, any country-specific regulations must be observed.

Never use a child seat in which the child is carried with his or her back to the direction of travel on a seat protected by an active airbag placed in front of the seat. This could cause serious injury to the child, even death.

This is also indicated by the following stickers.



Sticker on the passenger sun visor.



Stickers on the middle body pillar on the passenger side.

The following instructions must be followed when using a child seat on the front passenger seat.

- When using a rear-facing child seat, the front passenger airbag must be deactivated.
- If possible, adjust the front passenger seat backrest so that it is vertical, to ensure that there is secure contact between the backrest and the child seat.
- If possible, move the front passenger seat backwards so that there is no contact between the front passenger seat and the child seat behind it.
- Adjust the height-adjustable front passenger seat as much as possible.
- Set the front passenger seat belt as high up as possible.

⚠ WARNING

Risk of the seat belt causing a neck injury to the transported child!

- For child seats in groups 2 and 3, ensure that the guide fitting attached to the child seat headrest is positioned in front of or at the same height as the seat belt height adjuster on the central body pillar.
- Adjust the height of the front passenger seat belt so that the belt passes through the guide fitting without kinking and is not bent over the edge of the guide fitting.

⚠ WARNING

- As soon as the rear-facing child seat is no longer being used on the front passenger seat, activate the front passenger airbag again.

Recommended child seats

Grouping of child seats according to standard ECE-R 44.

Group	Weight of the child
0	up to 10 kg
0+	up to 13 kg
1	9-18 kg
2	15-25 kg
3	22-36 kg

Recommended child seats

Group	Manufacturer	Type	Attachment	Order number	Approval number (E1 ...)
0+ up to 13 kg	Britax Römer	Baby Safe Plus	Isofix base frame	1ST019907	04 301146
1 9-18 kg	Britax Römer	Duo Plus TT	ISOFIX and TOP TETHER	DDA000006	04 301133
2-3 15-36 kg	Britax Römer	Kidfix XP [a)]	ISOFIX	000019906K	04 301198
	Britax Römer	Kidfix II XP	ISOFIX	000019906L	04 301323

[a)] For optimum protection, especially in the event of a side impact, it is recommended that you use this child seat complete with the backrest.

Fasteners for child seats

Use of child seats

Overview of the usability of child seats according to the standard ECE-R 16.

Child seats with the ISOFIX-System

group	Size class of the child seat [a]	Passenger seat with activated front airbag	Passenger seat with deactivated front airbag	Rear seats outside	Middle back seat
0 up to 10 kg	E	X	X	IL	X
0+ up to 13 kg	E D C	X	X	IL	X
1 9-18 kg	D C B B1 A	X	X	IL IUF	X
2 15-25 kg	-	X	X	IL	X
3 22-36 kg	-	X	X	IL	X
[a] The size category of the child seat is indicated on the child seat plate.					

IL The seat is for that ISOFIX-Child seats with approval “Semi-universal” suitable.

IUF The seat is suitable for forward-facing child seats and is permitted for use in this weight category.

X The seat is not equipped with eyelets for the ISOFIX System. ISOFIXSystem.

Child seats fastened with a seat belt

group	Passenger seat with activated front airbag	Passenger seat with deactivated front airbag	Rear seats outside	Middle back seat [a]
0 up to 10 kg	X	U [b]	U	U
0+ up to 13 kg	X	U [b]	U	U
1 9-18 kg	UF	U	U	U
2 15-25 kg	UF	U	U	U [c]
3 22-36 kg	UF	U	U	U [c]

[a] It is forbidden to install a child seat with a support foot in the middle rear seat.

[b] Adjust the height-adjustable front passenger seat as much as possible.

[c] If the middle rear seat is not provided with a headrest, only use a child seat in group 2 or 3 if it has its own integrated headrest. If the child seat does not have this support, then attach the child seat to the outer rear seat.

U The seat is not suitable for the child seat of the category Universal. “Universal” suitable that are approved for use in this weight group.

UF The seat is for the forward facing child seats of the category “Universal” suitable that are approved for use in this weight group.

X The seat is not suitable for children in this weight group.

Overview

ISOFIX

⚠ **WARNING**

- On the retaining eyelets that are used to install the child seat with the ISOFIXSystem provided, do not attach any other child seats, belts or objects.

The ISOFIXSystem enables the child seat to be attached quickly and securely. The Holding eyes for installing the child seat using the ISOFIX-System are located on the outer rear seats, possibly also on the front passenger seat.

A child seat with the ISOFIX-System can only be installed in the vehicle if it is approved for this vehicle type. More information is available by asking a ŠKODA partner or from a vehicle list that comes with the child seat.




Holding eyes for installing the child seat using the ISOFIX-System.

TOP TETHER

⚠ **WARNING**

- Child seats with the TOP TETHER- Only use the system on the seats with the eyelets TOP TETHERSymbol are provided.
- Only attach one belt from the child seat to a locking eye TOP TETHER-Fasten the system.
- When attaching the child seat with the TOP TETHER- No other object may be attached to the eyelet TOP TETHERSystem.

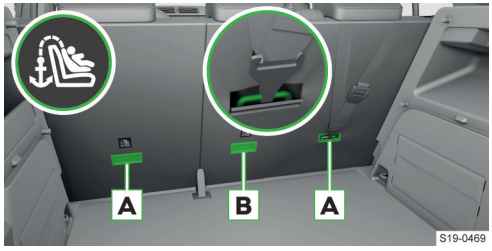

Holding eyelets on the rear seats

The attached belt of the TOP TETHERSystem restricts movements of the child seat top. The holding eyelets for attaching the belt are located on the outer rear seats A, as well as on the middle rear seat B .

Airbags

Usage

The airbag system offers additional occupant protection in the event of severe frontal and side collisions, as a supplement to the seat belts.

The best possible protective effect of the airbag is achieved only when the seat belt is also worn. The airbag system is no substitute for the seat belts.

Functionality

When sinking into the inflated airbag, the forward movement of the body is damped and the risk of injury is reduced.

ⓘ As the airbags inflate, smoke is released. This does not indicate a vehicle fire.

Airbag deployment in the event of an accident
Airbag deployment is influenced by many factors. The decisive factor is the deceleration curve that occurs on impact.

⚠ **WARNING**
Danger of serious or fatal injuries!


- Maintain the correct seating position.
- Do not keep your limbs in the deployment area of the airbags.

The airbag is not deployed **in the following** situations.

- Minor frontal and side collisions.
- Rear collision.
- Vehicle rollover.

If the measured deceleration rate is below the reference values programmed in the control unit, the airbags are not deployed despite possible serious damage to the vehicle.

Airbag overview

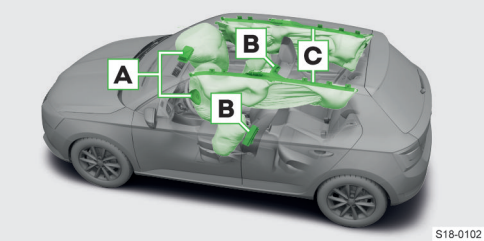

A Front airbags

B Side airbags - front

C Head airbags

The installation location of the airbags is marked with the lettering AIRBAG.

⚠ **WARNING**
Danger of a functional restriction of the side airbags!
- ▸ Do not exert excessive forces, e.g. impacts, on the seat backs.
- ▸ Do not use seat covers that have not been approved by ŠKODA.
- ▸ Have damaged seat covers at the installation location of the side airbags repaired by a specialist garage.

Deactivating the airbags
We recommend having airbags other than the front passenger airbag deactivated » page 37, *service* by a ŠKODA service partner.

Deactivation of the airbags should be considered in cases such as the ones below.

- ▸ If the driver's seat adjustment is correct, the distance of at least 25 cm between the centre of the steering wheel and the sternum cannot be maintained.
- ▸ Additional operating controls for a physically disadvantaged driver are installed in the vehicle.
- ▸ The vehicle has special seats, e.g. orthopaedic seats without side airbags.

illuminates for 4 seconds after the ignition is switched on and then flashes for 12 seconds - Airbag or belt tensioner deactivated with the diagnostic device
Message regarding the deactivated airbag or belt tensioner

⚠ **WARNING**
If an airbag is deactivated during the sale of the vehicle, inform the buyer!

Conditions

✓ The ignition is switched on.

Troubleshooting

Airbag system faulty
illuminates
Message regarding an airbag fault

› Seek the help of a specialist garage.

Key switch for the front passenger airbag

Usage

Deactivation of the front passenger airbag is provided for the following cases, for example.

- ▸ A rear-facing child seat is mounted on the front passenger seat.
- ▸ The vehicle has special seats, e.g. orthopaedic seats without side airbags.

What you should be mindful of

⚠ **WARNING**
Danger of fault in the passenger airbag deactivation system!
- ▸ Only deactivate the airbag when the ignition is switched off!

⚠ **WARNING**
Danger of unexpected deployment of the passenger airbags in an accident!
- ▸ If the front passenger airbag has been deactivated with the key, do not leave the key in the key switch while driving. Vibrations can cause the key to turn in the slot and activate the airbag!

service

Before switching off/switching on the front passenger airbag
› Fold out the key bit completely.

Switch off/on front passenger airbag



› Switch off the ignition.
› Open the storage compartment on the passenger's side.
› Insert the key bit into the slot in the key switch as far as it will go.
› to **Switch off** the key switch carefully into position OFF rotate.
› to **turn on** the key switch carefully into position ON rotate.
› Remove the key bit from the slot.

› Close the storage compartment on the passenger's side.
› Turn on the ignition and check that the front passenger airbag indicator lights are lit up.

Indicator lights



▶ After switching on the ignition, the two indicator lights light up briefly.
▶ If the system is OK, the two indicator lights go out.
▶ One of the indicator lights then lights up again depending on the position of the key switch.

OFF lights up - front passenger airbag switched off

ON lights up 65 secs after the ignition is switched on – passenger front airbag switched on

Troubleshooting

Key switch for airbag deactivation is faulty

ON flashes together with OFF
The front passenger airbag will not be deployed in the event of an accident!

› Have the airbag system checked immediately by a specialist company.

Lighting, windscreen wipers and washers

Exterior lighting

functionality

Unless otherwise stated, the light works when the ignition is switched on.

Daylight running lights
The daytime running lights illuminate the area in front of the vehicle.

In vehicles for certain markets, this also provides lighting for the rear area of the vehicle.

Functional conditions
✓ The light switch is in position 0 or AUTO.
✓ The function is activated.

Automatically switch the low beam on/off
The low beam is automatically switched on or off depending on the lighting conditions.

Functional conditions
✓ The light switch is in the AUTO position.

The automatic driving light switch is activated by the symbol lighting up displayed in the light switch.

Automatically switch the low beam on/off when it rains
Functional conditions
✓ The light switch is in the AUTO position.
✓ The function is activated.
✓ The windscreen wipers are switched on for longer than 15 seconds.


The automatic driving light switch is activated by the symbol lighting up displayed in the light switch.

CORNER function
The CORNER function is intended for turning or manoeuvring (e.g. when parking).

The function illuminates the vicinity of the vehicle front in the direction of travel.

Functional conditions
✓ The turn signal is switched on or the front wheels are steered sharply.
✓ The low beam is switched on.
✓ The fog lights are not switched on.
✓ The driving speed is lower than 40 km/h.

service

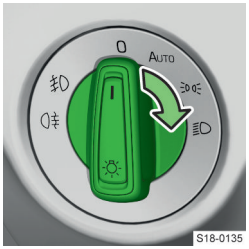

0 Switching off the lights except the daytime running lights

AUTO Automatically switch the low beam on/off


Switching on the parking lights

Switch on the low beam

Use the position as the basic position of the light switch **AUTO**.

Main beam

The high beam works when the low beam is on.

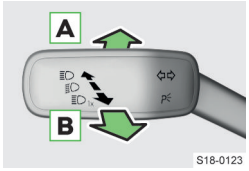

A Switch on the high beam - the warning light in the instrument cluster illuminates


B Switch off the main beam - the indicator lamp in the instrument cluster goes out / Switch on the flasher - the indicator lamp lights up

⚠ CAUTION

Risk of accident!

▸ Do not dazzle other road users with the high beam.

Turn signal

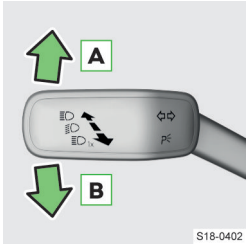

A Switching on the turn signal light on the right - the warning light flashes in the instrument cluster

B Switching on the turn signal light on the left - the warning light flashes in the instrument cluster

Turn signal - convenience signalling


Convenience signalling enables three flashes of the turn signal lights without having to move the lever up or down.

› Tap the control lever up or down.

The corresponding direction indicators flash three times.

Tap the lever in the opposite direction ahead of time to stop signalling.

Fog light

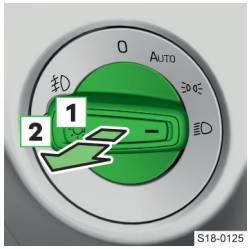

Positions for pulling out the light switch

1 Fog lights - the warning light in the instrument cluster illuminates

2 Rear fog light - the warning light in the instrument cluster illuminates

› Turn the light switch to position **AUTO**, or .

› Pull the light switch into the appropriate position.

The rear fog light does not illuminate when an accessory is connected to the trailer socket.

Hazard warning lights


› Press the button to switch it on or off ⚠ Press in the middle part of the control panel.

When the hazard warning system is on and the turn signal is switched on, the hazard warning lights will be switched off temporarily and only the turn signal will flash on the relevant side of the vehicle.

The hazard warning lights can be switched on automatically in the event of a violent braking manoeuvre. The hazard warning lights are switched off automatically when starting or accelerating.

Parking light on one side

The one-sided parking light enables the illumination of one side of the parked vehicle by switching on the corresponding parking light.

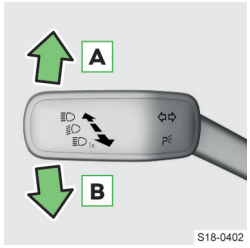

A Switch on the parking light on the right

B Switch on the parking light on the left

› Switch off the ignition.

› Move the lever to the appropriate position.

› Lock the vehicle.

When the parking light is switched on, an acoustic warning signal sounds and the driver's door is opened. After a few seconds or after the driver's door is closed, the warning signal will stop.

Parking lights on both sides

The two-sided parking light allows the parked vehicle to be illuminated through activation of the sidelights.

› Turn on the ignition.

› The light switch in position rotate.

› Switch off the ignition.

› Lock the vehicle.

The light may switch off automatically if the battery is low. If the two-sided parking light is switched on when the ignition is switched off, the light will not switch off automatically.

When the parking light is switched on, an acoustic warning signal sounds after the ignition is switched off and the driver's door is opened. After a few seconds or after the driver's door is closed, the warning signal will stop.

Settings


Activate/deactivate automatic driving lights when it rains
The function is activated or deactivated in the following menu in the Infotainment system.

CAR > >

Activate/deactivate comfort flashing
The function is activated or deactivated in the following menu in the Infotainment system.

CAR > >

Headlight range adjustment of the halogen headlights
› Select the position of the control according to the vehicle's current load status.

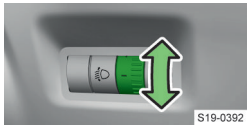

– Front seats occupied, boot empty
1 All seats occupied, boot empty
2 All seats occupied, luggage space loaded
3 Driver's seat occupied, boot loaded

For the Full LED headlights, the headlight range control is adjusted automatically.

⚠ WARNING
Risk of accident!
An incorrectly set headlight range leads to inadequate road lighting or dazzling of other road users.
▶ Adjust the headlight range correctly.


Change LED headlights for the opposite direction of traffic - driving abroad
› Switch on travel mode in the Infotainment in the following menu.

CAR > >

Deactivate / activate daytime running lights on vehicles with the Amundsen and Swing Infotainment systems
The function is deactivated or activated in the following Infotainment menu.


CAR > >

Deactivate daytime running lights on vehicles with the Blues Infotainment system or without Infotainment
› Switch off the ignition.

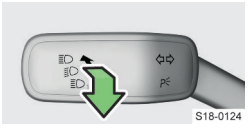

› Pull the lever towards the steering wheel, push it downwards and hold it in this position.
› Turn on the ignition.
› As soon as an acoustic signal sounds, release the lever.

Activate daytime running lights on vehicles with Infotainment blues or without Infotainment
› Switch off the ignition.

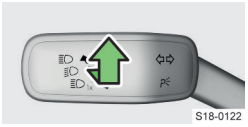

› Pull the lever towards the steering wheel, push it upwards and hold it in this position.
› Turn on the ignition.
› As soon as an acoustic signal sounds, release the lever.

Troubleshooting

Turn signal light defective
flashes faster - right turn signal lamp failed
› Check the right turn signal.

flashes faster - left turn signal lamp failed
› Check the left turn signal.

does not flash when the trailer is coupled - trailer flashing light has failed
› Check the trailer lighting.

Light bulb or LED bulb is defective
illuminates together with ⚠
Information appears in the display regarding the affected lights.
› Replace the defective bulb.
› In the event of a defective LED lamp, seek the help of a specialist company.

Headlights are fogged from the inside
Moisture can condense inside the headlights. This is not a defect.

Malfunction of the automatic headlight circuit
› Clean the windscreen in the area of the rain/light sensor.

Beam of light in front of the vehicle has shortened
Headlights defective.
› Get the help of a specialist company.

Driving lights failed
If a message regarding the failed driving lights is displayed, the light will work in emergency mode.

› Continue driving with appropriate caution.
› Get the help of a specialist company.

COMING HOME, LEAVING HOME exterior lighting

Functionality

The COMING HOME function turns on the light after turning off the ignition and opening the driver's door. The light switches off automatically after the set lighting time has elapsed.

The LEAVING HOME function switches on the light when unlocking the vehicle with the wireless remote control.

Functional conditions

✓ Visibility has worsened.
✓ The light switch is in the AUTO position.

Settings

This function is set in the following menu in the Infotainment system.

CAR > >

Light Assist high-beam assist system

Functionality

The high beam assist system automatically switches the high beam on and off.


⚠ **WARNING**
Risk of accident!
▸ If necessary, manually switch the high beam on or off.

Functional conditions

✓ The system is activated.
✓ The light switch is in the position AUTO.
✓ The driving speed is higher than 60 km/h (for some countries, higher than 40 km/h).
✓ The low beam is switched on.

service

turn on

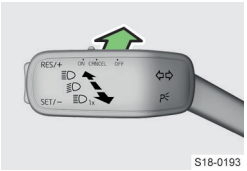

› Push the lever in the direction of the arrow.

Lights up in the instrument cluster from the isolation box.

Turn off
› Manually switch the high beam on or off.

Settings

Activation / deactivation
The function is activated or deactivated in the following menu in the Infotainment system.

CAR > >

Replace light bulbs

What you should be mindful of

DIY replacement of the following bulbs is possible. Have the remaining light sources replaced by a specialist garage.

The new bulb must conform to the specification of the original light bulb. The name of the bulb is marked on the bulb socket.

After changing a bulb in the low beam light, the main beam or fog light, have the headlights adjusted by a specialist garage.

⚠ **CAUTION**
Halogen lamps are pressurised and can burst during replacement!
▸ Wear gloves and safety goggles.

ⓘ **NOTICE**
Contamination of the halogen lamp reduces the life of the lamp!
▸ Do not touch the glass of the light bulb with your bare fingers.


ⓘ **NOTICE**
Danger of headlight damage due to the ingress of water and dirt!
▸ Always fit the protective cap on the headlight correctly after changing a bulb.

Conditions for changing a bulb


✓ Ignition switched off.
✓ Light switched off.

Low beam and high beam

Before changing the light bulb for the high beam in the right headlight

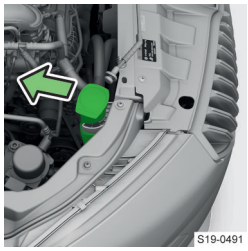

› Disconnect the washer fluid reservoir from the bracket.

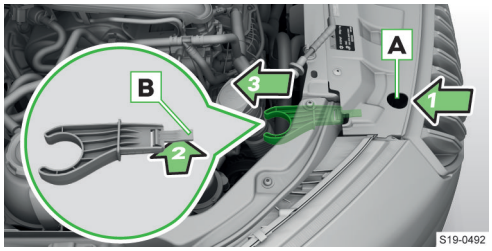

› Insert one finger into the recess A and lift the latch B on the bracket.

› Remove the bracket.

Before changing the light bulb for the low beam light


› Adjust the front wheels so that the cover cap in the wheel arch is accessible.



› Insert the bracket from the tool kit into the recess in the cover cap.

› Remove the cover by pulling on the bracket.

Replacing the light bulb

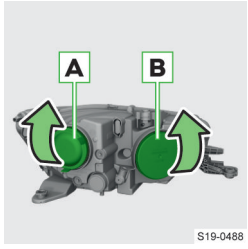

Protective caps on the headlight:


A Low beam

B Main beam

› Remove the associated protective cap.



› Press the socket with the light bulb downwards and remove it.

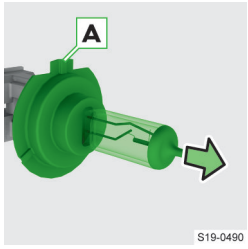

› Change the bulb in the socket.

› Insert the socket with the new light bulb into the headlight, so that the fixing lug A is pointing up.

› Insert the socket until it clicks into place.

› Fit the protective cap on the headlight again.

After changing the light bulb for the low beam light

› Insert the cover in the wheel arch and lock into place.


After changing the light bulb for the high beam in the right headlight

› Reinstall the washer fluid reservoir holder.


› Insert the container nozzle back into the holder.

Front turn signal

Before changing the bulb in the right headlight

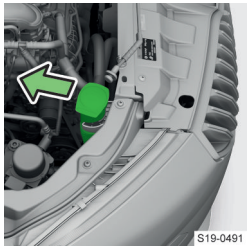


› Disconnect the washer fluid reservoir from the bracket.

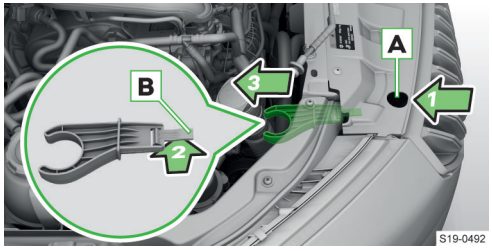


› Insert one finger in the recess A and lift B the bracket latch.
› Remove the bracket.

Replacing the light bulb

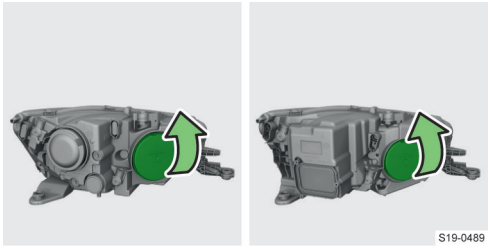


Protective cap: Halogen headlights/LED headlights

› Remove the protective cap from the headlight.

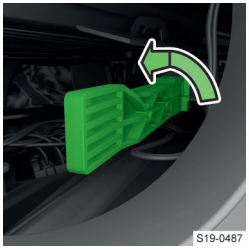

› Turn and remove the socket with the bulb.

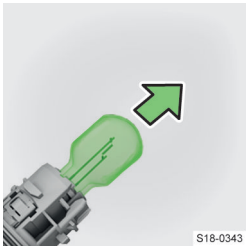

› Change the bulb in the socket.
› Insert the socket with the light bulb into the headlight and turn it clockwise ↻ to secure.
› Reinstall the protective cap on the headlight.
› After changing the bulb in the right headlight, reuse the bracket for the wash water container nozzle .


Fog lights



› Release the cover with the bracket from the tool kit and remove it.



› Unscrew screws A.
› Take out the lamp.

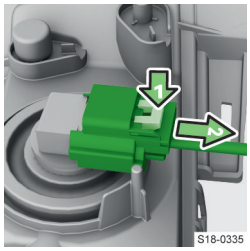


› Release the connector and remove it from the bulb.



› Turn the light bulb and take it out.
› Push the new light bulb into the light so that the guide lugs on the light bulb and the associated openings in the light are in alignment.
› Turn the bulb clockwise ↻ to secure.
› Attach the connector to the bulb, ensuring it clicks into place.
› Reinstall the lamp and screw it on.
› Replace the cover and push it in until it clicks into place.

Taillight


Loosen and remove the lamp

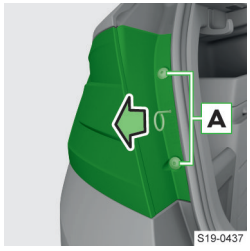

› Unscrew the screws A .
› Insert the bracket from the tool kit into the recess in the light.


On the left-hand lamp, the eyelet of the bracket must point downwards, and upwards on the right lamp.

› Remove the lamp with the bracket.

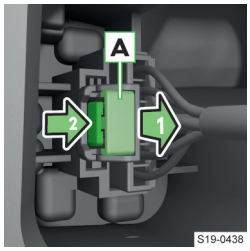


› Pull the lock A somewhat out of the plug.
› Press the safety button and pull out the plug.

Change bulb - Variant 1 (light with LED light sources)

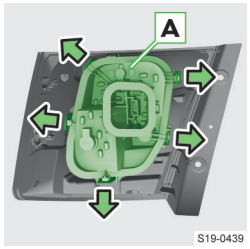


› Unlock and remove the lamp holder the lock A .

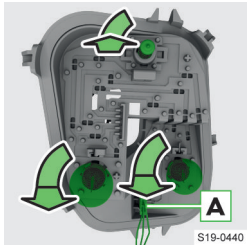

› Turn the defective light bulb and take it out of the holder.
› Insert a new light bulb into the socket and secure the light bulb by turning it in the direction of ↷.
› Check that the connector the lock A is securely connected.
› Insert the bulb holder into the light and snap into place.


NOTICE
Risk of damage to the electrical system!
▸ Make sure that no cables are trapped when inserting the holder into the lamp.

Change bulb - Variant 2 (light only with light bulbs)

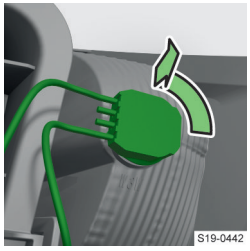


Change the bulb in the outer part of the lamp.

› Turn and remove the socket with the bulb.

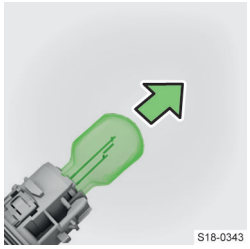


› Change the bulb in the socket.
› Push the base with the new light bulb into the luminaire so that the guide lugs on the base and the associated openings in the luminaire are flush.
› Turn the socket clockwise ↷ to secure.

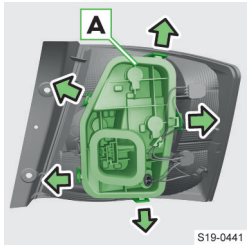

Change the bulb in the inner part of the lamp.


› Unlock and remove the lamp holder A .

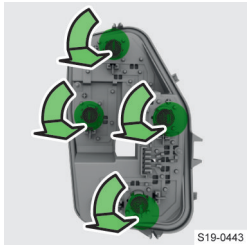


› Turn the defective light bulb and take it out of the holder.
› Insert a new light bulb into the socket and secure the light bulb by turning it in the direction of ↷.
› Insert the bulb holder into the light and snap into place.

Insert and fix the lamp

› Insert the connector into the light until it clicks into place.
› Press in the slightly pulled out latch on the connector.

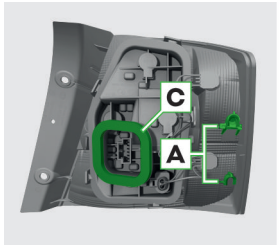

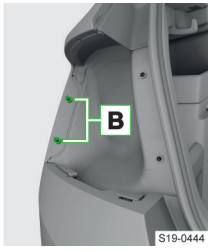

› Stick The lamp with the openings A on the bolts B in the body.

NOTICE
Risk of damage to the electrical system due to water ingress!
▸ Make sure that the seal is used correctly when installing the lamp C .

NOTICE
Risk of damage to the electrical system!
▸ Make sure that the lines between the lamp and the body are not pinched when the lamp is inserted.

› Screw on the lamp.

Interior lighting

service

Operation of the lighting
turn on
0 Turn off
Reading lights
Automatic switching on and off

Automatic switch on
The light switches on when one of the following events occurs.
▸ The vehicle is unlocked.
▸ One of the doors is opened.
▸ The ignition key is removed (vehicle without starter button).
▸ The ignition is switched off (vehicle with starter button).

Automatic switch off
The light switches off when one of the following events occurs.
▸ The vehicle is locked.
▸ The ignition is switched on.
▸ About 30 seconds after all the doors have been closed.

If a door remains open and the ignition is switched off, the lights will turn off automatically after 10 minutes.

Settings

Storage compartment in the centre console
The brightness level of the storage compartment lighting is set in the Infotainment in the following menu when the low beam or parking light is switched on.

CAR > > Menu item for interior lighting

Windscreen wipers and washers

Functional conditions


Operating conditions of the wipers
✓ Engine compartment lid closed.
✓ Luggage compartment lid closed.
✓ Ignition is switched on.

Operating conditions of the windscreen washer system
✓ Engine compartment lid closed.
✓ Luggage compartment lid closed.

service

WARNING
Risk of accident!
At low temperatures, windscreen washer fluid can freeze on the windscreen and restrict visibility.
▸ Only use the windscreen washer when the windscreen is warm.

Wipe and wash the front screen

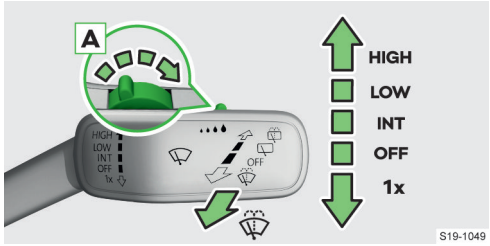


HIGH Quick wipe
LOW Slow wiping
INT Depending on the equipment:
▸ Intermittent wiping
▸ Automatic wiping controlled by the rain sensor
OFF Turn off
1x Tip wiping (sprung position)
A Setting the wiping speed for the position INT
Washing and wiping (sprung position)

The windscreen washer nozzles on the windscreen are automatically heated together with the exterior mirrors.

Clean headlights
Headlights that are switched on are cleaned the first time and after every tenth wash of the windscreen. The cleaning interval can be set by a specialist company.

Wipe and wash the rear window

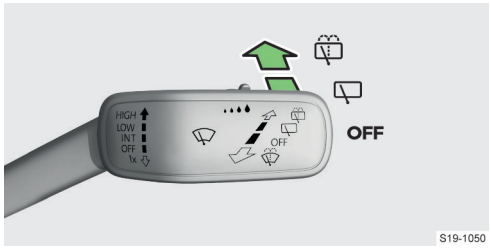

Washing and wiping the window (sprung position)

Washing the rear view camera (sprung position)

Wipe

OFF Turn off

Automatic rear window wiping
When the windscreen wipers are switched on, the rear window is automatically wiped when the reverse gear is engaged.

Settings

Activate/deactivate automatic wiping
The functions for automatic rear window wiping and automatic wiping in the rain can be activated and deactivated in the following menu in the Infotainment system.

CAR > >

Or:

MENU > > >

Add windshield washer fluid

⚠ **WARNING**
Risk of accident!
▸ Use a suitable windshield washer fluid according to the weather conditions.

ⓘ **NOTICE**
Risk of damage to the windscreen washer system!
▸ When refilling the washer fluid, do not remove the strainer from the neck of the container.

ⓘ **NOTICE**
Risk of damage to the headlights!
▸ Only use washer fluid that does not attack polycarbonates.

ⓘ **NOTICE**
Risk of damage to the parts of the engine compartment!
▸ Close the container after refilling the windscreen washer fluid.

The windscreen washer tank is located in the engine compartment » page 11.

The container can hold a volume of 3.5 litres and 5.4 litres for vehicles with a headlight cleaning system. For some countries, the volume is 5.4 litres for both variants.

› Open the bonnet » page 119 .
› Carefully open the upper area of the lid.
› Refill the windshield washer fluid.

Troubleshooting

Windscreen washer fluid level too low
illuminates together with ⚠
› Refill the windshield washer fluid.


Frozen wipers
› Carefully remove frozen windscreen wipers from the windscreen before switching on the ignition and free them from snow and ice.

Fold down the wiper arms and replace the wiper blades

To fold the windscreen wipers off the windscreen, the windscreen wiper arms must first be set to the fold-down position.

ⓘ **NOTICE**
Risk of damage to the windscreen wipers and the engine compartment lid!
▸ Close the bonnet before lowering the wiper arms from the window.
▸ Do not turn on the ignition when the windscreen wiper arms are folded away.

Set the wiper arms to the fold-down position
› Switch the ignition on and off again.

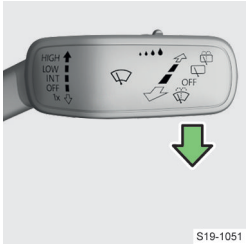


› Within 10 seconds, press the control lever down and hold for about 2 seconds.

The windshield wiper arms assume the folded position.

Replace the windscreen wiper blade

⚠ **CAUTION**
Risk of accident!
▸ Change the windscreen wiper blades once or twice a year.

› Fold the windscreen wiper arm away from the windscreen.

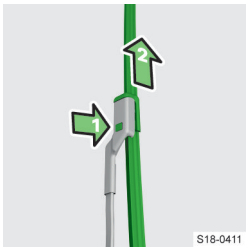


› Press the fuse and remove the wiper blade.
› Insert the new wiper blade until it clicks into place.
› Fold the windscreen wiper arm back onto the windscreen.
› Turn on the ignition and push the control lever down.

Heating and air conditioning system

Heating

Overview of the heating operation components

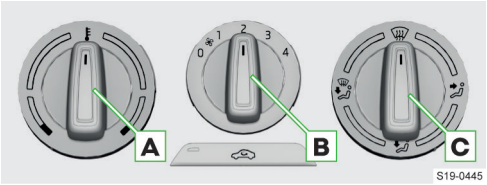

A Set the temperature
B Set the blower speed
C Set the direction of the air outlet
Switch recirculated air mode on/off

⚠ WARNING
Danger of misting!
▸ Always keep the fan on.

Manual air conditioning

What you should be mindful of

▸ We recommend a difference of max. 5°C between the outside temperature and the interior temperature.
▸ Annual disinfection of the air conditioning is recommended.


⚠ WARNING
Danger of misting!
▸ Always keep the fan on.

⚠ WARNING
Risk of accident!
In recirculation mode, there is no fresh air supply from the outside. This can result in loss of driver attention and fogging up of windows.
▸ Keep the recirculation mode switched on for a short time only.

Operating conditions for the cooling system

✓ The outside temperature is below 2 °C.
✓ The engine is running.
✓ The blower is switched on.

Overview of the controls of the manual air conditioning system

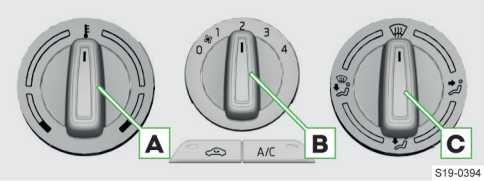

A Set the temperature

B Set the blower speed

C Set the direction of the air outlet

Switch recirculated air mode on/off

A/C Switch cooling system on / off

Cooling system
When the cooling system is switched on, the temperature and humidity in the vehicle will drop.

Switching on the cooling system prevents the windows from misting up.

After pressing the A/C button, the indicator light in the button illuminates, even if the conditions for switching on the cooling system are not met. The cooling system switches on when the conditions for switching on the cooling system are met.

Automatic switching on of the cooling system
The cooling system switches on automatically to stop the windows from fogging up. The system switches on in the following cases.

- When the fan is on and the air distribution controller is in the position.

  In this case, the recirculation mode is switched off.
- When the air distribution controller is not in the position, and recirculated air mode is switched on.

Recirculated air mode
The recirculation mode prevents contaminated outside air getting into the interior of the vehicle.

Switching recirculation mode on briefly can increase the cooling effect.

Circulating air mode may be switched on or off automatically under certain circumstances.

When the air conditioner is operating, the engine idle speed may increase automatically.

Troubleshooting

Water under the vehicle
When the cooling system is switched on, water can drip off the air conditioning system. This is not a leak.

Fogging
› Increase the blower speed, switch on the cooling system, and set the air distribution to the windscreen.

Automatic switch-off of the cooling system
If the coolant temperature is too high, the cooling system may switch off automatically. This ensures sufficient engine cooling.

Climatronic automatic air conditioning system

What you should be mindful of

- We recommend a difference of max. 5°C between the outside temperature and the interior temperature.
- Annual disinfection of the air conditioning is recommended.


⚠ WARNING
Danger of misting!
- Always keep the fan on.

⚠ WARNING
Risk of accident!
In recirculation mode, there is no fresh air supply from the outside. This can result in loss of driver attention and fogging up of windows.
- Keep the recirculation mode switched on for a short time only.

Operating conditions for the cooling system

✓ The outside temperature is below 2 °C.
✓ The engine is running.
✓ The blower is switched on.

Operation

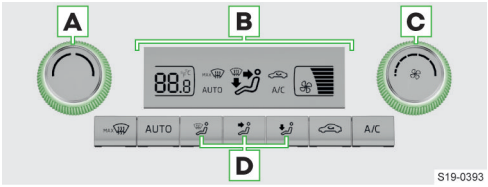

A Set the temperature

B Climatronic display

C Set the blower speed

D Set the direction of the air outlet

MAX Switch the windscreen ventilation/defrosting mode on/off

AUTO Switch automatic mode on

This function keeps the temperature constant and prevents the windows from misting.

Switch recirculated air mode on/off

The recirculation mode prevents contaminated outside air getting into the interior of the vehicle.

A/C Switch cooling system on / off

When the cooling system is switched on, the temperature and humidity in the vehicle will drop.

Switching on the cooling system prevents the windows from misting up.

If the temperature is set outside the numerical range, one of the following symbols is shown in the Climatronic display.

LO Maximum cooling capacity
HI Maximum heating output

When the air conditioner is operating, the engine idle speed may increase automatically.

Troubleshooting

Water under the vehicle
When the cooling system is switched on, water can drip off the air conditioning system. This is not a leak.

Fogging
› Switch on automatic mode.

Or:

› Increase the blower speed, switch on the cooling system, and set the air distribution to the windscreen.

Automatic switch-off of the cooling system
If the coolant temperature is too high, the cooling system may switch off automatically. This ensures sufficient engine cooling.

Heated windscreen

Usage

Windscreen heating is used for defrosting or ventilating the windscreen.

Conditions

✓ The engine is running.
✓ The outside temperature is below about 35°C.

Operation

Rear window heating
› Press the button.

Windscreen heating switches off automatically after some time.

Troubleshooting

The indicator light in the button or below the button flashes
The heating does not work as the battery charging level is low.

Seat heating

What you should be mindful of

⚠ **WARNING**
Risk of burns!
▶ Do not switch on the seat heater for persons with limited perception of pain or temperature.

NOTICE
Risk of seat damage!
▶ Do not kneel on the seats or otherwise puncture them.
▶ Do not turn on the heater in the following situations.
  ▶ The seat is not occupied.
  ▶ There are objects on the seat, such as a child seat.
  ▶ There are additional seat covers or protective covers on the seat.

Conditions

✓ The engine is running.

Operation

› Press the or button.

The seat heating is switched on with maximum heating power. By repeatedly pressing the button, the heating output is reduced until it is switched off.

The level of the seat heating is indicated by the number of illuminated indicator lights in the button.


If the seat heating is switched on with the maximum heating output, the heating output is automatically reduced after 10 minutes.

Driver information system

Analogue instrument cluster

Overview

Overview of the instrument cluster display

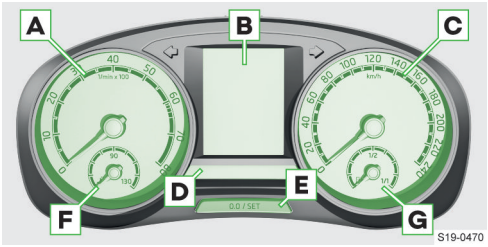

A Tachometer with indicator lights

B Display

C Speedometer with indicator lights

D Bar with indicator lights

E Multifunction button:
- ▸ Set the time.
- ▸ Reset (trip) odometer.
- ▸ Display the distance travelled and the days until the next service date.

F Coolant temperature display

G Fuel level indicator

NOTICE


Risk of serious damage to the engine and the exhaust system!

▸ **Never run the fuel tank completely empty!**

In poor visibility and with dipped headlights off, the brightness of the instrument cluster lighting is reduced to remind the driver to turn on the light.

Display overview

Depending on the equipment, the following information is shown on the display.

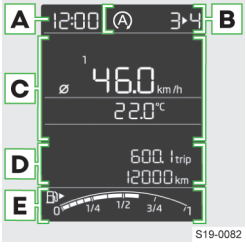

Segment display


A Time

B Gear engaged / gear recommendation
Selector lever positions of the automatic transmission

C Menus, indicator lights
Outside temperature
❄ - low outside temperature
Selected travel data storage
- ▸ **1** - from the start
- ▸ **2** - long-term
- ▸ **3** - from refuelling

D Total distance travelled
Trip - Distance travelled after resetting the memory
Notice messages

E Fuel level indicator

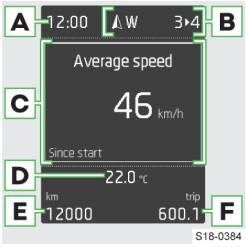

MAXI DOT display

A Time

B Directional display
Gear engaged / gear recommendation
Selector lever positions of the automatic transmission

C Menu, indicator lights and information

D Outside temperature
❄ - low outside temperature

E Total distance travelled

F Trip - Distance travelled after resetting the memory

Overview of the main menu items

- ▸ Driving data » page 51.
- ▸ Assistants - Activate / deactivate assistance systems.
- ▸ Navigation - e.g. show driving recommendations, compass, destination list.
- ▸ Audio - Using radio and media.
- ▸ Telephone - call list, accept or reject incoming call.
- ▸ Vehicle - Vehicle condition » page 53.

Operation


Operation via the control lever



A **Press** - Switch between menu items / set values
Hold - Display the main menu

B **Press** - Confirm menu item

Operation via the multifunction steering wheel

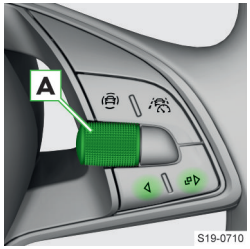

A **Turn** - Switch between menu items / set values
Press - Confirm menu item
◁ **Press** - Return one level higher in the menu
Hold - Display the main menu
↩ **Press** - Show previous menu (if one was selected) / Show phone menu

Settings

Set language

The language is set in the following menu in the Infotainment system.

MENU > ⚙

Reset the odometer

0.0/SET › Briefly press the button in the instrument cluster.

Setting the time

0.0/SET › Press and hold the button in the instrument cluster until the menu item *Time* is displayed.

› Release the button, the display shows the hour setting.
› Press the button repeatedly and set the hours.
› Wait 4 seconds, the display shows the minute setting.
› Press the button repeatedly and set the minutes.
› Wait 4 seconds, the display shows the initial setting.

The time is set in the Infotainment system in the following menu.

MENU > ⚙

Set the brightness of the instrument cluster lighting

The brightness of the instrument lighting is automatically adjusted depending on the given lighting conditions.

When low beam is switched on, the brightness of the instruments lighting can be adjusted in the following menu in the Infotainment system.

CAR > ⚙ > ☼

Or:

MENU > 🚗 > ⚙ > ☼


Driving data

Overview

The driving data display works with the ignition switched on.

In the instrument cluster display
Depending on the equipment, the display of the instrument cluster shows information such as speed, fuel consumption, range, etc.

In Infotainment

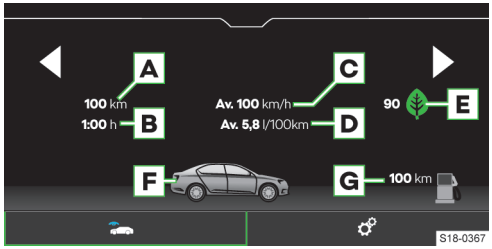

A Travelled distance
B Driving time
C Average speed
D Average fuel consumption
E Driving economy evaluation - **DriveGreen** function (depending on the Infotainment type) » page 105
F Graphic fuel gauge - If the expected range is less than 300 km, the vehicle slowly approaches the symbol ⛽
G Range

Storage

The system saves the driving data in the following memories.

From start or "1" (depending on display type)
▸ Driving data from the time of switching on the ignition until the ignition is switched off again is stored in the memory. If the journey is interrupted for more than 2 hours, the memory will be reset.

Long term or "2" (depending on display type)
▸ The driving data of all trips up to a total of 99 hours and 59 minutes driving time or 9999 km driving distance are stored in the memory. If one of the listed values is exceeded, the memory is reset.

From refuelling or "3" (depending on display type)
▸ Driving data from the last fuel tank are stored in the memory. The memory is reset the next time the tank is filled.

Operation

Display driving data in the display of the instrument cluster via the operating lever

› Select the menu item for the driving data in the main menu in the instrument cluster display.




A **Press** - Select entry / set values

B **Press** - Confirm entry

Display driving data in the display of the instrument cluster via the multi-functional steering wheel

› Select the menu item for the driving data in the main menu in the instrument cluster display.

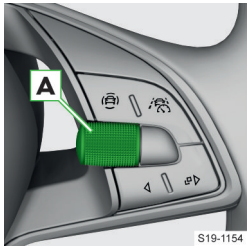

A **Turn** - Select entry / set values

Press - Confirm entry

Display drive data in the Infotainment

The driving data is displayed in the following menu in the infotainment system.

CAR > > Menu item for driving data

Or:

MENU > > > Menu item for driving data


Select and reset the memory for driving data in the display of the instrument cluster using the control lever



› To **select** the memory for the displayed driving data, press button A repeatedly.

› To **reset** the memory, hold down the A button.

Select memory for driving data in the display of the instrument cluster via the multifunction steering wheel and reset it

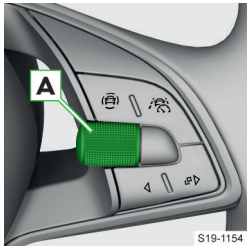

› To **select** the memory for the displayed driving data, press the setting wheel A repeatedly.

› To **reset** the memory, hold the setting wheel A.

Select memory in infotainment

To select the memory, use the functional areas ◀ ▶ in the following menu in the infotainment system.

CAR > > Menu item for driving data

Or:

MENU > > > Menu item for driving data

Reset memory in infotainment

The memory is reset in the following menu in the infotainment system.

CAR > >

Or:

MENU > > >

Settings

Select the driving data to be displayed

The driving data to be displayed is selected in the following Infotainment menu.

CAR > >

Or:

MENU > > >

Set units

The units are set in the following Infotainment menu.

CAR > >

Or:

MENU > > >

Speed limit warning

Usage

The system offers the possibility to set a speed limit beyond which an acoustic warning signal will sound and the following warning message appears in the display of the instrument cluster.

Settings

Setting the speed limit

› Select and confirm the menu item *Warning at* or ⊖ (depending on display type).
› **When the vehicle is stationary**, set the desired speed limit and confirm.
› **While driving**, drive at the desired speed and confirm it as the speed limit.

Resetting the speed limit

› Select and confirm the menu item *Warning at* or ⊖ (depending on display type).
› To reset the speed limit, confirm the stored value.

If the journey is interrupted for more than 2 hours, the set limit is deactivated, but the set value remains stored.

Vehicle status


Display

The vehicle status is displayed in the following menu in the infotainment system.

CAR › 🚗 › Menu item for vehicle status

Or:

MENU › 🚗 › 🚗 › Menu item for vehicle status

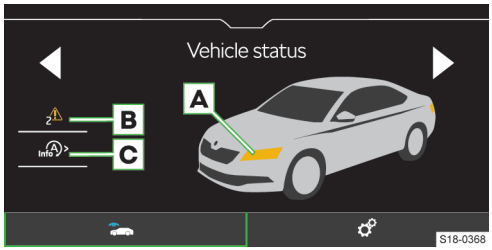

A Vehicle areas shown in colour indicate associated warning messages

B ✓ No notification

⚠ Warning messages regarding the vehicle condition and their quantity

C Display of information about the status of the START-STOP system

▶ Activation / deactivation of the information regarding the messages of the START-STOP system in another screen display

Functionality


In the event of a system fault, messages relating to the relevant fault are shown on the instrument cluster display when the ignition is switched on.

Malfunctions can also be displayed in infotainment.

As long as the malfunctions have not been remedied, the warning messages are displayed again and again. After the first display of the message, only the indicator lights remain on ⚠ (Hazard) or ⚠ (Warning) is displayed.

Infotainment Blues

Infotainment overview

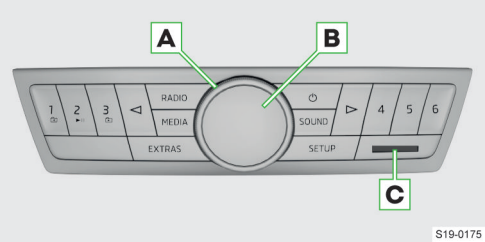

A Control dial ⊙

B Display

C SD card slot

⏻ Switches Infotainment on/off

RADIO **Radio** menu

MEDIA **Media** menu

EXTRAS Settings for the **Radio** or **Media** menu

SETUP Infotainment settings

SOUND Sound settings

◅ Depending on the context:
- ▸ Rewind
- ▸ Settings of values of the selected menu item

▻ Depending on the context:
- ▸ Fast forward
- ▸ Settings of values of the selected menu item

1-6 Function keys depend on the menu entered

System

Settings

Set value

› Press **SETUP**, **SOUND** or **EXTRAS**.

› Choose the desired menu item by pressing ◅ or ▻.

› Adjust the desired value using the controller ⊙.

› To **Exit Settings**, press one of the buttons **1** – **6** or wait a few seconds until the last selected **Radio** or **Media** menu is shown.

Infotainment settings

› Press the **SETUP** key.

Setting a value is possible with the following menu items.

- ▸ GALA - Speed-based volume adjustment
- ▸ On volume - Set the maximum volume when switching on the Infotainment
- ▸ TP volume - Set the volume of incoming traffic announcements (TP)
- ▸ PDC audio - Lower the audio volume when activating the parking assistant
- ▸ Clock - Switch the time display on/off in the Infotainment screen when the Infotainment is switched off and the ignition switched on
- ▸ Restore - Restore factory settings

Sound settings


› Press the **SOUND** key.

Setting a value is possible with the following menu items.

- ▸ Bass - Low setting
- ▸ Middle - Centre setting
- ▸ Treble - High setting
- ▸ Balance - Set the focus of the sound between left / right
- ▸ Fader - Set the focus of the sound between front / back

Screen

Overview

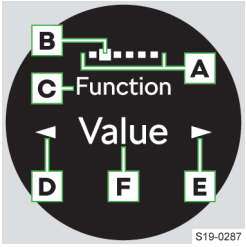

A Number of menu items for the respective setting

B Menu item currently displayed

C Name of the menu item currently displayed

D Previous menu item is available

E Next menu item is available

F Menu item value

Operation

Set value

› Press **SETUP**, **SOUND** or **EXTRAS**.

› Choose the desired menu item by pressing ◅ or ▻.

› Adjust the desired value using the controller ⊙.


› To **Exit Settings**, press one of the buttons **1** – **6** or wait a few seconds until the last selected **Radio** or **Media** menu is shown.

Radio

Overview

Display menu

› Press the **RADIO** key.

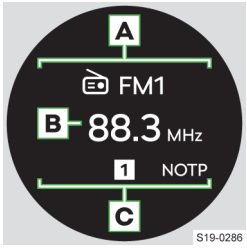

A Selected radio area
B Name or frequency of the radio station
C Status line

Possible symbols in the status line

MANUAL Manual frequency range browsing
SCAN Automatic search in the frequency range
0-0 Number of preset buttons on which the radio station is stored
Sound off
TP A traffic information station is available
NOTP No traffic information station is available

Operation

Select frequency range

› By repeatedly pressing the button **RADIO**, choose the frequency range together with memory group **FM1**, **FM2**. **AM1** or **AM2**.

Search for a station

› Press the ◁ or ▷ button.

Or:

› Hold the button ◁ or ▷ and let go.

The search is started and then stopped at the next station with a sufficiently strong signal.

SCAN function

The function plays receivable stations in the selected frequency range in succession for a few seconds at a time.

› To **start automatic play**, press the **EXTRAS** › **SCAN** › ▷ key.
› To **End automatic play**, press ▷.

Limitation

▸ Parking garages, tunnels, tall buildings or mountains can restrict radio reception.
▸ In the rear side windows, there may be antennas for receiving the radio signal.

Covering the windows with foils or metal-coated stickers can impair the reception of the radio signal.

Settings

Store stations currently on a station button for preferred stations

› The requested storage group **FM1**. **FM2**, **AM1** or **AM2** can be chosen by pressing the button **RADIO**.
› Hold one of the function keys 0-0.

Storage is confirmed by an acoustic signal and by the display of the station button number in the status line of the display.

Automatic storage of stations with the strongest signal

Six radio stations with the strongest signal can be stored in the currently selected memory group.

› Keep the **RADIO** button pressed down.

Autostore... will be displayed in the Infotainment display while storing stations.

Keys ◁ / ▷

The variant for **changing stations** using buttons ◁ ▷ in the **Radio** menu, is set as follows.

› In the **Radio EXTRAS** › menu, press **Seek**.
› To **switch between the available stations, select** Stations.
› To **switch between the stations stored on the station buttons, select** Presets.

Switch Traffic Reception (TP) on/off

Applies to the FM frequency range.

› In the **Radio EXTRAS** › menu, press **TP**.
› To **turn on**, select Yes.
› To **turn off**, select No.

Media


What you should be mindful of

▸ Do not save important and unsecured data on connected audio sources. ŠKODA assumes no responsibility for lost or damaged files or connected audio sources.
▸ When changing or connecting an audio source, there may be sudden volume fluctuations. Reduce the volume before changing or connecting an audio source.
▸ The legal provisions on copyright applicable in your country must be observed.

Overview

Display menu

› Press the **MEDIA** button.

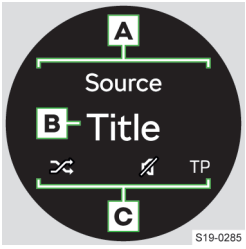

A Info line
B Name of the track being played
C Status line

Possible symbols in the status line

Repeats the current track
Play the current album / folder
Shuffle the current album / folder
Sound off
TP A traffic information station is available
NOTP No traffic information station is available

Operation

Select the audio source

› To **switch between the available sources**, press **MEDIA**.

The Infotainment only switches between connected audio sources with playable content.

Operation - Basics

►II Start playback / pause
⊳ **Press:** play the next track
Hold: fast forward within the track
⊲ **Press within 3 seconds of starting playback:** play the previous track
Press after 3 seconds of the start of playback: play the current track from the beginning
Hold: fast rewind within the track
Change to the previous folder/playlist
Change to the next folder/playlist

Limitation

The availability of some media control functions depends on the connected source and the software used.

Settings

Shuffle on / off

› In the **Media** menu, press **EXTRAS**.
› Select the Mix menu.
› To **switch on**, select On.
› To **turn off**, select Off.

Repeat playback

› In the **Media** menu, press **EXTRAS**.
› Select the Repeat menu.
› For **repeat playback of all tracks and folders, select** All.
› For **repeat playback of the tracks in the current folder, select** Track.
› For **repeat playback of the current folder, select** Folder.

Switch Traffic Reception (TP) on/off

Applies to the FM frequency range.

› In the **Media EXTRAS** › menu, press **TP**.
› To **switch on**, select Yes.
› To **turn off**, select No.

SD card

NOTICE

Risk of damaging the SD card reader!

▸ Do not use SD cards with a broken slide for write protection.

› To **insert** the SD card, with the bevelled corner to the right, push into the slot in the external module until it snaps into place.
› To **Remove**, press on the inserted SD card.

The SD card moves to the eject position.

NOTICE

When using an SD card with an adapter, vehicle vibrations might cause the card to fall out of the adapter.

USB device

› To **connect**, insert the USB device into the appropriate port.

Use USB ports that support data transfer to play audio files.

A USB device can be connected directly to the USB port or via a connection cable.
We recommend that you use extension cords from ŠKODA original accessories.
USB extension cables or reducers can impair the playback function of the connected device.

Load USB audio source

After connecting the USB device, charging will start automatically when the following conditions are met.

✓ The ignition is switched on.
✓ The USB device allows charging.

The charging efficiency can be different compared to the charging from the usual mains power supply.

Depending on the type of the connected USB device and the frequency of use, the charging current may not be sufficient to charge the battery of the connected device.

Some connected audio sources may not be recognised and cannot be charged.

Supported sources and files

Supported sources

Source	Interface	Type	Specification	File system
SD card	SD	Standard size	SD SDHC	VFAT FAT16 FAT32
USB	USB 1.x; 2.x 3.x or higher with USB 2.x support	MSC	USB stick	
			HDD (without special software)	
			USB devices that support the USB Mass Storage protocol	
		MTP	Devices running the Android or Windows Phone operating system that support the Media Transfer Protocol	
		Apple	Devices with an iOS operating system	HFS+

Supported audio files

Compression format	Codec type	File suffix	Max. bit rate [kbps]	Max. sampling rate [kHz]	Multi-channels
MPEG	MPEG 1 Layer 3	mp3	32 - 320	32, 44, 48	Mono, Dual Mono, Stereo, Joint Stereo
	MPEG 2 Layer 3		8 - 160	16, 22, 24	Mono, Stereo, Joint Stereo
	MPEG 2.5 Layer 3			8, 11, 12	
WMA	Windows Media Audio 9 and 9.1	wma	8 - 384	8, 11, 12, 16, 22, 32, 44, 48, 96	Mono, Stereo, Joint Stereo
	Windows Media Audio 9.2		8 - 320	8, 11, 12, 16, 22, 32, 44, 48, 96	

Files that are protected by **DRM**- and **iTunes®** methods are not supported by Infotainment.


The GPT standards (GUID partition table) method structured audio sources are not supported by Infotainment.

Supported playlists

Codec type	File suffix
M3U	m3u
PLS	pls
WPL	wpl
ASX	asx
PLA	pls

Infotainment Swing

Infotainment overview

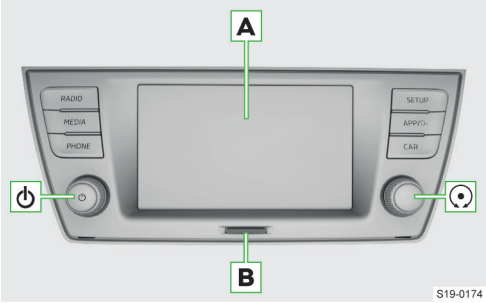

A Touchscreen

B SD card slot

⏻ Control dial left
- **Press:** Switch Infotainment on/off
- **Turn:** Set volume

⊙ Control dial right
- **Press:** Confirm menu item
- **Turn:** select menu item/set value

RADIO **Radio** menu

MEDIA **Media** menu

MENU Overview of Infotainment menus

PHONE **Phone** menu

MUTE **Mute** menu

SETUP **Infotainment settings** menu

APP/ **SmartLink** menu
- **Press:** Display menu
- **Hold:** Switch voice control of the SmartLink application on / off

SOUND Sound settings

CAR Information about vehicle settings

System

Limitation

For safety reasons, operation of some Infotainment functions while driving is not possible or is restricted.

The Infotainment system indicates this by means of a message in the screen.

Basic settings

Set basic functions
The following Infotainment functions are set in the menu **SETUP**.
- Time and date.
- Language.
- Units.
- Restore factory settings.

Sound settings
The Infotainment sound is set in the menu **SETUP** > *Sound*.

The following menu items can be set up.
- Setting the maximum volume when switching on the Infotainment.
- Volume setting of the individual Infotainment functions.
- Setting the equalizer.
- Adjusting the volume ratio.

Depending on the equipment, the following advanced sound settings can be set.
- Setting the sound system.
- Setting the sound space optimisation for the driver.
- Switch on / off and set the sub-woofer volume.

Configuration wizard
The configuration wizard helps to set certain Infotainment functions.

The configuration wizard is automatically displayed if the ignition is switched on and if there are at least two menu items that have not been set after switching on the Infotainment or if a new user account has been selected.

› To **switch off the automatic display**, when the configuration wizard is displayed tap *Don't show again* .

› For **manual display**, tap **SETUP** > *Configuration wizard* .

Disconnect the connected USB device safely

NOTICE
Risk of damage to the data on the connected device!
To safely disconnect/remove the device, proceed as follows.

› **SETUP** > *Tap Remove safely* .

› Select the desired device.

› Disconnect/remove the device.

If it is not possible to safely disconnect the device, switch off the Infotainment and disconnect the device.

Troubleshooting

Infotainment not responding
The Infotainment system must be restarted.

› Press ⏻ for more than 10 s.

› Wait for the restart to complete.

System update

We recommend having the system update carried out by a specialist company.

The system update ensures optimal function of the Infotainment system, e.g. compatibility with new phones.

Determine system version

› **SETUP** > *Tap System information* .

Manual update


Information about available updates can be found on the ŠKODA website.

http://go.skoda.eu/updateportal

› Check for available updates.
› Save the update to a USB source.
› Insert the USB source into the front USB input.
› **SETUP** > *Tap System information* > *Tap Update software* .
› Select the connected USB device as the update source.
› Go to the update file and confirm the update.
› Confirm any messages and wait for the update process to complete.

Screen

Overview

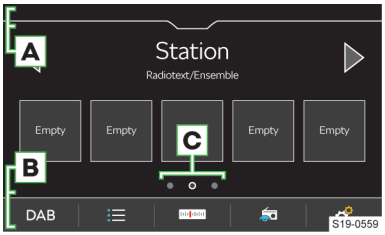

A Status bar

B Bar with the functional surfaces of the displayed menu

C Other pages of the menu

Operation

NOTICE

Danger of screen damage!

▸ The Infotainment screen is operated **by touching it lightly with your finger**.

In principle, operation by touch is identical to the operation of a mobile phone.

The following operating modes are specific to the Infotainment system.

Settings

The following basic screen functions are set in the menu **SETUP** >. *Screen*.

▸ Screen brightness level.
▸ Turning off the screen.
▸ Display the time.
▸ Confirmation tones and animations.

Infotainment keyboard

Keypad overview

The arrangement of the keypad characters depends on the Infotainment language that has been set.

In Infotainment, the following types are used, depending on the context.

▸ Alphanumeric.
▸ Numeric.
▸ Keypad for input.
▸ Keypad for search.




Keypad example

A Input line
- ▸ Delete characters before the cursor
  - ▸ **Tap:** delete the last character
  - ▸ **Hold:** delete all characters in sequence
- ▸ Show list of searched entries

B Keypad functional surfaces
- ▸ Change to lowercase
- ▸ Switch to the first capital letter, followed by lowercase letters
- ▸ **ABC/АБВ** Switch to the language keypad
- ▸ **123** Switch to the numeric and character keypad
- ▸ Show additional keypad languages
- ▸ Insert a space
- ▸ **Hold:** Show additional character variants

- ▶ < Move cursor to the left
- ▶ > Move cursor to the right
- ▶ OK Confirm the characters that have been entered

Numeric keypad

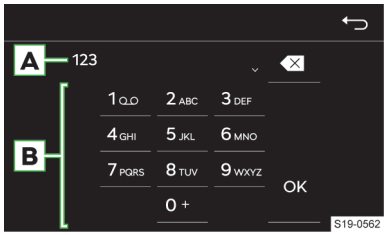

Keypad example

A Input line

- ▶ Delete characters before the cursor
  - ▶ **Tap:** delete the last character
  - ▶ **Hold:** delete all characters

B Keypad functional surfaces

- ▶ OK Confirm the characters that have been entered

If context-sensitive, alphanumeric characters can be entered by holding a functional surface with a digit.

Operation

The Infotainment keypad is used to enter characters, letters and numbers.

The keypad will be **automatically displayed** when Infotainment prompts for characters.

Find
During the character input, a search for corresponding entries takes place.

The entry to be searched can be entered, including diacritics.

The keypad will only provide characters that match the stored entries.

› To **display the searched entries**, tap .

Show additional keypad languages
To use the additional keypad languages, the desired languages must be set first.

› Tap or repeatedly tap the flag symbol until the desired language keypad is displayed.

Further character variants
› Press and hold the sign with the symbol .
› Select the desired symbol.

Setting up additional keyboard languages


› **SETUP** > *Additional keyboard languages* .

Radio

Overview

Display menu
› Tap **RADIO**.

Analogue and digital radio reception

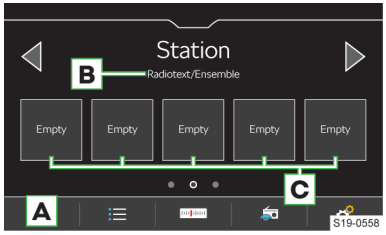

A Select frequency range

B Depending on the frequency range
FM: Radio text
DAB: Name of the station group

C Station buttons for preferred stations

List of available stations

Manual station search

Display information about the station (applies to DAB)

Settings

Infotainment supports digital radio reception in DAB and DAB+ formats.


List of available stations
› To **display** tap .

- Played station
- ★ Stations stored on the station buttons
- TP A traffic radio station is set
- DAB signal is not available
- The DAB station reception is not stable
- Filtering the stations in the list according to the programme type.
  To filter the FM stations, the RDS and AF function must be switched on.
  To filter the DAB stations, the alphabetical sorting function of the stations must be activated.
- Update station list manually

Information about the program type being broadcast and the type of regional station can be displayed in the FM station list.

Operation

Select station

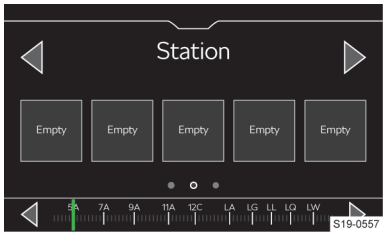

› Tap ◁ or ▷ at the top of the screen.

SCAN function
The function plays receivable stations of the selected frequency range in succession for a few seconds each.

› To **start automatic play** press ⚙ › *Scan* or the right rotary control ⊙.
› To **end automatic play** press SCAN or the right rotary control ⊙.

Find stations manually
› In the Radio main menu, tap MENU.
› To **search in sequence**, tap ◁ or ▷ next to the displayed frequency range scale.

Or:

› Hold down the scroll mark on the frequency range scale and move it to the desired value.

Or:

› Turn the right rotary control ⊙.

Limitation

▸ Infotainment supports digital radio reception in DAB and DAB+ formats.
▸ Parking garages, tunnels, tall buildings or mountains can restrict radio reception.
▸ In the rear side windows, there may be antennas for receiving the radio signal.

  Covering the windows with foils or metal-coated stickers can impair the reception of the radio signal.
▸ The ŠKODA AUTO company does not assume any responsibility for the availability, correct function or broadcast information of the RDS service.

Settings

Save the station currently being listened to as a favourite from the Radio main menu
› Hold the desired station key for preferred stations until the station is stored.

Save station to favourites from the list of available stations
Applies to AM, FM and DAB frequency ranges.

› Hold the line with the name of the desired station.
› Tap the desired preset button.

Delete favourites
› In the **Radio** main menu , tap ⚙ › *Delete presets*.
› To delete **one** preset button for preferred stations, tap the desired station button and confirm the deletion.
› To delete **all** preset buttons for preferred stations, tap *All* and confirm the deletion.

Buttons ◁ ▷
Applies to AM, FM and DAB frequency ranges.

The variant for **changing stations** using buttons ◁ ▷ in the **Radio** main menu is set as follows.

› In the **Radio** main menu, tap ⚙ › *Arrow buttons:*.
› Choose the change variant.

Traffic reception (TP) for FM stations on/off
Applies to the FM frequency range.

› In the **Radio** main menu, tap ⚙ › *Traffic program (TP)*.

Switch traffic reception for DAB stations on/off
Applies to the DAB frequency range.

› In the **Radio** main menu, turn on menu item ⚙ › *Traffic Radio (TP)*.
› In the **Radio** main menu, tap ⚙ › *Advanced settings* › *DAB traffic programme announcements (TP)* on/off.

Assign the station logo from an external source
Applies to AM, FM and DAB frequency ranges.

Infotainment offers the option to assign logos from the pictures on an external source to the station buttons.

For station logos, images in jpg, png format with a maximum resolution of 400x240 pixels can be used.

› In the main menu **Radio** tap on ⚙ › *Station logos* .
› Tap the desired station button.
› Select the external source with the logo.
› Find the desired logo and confirm.

Delete station logos
Applies to AM, FM and DAB frequency ranges.

› In the **Radio** main menu, tap ⚙ › *Station logos:*.
› To delete **a logo**, tap the desired preset button and confirm the deletion.
› To delete **all** logos, tap on *All* and confirm the deletion.

Turn on/off radio text reception
Applies to the FM and DAB frequency ranges.

When the function is switched on and station presets are displayed, detailed information about the

broadcast content of the FM station being listened to, or the name of the station group for the DAB station, is displayed.

› In the **Radio** main menu, tap ⚙ › *Radio text*.

Switch automatic frequency control (AF) on/off
Applies to the FM frequency range.

When the function is switched on and the signal of the FM station currently being listened to is weak, Infotainment automatically sets the same station to a different frequency with a better signal.

› In the **Radio** main menu, tap on ⚙ › *Advanced settings* › *Automatic frequency control (AF)*.

Sort stations in the list of available stations
Applies to the FM frequency range.

▶ In the **Radio** main menu, tap on ⚙ › *Advanced settings* › *Sort station list:*.
▶ Select the sorting of stations in alphabetical order or by group.

Automatic change of frequency to a regionally linked FM station
Applies to the FM frequency range.

Infotainment provides the option of automatically switching to a regionally linked FM station in case of signal loss of the FM station being listened to.

› In the **Radio** main menu, tap on ⚙ › *Advanced settings* › *RDS Regional:*.
› Select one of the following menu items.
▶ *Fixed* - If there is a loss of signal, another station must be set manually.
▶ *Automatic* - automatic selection of the station with the best signal reception.

If reception is lost in the given region, Infotainment will automatically set another available region.

Switch RDS on/off
Applies to the FM frequency range.

The menu item is only available for some countries.

› In the main menu **Radio** tap on ⚙ › *Advanced settings* › *Radio Data System (RDS)* .

If the **RDS function is disabled**, the following menu items in **FM station** settings are not available.

▶ Traffic programme (TP).
▶ Radio text.
▶ RDS Regional.
▶ Automatic frequency change (AF).

Switch additional DAB announcements on/off
Applies to the DAB frequency range.

When the function is switched on, other announcements are received as traffic announcements. For example, weather news, sports reports, financial news, etc.

› In the **Radio** main menu, tap on ⚙ › *Advanced settings* › *Other DAB announcements*.

Switch automatic program tracking of a DAB station on / off
Applies to the DAB frequency range.

When the function is switched on and the DAB station is lost, Infotainment automatically changes to the same station with a better signal in a different DAB station group.

› In the main menu **Radio** tap on ⚙ › *Advanced settings* › *DAB - DAB program tracking* .

Turn on/off automatic switching from a DAB station to the same FM station
Applies to the DAB frequency range.

When the function is switched on and the DAB station being listened to is lost, Infotainment automatically changes to the same FM station. The symbol (FM) is displayed after the station name.

When the corresponding DAB station can be received again, the station automatically changes from FM to DAB.

› In the main menu **Radio** tap on ⚙ › *Advanced settings* › *Automatic DAB - FM switching* .


Media

What you should be mindful of

▶ Do not save any important data or that which has not been backed up on the connected audio sources. ŠKODA assumes no responsibility for lost or damaged files or connected audio sources.
▶ When changing or connecting an audio source, this may cause sudden changes in volume. Reduce the volume before changing or connecting an audio source.
▶ When connecting an audio source, the source information messages can be displayed. These messages must be observed and, if necessary, confirmed.
▶ The national copyright laws that apply in your country must be observed.

Overview

Display menu
› Tap **MEDIA**.

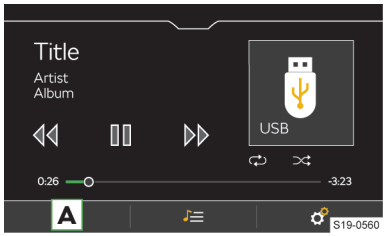


A Select source

Manage files / multimedia database

Settings

Operation

Operation - Basics

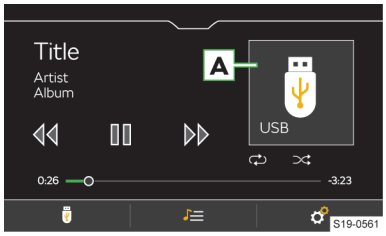

A Album image / symbol of the connected source
Tap: display available albums

Tap: start playback

Tap: pause

Within 3 seconds of starting playback, tap: play the previous song

After 3 seconds from the start of playback, tap to play the current title from the beginning

Hold: fast rewind within the title

Tap: play the next song

Hold: fast forward within the title

Movement within the title is also possible by dragging the finger over the timeline.

Extended operation

Turn repeat playback of the current track on/off

Turn repeat playback of the current album/folder on/off

Turn random playback of the current album/folder on/off

Limitation

NOTICE
The availability of some media operation functions is dependent on the connected source and the software being used, e.g. Bluetooth®.

Settings

Switch track playback including subfolders on / off

› In the main menu, tap **Media** > *Mix / repeat including subfolders* .

Traffic

› To **turn on/off** the traffic monitoring during the playback of media files, go to the **Media** main menu and tap on > *Traffic programme (TP)*.

Safely disconnect the connected device

NOTICE
Risk of damage to the data on the connected device! To safely disconnect/remove the device, proceed as follows.

› In the main menu, tap **Media** > *Remove safely:* .

› Select the desired device.

› Disconnect/remove the device.

If it is not possible to safely disconnect the device, switch off the Infotainment and disconnect the device.

Bluetooth® player

Infotainment allows audio files of a connected Bluetooth® player to play using the A2DP and AVRCP audio profile.

With Infotainment, multiple devices can be paired using Bluetooth®, but only one of them can be used as a Bluetooth® player.

› For **connecting the Bluetooth® player**, pair and connect the device via Bluetooth®.

› In the **Media** main menu , tap on > *Bluetooth* > *paired devices*.

› In the list, choose the device with the symbol ♫.

If a device is connected to Infotainment using Apple CarPlay or Android Auto, then it cannot be connected using Bluetooth®.

SD card

NOTICE
Risk of damaging the SD card reader!

▸ Do not use SD cards with a broken slide for write protection.

› To **insert** the SD card, with the bevelled corner to the right, push into the slot in the external module until it snaps into place.

› To **remove**, first disconnect the SD card safely. To do so, in the main menu tap **Media** › *Remove safely:* and select the SD card.
› Press on the inserted SD memory card.

The SD card moves to the eject position.

NOTICE
When using an SD card with an adapter, vehicle vibrations might cause the card to fall out of the adapter.

USB device
› To **connect**, insert the USB device into the appropriate port.

Use USB ports that support data transfer to play audio files.

› To **disconnect** disconnect the USB device first. To do so, in the main menu tap **Media** › *Remove safely:* and select the USB device.
› Disconnect the USB device.

A USB device can be connected directly to the USB port or via a connection cable.

We recommend that you use extension cords from ŠKODA original accessories.
USB extension cables or reducers can impair the playback function of the connected device.

Load USB audio source
After connecting the USB device, charging will start automatically when the following conditions are met.

✓ The ignition is switched on.
✓ The USB device allows charging.

The charging efficiency can be different compared to the charging from the usual mains power supply.

Depending on the type of the connected USB device and the frequency of use, the charging current may not be sufficient to charge the battery of the connected device.

Some connected audio sources may not be recognised and cannot be charged.

Supported sources and files

Supported sources

Source	Interface	Type	Specification	File system
SD card	SD card reader	Standard size	SD SDHC SDXC	FAT16 FAT32 exFAT
USB	USB 1.x; 2.x 3.x or higher with USB 2.x support	MSC	USB stick	
			HDD (without special software)	
			USB devices that support the USB Mass Storage protocol	
		MTP	Devices running the Android or Windows Phone operating system that support the Media Transfer Protocol	
		Apple	Devices with an iOS operating system	HFS+
Bluetooth® player	Bluetooth®	-	Bluetooth® protocols A2DP and AVRCP (1.0 - 1.5)	-

The GPT standards (GUID partition table) method structured audio sources are not supported by Infotainment.
Viewing images on the Infotainment screen is not supported by connected Apple devices.

Mobile device compatibility
It is possible to check the ŠKODA web pages to see if Infotainment is compatible with the selected mobile device being tested. This check is carried out by using the following reference or by reading the QR code.

http://go.skoda.eu/compatibility

All information given is incidental and serves as information.

The ŠKODA AUTO company cannot guarantee full functionality and compatibility, e.g. due to a software update of the Infotainment and the mobile devices.

Supported audio files

Compression format	Codec type	File suffix	Max. bit rate [kbps]	Max. sampling rate [kHz]	Multi-channels
MPEG	MPEG 1 Layer 3	mp3	32 - 320	32, 44, 48	Mono, Dual Mono, Stereo, Joint Stereo
	MPEG 2 Layer 3	mp3	8 - 160	16, 22, 24	Mono, Stereo, Joint Stereo
	MPEG 2.5 Layer 3			8, 11, 12	
WMA	Windows Media Audio 9 and 9.1	wma	8 - 384	8, 11, 12, 16, 22, 32, 44, 48	Mono, Stereo, Joint Stereo
	Windows Media Audio 9.2		8 - 320		
	Windows Media Audio 10		8 - 384	32, 44, 48, 96	

Files that are protected by **DRM**- and **iTunes®** methods are not supported by Infotainment.

Supported playlists

Codec type	File suffix
M3U	m3u
PLS	pls
WPL	wpl
ASX	asx

Mobile device management

Overview

Mobile device management

› In the **Telephone** main menu, tap on the function surface ⚙ › *Bluetooth* › *Paired devices* .

The following icons can appear in the list of paired mobile devices for the individual devices.

- **White icon** - the device can be connected as a telephone.
  Green icon - the device is connected as a telephone.
- **White icon** - the device can be connected as a Bluetooth® player.
  Green icon - the device is connected as a Bluetooth® player.

Possible functions of the connected mobile device

The functions of a device connected via over the **HFP** Bluetooth profile depends on the following connection types.

First device Main telephone	Second device Additional phone
Incoming / outgoing calls Telephone contacts Bluetooth® player	Bluetooth® player

With Infotainment only **a mobile device** can be connected as a Bluetooth® player.

Mobile device and application limitations

Availability of features
The availability of certain features depends on the type of mobile device, as well as that of the applications installed.

Connection restrictions
- ▸ With Infotainment, a max. of 20 mobile devices are paired.
- ▸ The range of the connection of the mobile device to Infotainment is limited to the passenger compartment.
- ▸ After reaching the maximum number, the pairing of the next mobile device will replace that of the device that has not been used for the longest period of time.

Mobile device compatibility
It is possible to check the ŠKODA web pages to see if Infotainment is compatible with the selected mobile device being tested. This check is carried out by using the following reference or by reading the QR code.

http://go.skoda.eu/compatibility

All information given is incidental and serves as information.

The ŠKODA AUTO company cannot guarantee full functionality and compatibility, e.g. due to a software update of the Infotainment and the mobile devices.

Bluetooth® compatibility of mobile devices
Due to the large number of mobile devices, it is not possible to guarantee total Bluetooth® compatibility with Infotainment. Bluetooth® compatibility depends on the Bluetooth® version as well as the implementation of Bluetooth® protocols by the manufacturer of the mobile device.

Applications in mobile devices
Mobile devices can be used to install applications that allow you to view additional information on the Infotainment screen, or to operate the Infotainment system.

Due to the variety of applications, as well as their ongoing development, the available applications may not function on all mobile devices. ŠKODA AUTO assumes no liability for their proper functioning.

The scope of available applications and their functionality is dependent on the type of Infotainment, as well as the vehicle and country.

Information about the ŠKODA applications
Detailed information on the ŠKODA applications can be found on the website after reading the following QR code or using the link.

http://go.skoda.eu/mobile-apps

Connection set-up

Connect a mobile device to Infotainment
- › Turn on the ignition.
- › Turn on the Bluetooth® on the mobile device.
- › Turn on the Infotainment Bluetooth® **SETUP** > *Bluetooth* > *Bluetooth* .
- › Switch on Bluetooth® visibility of the Infotainment **SETUP** > *Bluetooth* > *Visibility:* > *Visible.* .
- › Find the Bluetooth® devices available in the mobile device.
- › Select the Infotainment Bluetooth® unit.

  The name of the unit can be found by tapping **SETUP** > *Bluetooth* > *Name:* .
- › Confirm the PIN; enter it if necessary and then confirm.

The mobile device is connected to the Infotainment or just paired, depending on the number of devices that are already connected.

Connect Infotainment to a non-paired mobile device
- › Turn on the ignition.
- › Turn on the Bluetooth® on the mobile device.
- › Turn on the Infotainment Bluetooth® **SETUP** > *Bluetooth* > *Bluetooth* .
- › **SETUP** > *Bluetooth* > *Tap Search devices* .
- › Ensure the visibility of the device to be connected.

› Select the desired device from the list of Bluetooth® devices.
› Confirm the PIN; enter it if necessary and then confirm.
› If two devices are connected to the Infotainment, select the device to be replaced.

Connect Infotainment to an already paired mobile device
The connection with an already paired mobile device is made automatically after switching on the ignition; if necessary the device can be connected manually as follows.

› Turn on the ignition.
› Turn on the Bluetooth® on the mobile device.
› Turn on the Infotainment Bluetooth® **SETUP** > *Bluetooth* > *Bluetooth* .
› **SETUP** > *Bluetooth* > *Paired devices* .
› In the device list, select the desired device and the Bluetooth® profile.
› Confirm the PIN; enter it if necessary and then confirm.
› If two devices are connected to the Infotainment, select the device to be replaced.

Disconnect from a mobile device
› **SETUP** > *Bluetooth* > *Paired devices* .
› Tap the icon of the Bluetooth® profile of the desired mobile device.


Delete a paired mobile device
› **SETUP** > *Bluetooth* > *Paired devices* .
› To **delete one** mobile device tap 🗑 and confirm the deletion.
› To **delete all** mobile devices tap *Clear all* and confirm the deletion.

Telephone

Overview

Display menu
› Tap **PHONE**.

ⓘ If the menu **Telephone** is not displayed, check whether the mobile device is connected.

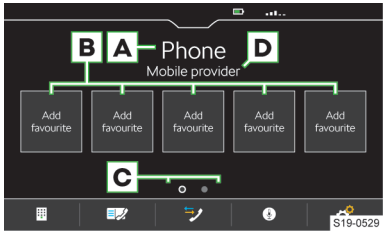

A Name of the connected phone
▶ **Tap:** View the list of previously connected phones
B Station buttons for preferred contacts
C Select storage group of the preferred contacts
D Name of the telephone service provider
▶ If the symbol ▷ is displayed in front of the name, roaming is active.
Enter phone number
Contact list
Call lists
Switch on voice control of the connected phone
Settings

Conditions for connecting a telephone with Infotainment

✓ The ignition is switched on.
✓ The Bluetooth® function of the Infotainment and the telephone needs to be switched on.
The Bluetooth® function of the Infotainment is switched on in the menu item **SETUP** >. *Bluetooth* > *Bluetooth*.
✓ Visibility of the Infotainment is switched on.
The visibility of the Infotainment is switched on in the menu item **SETUP** > *Bluetooth* > *Visibility:*> *Visible*.
✓ The telephone is within signal range of the Infotainment's Bluetooth® unit.
✓ The telephone is compatible with Infotainment.
✓ Through Infotainment, no mobile device can be connected using Apple CarPlay.

Telephone operation

Enter telephone number
› In the **Telephone** main menu, tap .
› Enter the telephone number using the numeric keypad that is displayed.

ⓘ The displayed numeric keypad can also be used for searching for contacts.
If, for example, the digits 32 are entered, contacts with the letter sequence DA, FA, EB etc. are displayed next to the numeric keypad.

List of telephone contacts
The list of telephone contacts is imported from the connected main telephone.

› To **display** the contact list in the **telephone** main menu, tap .
› To **find** details within the list, tap *Find*.
› Enter the details you wish to find.

› To **establish a connection** with a contact, tap the functional area showing the desired contact.

If a contact has multiple telephone numbers, select the telephone number from the displayed list.

› To display the **details** for a contact, tap >.

Telephone call
Depending on the context of the telephone conversation, the following functions can be selected.

End connection set-up / reject incoming call / end call
Answer an incoming call / Return to the call on hold
Switch the ringer off / on
Hold a call
Switch the microphone off / on
Show details of the caller

› To **switch the call from the speakers to the telephone**, go to the **Telephone** main menu and tap on > *Hands-free* .

› To **switch the call tone from the telephone to the speakers**, tap .

Settings of the Infotainment telephone functions

Manage preset buttons for preferred contacts
› To **save** the desired preset button, press and hold.
› Select a contact from the displayed list.
› If the contact contains multiple telephone numbers, choose the desired telephone number.
› To **delete** tap on **Telephone** > *User profile* >*Manage favourites* in the main menu.
› To delete **one** preset, tap on the list entry and confirm the deletion.

Or:

› To delete **all** presets, tap on *Delete all* and confirm the deletion.

Import phone contacts
After first connecting the main telephone with Infotainment, telephone contacts will start to be imported into the Infotainment memory.

Infotainment can import up to 2000 telephone contacts. Each contact can have max. 5 phone numbers included.

Depending on the phone type, it might be necessary to confirm the import.

Update phone contacts
When re-connecting the telephone with Infotainment, an **automatic** update of the list is carried out.

› To update the lists **manually** in the **Telephone** main menu, tap on > *User profile* > *Import contacts* .

Sort contacts in the phone book
› In the **Telephone** main menu, tap on > *User profile* > *Sort by:*.
› Select the type by which to sort.

Ringer
Some phones do not allow the use of the telephone ringtone; instead, the Infotainment ringtone is used.

› To **set the Infotainment ringer** in the **Telephone** main menu, tap on > *User profile* > *Select ringtone*.
› Select the ringtone.

Simultaneous calls
This applies to some countries.

Depending on the connected telephone, it is possible to answer the next incoming call and hold the previous call.

› To **switch on/off** simultaneous calls, tap on **Telephone** > *Simultaneous calls* .

SmartLink

Functionality

SmartLink offers the ability to display and operate certified applications from a connected mobile device in the Infotainment screen.

Certification may be conditional upon the use of the latest update to the particular SmartLink application.

Applications include, for example, apps for route guidance, telephoning, listening to music, etc.

Mobile devices can be connected via a USB cable.

Supported connection types
SmartLink supports the following connection types.

▸ Android Auto.
▸ Apple CarPlay.
▸ MirrorLink.

Overview of the SmartLink connection

Display menu
› Tap **APP/**.



A Previously connected device
B Currently connection device


ⓘ Display information about SmartLink

⊗ Disconnection of the active connection

Disconnection of the active connection

Settings in SmartLink menu


Android Auto

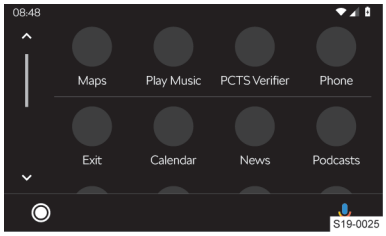

○ Overview of running applications, phone calls, received text messages and the like.

Switching on voice control (Google Voice)


Apple CarPlay

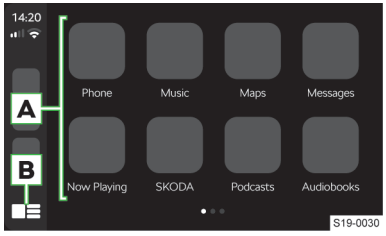

A List of available applications

B Depending on the duration of operation:
- ▸ **Tap:** Return to the Apple CarPlay main menu
- ▸ **Hold:** Turn on voice control (Siri)

MirrorLink

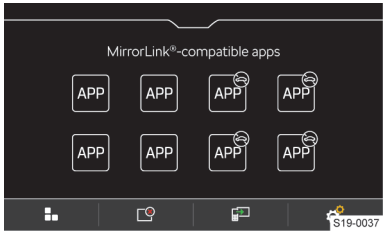

It is not possible to operate the application while driving

Return to the SmartLink main menu

List of running applications

Display the last running application in the connected mobile device

Settings

Connection conditions

General connection conditions

✓ The mobile device supports the following SmartLink connection types: Android Auto. Apple CarPlay and MirrorLink.

✓ Mobile devices, as well as the type of SmartLinkconnection, are supported in the respective market.

✓ Some connected mobile devices require the mobile device to be “unlocked”.

Conditions for Android Auto

✓ The device to be connected must have Android AutoSupport.

A list of devices, supported regions and applications that the Android Auto connection supports can be found on the websites of Google Inc..

✓ The Android Auto application needs to be installed on the mobile device.

✓ Some applications require the data connection in the mobile device to be turned on.

Conditions for Apple CarPlay

✓ The device to be connected must have Apple CarPlaySupport.

A list of devices, supported regions and applications that the Apple CarPlay connection supports can be found on the websites of Apple Inc..

✓ Siri voice control is on.

✓ The data connection is switched on in the mobile device.

Conditions for MirrorLink

✓ The device to be connected must have MirrorLinkSupport.

A list of devices and applications that the MirrorLink connection supports can be found on the websites of Car Connectivity Consorcium®.

✓ The MirrorLink application needs to be installed on the mobile device.

✓ Some applications require the data connection in the connected mobile device to be turned on.

Operation

Operation of the running MirrorLink application

< Move the functional areas to the left edge of the screen

> Move the functional areas to the right edge of the screen

∧ Move the functional areas to the top of the screen

∨ Move the functional areas to the bottom of the screen

Return to the MirrorLink main menu

Limitation

Restriction of SmartLink applications while driving
For safety reasons, operation of some SmartLinkapplications while driving is not possible or is restricted.

Functionality restriction of Infotainment with an Android Auto connection
- ▶ For the duration of the connection, the external device cannot be used as an audio source in the **Media** menu.
- ▶ By connecting the device, all currently connected Bluetooth® devices will be disconnected and the device will automatically be connected as the main telephone.
- ▶ For the duration of the connection, no other Bluetooth® devices can be connected to the Infotainment system.

Functionality restriction of Infotainment with an Apple CarPlay connection
- ▶ For the duration of the connection, the external device cannot be used as an audio source in the **Media** menu.
- ▶ Connecting the device disconnects all currently connected Bluetooth® devices.
- ▶ For the duration of the connection, no Bluetooth® devices can be connected to the Infotainment system.

Functionality restriction of Infotainment with an MirrorLink connection
- ▶ For the duration of the connection, the external device cannot be used as an audio source in the **Media** menu.
- ▶ By connecting the device, all currently connected Bluetooth® devices will be disconnected and the device will automatically be connected as the main telephone.

  Depending on the device to be connected, a connection confirmation may be required.

Settings

Apple CarPlay - Connection via USB
› Turn on the Infotainment.
› Turn on the mobile device.
› Connect the mobile device to the front USB input using a cable.
› Choose to connect via Apple CarPlay.

Apple CarPlay – Disconnection
› In the Apple CarPlay main menu, tap on the “ŠKODA” functional area.
› Tap on ⊗.

Android Auto - Connection via USB
› Turn on the Infotainment.
› Turn on the mobile device.
› Connect the mobile device to the front USB input using a cable.
› Choose to connect via Android Auto.

Android Auto - Disconnection
› In the main menu of Android Auto > tap on “Return to ŠKODA”.
› Tap on ⊗.

MirrorLink - Connection via USB
› Turn on the Infotainment.
› Turn on the mobile device.
› Connect the mobile device to the front USB input using a cable.
› Choose to connect through MirrorLink.


MirrorLink - Disconnection
› In the MirrorLink main menu, tap .
› Tap on ⊗.

Change to another device / connection type
Infotainment allows you to switch between currently connected devices and the connection type.

› Tap APP/.
› Select the desired device or connection type.

Infotainment Amundsen

Infotainment overview

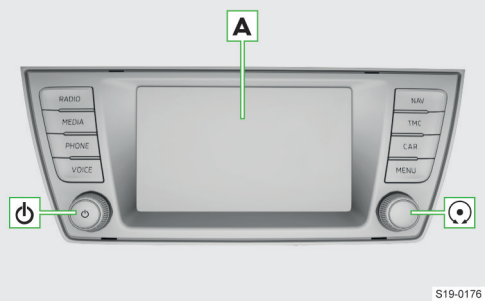

A Touchscreen

⏻ Control dial left
- ▸ **Press:** Switch Infotainment on/off
- ▸ **Turn:** Set volume

⊙ Control dial right
- ▸ **Press:** Confirm menu item
- ▸ **Turn:** select menu item/set value

RADIO **Radio** menu

MEDIA **Media** menu

PHONE **Phone** menu

VOICE Voice control

NAV **Navigation** menu

TMC Route guidance traffic reports

CAR Information about vehicle settings

MENU Overview of Infotainment menus


System

Infotainment Menus


MENU menu
The MENU menu contains all available Infotainment menus.

› To **Display the menu** tap **MENU**.

The graphic display type for the MENU menu can be set.

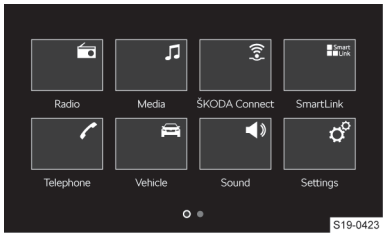

Grid display

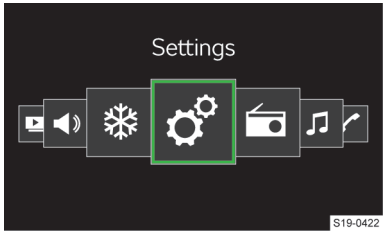

List

Limitation

For safety reasons, operation of some Infotainment functions while driving is not possible or is restricted.

The Infotainment system indicates this by means of a message in the screen.

Basic settings

Setting basic functions
The following Infotainment functions are set in the **MENU** > ⚙ menu.

- ▸ Time and date.
- ▸ Language.
- ▸ Units.
- ▸ Restore factory settings.

Sound settings
The Infotainment sound is set in the menu **MENU** > 🔊.

The following menu items can be set.

- ▸ Setting the equalizer.
- ▸ Adjusting the volume ratio.
- ▸ Volume adjustment of individual Infotainment functions.

  Some are adjustable, for example the following menu items.
  - ▸ Volume adjustment of voice commands.
  - ▸ Setting the maximum volume when Infotainment is turned on.
  - ▸ Speed-dependent volume setting.
  - ▸ Setting the Infotainment to mute with the parking aid switched on.

Depending on the equipment, the following advanced sound settings can be set.

- Setting space optimisation.
- Setting the audio profiles according to genre.
- Adjusting the subwoofer volume.

Configuration wizard
The configuration wizard helps to set certain Infotainment functions.

The configuration wizard is automatically displayed if the ignition is switched on and if there are at least two menu items that have not been set after switching on the Infotainment or if a new user account has been selected.

› To **switch off the automatic display**, when the configuration wizard is displayed tap *Don't show again* .
› For **manual display**, tap **MENU** > ⚙ > *Configuration wizard* .

Setting the MENU
The graphic display type for the MENU menu can be set as follows.

› **MENU** > ⚙ > *Screen* > *Menu:*
› Select one of the following menu items.

- *Grid display* - Grid display.
- *Horizont. Display* - horizontal display.

Safely disconnect the connected USB device

NOTICE
Risk of damage to the data on the connected device!
To safely disconnect/remove the device, proceed as follows.
› Tap **MENU** > ⚙ > *Remove safely:*.
› Select the desired device.
› Disconnect/remove the device.

If it is not possible to safely disconnect the device, switch off the Infotainment and disconnect the device.

Troubleshooting

Infotainment not responding
The Infotainment system must be restarted.

› Press ⏻ for more than 10 s.
› Wait for the restart to complete.

System update

We recommend having the system update carried out by a specialist company.

The system update ensures optimal function of the Infotainment system, e.g. compatibility with new phones.

Determine system version
› Tap **MENU** > ⚙ > *System information*.


Manual update
Information about available updates can be found on the ŠKODA website.

http://go.skoda.eu/updateportal

› Check for available updates.
› Save the update to a USB source.
› Insert the USB source into the front USB input.
› **MENU** > ⚙ > *Tap System information* > *Tap Update software* .
› Select the connected USB device as the update source.
› Go to the update file and confirm the update.
› Confirm any messages and wait for the update process to complete.

Screen

Overview

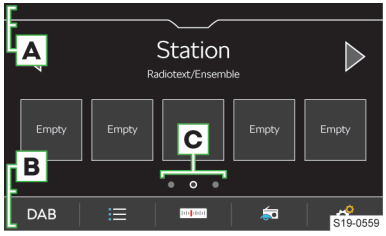

A Status bar
B Bar with the functional surfaces of the displayed menu
C Other pages of the menu


Operation

NOTICE
Danger of screen damage!
- The Infotainment screen is operated **by touching it lightly with your finger**.

In principle, operation by touch is identical to the operation of a mobile phone.

The following operating modes are specific to the Infotainment system.

Dragging up or down with two fingers

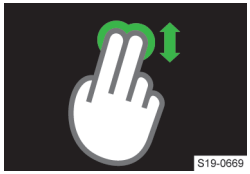


- Quickly review the list of phone contacts.

Pulling apart with two fingers



- Enlarge image.
- Zoom in to the map.

Pulling together with two fingers

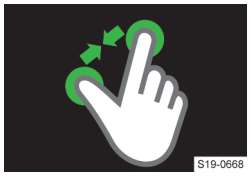

- Minimize image.
- Zoom out of the map.

Turn two fingers



- Rotate image.

Finger movement



- Move the map.

Settings

The following basic screen functions are set in the MENU > ⚙ > *Screen* menu.

- Brightness level of the screen.
- Switch off the screen.
- Display the time.
- Confirmation sounds and animations.

Infotainment keyboard

Keypad overview

The arrangement of the keypad characters depends on the Infotainment language that has been set.

In Infotainment, the following types are used, depending on the context.

- Alphanumeric.
- Numeric.
- Keypad for input.
- Keypad for search.




Keypad example

A Input line
- ⌫ Delete characters before the cursor
  - **Tap:** delete the last character
  - **Hold:** delete all characters in sequence
- ⁝≡ Show list of searched entries

B Keypad functional surfaces
- ⇧ Change to lowercase
- ⇪ Switch to the first capital letter, followed by lowercase letters
- ABC/ÄBB Switch to the language keypad
- 123 Switch to the numeric and character keypad
- 🌐 Show additional keypad languages
- ␣ Insert a space
- **Hold:** Show additional character variants
- < Move cursor to the left
- > Move cursor to the right
- OK Confirm the characters that have been entered

Numeric keypad

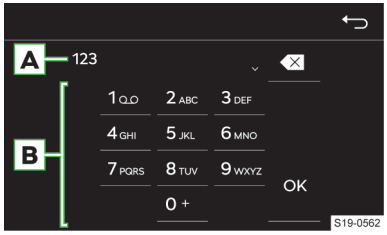

Keypad example

A Input line

- ▶ ⌫ Delete characters before the cursor
  - ▶ **Tap:** delete the last character
  - ▶ **Hold:** delete all characters

B Keypad functional surfaces

▶ OK Confirm the characters that have been entered

If context-sensitive, alphanumeric characters can be entered by holding a functional surface with a digit.

Operation

The Infotainment keypad is used to enter characters, letters and numbers.

The keypad will be **automatically displayed** when Infotainment prompts for characters.

Find
During the character input, a search for corresponding entries takes place.

The entry to be searched can be entered, including diacritics.

The keypad will only provide characters that match the stored entries.

› To **display the searched entries**, tap ☰.

Show additional keypad languages
To use the additional keypad languages, the desired languages must be set first.

› Tap 🌐 or repeatedly tap the flag symbol until the desired language keypad is displayed.

Further character variants
› Press and hold the sign with the symbol ⚙.
› Select the desired symbol.

Setting up additional keyboard languages

› Tap **MENU** > ⚙ > *Additional keypad languages*.

Voice control

Functionality

Voice control principle
Voice control works according to the principle of dialogue between the user and the Infotainment system.

The user says a voice command. The Infotainment system responds or executes the voice command.

Functional conditions

✓ Ignition is switched on.
✓ Infotainment is switched on.
✓ No telephone conversation can be held via Infotainment.

Operation

Voice control process
› To **turn on** voice control, press the button 🎙 on the multifunction steering wheel.

Or:

› Tap on **VOICE**.

After switching on, the 🎙 icon is displayed.

› Say a voice command.

During recognition of the voice command, the 🎙 icon is displayed.

The Infotainment system then executes the voice command or plays the message. During the message, the 🎙 icon is displayed.

After the execution of the voice command, voice control is switched off.

Correcting a voice command
› During voice command input, press the 🎙 button on the multifunction steering wheel and say a new voice command.

Stopping voice control
Stopping leaves more time for voice command input, e.g. for searching for a phone contact.

› Move your finger up or down over the Infotainment screen.

Or:

› Say the **"pause"** voice command.

Resuming stopped voice control
› Press the 🎙 button on the multifunction steering wheel.

Or:

› Tap on ⏸ in the Infotainment screen.

Stopping the played back message

› Press the button on the multifunction steering wheel.

Ending voice control

› Press the button on the multifunction steering wheel twice.

Or:

› Say the voice command **"cancel"** during voice command input.

Limitation

For some Infotainment languages, no voice control is available. The Infotainment system will indicate this.

The messages are generated by the Infotainment system. Flawless clarity (e.g. road or city name) cannot always be guaranteed.

You cannot use voice control while a phone call is in progress.

Settings

The following voice control functions are set in the menu **MENU** > > *Voice control*.

▸ Confirmation tones.

▸ Display of sample commands.

Self help

Starting acoustic help

› If the Infotainment system is expecting a voice command, say **"Help"**.

The **"Help"** voice command can be issued repeatedly for further tips on voice control.

Activate/deactivate the display of example voice commands in the Infotainment screen.

The system offers the option of displaying example voice commands after switching on the voice control in the Infotainment screen.

› To **turn on/off** **MENU** > > *voice control* > tap on *Example commands (Infotainment system)*.

Activate/deactivate display of example voice commands in the instrument cluster display

The system offers the option of displaying example voice commands after switching on the voice control in the Instrument cluster screen.

› To **turn on/off** **MENU** > > *voice control* > tap on *Example commands (Instrument cluster)*.

Radio

Overview


Display menu

› Tap **RADIO**.

Or:

› Tap **MENU** > .

Analogue and digital radio reception

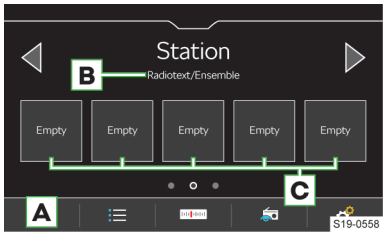

A Select frequency range

B Depending on the frequency range
FM: Radio text
DAB: Name of the station group

C Station buttons for preferred stations

List of available stations

Manual station search

Display information about the station (applies to DAB)

Settings

Infotainment supports digital radio reception in DAB and DAB+ formats.

List of available stations

› To **display**, tap .

Played station

★ Station stored on the presets

TP A traffic radio station is set

DAB signal is not available

The DAB station reception is not stable


To filter the FM stations into alphabetical order, tap according to group or genre.
The prerequisite for the filtering option is ensuring RDS and AF functions are activated.

Manual update of the station list

In the FM station list, information about the programme type and the type of the regional station can be displayed.

Operation

Select station

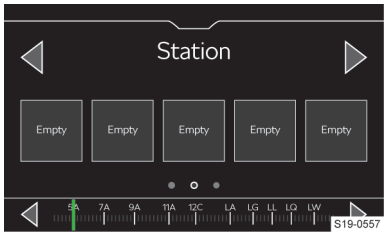

› Tap ◁ or ▷ at the top of the screen.

SCAN function
The function plays receivable stations of the selected frequency range in succession for a few seconds each.

› To **start automatic play** press ⚙ › *Scan* or the right rotary control ⊙.
› To **end automatic play** press SCAN or the right rotary control ⊙.

Find stations manually
› In the Radio main menu, tap ▭.
› To **search in sequence**, tap ◁ or ▷ next to the displayed frequency range scale.

Or:

› Hold down the scroll mark on the frequency range scale and move it to the desired value.

Or:

› Turn the right rotary control ⊙.

Limitation

▸ Infotainment supports digital radio reception in DAB and DAB+ formats.
▸ Parking garages, tunnels, tall buildings or mountains can restrict radio reception.
▸ In the rear side windows, there may be antennas for receiving the radio signal.

Covering the windows with foils or metal-coated stickers can impair the reception of the radio signal.

▸ The ŠKODA AUTO company does not assume any responsibility for the availability, correct function or broadcast information of the RDS service.

Settings

Save the station currently being listened to as a favourite from the Radio main menu
› Hold the desired station key for preferred stations until the station is stored.

Save station to favourites from the list of available stations
Applies to AM, FM and DAB frequency ranges.

› Hold the line with the name of the desired station.
› Tap the desired preset button.

Delete favourites
› In the **Radio** main menu , tap ⚙ › *Delete presets*.
› To delete **one** preset button for preferred stations, tap the desired station button and confirm the deletion.
› To delete **all** preset buttons for preferred stations, tap *All* and confirm the deletion.

Buttons ◁ ▷
Applies to AM, FM and DAB frequency ranges.

The variant for **changing stations** using buttons ◁ ▷ in the **Radio** main menu is set as follows.

› In the **Radio** main menu, tap ⚙ › *Arrow buttons:*.
› Choose the change variant.

Traffic reception (TP) for FM stations on/off
Applies to the FM frequency range.

› In the **Radio** main menu, tap ⚙ › *Traffic program (TP)*.

Switch traffic reception for DAB stations on/off
Applies to the DAB frequency range.

› In the **Radio** main menu, turn on menu item ⚙ › *Traffic Radio (TP)*.
› In the **Radio** main menu, tap ⚙ › *Advanced settings* › *DAB traffic programme announcements (TP)* on/off.

Assign the station logo from an external source
Applies to AM, FM and DAB frequency ranges.

Infotainment offers the option to assign logos from the pictures on an external source to the station buttons.

For station logos, images in jpg, gif, png, bmp format with a maximum resolution of 500x500 pixels can be used.

› In the main menu **Radio** tap on ⚙ › *Station logos* .
› Tap the desired station button.
› Select the external source with the logo.
› Find the desired logo and confirm.

The information for updating station logos is taken from the ŠKODA web pages.

www ***http://go.skoda.eu/updateportal***

Delete station logos
Applies to AM, FM and DAB frequency ranges.

› In the **Radio** main menu, tap ⚙ › *Station logos:*.

› To delete **a logo**, tap the desired preset button and confirm the deletion.
› To delete **all** logos, tap on *All* and confirm the deletion.

Activating / deactivating automatic station logo assignment
Applies to the FM and DAB frequency ranges.

When the function is switched on, a station logo from the Infotainment memory is assigned when the station is stored on a preset.

› In the **Radio** main menu, tap on ⚙ › *Advanced settings* › *Autostore station logos*.

Regional FM station logo
Applies to the FM frequency range.

Infotainment provides the option of using country-specific FM station logos.

› In the **Radio** main menu, tap on ⚙ › *Advanced settings* › *Region for station logo:*.
› Choose the country.

Turn on/off radio text reception
Applies to the FM and DAB frequency ranges.

When the function is switched on and station presets are displayed, detailed information about the broadcast content of the FM station being listened to, or the name of the station group for the DAB station, is displayed.

› In the **Radio** main menu, tap ⚙ › *Radio text*.

Switch automatic frequency control (AF) on/off
Applies to the FM frequency range.

When the function is switched on and the signal of the FM station currently being listened to is weak, Infotainment automatically sets the same station to a different frequency with a better signal.

› In the **Radio** main menu, tap on ⚙ › *Advanced settings* › *Automatic frequency control (AF)*.

Automatic change of frequency to a regionally linked FM station
Applies to the FM frequency range.

Infotainment provides the option of automatically switching to a regionally linked FM station in case of signal loss of the FM station being listened to.

› In the **Radio** main menu, tap on ⚙ › *Advanced settings* › *RDS Regional:*.
› Select one of the following menu items.

▶ *Fixed* - If there is a loss of signal, another station must be set manually.
▶ *Automatic* - automatic selection of the station with the best signal reception.

If reception is lost in the given region, Infotainment will automatically set another available region.

Switch RDS on/off
Applies to the FM frequency range.

The menu item is only available for some countries.

› In the **Radio** main menu, tap ⚙ › *Advanced settings* › *Radio Data System (RDS)*.

If the **RDS function is disabled**, the following menu items in **FM station** settings are not available.

▶ Traffic programme (TP).
▶ Radio text.
▶ RDS Regional.
▶ Automatic frequency change (AF).
▶ Regional station logo.

Switch additional DAB announcements on/off
Applies to the DAB frequency range.

When the function is switched on, other announcements are received as traffic announcements. For example, weather news, sports reports, financial news, etc.

› In the **Radio** main menu, tap on ⚙ › *Advanced settings* › *Other DAB announcements*.

Enable/disable automatic programme tracking of a DAB station
Applies to the DAB frequency range.

When the function is switched on and the DAB station is lost, Infotainment automatically changes to the same station with a better signal in a different DAB station group.

› In the **Radio** main menu, tap on ⚙ › *Advanced settings* › *DAB - DAB station tracking*.

Turn on/off automatic switching from a DAB station to the same FM station
Applies to the DAB frequency range.

When the function is switched on and the DAB station being listened to is lost, Infotainment automatically changes to the same FM station. The symbol (FM) is displayed after the station name.

When the corresponding DAB station can be received again, the station automatically changes from FM to DAB.

› In the main menu **Radio** tap on ⚙ › *Advanced settings* › *Automatic DAB - FM switching* .

Activating/deactivating reception of DAB transmitter in the L band
In some countries, the DAB radio reception is only available as a so-called LBand.

› In the **Radio** main menu, tap ⚙ › *Advanced settings* › *L-Band:*.

ⓘ If there is no DAB radio reception available in the L-band in your country, we recommend turning the L-band reception off. The DAB channel scan is therefore faster.

Media

What you should be mindful of

- Do not save any important data or that which has not been backed up on the connected audio sources. ŠKODA assumes no responsibility for lost or damaged files or connected audio sources.
- When changing or connecting an audio source, this may cause sudden changes in volume. Reduce the volume before changing or connecting an audio source.
- When connecting an audio source, the source information messages can be displayed. These messages must be observed and, if necessary, confirmed.
- The national copyright laws that apply in your country must be observed.

Overview

Display menu

› Tap **MEDIA**.

Or:

› Tap **MENU** > ♫.




A Select source

Manage files / multimedia database

Settings

Operation

Operation - Basics

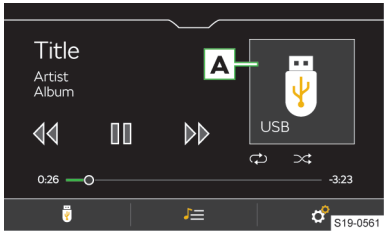

A Album image / symbol of the connected source
Tap: display available albums

Tap: start playback

Tap: pause

Within 3 seconds of starting playback, tap: play the previous song

After 3 seconds from the start of playback, tap to play the current title from the beginning

Hold: fast rewind within the title

Tap: play the next song

Hold: fast forward within the title

Movement within the title is also possible by dragging the finger over the timeline.

Extended operation

Turn repeat playback of the current track on/off

Turn repeat playback of the current album/folder on/off

Turn random playback of the current album/folder on/off

Limitation

NOTICE

The availability of some media operation functions is dependent on the connected source and the software being used, e.g. Bluetooth®.

Settings

Turn title playback including subfolders on/off

› In the **Media** main menu, tap on ⚙ > *Mix/Repeat including subfolders*.

Traffic

› To **turn on/off** the traffic monitoring during the playback of media files, go to the **Media** main menu and tap on ⚙ > *Traffic programme (TP)*.

Safely disconnect the connected device

NOTICE

Risk of damage to the data on the connected device! To safely disconnect/remove the device, proceed as follows.

› In the main menu, tap **Media** ⚙ > *Remove safely:* .

› Select the desired device.

› Disconnect/remove the device.

If it is not possible to safely disconnect the device, switch off the Infotainment and disconnect the device.

Bluetooth® player

Infotainment allows audio files of a connected Bluetooth® player to play using the A2DP and AVRCP audio profile.

With Infotainment, multiple devices can be paired using Bluetooth®, but only one of them can be used as a Bluetooth® player.

› For **connecting the Bluetooth® player**, pair and connect the device via Bluetooth®.
› In the **Media** main menu , tap on ⚙ › *Bluetooth* › *paired devices*.
› In the list, choose the device with the symbol ♫.

ⓘ If a device is connected to Infotainment using Apple CarPlay or Android Auto, then it cannot be connected using Bluetooth®.

SD card

⚠ **NOTICE**
Risk of damaging the SD card reader!
▸ Do not use SD cards with a broken slide for write protection.



› To **insert** the SD card, with the bevelled corner to the bottom, push into the slot in the external module until it snaps into place.
› To **remove**, first disconnect the SD card safely. To do so, in the main menu tap **Media** ⚙ › *Remove safely:* and select the SD card.
› Press on the inserted SD memory card.

The SD card moves to the eject position.

⚠ **NOTICE**
When using an SD card with an adapter, vehicle vibrations might cause the card to fall out of the adapter.

USB device

› To **connect**, insert the USB device into the appropriate port.

Use USB ports that support data transfer to play audio files.

› To **disconnect** disconnect the USB device first. To do so, in the main menu tap **Media** ⚙ › *Remove safely:* and select the USB device.
› Disconnect the USB device.

ⓘ A USB device can be connected directly to the USB port or via a connection cable.
We recommend that you use extension cords from ŠKODA original accessories.
USB extension cables or reducers can impair the playback function of the connected device.

Load USB audio source
After connecting the USB device, charging will start automatically when the following conditions are met.

✓ The ignition is switched on.
✓ The USB device allows charging.

The charging efficiency can be different compared to the charging from the usual mains power supply.

Depending on the type of the connected USB device and the frequency of use, the charging current may not be sufficient to charge the battery of the connected device.

Some connected audio sources may not be recognised and cannot be charged.

Supported sources and files

Supported sources

Source	Interface	Type	Specification	File system
SD card	SD card reader	Standard size	SD SDHC SDXC	FAT16 FAT32 exFAT NTFS
USB	USB 1.x; 2.x 3.x or higher with USB 2.x support	MSC	USB stick	
			HDD (without special software)	
			USB devices that use the USB mass storage support protocol	
		MTP	Devices running the Android or Windows Phone operating system that support the Media Transfer Protocol	
		Apple	Devices with an iOS operating system	HFS+
Bluetooth® player	Bluetooth®	-	Bluetooth® protocols A2DP and AVRCP (1.0 - 1.5)	-

The GPT standards (GUID partition table) method structured audio sources are not supported by Infotainment.
Viewing images on the Infotainment screen is not supported by connected Apple devices.

Mobile device compatibility
It is possible to check the ŠKODA web pages to see if Infotainment is compatible with the selected mobile device being tested. This check is carried out by using the following reference or by reading the QR code.

http://go.skoda.eu/compatibility

All information given is incidental and serves as information.

The ŠKODA AUTO company cannot guarantee full functionality and compatibility, e.g. due to a software update of the Infotainment and the mobile devices.

Supported audio files

Compression format	Codec type	File extension	Max. bit rate [kbps]	Max. sampling rate [kHz]	Multi channels
MPEG	MPEG 1 Layer 3	mp3	32 - 320	32, 44, 48	Mono, dual mono, Stereo, Joint Stereo
	MPEG 2 Layer 3	mp3	8 - 160	16, 22, 24	Mono, Stereo, Joint Stereo
	MPEG 2.5 Layer 3			8, 11, 12	
WMA	Windows Media Audio 9 and 9.1	wma	8 - 384	8, 11, 12, 16, 22, 32, 44, 48	Mono, stereo, Joint stereo
	Windows Media Audio 9.2		8 - 320		
	Windows Media Audio 10		8 - 768	32, 44, 48, 96	

Compression format	Codec type	File extension	Max. bit rate [kbps]	Max. sampling rate [kHz]	Multi channels
FLAC	FLAC	flac	defined by the format Approx. 5.5 Mbps	8, 11, 12, 16, 22, 24, 32, 44, 48, 64, 88, 96	Mono, stereo, 5.1, 7.1
OGG-Vorbis	OGC-Vorbis	ogg	defined by the format Approx. 5.5 Mbps	8, 11, 12, 16, 22, 24, 32, 44, 48	Mono, Stereo
ADTS	AAC LC	aac	16 - 400	22, 24, 32, 44, 48	Mono, Stereo
	AAC HE			16, 22, 24, 32, 44, 48	
	AAC HEv2				
RIFF	WAV	wav	64 - 3072	8, 11, 12, 16, 22, 24, 32, 44, 48, 96	Mono, Stereo

Files that are protected by **DRM**- and **iTunes®** methods are not supported by Infotainment.

Supported playlists

Codec type	File extension
M3U	m3u
M3U8	m3u8
PLS	pls
WPL	wpl
ASX	asx
PLA	pls

Images

Overview

Display menu

› Tap MENU > .




A Select source

Manage files

Settings

Operation

Touch operation

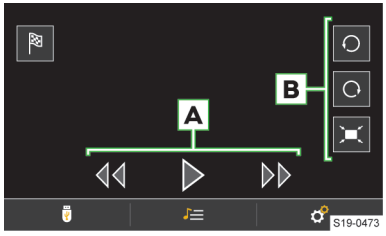

A View images

- ▶ Show the next image
- ▶ Show the previous image
- ▶ Start slideshow
- ▶ Stop slideshow


B View image

- ▶ Turn left
- ▶ Turn right
- ▶ Show in output size


Guidance for GPS coordinates

The functional area is displayed if the image contains information about GPS.


Gesture control

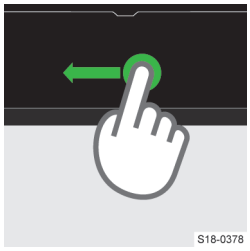

▶ Show the next image.

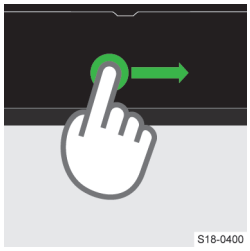


▶ Show the previous image.

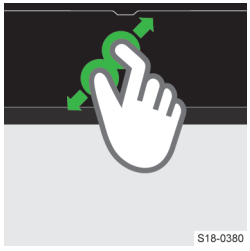

▶ Zoom in.



▶ Zoom out.

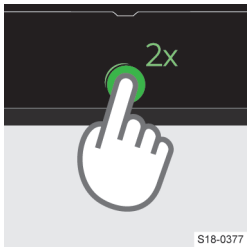

▶ Maximize image / display original image size.

Settings

The following Infotainment functions are set in the MENU > > menu.

▶ Display image size.
▶ Display image duration during the slideshow.
▶ Slideshow repeat.

Supported sources and files

Supported sources

Source	Interface	Specification	File system
SD card	SD card reader	Standard size SD SDHC SDXC	FAT16 FAT32 exFAT NTFS
USB	USB 1.x; 2.x 3.x or higher with USB 2.x support	USB stick	
		HDD (without special software)	

Supported files

Codec type	File extension	Max. resolution [Mpx]
BMP	bmp	4
JPG; JPEG	jpg; jpeg	4 (Progressive Mode) 64
GIF	gif	4
PNG	png	4

The maximum supported image size is 20 MB.

Media Command


Functionality

The Media Commandfunction allows playback of audio files or videos in up to two tablets that are connected to Infotainment via Wi-Fi, to control Infotainment.


Overview

Display menu

› Tap MENU > .

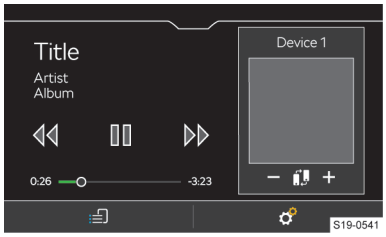

Menu for a tablet

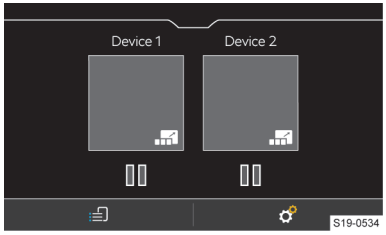

Menu for two tablets

Choice of connected tablet

Settings

Functional conditions

✓ Data transfer of Infotainment is switched on.

Switching the transmission on/off takes place in the **MENU** > > *Data transmission mobile devices* > *Enable data transfer for ŠKODA apps* menu item.

✓ Infotainment operation via the application is enabled.

The adjustment of the operation takes place in the **MENU** > > *Data transmission mobile devices* > *Operation through apps:* menu item.

One of the following menu items can be selected.

- *Deactivate* - the operation is deactivated.
- *Confirm* - Operation requires confirmation at the start of the application.
- *Allow* - the operation requires no confirmation.

✓ In the tablet(s), the ŠKODA Media Command application is installed.

✓ The tablet(s) are connected to the Infotainment hotspot.

Operation

Start playback

› For **selection of the playback source** in the main menu, tap and select the source tablet.

› For **playback** select the category and then the title.

If two tablets are connected, the title playback starts in the two tablets at the same time.

Playback control

- **Tap:** Start playback
- **Tap:** Pause
- **Within 3 seconds of starting playback, tap:** play the previous song
- **After 3 seconds, tap from the start of playback:** to play the current title from the beginning
- **Tap:** play the next song
- Increase the audio volume of the tablet
- Decrease the audio volume of the tablet
- View control options for two tablets
- View control options for a tablet
- Mute the tablet
- Unmute the tablet

Movement within the title is also possible by dragging a finger over the timeline.

Functional limitation

Some tablet types allow playback of audio files or videos by an inserted SD card in the tablet. Playback of these tracks may be limited.

If several devices are connected to the Infotainment system by means of Wi-Fi, there is the danger of Wi-Fi overloading and thus also the inability of Media Command to function properly.

High-definition video playback may cause playback problems or problems connecting the tablets to the Infotainment system.

Settings

Application ŠKODA Media Command

The application can be downloaded to the mobile device after reading the following QR code or by referring to the website with information about the mobile applications ŠKODA.

http://go.skoda.eu/service-app

Connect tablet with Infotainment hotspot

› Turn on the ignition.

› Turn on the Infotainment's Wi-Fi hotspot in the menu item **MENU** > > *Wi-Fi* > *Mobile Hotspot* > *Mobile Hotspot*.

› Turn on Wi-Fi on the tablet.

› In the list of available Wi-Fi devices, look for Infotainment Wi-Fi.

The name of the Infotainment hotspot refers to the menu item **MENU** > > *Wi-Fi* > *Mobile Hotspot* > *Hotspot Settings (Wi-Fi)* > *SSID:*.

› Select the Infotainment hotspot and enter the required password.

The password for connecting to the Infotainment hotspot is taken from the menu item **MENU** > ⚙ > *Wi-Fi* > *Mobile Hotspot* > *Hotspot Settings (Wi-Fi)* > *Network key:*.

› Confirm the connection.
› In the tablet, start the application ŠKODA Media Command.

Supported files

Format	Codec type	Android operating system	iOS operating system
Video	MPEG-4 Part 2	✓	✓
	MPEG-4 Part 10 (H264)	✓	✓
	Xvid	✓	×
Audio	MPEG-1; 2 and 2.5 Layer 3 (mp3)	✓	✓
	aac	✓ (4,1+)	✓
	m4a	✓ (4,1+)	✓
	ogg	✓	×
	flac	✓	×
	wav	✓ (4,1+)	✓

Mobile device management

Overview

Mobile device management

› In the **Telephone** main menu , tap on the functional surface ⚙ > *Bluetooth* > *paired devices*.

In the list of paired mobile devices, the following symbols may appear for the individual devices.

- **Grey icon** - the device can be connected as a telephone.
  Green icon - the device is connected as a telephone.
- **Grey icon** - the device can be connected as a Bluetooth® player.
  White icon - the device is connected as a Bluetooth® player.

Possible functions of the connected mobile device

The functions of a device connected via over the **HFP** Bluetooth profile depends on the following connection types.

First device Main phone	Second device Additional phone
incoming / outgoing calls SMS Telephone contacts Bluetooth® player	incoming calls Bluetooth® player

With Infotainment only **a mobile device** can be connected as a Bluetooth® player.

Mobile device and application limitations

Availability of features
The availability of certain features depends on the type of mobile device, as well as that of the applications installed.

Connection restrictions
- With Infotainment, a max. of 20 mobile devices are paired.
- The range of the connection of the mobile device to Infotainment is limited to the passenger compartment.
- After reaching the maximum number, the pairing of the next mobile device will replace that of the device that has not been used for the longest period of time.

Mobile device compatibility
It is possible to check the ŠKODA web pages to see if Infotainment is compatible with the selected mobile device being tested. This check is carried out by using the following reference or by reading the QR code.

http://go.skoda.eu/compatibility

All information given is incidental and serves as information.

The ŠKODA AUTO company cannot guarantee full functionality and compatibility, e.g. due to a software update of the Infotainment and the mobile devices.

Bluetooth® compatibility of mobile devices
Due to the large number of mobile devices, it is not possible to guarantee total Bluetooth® compatibility with Infotainment. Bluetooth® compatibility depends on the Bluetooth® version as well as the implementation of Bluetooth® protocols by the manufacturer of the mobile device.

Applications in mobile devices
Mobile devices can be used to install applications that allow you to view additional information on the Infotainment screen, or to operate the Infotainment system.

Due to the variety of applications, as well as their ongoing development, the available applications may not function on all mobile devices. ŠKODA AUTO assumes no liability for their proper functioning.

The scope of available applications and their functionality is dependent on the type of Infotainment, as well as the vehicle and country.

Information about the ŠKODA applications
Detailed information on the ŠKODA applications can be found on the website after reading the following QR code or using the link.

http://go.skoda.eu/mobile-apps

Connection set-up

Connect a mobile device to Infotainment
› Turn on the ignition.
› Turn on the Bluetooth® on the mobile device.
› Turn on the Bluetooth® on Infotainment MENU > > *Bluetooth* > *Bluetooth*.
› Turn on the Bluetooth® visibility of the Infotainment MENU > > *Bluetooth* > *Visibility:* > *Visible*.
› Find available Bluetooth® devices in the mobile device.
› Select the Infotainment Bluetooth® unit.

The name of the unit can be found by tapping MENU > > *Bluetooth* > *Name:*.

› Confirm the PIN; enter it if necessary and then confirm.

The mobile device is connected to the Infotainment or just paired, depending on the number of devices that are already connected.

Connect Infotainment to a non-paired mobile device
› Turn on the ignition.
› Turn on the Bluetooth® on the mobile device.
› Turn on the Bluetooth® on Infotainment MENU > > *Bluetooth* > *Bluetooth*.
› Tap on MENU > > *Bluetooth* > *Search for devices*.
› Ensure the visibility of the device to be connected.
› Select the desired device from the list of Bluetooth® devices.
› Confirm the PIN; enter it if necessary and then confirm.
› If two devices are connected to the Infotainment, select the device to be replaced.

Connect Infotainment to an already paired mobile device
The connection with an already paired mobile device is made automatically after switching on the ignition; if necessary the device can be connected manually as follows.

› Turn on the ignition.
› Turn on the Bluetooth® on the mobile device.
› Turn on the Infotainment Bluetooth® MENU > > *Bluetooth* > *Bluetooth* .

› **MENU** > ⚙ > *Bluetooth* > *Paired devices* .
› In the device list, select the desired device and the Bluetooth® profile.
› Confirm the PIN; enter it if necessary and then confirm.
› If two devices are connected to the Infotainment, select the device to be replaced.

Disconnect from a mobile device
› Tap **MENU** > ⚙ > *Bluetooth* > *Paired devices*.
› Tap on the Bluetooth® profile icon of the desired mobile device.

Delete a paired mobile device
› Tap **MENU** > ⚙ > *Bluetooth* > *Paired devices*.
› To **delete a** mobile device, tap 🗑 and confirm the deletion.
› To **delete all** mobile devices, tap on *Delete all* and confirm the deletion.

Telephone


Overview

Display menu
› Tap **PHONE**.

Or:

› Tap **MENU** > ✓.

ⓘ If the menu **Telephone** is not displayed, check whether the mobile device is connected.

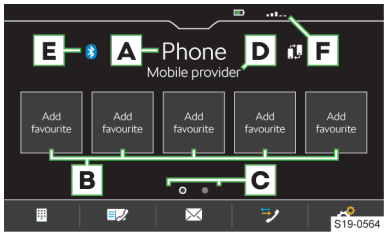

A Name of the connected phone
▸ **Tap:** View the list of previously connected phones
B Station buttons for preferred contacts
C Select storage group of the preferred contacts
D Name of the telephone service provider
▸ If the symbol ▷ is displayed in front of the name, roaming is active.
E Symbol for the connection type
F Status symbols of the phone
Change the main phone to the extension telephone
Enter the phone number
Contact list
Text messages
Call lists
Settings

Conditions for connecting a telephone with Infotainment

✓ The ignition is switched on.
✓ The Bluetooth® function of the Infotainment and the telephone needs to be switched on.

The Bluetooth® function of the Infotainment is switched on in the menu item **MENU** > ⚙ > *Bluetooth* > *Bluetooth*.

✓ Visibility of the Infotainment is switched on.

The visibility of the Infotainment is switched on in the menu item **MENU** > ⚙ > *Bluetooth* > *Visibility:*.> *Visible*.

✓ The telephone is within signal range of the Infotainment's Bluetooth® unit.
✓ The telephone is compatible with Infotainment.
✓ Through Infotainment, no mobile device can be connected using Apple CarPlay.

Telephone operation

Enter telephone number
› In the **Telephone** main menu, tap ⠿.
› Enter the telephone number using the numeric keypad that is displayed.

ⓘ The displayed numeric keypad can also be used for searching for contacts.
If, for example, the digits 32 are entered, contacts with the letter sequence DA, FA, EB etc. are displayed next to the numeric keypad.

List of telephone contacts
The list of telephone contacts is imported from the connected main telephone.

› To **display** the contact list in the **telephone** main menu, tap 📇.
› To **find** details within the list, tap *Find*.
› Enter the details you wish to find.
› To **establish a connection** with a contact, tap the functional area showing the desired contact.

If a contact has multiple telephone numbers, select the telephone number from the displayed list.

› To display the **details** for a contact, tap >.

Establish a connection to the voice mailbox number
› In the **Telephone** main menu, tap ⠿ > ⌾.

Telephone conversation
Depending on the context of the telephone conversation, the following functions can be selected.

End connection / reject incoming call / end call
Answer an incoming call / return to the held call
Switch the ringer off / on
Hold a call
Switch the microphone off / on
Show details of the caller
Set up a conference call

› To **switch the call tone from the speakers to the telephone**, go to the **telephone** main menu and tap on > *hands-free*.

› To **switch the call tone from the telephone to the speakers**, tap .

Conference call
A conference call is a joint telephone conversation with a minimum of three and a maximum of six participants.

› Make the next call during an ongoing conversation/ conference.

Or:

› Accept a new incoming call by tapping the function area .

› To **start** a conference call, tap on the functional area .

During an ongoing conference call, the following functions can be selected depending on the context.

Hold the conference call and leave temporarily (the conference will continue in the background)
Return to the conference being held
Switch the microphone off / on
End the conference
Show details of the conference call

In the details of the conference call, depending on the connected telephone, the following functions can be selected.

Show details of the conference call participants
End conversation with the conference call participant
Conversation with a participant outside of the conference call

Send a text message
› In the **Telephone** main menu, tap > *New text message*.
› Write a text message and confirm; a view of the message is displayed.

The message can be edited when the text area within the view is tapped.

› Consult or select the recipient of the message, if necessary tap to enter the phone number.
› Add more recipients or confirm selected recipients.
› Tap on .

Display received text messages
› In the **Telephone** main menu, tap > *E-mails* .
› To **display the Message**, select the desired message.

The message content and the following menu with functions is displayed.

Read the text message using the generated Infotainment voice.
Display the menu with the following functions of an accepted message.
Option to answer the message by means of a template.
Delete message.
Recognise phone numbers in the message.
Forward message, with the option to edit the message before sending.
Reply to the sender by sending a message.

Settings of the Infotainment telephone functions

Manage preset buttons for preferred contacts
› To **save** the desired preset button, press and hold.
› Select a contact from the displayed list.
› If the contact contains multiple telephone numbers, choose the desired telephone number.
› To **delete** tap on **Telephone** > *User profile* > *Manage favourites* in the main menu.
› To delete **one** preset, tap on the list entry and confirm the deletion.

Or:

› To delete **all** presets, tap on *Delete all* and confirm the deletion.

Import telephone contacts
After first connecting the main telephone with Infotainment, telephone contacts will start to be imported into the Infotainment memory.

Infotainment can import up to 2000 telephone contacts together with contact pictures. Each contact can include max. 5 telephone numbers.

Depending on the type of telephone, import confirmation may be required.

Update telephone contacts
When re-connecting the telephone with Infotainment, an **automatic** update of the list is carried out.

› For a **manual** update of the list in the **telephone** main menu, tap on > *User profile* > *Import contacts*.

Show pictures on phone contacts
› In the **Telephone** main menu, tap > *User profile* > *Show pictures for contacts*.

Sort contacts in the phone book

› In the **Telephone** main menu, tap on ⚙ > *User profile* > *Sort by:*.

› Select the type by which to sort.

Ringer

Some phones do not allow the use of the telephone ringtone; instead, the Infotainment ringtone is used.

› To **set the Infotainment ringer** in the **Telephone** main menu, tap on ⚙ > *User profile* > *Select ringtone*.

› Select the ringtone.

Number for the voice mailbox

› To **set the voice mailbox number** in the **Telephone** main menu, tap on ⚙ > *User profile*> *Mailbox number:*.

› Enter the number of the voice mailbox.

Conference calls

› To **enable/disable the option for conference call setup** in the **phone** main menu, tap ⚙ > *conference*.

Wi-Fi

Functionality


Wi-Fi can be used to connect to the Internet or for operating the Infotainment system using an application in the connected device (e.g. ŠKODA Media Command).

The Infotainment hotspot can connect up to 8 mobile devices. The Infotainment can be connected to another hotspot simultaneously.

Overview of available hotspots

Show available hotspots

› MENU > ⚙ > *Wi-Fi* > *Wi-Fi* .

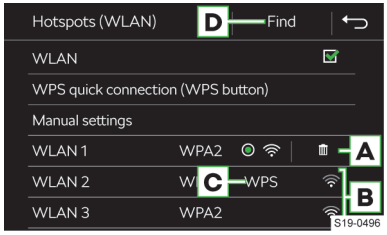

A Previously connected hotspots

B Available hotspots

C The hotspot supports the WPS connection

D Update the list of available hotspots

⊙ Currently connected hotspot

🗑 Delete information about the hotspot connection

Wi-Fi signal strength of the hotspot

The Wi-Fi signal from the hotspot is not available

Functional restriction

The Infotainment system can only be connected to a hotspot with WPA2 access protection.

Settings

Connect a mobile device to the Infotainment hotspot

› Turn on the ignition.

› Turn on the Infotainment's Wi-Fi hotspot in the menu item MENU > ⚙ > *Wi-Fi* > *Mobile Hotspot* > *Mobile Hotspot*.

› Turn on the Wi-Fi on the mobile device.

› In the list of available Wi-Fi devices, look for Infotainment Wi-Fi.

The name of the Infotainment hotspot refers to the menu item MENU > ⚙ > *Wi-Fi* > *Mobile Hotspot* > *Hotspot Settings (Wi-Fi)* > *SSID:*.

› Select the Infotainment hotspot and enter the required password.

The password for connecting to the Infotainment hotspot is taken from the menu item MENU > ⚙ > *Wi-Fi* > *Mobile Hotspot* > *Hotspot Settings (Wi-Fi)* > *Network key:*

› Confirm the connection.

Connect Infotainment to the mobile device hotspot

› Turn on the ignition.

› Turn on the Infotainment's Wi-Fi unit in the menu item MENU > ⚙ > *Wi-Fi* > *Wi-Fi:* > *Wi-Fi*.

› Select the desired hotspot in the list of available hotspots.

› Enter the password for connecting to mobile devices.

ⓘ Infotainment stores passwords for previously connected hotspots.

Security level of the Infotainment hotspot

The security level is set at *WPA2* and cannot be changed.

Change the name of the Infotainment hotspot

› Tap MENU > ⚙ > *Wi-Fi* > *Mobile Hotspot* > *Hotspot Settings (Wi-Fi)* > *SSID:*.

› Enter the name and confirm.

› Tap *Save*.

Change password for connection to Infotainment hotspot

The password must be a minimum of 8 and a maximum of 63 characters.

› Tap MENU > ⚙ > *Wi-Fi* > *Mobile Hotspot* > *Hotspot Settings (Wi-Fi)* > *Network key:*.

› Enter the password and confirm.

› Tap *Save*.

Quick connection of a mobile device to the Infotainment hotspot

› Turn on the ignition.
› Turn on the Infotainment's Wi-Fi hotspot in the menu item MENU > > *Wi-Fi* > *Mobile Hotspot* > *Mobile Hotspot*.
› Tap *WPS quick connection (WPS button)*.
› In the mobile device, switch on the option for connection via WPS.
› Wait for the connection to be established and, if necessary, confirm the respective messages.

Quick connection of Infotainment to the mobile device hotspot

› Turn on the ignition.
› On the mobile device, turn on the hotspot, its visibility, and the option for WPS connection.
› Turn on the Infotainment's Wi-Fi unit in the menu item MENU > > *Wi-Fi* > *Wi-Fi:* > *Wi-Fi*.
› Tap *WPS quick connection (WPS button)*.
› Wait for the connection to be established and, if necessary, confirm the respective messages.

Manual connection of Infotainment to the mobile device hotspot

› Set the hotspot backup of the mobile device to WPA2.
› Turn on the ignition.
› Turn on the Infotainment's Wi-Fi unit in the menu item MENU > > *Wi-Fi* > *Wi-Fi:* > *Wi-Fi*.
› Tap *Manual settings*.
› Enter the name of the hotspot to connect to and the access password.
› Tap *Connect*.
› Wait for the connection to be established and, if necessary, confirm the respective messages.

Tips for a perfect connection

▶ Keep only the hotspot to be connected switched on and switch off the other hotspots.
▶ Delete unused hotspots. This shortens the time required to establish a connection.
▶ For some hotspots, the connection takes longer, so wait for the connection to finish.
▶ If the connection is interrupted, recheck the available hotspots and repeat the connection.

Data connection

Settings

Mobile data

Mobile data for the data connection may be subject to charges according to the mobile network operator's tariff conditions.

Types of data connection setup

▶ By connecting the Infotainment with the **external hotspot** via Wi-Fi.
▶ Using the **USB device** CarStick.

Connecting using the USB device CarStick

The CarStick USB device can be purchased from the ŠKODA original accessories.

› Insert a SIM card with activated data services into the CarStick.

The required size of the SIM card and the correct procedure when inserting can be found in the instructions enclosed with the CarStick device.

› Turn on the ignition and switch on Infotainment.
› Insert the CarStick into the USB input at the front.
› Wait approximately one minute until a light other than the red indicator light on CarStick is permanently lit.

When the red indicator light illuminates, remove the CarStick and insert again.

› If the SIM card is protected by a PIN code, then the PIN code of the SIM card must be entered.
› Confirm the entered PIN code by tapping OK.

Or:

› Tap to save and confirm the PIN code.
› If necessary, set the required network of the data service provider.

NOTICE

If a SIM card is incorrectly sized or if a SIM card is inserted in the wrong direction, there is a risk of damage to the CarStick USB device.

Set network parameters

› MENU > > *Tap network* .
› Set the desired parameters.

Contact the data service provider for precise parameters for the network setting.

SmartLink

Functionality

SmartLink offers the ability to display and operate certified applications from a connected mobile device in the Infotainment screen.

Certification may be conditional upon the use of the latest update to the particular SmartLink application.

Applications include, for example, apps for route guidance, telephoning, listening to music, etc.

Mobile devices can be connected via a USB cable.

Supported connection types

SmartLink supports the following connection types.

▶ Android Auto.

▸ Apple CarPlay.
▸ MirrorLink.

Overview of the SmartLink connection

Display menu

› Tap **APP**.


Or:

› Tap **MENU** > SmartLink.




A Previously connected device
B Currently connection device
ⓘ Display information about SmartLink
⊗ Disconnection of the active connection
Disconnection of the active connection
Settings in SmartLink menu

Android Auto

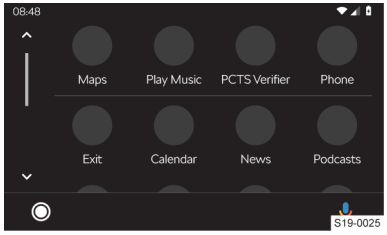

○ Overview of running applications, phone calls, received text messages and the like.
Switching on voice control (Google Voice)


Apple CarPlay

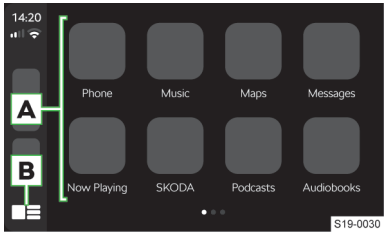

A List of available applications
B Depending on the duration of operation:

▸ **Tap:** Return to the Apple CarPlay main menu
▸ **Hold:** Turn on voice control (Siri)

MirrorLink

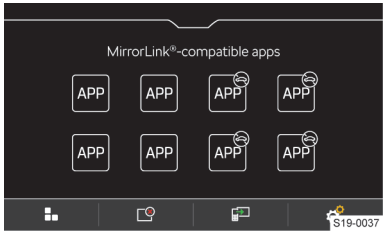

It is not possible to operate the application while driving
Return to the SmartLink main menu
List of running applications
Display the last running application in the connected mobile device
Settings

Connection conditions

General connection conditions

✓ The mobile device supports the following SmartLink connection types: Android Auto. Apple CarPlay and MirrorLink.
✓ Mobile devices, as well as the type of SmartLinkconnection, are supported in the respective market.
✓ Some connected mobile devices require the mobile device to be “unlocked”.

Conditions for Android Auto

✓ The device to be connected must have Android AutoSupport.

A list of devices, supported regions and applications that the Android Auto connection supports can be found on the websites of Google Inc..

✓ The Android Auto application needs to be installed on the mobile device.
✓ Some applications require the data connection in the mobile device to be turned on.

Conditions for Apple CarPlay

✓ The device to be connected must have Apple CarPlaySupport.

A list of devices, supported regions and applications that the Apple CarPlay connection supports can be found on the websites of Apple Inc..

✓ Siri voice control is on.
✓ The data connection is switched on in the mobile device.

Conditions for MirrorLink

✓ The device to be connected must have MirrorLinkSupport.

A list of devices and applications that the MirrorLink connection supports can be found on the websites of Car Connectivity Consorcium®.

✓ The MirrorLink application needs to be installed on the mobile device.

✓ Some applications require the data connection in the connected mobile device to be turned on.

Operation

Operation of the running MirrorLink application

› To display the following operation surfaces, press the right rotary control ⊙.

Display of control surfaces at the bottom
Display of control surfaces at the top
Return to the MirrorLink main menu

Limitation

Restriction of SmartLink applications while driving

For safety reasons, operation of some SmartLinkapplications while driving is not possible or is restricted.

Functionality restriction of Infotainment with an Android Auto connection

▶ For the duration of the connection, the external device cannot be used as an audio source in the **Media** menu.

▶ By connecting the device, all currently connected Bluetooth® devices will be disconnected and the device will automatically be connected as the main telephone.

▶ For the duration of the connection, no other Bluetooth® devices can be connected to the Infotainment system.

▶ If route guidance is taking place at this moment in Infotainment, then there is the option to start the route guidance in the Android Auto application. And vice versa, if route guidance is currently taking place in the Android Auto application, then there is the possibility that this will be terminated by the start of route guidance by the Infotainment system.

Functionality restriction of Infotainment with an Apple CarPlay connection

▶ For the duration of the connection, the external device cannot be used as an audio source in the **Media** menu.

▶ Connecting the device disconnects all currently connected Bluetooth® devices.

▶ For the duration of the connection, no Bluetooth® devices can be connected to the Infotainment system.

▶ If route guidance is taking place at this moment in Infotainment, then there is the option to start the route guidance in the Apple CarPlay application. And vice versa, if route guidance is currently taking place in the Apple CarPlay application, then there is the possibility that this will be terminated by the start of route guidance by the Infotainment system.

Functionality restriction of Infotainment with an MirrorLink connection

▶ For the duration of the connection, the external device cannot be used as an audio source in the **Media** menu.

▶ If you wish to use the device to be connected in the **Telephone** menu, the device must be paired with and connected to the Infotainment system by Bluetooth® before establishing the MirrorLink connection.

Settings

Apple CarPlay - Connection via USB

› Turn on the Infotainment.
› Turn on the mobile device.
› Connect the mobile device to the front USB input using a cable.
› Choose to connect via Apple CarPlay.

Apple CarPlay – Disconnection

› In the Apple CarPlay main menu, tap on the “ŠKODA” functional area.
› Tap on ⊗.

Android Auto - Connection via USB

› Turn on the Infotainment.
› Turn on the mobile device.
› Connect the mobile device to the front USB input using a cable.
› Choose to connect via Android Auto.

Android Auto - Disconnection

› In the main menu of Android Auto ☺ › tap on “Return to ŠKODA”.
› Tap on ⊗.

MirrorLink - Connection via USB

› Turn on the Infotainment.
› Turn on the mobile device.
› Connect the mobile device to the front USB input using a cable.
› Choose to connect through MirrorLink.

MirrorLink - Disconnection

› In the MirrorLink main menu, tap ▪▪.

› Tap on ⊗.

Change to another device / connection type
Infotainment allows you to switch between currently connected devices and the connection type.

› Tap on MENU > SmartLink.
› Select the desired device or connection type.

Navigation

Navigation announcements

Infotainment is guided by means of graphic driving recommendations and navigation announcements.

The navigation announcements are generated by the Infotainment system. It cannot be guaranteed that the announcements will always be understood, e.g. street or city names.

Repeat the last navigation announcement
› Tap 🔊 > ↩.

Switch off navigation announcements
› Tap 🔊 > 🔇.

Set navigation announcements
› In main menu **Navigation**, tap ⚙ > *Navigation announcements* .


Navigation overviews

Display menu
› Tap NAV.

Or:

› Tap MENU > ➤.

Map overview

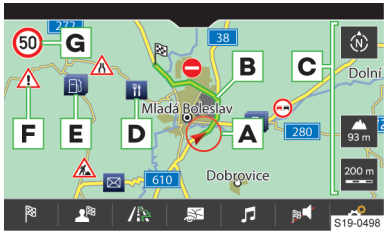

A Vehicle position
B Route
C Functional surface for the operation of the map display
D Functional surface of the POI
E Functional surface of the POI list
F Road signs for the affected section of the route
G Information on the maximum permitted speed

Display the following menu depending on the context

There is no route guidance - search / enter a new destination

Route guidance is ongoing
- ▸ Show route plan.
- ▸ Set traffic obstruction manually.
- ▸ Search / enter destination.
- ▸ End route guidance.

Show the following menu
- ▸ Save current vehicle position as a flag target.
- ▸ Show list of saved routes.
- ▸ Show list of saved destinations.
- ▸ Show list of recent destinations.
- ▸ Route guidance to home address.

POI search

Map display settings


Display for navigation announcement

Settings

Symbols shown on the map


Destination position
Intermediate destination position
Location of home address
★ Favourite position

Map display options

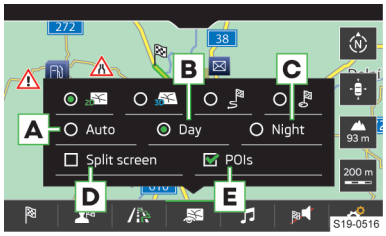

A Automatic map display in day / night mode, depending on the vehicle lighting currently switched on
B Daytime map display
C Night-time map display
D Enable/disable the additional window display.
E Switching the display of selected POI categories on / off

Map scale

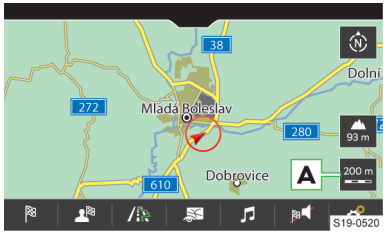

It is possible to change the map scale manually or to switch on the automatic scale change.

› To **display the control surfaces** to change the map scale, tap A.

Types of manual scaling

› Touch the screen with two fingers and pull them apart or close them together.

Or:

› Rotate the controller.

Switching the automatic scale change on / off

If the automatic scale is active, the map scale changes automatically, depending on the type of road you are driving and the manoeuvre you are about to perform.

The automatic scale is only active as long as the map is centred on the vehicle position.

› To **turn on navigation** in the main menu, tap --- › .

The functional surface is highlighted in green.

› To **turn off navigation** in the main menu, tap › .

The functional area is shown in white.


The turning off occurs likewise when the map is moved or the map scale is changed manually.

Map view in reduced scale

The map scale is reduced for a few seconds and then restored.

› To **display** tap .

Map orientation

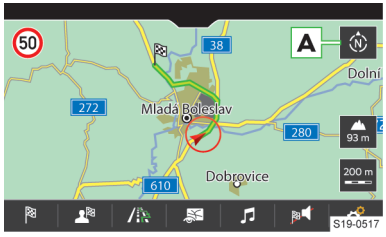

› To change the map orientation, tap A.

The map can be aligned as follows.

North-facing map

The symbol rotates the vehicle position, the map and the Polarstern Symbol do not rotate.

Map oriented to the direction of travel

The map as well as the Polarstern symbol rotate, the symbol showing the vehicle position does not rotate.

With a map scale greater than 10 km, the map is automatically oriented towards north.


Map centring

The moved map can be centred/aligned to the vehicle, destination or route position.

› To **centre the map**, tap .

Search for a new destination

› Tap .

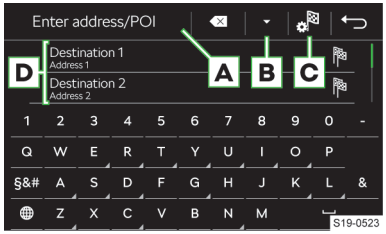

A Input line

B The following icons are displayed depending on the search mode

- ▶ - Map display and the list of the destinations visited in the navigation database
- ▶ - Map display and the list of destinations visited online

C - Select the destination search/destination entry

D **Context-dependent display of the destination list**

- ▶ List of recent destinations.
- ▶ List of destinations visited.

Select the destination you are looking for

› Enter the information for the destination search.

› Select the desired destination.

Destination details are displayed with the option of starting route guidance.

Enter a new destination via the address

› Tap › .

A menu will appear with the destination input options.

› Select the destination entry via address.

› Enter the required information.

Destination details are displayed with the option of starting route guidance.

Enter a new destination via the map point

› Tap > .

A menu will appear with the destination input options.

› Select the destination via the map point.

› Touch the screen to move the desired destination into the cross-hair.

Or:


› Set the GPS coordinates.

› Confirm the destination entry.

Destination details are displayed with the option of starting route guidance.

List of saved destinations

› > *Destinations* .

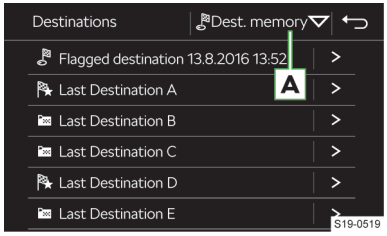

A Select the category of the saved destinations

- ▶ - Saved destinations
  - ▶ - Flag destination

    Vehicle position at the time of storing flag destination.
  - ▶ - saved destinations
  - ▶ - Favourite
- ▶ - Favourites
- ▶ - Phone contact destinations
- ▶ - online destinations set up in the ŠKODA Connect Portal or in the application ŠKODA Connect

Selecting the stored destination

› Select the category of the saved destinations.

› Select the desired destination.

Destination details are displayed with the option of starting route guidance.

Selecting destination by tapping the map point

› Tap the desired item or the POI icon in the map.

› Tap to start the route guidance.

Route calculation

A **route** is created by starting route guidance to a destination.

Additional stopovers can be added to the route.

Route calculation is done on the basis of the set route options.

› > *Tap Route options* .

› Select the desired list entries.

If the selection of the alternative routes is activated, the following menu is displayed after the calculating a new route.

› To **activate/deactivate alternative routes**, go to the main menu **Navigation** > *Tap Route options* > *Suggest 3 alternative routes* .

- Economical route with the shortest possible travel time and the shortest route - the route is highlighted in green.
- Calculate the fastest route to the destination, even if a detour is necessary - the route is highlighted in red.
- Calculate the shortest route to the destination, even if a longer travelling time is required - the route is highlighted in orange.

Infotainment tries to allow for continued route guidance even if the navigation data is incomplete or there is no data at all for the given area.

The route is recalculated if you ignore driving recommendations or change the route.

The navigation announcements provided may vary from the actual situations, e.g. due to out-of-date navigation data.

Route overview

During route guidance the display of a route overview is possible.

› > *Route details* .

Swap route destinations with each other

If the route contains intermediate destinations, there is the option to exchange them with each other in the route overview and thus change their order, add other destinations or delete destinations.

› In order to **change the order of the destination**, hold the functional area until the destination becomes free.

› Move the destination to the desired position and release the functional surface.


The route is re-calculated.

List of traffic reports

Infotainment enables reception of traffic reports containing information about traffic obstructions using TMC (Traffic Message Channel) or online via the online service Infotainment Online.

The list of traffic reports will be updated by Infotainment on a continuous basis.

› To **display traffic reports** tap MENU > .

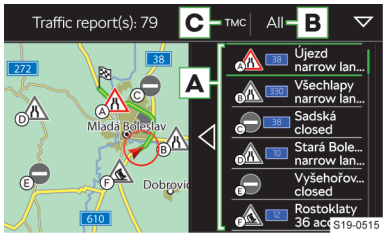

A List of traffic reports

B Filtering traffic reports

C Symbol for the source of the traffic message

If there is **no route guidance**, the traffic obstruction is shown on the map by a red line.

If **route guidance takes place**, the traffic obstruction is shown as follows.

- **Grey line** - The traffic obstruction is not on the route
- **Red line** - The traffic obstruction is on the route, the route will not be recalculated and the route passes through the traffic obstruction
- **Orange line** - The traffic obstruction is on the route, the route is recalculated and an alternative route is available


› To **turn traffic flow indicator on / off** in the main menu **navigation**, tap ⚙ > *Map* > *Traffic flow settings* .

NOTICE


ŠKODA AUTO assumes no responsibility for the availability, content, currency or evaluation of TMC traffic reports or other data provided by third parties. ŠKODA AUTO is not entitled to examine or adapt this data in any way. The data can only be edited by Infotainment in areas where it is available.

Touch operation


Move map

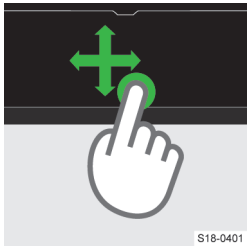

Enter destination by tapping the map item

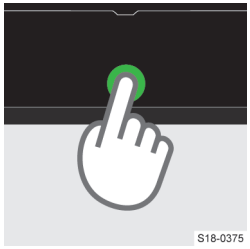

Zoom into the map

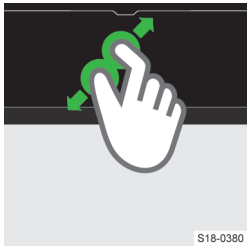

Zoom out of the map



Limitation

Infotainment may give incorrect driving recommendations if the road conditions or the traffic do not match the navigation data.

This can lead to the route guidance being carried out using a different route or proposing a change of direction in a one-way street.

Settings

Avoiding traffic obstructions

If the function is switched on and the Infotainment receives information about a traffic obstruction on the route from online traffic information or the TP traffic announcements, the route is recalculated.

› For **switching on/off the function** in the main menu, tap **Nvigation** ⚙ > *Route options* > *Dynamic route*.

Showing arrival time information in the destination / driving time
The status line displays information on the time depending on the following setting.

› In the **navigation** main menu, tap ⚙ > *Advanced settings* > *Time display:*.

Showing information on the destination / waypoint
The status line displays information on the distance and travel time to the destination, depending on the following time setting.

› In the **navigation** main menu, tap ⚙ > *Advanced settings* > *status display:*.

Switching display of country-specific speed limits on / off
When the function is switched on, the country-specific speed limits are displayed when crossing national borders.

› In the **navigation** main menu, tap ⚙ > *Advanced settings* > *Note: Country border crossed*.

Or:

› In the **navigation** main menu, tap ⚙ > *Advanced settings* > *Note: Country border crossed*.
› For **display of speed limits** in the main menu, tap **Navigation** ⚙ > *Top speed*.

Switching the display of road signs on motorways and expressways on / off
When the function is switched on, Infotainment displays traffic and information signs on motorways and expressways.

› In the **navigation** main menu, tap ⚙ > *Map* > *Show traffic sign*.

Switching the fuel warning on / off
When the function is switched on and the fuel supply reaches the reserve area, a warning message appears with the option of going to the nearest petrol station.

› In the **navigation** main menu, tap ⚙ > *Tank options* > *Tank warning*.

Driving with a trailer
Switch on trailer allowance to calculate the correct route when using a trailer.

› In main menu **Navigation**, tap ⚙ > *Tap Route options* > *Include trailer* .

Set navigation announcements
› In main menu **Navigation**, tap ⚙ > *Navigation announcements* .
› Select and set the desired menu item.

Preferred POI categories
Preferred POI categories are shown on the map and made available when searching for a destination.

› In main menu **Navigation**, tap ⚙ > *Map* > *Show POIs* > *Select categories for POIs* .
› Set preferred categories.

Set home address
The defined destination of the home address is displayed in the overview of recommended destinations.

› 👤 > *Tap Home address* .
› Define the home address using the current vehicle position or enter the address.

Switching demo mode on / off
In demo mode, the route guidance from the starting point of the demo mode to the selected destination is simulated.

When the function is switched on, Infotainment issues a query before the start of route guidance as to whether the route guidance should be carried out in the normal way or in demo mode.

› To **switch on/off** in the main menu **Navigation**, tap ⚙ > *Advanced settings* > *Demo mode* .

Defining the starting point of the demo mode
› In main menu **Navigation**, tap ⚙ > *Advanced settings* > *Demo mode* > *Define demo mode starting point* .

Or:

› Hold down the desired point on the map and select menu item *Define demo mode starting point* .

Updating the navigation database

Information on updating the navigation database must be requested from a **ŠKODA** partner, or refer to the following ŠKODA websites.

www ***http://go.skoda.eu/updateportal***

Amundsen navigation data source
The navigation data is stored on an Original SD Card.

In order to ensure the function of the navigation, the Original SD card, with the navigation data, must be inserted in the **respective slot in the external module**.

If the original SD card should be damaged or lost, a new original SD card can be purchased from the ŠKODA Original Accessories.

With a non-original SD Card, navigation does not work.

Determining the navigation database version
› MENU > ⚙ > *Tap System information* .

Online Services

ŠKODA Connect

Regulations

The rights and obligations of the contracting parties with regard to the provision of these services are regulated in an independent agreement. Current legal documents regarding the ŠKODA Connect services can be found on the ŠKODA Connect Portal and the ŠKODA Connect application.

Functionality

ŠKODA Connect services allow you to connect the vehicle to the online world. They thus represent an extension of the vehicle and Infotainment functions.

The ŠKODA Connect services are not part of the vehicle's equipment. These are ordered separately on the ŠKODA Connect Portal website or in the ŠKODA Connect application.

The offer of ŠKODA Connect services depends on the type of vehicle and its trim level, Infotainment and country.

ŠKODA Connect website
The ŠKODA Connect website contains e.g. current information on the ŠKODA Connect services, the link to that ŠKODA Connect Portal or the option to download the ŠKODA Connect application.

The website is opened after reading the following QR code or the link.

http://go.skoda.eu/skoda-connect

ŠKODA Connect Portal website
The ŠKODA Connect Portal website enables, for example, user registration, ordering of ŠKODA Connectservices, service management or remote access to the vehicle.

The website is opened after reading the following QR code or the link.

http://go.skoda.eu/connect-portal

ŠKODA Connect application
The ŠKODA Connect application enables, for example, user registration, ordering of ŠKODA Connect services or remote access to the vehicle.

The application can be downloaded to the mobile device after scanning the following QR code or link.

http://go.skoda.eu/skodaconnectapp

Conditions

Terms of use of the ŠKODA Connect services
✓ A user is registered in the vehicle.
✓ The ŠKODA Connect services are active.

Availability of the ŠKODA Connect services
Availability depends on the following conditions.

- Cellular networks are available, through which the connection to the ŠKODA Connect services is ensured.
  - The availability, the functionality, the connection speed and the technology of the mobile network can vary in the respective countries and depend on the mobile network operator.
  - In areas where this is insufficient signal, e.g. in underground garages, functionality may be limited.
- The ŠKODA Connect services are available for your vehicle, Infotainment and the respective country.
  - You check availability on the following website ŠKODA Connect.

http://go.skoda.eu/skoda-connect-availability

Availability status of the ŠKODA Connect services
The availability of the services is indicated by the colour of the symbol in the status bar on the Infotainment screen.

- **White** - ŠKODA Connect services are available.
- **Grey** - ŠKODA Connect services are not available.

User registration and activation of the ŠKODA Connect services

Functionality

User registration will provide you with a ŠKODA ID user account that can be used in all ŠKODA applications and services.

Users can register for the ŠKODA Connect services at the following locations.

- ŠKODA Connect Portal website.
- ŠKODA Connect application.

When registering, create an S-PIN.
You will need the S-PIN to register for certain ŠKODA Connect services as well as to register for the protected user account.

Settings

User registration
Users register and activate online services ŠKODA Connect on the ŠKODA Connect Portal website or in the ŠKODA Connect application.

To complete user registration, access to the e-mail box entered during registration is required.

Activation of online services
In order to active aktivieren ŠKODA Connect, proceed as follows.

› Turn on the ignition and switch on Infotainment.
› Select the following menu.

SETUP > *ŠKODA Connect (online services)* > *Registration*.

Or:

MENU > > *ŠKODA Connect (online services)* > *Registration*.

› Enter and confirm the registration PIN received when carrying out user and vehicle registration on the ŠKODA Connect Portal website or in the ŠKODA Connect application.
› Wait for the message regarding the completion of the registration to appear.
› Confirm any messages on the screen.

Setting personal data protection

Personal data

Personal customer data is collected, processed and used by ŠKODA AUTO in accordance with the requirements of the generally binding legal provisions.

The current personal data protection policy can be found on the following website.

http://www.skoda-auto.com/other/personal-data

As a contracting party with regard to the use of the ŠKODA Connect services, you must ensure the protection of personal data and the right to privacy.

Inform the vehicle user and passengers that the vehicle is transmitting user data and using localization services. Failure to provide information can violate the rights of vehicle users and passengers.

Functionality

User and vehicle data as well as information from the localization services are sent when using the ŠKODA Connect services.

Localisation services
For the complete functionality of some online services, activated localisation services are required.

Localisation services include, for example, information on the last parking position, area notification or speed notification.

When localisation services are active, the symbol will be displayed in the status line in the Infotainment screen.

Settings

The vehicle user can set the level of protection for personal data by switching the function Private Mode on / off.

By switching the Private Mode function on, the services relating to sending vehicle information and personal data, which are essential for the provision of all online services ŠKODA Connect, are deactivated.

Switch Private mode function on/off
› To turn on the Private Mode function, select the following.

SETUP > *ŠKODA Connect (online services)* > *Service Management* > *Private Mode*.

Or:

MENU > > *ŠKODA Connect (online services)* > *Service Management* > *Private Mode*.

After activating the Private Mode function, the call functions can be used as follows.

▶ Emergency calls remain fully functional.
▶ Information and breakdown calls are restricted.

User account

What you should be mindful of

When buying an older vehicle with ŠKODA Connect services, it is possible that the services are active and the main user is the previous owner of the vehicle. The previous owner may also be able to control the vehicle functions and receive information about the user and the vehicle.

Therefore, we recommend removing the previous main user. Then log in with your own user account.

When you register a new user, the previous user is automatically overwritten.

Conditions

For user account management, the availability of the ŠKODA Connect services is indispensable.

Settings

Delete user

› Turn on the ignition and switch on Infotainment.
› Select the following menu.

SETUP > *ŠKODA Connect (online services)* > *Registration*.

Or:

MENU > ⚙ > *ŠKODA Connect (online services)* > *Registration*.

› *Delete main user* > *Tap Clear* .
› Confirm the deletion.

ⓘ By deleting the registered vehicle in the user account on the website ŠKODA Connect Portal the user is also deleted in Infotainment.

Changing the user

› Turn on the ignition and switch on Infotainment.
› Select the following menu.

SETUP > *ŠKODA Connect (online services)* > *Registration*.

Or:

MENU > ⚙ > *ŠKODA Connect (online services)* > *Registration*.

› *New main user* > *Tap Transfer ownership* .
› Enter and confirm the registration PIN code received when registering the new user and when registering the vehicle on the ŠKODA Connect Portal website.
› If necessary, confirm the change by tapping *Change main user* .

Management of online services

Usage

Management of online services

In the service management, it is possible to display information about the online services, the validity of their licence, or to switch the services on/off.

› Select the following menu.

SETUP > *ŠKODA Connect (online services)* > *Tap Privacy settings and services*.


Or:

MENU > ⚙ > *ŠKODA Connect (online services)* > *Tap Privacy settings and services*.

› To **display the designations and the status of the services**, select the desired service.
› For **detailed information about the service** tap >.
› To **switch the services on/off**, tap the Checkbox.

Connection status of the online services

The connection status of the ŠKODA Connect online services is indicated by an icon in the status bar on the Infotainment screen.

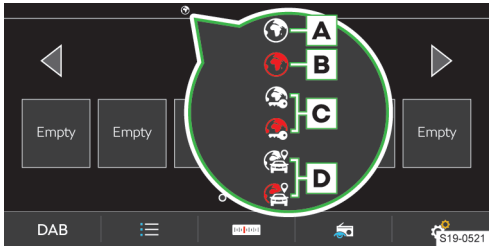

A The ŠKODA Connect online services are available.
At the same time the symbol of the data connection type can be displayed.

B The ŠKODA Connect online services are not available.

C Localisation services are restricted or disabled.
Detailed information about the online services can be displayed in the online services management.

D Localisation services are enabled.
Detailed information about the online services can be displayed in the online services management.

Conditions

✓ A user with active ŠKODA Connect services is registered in Infotainment.
✓ The ŠKODA Connect services are available.

Operation

Show list of online services

› **MENU** > 👤 > ⚙ > *Tap Privacy settings and manage services* .

Show details of services

› Select the desired service from the list of online services.

The details of the service may contain the following information and functions.

▸ Status of the service.
▸ Reason why a service is unavailable or who turned it off.
▸ Name of the group of online services in which the respective service is contained.
▸ Expiry date of the service's validity.
▸ Switch use of the activation word on/off.

Switch on/off use of the service

› **MENU** > > > *Tap Privacy settings and manage services* .

› Select the desired service from the list of online services displayed.

› Switch the desired service on / off.

The use of the service applies to all user accounts. The service can only be used if it is available.

Settings

Switch Care Connect function on / off

By switching the Care Connectservices off, the services relating to sending vehicle information and personal data, which are essential for the provision of online services Care Connect, are deactivated.

› To turn off the Care Connect services, select the following menu.

SETUP > *ŠKODA Connect (online services)* > *Services management* > *Care Connect*.

Or:

MENU > > *ŠKODA Connect (online services)* > *Services management* > *Care Connect*.

After switching off the function Care Connect the call functions can be used as follows.

▶ The emergency call remains fully functional.

▶ Information and breakdown calls are restricted.

Switch Infotainment Online function on / off

By switching off the Infotainment Online services, the services in relation to the provision of online services Infotainment Online are switched off.

› To turn off the Infotainment Online services, select the following menu.

SETUP > *ŠKODA Connect (online services)* > *Services management* > *Infotainment Online*.

Or:

MENU > > *ŠKODA Connect (online services)* > *Services management* > *Infotainment Online*.

Switch online services on/off

It is possible to have the online services switched off/on exclusively by a ŠKODA service partner.

After turning off the online services, **none of the** ŠKODA Connect **online services, including the emergency calls** are functioning.



To inform the vehicle user that the ŠKODA Connect online services are **out of order**, the service partner applies the sticker at a visible point in the vehicle (e.g. on the roof cladding).

This sticker **must not be removed**as long as the online services are off.

NOTICE

It should be noted that the emergency, information and breakdown calls are not available after switching off the online services.

For this reason, **no** automatic emergency call is made in the event of a serious car accident.

Information call

Usage

The info call can be used if there are problems with the ŠKODA Connectservices or for information regarding the products and services of the ŠKODA brand.

Conditions

✓ The ŠKODA Connect services are active.

✓ The ŠKODA Connect services are available.

Operation



› Press the key.

Breakdown call

Usage

The breakdown call can be used in the event of a breakdown.

By pressing the key a connection is established with the ŠKODABreakdown Service. At the same time, the vehicle sends information about the vehicle condition and the vehicle position.

Conditions

✓ The ŠKODA ConnectServices are active.

✓ The ŠKODA ConnectServices are available.

Operation



› Press the button.

Service schedules

Usage

If the vehicle detects that a service visit is necessary, it will automatically send this information to the service partner of your choice.

The service partner will then contact you and schedule the service visit with you.

Conditions

The service and the coupled functions are available depending on the following conditions.

✓ A service partner can be selected on the ŠKODA Connect Portal website or in the ŠKODA Connect application.
✓ The vehicle type, vehicle equipment and Infotainment type are supported.
✓ The ŠKODA Connect services are active.
✓ The ŠKODA Connect services are available.
✓ The Care Connect services are switched on.
✓ The private mode function is switched off.

Vehicle status report

Usage

The vehicle status report function allows you to have online control over the condition of the vehicle.

The service is available in the ŠKODA Connect application as well as on the ŠKODA Connect Portal website.

Available vehicle data include e.g. distance travelled, selected warning messages or requirements for the service inspection.

Conditions

The service and the coupled functions are available depending on the following conditions.

✓ The ŠKODA Connect services are active.
✓ The ŠKODA Connect services are available.

Remote access to the vehicle

Usage

The service relating to remote access to the vehicle offers the possibility of remotely controlling certain vehicle functions and accessing vehicle information.

Available functions include, for example, the following.

▸ Trip overviews.
▸ Notification if alarm triggered.
▸ Localisation service notifications, such as, for example, location, area or speed notifications
▸ Vehicle search using horn and flashing signals.
▸ Remote controlled vehicle locking and unlocking.

Conditions

The service and the coupled functions are available depending on the following conditions.

✓ The vehicle type, vehicle equipment and Infotainment type are supported.
✓ The ŠKODA Connect services are active.
✓ The ŠKODA Connect services are available.


Starting and driving

Starting with the key

Starting instructions

⚠ **DANGER**
Danger of poisoning by exhaust gases!
▶ Do not run the engine in an enclosed space.

Positions of the key in the ignition lock

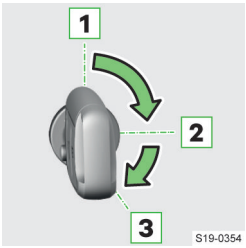

1 Ignition off
2 Ignition on
3 Start the motor

Start vehicle with manual transmission
› Secure the vehicle with the parking brake.
› Move the shift lever to the neutral position.
› Keep the clutch pedal depressed.
› Turn key to position 3.
› Let go of the key.

Start vehicle with automatic transmission
› Secure the vehicle with the parking brake.
› Keep the brake pedal depressed.
› Move the selector lever to position **P** or **N**.
› Turn key to position 3.
› Let go of the key.

⚠ **CAUTION**
Danger of unexpected vehicle movement!
▶ At temperatures below -10°C, start the vehicle with the selector lever in the **P** position.

Stopping the engine
› Secure the vehicle with the parking brake.
› Turn key to position 1.

On vehicles with an automatic transmission, the key can only be removed when the selector lever is in the position **P**.

⚠ **WARNING**
Steering lock hazard!
▶ During a journey with the engine stopped, the ignition must always be switched on.

ⓘ **NOTICE**
Risk of engine overheating!
▶ Do not switch the engine off immediately at the end of your journey after the engine has been running at high loads. Leave it to run at an idling speed for about 1 minute.

Start at the push of a button

Starting instructions

⚠ **DANGER**
Danger of poisoning by exhaust gases!
▶ Do not run the engine in an enclosed space.

Function conditions
✓ The vehicle key is located in the vehicle interior.

ⓘ **NOTICE**
Risk of key loss, possibly of key damage!
The system can detect the key even if it has been forgotten on the vehicle roof.
▶ Always keep the key with you.

Switching the ignition on and off



› Press the starter button.

Start vehicle with manual transmission
› Secure the vehicle with the parking brake.
› Move the shift lever to the neutral position.
› Keep the clutch pedal depressed.
› Press the starter button.

Start vehicle with automatic transmission
› Secure the vehicle with the parking brake.
› Keep the brake pedal depressed.
› Move the selector lever to position **P** or **N**.
› Press the starter button.

⚠ **CAUTION**
Danger of unexpected vehicle movement!
▶ At temperatures below -10°C, start the vehicle with the selector lever in the **P** position.

Stopping the engine
› Secure the vehicle with the parking brake.
› Press the starter button.

⚠ **WARNING**
Steering lock hazard!
▶ During a journey with the engine stopped, the ignition must always be switched on.

ⓘ **NOTICE**
Risk of engine overheating!
▶ Do not switch the engine off immediately at the end of your journey after the engine has been running at high loads. Leave it to run at an idling speed for about 1 minute.

Starting issues

Troubleshooting

NOTICE
Risk of engine damage!
▶ Do not start the vehicle by towing.

The engine does not start
› Switch off the ignition.
› Wait 30 seconds and repeat the starting procedure.
› If the engine does not start, start the vehicle using another vehicle's battery » page 124 or get help from a specialist company.

The engine does not start, the display shows a message regarding the immobilizer
› Use the other vehicle key.
› If the engine does not start, seek the help of a specialist garage.

The key cannot be turned in the ignition
› Move the steering wheel back and forth while turning the key.

Starting is not possible with the starter button, the system did not detect the key
illuminates



› Press the starter button with the key.
› If the engine does not start, seek the help of a specialist garage.

The key might not be detected if the battery in the key is nearly discharged or the signal is faulty.

The engine cannot be turned off with the starter button
› Hold the starter button or press twice.

The radiator fan keeps running even after the engine has stopped
The radiator fan can continue to run for approximately 10 minutes after the engine is stopped. This is not a defect.

The engine makes noises after the cold start
The increased running noise is due to the briefly increased engine speed. This is not a defect.

START STOP

Usage

The START-STOPSystem reduces polluting emissions and CO_2emissions and saves fuel.

Functionality

If the system determine that the engine is not needed when the vehicle stops, it turns off the engine and starts it again when moving off.

Vehicle with manual transmission
A system-related engine shutdown takes place when the vehicle is stopped, when the gear lever is shifted into neutral and when the clutch pedal is released.

A system-related engine start occurs when the clutch pedal is pressed down.

Vehicle with automatic transmission
A system-related engine switch-off occurs when the brake pedal is actuated and the engine is stopped.

A system-related engine start takes place after releasing the brake pedal.

Status display in the instrument cluster display
- Engine is switched off by the START-STOPSystem

- Engine is switched off by the START-STOPSystem not switched off due to functional conditions not being met

Display of detailed information in the infotainment screen
CAR > > *Vehicle status*

Or:

MENU > > > *Vehicle status*

Functional conditions

Some conditions are system-related and cannot be influenced or recognized. Therefore, the system may react differently in situations which seem identical from the driver's perspective.

The driver must meet the following conditions.

✓ The driver's door is closed.
✓ The driver has fastened the seat belt.
✓ The driving speed was higher than 4 km/h after the last stop.
✓ No trailer or other accessory is connected to the trailer socket.

Settings

Automatic activation
▸ Upon start-up of the engine.

Deactivate / activate system
› Press the button.

When the system is deactivated, the symbol lights up in the button.

If a system-related engine switch-off occurs and the system is deactivated, the engine will start.

Troubleshooting

The engine does not switch off when stopping, or it starts before starting up
The system has detected that the engine is running.

Manual gearbox

Operation


NOTICE
Danger of engine damage!
▸ Shift to a higher gear before reaching the red area on the tachometer scale.

NOTICE
Danger of gearbox damage!
▸ Fully depress the clutch pedal when changing gear.
▸ When not shifting gear, do not put your hand on the shift lever.

Engaging reverse gear
› Stop the vehicle.
› Fully depress the clutch.
› Move the shift lever to the neutral position.
› Push the shift lever down.
› Turn it completely to the left.
› Wait briefly.
› Engage reverse gear.

Automatic gearbox

Selector lever positions

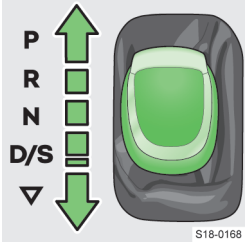

P Parked vehicle
The drive wheels are locked.
Only adjust **P he position** when the vehicle is stationary.

R Reverse gear
Only adjust **R he position** when the vehicle is stationary.

N Idle position
There is no transmission of engine power to the wheels.

D/S Forward drive / sports program
The gear is changed automatically.
In mode **S** the gear is changed at higher speeds than in mode **D**.

Select between D and S (sprung position)

Selector lever out of position P or N solve
lights up - the selector lever is locked



› Press the brake pedal, and at the same time, press the button in the selector lever.

WARNING
Danger of the vehicle rolling away automatically!
▸ When the selector lever is in the position **D/S**, **R** or in manual shift mode, secure the vehicle with the brake.

Operation

Start up
› Keep the brake pedal depressed.
› Start the engine.
› Press the button on the selector lever and set it to the desired position.
› Release the brake pedal and press the accelerator pedal lightly.

Speeding up while driving (kick-down)
› Fully depress the accelerator.

Stopping temporarily (e.g. at a junction)
› Leave the selector lever in the position **D/S** and secure the vehicle with the brake pedal.

Stop
› Keep the brake pedal depressed.
› Secure the vehicle with the parking brake.
› Press the button in the selector lever and bring it to the position **P** adjust.
› Turn off the engine.

Drive in neutral
If the system detects that no gear is engaged while driving, it automatically switches to neutral position.


It will be displayed in the instrument cluster.

Requirements for driving in neutral position

✓ The mode D is selected.
✓ Neither the accelerator nor the brake pedal is pressed.
✓ The vehicle speed is 20-130 km/h.
✓ No device is connected to the trailer socket.


Manually switching gear with the selector lever

› To **turn on,** move the selector lever D/S to the right (to the left for right-hand drive vehicles).
› To **turn off,** move the selector lever back into position D/S .

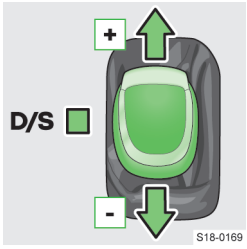

+ Upshift
- Downshift

Manually changing gear with the shift paddles on the steering wheel

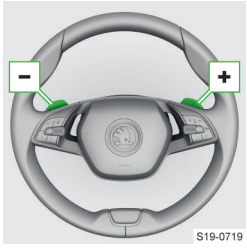

- Downshift
+ Upshift

› To **turn on,** press the shift paddle - or +.
› To **turn off,** hold the shift paddle + .

If none of the shift paddles are pressed for a certain time, manual shift mode turns off automatically.

If the engine threatens to over-rev

▸ The gearbox automatically changes to the next higher gear.
▸ The transmission prevents changing to the next lower gear.

Troubleshooting

The selector lever cannot be moved out of position P in the normal way

› Mechanically unlock the selector lever » page 105.

Gearbox overheated

illuminates together with ⚠
Message regarding the gearbox overheating

› You may continue driving, exercising appropriate caution.

along with ⚠
Message regarding the gearbox overheating

› Stop driving! Stop the vehicle and stop the engine.
› After the indicator light goes out, your journey can continue.
› If the warning light does not go out, stop driving! Get the help of a specialist company.

Gearbox impaired

illuminates together with ⚠
Message regarding the gearbox in emergency mode

› You may continue driving, exercising appropriate caution.
› Immediately seek the help of a specialist company.

illuminates together with ⚠
Message regarding a gearbox fault


› Stop driving! Get the help of a specialist company.

Starting the stuck vehicle

› Adjust the selector lever quickly between D/S and R . The vehicle will then start to rock and be easier to free.

Mechanical release of the automatic gearbox

› Secure the vehicle with the parking brake.

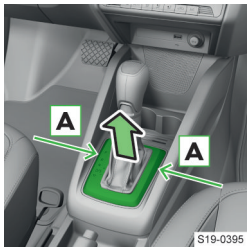

› Insert a flat-head screwdriver or push a similar tool into the gap in the area of arrow A.
› Carefully loosen and lift the cover of the shift gate.



› Press on the plastic part in the direction of the arrow and at the same time press the button on the selector lever.
› Move selector lever to position N .

Economical driving style

Tips for economical driving style and evaluation of driving economy

Tips for economical driving

▸ Avoid unnecessary acceleration and braking.
▸ Display the gear recommendation in the instrument cluster display


- ▸ Avoid full acceleration and excessive speeds.
- ▸ Avoid engine idling during longer periods of stationary time.
- ▸ Do not warm up the engine while the vehicle is stationary. If possible, start your journey as soon as the engine starts.
- ▸ Observe the prescribed tyre pressure » page 133.
- ▸ Remove unnecessary ballast.
- ▸ Remove the roof rack when it is not needed.
- ▸ Switch on electric consumers only for as long as necessary.
- ▸ Do not leave the windows open while driving.

Display of evaluation in the infotainment screen

CAR > > *DriveGreen*

Or:

MENU > > > *DriveGreen*

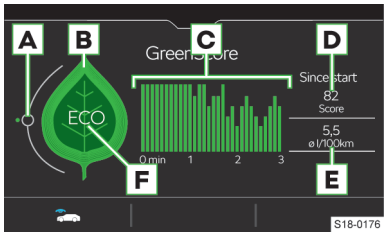

A **Driving fluid display**

When the driving is fluid, the display is located near the green dot.

B **Sheet**

The greener the leaf, the more economic the driving style. Tapping the screen in the area of the sheet displays tips for reducing fuel and energy consumption.

C **Driving economy diagram**

Each bar indicates driving efficiency in 5 second increments. The current bar is on the left. The higher the green bars, the more economical the driving style.

D **Points system (0-100)**

The higher the indicated value, the more economical the driving style. By tapping the screen in the area of value **D** , a rating of the last 30 minutes of driving is displayed.

E **Average fuel consumption**

Tapping the screen in area of value **E** displays the average fuel consumption over the past 30 minutes.

F **Information about the current driving style**

- ▸ **ECO** Economical driving style
- ▸ The speed has a negative effect on fuel consumption
- ▸ The ride is not smooth
- ▸ 3▸4 Recommended gear

In Infotainment it is possible to display up to three consumers that are currently making up the largest share of fuel consumption.

CAR > > *Consumer comfort*

Or:

MENU > > > *Consumer comfort*

Consumption-friendly driving

If, while driving, the system detects that no gear is required on a vehicle with automatic transmission, it automatically shifts to neutral. It therefore reduces fuel consumption.

lights up in the instrument cluster.

Towing a trailer

What you should be mindful of

⚠ WARNING

When driving with a trailer, special care is required!

NOTICE

With frequent towing, the vehicle is excessively loaded so this must also be checked between service intervals.

Recommendations for using a trailer

- ▸ Adjust the tyre pressure on the vehicle for full load.
- ▸ Do not exceed the maximum permissible total weight of the vehicle and the combination weight specified in the technical vehicle documentation (e.g. in the vehicle registration documentation, in the COC document) and on the type plate.
- ▸ For trailer operation, consider the current load condition of the vehicle as well as the distribution of the load in the trailer. The coupled trailer increases the rear axle load and can therefore reduce the payload.
- ▸ Adjust the headlight range of the headlights according to the load status of the vehicle. The front of the vehicle may lift up when a trailer is being towed and the headlights may dazzle other road users.
- ▸ A speed of **100 km/h** should not be exceeded.
- ▸ Reduce the speed by releasing the accelerator pedal as soon as a pendulum movement of the trailer is noticeable. Never attempt to stop the trailer from swaying by accelerating.
- ▸ If the traffic area behind the trailer can not be viewed, install additional exterior mirrors.
- ▸ Apply the brakes in good time. If the trailer is fitted with a trailer brake, apply the brakes gently at first, then brake firmly. This will avoid brake jolts resulting from the trailer wheels locking.

▸ Select a lower gear before descending to also use the braking force of the engine.

Distribution of the load over the vehicle and trailer combination

▸ Secure heavy objects against slipping, as close to the trailer axle as possible.

▸ Transport small and light objects in the luggage compartment.

Permitted trailer loads

The details in the technical vehicle documentation take precedence over the information in this Owner's Manual.

⚠ **WARNING**

Risk of an accident!

▸ Do not exceed the permissible trailer load.

Engine type	Gearbox	Permissible trailer load, braked (kg) [a]		Permissible trailer load, unbraked (kg)	
		Fabia	Fabia Combi	Fabia	Fabia Combi
1.0 l/70 kW TSI	Manual gearbox	1000	1000	550	560
	DSG [b]	1000	1000	580	590
1.0 l/81 kW TSI	Manual gearbox	1100	1100	560	570
	DSG [b]	1100	1100	570	580
1.0 l/44 kW MPI	Manual gearbox	800	800	540	550
1.0 l/55 kW MPI	Manual gearbox	800	800	540	550
1.6 l/66 kW MPI	Manual gearbox	1100	1100	550	560
1.6 l/81 kW MPI	Automatic gearbox	1100	1100	560	580

[a] With gradients up to 12%.

[b] Automatic dual-clutch transmission.

Towing eye and towing procedure

Towing eye

Remove the front cover



› Press on the cover cap and remove it.

Install the towing eye



› Screw in the towing eye.
› Insert the wheel wrench or similar object through the towing eye.
› Tighten the towing eye.

Towing eye at the back




After the towing process

› Unscrew the towing eye.
› Insert the cover cap.

Towing the vehicle

⚠ **WARNING**
Risk of accident!
▸ The tow rope must not be twisted.
▸ When towing, drive at a speed of max. 50 km/h.

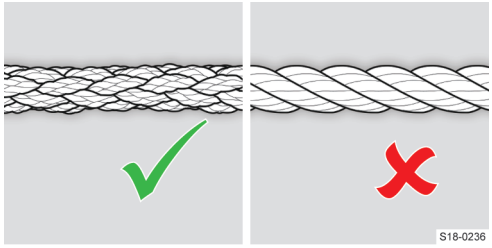

⚠ **WARNING**
Risk of accident!
▸ Use a braided synthetic fibre rope for towing. Do not use a twisted tow rope.

ⓘ **NOTICE**
▸ Always keep the tow rope taut during towing.
▸ Do not exceed a towing distance of 50 km.

ⓘ **NOTICE**
Risk of gear damage!
▸ If the gearbox no longer contains any oil, the vehicle must only be towed with the front axle raised clear of the ground or transported on a special breakdown vehicle.
▸ Vehicles with an automatic transmission must not be towed without the ignition switched on or with the rear axle raised.

Where should the tow rope or the tow bar be secured?

▸ At the front towing eye.
▸ On the towing eye at the back.
▸ On the ball bar of the factory-installed towing device.

Instructions for the driver of the pulling vehicle

› Drive slowly and smoothly.
› Only accelerate once the rope is taut.

Instructions for the driver of the towed vehicle

› Move the shift lever to the neutral position or the selector lever to the **N** position.
› If it is not possible to start the engine, switch on the ignition!

⚠ **WARNING**
Risk of accident!
When the ignition is switched off, the brake booster and the power steering do not work. In addition, there is a risk that the steering lock will engage.
▸ If it is not possible to start the engine, switch on the ignition!

Brakes

What you should be mindful of

⚠ **WARNING**
Problems and faults with the brake system can extend the braking distance of the vehicle!

⚠ **DANGER**
Danger of a functional restriction of the brake booster!
▸ When braking in a vehicle with manual transmission, when the vehicle is in gear and at low revs, depress the clutch pedal.

⚠ **DANGER**
Danger of the brakes overheating!
▸ Do not depress the brake pedal if you do not need to brake.
▸ If the original front spoiler is damaged, ensure the air supply to the front brakes is guaranteed.

Check the brake fluid level

Test conditions

✓ The vehicle is on a horizontal surface.
✓ The engine is off.

Checking



The fill level must be in the marked area.

› If the level is below the mark **MIN**, do not continue.
› Do not refill liquid.
› Get the help of a specialist company.

If the brake fluid level is too low, a light will be displayed in the instrument cluster. ⓘ However, we

recommend that you regularly check the brake fluid level directly on the reservoir.

⚠ **WARNING**
Danger of brake failure!
If the fluid level falls significantly within a short time or drops below the mark **MIN**, the brake system may have become leaky.
▸ Stop driving! Get the help of a specialist company.

Specification
The brake fluid must comply with standard VW 501 14. This standard complies with the requirements of the FMVSS 116 DOT4 standard.

Changing
Have the brake fluid replaced by a specialist garage.

⚠ **WARNING**
Danger of brake failure!
If the brake fluid change date is exceeded, heavy braking may cause vapour bubbles to form in the brake system.

Troubleshooting

Brake fluid level is too low
illuminates
› Stop driving! Get the help of a specialist company.

Brake system and anti-lock braking system faulty
illuminates together with
› Stop driving! Get the help of a specialist company.

Braking effect reduced
Moist, frozen, salted or corroded brakes can impair the braking effect.
› Clean the brakes by braking repeatedly if the traffic conditions allow it.


When the engine is stopped, the brake booster does not work
› Depress the brake pedal more forcefully.

Handbrake

service

⚠ **WARNING**
Risk of accident!
An insufficiently released parking brake will impair the function of the brake system.
▸ Fully release the parking brake before driving.

To back up

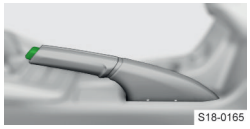

› Pull the lever up to the stop position.
The parking brake (P) lights up.

To solve
› Pull the lever up a little and push in the lock button.
› Press and hold the lock button and pull the lever completely down.

Driver assist systems

Braking and stabilising systems

Overview

Stabilisation control (ESC)
ESC helps to stabilize the vehicle in borderline situations (e.g. when the vehicle starts to skid). ESC brakes the individual wheels to maintain the direction of travel.

flashes - ESC is engaged

Traction control (TCS)
ASR helps to stabilize the vehicle when accelerating or driving on low-grip roads. ASR reduces the drive power transmitted to the wheels when the wheels spin.

flashes - ASR is engaged

Antilock braking system (ABS)
ABS helps maintain control of the vehicle during emergency braking. An ABS intervention is noticeable by pulsating movements of the brake pedal.

Motor Slip Regulation (MSR)
MSR helps to maintain control of the vehicle in the event of a sudden reduction in speed, e.g. on icy roads. If the drive wheels lock, MSR increases the engine speed. This reduces the braking effect of the engine and the wheels can rotate freely again.

Electronic differential lock (EDS)
EDL helps to stabilize the vehicle when driving on road surfaces with different grip under the individual wheels. EDL brakes a spinning wheel and transmits power to a different drive wheel.

Electronic differential lock (XDS+)
XDL + helps to stabilize the vehicle during fast cornering by braking the inside wheel of the driven axle.

Hill start assist
Hill Hold Control helps when starting off on uphill gradients by braking the vehicle for about 2 seconds after the brake pedal is released.

Functional conditions
✓ The gradient is at least 5%.
✓ The driver's door is closed.

Multi-Collision Brake (MCB)
MCB helps to decelerate and stabilize the vehicle after a collision with an obstacle. This reduces the risk of further collisions.

Functional conditions
✓ There has been a frontal, side and rear collision of a certain severity.
✓ The impact speed was greater than 10 km/h.
✓ The brakes, ESC and other necessary systems remained functional after the impact.
✓ The accelerator pedal is not pressed.

Settings

Deactivate / activate ASR
› Press the button.

Or:

› In Infotainment, select the following menu.

MENU > > >

Or:

CAR > >

When deactivated lights up in the instrument cluster.

goes out on renewed activation.

Deactivating the ASR may be helpful in the following situations.
▸ Driving with snow chains.
▸ Driving in deep snow or on very loose ground.
▸ Starting the stuck vehicle.

Troubleshooting

ESC or ASR faulty/deactivated by the system
illuminates
› Stop the engine and start again.
› If the warning light does not go out after covering a short distance, seek the help of a specialist garage.

ABS faulty
illuminates
› You may continue driving, exercising appropriate caution. Get the help of a specialist company.

Brake system and anti-lock braking system faulty
illuminates together with
› Stop driving! Get the help of a specialist company.

Front Assist

Functionality

Front Assist monitors the distance to the vehicle ahead and points out when the safety distance is exceeded. In borderline situations, it helps to avoid a collision by braking interventions.

Status display in the instrument cluster display

lights up - not at safe distance (only in MAXI DOTDisplay)

illuminates - warning in case of collision

Automatic braking in the event of a collision

If there is a risk of collision, the symbol lights up as a warning from the isolation box. If you do not respond to the warning, the vehicle will slow down.

At a driving speed of up to 30 km / h, the vehicle is braked without prior warning.

The automatic braking can be stopped by pressing the accelerator pedal or by steering.

With automatic braking, the pressure in the brake system increases. The brake pedal cannot be operated by using the pedal as normal.

⚠ **WARNING**

Risk of accident!

Front Assist does not respond to crossing or oncoming vehicles.

Operating conditions

✓ ASR activated.

✓ The driving speed is higher than 5 km/h.

Functional restriction

The function may be restricted or unavailable in the following cases.

▸ About 30 seconds after starting.

▸ When driving through a sharp bend.

▸ During an ESC intervention.

Settings

Automatic activation

Front Assist is automatically activated when the ignition is switched on.

Activation / deactivation in the instrument cluster


In the MAXI DOTDisplay in the Assistants menu item.

In the segment display in the Front Assist menu item.



› Hold the A button up or down. The Front Assist menu item is displayed.

› Press the B button.

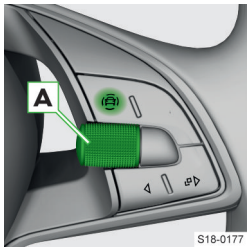

› Press the button. The Front Assist menu item is displayed.

› Press the setting wheel A.

Activation / deactivation and setting in Infotainment

In the following menu.

CAR › ›

Or:

MENU › › ›

Show system deactivation in the display of the instrument cluster

illuminates together with ⚠

Deactivate Front Assist when handling the vehicle on a truck, a car ferry etc.

Troubleshooting

Front Assist is not available

illuminates together with ⚠

› Clean the front radar sensor.

› Stop the engine and start again.

› If Front Assist is still unavailable, check the brake lights on the vehicle or on the attached trailer.

› Replace the defective bulb.

› If the brake lights are working and Front Assist is still unavailable, seek the help of a specialist garage.

There was an unfounded warning or system intervention

› Clean the front radar sensor.

› If the system is not working properly, disable Front Assist and seek the help of a specialist garage.

Speed limiter

Functionality

The speed limiter controls the maximum driving speed according to the set speed limit.

If the limit is exceeded when driving downhill, brake the vehicle with the brake pedal.

Status display in the instrument cluster display

LIM illuminates - the cruise control is activated.

When the control starts, is highlighted and the set limit is displayed.


illuminates - cruise control is active
flashing - the set limit is exceeded

Operating conditions

✓ The driving speed is higher than 30 km/h.

Operation

Variant without GRA

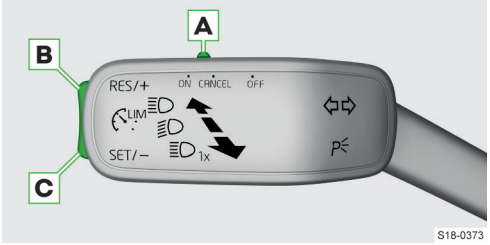


A **ON** Activate limiter (control inactive)
OFF Deactivate limiter
CANCEL Interrupt control (sprung position)

B **RES/+** Resume control[1] / Increase limit

C **SET/-** Start control at the current speed / reduce limit

Variant with cruise control

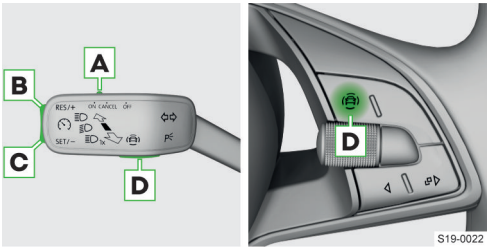

A **ON** Activate GRA (condition for the subsequent activation of the limiter)
To **activate the speed limiter**, press the D button and the menu item *Speed limit* in the instrument cluster.
OFF Deactivate limiter
CANCEL Interrupt control (sprung position)

B **RES/+** Resume control[1] / Increase limit

C **SET/-** Start control at the current speed / reduce limit

D Show menu of assistance systems - Possibility to switch between GRA and speed limiter
Switching to cruise control interrupts the control.

Adjust the speed limit using the B and C keys
Press for increments of **1 km/h**.

Hold for increments of **10 km/h**.

Exceeding the limit
› Disengage the accelerator pedal **completely**.

Control will continue as soon as the vehicle has decelerated to below the set limit.

Troubleshooting

Speed limiter faulty
LIM or ERR illuminates
› Get the help of a specialist company.

Cruise control system

Functionality

The cruise control system (GRA) maintains the set speed without having to press the accelerator pedal.

This, however, is only possible to the extent permitted by the engine output and braking power of the vehicle.

⚠ **WARNING**
Risk of the cruise control system starting unintentionally!
▸ Deactivate cruise control after use.

Status display in the instrument cluster display
illuminated - the cruise control system is activated

illuminated - cruise control is active
When cruise control starts, the set speed is displayed.


Operating conditions

✓ The driving speed is higher than 20 km/h.

[1] If no speed limit is set, the current speed is set as the speed limit.

Operation

Operating with the lever

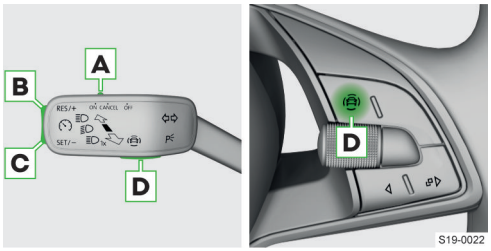

A **ON** Activate GRA (cruise control inactive)
OFF Disable GRA
CANCEL Interrupt control (sprung position)

B **RES/+** Resume cruise control[1] / Increase speed

C **SET/-** Start control at the current speed / reduce speed

D Show menu of assistance systems - Possibility to switch between GRA and speed limiter

Accelerate temporarily
› Depress the accelerator pedal.

Releasing the accelerator pedal will cause the speed to drop again to the set speed.

Interrupt speed control
▸ After pressing the brake pedal.
▸ After an ESC intervention.

Troubleshooting

Cruise control system faulty
or ERR illuminates
› Get the help of a specialist company.

Adaptive Cruise Control (ACC)

Functionality

Control
ACC maintains the set speed. When your vehicle approaches the vehicle in front, ACC will automatically start to maintain the set distance to this vehicle.

Maintaining the set speed and the distance will hereinafter be referred to as **Control**.

⚠ **WARNING**
ACC does not respond to stationary objects or to crossing or oncoming objects.

ACC is intended primarily for use on motorways.

[1] If no speed is set, the current speed is adopted.

Speed range
ACC allows a speed setting in the range of 30-160 km/h.

If control is started at a speed of less than 30 km/h on vehicles with an automatic transmission, the speed is automatically increased to 30 km/h or controlled according to the speed of the vehicle ahead.

Distance level
The distance to the vehicle ahead can be adjusted to five different levels.

⚠ **WARNING**
▸ Maintain a minimum distance in accordance with the country-specific legal regulations.

Automatic stop and start
A vehicle with an automatic transmission can be decelerated to a stop using the ACC and start moving again. Control is disconnected in case of longer holding periods.

Overtaking
If your vehicle changes to the fast lane and no vehicle is detected in front, ACC accelerates up to the set speed.


Status display in the instrument cluster display
illuminates - ACC is activated

illuminates together with - Control is active
When the control starts, the set speed is displayed.

illuminates - ACC does not decelerate sufficiently
› Depress the brake pedal.

Operation

Operating with the lever

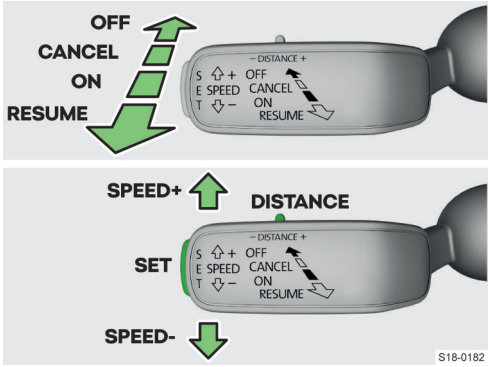

ON	Activate ACC (control inactive)
RESUME	Start or resume control/Increase speed in steps of 1 km/h (sprung position)
CANCEL	Stop control (sprung position)
OFF	Deactivate ACC
SPEED +	Increase speed in steps of 10 km/h
SPEED –	Reduce speed in steps of 10 km/h
DISTANCE	Set distance level
SET	Start control/Reduce speed in steps of 1 km/h

Starting control with the current speed


› **SET** .

Or:

› If no speed is saved, move the lever to the sprung position **RESUME**.

Set distance level

› Move the **DISTANCE** switch to the sprung position **–** or **+**.

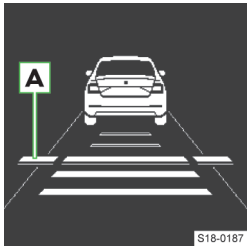

Line A, appears on the display, indicating the change in distance.

› Use the **DISTANCE** switch to set the desired distance level.

For temporary acceleration

› Depress the accelerator pedal.

The vehicle accelerates and control is temporarily interrupted. Upon releasing the accelerator, control is resumed.

Interrupting cruise control

▸ After pressing the brake pedal.
▸ By operating the clutch pedal for a long time.
▸ After an ESC intervention.
▸ After deactivation of the ASR.

Resuming control

› If a speed is stored, move the lever to the sprung position **RESUME**.


The vehicle is controlled at the set speed. The set speed is shown in the instrument cluster display.

Function restriction

⚠ **WARNING**


▸ Be particularly attentive and alert in the following situations.

When cornering

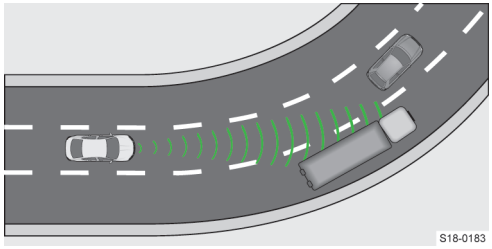


When cornering, a vehicle in the next lane may enter the detected area. Your vehicle will be controlled according to this vehicle.

Narrow or staggered vehicle

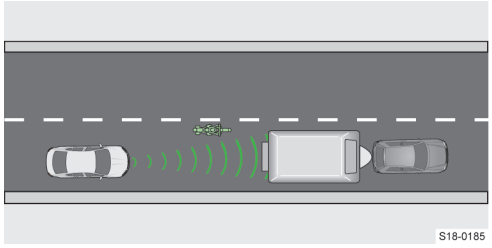


ACC detects a narrow or staggered vehicle only when it is in the area covered by the radar.

Lane change by another vehicle

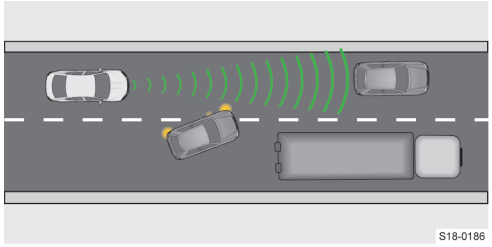

A vehicle that changes to the lane a short distance away may not be recognized by the ACC in time.

Stationary vehicle

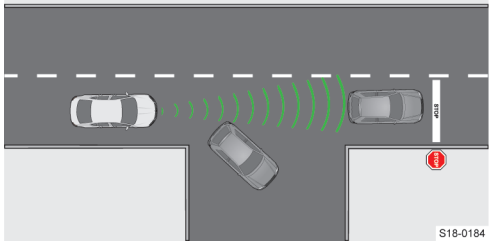

If a vehicle in front turns and there is a stationary vehicle in front of this vehicle, the ACC will not respond to the stationary vehicle.

Vehicles with special load or special bodies
A load or superstructure that protrudes outside the vehicle might not be detected by the ACC.

Settings

In Infotainment, in the following menu.

CAR > >

Or:

MENU > > >

-

▶ *Driving programme:* - Sets the vehicle acceleration when the ACC is activated
▶ *Last distance selected* Switching on/off the last distance range selected
▶ *Distance:* - Setting the distance to vehicles in front

Troubleshooting

ACC not available

 illuminates together with ⚠
› Stop the engine and start again.
› If ACC is still unavailable, check the brake lights on the vehicle or on the attached trailer.
› Replace the defective bulb.
› If the brake lights are working and ACC is still unavailable, seek the help of a specialist garage.


Blind Spot Detect

functionality

The system draws attention to vehicles travelling in the same direction in the next lane in blind spots.

The system warns of a vehicle in the blind spot through the indicator light in the exterior mirror on the vehicle side, where the vehicle is recognized.

Driving situations in which a system warning is given

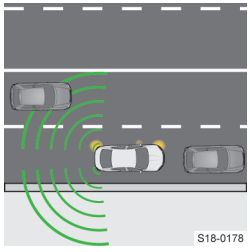

Your vehicle will be overtaken. The faster your vehicle is overtaken, the sooner the warning is given by the indicator light.



Your vehicle is overtaking another vehicle at a speed of max. 10 km higher. If the speed is higher during the overtaking process, no warning will be provided by the indicator light.

Note
 illuminated - there is a vehicle in the blind spot
 flashing - there is a vehicle in the blind spot, the flashing light is on the same side

Operating conditions

✓ The driving speed is higher than 15 km/h.
✓ No accessories are connected to the trailer socket.

Restriction

The system cannot detect lane width. For this reason, it may, for example, draw attention to a vehicle in a distant lane in the following cases.

▶ Driving on a road with narrow lanes or on the lane edge.
▶ Driving round bends.

The system can draw attention to objects along the road, such as high guard rails or noise barriers.

The system might not warn of a vehicle e.g. in the following cases, or a warning may only be issued incorrectly.

▶ Unfavourable weather conditions.
▶ A very fast approaching vehicle.
▶ When going round a sharp bend or a roundabout.

Settings

The system settings are made in the display of the instrument cluster in menu item *Assist Systems*.

The system settings are made in the infotainment system in the following menu.

CAR > >

Or:

MENU > > >

Troubleshooting

Message regarding system unavailability
› Stop the engine and start again.
› If the system is still not available, seek the help of a specialist garage.

Driver Alert fatigue detection assistant

Functionality

Driver Alert evaluates the steering behaviour. If it detects fatigue in the driver, a break is recommended. In the display of the instrument cluster, the ☕ lights up.

⚠ **WARNING**
There will be no system warning during the so-called micro-sleep.

Resetting the break recommendation
The break recommendation is reset in the following cases.

▸ The vehicle stops and the ignition is switched off.
▸ The vehicle stops, the seat belt is removed and the driver's door is opened.
▸ The vehicle stops for more than 15 minutes.

ⓘ In some situations, the system may erroneously issue a break recommendation.

Operating conditions

✓ Driving speed between 60-200 km/h.

Settings

Activation / deactivation
In Infotainment, in the following menu.

CAR > ⚙ > 🚗

Or:

MENU > 🚗 > ⚙ > 🚗

Park Assist systems

Park Pilot parking aid


Functionality

If an obstacle is detected, the Infotainment will display a visible message and an audible signal will sound.

The interval between the signals becomes shorter as the clearance is reduced. At a distance of less than 30 cm from the obstacle, a continuous tone sounds.

Display

The areas covered vary depending on the fitments.

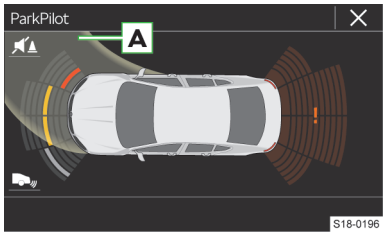

A Route controlled at the current steering angle
Switch acoustic signals on / off
Change to the rear view camera display
! System failure

■ Obstacle at a distance of less than 30 cm
■ Obstacle at a distance of over 30 cm
□ Obstacle outside the route

Functional conditions

✓ The driving speed is lower than 15 km/h.
✓ No accessories are connected to the trailer socket.

Turn on/ turn off

Turn on
› Engage reverse gear.

Or:

› Press P the button.

Automatic switch-on during forward travel
When approaching an obstacle at a speed of less than 10 km/h.

Turn off
› Disengage reverse gear.

Or:

› Press P the button.

Automatic switch off
The driving speed is higher than 15 km/h.

Function restriction

The system might not warn of an obstacle e.g. in the following cases, or a warning may only be issued incorrectly.

- Unfavourable weather conditions.
- The detected obstacles are moving.
- Sensor signals are not reflected by the surface of the obstacles.
- It is a small obstacle, e.g. a stone or a pillar.

Settings

The system settings are made in the infotainment system in the following menu.

CAR > > P

Or:

MENU > > > P

Troubleshooting

After switching on, an audible signal sounds for 3 seconds and there is no obstacle near the vehicle
› Get the help of a specialist company.

After switching on, the symbol flashes in the button P
› Get the help of a specialist company.

After switching on, not all scanned areas are displayed on the Infotainment screen
› Move the vehicle forward or backward a few meters.
› If the scanned areas are still not displayed, obtain the help of a specialist garage.

Rear view camera


Functionality

When reversing, the area behind the vehicle is displayed in the Infotainment screen complete with orientation lines.

The camera is equipped with a cleaning system. Cleaning takes place automatically when the rear window is washed.

Orientation lines and functional surfaces


Orientation lines

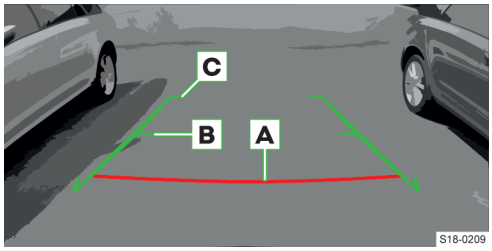

A Distance about 40 cm
B Distance about 100 cm
C Distance about 200 cm

The distance between the side lines corresponds approximately to the vehicle width including mirrors.

Function surfaces

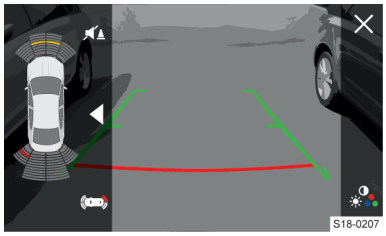

/ Turns off the display of the area behind the vehicle

Brightness, contrast and colour settings of the screen

Switching audible parking signals on/off

◀/▶ Switching the parking aid view on/off.

Parking aid full screen view.

Operating conditions

✓ The luggage compartment lid is closed.
✓ The ignition is switched on.
✓ The driving speed is lower than 15 km/h.

Operation

Switching on
› Engage reverse gear.

Switching off
› Disengage reverse gear.


Restriction

The camera image is distorted in contrast to the naked eye. The display may only be used to estimate the distance.

Some items may not be displayed properly on the screen. These include narrow columns, wire mesh fences, grids or road bumps.


Rear Traffic Alert

Functionality

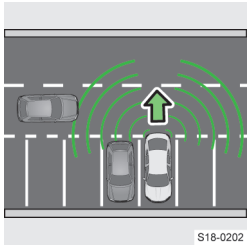
S18-0202

When reversing, the Rear Traffic Alert warns of approaching vehicles.

Vehicle with Parking Aid
If an approaching vehicle is detected in the area behind your vehicle, a graphical warning is displayed in the Infotainment. At the same time, a continuous tone sounds.

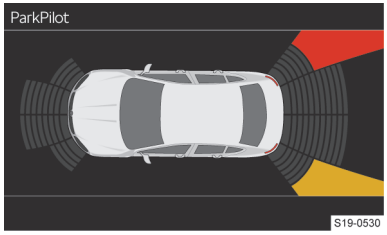

S19-0530

- Vehicle in the collision area - risk of collision!
- Approaching vehicle

Vehicle without parking assist
If an approaching vehicle is detected in the area behind your vehicle, the a warning is displayed in the instrument cluster display, indicating to the driver to monitor the traffic behind. At the same time, an acoustic signal sounds.

Operating conditions

✓ No accessories are connected to the trailer socket.

Function restriction

Manoeuvre Assist's functionality may be limited in unfavourable weather conditions.

Settings

The system is activated or deactivated on the display of the instrument cluster in the menu item *Assistants*.

The system is activated or deactivated in the following menu in the Infotainment system.

CAR > > P

Or:

MENU > > > P

Troubleshooting

Message regarding system unavailability

› Stop the engine and start again.
› If the system is still not available, seek the help of a specialist garage.

Engine, exhaust system and fuel

Bonnet


Open the engine compartment lid

Before opening


› Make sure that the wiper arms are folded against the windscreen.

› Keep everyone away from the engine compartment.


to open

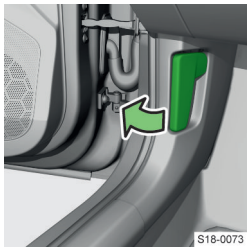

› Pull the release lever underneath the dash panel.

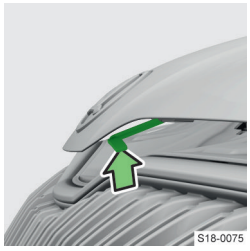

› Release the lock.

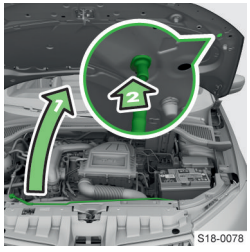

› Open the hatch.

› Take the flap support out of the bracket and insert the end of the support into the opening in the flap.

Close

› Raise the flap.

› Unhook the flap support and insert it into the holder.

› Fold the bonnet down and release it with a distance of 30 cm remaining.

› Check that the bonnet is closed.

NOTICE

▸ Do not press an open flap.

Engine oil

Checking the fill level and topping up

Test conditions

✓ The vehicle is on a horizontal surface.

✓ The parked engine is warm.


Checking the level

› Wait a few minutes for the engine oil to flow back into the oil sump.

› Remove the dipstick and wipe with a clean cloth.

› Insert the dipstick as far as it will go and pull it out again.

› Read the oil level and push the dipstick back in again.

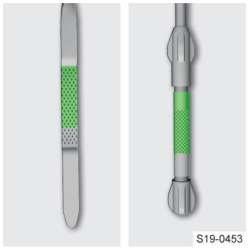

The oil level must be within the marked range.

NOTICE

Risk of damage to the engine and the exhaust system!

▸ The oil level must not be outside the marked range. If it is not possible to top up the engine oil or if the oil level is above the marked range, do not continue driving. Stop the engine and seek the help of a specialist garage.

▸ Do not use any oil additives.

Consumption

Depending on driving style and operating conditions, the engine consumes some oil, up to 0.5 l/1000 km. Consumption may be higher over the next 5000 km.

Refilling

› Unscrew the cover of the engine oil filler opening.

› Top up the oil to the correct specification in 0.5 litre portions.

› Check the oil level.

› Screw on the cover of the engine oil filler opening.

Specification

Ask a specialist garage for the correct engine oil specification for your vehicle.

If no oil of the correct specification is available, **max. 0.5 l** of oil with the following specifications may be used until the next oil change.

▸ VW 504 00, VW 508 00, ACEA C3, ACEA C5.

Changing

Have the oil changed by a specialist garage.

Troubleshooting

Engine oil pressure too low

flashes, lights up at the same time ⚠

› Check the engine oil level.

The oil level is OK, the warning light continues to flash:

› Stop the engine and seek the help of a specialist garage.

Engine oil level too low

illuminates together with ⚠
Message regarding required engine oil top up

› Check the engine oil level, top up with oil if required.

Engine oil level too high

illuminates together with ⚠
Message regarding the need to reduce the engine oil level

› Check the engine oil level.

The oil level is too high:

› Drive on, exercising appropriate caution.
› Seek the help of a specialist garage.


Engine oil level sensor impaired

illuminates together with ⚠
Message regarding the engine oil sensor

› Drive on, exercising appropriate caution.
› Seek the help of a specialist garage.

Coolant

Coolant temperature display

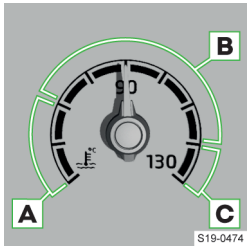

A Cold area
› Avoid high engine speeds.
B Operating range
C High temperature range

Checking the fill level and topping up

Test conditions

✓ The vehicle is on a horizontal surface.
✓ The engine is turned off and cooled.

Checking the level



The fill level must be within the marked range.

› If the fill level is below the mark **MIN**, top up the coolant.

NOTICE
Danger of damage to the engine compartment!
▸ Do not top up the coolant above the marked area. The coolant could be forced out of the cooling system when heated.

NOTICE
There must be a small quantity of coolant in the tank.
▸ Do not add coolant when the tank is empty.
▸ Stop driving! Seek the help of a specialist garage.

Refilling

CAUTION
Risk of scalding!
The cooling system is pressurised.
▸ Do not open the cap of the coolant expansion tank while the engine is warm. Let the engine cool down.

› Place a rag on the lid of the tank and carefully unscrew the lid.
› Refill with coolant of the correct specification.
› Screw on the cap until it clicks into place.

Specification
Use the G12evo (TL 774 L) additive for refilling.

NOTICE
Risk of damage to the cooling system and the engine!
Adding coolant that does not conform to the correct specification can reduce the corrosion protection of the cooling system.

Troubleshooting

Coolant level is too low

illuminates together with ⚠
Message concerning the required coolant check

› Check the coolant level.

The coolant level is OK:

› Check the fuse for radiator fan, replace if required » page 126, *Replacing a fuse*.

The fuse is OK, the indicator light comes on again:

› Stop driving! Seek the help of a specialist garage.

Coolant temperature too high

illuminates together with ⚠
Report regarding the engine overheating

› Stop driving.
› Stop the engine and allow it to cool.
› Drive on after the indicator light goes out.

Engine fault

illuminates together with ⚠

› Stop driving!

› Stop the engine and seek the help of a specialist garage.

There is no coolant of the correct specification available

› Top up with distilled or demineralised water.
› Have the correct coolant mixing ratio corrected by a specialist garage as soon as possible.

Another substance was used for topping up, other than distilled or demineralised water:

› Have the coolant changed by a specialist garage.

It is not possible to top up with a sufficient amount of coolant

› Stop driving.
› Stop the engine and seek the help of a specialist garage.

There is a loss of coolant

› Top up the coolant and seek the help of a specialist garage.

Engine electronics

Troubleshooting

Petrol engine control faulty

EPC illuminates
Driving in emergency mode is possible - a noticeable reduction in engine performance may occur.

› Drive on carefully, get the help of a specialist company.

Particle filter

Troubleshooting

Clogged particle filter

illuminates together with ⚠

› Clean the filter.

When the indicator light is on, it must be assumed that fuel consumption will be higher, engine power will be reduced, and the START-STOPP function will not be available.

Filter cleaning

Conditions for cleaning

✓ The engine is warm.
✓ For vehicles with manual transmission, observe the gear recommendation shown in the display of the instrument cluster.

Cleaning procedure

› Drive at a speed of at least 80 km/h at engine speeds between 3000-5000 rpm.
› Release the accelerator pedal and let the vehicle roll with the gear engaged for a few seconds.
› Repeat this procedure several times.

If the filter is cleaned successfully, the indicator light goes out .

If the indicator light does not go off within 30 minutes, the filter was not cleaned.

› Continue driving, exercising appropriate caution, and seek the help of a specialist garage.

Exhaust control system

Troubleshooting

Emission control system faulty

illuminates
Driving in emergency mode is possible - a noticeable reduction in engine performance may occur.

› Continue driving, exercising appropriate caution, and seek the help of a specialist garage.

Fuel filler flap

Opening the fuel filler flap



› Press the flap and open it.

Petrol

What you should be mindful of

⚠ **DANGER**
Risk of death!
Fuel and fuel vapours are explosive.

NOTICE
Risk of serious damage to the engine and the exhaust system!
▸ **Never run the fuel tank completely empty!**

If you would like to operate your vehicle in a country other than that intended for vehicle operation, please contact a ŠKODA Partner. They will let you know whether a suitable fuel is offered in the associated country.

Regulations

Standards
Petrol must comply with European standard EN 228 (in Russia, GOST 32513-2013).

Only use **unleaded petrol** that contains **max** 10% bioethanol **(E10)**.

We recommend using petrol with additives, which is available at petrol stations at the petrol pumps.

Octane number
Use the petrol with the octane number prescribed for your vehicle.

Petrol with an octane number that is one **higher** than the one prescribed for your vehicle can be used without restriction.

NOTICE
Risk of damage to the engine and the exhaust system!
- ▸ If petrol is used that has an octane number that is lower than the one prescribed for your vehicle, then drive at moderate speeds with minimal engine stress.
- ▸ Fill up with the prescribed octane number as soon as possible.
- ▸ Do not use petrol with an octane number that **lower** than **91**!

Prescribed petrol 95 / min. 92 or 93 RON / ROZ
We recommend using**95** RON petrol.

92 or. **93** RON petrol may be used as an option (low power loss, slightly increased fuel consumption).

In an **emergency**, **91** RON petrol may be used (low power loss, slightly increased fuel consumption).

Prescribed petrol min. 95 RON / ROZ
Use min. **95** petrol.

Using higher octane petrol than 95 RON may result in improved performance and lower fuel consumption.

In an **emergency 91**. **92** or. **93** RON may be used (low power loss, slightly increased fuel consumption).

Prescribed petrol 98 / (95) RON / ROZ
We recommend using**98** RON petrol.

95 RON petrol may be used as an option (low power loss, slightly increased fuel consumption).

In an **emergency 91**. **92** or. **93** RON may be used (low power loss, slightly increased fuel consumption).

Additive

NOTICE
Risk of damage to the engine and the exhaust system!
- ▸ Do not use petrol containing metal-based additives, e.g. manganese, iron, lead, and do not use, for example, any LRP petrol – lead replacement petrol.
- ▸ Do not add any additional additives to the petrol in accordance with EN 228.
- ▸ If petrol is not used in accordance with EN 228, we recommend obtaining information from a specialist company regarding the possible use of petrol additives approved by ŠKODA AUTO.

Requirements for refuelling

✓ Vehicle unlocked.
✓ Ignition off.

Refilling

› Open the tank flap.



› Turn the tank cap in the direction of the arrow and remove it.
› Place the tank cap on the tank flap.
› Insert the fuel nozzle into the fuel filler neck up to the stop and refuel.
› Do not continue refuelling after the fuel nozzle switches off.
› Remove the fuel nozzle and put it back on the petrol pump.
› Place the fuel cap on the fuel filler neck and turn it in the opposite direction to the arrow until it clicks into place.
› Close the tank flap and click into place.


Troubleshooting

If fuel other than unleaded petrol has been refuelled according to the standards applicable to your vehicle

› Do not start the engine or switch on the ignition.
› Seek the help of a specialist garage.

Technical data

The fuel prescribed for your vehicle is indicated on a sticker on the inside of the fuel filler flap.

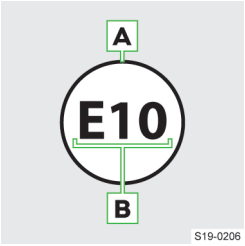

A Unleaded petrol
B Organic share as a percentage

The fuel tank has a capacity of about 45 litres, including a reserve area.

illuminates - the fuel level has reached the reserve area.

Vehicle battery and fuses

Vehicle battery

What you should be mindful of

Explanation of the warning symbols on the vehicle battery

Wear safety goggles!

Battery acid is highly caustic. Wear gloves and eye protection.

Keep fire, sparks, and open flames away from the vehicle battery! Do not smoke!

When charging the vehicle battery, a highly explosive gas mixture is produced.

Keep children away from the vehicle battery.

Refer to the manual!

Functionality - Discharge protection

Possible causes of battery discharge

▸ Frequent short journeys.
▸ Low temperatures.
▸ Vehicle stationary for a long period of time.

System-related discharge protection measures

▸ Increasing the engine idling speed.
▸ Switching off certain consumers or limiting their power.

Measures to be taken when vehicle stationary for more than three weeks

› Disconnect the ⊖ terminal of the vehicle battery.


Checking and charging the vehicle battery

Checking the condition

The battery condition is checked by a specialist garage during servicing.

Checking the acid level

Applies to a vehicle battery with an acid level indicator.

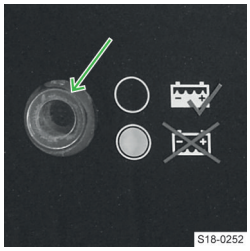

› Tap on the indicator before testing, to clear air bubbles.

▸ Black colour - the acid level is OK.

▸ Colourless or pale yellow colour - acid level is too low, the battery must be replaced.


Requirements for the charging process

✓ Ignition off.

✓ Power consumers switched off.

Vehicle battery charging process

To charge the vehicle battery fully, set a charging current of max. of 0.1 times the battery capacity.

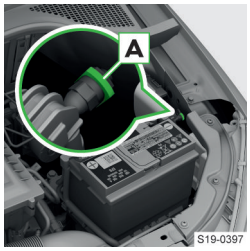

Earth point

› Connect the ⊕ terminal of the charger to the ⊕ terminal of the vehicle battery.

› Connect the ⊖ terminal of the charger to the earth point A.

› Plug the charger's power cable into the socket and switch on the device.

› After charging, switch off the charger and unplug the power cable from the socket.

› Disconnect the charger terminals from the vehicle battery.

⚠ WARNING

Risk of explosion!

▸ During charging, hydrogen is released. An explosion can also be caused by sparks, for example, when disconnecting or loosening the cable connector.

▸ Never charge a frozen or thawed vehicle battery.

▸ Do not carry out the so-called quick charging of the vehicle battery yourself, but have it carried out by a specialist garage.

ⓘ NOTICE

A flat vehicle battery can freeze easily!

Troubleshooting

Vehicle battery does not charge while the engine is running

illuminates together with ⚠

› Seek the help of a specialist garage.

Engine fault

illuminates together with ⚠

› Stop driving!

› Stop the engine and seek the help of a specialist garage.

Disconnecting, connecting and replacing

⚠ CAUTION

Risk of fire!

▸ Do not mix up the connection cables.

Disconnect

› Close all electrically operated windows.

› Switch off the ignition and any connected power consumers.

› Disconnect the ⊖ terminal and then the ⊕ terminal.

Connect

› Connect the ⊕ terminal and then the ⊖ terminal.

After switching on ignition, the indicator lights illuminate briefly. from the isolation box.

› If, after a short distance, one of the above-mentioned indicator lights does not go out, seek the help of a specialist garage.

Commission these functions after disconnecting and connecting the vehicle battery

▸ Clock setting » page 51.

▸ Window operation » page 27.

Changing

The new vehicle battery must have the same parameters as the original battery. Have the replacement carried out by a specialist garage.

Using the jump-starting cable

What you should be mindful of

⚠ WARNING

Risk of explosion and chemical burns!

▸ Do not jump start with the battery of another vehicle under the following conditions.

  ▸ The discharged vehicle battery is frozen. A discharged vehicle battery can freeze at temperatures just below 0°C.

  ▸ The battery acid level is too low » page 123.

Use jump leads with a sufficient cross section and insulated terminal clamps.


The rated voltage of both batteries must be 12V. The capacity (in Ah) of the charging battery must not be significantly lower than the capacity of the discharged battery.

Jump-starting with the battery of another vehicle

⚠ **WARNING**
Risk of injury and danger of vehicle damage!
- Lay the jump start cables so that they cannot become caught by rotating parts in the engine compartment.


ⓘ **NOTICE**
Short circuit!
- The non-insulated parts of the terminal clamps must not touch each other.
- The cable connected to the positive pole of the battery must not come into contact with electrically conductive vehicle parts.
- The vehicles must not touch each other.

Connect the jump start cable
› Connect the terminal clamps of the jump start cables in the order shown in the legend.

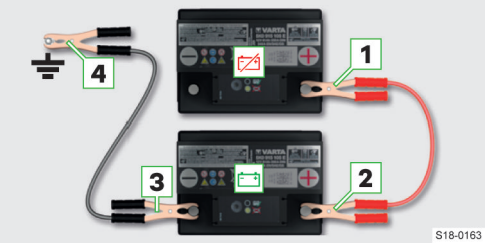

- discharged battery / - current-emitting battery

1 ⊕-pole of the discharged battery
2 ⊕-pole of the current-emitting battery
3 ⊖-pole of the current-emitting battery
4 ⏚ Earth point of the engine to be started

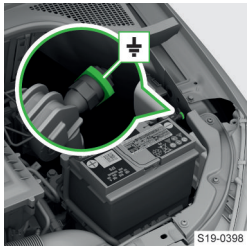

Earth point

Start the engine
› Start the engine of the current-giving vehicle and let it idle.
› Start the engine of the vehicle with the flat battery.
› If the engine of the vehicle with the flat battery does not start within 10 seconds, repeat the starting procedure after approximately 30 seconds.

Disconnecting the cable
› Disconnect the cables in the reverse order from connection.


Fuses

What you should be mindful of

ⓘ **NOTICE**
Fire hazard and risk of damage to the electrical system.
- Do not repair fuses or replace them with stronger fuses.
- Replace the defective fuse with a new fuse with the same amperage.
- We recommend using replacement fuses from the ŠKODA Genuine Accessories range. These guarantee reliable and safe consumer protection.
- If a newly inserted fuse blows again, seek the help of a specialist garage.

ⓘ One fuse may belong to several consumers. One consumer may have several fuses.

Functionality

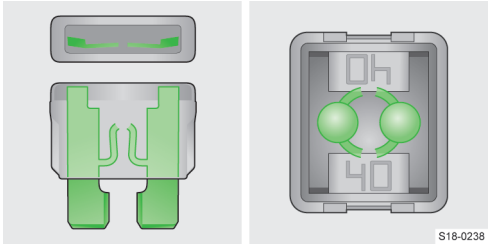


Blown fuse

Conditions for replacing a fuse

✓ Ignition key removed (vehicle without starter button).
✓ Ignition switched off and driver's door open (vehicle with starter button).
✓ All consumers switched off.

Replacing a fuse

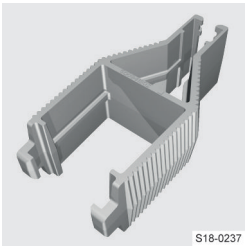

- Replace the fuse with the clip located under the cover of the fuse box in the dash panel.
- Use the appropriate end of the clamp according to the fuse dimensions.

Fuses in the dash panel

Overview

Access to the fuses



- Loosen and remove the cover in the area A.
- Change the fuse.
- First place the cover on top and then snap it in at the bottom.

Fuses overview



Fuses:

A Left-hand drive

B Right-hand drive


Fuse number	Consumer
1	Left parking light, parking light, high-mounted brake light
2	Central locking, front and rear window washer system (vehicle with ACC)
3	Ignition
4	Right light, rear fog light, license plate light
5	Power windows - driver
6	Interior lighting
7	Horn
8	Tow hitch
9	Operating lever beneath the steering wheel, engine control unit (vehicle without KESSY), automatic gearbox (vehicle without KESSY), ESC (vehicle without KESSY), towing equipment (vehicle without KESSY), power steering (vehicle without KESSY)
10	Power windows - rear left
11	Headlamp cleaning system
12	Infotainment screen
13	Not used
14	Operating lever under the steering wheel, light switch, ignition key removal lock (vehicle with automatic transmission), diagnostic connector, headlight flasher, rain sensor, light sensor, reversing camera
15	Air conditioning, automatic transmission
16	Instrument cluster, emergency call
17	Alarm system, horn
18	Databus
19	Not used
20	Not used
21	Not used
22	Front and rear windshield washer (vehicle without ACC)
23	Not used
24	Air conditioning, heating
25	Not used
26	Heating of the front seats
27	Rear window wiper
28	Not used
29	Airbags
30	Light switches, reversing light switch, exterior mirrors, feed for the central toolbar, feed for the side toolbar, rear view mirror, air-conditioning system, park assist
31	Fuel pump, radiator fan, cruise control, diagnostics connection
32	Headlamp levelling, LED headlights
33	Clutch pedal switch, engine start
34	USB charge function
35	"Blind Spot" detection
36	Heating of the front seats
37	Radar
38	Not used
39	Not used
40	Databus

Fuse number	Consumer
41	Heated rear window
42	Power windows - front passenger
43	Tow hitch
44	Cigarette lighter, 12-volt power socket
45	Power windows - rear right
46	Front and rear window washer, operating lever under the steering wheel
47	Tow hitch
48	Tow hitch
49	Fuel pump
50	Infotainment
51	Exterior mirror heating, washer nozzle heating
52	KESSY (keyless locking and starting system)
53	Steering column lock (vehicle with KESSY)
54	Not used
55	Not used
56	Not used
57	Not used
58	Not used
59	Not used

Fuses in the engine compartment

Overview

Access to the fuses

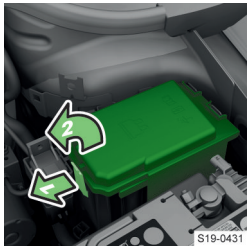


- › Simultaneously press the locking button on the fuse box cover and remove the cover.
- › Change the fuse.
- › Fit the cover and click into place.

NOTICE

Danger of water entering the fuse box.

- ▸ Fit the cover correctly and click into place securely.

Fuses overview

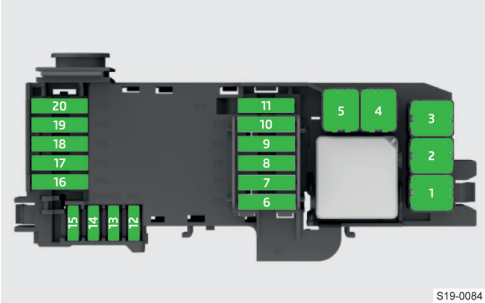

Fuse number	Consumer
1	Radiator fan
2	Not used
3	ESC, if necessary ABS
4	Not used
5	Not used
6	Automatic gearbox
7	Engine control system
8	Windscreen wiper
9	Battery data module
10	ESC, if necessary ABS
11	Vacuum pump for the brake system
12	Injectors, fuel metering valve, oil pressure control, exhaust gas recirculation cooler valve, vacuum pump
13	Brake pedal switch
14	Coolant pump, engine components
15	Engine control system
16	Starter
17	Engine control system
18	Radiator fan, wastegate, oil temperature sensor, valve for activated charcoal filter, valve for intake manifold
19	Lambda probe
20	Ignition coils

Wheels


Tyres and rims

What you should be mindful of

NOTICE
- Protect tyres from contact with lubricants and fuel.
- Always store wheels and tyres in a cool, dry and dark place. Tyres without rims should be kept upright.
- Alloy rims can be damaged by grit.

Causes of uneven tyre wear
- Improper tyre pressure.
- Driving style (e.g. fast cornering, rapid acceleration and braking).
- Wheel position error.
- Incorrect wheel balancing.

Wheel changes

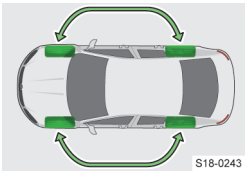

For uniform wear on all tyres, we recommend that you change the wheels every 10,000 km according to the schedule.

Instructions for tyre mounting
› Comply with the specified direction of travel, otherwise the driving characteristics may be impaired. The direction of rotation of the tyres is marked by arrows on the wall of the tyre.
› Always replace tyres by axle.

additional information
Only use approved radial tyres of the same type, size (rolling circumference) and the same tread pattern on one axle.

Approved tyre sizes are specified in the technical vehicle documentation and in the declaration of conformity (in the so-called COCDocument).

The declaration of conformity can be obtained from a ŠKODA partner (applies to some countries and some model variants).

Overview of tyre labelling

Explanation of the tire labelling
e.g. 185/60 R 15 84 H

185 Tyre width in mm
60 Height/width ratio in %
R Code letter for the type of tyre - Radial
15 Rim diameter in inches
84 Load index
H Speed icon

Load index
The load index indicates the maximum permissible load for each individual tyre.

83 487 kg
84 500 kg
85 515 kg
86 530 kg
87 545 kg
88 560 kg

Speed icon
The speed icon indicates the maximum permissible vehicle speed with tires fitted in the respective category.

S 180 km/h
T 190 km/h
U 200 km/h
H 210 km/h
V 240 km/h
W 270 km/h

WARNING
- Do not exceed the maximum permissible load and speed for the mounted tires.

Tire wear indicator



There are wear indicators in the profile base of the tires, which indicate the permissible minimum profile depth.

Markings on the tire flanks using the letters TWI or other symbols, e.g. △, mark the position of the wear indicators.

A tyre is to be regarded as worn out when this wear indicator is flush with the tread.

The tread depth can be measured with a tread depth gauge on the ice scraper. The ice scraper is located on the inside of the fuel filler flap.

WARNING
Risk of accident!
- Do not use worn tires.

Tire manufacturing date
The date of manufacture is indicated on the tyre sidewall.

For example, DOT ... 10 19 means that the tire was manufactured in the 10th week of 2019.

WARNING
Risk of accident!
- Do not use tires that are older than 6 years.

Troubleshooting

Help with a flat tire

- ▸ Spare wheel and emergency spare wheel » page 129.
- ▸ Changing the wheel and raising the vehicle » page 130.
- ▸ Breakdown set » page 131.

Change in tire pressure

illuminates

› Stop the vehicle.

› Check the tires and tire pressures.

Show tires with changed pressure

In the following menu, select the menu item for displaying the tyre condition.

CAR >

Or:

MENU > >

All-season or winter tires

Usage

All-season or winter tyres improve handling in winter weather conditions. They are characterised by 'M+S' and a mountaintop and snowflake symbol .

What you should be mindful of

For the best possible handling, use tyres on all four wheels with a minimum tread depth of 4 mm.

Change winter tyres to summer tyres at the appropriate time. Summer tyres have better driving and braking characteristics on snow- and ice-free roads and at temperatures above 7 °C.

Conditions of use

If all-season or winter tires are used that have a lower speed category than the actual maximum speed of the vehicle, then proceed as follows.

› Set the speed limit in the Infotainment according to the category of the fitted tires.

› In the driver's field of view, affix a warning label with the maximum value of the speed category intended for the tyres fitted (applies only to certain countries).

Settings

The speed limit setting for tyres is set in the Infotainment in the following menu item.

CAR > >

Or:

MENU > > >

Snow chains

Usage

The snow chains improve driving in wintry road conditions.

⚠ **WARNING**

Risk of accident as well as tyre damage!

- ▸ Do not use chains on routes that are free from snow and ice.

What you should be mindful of

› Before fitting the snow chains, remove the full wheel trims.

› Only mount the snow chains on the front wheels.

Technical specifications

Permitted rim / tire combinations for the installation of the snow chains.

Rim size	Wheel size
5Jx14 ET35	175/70 R14

Only use snow chains with links and locks no larger than 9 mm.

Rim size	Wheel size
6Jx15 ET38	185/60 R15

Only use snow chains with links and locks no larger than 13 mm.

Spare and emergency spare wheel

Overview

Spare wheel

- ▸ The dimensions of a full-featured spare wheel correspond to the dimensions of the wheels installed on the vehicle.
- ▸ A temporary spare wheel is provided with a warning label on the rim. This wheel is intended to enable you to reach the nearest specialist garage.

Inflate a space saver wheel with the maximum prescribed pressure.

Emergency wheel

A warning label is displayed on the rim of the temporary spare wheel. This wheel is intended to enable you to reach the nearest specialist garage.

An emergency wheel is significantly narrower than the wheels mounted ex-factory.

Remove and insert the wheel on vehicles without a sound system

The spare wheel or emergency wheel is mounted in a recess under the floor covering or the variable loading floor in the boot.

Remove



› Loosen the retaining belt and take out the box with the tool kit.
› Unscrew the lock nut.
› Take out the wheel.

Insertion

› Insert the wheel into the wheel well with the outside facing downwards.
› Pull the fixing band through the opposite holes in the wheel rim.
› Screw in the locknut until it stops.
› Replace the box with the tool kit into the wheel and secure it with the tape.

Changing the wheel and raising the vehicle

What you should be mindful of

Before changing

› Park the vehicle safely and secure it against rolling away.
› Turn off the engine.
› Let all passengers get out. During the wheel change they should not stand on the road, e.g. behind the crash barriers.
› Close all doors, the luggage compartment and engine compartment flaps.
› If a trailer is coupled, uncouple it.

Lift the vehicle

⚠ **WARNING**
Always secure the jack's base plate against slipping!
▸ Place a large, firm surface under the jack on a loose surface.
▸ Place a non-slip pad, e.g. a rubber doormat, under the jack on a smooth surface.
▸ Always lift the vehicle with the doors closed.
▸ Do not insert any body parts under the raised vehicle.
▸ Do not start the engine of the lifted vehicle.

ⓘ **NOTICE**
Risk of vehicle damage!
▸ Make sure that the jack is attached correctly to the bridge of the sill.

After having been changed

› Check the tyre pressure on the mounted wheel and adjust if necessary.
› For vehicles with a tire control display, save the tire pressure values in the system.
› Have the tightening torque of the wheel bolts of the mounted tyres checked with a torque wrench as soon as possible.

The specified tightening torque is 120 Nm.

Drive carefully until the tightening torque is checked.

Replace the damaged tyre. It is not recommended to repair the tyre.

⚠ **WARNING**
Risk of accident!
▸ Too low a tightening torque may cause the wheel to disengage while driving.
▸ Excessive tightening torque can damage the thread and deform the rim.

⚠ **WARNING**
Risk of accident!
▸ Do not grease or lubricate screws.
▸ Do not use corroded or damaged screws.

Changing the wheel and raising the vehicle

Loosen screws

› If the vehicle has covers over the wheel bolts or wheel trims, remove them.

⚠ **WARNING**
▸ If you step on the key end when loosening the screw, hold on to the vehicle for better stability.




Some vehicles may have anti-theft wheel bolts that protect the wheels from theft.

› Insert the upper section on the anti-theft wheel bolt until it stops.




› Place the key on the wheel bolt or on the attachment piece.
› Turn the screw a maximum of half a turn so that the wheel does not come loose and fall off.

Pickups for the jack

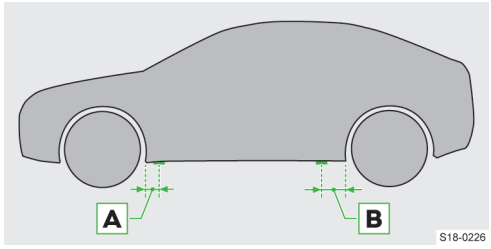

A 16 cm
B 22 cm

Position the jack and raise the vehicle
Use the jack from the tool kit.

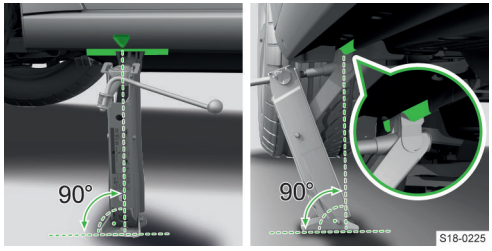

› Position the jack at the jacking point closest to the wheel to be replaced.
› Insert the crank into the mount on the car jack.
› Support the base plate of the jack with its full area resting on level ground and ensure that the jack is located in a vertical position at the jacking point.
› Use the crank to raise the jack until its claw encloses the bar.
› Continue to lift the vehicle until the wheel is just off the floor.

Changing a wheel
› Unscrew the screws and place them on a clean surface.
› Remove the wheel carefully.
› Attach the wheel.
› Slightly screw in the screws.
› Lower the vehicle.

NOTICE
▸ Applies to factory installed or from ŠKODA Original wheel covers supplied: Install the anti-theft wheel bolt according to the position marked on the back of the wheel cover.


Tighten screws
› Tighten the opposite wheel bolts including the anti-theft wheel bolt one after the other.
› Reinstall the cover caps of the wheel bolts or the full wheel covers.

Keep the label with the code number of the anti-theft wheel bolts. Based on this, a replacement attachment piece can be purchased from the ŠKODA Original parts.

Breakdown kit

Content overview

The kit is located in a box under the floor covering in the luggage compartment.

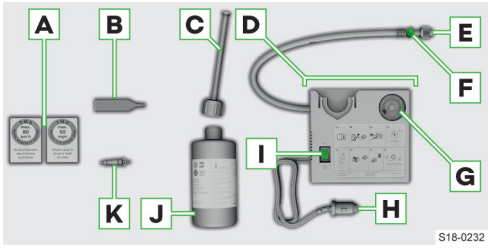

A Stickers with the speed indication
B Valve insert driver
C Filling hose with sealing plug
D Air compressor (the layout of the controls may be different depending on the type of air compressor)
E Tyre inflation hose
F Button for pressure reduction
G Pressure display
H 12 volt cable connector
I ON and OFF switch
J Tyre inflation bottle
K Replacement valve core

The declaration of conformity is included with the air compressor or the log folder.

Conditions of use

Performing a repair with the breakdown kit not at all intended to replace a permanent repair on the tyre.

The purpose of the repair is to get you to the nearest specialist garage.

Change the tyre repaired by the breakdown kit as soon as possible.

Before using the kit

› Park the vehicle safely and secure it against rolling away.
› Turn off the engine.
› Let all passengers get out. During the wheel repair they should not stand on the road, e.g. behind the crash barriers.
› Close all doors as well as the luggage compartment and engine compartment flaps.
› If a trailer is coupled, uncouple it.

After using the kit

If a tyre pressure of 2.0 bar cannot be achieved, the tyre is too damaged and cannot be sealed with the puncture set.

› Stop driving. Get the help of a specialist company.

Once a tyre pressure of 2.0–2.5 bar is achieved, continue the journey at a maximum speed of 80 km/h (50 mph).

› Avoid full throttle accelerations, hard braking and fast cornering.

Instructions for driving with repaired tires

› The pressure of the repaired tyre must be checked after driving for 10 minutes.
› If the tyre pressure is 1.3 bar and less, do not continue! Get the help of a specialist company.
› If the tyre pressure is higher than 1.3 bar, correct the pressure to the correct value of at least 2 bar and continue driving.

NOTICE

Danger of compressor damage!

▸ After the maximum running time of the air compressor has expired, let it cool down for a few minutes.

WARNING

Risk of burns!

The tire inflation hose and air compressor can become hot when inflated.

▸ Allow the air compressor and hose to cool down for a few minutes.

Usage restrictions

Do not use the kit in the following cases.

▸ The rim is damaged.
▸ The outdoor temperature is below the minimum temperature indicated in the manual of the tyre filling bottle.
▸ Tyre punctures are greater than 4 mm.
▸ There is damage to the tyre wall.
▸ The expiry date stated on the tyre inflation bottle has expired.

Self-help

Seal the tyres

› Unscrew the valve cap from the damaged tyre.
› Unscrew the valve core with the valve insert and place it on a clean surface.
› Shake the tyre inflation bottle back and forth with sealant.
› Screw the inflation hose onto the tyre inflater bottle. The film on the closure is pierced automatically.
› Remove the plug from the inflation hose and push it fully onto the tyre valve.
› Hold the bottle with the bottom facing upwards and fill all of the sealing agent into the tyre.
› Remove the filler plug from the valve.
› Screw in the valve insert.

Inflate tyres

› Fit the tyre inflation hose of the air compressor to the tyre valve.
› Secure the vehicle with the parking brake.
› Start the engine.
› Plug the connector into the 12 volt socket .
› Turn on the air compressor.
› Once a tyre pressure of 2.0-2.5 bar is reached, turn off the air compressor.

Observe the maximum running time of the air compressor according to the directions of the repair kit manufacturer.

› If an air pressure of 2.0 - 2.5 bar has not been reached, remove the tyre inflation hose from the valve.
› Drive approx. 10 metres forwards or backwards to allow the sealing agent to distribute in the tyre.
› Replace the tire inflation hose on the valve and repeat the inflation procedure.

Tyre pressure

What you should be mindful of


NOTICE

▸ Always adjust the tyre pressure to the load.
▸ Check the pressure in all tyres at least once a month and before each longer ride.
▸ Check the pressure when the tyres are cold. If necessary, do not reduce the elevated pressure when the tyres are warm.
▸ After each change in tyre pressure, save the new values in the tyre control display.

⚠ **WARNING**
Risk of an accident!
▸ If tyre pressure loss is very quick, try to stop the vehicle carefully without heavy steering or heavy braking.

Stickers with prescribed tire pressure values

The sticker with prescribed tyre pressures is located on the inside of the fuel filler flap.

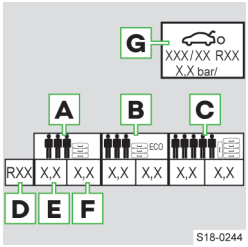

A Filling pressure for half a load
B Filling pressure for environmentally friendly operation (slightly lower fuel consumption and pollutant emissions)
C Filling pressure for full loading
D Tire diameter in inches
This information only serves as information for the prescribed tyre pressure. This is not a list of approved tire sizes for your vehicle. These are in the vehicle's technical documentation, as well as in the declaration of conformity (in the so-called COCDocument).
E Tyre pressure reading for the front axle tyres
F Tyre pressure reading for the rear axle tyres
G Prescribed tyre pressure value for the emergency wheel

Tyre pressure monitor

Functionality

The tyre pressure monitoring indicator indicates a change in tyre pressure.

Warning when pressure changes
(!) illuminates
› Stop the vehicle.
› Check the tyres and tyre pressures.

Show tyres with changed pressure
› In the following menu, select the menu item for displaying the tyre condition.

MENU > >

Or:

CAR >

Functional restriction

The system is unable to provide a warning in the event of a very rapid tyre pressure loss, e.g. sudden puncture.

The system function may be restricted in the following cases.
▸ Uneven loading of the wheels, e.g. with a trailer attached.
▸ Sports driving style.
▸ Driving on unpaved roads.
▸ Fitted snow chains.

Save tyre pressure values

Save tyre pressure values in Infotainment
› Inflate the tyres to the stipulated inflation pressure.
› Turn on the ignition.
› In the following menu, select the menu item for displaying the vehicle condition.

CAR >

Or:

MENU > >

› Using the functional areas ◀ ▶ select the menu for the tyre control display.
› Tap the functional surface (!) SET .
› Then follow the instructions on the screen.

Save tyre pressure values with the button
› Inflate the tyres to the stipulated inflation pressure.
› Turn on the ignition.
› Release the button down.

The indicator light lights up in the instrument cluster (!) from the isolation box. After storing the tyre pressure values, an acoustic signal sounds and the warning light goes out.
› Release the button .

Save the tyre pressure values in the following cases.
▸ Change in tyre pressure.
▸ Change of one or more wheels.
▸ Change of position of a wheel on the vehicle.
▸ Always after covering a distance of 10,000 km or once a year.

Troubleshooting

Tyre pressure display faulty
(!) flashes for about 1 minute and stays on
› Stop the vehicle, switch off the ignition and start the engine.

If the (!) symbol flashes again after starting the engine, there is a system fault.

› Continue driving, exercising appropriate caution, and seek the help of a specialist garage.

Wheel bolt cover caps

Pull off and install cover caps



Pull off

› Push the pull-off clamp onto the cover cap up to the stop.

› Pull off the cover cap.

Install

› Push the cover cap onto the wheel bolt to the stop.

Full wheel frame

Pull off panel and install

Applies to factory installed covers or covers delivered with ŠKODA original accessories.

Remove

› Hang the bracket for pulling off the wheel covers at the edge of one of the openings in the cover.

› Push the wheel wrench through the bracket, support it on the tire and pull off the cover.

Install

› Place the cover on the intended valve section on the rim.

If an anti-theft wheel bolt is used, it must be in the position marked on the cover.

› Press the trim, starting at the valve, into the rim on both sides until it engages around the entire circumference.


NOTICE

▸ Use hand pressure, do not hit the wheel cover.

Storage space and interior equipment

Equipment in the boot

Overview

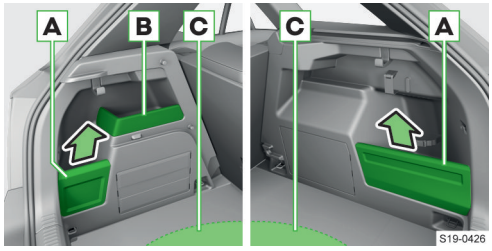

A Removable partition of the storage compartment
Max. load 2.5 kg


B Fixed storage compartment
Max. load 1.5 kg

C Under the floor covering: Storage compartment for spare or emergency wheel and vehicle tools
Load on floor covering max. 75 kg

Emergency equipment

Overview of the emergency equipment

Emergency equipment in the luggage compartment

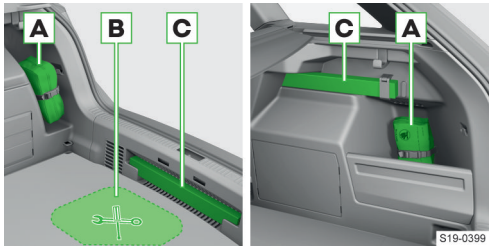

A Positioning of the first aid kit (depending on equipment)

B Tool kit

C Positioning of the warning triangle (depending on equipment)

Storage compartment for the reflective vest


The storage compartment for the reflective vest is in the storage compartment of the front door.

Fire extinguisher under the passenger seat



Tool kit


Depending on the equipment, not all of the following components may be included in the tool kit.

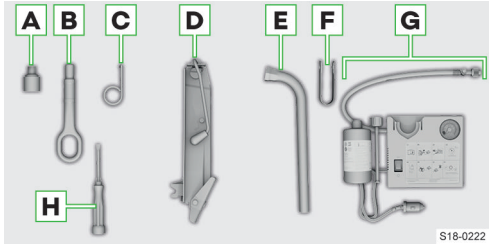

- A Attachment for the anti-theft wheel bolts
- B Towing lug
- C Bracket for removing the full wheel covers
- D Jack with sign and crank
- E Wheel wrench
- F Removal clip for the wheel bolt cover caps
- G Breakdown set
- H Screwdriver


The declaration of conformity is enclosed with the jack or the logbook folder.

Storage compartment for the reflective vest

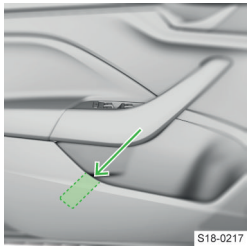


Fasteners in the boot

Overview

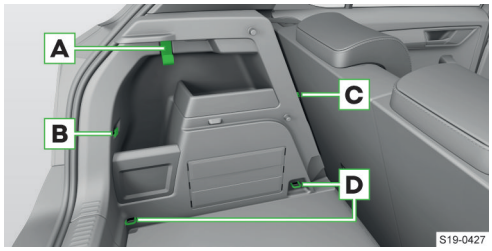


- A Pocket hook
  Max. load 7.5 kg
- B Fastening elements for fastening the fastening nets and the multifunctional bag
- C Lashing eyes for fastening the fastening nets and the multifunctional bag
- D Lashing eyes for securing the load, the fastening nets and the multifunctional pocket
  Max. load 350 kg

Other fastening elements

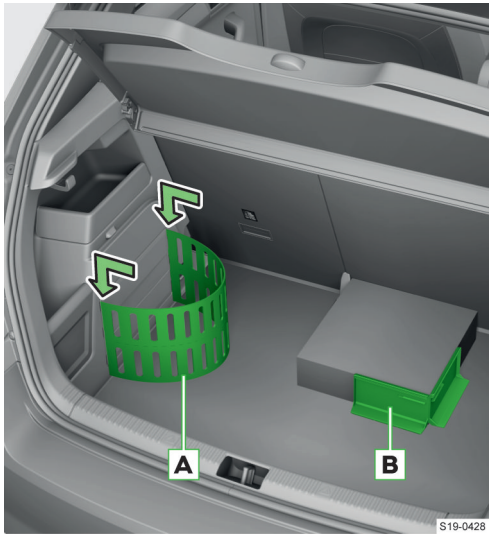


- A Flexible storage compartment
  Max. load 8 kg
- B Cargoelements
  Max. load 8 kg
  A storage compartment for the cargo elements is located under the floor covering in the boot.
  › Fold up the cargo element and fasten it to the floor covering in the boot.

Bag hooks in the boot

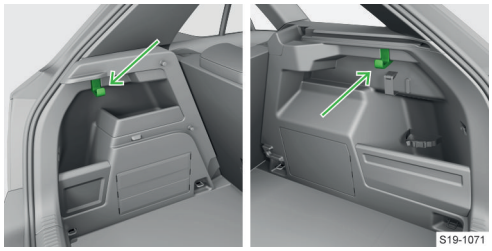


The maximum load for the hook is 7.5 kg.

Flexible storage compartment

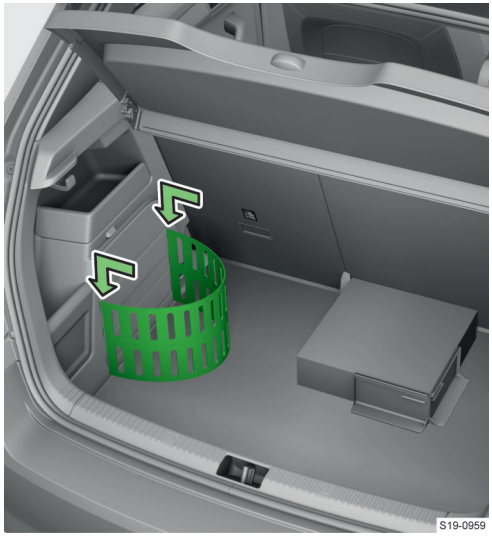

The maximum permissible load for the storage compartment is 8 kg.


Cargoelements in the luggage compartment

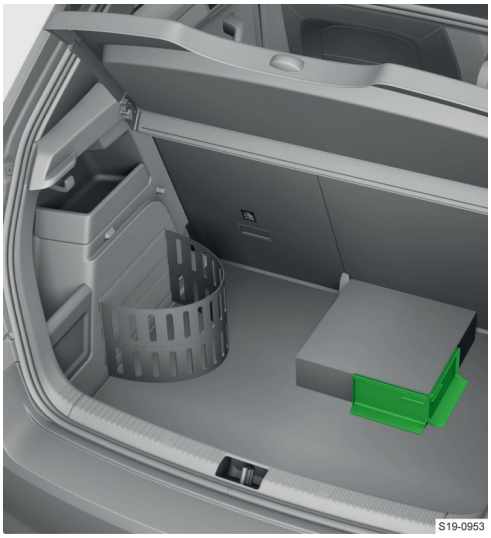

The maximum load of the Cargoelements is 8 kg.

Fastening nets

Overview

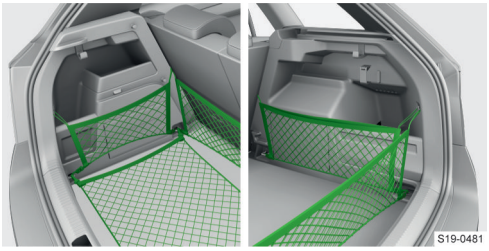


The maximum load of the respective fastening nets is 1.5 kg.

Net partition

Fasten the net partition

Fasten

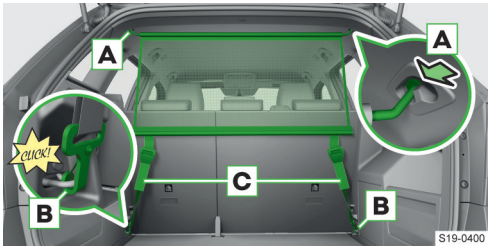

› Remove the variable loading floor or adjust it to its lowest position.
› Remove the roll-up cover or fold the rear seat backrests forward.
› Insert the crossbar into the mount A on one side and push it forwards.
› Attach the bar to the other side in the same way.
› Snap the carabiners B into the lashing eyes.
› Pull the straps firmly at the free ends C.

Loosen

Loosening takes place in the reverse order to fastening.

Double-sided floor covering

Overview


Depending on the equipment, the vehicle may be equipped with a double-sided floor covering in the luggage compartment. One side is made of fabric, the other side is washable.

Rigid boot cover

Removing and inserting

The maximum load of the other fastening nets is 1 kg.

Removing

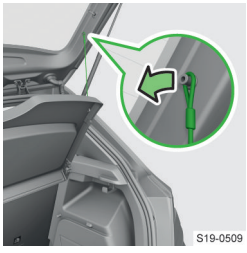


› Unhook the straps.



› Hold the raised cover in place and press the underside of the cover on both sides.
› Remove the cover.

Inserting

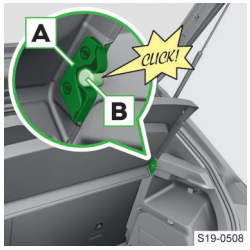

› Insert the attachment A opposite to the holder B on both sides of the boot.
› Press on the cover from above until it engages.
› Hook in the retaining straps.

Store the cover behind the rear seats



› Insert the cover behind the rear seats.

Install cover in the lowered position



› Insert the holder opposite the bracket on both sides of the boot.
› Press on the front and rear cover from above until it snaps into place.

The maximum load of the cover in the lowered position is 2.5 kg.

Lowered position of the luggage compartment cover



› Insert the holder opposite the bracket on both sides of the luggage compartment.
› Press on the front and rear cover from above until it snaps into place.

Roll-up luggage compartment cover

Operation

Extending



› Pull out the cover on the handle until it clicks into place.

Retracting



› Press the cover in the handle area.

The cover rolls up.

It is possible that the cover rolls more slowly during winter weather conditions.

Removing and inserting

Take out and insert the roll-up cover



› Press the end of the crossbar and take out or insert the cover.

Variable loading floor in the boot


Setting the position

The maximum load of the variable loading floor is 75 kg.

Set the variable loading floor to the upper or lower position



› Lift the variable load floor and pull it towards you.

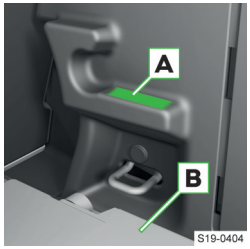


› To set in the upper position, place the variable loading floor in the front area on area A.
› To set in the lower position, place the variable loading floor in the front area on space B.



› Press the variable loading floor forward and hang up.

Fasten the raised variable loading floor in the upper position

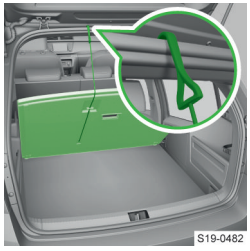

› Secure the raised variable loading floor to the frame of the boot lid with the hook.


NOTICE
Before closing the boot lid, remove the hook from the frame.

Removing and inserting

› Lift the variable loading floor up to a distance of about 15 cm below the boot cover and then remove it.
› Insertion takes place in reverse order.

Overview of passenger compartment


Overview of practical equipment in the front

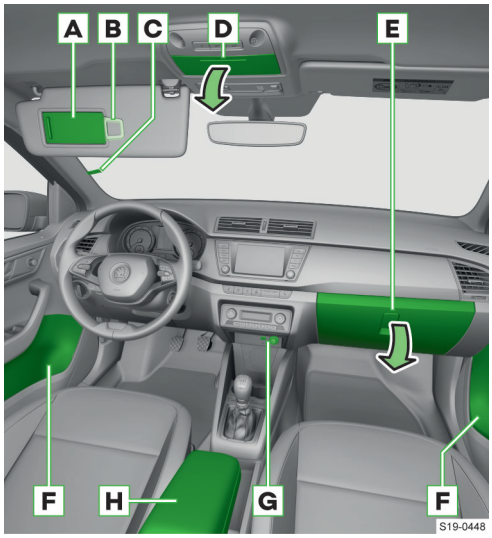

A Make-up mirror
B Note holder
C Parking ticket holder
D Spectacle compartment
Max. load 0.25 kg
› Press on the lid to open.
E Storage compartment
Max. load 3 kg
In the compartment there is a bottle rack with a capacity of max. 1 l.
› Pull on the handle to open.
F Storage compartment
▸ Bottle holder with a capacity of max. 1.5 l
▸ Storage compartment for the waste container
▸ Storage compartment for the reflective vest
G USBconnection and 12 volt socket
The USBconnection can be used for charging and data transfer.
H Opening and adjustable armrest with storage compartment
› Pull the handle to open the compartment.

NOTICE
▸ Do not leave any heat-sensitive objects in the spectacle compartment D.


Overview of practical equipment at the rear

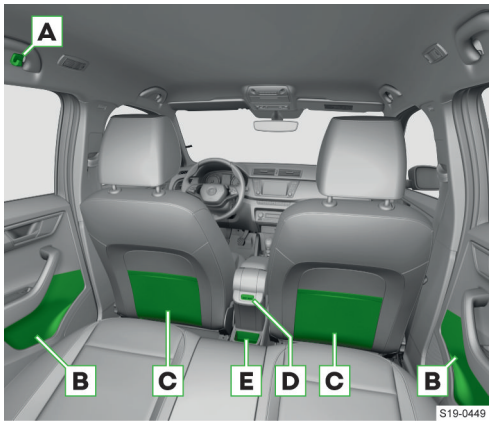

A Coat hooks
Max. load 2 kg
B Storage compartment
▸ Bottle holder with a capacity of max. 0.5 l
▸ Storage compartment for the reflective vest
C Storage bag
D USBconnections
The USB connections are for charging only.
E Storage compartment

WARNING
▸ Only hang light clothing on the hooks. Do not leave heavy and sharp objects in the pockets of the clothing.
▸ Do not use hangers to hang clothes.

Parking ticket holder

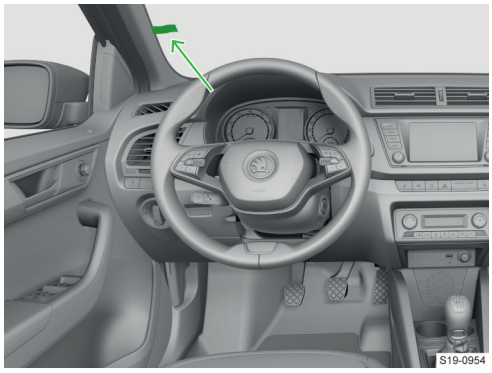

Bottle tray in the storage compartment of the front door



The tray is suitable for bottles with a max. size of 1.5 l.

Bottle tray in the storage compartment of the rear door



The tray is suitable for bottles with a max. size of 0.5 l.

Bottle tray in the storage compartment on the passenger side



In the compartment there is a bottle rack with a capacity of max. 1 l.

USBConnections



The USBconnection can be used for charging and data transfer.



The USBconnections can only be used for charging.

Glasses compartment



The maximum load for the compartment is 0.25 kg.

NOTICE

- Do not leave any heat-sensitive objects in the glasses compartment.

Storage compartment for an umbrella

Overview



Cup holder

Overview

Cup holder in front




⚠ **CAUTION**
Risk of scalding!
▸ Never put hot beverage containers in the cup holder.

ⓘ **NOTICE**
Danger of damage to the electrical system and the panels from spilled drinks.

Waste container

Replace bags

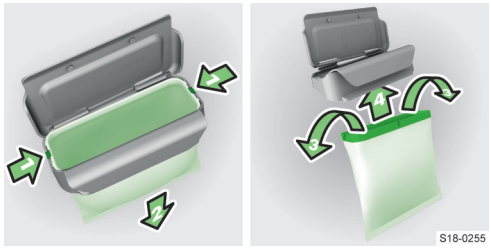

Ashtray and cigarette lighter

What you should be mindful of

⚠ **CAUTION**
Risk of burning or fire!
▸ Do not use the ashtray for storing hot or burning objects.
▸ Handle the lighter carefully.

service

The ashtray is inserted in the cup holder.


Open the ashtray



Remove the lid



cigarette lighter

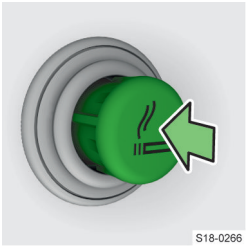


› Push in the lighter.
› Wait until the glowing lighter pops back out.
› Remove and use the lighter.
› Push the lighter back in.

The socket of the cigarette lighter serves as a 12V socket.


Tablet holder

Settings

Tilt and turn

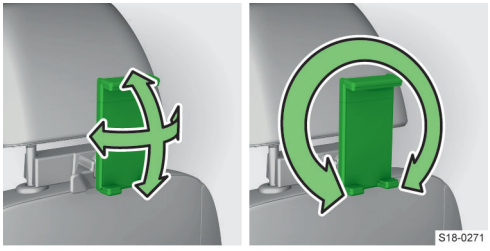

adjust size

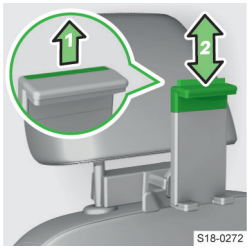


› Pull out the locking tab and move the upper part of the holder to the desired position.


Set the minimum size of the empty holder to avoid noise while driving.

Removal and Insertion

Fasten behind the headrests

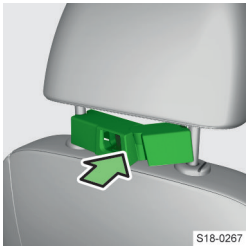


› Place the open adapter on the front guide rods of the headrest and clip in carefully.

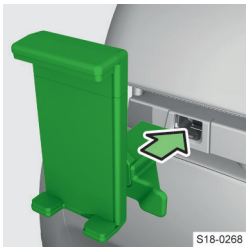


› Clip in the holder in the adapter.

Removal

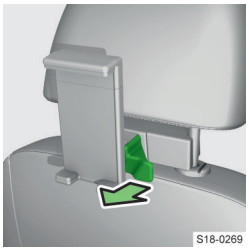

› Press the safety button and unfold the holder.

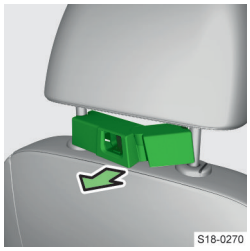

› Press on the adapter and remove it.

Technical data

The holder is for fixing a tablet with a height of min. 12.2 cm and max. 19.5 cm.

The maximum load for the holder is 0.75 kg.

12-Volt power socket

Operating conditions

NOTICE

Risk of damage to the electrical system of the vehicle!

▶ Use the sockets only for the connection of approved electrical accessories with a total power consumption of up to 120 watts.

NOTICE

Danger of damage to the connected consumers!

▶ Switch off the consumers before switching the ignition on or off and before starting the engine.

Roof rack and hitch

Roof rack

Overview

The maximum weight of the load incl. roof rack is 75 kg.



Depending on the equipment, the roof bars can be attached at the attachment points A and B or to the roof rail.

Removable tow coupling


What you should be mindful of

⚠ **WARNING**
Risk of accident and danger of vehicle damage!
- ▸ Before each time you make a journey when using the tow bar, check that it is seated correctly and is secured in the mounting recess.
- ▸ Do not use the tow bar if it is damaged or incomplete.
- ▸ Do not carry out any modifications to the hitch.

⚠ **WARNING**
Risk of an accident!
Dirt in the mounting recess prevents the ball rod from being attached securely!
- ▸ Keep the hitch mounting recess clean at all times.


Overview


Hitch carrier

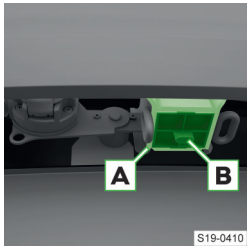

A Mounting recess
B Cover for the mounting recess


Ball rod

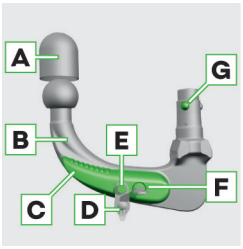

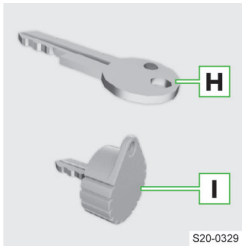



A Protective cap
B Ball rod
C Operating lever
D Lock cap
E Operating lever release bolt
F Lock
G Locking balls
H Key - Variant 1
I Key - Variant 2

Setting the ready position

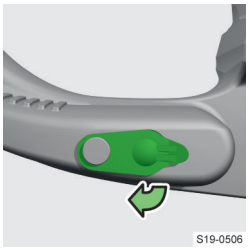

› Remove the cap from the lock.

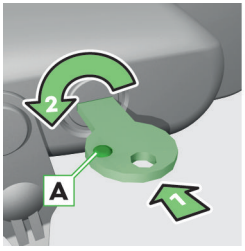

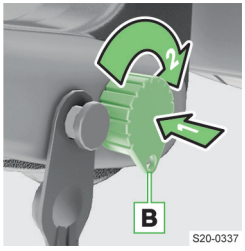


› Insert the key into the lock.

The green mark A must point upwards or the eyelet B must point downwards.

› Turn the key.


The red mark or eyelet must be pointing upwards.

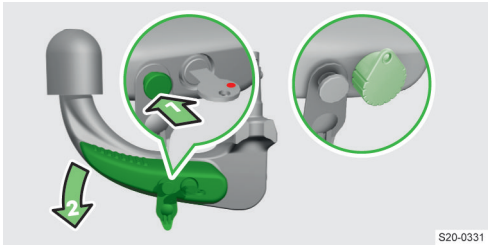

› Push the release bolt in as far as it will go, while at the same time pressing the operating lever as far as it will go.

The operating lever remains locked in this position.

Prerequisites for installing the tow bar

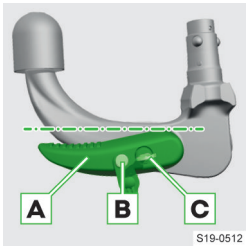

✓ The operating lever A is locked in the lower position.


✓ The release bolt B can be moved freely.

✓ The red mark on the key C is pointing upwards (applies to key variant 1). The key loop C points upwards (applies to key variant 2).

✓ The key cannot be removed or turned to another position.

Inserting tow bar

Inserting

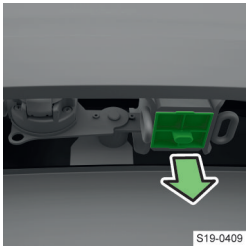

› Remove the cover cap from the mounting recess.



› Grab hold of the tow bar from below.

› Insert the tow bar into the mounting recess until it clicks into place.

The control lever rotates upwards and the release pin moves out.


The red as well as the green part of the release bolt is visible.


⚠ **CAUTION**

Risk of injury!

▸ When attaching the tow bar, keep your hands out of the operating lever's range of rotation.

Applying

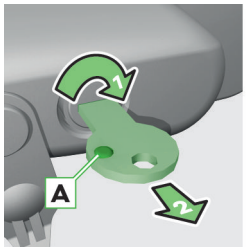


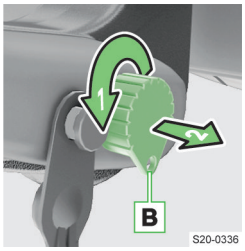

› Turn the key.


The green mark A must point upwards or the eyelet B must point downwards.

› Remove the key.

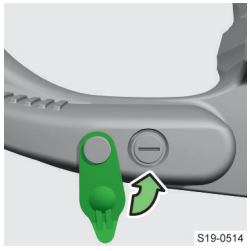

› Fit the cap on the lock.

Inspecting attachment

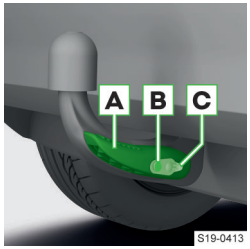


✓ The tow bar sits firmly in the mounting recess. It has no clearance when it is shook with force.

✓ The operating lever A is in the upper position.
✓ The release bolt B is protruding fully. The red as well as the green part of the release bolt is visible.
✓ The key is removed and the cap C attached to the lock.


Removing the tow bar


NOTICE
Danger of damage to vehicle!
▸ When unlocking, no trailer or other accessories may be coupled to the tow bar.

Put the protective cap onto the ball head before removing the tow bar.

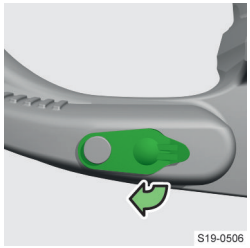

› Remove the cap from the lock.

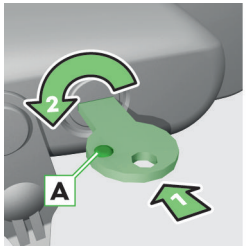

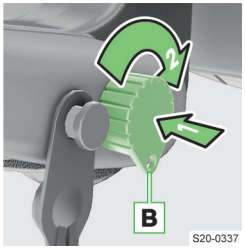


› Insert the key into the lock.

The green mark A must point upwards or the eyelet B must point downwards.


› Turn the key.

The red mark or eyelet must be pointing upwards.

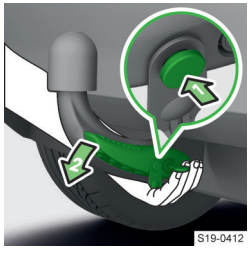

› Grab hold of the tow bar from below.
› Push the release bolt in as far as it will go, while at the same time pressing the operating lever as far as it will go.

The tow bar disengages and falls freely down into your hand.

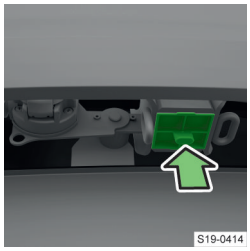

› Insert the cover cap for the mounting recess.

NOTICE
Risk of damage to the key!
▸ Place the tow bar in the standby position, with the key upwards, and store in the box.

Coupling or uncoupling a trailer or accessory


The following information describes the procedure for coupling and uncoupling a trailer. The information also refers to another accessory, e.g. a bike carrier.

WARNING
Risk of an accident!
▸ Do not use the safety eye for towing.
▸ Distribute and fix the load correctly.

The trailer has a 13-pin electrical socket. If the trailer has a 7-pin connector, use a corresponding adapter from the ŠKODA Original Accessories.

Coupling

› Install the tow bar.

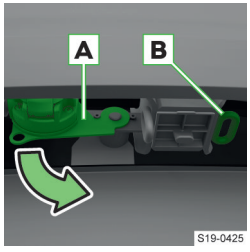

› Swivel out the electrical outlet A.
› Put the trailer drawbar onto the ball head.
› Plug the electrical trailer plug into the socket A.
› Hook the tear-off rope of the trailer onto the safety eye B. The tear-off rope must sag against the vehicle in all trailer positions.

Uncoupling

Uncoupling takes place in reverse order.

Power supply of the trailer power network

In the electrical connection between the vehicle and trailer, the trailer is powered by the vehicle.

NOTICE
Risk of damage to the vehicle electronics!
The total power consumption of all consumers connected to the trailer power supply must not exceed 350 watts.

Troubleshooting

When inserting the tow bar - the operating lever did not turn or the release pin did not come out


› Turn the control lever all the way down.
› Remove the tow bar from the mounting recess.
› Clean the tow bar and mounting recess contact surfaces.

When removing the tow bar - the tow bar did not fall freely into your hand after detachment

› Press on the tow bar with your other hand from top to bottom.

Technical data

Tow hitch attachment points

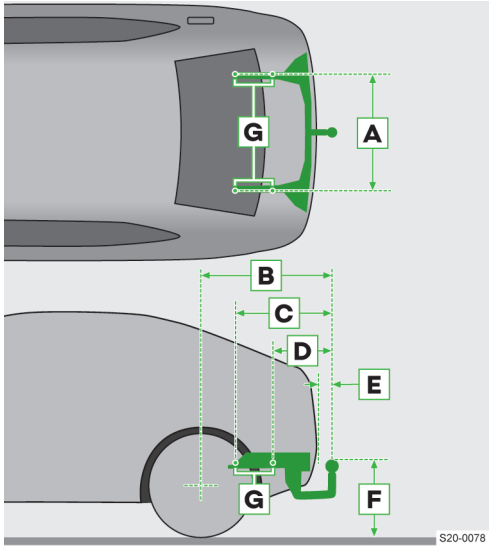

A Distance of the attachment points
B Length of the rear overhang to the centre of the ball head
C Distance of the front attachment point to the centre of the ball head
D Distance of the rear attachment point to the centre of the ball head
E Distance of the rear bumper to the centre of the ball head (according to the ECE-55 standard)
F Distance from the centre of the ball head to the road (according to the standard ECE-55)
G Fastening points on the body

	In mm	
	Fabia	Fabia Combi
A	955	957
B	766	1017
C	574.1	541.1
D	383.1	372.1
E	min. 65	min. 65
F	350-420	350-420

Maximum vertical load for trailer operation

The maximum vertical load for trailer operation depends on the engine type and the vehicle equipment.

The valid specification for your vehicle can be found in the technical vehicle documentation, (e.g. vehicle approval documentation, the COC document) or at a ŠKODA partner.

Other information (e.g. on the nameplate of the trailer device) merely provides information on the test values of the device.

Support load with mounted accessories

When using the accessories (e.g. bicycle carrier), the maximum length and the permissible total weight including load must be considered.

The maximum length of the mounted accessories (from the ball of the towing device) may not exceed 70 cm.

The permissible total weight of the installed accessory, including its load, corresponds to the maximum load on trailers.

This value applies if the centre of gravity is at a distance of no more than 30 cm from the towing device ball head.

If the distance of the centre gravity of the load to the ball head of the towing device is greater than 30 cm, then the max. permissible total weight of the accessory, including its load, decreases (e.g. at a distance of 60 cm from the ball head, the permissible weight decreases by half).

⚠ **WARNING**

Risk of an accident!

▸ Do not exceed the maximum vertical load.
▸ The permissible trailer load and the weight of another accessory, e.g. of the bike carrier, is not to be exceeded.

ⓘ **NOTICE**

Risk of damage to the trailer and the vehicle itself!

› When using the accessory (e.g. bicycle carrier), observe the maximum length and the permissible total weight of the accessory incl.

Maintaining and cleaning

Service events

service intervals
Compliance with service intervals is crucial for the life and value of the vehicle.

You will be notified of the due date for service with the symbol and the corresponding message on the display of the instrument cluster.

The specialist garage will inform you of the type of service interval, the option of changing this and the scope of service.

All services and the replacement or refilling of operating fluids are chargeable to the customer, even during the warranty period, unless the ŠKODA AUTO warranty conditions or other binding agreements determine otherwise.

Proof of service
A specialist garage stores the proof of service in the information system called Digital Service Plan.

The proof of service can be printed out.

Show service appointment
In Infotainment, select the following menu.

CAR › › Menu item for the service

Or:

MENU › › › Menu item for the service

Resetting information
We recommend that you do not reset the information regarding service events on your own. It can lead to incorrect setting of the service intervals and thus also to possible faults in the vehicle.

For vehicles with a variable service interval, new service interval values calculated according to the previous operating conditions will be displayed after the oil change service indicator is reset. These values will then continue to be adjusted according to the current operating conditions.

Service work, adjustments and technical changes

The instructions and guidelines from ŠKODA AUTO must be observed when carrying out any modifications, repairs or technical alterations to the vehicle.

Adhering to these instructions and guidelines helps ensure road safety and helps keep the vehicle in a good technical condition.

We advise only using ŠKODA Original Accessories and ŠKODA Original Parts which have been expressly approved for use on your vehicle. Reliability, safety and suitability for your vehicle are guaranteed with these.

ŠKODA Service Partner
All ŠKODA Service Partners operate according to the most recent guidelines and instructions from ŠKODA AUTO. Service and repair work is therefore carried out on time and at the appropriate quality. Adhering to these instructions and guidelines helps ensure road safety and helps keep the vehicle in a good technical condition.

We therefore advise having all modifications, repairs and technical alterations to the vehicle carried out by a ŠKODA Service Partner.

ŠKODA original parts
We recommend the use of ŠKODA Original Parts for your vehicle, as these parts are approved by ŠKODA AUTO. These parts correspond exactly to the ŠKODA AUTO regulations and are identical to the parts used in series production.

ŠKODA AUTO is able to warrant the safety, suitability, and long life of these products.

ŠKODA Service Partners are liable for any defects of ŠKODA Genuine Parts for a period of 2 years after sale in accordance with the materials defect liability, unless agreed otherwise in the purchase agreement.

ŠKODA original accessories
We recommend that you use ŠKODA Genuine Accessories in your vehicle. With these accessories, ŠKODA AUTO stands for safety, reliability and the suitability for your vehicle type.

ŠKODA Service Partners are liable for any defects of ŠKODA Genuine Accessories for a period of 2 years after installation or delivery in accordance with the materials defect liability, unless agreed otherwise in the purchase agreement or any other agreements.

Spoiler

⚠ **WARNING**
Risk of an accident!
- Only use the original spoiler on the front bumper in combination with the original spoiler on the boot lid.
- The original spoiler on the front bumper cannot be left on its own without the spoiler on the luggage compartment lid or in combination with an unsuitable spoiler on the luggage compartment lid.
- We recommend that you consult the ŠKODA Service Partner for any repairs to or replacement, addition or removal of spoilers.

Component protection
Some electronic vehicle components (such as the instrument cluster) are factory-equipped with component protection. This component protection ensures the functional limitation of these components in a

non-legitimate installation in another vehicle (e.g. after a theft) or operation outside the vehicle.

Interior

What you should be mindful of

NOTICE
- ▶ Use cleaning agents intended for cleaning and care of the individual materials.
- ▶ Do not use aggressive cleaning agents or chemical solvents.

Natural leather / Faux leather / Alcantara® suede / material

NOTICE
- ▶ Remove impurities as soon as possible.
- ▶ Do not use solvents, floor wax, shoe cream, stain remover or similar agents on Alcantara® suede seat upholstery.
- ▶ Make sure that natural leather is not moistened when cleaning and that no water seeps into the seams.
- ▶ Do not clean the roof cladding with a brush.

NOTICE
Risk of fading to the cover fabric.
- ▶ If necessary, do not leave the covers for long periods in the blazing sun.

- ▶ During use, the leather and Alcantara® and suede materials may show minor changes (e.g. folds or discolouration).
- ▶ Some clothing fabrics, e.g. dark denim, sometimes do not have sufficient colour fastness. As a result, discolouration that is clearly visible on the seat upholstery can occur. This is not a defect in the fabric.
- ▶ Sharp-edged zippers, rivets, clamps and similar garments can damage the upholstery in the vehicle. Such damages cannot be subsequently recognised as a justified complaint.

Plastic parts

NOTICE
Risk of damaging the dash panel.
- ▶ Do not attach fragrances and air fresheners to the dash panel.

Windows

NOTICE
Risk of damage to the filaments or the glass antenna.
- ▶ Do not stick stickers on the heating filaments.
- ▶ Do not use sharp objects (such as pot scrapers, etc.) to clean the windows.

Covers on electrically heated seats

NOTICE
Risk of damaging the heating system.
- ▶ Do not clean the seats with water or other liquids.
- ▶ Do not dry the seats by switching on the heating.

Seat belts

NOTICE
Risk of damage to the seat belts.
- ▶ Do not dry clean the seat belts.
- ▶ Allow cleaned belts to dry before rolling up.

Instructions for cleaning

Natural leather / Faux leather / Alcantara® / suede / material
- › Remove dust and dirt on the surface with a vacuum cleaner.
- › Remove fresh impurities with water, slightly moistened cotton cloth or woollen cloth; if necessary, use a mild soap solution and wipe with a dry cloth.
- › Remove stubborn stains with a suitable cleaning agent.
- › For regular care of natural leather, use the equipment provided for this purpose. After each clean, use a care cream with light protection and impregnation effect.
- › When looking after Alcantara®, remove stubborn hair from suede and fabric surfaces with a cleaning brush. Remove pills from materials with a brush.

Plastic parts
- › Remove impurities with water, slightly moistened cloth or sponge with a suitable cleaning agent if necessary.

Windows
- › Remove impurities with clean water and dry with a cloth provided for this purpose.

Infotainment screen
- › Remove any impurities on the screen using the cleaning agents provided.

NOTICE

Danger of screen damage!
- ▶ When removing dirt, do not press on the screen.

Covers on electrically heated seats
- › Remove impurities with a suitable cleaning agent.

Seat belts
- › Remove impurities with a soft cloth and mild soap solution.

Exterior

What you should be mindful of

⚠ **WARNING**
Risk of accident!
After washing the vehicle, the functionality of the brake system may be affected by moisture and, in winter, by ice.
▶ Dry and clean the brakes by braking several times.

NOTICE
▶ Bird droppings, insect residues, litter and sea salt residues, overflowed fuel, etc. are to be removed as soon as possible.
▶ Do not use rough sponges, pot scourers or similar to remove dirt.
▶ Use the appropriate cleaning agents to clean and care for the individual materials.
▶ Do not use aggressive cleaning agents or chemical solvents.
▶ Do not polish the vehicle in a dusty environment.

NOTICE
▶ Paint damage should be repaired as soon as possible.
▶ Do not treat matt lacquered parts with polish or hard wax.
▶ Do not polish foils.
▶ We recommend treating door seals and window guides with the appropriate tools from ŠKODA original accessories. These ensure that the protective lacquer layer of the seals and window guides is not attacked.
▶ Do not use abrasive cleaning agents to clean the rear view camera.

Before driving through a car wash

› Observe the usual specifications of the car wash, e.g. close all windows, fold the exterior mirrors, and the like.
› Set the wiper lever in position OFF .
› If there are special attachments on your vehicle, observe the instructions of the car wash operator.

After washing with a wax preservation

› Wipe off the windscreen wiper blades with a dry cloth.

Wash with a pressure washer

NOTICE
▶ Follow the operating instructions for the high-pressure cleaner. This particularly applies to information with respect to the pressure and spray distance from the vehicle surface.
▶ Do not direct the water jet directly at the following vehicle parts.
  ▶ Foils.
  ▶ Locks.
  ▶ Columns on the vehicle.
  ▶ Trailer socket.
  ▶ Swivelling ball bar.
  ▶ Sensors.
  ▶ Camera lenses.
  ▶ Plastic parts, chrome-plated and anodized parts.

Remove snow and ice

NOTICE
▶ Remove snow and ice with a plastic scraper or a suitable de-icing agent.
▶ Clean cameras with a hand brush.
▶ Only move the scraper in one direction.
▶ Do not use scratches or other sharp objects for foils.
▶ Do not remove snow and ice with hot or warm water.
▶ Do not remove snow and ice from surfaces with coarse dirt.

Instructions for cleaning

Handwash

› Wash the vehicle from top to bottom with a soft sponge or wash glove and plenty of water, if necessary with additional suitable cleaning agents.
› For foils and headlights, use a mild soap solution that contains two tablespoons of white neutral soap to one litre of lukewarm water.
› Use a glass cleaner for the windscreen wiper blades.
› Wash the cameras with clean water and dry with a suitable clean wipe.

NOTICE
▶ Wash out the sponge or wash mitt regularly.
▶ Use a different sponge for wheels, sills and the lower part of the vehicle than that used for the other vehicle parts.
▶ Do not wash the vehicle in the blazing sun.
▶ Do not dry the headlights or use sharp objects.
▶ Do not put pressure on the bodywork when washing.
▶ The temperature of the washing water may be a max. 60 °C.

After hand washing

› Rinse the vehicle and wipe it with a suitable clean cloth.

Vehicle paint

› Preserve the varnish at least twice a year with hard wax.
› Use a polish for matt lacquers.

Films
Films will age and become brittle – this is entirely normal: this is not an error.

The following factors have a negative effect on the life or colour fastness of the films.

- Sun rays.
- Moisture.
- Air pollution.
- Stones, e.g. due to the rebound of the cargo during transport on the roof rack.

Protection of hollow spaces
Corrosion-prone cavities of the vehicle are permanently protected by preservative wax at the factory.

› Remove spilled wax with a plastic scraper, clean stains with mineral spirits.

Underseal
The underside is permanently protected by the factory against chemical and mechanical influences.

› Have the protective coating checked by a specialist garage before starting and at the end of the cold season.


Wheels
› After washing, preserve the wheels with suitable means.

NOTICE
Severe dirt on the wheels can result in the wheels unbalancing.

Car jack
› If necessary, treat moving parts with suitable grease.

Tow hitch
› Coat the ball head of the towing device with a suitable grease whenever necessary.

Ice scraper on the fuel filler flap

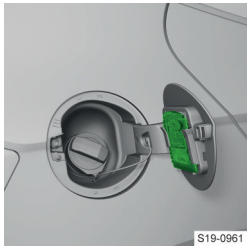

Technical data and specifications

Requirements for the technical data

The emission standard, information on fuel consumption and other information pertaining to your vehicle can be found listed in the technical vehicle documentation and in the declaration of conformity, in the so-called COC-document.

The information listed was determined in accordance with rules and under conditions that are stipulated by legal or technical regulations.

This and other information about your vehicle and the declaration of conformity can be obtained from a ŠKODA partner.


The details in the technical vehicle documentation and in the declaration of conformity take precedence over the information in this Owner's Manual. These details and values apply to your vehicle in the state and configuration at the time of delivery from the manufacturer. Retrofitting an accessory can have a negative impact on these details and values, in particular the values pertaining to fuel consumption and carbon dioxide (CO_2), which are specified in the vehicle documentation and in the declaration of conformity.

The listed performance values were determined without performance-reducing equipment, e.g. air conditioning system.

Vehicle identification data

Vehicle identification number (VIN)
The vehicle identification number is found at the following locations.

- Directly in the engine compartment on the suspension turret.
- On a plate under the windscreen in the lower left corner.
- On the type plate at the bottom of the middle body pillar of the vehicle.

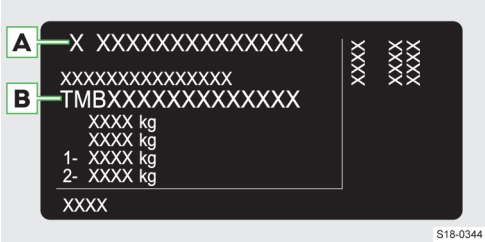

Type plate.

A Vehicle manufacturers

B Vehicle identification number (VIN)

VIN display
The display of VIN takes place in the infotainment under the following menu item.

CAR › ⚙ › Menu item for the Service

Or:


MENU › 🚗 › ⚙ › Menu item for the Service

Engine number
The engine number is embossed on the engine block.

Maximum permissible weights

The maximum permissible weights are listed on the nameplate.

The type plate is located at the bottom of the middle body pillar of the vehicle.

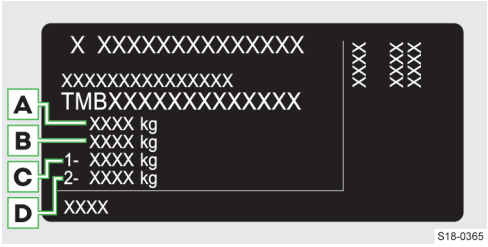

A Maximum permissible gross weight

B Maximum permissible towed weight (towing vehicle and trailer)

C Maximum permissible front axle load

D Maximum permissible rear axle load

Maximum permissible towed weight
The specified value is valid for altitudes up to 1000 m above sea level.

The engine output falls as the height increases, as does the ability to climb.

Therefore, for every additional 1,000 m in height (or part), the maximum permissible towed weight must be reduced by 10 %.

The towed weight is made up of the actual weights of the loaded towing vehicle and the loaded trailer.

Payloads
It is possible to calculate the approximate maximum payload from the difference between the permissible total weight and the operating weight.

The payload consists of the following components.

- The weight of the rider.
- The weight of all luggage and other loads.
- The weight of the roof, including the roof rack system.
- The weight of the equipment that is excluded from the operating weight.
- Trailer bearing load for trailer towing » page 147.

⚠ **WARNING**
Risk of accident and danger of vehicle damage!
- Do not exceed the specified values for the maximum permissible weights.

Operating weight

Information about the operating weight

The specification corresponds to the lowest possible operating weight without additional weight-increasing equipment. This includes 75 kg driver's weight, the weight of the operating fluids and the on-board tool kit and a fuel tank filled to min. 90%.

Operating weight

Engine type	Gearbox	Operating weight (kg)	
		Fabia	Fabia Combi
1.0 l/70 kW TSI	Manual gearbox	1116	1130 a)/1136
	DSG b)	1160	1180
1.0 l/81 kW TSI	Manual gearbox	1121 a)/1127	1141 a)/1147
	DSG b)	1154	1174
1.0 l/44 kW MPI	Manual gearbox	1081	1101
1.0 l/55 kW MPI	Manual gearbox	1081	1101
1.6 l/66 kW MPI	Manual gearbox	1105	1125
1.6 l/81 kW MPI	Automatic gearbox	1137	1157

a) Applies to cars with the EU6W emission standard.

b) Automatic dual-clutch transmission.

ⓘ Ask for the exact vehicle weight in a specialist garage.

Vehicle dimensions

Dimensions

Specification	Value (in mm)	
	Fabia	Fabia Combi
Vehicle height	1467	1467
Vehicle width with folded-in mirrors	1732	1732
Vehicle width with folded-out mirrors	1958	1958
Ground clearance of the vehicle	133	135
Vehicle length	3997	4262/4292 a)

a) Applies to the Fabia Combi Scout.

Engine specifications

Overview

- 1.0 l/70 kW TSI » page 153.
- 1.0 l/81 kW TSI » page 153.
- 1.0 l/44 kW MPI » page 154.
- 1.0 l/55 kW MPI » page 154.
- 1.6 l/66 kW MPI » page 154.
- 1.6 l/81 kW MPI » page 154.

1.0 l/70 kW TSI engine

Output (kW at rpm)	70/5000-5500			
Highest torque (Nm at rpm)	160/(1500-3500) a) 1800-3500			
Number of cylinders/displacement (cm^3)	3- 999			
Body	Fabia		Fabia Combi	
Gearbox	Manual gearbox	DSG b)	Manual gearbox	DSG b)
Maximum speed (km/h)	185 a)/186	186	186 a)/187	188
With specified gear engaged	4	6	4	6
Acceleration 0-100 km/h (s)	10.7/10.8 a)	11.1	10.7 a)/10.8	11.2

a) Applies to cars with the EU6W emission standard.

b) Automatic dual-clutch transmission.

1.0 l/81 kW TSI engine

Power (kW at 1/min)	81/5000-5500			
Highest torque (Nm at 1/min)	200/2000-3500			
Number of cylinders/displacement (cm^3)	3/999			
Transmission	Manual gearbox		DSG a)	
Body	Fabia	Fabia Combi	Fabia	Fabia Combi
Maximum speed (km/h)	196	197 b)/198	195	196
With specified gear engaged	5	5	6	6
Acceleration 0-100 km/h (s)	9.7	9.7	10.0	10.0

a) Automatic dual-clutch transmission.

b) Applies to cars with the EU6W emission standard.

1.0 l/44 kW MPI engine

Power (kW at 1/min)	44/5000-5500 (5000-6000) [a]	
Highest torque (Nm at 1/min)	95/3000-4300	
Number of cylinders/displacement (cm^3)	3/999	
Transmission	Manual gearbox	
Body	Fabia	Fabia Combi
Maximum speed (km/h)	157 [a]/158	161
With specified gear engaged	5	5
Acceleration 0-100 km/h (s)	16.4	16.6

[a] Applies to cars with the EU6W emission standard.

1.0 l/55 kW MPI engine

Power (kW at 1/min)	55/6200	
Highest torque (Nm at 1/min)	95/3000-4300	
Number of cylinders/displacement (cm^3)	3/999	
Transmission	Manual gearbox	
Body	Fabia	Fabia Combi
Maximum speed (km/h)	169	170
With specified gear engaged	5	5
Acceleration 0-100 km/h (s)	14.7	15.0

1.6 ltr./66 kW MPI engine

Power (kW at 1/min)	66/4250-6000	
Highest torque (Nm at 1/min)	155/3800-4000	
Number of cylinders/displacement (cm^3)	4/1598	
Transmission	Manual gearbox	
Body	Fabia	Fabia Combi
Maximum speed (km/h)	181	183
With specified gear engaged	5	5
Acceleration 0-100 km/h (s)	10.8	10.9

1.6 l/81 kW MPI engine

Output (kW at rpm)	81- 5800	
Highest torque (Nm at rpm)	155/3800-4000	
Number of cylinders/displacement (cm^3)	4- 1598	
Gearbox	Automatic gearbox	
Body	Fabia	Fabia Combi
Maximum speed (km/h)	189	190
With specified gear engaged	5	5
Acceleration 0-100 km/h (s)	11.1	11.2

Personal data

Personal customer data is collected, processed and used by ŠKODA AUTO in accordance with the provisions of the generally binding legal provisions.

The current declaration on the protection of personal data can be found on the following website:

▸ **https://www.skoda-auto.com/other/personal-data**

Information about the radio systems in the vehicle

Your vehicle has various radio systems.

Manufacturers of this radio equipment declare that this equipment complies with the requirements of **Directive 2014/53/EU** and the **Technical Regulation on Radio Equipment, approved by the Decision of the Cabinet of Ministers of Ukraine of 25 May 2017 no. 355**.

Information about **Directive 2014/53/EU**on the approximation of the laws of the Member States relating to the marketing of radio equipment, **Technical Regulation on Radio Equipment, approved by the Decision of the Cabinet of Ministers of Ukraine of 25 May 2017 No. 355**, as well as regarding **declaration of conformity**, can be viewed on ŠKODA web pages using the following link or by scanning the QR-code.

https://www.skoda-auto.com/services/red-doc

After this, proceed as follows:

1. Select the desired region.
2. Select Download Declaration of conformity against the desired model, to receive the certificates.

Examples of labelling of radio systems

Armenia

Australia and New Zealand

Belarus

Europe (countries that approve radio equipment as per EU guidelines)

Philippines

Moldova

Mongolia

Russia

Serbia

Taiwan

Ukraine

Vietnam

Rights arising from defective performance, ŠKODA warranties

Rights arising from defective performance
Your ŠKODA Partner, as a seller, is liable to you for material defects in your new ŠKODA vehicle, ŠKODA Genuine Parts and ŠKODA Genuine Accessories, in accordance with the legal requirements and the purchase contract.

The buyer is entitled to assert the rights arising from defective performance with the responsible ŠKODA partner from the time of vehicle handover. The date of the vehicle handover and the vehicle identification number (VIN) are properly documented in the "Vehicle delivery documentation" chapter in this Owner's Manual.

ŠKODA warranty for new cars
As well as the legal rights arising from defective performance, ŠKODA AUTO grants you the ŠKODA warranty for new cars (hereinafter referred to as the "ŠKODA Warranty"), according to the conditions described below.

Under the ŠKODA Warranty, the company ŠKODA AUTO shall provide the following services [1].

- Free repair of damage due to a defect that occurs in your vehicle within two years of the start of the ŠKODA Warranty.
- Free repair of damage due to paintwork flaws that occur on your vehicle within three years of the start of the ŠKODA Warranty.
- Free repair of rust corrosion on the body, which occurs on your vehicle within twelve years of the start of the warranty. In terms of rust corrosion on the body, the ŠKODA Warranty shall cover only rust corrosion through body panels from the inside to the outside.

The start of the ŠKODA Warranty is the day on which the new car is handed over for use by a ŠKODA partner to the first buyer who is not a ŠKODA Partner[2].

The ŠKODA Partner enters this date into the corresponding systems of the manufacturer. Any one ŠKODA Partner Partner can notify you of this date on request.

Vehicle repairs under the ŠKODA Warranty can be carried out by means of a replacement or repair of the defective parts. The ŠKODA Service Partner decides about the type of vehicle repair. The vehicle repair takes place in accordance with the availability of the ŠKODA Service Partners and within a reasonable period of time. Replaced parts become the property of the ŠKODA Service Partner.

There shall be no further claims arising from the ŠKODA Warranty. In particular, no claim for replacement, no right of withdrawal, no claim to purchase price reduction, or provision of a replacement car for the duration of repair and compensation.

The ŠKODA Warranty can be claimed at any ŠKODA Service Partner.

There are no claims under the ŠKODA Warranty if vehicle damage has occurred in causal connection with one of the following circumstances.

- The service work was not carried out on time and professionally according to the provisions of ŠKODA AUTO, or its execution was not proven by the customer when asserting claims under the ŠKODA Warranty.
- Damage refers to parts that are subject to natural wear, such as tyres, spark plugs, wiper blades, brake pads and brake discs, clutch, bulbs, synchronizer rings, batteries, etc.
- Installation, connection of parts or accessories, other adaptation or technical modification of the vehicle not approved by ŠKODA AUTO (e.g. tuning).
- Unauthorized use, improper handling (e.g. use in motor sport competitions or overloading), improper care and maintenance or unauthorized modifications to your vehicle.
- Non-compliance with provisions in the Owner's Manual or other factory-supplied instructions.
- External impact or influences (e.g. accident, hail, flood, etc.).
- Damage has not been reported immediately to a specialist company or has not been properly remedied.

The customer shall prove the lack of causation.

The present ŠKODA Warranty shall not affect the purchaser's statutory rights arising from unsatisfactory performance in respect of the seller of the vehicle and possible claims arising from product liability laws.

ŠKODA Mobility warranty
The Mobility Warranty provides you with a sense of certainty for journeys in your vehicle.

---

1) Based on the requirements of generally binding legal regulations or country-specific market requirements, the ŠKODA partner or importer can provide a warranty beyond the scope of the stated ŠKODA Warranty. This local warranty extends the scope of performance in accordance with the specific warranty conditions of ŠKODA partners or importers.

2) Due to the requirements of the generally binding country-specific regulations, the date of first registration can be given instead of the date of the vehicle handover.

As part of the Mobility Warranty, if your car breaks down as a result of an unexpected fault when you are on the move, you can access services to ensure your continued mobility. These services include the following: Breakdown service at the breakdown location and towing to the ŠKODA Service Partner, technical assistance by phone or on-site operation.

If your vehicle is not repaired on the same day, then the ŠKODA Service Partner may, if necessary, arrange additional subsequent services, such as replacement transport (bus, train, etc.), the provision of a replacement vehicle, and the like.

Specific claims for free provision of services under the ŠKODA Mobility Warranty only exist if your vehicle has remained in a causal connection with a defect which is to be remedied on the basis of fulfilment under the ŠKODA Warranty.

Check the conditions for provision of the Mobility Warranty for your vehicle with your ŠKODA Partner. They will also inform you of the detailed terms and conditions of the Mobility Warranty in relation to your vehicle. In the event that your vehicle is not covered by a mobility warranty, he will inform you of the possibilities for subsequent conclusion.

Optional ŠKODA Extended Warranty
If you also purchased a ŠKODA Extended Warranty when purchasing your new car, ŠKODA AUTO will provide you with a free repair of vehicle damage caused by a defect in the vehicle during the warranty period.

The ŠKODA Extended Warranty for your vehicle is valid for the agreed period or until the agreed mileage limit is reached, whichever comes first.

For the assessment of claims from the ŠKODA Extended Warranty, the conditions of the ŠKODA warranty described above apply to the appropriate extent.

The vehicle repair under the ŠKODA Extended Warranty can only be carried out by replacement or repair of the defective parts, whereby the ŠKODA service partner decides on the type of vehicle repair. The vehicle repair takes place in accordance with the availability of the ŠKODA Service Partners and within a reasonable period of time.

There shall in any case be no entitlement to further claims from the ŠKODA Extended Warranty. In particular, no claim for replacement, no right of withdrawal, no claim to purchase price reduction, or provision of a replacement car for the duration of repair and compensation.

The previously mentioned paint warranty and the warranty against rust perforation are unaffected by the ŠKODA extended warranty.

The ŠKODA Extended Warranty does not apply to exterior and interior foils.

Your ŠKODA partner will provide you with information about the detailed conditions of the ŠKODA Extended Warranty.

The ŠKODA Mobility Warranty and the ŠKODA Extended Warranty are only available in some countries.

Index

A

ABS 110
ACC 113
Automatic stop and start 113
Distance adjustment 114
Interruption of cruise control 114
Activation of online services 98
Adaptive Cruise Control 113
Air conditioning
see manual air conditioning 47
Air conditioning,
see Climatronic 48
Airbag 36
Fault 37
Installation locations 37
Release 36
Safety 18
Switch off the front passenger airbag 37
Turn off airbags 37
Alarm system 25
Trailer 25
All-season tyres 129
Analogue instrument cluster 50
Android Auto
Infotainment Amundsen 90
Infotainment Swing 68
see digital version of the manual 5
Apple CarPlay
Infotainment Amundsen 90
Infotainment Swing 68
see digital version of the manual 5
armrest
front 30
Ashtray 142
ASR 110
Assist systems
Driver assist 110
Park Assist 116
Assistance systems
Safety 19
Automatic Braking
see Front Assist 110
Automatic driving lights control
attitude 40
Automatic gearbox 104
shift manually with the shift paddles on the steering wheel 105
Automatic gearbox modes 104
Automatic operation of the Climatronic 48
Availability of ŠKODA Connect services 97

B

Battery
see vehicle battery 123
Battery acid 123
Blind spot assistant
functionality 115
Blind Spot Detect
Operating conditions 115
Restriction 115
Settings 115
Troubleshooting 116
Boot
Double-sided floor covering 137
Rigid cover 137
roll-up cover 138
see luggage compartment lid 28
Transporting objects safely 19
Variable loading floor 138
Boot cover 137
Boot lid
Automatic locking 28
Manually unlock 28
brake fluid 108
Brake fluid
Safety 17
Brakes 108
Handbrake 109
Breakdown call 100
Bulbs 41
Buttons / dials
Steering wheel 11

C

Car adaptations
Recommendations 148
Cargo elements 135
Central locking 22
SAFE function 22
Central locking button 23
Centre console 10
Changing gear with a
manual gearbox 104
Check the vehicle before your journey 17
Child lock 26
Child seat 33
Attachment 36
Attachment with a strap 35
Grouping 34
in the passenger seat 34
ISOFIX 35, 36
Keyword child seat 33
Recommended child seats 34
Safety instructions 33
Securing children properly 18
TOP TETHER 36
cigarette lighter 142
Cleaning the vehicle
Outside 150
Climatronic 48
COMING HOME 41
attitude 41
Functional conditions 41
Compartments 139

Coolant 120
Checking 120
Indicator light 120
Refilling 120
Safety 17
Specification 120
Temperature display 120
Troubleshooting 121
Cooling system 48
Cruise control 112
Cup holder 142

D

Data Connection
Infotainment Amundsen 89
Daylight running lights 38
activation 40
Deactivation 40
dimmed headlights 38, 40
Distribution of the cargo 106
Door
Open / close 26
Drive in neutral 104
DriveGreen 106
Driver Alert 116
fatigue detection assistant 116
Driver's seat 10
Driving data 51
Driving with trailer
Safety 19

E

Earth point 125
Economical driving style 105, 106
EDL 110
Electric windows 27
Activation 27
Force limitation 26
Operation 27
Troubleshooting 27
Emergency
Emergency call 20
Using jump start cables 125
What to do after an accident 21
What to do in the event of a fire 21
Emergency call 20
Emergency equipment 134
Jack 135
Tool kit 135
Emergency wheel 129
Safe driving 19
End of protection of personal data 98
Engine compartment 11
Coolant 120
Engine oil 119
flap 119
Safety 17
Vehicle battery 123
Windshield washer fluid 46
Engine compartment lid 119
Engine number 151
Engine oil 119
Changing 119
Checking 119
Indicator light 120
Refilling 119
Safety 17
Specification 119
Engine start
Using jump start cables 125
EPC 121
Equipment in the luggage compartment 134
ESC 110
Exhaust control system 121
Explanations 6
Exterior
lighting 38
Extinguisher 135

F

Fasteners in the luggage compartment 135
First aid kit 134
Flashing comfort 39
attitude 40
Flooring in the boot 137
Fog light 39
Fog lights 39
Fogged windows 48, 49
Freewheel
see Driving in neutral 104
Front Assist 110
Distance warning 111
Front seats
with manual operation 29
Front vehicle area 7
Fuel
Petrol 122
Fuel tank
Opening the flap 121
Fuel tank lid 121
Fuses 125
In the dash panel 126
In the engine compartment 127
Replacing 126

H

Handbrake 109
Hazard warning lights 39
Headlights
Headlight range control 40
LED setting 40
Headrests 30
Heated seats 49
Heated windscreen 49
Heating 47
HHC

see hill start assist 110
High beam assistant 41
High-beam
High-beam assist system 41
High-beam assist system 41
Hill start assist 110
Hook
in the interior 139
in the luggage compartment 135

I

Ice scraper 9
Ignition lock 102
Images
Infotainment Amundsen 81
see digital version of the manual 5
Immobilizer 103
In the event of an accident
What to do after an accident 21
indicator
see flashing light 39
Indicator lights
Foreword 11
Overview 11, 13
Info call 100
Infotainment Amundsen 71
Infotainment Blues 54
Infotainment keyboard
see digital version of the manual 5
Infotainment Overview
Infotainment Amundsen 71
Infotainment Blues 54
Infotainment Swing 58
Infotainment Screen
Infotainment Amundsen 72
Infotainment Blues 54
Infotainment Swing 59
Infotainment Settings
Infotainment Amundsen 71
Infotainment Blues 54
Infotainment Swing 58
Infotainment Swing 58
Instrument cluster
Analogue 50
Instrument cluster display 50
Instrument cluster display 50
Interior
lighting 45
Interior lighting 45
service 45
Interior mirror 31
ISOFIX 36
Retaining eyes 36
Use of child seats 35

J

Jump start cables 125
Jump-starting 124

K

Key 22
Key switch for airbag deactivation 37
Key switch for the front passenger airbag
Key switch faulty 38
Keyless locking (KESSY) 24
Keypad
Infotainment Amundsen 73
Infotainment Swing 59
Kick-down 104

L

LEAVING HOME 41
attitude 41
Functional conditions 41
Lever
buttons 50
High beam assistant 41
Main beam 39
Turn signal 39
Windshield wipers and washers 45
Liability for defects
see warranty 156
Light 38
automatic switching on and off 38, 40
Change bulbs 41
Changing bulbs 41
Clean headlights 45
CORNER function 38
Daylight running lights 38
dimmed headlights 40
Driving in opposite directions 40
Fog light 39
Hazard warning lights 39
Headlight range adjustment 40
High-beam assist system 41
Indicator light 40
Main beam 39
Parking light 39
service 39
Side light 39
Troubleshooting 40
Turn signal 39
Light Assist
see high beam assistant 41
Light range 40
light switch 39
lightbulbs
Fog lights - change 43
Front flashing light - change 42
Tail light - change 43
Lightbulbs
Dipped beam - change 42
High beam - Replacing 42
lighting
Inside 45
Outside 38
Limiter

see speed limiter 111
Lock 22
Locking 24
Luggage compartment 134
Fastening elements 135
Fastening nets 136
Net partition 137
Storage compartments 134
Luggage compartment lid
manual operation 28

M

Main beam 39
Management of online services 99
Manual air conditioning 47
Manual gearbox 104
Manually switch the automatic gearbox
with the selector lever 105
MCB 110
Media
Infotainment Amundsen 78
Infotainment Blues 55
Infotainment Swing 62
see digital version of the manual 5
Media Command
Infotainment Amundsen 82
MENU menu
Infotainment Amundsen 71
mirror
see exterior mirror 31
see inside mirror 31
MirrorLink
Infotainment Amundsen 90
Infotainment Swing 68
see digital version of the manual 5
Mobile Device Management
Infotainment Amundsen 84
Infotainment Swing 65
MSR 110
Multi-collision brake
see MCB 110

N

Navigation
Infotainment Amundsen 92
Net partition 137
Nets 136

O

Oil
see engine oil 119
Online services
Availability 97
Breakdown call 100
Info call 100
Remote access to the vehicle 101
Online Services
Management of online services 99
Service Scheduling 101
ŠKODA Connect 97
User Account 98
User registration and activation of ŠKODA Connect services 97
Vehicle status report 101

P

Park
Parking assist 116
Parking assistant 118
Park Assist systems 116
Parking
Parking the vehicle safely 20
Reversing camera 117
Parking aid 117
Parking assist 116, 117
Troubleshooting 117
Parking assistant 118
Parking brake 109
Parking light 39
ParkPilot
see parking assist 116
Passenger seat 10
Personal data 98, 155
Petrol 122
Prescribed fuel 123
Prescribed petrol 122
Refilling 122
Requirements for refuelling 122
standards 122
Tank capacity 123
Troubleshooting 123
Power steering 31
Practical equipment 139
12 volt socket 139, 143
Ashtray 142
cigarette lighter 142
Coat hooks 139
Cup holder 142
Make-up mirror 139
Note holder 139
Parking ticket holder 139
Spectacle compartment 139
Storage bags 139
Storage compartment for the umbrella 141
Storage compartments 139
Tablet holder 142

R

Radio
Infotainment Amundsen 75
Infotainment Blues 54
Infotainment Swing 60
see digital version of the manual 5
Rear fog light 39
Rear seats
fold up 29

Rear vehicle area 9
Rear view camera 117
Rear View Camera
Operation 117
Recirculated air mode 48
Refill
Windshield washer fluid 46
Refilling
Coolant 120
Engine oil 119
Petrol 122
Reflective vest 134
Remote access to the vehicle 101
Restarting Infotainment
Infotainment Amundsen 72
Infotainment Swing 58
Rights arising from defective performance
see warranty 156
Roll-up boot cover 138
Roof rack 144
Attaching the carrier 144
Roof load 144
Safe driving 19

S

Safe driving 19
SAFE function
Description 22
Turn off 22
Safety
Airbag 18
Assistance systems 19
Before the journey 16
Belt webbing arrangement 18
Car adaptations 16
Child seat 18
Correct seating position 17
Driving through water 20
Driving with a trailer 19
Emergency call 20
Engine compartment 17
Exiting the vehicle 20
Indicator lights 19
New brake pads 16
New tyres 16
Operating fluids 17
Parking 20
Roof rack 19
Running in the engine 16
safe driving 19
Sensors and cameras 16
Sockets 17
Spare and emergency wheel 19
Transporting cargo 19
Transporting children 18
Transporting objects 19
Vehicle battery 17
weather conditions 20
What to do after an accident 21
What to do in the event of a fire 21
Seat belts 32
Adjust height 33
Automatic belt retractor 32
Belt tensioners 32
blocked webbing 33
Correct arrangement 18
Put on and take off 33
status display 32
Seats 29
fold up 29
Heating 49
ISOFIX 36
Rear seats 29
Sitting safely 17
TOP TETHER 36
Selector lever 105
Service event
Interval 148
Proof 148
Reset information 148
Show appointment 148
Service position of the wiper arms 46
Service Scheduling 101
Service work 148
Set tyre pressure values 133
Side light
see parking light 39
Sliding/tilting roof 28
SmartLink
Infotainment Amundsen 90
Infotainment Swing 68
see digital version of the manual 5
Snow chains 129
Sockets
12-volt socket 143
Safety 17
Spare wheel 129
Safe driving 19
Speed limit 52
Resetting 53
Settings 53
Speed limit warning 52
Setting 53
Speed limiter 111
Indicator light 111
Start 102
Start the motor 102
START-STOP 103
Starter button 102
Starting instructions 102
Steering column lock 31
Steering wheel 30
buttons / dial 51
Buttons / dials 11
Correct position 18
shift manually with the shift paddles on the steering wheel 105

Stopping the engine 102
Storage 139
Sun protection 28
Supported media files
see digital version of the manual 5
Switch off the front passenger airbag 37
Switch on the low beam automatically 38
System
Infotainment Amundsen 71
Infotainment Swing 58

T

Tablet holder 142
Tank capacity
Petrol 123
Technical data 151
Technical specifications
Dimensions 153
engine specifications 153
Telephone
Infotainment Amundsen 86
Infotainment Swing 67
Tips for economical driving 105
Tiptronic 105
Tires
Overview of the labelling 128
Pressure 133
Wear indicator 128
Tool 135
Top speed 153
TOP TETHER 36
Retaining eyes 36
Touch operation
Infotainment Amundsen 72
Infotainment swing 59
Tow hitch
Inserting tow bar 145, 146
Overview 144
Prerequisites for installing the tow bar 145
Ready position 144
Setting the ready position 144
Tow rope 108
Towing a trailer 106
Towing eye 107
Towing the vehicle 107
Traffic accident
Emergency call 20
Trailer 106
Alarm system 25
Coupling and uncoupling 146
Permissible load 107
Safe driving 19
Trailer attachment
Vertical load 147
Trailer coupling
Troubleshooting 147
What you should be mindful of 144
Trailer towing coupling 144
Transport
Transporting objects safely 19
Transporting
tow hitch 144
Transporting the
roof rack 144
Turn signal 39
Type plate 151
Tyre control display 133
tyres 128
Breakdown set 131
Tyres 129
Pressure 132
Snow chains 129
Tyre control display 133

U

Umbrella 141
Unlock 22
Unlocking 24
Update Infotainment
Infotainment Amundsen 72
Infotainment Swing 59
Updating the Infotainment
see digital version of the manual 5
USB 139
User Account 98
User registration 98

V

Variable loading floor in the boot 138
Vehicle battery 123
Charging 123
Checking the condition 123
Discharge protection 123
Disconnecting and connecting 124
Error 124
Safety 17
Vehicle cleaning
interior space 149
Vehicle dimensions 153
Vehicle height 153
Vehicle Identification Number (VIN) 151
Vehicle length 153
Vehicle status 53
Vehicle status report 101
Vehicle width 153
Vest
see reflective vest 134
VIN
see vehicle identification number 151
Voice control
Infotainment Amundsen 74

W

Warning triangle 134
Warranty 156
Mobility Warranty 156

Optional Extended Warranty 157
Rights arising from defective performance 156
Warranty for new cars 156
Waste bin 142
Weight 152
wheels 128
Wheels
Breakdown 129
Change 130
Cover caps of the screws 134
Full wheel cover 134
Overview of tyre labelling 128
Pressure change 129
Spare wheel and emergency spare wheel 129
Tyre control display 133
Tyre pressure 132, 133
Wear indicator 128
Wi-Fi
Infotainment Amundsen 88
see digital version of the manual 5
window
mechanical operation 26
Window 27
heating 49
Windshield washer
see windscreen wipers and washers 45
Windshield washer fluid
how is the wash water refilled 46
Level too low 46
Windshield wipers and washers 45
Add windshield washer fluid 46
automatic rear window wiper 46
automatic wiping 46
Fold down the wiper arms 46
Replace the windscreen wiper blade 46
Windscreen washer fluid level too low 46
Wing mirror 31
Winter tyres 129

X

XDL + 110