Your Owner's Manual

Digital version available on the Internet

http://go.skoda.eu/owners-manuals

Tutorial videos

After reading in the following reference or the QR code, the website with the vehicle offer is displayed. By selecting the desired vehicle, the website with video instructions for selected vehicle functions is displayed.

http://go.skoda.eu/video-manuals

ŠKODA FABIA 11.2020
Angličtina/English
V1, R1, RoW, en_GB
6V0012720AP

OWNER´S MANUAL

ŠKODA FABIA

ŠKODA
SIMPLY CLEVER



Documentation of vehicle delivery
Vehicle Identification Number (VIN)

Date of vehicle delivery _____ / _____ / _____

ŠKODA Partner

Stamp and signature of the vendor

I confirm that I have taken delivery of the vehicle in good condition, have received information on how to operate it correctly, and have had the terms of the warranty explained to me.

Signature of the customer

Does the vehicle have an extended warranty?

☐ **YES**

☐ **NO**

Limitations of the ŠKODA extended warranty[a)]

Years: _____

or

km: _____

or

Miles: _____

[a)] Depending on which comes first.

6V0012720AP

Reprinting, reproduction or translation, either in whole or in part, is not permitted without the written consent of ŠKODA AUTO a.s..

ŠKODA AUTO a.s. expressly reserves all rights relating to copyright laws.

Subject to change.

Issued by: ŠKODA AUTO a.s.

© ŠKODA AUTO a.s. 2020

Vehicle owner

1. Vehicle owner

This vehicle with the official registration number

_____

belongs to (Title, Name / Company)

_____

_____

Address:

_____

_____

_____

Telephone:

_____

ŠKODA Partner

2. Vehicle owner

This vehicle with the official registration number

_____

belongs to (Title, Name / Company)

_____

_____

Address:

_____

_____

_____

Telephone:

_____

ŠKODA Partner

Service consultant:

_____

Telephone:

_____

Service consultant:

_____

Telephone:

_____

6V0012720AP

Table of Contents

1 Vehicle owner

5 About the Owner's Manual

5 About the Owner's Manual

6 Tutorial videos

6 Explanations

7 Vehicle overviews
7 Front vehicle area
9 Rear vehicle area
10 Driver's seat
10 Centre console and passenger seat
11 Engine compartment

11 Warning lights
11 Functionality
11 Warning lights overview

14 Correct and safe
14 Introductory notes for correct use
14 New vehicle or new parts
14 Regular checks
14 Improper vehicle adjustments
14 Keep sensors and cameras functional
15 Engine compartment
15 Handling operating fluids
15 12 volt vehicle battery
15 Use electrical sockets in the vehicle
15 Before your journey
16 Sitting safely
16 Correct belt webbing arrangement
16 Correct steering wheel position
16 Securing children properly
17 Transporting objects safely
17 Safe driving
18 Stop the vehicle safely!
18 Exiting the vehicle
18 Deviating weather conditions
18 Emergency call
19 After an accident

20 Keys, locks and alarm system
20 Key
20 Central locking
22 Keyless locking (KESSY)
23 Alarm system

24 Doors, windows and boot lid
24 Doors
24 Child safety lock on the rear doors
24 Window - with manual operation
24 Window - with electrical operation
26 Sunblind - with manual operation
26 Sun visors
26 Boot lid - with manual operation
26 Unlocking the boot lid

27 Seats, steering wheel and mirror
27 Front seat - with manual operation
27 Rear seats
28 Park position of rear seat belts
28 Headrests
28 Front armrest
28 Steering wheel
29 Interior rear-view mirror
30 Wing mirror

30 Restraint systems and airbags
30 Seat belts
31 Child seat
33 Fasteners for child seats
34 Airbags
35 Key switch for the front passenger airbag

36 Lighting, windscreen wipers and washers
36 Exterior lighting
39 COMING HOME, LEAVING HOME exterior lighting
39 Light Assist high-beam assist system
39 Replace light bulbs
43 Interior lighting
43 Windscreen wipers and washers

45 Heating and air conditioning system
45 Heating
45 Manual air conditioning
46 Climatronic automatic air conditioning system
47 Heated windscreen
47 Seat heating

48 Driver information system
48 Analogue instrument cluster
50 Driving data
51 Speed limit warning
51 Vehicle status

52 Infotainment Blues
52 Infotainment overview
52 System
53 Screen
53 Radio
54 Media

56 Infotainment Swing
56 Infotainment overview
56 System
57 Screen
58 Infotainment keyboard
59 Radio
61 Media
64 Mobile device management
65 Telephone
67 SmartLink

69 Infotainment Amundsen
69 Infotainment overview

69 System
71 Screen
72 Infotainment keyboard
73 Voice control
74 Radio
76 Media
79 Images
81 Media Command
82 Mobile device management
84 Telephone
86 Wi-Fi
87 Data connection
88 SmartLink
90 Navigation

95 Online Services
95 ŠKODA Connect
96 ŠKODA Connect application
96 User registration and activation of the ŠKODA Connect services
96 Setting personal data protection
97 User account
98 Management of online services
99 Information call
99 Breakdown call
99 Service schedules
100 Vehicle status report
100 Remote access to the vehicle

100 Starting and driving
100 Starting with the key
101 Start at the push of a button
101 Starting issues
102 START STOP
102 Manual gearbox
103 Automatic gearbox
104 Economical driving style
105 Towing a trailer
106 Towing eye and towing procedure
107 Brakes
108 Handbrake

108 Driver assist systems
108 Braking and stabilising systems
109 Front Assist
110 Speed limiter
111 Cruise control system
111 Adaptive Cruise Control (ACC)
114 Blind Spot Detect
114 Driver Alert fatigue detection assistant

115 Park Assist systems
115 Park Pilot parking aid
116 Rear view camera
117 Rear Traffic Alert

118 Engine, exhaust system and fuel
118 Bonnet
118 Engine oil
119 Coolant
120 Engine electronics
120 Particle filter
120 Exhaust control system
120 Fuel filler flap
121 Petrol

122 12 volt vehicle battery and fuses
122 12 volt vehicle battery
123 Using the jump-starting cable
124 Fuses
125 Fuses in the dash panel
126 Fuses in the engine compartment

127 Wheels
127 Tyres and rims
128 All-season or winter tires
129 Snow chains
129 Spare and emergency spare wheel
129 Changing the wheel and raising the vehicle
131 Breakdown kit
132 Tyre pressure
132 Tyre pressure monitor
133 Wheel bolt cover caps
133 Full wheel frame

134 Storage space and interior equipment
134 Equipment in the boot
134 Emergency equipment
134 Tool kit
134 Storage compartment for the reflective vest
135 Fasteners in the boot
135 Bag hooks in the boot
135 Flexible storage compartment
136 Cargo elements in the luggage compartment
136 Fastening nets
136 Net partition
136 Double-sided floor covering
136 Rigid boot cover
137 Lowered position of the luggage compartment cover
137 Roll-up luggage compartment cover
138 Variable loading floor in the boot
138 Interior equipment front
139 Interior equipment rear
139 Car park ticket holder
139 Bottle tray in the storage compartment of the front door
140 Bottle tray in the storage compartment of the rear door
140 Bottle tray in the storage compartment on the passenger side
140 USB-connections
141 Glasses compartment
141 Storage compartment for an umbrella
141 Cup holder
141 Waste container
141 Ashtray and cigarette lighter
142 Tablet holder
143 12-Volt power socket

143 Roof rack and hitch
143 Roof rack
143 Removable tow coupling

147 Maintaining and cleaning
147 Service events
147 Service work, adjustments and technical changes
148 Interior
149 Exterior
151 Ice scraper

151 Technical data and specifications
151 Requirements for the technical data
151 Vehicle identification data
152 Maximum permissible weights
152 Operating weight
153 Vehicle dimensions
153 Engine specifications
155 Personal data
155 Information about the radio systems in the vehicle
155 Rights arising from defective performance, ŠKODA warranties

158 Index

About the Owner's Manual

General points
This Owner's Manual applies to all **chassis variants** of the vehicle, including all **models** and **trim levels**.

All possible **trim levels** are described here without identifying them as special trims, model variants or market-dependent equipment. This means that **not all the trim components** described in this Owner's Manual are available in your vehicle.

The **Illustrations** in these operating instructions are purely illustrative and are to be understood as general information. The illustrations may differ from your vehicle.

ŠKODA AUTO is constantly working on the further development of all vehicles. It is therefore possible for changes to be made at any time to the scope of delivery in terms of shape, equipment and technology. The information contained in this Owner's Manual corresponds to the information available at the time of going to press.

No legal claims can therefore be derived from the technical data, illustrations and information in this Owner's Manual.

Digital version of the Owner's Manual
Keeping environmental protection in mind, the printed Owner's Manual only contains the most important information regarding vehicle operation and vehicle maintenance.

The digital version of the Owner's Manual includes full information regarding vehicle operation.

The digital version is available at the following places:

- On the ŠKODA web pages
- In the mobile application MyŠKODA

http://go.skoda.eu/owners-manuals

Tutorial videos
After reading in the following reference or the QR code, the website with the vehicle offer is displayed. By selecting the desired vehicle, the website with video instructions for selected vehicle functions is displayed.

http://go.skoda.eu/video-manuals

About the Owner's Manual

General points
This Owner's Manual applies to all **chassis variants** of the vehicle, including all **models** and **trim levels**.

All possible **trim levels** are described here without identifying them as special trims, model variants or market-dependent equipment. This means that **not all the trim components** described in this Owner's Manual are available in your vehicle.

The **Illustrations** in these operating instructions are purely illustrative and are to be understood as general information. The illustrations may differ from your vehicle.

ŠKODA AUTO is constantly working on the further development of all vehicles. It is therefore possible for changes to be made at any time to the scope of delivery in terms of shape, equipment and technology. The information contained in this Owner's Manual corresponds to the information available at the time of going to press.

No legal claims can therefore be derived from the technical data, illustrations and information in this Owner's Manual.

Digital version of the Owner's Manual
Keeping environmental protection in mind, the printed Owner's Manual only contains the most important information regarding vehicle operation and vehicle maintenance.

The digital version of the Owner's Manual includes full information regarding vehicle operation.

The digital version is available at the following places:

- On the ŠKODA web pages
- In the mobile application MyŠKODA

http://go.skoda.eu/owners-manuals

Tutorial videos
After reading in the following reference or the QR code, the website with the vehicle offer is displayed. By selecting the desired vehicle, the website with video instructions for selected vehicle functions is displayed.

http://go.skoda.eu/video-manuals

Tutorial videos

Tutorial videos
After reading in the following reference or the QR code, the website with the vehicle offer is displayed. By selecting the desired vehicle, the website with video instructions for selected vehicle functions is displayed.

http://go.skoda.eu/video-manuals

Explanations

Terms used
“Specialist garage” - A workshop that carries out specialist service tasks for ŠKODA vehicles. A specialist can be a ŠKODA Partner, a ŠKODA Service Partner, or an independent workshop.
“ŠKODA Service Partner” - A workshop that has been contractually authorised by ŠKODA AUTO or its distribution partner to perform service work on ŠKODA vehicles and to sell ŠKODA Genuine Parts.
“ŠKODA Partner” - A company that has been contractually authorised by ŠKODA AUTO or its distribution partner to sell new ŠKODA vehicles and, when applicable, to service them using ŠKODA Genuine Parts and sell ŠKODA Genuine Parts.

Text notes
“Press” - short press (e.g. a button) within 1 second
“Hold” - long press (e.g. a button) for more than 1 second

Direction indications
All direction indications, such as “left”, “right”, “front”, “rear”, relate to the forwards direction of travel of the vehicle.

⚠ **DANGER**
Texts with this symbol indicate dangerous situations which, if the safety instructions are not observed, will result in death or serious injury.

⚠ **WARNING**
Texts with this symbol indicate dangerous situations which, if the safety instructions are not observed, could result in death or serious injury.


⚠ **CAUTION**
Texts marked with this symbol indicate dangerous situations which, if the safety instructions are not observed, could result in minor or moderate injury.

NOTICE
Texts with this symbol indicate situations which, if the corresponding instructions are not observed, will result in damage to the vehicle.

Texts with this symbol contain additional information.

Vehicle overviews

Front vehicle area

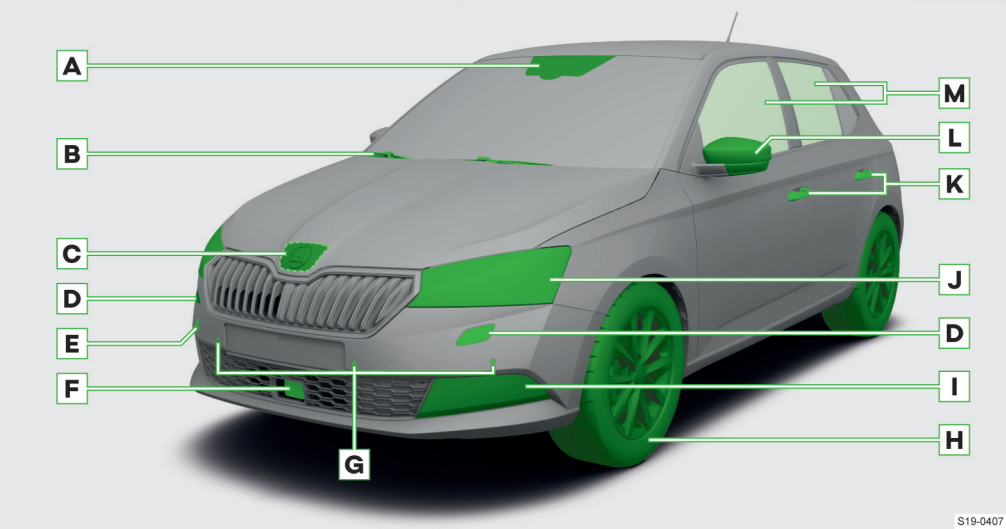

A Under the windscreen (depending on the vehicle equipment):
- ▸ Camera for assist systems
- ▸ Light sensor for automatic driving light circuit » page 36
- ▸ Rain sensor for automatic wiping » page 43

B Windscreen wiper – operation » page 43

C Bonnet release lever (on the inside of the flap) » page 118

D Headlamp cleaning system » page 43

E Cover for screw-in towing eye socket » page 106

F Front radar sensor for assist systems

G Ultrasonic sensors for assist systems

H Wheels:
- ▸ Tyres and rims » page 127
- ▸ Changing the wheel and raising the vehicle » page 129
- ▸ Breakdown kit » page 131.
- ▸ Tyre pressure » page 132
- ▸ Tyre pressure monitor » page 132

I Fog lights:
- ▸ Operation » page 37
- ▸ Replace light bulbs » page 39

J Headlights (depending on vehicle equipment):
- ▸ Operation » page 37
- ▸ Light Assist high-beam assist system » page 39
- ▸ Replace light bulbs » page 39

K Door handles (depending on vehicle equipment):
- ▸ Open door » page 24
- ▸ Keyless locking (KESSY)» page 22.


L Exterior mirror - operation » page 30

M Under the side doors (depending on the vehicle equipment):
- ▸ Electrical power windows » page 25
- ▸ Mechanical window lever » page 24

Functionality of the sensors and cameras

› Keep the sensors and cameras for the assist systems clean » page 14.

Rear vehicle area

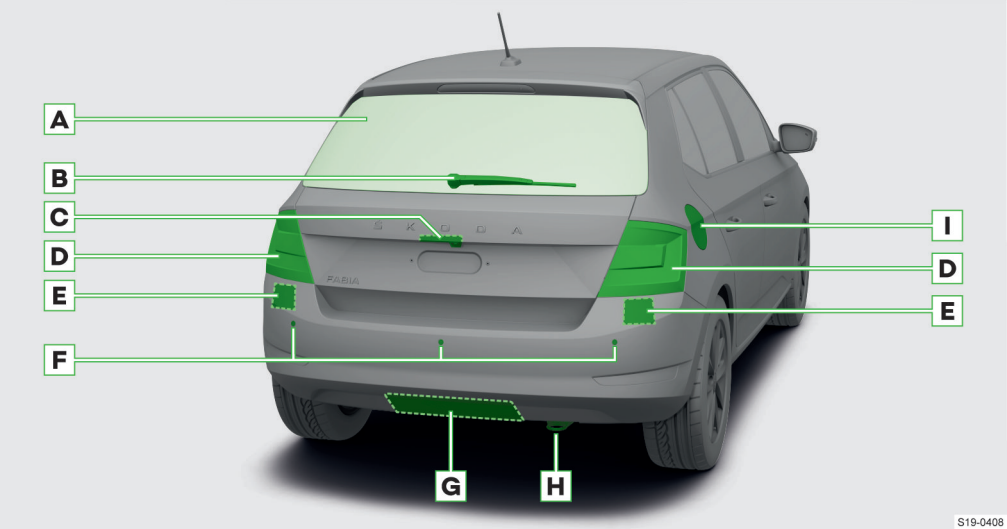

A Rear window - heating » page 47

B Rear window wiper and washer - Operation » page 43

C Boot lid handle (depending on the vehicle equipment).
- ▸ Flap operation » page 26
- ▸ Camera for assist systems

D Tail lights:
- ▸ Operation » page 37
- ▸ Replace light bulbs » page 39

E Radar sensors for assist systems (in the bumper)

F Ultrasonic sensors for assist systems

G Tow hitch » page 143


H Towing lug » page 106

I Fuel tank lid:
- ▸ Opening » page 120
- ▸ Sticker with tyre pressure values » page 132
- ▸ Sticker with prescribed fuel
- ▸ Ice scraper

Functionality of the sensors and cameras


› Keep the sensors and cameras for the assist systems clean » page 14.

Driver's seat

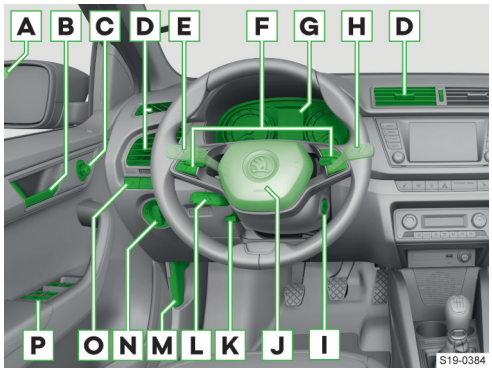

- **A** Indicator light for “Blind Spot” Assist System » page 114
- **B** Door opening lever » page 24
- **C** Exterior mirror operation » page 30
- **D** Air outlet nozzle
- **E** Control lever (depending on vehicle equipment):
  - ▸ Turn signal and main beam » page 37
  - ▸ Speed regulating system » page 111
  - ▸ Speed limiter » page 110
  - ▸ High beam assist system » page 39
- **F** Buttons/dials on the multifunction steering wheel » page 28
- **G** Analogue instrument cluster » page 48
- **H** Control lever (depending on vehicle equipment):
  - ▸ Windscreen wipers and washers » page 43
  - ▸ Information system » page 49
- **I** Depending upon vehicle equipment:
  - ▸ Ignition lock » page 100
  - ▸ Starter button » page 101
- **J** Steering wheel with horn/with driver's front airbag » page 34
- **K** Safety lever for steering wheel adjustment » page 29
- **L** Operation of the automatic distance control » page 112
- **M** Bonnet release lever » page 118
- **N** Light switch » page 37
- **O** Keys (depending on vehicle equipment):
  - ▸ Ⓐ START-STOP » page 102
  - ▸ Traction control TCS » page 108
  - ▸ Park Pilot » page 115
  - ▸ Storage of tyre pressure values » page 132
- **P** Window operation » page 25.

Centre console and passenger seat

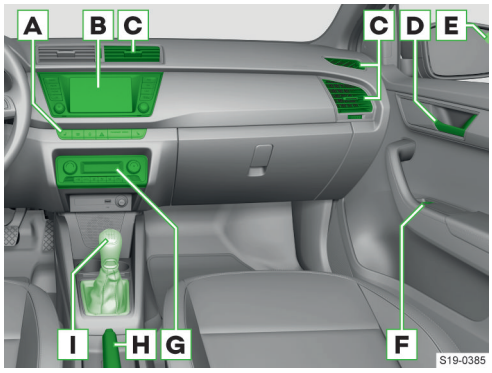


- **A** Buttons and indicator lights (depending on the vehicle equipment):

  Buttons:
  - ▸ Left seat heating » page 47
  - ▸ Heated rear window » page 47
  - ▸ Central locking » page 21
  - ▸ Hazard warning light system » page 37
  - ▸ Right seat heating » page 47

  Indicator lights:
  - ▸ Front passenger airbag ON / OFF » page 35
- **B** Infotainment (depending on vehicle equipment):
  - ▸ Amundsen » page 69
  - ▸ Swing » page 56
  - ▸ Blues » page 52
- **C** Air outlet nozzle
- **D** Door opening lever » page 24
- **E** Indicator light for “Blind Spot” Assist System » page 114
- **F** Window operation in the passenger door » page 25
- **G** Operation (depending on vehicle equipment):
  - ▸ Heating » page 45
  - ▸ Manual air conditioning » page 46.
  - ▸ Climatronic » page 46
- **H** Parking brake » page 108
- **I** Depending upon vehicle equipment:
  - ▸ Gearshift lever (manual gearbox) » page 102
  - ▸ Selector lever (automatic gearbox) » page 103

Engine compartment

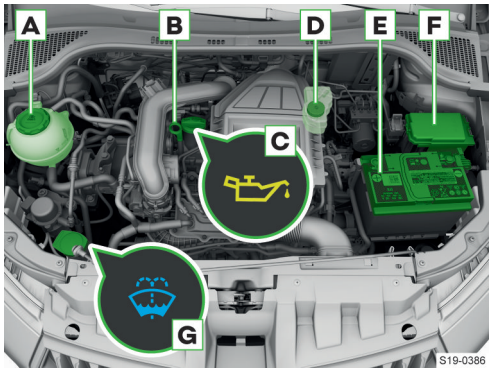

A Coolant expansion reservoir » page 119
B Engine oil dipstick » page 118
C Engine oil filler opening » page 118
D Brake fluid reservoir » page 107
E 12 volt vehicle battery » page 122
F Fuse box » page 126
G Windscreen washer fluid reservoir » page 44

Warning lights

Functionality

The warning lights in the instrument cluster indicate certain functions or faults.

The illumination of some of the indicator lights may be accompanied by acoustic signals and messages in the instrument cluster display.

Additional indicator lights
The additional indicator light will also light up in the display along with some of the indicator lights:

⚠ - Hazard

⚠ - Warning

⚠ **WARNING**
Disregarding the lighting up of the warning lights and the associated messages on the display of the instrument cluster can lead to accidents, serious injuries or damage to the vehicle.

Warning lights overview



After switching on the ignition, some indicator lights light up briefly as a function test of the vehicle systems. If the tested systems are in order, the respective indicator lights go out a few seconds after the ignition is switched on or after the engine has been started.

For further details » page 11, *Functionality*.

Symbol	Meaning
	Indicates a warning together with another warning light » page 11.
	Front seat belt not fastened » page 30.
	Brake fluid level is too low » page 107.
	Together with - Brake system and ABS faulty » page 109.
	Parking brake on » page 108.
	Illuminates - Power assisted steering faulty » page 29.
	Flashing - Steering lock faulty » page 29.
	ACC does not decelerate sufficiently » page 112.
	Indicates a warning along with another warning light » page 11.
	The fuel supply has reached the reserve area. » page 122.

Symbol	Meaning
	Rear fog light switched on » page 37.
	ABS faulty » page 109.
	Tyre pressure control system faulty » page 133.
	Tyre pressure change » page 128, » page 132.
	**Illuminates** - Power assisted steering faulty » page 29.
	Flashing - Steering lock not unlocked » page 29.
	Flashing - Steering lock faulty » page 29.
	KESSY - starting problem » page 101.
	KESSY - no key found » page 23.
EPC	Petrol engine control faulty » page 120.
	Emission control system faulty » page 120.
ON 	Front passenger airbag switched on » page 36.
	flashes together with OFF - Key switch for airbag deactivation is faulty » page 36.
OFF 	Front passenger airbag switched off » page 36.
	Airbag system faulty » page 35.
	Illuminates for 4 seconds **and then flashes** - Airbag or belt tensioner deactivated with diagnostic device » page 35.
	ASR deactivated » page 109.
	**Illuminates** - ESC or ASR faulty » page 109.
	Flashing - ESC or ASR is engaged » page 108.
	Turn signal light, left » page 37, » page 38.
	Turn signal light, right » page 37, » page 38.
	Trailer turn signal light » page 38.

Symbol	Meaning
	Front fog lights switched on » page 37.
	The selector lever is locked » page 103.
	ACC controls the driving speed » page 112.
	The cruise control system controls the driving speed » page 111.
	High beam or flasher activated » page 37.
	Rear seat belt not fastened » page 30.
	A rear seat belt is fastened » page 30.
	Low outside temperature » page 49.
	High beam Assist System switched on » page 39.
	Bulb in the vehicle exterior lights failed » page 38.
	Charging of the 12-volt vehicle battery » page 120, » page 123, » page 123.
	Engine oil pressure too low » page 119.
	Engine oil level too high **or** engine oil level sensor impaired » page 119.
	Engine oil level too low » page 119.
	Coolant temperature too high » page 120.
	Coolant level is too low » page 119.
	Along with - Engine fault » page 123.
	Windscreen washer fluid level too low » page 44.
	Clogged particle filter » page 120.
	Automatic gearbox overheated » page 104, » page 104.
	Automatic gearbox impaired » page 104, » page 104.
	Service event » page 147.
	Engine was switched off automatically by START-STOP » page 102.

Symbol	Meaning
	Engine was not automatically switched off via START-STOP » page 102.
	Speed limiter faulty » page 111.
	Speed limiter activated » page 110.
	Speed limiter disturbed » page 111.
	ACC not available » page 113.
	ACC activated » page 112.
	Cruise control system faulty » page 111.
	Cruise control system disturbed » page 111.
	Cruise control activated » page 111.
	Warning if there is a risk of a collision » page 109.
	Front Assist deactivated » page 110, » page 110.
	Safety distance too small » page 109.
	Consumption-friendly driving » page 105.
	Break recommendation » page 114.

Correct and safe

Introductory notes for correct use

- Read this Owner's Manual carefully, as proceeding in accordance with this manual is a prerequisite for the correct use of the vehicle. This Owner's Manual should therefore always be in the vehicle.
- When using the vehicle, the generally binding legal provisions that are specific to the country must be observed. Such as those for transporting children, switching off airbags, using tyres, road traffic and the like.
- Do not exceed the maximum permissible weights and loads.
- Do not exceed the maximum permissible roof load.
- Use the specified fuel and operating fluids.
- Drive on roads that meet the technical vehicle parameters. Obstacles that exceed the ground clearance of the vehicle » page 153 can damage the vehicle when driving over them.
- Care must be taken during operations related to operation, maintenance and self-help to avoid damage to the vehicle or injury. If required, seek the help of a specialised garage.
- All work on the vehicle's safety systems may only be carried out by a specialist garage. This concerns e.g. the seat belts or the airbag system.
- When using accessories, please note the instructions in the accessory manufacturer's instruction manual. These include child seats, roof racks, compressors etc.
- Please note the service intervals.

New vehicle or new parts

New vehicle - Running in the engine
Driving style during the first 1500 km determines the quality of the engine run-in process.

- During the first 1000 km, rev the engine to max. 3/4 of the highest permissible engine speed and avoid using a trailer.
- Over the next 500 km, the engine speed can be slowly increased.

Depending on driving style and operating conditions, the engine consumes some oil, up to 0.5 l/1000 km. Consumption may be higher over the next 5000 km.

New brake pads
New brake pads do not provide the optimum braking effect during the first 200 km, they have to be worn in first. Therefore, drive very carefully.

New tyres
New tyres do not have optimum grip for the first 500 km. Therefore, drive very carefully.

Regular checks

What should be taken into account before driving?
A vehicle with technical defects can increase the risk of accidents and injuries.

Eliminate any defects before driving. If required, seek the help of a specialised garage.

Pay special attention to the following points:

- Is the tyre undamaged?
- Is the tyre tread sufficient?
- Is the tyre pressure sufficient?
- Do the headlamps, brake and turn signals work?
- Is the windscreen in good condition?
- Is the engine oil, brake fluid and coolant level OK?
- Is the air intake in the engine compartment free from obstruction?
- Are the air outlet nozzles or air intake in front of the windscreen free from obstruction?
- Are the windscreen wiper and washer system and windscreen wiper blades functional?
- Is the windscreen washer fluid level sufficient?
- Are the windscreen wiper blades in good condition?
- Are all seatbelt system components in good working order? Are the seatbelts clean and have the buckles been unclogged?
- Is the spoiler working properly?
- Are parts and components of the vehicle still visibly attached?
- Are there no oil stains or other operating fluids under the vehicle?

Improper vehicle adjustments

Improper changes and maintenance can cause malfunctions and affect safety-relevant and other functions of the vehicle.

- Adjustments, repairs and technical changes to the vehicle should only be carried out by a specialist garage.
- Never cover the engine with additional insulation material, e.g. with a cover.

Keep sensors and cameras functional

Some functions of your vehicle are supported by sensors and cameras inside and outside the vehicle.

Accessories additionally installed on the vehicle rear, such as bicycle carriers, can impair the functioning of the sensors and cameras.

- Do not cover or stick over the sensors and cameras and keep them clean.

- If you suspect damaged sensors or cameras, seek the help of a specialist company.

Engine compartment

Before opening the engine compartment flap
Risk of scalding! Do not open the engine compartment flap if steam or coolant comes out of the engine compartment.

- Stop the engine and allow it to cool.
- Remove the ignition key. On vehicles with a keyless locking system, open the driver's door.

When working in the engine compartment
- Keep children away from the engine compartment.
- Do not touch the radiator fan. The radiator fan can turn itself on, even when the ignition is off.
- Do not touch electrical cables. Avoid short circuits in the electrical system, especially on the 12 Volt vehicle battery.
- Do not smoke near the vicinity of the engine and refrain from handling open flames or sparks.
- If you need to work in the engine compartment with the engine running, be mindful of rotating engine parts and electrical equipment.
- Do not leave any objects in the engine compartment.

Handling operating fluids

Your vehicle uses various operating fluids to operate that can affect health or the environment when they are emitted. These are fuel, oils, battery acid from the 12-volt vehicle battery, coolant and brake fluid.

- Only use operating fluids outdoors or in well-ventilated areas. If required, wear protective equipment.
- Do not use or check operating fluids with the engine running.
- In the event of contact with operating fluids, wash affected areas with warm water. If required, seek medical help.
- The leaked engine oil in the engine compartment can cause a fire, so wipe it off with a cloth.
- Store cloths soiled by brake fluids in a well-ventilated place until disposal. Cloths with residues of engine oil can ignite and cause a fire.

12 volt vehicle battery

Handling the 12-volt vehicle battery
The battery acid of the 12-volt vehicle battery is very caustic. Improper handling of the 12 volt vehicle battery can cause an explosion, fire, chemical burns or poisoning!

- When handling the 12-volt vehicle battery, eye and skin protection must be worn.
- Do not tilt the 12-volt vehicle battery, as it may leak battery acid.
- If battery acid comes into contact with skin, wash the affected areas with water for a few minutes. Seek medical assistance without delay.
- Do not charge a frozen or thawed 12-volt vehicle battery. Replace a frozen 12-volt vehicle battery.
- Do not use a damaged 12-volt vehicle battery.
- Short circuit! The battery poles of the 12-volt vehicle battery are not connected.

Use electrical sockets in the vehicle

Improper handling of the sockets may lead to life-threatening electric shock or a fire.

- The sockets can become warm during operation. Do not touch warm sockets.
- Protect sockets from liquids.
- If moisture does manage to get into the power socket, completely dry out the socket before reuse.
- Do not insert any objects into the socket contacts.

Before your journey


Adults and children, cargo and objects - everything has its place in the vehicle. Observe the following instructions so that all occupants are protected in the best possible way in the event of an accident.

Before you go
- Ensure that you have a good view of outside the vehicle. Attach external devices (e.g. navigation system) so that they do not restrict the view externally.
- Adjust the rearview mirrors.
- Close all doors and the engine compartment and boot flap.
- Take up the correct sitting position, adjust the seats correctly and fasten the seat belt properly. Ensure that passengers do likewise. Always leave the seat belt on while driving.
- Only one person can be secured with a seat belt.
- Make sure that the seat belts are not trapped, e.g. in the door or in the seat.
- Check seat belts, their locks and attachment points for damage.

Sitting safely

For the safety of the occupants and to reduce the risk of injury in the event of an accident, the following instructions must be observed:

- ▶ Stand the backrests upright. If the front passenger seat backrest has been folded forward, only the seat behind the driver's seat may be used for transporting passengers.
- ▶ Engage the rear seat backrests correctly.
- ▶ Adjust the height-adjustable headrest so that the top of the headrest is as close as possible to the top of the head.
- ▶ On the occupied rear seat, the headrest should not be in the lower position although the upper edge of the headrest should be at the same height as the top of the head.
- ▶ Keep your feet in the footwell.
- ▶ Use the entire seat.
- ▶ Do not lean forward or sit to the side.
- ▶ Do not hold your limbs out the window.

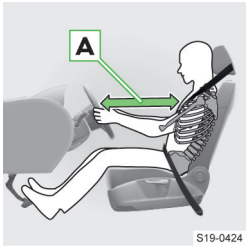


› Adjust the driver's seat in the longitudinal direction so that the pedals can be fully pushed through with slightly bent legs.

› Adjust the steering wheel so that the distance A between the steering wheel and sternum is at least 25 cm.

› Adjust the angle of the backrest so that the steering wheel can be reached at the top with your arms slightly bent.

› Move the passenger seat back as far as possible. The front passenger must maintain a minimum distance of 25 cm from the dash panel.

Correct belt webbing arrangement

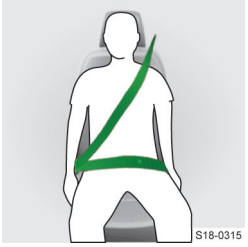

The webbing arrangement is extremely important for the seat belts to offer the best possible protection.

- ▶ The shoulder strap must run over the middle of the shoulder, must never run over the neck, and must lie firmly against the body (it must not run over loose layers of clothing).
- ▶ The lap belt part must be placed in front of the pelvis and fit tightly.
- ▶ In pregnant women, the lap belt part must be as low as possible on the pelvis, so that no pressure is exercised on the abdomen.
- ▶ The webbing must not be pinched or twisted and rub against sharp edges.
- ▶ The webbing must not pass over solid or fragile objects in clothing, such as a key ring, etc.
- ▶ The tongue may only be inserted into the buckle of the associated seat.
- ▶ The webbing must be tight. Therefore, do not attach clamps or similar items to the webbing for adjusting the seat belt according to body size.

Correct steering wheel position



- ▶ Hold the steering wheel with both hands on the outer edge in the “9 o'clock” and “3 o'clock” position. Otherwise, you may experience serious injury to the arms, hands and head when deploying the airbag.

Securing children properly

- ▶ Do not carry a child on your lap, and secure the child and yourself with a seat belt.
- ▶ Only transport children in a suitable child seat » page 32.

Children under 150 cm tall will not be properly protected without a child seat. Children that have been inadequately secured can be thrown through the vehicle in the event of an accident or a sudden manoeuvre. You can cause life-threatening injuries to yourself and other occupants.

If children lean forward or assume a wrong sitting position while driving, they are more likely to be injured in the event of an accident. This is especially true for children who are carried in the passenger seat - when the airbag system triggers, they can be seriously injured or killed!

A child that has been incorrectly secured in the wrong sitting position - endangered by the side airbag



The child should not be in the deployment area of the side airbag.

A child that has been properly secured in a child seat



There must be enough room between the child and the exit area of the side airbag for the side airbag to offer the best possible protection.

Transporting objects safely

When moving heavy objects, there is a shift in emphasis. Thus, the driving behaviour of the vehicle changes.

- ▸ Adjust driving speed and driving style to this changed driving behaviour.

Unsecured or misplaced items may be thrown around in the event of an accident or sudden manoeuvre. There is a risk of serious injury and loss of control of the vehicle!

In a rear-end collision at 50 km/h unsecured objects are thrown forward with up to 50 times their weight. A 1.5 litre water bottle is thrown with up to 75 kg.

- ▸ Transport objects securely.
- ▸ Stow objects so they do not hinder the driver. Keep the driver footwell clear.
- ▸ Stow small items in the storage compartments.
- ▸ Do not leave lockable storage compartments open.
- ▸ Do not let items protrude out of the slots. This note does not apply to bottles in bottle trays.
- ▸ Do not place any objects on the dash panel or on the luggage compartment cover.
- ▸ Do not exceed the maximum permissible load of fasteners and shelves.
- ▸ Distribute the load evenly in the luggage compartment and secure it, so that it cannot slip.
- ▸ Place heavy objects in the luggage compartment as far forward as possible.

Safe driving

Introductory notes

- ▸ Pay attention when you are driving! As a driver, you are fully responsible for road safety.
- ▸ Always adjust driving speed to the road conditions as well as the traffic and weather conditions.

Paying attention to warning signals

The driver information system warns you with indicator lights and messages in the event of any faults.

Failure to follow the warnings may increase the risk of accidents and injuries.

- ▸ If the vehicle issues a warning signal, then park the vehicle safely and follow the information in the instrument cluster, and in this Owner's Manual.

Use assistance systems

The assistance systems are only for support and do not absolve you from your responsibility for driving the vehicle.

The assistance systems are subject to physical and technical limitations. Therefore, in certain situations, system reactions may be perceived as undesirable or delayed.

- ▸ Stay alert and be ready to intervene.
- ▸ Familiarise yourself with the assistance systems, their limitations and operating conditions.
- ▸ Activate, deactivate and adjust the assistance systems so that you have full control of the vehicle in any traffic situation.

Driving with a substitute spare wheel or emergency wheel

A substitute spare wheel or emergency wheel is only used to reach the nearest specialist garage.

- ▸ Inflate the wheel with the max. prescribed inflation pressure.
- ▸ Follow the instructions on the warning label on the rim.
- ▸ Do not cover the warning sign.
- ▸ Avoid full accelerations, strong braking and fast cornering.
- ▸ Do not drive with more than one mounted spare wheel.
- ▸ Avoid using snow chains on the temporary spare wheel.

Driving with a loaded roof rack

When transporting objects on the roof rack, the vehicle's driving behaviour changes.

- ▸ Adapt your speed and driving style to this.

Towing a trailer
The vehicle's handling characteristics change with a trailer. The assistance systems may behave differently.

- Drive more slowly, excessive speed can lead to loss of control of the vehicle.
- Keep a larger distance from the vehicle in front.
- Do not exceed the max. vertical load and the permissible trailer load.

Driving through water
There must be no water ingress into the vehicle systems e.g. into the engine's air intake system!

- Therefore, determine the water depth before driving through water. The water level must not exceed the lower edge of the lower beam.
- Drive at max. walking speed. Otherwise, a wave may form in front of the vehicle, increasing the water level.
- Never stop in the water, do not drive backwards and never stop the engine.

Is something wrong?
- Pay attention to changes in vehicle handling.
- If in doubt about safety, stop driving and seek the help of a specialist garage.
- Unusual vibrations or the vehicle 'pulling' to the side may indicate a puncture.
- If tyre pressure loss is very quick, try to stop the vehicle carefully without heavy steering or heavy braking.
- Immediately remove foreign bodies stuck in the tyre tread.
- Do not remove foreign objects that have penetrated into the tyre. Check the tyre pressure and seek the help of a specialised garage.
- Immediately remove any objects jammed under the floor of the vehicle. These can damage the vehicle or ignite and cause a fire.

Stop the vehicle safely!

A vehicle that has not been secured may roll away and cause accidents.

- For parking, look for a place with suitable ground. Do not park the vehicle on flammable materials such as dried leaves, spilt fuel. Hot vehicle parts can cause a fire.

Carry out the following activities in the specified order when parking.

› Stop the vehicle and keep the brake pedal depressed.
› Secure the vehicle with the parking brake.
› For vehicles with an automatic gearbox, put the selector lever in the **P** position.
› Turn off the engine.
› For vehicles with manual transmission, engage 1st gear or reverse gear.
› Release the brake pedal.

Exiting the vehicle

Do not leave children unattended in the vehicle!

- Children may injure themselves when handling the seats, releasing the parking brake etc.
- In emergency situations, children are not able to leave the vehicle on their own or help themselves.
- At very high or very low temperatures, there is danger to life!
- When locking the vehicle, the SAFE function switches on. As a result, no doors or windows can be opened from the inside. Turn off the SAFE function if people are left behind in the locked vehicle » page 20.

Deviating weather conditions

If you wish to operate your vehicle in countries with different weather conditions from those specified, please contact a ŠKODA partner. They will advise you if certain precautions need to be taken to ensure the full functioning of the vehicle or to prevent damage (e.g. coolant, 12 volt vehicle battery replacement, etc.).

Emergency call

What you should be mindful of

⚠ **WARNING**
Availability of a mobile network is indispensable for establishing a connection to the emergency number.

⚠ **WARNING**
This emergency service is only available in some countries.

⚠ **WARNING**
If the vehicle is located in an area without a functioning emergency call system infrastructure, no vehicle data shall be transmitted to the emergency call centre.


Functionality

After the start of the conversation, the emergency call centre also contains information as to the accident location and the severity of the accident, the number of occupants with seatbelts on who are in the front seats, and the vehicle identification number (VIN).

Once the connection has been established, communication with the emergency call centre takes place via the loudspeaker and microphone installed in the vehicle.

Automatic start of a call with the emergency call centre
In the event of an accident, a call is automatically started with the emergency call centre.

Indicator light

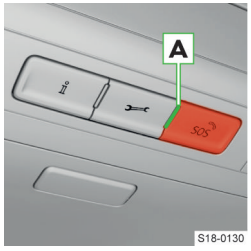


The system status is displayed after the ignition is switched on, by the illumination of warning lamp A.

- ▸ Green - lit up - the system is functional
- ▸ Green - flashing - a call is being made to the emergency call centre
- ▸ Red - lit up - there is a system failure, immediately seek the help of a specialist garage
- ▸ Not lit up - the system is out of order due to a long term unavailable mobile network, if this circumstance persists, the system will require the assistance of a specialist garage

⚠ **WARNING**
If there is a system fault, no emergency call is possible.

Operation

Manual call

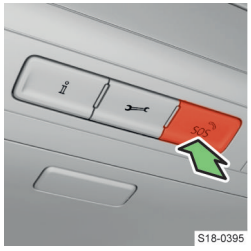

- › Keep the SOS button pressed down.
- › Confirm the connection to the emergency call centre in the Infotainment screen.
- › To cancel the connection to the emergency call centre before starting the call, press the SOS button again or confirm the cancellation of the connection in the Infotainment screen.

Starting a manual conversation can then be used, for example, if you also report an accident in which you are not directly involved.

After an accident

What to do after an accident
Where possible, please observe the following instructions:

- › Switch off the ignition.
- › Turn on the hazard warning lights.
- › Put on the reflective vest.
- › Set up the warning triangle to warn other road users.
- › Stay at a safe distance from the vehicle, along with any passengers.
- › Report the accident to the emergency services.
- › Wait for the emergency services to arrive.

Safety systems
After an accident, the safety systems of the vehicle, e.g. seatbelts and airbag system, may be out of action.

- ▸ Have the vehicle's safety systems checked by a specialist garage, even if no load or trip has occurred.
- ▸ Have damaged, loaded or triggered components of the safety systems replaced by a specialist garage.


What to do in the event of a fire
Where possible, please observe the following instructions:

- › Switch off the ignition.
- › Turn on the hazard warning lights.
- › Put on the reflective vest.
- › Set up the warning triangle to warn other road users.
- › Stay at a safe distance from the vehicle, along with any passengers.
- › Report the fire to the emergency services.
- › Wait for the emergency services to arrive.

Keys, locks and alarm system

Key

Key Overview

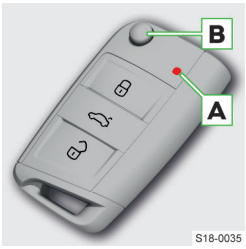

- Locking the vehicle
- Operating the boot lid
- Unlocking the vehicle

A Battery status warning light

B Locking button for folding the key bit in/out

NOTICE

- Protect the key from moisture and strong vibrations.
- Keep the grooves in the key clean.

The effective range of the key signal is about 30 m. The effective range can be reduced, e.g. due to signal interference from other transmitters.

Troubleshooting

The battery in the key is almost empty

- After pressing a button on the key, the warning light does not flash.

Or:

- A message stating it is necessary to change the battery will be displayed.

› Replace the battery » page 20.

The vehicle cannot be unlocked or locked with the remote control

There may be the following reasons:

- The battery in the key is empty.

› Replace the battery » page 20.

- The key is not synchronized.


Synchronize the key as follows:

› Press any button on the key.
› Unlock the door within 1 minute with the key via the locking cylinder » page 22.

If necessary, the key must be synchronized if a favoured button on the key has been repeatedly pressed outside of the effective range of the remote control.

Changing the key battery

The new battery must comply with the specification of the original battery.

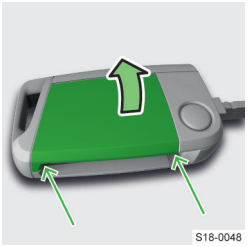

› Fold out the key bit.
› Release the battery cover with your thumbnail or by inserting a flat-head screwdriver at the marked points.
› Open the battery cover.



› Remove the battery.
› Press any button on the remote key to reset the key.
› Insert the new battery.
› Fit the battery cover and press until it clicks into place.

WARNING

Risk of death!

If the battery is swallowed, serious or even fatal injuries can result from burns in the digestive tract.

- Always keep children away from the vehicle key and batteries.
- If the battery is swallowed, seek medical help immediately.

Central locking

Functionality

Central locking system

The system unlocks and locks all doors, the fuel filler flap and the boot lid at the same time.

Unlock indicator: double flashing of the indicator lights.

Lock indicator: single flashing of the indicator lights.

The warning light in the driver's door will flash for about 2 seconds in quick succession after the vehicle is locked, then it will start flashing regularly at longer intervals.

If none of the doors or the boot lid is opened within 45 seconds of unlocking, the vehicle automatically locks again.

SAFE function

Depending on the equipment, the central locking system can include the SAFE function.

The SAFE function prevents the doors from opening from the inside once the vehicle is locked.

The SAFE function is activated when the vehicle is locked from the outside.

In the display of the instrument cluster after the ignition is switched off, a message regarding the SAFE function is displayed.

⚠ **DANGER**
Risk of death!
▸ No people are allowed in the locked vehicle with the SAFE function.

Turn off the SAFE function
▸ By double locking within 2 seconds.

Or:

▸ Together with the deactivation of the interior monitoring » page 23, *Settings*.

The warning light in the driver's door will flash for about 2 seconds in quick succession after the vehicle is locked, then goes out and starts flashing regularly at longer intervals after about 30 secs.

When the SAFE function is switched off, the door can be opened from the inside by pulling once on the opening lever.

The SAFE function is switched on again after unlocking and locking the vehicle.

Operation

Ways in which central locking operates
Depending upon vehicle equipment:
▸ Key » page 20
▸ Keyless locking (KESSY)» page 22.
▸ Central locking button

Lock/unlock using the central locking button
› Press the button in the centre console.

The symbol in the button comes on when locked.

The button locks/unlocks all of the doors and the boot lid.

Unlocking of the vehicle also takes place when opening a door from the inside or when removing the key from the ignition.

⚠ **WARNING**
A locked vehicle with a central locking button makes it difficult for responders to enter the vehicle in an emergency.

Setting the unlocking and locking function

› In Infotainment, select the following menu:

CAR > > >

Or:

MENU > > > >

All doors
Unlocking of all doors, the boot lid and the fuel filler flap.

Single door
Using the button on the key, the driver's door and the fuel filler flap are unlocked.

In vehicles equipped with a keyless locking system, the door near to which the key is located and the fuel filler flap are unlocked by touching the door handle.

When unlocked again, the other doors and the boot lid are unlocked.

Doors on one side of the vehicle
Using the button on the key, the doors on the driver's side and the fuel filler flap are unlocked.

In vehicles equipped with a keyless locking system, the doors on the passenger's side near to which the key is located and the fuel filler flap are unlocked by touching the door handle.

When unlocked again, the other doors and the boot lid are unlocked.

Automatic locking after starting
All doors and the boot lid are locked when a speed of 15 km/h is reached.

Unlocking of the vehicle takes place when opening a door from the inside or when removing the key from the ignition.

⚠ **WARNING**
An automatically locked vehicle makes it difficult for responders to enter the vehicle in an emergency.

Troubleshooting

Central locking fault
▸ The warning light in the driver's door first flashes for 2 secs in quick succession.
▸ Then it lights up continuously.
▸ After 30 secs, it flashes slowly.
› Seek the help of a specialist garage.


Mechanically unlocking and locking the door

Unlocking and locking the door with the lock cylinder



Remove the cover

› Pull the handle on the front left door and hold it in place.
› Insert the key into the recess on the underside of the cover.
› Lift the cover in the direction of the arrow.
› Release the door handle.

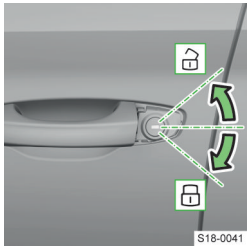

Locking and unlocking

› Insert the key with the buttons facing upwards into the lock cylinder and unlock or lock.

Install cover

› Pull on the door handle and hold it.
› Replace the cover.
› Release the door handle.

Locking the door without the lock cylinder



› Open the door.
› For vehicles with a panel over the opening, remove the panel.
› Insert the key or a flat-head screwdriver into the slot.
› Turn the key or flat-head screwdriver towards the outside of the vehicle (spring-loaded position).

After closing, the door is locked.

Keyless locking (KESSY)

Usage


The keyless locking system, KESSY, enables unlocking and locking of the vehicle without actively using the remote control key.

Operation

Keep the key with you when unlocking and locking.


The sensors on the handle are intended to be operated with bare hands, e.g. wearing gloves may affect the function of the sensors.

Release

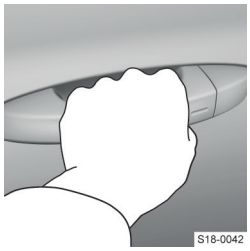

› Grab the door handle.
› Open the door.

Lock

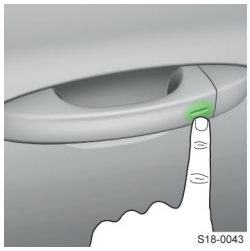

› Touch the sensor.

After locking, it is not possible to unlock within 2 seconds by touching the door handle. This can be used to check whether the vehicle is locked.

Unlocking the boot lid

› Press the handle of the boot lid.

Protection against inadvertently locking the key in the vehicle

If the key is locked inside the vehicle, the vehicle will unlock itself automatically. If no door is opened within 45 seconds, the vehicle automatically locks again.

If the key is locked in the boot, the boot lid will automatically unlock itself.

Settings

Deactivate keyless locking

› Lock the vehicle with the button on the key.
› Within 5 s, touch the sensor on the door handle with your finger.

Deactivation is confirmed by a single flash of the direction indicators.

› To check the deactivation, wait at least 10 seconds and then pull the door handle.

The door must remain locked.

Keyless locking is automatically activated once again after the vehicle is unlocked.

Troubleshooting

The vehicle cannot be unlocked or locked using the sensors on the handle

› Lock or unlock the vehicle with the button on the key.
› Then try to unlock or lock the vehicle using the sensors on the handle.
› If keyless locking does not work, seek the help of a specialist garage.

If the vehicle is not unlocked for a longer period of time, the function can be deactivated automatically.

When the ignition was switched on, no key was found


illuminates
Message that no key was found in the vehicle

› Insert the key into the vehicle.

Alarm system

Functionality

The alarm system triggers audible and visual signals during a break-in or towing attempt.

The alarm system is activated automatically approximately 30 seconds after the vehicle is locked.

The alarm system is automatically deactivated after the vehicle is unlocked.

Alarm triggering

The activated alarm system triggers an alarm when one of the following events occurs:

▸ Opening the bonnet
▸ Opening the boot lid
▸ Opening the door
▸ Manipulation of the ignition lock
▸ Towing the vehicle
▸ Movement in the vehicle
▸ Sudden and significant voltage drop of the electrical system
▸ Uncoupling the trailer
▸ Opening the door unlocked via the lock cylinder

Switching off the triggered alarm

› Unlock the vehicle.

Or:

› Turn on the ignition.

Operating conditions

For the correct functioning of the alarm system, all windows must be closed.

A trailer is integrated into the alarm system under the following conditions:

✓ The vehicle is factory-fitted with a towing device.
✓ The trailer is electrically connected to the vehicle via the trailer socket.
✓ The trailer is not equipped with LED taillights.

If the electrical connection to the trailer is interrupted on a vehicle with an activated alarm system, warning signals are triggered.

Disable the alarm before connecting or disconnecting a trailer.

Settings

The following functions of the alarm system can be deactivated at the same time:

▸ Interior monitoring
▸ Towing protection

Deactivation will also switch off the SAFE function » page 20, *Functionality*.

Deactivation

▸ By double locking within 2 seconds.

Or:

▸ In infotainment in the menu CAR > > > Menu item for interior monitoring

Or:

▸ In infotainment in the menu MENU > > > > Menu item for interior monitoring

The deactivated functions are reactivated after the vehicle is unlocked and locked again.


Deactivation is to be carried out if the vehicle is, for example, towed or transported.

Doors, windows and boot lid

Doors

Opening/closing the door

Opening from the outside

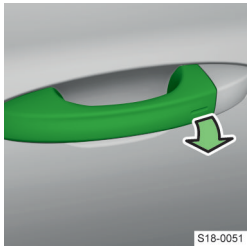

› Unlock the vehicle and pull on the door handle.

Opening from the inside



› Pull the door opening lever and push the door away from you.

Closing from the inside


› Grasp the pull handle and close the door.

Child safety lock on the rear doors

Operation

The child lock prevents the rear doors from being opened from the inside.

Switching on and off

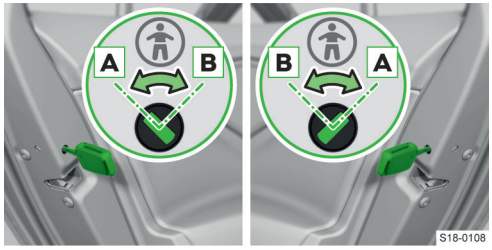

› Turn the child lock with the vehicle key or a flat-head screwdriver.

A Child lock switched off

B Child lock switched on

Window - with manual operation

Operation

When the windows are open, irritating noises may occur at certain speeds.



› Turn the crank in the appropriate direction.

Window - with electrical operation

What you should be mindful of

Force limiter

To reduce the risk of pinch injuries when closing the windows, the vehicle has a force limiter.

If there is an obstacle, the window closing process is stopped and the pane retracts by several centimetres.

If the obstacle prevents it from being closed for the next 10 seconds, the closing process is interrupted once again and the window goes down by several centimetres.

If you attempt to close the window again within 10 seconds of the window being moved down for the second time, even though the obstacle was not yet been removed, the closing process is only stopped. During this time, it is not possible to automatically close the windows by pulling the button all the way. The force limiter is, however, switched on.


The force limiter is only not operational if you attempt to close the window again within the next 10 seconds – the window will now close with full force! If you wait longer than 10 seconds, the force limiter is switched on again.

⚠ **CAUTION**

Risk of injury!

▸ Close the windows carefully, even though they have a force limiter.

Overview of the operating buttons on the driver's door

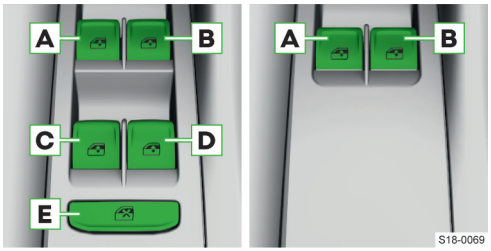

Depending upon vehicle equipment:

- **A** Front left window
- **B** Front right window
- **C** Rear left window
- **D** Rear right window
- **E** Deactivation/activation of the buttons in the rear doors

Operation

When the windows are open, irritating noises may occur at certain speeds.

Opening

› Press the corresponding button slightly downwards and hold it until the window has reached the desired position.

Or:

› Press the corresponding button until it stops; the window opens automatically. Pressing the button again will stop the opening process.

Closing

› To close, pull gently upwards on the top edge of the corresponding button and hold until the window has reached the desired position.

Or:

› Pull the corresponding button until it stops; the window closes automatically. By pressing the button again, the closing process is stopped.

After switching off the ignition, the windows can still open and close for about 10 minutes so long as none of the doors are opened.

Open all of the windows at the same time

› Press and hold the button on the key.

Or:

› Turn off the ignition, open the driver's door, and hold down the driver's window button until it stops.

Close all of the windows at the same time

› Press and hold the button on the key.

Or:

› Turn off the ignition, open the driver's door, and pull upwards on the driver's window button until it stops.

Or:

› For vehicles with a keyless locking system, hold one finger on the sensor on the outside of the handle on the front door.

Settings

The window operation is set in the following menu in the Infotainment system:

CAR > > > Menu item for window operation

Or:

MENU > > > > Menu item for window operation

Troubleshooting

The window regulator has stopped working after repeated opening and closing

The window regulator mechanism could have overheated.

› Allow the window regulator mechanism to cool down.

The window operation does not work after disconnecting the 12 volt vehicle battery

› Enable window operation » page 25.

Activation after disconnecting the 12-volt vehicle battery

Activate automatic window operation

› Turn on the ignition.

› Pull the corresponding button upwards and the window closes.

› Release the button.

› Pull up the respective button and hold for 1 second.

Sunblind - with manual operation


Operation



› Pull the handle in the appropriate direction.

Sun visors

Folding up and folding down

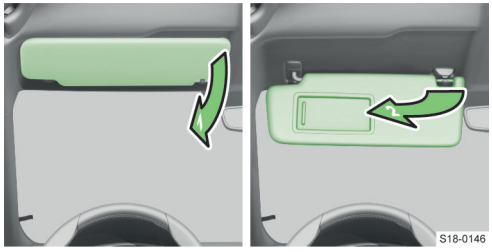

1 Swivel the front visor towards the windscreen

2 Swivel the visor towards the door

⚠ **CAUTION**
Objects attached to the sun visors can restrict the view to the outside.
In the event of sudden braking or an impact, these can also cause injuries.
▸ Do not attach anything to the sun visor.

Boot lid - with manual operation

Operation


Opening



› Press the handle and lift the lid.

The option to open by pressing the handle is deactivated once a speed of 5 km/h is reached. This is activated again after the vehicle has stopped and a door is opened.

Closing

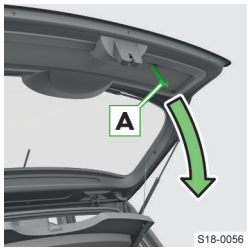

› Grasp the fixture A and pull the lid down.

⚠ **CAUTION**
Danger of opening the tailgate while driving!
▸ Make sure that the latch engages after the flap is closed.

Set a delayed lid lock


If the lid is unlocked with the button on the key, the lid is automatically locked again after closing.

The period after which the lid is locked automatically can be extended by a specialist garage.

Unlocking the boot lid

Release

If the boot lid does not open, it can be unlocked manually by the following procedure.

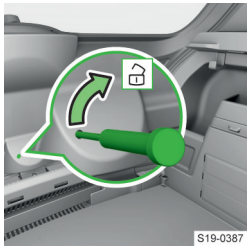


› Insert a screwdriver into the opening in the panel.

› Release the tailgate by moving it in the direction of the arrow.

Seats, steering wheel and mirror

Front seat - with manual operation

Controls on the seat

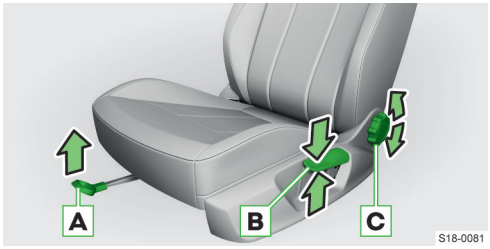

A Adjusting the seat in the longitudinal direction - after releasing the operating lever, the lock must audibly click into place

B Adjusting the height

C Adjusting the angle of the backrest - do not lean against the backrest during adjustment

After a certain time, play can develop within the adjustment mechanism of the backrest angle.

Rear seats

Folding down the seat backs


Before folding down

› Insert the rear headrests as far as they will go or remove them.

› Adjust the position of the front seats in such a way that they are not damaged by the folded-down seat backrests.

› Pull the outer seat belt to the side trim.

Folding down

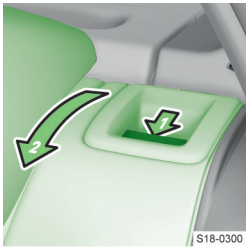


Split seat backrest

› Press the release handle and fold the seat forwards.

Unsplit seat backrest

› Simultaneously press the release handles on both sides of the backrest and fold the backrest forwards.

Folding back up

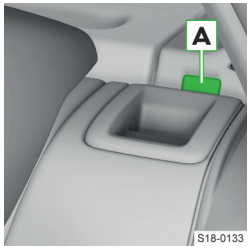

› Pull the outer seat belt to the side trim.

› Fold the seat backrest back up.

The release handle must audibly click into place.

› Check that the seat backrest has locked in place. The pin A must not be visible.

Rear seats

Fold up the seats


Applies to the vehicles Fabia Combi.



› Pull the seat up a little and fold it up.

Remove seats

Applies to the vehicles Fabia Combi.

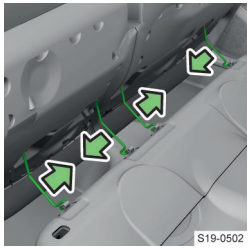


› Press the wire clips and unhook from the brackets.

› Remove the seat.

Insert seats

Applies to the vehicles Fabia Combi.

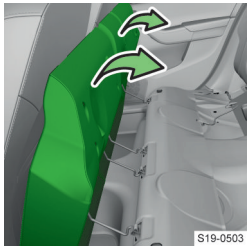

› Press the wire straps and insert into the brackets.

› Fold the seat back.



› Attach the seat to the ISOFIX system retaining eyelets so that the eyelets snap into the recesses in the plastic caps.

⚠ **CAUTION**
There is a risk that the seat will be damaged and will engage incorrectly.
When inserting the seat, do not pull it under the retaining eyelets of the ISOFIX system.

Park position of rear seat belts



Headrests

Adjusting the headrests

Front headrests
Adjustment of the headrest heights is the same in the front and rear.



› Move the headrest in the desired direction.

When pushing down, press and hold the safety button.

Removing and inserting the rear headrests

Removing



› Partially fold the respective seat back forwards.
› Move the headrest up to the stop.
› Press the safety button and remove the support.

Inserting
› Insert the headrest into the seat backrest.

The safety button must click into place.

Front armrest

Settings




Adjusting the height
› Raise the backrest to one of the locked positions.

Folding down
› Raise the backrest beyond the highest locked position and fold it down again.

Steering wheel

Buttons/dials on the multifunction steering wheel

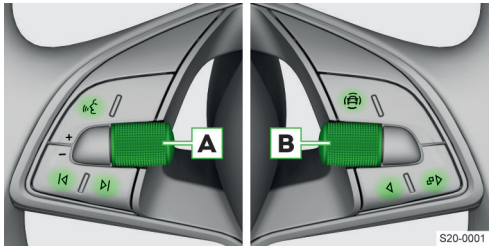

Switch voice control on/off

A **Rotate** - Adjust the volume
Press - Switch the sound off/on

Switch to the next track/station played

Switch to the previous track/station played

Show menu of assistance systems

B Operate instrument cluster display » page 49

Operate instrument cluster display » page 49

Operate instrument cluster display » page 49

Setting the steering wheel position

⚠ WARNING
Risk of an accident!
▸ Do not adjust the steering wheel while driving.



› Swing the safety lever downwards.



› Adjust the steering wheel to the desired position.



› Press the safety lever as far as it will go.

Troubleshooting

Power assisted steering faulty

illuminates - total failure of the power assisted steering, failure of steering assistance

› Turn off the ignition, start the engine and drive a few meters.
› If the indicator light does not go out, do not continue driving. Seek the help of a specialist garage.

illuminates - partial failure of the power assisted steering, possible reduction in power steering

› Turn off the ignition, start the engine and drive a few meters.
› If the indicator light does not go out, you can drive on, exercising appropriate caution. Seek the help of a specialist garage.

Steering column lock faulty

flashes
Message regarding a fault in the steering column lock

› Stop the vehicle.
› Seek the help of a specialist garage.

After switching off the ignition, it is then no longer possible to switch on the ignition, to lock the steering and to switch on the electrical components.

flashes
Message regarding a fault in the steering lock

› You may continue driving, exercising appropriate caution. Seek the help of a specialist garage.

Steering column lock not unlocked


flashes
Message concerning the required steering wheel movement

› Move the steering wheel slightly back and forth.
› If the steering does not unlock, stop the vehicle and seek the help of a specialist garage.

Interior rear-view mirror

Operation

Interior mirror with manual darkening

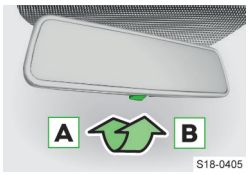

A Mirror is not darkened
B Mirror darkens


Interior mirror with automatic darkening
Darkening of the mirror is automatically controlled through the sensors in the mirror once the engine is started.

⚠ CAUTION
Risk of an accident!
A glowing display e.g. a mobile phone or navigation device may affect the function of the automatic mirror darkening.
▸ Do not attach these devices close to the mirror.

Wing mirror

Operation

Positions of the rotary knob

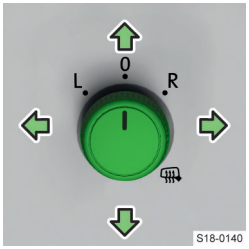

L Adjust the left-hand exterior mirror
0 Switch off operation
R Adjust the right-hand exterior mirror
Heat the mirror when the engine is running

Adjusting the mirror surface
› Select position **L** or **R**.
› Turn the rotary knob in the direction of the arrows.

Folding in the mirror
› Fold the mirror towards the side window by applying pressure with your hand.

⚠ **WARNING**
Risk of an accident!
The exterior mirrors make objects appear farther away.
▸ Use the rear-view mirror to determine the distance from vehicles behind.

Troubleshooting

Electric mirror operation impaired
› Adjust the mirror surface by pressing it lightly with your finger.

⚠ **CAUTION**
Risk of burns!
▸ Do not touch heated exterior mirror surfaces.

Restraint systems and airbags

Seat belts

Functionality

Seat belts that are fastened correctly offer very good protection in the event of an accident. They reduce the risk of an injury and increase the chance of survival in the event of a major accident.

⚠ **WARNING**
▸ The seat belts must not be removed or altered in any other way.
▸ If the driver's seat belt is damaged, stop driving.
▸ If another seat belt is damaged, the seat must not be occupied.
▸ Do not repair damaged seat belts yourself.
▸ Have a damaged seat belt replaced immediately by a specialist garage.

Automatic belt retractor
The automatic retractor locks the belt in the event of a jerky pull on the belt. The belts lock, for example, when full braking, when the car accelerates, when driving downhill and when cornering.

⚠ **WARNING**
▸ If the seat belt does not lock when pulled jerkily, have the retractor checked by a specialist garage.

Belt tensioners
Safety for the driver and front passenger **wearing their seat belts** is enhanced by the belt tensioners fitted to the inertia reels of the front seat belts.

If there is a collision with a certain severity, the seat belt is tightened by the belt tensioner so that unwanted body movement is prevented.

The belt tensioner can also be deployed when the seat belt is not fastened.

Belt tensioners are **not activated** in the event of **minor** collisions or in accidents in which no major forces are produced.

ⓘ Smoke is released when the belt tensioner is deployed. This does not indicate a vehicle fire.


Status display in the instrument cluster display
illuminated – a front seat belt is not fastened

illuminated – a rear seat belt is not fastened

illuminated – a rear seat belt is fastened.

Operation

Fastening the seat belt

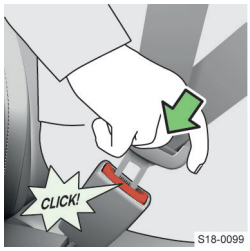


› Grasp the buckle latch and slowly pull the belt over the chest and pelvis towards the buckle.
› Insert the buckle latch into the buckle until there is an audible click.
› Pull on the belt to ensure that the buckle is securely fastened.

Unfastening the seat belt




› Grasp the buckle latch and release it by pressing the red button.
› Hold the belt so it does not twist when rolling up.

Settings

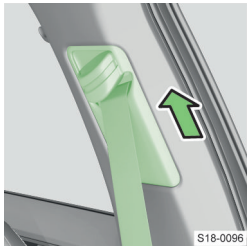

› Move the seat belt height adjuster upwards to increase the height.

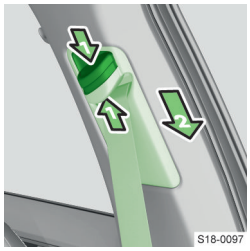

› Press the safety button and move the seat belt height adjuster down to reduce the height.
› After adjustment, firmly pull on the belt to ensure that the seat belt height adjuster has correctly locked in place and that the belt is locked securely.

Troubleshooting

Blocked belt retractor



› Grasp the strap in the middle and pull quickly.
› Hold the strap and let it roll up slowly.
› Pull on the strap to see if the retractor is working properly.
› If the strap is still blocked, repeat the unlocking procedure once or twice.
› If the strap is still blocked, seek the help of a specialist garage.

Child seat

What you should be mindful of

For how to install and use the child seat, please note the instructions in this Owner's Manual as well as the instructions of the child seat manufacturer.

For safety reasons, we always recommend that children are transported on the back seats. Carry children on the front passenger seat only in exceptional cases.

Use child seats according to standard ECE-R 44 and ECE-R 129 of the European Economic Commission.

Child seats according to standard ECE-R 44 and ECE-R 129 are marked with the test symbol: large E in a circle, with the test number below.

We recommend using child seats from the ŠKODA Original Accessories range. These child seats have been developed and tested for use in ŠKODA vehicles. They satisfy the standard ECE-R 44 or ECE-R 129.

⚠ **WARNING**

▸ When installing the child seat on the rear seat, adjust the front seat so that there is no contact between the front seat and the child seat or the child carried in the child seat.
▸ Before installing a forward-facing child seat, adjust the headrest so that it is as low as possible.
▸ If the headrest prevents the child seat from being fitted, adjust the headrest to the highest position.
▸ When installing the child seat, avoid contact between the roof and the rear pillar. If the head airbag is deployed, there is a risk of injury.
▸ If using a separate child seat cushion, adjust the headrest so that the child's head is flush with, but not protruding above the height of the top edge of the headrest.

Using a child seat on the front passenger seat

When using a child seat on the passenger seat, any country-specific regulations must be observed.

Never use a child seat in which the child is carried with his or her back to the direction of travel on a seat protected by an active airbag placed in front of the seat. This could cause serious injury to the child, even death.

This is also indicated by the following stickers:



A Sticker on the passenger sun visor

B Sticker on the central body pillar on the passenger side

The following instructions must be followed when using a child seat on the front passenger seat:

- ▶ It is essential to deactivate the front passenger airbag if using a child seat in which the child is transported with its back facing the direction of travel » page 35.
- ▶ If possible, adjust the front passenger seat backrest so that it is vertical, to ensure that there is secure contact between the backrest and the child seat.
- ▶ If possible, move the front passenger seat backwards so that there is no contact between the front passenger seat and the child seat behind it.
- ▶ Adjust the height-adjustable front passenger seat as much as possible.
- ▶ Set the front passenger seat belt as high up as possible.

⚠ WARNING

Risk of the seat belt causing a neck injury to the transported child!

- ▶ For child seats in groups 2 and 3, ensure that the guide fitting attached to the child seat headrest is positioned in front of or at the same height as the seat belt height adjuster on the central body pillar.
- ▶ Adjust the height of the front passenger seat belt so that the belt passes through the guide fitting without kinking and is not bent over the edge of the guide fitting.

⚠ WARNING

- ▶ As soon as the rear-facing child seat is no longer being used on the front passenger seat, activate the front passenger airbag again.

Recommended child seats

Grouping of child seats according to standard ECE-R 44.

Group	Weight of the child
0	up to 10 kg
0+	up to 13 kg
1	9-18 kg
2	15-25 kg
3	22-36 kg

Recommended child seats

Group	Manufacturer	Type	Attachment	Order number	Approval number (E1 ...)
0+ (up to 13 kg)	Britax Römer	Baby Safe Plus	Isofix base frame	1ST019907	04 301146
1 (9-18 kg)	Britax Römer	Duo Plus TT	ISOFIX and TOP TETHER	DDA000006	04 301133
2-3 (15-36 kg)	Britax Römer	Kidfix XP [a)]	ISOFIX	000019906K	04 301198
	Britax Römer	Kidfix II XP	ISOFIX	000019906L	04 301323

a) For optimum protection, especially in the event of a side impact, it is recommended that you use this child seat complete with the backrest.

Fasteners for child seats

Use of child seats

Overview of usability of child seats according to standard ECE-R 16.

Child seats with the ISOFIX system

Group	Size category of child seat [a]	Front passenger's seat		Rear seats	
		With activated front airbag	With deactivated front airbag	Outer seats	Centre seat
0 (up to 10 kg)	E	X	X	IL	X
0+ (up to 13 kg)	E D C	X	X	IL	X
1 (9-18 kg)	D C B B1 A	X	X	IL IUF	X
2 (15-25 kg)	-	X	X	IL	X
3 (22-36 kg)	-	X	X	IL	X

[a] The size category of the child seat is indicated on the child seat plate.

IL The seat is suitable for the ISOFIX child seats with "Semi-Universal" approval.

IUF The seat is suitable for forward-facing child seats and is permitted for use in this weight category.

X The seat is not equipped with eyelets for the ISOFIX system.

Child seat fastened with a safety belt

Group	Front passenger's seat		Rear seats	
	With activated front airbag	With deactivated front airbag	Outer seats	Centre seat [a]
0 (up to 10 kg)	X	U [b]	U	U
0+ (up to 13 kg)	X	U [b]	U	U
1 (9-18 kg)	UF	U	U	U
2 (15-25 kg)	UF	U	U	U [c]
3 (22-36 kg)	UF	U	U	U [c]

[a] It is forbidden to install a child seat with a support foot in the middle rear seat.

[b] Adjust the height-adjustable front passenger seat as much as possible.

[c] If the centre rear seat is not equipped with a headrest, only use a group 2 or 3 child seat if it has its own integrated headrest. If the child seat does not have this support, then attach the child seat to the outer rear seat.

U The seat is suitable for the child seat category "Universal" and is permitted for use in this weight group.

UF The seat is suitable for forward-facing child seats in the "Universal"category and is permitted for use in this weight group.

X The seat is not suitable for children in this weight group.

Overview

ISOFIX

⚠ WARNING

- On the retaining eyelets that are used to install the child seat with the ISOFIXSystem provided, do not attach any other child seats, belts or objects.

The ISOFIX system allows for the fast and secure installation of the child seat. The eyelets for installing the child seat using the ISOFIX system are located on the outer rear seats and possibly on the front passenger seat.

A child seat that uses the ISOFIXsystem can only be installed in the vehicle if it is approved for this vehicle type. Further information can be obtained from a ŠKODA partner or from a list of vehicles enclosed with the child seat.




Holding eyes for installing the child seat using the ISOFIX system.

TOP TETHER

⚠ WARNING

- Child seats with the TOP TETHER- Only use the system on the seats with the eyelets TOP TETHERSymbol are provided.
- Only attach one belt from the child seat to a locking eye TOP TETHER-Fasten the system.
- When attaching the child seat with the TOP TETHER- No other object may be attached to the eyelet TOP TETHERSystem.

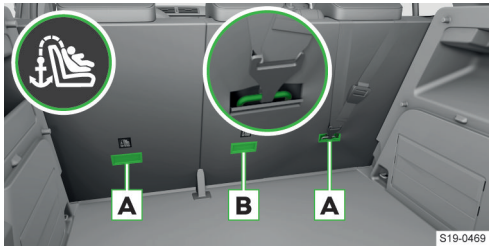

Holding eyelets on the rear seats

The belt fastened into the TOP TETHER system restricts the movement of the upper part of the child seat. The holding eyelets for attaching the belt are located on the outer rear seats A, as well as on the middle rear seat B when necessary.

Airbags

Usage

The airbag system provides, as a supplement to the seat belts, additional occupant protection during severe frontal and side-on collisions.

The best possible protective effect of the airbag is achieved only when the seat belt is also worn. The airbag system is no substitute for the seat belts.

What you should be mindful of

Airbag systems can only properly protect if all occupants have been secured and they are in the correct seating position.

No persons, animals or objects such as cup holders or hangers for clothes may be in the deployment area of the airbags » page 35.

- Do not cover or stick anything over the steering wheel or the dash panel. The front airbags were not able to deploy.

The front passenger airbag should be switched off in some situations » page 35.

Functionality

When sinking into the inflated airbag, the forward movement of the body is damped and the risk of injury is reduced.

ⓘ As the airbags inflate, smoke is released. This does not indicate a vehicle fire.

Airbag deployment in the event of an accident
Airbag deployment is influenced by many factors. The deceleration rate at the time of impact is crucial.

⚠ WARNING
Danger of serious or fatal injuries!

- Maintain the correct seating position.
- Do not keep your limbs in the deployment area of the airbags.

In the following situations, **no** airbags are deployed:


- Minor frontal and side collisions
- Rear-end collision
- Vehicle rollover

If the measured deceleration rate is below the reference values programmed into the control unit, the

airbags will not be deployed despite possible serious vehicle damage.

Airbag overview

The installation location of the airbags is marked with the lettering AIRBAG.

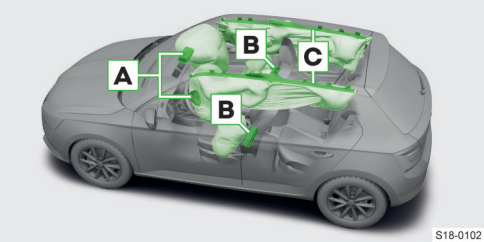

A Front airbags

B Side airbags - front

C Head airbags

⚠ **WARNING**
Danger of a functional restriction of the side airbags!
- Do not exert excessive forces, e.g. impacts, on the seat backs.
- Do not use seat covers that have not been approved by ŠKODA.
- Have damaged seat covers at the installation location of the side airbags repaired by a specialist garage.

Deactivating the airbags
We recommend having airbags other than the front passenger airbag deactivated » page 35, *Operation*by a ŠKODA service partner.

Deactivation of the airbags should be considered in cases such as the ones below:

- If the driver's seat adjustment is correct, the distance of at least 25 cm between the centre of the steering wheel and the sternum cannot be maintained.
- Additional operating controls for a physically disadvantaged driver are installed in the vehicle.
- The vehicle has special seats, e.g. orthopaedic seats without side airbags.

illuminates for 4 seconds after the ignition is switched on and then flashes for 12 seconds
- Airbag or belt tensioner deactivated with the diagnostic device
Message regarding the deactivated airbag or belt tensioner

⚠ **WARNING**
If an airbag is deactivated during the sale of the vehicle, inform the buyer!

Requirements

✓ Ignition on

Troubleshooting

Airbag system faulty
illuminates
Message regarding an airbag fault

› Seek the help of a specialist garage.

Key switch for the front passenger airbag

Usage

Deactivation of the front passenger airbag is provided for the following cases, for example:

- A rear-facing child seat is mounted on the front passenger seat.
- The minimum distance to the control panel cannot be maintained.

What you should be mindful of

⚠ **WARNING**
Danger of fault in the passenger airbag deactivation system!
- Only switch off the airbag when the ignition is switched off.

⚠ **WARNING**
Danger of unexpected deployment of the passenger airbags in an accident!
- After switching off the passenger airbag with the key bit, do not leave the key bit inserted in the key switch while driving. Shocks can cause the Key assignment to turn in the slot and trigger the airbag.

Operation

Before switching off/switching on the front passenger airbag
› Completely fold out the key bit.

Switch front passenger front airbag on/off



› Switch off the ignition.
› Open the storage compartment on the passenger's side.
› Insert the key bit into the slot in the key switch as far as it will go.
› To **Switch off**, carefully rotate the key switch into the position **OFF**.
› To **Switch on**, carefully rotate the key switch into the position **ON**.
› Remove the key bit from the slot.
› Close the storage compartment on the passenger's side.
› Turn on the ignition and check that the front passenger airbag indicator lights are lit up.

Warning lights



▶ After switching on the ignition, the two indicator lights light up briefly.
▶ If the system is OK, both of the indicator lights go out.
▶ One of the indicator lights then lights up again depending on the position of the key switch:

OFF lights up - front passenger airbag switched off

ON lights up 65 secs after the ignition is switched on – passenger front airbag switched on

Troubleshooting

Key switch for airbag deactivation is faulty

ON flashes together with **OFF**
The front passenger airbag will not be deployed in the event of an accident!

› Have the airbag system checked by a specialist garage immediately.

Lighting, windscreen wipers and washers

Exterior lighting

Functionality

Unless otherwise stated, the light works when the ignition is switched on.

Daylight running lights
The daytime running lights illuminate the area in front of the vehicle.

In vehicles for certain markets, this also provides lighting for the rear area of the vehicle.

Operating conditions
✓ The light switch is in position **0** or **AUTO**.
✓ The function is activated.

Switching the low beam on/off automatically
The low beam is automatically switched on or off depending on the lighting conditions.

Operating conditions
✓ The light switch is in the **AUTO** position.

The automatic headlight circuit is indicated by the illumination of the symbol in the light switch.

Switching low beam on automatically in rain
Operating conditions
✓ The light switch is in the **AUTO** position.
✓ The function is activated.
✓ The windscreen wipers are switched on for longer than 15 seconds.


The automatic headlight circuit is indicated by the illumination of the symbol in the light switch.

CORNER function
The CORNER function is intended for turning or manoeuvring (e.g. when parking).

The function illuminates the vicinity of the vehicle front in the direction of travel.

Operating conditions
✓ The turn signal is switched on or the front wheels are steered sharply.
✓ The low beam is switched on.
✓ The fog lights are not switched on.
✓ The driving speed is lower than 40 km/h.

Operation

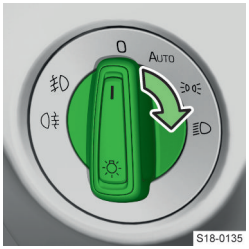

0 Switching off the lights except the daytime running lights

AUTO Switching the low beam on/off automatically


Switching on the parking lights

Switching on the low beam

As the basic position of the light switch, use position **AUTO**.

High beam and headlight flasher

The high beam works when the low beam is on.

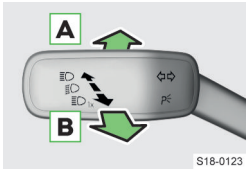

A Switch on high beam

B Switch off main beam / switch on headlight flasher


When the main beam or headlight flasher is switched on, the indicator lamp lights up in the instrument cluster.

⚠ CAUTION

Risk of an accident!

▸ Do not dazzle other road users with the high beam.

Turn signal

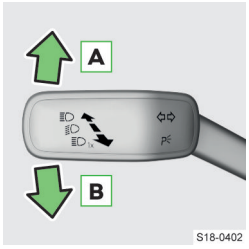

A Switching on the turn signal light on the right - the warning light flashes in the instrument cluster

B Switching on the turn signal light on the left - the warning light flashes in the instrument cluster

Turn signal - convenience signalling


Convenience signalling enables three flashes of the turn signal lights without having to move the lever up or down.

› Tap the control lever up or down.

The corresponding turn signal lights flash three times.

Tap the lever in the opposite direction ahead of time to stop signalling.

Fog light

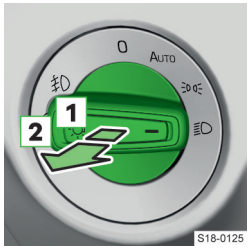

Positions for pulling out the light switch

1 Fog lights - when switched on, the indicator light in the instrument cluster illuminates

2 Rear fog light - when switched on, the indicator light in the instrument cluster illuminates

› Turn the light switch to position **AUTO**, or .

› Pull the light switch to the appropriate position.

The rear fog light does not illuminate when an accessory is connected to the trailer socket.

Hazard warning light system


› Press the button to switch on or off in the middle part of the control panel.

The hazard warning lights can be switched on automatically during hard braking. The hazard warning lights are then switched off again automatically when starting off or accelerating.

When the hazard warning system is on and the turn signal is switched on, the hazard warning lights will be switched off temporarily and only the turn signal will flash on the relevant side of the vehicle.

One-sided parking light

The one-sided parking light allows one side of the parked vehicle to be illuminated through activation of the corresponding sidelights.

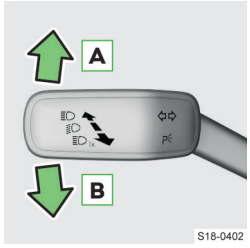

A Switch on the sidelights on the right

B Switch on the sidelights on the left

› Switch off the ignition.

› Move the lever to the appropriate position.

› Lock the vehicle.

When the parking light is switched on, an acoustic warning signal sounds and the driver's door is opened. After a few seconds or after the driver's door is closed, the warning signal will stop.

Double-sided parking light

The two-sided parking light allows the parked vehicle to be illuminated through activation of the sidelights.

› Turn on the ignition.

› Turn the light switch to position .

› Switch off the ignition.

› Lock the vehicle.

When the parking light is switched on, an acoustic warning signal sounds after the ignition is switched off and the driver's door is opened. After a few seconds or after the driver's door is closed, the warning signal will stop.


The light may switch off automatically if the 12-volt vehicle battery is too low. If the parking lights on both sides are switched on with the ignition off, the lights will not be switched off automatically and the 12 volt vehicle battery may be discharged.

Settings

Activating/deactivating the automatic headlights system in rain
The function is activated or deactivated as follows in the Infotainment system in the menu CAR > > .

Activating/deactivating convenience signalling
The function is activated or deactivated as follows in the Infotainment system in the menu CAR > > .

Headlight range control of the Halogen headlights
› Select the position of the control according to the vehicle's current load status.

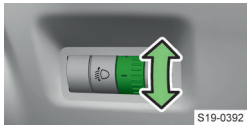

– Front seats occupied, boot empty
1 All seats occupied, boot empty
2 All seats occupied, boot loaded
3 Driver's seat occupied, boot loaded

For the Full LED headlights, the headlight range control is adjusted automatically.


⚠ **WARNING**
Risk of an accident!
An incorrectly adjusted headlight range can cause insufficient vehicle lighting or can dazzle other road users.
▸ Adjust the headlight range correctly.

Adjust headlights for driving in right / left-hand traffic
Applies to LED headlights.

› In infotainment select the menu CAR > > .
› Activate the travel mode function.


Deactivate / activate daytime running lights on vehicles with the Amundsen and Swing Infotainment systems
The function is activated or deactivated as follows in the Infotainment system in the menu CAR > > .

Deactivate daytime running lights on vehicles with the Blues Infotainment system or without Infotainment
› Switch off the ignition.

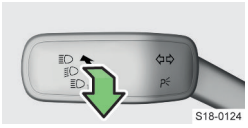

› Pull the lever towards the steering wheel, push it downwards and hold it in this position.
› Turn on the ignition.
› As soon as an acoustic signal sounds, release the lever.

Activate daytime running lights on vehicles with Infotainment blues or without Infotainment
› Switch off the ignition.

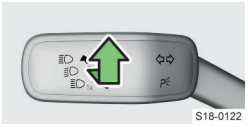

› Pull the lever towards the steering wheel, push it upwards and hold it in this position.
› Turn on the ignition.
› As soon as an acoustic signal sounds, release the lever.

Troubleshooting

Turn signal light defective
flashes faster - turn signal light on the right defective
› Check the turn signal light on the right.

flashes faster - turn signal light on the left defective
› Check the turn signal light on the left.

does not flash when the trailer is hitched - trailer turn signal light defective
› Check the trailer lighting.

Light bulb or LED bulb is defective
illuminates together with ⚠
Information appears in the display regarding the defective lights.
› Replace the defective bulb.
› In case of a defective LED bulb, contact a specialist garage for help.

The headlights are misted up on the inside
Inside the headlights, moisture may occur. This is not a defect.

Malfunction of the automatic headlight circuit
› Clean the windscreen in the area of the rain/light sensor.

Beam of light in front of the vehicle has shortened
Headlight defective.

› Seek the help of a specialist garage.

Driving lights defective
If a message regarding the failed driving lights is displayed, the light will work in emergency mode.

› Drive on, exercising appropriate caution.
› Seek the help of a specialist garage.

COMING HOME, LEAVING HOME exterior lighting

Functionality

The COMING HOME function turns on the light after turning off the ignition and opening the driver's door. The light switches off automatically after the set lighting time has elapsed.

The LEAVING HOME function switches on the light when unlocking the vehicle with the wireless remote control.

Operating conditions

✓ Visibility has worsened.
✓ The light switch is in the **AUTO** position.

Settings

This function is set in the following menu in the Infotainment system:

CAR > > .

Light Assist high-beam assist system

Functionality

The high beam assist system automatically switches the high beam on and off.


⚠ **WARNING**
Risk of accident!
▸ If necessary, manually switch the high beam on or off.

Operating conditions

✓ The system is activated.
✓ The light switch is in the **AUTO** position.
✓ The driving speed is higher than 60 km/h (for some countries, higher than 40 km/h).
✓ The low beam is switched on.

Operation

Switching on

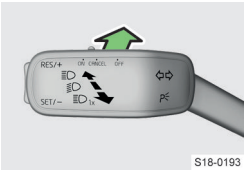

› Push the lever in the direction of the arrow.

It lights up in the instrument cluster from the isolation box.

Switching off
› Manually switch the high beam on or off.

Function restriction

The system may dazzle other road users if their headlights/lights are not detected for the following reasons, for example:

▸ The headlights/lights of oncoming vehicles are covered by crash barriers, for example.
▸ The headlamps/lights of the oncoming or preceding vehicle are dirty or not functioning.

Settings

Activation/deactivation
The function is activated or deactivated as follows in the Infotainment system in the menu **CAR** > > .

Replace light bulbs

What you should be mindful of

DIY replacement of the following bulbs is possible. Have the remaining light sources replaced by a specialist garage.

The new bulb must conform to the specification of the original light bulb. The name of the bulb is marked on the bulb socket.

After changing a bulb in the low beam light, the main beam or fog light, have the headlights adjusted by a specialist garage.

⚠ **CAUTION**
Halogen lamps are pressurised and can burst during replacement!
▸ Wear gloves and safety goggles.

ⓘ **NOTICE**
Contamination of the halogen lamp reduces the life of the lamp!
▸ Do not touch the glass of the light bulb with your bare fingers.


NOTICE
Danger of headlight damage due to the ingress of water and dirt!
▸ Always fit the protective cap on the headlight correctly after changing a bulb.

Conditions for changing a bulb


✓ Ignition off
✓ Light switched off

Low beam and high beam

Before changing the light bulb for the high beam in the right headlight

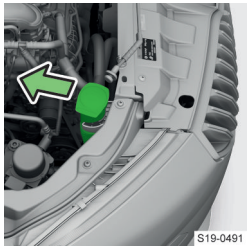

› Disconnect the washer fluid reservoir from the bracket.

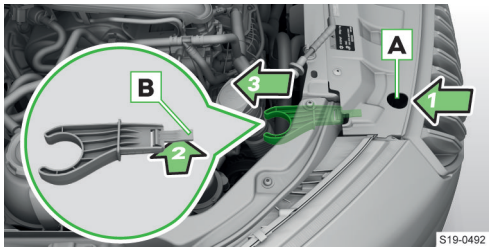


› Insert one finger into the recess A and lift the latch B on the bracket.
› Remove the bracket.

Before changing the light bulb for the low beam light
› Adjust the front wheels so that the cover cap in the wheel arch is accessible.



› Insert the bracket from the tool kit into the recess in the cover cap.
› Remove the cover by pulling on the bracket.

Replacing the light bulb

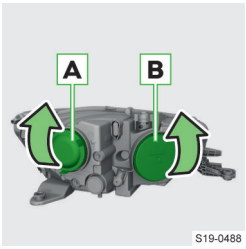


Protective caps on the headlight:
A Low beam
B Main beam

› Remove the associated protective cap.



› Press the socket with the light bulb downwards and remove it.

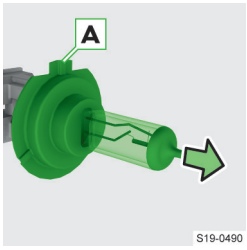


› Change the bulb in the socket.
› Insert the socket with the new light bulb into the headlight, so that the fixing lug A is pointing up.
› Insert the socket until it clicks into place.
› Fit the protective cap on the headlight again.

After changing the light bulb for the low beam light
› Insert the cover in the wheel arch and lock into place.


After changing the light bulb for the high beam in the right headlight
› Reinstall the washer fluid reservoir holder.
› Insert the container nozzle back into the holder.

Front turn signal

Before changing the bulb in the right headlight

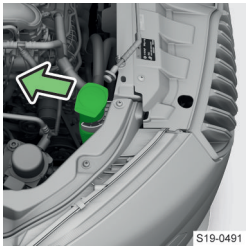


› Disconnect the washer fluid reservoir from the bracket.

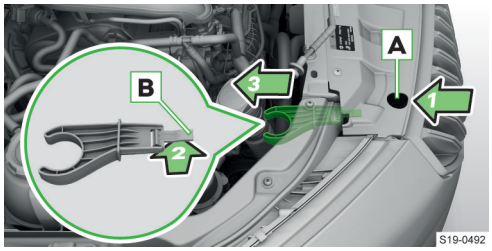


› Insert one finger in the recess A and lift B the bracket latch.
› Remove the bracket.

Replacing the light bulb

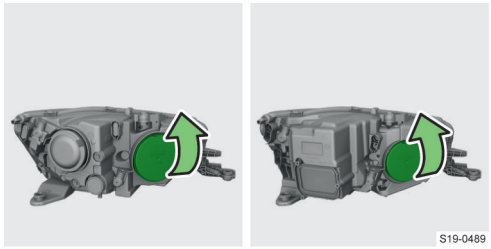


Protective cap: Halogen headlights/LED headlights

› Remove the protective cap from the headlight.

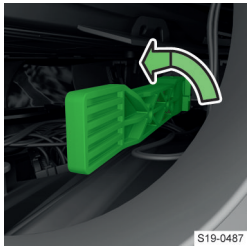

› Turn and remove the socket with the bulb.

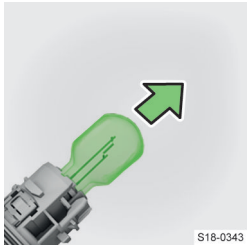

› Change the bulb in the socket.
› Insert the socket with the light bulb into the headlight and turn it clockwise ↻ to secure.
› Reinstall the protective cap on the headlight.
› After changing the bulb in the right headlight, reuse the bracket for the wash water container nozzle .


Fog lights



› Release the cover with the bracket from the tool kit and remove it.



› Unscrew screws A.
› Take out the lamp.

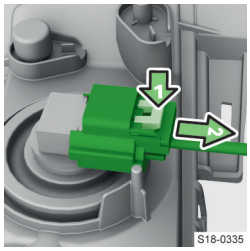


› Release the connector and remove it from the bulb.



› Turn the light bulb and take it out.
› Push the new light bulb into the light so that the guide lugs on the light bulb and the associated openings in the light are in alignment.
› Turn the bulb clockwise ↻ to secure.
› Attach the connector to the bulb, ensuring it clicks into place.
› Reinstall the lamp and screw it on.
› Replace the cover and push it in until it clicks into place.

Taillight


Loosen and remove the lamp

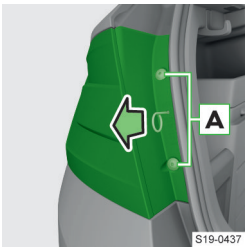

› Unscrew the screws A .
› Insert the bracket from the tool kit into the recess in the light.


On the left-hand lamp, the eyelet of the bracket must point downwards, and upwards on the right lamp.

› Remove the lamp with the bracket.

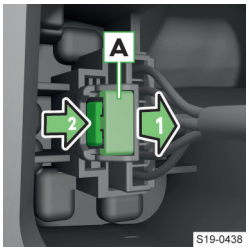


› Pull the lock A somewhat out of the plug.
› Press the safety button and pull out the plug.

Change bulb - Variant 1 (light with LED light sources)

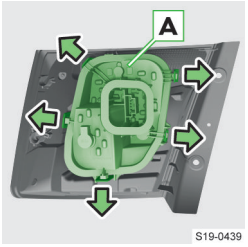

› Unlock and remove the lamp holder the lock A .

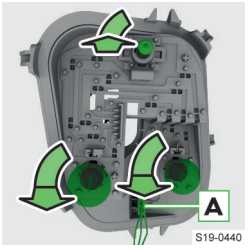


› Turn the defective light bulb and take it out of the holder.
› Insert a new light bulb into the socket and secure the light bulb by turning it in the direction of ↷.
› Check that the connector the lock A is securely connected.
› Insert the bulb holder into the light and snap into place.

NOTICE

Risk of damage to the electrical system!


▸ Make sure that no cables are trapped when inserting the holder into the lamp.

Change bulb - Variant 2 (light only with light bulbs)

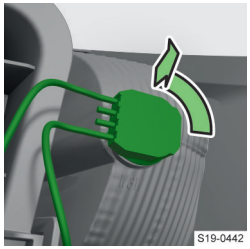


Change the bulb in the outer part of the lamp.

› Turn and remove the socket with the bulb.

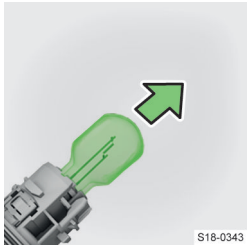


› Change the bulb in the socket.
› Push the base with the new light bulb into the luminaire so that the guide lugs on the base and the associated openings in the luminaire are flush.
› Turn the socket clockwise ↷ to secure.

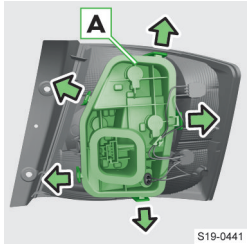

Change the bulb in the inner part of the lamp.


› Unlock and remove the lamp holder A .

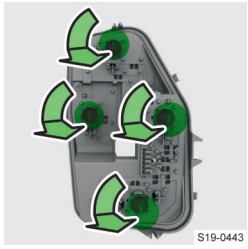

› Turn the defective light bulb and take it out of the holder.
› Insert a new light bulb into the socket and secure the light bulb by turning it in the direction of ↷.
› Insert the bulb holder into the light and snap into place.

Insert and fix the lamp

› Insert the connector into the light until it clicks into place.
› Press in the slightly pulled out latch on the connector.

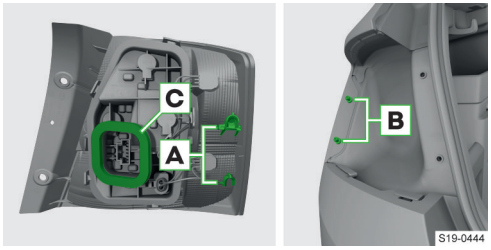

› Stick The lamp with the openings A on the bolts B in the body.

NOTICE
Risk of damage to the electrical system due to water ingress!
▸ Make sure that the seal is used correctly when installing the lamp C .

NOTICE
Risk of damage to the electrical system!
▸ Make sure that the lines between the lamp and the body are not pinched when the lamp is inserted.

› Screw on the lamp.

Interior lighting

Operation

Operation of the lighting
Switch on (front lighting)
Switch on / off (rear lighting)
0 Switching off
Reading lamp left
Reading lamp right
Automatically switch on and switch off

Switching on automatically
The lighting switches on when one of the following events occurs.
▸ The vehicle is unlocked
▸ One of the doors is opened
▸ The ignition key is removed (vehicle without starter button)

Automatic switch off
The lighting switches off when one of the following events occurs:
▸ The vehicle is locked
▸ The ignition is switched on
▸ About 30 seconds after all the doors have been closed

If a door remains open and the ignition is switched off, the lights will turn off automatically after 10 minutes.

Settings

Storage compartment in the centre console
The brightness level of the storage compartment lighting is set when the low beam or parking light is switched on in the Infotainment in the following menu CAR > > menu item for interior lighting.

Windscreen wipers and washers

Operating conditions


Operating conditions for windscreen wipers
✓ Engine compartment flap closed
✓ Boot lid closed
✓ Ignition on

Operating conditions for the windscreen washer system
✓ Engine compartment flap closed
✓ Boot lid closed

Operation

WARNING
Risk of an accident!
At low temperatures, windscreen washer fluid can freeze on the windscreen and restrict visibility.
▸ Only use the windscreen washer when the windscreen is warm.

Wipe and wash the windscreen

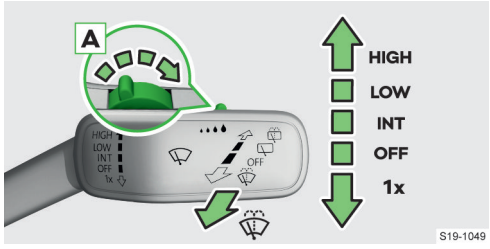


HIGH Fast wiping
LOW Slow wiping
INT Depending upon vehicle equipment:
▸ Intermittent wiping
▸ Automatic wiping controlled by the rain sensor
OFF Switching off
1x Tip-wiping (spring-loaded position)
A Setting the wiping speed for the position INT
Washing and wiping (spring-loaded position)

The windscreen washer nozzles of the windscreen are automatically heated together with the exterior mirrors.

Clean headlights
When the headlights are switched on, they are cleaned the first time and after every tenth wash of the windscreen. Setting the spray interval can be carried out by a specialist garage.

Wipe and wash the rear window

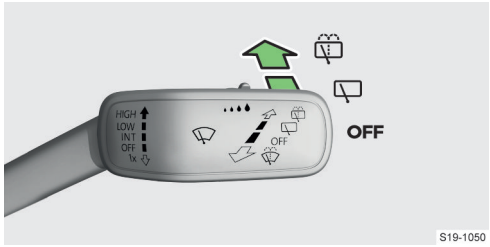

Spring-loaded position:
- ▸ Washing and wiping the windscreen
- ▸ Cleaning the rear view camera

Wiping

OFF Switching off

Automatic rear window wiping
When the windscreen wipers are switched on, the rear window is automatically wiped when the reverse gear is engaged.

Settings

Activating/deactivating automatic wiping
The functions for automatic rear window wiping and automatic wiping in the rain can be activated and deactivated in the following menu in the Infotainment system:

CAR > >

Or:

MENU > > >

Refilling windscreen washer fluid

⚠ **WARNING**
Risk of an accident!
- ▸ Use windscreen washer fluid that is suitable for the weather conditions.

NOTICE
Risk of damage to the windscreen washer system!
- ▸ When refilling the washer fluid, do not remove the strainer from the neck of the container.

NOTICE
Risk of damage to the headlights!
- ▸ Only use washer fluid that does not attack polycarbonates.

NOTICE
Risk of damage to engine compartment components!
- ▸ Close the container after refilling the windscreen washer fluid.

The windscreen washer tank is located in the engine compartment » page 11.

The container can hold a volume of 3.5 litres and 5.4 litres for vehicles with a headlight cleaning system. For some countries, the volume is 5.4 litres for both variants.

› Open the engine compartment lid » page 118.
› Gently open the top of the sealing cap.
› Top up the windscreen washer fluid.
› Close the sealing cap of the tank.

Troubleshooting

Windscreen washer fluid level too low
illuminates together with ⚠
› Top up the windscreen washer fluid.


Frozen windscreen wipers
› Carefully remove frozen windscreen wipers from the windscreen before switching on the ignition and free them from snow and ice.

Folding down windscreen wiper arms and replacing windscreen wiper blades

For folding down the windscreen wiper from the screen you must first adjust the wiper arms to the folded position.

NOTICE
Risk of damage to the windscreen wipers and the engine compartment lid!
- ▸ Close the bonnet before lowering the wiper arms from the window.
- ▸ Do not turn on the ignition when the windscreen wiper arms are folded away.

Set the windscreen wiper arms into the folding position
› Switch the ignition on and off again.

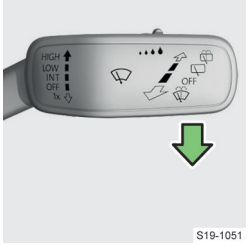


› Within 10 seconds, press the control lever down and hold for about 2 seconds.

Replace the windscreen wiper blade

⚠ **CAUTION**
Risk of accident!
▸ Change the windscreen wiper blades once or twice a year.

› Fold the windscreen wiper arm away from the windscreen.

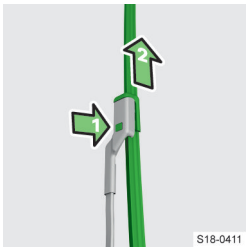


› Press the catch and remove the wiper blade.
› Insert the new wiper blade until it clicks into place.
› Fold the windscreen wiper arm back onto the windscreen.
› Turn on the ignition and push the control lever down.

Heating and air conditioning system

Heating

Overview of the heating operation components

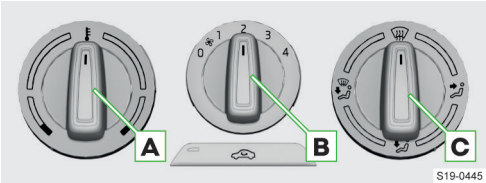

A Set the temperature
B Set the blower speed
C Set the direction of the air outlet
Switch recirculated air mode on/off

⚠ **WARNING**
Danger of misting!
▸ Always keep the fan on.

Manual air conditioning

What you should be mindful of

▸ We recommend keeping the interior temperature no more than 5 ° C lower than the outdoor temperature.
▸ We recommend switching the cooling system off about 10 minutes before the end of the journey to prevent odour formation.
▸ Annual disinfection of the air conditioning is recommended.


⚠ **WARNING**
Danger of misting!
▸ Always keep the fan on.

⚠ **WARNING**
Risk of accident!
In recirculation mode, there is no fresh air supply from the outside. This can result in loss of driver attention and fogging up of windows.
▸ Keep the recirculation mode switched on for a short time only.

Operating conditions for the cooling system

✓ Outside temperature above 2 ° C
✓ Running engine
✓ Fan switched on

Overview of the controls for the manual air conditioning

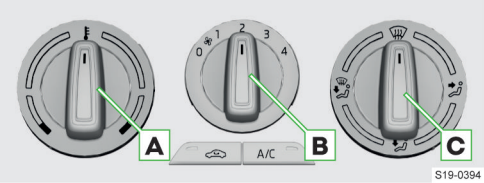

A Set the temperature

B Set the blower speed

C Set the direction of the air outlet

Switch recirculated air mode on/off

A/C Switch the cooling system on/off

Cooling system
When the cooling system is switched on, the temperature and humidity in the vehicle will drop.

Switching on the cooling system prevents the windows from misting up.

After pressing the A/C button, the indicator light in the button illuminates, even if the conditions for switching on the cooling system are not met. The cooling system switches on when the conditions for switching on the cooling system are met.

Automatic activation of the cooling system
Automatic activation of the cooling system prevents the windows from misting up. The system switches on in the following cases.

- When the fan is on and the air distribution controller is in the position.

  In this case, the recirculation mode is switched off.
- When the air distribution controller is not in the position, and recirculated air mode is switched on.

Recirculated air mode
The recirculation mode prevents contaminated outside air getting into the interior of the vehicle.

Briefly switching on recirculation mode can increase the cooling effect.

Under certain circumstances, the recirculation mode may be switched on or off automatically.

When the air conditioner is operating, the engine idle speed may increase automatically.

Troubleshooting

Water under the vehicle
When the cooling system is switched on, water can drip off the air conditioning system. This is not a leak.

Fogging
› Increase the blower speed, switch on the cooling system, and set the air distribution to the windscreen.

Automatic switch-off of the cooling system
If the coolant temperature is too high, the cooling system may switch off automatically. This ensures sufficient engine cooling.

Climatronic automatic air conditioning system

What you should be mindful of

- We recommend keeping the interior temperature no more than 5 ° C lower than the outdoor temperature.
- We recommend switching the cooling system off about 10 minutes before the end of the journey to prevent odour formation.
- Annual disinfection of the air conditioning is recommended.


⚠ **WARNING**
Danger of misting!
- Always keep the fan on.

⚠ **WARNING**
Risk of accident!
In recirculation mode, there is no fresh air supply from the outside. This can result in loss of driver attention and fogging up of windows.
- Keep the recirculation mode switched on for a short time only.

Operating conditions for the cooling system

✓ Outside temperature above 2 ° C
✓ Running engine
✓ Fan switched on

Operation

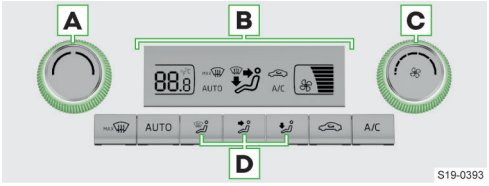

A Set the temperature

B Climatronic display

C Set the blower speed

D Set the direction of the air outlet

MAX Switch the windscreen ventilation/defrosting mode on/off

AUTO Switch automatic mode on
This function keeps the temperature constant and prevents the windows from misting.

Switch recirculated air mode on/off
The recirculation mode prevents contaminated outside air getting into the interior of the vehicle.

A/C Switch the cooling system on/off
When the cooling system is switched on, the temperature and humidity in the vehicle will drop.
Switching on the cooling system prevents the windows from misting up.

After pressing the A/C button, the indicator light in the button illuminates, even if the conditions for switching on the cooling system are not met. The cooling system switches on when the conditions for switching on the cooling system are met.

With a temperature setting outside of the number range, one of the following icons will be displayed in the Climatronic display:

LO Maximum cooling power
HI Maximum heating power

When the air conditioner is operating, the engine idle speed may increase automatically.

Troubleshooting

Water under the vehicle
When the cooling system is switched on, water can drip off the air conditioning system. This is not a leak.

Fogging
› Switch on automatic mode.

Or:

› Increase the blower speed, switch on the cooling system, and set the air distribution to the windscreen.

Automatic switch-off of the cooling system
If the coolant temperature is too high, the cooling system may switch off automatically. This ensures sufficient engine cooling.

Heated windscreen

Usage

Windscreen heating is used for defrosting or ventilating the windscreen.

Requirements

✓ Running engine
✓ Outside temperature approximately below 35 ° C

Operation

Heated rear window
› Press the button.

Windscreen heating switches off automatically after some time.

Troubleshooting

The indicator light in the button or below the button flashes
The heating does not work as the battery charging level of the 12 volt vehicle battery is too low.

Seat heating

What you should be mindful of

⚠ **WARNING**
Risk of burns!
▸ Do not switch on the seat heater for persons with limited perception of pain or temperature.

NOTICE
Risk of seat damage!
▸ Do not kneel on the seats or otherwise apply concentrated pressure to them.
▸ Do not turn on the heater in the following situations:
  ▸ The seat is not occupied.
  ▸ There are objects on the seat, such as a child seat.
  ▸ There are additional seat covers or protective covers on the seat.

Requirements

✓ Running engine

Operation

› Press the or button under the Infotainment.

The heating is switched on with maximum heating output. By repeatedly pressing the button, the heating output is reduced until it is switched off.

The level of the seat heating is indicated by the number of illuminated indicator lights in the button.


If the heating is switched on with maximum heat output, the heating power is automatically lowered after 10 minutes.

Driver information system

Analogue instrument cluster

Overview

Overview of instrument cluster

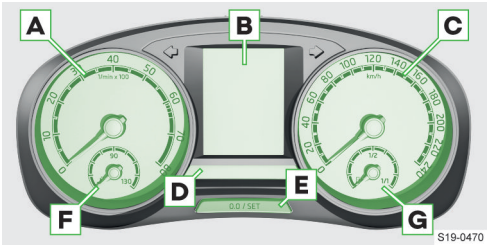


- **A** Tachometer with indicator lights
- **B** Display
- **C** Speedometer with indicator lights
- **D** Bar with indicator lights
- **E** Multifunction button:
  - ▸ Setting the time
  - ▸ Reset odometer (trip)
  - ▸ Show distance and days until next service appointment
- **F** Coolant temperature gauge
- **G** Fuel gauge

NOTICE
Risk of serious damage to the engine and the exhaust system!
▸ **Never run the fuel tank completely empty!**

In poor visibility and with dipped headlights off, the brightness of the instrument cluster lighting is reduced to remind the driver to turn on the light.

Display overview
Depending on the equipment, the following information is shown in the display.

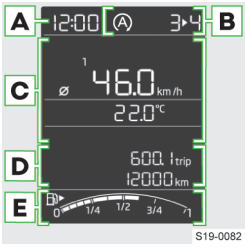

Segment display


- **A** Time
- **B** Selected gear/gear recommendation
  Also included depending on vehicle equipment:

▸ Automatic gearbox selector lever positions

C Menus, indicator lights
Outside temperature
❄ - low outside temperature
Selected driving data memory
▸ **1** - from the start
▸ **2** - long-term
▸ **3** - from refuelling

D Total distance travelled
Trip - Distance travelled after resetting the memory
Information messages

E Fuel gauge

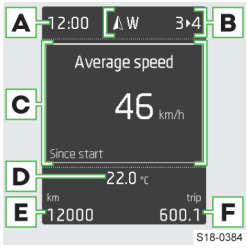

MAXI DOT display

A Time

B Selected gear/gear recommendation
Also included depending on vehicle equipment:
▸ Compass direction display
▸ Automatic gearbox selector lever positions

C Menu, indicator lights and information

D Outside temperature
❄ - low outside temperature

E Total distance travelled

F Trip - Distance travelled after resetting the memory

Overview of the main menu items
▸ Driving data » page 50, *Overview*
▸ Assist systems - Activate/deactivate assist systems
▸ Navigation - e.g. Display driving recommendations, compass, list of destination
▸ Audio - Using radio and media
▸ Telephone - Call list, accept or reject an incoming call
▸ Vehicle - Vehicle condition » page 51, *Display*.

Operation


Operation via the control lever



A **Press** - Switch between menu items/set values
Hold - Show main menu

B **Press** - Confirm the menu item

Operation via the multifunction steering wheel

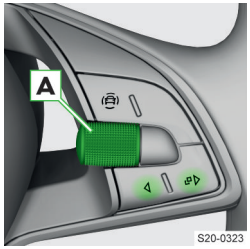

A **Turn** - Switch between menu items/set values
Press - Confirm the menu item
◁ **Press** - Return to the menu one level higher
Hold - Show main menu
▷◁ **Press** - Show previous menu (if one has been selected) / Show telephone menu

Settings

Setting the language
The language is set in the Infotainment in menu **MENU** > ⚙.

Resetting the odometer

0.0/SET › Briefly press the button in the instrument cluster.

Setting the time

0.0/SET › Press and hold the button in the instrument cluster until the menu item *Time* is displayed.

› Release the button, the display shows the hour setting.
› Press the button repeatedly to set the hours.
› Wait 4 seconds, the display shows the minute setting.
› Press the key repeatedly to set the minutes.
› Wait 4 seconds, the display shows the initial setting.

The time is also set in the Infotainment in menu **MENU** > ⚙.

Setting the brightness of the instrument cluster lighting
The brightness of the instrument lighting is adjusted automatically according to the given lighting conditions.

When low beam is switched on, the brightness of the instruments lighting can be adjusted in the following menu in the Infotainment system:

CAR > ⚙ > ☼

Or:

MENU > 🚗 > ⚙ > ☼


Driving data

Overview

The driving data display works with the ignition switched on.

In the instrument cluster display
Depending on the equipment, the display of the instrument cluster shows information such as speed, fuel consumption, range, etc.

In Infotainment

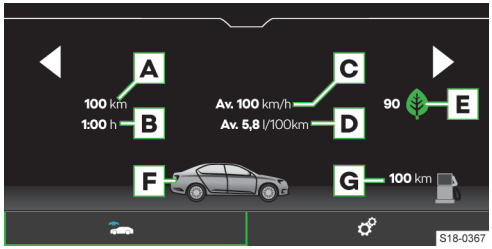

A Distance travelled

B Driving time

C Average speed

D Average fuel consumption

E Evaluation of driving economy - **Drive-GreenFunction** (depending on Infotainment type) » page 104

F Graphical fuel gauge - If the expected range is less than 300 km, the vehicle slowly approaches the symbol

G Range

Memory
The system saves the driving data in the following memories:

From start or "1" (depending on display type)
- Driving data from the time of switching on the ignition until the ignition is switched off again is stored in the memory. If the journey is interrupted for more than 2 hours, the memory will be reset.

Long term or "2" (depending on display type)
- The driving data of all trips up to a total of 99 hours and 59 minutes driving time or 9999 km driving distance is stored in the memory. If one of the listed values is exceeded, the memory is reset.

From refuelling or "3" (depending on display type)
- Driving data from the time the fuel tank was last filled is stored in the memory. The memory is reset the next time the tank is filled.

Operation


Display driving data in the display of the instrument cluster via the operating lever
› Select the menu item for the driving data in the main menu in the instrument cluster display.



A **Press** - Select information/Set values

B **Press** - Confirm information

Display driving data in the display of the instrument cluster via the multi-functional steering wheel
› Select the menu item for the driving data in the main menu in the instrument cluster display.

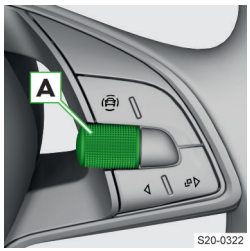

A **Rotate** - Select information/Set values
Press - Confirm information

Displaying driving data in the infotainment system
The driving data is displayed in the following menu in the infotainment system:

CAR › › Menu item for driving data

Or:

MENU › › › Menu item for the driving data


Select and reset the memory for driving data in the display of the instrument cluster using the control lever



› To **select** the memory for the displayed driving data, press button A repeatedly.

› To **reset** the memory, press and hold button A.

Select memory for driving data in the display of the instrument cluster via the multifunction steering wheel and reset it

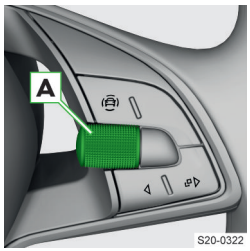

› To **select** the memory for the displayed driving data, press control wheel A repeatedly.
› To **reset**the memory, hold the dial A.

Selecting the memory in the infotainment system
To select the memory, use the functional areas ◄ ► in the following menu in the infotainment system:

CAR > > Menu item for driving data

Or:

MENU > > > Menu item for the driving data

Resetting the memory in the infotainment system
The memory is reset in the following menu in the infotainment system:

CAR > >

Or:

MENU > > >

Settings

Select driving data to be displayed
The driving data to be displayed is selected in the following Infotainment menu:

CAR > >

Or:

MENU > > >

Setting units
The units are set in the following infotainment menu:

CAR > >

Or:

MENU > > >

Speed limit warning

Usage

The system offers the possibility to set a speed limit beyond which an acoustic warning signal will sound and the following warning message appears in the display of the instrument cluster.

Settings

Setting the speed limit
› Select *Warning at* or (depending on the display type) and confirm.
› **When the vehicle is stationary**, set the desired speed limit and confirm.
› **While driving**, drive at the desired speed and confirm it as the speed limit.

Resetting the speed limit
› Select *Warning at* or (depending on the display type) and confirm.
› To reset the speed limit, confirm the stored value.

If the journey is interrupted for more than 2 hours, the set limit is deactivated, but the set value remains stored.

Vehicle status


Display

The vehicle status is displayed in the following menu in the infotainment system:

CAR > > Menu item for the vehicle status

Or:

MENU > > > Menu item for the vehicle status

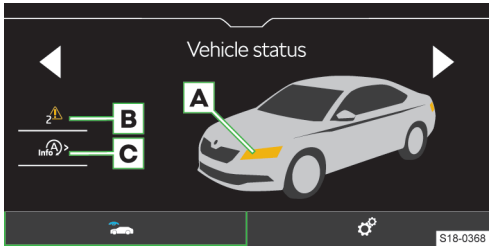

A Vehicle areas displayed in colour indicate associated warnings

B ✓ No notification

⚠ Warning messages regarding the vehicle condition and their quantity

C Display of information about the condition of the START-STOP system

▶ / Activation/deactivation of information regarding the messages of the START-STOP system in another screen display

Functionality


In the event of a system fault, messages regarding the fault in question are displayed on the instrument cluster display when the ignition is switched on.

Messages in relation to faults can also be displayed in the Infotainment.

The warning messages will continue to be displayed until the malfunctions have been remedied. After the first display of the message, only the indicator lights ⚠ (Hazard) or ⚠ (Warning) are displayed.

Infotainment Blues

Infotainment overview

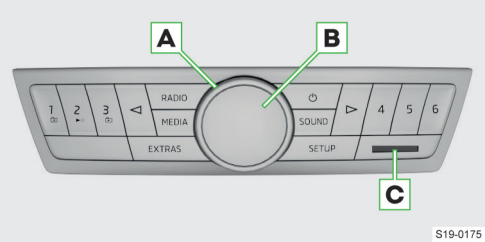

A	Rotary control
B	Display
C	SD card slot
⏻	Switches Infotainment on/off
RADIO	**Radio** menu
MEDIA	**Media** menu
EXTRAS	Settings for the **Radio** or **Media** menu
SETUP	Infotainment settings
SOUND	Sound settings
◁	Context-dependent: ▸ Rewind ▸ Settings for values of the selected menu item
▷	Context-dependent: ▸ Fast forward ▸ Settings for values of the selected menu item
1 - 6	Keys depend on the menu entered

System

Settings

Set value

› Press **SETUP**, **SOUND** or **EXTRAS**.

› Choose the desired menu item by pressing ◁ or ▷.

› Adjust the desired value using the controller.

› To **Exit Settings**, press one of the buttons **1** – **6** or wait a few seconds until the last selected **Radio** or **Media** menu is shown.

Infotainment settings

› Press the **SETUP** button.

It is possible to set a value with the following menu items:

▸ GALA - speed-dependent volume adjustment

▸ On volume - Sets the maximum volume when Infotainment is turned on

- TP volume - Sets the volume for in-coming traffic program alerts (TP)
- PDC audio - Reduction of the audio volume when activating the parking aid
- Clock - Switches the time display on/off in the Infotainment screen when the Infotainment is switched off and the ignition switched on
- Restore - Restore factory settings

Sound settings


› Press the **SOUND** button.

It is possible to set a value with the following menu items:

- Bass - Bass setting
- Middle - Middle setting
- Treble - Treble setting
- Balance - Sets the balance between the left and right-hand sides
- Fader - Adjust the sound balance between front/ rear

Screen

Overview

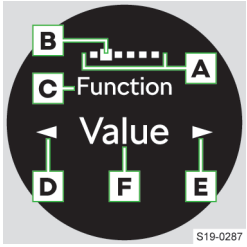

A Number of menu items for the respective setting

B Menu item currently displayed

C Name of the menu item currently displayed

D Previous menu item is available

E Next menu item is available

F Menu item value

Operation

Set value

› Press **SETUP**, **SOUND** or **EXTRAS**.

› Choose the desired menu item by pressing ◁ or ▷.

› Adjust the desired value using the controller ⊙.


› To **Exit Settings**, press one of the buttons **1 – 6** or wait a few seconds until the last selected **Radio** or **Media** menu is shown.

Radio

Overview

Display menu

› Press the **RADIO** key.

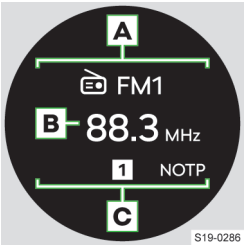

A Selected radio area

B Name or frequency of the radio station

C Status line

Possible symbols in the status line

MANUAL Manual frequency range browsing

SCAN Automatic search in the frequency range

1-6 Number of preset buttons on which the radio station is stored

Sound off

TP A traffic information station is available

NOTP No traffic information station is available

Operation

Select frequency range

› By repeatedly pressing the button **RADIO**, choose the frequency range together with memory group **FM1**, **FM2**. **AM1** or **AM2**.

Search for a station

› Press the ◁ or ▷ button.

Or:

› Hold the button ◁ or ▷ and let go.

The search is started and then stopped at the next station with a sufficiently strong signal.

SCAN function

The function plays receivable stations in the selected frequency range in succession for a few seconds at a time.

› To **start automatic play**, press the **EXTRAS** › **SCAN** › ▷ key.

› To **End automatic play**, press ▷.

Limitation

- Parking garages, tunnels, tall buildings or mountains can restrict radio reception.
- In the rear side windows, there may be antennas for receiving the radio signal.

  Covering the windows with foils or metal-coated stickers can impair the reception of the radio signal.

Settings

Store the current station to a preset button for preferred stations

› The requested storage group **FM1**. **FM2**, **AM1** or **AM2** can be chosen by pressing the button **RADIO**.

› Hold one of the keys 1-6.

Storage is confirmed by an acoustic signal and by the display of the station button number in the status line of the display.

Automatic storage of stations with the strongest signal

Six radio stations with the strongest signal can be stored in the currently selected memory group.

› Keep the **RADIO** button pressed down.

Autostore... ... Will be displayed in the Infotainment display during station tuning.

Buttons ◁ / ▷

The variant for **changing stations** using buttons ◁ ▷ in the **Radio** menu, is set as follows:

› In the **Radio EXTRAS** › menu, press **Seek**.

› To **change between available stations**, choose Stations.

› To **change between stations stored under the preset buttons**, choose Presets.

Switch Traffic Reception (TP) on/off

Applies to the FM frequency range.

› In the **Radio EXTRAS** › menu, press **TP**.

› To **turn on**, choose Yes.

› To **turn off**, choose No.

Media

What you should be mindful of

▸ Do not save important and unsecured data on connected audio sources. ŠKODA assumes no responsibility for lost or damaged files or connected audio sources.


▸ When changing or connecting an audio source, there may be sudden volume fluctuations. Reduce the volume before changing or connecting an audio source.

▸ The legal provisions on copyright applicable in your country must be observed.

Overview

Display menu

› Press the **MEDIA** button.

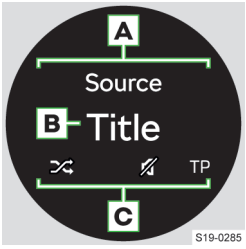

A Info line

B Name of the track being played

C Status line

Possible symbols in the status line

Repeats the current track

Play the current album / folder

Shuffle the current album / folder

Sound off

TP A traffic information station is available

NOTP No traffic information station is available

Operation

Select the audio source

› To **switch between the available sources**, press **MEDIA**.

The Infotainment only switches between connected audio sources with playable content.

Operation - Basics

▶II Start playback / pause

▷ **Press:** play the next track
Hold: fast forward within the track

◁ **Press within 3 seconds of starting playback:** play the previous track
Press after 3 seconds of the start of playback: play the current track from the beginning
Hold: fast rewind within the track

Change to the previous folder/playlist

Change to the next folder/playlist

Limitation

The availability of some media control functions depends on the connected source and the software used.

Settings

Switch random play on/off

› In the **Media** menu, press **EXTRAS**.

› Choose the Mix menu.

› To **turn on**, choose On.

› To **turn off**, choose Off.

Repeat playback

› In the **Media** menu, press **EXTRAS**.

› Choose the Repeat menu.
› For **repeated playback of all tracks and folders**, choose All.
› For **repeated playback of the tracks in the current folder**, choose Track.
› For **repeated playback of the current folders**, choose Folder.

Switch Traffic Reception (TP) on/off
Applies to the FM frequency range.

› In the **Media** EXTRAS › menu, press **TP**.
› To **turn on**, choose Yes.
› To **turn off**, choose No.

SD card

NOTICE
Risk of damaging the SD card reader!
▸ Do not use SD cards with a broken slide for write protection.

› To **insert** the SD card, with the bevelled corner to the right, push into the slot in the external module until it snaps into place.
› To **Remove**, press on the inserted SD card.

The SD card moves to the eject position.

NOTICE
When using an SD card with an adapter, vehicle vibrations might cause the card to fall out of the adapter.

USB device
› To **connect**, insert the USB device into the appropriate port.

To play audio files, use USB ports that support data transfer.

A USB device can be connected directly to the USB port or via a connection cable.
We recommend using connection cables from the ŠKODA Original Accessories range.
USB extension cables or reducers may affect the playback function of the connected device.

Load USB audio source
After connecting the USB device, charging will start automatically when the following conditions are met:

✓ The ignition is switched on.
✓ The USB device allows charging.

The charging efficiency can be different compared to the charging from the usual mains power supply.

Depending on the type of the connected USB device and the frequency of use, the charging current may not be sufficient to charge the battery of the connected device.

Some connected audio sources may not be recognised and cannot be charged.

Supported sources and files

Supported sources

Source	Interface	Type	Specification	File system
SD card	SD	Standard size	SD SDHC	VFAT FAT16 FAT32
USB	USB 1.x; 2.x 3.x or higher with USB 2.x support	MSC	USB stick	
			HDD (without special software)	
			USB devices that support the USB Mass Storage protocol	
		MTP	Devices running the Android or Windows Phone operating system that support the Media Transfer Protocol	
		Apple	Devices with an iOS operating system	HFS+

Supported audio files

Compression format	Codec type	File suffix	Max. bit rate [kbps]	Max. sampling rate [kHz]	Multi-channels
MPEG	MPEG 1 Layer 3	mp3	32 - 320	32, 44, 48	Mono, Dual Mono, Stereo, Joint Stereo
	MPEG 2 Layer 3		8 - 160	16, 22, 24	Mono, Stereo, Joint Stereo
	MPEG 2.5 Layer 3			8, 11, 12	
WMA	Windows Media Audio 9 and 9.1	wma	8 - 384	8, 11, 12, 16, 22, 32, 44, 48, 96	Mono, Stereo, Joint Stereo
	Windows Media Audio 9.2		8 - 320	8, 11, 12, 16, 22, 32, 44, 48, 96	

Files that are protected by **DRM**- and **iTunes®** methods are not supported by Infotainment.


The GPT standards (GUID partition table) method structured audio sources are not supported by Infotainment.

Supported playlists

Codec type	File suffix
M3U	m3u
PLS	pls
WPL	wpl
ASX	asx
PLA	pls

Infotainment Swing

Infotainment overview

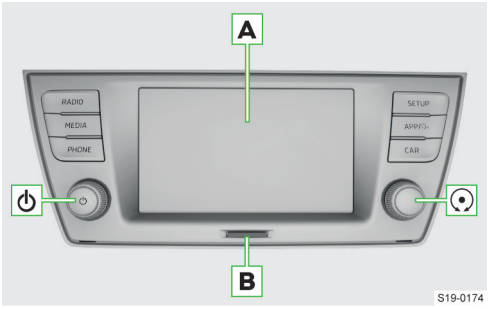

A Touchscreen

B SD card slot

Control dial left
- ▸ **Press:** Switch Infotainment on/off
- ▸ **Turn:** Set volume

Control dial right
- ▸ **Press:** Confirm menu item
- ▸ **Turn:** select menu item/set value

RADIO **Radio** menu

MEDIA **Media** menu

MENU Overview of Infotainment menus

PHONE **Phone** menu

MUTE **Mute** menu

SETUP **Infotainment settings** menu

APP/ **SmartLink** menu
- ▸ **Press:** Display menu
- ▸ **Hold:** Switch voice control of the SmartLink application on / off

SOUND Sound settings

CAR Information about vehicle settings

System

Limitation

For safety reasons, operation of some Infotainment functions while driving is not possible or is restricted.

The Infotainment system indicates this by means of a message in the screen.

Basic settings

Setting basic functions
The following Infotainment functions are set in the menu **SETUP**:

- Time and date
- Language
- Units
- Restore factory settings

Sound settings
The Infotainment sound is set in the menu **SETUP** › *Sound*.

The following menu items can be set:

- Setting the maximum volume when Infotainment is turned on
- Volume adjustment of individual Infotainment functions
- Setting the equalizer
- Adjusting the volume ratio

Depending on the equipment, the following advanced sound settings can be set

- Setting the sound system
- Setting the sound space optimisation for the driver
- Turn on/off and adjust the subwoofer volume

Configuration wizard
The configuration wizard helps to set certain Infotainment functions.

The configuration wizard is automatically displayed if, after switching on the Infotainment system, there are at least two menu items that have not been set or if a new user account has been selected.

› To **switch off the automatic display**, when the configuration wizard is displayed tap *Don't show again* .
› For **manual display** tap **SETUP** › *Configuration wizard* .

Safely disconnect the connected USB device

NOTICE
Risk of damage to the data on the connected device!
To safely disconnect/remove the device, proceed as follows:
› **SETUP** › *Remove safely* .
› Select the desired device.
› Disconnect/remove the device.

If it is not possible to safely disconnect the device, switch off the Infotainment and disconnect the device.

Troubleshooting

Infotainment not responding
If the infotainment does not respond, restart it as follows:

› Hold ⏻ for longer than 10 s.
› Wait for the restart to complete.

System update

We recommend having the system update carried out by a specialist company.

The system update ensures optimal function of the Infotainment system, e.g. compatibility with new phones.

Determine system version
› **SETUP** › *Tap System information* .


Manual update
Information about available updates can be found on the ŠKODA website.

http://go.skoda.eu/updateportal

› Check for available updates.
› Save the update to a USB source.
› Insert the USB source into the front USB input.
› **SETUP** › *Tap System information* › *Tap Update software* .
› Select the connected USB device as the update source.
› Go to the update file and confirm the update.
› Confirm any messages and wait for the update process to complete.

Screen

Overview

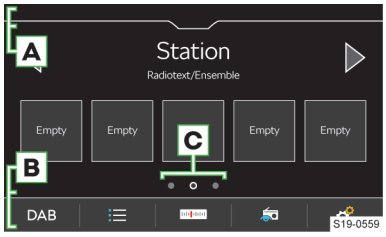

A Status bar
B Bar with the functional surfaces of the displayed menu
C Other pages of the menu

Operation

NOTICE
Danger of screen damage!
- The Infotainment screen is operated **by touching it lightly with your finger**.

In principle, operation by touch is identical to the operation of a mobile phone.

The following operating modes are specific to the Infotainment system.

Settings

The following basic screen functions are set in the menu **SETUP** › *Screen*:
- Brightness level of the screen
- Switch off the screen
- Display the time
- Confirmation sounds and animations

Infotainment keyboard

Keypad overview

The arrangement of the keyboard characters depends on the set infotainment language.

Depending on the context, the following types are used in infotainment:
- Alphanumeric
- Numeric
- Keyboard for input
- Keyboard for search




Keypad example

A Input line
- Delete characters before the cursor
  - **Tap:** delete the last character
  - **Hold:** delete all characters in sequence
- Show list of searched entries

B Keypad functional surfaces
- Change to lowercase
- Switch to the first capital letter, followed by lowercase letters
- **ABC/ÄÖÜ** Switch to the language keypad
- **123** Switch to the numeric and character keypad
- Show additional keypad languages
- Insert a space
- **Hold:** Show additional character variants
- < Move cursor to the left
- > Move cursor to the right
- OK Confirm the characters that have been entered

Numeric keypad

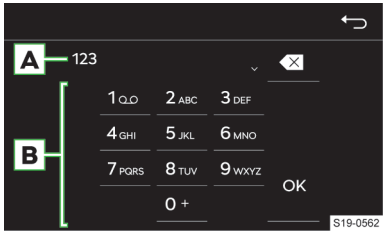

Keypad example

A Input line
- Delete characters before the cursor
  - **Tap:** delete the last character
  - **Hold:** delete all characters

B Keypad functional surfaces
- OK Confirm the characters that have been entered

If context-sensitive, alphanumeric characters can be entered by holding a functional surface with a digit.

Operation

The Infotainment keypad is used to enter characters, letters and numbers.

The keypad will be **automatically displayed** when Infotainment prompts for characters.

Find
During the character input, a search for corresponding entries takes place.

The entry to be searched can be entered, including diacritics.

The keypad will only provide characters that match the stored entries.

› To **display the searched entries**, tap .

Show additional keypad languages
To use the additional keypad languages, the desired languages must be set first.

› Tap ⊕ or repeatedly tap the flag symbol until the desired language keypad is displayed.

Further character variants

› Press and hold the sign with the symbol A.

› Select the desired symbol.

Setting up additional keyboard languages

› **SETUP** > *Additional keyboard languages* .


Radio

Overview

Display menu

› Tap **RADIO**.

Analogue and digital radio reception

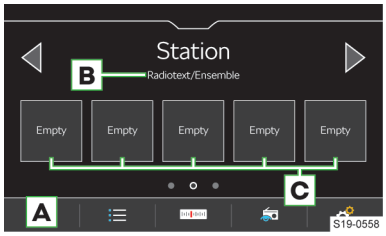

A Select frequency range

B Depending on the frequency range
FM: Radio text
DAB: Name of the station group

C Station buttons for preferred stations

List of available stations

Manual station search

Display information about the station (applies to DAB)

Settings

Infotainment supports digital radio reception in DAB and DAB+ formats.

List of available stations

› To **display** tap .

Played station

★ Stations stored on the station buttons

TP A traffic radio station is set

DAB signal is not available

The DAB station reception is not stable


Filtering the stations in the list according to the programme type.
To filter the FM stations, the RDS and AF function must be switched on.
To filter the DAB stations, the alphabetical sorting function of the stations must be activated.

Update station list manually

Information about the program type being broadcast and the type of regional station can be displayed in the FM station list.

Operation

Select station

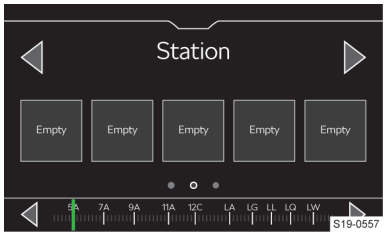

› Tap ◁ or ▷ at the top of the screen.

SCAN function

The function plays receivable stations of the selected frequency range in succession for a few seconds each.

› To **start automatic play** press > *Scan* or the right rotary control.

› To **end automatic play** press SCAN or the right rotary control.

Find stations manually

› In the Radio main menu, tap .

› To **search in sequence**, tap ◁ or ▷ next to the displayed frequency range scale.

Or:

› Hold down the scroll mark on the frequency range scale and move it to the desired value.

Or:

› Turn the right rotary control.

Limitation

▸ Infotainment supports digital radio reception in DAB and DAB+ formats.

▸ Parking garages, tunnels, tall buildings or mountains can restrict radio reception.

▸ In the rear side windows, there may be antennas for receiving the radio signal.

Covering the windows with foils or metal-coated stickers can impair the reception of the radio signal.

▶ The ŠKODA AUTO company does not assume any responsibility for the availability, correct function or broadcast information of the RDS service.

Settings

Save the station currently being listened to as a favourite from the Radio main menu

› Hold the desired station key for preferred stations until the station is stored.

Save station to favourites from the list of available stations

Applies to AM, FM and DAB frequency ranges.

› Hold the line with the name of the desired station.

› Tap the desired preset button.

Deleting favourites

› In the menu **Radio** > *clear memory* .

› To delete **a** station button for preferred stations, tap the desired station button and confirm the deletion.

› To delete **all** station buttons for preferred stations *Tap All* and confirm the deletion.

Function surfaces ◁ ▷

Applies to AM, FM and DAB frequency ranges.

The variant for **changing stations** using the function surface ◁ ▷ in the **Radio** menu is set as follows:

› In the menu **Radio** > *Arrow buttons:* .

› Choose the change variant.

Traffic reception (TP) for FM stations on/off

Applies to the FM frequency range.

› In the menu **Radio** > *Traffic program (TP)* .

Switch traffic reception for DAB stations on/off

Applies to the DAB frequency range.

› In the **Radio** menu switch on the menu item > *Traffic program (TP)* switch on

› In the menu **Radio** > *Advanced settings* > *Tap DAB traffic announcements* switch on / off

Assign station logo from an external source

Applies to AM, FM and DAB frequency ranges.

Infotainment offers the option to assign logos from the pictures on an external source to the station buttons.

For station logos, images in jpg, png format with a maximum resolution of 400x240 pixels can be used.

› In the menu **Radio** > *Station logos* .

› Tap the desired preset button.

› Select the external source with the logo.

› Find the desired logo and confirm.

Delete station logos

Applies to AM, FM and DAB frequency ranges.

› In the menu **Radio** > *Station logos* .

› To delete **a logo**, tap the desired preset button and confirm the deletion.

› To delete **all logos** *Tap All* and confirm the deletion.

Turn on/off radio text reception

Applies to the FM and DAB frequency ranges.

When the function is switched on and station presets are displayed, detailed information about the broadcast content of the FM station being listened to, or the name of the station group for the DAB station, is displayed.

› In the menu **Radio** > *Radio text* .

Switch automatic frequency control (AF) on/off

Applies to the FM frequency range.

When the function is switched on and the signal of the FM station currently being listened to is weak, Infotainment automatically sets the same station to a different frequency with a better signal.

› In the menu **Radio** > *Advanced settings* > *Automatic frequency change (AF)* .

Sort stations in the list of available stations

Applies to the FM frequency range.

› In the menu **Radio** > *Advanced settings* > *Station list:* .

› Select the sorting of stations in alphabetical order or by group.

Automatic change of frequency to a regionally linked FM station

Applies to the FM frequency range.

Infotainment provides the option of automatically switching to a regionally linked FM station in case of signal loss of the FM station being listened to.

› In the menu **Radio** > *Advanced settings* > *RDS Regional:* .

› Select one of the following menu items:

▶ *Fix* - When the signal is lost, another station must be set manually.

▶ *Automatic* - automatic selection of the station with the best signal reception.

If reception is lost in the given region, Infotainment will automatically set another available region.

Switch RDS on/off

Applies to the FM frequency range.

The menu item is only available for some countries.

› In the menu **Radio** > *Advanced settings* > *Radio Radio Data System (RDS)* .

If the **RDS function is disabled**, the following menu items in **FM station** settings are not available:

▶ Traffic program (TP)

▶ Radio text

- RDS Regional
- Automatic frequency change (AF)

Switching additional announcements of the DAB transmitter on / off
Applies to the DAB frequency range.

When the function is switched on, other announcements are received as traffic announcements. These include e.g. weather news, sports reports, financial news etc.

› In the menu **Radio** > *Advanced settings* > *Tap other DAB announcements* .

Enable/disable automatic programme tracking of a DAB station
Applies to the DAB frequency range.

When the function is switched on and the DAB station is lost, Infotainment automatically changes to the same station with a better signal in a different DAB station group.

› In the menu **Radio** > *Advanced settings* > *DAB - DAB program tracking* .

Turn on/off automatic switching from a DAB station to the same FM station
Applies to the DAB frequency range.

When the function is switched on and the DAB station being listened to is lost, Infotainment automatically changes to the same FM station. The symbol (FM) is displayed after the station name.

When the corresponding DAB station can be received again, the station automatically changes from FM to DAB.

› In the menu **Radio** > *Advanced settings* > *Tap Automatic change DAB - FM* .

Switch the slideshow function on/off
Applies to the DAB frequency range.

When the function is switched on, the images broadcast by the station are displayed in the player.

› In the menu **Radio** > *Advanced settings* > *DAB slideshow* .

Media

What you should be mindful of

- Do not save any important data or that which has not been backed up on the connected audio sources. ŠKODA assumes no responsibility for lost or damaged files or connected audio sources.
- When changing or connecting an audio source, this may cause sudden changes in volume. Reduce the volume before changing or connecting an audio source.
- When connecting an audio source, the source information messages can be displayed. These messages must be observed and, if necessary, confirmed.
- The national copyright laws that apply in your country must be observed.

Overview


Display menu
› Tap **MEDIA**.



A Select source
Manage files / multimedia database
Settings

Operation

Operation - Basics

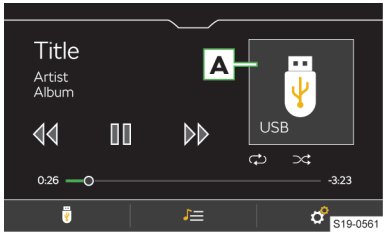

A Album image / symbol of the connected source
Tap: display available albums
Tap: start playback
Tap: pause
Within 3 seconds of starting playback, tap: play the previous song
After 3 seconds from the start of playback, tap to play the current title from the beginning
Hold: fast rewind within the title
Tap: play the next song
Hold: fast forward within the title

Movement within the title is also possible by dragging the finger over the timeline.

Extended operation
Turn repeat playback of the current track on/off

Turn repeat playback of the current album/folder on/off

Turn random playback of the current album/folder on/off

Restriction

The availability of some media operation functions is dependent on the connected source and the software being used, e.g. Bluetooth®.

Settings

Turn title playback including subfolders on/off

› In the **Media** menu tap on > *Mix/Repeat including subfolders.* .

Traffic

› To **turn on/off** traffic monitoring during playback of media files, go to the **Media** in the main menu > and tap on *Traffic program (TP)* .

Safely disconnect the connected device

NOTICE

Risk of damage to the data on the connected device!

To safely disconnect/remove the device, proceed as follows:

› In the **Media** menu tap on > *Remove safely:* .

› Select the desired device.

› Disconnect/remove the device.

If it is not possible to safely disconnect the device, switch off the Infotainment and disconnect the device.

Bluetooth® player

Infotainment allows audio files of a connected Bluetooth® player to play using the A2DP and AVRCP audio profile.

With Infotainment, multiple devices can be paired using Bluetooth®, but only one of them can be used as a Bluetooth® player.

› For **connecting the Bluetooth® player**, pair and connect the device via Bluetooth®.

› In the **Media** menu tap on > *Bluetooth* > *Paired devices* .

› In the list, choose the device with the symbol ♫.

If a device is connected to Infotainment using Apple CarPlay or Android Auto, then it cannot be connected using Bluetooth®.

SD card

NOTICE

Risk of damaging the SD card reader!

▶ Do not use SD cards with a broken slide for write protection.

› To **insert** the SD card, with the bevelled corner to the right, push into the slot in the external module until it snaps into place.

› To **remove**, first disconnect the SD card safely. For this in the menu **media** > tap on *Remove safely:* and select the SD card.

› Press on the inserted SD memory card.

The SD card moves to the eject position.

NOTICE

When using an SD card with an adapter, vehicle vibrations might cause the card to fall out of the adapter.

USB device

› To **connect**, insert the USB device into the appropriate port.

To play audio files, use USB ports that support data transfer.

› To **disconnect** disconnect the USB device first. For this in the menu **media** > tap on *Remove safely:* and select the USB device.

› Disconnect the USB device.

A USB device can be connected directly to the USB port or via a connection cable.

We recommend using connection cables from the ŠKODA Original Accessories range.

USB extension cables or reducers may affect the playback function of the connected device.

Load USB audio source

After connecting the USB device, charging will start automatically when the following conditions are met:

✓ The ignition is switched on.

✓ The USB device allows charging.

The charging efficiency can be different compared to the charging from the usual mains power supply.

Depending on the type of the connected USB device and the frequency of use, the charging current may not be sufficient to charge the battery of the connected device.

Some connected audio sources may not be recognised and cannot be charged.

Supported sources and files

Supported sources

Source	Interface	Type	Specification	File system
SD card	SD card reader	Standard size	SD SDHC SDXC	FAT16 FAT32 exFAT
USB	USB 1.x; 2.x 3.x or higher with USB 2.x support	MSC	USB stick	
			HDD (without special software)	
			USB devices that support the USB Mass Storage protocol	
		MTP	Devices running the Android or Windows Phone operating system that support the Media Transfer Protocol	
		Apple	Devices with an iOS operating system	HFS+
Bluetooth® player	Bluetooth®	-	Bluetooth® protocols A2DP and AVRCP (1.0 - 1.5)	-

The GPT standards (GUID partition table) method structured audio sources are not supported by Infotainment.
Viewing images on the Infotainment screen is not supported by connected Apple devices.

Compatibility of mobile devices
It is possible to check the ŠKODAweb pages to see if Infotainment is compatible with the selected mobile device being tested. This check is carried out by using the following reference or by reading the QR code:

http://go.skoda.eu/compatibility

All information given is incidental and serves as information.

The ŠKODA AUTO company cannot guarantee full functionality and compatibility, e.g. due to a software update of the Infotainment and the mobile devices.

Supported audio files

Compression format	Codec type	File extension	Max. bit rate [kbps]	Max. sampling rate [kHz]	Multi channels
MPEG	MPEG 1 Layer 3	mp3	32 - 320	32, 44, 48	Mono, Dual Mono, Stereo, Joint Stereo
	MPEG 2 Layer 3	mp3	8 - 160	16, 22, 24	Mono, Stereo, Joint Stereo
	MPEG 2.5 Layer 3			8, 11, 12	
WMA	Windows Media Audio 9 and 9.1	wma	8 - 384	8, 11, 12, 16, 22, 32, 44, 48	Mono, Stereo, Joint Stereo
	Windows Media Audio 9.2		8 - 320		
	Windows Media Audio 10		8 - 384	32, 44, 48, 96	

Files that are protected by **DRM**- and **iTunes®** methods are not supported by Infotainment.

Supported playlists

Codec type	File extension
M3U	m3u
PLS	pls
WPL	wpl
ASX	asx

Mobile device management

Overview

Mobile device management

› In the **Telephone** › menu *Bluetooth* › *Paired devices* .

In the list of paired mobile devices, the following symbols may appear for the individual devices:

White icon - the device can be connected as a telephone.
Green icon - the device is connected as a telephone.

White icon - the device can be connected as a Bluetooth® player.
Green icon - the device is connected as a Bluetooth® player.

Possible functions of the connected mobile device

The functions of a device connected via over the **HFP** Bluetooth profile depends on the following connection types.

First device Main phone	Second device Additional phone
incoming / outgoing calls Telephone contacts Bluetooth® player	Bluetooth® player

With Infotainment only **a mobile device** can be connected as a Bluetooth® player.

Limitations of mobile devices and applications

Availability of features

The availability of certain features depends on the type of mobile device, as well as that of the applications installed.

Connection restrictions

- With Infotainment, a max. of 20 mobile devices are paired.
- The range of the connection of the mobile device to Infotainment is limited to the passenger compartment.
- After reaching the maximum number, the pairing of the next mobile device will replace that of the device that has not been used for the longest period of time.

Compatibility of mobile devices

It is possible to check the ŠKODAweb pages to see if Infotainment is compatible with the selected mobile device being tested. This check is carried out by using the following reference or by reading the QR code:

http://go.skoda.eu/compatibility

All information given is incidental and serves as information.

The ŠKODA AUTO company cannot guarantee full functionality and compatibility, e.g. due to a software update of the Infotainment and the mobile devices.

Bluetooth® compatibility of mobile devices
Due to the large number of mobile devices, it is not possible to guarantee total Bluetooth® compatibility with Infotainment. Bluetooth® compatibility depends on the Bluetooth® version as well as the implementation of Bluetooth® protocols by the manufacturer of the mobile device.

Applications in mobile devices
Mobile devices can be used to install applications that allow you to view additional information on the Infotainment screen, or to operate the Infotainment system.

Due to the variety of applications, as well as their ongoing development, the available applications may not function on all mobile devices. ŠKODA AUTO assumes no liability for their proper functioning.

The scope of available applications and their functionality is dependent on the type of Infotainment, as well as the vehicle and country.

Information about ŠKODAapplications
Detailed information about ŠKODA applications can be found on the website after reading the following QR code or link:

http://go.skoda.eu/mobile-apps

Connection set-up

Connect a mobile device to Infotainment
› Turn on the ignition.
› Turn on the Bluetooth® on the mobile device.
› The infotainment Bluetooth® **SETUP** > *Bluetooth* > *Bluetooth* switch on
› Bluetooth® visibility of the infotainment **SETUP** > *Bluetooth* > *Visibility:* > *Visible* switch on
› Find available Bluetooth® devices in the mobile device.
› Select the Infotainment Bluetooth® unit.

The name of the unit can be found by tapping on **SETUP** > *Bluetooth* > *Name:* .
› Confirm the PIN; enter it if necessary and then confirm.

The mobile device is connected to the Infotainment or just paired, depending on the number of devices that are already connected.

Connect Infotainment to a non-paired mobile device
› Turn on the ignition.
› Turn on the Bluetooth® on the mobile device.
› The infotainment Bluetooth® **SETUP** > *Bluetooth* > *Bluetooth* switch on
› **SETUP** > *Bluetooth* > *Search devices* .
› Ensure the visibility of the device to be connected.
› Select the desired device from the list of Bluetooth® devices.
› Confirm the PIN; enter it if necessary and then confirm.
› If two devices are connected to the Infotainment, select the device to be replaced.

Connect Infotainment to a mobile device that is already paired
The connection with an already paired mobile device is made automatically after switching on the ignition; if necessary the device can be connected manually as follows.
› Turn on the ignition.
› Turn on the Bluetooth® on the mobile device.
› The infotainment Bluetooth® **SETUP** > *Bluetooth* > *Bluetooth* switch on
› **SETUP** > *Bluetooth* > *Paired devices* .
› In the device list, select the desired device and the Bluetooth® profile.
› Confirm the PIN; enter it if necessary and then confirm.
› If two devices are connected to the Infotainment, select the device to be replaced.

Disconnect from a mobile device
› **SETUP** > *Bluetooth* > *Paired devices* .
› Tap on the Bluetooth® profile icon of the desired mobile device.


Delete a paired mobile device
› **SETUP** > *Bluetooth* > *Paired devices* .
› To **delete a** mobile device, tap 🗑 and confirm the deletion.
› To **delete all** mobile devices, tap *Clear all* and confirm the deletion.

Telephone

Overview

Display menu
› Tap on **PHONE**.

If the menu **phone** is not displayed, check whether the mobile device is connected.

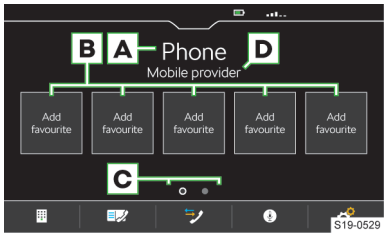

A Name of the connected telephone
▶ **Tap:** Show list of previously connected phones

B Preset buttons for preferred contacts

C Choice of storage group for the preferred contacts

D Name of telephone service providers
▶ If the symbol ▷ is displayed in front of the name, roaming is active.

Enter telephone number

Contact list

Call lists

Switch on voice control for the connected telephone

Settings

Conditions for connecting a telephone with Infotainment

✓ The ignition is switched on.
✓ The Bluetooth® function of the Infotainment and the telephone needs to be switched on.

The Bluetooth® function of the Infotainment is switched on in the menu item **SETUP** › *Bluetooth* › *Bluetooth*.

✓ Visibility of the Infotainment is switched on.

The visibility of the Infotainment is switched on in the menu item **SETUP** › *Bluetooth* › *Visibility:*› *Visible*.

✓ The telephone is within signal range of the Infotainment's Bluetooth® unit.
✓ The telephone is compatible with Infotainment.
✓ No mobile device is connected to the Infotainment using Apple CarPlay®.

Telephone operation

Enter telephone number

› In the **Phone** menu, tap on .
› Enter the telephone number using the numeric keypad that is displayed.

The displayed numeric keypad can also be used for searching for contacts.

If, for example, the digits 32 are entered, contacts with the letter sequence DA, FA, EB etc. are displayed next to the numeric keypad.

List of telephone contacts

The list of telephone contacts is imported from the connected main telephone.

› To **display** the contact list in the **phone** menu, tap on .
› To **search** within the list, tap on *Find* .
› Enter the details you wish to find.
› To **establish a connection** with a contact, tap the functional area showing the desired contact.

If a contact has multiple telephone numbers, select the telephone number from the displayed list.

› To display the **details** for a contact, tap ›.

Telephone conversation

Depending on the context of the telephone conversation, the following functions can be selected:

End connection / reject incoming call / end call
Answer an incoming call / return to the held call
Switch the ringer off / on
Hold a call
Switch the microphone off / on
Show details of the caller

› To **switch the call tone from the speakers to the telephone**, go to **telephone** in the menu and tap on › *speakerphone* .
› To **switch the call tone from the telephone to the speakers**, tap .

Settings for Infotainment telephone functions

Manage preset buttons for preferred contacts

› To **save** the desired preset button, press and hold.
› Select a contact from the displayed list.
› If the contact contains multiple telephone numbers, choose the desired telephone number.
› To **Clear** in the **telephone** menu tap › *User profile* › *Manage favourites* .
› To delete **one** preset, tap on the list entry and confirm the deletion.

Or:

› To delete **all** station buttons, tap *Clear all* and confirm the deletion.

Import telephone contacts

After first connecting the main telephone with Infotainment, telephone contacts will start to be imported into the Infotainment memory.

Infotainment can import up to 2000 telephone contacts. Each contact can include max. 5 telephone numbers.

Depending on the type of telephone, import confirmation may be required.

Update telephone contacts
When re-connecting the telephone with Infotainment, an **automatic** update of the list is carried out.

› For a **manual** update of the list in the main menu **Telephone** ⚙ › tap *User profile* › *tap on Import contacts* .

Sort contacts in the phone book
› In the **Telephone** ⚙ ›menu *User profile* › *Sort by:* .
› Select the type by which to sort.

Ringtone
Some phones do not allow the use of the telephone ringtone; instead, the Infotainment ringtone is used.

› For **setting the Infotainment ringtone** in the **phone** ⚙ ›menu *User profile* › *select the ringtone* .
› Select the ringtone.

Simultaneous calls
This applies to some countries.

Depending on the connected telephone, it is possible to answer the next incoming call and hold the previous call.

› To **switch on/off** simultaneous calls, tap on **telephone** ⚙ › *Simultaneous calls* .

SmartLink

Functionality

SmartLink offers the ability to display and operate certified applications from a connected mobile device in the Infotainment screen.

Certification may be conditional upon the use of the latest update to the particular SmartLink application.

Applications include, for example, apps for route guidance, telephoning, listening to music, etc.

Mobile devices can be connected via a USB cable.

Supported connection types
SmartLink supports the following connection types:

▸ Android Auto
▸ Apple CarPlay
▸ MirrorLink


Overview of the SmartLink connection

Display menu
› Tap on **APP/**.




A Previously connected device
B Currently connection device
ⓘ Display information about SmartLink
⊗ Disconnection of the active connection
Disconnection of the active connection
⚙ Settings in SmartLink menu

Android Auto

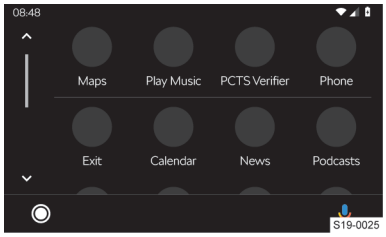


◉ Overview of running applications, phone calls, incoming text messages, and more.
Turn on voice control (Google Voice)

Apple CarPlay

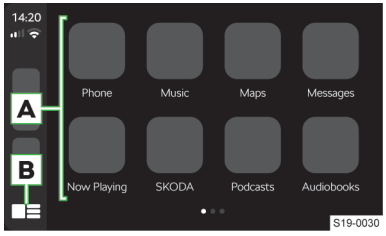

A List of available applications
B Depending on the duration of operation:
▸ **Tap:** Return to the menu Apple CarPlay
▸ **Hold:** Turn on voice control (Siri)

MirrorLink

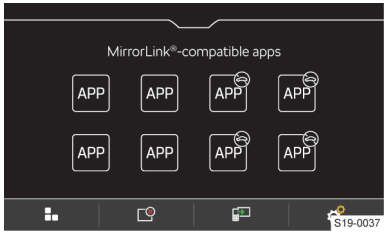

- It is not possible to operate the application while driving
- Return to the menu SmartLink
- List of running applications
- Display of the last running application in connected mobile devices
- Settings

Connection conditions

General connection conditions

✓ The mobile device supports the type of SmartLink connection Android Auto, Apple CarPlay or MirrorLink.

✓ Mobile devices, as well as the type of SmartLink connection, are supported in the respective market.

✓ Some connected mobile devices require the mobile device to be “unlocked”.

Conditions for Android Auto

✓ The device to be connected must have Android Auto connection.

A list of devices, supported regions and applications that support the Android Auto connection can be found on the Google, Inc. website.

✓ The Android Auto application needs to be installed on the mobile device.

✓ Some applications require the data connection in the mobile device to be turned on.

✓ Connect the mobile device for the first time when the vehicle is stationary.

Conditions for Apple CarPlay

✓ The device to be connected must have Apple CarPlay connection.

A list of devices, supported regions and applications that support the Apple CarPlay connection can be found on the Apple Inc website.

✓ Siri voice control is on.

✓ The data connection in the mobile device is switched on.

Conditions for MirrorLink

✓ The device to be connected must have MirrorLink connection.

A list of devices and applications that support the MirrorLink connection can be found on the websites of Car Connectivity Consorcium®.

✓ The MirrorLink application needs to be installed on the mobile device.

✓ Some applications require the data connection in the connected mobile device to be turned on.

Operation

Operation of the running MirrorLink application

< Move the functional areas to the left edge of the screen

> Move the functional areas to the right edge of the screen

^ Move the functional areas to the top of the screen

v Move the functional areas to the bottom of the screen

Return to the menu MirrorLink

Restriction

Restriction of SmartLink applications while driving

For reasons of safety, the operation of some SmartLink applications while driving is not possible or only limited.

Functionality restriction of Infotainment with an Android Auto connection

▸ For the duration of the connection, the external device cannot be used as an audio source in the **Media** menu.

▸ By connecting the device, all currently connected Bluetooth® devices will be disconnected and the device will automatically be connected as the main telephone.

▸ For the duration of the connection, no other Bluetooth® devices can be connected to the Infotainment system.

Functionality restriction of Infotainment with an Apple CarPlay connection

▸ For the duration of the connection, the external device cannot be used as an audio source in the **Media** menu.

▸ Connecting the device disconnects all currently connected Bluetooth® devices.

▸ For the duration of the connection, no Bluetooth® devices can be connected to the Infotainment system.

Functionality restriction of Infotainment with an MirrorLink connection

- For the duration of the connection, the external device cannot be used as an audio source in the **Media** menu.
- By connecting the device, all currently connected Bluetooth® devices will be disconnected and the device will automatically be connected as the main telephone.

  Depending on the device to be connected, a connection confirmation may be required.

Settings

Apple CarPlay - Connection via USB

› Turn on the Infotainment.
› Turn on the mobile device.
› Connect the mobile device to the front USB input using a cable.
› Choose to connect via Apple CarPlay.

Apple CarPlay - Disconnect

› In the Apple CarPlay menu, tap on the function area “ŠKODA”.
› Tap on ⊗.

Android Auto - Connection via USB

› Turn on the Infotainment.
› Turn on the mobile device.
› Connect the mobile device to the front USB input using a cable.
› Choose to connect via Android Auto.

Android Auto - Disconnect

› In the Android Auto ⊙ > menu, tap “Return to SKODA”.
› Tap on ⊗.

MirrorLink - Connection via USB

› Turn on the Infotainment.
› Turn on the mobile device.
› Connect the mobile device to the front USB input using a cable.
› Choose to connect through MirrorLink.

MirrorLink - Disconnect

› In the MirrorLink menu, tap on ▪▪.
› Tap on ⊗.


Change to another device / connection type

Infotainment allows you to switch between currently connected devices and the connection type.

› Tap on **APP/**⊙.
› Select the desired device or connection type.

Infotainment Amundsen

Infotainment overview

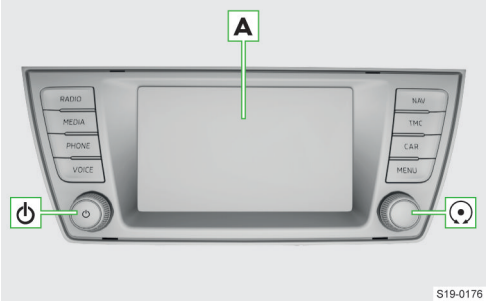

A Touchscreen

⏻ Control dial left
- **Press:** Switch Infotainment on/off
- **Turn:** Set volume

⊙ Control dial right
- **Press:** Confirm menu item
- **Turn:** select menu item/set value

RADIO **Radio** menu

MEDIA **Media** menu

PHONE **Phone** menu

VOICE Voice control

NAV **Navigation** menu

TMC Route guidance traffic reports

CAR Information about vehicle settings

MENU Overview of Infotainment menus

System


Infotainment Menus

MENU menu


The MENU menu contains all available Infotainment menus.

› To **Display the menu** tap **MENU**.

The graphic display type for the MENU menu can be set.

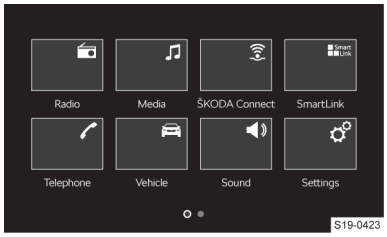

Grid display

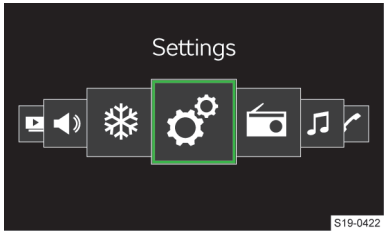

List

Limitation

For safety reasons, operation of some Infotainment functions while driving is not possible or is restricted.

The Infotainment system indicates this by means of a message in the screen.

Basic settings

Setting basic functions
The following Infotainment functions are set in the MENU › ⚙ menu:

- Time and date
- Language
- Units
- Restore factory settings

Sound settings
The Infotainment sound is set in the menu MENU › 🔊.

The following menu items can be set:

- Setting the equalizer
- Adjusting the volume ratio
- Volume adjustment of individual Infotainment functions

  The volume can be adjusted on e.g. one of the following menu items:

  - Volume adjustment of voice commands
  - Setting the maximum volume when Infotainment is turned on
  - Speed-dependent volume setting
  - Setting the Infotainment to mute with the parking aid switched on

Depending on the equipment, the following advanced sound settings can be set

- Setting space optimisation
- Setting the audio profiles according to genre
- Adjusting the subwoofer volume

Configuration wizard
The configuration wizard helps to set certain Infotainment functions.

The configuration wizard is automatically displayed if the ignition is switched on and if there are at least two menu items that have not been set after switching on the Infotainment or if a new user account has been selected.

› To **switch off the automatic display**, when the configuration wizard is displayed tap *Don't show again* .
› For **manual display**, tap MENU › ⚙ › *Configuration wizard* .

Set up menu MENU
The graphic display type for the MENU menu can be set as follows:

› MENU › ⚙ › *Screen* › *Menu:*
› Select one of the following menu items:

- *Grid display* - Grid display.
- *Horizont. Display* - horizontal display.

Safely disconnect the connected USB device

NOTICE
Risk of damage to the data on the connected device!
To safely disconnect/remove the device, proceed as follows:

› MENU › ⚙ › *Remove safely:* .
› Select the desired device.
› Disconnect/remove the device.

If it is not possible to safely disconnect the device, switch off the Infotainment and disconnect the device.

Troubleshooting

Infotainment not responding
If the infotainment does not respond, restart it as follows:

› Hold ⏻ for longer than 10 s.
› Wait for the restart to complete.

System update

We recommend having the system update carried out by a specialist company.

The system update ensures optimal function of the Infotainment system, e.g. compatibility with new phones.

Determine system version

› Tap **MENU** > ⚙ > *System information*.

Manual update


Information about available updates can be found on the ŠKODA website.

www ***http://go.skoda.eu/updateportal***

› Check for available updates.
› Save the update to a USB source.
› Insert the USB source into the front USB input.
› **MENU** > ⚙ > *Tap System information* > *Tap Update software* .
› Select the connected USB device as the update source.
› Go to the update file and confirm the update.
› Confirm any messages and wait for the update process to complete.

Screen

Overview

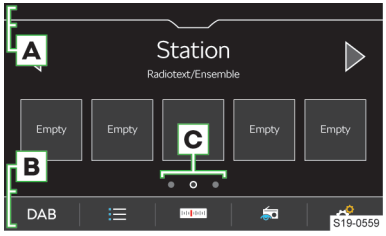

A Status bar

B Bar with the functional surfaces of the displayed menu

C Other pages of the menu

Operation

NOTICE


Danger of screen damage!

▸ The Infotainment screen is operated **by touching it lightly with your finger**.

In principle, operation by touch is identical to the operation of a mobile phone.

The following operating modes are specific to the Infotainment system.

Dragging up or down with two fingers

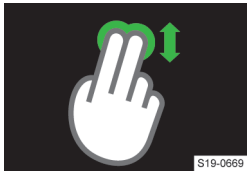


▸ Quickly review the list of phone contacts

Pulling apart with two fingers



▸ Enlarge image
▸ Zoom into the map

Pulling together with two fingers

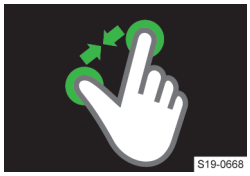

▸ Minimize image
▸ Zoom out of the map

Turn two fingers



▸ Rotate image

Finger movement



▸ Move map

Settings

The following basic screen functions are set in the menu **MENU** > ⚙ > *Screen*:

▸ Brightness level of the screen
▸ Switch off the screen
▸ Display the time
▸ Confirmation sounds and animations


Infotainment keyboard

Keypad overview

The arrangement of the keyboard characters depends on the set infotainment language.

Depending on the context, the following types are used in infotainment:

- Alphanumeric
- Numeric
- Keyboard for input
- Keyboard for search

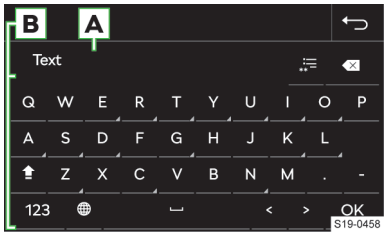


Keypad example

A Input line
- Delete characters before the cursor
  - **Tap:** delete the last character
  - **Hold:** delete all characters in sequence
- Show list of searched entries

B Keypad functional surfaces
- Change to lowercase
- Switch to the first capital letter, followed by lowercase letters
- ABC/ÄÖß Switch to the language keypad
- 123 Switch to the numeric and character keypad
- Show additional keypad languages
- Insert a space
- **Hold:** Show additional character variants
- < Move cursor to the left
- > Move cursor to the right
- OK Confirm the characters that have been entered

Numeric keypad

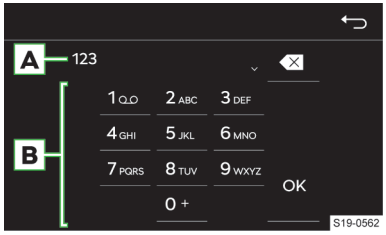

Keypad example

A Input line
- Delete characters before the cursor
  - **Tap:** delete the last character
  - **Hold:** delete all characters

B Keypad functional surfaces

- OK Confirm the characters that have been entered

If context-sensitive, alphanumeric characters can be entered by holding a functional surface with a digit.

Operation

The Infotainment keypad is used to enter characters, letters and numbers.

The keypad will be **automatically displayed** when Infotainment prompts for characters.

Find
During the character input, a search for corresponding entries takes place.

The entry to be searched can be entered, including diacritics.

The keypad will only provide characters that match the stored entries.

› To **display the searched entries**, tap .

Show additional keypad languages
To use the additional keypad languages, the desired languages must be set first.

› Tap or repeatedly tap the flag symbol until the desired language keypad is displayed.

Further character variants
› Press and hold the sign with the symbol .
› Select the desired symbol.

Setting up additional keyboard languages

› Tap **MENU** > > *Additional keypad languages.*

Voice control

Functionality

Voice control principle
Voice control works according to the principle of dialogue between the user and the Infotainment system.

The user says a voice command. The Infotainment system responds or executes the voice command.

Operating conditions

✓ The ignition is switched on.
✓ Infotainment is switched on.
✓ No telephone conversation can be held via Infotainment.

Operation

Voice control process
› To **turn on** voice control, press the button on the multifunction steering wheel.

Or:

› Tap on **VOICE**.

After switching on, the icon is displayed.

› Say a voice command.

During recognition of the voice command, the icon is displayed.

The Infotainment system then executes the voice command or plays the message. During the message, the icon is displayed.

After the execution of the voice command, voice control is switched off.

Correcting a voice command
› During voice command input, press the button on the multifunction steering wheel and say a new voice command.

Stopping voice control
Stopping leaves more time for voice command input, e.g. for searching for a phone contact.

› Move your finger up or down over the Infotainment screen.

Or:

› Say the **"pause"** voice command.

Resuming stopped voice control
› Press the button on the multifunction steering wheel.

Or:

› Tap on in the Infotainment screen.

Stopping the played back message
› Press the button on the multifunction steering wheel.

Ending voice control
› Press the button on the multifunction steering wheel twice.

Or:

› Say the voice command **"cancel"** during voice command input.

Restriction

For some Infotainment languages, there is no voice control available. The Infotainment system will indicate this.

The messages are generated by Infotainment. Flawless clarity (e.g. road or city name) cannot always be guaranteed.

You cannot use voice control while a phone call is in progress.

Settings

The following voice control functions are set in the menu **MENU** > > *Voice control*:

▸ Confirmation tones
▸ Display of sample commands

Self help

Starting acoustic help
› If the Infotainment system is expecting a voice command, say **"Help"**.

The **"Help"** voice command can be issued repeatedly for further tips on voice control.

Activate/deactivate the display of example voice commands in the Infotainment screen.
The system offers the option of displaying example voice commands after switching on the voice control in the Infotainment screen.

› To **turn on/off** **MENU** > > *voice control* > tap on *Example commands (Infotainment system)*.

Activate/deactivate display of example voice commands in the instrument cluster display
The system offers the option of displaying example voice commands after switching on the voice control in the Instrument cluster screen.

› To **turn on/off** **MENU** > > *voice control* > tap on *Example commands (Instrument cluster)*.

Radio

Overview


Display menu

› Tap **RADIO**.

Or:

› Tap **MENU** > .

Analogue and digital radio reception

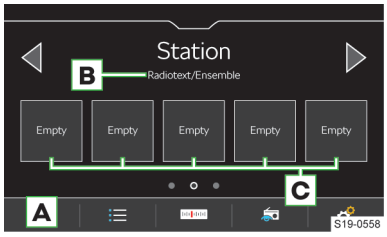

A Select frequency range

B Depending on the frequency range
FM: Radio text
DAB: Name of the station group

C Station buttons for preferred stations

List of available stations

Manual station search

Display information about the station (applies to DAB)

Settings

Infotainment supports digital radio reception in DAB and DAB+ formats.

List of available stations


› To **display**, tap .

Played station
★ Station stored on the presets
TP A traffic radio station is set
DAB signal is not available
The DAB station reception is not stable
To filter the FM stations into alphabetical order, tap according to group or genre.
The prerequisite for the filtering option is ensuring RDS and AF functions are activated.
Manual update of the station list

In the FM station list, information about the programme type and the type of the regional station can be displayed.

Operation

Select station

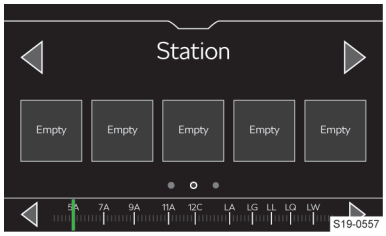

› Tap ◁ or ▷ at the top of the screen.

SCAN function

The function plays receivable stations of the selected frequency range in succession for a few seconds each.

› To **start automatic play** press > *Scan* or the right rotary control .

› To **end automatic play** press SCAN or the right rotary control .

Find stations manually

› In the Radio main menu, tap .

› To **search in sequence**, tap ◁ or ▷ next to the displayed frequency range scale.

Or:

› Hold down the scroll mark on the frequency range scale and move it to the desired value.

Or:

› Turn the right rotary control .

Limitation

▸ Infotainment supports digital radio reception in DAB and DAB+ formats.

▸ Parking garages, tunnels, tall buildings or mountains can restrict radio reception.

▸ In the rear side windows, there may be antennas for receiving the radio signal.

Covering the windows with foils or metal-coated stickers can impair the reception of the radio signal.

▸ The ŠKODA AUTO company does not assume any responsibility for the availability, correct function or broadcast information of the RDS service.

Settings

Save the station currently being listened to as a favourite from the Radio main menu

› Hold the desired station key for preferred stations until the station is stored.

Save station to favourites from the list of available stations
Applies to AM, FM and DAB frequency ranges.

› Hold the line with the name of the desired station.
› Tap the desired preset button.

Deleting favourites
› In the menu **Radio** > *clear memory* .
› To delete **a** station button for preferred stations, tap the desired station button and confirm the deletion.
› To delete **all** station buttons for preferred stations *Tap All* and confirm the deletion.

Function surfaces ◁ ▷
Applies to AM, FM and DAB frequency ranges.

The variant for **changing stations** using the function surface ◁ ▷ in the **Radio** menu is set as follows:

› In the menu **Radio** > *Arrow buttons:* .
› Choose the change variant.

Traffic reception (TP) for FM stations on/off
Applies to the FM frequency range.

› In the menu **Radio** > *Traffic program (TP)* .

Switch traffic reception for DAB stations on/off
Applies to the DAB frequency range.

› In the **Radio** menu switch on the menu item > *Traffic program (TP)* switch on
› In the menu **Radio** > *Advanced settings* > *Tap DAB traffic announcements* switch on / off

Assign station logo from an external source
Applies to AM, FM and DAB frequency ranges.

Infotainment offers the option to assign logos from the pictures on an external source to the station buttons.

For station logos, images in jpg, gif, png, bmp format with a maximum resolution of 500x500 pixels can be used.

› In the menu **Radio** > *Station logos* .
› Tap the desired preset button.
› Select the external source with the logo.
› Find the desired logo and confirm.

The information for updating station logos is taken from the ŠKODA web pages.

http://go.skoda.eu/updateportal

Delete station logos
Applies to AM, FM and DAB frequency ranges.

› In the menu **Radio** > *Station logos* .
› To delete **a logo**, tap the desired preset button and confirm the deletion.
› To delete **all logos** *Tap All* and confirm the deletion.

Activating / deactivating automatic station logo assignment
Applies to the FM and DAB frequency ranges.

When the function is switched on, a station logo from the Infotainment memory is assigned when the station is stored on a preset.

› In the menu **Radio** > *Advanced settings* > *Automatic storage station logos* .

Regional FM station logo
Applies to the FM frequency range.

Infotainment provides the option of using country-specific FM station logos.

› In the menu **Radio** > *Advanced settings* > *Region for station logo:* .
› Choose country.

Turn on/off radio text reception
Applies to the FM and DAB frequency ranges.

When the function is switched on and station presets are displayed, detailed information about the broadcast content of the FM station being listened to, or the name of the station group for the DAB station, is displayed.

› In the menu **Radio** > *Radio text* .

Switch automatic frequency control (AF) on/off
Applies to the FM frequency range.

When the function is switched on and the signal of the FM station currently being listened to is weak, Infotainment automatically sets the same station to a different frequency with a better signal.

› In the menu **Radio** > *Advanced settings* > *Automatic frequency change (AF)* .

Automatic change of frequency to a regionally linked FM station
Applies to the FM frequency range.

Infotainment provides the option of automatically switching to a regionally linked FM station in case of signal loss of the FM station being listened to.

› In the menu **Radio** > *Advanced settings* > *RDS Regional:* .
› Select one of the following menu items:

▶ *Fix* - When the signal is lost, another station must be set manually.
▶ *Automatic* - automatic selection of the station with the best signal reception.

If reception is lost in the given region, Infotainment will automatically set another available region.

Switch RDS on/off
Applies to the FM frequency range.

The menu item is only available for some countries.

› In the menu **Radio** > *Advanced settings* > *Radio Radio Data System (RDS)* .

If the **RDS function is disabled**, the following menu items in **FM station** settings are not available:

- Traffic program (TP)
- Radio text
- RDS Regional
- Automatic frequency change (AF)
- Regional station logo.

Switching additional announcements of the DAB transmitter on / off
Applies to the DAB frequency range.

When the function is switched on, other announcements are received as traffic announcements. These include e.g. weather news, sports reports, financial news etc.

› In the menu **Radio** > *Advanced settings* > *Tap other DAB announcements* .

Enable/disable automatic programme tracking of a DAB station
Applies to the DAB frequency range.

When the function is switched on and the DAB station is lost, Infotainment automatically changes to the same station with a better signal in a different DAB station group.

› In the menu **Radio** > *Advanced settings* > *DAB - DAB program tracking* .

Turn on/off automatic switching from a DAB station to the same FM station
Applies to the DAB frequency range.

When the function is switched on and the DAB station being listened to is lost, Infotainment automatically changes to the same FM station. The symbol (FM) is displayed after the station name.

When the corresponding DAB station can be received again, the station automatically changes from FM to DAB.

› In the menu **Radio** > *Advanced settings* > *Tap Automatic change DAB - FM* .

Activating/deactivating reception of DAB transmitter in the L band
In some countries, the DAB radio reception is only available as a so-called Lband.

› In the menu **Radio** > *Advanced settings* > *L band* .

If there is no DAB radio reception available in the L-band in your country, we recommend turning the L-band reception off. The DAB channel scan is therefore faster.

Switch the slideshow function on/off
Applies to the DAB frequency range.

When the function is switched on, the images broadcast by the station are displayed in the player.

› In the menu **Radio** > *Advanced settings* > *DAB slideshow* .

Media

What you should be mindful of

- Do not save any important data or that which has not been backed up on the connected audio sources. ŠKODA assumes no responsibility for lost or damaged files or connected audio sources.
- When changing or connecting an audio source, this may cause sudden changes in volume. Reduce the volume before changing or connecting an audio source.
- When connecting an audio source, the source information messages can be displayed. These messages must be observed and, if necessary, confirmed.
- The national copyright laws that apply in your country must be observed.

Overview

Display menu
› Tap **MEDIA**.

Or:


› Tap **MENU** > ♫.



A Select source
♫≡ Manage files / multimedia database
Settings

Operation

Operation - Basics

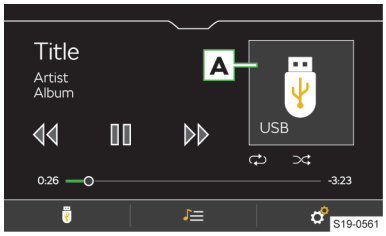

A Album image / symbol of the connected source
Tap: display available albums

▷ **Tap:** start playback

▯▯ **Tap:** pause

◁◁ **Within 3 seconds of starting playback, tap:** play the previous song

◁◁ **After 3 seconds from the start of playback, tap** to play the current title from the beginning

◁◁ **Hold:** fast rewind within the title

▷▷ **Tap:** play the next song

▷▷ **Hold:** fast forward within the title

Movement within the title is also possible by dragging the finger over the timeline.

Extended operation

Turn repeat playback of the current track on/off
Turn repeat playback of the current album/folder on/off
Turn random playback of the current album/folder on/off

Restriction

The availability of some media operation functions is dependent on the connected source and the software being used, e.g. Bluetooth®.

Settings

Turn title playback including subfolders on/off

› In the **Media** menu tap on ⚙ › *Mix/Repeat including subfolders.* .

Traffic

› To **turn on/off** traffic monitoring during playback of media files, go to the **Media** in the main menu ⚙ › and tap on *Traffic program (TP)* .

Safely disconnect the connected device

NOTICE
Risk of damage to the data on the connected device!

To safely disconnect/remove the device, proceed as follows:

› In the **Media** menu tap on ⚙ › *Remove safely:* .
› Select the desired device.
› Disconnect/remove the device.

If it is not possible to safely disconnect the device, switch off the Infotainment and disconnect the device.

Bluetooth® player

Infotainment allows audio files of a connected Bluetooth® player to play using the A2DP and AVRCP audio profile.

With Infotainment, multiple devices can be paired using Bluetooth®, but only one of them can be used as a Bluetooth® player.

› For **connecting the Bluetooth® player**, pair and connect the device via Bluetooth®.
› In the **Media** menu tap on ⚙ › *Bluetooth* › *Paired devices* .
› In the list, choose the device with the symbol ♫.

If a device is connected to Infotainment using Apple CarPlay or Android Auto, then it cannot be connected using Bluetooth®.

SD card

NOTICE
Risk of damaging the SD card reader!
▸ Do not use SD cards with a broken slide for write protection.



› To **insert** the SD card, with the bevelled corner to the bottom, push into the slot in the external module until it snaps into place.
› To **remove**, first disconnect the SD card safely. For this in the menu **media** ⚙ › tap on *Remove safely:* and select the SD card.
› Press on the inserted SD memory card.

The SD card moves to the eject position.

NOTICE
When using an SD card with an adapter, vehicle vibrations might cause the card to fall out of the adapter.

USB device

› To **connect**, insert the USB device into the appropriate port.

To play audio files, use USB ports that support data transfer.

› To **disconnect** disconnect the USB device first. For this in the menu **media** ☍ › tap on *Remove safely:* and select the USB device.
› Disconnect the USB device.

ⓘ A USB device can be connected directly to the USB port or via a connection cable.
We recommend using connection cables from the ŠKODA Original Accessories range.
USB extension cables or reducers may affect the playback function of the connected device.

Load USB audio source
After connecting the USB device, charging will start automatically when the following conditions are met:

✓ The ignition is switched on.
✓ The USB device allows charging.

The charging efficiency can be different compared to the charging from the usual mains power supply.

Depending on the type of the connected USB device and the frequency of use, the charging current may not be sufficient to charge the battery of the connected device.

Some connected audio sources may not be recognised and cannot be charged.

Supported sources and files

Supported sources

Source	Interface	Type	Specification	File system
SD card	SD card reader	Standard size	SD SDHC SDXC	FAT16 FAT32 exFAT NTFS
USB	USB 1.x; 2.x 3.x or higher with USB 2.x support	MSC	USB stick	
			HDD (without special software)	
			USB devices that use the USB mass storage support protocol	
		MTP	Devices running the Android or Windows Phone operating system that support the Media Transfer Protocol	
		Apple	Devices with an iOS operating system	HFS+
Bluetooth® player	Bluetooth®	-	Bluetooth® protocols A2DP and AVRCP (1.0 - 1.5)	-

ⓘ The GPT standards (GUID partition table) method structured audio sources are not supported by Infotainment.
Viewing images on the Infotainment screen is not supported by connected Apple devices.

Compatibility of mobile devices
It is possible to check the ŠKODAweb pages to see if Infotainment is compatible with the selected mobile device being tested. This check is carried out by using the following reference or by reading the QR code:

www ***http://go.skoda.eu/compatibility***

All information given is incidental and serves as information.

The ŠKODA AUTO company cannot guarantee full functionality and compatibility, e.g. due to a software update of the Infotainment and the mobile devices.

Supported audio files

Compression format	Codec type	File extension	Max. bit rate [kbps]	Max. sampling rate [kHz]	Multi channels
MPEG	MPEG 1 Layer 3	mp3	32 - 320	32, 44, 48	Mono, dual mono, Stereo, Joint Stereo
	MPEG 2 Layer 3	mp3	8 - 160	16, 22, 24	Mono, Stereo, Joint Stereo
	MPEG 2.5 Layer 3			8, 11, 12	
WMA	Windows Media Audio 9 and 9.1	wma	8 - 384	8, 11, 12, 16, 22, 32, 44, 48	Mono, stereo, Joint stereo
	Windows Media Audio 9.2		8 - 320		
	Windows Media Audio 10		8 - 768	32, 44, 48, 96	
FLAC	FLAC	flac	defined by the format Approx. 5.5 Mbps	8, 11, 12, 16, 22, 24, 32, 44, 48, 64, 88, 96	Mono, stereo, 5.1, 7.1
OGG-Vorbis	OGC-Vorbis	ogg	defined by the format Approx. 5.5 Mbps	8, 11, 12, 16, 22, 24, 32, 44, 48	Mono, Stereo
ADTS	AAC LC	aac	16 - 400	22, 24, 32, 44, 48	Mono, Stereo
	AAC HE			16, 22, 24, 32, 44, 48	
	AAC HEv2				
RIFF	WAV	wav	64 - 3072	8, 11, 12, 16, 22, 24, 32, 44, 48, 96	Mono, Stereo

Files that are protected by **DRM**- and **iTunes®** methods are not supported by Infotainment.

Supported playlists


Codec type	File extension
M3U	m3u
M3U8	m3u8
PLS	pls
WPL	wpl
ASX	asx
PLA	pls

Images

Overview

Display menu

› Tap MENU > .

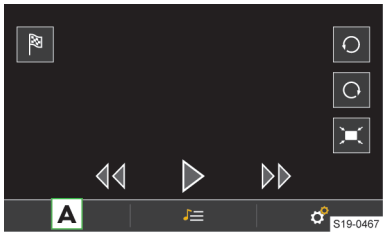


A Select source

Manage files

Settings

Operation

Touch operation

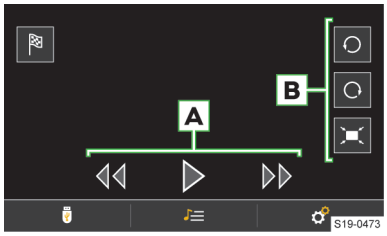


A Look at images
- ▶ ⏩ Show the next image
- ▶ ⏪ Show the previous image
- ▶ ▷ Start slideshow
- ▶ ⏸ Stop slideshow


B View image
- ▶ ↺ Turn to the left
- ▶ ↻ Turn to the right
- ▶ ⤢ Display in initial size

🏁 Guidance to GPS coordinates
The functional area is displayed if the image contains information about GPS.


Gesture control

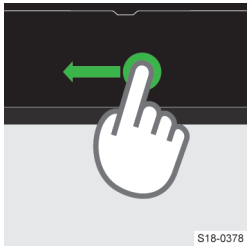

▶ Display of the next image

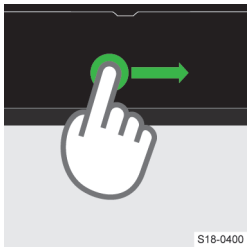


▶ Display the previous image

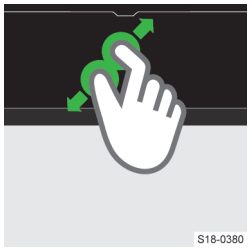

▶ Increase the image size



▶ Reduce the image size

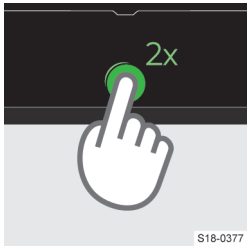

▶ Maximum image magnification / display of the initial image size

Settings

The following Infotainment functions are set in the MENU > 🖵 > ⚙ menu:

- ▶ Display image size
- ▶ Display image duration during the slideshow
- ▶ Slideshow repeat

Supported sources and files

Supported sources

Source	Interface	Specification	File system
SD card	SD card reader	Standard size SD SDHC SDXC	FAT16 FAT32 exFAT NTFS
USB	USB 1.x; 2.x 3.x or higher with USB 2.x support	USB stick	
		HDD (without special software)	

Supported files

Codec type	File extension	Max. resolution [Mpx]
BMP	bmp	4
JPG; JPEG	jpg; jpeg	4 (Progressive Mode) 64
GIF	gif	4
PNG	png	4

The maximum supported image size is 20 MB.

Media Command

Functionality

The Media Commandfunction allows playback of audio files or videos in up to two tablets that are connected to Infotainment via Wi-Fi, to control Infotainment.


Overview

Display menu

› Tap MENU > .



Menu for a tablet

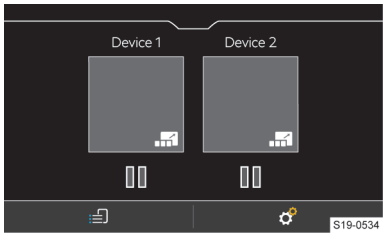

Menu for two tablets

Choice of connected tablet

Settings

Operating conditions

✓ Data transfer of Infotainment is switched on.

The data transmission is switched on/off in the menu item MENU > > *Data transfer mobile devices* > *Activate data transfer for ŠKODA apps*.

✓ Infotainment operation via the application is enabled.

Operation is set in menu item MENU > >. *Data transfer mobile devices* > *Use apps to operate:*.

One of the following menu items can be selected:

- *Deactivate* - the operation is deactivated.
- *Confirm* - operation requires confirmation at the start of the application.
- *Allow* - the operation requires no confirmation.

✓ The ŠKODA Media Command application is installed in the tablet(s).

✓ The tablet(s) are connected to the Infotainment hotspot.

Operation

start playback

› To **select the playback source** in the main menu, tap and select the source tablet.

› For **playback** select the category and then the title.

If two tablets are connected, the title playback starts in the two tablets at the same time.

Playback control

- **Tap:** Start playback
- **Tap:** Pause
- **Within 3 seconds of starting playback, tap:** play the previous song
- **After 3 seconds, tap from the start of playback:** to play the current title from the beginning
- **Tap:** play the next song
- Increase the audio volume of the tablet
- Decrease the audio volume of the tablet
- View control options for two tablets
- View control options for a tablet
- Mute the tablet
- Unmute the tablet

Movement within the title is also possible by dragging a finger over the timeline.

Functional limitation

Some tablet types allow playback of audio files or videos by an inserted SD card in the tablet. Playback of these tracks may be limited.

If several devices are connected to the Infotainment system by means of Wi-Fi, there is the danger of Wi-Fi overloading and thus also the inability of Media Command to function properly.

High-definition video playback may cause playback problems or problems connecting the tablets to the Infotainment system.

Settings

ŠKODA Media Command application
The application can be downloaded to the mobile device after reading the following QR code or by referring to the ŠKODA mobile application website:

http://go.skoda.eu/service-app

Connect tablet with Infotainment hotspot
› Turn on the ignition.
› Turn on the Infotainment's Wi-Fi hotspot in the menu item **MENU** > ⚙ > *Wi-Fi* > *Mobile Hotspot* > *Mobile Hotspot*.
› Turn on Wi-Fi on the tablet.
› In the list of available Wi-Fi devices, look for Infotainment Wi-Fi.

The name of the Infotainment hotspot refers to the menu item **MENU** > ⚙ > *Wi-Fi* > *Mobile Hotspot* > *Hotspot Settings (Wi-Fi)* > *SSID:*.

› Select the Infotainment hotspot and enter the required password.

The password for connecting to the Infotainment hotspot is taken from the menu item **MENU** > ⚙ > *Wi-Fi* > *Mobile Hotspot* > *Hotspot Settings (Wi-Fi)* > *Network key:*.

› Confirm the connection.
› In the tablet, start the application ŠKODA Media Command.

Supported files

Format	Codec type	Android operating system	iOS operating system
Video	MPEG-4 Part 2	✓	✓
	MPEG-4 Part 10 (H264)	✓	✓
	Xvid	✓	×
Audio	MPEG-1; 2 and 2.5 Layer 3 (mp3)	✓	✓
	aac	✓ (4,1+)	✓
	m4a	✓ (4,1+)	✓
	ogg	✓	×
	flac	✓	×
	wav	✓ (4,1+)	✓

Mobile device management

Overview

Mobile device management
› In the **Telephone** ⚙ >menu *Bluetooth* > *Paired devices* .

In the list of paired mobile devices, the following symbols may appear for the individual devices:

Grey icon - the device can be connected as a telephone.
Green icon - the device is connected as a telephone.

Grey icon - the device can be connected as a Bluetooth® player.
White icon - the device is connected as a Bluetooth® player.

Possible functions of the connected mobile device
The functions of a device connected via over the **HFP** Bluetooth profile depends on the following connection types:

First device Main phone	Second device Additional phone
incoming / outgoing calls SMS Telephone contacts Bluetooth® player	incoming calls Bluetooth® player

With Infotainment only **a mobile device** can be connected as a Bluetooth® player.

Limitations of mobile devices and applications

Availability of features
The availability of certain features depends on the type of mobile device, as well as that of the applications installed.

Connection restrictions
- With Infotainment, a max. of 20 mobile devices are paired.
- The range of the connection of the mobile device to Infotainment is limited to the passenger compartment.
- After reaching the maximum number, the pairing of the next mobile device will replace that of the device that has not been used for the longest period of time.

Compatibility of mobile devices
It is possible to check the ŠKODAweb pages to see if Infotainment is compatible with the selected mobile device being tested. This check is carried out by using the following reference or by reading the QR code:

http://go.skoda.eu/compatibility

All information given is incidental and serves as information.

The ŠKODA AUTO company cannot guarantee full functionality and compatibility, e.g. due to a software update of the Infotainment and the mobile devices.

Bluetooth® compatibility of mobile devices
Due to the large number of mobile devices, it is not possible to guarantee total Bluetooth® compatibility with Infotainment. Bluetooth® compatibility depends on the Bluetooth® version as well as the implementation of Bluetooth® protocols by the manufacturer of the mobile device.

Applications in mobile devices
Mobile devices can be used to install applications that allow you to view additional information on the Infotainment screen, or to operate the Infotainment system.

Due to the variety of applications, as well as their ongoing development, the available applications may not function on all mobile devices. ŠKODA AUTO assumes no liability for their proper functioning.

The scope of available applications and their functionality is dependent on the type of Infotainment, as well as the vehicle and country.

Information about ŠKODAapplications
Detailed information about ŠKODA applications can be found on the website after reading the following QR code or link:

http://go.skoda.eu/mobile-apps

Connection set-up

Connect a mobile device to Infotainment
› Turn on the ignition.
› Turn on the Bluetooth® on the mobile device.
› Turn on the Bluetooth® on Infotainment MENU > ⚙ > *Bluetooth* > *Bluetooth*.
› Turn on the Bluetooth® visibility of the Infotainment MENU > ⚙ > *Bluetooth* > *Visibility:* > *Visible*.
› Find available Bluetooth® devices in the mobile device.
› Select the Infotainment Bluetooth® unit.

The name of the unit can be found by tapping MENU > ⚙ > *Bluetooth* > *Name:*.

› Confirm the PIN; enter it if necessary and then confirm.

The mobile device is connected to the Infotainment or just paired, depending on the number of devices that are already connected.

Connect Infotainment to a non-paired mobile device

› Turn on the ignition.
› Turn on the Bluetooth® on the mobile device.
› Turn on the Bluetooth® on Infotainment MENU > ⚙ > *Bluetooth* > *Bluetooth*.
› Tap on MENU > ⚙ > *Bluetooth* > *Search for devices*.
› Ensure the visibility of the device to be connected.
› Select the desired device from the list of Bluetooth® devices.
› Confirm the PIN; enter it if necessary and then confirm.
› If two devices are connected to the Infotainment, select the device to be replaced.

Connect Infotainment to a mobile device that is already paired

The connection with an already paired mobile device is made automatically after switching on the ignition; if necessary the device can be connected manually as follows:

› Turn on the ignition.
› Turn on the Bluetooth® on the mobile device.
› The infotainment Bluetooth® MENU > ⚙ > *Bluetooth* > *Bluetooth* switch on
› MENU > ⚙ > *Bluetooth* > *Paired devices* .
› In the device list, select the desired device and the Bluetooth® profile.
› Confirm the PIN; enter it if necessary and then confirm.
› If two devices are connected to the Infotainment, select the device to be replaced.

Disconnect from a mobile device

› Tap MENU>⚙> *Bluetooth* > *Paired devices*.
› Tap on the Bluetooth® profile icon of the desired mobile device.

Delete a paired mobile device

› Tap MENU>⚙> *Bluetooth* > *Paired devices*.
› To **delete a** mobile device, tap 🗑 and confirm the deletion.
› To **delete all** mobile devices, tap on *Delete all* and confirm the deletion.

Telephone

Overview


Display menu

› Tap PHONE.

Or:

› Tap MENU > ✓.

If the menu **phone** is not displayed, check whether the mobile device is connected.

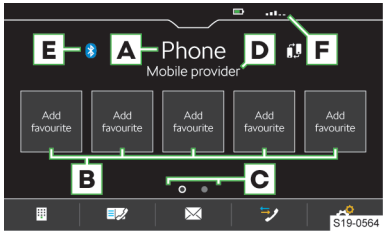

A Name of the connected telephone
▸ **Tap:** Show list of previously connected phones
B Preset buttons for preferred contacts
C Choice of storage group for the preferred contacts
D Name of telephone service providers
▸ If the symbol ▷ is displayed in front of the name, roaming is active.
E Symbol for the connection type
F Status symbol of the phone
Change the main phone to the extension telephone
Enter the telephone number
Contact list
Text messages
Call lists
Settings

Conditions for connecting a telephone with Infotainment

✓ The ignition is switched on.
✓ The Bluetooth® function of the Infotainment and the telephone needs to be switched on.

The Bluetooth® function of the Infotainment is switched on in the menu item MENU > ⚙ > *Bluetooth* > *Bluetooth*.

✓ Visibility of the Infotainment is switched on.

The visibility of the Infotainment is switched on in the menu item MENU > ⚙ > *Bluetooth* > *Visibility:*.> *Visible*.

✓ The telephone is within signal range of the Infotainment's Bluetooth® unit.
✓ The telephone is compatible with Infotainment.
✓ No mobile device is connected to the Infotainment using Apple CarPlay®.

Telephone operation

Enter telephone number

› In the **Phone** menu, tap on .

› Enter the telephone number using the numeric keypad that is displayed.

The displayed numeric keypad can also be used for searching for contacts.
If, for example, the digits 32 are entered, contacts with the letter sequence DA, FA, EB etc. are displayed next to the numeric keypad.

List of telephone contacts
The list of telephone contacts is imported from the connected main telephone.

› To **display** the contact list in the **phone** menu, tap on .

› To **search** within the list, tap on *Find* .

› Enter the details you wish to find.

› To **establish a connection** with a contact, tap the functional area showing the desired contact.

If a contact has multiple telephone numbers, select the telephone number from the displayed list.

› To display the **details** for a contact, tap >.

Establish a connection to the voice mailbox number

› In the **Phone** menu, tap on > .

Telephone conversation
Depending on the context of the telephone conversation, the following functions can be selected:

End connection / reject incoming call / end call
Answer an incoming call / return to the held call
Switch the ringer off / on
Hold a call
Switch the microphone off / on
Show details of the caller
Set up a conference call

› To **switch the call tone from the speakers to the telephone**, go to **telephone** in the menu and tap on > *speakerphone* .

› To **switch the call tone from the telephone to the speakers**, tap .

Conference call
A conference call is a joint telephone conversation with a minimum of three and a maximum of six participants.

› Make the next call during an ongoing conversation/ conference.

Or:

› Accept a new incoming call by tapping .

› To **start** a conference call, tap .

During an ongoing conference call, the following functions can be selected depending on the context:

Hold the conference call and leave temporarily (the conference will continue in the background)
Return to the held conference call
Switch the microphone off / on
End conference call
Show details of the conference call

In the details of the conference call, depending on the connected telephone, the following functions can be selected:

Show details of the conference call participants
End conversation with the conference call participant
Conversation with a participant outside of the conference call

Send a text message

› In the **Telephone** > menu, tap *New SMS* .

› Write a text message and confirm; a view of the message is displayed.

The message can be edited when the text area within the view is tapped.

› Consult or select the recipient of the message, if necessary tap to enter the phone number.

› Add more recipients or confirm selected recipients.

› Tap on .

Display received text messages

› In the **Telephone** > menu, tap *Input* .

› To **display the Message**, select the desired message.

The message content and the following menu with functions is displayed:

Read the text message using the generated Infotainment voice.

Display the menu with the following functions of an accepted message.
Option to answer the message by means of a template.
Delete message.
Recognise phone numbers in the message.

Forward message, with the option to edit the message before sending.

Reply to the sender by sending a message.

Settings for Infotainment telephone functions

Manage preset buttons for preferred contacts

› To **save** the desired preset button, press and hold.

› Select a contact from the displayed list.

› If the contact contains multiple telephone numbers, choose the desired telephone number.

› To **Clear** in the **telephone** menu tap ⚙ > *User profile* > *Manage favourites* .

› To delete **one** preset, tap on the list entry and confirm the deletion.

Or:

› To delete **all** station buttons, tap *Clear all* and confirm the deletion.

Import telephone contacts
After first connecting the main telephone with Infotainment, telephone contacts will start to be imported into the Infotainment memory.

Infotainment can import up to 2000 telephone contacts together with contact pictures. Each contact can include max. 5 telephone numbers.

Depending on the type of telephone, import confirmation may be required.

Update telephone contacts
When re-connecting the telephone with Infotainment, an **automatic** update of the list is carried out.

› For **manual** update of the list in the **phone** ⚙ > menu *User profile* > *tap on Import contacts* .

Show pictures on phone contacts
› In the **Telephone** ⚙ >menu *User profile* > *View pictures for contacts* .

Sort contacts in the phone book
› In the **Telephone** ⚙ >menu *User profile* > *Sort by:* .
› Select the type by which to sort.

Ringtone
Some phones do not allow the use of the telephone ringtone; instead, the Infotainment ringtone is used.

› For **setting the Infotainment ringtone** in the **phone** ⚙ >menu *User profile* > *select the ringtone* .
› Select the ringtone.

Voice mailbox number
› For **setting the voice mailbox number** in the **phone** ⚙ > menu *User profile* > *Mailbox number:* .
› Enter the voice mailbox number.

Conference calls
› To **enable/disable the option for conference call setup** in the **phone** menu, tap ⚙ > *Conference call* .

Wi-Fi


Functionality

Wi-Fi can be used to connect to the Internet or for operating the Infotainment system using an application in the connected device (e.g. ŠKODA Media Command).

The Infotainment hotspot can connect up to 8 mobile devices. The Infotainment can be connected to another hotspot simultaneously.

Overview of available hotspots

Show available hotspots
› MENU > ⚙ > *Wi-Fi* > *Wi-Fi* .

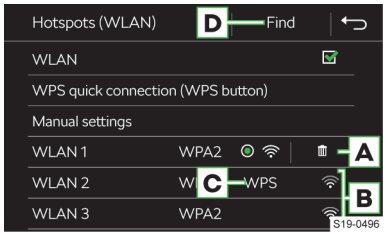

A Previously connected hotspots
B Available hotspots
C The hotspot supports the WPS connection
D Update the list of available hotspots
⊙ Currently connected hotspot
🗑 Delete information about the hotspot connection
Wi-Fi signal strength of the hotspot
Wi-Fi signal from the hotspot is not available

Function restriction

The Infotainment system can only be connected to a hotspot with WPA2 access protection.

Settings

Connect a mobile device to the Infotainment hotspot
› Turn on the ignition.
› Turn on the Infotainment's Wi-Fi hotspot in the menu item MENU > ⚙ > *Wi-Fi* > *Mobile Hotspot* > *Mobile Hotspot*.
› Turn on the Wi-Fi on the mobile device.
› In the list of available Wi-Fi devices, look for Infotainment Wi-Fi.

The name of the Infotainment hotspot refers to the menu item MENU > ⚙ > *Wi-Fi* > *Mobile Hotspot* > *Hotspot Settings (Wi-Fi)* > *SSID:*.

› Select the Infotainment hotspot and enter the required password.

The password for connecting to the Infotainment hotspot is taken from the menu item MENU > ⚙ > *Wi-Fi* > *Mobile Hotspot* > *Hotspot Settings (Wi-Fi)* > *Network key:*

› Confirm the connection.

Connect Infotainment to the mobile device hotspot

› Turn on the ignition.
› Turn on the Infotainment's Wi-Fi unit in the menu item MENU > ⚙ > *Wi-Fi* > *Wi-Fi* > *Wi-Fi* switch on
› Select the desired hotspot in the list of available hotspots.
› Enter the password for connecting to mobile devices.

ⓘ Infotainment stores passwords for previously connected hotspots.

Security level of the Infotainment hotspot
The security level is set at *WPA2* and cannot be changed.

Change the name of the Infotainment hotspot

› Tap MENU > ⚙ > *Wi-Fi* > *Mobile Hotspot* > *Hotspot Settings (Wi-Fi)* > *SSID:*.
› Enter the name and confirm.
› Tap *Save*.

Change password for connection to Infotainment hotspot
The password must be a minimum of 8 and a maximum of 63 characters.

› Tap MENU > ⚙ > *Wi-Fi* > *Mobile Hotspot* > *Hotspot Settings (Wi-Fi)* > *Network key:*.
› Enter the password and confirm.
› Tap *Save*.

Quick connection of a mobile device to the Infotainment hotspot

› Turn on the ignition.
› Turn on the Infotainment's Wi-Fi hotspot in the menu item MENU > ⚙ > *Wi-Fi* > *Mobile Hotspot* > *Mobile Hotspot*.
› Tap *WPS quick connection (WPS button)*.
› In the mobile device, switch on the option for connection via WPS.
› Wait for the connection to be established and, if necessary, confirm the respective messages.

Quick connection of Infotainment to the mobile device hotspot

› Turn on the ignition.
› On the mobile device, turn on the hotspot, its visibility, and the option for WPS connection.
› Turn on the Infotainment's Wi-Fi unit in the menu item MENU > ⚙ > *Wi-Fi* > *Wi-Fi:* > *Wi-Fi*.
› Tap *WPS quick connection (WPS button)*.
› Wait for the connection to be established and, if necessary, confirm the respective messages.

Manual connection of Infotainment to the mobile device hotspot

› Set the hotspot backup of the mobile device to WPA2.
› Turn on the ignition.
› Turn on the Infotainment's Wi-Fi unit in the menu item MENU > ⚙ > *Wi-Fi* > *Wi-Fi:* > *Wi-Fi*.
› Tap *Manual settings*.
› Enter the name of the hotspot to connect to and the access password.
› Tap *Connect*.
› Wait for the connection to be established and, if necessary, confirm the respective messages.

Tips for a perfect connection

▸ Keep only the hotspot to be connected switched on and switch off the other hotspots.
▸ Delete unused hotspots. This shortens the time required to establish a connection.
▸ For some hotspots, the connection takes longer, so wait for the connection to finish.
▸ If the connection is interrupted, recheck the available hotspots and repeat the connection.

Data connection

Settings

Mobile data
Mobile data for the data connection may be subject to charges according to the mobile network operator's tariff conditions.

Types of data connection setup

▸ By connecting the Infotainment with the **external hotspot** via Wi-Fi.
▸ Using the **USB device** CarStick.

Connecting using the USB device CarStick
The CarStick USB device can be purchased from the ŠKODA original accessories.

› Insert a SIM card with activated data services into the CarStick.

The required size of the SIM card and the correct procedure when inserting can be found in the instructions enclosed with the CarStick device.

› Turn on the ignition and switch on Infotainment.
› Insert the CarStick into the USB input at the front.
› Wait approximately one minute until a light other than the red indicator light on CarStick is permanently lit.

When the red indicator light illuminates, remove the CarStick and insert again.

› If the SIM card is protected by a PIN code, then the PIN code of the SIM card must be entered.
› Confirm the entered PIN code by tapping OK.

Or:

› Tap 🖫 to save and confirm the PIN code.
› If necessary, set the required network of the data service provider.

NOTICE
If a SIM card is incorrectly sized or if a SIM card is inserted in the wrong direction, there is a risk of damage to the CarStick USB device.

Set network parameters
› MENU > ⚙ > *Tap network* .
› Set the desired parameters.

Contact the data service provider for precise parameters for the network setting.

SmartLink

Functionality

SmartLink offers the ability to display and operate certified applications from a connected mobile device in the Infotainment screen.

Certification may be conditional upon the use of the latest update to the particular SmartLink application.

Applications include, for example, apps for route guidance, telephoning, listening to music, etc.

Mobile devices can be connected via a USB cable.

Supported connection types
SmartLink supports the following connection types:

- Android Auto
- Apple CarPlay
- MirrorLink

Overview of the SmartLink connection

Display menu
› Tap APP.


Or:

› Tap MENU > SmartLink.




A Previously connected device
B Currently connection device
ⓘ Display information about SmartLink
⊗ Disconnection of the active connection
♫ Disconnection of the active connection
⚙ Settings in SmartLink menu

Android Auto

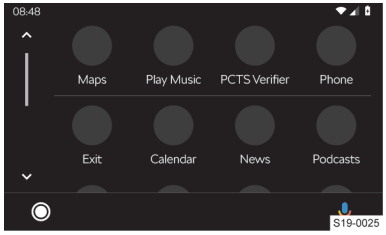


◉ Overview of running applications, phone calls, incoming text messages, and more.
🎙 Turn on voice control (Google Voice)

Apple CarPlay

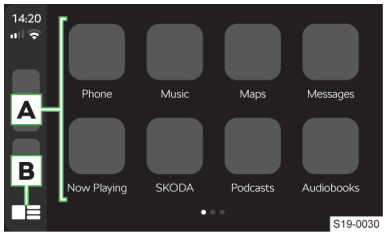

A List of available applications
B Depending on the duration of operation:
- **Tap:** Return to the menu Apple CarPlay
- **Hold:** Turn on voice control (Siri)

MirrorLink

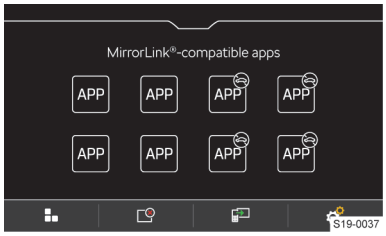

🚗 It is not possible to operate the application while driving
Return to the menu SmartLink
List of running applications
Display of the last running application in connected mobile devices
⚙ Settings

Connection conditions

General connection conditions

✓ The mobile device supports the type of SmartLink connection Android Auto, Apple CarPlay or MirrorLink.

✓ Mobile devices, as well as the type of SmartLink connection, are supported in the respective market.

✓ Some connected mobile devices require the mobile device to be “unlocked”.

Conditions for Android Auto

✓ The device to be connected must have Android Auto connection.

A list of devices, supported regions and applications that support the Android Auto connection can be found on the Google, Inc. website.

✓ The Android Auto application needs to be installed on the mobile device.

✓ Some applications require the data connection in the mobile device to be turned on.

✓ Connect the mobile device for the first time when the vehicle is stationary.

Conditions for Apple CarPlay

✓ The device to be connected must have Apple CarPlay connection.

A list of devices, supported regions and applications that support the Apple CarPlay connection can be found on the Apple Inc website.

✓ Siri voice control is on.

✓ The data connection in the mobile device is switched on.

Conditions for MirrorLink

✓ The device to be connected must have MirrorLink connection.

A list of devices and applications that support the MirrorLink connection can be found on the websites of Car Connectivity Consorcium®.

✓ The MirrorLink application needs to be installed on the mobile device.

✓ Some applications require the data connection in the connected mobile device to be turned on.

Operation

Operation of the running MirrorLink application

› To display the following operation surfaces, press the right rotary control ⊙.

Display of control surfaces at the bottom
Display of control surfaces at the top
Return to the MirrorLink main menu

Restriction

Restriction of SmartLink applications while driving

For reasons of safety, the operation of some SmartLink applications while driving is not possible or only limited.

Functionality restriction of Infotainment with an Android Auto connection

▶ For the duration of the connection, the external device cannot be used as an audio source in the **Media** menu.

▶ By connecting the device, all currently connected Bluetooth® devices will be disconnected and the device will automatically be connected as the main telephone.

▶ For the duration of the connection, no other Bluetooth® devices can be connected to the Infotainment system.

▶ If route guidance is taking place at this moment in Infotainment, then there is the option to start the route guidance in the Android Auto application. And vice versa, if route guidance is currently taking place in the Android Auto application, then there is the possibility that this will be terminated by the start of route guidance by the Infotainment system.

Functionality restriction of Infotainment with an Apple CarPlay connection

▶ For the duration of the connection, the external device cannot be used as an audio source in the **Media** menu.

▶ Connecting the device disconnects all currently connected Bluetooth® devices.

▶ For the duration of the connection, no Bluetooth® devices can be connected to the Infotainment system.

▶ If route guidance is taking place at this moment in Infotainment, then there is the option to start the route guidance in the Apple CarPlay application. And vice versa, if route guidance is currently taking place in the Apple CarPlay application, then there is the possibility that this will be terminated by the start of route guidance by the Infotainment system.

Functionality restriction of Infotainment with an MirrorLink connection

▶ For the duration of the connection, the external device cannot be used as an audio source in the **Media** menu.

▶ If you wish to use the device to be connected in the **Telephone** menu, the device must be paired with and connected to the Infotainment system by Bluetooth® before establishing the MirrorLink connection.

Settings

Apple CarPlay - Connection via USB
› Turn on the Infotainment.
› Turn on the mobile device.
› Connect the mobile device to the front USB input using a cable.
› Choose to connect via Apple CarPlay.

Apple CarPlay - Disconnect
› In the Apple CarPlay menu, tap on the function area “ŠKODA”.
› Tap on ⊗.

Android Auto - Connection via USB
› Turn on the Infotainment.
› Turn on the mobile device.
› Connect the mobile device to the front USB input using a cable.
› Choose to connect via Android Auto.

Android Auto - Disconnect
› In the Android Auto ☺ > menu, tap “Return to SKODA”.
› Tap on ⊗.

MirrorLink - Connection via USB
› Turn on the Infotainment.
› Turn on the mobile device.
› Connect the mobile device to the front USB input using a cable.
› Choose to connect through MirrorLink.

MirrorLink - Disconnect
› In the MirrorLink menu, tap on ▪.
› Tap on ⊗.

Change to another device / connection type
Infotainment allows you to switch between currently connected devices and the connection type.

› Tap on MENU > SmartLink.
› Select the desired device or connection type.

Navigation

Navigation announcements

Infotainment route guidance takes place using graphic driving recommendations and navigation announcements.

The navigation announcements are generated by the Infotainment system. Navigation announcement clarity (e.g. road or city name) cannot always be guaranteed.

Repeat the last navigation announcement
› Tap on 🔊 > ↩.

Turn off navigation announcements
› Tap on 🔊 > 🔇.

Setting navigation announcements
› In the **Navigation** ⚙ > menu *Navigation announcements* .

Navigation overviews

Display menu
› Tap on NAV.

Or:

› Tap on MENU > ➤.

Map overview



A Vehicle position
B Route
C Functional surface for the operation of the map display
D Functional surface of the POI
E Functional surface of the POI list
F Road signs for the affected route section
G Information on the maximum permitted speed

Show the following menu depending on context:

There is no route guidance - search/enter a new destination

Route guidance is taking place
- ▸ Show route plan.
- ▸ Set traffic obstruction manually.
- ▸ Search for destination/enter.
- ▸ End route guidance.

Show the following menu:
- ▸ Save current vehicle position as a flag target.
- ▸ Show list of saved routes.
- ▸ Display list of stored destinations.
- ▸ Display list of last destinations.
- ▸ Route guidance to home address.

POI Search

Map display options


Display for navigation announcement

Settings

Symbols displayed in the map


- Destination position
- Intermediate destination position
- Location of home address
- ★ Favourite position

Map options

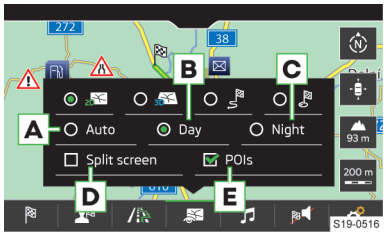

- A Automatic map display in day or night mode (depending on the currently active vehicle lighting)
- B Daytime map display
- C Night-time map display
- D Switch the split screen display on/off
- E Switching on/ off of the selected POI categories display

Map scale

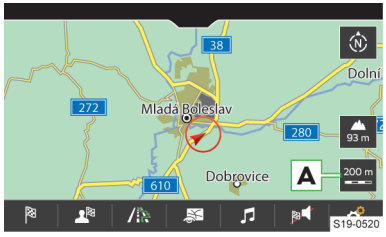

It is possible to change the map scale manually or to turn on the automatic change of scale.

› To **display the operating surfaces** for changing the map scale, tap A.

Types of manual scale change

› Touch the screen with two fingers and pull them apart or close them together.

Or:

› Rotate the regulator.

Switch on/off the automatic change of scale

When the automatic scale is active, the map scale changes automatically, depending on the type of road used and the manoeuvre you are about to undertake.

The automatic scale is only active as long as the map is centred on the vehicle position.

› To **turn on** tap ··· › in the **navigation** menu.

The functional surface is highlighted in green.

› To **turn off** tap › in the **navigation** menu.

The functional surface is highlighted in white.


The turning off occurs likewise when the map is moved or the map scale is changed manually.

Map view in reduced scale

The map scale is reduced for a few seconds and then restored.

› To **display**, tap.

Map orientation

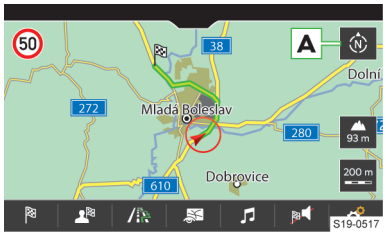

› To change the map orientation, tap A.

The map can be aligned as follows:

The map is oriented to the north

The symbol rotates the vehicle position, the map and the Polarstern Symbol do not rotate.

Map oriented to the direction of travel

The map as well as the Polarstern symbol rotate, the symbol showing the vehicle position does not rotate.

With a map scale greater than 10 km, the map is automatically oriented towards north.


Map centring

The moved map can be centred/aligned to the vehicle, destination or route position.

› Tap **map centring**.

Search for a new destination

› Tap on.

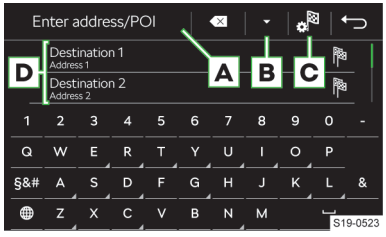

- A Input line
- B Depending on the search mode, the following symbols are displayed

▶ - Display the map as well as the list of the destinations listed in the navigation database

▶ - Display the map as well as the list of online destinations

C - Select the destination search/destination entry

D **Show destination list in context:**

▶ List of last destinations.

▶ List of visited destinations.

Select the destination you are looking for

› Enter the details for the destination search.

› Select the desired destination.

Destination details are displayed with the option of starting route guidance.

Enter a new destination via the address

› Tap on > .

A menu will appear with the destination input options.

› Select the destination via the address.

› Enter the required information.

Destination details are displayed with the option of starting route guidance.

Enter a new destination via the map point

› Tap on > .

A menu will appear with the destination input options.

› Select the destination via the map point.

› Touch the screen to move the desired destination into the cross-hair.

Or:


› Set the GPS coordinates.

› Confirm the destination input.

Destination details are displayed with the option of starting route guidance.

List of stored destinations

› > *Objectives* .

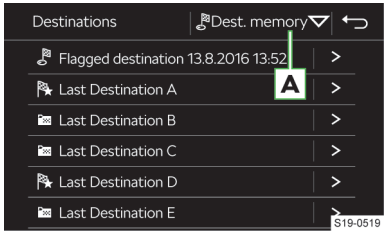

A Select category of stored destinations

▶ - stored destinations

▶ - Flag destination

Vehicle position at the time of storing flag destination.

▶ - saved destinations

▶ - Favourite

▶ - Favourites

▶ - Telephone contact destinations

▶ - online destinations created in the ŠKODA Connect Portal or in the ŠKODA Connect application

Selecting the stored destination

› Select the category of stored destinations.

› Select the desired destination.

Destination details are displayed with the option of starting route guidance.

Selecting destination by tapping the map point

› Tap the desired item or the POI icon in the map.

› Tap to start the route guidance.

Route calculation

A **route** is created by starting route guidance to a destination.

Additional intermediate destinations can be added to the route.

Route calculation is done on the basis of the set route options.

› > *Tap on route options* .

› Select the desired list entries.

With selection of alternative routes turned on, the following menu is displayed after the calculation of a new route:

› To **switching the alternative routes on / off** in the menu **navigation** > *Tap on route options* > *Suggest 3 alternative routes* .

Calculate the most economical route with shortest travelling time and distance travelled – the route is highlighted green.

Calculate the fastest route to the destination, even if a detour is necessary - the route is highlighted in red.

Calculate the shortest route to the destination, even if a longer travelling time is required - the route is highlighted in orange.

Infotainment tries to allow for continued route guidance even if the navigation data is incomplete or there is no data at all for the given area.

The route is recalculated if you ignore driving recommendations or change the route.

The navigation announcements provided may vary from the actual situations, e.g. due to out-of-date navigation data.

Route overview
During route guidance the display of a route overview is possible.

› > *Route details* .

Change route destinations to each other
If intermediate routes are included in the route, it is possible to change them in the route overview and thus change their order, add further destinations or delete destinations.


› In order to **change the order of the destination**, hold the functional area until the destination becomes free.
› Move the destination to the desired position and release the functional surface.

The route is re-calculated.

List of traffic reports
The Infotainment enables the reception of traffic reports, which include information regarding traffic congestion, using TMC (Traffic Message Channel) or online using the online services Infotainment Online.

The list of traffic reports will be updated by Infotainment on a continuous basis.

› To **display traffic reports**, tap MENU > .

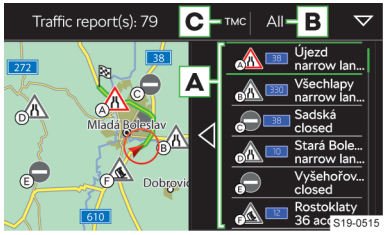

A List of traffic reports
B Filtering of traffic reports
C Symbol for the source of the traffic message

If **no route guidance takes place**, the traffic obstruction in the map is represented by a red line.

If **route guidance takes place**, the traffic obstruction is shown as follows.


▸ **Grey line** - The traffic obstruction is not on the route
▸ **Red line** - The traffic obstruction is on the route, the route will not be recalculated and the route passes through the traffic obstruction
▸ **Orange line** - The traffic obstruction is on the route, the route is recalculated and an alternative route is available

› To **switch the traffic flow indicator off / on** in the menu **navigation** > tap *Map* > *Traffic flow settings* .


NOTICE
ŠKODA AUTO does not accept responsibility for the availability, content, up-to-dateness or evaluation of TMC traffic reports or other data provided by third parties. ŠKODA AUTO is not entitled to examine or adapt this data in any way. The data can only be edited by Infotainment in areas where it is available.

Touch operation


Move map

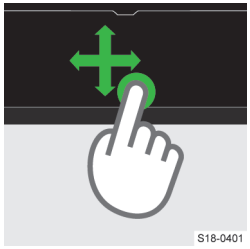

Enter destination by tapping the map item

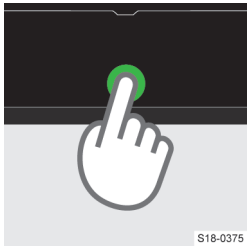

Zoom into the map

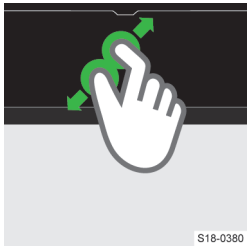

Zoom out of the map



Limitation

Infotainment may give incorrect driving recommendations if the road conditions or the traffic do not match the navigation data.

This can lead to the route guidance being carried out using a different route or proposing a change of direction in a one-way street.

Settings

Avoiding traffic obstructions
If the function is switched on and the Infotainment receives information about a traffic obstruction on the route from online traffic information or the TP traffic announcements, the route is recalculated.

› To **switch the alternative routes on / off** in the menu **navigation** > tap *Tap on route options* > *Dynamic route* .

Showing arrival time information in the destination / driving time
The status line displays information on the time depending on the following setting.

› In the **Navigation** > menu *Advanced settings* > *Time display:* .

Showing information on the destination / waypoint
The status line displays information on the distance and travel time to the destination, depending on the following time setting.

› In the **Navigation** > menu *Advanced settings* > *Status line:* .

Switching display of country-specific speed limits on / off
When the function is switched on, the country-specific speed limits are displayed when crossing national borders.

› In the **Navigation** > menu *Advanced settings* > *Note: National border crossed* .

Or:

› In the **Navigation** > menu *Advanced settings* > *Note: National border crossed* .
› To **display speed limits** in the main menu, tap **Navigation** > *Top speed* .

Switching the display of road signs on motorways and expressways on / off
When the function is switched on, Infotainment displays traffic and information signs on motorways and expressways.

› In the **Navigation** > menu *Map* > *Show traffic signs* .

Switching the fuel warning on / off
When the function is switched on and the fuel supply reaches the reserve area, a warning message appears with the option of going to the nearest petrol station.

› In the **Navigation** > menu *Fuel options* > *Tap Tank warning* .

Towing a trailer
To calculate the correct route for trailer operation, switch on trailer inclusion.

› In the **Navigation** > menu *Tap on route options* > *Tap on Take trailers into account* .

Setting navigation announcements
› In the **Navigation** > menu *Navigation announcements* .
› Select and set the desired menu item.

Favourite POI categories
Favourite POI categories are displayed on the map and provided in the destination search.

› In the **Navigation** > menu *Map* > *Show POIs* > *Select categories for POIs* .
› Set favourite categories.

Setting home address
The defined destination of the home address is displayed in the overview of recommended destinations.

› > *Home address* .
› Define the home address using the current vehicle position or enter the address.

Switching demo mode on / off
In demo mode, the route guidance from the starting point of the demo mode to the selected destination is simulated.

When the function is switched on, Infotainment issues a query before the start of route guidance as to whether the route guidance should be carried out in the normal way or in demo mode.

› To **switch on/off** in the **Navigation** menu tap on > *Advanced settings* > *Demo mode* .

Defining the starting point of the demo mode
› In the **Navigation** > menu *Advanced settings* > *Demo mode* > *Defining the starting point of the demo mode* .

Or:

› Hold down the desired point in the map and choose menu item *Defining the starting point of the demo mode* .

Updating the navigation database

Information on updating the navigation database must be requested from a **ŠKODA** partner, or refer to the following ŠKODA websites:

http://go.skoda.eu/updateportal

Navigation data source Amundsen
The navigation data is stored on an Original SD Card.

In order to ensure the function of the navigation, the Original SD card, with the navigation data, must be inserted in the **respective slot in the external module**.

If the original SD card should be damaged or lost, a new original SD card can be purchased from the ŠKODA Original Accessories.

With a non-original SD Card, navigation does not work.

Determining the navigation database version
› MENU > ⚙ > *System information* .

Online Services

ŠKODA Connect

Regulations

The rights and obligations of the contracting parties with regard to the provision of these services are regulated in an independent agreement. Current legal documents regarding the ŠKODA Connect services can be found on the ŠKODA Connect Portal and the ŠKODA Connect application.

Functionality

The ŠKODA Connect services allow you to connect the vehicle to the online world. They thus represent an extension of the vehicle and Infotainment functions.

The ŠKODA Connect services are not included in the equipment of the vehicle. They can be ordered separately on the ŠKODA Connect Portal website or in the ŠKODA Connect application.

The offer of ŠKODA Connect services depends on the type of vehicle and its trim level, Infotainment and country.

ŠKODA Connect website
The ŠKODA Connect website contains e.g. the current information on the ŠKODA Connect services, the reference to the ŠKODA Connect Portal or the option to download the ŠKODA Connect application.

The website is opened after reading the following QR code or the reference:

http://go.skoda.eu/skoda-connect

ŠKODA Connect Portal website
The ŠKODA Connect Portal website enables, for example, user registration, ordering of ŠKODA Connect services, service management or remote access to the vehicle.

The website is opened after reading the following QR code or the reference:

http://go.skoda.eu/connect-portal

Requirements

Terms of use of the ŠKODA Connect services

✓ A user is registered in the vehicle.

✓ The ŠKODA Connect services are active.

Availability of the ŠKODA Connect services

Availability depends on the following conditions:

- Cellular networks through which the connection to the ŠKODA Connect services is ensured are available.
  - The availability, functioning, connection speed and technology used in the mobile network can be different in the respective countries and are dependent on the mobile network operator.
  - In areas where this is insufficient signal, e.g. in underground garages, functionality may be limited.
- The ŠKODA Connect services are available for your vehicle, infotainment and the respective country.
  - The availability can be checked on the following ŠKODA Connect website:

http://go.skoda.eu/skoda-connect-availability

Availability status of the ŠKODA Connect services

The availability of the services is indicated by the colour of the symbol in the status bar on the Infotainment screen.

- **White** - the ŠKODA Connect services are available.
- **Red** - the ŠKODA Connect services are not available.

ŠKODA Connect application

Functionality

ŠKODA Connect application

The ŠKODA Connect application enables, for example, user registration, ordering of ŠKODA Connect services or remote access to the vehicle.

The application can be downloaded to the mobile device after scanning the following QR code or link:

http://go.skoda.eu/skodaconnectapp

Requirements

✓ The user has one ŠKODA ID account linked to the vehicle.

✓ The ŠKODA Connect services are active in the vehicle.

User registration and activation of the ŠKODA Connect services

Functionality

User registration will provide you with a ŠKODA ID user account that can be used in all ŠKODA applications and services.

User registration for the ŠKODA Connect services can be done at the following locations.

- ŠKODA Connect Portal website.
- ŠKODA Connect application.

When registering, create an S-PIN.
You will need the S-PIN to register for certain ŠKODA Connect services as well as to register for the protected user account.

Settings

User registration

User registration and activation of online services ŠKODA Connect take place on the website ŠKODA Connect Portal or in the application ŠKODA Connect.

To complete registration, access to the e-mail box entered during registration is required.

Activation of online services

In order to aktivieren ŠKODA Connect online services, proceed as follows:

› Turn on the ignition and switch on Infotainment.

› Select the following menu:

SETUP > *ŠKODA Connect (Online Services)* > *Registration*.

Or:

MENU > > *ŠKODA Connect (Online Services)* > *Registration*.

› Enter and confirm the registration PIN you have received during user and vehicle registration on the ŠKODA Connect Portalwebsite or in the ŠKODA Connect application.

› Wait for the registration completion message to appear.

› Confirm any messages on the screen.

Setting personal data protection

Personal data

Personal customer data is collected, processed and used by ŠKODA AUTO in accordance with the provisions of the generally binding legal provisions.

The current declaration on the protection of personal data can be found on the following website:

http://www.skoda-auto.com/other/personal-data

As a contracting party with regard to the use of the ŠKODA Connect services, you must ensure the protection of personal data and the right to privacy.

Inform the vehicle user and passengers that the vehicle is transmitting user data and using localisation services. Failure to do so may violate the rights of vehicle users and passengers.

Functionality

User and vehicle data as well as information from the localization services are sent when using the ŠKODA Connect services.

Localisation services
For the complete functionality of some online services, activated localisation services are required.

Localisation services include, for example, information on the last parking position, area notification or speed notification.

When localisation services are active, the symbol will be displayed in the status line in the Infotainment screen.

Settings

The vehicle user can set the level of protection of personal data by switching the private mode function on / off.

By switching the Private mode function on, the services relating to sending vehicle information and personal data, which are essential for the provision of online services ŠKODA Connect are deactivated.

Switch Private mode function on/off
› To turn on the Private Mode feature, select the following.

SETUP > *ŠKODA Connect (Online Services)* > *Service management* > *Private mode*.

Or:

MENU > > *ŠKODA Connect (Online Services)* > *Service management* > *Private mode*.

After activating the private mode function, the call functions can be used as follows:

▸ The emergency call remains fully functional.
▸ The information and breakdown calls are restricted.

User account

What you should be mindful of

When buying an older vehicle with ŠKODA Connect services, it is possible that the services are active and the main user is the previous owner of the vehicle. The previous owner may also be able to control the vehicle functions and receive information about the user and the vehicle.

Therefore, we recommend removing the previous main user. Then log in with your own user account.

When you register a new user, the previous user is automatically overwritten.

Conditions

For user account management, the availability of the ŠKODA Connect services is indispensable.

Settings

Delete user
› Turn on the ignition and switch on Infotainment.
› Select the following menu:

SETUP > *ŠKODA Connect (Online Services)* > *Registration*.

Or:

MENU > > *ŠKODA Connect (Online Services)* > *Registration*.

› *Delete owner* > *Delete* .
› Confirm the deletion.

By deleting the registered vehicle in the user account on the website ŠKODA Connect Portal the user is also deleted in Infotainment.

Changing the user
› Turn on the ignition and switch on Infotainment.
› Select the following menu:

SETUP > *ŠKODA Connect (Online Services)* > *Registration*.

Or:

MENU > > *ŠKODA Connect (Online Services)* > *Registration*.

› *New owner* > *Change of owner* .
› Enter and confirm the registration PIN code received during registration of the new user and during vehicle registration on the ŠKODA Connect Portal website.
› If necessary, confirm the change by confirming *Change main user* confirm.

Management of online services

Usage

Management of online services
In the service management, it is possible to display information about the online services, the validity of their licence, or to switch the services on/off.

› Select the following menu:

SETUP > *ŠKODA Connect (Online Services)* > *Privacy and services.*


Or:

MENU > ⚙ > *ŠKODA Connect (Online Services)* > *Privacy and services.*

› To **display the designations and the status of the services**, select the desired service.
› For **detailed information about the service** tap >.
› To **switch the services on/off**, tap the Checkbox.

Connection status of the online services

The connection status of the ŠKODA Connect online services is indicated by an icon in the status bar on the Infotainment screen.

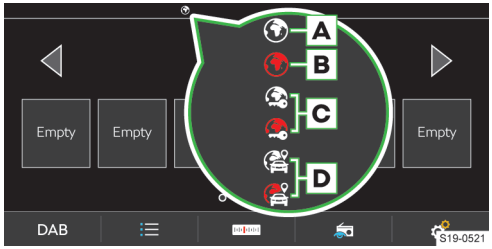

A The ŠKODA Connect online services are available.
At the same time the symbol of the data connection type can be displayed.

B The ŠKODA Connect online services are not available.

C Localisation services are restricted or disabled.
Detailed information about the online services can be displayed in the online services management.

D Localisation services are enabled.
Detailed information about the online services can be displayed in the online services management.

Conditions

✓ A user with active ŠKODA Connect services is registered in Infotainment.
✓ The ŠKODA Connect services are available.

Operation

Show the list of online services
› **MENU** > 👤 > ⚙ > *Privacy and service management* .

Show details of services
› Select the desired service from the list of online services.

Details about the service may contain the following information and functions:

▸ Status of the service
▸ Reason for the unavailability of the service
▸ Name of the group of online services in which the respective service is found
▸ Expiry date of the service's validity
▸ Switch use of the service on/off

Switch use of the service on/off
› **MENU** > 👤 > ⚙ > *Privacy and service management* .
› Select the desired service from the displayed list of online services.
› Activate / deactivate the desired service.

ⓘ The use of the service applies to all user accounts. The service can only be used if it is available.

Settings

Switch off/on Care Connect function
By switching the Care Connect off, the services relating to sending vehicle information and personal data, which are essential for the provision of online services Care Connect, are deactivated.

› To switch off the Care Connectservices, select the following menu:

SETUP > *ŠKODA Connect (Online Services)* > *Service management* > *Care Connect.*

Or:

MENU > ⚙ > *ŠKODA Connect (Online Services)* > *Service management* > *Care Connect.*

ⓘ After switching off the Care Connect function, the call functions can be used as follows:

▸ The emergency call remains fully functional.
▸ The information and breakdown calls are restricted.

Switch off/on Infotainment Online function
By switching off the Infotainment Online services, the services in relation to the provision of online services Infotainment Online are switched off.

› To switch off the Infotainment Onlineservices, select the following menu:

SETUP > *ŠKODA Connect (Online Services)* > *Service management* > *infotainment online.*

Or:

MENU > ⚙ > ŠKODA Connect (Online Services) > Service management > infotainment online.

Switch online services on/off
It is possible to have the online services switched off/on exclusively by a ŠKODA service partner.

After turning off the online services, **none of the** ŠKODA Connect **online services, including the emergency calls** are functioning.


S19-0527

To inform the vehicle user that the ŠKODA Connect online services are **out of order**, the service partner applies the sticker at a visible point in the vehicle (e.g. on the roof cladding).

This sticker **must not be removed**as long as the online services are off.

NOTICE
It should be noted that the emergency, information and breakdown calls are not available after switching off the online services.
For this reason, **no** automatic emergency call is made in the event of a serious car accident.

Information call

Usage

The info call can be used if there are problems with the ŠKODA Connectservices or for information regarding the products and services of the ŠKODA brand.

Conditions

✓ The ŠKODA Connect services are active.
✓ The ŠKODA Connect services are available.

Operation


S19-0363

› Press the i key.

Breakdown call

Usage

The breakdown call can be used in the event of a breakdown.

By pressing the key 🔧 a connection is established with the ŠKODABreakdown Service. At the same time, the vehicle sends information about the vehicle condition and the vehicle position.

Conditions

✓ The ŠKODA ConnectServices are active.
✓ The ŠKODA ConnectServices are available.

Operation


S19-0362

› Press 🔧 the button.

Service schedules

Usage

If the vehicle detects that a service visit is necessary, it will automatically send this information to the service partner of your choice.

The service partner will then contact you and schedule the service visit with you.

Requirements

The service and the coupled functions are available depending on the following conditions:

✓ The service partner is chosen on the ŠKODA Connect Portal website or in the ŠKODA Connect application.
✓ The vehicle type, vehicle equipment and Infotainment type are supported.
✓ The ŠKODA Connect services are active.
✓ The ŠKODA Connect services are available.
✓ The Care Connect services are switched on.
✓ The private mode function is switched off.

Vehicle status report

Usage

The vehicle health report function enables the vehicle status to be tracked online.

The service is available in the ŠKODA Connect application as well as on the ŠKODA Connect Portal website.

The available vehicle data includes, for example, the distance travelled, selected warning messages or service inspection requirements.

Requirements

The service and the coupled functions are available depending on the following conditions:

✓ The ŠKODA Connect services are active.
✓ The ŠKODA Connect services are available.

Remote access to the vehicle

Usage

The service relating to remote access to the vehicle offers the possibility of remotely controlling certain vehicle functions and accessing vehicle information.

Available functions include, for example, the following:

- Trip overviews
- Notification of the alarm triggering
- Localisation service notifications (e.g.location, area or speed notifications)
- Vehicle search, using horn and flashing signals
- Remote-controlled vehicle locking and unlocking

Requirements

The service and the coupled functions are available depending on the following conditions:

✓ The vehicle type, vehicle equipment and Infotainment type are supported.
✓ The ŠKODA Connect services are active.
✓ The ŠKODA Connect services are available.


Starting and driving

Starting with the key

Notes on starting

⚠ **DANGER**
Danger of poisoning by exhaust gases!
- Do not run the engine in an enclosed space.

Positions of the key in the ignition lock

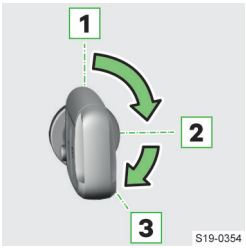

1 Ignition off
2 Ignition on
3 Start the engine

Starting the vehicle with manual transmission
› Secure the vehicle with the parking brake.
› Move the shift lever to the neutral position.
› Keep the clutch pedal depressed.
› Turn key to position 3.
› Release the key.

Starting the vehicle with automatic transmission
› Secure the vehicle with the parking brake.
› Keep the brake pedal depressed.
› Move the selector lever to position P or N.
› Turn key to position 3.
› Release the key.

⚠ **CAUTION**
Danger of unexpected vehicle movement!
- At temperatures below -10°C, start the vehicle with the selector lever in the P position.

Stopping the engine
› Secure the vehicle with the parking brake.
› Turn key to position 1.

On vehicles with automatic transmission, the key can only be removed when the selector lever is in the P position.

⚠ **WARNING**
Steering lock hazard!
- During a journey with the engine stopped, the ignition must always be switched on.

ⓘ **NOTICE**
Risk of engine overheating!
- Do not switch the engine off immediately at the end of your journey after the engine has been running at high loads. Leave it to run at an idling speed for about 1 minute.

Start at the push of a button

Notes on starting

⚠ DANGER
Danger of poisoning by exhaust gases!
▸ Do not run the engine in an enclosed space.

Operating conditions
✓ The vehicle key is located in the vehicle interior.

ⓘ NOTICE
Risk of key loss, possibly of key damage!
The system can detect the key even if it has been forgotten on the vehicle roof.
▸ Always keep the key with you.

Switching the ignition on and off



› Press the starter button.

Starting the vehicle with manual transmission
› Secure the vehicle with the parking brake.
› Move the shift lever to the neutral position.
› Keep the clutch pedal depressed.
› Press the starter button.

Starting the vehicle with automatic transmission
› Secure the vehicle with the parking brake.
› Keep the brake pedal depressed.
› Move the selector lever to position **P** or **N**.
› Press the starter button.

⚠ CAUTION
Danger of unexpected vehicle movement!
▸ At temperatures below -10°C, start the vehicle with the selector lever in the **P** position.

Stopping the engine
› Secure the vehicle with the parking brake.
› Press the starter button.

⚠ WARNING
Steering lock hazard!
▸ During a journey with the engine stopped, the ignition must always be switched on.

ⓘ NOTICE
Risk of engine overheating!
▸ Do not switch the engine off immediately at the end of your journey after the engine has been running at high loads. Leave it to run at an idling speed for about 1 minute.

Starting issues

Troubleshooting

ⓘ NOTICE
Danger of engine damage!
▸ Do not start the vehicle by towing.

The engine does not start
› Switch off the ignition.
› Wait 30 seconds and repeat the starting procedure.
› If the engine does not start, use the jump start cables with the 12 volt vehicle battery of another vehicle » page 124 or seek the help of a specialist garage.

The engine does not start, the display shows a message regarding the immobilizer
› Use the other vehicle key.
› If the engine does not start, seek the help of a specialist garage.

The key cannot be turned in the ignition
› Move the steering wheel back and forth while turning the key.

Starting is not possible with the starter button, the system did not detect the key


illuminates



› Press the starter button with the key.
› If the engine does not start, seek the help of a specialist garage.

ⓘ The key might not be detected if the battery in the key is nearly discharged or the signal is faulty.

The engine cannot be turned off with the starter button
› Hold the starter button or press twice.

The radiator fan keeps running even after the engine has stopped
The radiator fan can continue to run for approximately 10 minutes after the engine is stopped. This is not a defect.

The engine makes noises after the cold start
The increased running noise is due to the briefly increased engine speed. This is not a defect.

START STOP

Usage

The START-STOPP system reduces polluting emissions and the CO_2emissions and saves fuel.

Functionality

If the system determine that the engine is not needed when the vehicle stops, it turns off the engine and starts it again when moving off.

Vehicle with manual transmission
A system-related engine switch-off occurs when stopping, when switching the gear lever into the neutral position, and when releasing the clutch pedal.

A system-related engine start occurs when the clutch pedal is pressed down.

Vehicle with automatic transmission
A system-related engine switch-off occurs when the brake pedal is actuated and the engine is stopped.

A system-related engine start takes place after releasing the brake pedal.

Status display in the instrument cluster display
Ⓐ - Engine is switched off via the START-STOPP system

Ⓐ - Engine is not switched off via the START-STOPP system due to operating conditions that are not met

Display of detailed information in the infotainment screen
CAR > > *Vehicle status*

Or:

MENU > > > *Vehicle status*

Operating conditions

Some conditions are systemic and can neither be influenced nor recognised. Therefore, the system may react differently in situations which seem identical from the driver's perspective.

The driver must fulfil the following conditions.

✓ The driver's door is closed.
✓ The driver has fastened the seat belt.
✓ The driving speed was higher than 4 km/h after the last stop.
✓ No trailer or other accessory is connected to the trailer socket.

Settings

Automatic activation
▸ Upon start-up of the engine.

Deactivate/activate system
› Press the Ⓐ OFF button.

When the system is deactivated, the symbol illuminates in the button Ⓐ OFF.

If a system-related engine switch-off occurs and the system is deactivated, the engine will start.

Troubleshooting

The engine does not switch off when stopping, or it starts before starting up
The system has detected that the engine is running.

Manual gearbox

Operation

NOTICE
Danger of engine damage!
▸ Shift into higher gear before reaching the red area of the rev counter scale.


NOTICE
Danger of gearbox damage!
▸ Depress the clutch pedal all the way down.
▸ If not in the process of changing gear, do not leave your hand on the gearshift lever.

Engaging reverse gear
› Stop the vehicle.
› Depress the clutch pedal completely.
› Move the shift lever to the neutral position.
› Push the gearshift lever down.
› Position this completely to the left or to the right[1].
› Wait briefly.
› Engage reverse gear.

[1] Applies to vehicles with a 1.0 l MPI engine.

Automatic gearbox

Lever positions

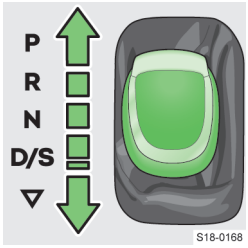

P **Parked vehicle**
The drive wheels are locked.
P Only set the position when the vehicle is stationary.

R **Reverse gear**
R Only set the position when the vehicle is stationary.

N **Neutral**
There is no transmission of engine power to the wheels.

D/S **Forward drive / sports program**
The gear is changed automatically.
In **S** mode, the gear is changed at higher speeds than in **D** mode.

▽ **Choose between D and S (spring-loaded position)**

Moving the selector lever out of the P or N position
lights up - the selector lever is locked



› Press the brake pedal, and at the same time, press the button in the selector lever.

⚠ WARNING
Risk of the stationary vehicle rolling away automatically!
▸ When the selector lever is in the **D/S** position, **R** position or in manual shift mode, secure the vehicle with the brake.

Operation

Starting up
› Keep the brake pedal depressed.
› Start the engine.
› Press the button in the selector lever and set it to the desired position.
› Release the brake pedal and press the accelerator pedal lightly.

Speeding up while driving (kick-down)
› Fully depress the accelerator.

Stopping temporarily (e.g. at a junction)
› Leave the selector lever in the **D/S** position and secure the vehicle with the brake pedal.


Stopping
› Keep the brake pedal depressed.
› Secure the vehicle with the parking brake.
› Press the button in the selector lever and set it to the **P** position.
› Turn off the engine.

Driving in neutral
If the system detects that no gear is engaged while driving, it automatically switches to neutral position.

ECO will be displayed in the instrument cluster.


Requirements for driving in neutral position
✓ **D** mode is chosen.
✓ Neither the accelerator nor the brake pedal is pressed.
✓ The vehicle speed is 20-130 km/h.
✓ There is no device connected to the trailer socket.

Manually switching gear with the selector lever
› To **turn on**, put the selector lever in the **D/S** position to the right (to the left for right-hand drive vehicles).
› To **turn off**, put the selector lever back in the **D/S** position.

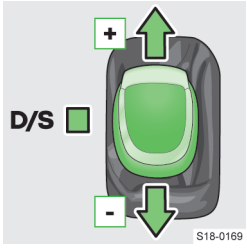

+ Changing up a gear
- Changing down a gear

Manually changing gear with the shift paddles on the steering wheel

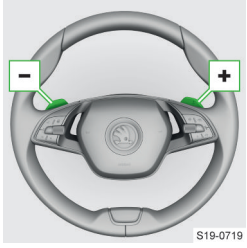

- Changing down a gear
+ Changing up a gear

› To **switch on** the shift paddle, press - or +.
› To **turn off** the shift paddle, hold +.

If none of the shift paddles are pressed for a certain time, manual shift mode turns off automatically.

If the engine threatens to over-rev

▸ The gearbox automatically changes to the next higher gear.

▸ The transmission prevents changing to the next lower gear.

Troubleshooting

The selector lever cannot be moved out of position P in the normal way

› Manually unlock the selector lever » page 104.

Gearbox overheated

illuminates together with ⚠
Message regarding the gearbox overheating

› You may continue driving, exercising appropriate caution.

along with ⚠
Message regarding the gearbox overheating

› Stop driving! Stop the vehicle and stop the engine.

› After the indicator light goes out, your journey can continue.

› If the warning light does not go out, stop driving! Seek the help of a specialist garage.

Gearbox impaired

illuminates together with ⚠
Message regarding the gearbox in emergency mode

› You may continue driving, exercising appropriate caution.

› Immediately seek the help of a specialist garage.

illuminates together with ⚠
Message regarding a gearbox fault


› Stop driving! Seek the help of a specialist garage.

Starting up a vehicle that is stuck

› Adjust the selector lever between D/S and R. The vehicle will then start to rock and be easier to free.


Manual release of automatic gearbox

› Secure the vehicle with the parking brake.

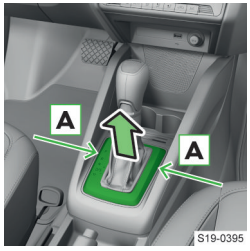

› Insert a flat-head screwdriver or push a similar tool into the gap in the area of arrow A.

› Carefully loosen and lift the quadrant cover.

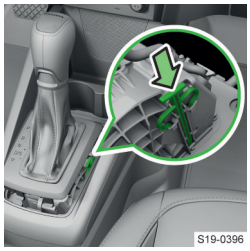

› Press on the plastic part in the direction of the arrow and at the same time press the button on the selector lever.

› Put the selector lever in N position.

Economical driving style

Tips for economical driving and evaluation of driving economy

Tips for economical driving

▸ Avoid unnecessary acceleration and braking.

▸ Follow the gear recommendation in the display of the instrument cluster.

▸ Avoid full acceleration and too high speeds.

▸ Avoid engine idling during longer periods of stationary time.

▸ Do not warm up the engine while the vehicle is stationary. If possible, start your journey as soon as the engine starts.

▸ Observe the prescribed tyre pressure » page 132.

▸ Remove unnecessary ballast.

▸ Remove the roof rack when it is not needed.

▸ Switch on electric consumers only for as long as necessary.


▸ Do not leave the windows open while driving.

Display of evaluation in the infotainment screen

CAR > 🚗 > *DriveGreen*

Or:

MENU > 🚗 > 🚗 > *DriveGreen*

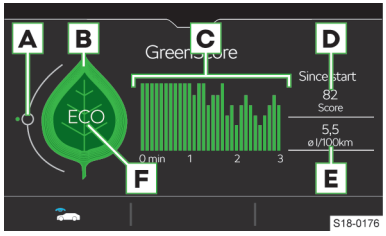

A **Display of steady driving**
When driving steadily, the display is located near the green dot.

B **Leaf**
The greener the leaf, the more economic the driving style. Tapping the screen near the leaf displays tips for reducing fuel consumption and energy consumption.

C **Driving efficiency chart**

Each bar indicates driving efficiency in 5 second increments. The current bar is on the left. The higher the green bars, the more economical the driving style.

D **Point value (0-100)**

The higher the indicated value, the more economical the driving style. Tapping the screen near the value **D** displays a rating for the last 30 minutes of driving.

E **Average fuel consumption**

Tapping the screen near the value **E** displays the average fuel consumption during the last 30 minutes of driving.

F **Information about the current driving**

- **ECO** Economical driving style
- The speed has a negative effect on fuel consumption
- The ride is not steady
- 3▸4 Recommended gear

In Infotainment it is possible to display up to three consumers that are currently making up the largest share of fuel consumption.

CAR > > *Convenience consumers*

Or:

MENU > > > *Convenience consumers*

Consumption-friendly driving

If, while driving, the system detects that no gear is required on a vehicle with automatic transmission, it automatically shifts to neutral. It therefore reduces fuel consumption.

lights up in the instrument cluster.

Towing a trailer

What you should be mindful of

⚠ WARNING

When driving with a trailer, special care is required!

NOTICE

With frequent towing, the vehicle is excessively loaded so this must also be checked between service intervals.

Recommendations for using a trailer

- Adjust the tyre pressure on the vehicle for full load.
- Do not exceed the maximum permissible total weight of the vehicle and the combination weight specified in the technical vehicle documentation (e.g. in the vehicle registration documentation, in the COC document) and on the type plate.
- For trailer operation, consider the current load condition of the vehicle as well as the distribution of the load in the trailer. The coupled trailer increases the rear axle load and can therefore reduce the payload.
- Adjust the headlight range of the headlights according to the load status of the vehicle. The front of the vehicle may lift up when a trailer is being towed and the headlights may dazzle other road users.
- A speed of **100 km/h** should not be exceeded.
- Reduce the speed by releasing the accelerator pedal as soon as a pendulum movement of the trailer is noticeable. Never attempt to stop the trailer from swaying by accelerating.
- If the traffic area behind the trailer can not be viewed, install additional exterior mirrors.
- Apply the brakes in good time. If the trailer is fitted with a trailer brake, apply the brakes gently at first, then brake firmly. This will avoid brake jolts resulting from the trailer wheels locking.
- Select a lower gear before descending to also use the braking force of the engine.

Distribution of the load over the vehicle and trailer combination

- Secure heavy objects against slipping, as close to the trailer axle as possible.
- Transport small and light objects in the luggage compartment.

Permitted trailer loads

The details in the technical vehicle documentation take precedence over the information in this Owner's Manual.

⚠ WARNING

Risk of an accident!

- Do not exceed the permissible trailer load.

Engine type	Gearbox	Permissible trailer load, braked (kg) [a]		Permissible trailer load, unbraked (kg)	
		Fabia	Fabia Combi	Fabia	Fabia Combi
1.0 l/70 kW TSI	Manual gearbox	1000	1000	550	560
	DSG [b]	1000	1000	580	590
1.0 l/81 kW TSI	Manual gearbox	1100	1100	560	570
	DSG [b]	1100	1100	570	580
1.0 l/44 kW MPI	Manual gearbox	800	800	540	550
1.0 l/55 kW MPI	Manual gearbox	800	800	540	550
1.6 l/66 kW MPI	Manual gearbox	1100	1100	550	560
1.6 l/81 kW MPI	Automatic gearbox	1100	1100	560	580

[a] With gradients up to 12%.

[b] Automatic dual-clutch transmission.

Towing eye and towing procedure

Towing lug

Removing the front cap



› Press on the cap and remove it.

Installing the towing eye



› Screw in the towing eye.
› Insert the wheel wrench or similar object through the towing eye.
› Tighten the towing eye.

Rear towing eye




After the towing process

› Unscrew the towing eye.
› Insert the cover cap.

Towing the vehicle

⚠ **WARNING**
Risk of accident!
▸ The tow rope must not be twisted.
▸ When towing, drive at a speed of max. 50 km/h.

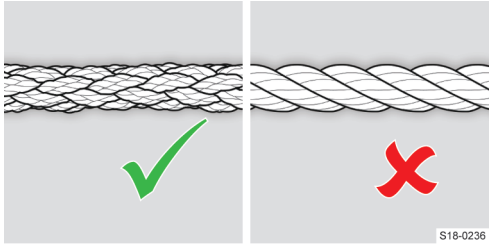

⚠ **WARNING**
Risk of accident!
▸ Use a braided synthetic fibre rope for towing. Do not use a twisted tow rope.

ⓘ **NOTICE**
▸ Always keep the tow rope taut during towing.
▸ Do not exceed a towing distance of 50 km.

ⓘ **NOTICE**
Danger of gearbox damage!
▸ If the gearbox no longer contains any oil, the vehicle must only be towed with the front axle raised clear of the ground or transported on a special breakdown vehicle.
▸ Vehicles with automatic transmission must not be towed without the ignition switched on or with the rear axle raised.

Where should the tow rope or the tow bar be secured?
▸ At the front towing eye
▸ At the rear towing eye
▸ On the ball bar of the factory-installed towing hitch

ⓘ For vehicles with factory-fitted towing device, at the back there is no mount for a screw-in towing eye.

Information for the driver of the towing vehicle
› Drive slowly and smoothly.
› Only accelerate once the rope is taut.

Information for the driver of the towed vehicle
› Move the shift lever to the neutral position or the selector lever to the **N** position.
› If it is not possible to start the engine, switch on the ignition!

⚠ **WARNING**
Risk of accident!
When the ignition is switched off, the brake booster and the power steering do not work. In addition, there is a risk that the steering lock will engage.
▸ If it is not possible to start the engine, switch on the ignition!

Brakes

What you should be mindful of

⚠ **WARNING**
Problems and faults with the brake system can extend the braking distance of the vehicle!

⚠ **DANGER**
Danger of a functional restriction of the brake booster!
▸ When braking in a vehicle with manual transmission, when the vehicle is in gear and at low revs, depress the clutch pedal.

⚠ **DANGER**
Danger of the brakes overheating!
▸ Do not depress the brake pedal unless braking is required.
▸ If the original front spoiler is damaged, ensure the air supply to the front brakes is guaranteed.

Inspecting the brake fluid level

Test conditions
✓ The vehicle is on a horizontal surface
✓ The engine is off

Checking



The fill level must be within the marked range.
› If the level is below the mark **MIN**, do not continue.
› Do not refill liquid.
› Seek the help of a specialist garage.

If the brake fluid level is too low, this will be indicated in the instrument cluster by the illumination of ⓘ is displayed in the status bar. Nevertheless, we recommend checking the brake fluid level regularly directly at the reservoir.

⚠ **WARNING**
Danger of brake failure!
If the fluid level falls significantly within a short time or drops below the mark **MIN**, the brake system may have become leaky.
▸ Stop driving! Seek the help of a specialist garage.

Specification
The brake fluid must comply with standard VW 501 14. This standard complies with the requirements of the FMVSS 116 DOT4 standard.

Changing
Have the brake fluid replaced by a specialist garage.

⚠ **WARNING**
Danger of brake failure!
If the brake fluid change date is exceeded, heavy braking may cause vapour bubbles to form in the brake system.

Troubleshooting

Brake fluid level is too low
ⓘ illuminates

› Stop driving! Seek the help of a specialist garage.

Brake system and anti-lock braking system faulty

illuminates together with

› Stop driving! Seek the help of a specialist garage.

Reduced braking effect

Damp, frozen, salt-affected or corroded brakes can impair the braking effect.

› Clean the brakes by braking several times if traffic conditions allow it.

When the engine is stopped, the brake booster does not work

› Depress the brake pedal more forcefully.

Handbrake

service


⚠ **WARNING**

Risk of accident!

An insufficiently released parking brake will impair the function of the brake system.

▸ Fully release the parking brake before driving.

To back up

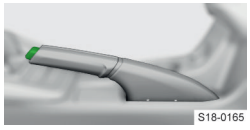

› Pull the lever up to the stop position.

The parking brake (P) lights up.

To solve

› Pull the lever up a little and push in the lock button.

› Press and hold the lock button and pull the lever completely down.

Driver assist systems

Braking and stabilising systems

Overview

Stabilisation control (ESC)

ESC helps to stabilize the vehicle in borderline situations (e.g. when the vehicle starts to skid). ESC brakes the individual wheels to maintain the direction of travel.

flashes - ESC is engaged

Traction control (TCS)

ASR helps to stabilize the vehicle when accelerating or driving on low-grip roads. ASR reduces the drive power transmitted to the wheels when the wheels spin.

flashes - ASR is engaged

Antilock braking system (ABS)

ABS helps maintain control of the vehicle during emergency braking. An ABS intervention is noticeable by pulsating movements of the brake pedal.

Motor Slip Regulation (MSR)

MSR helps to maintain control of the vehicle in the event of a sudden reduction in speed, e.g. on icy roads. If the drive wheels lock, MSR increases the engine speed. This reduces the braking effect of the engine and the wheels can rotate freely again.

Electronic Differential Lock (EDL)

EDL helps to stabilize the vehicle when driving on road surfaces with different grip under the individual wheels. EDL brakes a spinning wheel and transmits power to a different drive wheel.

Electronic Differential Lock (XDL+)

XDL + helps to stabilize the vehicle during fast cornering by braking the inside wheel of the driven axle.

Hill Hold Control

Hill Hold Control helps when starting off on uphill gradients by braking the vehicle for about 2 seconds after the brake pedal is released.

Operating conditions

✓ The gradient is at least 5%.

✓ The driver's door is closed.

Multi-Collision Brake (MCB)

MCB helps to decelerate and stabilize the vehicle after a collision with an obstacle. This reduces the risk of further collisions.

Operating conditions

✓ There has been a frontal, side and rear collision of a certain severity.

✓ The impact speed was greater than 10 km/h.

✓ The brakes, ESC and other required systems remained functional after the impact.
✓ The accelerator pedal is not pressed.

Settings

Deactivating/activating ASR
› Press the button.

Or:

› In Infotainment, select the following menu:

MENU > > > >

Or:

CAR > > >

When deactivated, lights up in the instrument cluster.

goes out on renewed activation.

Deactivating the ASR may be helpful in the following situations:
▸ Driving with snow chains
▸ Driving in deep snow or on very loose ground
▸ Starting up a vehicle that is stuck

Troubleshooting

ESC or ASR faulty/deactivated by the system
illuminates
› Stop the engine and start again.
› If the indicator light does not go out after covering a short distance, seek the help of a specialist garage.

ABS faulty
illuminates
› You may continue driving, exercising appropriate caution. Seek the help of a specialist garage.

Brake system and anti-lock braking system faulty
illuminates together with
› Stop driving! Seek the help of a specialist garage.

Front Assist

Functionality

Front Assist monitors the distance to the vehicle ahead and points out when the safety distance is exceeded. In borderline situations, it helps to avoid a collision by braking interventions.

Status display in the instrument cluster display
illuminates - safe distance below (only in MAXI DOT display)

illuminates - warning in case of collision

Automatic braking if there is a risk of a collision
If there is a risk of a collision, the following symbol is illuminated as a warning from the isolation box. If you do not respond to the warning, the vehicle will slow down.

At a driving speed of up to 30 km / h, the vehicle is braked without prior warning.

Automatic braking can be stopped by pressing the accelerator pedal or by a steering intervention.

With automatic braking, the pressure in the brake system increases. The brake pedal cannot be operated by using the pedal as normal.

⚠ **WARNING**
Risk of an accident!
Front Assist does not respond to crossing or oncoming vehicles.

Operating conditions

✓ The parking aid is activated.
✓ The driving speed is higher than 5 km/h.

Function restriction

The function may be restricted or unavailable in the following cases:
▸ About 30 seconds after starting
▸ When driving around a sharp bend
▸ During an ESC intervention

Settings


Automatic activation
Front Assist is automatically activated when the ignition is switched on.

Activation/deactivation in the instrument cluster
In the MAXI DOT display in the Assist systems menu item.

In the segment display in the Front Assist menu item.



› Hold the A button up or down. The Front Assist menu item is displayed.
› Press the button B.

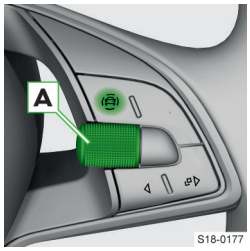

› Press the button. The Front Assist menu item is displayed.
› Press dial A.

Activation/deactivation
In the Infotainment system, in the menu **CAR** > > > .

Or:

MENU > > > > .

Show system deactivation in the display of the instrument cluster
illuminates together with ⚠

Deactivate Front Assist when handling the vehicle on a truck, a car ferry etc.

Troubleshooting

Front Assist is not available
illuminates together with ⚠

› Clean the front radar sensor.
› Stop the engine and start again.
› If Front Assist is still unavailable, check the brake lights on the vehicle or on the attached trailer.
› If the brake lights are working and Front Assist is still unavailable, seek the help of a specialist garage.

There was an unfounded warning or system intervention
› Clean the front radar sensor.
› If the system is not working properly, disable Front Assist and seek the help of a specialist garage.

Speed limiter

Functionality

The speed limiter controls the maximum driving speed according to the set speed limit.

If the limit is exceeded when driving downhill, brake the vehicle with the brake pedal.

Status display in the instrument cluster display
illuminates - the cruise control is activated.
flashing - the set limit is exceeded


When the regulation starts highlighted and the set limit is displayed.

Operating conditions

✓ The driving speed is higher than 30 km/h.


Operation

Variant without cruise control

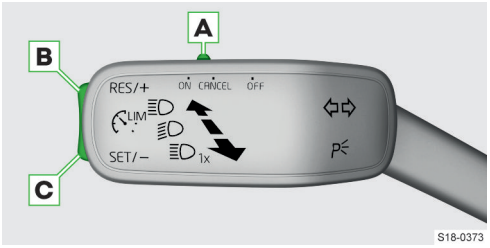

A **ON** Activate limiter (control inactive)
OFF Deactivate limiter
CANCEL Interrupt control (sprung position)
B **RES/+** Resume control[1] / Increase limit
C **SET/-** Start control with current speed / Reduce limit

Variant with cruise control

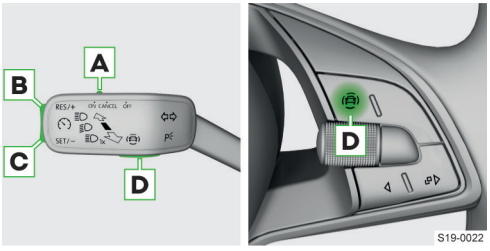

A **ON** Activate cruise control (condition for the subsequent activation of the limiter).
To **enable the speed limiter**, press the button D and in the instrument cluster choose the menu item *Speed limit* .
OFF Deactivate limiter
CANCEL Interrupt control (sprung position)
B **RES/+** Resume control[1] / Increase limit
C **SET/-** Start control with current speed / Reduce limit

[1] If no speed limit is set, the current speed is set as the speed limit.

D Show menu of assist systems - Possibility of switching between cruise control and speed limiter

Switching to cruise control interrupts the control.

Adjusting the speed limit with the buttons B and C

By pressing in steps of **1 km/h**.

By holding in steps of **10 km/h**.

Limit exceeded

› **Fully depress** the accelerator.

Control will continue as soon as the vehicle has decelerated to below the set limit.

Troubleshooting

Speed limiter faulty

LIM or ERR illuminates

› Seek the help of a specialist garage.

Cruise control system

Functionality

The cruise control system maintains the set speed without the accelerator pedal having to be operated.

This, however, is only possible to the extent permitted by the engine output and braking power of the vehicle.

⚠ **WARNING**

Risk of the cruise control system starting unintentionally!

▸ Deactivate cruise control after use.

Status display in the instrument cluster display

illuminated - the cruise control system is activated

illuminated - cruise control is active


When cruise control starts, the set speed is displayed.

Operating conditions

✓ The driving speed is higher than 20 km/h.

Operation

Operating with the lever

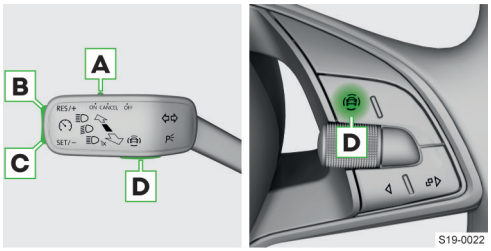

A **ON** Activate cruise control (cruise control deactivated)

OFF Deactivate cruise control

CANCEL Interrupt control (sprung position)

B **RES/+** Resume cruise control[1]/Increase speed

C **SET/-** Start control with current speed/Reduce limit

D Show menu of assist systems - Possibility of switching between cruise control and speed limiter

Accelerate temporarily

› Depress the accelerator pedal.

Releasing the accelerator pedal will cause the speed to drop again to the set speed.

Interrupting cruise control

▸ After pressing the brake pedal

▸ After an ESC intervention

Troubleshooting

Cruise control system faulty

or ERR illuminates

› Seek the help of a specialist garage.

Adaptive Cruise Control (ACC)

Functionality

ACC control

ACC maintains the set speed. When your vehicle approaches the vehicle in front, ACC will automatically start to maintain the set distance to this vehicle.

Maintaining the set speed and the distance will hereinafter be referred to as **Control**.

[1] If no speed is set, the current speed is adopted.

⚠ **WARNING**
ACC does not respond to stationary objects or to crossing or oncoming objects.

ACC is intended primarily for use on motorways.

Speed range
ACC allows a speed setting in the range of 30-160 km/h.

If control is started at a speed of less than 30 km/h on vehicles with an automatic transmission, the speed is automatically increased to 30 km/h or controlled according to the speed of the vehicle ahead.

Distance level
The distance to the vehicle ahead can be adjusted to five different levels.

⚠ **WARNING**
▸ Maintain a minimum distance in accordance with the country-specific legal regulations.

Automatic stop and start
A vehicle with an automatic transmission can be decelerated to a stop using the ACC and start moving again. Control is disconnected in case of longer holding periods.

Overtaking
If your vehicle changes to the fast lane and no vehicle is detected in front, ACC accelerates up to the set speed.

Status display in the instrument cluster display
illuminates - ACC is activated


illuminates together with - Control is active
When the control starts, the set speed is displayed.

illuminates - ACC does not decelerate sufficiently

› Depress the brake pedal.

Operation

Operating with the lever

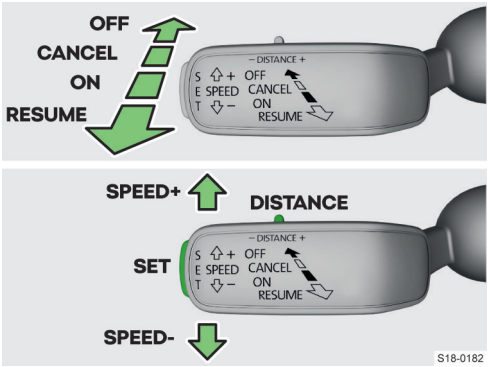


ON	Activate ACC (control inactive)
RESUME	Start or resume control/Increase speed in steps of 1 km/h (sprung position)
CANCEL	Stop control (sprung position)
OFF	Deactivate ACC
SPEED +	Increase speed in steps of 10 km/h
SPEED –	Reduce speed in steps of 10 km/h
DISTANCE	Set distance level
SET	Start control/Reduce speed in steps of 1 km/h

Starting control with the current speed
› Tap on **SET**.

Or:

› If no speed is saved, move the lever to the sprung position **RESUME**.

Set distance level
› Move the **DISTANCE** switch to the sprung position **–** or **+**.

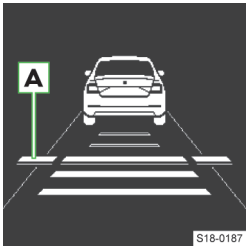

Line A appears in the display, indicating the change in distance.

› Use the **DISTANCE** switch to set the desired distance level.

For temporary acceleration
› Depress the accelerator pedal.

The vehicle accelerates and control is temporarily interrupted. Upon releasing the accelerator, control is resumed.

Interrupting cruise control

- ▶ After pressing the brake pedal
- ▶ By operating the clutch pedal for a long time
- ▶ After an ESC intervention
- ▶ After deactivation of the ASR

Resuming control

› If a speed is stored, move the lever to the sprung position **RESUME**.

The vehicle is controlled at the set speed. The set speed is shown in the instrument cluster display.

Function restriction


Do not use the ACC in the following cases:

- ▶ The vehicle is making a sharp turn.
- ▶ The vehicle is travelling on a sloping road or in ruts.
- ▶ When the driving lane is too narrow.
- ▶ The vehicle drives through a construction site.

⚠ **WARNING**


- ▶ Be particularly attentive and alert in the following situations.

When cornering

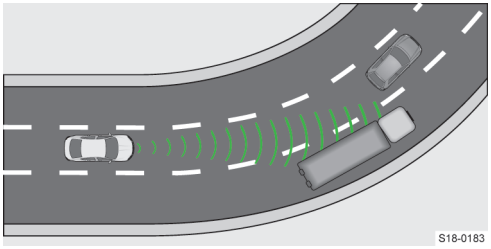


When cornering, a vehicle in the next lane may enter the detected area. Your vehicle will be controlled according to this vehicle.

Narrow or staggered vehicle

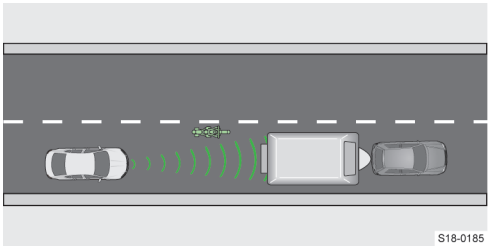


ACC detects a narrow or staggered vehicle only when it is in the area covered by the radar.

Lane change by another vehicle

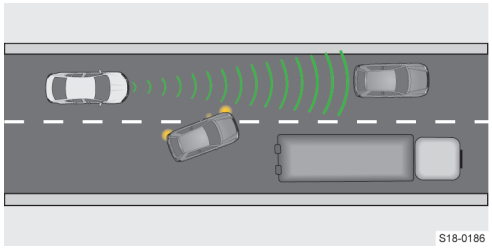

A vehicle that changes to the lane a short distance away may not be recognized by the ACC in time.

Stationary vehicle

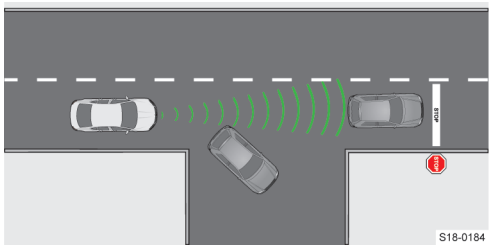

If a vehicle in front turns and there is a stationary vehicle in front of this vehicle, the ACC must not respond to the stationary vehicle.

Vehicles with special load or special bodies

A load or superstructure that protrudes outside the vehicle might not be detected by the ACC.

Settings

Activation / deactivation and setting

In the Infotainment system, in the menu **CAR** > > .

Or:

MENU > > > .

- ▪
  - ▶ *Driving programme:* - Sets the vehicle acceleration when the ACC is activated
  - ▶ *Last distance selected* - Switch on/off the last distance selected
  - ▶ *Distance:* - Setting the distance to vehicles in front

Troubleshooting

ACC not available

illuminates together with ⚠

› Stop the engine and start again.

› If ACC is still unavailable, check the brake lights on the vehicle or on the attached trailer.
› If the brake lights are working and ACC is still unavailable, seek the help of a specialist garage.


Blind Spot Detect

functionality


The system draws attention to vehicles travelling in the same direction in the next lane in blind spots.

The system warns of a vehicle in the blind spot through the indicator light in the exterior mirror on the vehicle side, where the vehicle is recognized.

Driving situations in which a system warning is given

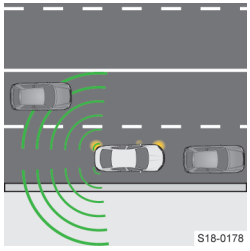

Your vehicle will be overtaken. The faster your vehicle is overtaken, the sooner the warning is given by the indicator light.

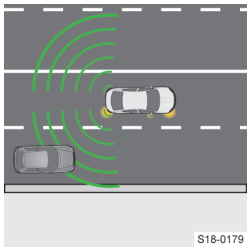

Your vehicle is overtaking another vehicle at a speed of max. 10 km higher. If the speed is higher during the overtaking process, no warning will be provided by the indicator light.

Note

illuminated - there is a vehicle in the blind spot

flashing - there is a vehicle in the blind spot, the flashing light is on the same side

Operating conditions

✓ The driving speed is higher than 15 km/h.
✓ No accessories are connected to the trailer socket.

Restriction

The system cannot detect lane width. For this reason, it may, for example, draw attention to a vehicle in a distant lane in the following cases.

▸ Driving on a road with narrow lanes or on the lane edge.
▸ Driving round bends.

The system can draw attention to objects along the road, such as high guard rails or noise barriers.

The system might not warn of a vehicle e.g. in the following cases, or a warning may only be issued incorrectly.

▸ Unfavourable weather conditions.
▸ A very fast approaching vehicle.
▸ When going round a sharp bend or a roundabout.

Settings

The system settings are made in the display of the instrument cluster in menu item *Assist Systems*.

The system settings are made in the infotainment system in the following menu.

CAR > > >

Or:

MENU > > > >

Troubleshooting

Message regarding system unavailability
› Stop the engine and start again.
› If the system is still not available, seek the help of a specialist garage.

Driver Alert fatigue detection assistant

Functionality

Driver Alert evaluates the steering behaviour. If it detects fatigue in the driver, a break is recommended. In the display of the instrument cluster, the following symbol lights up from the isolation box.

⚠ **WARNING**
There will be no system warning during the so-called micro-sleep.

Resetting the break recommendation
The break recommendation is reset in the following cases:

▸ The vehicle stops and the ignition is switched off
▸ The vehicle stops, the seat belt is removed and the driver's door is opened
▸ The vehicle stops for more than 15 minutes

In some situations, the system may erroneously issue a break recommendation.

Operating conditions

✓ Driving speed between 60-200 km/h.

Settings

Activation/deactivation
In the Infotainment system, in the menu CAR > ⚙ > 🚗.

Or:

MENU > 🚗 > ⚙ > 🚗.

Park Assist systems

Park Pilot parking aid


Functionality

If an obstacle is detected, the Infotainment will display a visible message and an audible signal will sound.

The interval between the signals becomes shorter as the clearance is reduced. At a distance of less than 30 cm from the obstacle, a continuous tone sounds.

Display

The recorded areas vary according to the equipment.

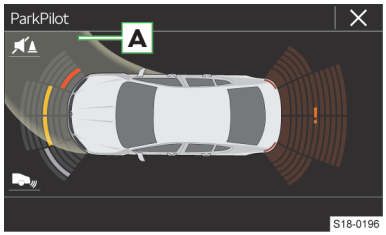

A Route controlled at the current steering angle

🔊 Acoustic signals on/off

🎥 Change to the rear view camera display

! System fault

■ Obstacle at a distance of less than 30 cm

■ Obstacle at a distance of more than 30 cm

□ Obstacle outside the route

Operating conditions

✓ The driving speed is lower than 15 km/h.
✓ No accessories are connected to the trailer socket.

Turn on/turn off

Switching on
› Engage reverse gear.

Or:

› Press the P🔊 button.

Automatic switch-on during forward travel
When approaching an obstacle at a speed of less than 10 km/h.

Switching off
› Disengage reverse gear.

Or:

› Press the P button.

Automatic switch off
The driving speed is higher than 15 km/h.

Function restriction

In the following cases, the system does not have to issue a warning of an obstacle, or the warning may be issued incorrectly:

- If the weather conditions are unfavourable.
- The detected obstacles are moving.
- Sensor signals are not reflected by the surface of the obstacles.
- It is a small obstacle, e.g. a stone or a pillar.

Settings

The system settings are made in the infotainment system in the following menu:

CAR > > P

Or:

MENU > > > P

Troubleshooting

After switching on, an audible signal sounds for 3 seconds and there is no obstacle near the vehicle
› Seek the help of a specialist garage.

After switching on, the symbol P flashes in the button
› Seek the help of a specialist garage.

After switching on, not all scanned areas are displayed on the Infotainment screen
› Move the vehicle a few meters forwards or backwards.
› If the scanned areas are still not displayed, seek the help of a specialist garage.

Rear view camera


Functionality

When reversing, the area behind the vehicle is displayed in the Infotainment screen complete with orientation lines.

The camera is equipped with a cleaning system. Cleaning takes place automatically when the rear window is washed.

Orientation lines and functional surfaces


Orientation lines

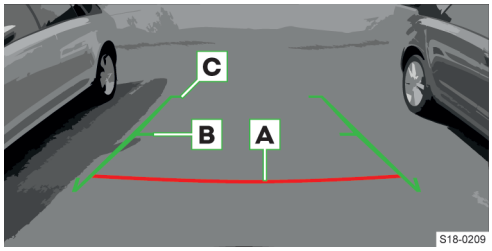

A Distance about 40 cm
B Distance about 100 cm
C Distance about 200 cm

The distance between the side lines corresponds approximately to the vehicle width including mirrors.

Function surfaces

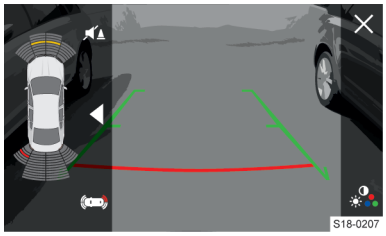

/ Turns off the display of the area behind the vehicle

Brightness, contrast and colour settings of the screen

Switching audible parking signals on/off

◀/▶ Switching the parking aid view on/off.

Parking aid full screen view.

Operating conditions

✓ Boot lid closed
✓ Ignition on
✓ Driving speed less than 15 km/h

Operation

Switching on
› Engage reverse gear.

Switching off
› Disengage reverse gear.


Restriction

The camera image is distorted in contrast to the naked eye. The display may only be used to estimate the distance.

Some items may not be displayed properly on the screen. These include narrow columns, wire mesh fences, grids or road bumps.


Rear Traffic Alert

Functionality

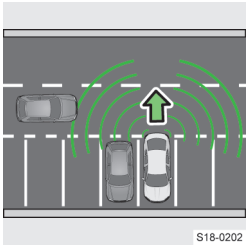

When reversing, the Rear Traffic Alert warns of approaching vehicles.

Vehicle with Parking Aid
If an approaching vehicle is detected in the area behind your vehicle, a graphical warning is displayed in the Infotainment. At the same time, a continuous tone sounds.

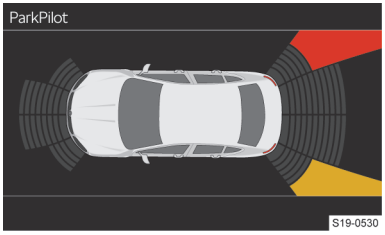

- Vehicle in collision area - danger of collision!
- Approaching vehicle

Vehicle without Parking Aid
If an approaching vehicle is detected in the area behind your vehicle, the a warning is displayed in the instrument cluster display, indicating to the driver to monitor the traffic behind. At the same time, an acoustic signal sounds.

Operating conditions

✓ No accessories are connected to the trailer socket.

Function restriction

Manoeuvre Assist's functionality may be limited in unfavourable weather conditions.

Settings

Activation/deactivation in the instrument cluster display
In the menu *Assist systems*.

Activation/deactivation in Infotainment
In the following menu:

CAR > > P

Or:

MENU > > > P

Troubleshooting

Message regarding system unavailability
› Stop the engine and start again.
› If the system is still not available, seek the help of a specialist garage.

Engine, exhaust system and fuel

Bonnet


Opening the bonnet

Before opening


› Make sure the windscreen wiper arms are folded down onto the windscreen.

› Keep everyone away from the engine compartment.


Opening

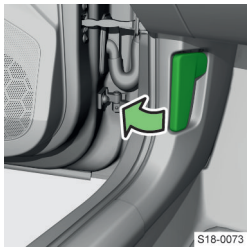

› Pull the release lever underneath the dash panel.

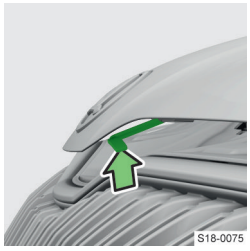

› Release the lock.

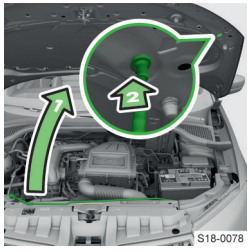

› Open the bonnet.

› Remove the bonnet stay from the holder and insert the end of the stay into the opening in the bonnet.

Closing

› Lift the bonnet.

› Unhook the bonnet stay and insert it into the holder.

› Fold the bonnet down and release it with a distance of 30 cm remaining.

› Check that the bonnet is closed.

NOTICE

▸ Do not press down on an unclosed bonnet.

▸ Open and close the flap again.

Engine oil

Checking the fill level and topping up

Test conditions

✓ The vehicle is on a horizontal surface

✓ The parked engine is warm


Checking the level

› Wait a few minutes for the engine oil to flow back into the oil sump.

› Remove the dipstick and wipe with a clean cloth.

› Insert the dipstick as far as it will go and pull it out again.

› Read the oil level and push the dipstick back in again.

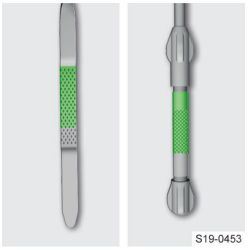

The oil level must be within the marked range.

NOTICE

Risk of damage to the engine and the exhaust system!

▸ The oil level must not be outside the marked range. If it is not possible to top up the engine oil or if the oil level is above the marked range, do not continue driving. Stop the engine and seek the help of a specialist garage.

▸ Do not use any oil additives.

Consumption

Depending on driving style and operating conditions, the engine consumes some oil, up to 0.5 l/1000 km. Consumption may be higher over the next 5000 km.

Refilling

› Unscrew the cover of the engine oil filler opening.

› Top up the oil to the correct specification in 0.5 litre portions.

› Check the oil level.

› Screw on the cover of the engine oil filler opening.

Specification

Ask a specialist garage for the correct engine oil specification for your vehicle.

If no oil of the correct specification is available, **max. 0.5 l** of oil with the following specifications may be used until the next oil change:

▸ VW 504 00, VW 508 00, ACEA C3, ACEA C5

Changing

Have the oil changed by a specialist garage.

Troubleshooting

Engine oil pressure too low

flashes, lights up at the same time ⚠

› Check the engine oil level.

The oil level is OK, the warning light continues to flash:

› Stop the engine and seek the help of a specialist garage.

Engine oil level too low

illuminates together with ⚠
Message regarding required engine oil top up

› Check the engine oil level, top up with oil if required.

Engine oil level too high

illuminates together with ⚠
Message regarding the need to reduce the engine oil level

› Check the engine oil level.

The oil level is too high:

› Drive on, exercising appropriate caution.
› Seek the help of a specialist garage.


Engine oil level sensor impaired

illuminates together with ⚠
Message regarding the engine oil sensor

› Drive on, exercising appropriate caution.
› Seek the help of a specialist garage.

Coolant

Coolant temperature gauge

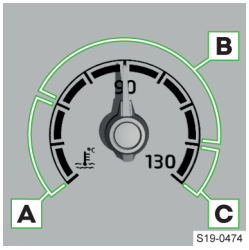

A Cold area
› Avoid high engine speed.
B Operating range
C High temperature range

Checking the fill level and topping up

Test conditions

✓ The vehicle is on a horizontal surface
✓ The engine is turned off and cooled

Checking the level



The fill level must be within the marked range.

› If the fill level is below the mark MIN, top up the coolant.

NOTICE
Danger of damage to the engine compartment!
▸ Do not top up the coolant above the marked area. The coolant could be forced out of the cooling system when heated.

NOTICE
There must be a small quantity of coolant in the tank.
▸ Do not add coolant when the tank is empty.
▸ Stop driving! Seek the help of a specialist garage.

Refilling

CAUTION
Risk of scalding!
The cooling system is pressurised.
▸ Do not open the cap of the coolant expansion tank while the engine is warm. Let the engine cool down.

› Place a wipe on the lid of the tank and carefully unscrew the lid.
› Refill with coolant of the correct specification.
› Screw on the cap until it clicks into place.

Specification
To refill the coolant additive use G12evo (TL 774 L).

NOTICE
Risk of damage to the cooling system and the engine!
Adding coolant that does not conform to the correct specification can reduce the corrosion protection of the cooling system.

Troubleshooting

Coolant level is too low

illuminates together with ⚠
Message concerning the required coolant check

› Check the coolant level.

If the coolant level is OK:

› Check the fuse for radiator fan, replace if required » page 125, *Replacing a fuse*.

If the fuse is OK but the indicator light lights up again:

› Stop driving! Seek the help of a specialist garage.

Coolant temperature too high

illuminates together with ⚠
Report regarding the engine overheating

› Stop driving.
› Stop the engine and allow it to cool.
› Drive on after the indicator light goes out.

Engine fault

illuminates together with ⚠

› Stop driving!

› Stop the engine and seek the help of a specialist garage.

There is no coolant of the correct specification available

› Top up with distilled or demineralised water.
› Have the correct coolant mixing ratio corrected by a specialist garage as soon as possible.

Another substance was used for topping up, other than distilled or demineralised water:

› Have the coolant changed by a specialist garage.

It is not possible to top up with a sufficient amount of coolant

› Stop driving.
› Stop the engine and seek the help of a specialist garage.

There is a loss of coolant

› Top up the coolant and seek the help of a specialist garage.

Engine electronics

Troubleshooting

Petrol engine control faulty

EPC illuminates
Driving in emergency mode is possible - a noticeable reduction in engine performance may occur.

› Continue driving, exercising appropriate caution, and seek the help of a specialist garage.

Particle filter

Troubleshooting

Clogged particle filter

illuminates together with ⚠

› Clean the filter.

When the indicator light is on, it must be assumed that fuel consumption will be higher, engine power will be reduced, and the START-STOPP function will not be available.

Filter cleaning

Conditions for cleaning

✓ The engine is warm.
✓ For vehicles with manual transmission, observe the gear recommendation shown in the display of the instrument cluster.

Cleaning procedure

› Drive at a speed of at least 80 km/h at engine speeds between 3000-5000 rpm.
› Release the accelerator pedal and let the vehicle roll with the gear engaged for a few seconds.
› Repeat this procedure several times.

If the filter is successfully cleaned, the indicator light goes off.

If the indicator light does not go off within 30 minutes, no filter cleaning was performed.

› Continue driving, exercising appropriate caution, and seek the help of a specialist garage.

Exhaust control system

Troubleshooting

Emission control system faulty

illuminates
Driving in emergency mode is possible - a noticeable reduction in engine performance may occur.

› Continue driving, exercising appropriate caution, and seek the help of a specialist garage.

Fuel filler flap

Opening the fuel filler flap



› Press the flap and open it.

Petrol

What you should be mindful of

⚠ **DANGER**
Risk of death!
Fuel and fuel vapours are explosive.

NOTICE
Risk of serious damage to the engine and the exhaust system!
▸ **Never run the fuel tank completely empty!**

If you would like to operate your vehicle in a country other than that intended for vehicle operation, please contact a ŠKODA Partner. They will let you know whether a suitable fuel is offered in the associated country.

Regulations

Standards
Petrol must comply with European standard EN 228 (in Russia, GOST 32513-2013).

Only use **unleaded petrol** that contains **max** 10% bioethanol **(E10)**.

We recommend using petrol with additives, which is available at petrol stations at the petrol pumps.

Octane number
Use the petrol with the octane number prescribed for your vehicle.

Petrol with an octane number that is one **higher** than the one prescribed for your vehicle can be used without restriction.

NOTICE
Risk of damage to the engine and the exhaust system!
▸ When petrol with a lower than the prescribed octane is used, only continue driving at mid-range engine speeds and with minimal strain on the engine.
▸ Refuel using petrol of the prescribed octane number as soon as possible.
▸ Do not use petrol with an octane number that **lower** than **91**!

Prescribed petrol 95 / min. 92 or 93 RON / ROZ
We recommend using petrol **95** ROZ.

Optionally, the petrol **92** or. **93** ROZ can be used (slight power loss, a slightly increased fuel consumption).

In an **emergency**, **91** RON petrol may be used (low power loss, slightly increased fuel consumption).

Specified petrol is unleaded, min. 95 RON / ROZ
Use min. **95** ROZ petrol.

Using higher octane petrol than 95 RON may result in improved performance and lower fuel consumption.

In an **emergency 91**. **92** or. **93** RON may be used (low power loss, slightly increased fuel consumption).

Prescribed petrol 98 / (95) RON / ROZ
We recommend using petrol **98** ROZ.

95 RON petrol may be used as an option (low power loss, slightly increased fuel consumption).

In an **emergency 91**. **92** or. **93** RON may be used (low power loss, slightly increased fuel consumption).

Additive

NOTICE
Risk of damage to the engine and the exhaust system!
▸ Do not use petrol containing metal-based additives, e.g. manganese, iron, lead, and do not use, for example, any LRP-petrol - lead replacement petrol.
▸ Do not add any additional additives to the petrol in accordance with EN 228.
▸ If petrol is not used in accordance with EN 228, we recommend obtaining information from a specialist company regarding the possible use of petrol additives approved by ŠKODA AUTO.

Requirements for refuelling

✓ Vehicle unlocked
✓ Ignition off

Refilling

› Open the tank flap.



› Turn the tank cap in the direction of the arrow and remove it.
› Place the tank cap on the tank flap.
› Insert the fuel nozzle into the fuel filler neck up to the stop and refuel.
› Do not continue refuelling after the fuel nozzle switches off.
› Remove the fuel nozzle and put it back on the petrol pump.
› Place the fuel cap on the fuel filler neck and turn it in the opposite direction to the arrow until it clicks into place.
› Close the tank flap and click into place.

Troubleshooting


If fuel other than unleaded petrol has been used as per standards applicable to your vehicle

› Neither start the engine nor switch on the ignition.

› Seek the help of a specialist garage.

Technical data

The fuel prescribed for your vehicle is indicated on a sticker on the inside of the fuel filler flap.

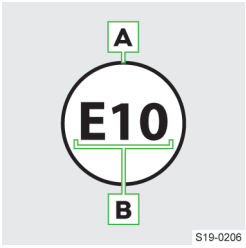

A Unleaded petrol

B Organic share as a percentage

The fuel tank has a capacity of about 45 litres, including a reserve area.

illuminates - the fuel level has reached the reserve area.

12 volt vehicle battery and fuses

12 volt vehicle battery

What you should be mindful of

Explanation of the warning symbols on the 12-volt vehicle battery

Wear safety goggles!

The battery acid of the 12-volt vehicle battery is very caustic. Wear gloves and eye protection.

Keep fire, sparks and open light away from the 12 volt vehicle battery! Do not smoke!

When charging the 12 volt vehicle battery, a highly explosive gas mixture is produced!

Keep children away from the 12 volt vehicle battery!

Refer to the owner's manual!

Functionality - Protection against discharge of the 12 volt vehicle battery

Possible causes for the discharge of the 12 volt vehicle battery

▸ Worn 12 volt vehicle battery

▸ Frequent short journeys

▸ Low temperatures

▸ Vehicle stationary for a long period of time

Automatic system-related discharge protection measure with regard to the 12 volt vehicle battery

▸ Increasing the engine idling speed

▸ Switching off certain consumers or limiting their power

Recommended measure to be taken when vehicle is stationary for more than three weeks

› Disconnect the ⊖ terminal of the 12 volt vehicle battery.


Checking and charging the 12 volt vehicle battery

Checking the condition

The condition of the 12 volt vehicle battery is checked by a specialist garage during servicing.

Checking the acid level


Applies to a 12 volt vehicle battery with an acid level indicator.

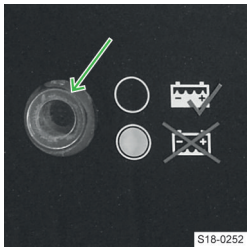

› Tap on the indicator before testing, to clear air bubbles.
▸ Black colour - the acid level is OK.
▸ Colourless or pale yellow colour - acid level is too low, the 12 volt vehicle battery must be replaced.

Requirements for charging a 12 volt vehicle battery
✓ Ignition off
✓ Power consumers switched off

12 volt vehicle battery charging
To charge the 12 volt vehicle battery fully, set a charging current of max. of 0.1 times the battery capacity.

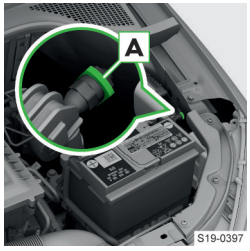

Earth point

› Connect the ⊕ terminal of the charger to the ⊕ terminal of the 12 volt vehicle battery.
› Connect the ⊖ terminal of the charger to the earth point A.
› Plug the charger's power cable into the socket and switch on the device.
› After charging, switch off the charger and unplug the power cable from the socket.
› Disconnect the charger terminals from the 12 volt vehicle battery.

⚠ WARNING
Risk of explosion!
▸ During charging, hydrogen is released. An explosion can also be caused by sparks, for example, when disconnecting or loosening the cable connector.
▸ Never charge a frozen or thawed 12 volt vehicle battery.
▸ Do not carry out the so-called quick charging of the 12 volt vehicle battery yourself, but have it carried out by a specialist garage.

ⓘ NOTICE
A flat 12 volt vehicle battery can freeze easily!

Troubleshooting

The 12 volt vehicle battery does not charge while the engine is running
illuminates together with ⚠
› Seek the help of a specialist garage.

Engine fault
illuminates together with ⚠
› Stop driving!
› Stop the engine and seek the help of a specialist garage.

Disconnecting, connecting and replacing

⚠ CAUTION
Risk of fire!
▸ Do not mix up the connection cables.

Disconnecting
› Close all electrically operated windows.
› Switch off the ignition and any connected power consumers.
› Disconnect the ⊖ terminal and then the ⊕ terminal.

Connecting
› Connect the ⊕ terminal and then the ⊖ terminal.

After switching on the ignition, the indicator lights light up from the isolation box.

› If, after a short distance, one of the above-mentioned indicator lights does not go out, seek the help of a specialist garage.

Operate these vehicle functions after disconnecting and connecting the 12 volt vehicle battery
▸ Clock setting » page 49.
▸ Window operation » page 25.

Changing
The new 12 volt vehicle battery must have the same parameters as the original battery. Have the replacement carried out by a specialist garage.

Using the jump-starting cable

Usage

With the help of jump start cables, a vehicle with a discharged or defective 12-volt vehicle battery can be started using the 12-volt vehicle battery of another vehicle.

What you should be mindful of

⚠ **WARNING**
Risk of explosion and chemical burns!
- Do not jump start with the 12 volt vehicle battery of another vehicle under the following conditions:
  - The discharged 12 volt vehicle battery is frozen. A discharged 12 volt vehicle battery may already freeze at temperatures just below 0 °C.
  - The acid level of the 12-volt vehicle battery is too low » page 122.

Use jump leads with a sufficient cross section and insulated terminal clamps.


The rated voltage of both batteries must be 12V. The capacity (in Ah) of the 12 volt charging vehicle battery must not be significantly lower than the capacity of the discharged 12 volt vehicle battery.

Use another vehicle's 12 volt vehicle battery to operate the vehicle

⚠ **WARNING**
Risk of injury! Danger of damage to vehicle!
- Lay the jump start cables so that they cannot become caught by rotating parts in the engine compartment.

ⓘ **NOTICE**
Short circuit!
- The non-insulated parts of the terminal clamps must not touch each other.
- The cable connected to the positive pole of the 12 volt vehicle battery must not come into contact with electrically conductive vehicle parts.
- The vehicles must not touch each other.

Connect the jump start cable
› Switch off the ignition.
› Connect the terminal clamps of the jump start cables in the order shown in the legend.

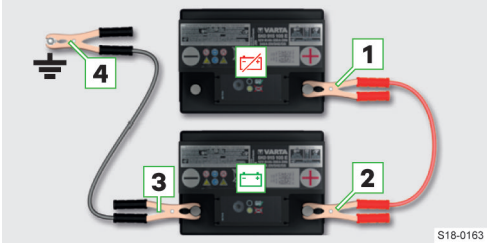

discharged 12 volt vehicle battery


current-supplying 12 volt vehicle battery

1 ⊕-pole of the discharged 12-volt vehicle battery

2 ⊕-pole of the current-supplying 12 volt vehicle battery

3 ⊖-pole of the current-supplying 12 volt vehicle battery (or earth point)

4 ⏚ Earth point of the vehicle with discharged 12 volt vehicle battery

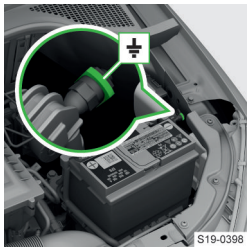

Earth point

Start the engine
› Start the engine of the current-giving vehicle and let it idle (applies to vehicles with combustion engine)

Or:

› Switch on the electric drive of the vehicle supplying power (applies to vehicles with an electric motor).
› Start up the vehicle with the discharged 12 volt vehicle battery.
› If the engine of the vehicle with the discharged 12 volt vehicle battery does not start within 10 seconds, repeat the starting procedure after approximately 30 seconds.

Disconnecting the cable
› Disconnect the cables in the reverse order from connection.

Fuses


What you should be mindful of

ⓘ **NOTICE**
Fire hazard and risk of damage to the electrical system.
- Do not repair fuses or replace them with stronger fuses.
- Replace the defective fuse with a new fuse with the same amperage.
- We recommend using replacement fuses from the ŠKODA Genuine Accessories range. These guarantee reliable and safe protection of the vehicle's electric system.
- If a newly inserted fuse blows again, seek the help of a specialist garage.

ⓘ One fuse may belong to several consumers. One consumer may have several fuses.

Functionality

Fuses protect the vehicle systems from damage caused by excessive current. The fuse blows when the current is exceeded.

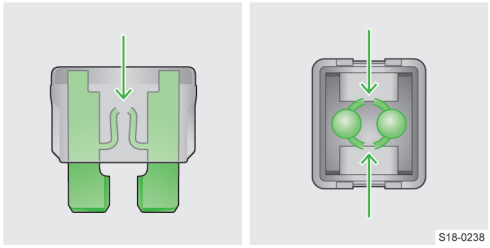


Blown fuse

Conditions for replacing a fuse

- ✓ Ignition key removed (vehicle without starter button)
- ✓ Ignition switched off and driver's door open (vehicle with starter button)
- ✓ All consumers switched off

Replacing a fuse

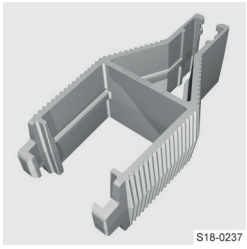

- › Replace the fuse with the clip located under the cover of the fuse box in the dash panel.
- › Use the appropriate end of the clamp according to the fuse dimensions.

Fuses in the dash panel

Overview

Access to the fuses



- › Loosen and remove the cover in the area A.
- › Change the fuse.
- › First place the cover on top and then snap it in at the bottom.

Fuses overview



Fuses:

A Left-hand drive

B Right-hand drive


Fuse number	Consumer
1	Left parking light, parking light, high-mounted brake light
2	Central locking, front and rear window washer system (vehicle with ACC)
3	Ignition
4	Right light, rear fog light, license plate light
5	Power windows - driver
6	Interior lighting
7	Horn
8	Tow hitch
9	Operating lever beneath the steering wheel, engine control unit (vehicle without KESSY), automatic gearbox (vehicle without KESSY), ESC (vehicle without KESSY), towing equipment (vehicle without KESSY), power steering (vehicle without KESSY)
10	Power windows - rear left
11	Headlamp cleaning system
12	Infotainment screen
13	Not used
14	Operating lever under the steering wheel, light switch, ignition key removal lock (vehicle with automatic transmission), diagnostic connector, headlight flasher, rain sensor, light sensor, reversing camera
15	Air conditioning, automatic transmission
16	Instrument cluster, emergency call
17	Alarm system, horn
18	Databus
19	Not used
20	Not used
21	Not used

Fuse number	Consumer
22	Front and rear windshield washer (vehicle without ACC)
23	Not used
24	Air conditioning, heating
25	Not used
26	Heating of the front seats
27	Rear window wiper
28	Not used
29	Airbags
30	Light switches, reversing light switch, exterior mirrors, feed for the central toolbar, feed for the side toolbar, rear view mirror, air-conditioning system, park assist
31	Fuel pump, radiator fan, cruise control, diagnostics connection
32	Headlamp levelling, LED headlights
33	Clutch pedal switch, engine start
34	USB charge function
35	"Blind Spot" detection
36	Heating of the front seats
37	Radar
38	Not used
39	Not used
40	Databus
41	Heated rear window
42	Power windows - front passenger
43	Tow hitch
44	Cigarette lighter, 12-volt power socket
45	Power windows - rear right
46	Front and rear window washer, operating lever under the steering wheel
47	Tow hitch
48	Tow hitch
49	Fuel pump
50	Infotainment
51	Exterior mirror heating, washer nozzle heating
52	KESSY (keyless locking and starting system)
53	Steering column lock (vehicle with KESSY)
54	Not used
55	Not used
56	Not used
57	Not used
58	Not used
59	Not used

Fuses in the engine compartment

Overview

Access to the fuses

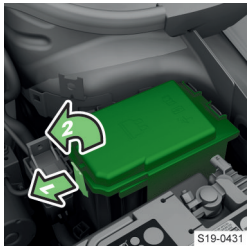


› Simultaneously press the locking button on the fuse box cover and remove the cover.
› Change the fuse.
› Fit the cover and click into place.

NOTICE

Danger of water entering the fuse box.

▸ Fit the cover correctly and click into place securely.

Fuses overview

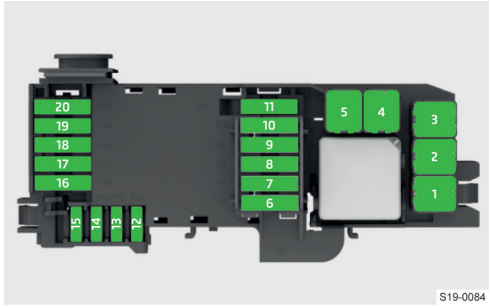

Fuse number	Consumer
1	Radiator fan
2	Not used
3	ESC assist system, if necessary ABS
4	Not used
5	Not used
6	Automatic gearbox
7	Engine control system
8	Windscreen wiper
9	12 volt battery data module
10	ESC assist system, if necessary ABS
11	Vacuum pump for the brake system
12	Injectors, fuel metering valve, oil pressure control, exhaust gas recirculation cooler valve, vacuum pump
13	Brake pedal switch
14	Coolant pump, engine components
15	Engine control system
16	Starter
17	Engine control system

Fuse number	Consumer
18	Radiator fan, wastegate, oil temperature sensor, valve for activated charcoal filter, valve for intake manifold
19	Lambda probe
20	Ignition coils

Wheels

Tyres and rims

What you should be mindful of


NOTICE

- Protect tyres from contact with lubricants and fuel.
- Always store wheels or tyres in a cool, dry and, where possible, dark place. Tyres without rims should be stored in an upright position.
- Alloy rims can be damaged by grit.
- Do not use light alloy rims with a high-sheen surface in wintry weather conditions or with snow chains

Causes of uneven tyre wear

- Improper tyre pressure.
- Driving style (e.g. fast cornering, rapid acceleration and deceleration).
- Wheel alignment errors.
- Incorrect wheel balancing.

Wheel changes

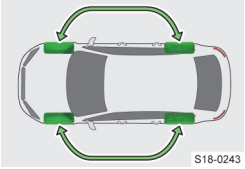
S18-0243

For uniform wear on all tyres, we recommend that you change the wheels every 10,000 km according to the schedule.

Advice for tyre assembly

› With directional tires, the correct direction of rotation must be observed. The direction of rotation of the tyres is marked by arrows on the wall of the tyre.

› Always replace the tyres by the axle.

Additional information

Only fit radial tyres of the same type, size (rolling circumference) and the same tread pattern on one axle.

Approved tyre sizes are specified in the technical vehicle documentation and in the declaration of conformity (in the so-called COC Document).

The declaration of conformity can be obtained from a ŠKODA Partner (valid for some countries and some models).

Overview of tyre labelling

Explanation of tyre markings

e.g. 185/60 R 15 84 H

185 Tyre width in mm
60 Height/width ratio in %
R Code letter for the type of tyre - Radial
15 Diameter of wheel in inches

84 Load index
H Speed symbol

Load index
The load index indicates the maximum permissible load for each individual tyre.

83 487 kg
84 500 kg
85 515 kg
86 530 kg
87 545 kg
88 560 kg

Speed symbol
The speed symbol indicates the maximum permissible speed for a vehicle fitted with tyres in the category concerned.

S 180 km/h
T 190 km/h
U 200 km/h
H 210 km/h
V 240 km/h
W 270 km/h

⚠ **WARNING**
▸ Do not exceed the maximum permissible load and speed for the mounted tires.

Tread wear indicators



Wear indicators are located in the profile of the tyres that display the permissible minimum tread depth.

Markings on the walls of the tyres with the letters TWI or other symbols (e.g. △) indicate the position of the wear indicators.

A tyre is to be regarded as worn out when this wear indicator is flush with the tread.

ⓘ The tread depth can be measured with a tread depth gauge on the ice scraper. The ice scraper is located on the inside of the fuel filler flap.

⚠ **WARNING**
Risk of accident!
▸ Do not use worn tires.

Tyre manufacturing date
The date of manufacture is indicated on the tyre sidewall.

For example, DOT ... 10 20 means that the tyres were produced in the 10th week of the year 2020.

⚠ **WARNING**
Risk of an accident!
▸ Do not use tyres that are older than 6 years.

Troubleshooting

Help with a flat tyre
▸ Spare and emergency spare wheel » page 129
▸ Changing the wheel and raising the vehicle » page 129
▸ Breakdown kit » page 131

Change of tyre pressure
illuminates
› Stop the vehicle.
› Check the tyres and tyre pressures.

Show tyres with modified pressure
› In the following menu, select the menu item for displaying the tyre condition:

CAR > 🚗

Or:

MENU > 🚘 > 🚗

All-season or winter tires

Usage

All-season or winter tyres improve handling in winter weather conditions. They are characterised by 'M+S' and a mountaintop and snowflake symbol ⛷.

What you should be mindful of

For the best possible handling, use tyres on all four wheels with a minimum tread depth of 4 mm.

Change winter tyres to summer tyres at the appropriate time. Summer tyres have better driving and braking characteristics on snow- and ice-free roads and at temperatures above 7 °C.

Usage conditions

If all-season or winter tyres are installed that have a lower speed category than the actual specified maximum vehicle speed, then proceed as follows:

› In Infotainment, set the speed limit according to the category of tyres fitted.
› In the driver's field of view, affix a warning label with the maximum value of the speed category intended for the tyres fitted (applies only to certain countries).

Settings

The speed limit setting for tyres is set in the Infotainment in the following menu item:

CAR > 🔧 > ⚙

Or:

MENU > > >

Snow chains

Usage

The snow chains improve driving in wintry road conditions.

⚠ **WARNING**
Risk of accident as well as tyre damage!
▸ Do not use chains on routes that are free from snow and ice.

What you should be mindful of

› Before fitting the snow chains, remove the full wheel trims.
› Only mount the snow chains on the front wheels.

Technical data

Permitted rim/tyre combinations for mounting of snow chains:

Rim size	Tyre size
5Jx14 ET35	175/70 R14

Only fit snow chains with links and locks that are no larger than 9 mm.

Rim size	Tyre size
6Jx15 ET38	185/60 R15

Only fit snow chains with links and locks that are no larger than 13 mm.

Spare and emergency spare wheel

Overview

Spare wheel
▸ The dimensions of a standard spare wheel correspond to the dimensions of the wheels mounted on the vehicle.
▸ A temporary spare wheel is provided with a warning label on the rim. This wheel is intended to enable you to reach the nearest specialist garage.

Inflate a space saver wheel with the maximum prescribed pressure.

Emergency wheel
A warning label is displayed on the rim of the temporary spare wheel. This wheel is intended to enable you to reach the nearest specialist garage.

An emergency wheel is significantly narrower than the wheels mounted ex-factory.

Remove the wheel on vehicles without sound system and replace

The spare wheel or emergency wheel is mounted in a recess under the floor covering or the variable loading floor in the boot.

Removing



› Loosen the retaining belt and take out the box with the tool kit.
› Unscrew the lock nut.
› Take out the wheel.

Inserting
› Insert the wheel into the wheel well with the outside facing downwards.
› Pull the fixing band through the opposite holes in the wheel rim.
› Screw in the locknut until it stops.
› Replace the box with the tool kit into the wheel and secure it with the tape.

Changing the wheel and raising the vehicle

What you should be mindful of

Before changing
› Park the vehicle securely and secure it from rolling away.
› Turn off the engine.
› Let all of the occupants get out. During the wheel change they should not stand on the road, e.g. behind the crash barriers.
› Close all doors, the boot and bonnet.
› Uncouple any trailers.

Raise vehicle

⚠ **WARNING**
Always ensure the base plate of the lifting jack cannot slip!
- ▸ Provide a wide and firm base under the jack on loose surfaces.
- ▸ Create a non-slip base (e.g. a rubber floor mat) under the jack on a smooth surface.
- ▸ Always raise the vehicle with the doors closed.
- ▸ Do not insert any body parts under the raised vehicle.
- ▸ Do not start the engine of the lifted vehicle.

ⓘ **NOTICE**
Danger of damage to vehicle!
- ▸ Make sure that the jack is attached correctly to the bridge of the sill.

After having been changed
- › Check the tyre pressure on the mounted wheel and adjust if necessary.
- › In vehicles with a tyre indicator, save the tyre pressure values in the system.
- › Have the tightening torque of the wheel bolts of the mounted tyres checked with a torque wrench as soon as possible.

The specified tightening torque is 120 Nm.

Drive carefully until the tightening torque is checked.

Replace the damaged tyre. It is not recommended to repair the tyre.


⚠ **WARNING**
Risk of an accident!
- ▸ Too low a tightening torque may cause the wheel to disengage while driving.
- ▸ Too high a tightening torque can damage the threads and cause the rim to deform.

⚠ **WARNING**
Risk of an accident!
- ▸ Do not grease or lubricate screws.
- ▸ Do not use corroded or damaged screws.

Changing the wheel and raising the vehicle

Release screws
- › If the vehicle has covers over the wheel bolts or wheel trims, remove them.

⚠ **WARNING**
- ▸ If you step on the key end when loosening the screw, hold on to the vehicle for better stability.

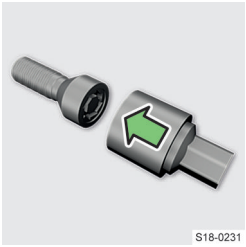


Some vehicles may have anti-theft wheel bolts that protect the wheels from theft.
- › Insert the upper section on the anti-theft wheel bolt until it stops.




- › Place the key on the wheel bolt or on the attachment piece.
- › Turn the screw a maximum of half a turn so that the wheel does not come loose and fall off.

Jacking points for the jack

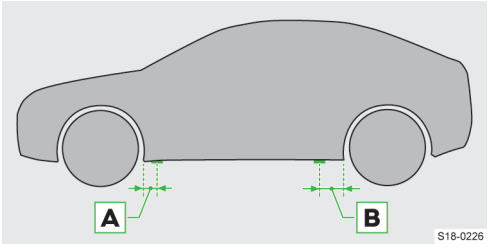

A 16 cm
B 22 cm

Position the jack and lift the vehicle
Use the jack from the tool kit.

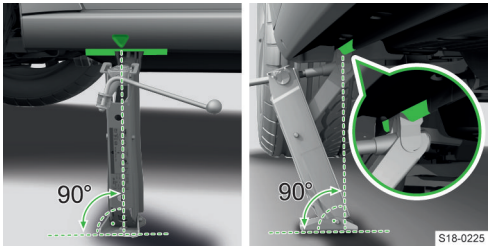

- › Position the jack at the jacking point closest to the wheel to be replaced.
- › Support the base plate of the jack with its full area resting on level ground and ensure that the jack is located in a vertical position at the jacking point.
- › Use the crank to raise the jack until its claw encloses the bar.
- › Continue to lift the vehicle until the wheel is just off the floor.

Changing a wheel

› Unscrew the screws and place them on a clean surface.
› Remove the wheel carefully.
› Attach the wheel.
› Slightly screw in the screws.
› Lower the vehicle.

NOTICE

▸ Applies to wheel trims supplied ex-factory or from ŠKODA Original Accessories: the anti-theft wheel bolt should be installed in the position marked on the back of the wheel trim.

Tighten screws


› Tighten the opposite wheel bolts including the anti-theft wheel bolt one after the other.
› Reinstall the cover caps of the wheel bolts or the full wheel covers.

Keep the label with the code number of the anti-theft wheel bolts. A replacement upper section can be acquired from ŠKODA original parts based on this.

Breakdown kit

Content overview

The kit is located in a box under the floor covering in the luggage compartment.

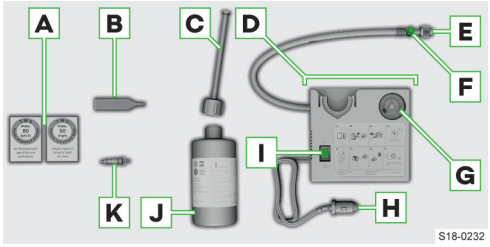

A Sticker with speed indication
B Valve remover
C Inflation hose with plug
D Air compressor (the layout of the controls may be different depending on the type of air compressor)
E Tyre inflation hose
F Button for pressure reduction
G Pressure indicator
H 12 volt cable connector
I ON and OFF switch
J Tyre inflation bottle
K Replacement valve core

The declaration of conformity is included with the air compressor or the log folder.

Usage conditions

Performing a repair with the breakdown kit not at all intended to replace a permanent repair on the tyre.

The purpose of the repair is to get you to the nearest specialist garage.

Change the tyre repaired by the breakdown kit as soon as possible.

Before using the kit

› Park the vehicle securely and secure it from rolling away.
› Turn off the engine.
› Let all of the occupants get out. During the wheel repair they should not stand on the road, e.g. behind the crash barriers.
› Close all doors as well as the bonnet and boot lid.
› Uncouple any trailers.

After using the kit

If a tyre pressure of 2.0 bar cannot be achieved, the tyre is too damaged and cannot be sealed with the puncture set.

› Stop driving. Seek the help of a specialist garage.

Once a tyre pressure of 2.0–2.5 bar is achieved, continue the journey at a maximum speed of 80 km/h (50 mph).

› Avoid full accelerations, strong braking and fast cornering.

Information for driving with repaired tyres

› The pressure of the repaired tyre must be checked after driving for 10 minutes.
› If the tyre pressure is 1.3 bar and less, do not continue! Seek the help of a specialist garage.
› If the tyre pressure is higher than 1.3 bar, correct the pressure to the correct value of at least 2 bar and continue driving.

NOTICE

Danger of damage to the compressor!

▸ After the maximum running time of the air compressor, allow it to cool for a few minutes.

WARNING

Risk of burns!

The tyre inflation hose and the air compressor may become hot when inflated.

▸ Allow the air compressor and hose to cool for a few minutes.

Usage restrictions

Do not use the kit in the following cases:

- ▶ The rim is damaged.
- ▶ The outdoor temperature is below the minimum temperature indicated in the manual of the tyre filling bottle.
- ▶ Tyre punctures are greater than 4 mm.
- ▶ There is damage to the tyre wall.
- ▶ The expiry date stated on the tyre inflation bottle has expired.

Self-help

Seal the tyres

- › Unscrew the valve cap from the damaged tyre.
- › Unscrew the valve core with the valve insert and place it on a clean surface.
- › Shake the tyre inflation bottle back and forth with sealant.
- › Screw the inflation hose onto the tyre inflater bottle. The film on the closure is pierced automatically.
- › Remove the plug from the inflation hose and push it fully onto the tyre valve.
- › Hold the bottle with the bottom facing upwards and fill all of the sealing agent into the tyre.
- › Remove the filler plug from the valve.
- › Screw in the valve insert.

Inflate tyres

- › Fit the tyre inflation hose of the air compressor to the tyre valve.
- › Secure the vehicle with the parking brake.
- › Start the engine.
- › Plug the connector into the 12 volt socket .
- › Turn on the air compressor.
- › Once a tyre pressure of 2.0-2.5 bar is reached, turn off the air compressor.

Observe the maximum running time of the air compressor according to the directions of the repair kit manufacturer.

- › If an air pressure of 2.0 - 2.5 bar has not been reached, remove the tyre inflation hose from the valve.
- › Drive approx. 10 metres forwards or backwards to allow the sealing agent to distribute in the tyre.
- › Replace the tire inflation hose on the valve and repeat the inflation procedure.

Tyre pressure

What you should be mindful of

NOTICE

- ▶ Always adjust the tyre pressure to the load.
- ▶ Check the pressure in all tyres at least once a month and before each longer ride.
- ▶ Check the pressure when the tyres are cold. Do not reduce the higher pressure of warm tyres.
- ▶ After each change in tyre pressure, save the new values in the tyre control display.


WARNING

Risk of an accident!

- ▶ If tyre pressure loss is very quick, try to stop the vehicle carefully without heavy steering or heavy braking.

Sticker with prescribed tyre pressures

The sticker with prescribed tyre pressures is located on the inside of the fuel filler flap.

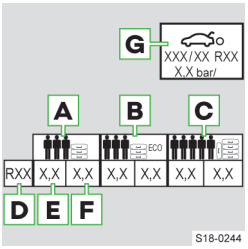

- **A** Inflation pressure for half load
- **B** Inflation pressure for environmentally friendly operation (slightly lower fuel consumption and emissions)
- **C** Inflation pressure for a full load
- **D** Tyre diameter in inches

  This information only serves as information for the prescribed tyre pressure. This is not a listing of approved tyre sizes for your vehicle. These are in the vehicle's technical documentation, as well as in the declaration of conformity (in the so-called COC document).
- **E** Tyre pressure reading for the front axle tyres
- **F** Tyre pressure reading for the rear axle tyres
- **G** Prescribed tyre pressure value for the emergency wheel

Tyre pressure monitor

Functionality

The tyre pressure monitoring indicator indicates a change in tyre pressure.

Warning when pressure changes

illuminates

› Stop the vehicle.

› Check the tyres and tyre pressures.

Show tyres with modified pressure

› In the following menu, select the menu item for displaying the tyre condition:

MENU > >

Or:

CAR >

Function restriction

The system is unable to provide a warning in the event of a very rapid tyre pressure loss, e.g. sudden puncture.

The system function may be restricted in the following cases:

- Uneven loading of the wheels, e.g. with a trailer attached
- Sporty driving style
- Driving on dirt roads
- Snow chains fitted

Saving tyre pressure values

Store the tyre pressure values in the infotainment

› Inflate the tyres to the prescribed inflation pressure.
› Turn on the ignition.
› In the following menu, select the menu item for displaying the vehicle condition:

CAR >

Or:

MENU > >

› Using the functional surfaces ◀ ▶ select the tyre control display menu.
› Tap on the functional surface SET.
› Then follow the instructions on the screen.

Save tyre pressures with the button

› Inflate the tyres to the prescribed inflation pressure.
› Turn on the ignition.
› Keep the button pressed down.

The warning light in the instrument cluster illuminates from the isolation box. After storing the tyre pressure values, an acoustic signal sounds and the warning light goes out.

› Release the button.

Save the tyre pressures in the following cases:

- Change of tyre pressure
- Change of one or more wheels
- Change of position of a wheel on the vehicle
- Always after covering a distance of 10,000 km or once a year

Troubleshooting

Tyre pressure display faulty

flashes for about 1 minute and stays on

› Stop the vehicle, switch off the ignition and start the engine.


If the symbol flashes again after starting the engine, there is a system fault.

› Continue driving, exercising appropriate caution, and seek the help of a specialist garage.

Wheel bolt cover caps

Remove cover caps and install

Disconnecting

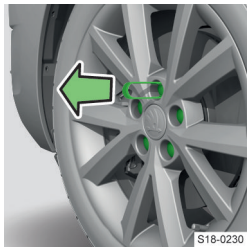

› Push the pull-off clamp onto the cover cap up to the stop.
› Remove the cover cap.

Installing

› Push the cover cap onto the wheel bolt to the stop.

Full wheel frame

Removing and installing the trim

Applies to factory built or original accessory trims from ŠKODA.

Disconnecting

› Hang the clamps for removing the wheel trims at the edge of one of the openings in the trim.
› Push the wheel wrench through the clamp, support on the tyre and pull off the wheel trim.

Installing

› Press the wheel trim onto the wheel rim at the designated valve opening.

When using an anti-theft wheel bolt, it must be located at the location indicated on the bezel.

› Press the trim, starting at the valve, into the rim on both sides until it engages around the entire circumference.


NOTICE

- Use hand pressure, do not hit the wheel cover.

Storage space and interior equipment

Equipment in the boot

Overview

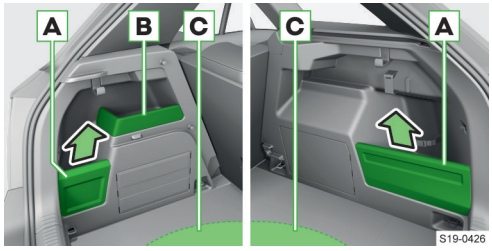

A Removable partition of the storage compartment
Max. load 2.5 kg


B Fixed storage compartment
Max. load 1.5 kg

C Under the floor covering: Storage compartment for spare or emergency wheel and vehicle tools
Load on floor covering max. 75 kg

Emergency equipment

Overview

Emergency equipment in the luggage compartment

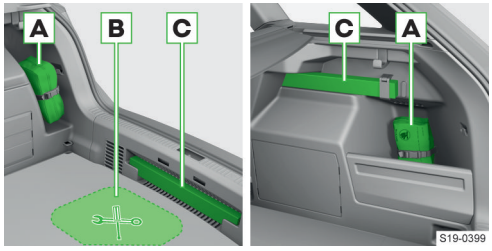


A Positioning of the first aid kit (depending on equipment)

B Tool kit

C Positioning of the warning triangle (depending on equipment)

Storage compartment for the reflective vest
The storage compartment for the reflective vest is in the storage compartment of the front door.


Fire extinguisher under the passenger seat

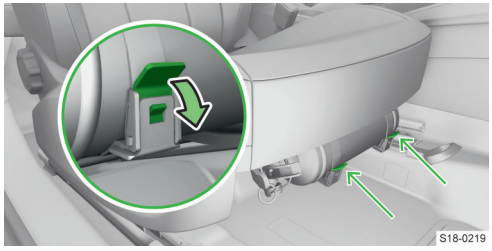

Tool kit

Overview

Depending on the equipment, not all of the following components may be included in the tool kit.

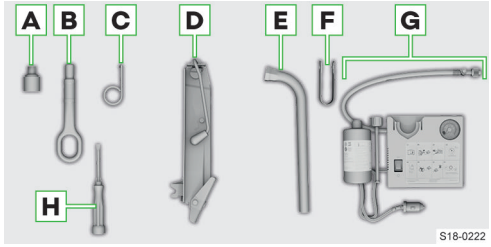

A Attachment for the anti-theft wheel bolts

B Towing lug

C Bracket for removing the full wheel covers

D Jack with sign and crank

E Wheel wrench


F Removal clip for the wheel bolt cover caps

G Breakdown set

H Screwdriver


The declaration of conformity is enclosed with the jack or the logbook folder.

Storage compartment for the reflective vest

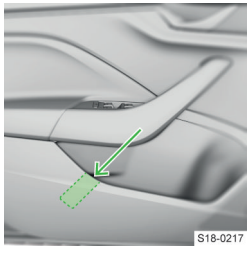

Fasteners in the boot

Overview

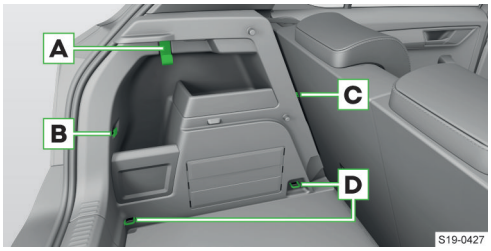


A Bag hooks
Max. load 7.5 kg

B Fasteners for securing the fixing nets and the multifunctional pocket

C Lashing eyes for securing the fixing nets and the multifunctional pocket

D Lashing eyes for securing the load, the fastening nets and the multifunctional pocket
Max. load 350 kg

Other fasteners

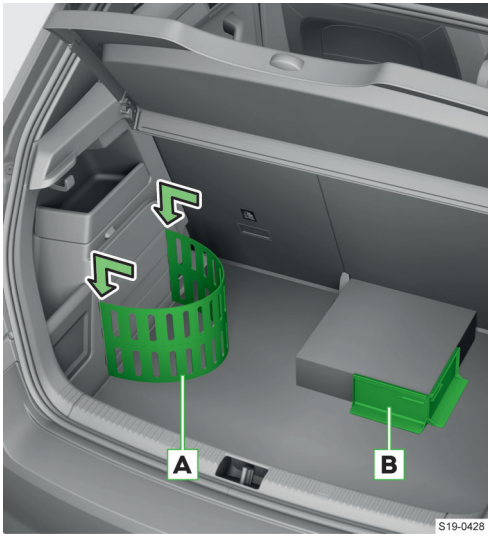


A Flexible storage compartment
Max. load 8 kg

B Cargo elements
Max. load 8 kg
A storage compartment for the cargo elements is located under the floor covering in the boot.


› Fold up the cargo element and fasten it to the floor covering in the boot.

Bag hooks in the boot

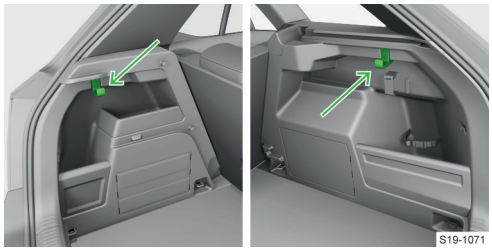


The maximum load for the hook is 7.5 kg.

Flexible storage compartment

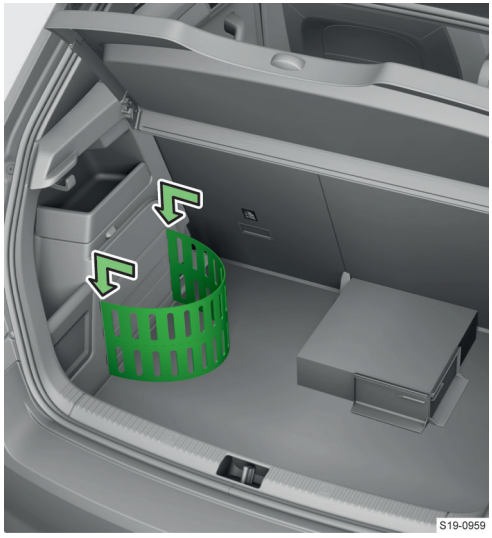

The maximum permissible load for the storage compartment is 8 kg.


Cargo elements in the luggage compartment

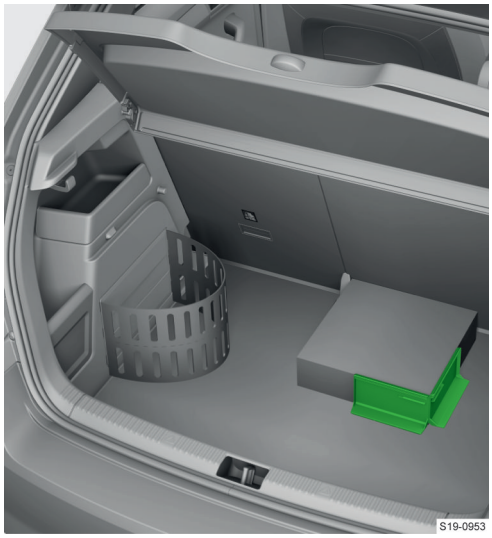

The maximum load for the Cargoelements is 8 kg.

Fastening nets

Overview

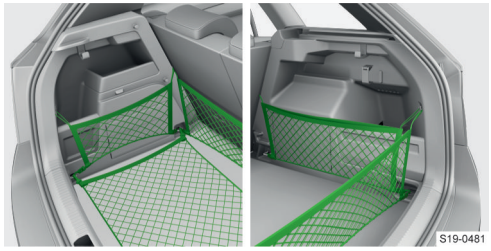


The maximum load of the respective fastening nets is 1.5 kg.

Net partition

Attach the net partition

Attaching

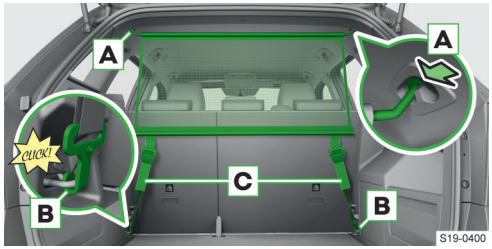

- › Remove the variable loading floor or adjust it to its lowest position.
- › Remove the roll-up cover or fold up the rear seat backrests.
- › Insert the crossbar into the mount A on one side and push it forwards.
- › Fix the bar in the same way on the other side.
- › Snap the carabiners B into the lashing eyes.
- › Pull the straps firmly at the free ends C.

Loosening

Loosening takes place in the reverse order to fixing.

Double-sided floor covering

Overview


Depending on the equipment, the vehicle may be equipped with a double-sided floor covering in the luggage compartment. One side is made of fabric, the other side is washable.

Rigid boot cover

Removing and inserting

The maximum load of the other fastening nets is 1 kg.

Removing

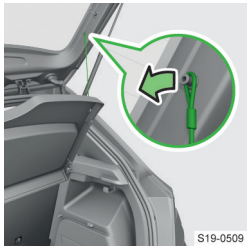


- › Unhook the straps.



› Hold the raised cover in place and press the underside of the cover on both sides.
› Remove the cover.

Inserting

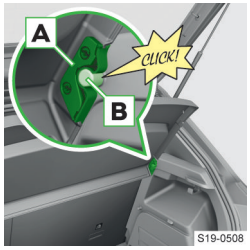

› Insert the mount A opposite the holder B on both sides of the boot.
› Press on the cover from above until it engages.
› Hook in the retaining straps.

Store the cover behind the rear seats



› Insert the cover behind the rear seats.

Install cover in the lowered position



› Insert the holder opposite the bracket on both sides of the boot.
› Press on the front and rear cover from above until it snaps into place.

The maximum load of the cover in the lowered position is 2.5 kg.

Lowered position of the luggage compartment cover



› Insert the holder opposite the bracket on both sides of the luggage compartment.
› Press on the front and rear cover from above until it snaps into place.

Roll-up luggage compartment cover

Operation

Extending



› Pull out the cover on the handle until it clicks into place.

Retracting



› Press the cover in the handle area.

The cover rolls up.

It is possible that the cover rolls more slowly during winter weather conditions.

Removing and inserting

Take out and insert the roll-up cover



› Press the end of the crossbar and take out or insert the cover.

Variable loading floor in the boot


Setting the position

The maximum load of the variable loading floor is 75 kg.

Set the variable loading floor to the upper or lower position



› Lift the variable load floor and pull it towards you.

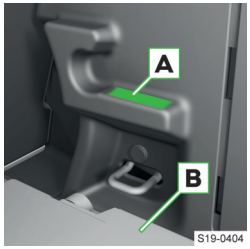


› To set in the upper position, place the variable loading floor in the front area on area A.

› To set in the lower position, place the variable loading floor in the front area on space B.



› Press the variable loading floor forward and hang up.

Fasten the raised variable loading floor in the upper position

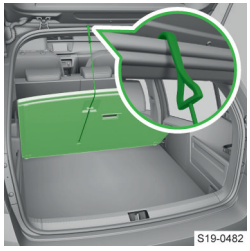

› Secure the raised variable loading floor to the frame of the boot lid with the hook.

NOTICE
Before closing the boot lid, remove the hook from the frame.


Removing and inserting

› Lift the variable loading floor up to a distance of about 15 cm below the boot cover and then remove it.

› Insertion takes place in reverse order.

Interior equipment front

Overview

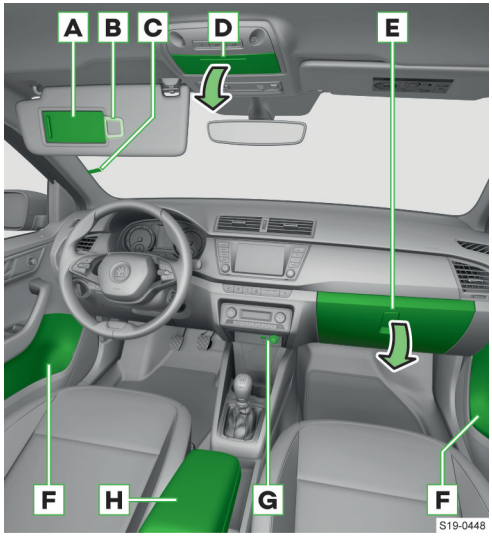

A Make up mirror

B Ticket holder

C Car park ticket holder

D Glasses compartment
Max. load 0.25 kg
› Press on the lid to open.

E Storage tray
Max. load 3 kg
In the compartment there is a bottle rack with a capacity of max. 1 l.
› Pull on the handle to open.

F Storage tray
▸ Bottle holder with a capacity of max. 1.5 l
▸ Storage compartment for the waste container
▸ Storage compartment for the reflective vest

G USB connection and 12 volt socket
The USB connection can be used for charging and for data transfer.


H Openable and adjustable armrest with storage compartment
› Pull the handle to open the compartment.

NOTICE

- Do not leave any heat-sensitive objects in the spectacle compartment D.

Interior equipment rear

Overview

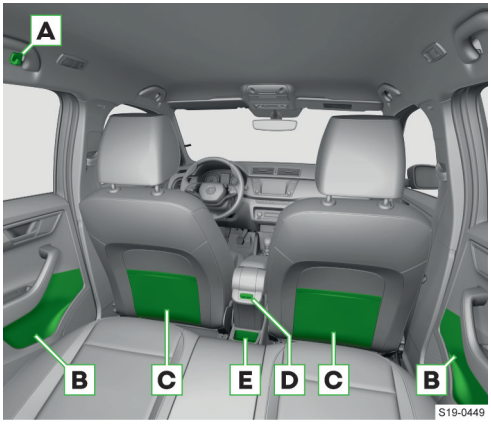

A Coat hook
Max. load 2 kg

B Storage tray
- Bottle holder with a capacity of max. 0.5 l
- Storage compartment for the reflective vest

C Storage pocket


D USB-connections
The USB connections are for charging only.

E Storage tray

WARNING

- Only hang light clothing on the hooks. Do not leave heavy and sharp objects in the pockets of the clothing.
- Do not use hangers to hang clothes.

Car park ticket holder

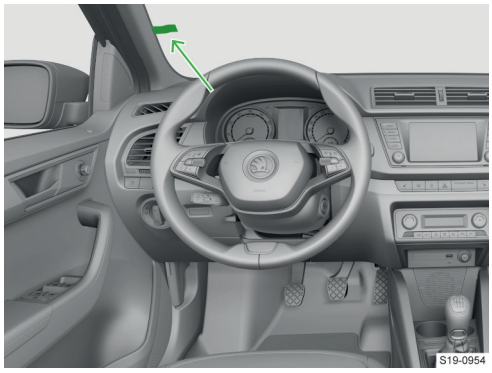

Bottle tray in the storage compartment of the front door



The tray is suitable for bottles with a max. size of 1.5 l.

Bottle tray in the storage compartment of the rear door



The tray is suitable for bottles with a max. size of 0.5 l.

Bottle tray in the storage compartment on the passenger side



In the compartment there is a bottle rack with a capacity of max. 1 l.

USB-connections



The USB connection can be used for charging and for data transfer.



The USB connections are for charging only.

Glasses compartment



The maximum load for the compartment is 0.25 kg.

NOTICE

- Do not leave heat-sensitive objects behind in the glasses compartment.

Storage compartment for an umbrella

Overview



Cup holder

Overview

Cup holder at the front



CAUTION

Risk of scalding!


- Never put hot beverage containers in the drinks holder.

NOTICE

Danger of damage to the electrical system and the panels from spilled drinks.

Waste container

Replace bags

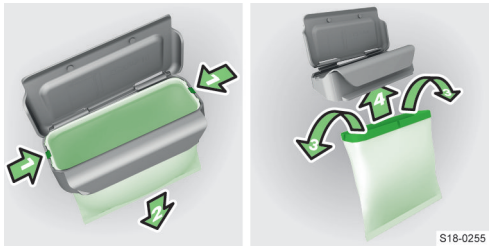

Ashtray and cigarette lighter

What you should be mindful of

CAUTION

Risk of burning or fire!

- Do not use the ashtray for storing hot or burning objects.
- Handle the lighter carefully.

Operation

The ashtray is inserted in the cup holder.

Open the ashtray



Remove the lid



Cigarette lighter




- › Push in the lighter.
- › Wait until the glowing lighter pops back out.
- › Remove the lighter and use.
- › Push the lighter back in.

The socket of the cigarette lighter serves as a 12-Volt socket.

Tablet holder


Settings

Tilt and turn

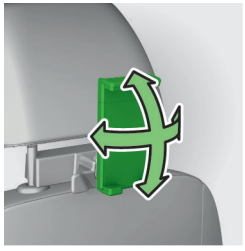



Adjust size

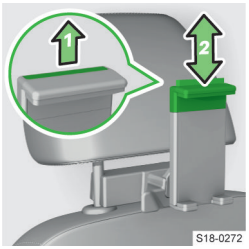


- › Pull out the locking tab and move the upper part of the holder to the desired position.


Set the minimum size of the empty holder to avoid noise while driving.

Removal and Insertion

Fasten behind the headrests

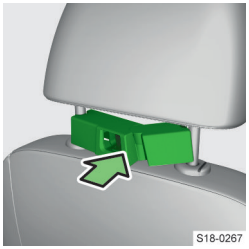

- › Place the open adapter on the front guide rods of the headrest and clip in carefully.

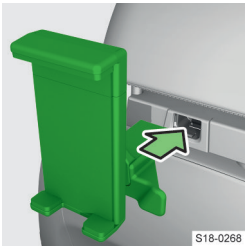


- › Clip in the holder in the adapter.

Removal



- › Press the safety button and unfold the holder.

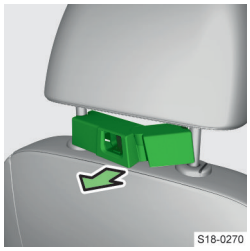

› Press on the adapter and remove it.

Technical data

The holder is for fixing a tablet with a height of min. 11.5 cm and max. 19.5 cm.

The maximum load for the holder is 0.75 kg.

12-Volt power socket

Operating conditions

NOTICE
Risk of damage to the electrical system of the vehicle!
- Use the sockets only for the connection of approved electrical accessories with a total power consumption of up to 120 watts.

NOTICE
Danger of damage to the connected consumers!
- Switch off the consumers before switching the ignition on or off and before starting the engine.

Roof rack and hitch

Roof rack

Technical data

The maximum weight of the load incl. roof rack is 75 kg.



Depending on the equipment, the roof bars can be attached at the attachment points A and B or to the roof rail.

Removable tow coupling


What you should be mindful of

WARNING
Risk of accident and danger of vehicle damage!
- Before each time you make a journey when using the ball rod, check that it is seated correctly and is secured in the mounting recess.
- Do not use the tow bar if it is damaged or incomplete.
- Do not carry out any modifications to the hitch.

WARNING
Risk of an accident!
Dirt in the mounting recess prevents the ball rod from being attached securely!
- Keep the hitch mounting recess clean at all times.

Overview


Hitch carrier

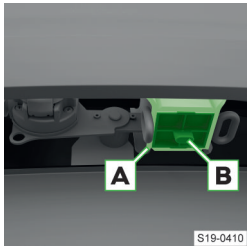


A Mounting recess

B Cover for the mounting recess


Ball rod

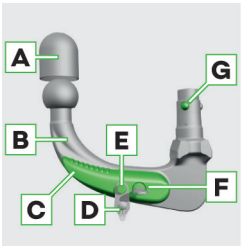

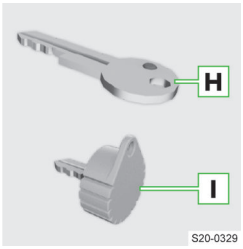



- A Protective cap
- B Ball rod
- C Operating lever
- D Lock cap
- E Operating lever release bolt
- F Lock
- G Locking balls
- H Key - Variant 1
- I Key - Variant 2

Setting the ready position

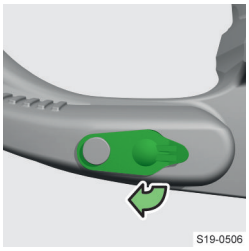

› Remove the cap from the lock.

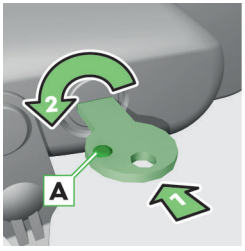

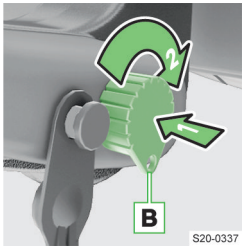


› Insert the key into the lock.

The green mark A must point upwards or the eyelet B must point downwards.

› Turn the key.


The red mark or eyelet must be pointing upwards.

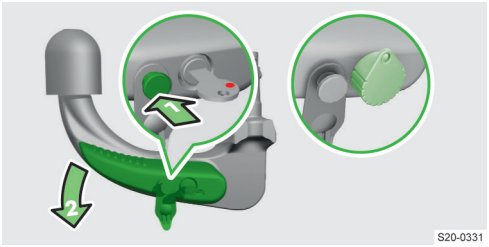

› Push the release bolt in as far as it will go, while at the same time pressing the operating lever as far as it will go.

The operating lever remains locked in this position.

Prerequisites for installing the tow bar

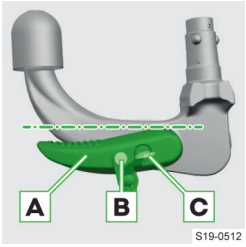

✓ The operating lever A is locked in the lower position.


✓ The release bolt B can be moved freely.

✓ The red mark on the key C is pointing upwards (applies to key variant 1). The key loop C points upwards (applies to key variant 2).

✓ The key cannot be removed or turned to another position.

Inserting tow bar

Inserting

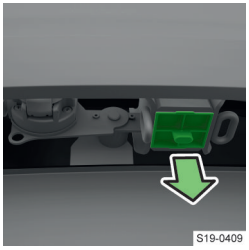

› Remove the cover cap from the mounting recess.




› Grab hold of the tow bar from below.
› Insert the tow bar into the mounting recess until it clicks into place.

The control lever rotates upwards and the release pin moves out.

The red as well as the green part of the release bolt is visible.

⚠ CAUTION
Risk of injury!
▸ When attaching the tow bar, keep your hands out of the operating lever's range of rotation.


Applying

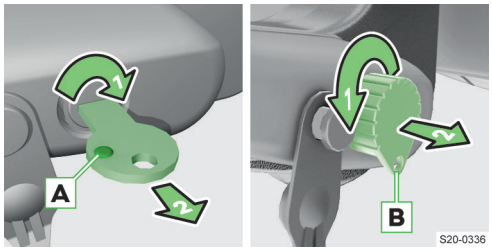

› Turn the key.


The green mark A must point upwards or the eyelet B must point downwards.

› Remove the key.

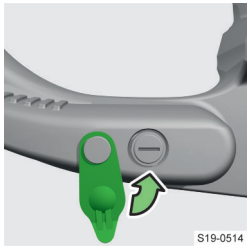

› Fit the cap on the lock.

Inspecting attachment

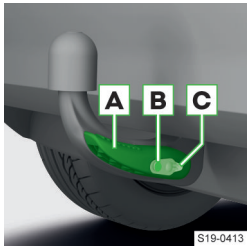


✓ The tow bar sits firmly in the mounting recess. It has no clearance when it is shook with force.
✓ The operating lever A is in the upper position.
✓ The release bolt B is protruding fully. The red as well as the green part of the release bolt is visible.
✓ The key is removed and the cap C attached to the lock.


Removing the tow bar

NOTICE
Danger of damage to vehicle!
▸ When unlocking, no trailer or other accessories may be coupled to the tow bar.

Put the protective cap onto the ball head before removing the tow bar.

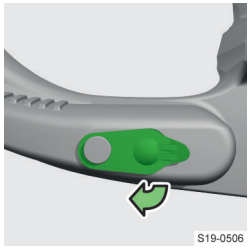

› Remove the cap from the lock.

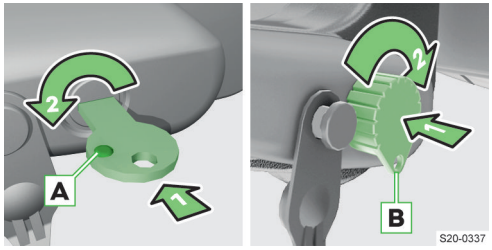


› Insert the key into the lock.

The green mark A must point upwards or the eyelet B must point downwards.


› Turn the key.

The red mark or eyelet must be pointing upwards.

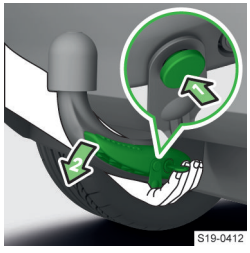

› Grab hold of the tow bar from below.
› Push the release bolt in as far as it will go, while at the same time pressing the operating lever as far as it will go.

The tow bar disengages and falls freely down into your hand.

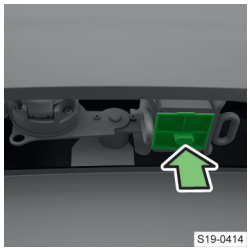

› Insert the cover cap for the mounting recess.

NOTICE
Risk of damage to the key!
▸ Place the tow bar in the standby position, with the key upwards, and store in the box.


Coupling or uncoupling a trailer or accessory

The following information describes the procedure for coupling and uncoupling a trailer. The information also refers to another accessory, e.g. a bike carrier.

WARNING
Risk of an accident!
▸ Do not use the safety eye for towing.
▸ Distribute and fix the load correctly.

The trailer has a 13-pin electrical socket. If the trailer has a 7-pin connector, use a corresponding adapter from the ŠKODA Original Accessories.

Coupling
› Install the tow bar.

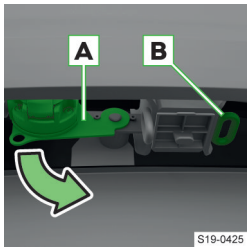

› Swivel out the electrical outlet A.
› Put the trailer drawbar onto the ball head.
› Plug the electrical trailer plug into the socket A.
› Hook the tear-off rope of the trailer onto the safety eye B. The tear-off rope must sag against the vehicle in all trailer positions.

Uncoupling
Uncoupling takes place in reverse order.

Power supply of the trailer power network
In the electrical connection between the vehicle and trailer, the trailer is powered by the vehicle.

NOTICE
Risk of damage to the vehicle electronics!
The total power consumption of all consumers connected to the trailer power supply must not exceed 350 watts.


Troubleshooting

When inserting the tow bar - the operating lever did not turn or the release pin did not come out
› Turn the control lever all the way down.
› Remove the tow bar from the mounting recess.
› Clean the tow bar and mounting recess contact surfaces.

When removing the tow bar - the tow bar did not fall freely into your hand after detachment
› Press on the tow bar with your other hand from top to bottom.

Technical data

Tow hitch attachment points

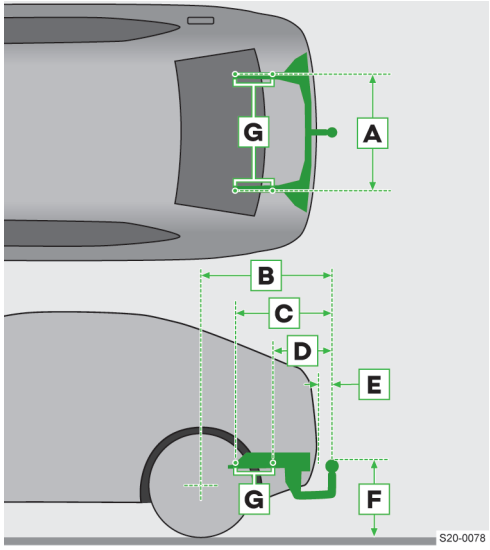

A Distance of the attachment points
B Length of the rear overhang to the centre of the ball head
C Distance of the front attachment point to the centre of the ball head
D Distance of the rear attachment point to the centre of the ball head
E Distance of the rear bumper to the centre of the ball head (according to the ECE-55 standard)
F Distance from the centre of the ball head to the road (according to the standard ECE-55)
G Fastening points on the body

	In mm	
	Fabia	Fabia Combi
A	955	957
B	766	1017
C	574.1	541.1
D	383.1	372.1
E	min. 65	min. 65
F	350-420	350-420

Maximum vertical load for trailer operation
The maximum vertical load for trailer operation depends on the engine type and the vehicle equipment.

The valid specification for your vehicle can be found in the technical vehicle documentation, (e.g. vehicle approval documentation, the COC document) or at a ŠKODA partner.

Other information (e.g. on the nameplate of the trailer device) merely provides information on the test values of the device.

Support load with mounted accessories
When using the accessories (e.g. bicycle carrier), the maximum length and the permissible total weight including load must be considered.

The maximum length of the mounted accessories (from the ball of the towing device) may not exceed 70 cm.

The permissible total weight of the installed accessory, including its load, corresponds to the maximum load on trailers.

This value applies if the centre of gravity is at a distance of no more than 30 cm from the towing device ball head.

If the distance of the centre gravity of the load to the ball head of the towing device is greater than 30 cm, then the max. permissible total weight of the accessory, including its load, decreases (e.g. at a distance of 60 cm from the ball head, the permissible weight decreases by half).

⚠ **WARNING**
Risk of an accident!
- ▸ Do not exceed the maximum vertical load.
- ▸ The permissible trailer load and the weight of another accessory, e.g. of the bike carrier, is not to be exceeded.

NOTICE
Risk of damage to the trailer and the vehicle itself!
- ▸ When using the accessory (e.g. bicycle carrier), observe the maximum length and the permissible total weight of the accessory incl.

Maintaining and cleaning

Service events

service intervals
Compliance with service intervals is crucial for the life and value of the vehicle.

You will be notified of the due date for service with the symbol and the corresponding message on the display of the instrument cluster.

The specialist garage will inform you of the type of service interval, the option of changing this and the scope of service.

All services and the replacement or refilling of operating fluids are chargeable to the customer, even during the warranty period, unless the ŠKODA AUTO warranty conditions or other binding agreements determine otherwise.

Proof of service
A specialist garage stores the proof of service in the information system called Digital Service Plan.

The proof of service can be printed out.

Displaying the service due date in the Infotainment system
› In Infotainment, select the following menu:

CAR › › Menu item for the Service

Or:

MENU › › › Menu item for the Service

Resetting information
We recommend that you do not reset the information regarding service events on your own. It can lead to incorrect setting of the service intervals and thus also to possible faults in the vehicle.

For vehicles with a variable service interval, new service interval values calculated according to the previous operating conditions will be displayed after the oil change service indicator is reset. These values will then continue to be adjusted according to the current operating conditions.

Service work, adjustments and technical changes

The instructions and guidelines from ŠKODA AUTO must be observed when carrying out any modifications, repairs or technical alterations to the vehicle.

Adhering to these instructions and guidelines helps ensure road safety and helps keep the vehicle in a good technical condition.

We advise only using ŠKODA Original Accessories and ŠKODA Original Parts which have been expressly approved for use on your vehicle. Reliability, safety

and suitability for your vehicle are guaranteed with these.

ŠKODA Service partner
All ŠKODA service partners work according to the instructions and guidelines from ŠKODA AUTO. Service and repair work is therefore carried out on time and at the appropriate quality. Adhering to these instructions and guidelines helps ensure road safety and helps keep the vehicle in a good technical condition.

We therefore advise having all modifications, repairs and technical alterations to the vehicle carried out by a ŠKODA Service Partner.

ŠKODA original parts
We recommend the use of ŠKODA Genuine Parts for your vehicle, as these parts are approved by ŠKODA AUTO. These parts comply wholly with ŠKODA AUTO regulations and are identical to the parts used in series production.

ŠKODA AUTO is able to warrant the safety, suitability, and long life of these products.

ŠKODA Service Partners are liable for any defects of ŠKODA Genuine Parts for a period of 2 years after sale in accordance with the materials defect liability, unless agreed otherwise in the purchase agreement.

ŠKODA original accessories
We recommend that you use ŠKODA Genuine Accessories in your vehicle. With these accessories, ŠKODA AUTO stands for safety, reliability and the suitability for your vehicle type.

ŠKODA Service Partners are liable for any defects of ŠKODA Genuine Accessories for a period of 2 years after installation or delivery in accordance with the materials defect liability, unless agreed otherwise in the purchase agreement or any other agreements.

Spoiler

⚠ **WARNING**
Risk of an accident!
- Only use the original spoiler on the front bumper in combination with the original spoiler on the boot lid.
- The original spoiler on the front bumper cannot be left on its own without the spoiler on the luggage compartment lid or in combination with an unsuitable spoiler on the luggage compartment lid.
- We recommend that you consult the ŠKODA Service Partner for any repairs to or replacement, addition or removal of spoilers.

Component protection
Some electronic vehicle components (such as the instrument cluster) are factory-equipped with component protection. This component protection ensures the functional limitation of these components in a non-legitimate installation in another vehicle (e.g. after a theft) or operation outside the vehicle.

Interior

What you should be mindful of

NOTICE
- Use cleaning agents intended for cleaning and care of the individual materials.
- Do not use aggressive cleaning agents or chemical solvents.

Natural leather / Faux leather / Alcantara® / Suedia / material

NOTICE
- Remove impurities as soon as possible.
- Do not use solvents, floor wax, shoe cream, stain remover or similar agents on Alcantara® and Suedia suede seat upholstery.
- Make sure that natural leather is not moistened when cleaning and that no water seeps into the seams.
- Do not clean the roof cladding with a brush.

NOTICE
Risk of fading to the cover fabric!
- If necessary, do not leave the covers for long periods in the blazing sun.

- During use, the leather and Alcantara®- and Suedia and materials may show minor changes (e.g. folds or discolouration). This does not constitute a material defect.
- Some clothing fabrics, e.g. dark denim, sometimes do not have sufficient colour fastness. As a result, discolouration that is clearly visible on the seat upholstery can occur. This is not a defect in the fabric.
- Sharp-edged zippers, rivets, clamps and similar garments can damage the upholstery in the vehicle. Such damages cannot be subsequently recognised as a justified complaint.

Plastic parts

NOTICE
Risk of damaging the dash panel!
- Do not attach fragrances and air fresheners to the dash panel.

Windows

NOTICE
Risk of damage to the filaments or the glass antenna!
- Do not stick stickers on the heating filaments.
- Do not use sharp objects (such as pot scrapers, etc.) to clean the windows.

Covers on electrically heated seats

NOTICE
Risk of damaging the heating system!
- Do not clean the seats with water or other liquids.
- Do not dry the seats by switching on the heating.

Seat belts

NOTICE
Risk of damage to the seat belts!
- Do not dry clean the seat belts.
- Allow cleaned belts to dry before rolling up.

Instructions for cleaning

Natural leather / Faux leather / Alcantara ® / Suedia / material
- › Remove dust and dirt on the surface with a vacuum cleaner.
- › Remove fresh impurities with water, slightly moistened cotton cloth or woollen cloth; if necessary, use a mild soap solution [1] and wipe with a dry cloth.
- › Remove stubborn stains with a suitable cleaning agent.
- › For regular care of natural leather, use the equipment provided for this purpose. After each clean, use a care cream with light protection and impregnation effect.
- › When looking after Alcantara®-, Suedia and and fabric surfaces, remove stubborn hair with a cleaning brush. Remove pills from materials with a brush.

Plastic parts
- › Remove impurities with water, slightly moistened cloth or sponge with a suitable cleaning agent if necessary.

Windows
- › Remove impurities with clean water and dry with a cloth provided for this purpose.

Infotainment screen
- › Remove any impurities on the screen using the cleaning agents provided.

NOTICE
Danger of screen damage!
- When removing dirt, do not press on the screen.

Covers on electrically heated seats
- › Remove impurities with a suitable cleaning agent.

Seat belts
- › Remove impurities with a soft cloth and mild soap solution.[1]

Exterior

What you should be mindful of

WARNING
Risk of accident!
After washing the vehicle, the functionality of the brake system may be affected by moisture and, in winter, by ice.
- Dry and clean the brakes by braking several times.

NOTICE
- Bird droppings, insect residues, litter and sea salt residues, overflowed fuel etc. are to be removed as soon as possible.
- Do not use rough sponges, scourers or similar to remove dirt.
- Use cleaning agents intended for cleaning and care of the individual materials.
- Do not use aggressive cleaning agents or chemical solvents.
- Do not polish the vehicle in a dusty environment.

NOTICE
- Paint damage should be repaired as soon as possible.
- Do not treat matt lacquered parts with polish or hard wax.
- Do not polish foils.
- We recommend treating door seals and window guides with the appropriate tools from ŠKODA original accessories. These ensure that the protective lacquer layer of the seals and window guides is not attacked.
- Do not use abrasive cleaning agents to clean the rear view camera.

Before driving through a car wash
- › Observe the usual specifications of the car wash, e.g. close all windows, fold the mirrors, unscrew the antenna rod, etc.
- › Move the windscreen wiper lever to position **OFF** to adjust.
- › If there are special attachments on your vehicle, observe the instructions of the car wash operator.

After washing with a wax preservation
- › Wipe off the windscreen wiper blades with a dry cloth.

[1] A mild soap solution consisting of 2 tablespoons of white neutral soap to 1 litre of lukewarm water.

Wash with a pressure washer

NOTICE

- Follow the operating instructions for the high-pressure cleaner, in particular the instructions relating to the pressure and the spray distance to the vehicle surface.
- Do not direct the water jet directly at the following vehicle parts
  - Films
  - Lock cylinder
  - Columns on the vehicle
  - Trailer connection
  - Swivelling ball bar
  - Camera lenses and sensors
  - Plastic, chromed and anodised parts

Remove snow and ice

NOTICE

- Remove snow and ice with a plastic scraper or a suitable deicing agent.
- Clean the cameras with a hand brush.
- Only move the scraper in one direction.
- Do not use scratchers or other sharp objects for foils.
- Do not remove snow and ice with hot or warm water.
- Do not remove snow and ice from surfaces with coarse dirt.

Instructions for cleaning

Handwash

› Wash the vehicle from top to bottom with a soft sponge or wash glove and plenty of water, if necessary with additional suitable cleaning agents.

› For foils and headlights, use a mild soap solution that contains two tablespoons of white neutral soap to one litre of lukewarm water.

› Use a glass cleaner for the windscreen wiper blades.

› Wash the cameras with clean water and dry with a suitable clean wipe.

NOTICE

- Wash out the sponge or wash mitt regularly.
- Use a different sponge for wheels, sills and the lower part of the vehicle than that used for the other vehicle parts.
- Do not wash the vehicle in the blazing sun.
- Do not dry the headlights or use sharp objects.
- Do not put pressure on the bodywork when washing.
- The temperature of the washing water may be a max. 60 °C.

After hand washing

› Rinse the vehicle and wipe it with a suitable clean cloth.

Vehicle paint

› Preserve the varnish at least twice a year with hard wax.

› Use a polish for matt lacquers.

Films

Films will age and become brittle – this is entirely normal: this is not an error.

The following factors have a negative effect on the life or colour fastness of the films:

- Sun rays
- moisture
- Air pollution
- Stones, e.g. due to the rebound of the cargo during transport on the roof rack

Protection of hollow spaces

Corrosion-prone cavities of the vehicle are permanently protected by preservative wax at the factory.

› Remove spilled wax with a plastic scraper, clean stains with mineral spirits.

Underseal

The underside is permanently protected by the factory against chemical and mechanical influences.

› Have the protective coating checked by a specialist garage before starting and at the end of the cold season.

Wheels

› After washing, preserve the wheels with suitable means.

WARNING

Risk of an accident!

- Severe dirt on the wheels can result in the wheels unbalancing.

Car jack


› If necessary, treat moving parts with suitable grease.

Tow hitch

› Coat the ball head of the towing device with a suitable grease whenever necessary.

Ice scraper

On the fuel filler flap

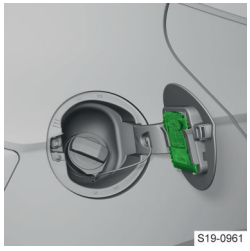

Technical data and specifications

Requirements for the technical data

The emission standard, information on fuel consumption and other information pertaining to your vehicle can be found listed in the technical vehicle documentation and in the declaration of conformity (in the so-called COC Document).

The information listed was determined in accordance with rules and under conditions that are stipulated by legal or technical regulations.

This and other information about your vehicle and the declaration of conformity can be obtained from a ŠKODA Partner.


The details in the technical vehicle documentation and in the declaration of conformity take precedence over the information in this Owner's Manual. These specifications and values apply to your vehicle in its condition and configuration at the time of delivery from the manufacturer. Retrofitting an accessory can have a negative impact on this information and values, in particular the values regarding fuel consumption and carbon dioxide (CO_2), which are specified in the vehicle documentation and in the declaration of conformity.

The performance values listed were determined without performance-reducing equipment, e.g. air conditioning system.

Vehicle identification data

Vehicle identification number (VIN)
The vehicle identification number is found at the following locations:

- Directly in the engine compartment on the suspension turret
- On a plate under the windscreen in the lower left corner
- On the type plate at the bottom of the middle body pillar of the vehicle

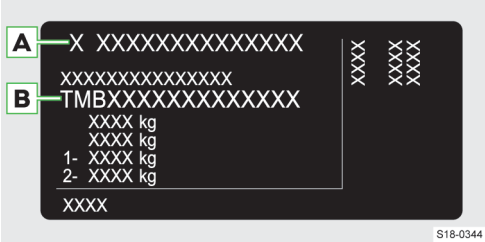

Type plate

A Vehicle manufacturers

B Vehicle identification number (VIN)

VIN display
The display of the VIN takes place in the infotainment in the following menu item:

CAR › ⚙ › Menu item for the Service

Or:


MENU › 🚗 › ⚙ › Menu item for the Service

Engine number
The engine number is embossed on the engine block.

Maximum permissible weights

The maximum permissible weights are listed on the nameplate.

The type plate is located at the bottom of the middle body pillar of the vehicle.

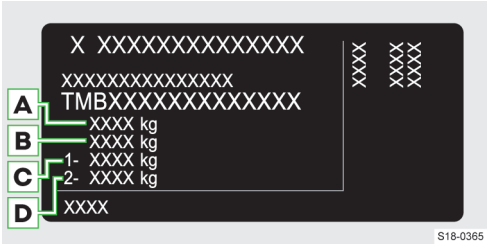

A Maximum permissible gross weight

B Maximum permissible towed weight (towing vehicle and trailer)

C Maximum permissible front axle load

D Maximum permissible rear axle load

Maximum permissible towed weight
The specified value is valid for altitudes up to 1000 m above sea level.

The engine output falls as the height increases, as does the ability to climb.

Therefore, for every additional 1,000 m in height (or part), the maximum permissible towed weight must be reduced by 10 %.

The towed weight is made up of the actual weights of the loaded towing vehicle and the loaded trailer.

Payloads
It is possible to calculate the approximate maximum payload from the difference between the permissible total weight and the operating weight.

The payload consists of the following components:

- The weight of the passenger
- The weight of all luggage and other loads
- The weight of the roof, including the roof rack system
- The weight of the equipment that is excluded from the operating weight
- Trailer bearing load for trailer towing » page 146

⚠ **WARNING**
Risk of accident and danger of vehicle damage!
- Do not exceed the specified values for the maximum permissible weights.

Operating weight

Information about the operating weight

The specification corresponds to the lowest possible operating weight without additional weight-increasing equipment. This includes 75 kg driver's weight, the weight of the operating fluids and the on-board tool kit and a fuel tank filled to min. 90%.

Operating weight

Engine type	Gearbox	Operating weight (kg)	
		Fabia	Fabia Combi
1.0 l/70 kW TSI	Manual gearbox	1116	1130 a)/1136
	DSG b)	1160	1180
1.0 l/81 kW TSI	Manual gearbox	1121 a)/1127	1141 a)/1147
	DSG b)	1154	1174
1.0 l/44 kW MPI	Manual gearbox	1081	1101
1.0 l/55 kW MPI	Manual gearbox	1081	1101
1.6 l/66 kW MPI	Manual gearbox	1105	1125
1.6 l/81 kW MPI	Automatic gearbox	1137	1157

a) Applies to cars with the EU6W emission standard.

b) Automatic dual-clutch transmission.

ⓘ Ask for the exact vehicle weight in a specialist garage.

Vehicle dimensions

Dimensions

Specification	Value (in mm)	
	Fabia	Fabia Combi
Vehicle height	1467	1467
Vehicle width with folded-in mirrors	1732	1732
Vehicle width with folded-out mirrors	1958	1958
Ground clearance of the vehicle	133	135
Vehicle length	3997	4262/4292 a)

a) Applies to the vehicles Fabia Combi Scout.

Engine specifications

1.0 l/70 kW TSI engine

Output (kW at rpm)	70/5000-5500			
Highest torque (Nm at rpm)	160/(1500-3500) a) 1800-3500			
Number of cylinders/displacement (cm^3)	3/999			
Body	Fabia		Fabia Combi	
Gearbox	Manual gearbox	DSG b)	Manual gearbox	DSG b)
Maximum speed (km/h)	185 a)/186	186	186 a)/187	188
With specified gear engaged	4	6	4	6
Acceleration 0-100 km/h (s)	10.7/10.8 a)	11.1	10.7 a)/10.8	11.2

a) Applies to cars with the EU6W emission standard.

b) Automatic dual-clutch transmission.

1.0 l/81 kW TSI engine

Output (kW at rpm)	81/5000-5500			
Highest torque (Nm at rpm)	200/2000-3500			
Number of cylinders/displacement (cm^3)	3/999			
Gearbox	Manual gearbox		DSG a)	
Body	Fabia	Fabia Combi	Fabia	Fabia Combi
Maximum speed (km/h)	196	197 b)/198	195	196
With specified gear engaged	5	5	6	6
Acceleration 0-100 km/h (s)	9.7	9.7	10.0	10.0

a) Automatic dual-clutch transmission.

b) Applies to cars with the EU6W emission standard.

1.0 l/44 kW MPI engine

Output (kW at rpm)	44/5000-5500 (5000-6000) [a]	
Highest torque (Nm at rpm)	95/3000-4300	
Number of cylinders/displacement (cm^3)	3/999	
Gearbox	Manual gearbox	
Body	Fabia	Fabia Combi
Maximum speed (km/h)	157 [a]/159	161
With specified gear engaged	5	5
Acceleration 0-100 km/h (s)	16.2/16.4 [a]	16.6

[a] Applies to cars with the EU6W emission standard.

1.0 l/55 kW MPI engine

Output (kW at rpm)	55/6200	
Highest torque (Nm at rpm)	95/3000-4300	
Number of cylinders/displacement (cm^3)	3/999	
Gearbox	Manual gearbox	
Body	Fabia	Fabia Combi
Maximum speed (km/h)	169	170
With specified gear engaged	5	5
Acceleration 0-100 km/h (s)	14.7	15.0

1.6 l/66 kW MPI engine

Output (kW at rpm)	66/4250-6000	
Highest torque (Nm at rpm)	155/3800-4000	
Number of cylinders/displacement (cm^3)	4/1598	
Gearbox	Manual gearbox	
Body	Fabia	Fabia Combi
Maximum speed (km/h)	181	183
With specified gear engaged	5	5
Acceleration 0-100 km/h (s)	10.8	10.9

1.6 l/81 kW MPI engine

Output (kW at rpm)	81/5800	
Highest torque (Nm at rpm)	155/3800-4000	
Number of cylinders/displacement (cm^3)	4/1598	
Gearbox	Automatic gearbox	
Body	Fabia	Fabia Combi
Maximum speed (km/h)	189	190
With specified gear engaged	5	5
Acceleration 0-100 km/h (s)	11.1	11.2

Personal data

Personal customer data is collected, processed and used by ŠKODA AUTO in accordance with the provisions of the generally binding legal provisions in the area of personal data protection.

The current declaration on the protection of personal data is displayed using the following link or by reading the QR code:

https://www.skoda-auto.com/other/personal-data

Information about the radio systems in the vehicle

Your vehicle has various radio systems.

Manufacturers of this radio equipment declare that this equipment complies with the requirements of **Directive 2014/53 / EU** and the **Technical Regulation on Radio Equipment, approved by the Decision of the Cabinet of Ministers of Ukraine of 25 May 2017 no. 355**.


Information about **Directive 2014/53 / EU**on the approximation of the laws of the Member States relating to the marketing of radio equipment, **Technical regulation on radio equipment, approved by the decision of the Cabinet of Ministers of Ukraine of May 25, 2017 No. 355** as well as regarding **declaration of conformity** ,can be viewed on ŠKODA web pages using the following link or by scanning the QR-code:

https://www.skoda-auto.com/services/red-doc

After this, proceed as follows:

1. Select the desired region.
2. Select Download Declaration of conformity against the desired model, to receive the certificates.

Examples of labelling of radio systems

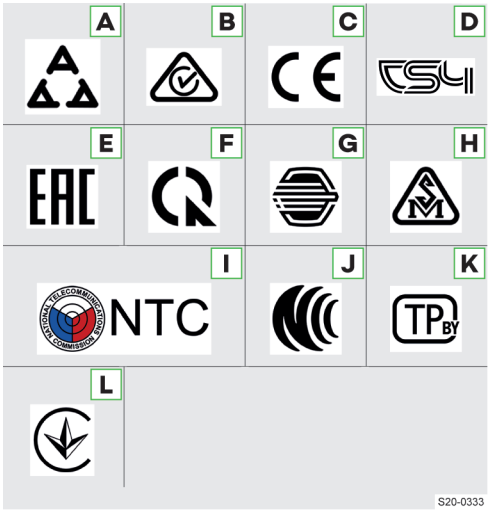

- **A** Serbia
- **B** Australia and New Zealand
- **C** Europe (countries that approve radio equipment as per EU guidelines)
- **D** Armenia
- **E** Russia
- **F** Vietnam
- **G** Mongolia
- **H** Moldova
- **I** Philippines
- **J** Taiwan
- **K** Belarus
- **L** Ukraine

Rights arising from defective performance, ŠKODA warranties

Rights arising from defective performance
Your ŠKODA Partner, as a seller, is liable to you for material defects in your new ŠKODA vehicle, ŠKODA Genuine Parts and ŠKODA Genuine Accessories, in accordance with the legal requirements and the purchase contract.

The buyer is entitled to assert the rights arising from defective performance with the responsible ŠKODA partner from the time of vehicle handover. The date of the vehicle handover and the vehicle identification number (VIN) are properly documented in the “Vehicle delivery documentation” chapter in this Owner's Manual.

ŠKODA warranty for new cars

As well as the legal rights arising from defective performance, ŠKODA AUTO grants you the ŠKODA warranty for new cars (hereinafter referred to as the "ŠKODA Warranty"), according to the conditions described below.

Under the ŠKODA Warranty, the company ŠKODA AUTO shall provide the following services[1]:

- Free repair of damage due to a defect that occurs in your vehicle within two years of the start of the ŠKODA Warranty.
- Free repair of damage due to paintwork flaws that occur on your vehicle within three years of the start of the ŠKODA Warranty.
- Free repair of rust corrosion on the body, which occurs on your vehicle within twelve years of the start of the warranty. In terms of rust corrosion on the body, the ŠKODA Warranty shall cover only rust corrosion through body panels from the inside to the outside.

The start of the ŠKODA Warranty is the day on which the new car is handed over for use by a ŠKODA partner to the first buyer who is not a ŠKODA Partner[2].

The ŠKODA Partner enters this date into the corresponding systems of the manufacturer. Any one ŠKODA Partner Partner can notify you of this date on request.

Fault rectification under the ŠKODA Warranty can be carried out by means of a replacement or repair of the defective parts. The ŠKODA Service Partner decides about the type of vehicle repair. The fault rectification takes place in accordance with the availability of the ŠKODA Service Partners and within a reasonable period of time. Replaced parts become the property of the ŠKODA Service Partner.

There shall be no further claims arising from the ŠKODA Warranty. In particular, no claim for replacement, no right of withdrawal, no claim to purchase price reduction, or provision of a replacement car for the duration of repair and compensation.

The ŠKODA Warranty can be claimed at any ŠKODA Service Partner.

There are no claims under the ŠKODA Warranty if vehicle damage has occurred in causal connection with one of the following circumstances:

- The service work was not carried out on time and professionally according to the provisions of ŠKODA AUTO, or its execution was not proven by the customer when asserting claims under the ŠKODA Warranty.
- Damage has not been reported immediately to a specialist company or has not been properly remedied.
- Damage refers to parts that are subject to natural wear, such as tyres, spark plugs, wiper blades, brake pads and brake discs, clutch, bulbs, synchronizer rings, batteries, etc.
- External impact or influences (e.g. accident, hail, flood, fire etc.).
- Installation, connection of parts or accessories, other adaptation or technical modification of the vehicle not approved by ŠKODA AUTO (e.g. Tuning).
- Unauthorized use, improper handling (e.g. use in motor sport competitions or overloading), improper care or unauthorized maintenance.
- Non-compliance with provisions in the Owner's Manual or other factory-supplied instructions.

The customer shall prove the lack of causation.

The present ŠKODA Warranty shall not affect the purchaser's statutory rights arising from unsatisfactory performance in respect of the seller of the vehicle and possible claims arising from product liability laws.

ŠKODA Mobility warranty

The Mobility Warranty provides you with a sense of certainty for journeys in your vehicle.

If your vehicle is left on the road due to an unexpected fault, we can provide services to keep you moving as part of the mobility guarantee, including the following: technical assistance on the phone, breakdown assistance at the breakdown location, start-up on site, and towing to the ŠKODA service partner, if necessary.

If your vehicle is not repaired on the same day, then the ŠKODA Service Partner may, if necessary, arrange additional subsequent services, such as replacement transport (bus, train, etc.), the provision of a replacement vehicle, and the like.

Specific claims for free provision of services under the ŠKODA Mobility Warranty only exist if your vehicle has remained in a causal connection with a defect which is to be remedied on the basis of fulfilment under the ŠKODA Warranty.

---

1) Based on the requirements of generally binding legal regulations or country-specific market requirements, the ŠKODA partner or importer can provide a warranty beyond the scope of the stated ŠKODA Warranty. This local warranty extends the scope of performance in accordance with the specific warranty conditions of ŠKODA partners or importers.

2) Due to the requirements of the generally binding country-specific regulations, the date of first registration can be given instead of the date of the vehicle handover.

Check the conditions for provision of the Mobility Warranty for your vehicle with your ŠKODA Partner. They will also inform you of the detailed terms and conditions of the Mobility Warranty in relation to your vehicle. In the event that your vehicle is not covered by a mobility warranty, he will inform you of the possibilities for subsequent conclusion.

Optional ŠKODA Extended Warranty
If you also purchased a ŠKODA Extended Warranty when purchasing your new car, ŠKODA AUTO will provide you with a free repair of vehicle damage caused by a defect in the vehicle during the warranty period.

The ŠKODA Extended Warranty for your vehicle is valid for the agreed period or until the agreed mileage limit is reached, whichever comes first.

For the assessment of claims from the ŠKODA Extended Warranty, the conditions of the ŠKODA warranty described above apply to the appropriate extent.

The fault rectification under the ŠKODA Extended Warranty can only be carried out by replacement or repair of the defective parts, whereby the ŠKODA service partner decides on the type of vehicle repair. The fault rectification takes place in accordance with the availability of the ŠKODA Service Partners and within a reasonable period of time.

There shall in any case be no entitlement to further claims from the ŠKODA Extended Warranty. In particular, no claim for replacement, no right of withdrawal, no claim to purchase price reduction, or provision of a replacement car for the duration of repair and compensation.

The previously mentioned paint warranty and the warranty against rust perforation are unaffected by the ŠKODA extended warranty.

The ŠKODA Extended Warranty does not apply to exterior and interior foils.

Your ŠKODA partner will provide you with information about the detailed conditions of the ŠKODA Extended Warranty.

The ŠKODA Mobility Warranty and the ŠKODA Extended Warranty are only available in some countries.

Index

Numbers and symbols

12 volt vehicle battery 122
Charge 122
Checking the condition 122
Discharge protection 122
Disconnecting and connecting 123
Fault 123
Safety 15
see 12 volt vehicle battery 122
12-Volt-vehicle battery 122

A

ABS 108
ACC 111
Automatic stop and start 112
Distance adjustment 112
Interruption of cruise control 113
Activation of online services 96
Adaptive Cruise Control 111
Air conditioning
see Climatronic 46
see Manual air conditioning 45
Airbag 34
Deactivating the airbags 35
Deactivating the front passenger airbag 35
Fault 35
Installation locations 35
Release 34
Safety 34
Alarm system 23
Trailer 23
All-season tyres 128
Analogue instrument cluster 48
Android Auto
Infotainment Amundsen 88
Infotainment Swing 67
see digital version of the manual 5
Apple CarPlay
Infotainment Amundsen 88
Infotainment Swing 67
see digital version of the manual 5
Armrest
Front 28
Ashtray 141
ASR 108
Assist systems
Driver assist 108
Park Assist 115
Safety 17
Automatic braking
see Front Assist 109
Automatic gearbox 103
Manually changing gear with the shift paddles on the steering wheel 103
Manually switching gear with the selector lever 103
Automatic gearbox modes 103
Availability of the ŠKODA Connect services 96

B

Battery acid 122
Blind spot assistant
functionality 114
Blind Spot Detect
Operating conditions 114
Restriction 114
Settings 114
Troubleshooting 114
Bonnet 118
Boot 134
Double-sided floor covering 136
Fasteners 135
Fastening nets 136
Net partition 136
Rigid cover 136
roll-up cover 137
Storage compartments 134
Transporting objects safely 17
Variable loading floor 138
Boot cover 136
Boot lid
Automatic locking 26
manual operation 26
Manually unlock 26
Boot storage
see boot lid 26
Brake fluid 107
Safety 15
Brakes 107
Handbrake 108
Breakdown call 99
Bulbs 39

C

Car adaptations
Recommendations 147
Safety 14
Cargo elements 135
Central locking 20
SAFE function 20
Central locking button 21
Centre console 10
Check the vehicle before your journey 15
Child lock 24
Child seat 31
Fastening using a belt 33
Grouping 32
ISOFIX 33
Keyword child seat 31
on the passenger seat 32
Recommended child seats 32
Securing children properly 16
TOP TETHER 34
Types of mounting 34

Cigarette lighter 141
Climatronic 46
Comfort flasher 37
Setting 38
COMING HOME 39
Compartments 138, 139
Coolant 119
Checking 119
Refilling 119
Safety 15
Specification 119
Temperature display 119
Troubleshooting 120
Warning lights 119
Cooling system 46
Cruise control system 111
Cup holder 141

D

Data Connection
Infotainment Amundsen 87
Daylight running lights 36
Activation 38
Deactivation 38
Deactivating the front passenger airbag 35
Distribution of the cargo 105
Door
Opening/closing 24
DriveGreen 104
Driver Alert 114
see fatigue detection assistant 114
Driver's seat 10
Driving data 50
Reset to default 50
Driving in neutral 103

E

Earth point 124
Economical driving 104
EDL 108
Electric windows 25
Activation 25
Force limiter 24
Operation 25
Troubleshooting 25
Emergency
Emergency call 18
Using jump start cables 123
What to do after an accident 19
What to do in the event of a fire 19
Emergency call 18
Emergency equipment 134
Car jack 134
Tool kit 134
Emergency wheel 129
safe driving 17
Engine compartment 11
Coolant 119
Engine oil 118
Flap 118
Safety 15
Engine number 151
Engine oil 118
Changing 118
Checking 118
Indicator light 119
Refilling 118
Safety 15
Specification 118
EPC 120
Equipment in the boot 134
ESC 108
Exhaust gas control system 120
Explanations 6
Exterior
lighting 36
Exterior mirrors 30
Extinguisher 134

F

Fasteners in the boot 135
First aid kit 134
Flooring in the boot 136
Fog light 37
Fog lights 37
Fogged windows 46, 47
Freewheel
Free-wheelingSee Driving in neutral 103
Front Assist 109
distance warning system 109
Front seat
Manually operated 27
Front vehicle area 7
Fuel
Petrol 121
Fuel filler flap 120
Fuel tank
Opening the flap 120
Fuses 125
In the dash panel 125
Replacing 125

H

Handbrake 108
Hazard warning light system 37
Headlights 38
Headlight range control 38
Headrests 28
Heated windscreen 47
Heating 45
HHC
see Hill Hold Control 108
High-beam
High-beam assist system 39
High-beam assist system 39
Hill Hold Control 108

Hook
in interior 139
in the luggage compartment 135

I

Ice scraper 9
Ignition lock 100
Images
Infotainment Amundsen 79
see digital version of the manual 5
Immobilizer 101
Indicator lights
Overview 11
Info call 99
Infotainment Amundsen 69
Infotainment Blues 52
Infotainment keyboard
see digital version of the manual 5
Infotainment overview
Infotainment Blues 52
Infotainment Overview
Infotainment Amundsen 69
Infotainment Swing 56
Infotainment screen
Infotainment Amundsen 71
Infotainment Swing 57
Infotainment Screen
Infotainment Blues 53
Infotainment settings
Infotainment Amundsen 70
Infotainment Blues 52
Infotainment Swing 57
Infotainment Swing 56
Instrument cluster
analogue 48
Instrument cluster display 48
Instrument cluster display 48
Interior
lighting 43
Interior fittings
12 volt socket 138
Car park ticket holder 138
Coat hook 139
Glasses compartment 138
Make up mirror 138
Map pockets 139
Storage compartments 138, 139
Ticket holder 138
Interior lighting 43
Operation 43
Interior mirror 29
ISOFIX 34
eyelets 34
Placement on the seat 33

J

Jump start cables 124

K

Key 20
Key switch for airbag deactivation 35
Key switch for the front passenger airbag
Key switch faulty 36
Keyboard
Infotainment Amundsen 72
Infotainment Swing 58
Keyless locking (KESSY) 22
Kick-down 103

L

LEAVING HOME 39
Lever
Buttons 49
High-beam assist system 39
Main beam 37
Turn signal 37
Windscreen wipers and washers 43
Liability for defects
see warranty 155
Light 36
Automatically switch on and switch off 36, 38
Change bulbs 39
Changing bulbs 39
Clean headlights 44
CORNER function 36
Daylight running lights 36
Driving in the opposite direction of traffic 38
Fog light 37
Hazard warning light system 37
Headlamp flasher 37
Headlight range adjustment of headlights 38
High-beam assist system 39
Indicator light 38
Low beam 38
Main beam 37
Operation 37
Parking light 37
Side light 37
Troubleshooting 38
Turn signal 37
Light Assist
see high beam assist system 39
Light switch 37
lightbulbs
Fog lights - change 41
Front flashing light - change 40
Tail light - change 42
Lightbulbs
Dipped beam - change 40
High beam - Replacing 40
Lighting
interior 43
outer 36
Lighting range 38
Limiter
see speed limiter 110

Lock 20
Locking elements
in engine compartment 126
Low beam 36

M

Main beam 37
Management of online services 98
Manual air conditioning 45
Manual gearbox 102
MCB 108
Media
Infotainment Amundsen 76
Infotainment Blues 54
Infotainment Swing 61
see digital version of the manual 5
Media Command
Infotainment Amundsen 81
MENU menu
Infotainment Amundsen 69
Mirror
see exterior mirror 30
MirrorLink
Infotainment Amundsen 88
Infotainment Swing 67
see digital version of the manual 5
Mirrors
see interior rear-view mirror 29
Mobile device management
Infotainment Amundsen 82
Infotainment Swing 64
MSR 108
Multi-collision brake
see MCB 108

N

Navigation
Infotainment Amundsen 90
Net partition 136
Nets 136
Notes on starting 101

O

Oil
see engine oil 118
Online services
Breakdown call 99
Info call 99
Online Services
Availability 96
Management of online services 98
Remote access to the vehicle 100
Service Scheduling 99
ŠKODA Connect 95
ŠKODA Connect application 96
User Account 97
User registration and activation of the ŠKODA Connect services 96
Vehicle status report 100
Operating the vehicle
Use jump start cables 123

P

Park Assist systems 115
Parking
Parking aid 115
Rear Traffic Alert 117
Reversing camera 116
Stop the vehicle safely! 18
Parking aid 115, 116
Parking brake 108
Parking light 37
ParkPilot
see parking aid 115
Passenger seat 10
Personal data 96, 155
Petrol 121
prescribed fuel 122
prescribed petrol 121
Refilling 121
Requirements for refuelling 121
Standards 121
Tank capacity 122
Troubleshooting 122
Power steering 29
Practical equipment
12 volt socket 143
Ashtray 141
Cigarette lighter 141
Cup holder 141
Storage compartment for the umbrella 141
Tablet holder 142

R

Radio
Infotainment Amundsen 74
Infotainment Blues 53
Infotainment Swing 59
see digital version of the manual 5
Radio systems in the vehicle 155
Rear fog light 37
Rear seats
Folding down 27
Rear Traffic Alert 117
Rear vehicle area 9
Rear view camera 116
Rear View Camera
Operation 116
Recirculated air mode 46
Refilling
Coolant 119
Engine oil 118
Petrol 121
Reflective vest 134
Release 20
Remote access to the vehicle 100

Restarting the Infotainment system
Infotainment Amundsen 70
Infotainment Swing 57
Rights arising from defective performance
see warranty 155
Roll-up boot cover 137
Roof rack 143
Attaching the carrier 143
Roof load 143
safe driving 17

S

Safe driving 17
SAFE function 20
Safety
Before your journey 14
Car adaptations 14
Child seat 16
Driving through water 18
Emergency call 18
Exiting the vehicle 18
New brake pads 14
New tyres 14
Running in the engine 14
safe driving 17
Sensors and cameras 14
sit properly 16
Transport cargo and objects 17
Transporting children 16
Warning lights 17
Weather conditions 18
Webbing route 16
What to do after an accident 19
What to do in the event of a fire 19
Seat belts 30
Adjusting the height 31
Automatic belt retractor 30
Belt tensioners 30
Blocked strap 31
correct arrangement 16
Fastening and unfastening 31
Status display 30
Seat heating 47
Seats 27
Folding down 27
Heating 47
ISOFIX 34
Rear seats 27
sit safely 16
TOP TETHER 34
Selector lever 103
Service events 147
Interval 147
Resetting information 147
Show service appointment 147
Service position for windscreen wiper arms 44
Service Scheduling 99
Service work 147
Set tyre pressure values 133
Setting personal data protection 97
Side light
see Parking light 37
Sliding/tilting roof 26
SmartLink
Infotainment Amundsen 88
Infotainment Swing 67
see digital version of the manual 5
Snow chains 129
Sockets
12-volt socket 143
safety 15
Spare wheel 129
safe driving 17
Speed limit 51
Resetting 51
Settings 51
Speed limit warning 51
Setting 51
Speed limiter 110
Indicator light 110
Start 101
Start the engine 100
START-STOP 102
Starter button 101
Steering column lock 29
Steering wheel 28
Buttons / dial 49
Buttons/dial: 28
correct position 16
Manually changing gear with the shift paddles on the steering wheel 103
Stopping the engine 100, 101
Storage 138, 139
Sun protection 26
Supported media files
see digital version of the manual 5
Supported media sources
see digital version of the manual 5
Switching low beam on automatically 36
Switching process
Manual gearbox 102
System
Infotainment Amundsen 70
Infotainment Swing 56

T

Tablet holder 142
Tank capacity
Petrol 122
Technical data 151
Dimensions 153
Telephone
Infotainment Amundsen 84
Infotainment Swing 65
Tips for economical driving 104
Tiptronic 103

Tool 134
TOP TETHER 34
eyelets 34
Topping up
Windscreen washer fluid 44
Touch operation
Infotainment Amundsen 71
Infotainment swing 58
Tow hitch 143
Inserting tow bar 144, 145
Overview 143
Prerequisites for installing the tow bar 144
Ready position 144
Setting the ready position 144
Vertical load 146
What you should be mindful of 143
Tow rope 106
Towing a trailer 105
Safety 18
Towing lug 106
Towing the vehicle 106
Traffic accident
Emergency call 18
What to do after an accident 19
Trailer 105
Alarm system 23
Coupling and uncoupling 146
Permissible load 105
safe driving 18
Trailer coupling
Troubleshooting 146
Transport
Roof rack 143
Tow hitch 143
Transporting objects safely 17
Turn signal 37
Type plate 151
Tyre pressure monitor 132
Tyres 127, 128
Breakdown set 131
Labelling overview 127
Pressure 132
Snow chains 129
Tyre pressure monitor 132
Wear indicator 127

U

Umbrella 141
Unlock 22
Update Infotainment
Infotainment Amundsen 70
Infotainment Swing 57
Updating infotainment
see digital version of the manual 5
USB 138, 139
User Account 97
User registration 96

V

Variable loading floor in the boot 138
Vehicle cleaning
Exterior 149
Instructions for cleaning the interior 149
Instructions for cleaning the outer area 150
Interior 148
Vehicle dimensions 153
Vehicle height 153
Vehicle Identification Number (VIN) 151
Vehicle length 153
Vehicle status 51
Vehicle status report 100
Vehicle width 153
Vest
see reflective vest 134
VIN
see vehicle identification number 151
Voice control
Infotainment Amundsen 73

W

Warning lights
Foreword 11
Warning triangle 134
Warranty 155
Mobility warranty 156
Optional Extended Warranty 157
Rights arising from defective performance 155
Warranty for new cars 156
Waste container 141
Weight 152
Wheels 127
Breakdown 128
Change 129, 130
Cover caps for the screws 133
Full wheel covers 133
Overview of tyre labelling 127
Pressure change 128
Spare wheel and emergency wheel 129
Tyre pressure 132
Tyre pressure monitor 132
Wear indicator 127
Wi-Fi
Infotainment Amundsen 86
see digital version of the manual 5
Window 25
heating 47
mechanical operation 24
Windscreen washer fluid
How is the washer fluid refilled? 44
Level too low 44
Windscreen washer system
see windscreen wiper and washer 43
Windscreen wiper and washer
Refill windscreen washer fluid 44
Windscreen washer fluid level too low 44
Windscreen wipers and washers 43

automatic rear window wiping 44
automatic wiping 44
Replace the windscreen wiper blade 45
Unfold the windscreen wiper arms 44
Winter tyres 128

X

XDL + 108