

EQB

Operator's Manual +

Mercedes-Benz

F243 0102 13


Did you know?

To meet all needs, your Operator's Manual is available in various formats. In addition to this PDF, the following options are open to you:

Digital – in the vehicle
Familiarize yourself with the Operator's Manual under Preferences in the multimedia system. Start with Quick Start and discover useful tips.

Printed - in the vehicle
Find printed information pertaining to operation of your vehicle here. Depending on the respective country of use, additional printed information may be included.

Front passenger airbag warning

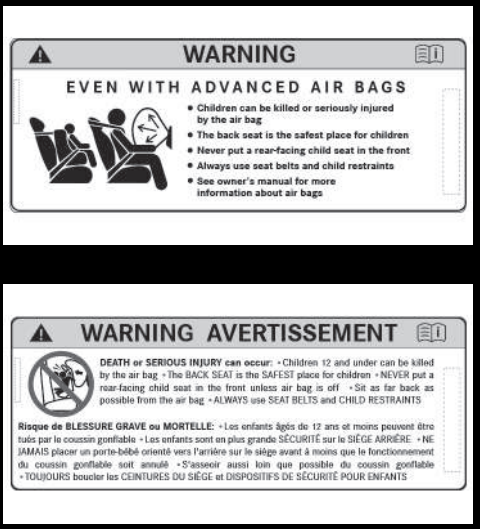

Airbag warning sticker for USA and Canada

⚠ WARNING
Risk of injury- or fatal accident if the front passenger airbag is enabled

If the front passenger airbag is enabled, a child on the front passenger seat may be struck by the front passenger airbag during an accident.

► NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

Observe the chapter "Children in the vehicle".

Welcome to the world of Mercedes-Benz

Before your first drive, please read this Operator's Manual carefully and familiarize yourself with your vehicle. For your own safety and a longer operating lifespan for the vehicle, follow the instructions and warnings in this Operator's Manual. Failure to do so may lead to personal injury or damage to the vehicle.

Vehicle damage caused by failure to observe the instructions is not covered by the Mercedes-Benz Limited Warranty.

THE EQUIPMENT FEATURES OR PRODUCT DESIGNATION OF YOUR VEHICLE MAY DIFFER FROM THE CONTENT DESCRIBED IN THE OPERATOR'S MANUAL. THE OPERATOR'S MANUAL DESCRIBES THE FOLLOWING CONTENT:

- The models and the standard and special equipment available at the time of this Operator's Manual going to press.
- The models and the standard and special equipment only available in certain countries.
- The models and the standard and special equipment which will only become available at a later date.

Please note that your vehicle may not be equipped with all features described. This is also the case for safety-relevant systems and functions. In individual cases, your vehicle may therefore differ from that shown in the descriptions and illustrations.

MERCEDES-BENZ IS CONSTANTLY DEVELOPING ITS VEHICLES FURTHER AND RESERVES THE RIGHT TO INTRODUCE CHANGES IN THE FOLLOWING AREAS:

- Design
- Equipment
- Technical features

The latest and complete information about your vehicle and the description of any subsequently uploaded functions are contained in the Digital Operator's Manual in the multimedia system.

The original purchase agreement for your vehicle includes a list of the equipment features in your vehicle at the time of delivery.

THE FOLLOWING DOCUMENTS ARE COMPONENTS OF THE VEHICLE:

- Digital Operator's Manual in the multimedia system
- Printed Operator's Manual
- Maintenance Booklet (USA only)
- Supplementary manuals relating to specific equipment
- Supplementary documents

Keep these documents in the vehicle at all times. Ensure that all documents are in the vehicle or passed on in the event of sale or rental.

For questions concerning equipment and operation, please contact a Mercedes-Benz Service Center.

The latest information on service and warranty, along with a digital copy of this Operator’s Manual, can be found on the following website.

USA only:

https://www.mbusa.com/en/vehicle-information

Canada only:

https://www.mercedes-benz.ca/en/owners/manuals (English)

https://www.mercedes-benz.ca/fr/owners/manuals (French)

Mercedes-Benz USA, LLC

A Mercedes-Benz Group AG Company

Mercedes-Benz Canada, Inc.

Disclaimer

The following online version of the Operator's Manual describes all models as well as all standard and special equipment of your vehicle. Country-specific deviations are possible among the various languages. Note that your vehicle may not be equipped with all the features described. This is also the case for safety-relevant systems and functions.

Please contact your authorized Mercedes-Benz dealer to receive a printed Operator's Manual for other vehicle models and vehicle model years. The Online Operator's Manual is the current version. Possible variations to your vehicle may not be taken into account as Mercedes-Benz constantly updates their vehicles and equipment to the state of the art and introduces changes in design and equipment.

Please also read the printed Operator's Manual, supplementary documents, and the Digital Operator's Manual in the vehicle.

COPYRIGHT

All Rights Reserved. All texts, images and graphics are subject to copyright law and other laws protecting intellectual property. They may not be copied for commercial purposes or for transmission, nor changed and used on other websites.

Contents

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Symbols

Quick start and tips

At a glance

Digital Operator's Manual

General notes

Occupant safety

Children in the vehicle

Opening and closing

Seats and stowing

Light and visibility

Climate control

Driving and parking

Driver display

MBUX Voice Assistant

MBUX multimedia system

Maintenance and care

Breakdown assistance

Wheels and tires

Technical data

Display messages and warning/indicator lamps

Index

Symbols

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

In this Operator's Manual, you will find the following symbols:

WARNING
Danger due to failure to observe the warning notices

Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.

► Observe the warning notices.

ENVIRONMENTAL NOTE
Environmental damage due to failure to observe environmental notes

Environmental notes include information on environmentally responsible behavior or environmentally responsible disposal.

► Observe environmental notes.

NOTE
Damage to property due to failure to observe notes on material damage

Notes on material damage inform you of risks which may lead to your vehicle being damaged.

► Observe notes on material damage.

These symbols indicate useful instructions or further information that could be helpful to you.

►	Instruction
(→ page)	Further information on a topic
Display	Display in the central display
	Highest menu level, which is to be selected in the multimedia system
	Relevant submenus, which are to be selected in the multimedia system
*	Indicates a cause

Quick start and tips

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Children in the vehicle
Radio
Wi-Fi hotspot
Connecting a mobile phone
MBUX Interior Assistant
MBUX Voice Assistant
ENERGIZING Packages
Driving Assistance package
Parking Package
AC charging of the high-voltage battery (mode 2 oder 3)
DC charging of the high-voltage battery (mode 4)
Destination entry navigation
New multimedia system features
At the gas station
Preparing for a holiday
Luggage and loading
Ice and snow
Help in the event of a breakdown
Expert knowledge

Children in the vehicle

Safely transporting children in the vehicle

- When children are traveling in the vehicle, always observe the following (→ page 137)
- Important warning stickers (→ page 138)
- Suitable seats in the vehicle for installing a child restraint system (→ page 135)
- Activating/deactivating the child seat safety feature of the seat belt (→ page 146).
- Installing the ISOFIX/LATCH child restraint system on the rear seat (→ page 147)
- Securing a Top Tether belt (→ page 149)
- Securing the child restraint system with the seat belt (→ page 150)
  - Notes on rear-facing and front-facing child restraint systems on the front passenger seat (→ page 141)
- Automatic front passenger airbag deactivation (→ page 141)
- Child safety locks for the rear side windows (→ page 154)
- Child safety locks for the rear doors (→ page 152)

Radio

Operating radio

► **To switch to radio:**
- Briefly press [⌂] in the multimedia system display.
- Tap on [♪].

► **To set the frequency band:**
- Briefly press [⌂] in the multimedia system display.
- Tap on [♪].
- Select a frequency band or a favorite.

► **To set a radio station:**
- Briefly press [⌂] in the multimedia system display.
- Tap on [♪].
- Swipe to the left or right on the control element or select a radio station.

► **To call up the radio station list:**
- Briefly press [⌂] in the multimedia system display.
- Tap on [♪].
- Select [☰♪].

► **To search for radio stations using station names or frequency entry:**
- Briefly press [⌂] in the multimedia system display.
- Tap on [♪].
- Select [🔍].
- Enter a station name or frequency.
- Select a station.

► **To store radio stations:**
- Briefly press [⌂] in the multimedia system display.
- Tap on [♪].
- Select [☆].

► **To set the traffic information service volume increase:**
- Briefly press [⌂] in the multimedia system display.
- Tap on [⚙].
- Select System.
- Select Audio.
- Select Navigation and Traffic Announcements.
- Set a value for Increase Volume for Traffic Announcement.

Wi-Fi hotspot

Setting up a Wi-Fi hotspot

GENERALLY, TWO TYPES OF WI-FI CONNECTION ARE AVAILABLE:

- Using the multimedia system as a Wi-Fi hotspot

  The multimedia system serves as a Wi-Fi hotspot for mobile communication devices such as a smartphone or tablet PC.

  The data volume of the vehicle or an already connected tethering device is used for the data connection.

  Data volume must be purchased for a fee via the Mercedes-Benz Portal.

  The use of the vehicle data tariff by external devices is not available in all countries.
- Using a mobile communication device as a Wi-Fi hotspot (tethering)

  An external Wi-Fi hotspot is accessed for the Internet connection of the multimedia system.

  The data tariff of the mobile communication device via Data Plan is used for the data connection.

OPTIONS FOR SETTING UP A CONNECTION:

- QR code

  The connection is set up by scanning the QR code shown on the multimedia system.
- NFC

  The connection is set up by placing the mobile communication device in the NFC interface of the vehicle.
- Security key

  The connection is established by entering the security key displayed on the multimedia system.

Connecting a mobile phone

Connecting a mobile phone

► **Activating Bluetooth®:**

- Make sure that the mobile phone Bluetooth® is switched on.
- Tap on [⌂] the central display or media display.
- Select Settings.
- Select System.
- Select Internet and Bluetooth.
- Activate Bluetooth®.

► **Searching for a mobile phone:**

- Tap on [⌂] the central display or media display.
- Select Phone.
- Select [⚙].
- Select Devices.
- Select Devices.
- Select Connect New Device.

► **Authorizing a mobile phone:**

- Select a mobile phone.

A code is displayed in the multimedia system and on the mobile phone.

► If the codes match, confirm the code on the mobile phone.

MBUX Interior Assistant

Using the MBUX Interior Assistant

If the vehicle is equipped with the MBUX Interior Assistant, selected functions of the multimedia system can be operated contact-free

The Assistant recognizes driver and front passenger interactions.

THE ASSISTANT SUPPORTS VEHICLE AND INFOTAINMENT FUNCTIONS AT THREE INTERACTION LEVELS:

- INTELLIGENT
  The Assistant recognizes vehicle occupants and objects automatically and activates functions.
- REACTIVE
  The Assistant recognizes the natural body language of a vehicle occupant and carries out functions automatically, appropriate to the situation.
- CONTACTLESS
  The vehicle occupant actively requests a function using a hand movement or pose.

THE ASSISTANT OFFERS FUNCTIONS FOR THE FOLLOWING:

- SAFETY
  The Assistant supports vehicle occupants with the use of restraint systems.
- COMFORT
  The Assistant enhances comfort by automating functions inside the vehicle and supporting natural interaction with the vehicle.
- INFOTAINMENT
  The Assistant facilitates operation of the Infotainment functions.

One application example is switching the reading light on or off.



Carrying out operation of the reading light for the driver and front passenger

► Move your hand up and down under the inside mirror.
The reading light is switched on or off.

MBUX Voice Assistant

Operating the MBUX Voice Assistant

YOU CAN USE THE MBUX VOICE ASSISTANT TO OPERATE THE FOLLOWING FUNCTIONS DEPENDING ON THE VEHICLE EQUIPMENT:

- Telephone
- Text message and e-mail
- Navigation
- Radio and media
- Vehicle functions
- Online functions

EXAMPLES OF POSSIBLE VOICE COMMANDS:

- To operate the phone: Call my father.
- To manage e-mails: Show me my new e-mails.
- To operate the navigation: Search for an Asian restaurant, but not Japanese, in South London.
- To operate the radio: Which station am I currently listening to?
- To operate media: Play a similar track.
- To operate climate control: My feet are cold.
- To operate vehicle functions: Open the window.
- To call up the weather: Will it be sunny tomorrow?
- To ask a general knowledge question: Who painted the picture "The Scream"?

ENERGIZING Packages

Operating ENERGIZING COMFORT

► **To start an ENERGIZING program:**
- Briefly press [⌂] in the multimedia system display.
- Select Comfort.
- Select ENERGIZING COMFORT.
- Select a program and start with [▶].

► **To configure an ENERGIZING program:**
- Select a program.
- Select Settings.
- Switch the functions included in the program on or off.

► **To start Power Nap:**
- Select Power Nap.
- Select [▶] for the desired seat.

► **To start a training program:**
- Select Training.
- Select a program and start with [▶].
- To activate fragrancing for training, select Fragrance.

► **To start Tips:**
- Select Tips.
- Select an area of the body and start with [▶].

Driving Assistance package

Driving Assistance Package functions

Depending on availability for the respective country of use, the vehicle may be equipped with various functions which are provided to assist the driver. The vehicle is therefore installed with cameras and sensors to monitor the vehicle surroundings.

- **Active Distance Assist DISTRONIC** (⟶ page 334)

You can watch an animation on this topic via the following link:

- **Active Speed Limit Assist** (⟶ page 340)

You can watch an animation on this topic via the following link:

- **Route-based speed adaptation** (⟶ page 341)
- **Active Brake Assist** (⟶ page 346)

You can watch an animation on this topic via the following link:

- **Active Steering Assist** (⟶ page 343)

You can watch an animation on this topic via the following link:

- **Active Emergency Stop Assist** (⟶ page 345)
- **Blind Spot Assist with exit warning** (⟶ page 354)
- **Active Lane Keeping Assist** (⟶ page 356)

Parking Package

Functions of the Parking Package

Depending on availability for the respective country of use, the vehicle may be equipped with various functions which are provided to assist the driver with parking and maneuvering. The vehicle is therefore installed with cameras and sensors to monitor the vehicle surroundings.

- **Close-range braking** (⟶ page 376)

You can watch an animation on this topic via the following link:

Depending on the respective equipment version, the following systems and functions are part of your Parking Package:

- **Reversing camera:** monitors the area behind the vehicle and relays an image of this area to the driver display (⟶ page 358).
- **360° camera:** a system comprising four cameras which record the immediate vehicle surroundings and relay an image to the driver display (⟶ page 362).
- **Parking Assist PARKTRONIC:** an electronic parking assistance system which monitors the area surrounding your vehicle and the distance to obstacles in the vicinity using ultrasound (⟶ page 366).
- **Active Parking Assist:** an electronic parking assistance system which assists you when parking or exiting a parking space by changing gear, accelerating, braking and steering the vehicle (⟶ page 369).

AC charging of the high-voltage battery (mode 2 oder 3)

AC charging (mode 2 or 3)

Starting and ending the charging process

- More notes on charging the high-voltage battery (⟶ page 293)
- Overview of the charging cable control panel

DC charging of the high-voltage battery (mode 4)

DC charging (mode 4)

Starting and ending the charging process

- More notes on charging the high-voltage battery (→ page 293)
- Overview of the charging cable control panel

Destination entry navigation

Entering a navigation destination

► Briefly press [⌂] in the multimedia system display.

The home screen is shown.

► Select Navigation.

► Select [🔍].

SELECT THE FOLLOWING OPTIONS FOR DESTINATION ENTRY:

- Enter a POI, an address or a three-word address in the input line.

  Online search results for POIs (if available) may contain additional information, for example opening times and prices. The information is provided by an online map service.

  You can find further information about three-word addresses at: http://what3words.com
- Select a destination suggestion.

  Requirements:

  The Navigation option is switched on in the user settings for Suggestions.

  The multimedia system has gathered sufficient data in order to show destination suggestions.
- Select Previous Destinations.

  Select a previous destination.

  You can save the destination as a favorite .
- Select POIs.

  Select a POI category, e.g. [P] or enter a POI name or POI category in the input line.

  If search results are displayed, limit them with Filter, for example by search position or the desired travel time.
- Select Contacts.

  Requirements:

  A mobile phone is connected to the multimedia system and contacts have been downloaded.

  The contact contains a navigable address.
- Enter the geocoordinates as latitude and longitude in the input line.

  Example 1: 47°58'11"N 7°57'25"E (degrees, minutes, seconds and compass direction)

  Example 2: 47.969722 7.956944 (decimal degrees)
- Select a destination on the map.
- Select Favorites.

  Requirements:

  The destinations have been saved as favorites.
- Select Received Destinations.

  Requirements:

  There is an Internet connection for receiving external destinations.

  The destinations have been sent to the vehicle.

New multimedia system features

Information about the telephone menu



1. Bluetooth® device name of the currently connected mobile phone/of the mobile phone
2. Bluetooth® device name of the currently connected mobile phone/of the mobile phone (two phone mode)
3. Signal strength of the mobile phone network
4. Battery status of the connected mobile phone
5. Options
6. Messages
7. Calls up my devices
8. Numerical pad
9. Starts contact search

TELEPHONE MENU OVERVIEW
Via the telephone menu you can use the functions in connection with your mobile phone.

THE FOLLOWING FUNCTIONS CAN BE USED:

- Call lists
- Contacts
- Messages
- Device manager

USING CALL LISTS
If your mobile phone supports the PBAP Bluetooth® profile, the call lists from the mobile phone are displayed in the multimedia system.

THE FOLLOWING FUNCTIONS ARE AVAILABLE:

- Making calls from the call list
- Opening contacts on the call list

MESSAGES
In the message menu you can receive text messages and create and send them with the help of the MBUX voice assistant. In addition, you can conveniently use the read-aloud function during the journey.

DEVICE MANAGER
In the device manager, you can connect your mobile phone with the multimedia system.

You have the option of using your mobile phone alone in single telephone mode or together with another mobile phone in two phone mode.

USING CONTACTS
If you permit the multimedia system to access the contacts in your mobile phone, you can use these in the vehicle. You can store up to 8,000 contacts.

THE FOLLOWING OPTIONS ARE AVAILABLE TO YOU VIA THE CONTACTS MENU:

- Making telephone calls (calling a contact)
- Navigation
- Composing messages with the help of the MBUX voice assistant
- Additional options

The contacts from your mobile phone can be downloaded automatically or manually.

CONDUCTING A CALL
When conducting a call, additional functions are available apart from making, accepting or rejecting a call. For example, you can switch between calls, conduct a call with several participants or conference calls.

It is also possible to accept or reject waiting calls. If you receive a call while already in a call, a message is displayed.

DURING A CALL YOU CAN ACTIVATE THE FOLLOWING FUNCTIONS:

- Microphone off
- Fade in the numerical pad to send DTMF tones
- Add a call
- Hands-free mode to transfer the call to the front or rear passenger compartment
- Privacy mode to transfer the call to the telephone or headphones

Information about navigation



1. Navigation module (reduced view)
   Route guidance active:
   Reduced view of the navigation module shows information relevant to the route, e.g. the next charging stop, the destination and a traffic delay
   Tapping opens the navigation module and displays the route overview (⟶ page 460)
   Tapping on the checkered flag ends the current route guidance
2. Sets map orientation and map type
3. Calls up the telephone menu
4. Calls up entertainment applications
5. Navigation window shows the next maneuver (zoomed out view) or the route monitor (zoomed in view)
   Route guidance active: route monitor shows, e.g. route sections, upcoming driving maneuvers with lane recommendations, charging stops, destination, traffic delays, 3D images at freeway exits, online content

When you switch on the multimedia system or after selecting [⌂], the digital map is shown.

The navigation system offers many options for destination entry, route planning and route guidance. The traffic situation is taken into account during route guidance. When using route guidance with augmented reality, additional information can be shown in a camera image before a turning maneuver. Services and apps help you reach the destination quickly, safely and in comfort.

After tapping on navigation module (1) start destination entry via [🔍] in the route overview. You can enter the POI, address or contact as the destination on-board or search online using a map service. Or you select a previous destination. The destination can be stored here as a favorite or be saved as an address for home and work. When the Allow Destination Suggestions option is switched on, the vehicle makes suggestions based on your visited navigation destinations. If external destinations and routes are received from apps or services, these are also available.

THE FOLLOWING OPTIONS ARE AVAILABLE FOR ROUTE PLANNING, FOR EXAMPLE:

- Navigation with Electric Intelligence

  If the Plan Charging Stops route option is enabled, the optimal route based on time is calculated with the required charging stops. The charging stops are determined taking into account the route and charging times and are set as intermediate destinations for route guidance.
- Route options:

  e.g. Plan Charging Stops and avoid or use toll roads, tunnels, unpaved roads or avoid areas
- Intermediate destinations
- Alternative routes
- Commuter route
- Service station search

You can record and save routes then select or share them with a USB device.

Lane recommendations are shown during route guidance on multi-lane roads. When driving on a freeway, service facilities on the route ahead can be shown and used for route guidance.

The Live Traffic Information service takes the current traffic situation into account. The map can show the current traffic flow, traffic incidents or warning messages, e.g. before the end of traffic jams that pose a risk.

Hazardous situations on public roads are detected automatically by the vehicle via Car-to-X-Communication or these can be reported by the driver. The early warning makes it possible to adapt your driving characteristics in good time. Accidents, broken-down vehicles, weather hazards or a vehicle with activated hazard warning lights are shown on the map.


For route guidance with augmented reality, information objects such as arrows indicating a turn, street names and house numbers are shown in a video image during the driving maneuver or at traffic lights.

The map shows map data from the database or from an online map service. In small map scales, buildings are shown as realistic images. The online map update service makes possible the updating of the map data.

Weather information and data from other services can be shown on the map. Parking garage with the corresponding equipment, deliver data about the current occupancy and about parking charges, for example.

The options offered vary depending on the country, vehicle equipment and available services.

NAVIGATION MODULE (EXPANDED VIEW) WITH ROUTE OVERVIEW

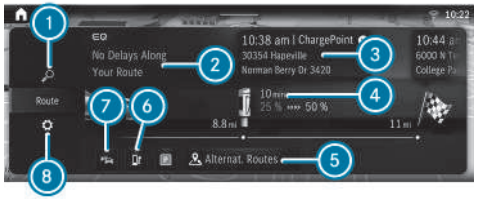

Example: route guidance is active

1. Enters an address or POI
2. Information about delays along the route
3. Arrival time and address for the charging stop
4. Charging stop shows the charging time recommended by the Navigation with Electric Intelligence as well as states of charge on arrival and onward journey for an optimal travel time
   as well as: current distance to charging stop
5. Alternative routes
6. Searches for an additional charging station
7. Switches traffic information display on or off
8. Makes settings for View, Messages & Acoustic Signals and Route

Information on radio




1. Station logo
2. Active frequency band
3. Station name or set frequency
4. Settings
5. Mutes volume
6. Switches HD Radio® on/off
7. Station list
8. Search

Using the radio menu you can play a multitude of radio stations and use the Internet Radio TuneIn. Search for your preferred stations and save these as favorites or in station lists.

ⓘ The function of TuneIn Internet radio is country-dependent.

Radio text: this function shows you the station name, the track and the artist for the song currently playing, for example.

Information on media

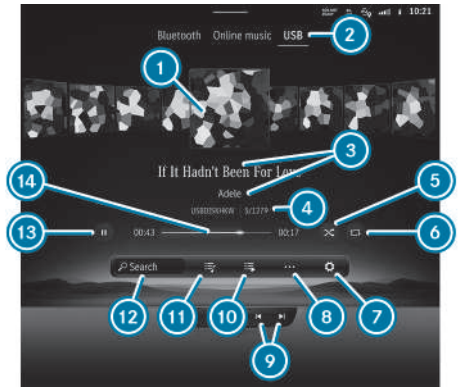

1. Album cover
2. Active media source
3. Track and artist
4. Active data storage medium and current track number/track in playback list
5. Random playback
6. Repeat
7. Settings
8. Additional options
9. Previous or next track and fast rewind or fast forward
10. Additional categories
11. Playlists and categories
12. Media search
13. Controls playback
14. Timeline

Using the Media application, you can set and use the audio and video functions of your multimedia system. You can listen to music or look at videos, for example.

USB: Using the USBmenu, you can play back your own audio or video data from a data storage medium connected by USB.

Bluetooth®: using the Bluetooth menu, you can connect a Bluetooth® audio device with the multimedia system and play back the available tracks on the audio device. Connecting the device can be conveniently handled in the device manager, so you can complete all settings with just a few clicks.

Online music: The Online Music menu allows you to access music streaming services.

Notes on comfort

The Comfort menu makes all the functions available that contribute to your comfort when driving or taking a break.

SEAT COMFORT
The Seat menu allows you to flexibly adjust the contours of the seats to your needs by adjusting the side bolsters and lumbar support independently. You can save these settings in your Mercedes me profile, so they can be called up each time you drive. With the Seat Kinetics function, you can start a program that causes slight modifications of the seat position when you are driving. These modifications promote a healthy back.

MASSAGE
In the Massage menu you will find the massage programs that are available for your vehicle. By selecting the desired program you start it directly and it runs for a period of approximately ten minutes, depending on the program selected. With the Intensive function you can increase the effect of the massage program.

AMBIENT LIGHT
In the Ambient Light menu you can set the color and brightness for your ambient lighting. Using the Link Zones function, the ambience, accent and impression zones can be regulated separately so that you can set the lighting of your vehicle individually.

Information about smartphone integration

Using the Smartphone Integration menu, various applications are available that can bring the functions of your mobile phone to the multimedia system display. Operation can by carried out via the touchscreen or voice control, for example.

Only one mobile phone at a time can be connected via Smartphone Integration to the multimedia system. Also for use with two phone mode with Smartphone Integration, only one additional mobile phone can be connected using Bluetooth® with the multimedia system.

Use Android Auto for mobile phones with the Android operating system and use Apple CarPlay® with your iPhone®. The full functionality of Android Auto and Apple CarPlay® is only possible with an Internet connection.

Information about vehicle info

You can have important vehicle information displayed in the Info menu. At a glance you will have an overview of vehicle and engine data or current consumption values, for example. In addition, you can call up the Digital Operator's Manual via the Operator's Manual menu item.

VEHICLE DATA
THE FOLLOWING DATA WILL BE SHOWN, FOR EXAMPLE:

- Activity of the acceleration and brake pedal
- Activity of the suspension strut
- Wheel angle
- G-force display for the linear and lateral acceleration

ENGINE DATA
THE FOLLOWING DATA IS SHOWN:

- Transmission oil temperature
- Engine/coolant temperature
- Performance
- Torque
- Boost pressure

CONSUMPTION DATA
Depending on your driving style, this display shows the current and average fuel consumption. Together with the displays of vehicle and engine data, you can adapt your driving style to be as efficient and economical as possible.

Information on MB Apps (Digital Extras)

VARIOUS SERVICES AND ONLINE FUNCTIONS ARE AVAILABLE VIA THE MB APPS MENU:

- Managing Digital Extras
- Using the dashcam
- Using the web browser to surf the Internet

You require a Mercedes me ID user account, and have to connect your vehicle with the user account, in order to be able to use services.

If the Mercedes-Benz App is available on a mobile phone, the vehicle link can be made via the displayed QR code.

Please not that the available features are country-dependent.

Information on settings

In the Settings you can set the basic configuration for your multimedia system and the vehicle. You have access to all functions in this menu, from switching the driver assistance systems on and off to display and language settings.

THE SETTINGS ARE STRUCTURED IN THE FOLLOWING MENUS:

- Assistance
- Vehicle
- Light
- System

ASSISTANCE MENU
With the Assistance menu you have direct access to the driver assistance systems which are installed in your vehicle and can either switch these on or off, or configure according to your wishes.

VEHICLE MENU
HERE YOU CAN ACTIVATE THE FOLLOWING FUNCTIONS, FOR EXAMPLE:

- Automatic folding in of the outside mirrors when parking the vehicle
- Automatic adjustment of the seat and steering wheel, for comfortable entry and exit from the vehicle
- Automatic activation of the 360° camera when selecting reverse gear

LIGHT MENU
All the light settings can be carried out in the Light menu. You can activate or deactivate the Intelligent Light System here, set for how long your vehicle should remain lit after parking or unlocking or switch the function off.

SYSTEM MENU
All important settings for the multimedia system can be carried out in the System menu.

YOU CAN CARRY OUT THE FOLLOWING SETTINGS, FOR EXAMPLE:

- Setting the system language
- The configuration of Wi-Fi and Bluetooth®
- Setting of time and date

At the gas station

Checking the tire pressure manually

- Read the tire pressure recommended for the current operating conditions from the tire and loading information placard or the tire pressure table. Observe the notes on tire pressure.
- Remove the valve cap of the tire to be checked.
- Press the tire pressure gauge securely onto the valve.
- Read the tire pressure.
- If the tire pressure is lower than the recommended value, increase the tire pressure to the recommended value.
- If the tire pressure is higher than the recommended value, release air. To do so, press down the metal pin in the valve, e.g. using the tip of a pen. Then check the tire pressure again using the tire pressure gauge.
- Screw the valve cap onto the valve.

Refilling the windshield washer system

DANGER
Risk of fatal injuries when carrying out maintenance work during the charging process

During the charging process, the high-voltage on-board electrical system is under high voltage.

- Do not perform any maintenance work during the charging process.

WARNING
Risk of injury due to overheated vehicle

IF YOU OPEN THE HOOD IN THE EVENT OF AN OVERHEATED VEHICLE OR FIRE IN THE ENGINE COMPARTMENT, THE FOLLOWING SITUATIONS MAY OCCUR:

- You may come into contact with hot gases.
- You may come into contact with other escaping hot operating fluids.

► In the event of overheating or fire in the engine compartment, keep the hood closed and call the fire service.

► Allow the overheated vehicle to cool down first if you need to open the hood.

WARNING
Risk of injury due to moving parts

Components in the engine compartment may continue to run or start unexpectedly even when the drive system is switched off.

Observe the following if you must open the hood:

► Switch off the vehicle.

► Never touch the danger zones surrounding moving components, e.g. the rotation area of the fan.

► Remove jewelery and watches.

► Keep items of clothing and hair away from moving parts.

WARNING
Risk of burns from hot components in the engine compartment


Certain components in the engine compartment can be very hot, e.g. the drive system and the cooler.

► Allow the drive system to cool down and touch only the components described below.

WARNING
Risk of fire and injury from windshield washer concentrate

Windshield washer concentrate is highly flammable.

► Avoid fire, open flames, smoking and the creation of sparks when using windshield washer concentrate.

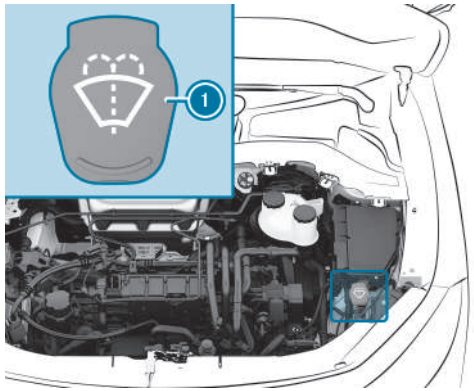

► Remove cap (1) by the tab.

► Add washer fluid.

Replacing the windshield wiper blades

WARNING
Risk of becoming trapped if the windshield wipers are switched on while wiper blades are being replaced

If the windshield wipers begin to move while you are changing the wiper blades, you can be trapped by the wiper arm.

- Always switch off the windshield wipers and vehicle before changing the wiper blades.

MOVING THE WIPER ARMS INTO THE REPLACEMENT POSITION


- Switch the vehicle on and then off again immediately.
- Within around 15 seconds, press and hold the button on the combination switch for approximately three seconds (⟶ page 251).

  The wiper arms will move into the replacement position.

Check the condition of the wiper blades regularly and replace them in the event of visible damage or ongoing smearing.

- Observe the information about the service indicator.

SERVICE INDICATOR

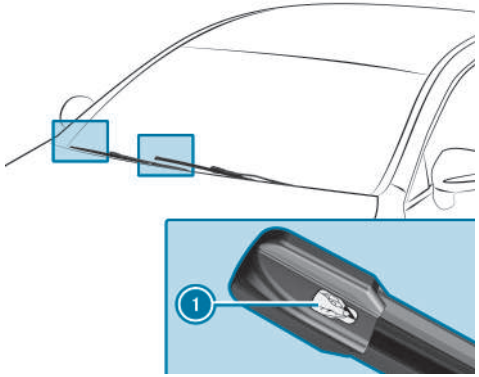

- Remove protective film (1) from the service indicators on the tips of the newly installed wiper blades.

When the color of the service indicator changes from black to yellow, replace the wiper blades.

The time it takes for the color to change will vary depending on the usage conditions.

Information on washing the vehicle in a car wash

WARNING
Risk of accident due to reduced braking effect after washing the vehicle

The braking effect is reduced after washing the vehicle.

► After the vehicle has been washed, brake carefully while paying attention to the traffic conditions until the braking effect has been fully restored.

NOTE
Damage from automatic braking

THE VEHICLE WILL BRAKE AUTONOMOUSLY IN CERTAIN SITUATIONS IF THE FOLLOWING FUNCTIONS ARE SWITCHED ON:

- Active Brake Assist
- Active Distance Assist DISTRONIC
- HOLD function
- Active Parking Assist

To avoid damage to the vehicle, switch these systems off e.g. before towing it or in a car wash.

NOTE
Damage due to unsuitable car wash

► Before driving into a car wash make sure that the car wash is suitable for the vehicle dimensions.

► Ensure there is sufficient ground clearance between the underbody and the guide rails of the car wash.

► Ensure that the clearance width of the car wash, in particular the width of the guide rails, is sufficient.

TO AVOID DAMAGE TO YOUR VEHICLE WHEN USING A CAR WASH, ENSURE THE FOLLOWING BEFOREHAND:

- Active Distance Assist DISTRONIC is switched off.
- The HOLD function is switched off.
- The 360° camera or the reversing camera is switched off.
- The side windows and sliding sunroof are completely closed.
- The blower for the ventilation and heating is switched off.
- The windshield wiper switch is in position 0.
- The key is at least 10 ft (3 m) away from the vehicle. Otherwise the tailgate could open unintentionally.
- For car washes with conveyor systems:
  - Neutral gear N is engaged.
  - If you leave the vehicle while it is being washed, ensure the key is located in the vehicle. The park position P is otherwise automatically engaged.

Removing the wax from the windshield and the wiper rubber after washing the vehicle will help to avoid smearing and reduce wiper noise.

Preparing for a holiday

Notes on regularly inspecting wheels and tires

WARNING
Risk of injury through damaged tires

Damaged tires can cause tire pressure loss.

► Check the tires regularly for signs of damage and replace any damaged tires immediately.

WARNING
Risk of hydroplaning due to insufficient tire tread

Insufficient tire tread will result in reduced tire grip. There is a risk of an accident.

On a wet road surface the risk of hydroplaning is increased, in particular where speed is not adapted to suit the conditions.

► Check the tread depth and the condition of the tire contact surface across the entire width of all tires on a regular basis.

MINIMUM TREAD DEPTH FOR

- summer tires: ⅛in (3 mm)
- M+S tires: ⅙in (4 mm)

► For safety reasons, replace the tires before the legally-prescribed limit for the minimum tread depth is reached.


► Replace the tires immediately if the legally-prescribed limit for the minimum tread depth is reached.

CARRY OUT THE FOLLOWING CHECKS ON ALL WHEELS REGULARLY, AT LEAST ONCE A MONTH OR AS REQUIRED, FOR EXAMPLE, PRIOR TO A LONG JOURNEY OR DRIVING OFF-ROAD:

- Check the tire pressure (⟶ page 602).


- Visually inspect wheels and tires for damage.
- Check the valve caps.
- Visual check of the tire tread depth and the tire contact surface across the entire width.

  The minimum tread depth for summer tires is ⅛ in (3 mm) and for winter tires ⅙ in (4 mm).

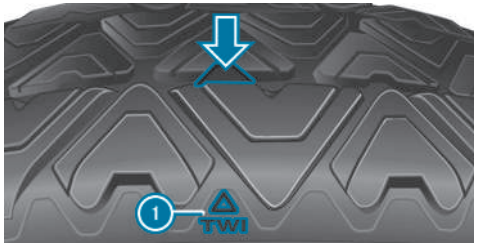

Six marks (1) show where the bar indicators (arrow) are integrated into the tire tread. They are visible once a tire tread depth of approximately 1⁄16 in (1.6 mm) has been reached.

Removing the safety vest

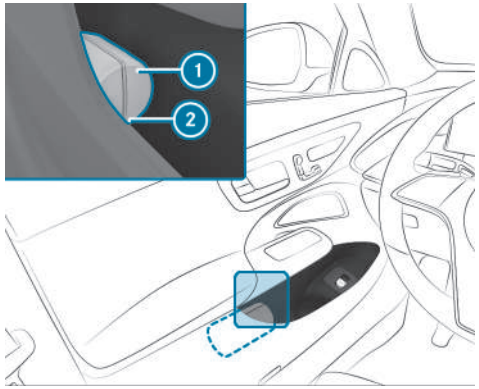


There is a safety vest stowage recess in the door stowage compartments of all doors for storing the safety vests.

► To remove: pull out the safety vest bag (1) using the loop (2).

► Open the safety vest bag (1) and take out the safety vest.
► To replace: fold the safety vest, roll it up and insert it into the safety vest bag (1).
► Slide the safety vest bag (1) along the underside of the armrest into the safety vest stowage recess. Ensure that the loop (2) remains hanging out so that it is easy to grasp.

ⓘ Remove the packaging film from a new safety vest before sliding it into the safety vest stowage recess. Otherwise, it may slide out unintentionally or the packaging may hinder its removal.
Observe the legal requirements for the individual countries.

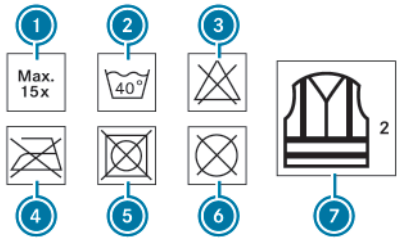

1. Maximum number of washes
2. Maximum wash temperature
3. Do not bleach
4. Do not iron
5. Do not tumble dry
6. Do not dry clean
7. Class 2 safety vest

The requirements defined by the legal standard are only fulfilled if the safety vest is the correct size and is fully closed.


EXCHANGE THE SAFETY VEST IN THE FOLLOWING CASES:

- The reflective strips are damaged or dirty.
- The maximum permissible number of washes is exceeded.
- The fluorescence has faded, e.g. due to continuous exposure to sunlight.


DISPOSE OF THE SAFETY VEST IN AN ENVIRONMENTALLY FRIENDLY WAY:

- Please contact your local waste disposal company.

Removing the warning triangle

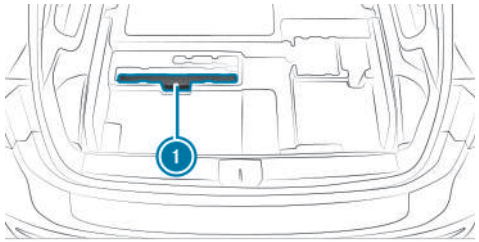


Vehicles with two seat rows

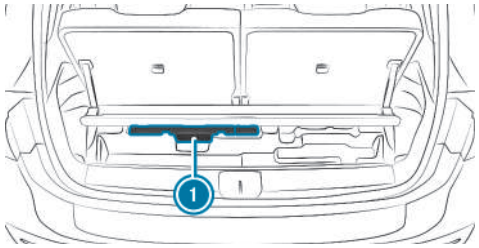


Vehicles with three seat rows

- ► Open the cargo floor.
- ► Remove warning triangle (1).

First-aid kit overview

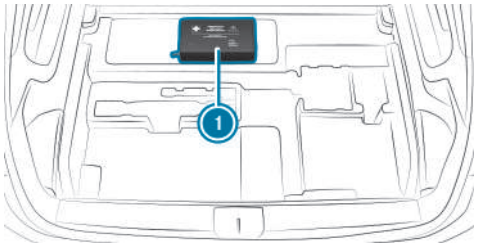

Vehicles with two seat rows

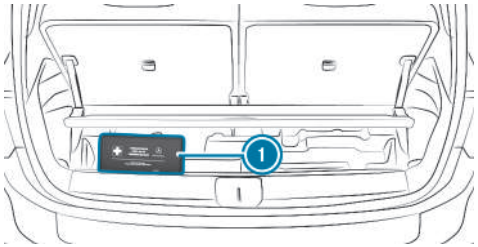

Vehicles with three seat rows

The first-aid kit (1) is located under the load compartment floor.

Map data update overview

As the content of a digital road map has a short life, outdated data may have a negative effect on all navigation functions. For the best MBUX navigation experience, you should install all of the map updates offered by Mercedes-Benz.

THE FOLLOWING OPTIONS ARE AVAILABLE FOR THE UPDATE OF MAP DATA:

- Online map update
- Updates via the Mercedes-Benz Portal
- Update at an authorized Mercedes-Benz Center
  Additional costs can be incurred in this process.

ONLINE MAP UPDATE
REQUIREMENTS:

- Digital Extras are available.
- You have a Mercedes me ID.
- The Digital Extra Online Map Update is available for your region.
- Online Map Update has been activated.

Installation takes place in the background as an automatic map update.

The MBUX multimedia system installs all of the available map updates for the North American regions in which the vehicle is located or is moved.

The online map update is activated at the latest after the next time the vehicle is switched on.

UPDATES VIA THE MERCEDES-BENZ PORTAL
The map data for several regions can also be updated manually. Log in with your Mercedes-Benz user account at: https://www.mercedes-benz.de/

Click on your account at the top right and follow the menu path My dashboard > Manage vehicle > Manage Digital Extras > Online Map Update. Select the regions to be downloaded to a storage medium.

After the map data has been copied, connect the storage medium with your vehicle. Select the notification with information about a new version of the map data and start the installation. After the MBUX multimedia system has been restarted, the updated map data is used.

Entering a POI or address


Requirements:

- **For the online search:**
  - There is an Internet connection.
  - Digital Extras are available.
  - You have created a Mercedes me ID.
  - The vehicle is linked to the Mercedes me ID and you have accepted the terms of use.
  - Further information can be found at: https://www.mercedes.me
  - The Digital Extra is available.
  - The Digital Extra has been activated at an authorized Mercedes-Benz Center.

ⓘ If Online Search is not available, the search is performed using the data of the digital map.

Multimedia system:

Navigation

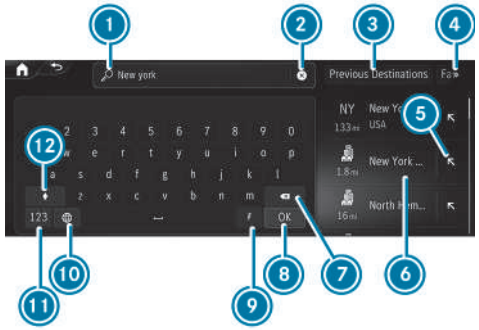

Example: entering a POI or address

1. Input line with current entry
2. Deletes an entry
3. Selects previous destinations
4. Displays and selects additional destination searches
5. Adopts the search result in the input line and continues the search
6. Search result
7. Deletes the last character entered
8. Hides the keypad
9. Activates voice input
10. Sets the written language
11. Switches to digits and special characters
12. Switches to upper-case or lower-case letters

If available, selecting the symbol starts the MBUX Voice Assistant.

- Enter a destination. The entries can be made in any order.
  The search results are displayed in a list.

Online search results for POIs may contain additional information, for example opening times and ratings. The information is provided by an online map service.
This online function is not available in all countries.

THE FOLLOWING ENTRIES CAN BE MADE, FOR EXAMPLE IN (1):

- City, street, house number or street, city
- Zip code
- POI name or POI category, e.g. Restaurants
- City, POI name
- Contact name
- Geo-coordinates (→ page 449)

- Hide the keyboard with OK.
- Select the destination in the list.
  The following menu shows the selected destination with the address information and a corresponding map section.
  The menu enables the route to be calculated.

Searching for radio stations using station names or frequency entry

Multimedia system:

→ Radio

- Select .
- Enter a station name or frequency.
- Select a station.

Luggage and loading

Attaching a roof luggage rack

WARNING
Risk of accident due to exceeding the maximum roof load

The vehicle center of gravity and the usual driving characteristics as well as the steering and braking characteristics alter.

If you exceed the maximum roof load, the driving characteristics, as well as steering and braking, will be greatly impaired.

- ► Never exceed the maximum roof load and adjust your driving style.

Vehicle-specific weight information can be found on the vehicle identification plate.

NOTE
Vehicle damage due to failure to observe the maximum permissible clearance height

If the vehicle height exceeds the maximum permissible clearance height, the roof and other vehicle parts may be damaged.

- ► Please observe the maximum clearance height indicated.
- ► If the vehicle exceeds the permissible clearance height, do not drive in.
- ► Take the modified vehicle height into account in the case of roof superstructures or other carrier systems.

NOTE
Damage to the panorama roof with power tilt/sliding panel due to non-approved roof luggage racks

The panorama roof with power tilt/sliding panel may be damaged by the roof luggage rack if you attempt to open it when using a roof luggage rack not tested and approved for Mercedes-Benz.

► When a roof luggage rack is installed, open the panorama roof with power tilt/sliding panel only if this has been tested and approved for Mercedes-Benz.

The panorama roof with power tilt/sliding panel may be raised to allow ventilation of the vehicle interior.

NOTES ON DRIVING WITH ROOF LOAD

- Distribute the roof load and vehicle load evenly, and place heavy objects at the bottom. Also observe the notes on loading the vehicle (⟶ page 217) .
- Drive carefully, avoiding abrupt starting, braking and steering as well as fast cornering.
- When transporting a roof load and with a fully laden or fully occupied vehicle, select one of the drive programs E and C. These are configured for good stability (⟶ page 284).

► Secure the roof luggage rack to the roof railing.

► Observe the manufacturer's installation instructions.

Folding the rear seat backrest forwards

WARNING
Risk of becoming trapped when adjusting the seats

When you adjust a seat, you may trap yourself or a vehicle occupant.

► When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.

WARNING
Risk of becoming trapped if the seat is not engaged

The seat does not engage when folded forwards. The seat can fold backwards unexpectedly, e.g. when accelerating, braking or in the event of an abrupt change of direction or an accident.

People in the seat's sweep can become trapped.

► If a seat is folded forwards, always fold it back before driving off.

► Make sure that the seat is engaged.

WARNING
Risk of injury due to seat backrests folded forwards

If the seat backrest of the rear seat is folded forwards, persons in the third row of seats may hit parts of the seat mechanism, especially in the event of an accident, braking maneuver or abrupt change of direction.


- ► If there is a person in the third row of seats, the rear seat in front of them must be folded back to the driving position before the journey begins.
- ► Persons in the third row of seats should not rest their legs on a seat backrest that has been folded forwards.

Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly. Particular attention must be paid to children.

If you no longer require the folded-down seat backrest as a loading area, fold the seat backrest back into place.


Requirements:

- The area into which the seat is folded is clear.
- The area under the rear bench seat is clear.
- The armrest on the second seat row is folded back and the cup holders are empty.

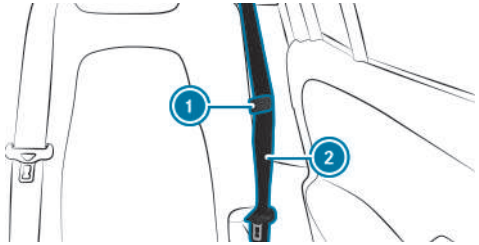

- ► Trap the seat belt strap on seat belt (2) in seat belt strap holder (1).

When the left-hand seat backrest is folded forwards, the center seat backrest will also be folded forwards.

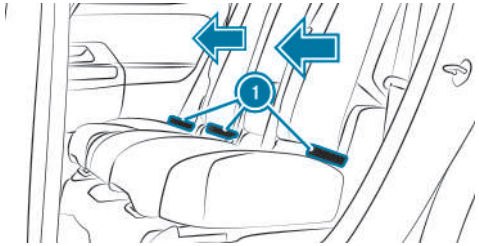

- ► Move the driver's seat forwards.
- ► If necessary, release the head restraints for the seat backrest and push them down as far as possible (⟶ page 204).
- ► **Left and right seat backrests:** pull one of release loops (1).
  The seat backrest will automatically fold forwards.



► **Center seat backrest:** pull release loop (2).

The seat backrest will automatically fold forwards.

ⓘ When the seat backrests on the second and third seat rows are folded forwards, you can push the rear bench seat on the second seat row back. This will then provide a continuous cargo compartment surface. Ensure that the area between the seat rows is clear.

Folding the rear seat backrest back

WARNING
Risk of becoming trapped when adjusting the seats

When you adjust a seat, you may trap yourself or a vehicle occupant.

► When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.

WARNING
Risk of accident if the rear bench seat, rear seat and seat backrest are not engaged

The rear bench seat, rear seat and seat backrest may fold forwards, even when you are driving.

- As a result, the vehicle occupant will be pushed into the seat belt with increased force. The seat belt will not be able to protect as intended and could cause additional injury.
- Objects or loads in the trunk or cargo compartment will not be restrained by the seat backrest.

► Make sure that the rear bench seat, the rear seat and the seat backrest are engaged before every trip.


If the rear seat backrest is not engaged and locked in place, the red lock verification indicator will be visible.

NOTE
Damage caused by trapping the seat belt when folding back the seat backrest

The seat belt could become trapped and thus damaged when the seat backrest is folded back.

► Make sure that the seat belt is not trapped when folding back the seat backrest.

If the left and center seat backrests have been folded forwards together, fold the left seat backrest back first.

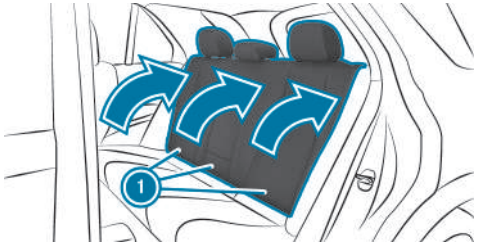

- Move the driver's or front passenger seat forwards, if necessary.
- Swivel seat backrest (1) back until it engages.
  The seat backrest will remain in the cargo position.
- After the seat backrest has been folded back, check the position of the head restraint and set it to the correct position (⟶ page 204).


Opening or closing the stowage space under the cargo floor

WARNING
Risk of injury due to an open cargo compartment floor

If you drive with the cargo compartment floor open, objects could be flung around and hit vehicle occupants as a result. There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- Always close the cargo compartment floor before a journey.

OPENING

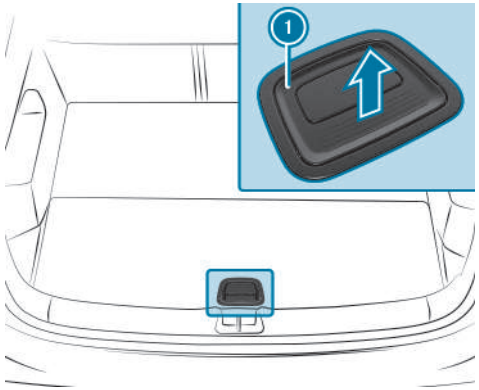


- Pull handle (1) upwards.
- Lift the cargo floor up using handle (1).

CLOSING

- Fold the cargo floor down and then press handle (1) down until it engages.

Overview of the tie-down eyes

Observe the notes on loading the vehicle (⟶ page 217).

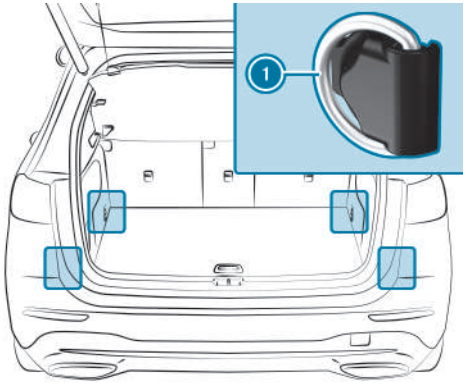

(1) Tie-down eyes (vehicles with through-loading feature in the rear bench seat)

Overview of the front storage compartments


WARNING
Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they may slide or be thrown around and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone receptacles will not always be able to retain all objects that they contain in the event of an accident.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- Always stow objects such that they cannot be thrown around in such situations.
- Always make sure that objects do not protrude from stowage spaces, parcel nets or stowage nets.
- Close the lockable stowage spaces before starting a journey.
- Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk/cargo compartment.

Observe the information on loading the vehicle.

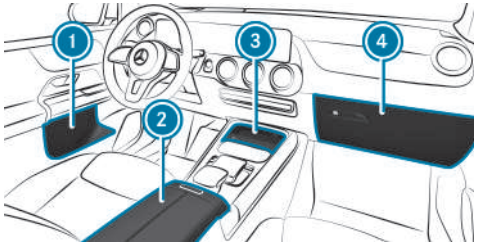

1. Stowage spaces in the doors
2. Storage compartment in the armrest with a multimedia and USB connection
3. Storage compartment in the front center console with a USB port
4. Glove box

Locking/unlocking the glove box


WARNING
Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open storage spaces and mobile phone brackets cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ► Always stow objects in such a way that they cannot be thrown around in such situations.
- ► Always make sure that objects do not protrude from storage spaces, parcel nets or storage nets.
- ► Close the lockable storage spaces before starting a journey.
- ► Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk.

Observe the notes on loading the vehicle.

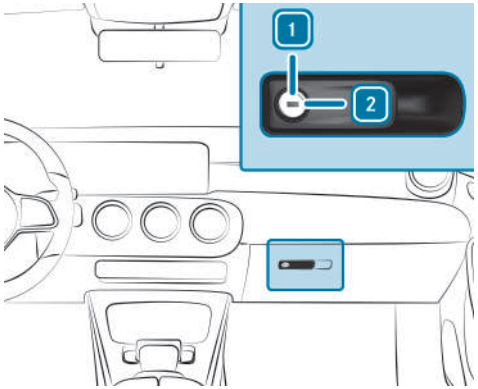

- Turn the emergency key a quarter turn clockwise [2] (to lock) or counter-clockwise [1] (to unlock).

Ice and snow

Notes on regularly inspecting wheels and tires

WARNING
Risk of injury through damaged tires

Damaged tires can cause tire pressure loss.

► Check the tires regularly for signs of damage and replace any damaged tires immediately.

WARNING
Risk of hydroplaning due to insufficient tire tread

Insufficient tire tread will result in reduced tire grip. There is a risk of an accident.

On a wet road surface the risk of hydroplaning is increased, in particular where speed is not adapted to suit the conditions.

► Check the tread depth and the condition of the tire contact surface across the entire width of all tires on a regular basis.

MINIMUM TREAD DEPTH FOR

- summer tires: ⅛in (3 mm)
- M+S tires: ⅙in (4 mm)

► For safety reasons, replace the tires before the legally-prescribed limit for the minimum tread depth is reached.


► Replace the tires immediately if the legally-prescribed limit for the minimum tread depth is reached.

CARRY OUT THE FOLLOWING CHECKS ON ALL WHEELS REGULARLY, AT LEAST ONCE A MONTH OR AS REQUIRED, FOR EXAMPLE, PRIOR TO A LONG JOURNEY OR DRIVING OFF-ROAD:

- Check the tire pressure (→ page 602).

- Visually inspect wheels and tires for damage.
- Check the valve caps.
- Visual check of the tire tread depth and the tire contact surface across the entire width.

  The minimum tread depth for summer tires is ⅛ in (3 mm) and for winter tires ⅙ in (4 mm).

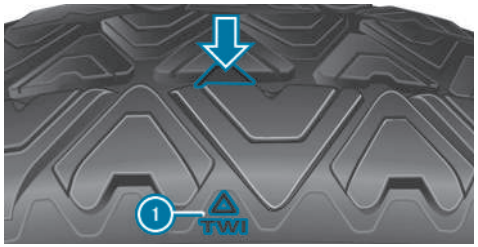

Six marks (1) show where the bar indicators (arrow) are integrated into the tire tread. They are visible once a tire tread depth of approximately 1/16 in (1.6 mm) has been reached.

Notes on snow chains

WARNING
Risk of accident due to incorrectly installed snow chains

If you have installed snow chains to the rear wheels, they may drag against the vehicle body or chassis components.

► Never install snow chains on the rear wheels.

► Only install snow chains on the front wheels in pairs.

NOTE
Damage to vehicle body or suspension components caused by installed snow chains

On 4MATIC vehicles, if you install snow chains on the rear wheels, you can damage vehicle body or suspension components.

► On 4MATIC vehicles, only install snow chains on the front wheels.

OBSERVE THE FOLLOWING NOTES WHEN USING SNOW CHAINS:

- Snow chains are only permissible for certain wheel/tire combinations. You can obtain information about this from an authorized Mercedes-Benz Center.
- For safety reasons, only use snow chains that have been specifically approved for your vehicle by Mercedes-Benz, or snow chains of the same quality standard.
- If snow chains are installed, the maximum permissible speed is 30 mph (50 km/h).
- **Vehicles with Active Parking Assist:** Do not use Active Parking Assist when snow chains are installed.

You can deactivate ESP® to start off (→ page 327). This allows the wheels to spin, achieving increased tractive power.

Notes on windshield washer fluid

Observe the notes on operating fluids (→ page 700).

WARNING
Risk of fire and injury from windshield washer concentrate

Windshield washer concentrate is highly flammable. If it comes into contact with hot components, it may ignite.

► Make sure that windshield washer concentrate is not spilled near to the filler opening.

NOTE
Damage to the exterior lighting due to unsuitable windshield washer fluid

Unsuitable windshield washer fluid may damage the plastic surface of the exterior lighting.

► Only use windshield washer fluid which is also suitable for use on plastic surfaces, e.g. MB SummerFit or MB WinterFit.

NOTE
Blocked spray nozzles caused by mixing windshield washer fluids

► Do not mix MB SummerFit and MB WinterFit with other windshield washer fluids.

Do not use distilled or de-ionized water. Otherwise, the fill level sensor may be triggered erroneously.

RECOMMENDED WINDSHIELD WASHER FLUID:

- above freezing point: e.g. MB SummerFit
- below freezing point: e.g. MB WinterFit

For the correct mixing ratio, refer to the information on the antifreeze container.

Mix washer fluid with windshield washer fluid all year round.

Refilling the windshield washer system

DANGER
Risk of fatal injuries when carrying out maintenance work during the charging process

During the charging process, the high-voltage on-board electrical system is under high voltage.

► Do not perform any maintenance work during the charging process.

WARNING
Risk of injury due to overheated vehicle

IF YOU OPEN THE HOOD IN THE EVENT OF AN OVERHEATED VEHICLE OR FIRE IN THE ENGINE COMPARTMENT, THE FOLLOWING SITUATIONS MAY OCCUR:

- You may come into contact with hot gases.
- You may come into contact with other escaping hot operating fluids.

► In the event of overheating or fire in the engine compartment, keep the hood closed and call the fire service.

► Allow the overheated vehicle to cool down first if you need to open the hood.

WARNING
Risk of injury due to moving parts

Components in the engine compartment may continue to run or start unexpectedly even when the drive system is switched off.

Observe the following if you must open the hood:

► Switch off the vehicle.

► Never touch the danger zones surrounding moving components, e.g. the rotation area of the fan.

► Remove jewelery and watches.

► Keep items of clothing and hair away from moving parts.

WARNING
Risk of burns from hot components in the engine compartment


Certain components in the engine compartment can be very hot, e.g. the drive system and the cooler.

► Allow the drive system to cool down and touch only the components described below.

WARNING
Risk of fire and injury from windshield washer concentrate

Windshield washer concentrate is highly flammable.

► Avoid fire, open flames, smoking and the creation of sparks when using windshield washer concentrate.

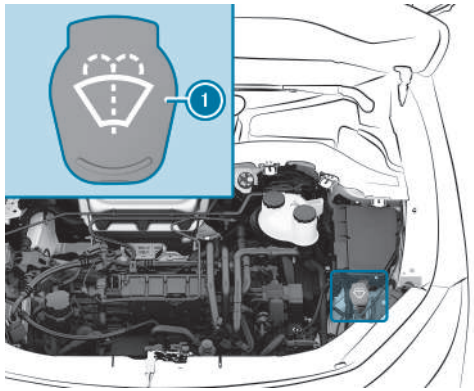

► Remove cap (1) by the tab.

► Add washer fluid.

Replacing the windshield wiper blades

WARNING
Risk of becoming trapped if the windshield wipers are switched on while wiper blades are being replaced

If the windshield wipers begin to move while you are changing the wiper blades, you can be trapped by the wiper arm.

- Always switch off the windshield wipers and vehicle before changing the wiper blades.

MOVING THE WIPER ARMS INTO THE REPLACEMENT POSITION


- Switch the vehicle on and then off again immediately.
- Within around 15 seconds, press and hold the button on the combination switch for approximately three seconds (⟶ page 251).

  The wiper arms will move into the replacement position.

Check the condition of the wiper blades regularly and replace them in the event of visible damage or ongoing smearing.

- Observe the information about the service indicator.

SERVICE INDICATOR

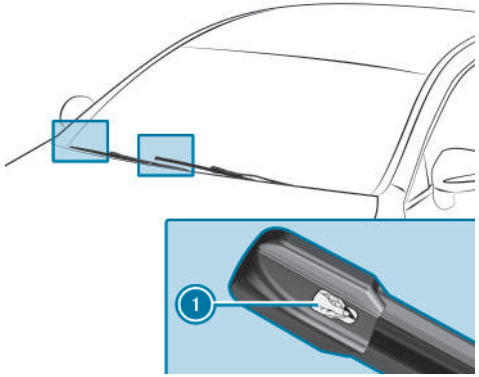


- Remove protective film (1) from the service indicators on the tips of the newly installed wiper blades.

When the color of the service indicator changes from black to yellow, replace the wiper blades.

The time it takes for the color to change will vary depending on the usage conditions.

Help in the event of a breakdown

Activating/deactivating the hazard warning lights

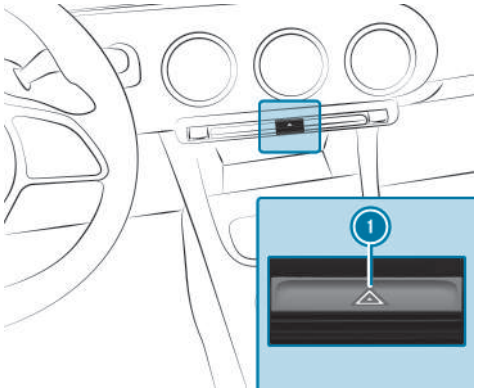


► Press the button (1).

IN THE FOLLOWING SITUATIONS, THE HAZARD WARNING LIGHTS WILL SWITCH ON AUTOMATICALLY:

- The airbag has been deployed
- An emergency stop has been initiated (⟶ page 345)

Removing the safety vest

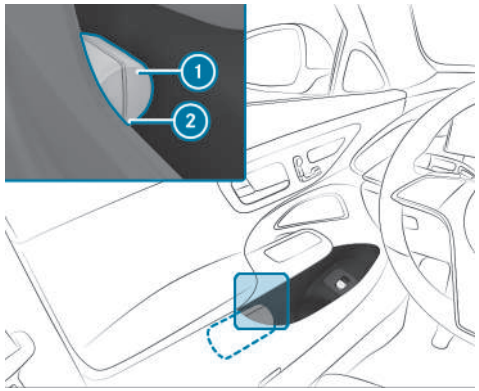


There is a safety vest stowage recess in the door stowage compartments of all doors for storing the safety vests.

► To remove: pull out the safety vest bag (1) using the loop (2).

► Open the safety vest bag (1) and take out the safety vest.
► To replace: fold the safety vest, roll it up and insert it into the safety vest bag (1).
► Slide the safety vest bag (1) along the underside of the armrest into the safety vest stowage recess. Ensure that the loop (2) remains hanging out so that it is easy to grasp.

ⓘ Remove the packaging film from a new safety vest before sliding it into the safety vest stowage recess. Otherwise, it may slide out unintentionally or the packaging may hinder its removal.
Observe the legal requirements for the individual countries.

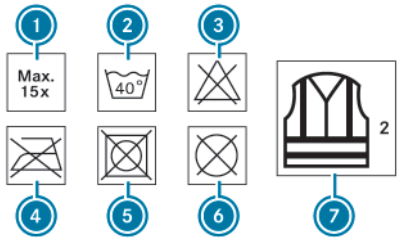

1. Maximum number of washes
2. Maximum wash temperature
3. Do not bleach
4. Do not iron
5. Do not tumble dry
6. Do not dry clean
7. Class 2 safety vest

The requirements defined by the legal standard are only fulfilled if the safety vest is the correct size and is fully closed.


EXCHANGE THE SAFETY VEST IN THE FOLLOWING CASES:

- The reflective strips are damaged or dirty.
- The maximum permissible number of washes is exceeded.
- The fluorescence has faded, e.g. due to continuous exposure to sunlight.


DISPOSE OF THE SAFETY VEST IN AN ENVIRONMENTALLY FRIENDLY WAY:

- Please contact your local waste disposal company.

Removing the warning triangle

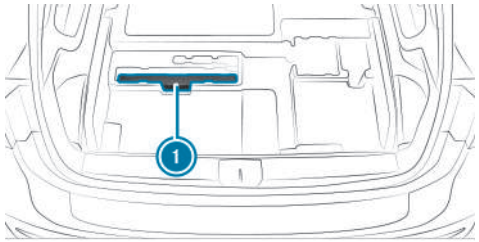


Vehicles with two seat rows

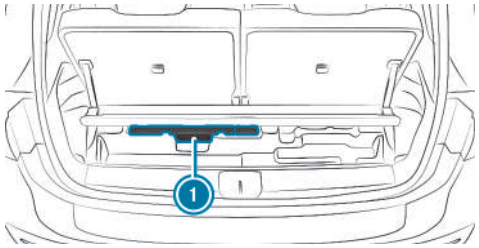


Vehicles with three seat rows

- ► Open the cargo floor.
- ► Remove warning triangle 1.

First-aid kit overview

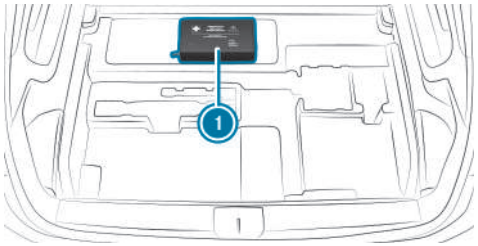

Vehicles with two seat rows

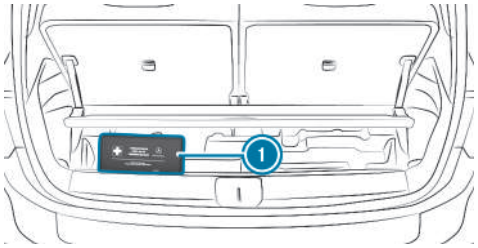

Vehicles with three seat rows

The first-aid kit (1) is located under the load compartment floor.

QR code for rescue card

QR codes are attached to the inside of the socket flap and on the opposite side on the B-pillar. In the event of an accident, rescue services can use the QR code to quickly find the appropriate rescue card for your vehicle. The current rescue card contains the most important information about your vehicle (e.g. the routing of the electric lines) in compact form.

You can find further information at: https://rk.mb-qr.com/de/

Starting assistance and charging the 12-V-battery

- Only have starting assistance provided by a qualified specialist workshop, e.g. an authorized Mercedes-Benz Center.
- Only have the battery charged at a qualified specialist workshop, e.g. an authorized Mercedes-Benz Center.

Notes on electrical fuses

WARNING
Risk of accident and injury due to overloaded lines

If you manipulate or bridge a faulty fuse or if you replace it with a fuse with a higher amperage, the electric line could be overloaded.

This could result in a fire.

- Always replace faulty fuses with specified new fuses containing the correct amperage.

NOTE
Damage due to incorrect fuses

Using incorrect fuses can result in damage to electrical components or systems or their functions being considerably restricted.

- Use only fuses approved for Mercedes-Benz with the respective specified fuse rating.

Replace blown fuses with equivalent fuses, identifiable by their color and label. The fuse ratings and further information to be observed can be found in the fuse assignment diagram.

Fuse assignment diagram: on the fuse box in the engine compartment (⟶ page 594).

NOTE
Damage or malfunctions caused by moisture

Moisture may cause damage to the electrical system or cause it to malfunction.

- ► When the fuse box is open, make sure that no moisture can enter the fuse box.
- ► When closing the fuse box, make sure that the seal of the lid is positioned correctly on the fuse box.

If the newly inserted fuse also blows, have the cause determined and rectified at a qualified specialist workshop.

ENSURE THE FOLLOWING BEFORE REPLACING A FUSE:

- The vehicle is secured against rolling away.
- All electrical consumers are switched off.
- The vehicle is switched off.

THE ELECTRICAL FUSES ARE LOCATED IN VARIOUS FUSE BOXES:

- Fuse box in the engine compartment on the left-hand side of the vehicle, when viewed in the direction of travel (⟶ page 594)
- Fuse box in the front passenger footwell (⟶ page 595)
- Fuse box in the center of the cargo bay (⟶ page 596)

Notes in the event of a flat tire

WARNING
Risk of accident due to a flat tire

A flat tire severely affects the driving characteristics as well as steering and braking.

Tires without run-flat characteristics:

- ► Do not drive on with a flat tire.
- ► Change the flat tire immediately with an emergency spare wheel or spare wheel. Alternatively, consult a qualified specialist workshop.

Tires with run-flat characteristics:

- ► Observe the information and warning notes on MOExtended tires (run-flat tires).

IN THE EVENT OF A FLAT TIRE, THE FOLLOWING OPTIONS ARE AVAILABLE DEPENDING ON YOUR VEHICLE'S EQUIPMENT:

- **Vehicles with MOExtended tires:** it is possible to continue the journey for a short period of time. Make sure you observe the notes on MOExtended tires (run-flat tire) (⟶ page 575).
- **Vehicles with a TIREFIT kit:** you can seal the tire so that it is possible to continue the journey for a short period of time. To do this, use the TIREFIT kit (⟶ page 576).

- **Vehicles with Mercedes-Benz Support:** in the event of a breakdown, you can make a breakdown call via the overhead control panel (⟶ page 510).
- **All vehicles:** change the wheel (⟶ page 625).

ⓘ The emergency spare wheel is only available in certain countries (⟶ page 631).
Vehicles with MOExtended tires are not equipped with a TIREFIT kit at the factory. If you retrofit your vehicle with tires without run-flat properties, e.g., winter tires, you should also equip it with a TIREFIT kit. You can obtain a TIREFIT kit in a qualified specialist workshop.
Vehicles with a Mercedes-Benz emergency call system which are not equipped with a TIREFIT kit: in the event of a flat tire, consult the Mercedes-Benz emergency call system Customer Assistance Center.

Overview of the tire-change tool kit


With the exception of some country-specific variants, vehicles are not equipped with a tire-change tool kit. For more information on which tire-changing tools are required and approved for performing a wheel change on your vehicle, consult a qualified specialist workshop.

YOU REQUIRE THE FOLLOWING TOOLS, FOR EXAMPLE, TO CHANGE A WHEEL:


- Jack
- Chock
- Wheel wrench
- Centering pin

The tire-change tool kit is located in the tool bag ① in the load compartment.

ⓘ When stowing the tool bag, ensure that it is adequately secured.

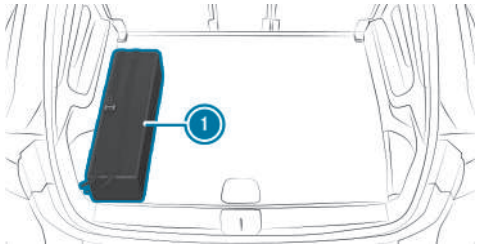

Vehicles with two seat rows

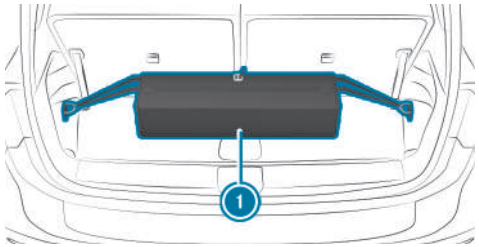

Vehicles with three seat rows


THE TOOL BAG CONTAINS:

- Jack
- Gloves
- Wheel wrench
- Centering pin
- Folding chock

- Ratchet wrench for jack


TIREFIT kit storage location

The TIREFIT kit is located under the cargo floor.

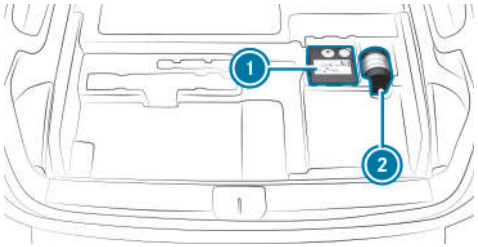

Vehicles with two rows of seats

1 Tire inflation compressor
2 Tire sealant bottle

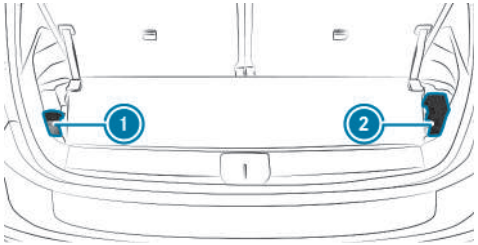

Vehicles with three rows of seats

1 Tire sealant bottle
2 Tire inflation compressor

Depending on the vehicle version, the TIREFIT kit may be located elsewhere in the cargo compartment.

Towing the vehicle with both axles on the ground

► Observe the notes on the permitted towing methods (⟶ page 587).

► Make sure that the 12-V-battery is connected and charged.

OBSERVE THE FOLLOWING POINTS WHEN THE 12-V-BATTERY IS DISCONNECTED OR DISCHARGED:

- The drive system cannot be started.
- The electric parking brake cannot be released or applied.
- The selector lever cannot be put into position N or P.

IF AT LEAST ONE OF THE FOLLOWING CONDITIONS APPLIES, TRANSPORTING THE VEHICLE IS THE ONLY POSSIBLE OPTION:

- If the high-voltage battery is discharged.
- If the selector lever cannot be put into position N.
- If the 12-V-battery is disconnected or discharged.
- If the driver display has failed.
- If the Towing Not Permitted See Operator's Manual display message is shown.

  Exception: if the vehicle is located in a danger zone, it can be recovered from the danger zone despite the display message.

  It must not be towed further than 328 ft (100 m) with both axles on the ground. A towing speed of 6 mph (10 km/h) must not be exceeded. Beyond these limits, only transporting is permitted.

- If the Check Coolant Level See Operator's Manual display message is shown.

- If the [Stop Switch Off Vehicle] display message is shown.

► In such cases, transport the vehicle (⟶ page 590).

NOTE
Damage due to towing away at excessively high speeds or over long distances

The drivetrain could be damaged when towing at excessively high speeds or over long distances.

► A towing speed of 30 mph (50 km/h) must not be exceeded.

► A towing distance of 30 miles (50 km) must not be exceeded.

WARNING
Risk of accident when towing a vehicle with too much weight

IF THE VEHICLE TO BE TOWED IS HEAVIER THAN THE PERMISSIBLE GROSS MASS OF YOUR VEHICLE, THE FOLLOWING SITUATIONS CAN ARISE:

- The towing eye breaks off.
- The combination oscillates and can capsize.

► Before towing, check whether the vehicle to be towed exceeds the permissible gross mass.

If a vehicle is to be towed away, its permissible gross mass must not exceed the permissible gross mass of the towing vehicle.

► Information on the permissible gross mass of the vehicle can be found on the vehicle identification plate (⟶ page 698).

TOWING THE VEHICLE

► Install the towing eye (⟶ page 591).

► Fasten the towing device.

NOTE
Damage due to incorrect connection of the tow bar

► Only connect the tow rope or tow bar to the towing eyes.

► Deactivate the automatic locking mechanism (⟶ page 165).

► Do not activate the HOLD function (⟶ page 328).

► Deactivate the tow-away alarm (⟶ page 185).

► Deactivate Active Brake Assist (⟶ page 350).

► Put the selector lever into position [N].

► Release the electric parking brake.

► Remain in the cockpit during towing and observe the display messages.

► Do not switch off the vehicle while it is being towed.

► Do not open the driver's door or front passenger door, because otherwise the selector lever automatically switches to position [P].

WARNING
Risk of accident due to limited safety-related functions during the towing process

SAFETY-RELATED FUNCTIONS ARE LIMITED OR NO LONGER AVAILABLE IN THE FOLLOWING SITUATIONS:

- The vehicle is switched off.
- The brake system or power steering system is malfunctioning.
- The energy supply or the on-board electrical system is malfunctioning.

► In such cases, do not tow the vehicle.

► Transport the vehicle (⟶ page 590).

NOTE
Damage to the drive system due to incorrect towing

THE VEHICLE MUST NOT BE TOWED IN THE FOLLOWING SITUATIONS:

- The vehicle is switched off.
- The brake system or power steering is malfunctioning.
- The energy supply or on-board electrical system is malfunctioning.

► Do not tow the vehicle in these situations.

NOTE
Damage due to excessive tractive power

If you pull away sharply, the tractive power may be too high and the vehicles could be damaged.

► Pull away slowly and smoothly.

Expert knowledge

Additional functions of buttons

RESETTING THE CLIMATE CONTROL SETTINGS

► Press and hold the AUTO button on the front control panel for four seconds.

The climate control settings will be reset to the basic settings.

Useful vehicle functions

NOTES ABOUT THE AUTOMATICALLY ACTIVE REAR WINDOW WIPER


THE REAR WINDOW WIPER WILL AUTOMATICALLY BE ACTIVE IF THE FOLLOWING CONDITIONS ARE MET AT THE SAME TIME:

- The front windshield wiper is switched on.
- Reverse gear is engaged.

STORING THE PARKING POSITION OF THE FRONT-PASSENGER OUTSIDE MIRROR USING THE MEMORY BUTTON

Requirements

- Reverse gear has not been engaged.

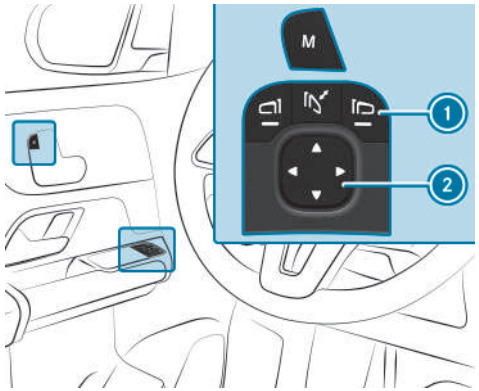

► Select the front-passenger outside mirror using button (1).

► Move the front-passenger outside mirror into the desired parking position using button (2).

► Press the M button.

► Confirm immediately using button (2) to store the setting.

ⓘ No more than three seconds may pass between the M button and button (2) being pressed. The mirror adjustment will be canceled after three seconds.

Deactivating the key function

Vehicles with KEYLESS-GO: if you deactivate the key function, the KEYLESS-GO functions are also deactivated. Access or drive authorization via KEYLESS-GO is then no longer possible with that key. Activate the function of the key so that all functions using the key are available once again.

You can also deactivate the key's function to reduce the key's energy consumption if you do not use the vehicle or a key for an extended period of time.

- Press and hold the key button.
- With the button pressed, immediately press the key button twice in quick succession.
  The indicator lamp of the key lights up once briefly, and then again for longer.

YOU HAVE THE FOLLOWING OPTIONS TO REACTIVATE THE KEY:

- Press any button on the key.
- Start the vehicle with the key in the center console storage compartment (⟶ page 274).

Overview of the Mercedes-Benz emergency call system

eCall can help to reduce the time between an accident and the arrival of emergency services at the site of the accident. It helps locate an accident site in places that are difficult to access. However, even if a vehicle is equipped with eCall, this does not mean the system is ON. As such, eCall does not replace dialing 911 in the event of an accident.

An emergency call can be made automatically or manually.

Only make emergency calls if you or others are in need of rescue. Do not make an emergency call in the event of a breakdown or a similar situation.

INFORMATION ON THE DISPLAY:
SOS NOT READY: the vehicle is not on or eCall not available.

During an active emergency call, SOS appears in the display.

You can find more information on the regional availability of eCall at: https://www.mercedes-benz-mobile.com/extra/ecall/

In case of a malfunction of the emergency call system, the loudspeakers, microphone, air bag or the SOS button, for example, are faulty.

YOU CAN RECOGNIZE A MALFUNCTION IN THE EMERGENCY CALL SYSTEM BY THE FOLLOWING DISPLAYS:

- A corresponding message appears on the driver and media display (⟶ page 769).
- The SOS button lights up red continuously.

Emergency guide

Depending on the type and severity of the accident or a breakdown, the emergency guide can show safety notes in the central display.

AUTOMATIC ACTIVATION OF THE EMERGENCY GUIDE IS POSSIBLE DEPENDING ON THE SITUATION WHEN:

- The restraint system was triggered
- An emergency call was made via the vehicle interface
- Certain breakdown situations have occurred

THE SAFETY NOTES INCLUDE FOR EXAMPLE:

- Recommended actions when leaving the vehicle
- Procedure for safely removing seat belts in the event of an accident whereby the vehicle comes to rest on its roof

ⓘ The availability as well as the scope of the emergency guide can vary depending in the country and vehicle equipment.


Back to contents

At a glance

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Cockpit
Indicator lamps and warning lamps (standard)
Indicator lamps and warning lamps (widescreen cockpit)
Overhead control panel
Door operating unit and seat adjustment
Emergencies and breakdowns


Cockpit

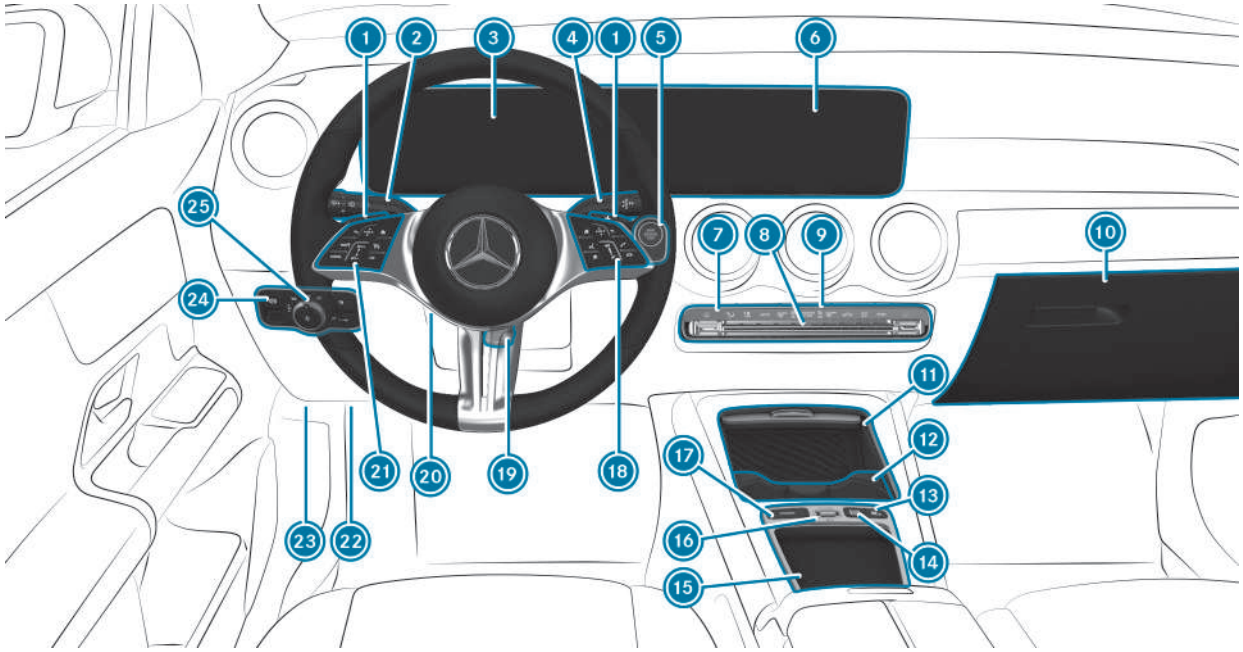

Left-hand drive vehicles

1 − Increases recuperation
+ Reduces recuperation
2 Combination switch
3 Driver display
4 DIRECT SELECT lever
5 ENGINE START / STOP Start/stop button
6 Central display
7 Climate control systems
8 Hazard warning light system
9 PASSENGER AIR BAG indicator lamps
10 Glove box
11 Storage compartment
12 Cup holder
13 Active Parking Assist
14 Fingerprint sensor
15 Stowage space
16 Controller for volume and switching sound on/off
Switches the MBUX multimedia system on/off
17 DYNAMIC SELECT button
18 Control panel for the MBUX multimedia system
19 Adjusts the steering wheel
20 Switches the steering wheel heater on/off
21 Control panel:
Driver display
Cruise control
Active Distance Assist DISTRONIC
22 Diagnostics connection
23 Opens the hood
24 Electric parking brake
25 Light switch


Indicator lamps and warning lamps (standard)

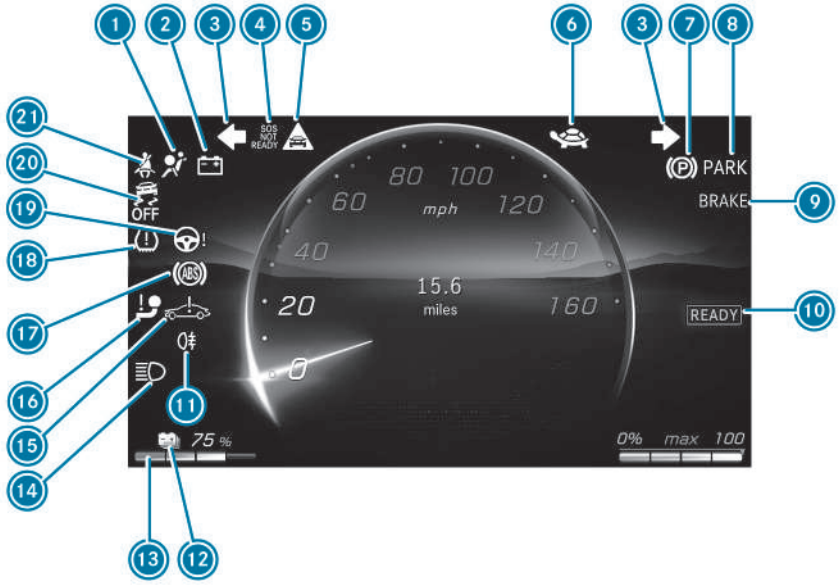

Standard driver display

- 1 Restraint system
- 2 Electrical fault
- 3 Turn signal lights
- 4 Mercedes-Benz emergency call system
- 5 Distance warning
- 6 Reduced power
- 7 Electric parking brake (yellow)
- 8 Electric parking brake (red)
  - PARK USA only
  - Canada only
- 9 Brakes (red)
  - BRAKE USA only
  - Canada only
  - RBS Recuperative Brake System, USA only
  - Brakes (yellow), Canada only
- 10 READY Operational readiness of drive system
- 11 Rear fog light
- 12 Range
- 13 Charge level display
- 14 High beam
  - Low beam
  - Standing lights
- 15 System fault
- 16 Indicator lamp inoperative
- 17 ABS
- 18 Tire pressure monitoring system
- 19 Power steering (red)
  - Power steering (yellow)
- 20 ESP® OFF
  - ESP®
- 21 Seat belt


Indicator lamps and warning lamps (widescreen cockpit)

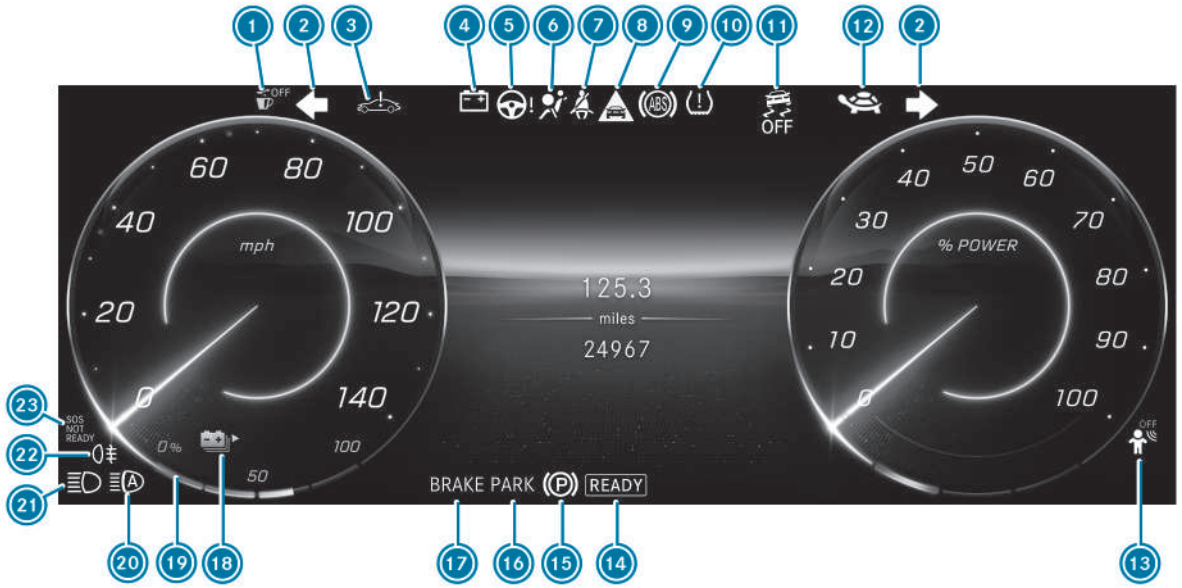

Widescreen driver display

- 1 ATTENTION ASSIST
- 2 Turn signal lights
- 3 System fault
- 4 Electrical fault
- 5 Power steering (red)
- Power steering (yellow)
- 6 Restraint system
- 7 Seat belt
- 8 Distance warning
- 9 ABS
- 10 Tire pressure monitoring system
- 11 ESP® OFF
- ESP®
- 12 Reduced power
- 13 Occupant presence reminder (white)
- Occupant presence reminder (yellow)
- 14 READY Operational readiness of drive system
- 15 Electric parking brake (yellow)
- 16 Electric parking brake (red)
- PARK USA only
- Canada only
- 17 Brakes (red)
- BRAKE USA only
- Canada only
- RBS Recuperative Brake System, USA only
- Brakes (yellow), Canada only
- 18 Range
- 19 Charge level display
- 20 Adaptive Highbeam Assist
- 21 High beam
- Low beam
- Standing lights
- 22 Rear fog light
- 23 SOS NOT READY Mercedes-Benz emergency call system

Overhead control panel

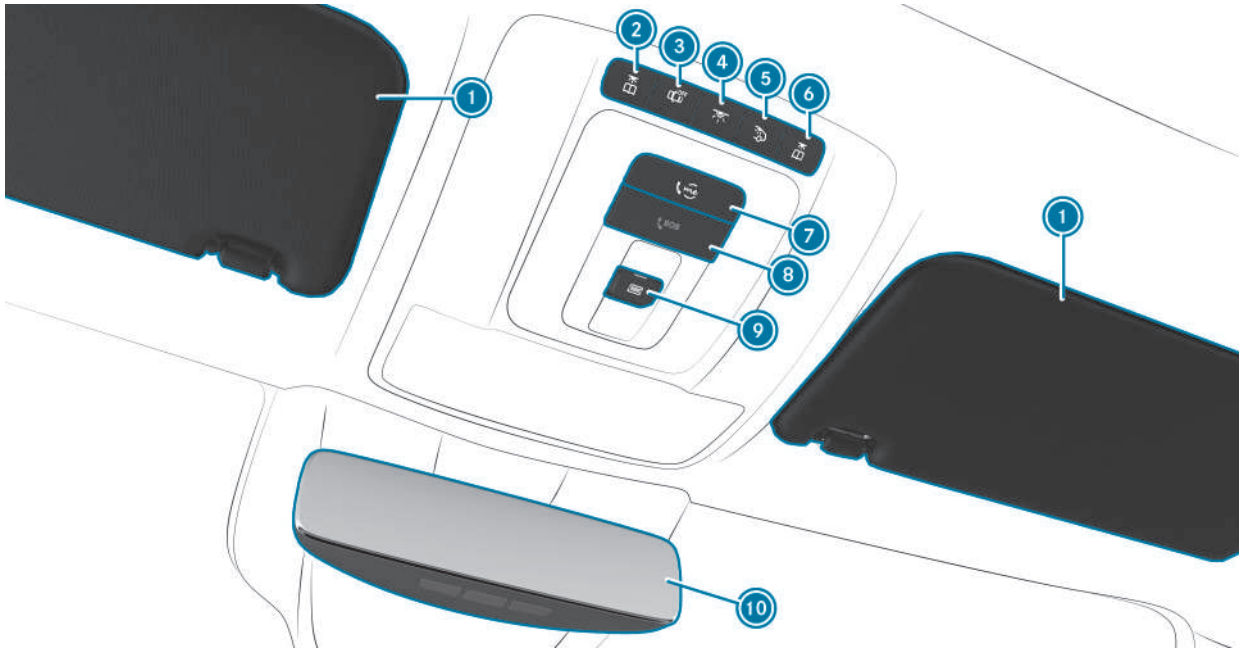

1 Sun visors

2 Switches the left-hand reading lamp on/off >

3 Switches automatic interior lighting control on/off >

4 Switches the front interior lighting on/off >

5 Switches the rear interior lighting on/off >

6 Switches the right-hand reading lamp on/off >

7 me button >


8 SOS button >

9 Opens/closes the panorama roof with power tilt/sliding panel >

Opens/closes the roller sunblind >


10 Inside rear-view mirror >

Door operating unit and seat adjustment

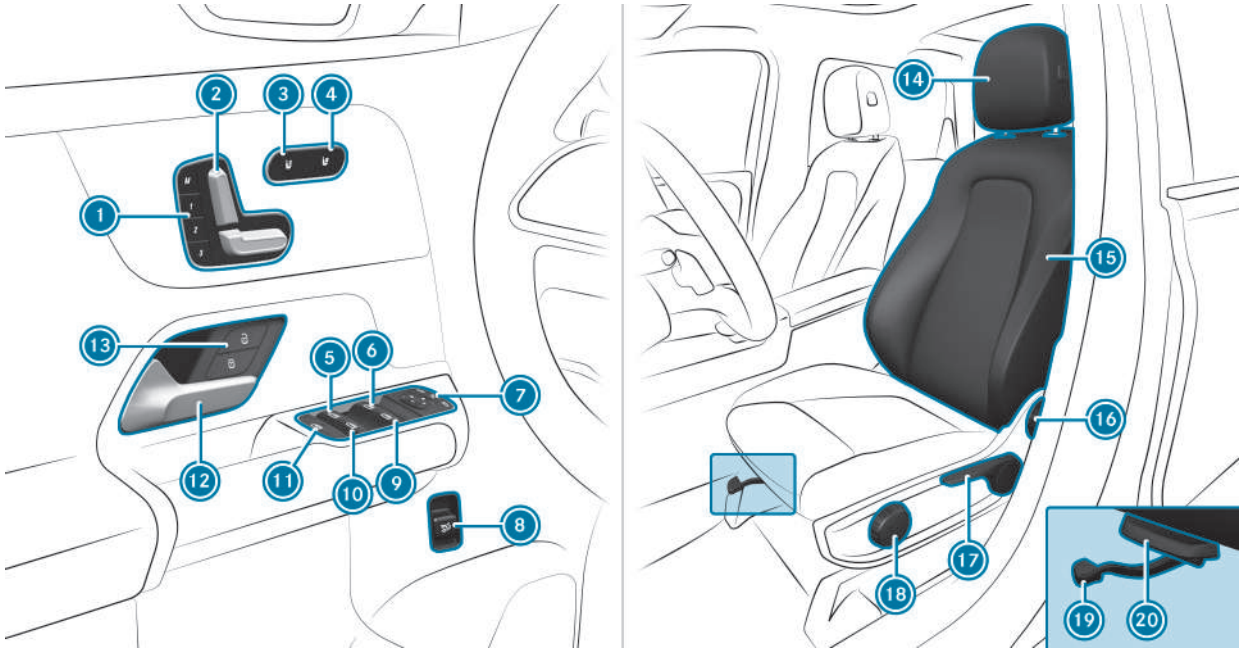

1. M Operate the memory function
2. Adjust the seats electrically
3. Switch the seat heating on/off
4. Switch the seat ventilation on/off
5. Open/close the rear passenger compartment left side window
6. Open/close the left side window
7. Operate the outside mirrors
8. Open/close the tailgate
9. Open/close the right side window
10. Open/close the rear passenger compartment right side window
11. Child safety lock for the rear passenger compartment side windows
12. Open the door
13. Lock/unlock the vehicle
14. Adjust the head restraints
15. Configure the seat adjustments
16. Adjust the seat backrest inclination
17. Adjust the seat height
18. Adjust the seat cushion inclination
19. Adjust the seat fore-and-aft position
20. Adjust the seat cushion length

Emergencies and breakdowns

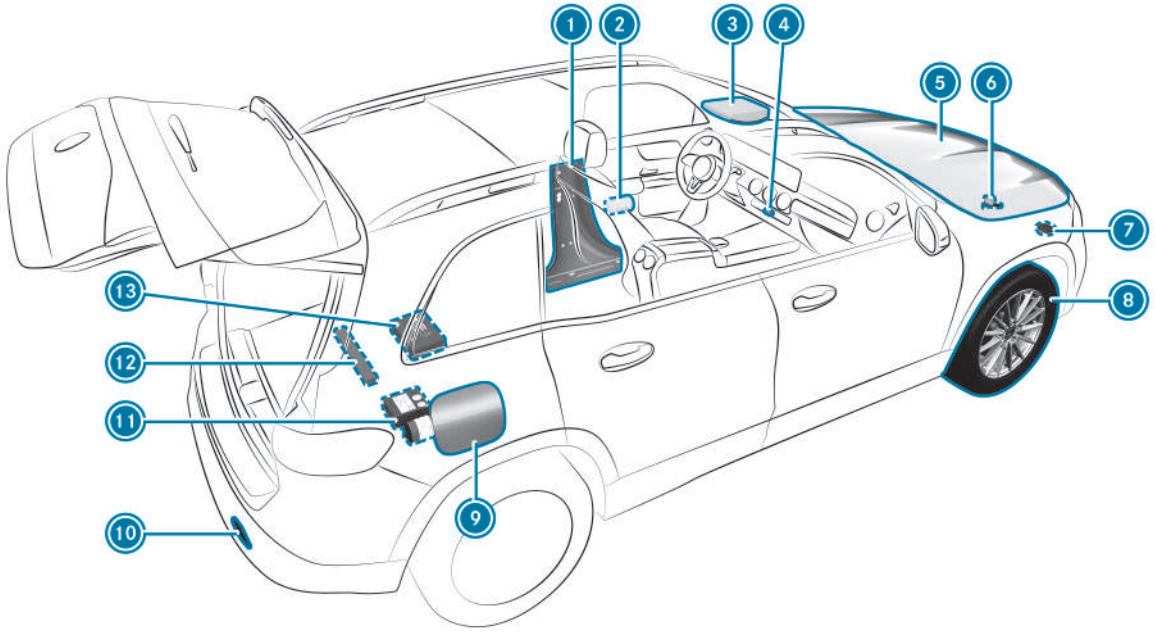

1 B-pillar with:
QR code for accessing the rescue card >
2 Safety vests >
3 me button >
SOS button >
4 Hazard warning light system >
5 Checking and topping up operating fluids >
6 Operating the high-voltage disconnect device >
7 Towing away >
8 Flat tire >
9 Socket flap with:
information label on tire pressure >
QR code for accessing the rescue card >
10 Towing away >
11 TIREFIT kit >
12 Warning triangle >
13 First-aid kit (soft sided) >

Digital Operator's Manual

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Accessing the Digital Operator's Manual

Accessing the Digital Operator's Manual

Multimedia system:

Info >> Operator's Manual >> Open Digital Operator's Manual

The Digital Operator's Manual describes the functions and operation of the vehicle and the multimedia system.

- ▶ Select one of the following menu items in the Digital Operator's Manual:
- Quick start: find the first steps for adjusting your seat (driver's side).
- Tips: provides you with information to deal with specific everyday situations in your vehicle.
- Videos: watch animations illustrating the vehicle functions.
- Messages: receive additional information regarding messages on the driver display.
- Language: select the language for the Digital Operator's Manual.

Find quick answers to queries regarding operation of the vehicle by entering keywords pertaining to any function in the Search entry field.



1. Back
2. Contents section
3. Menu
4. Search

Some sections in the Digital Operator's Manual, suchas warning notes, can be expanded and collapsed.

Additional options for accessing the Digital Operator's Manual:

Driver display: call up concise information regarding display messages on the driver display. Pressing ⓘ will show brief information on the central display.

MBUX Voice Assistant: call-up via the voice control system

Global search: call up search results for contents of the Digital Operator's Manual on the home screen

For safety reasons, the Digital Operator's Manual is deactivated while driving.

General notes

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Protection of the environment
Mercedes-Benz GenuineParts
Touch-sensitive controls
Mercedes-Benz App
Service and vehicle operation
Operating safety
Mounting the license plate onto the front license plate bracket
Country-specific information for regulatory radio components
Diagnostics connection
Qualified specialist workshop
Correct use of the vehicle
Sport Utility Vehicle
Notes for persons with electronic medical aids
Problems with your vehicle
Reporting safety defects
Liability for material defects
QR code for rescue card
Data storage
Copyright

Protection of the environment

ENVIRONMENTAL NOTE
Environmental damage due to operating conditions and personal driving style

Operate your vehicle in an environmentally responsible manner to help protect the environment. Please observe the following recommendations on operating conditions and personal driving style.

Operating conditions:

- Make sure that the tire pressures are correct.
- Do not carry any unnecessary weight (e.g. roof luggage racks once you no longer need them).
- Monitor energy consumption.
- Adhere to the service intervals.
  A regularly serviced vehicle will contribute to environmental protection.
- Always have maintenance work carried out at a qualified specialist workshop.

Personal driving style:

- Drive carefully and maintain a suitable distance from the vehicle in front.
- Avoid frequent, sudden acceleration and braking.
- Drive in a way that conserves energy. Pay attention to the ECO display for an economical driving style.

ENVIRONMENTAL NOTE
Environmental pollution caused by irresponsible disposal of the high-voltage battery

A high-voltage battery contains materials which are harmful to the environment.

- Dispose of defective high-voltage batteries at a qualified specialist workshop.

ENVIRONMENTAL ISSUES AND RECOMMENDATIONS:
It is recommended that you re-use or recycle materials instead of just disposing of them.

The relevant environmental guidelines and regulations serve to protect the environment and must be strictly observed.

Mercedes-Benz GenuineParts

ENVIRONMENTAL NOTE
Environmental damage due to not using recycled reconditioned components

Mercedes-Benz AG offers recycled reconditioned components and parts with the same quality as new parts. The same entitlement from the Limited Warranty is valid as for new parts.

► Use recycled reconditioned components and parts from Mercedes-Benz AG.

NOTE
Impairment of the operating efficiency of the restraint systems from installing accessory parts or from repairs or welding

AIR BAGS AND EMERGENCY TENSIONING DEVICES, AS WELL AS CONTROL UNITS AND SENSORS FOR THE RESTRAINT SYSTEMS, MAY BE INSTALLED IN THE FOLLOWING AREAS OF YOUR VEHICLE:

- doors
- door pillars
- sill
- seats
- cockpit
- instrument display
- center console
- lateral roof frame

► Do not install accessory parts such as audio systems in these areas.

► Do not carry out repairs or welding.

► Have accessories retrofitted at a qualified specialist workshop.

You could jeopardise the operating safety of your vehicle if you use parts, Tires and wheels or accessories relevant to safety that have not been approved by Mercedes-Benz. Safety-critical systems (e.g. the brake system)

may malfunction. Use only Mercedes-Benz GenuineParts or parts of equal quality. Use only tires, wheels and accessory parts that have been specifically approved for your vehicle model.

Mercedes-Benz GenuineParts are subject to strict quality inspections. Each part has been specially developed, manufactured or selected for Mercedes-Benz vehicles and adapted accordingly. Therefore, only Mercedes-Benz GenuineParts should be used.

More than 300,000 different Mercedes-Benz GenuineParts are available for Mercedes-Benz models.

All Mercedes-Benz service centres maintain a supply of Mercedes-Benz GenuineParts for essential servicing and repair work. In addition, strategically located parts delivery center ensure a quick and reliable parts service.

Always specify the vehicle identification number (VIN) when ordering Mercedes-Benz GenuineParts (→ page 698).

Touch-sensitive controls

In addition to conventional switches and buttons, your vehicle is equipped with touch-sensitive controls.

THESE ARE LOCATED IN THE FOLLOWING AREAS OF YOUR VEHICLE:

- Roof and door control panel
- Climate control
- Steering wheel
- MBUX multimedia system

The controls have touch-sensitive user interface surfaces. You can control these surfaces by pressing or swiping to adjust settings or to trigger functions, for example.

The touch-sensitive interface on the touchscreen also provides haptic feedback in the form of pulses, vibrations or changes in the surface structure, for example.

YOU WILL RECEIVE HAPTIC FEEDBACK IN THE FOLLOWING SITUATIONS, FOR EXAMPLE:

- When pressing a button on the user interface
- When scrolling in a list or table
- When you reach a new area on the user interface, e.g. a pop-up window

WHEN USING TOUCH-SENSITIVE USER INTERFACES, NOTE THE FOLLOWING POINTS TO AVOID PROBLEMS:

- Do not affix stickers or similar objects to the surfaces.
- Do not attach smartphone holders or other mountings to the surface of the central display.
- Keep the surfaces protected from moisture and wet conditions.
- Keep the surfaces free of dust and dirt (⟶ page 567).

Some touch-sensitive controls have both a symbol and integrated indicator lamps. Be sure to press on the symbol of the control element when using it.

Mercedes-Benz App

Notes on Digital Extras

You can also activate various functions (Digital Extras) retroactively via Mercedes-Benz after purchasing your vehicle.

Information is available at any authorized Mercedes-Benz Center.

Ordering and activating Digital Extras

Requirements:

- The vehicle has a wireless connection.
- The vehicle is linked to the user's Mercedes-Benz account.

ORDERING AND ACTIVATING DIGITAL EXTRAS

► Place the Digital Extra that you would like to purchase for your vehicle in your shopping basket in the Mercedes-Benz Store.

► Complete the order.

The Digital Extra will be activated while you are using the vehicle.

SPEEDING UP ACTIVATION

► Switch off and lock the vehicle.

► Unlock the vehicle after about two minutes and switch on the vehicle.

The Digital Extra will be activated. For some features, a notification will also appear in the vehicle's multimedia system.

If the activation was not successful, repeat the process.

Service and vehicle operation

Vehicle operation outside the USA or Canada

If you drive your vehicle abroad, service facilities or replacement parts may not be immediately available.

Some Mercedes-Benz models are available in Europe through our European Delivery Program. For more information, please consult an authorized Mercedes-Benz Center, or write to one of the following addresses:

in the USA:

Mercedes-Benz USA, LLC

One Mercedes-Benz Drive

Sandy Springs, GA 30328

in Canada:

Mercedes-Benz Canada, Inc.

2680 Matheson Blvd E, Suite 500

Mississauga, ON L4W 0A5

Maintenance

USA only:

Your customer advisor confirms the service in the service report.

Roadside Assistance

The Mercedes-Benz Roadside Assistance Program offers technical help in the case of a breakdown. Your calls to the toll-free Roadside Assistance Hotline are answered by our agents 24 hours a day, 365 days a year.

1-800-FOR-MERCedes (1-800-367-6372) (USA)

1-800-387-0100 (Canada)

USA only: You can find further information in the Mercedes-Benz Roadside Assistance Program brochure.

Canada only: You can find further information in the “Roadside Assistance” section in the Warranty Information Guide. Please refer to Mercedes-Benz Canada’s website:

https://www.mercedes-benz.ca/en/owners/manuals (English)

https://www.mercedes-benz.ca/fr/owners/manuals (French)

Change of address or change of ownership

In the event of a change of address, please send us the "Notification of address change" in the Service and Guarantee booklet or simply call the Mercedes-Benz Customer Assistance Center (USA) on the hotline number 1-800-FOR-MERCedes (1-800-367-6372) or Customer Service (Canada) on 1-800-387-0100. We can then reach you in a timely fashion, if necessary.

If you sell your Mercedes, please leave all literature in the vehicle so that it is available to the next owner. If you have purchased a used vehicle, please send us the "Notice of Purchase of Used Car" in the Service and Guarantee booklet or simply call the Mercedes-Benz Customer Assistance Center (USA) at the hotline number 1-800-FOR-MERCedes (1-800-367-6372) or Customer Service (Canada) at 1-800-387-0100.

Possible danger due to substances hazardous to health

In compliance with Proposition 65 (“Prop65”), the following detachable label has been added to each vehicle sold in California:



Operating safety

WARNING
Risk of accident due to malfunctions or system failures

If you do not have the prescribed service/maintenance work or any required repairs carried out, this could result in malfunctions or system failures.

- ► Always have the prescribed service and maintenance work or any required repairs carried out in a qualified specialist workshop.

WARNING
Risk of accident or injury due to incorrect modifications on electronic component parts

Modification of electronic components, their software or wiring could impair their function and/or the function of other networked component parts or safety-relevant systems.

This can endanger the operating safety of the vehicle.

- ► Never tamper with the wiring and electronic component parts or their software.
- ► You should have all work on electrical and electronic components carried out at a qualified specialist workshop.

Observe the "On-Board Electronics" section in "Technical Data".

NOTE
Impairment of the operating efficiency of the vehicle or individual components due to tampering with the on-board electronics

The vehicle is equipped by the manufacturer with various safety mechanisms that interact with each other.

IF THE SYSTEM DETECTS TAMPERING WITH THE ON-BOARD ELECTRONICS DUE TO AN UNAUTHORIZED MODIFICATION OF CONTROL UNITS AND/OR THEIR SOFTWARE/DATA, THIS MAY HAVE THE FOLLOWING EFFECTS:

- Individual vehicle functions are (temporarily) no longer operational.
- The overall vehicle is (temporarily) no longer operational.

- ► Have the vehicle checked immediately at a qualified specialist workshop and, if necessary, reset to factory settings.

NOTICE
Risk of damage to the vehicle due to driving too fast and due to impacts to the underbody and suspension components

IN THE FOLLOWING SITUATIONS IN PARTICULAR, THERE IS A RISK OF DAMAGE TO THE VEHICLE:

- The vehicle bottoms out, e.g., on a high curb or unpaved roads.
- The vehicle is driven too fast over an obstacle, e.g., a curb, speed bump, or pothole.
- A heavy object strikes the underbody or suspension components.

In these or similar situations, the vehicle body, the underbody, suspension components, wheels, tires, or parts of the high-voltage battery could incur damage, even if this is not visible. Components damaged in this way can fail unexpectedly, lead to an increased risk of fire, or, in the event of an accident, no longer be able to withstand the stresses arising as intended.

► Have the vehicle checked and repaired at a qualified specialist workshop immediately.

or

► If driving safety is impaired while continuing your journey, pull over and stop the vehicle immediately, paying due attention to road and traffic conditions, and contact a qualified specialist workshop.

Electric vehicles have an electric motor. The energy supply for the electric motor comes from the high-voltage on-board electrical system.

DANGER
Risk of death and fire due to modified and/or damaged components of the high-voltage on-board electrical system

The vehicle's high-voltage on-board electrical system is under high voltage. If you modify component parts in the vehicle's high-voltage on-board electrical system or touch damaged component parts, you may be electrocuted. In addition, modified and/or damaged components may cause a fire.

In the event of an accident or impact to the underbody, components of the high-voltage electrical system may be damaged although the damage is not visible.

► Never make any modifications to the high-voltage on-board electrical system.

► Do not switch on or use the vehicle if its high-voltage on-board electrical system components have been modified or damaged.

► Never touch damaged components of the high-voltage on-board electrical system.

► After an accident, do not touch any components of the high-voltage on-board electrical system.

► After an accident, have the vehicle transported away.

► Have the components of the high-voltage on-board electrical system checked at a qualified specialist workshop and replaced if necessary.

The components of the high-voltage on-board electrical system are marked with yellow warning stickers. The cables of the high-voltage on-board electrical system are orange.



Example

High-voltage components that can become very hot are marked with a separate warning sticker:




Vehicles with an electric motor generate significantly less noise when stationary and on the move than vehicles with a combustion engine.

This means that other road users may fail to hear the vehicle owing to its significantly reduced stationary and driving noise.

It is for this reason that the vehicle is equipped with a sound generator, which serves as an acoustic vehicle alerting system (AVAS). This protective measure is prescribed by law.

This exterior noise by the sound generator (AVAS) is audible in the vehicle interior at low speeds, and is not a malfunction.

Mounting the license plate onto the front license plate bracket

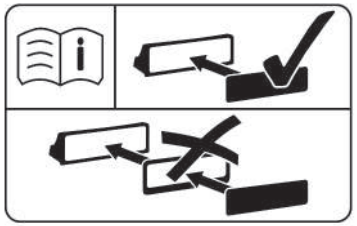

The information label can be found on the license plate bracket, either embossed or in sticker form.

NOTE

Malfunctions and system failures due to incorrect mounting of the license plate on the front license plate holder

If the license plate is incorrectly mounted on the front license plate holder, sensors, cameras or driving and safety systems may malfunction or fail.

Observe the following points when mounting the license plate on the front license plate holder:

- Mount the license plate directly on the license plate holder without advertising media or other holders.
- Mount the license plate so that it does not protrude above or to the side of the license plate adapter.

Country-specific information for regulatory radio components

INFORMATION REGARDING MODIFICATIONS TO RADIO COMPONENTS
Modifications to radio components may invalidate the operating permit for the respective radio component. The radio component manufacturer accepts no responsibility for such modifications.

INFORMATION REGARDING CROSSING NATIONAL BORDERS
You must observe the radio regulatory provisions for the country in which you are currently driving when operating the vehicle.

RADIO-BASED VEHICLE COMPONENTS

USA: "This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications made to this equipment not expressly approved by Mercedes-Benz may void the FCC authorization to operate this equipment. Radiofrequency radiation exposure Information: The radiated output power of the device is far below the FCC radio frequency exposure limits. Nevertheless, the device shall be used in such a manner that the potential for human contact during normal operation is minimized."

"This equipment complies with FCC and ISED radiation exposure limits set forth for an uncontrolled environment. End Users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must be at least 20 cm from the user and must not be co-located or operating in conjunction with any other antenna or transmitter."

Canada: "This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received including interference that may cause undesired operation. This Class [B] digital apparatus complies with Canadian ICES-003." "Cet appareil est conforme à la Partie 15 des règlementations de la FCC et avec la norme RSS-210 de l'Industrie Canadienne. Son fonctionnement est soumis aux deux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences nuisibles et (2) Cet appareil doit accepter toute interférence reçue, y compris les interférences pouvant entraîner un fonctionnement indésirable. Cet appareil numérique de la classe [B] est conforme à la norme NMB-003 du Canada."

Canada (French): "This device complies with Part 15 of the FCC Rules, as well as Standard RSS-210 from Innovation, Science and Economic Development Canada. Its operation is subject to the following two conditions: (1) This device must not cause any harmful interference, and (2) This device must accept all interference received, including interference that may cause undesired operation. This Category [B] device complies with Canadian Standard NMB-003. "

"This equipment complies with FCC and ISED radiation exposure limits set forth for an uncontrolled environment. End Users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must be at least 20 cm from the user and must not be co-located or operating in conjunction with any other antenna or transmitter."

Diagnostics connection

The diagnostics connection is a technical interface in the vehicle. It is used, forexample, within the scope of repair and maintenance work, or for reading out vehicle data in a specialist workshop. Diagnostic devices should therefore only be connected at a qualified specialist workshop.

WARNING
Risk of accident as a result of connecting devices to the diagnostics connection

If you connect devices to the vehicle's diagnostics connection, functioning of vehicle systems and operational safety can become impaired.

- ► It is recommended for safety reasons that only products which have been approved by an authorized Mercedes-Benz Center be used and connected.

WARNING
Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.


This will jeopardize the operating- and road safety of the vehicle.

- ► Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- ► Make sure that there is always sufficient clearance for the pedals.
- ► Always install the floor mats securely and as prescribed.
- ► Do not use loose floor mats and do not place floor mats on top of one another.

NOTE
Battery discharging from using devices connected to the diagnostics connection

Using devices at the diagnostics connection drains the battery.

- ► Check the charge level of the battery.
- ► If the charge level is low, charge the battery, e.g. by driving a considerable distance.

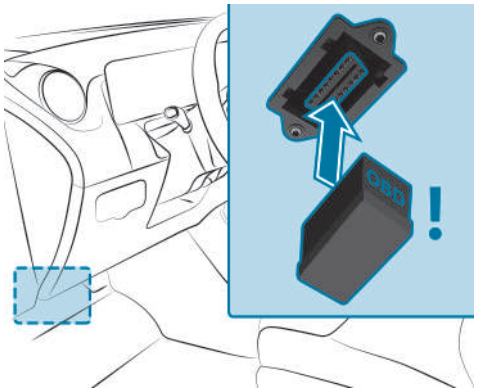

CONNECTING AND USING ANOTHER DEVICE WITH THE DIAGNOSTICS CONNECTION CAN HAVE THE FOLLOWING CONSEQUENCES:

- Malfunctions in the vehicle system
- Permanent damage to vehicle components

Please refer to the warranty terms and conditions in this regard.

Qualified specialist workshop

A Mercedes-Benz service center is a qualified specialist workshop. It has the necessary special skills, tools and qualifications to correctly carry out the work required on your vehicle. This particularly applies to safety-critical work.

ALWAYS HAVE THE FOLLOWING WORK ON YOUR VEHICLE CARRIED OUT BY A MERCEDES-BENZ SERVICE CENTER:

- Safety-critical work
- Service and maintenance work
- Repair work
- Modifications as well as installations and conversions
- Work on electronic components
- Work on high-voltage components

Mercedes-Benz recommends a Mercedes-Benz service center.

Correct use of the vehicle

If you remove any warning stickers, you or others could fail to recognize potential dangers. Leave all warning stickers in their designated positions.

OBSERVE THE FOLLOWING INFORMATION IN PARTICULAR WHEN DRIVING YOUR VEHICLE:

- The safety notes in this Operator's Manual, vehicle-specific supplements, and further supplementary documents
- Technical data for the vehicle
- Traffic rules and -regulations of the country you are currently in
- Motor vehicle laws and safety standards of the country you are currently in
- Radio regulatory requirements of the country you are currently in

Sport Utility Vehicle

WARNING
Risk of accident when the center of gravity is too high

The vehicle may start to skid and rollover in the event of sudden steering maneuvers and/or when the vehicle's speed is not adapted to the road conditions.

- Always adapt your speed and driving style to the vehicle's driving characteristics and to the prevailing road and weather conditions.



USA



Canada

Utility vehicles have a significantly higher rollover rate than other types of vehicles.

If this type of vehicle is not driven safely, an accident can occur, the vehicle can roll over and occupants can suffer serious or even fatal injuries.

In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt.

You and all vehicle occupants should always wear your seat belts.

Notes for persons with electronic medical aids

Despite meticulous development of their vehicle systems, Mercedes-Benz AG cannot completely rule out the interaction of vehicle systems with electronic medical aids, suchas cardiac pacemakers.

In addition, there are components installed in the vehicle that can generate magnetic fields on a par with permanent magnets, regardless of the operating status of the vehicle. These fields may occur in the area around the multimedia system and sound system, forexample, or in the area around the seats, depending on the respective vehicle equipment.

IN SOME CASES, THIS COULD RESULT IN THE FOLLOWING, DEPENDING ON THE AIDS USED:

- Medical aids malfunctioning
- Adverse health effects

Note the information and warnings from the manufacturer of the auxiliary equipment, and in case of uncertainty, please consult the manufacturer of the auxiliary equipment and/or your doctor. If there is continuing uncertainty concerning the possibility of medical aids malfunctioning, Mercedes-Benz AG recommends using fewer electrical vehicle systems and/or maintaining a distance from the components.

WHEN CHARGING THE HIGH-VOLTAGE BATTERY, KEEP A DISTANCE OF AT LEAST AN ARM'S LENGTH BETWEEN THE MEDICAL AID AND THE FOLLOWING COMPONENTS:

- the power supply equipment
  This includes charging stations in the form of a wallbox or a public charging point, forexample.
- vehicle components carrying live voltage
  This includes the charging cable and the charging control box, forexample.

ALWAYS HAVE REPAIRS AND MAINTENANCE WORK IN THE AREA OF THE FOLLOWING COMPONENTS CARRIED OUT AT A QUALIFIED SPECIALIST WORKSHOP:

- vehicle components carrying live voltage
- transmission antennas
- multimedia system and sound system

If you have any queries or suggestions, consult a qualified specialist workshop.

Problems with your vehicle

If you should experience any problem with your vehicle, particularly one that you believe may affect its safe operation, we urge you to contact a Mercedes-Benz Service Center immediately to have the problem diagnosed and rectified. If the problem is not resolved to your satisfaction there, please contact a Mercedes-Benz Service Center again or write to one of the following addresses.

In the USA:

Mercedes-Benz USA, LLC

Customer Assistance Center

One Mercedes-Benz Drive

Sandy Springs, GA 30328

In Canada:

Mercedes-Benz Canada, Inc.

Customer Assistance Center

2680 Matheson Blvd E, Suite 500

Mississauga, ON L4W 0A5

Reporting safety defects

USA ONLY:
The following text is published as required of manufacturers under Title 49, Code of U.S. Federal Regulations, Part 575 pursuant to the “National Traffic and Motor Vehicle Safety Act of 1966”.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Mercedes-Benz USA, LLC.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Mercedes-Benz USA, LLC.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153) ; go to https://www.safercar.gov; or write to: Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590, USA.

You can also obtain other information about motor vehicle safety from https://www.safercar.gov.

CANADA ONLY:
The following text is published as required of manufacturers under subsection 18.4 (4) of the Motor Vehicle Safety Regulations.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform Transport Canada in addition to notifying Mercedes-Benz Canada Inc.

If Transport Canada received similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, Transport Canada cannot become involved in individual problems between you, your dealer, or Mercedes-Benz Canada Inc.

To contact Transport Canada, you may call the Defect Investigations and Recalls Division toll-free in Canada at 1-800-333-0510 or 819-994-3328 in the Gatineau-Ottawa area or internationally; may also go to the following websites for more information:

- English: https://www.tc.gc.ca/recalls
- French: https://www.tc.gc.ca/rappels

Liability for material defects

NOTE

Damage to the vehicle due to failure to follow instructions in this Operator's Manual

Damage to the vehicle can arise due to failure to follow instructions in this Operator's Manual.

This damage is not covered either by the Mercedes-Benz implied warranty or by the New or Used Vehicle Warranty.

- Observe the notes on correct operation of the vehicle as well as possible vehicle damage in this Operator's Manual.

QR code for rescue card

QR codes are attached to the inside of the socket flap and on the opposite side on the B-pillar. In the event of an accident, rescue services can use the QR code to quickly find the appropriate rescue card for your vehicle. The current rescue card contains the most important information about your vehicle (e.g. the routing of the electric lines) in compact form.

You can find further information at: https://rk.mb-qr.com/de/

Data storage

Data processing in the vehicle

ELECTRONIC CONTROL UNITS
Electronic control units are installed in your vehicle. Control units process data they receive, generate themselves, or exchange with each other, forexample from vehicle sensors. Some control units are required for the safe operation of your vehicle. Some assist you when driving, suchas driver assistance systems, while others enable comfort or infotainment functions.

The following section provides general information about data processing in the vehicle. Additional information regarding which vehicle data is collected, saved, and transmitted to third parties and for what purpose can be found in the information directly related to the relevant functional characteristics in the respective Operator's Manual. This information is available online and digitally, depending on the vehicle's equipment.

PERSONAL DATA
A unique vehicle identification number identifies every vehicle. Depending on the country, this vehicle identification number can also be used to determine the identity of the vehicle keeper, forexample by the authorities. There are also other ways of tracing data collected from the vehicle back to the keeper or driver, suchas the license plate number.

The data generated or processed by control units may therefore be attributable to a person or, in certain circumstances, become attributable to a person. Depending on which vehicle data is available, it may be possible to make inferences about, forexample, your driving behavior, location, route, or use patterns.

LEGAL REQUIREMENTS REGARDING THE DISCLOSURE OF DATA
If legally required to do so, manufacturers are generally obliged to provide the authorities with data stored by the manufacturer upon request and to the extent required. Forexample, this may be the case during the investigation of a criminal offense.

State authorities are themselves authorized to read out data from the vehicle in individual cases and within the applicable legal framework. In the case of an accident, information that can help with an investigation can be taken from the airbag control unit, forexample.

OPERATIONAL DATA IN THE VEHICLE
To operate the vehicle, control units process data.

THIS INCLUDES THE FOLLOWING DATA, FOREXAMPLE:

- Vehicle status information suchas the speed, longitudinal acceleration, lateral acceleration, number of wheel revolutions, or the fastened seat belts display
- Ambient conditions, suchas temperature, rain sensor, or distance sensor

Generally, this data is volatile and will not be stored beyond the period of operation and will only be processed within the vehicle itself. Control units, forexample, vehicle keys, often contain data memories. Their use permits the temporary or permanent documentation of technical information about the vehicle's operating state, component loads, maintenance requirements, and technical events or malfunctions.

DEPENDING ON THE TECHNICAL EQUIPMENT, THE FOLLOWING DATA IS STORED:

- Operating status of system components, suchas fill levels, tire pressure, or battery status
- Faults or malfunctions in important system components, suchas lights or brakes
- System reactions in special driving situations, suchas an airbag deployment or the intervention of stability control systems
- Information on events leading to vehicle damage
- State of charge of the high-voltage battery, estimated range

In certain cases, storing data that would have otherwise been temporary may be required. This may be the case if the vehicle has detected a malfunction, forexample.

If you make use of services, e.g., repair services or maintenance work,– the stored operating data can be read out and used together with the vehicle identification number – if necessary.

Service network employees suchas workshops and manufacturers, and third parties suchas breakdown services can read out the data. The same is true in the event of warranty claims and quality assurance measures.

In general, the readout is performed via the legally prescribed port for the diagnostics connection in the vehicle. The selected operating data documents the vehicle's or individual components' technical conditions, helps with malfunction diagnosis, compliance with warranty obligations, and quality improvement. To that end, this data, particularly information about component loads, technical events, malfunctions, and other malfunctions, may be transmitted to the manufacturer along with the vehicle identification number. Furthermore, the manufacturer is subject to product liability. For this reason, the manufacturer also uses operational data from the vehicle, e.g. for recalls. This data can also be used to review the customer's legal guarantee and warranty claims.

Fault memories in the vehicle can be reset by a service outlet or at your request as part of repair or maintenance work.

COMFORT AND INFOTAINMENT FUNCTIONS
You can store the vehicle's comfort and individual settings and change or reset them at any time.

DEPENDING ON THE VEHICLE EQUIPMENT, THIS INCLUDES THE FOLLOWING SETTINGS, FOREXAMPLE:

- Seat and steering wheel positions
- Suspension tuning and climate control settings
- Individual settings, suchas interior lighting

Depending on the selected equipment, you can import data into vehicle infotainment functions yourself.

DEPENDING ON THE VEHICLE EQUIPMENT, THIS INCLUDES THE FOLLOWING DATA, FOREXAMPLE:

- Multimedia data, suchas music, films, or photos for playback in an integrated multimedia system
- Address book data for use in connection with an integrated hands-free system or an integrated navigation system
- Entered navigation destinations
- Data about the use of Internet services

This data for comfort and infotainment functions may be saved locally in the vehicle or on a device connected to the vehicle, suchas a smartphone, USB

flash drive, or MP3 player. If you have entered this data yourself, you can delete it at any time.

This data is only transmitted from the vehicle to third parties at your request. This applies in particular to the use of online services based on the settings you have selected yourself.

SMARTPHONE INTEGRATION (E.G., ANDROID AUTO OR APPLE CARPLAY®)
If your vehicle is equipped accordingly, you can connect your smartphone or another mobile end device to the vehicle. You can then control them using the control elements integrated into the vehicle. Images and audio from the smartphone can be output via the multimedia system. Certain information is simultaneously transferred to your smartphone. Depending on the type of integration, thisincludes position data, day/night mode, and other general vehicle states. For more information, please consult the vehicle Operator's Manual/infotainment system.

This integration allows the use of selected smartphone apps, suchas navigation or music player apps. There is no further interaction between the smartphone and the vehicle; in particular, vehicle data is not directly accessible. The type of additional data processing is determined by the provider of the app being used. The settings you can configure, if any, depend on the specific app and your smartphone's operating system.

Online services

WIRELESS NETWORK CONNECTION
If your vehicle has a wireless network connection, it enables data to be exchanged between your vehicle and additional systems. The wireless network connection is made possible by the vehicle's own transmitter and receiver or by a mobile end device that you have brought into the vehicle, for example, a smartphone. Online functions can be used via the wireless network connection. This includes online services and applications/apps provided to you by the manufacturer or by other providers.

MANUFACTURER'S SERVICES
Regarding the manufacturer's online services, the individual functions are described by the manufacturer in a suitable place, for example, in the Operator's Manual or on the manufacturer's website, where the relevant data protection information is also given. Personal data may be used for the provision of online services. Data is exchanged via a secure connection, such as the manufacturer's designated IT systems. Any personal data which is collected, processed and used, other than for the provision of services, is done so exclusively on the basis of legal permission. This is the case, for example, for a legally prescribed emergency call system, a contractual agreement or when consent has been given.

You can have services and functions, some of which are subject to a fee, activated or deactivated. This excludes legally prescribed functions and services, such as an emergency call system.

THIRD-PARTY SERVICES
If you use online services from other providers (third parties), these services are the responsibility of the provider in question and subject to that provider's data protection conditions and terms of use. As a general rule, the manufacturer has no influence on the content exchanged.

For this reason, when services are provided by third parties, please ask the service provider in question for information about the type, extent and purpose of the collection and use of personal data.

Data protection rights

Depending on your country or the equipment and range of functions of your vehicle as well as the services you use and the services on offer, you are entitled to different data protection rights. Further information on data protection and your data protection rights can either be found on the manufacturer's website or you will receive this information as part of the various services

and service offers. There you will also find the contact information for the manufacturer and its data protection officers.

At a workshop, for example, with the support of a specialist and possibly for a fee, you can have data read out which is stored only locally in the vehicle.

MBUX Multimedia System/Mercedes-Benz Connect

If the vehicle is equipped with the MBUX multimedia system or Mercedes-Benz Connect, additional data pertaining to operation of the vehicle, handling of the vehicle in certain situations, as well as the location of the vehicle is recorded by the MBUX multimedia system or by Mercedes-Benz Connect.

Additional information can be obtained in the "MBUX Multimedia System" chapter and/or in the terms and conditions of use for Mercedes-Benz Connect.

Event Data Recorder

USA only:

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

THE EDR IN THIS VEHICLE IS DESIGNED TO RECORD SUCH DATA AS:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

EDR data may be used in civil and criminal matters as a tool in accident reconstruction, accident claims, and vehicle safety. Since the Crash Data Retrieval CDR tool that is used to extract data from the EDR is commercially available, Mercedes-Benz USA, LLC („MBUSA“) expressly disclaims any and all liability arising from the extraction of this information by unauthorized Mercedes-Benz personnel.

MBUSA will not share EDR data with others without the consent of the vehicle owners or, if the vehicle is leased, without the consent of the lessee. Exceptions to this representation include responses to subpoenas by law enforcement; by federal, state or local government; in connection with or arising out of litigation involving MBUSA or its subsidiaries and affiliates; or, as required by law.

Warning: The EDR is a component of the Restraint System Module. Tampering with, altering, modifying or removing the EDR component may result in a malfunction of the Restraint System Module and other systems.

State laws or regulations regarding EDRs that conflict with federal regulation are pre\-empted. This means that in the event of such conflict, the federal regulation governs. As of Dec 2016, 17 states have enacted laws relating to EDRs.

Copyright

Free and open source software

Information on licenses for free and open-source software used in your vehicle can be found on the data carrier in your vehicle document wallet and with updates on the following website:

https://www.mercedes-benz.com/opensource

Registered trademarks

- Bluetooth® is a registered trademark of Bluetooth SIG, Inc.
- DTS™ is a registered trademark of DTS, Inc.
- Dolby® and MLP™ are registered trademarks of DOLBY Laboratories.
- ESP® and PRE-SAFE® are registered trademarks of Mercedes-Benz Group AG.
- HomeLink® is a registered trademark of Gentex Corporation.
- iPod® and iTunes® are registered trademarks of Apple Inc.
- Burmester® is a registered trademark of Burmester Audiosysteme GmbH.
- Microsoft® and Windows Media® are registered trademarks of Microsoft Corporation.
- SiriusXM® is a registered trademark of Sirius XM Radio Inc.
- HD Radio™ is a registered trademark of iBiquity Digital Corporation.
- Gracenote® is a registered trademark of Gracenote, Inc.
- ZAGAT Survey® and related brands are registered trademarks of Zagat Survey, LLC.

Back to contents

Occupant safety

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Brief overview of the most important points

Information on the automatic functions of the restraint system

Purpose and function of the restraint system

Seat belts

Airbags

Brief overview of the most important points

Basic information

IN PARTICULAR ENSURE THE FOLLOWING CONDITIONS TO ENABLE THE COMPONENTS OF THE RESTRAINT SYSTEM TO UNFOLD THEIR PROTECTIVE POTENTIAL:

- Sit correctly (⟶ page 115).
- Fasten the seat belt correctly (⟶ page 116).
  - Function of the seat belt warning lamp (⟶ page 119).
  - Function of the rear seat belt status display (⟶ page 120).
- The restraint system warning lamp has gone out after the self-test (⟶ page 119).
- The PASSENGER AIR BAG indicator lamps display the correct status of the front passenger air bag (⟶ page 120).

FOR CLEAR UNDERSTANDING

The chapter "Occupant safety" includes information on equipment, functions and behaviors that contribute directly to safety of vehicle occupants.

THE INFORMATION IS STRUCTURED AS FOLLOWS:

- **The most important information in brief:** in this chapter, you are provided with an overview of the relationship between the restraint system and the correct behavior of all vehicle occupants.
- **Specific information:** in further sections of the chapter "Occupant safety", you can find specific information on the equipment and functions of the restraint system.
- **Keyword search:** You can also find specific topics using the search field in the Digital Operator's Manual.

INFORMATION ON THE FOLLOWING SUBJECTS, AMONG OTHERS, IS NOT PROVIDED IN THE CHAPTER "OCCUPANT SAFETY":

- Children in the vehicle (⟶ page 135)
- Driving and driving safety systems (⟶ page 323)
- Stowage areas (⟶ page 217)

DEFINING GENERIC TERMS CLEARLY

IN THIS OPERATOR'S MANUAL, THE FOLLOWING GENERIC TERMS ARE USED:

- **Occupant safety:** comprises the components and system functions that help to minimize, as much as possible, the stresses on and consequences for vehicle occupants during an accident.
- **Restraint system:** comprises those components that, along with the vehicle structure, help prevent vehicle occupants from potentially coming into contact with parts of the vehicle interior. The seat belts and air bags, for example, are components of the restraint system.
- **Child restraint system:** you can find all information on this subject in the chapter "Children in the vehicle" (⟶ page 135).

BE DILIGENT
For the components of the restraint system to provide the intended level of protection, it is essential that your posture is correct and that the seat belt is correctly fastened.

Please bear in mind that carelessness regarding the seating position and putting on the seat belt may have serious consequences. Be diligent and make sure that all vehicle occupants are sitting correctly and have fastened their seat belts properly before starting every journey (⟶ page 115).

Information on the correct seat position

The seat position must be correct in order for the components of the restraint system to provide the intended level of protection.

The seat position influences both the protection provided by the seat belt and the additional protection provided by the airbag.

A correct seat position in which the seat is almost perfectly upright and a correctly fastened seat belt reduce the risks posed by the airbag when it is deployed.

Spatial conditions should be considered when choosing the seat position. With the seat in the correct, almost upright position, your head should not touch the roof.

WARNING
Risk of injury or death due to an incorrect seat position

If you deviate from the correct seat position, the air bag cannot provide its intended protective function.

Each vehicle occupant must make sure of the following.

- ► Put the seat in the correct position.
- ► Fasten seat belts correctly.
- ► Observe the following information.

IN ORDER FOR THE RESTRAINT SYSTEM TO PROVIDE THE INTENDED LEVEL OF PROTECTION, OBSERVE THE FOLLOWING INFORMATION:

- Before starting your journey, adjust your seat correctly (⟶ page 188).

  An optimum seat position should allow you to fasten your seat belt correctly. The shoulder belt strap must be routed forward from the seat belt outlet over the center of your shoulder.
- Maintain an adequate distance from the airbags, especially the front airbags. Set the driver's seat and front passenger seat as far back as possible, ensuring that the seat belt is fastened correctly.
- If persons are sitting on the rear seats, vehicle occupants should maintain a sufficient distance to parts of the vehicle interior in front of them.
- Ensure there are no persons, animals or objects between the vehicle occupants and an airbag.
- The driver must observe the following information on correct positioning of the driver's seat (⟶ page 188).

  Only hold the steering wheel by the steering wheel rim. This allows the driver's airbag to deploy fully.

During pregnancy in particular, it is important to ensure the greatest possible distance from the steering wheel due to the change in stature and the unborn child.

- Assume an almost upright sitting posture, with your buttocks positioned as far back as possible in the gap between the seat cushion and the seat backrest.

  Your back must lie as flatly and as firmly as possible against the seat backrest.
- Do not lean forward and do not lean against the door or side window while the vehicle is in motion. You may otherwise be within deployment range of the airbags.
- Sit with your feet resting on the floor where possible. Your thighs are supported slightly by the seat cushion.

  Do not put your feet on the cockpit, forexample. Your feet may otherwise be within deployment range of the airbag.
- Fasten the seat belt correctly (⟶ page 116).

Notes on wearing the seat belt correctly

Always fasten your seat belt correctly before starting a journey. A seat belt can only provide the best level of protection if it is worn correctly.

WARNING
Risk of injury or death due to incorrectly fastened seat belt

If the seat belt is not worn correctly, it cannot perform its intended protective function.

In addition, an incorrectly fastened seat belt can also cause injuries, for example, in the event of an accident or when braking or changing direction suddenly.

► Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly.

WARNING
Risk of injury or death when additional restraint systems are not used for persons with a smaller stature

Persons under 5 ft (1.50 m) tall cannot wear the seat belt correctly without a suitable additional restraint system.

► Always secure persons under 5 ft (1.50 m) tall in a suitable restraint system.

Observe the following information on the correct seating position and posture (⟶ page 115).

EACH VEHICLE OCCUPANT MUST OBSERVE THE FOLLOWING NOTES IN PARTICULAR:

- The seat belt must not be twisted.
- The shoulder belt strap must be routed forward from the seat belt outlet over the center of your shoulder.

- The shoulder belt strap should neither touch your neck nor be routed under your arm or behind your back.
- The lap belt must be routed as low down across the hips as possible.

  In addition, push the lap belt down as far as possible across your hips and pull tight with the shoulder belt strap. Never route the lap belt across your abdomen.
- After being tightened, the shoulder belt strap and lap belt must install snugly against the body.
- Particularly during pregnancy, the instructions for wearing the seat belt correctly must be followed consistently due to the change in stature and the unborn child (⟶ page 117).
- Avoid wearing bulky clothing, e.g. a winter coat.
- Never route the seat belt across sharp, pointed, abrasive or fragile objects.
- Only one person should use each seat belt at any one time.
- Never secure objects with a seat belt if the seat belt is also being used by one of the vehicle's occupants.

  Also ensure that no objects, e.g. a cushion, are ever placed between a person and the seat.

If you are driving with a child in the vehicle, observe the information in the chapter "Children in the vehicle" (⟶ page 135).

Observe the instructions for loading the vehicle when securing objects, luggage or loads (⟶ page 217).

Wearing a seat belt during pregnancy

BE DILIGENT

PAY PARTICULAR ATTENTION TO THE FOLLOWING INSTRUCTIONS DURING PREGNANCY DUE TO THE CHANGE IN STATURE AND THE UNBORN CHILD:

- Correct seating position and posture
- Wearing the seat belt correctly

The correct seating position with a nearly upright seating posture and a correctly fastened seat belt reduce the risks for the mother and unborn child in the event of an accident.

Particularly during pregnancy, due to the change in stature and the unborn child, maintain as much distance as possible between your abdomen (baby bump) and the steering wheel.

If it is not possible to maintain a sufficient distance to the steering wheel whilst simultaneously ensuring safe operation of the vehicle, another person should drive the vehicle.

ⓘ Mercedes-Benz recommends that you seek professional advice, e.g. from a doctor, about the possible risks involved in driving a vehicle when pregnant.

WEARING THE SEAT BELT



PARTICULARLY DURING PREGNANCY, OBSERVE THE FOLLOWING NOTES:

- Push the lap belt down as far as possible across your hips and pull tight with the shoulder belt strap. Never route the lap belt across your abdomen (baby bump).
- The shoulder strap should run along the side of the abdomen (baby bump).
- Never position any objects between the person and the seat belt, not even cushions forexample.

Fastening seat belts

If the seat belt is pulled quickly or sharply, the seat belt retractor locks. The seat belt strap cannot be pulled out any further.



► Always engage seat belt tongue (2) of the seat belt into seat belt buckle (1) of the corresponding seat.

NOTE

Deployment of components of the restraint system when the front passenger seat is unoccupied and a seat belt is buckled

When the front passenger seat is unoccupied and the seat belt tongue of the seat belt is engaged in the seat belt buckle, components of the restraint system may deploy unnecessarily on the front passenger side, e.g. the Emergency Tensioning Device.

► Only buckle the seat belts as intended.

ⓘ Observe the information on the special seat belt retractor of the seat belt (⟶ page 146).

Function of the restraint system warning lamp

When the vehicle is switched on, a self-test will be performed, during which the restraint system warning lamp will light up. It will disappear no later than a few seconds after the vehicle is started. The components of the restraint system will then be functional.

A MALFUNCTION HAS OCCURRED IN THE RESTRAINT SYSTEM IF:

- the restraint system warning lamp does not light up or lights up continuously when the vehicle is switched on
- the restraint system warning lamp lights up continuously or repeatedly during a journey

If components of the restraint system have been deployed, the restraint system warning lamp will light up continuously.

WARNING
Risk of injury due to malfunctions in the restraint system

Components in the restraint system may be activated unintentionally or not deploy as planned in an accident.

► Have the restraint system checked and repaired immediately at a qualified specialist workshop.

If the restraint system is malfunctioning, the automatic high voltage emergency shutoff may not function.

DANGER
Risk of fatal injuries due to malfunctions of the automatic high-voltage emergency shutoff

In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may be electrocuted if you touch the damaged component parts of the high-voltage on-board electrical system.

► Have the automatic high-voltage emergency shutoff checked and repaired immediately at a qualified specialist workshop.

► After an accident, switch off the vehicle immediately.

Mercedes-Benz recommends that you have the vehicle towed to a qualified specialist workshop.

Function of the seat belt warning lamp

The seat belt warning lamp on the driver display is a reminder that the driver and/or front passenger are not wearing their seat belts.

The seat belt warning lamp lights up for six seconds every time the vehicle is started.

All vehicle occupants must fasten their seat belts correctly (⟶ page 116).

In addition, a warning tone may sound.

The seat belt warning goes out as soon as the driver and the front passenger fasten their seat belts.

THE SEAT BELT WARNING MAY LIGHT UP DURING A JOURNEY IF:

- The driver or front passenger has not fastened their seat belt and the following criteria is met:
  - The vehicle speed exceeds 5 mph (9 km/h) for more than 20 seconds.
  - The vehicle speed exceeds 15 mph (25 km/h) once.
- The driver or front passenger unfastens their seat belt while the vehicle is in motion.

Function of the rear seat belt status display



Example: vehicle with five rear seats

The color of the symbol is intended to help you quickly identify the status of the rear seat belt.

Every time the vehicle is switched on, the rear seat belt status display informs you for a certain amount of time which rear seat belt is not fastened.

POSSIBLE COLOR OF THE SYMBOL:

- Gray: The rear seat belt is not fastened.
- Green: The seat belt tongue of a rear seat belt is engaged in the seat belt buckle of the displayed seat.
- Red: The person in the rear seat has unfastened their seatbelt.

If a vehicle occupant unfastens a seat belt in the rear passenger compartment while the vehicle is motion, the rear seat belt status display reappears.

In addition, a warning tone may sound.

Function of the PASSENGER AIR BAG indicator lamps (front passenger air bag)



If the front passenger seat is occupied or a child restraint system is installed on it, make sure both before and during the journey that the status of the front passenger air bag is correct for the situation.

WARNING
Risk of potentially fatal injuries due to objects trapped under the front passenger seat

Objects trapped under the front passenger seat may interfere with the function of the automatic front passenger air bag shutoff or damage the system.

- ► Do not stow any objects under the front passenger seat.
- ► When the front passenger seat is occupied, ensure that no objects have become trapped beneath the front passenger seat.

Self-test: when the vehicle is switched on, both the PASSENGER AIR BAG ON and OFF indicator lamps light up simultaneously for several seconds.

AFTER THE SELF-TEST, YOU CAN DETERMINE THE STATUS OF THE FRONT PASSENGER AIR BAG AS FOLLOWS:

- **Front passenger air bag disabled:** PASSENGER AIR BAG OFF lights up continuously.
  The front passenger air bag will not be deployed in the event of an accident. If PASSENGER AIR BAG OFF is lit, no one may use the front passenger seat.
  If a rearward-facing child restraint system is installed on the front passenger seat, PASSENGER AIR BAG OFF must be lit continuously.
- **Front passenger air bag enabled:** PASSENGER AIR BAG ON lights up for up to 60 seconds or until both the PASSENGER AIR BAG ON and OFF indicator lamps go out.
  The front passenger air bag may be deployed during an accident. If the front passenger air bag is in this status, no rearward-facing child restraint system may be installed on the front passenger seat.

ⓘ If you are driving with a child in the vehicle, observe the information in the chapter "Children in the vehicle" (⟶ page 135).

WARNING
Risk of injury or death due to a disabled front passenger airbag

The front passenger airbag is disabled when the PASSENGER AIR BAG OFF indicator lamp is lit.

A person in the front passenger seat could then, for example, come into contact with the vehicle interior, especially if the person is sitting too close to the cockpit.

IF THE FRONT PASSENGER SEAT IS OCCUPIED, ALWAYS ENSURE THAT:

- The classification of the person in the front passenger seat is correct and the front passenger airbag is enabled or disabled in accordance with the person in the front passenger seat.
- The front passenger seat has been moved as far back as possible.
- The person is seated correctly.

- ► Both before and during the journey, ensure that the status of the front passenger airbag is correct.

MALFUNCTION OF THE AUTOMATIC FRONT PASSENGER AIR BAG DEACTIVATION

The PASSENGER AIR BAG OFF indicator lamp and the restraint system warning lamp light up simultaneously.

In this case, no one may use the front passenger seat and no child restraint system may be installed on the front passenger seat.

Have the automatic front passenger air bag shutoff checked and repaired immediately at a qualified specialist workshop.

Disabling or enabling the front passenger air bag

The automatic front passenger air bag shutoff can disable or enable the front passenger air bag according to the situation.

This happens automatically as a result of the classification of the person or child restraint system on the front passenger seat.

You cannot manually disable or enable the front passenger air bag.

Information on the child restraint system

When installing a child restraint system, observe the notes in "Children in the vehicle" (⟶ page 135).

NOTES ON THE CHILD RESTRAINT SYSTEM ON THE FRONT PASSENGER SEAT

WARNING
Risk of injury- or fatal accident if the front passenger airbag is enabled

If the front passenger airbag is enabled, a child on the front passenger seat may be struck by the front passenger airbag during an accident.

- NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

Also pay particular attention to the notes on rear-facing or front-facing child restraint systems on the front passenger seat (⟶ page 141).

Information on the automatic functions of the restraint system

Function of the automatic front passenger airbag deactivation

A PERSON ON THE FRONT PASSENGER SEAT MUST OBSERVE THE FOLLOWING INSTRUCTIONS:

- Sit correctly (⟶ page 115).
- Fasten the seat belt correctly (⟶ page 116).

The automatic front passenger air bag shutoff can switch the front passenger air bag on or off depending on the situation.

MAKE SURE YOU OBSERVE THE FOLLOWING INFORMATION:

- The status of the front passenger airbag, see "Function of the PASSENGER AIR BAG indicator lamps" (⟶ page 120).
- When installing a child restraint system on the front passenger seat, observe the vehicle-specific information (⟶ page 141).



STATUS OF THE FRONT PASSENGER AIRBAG IN RELATION TO THE STATURE OF THE PERSON:

- **Front passenger airbag deactivated:** PASSENGER AIR BAG OFF lights up continuously.

  The front passenger airbag will not be deployed in the event of an accident. If PASSENGER AIR BAG OFF is lit, no one may use the front passenger seat.
- **Front passenger airbag enabled:** PASSENGER AIR BAG ON lights up for up to 60 seconds or until both the PASSENGER AIR BAG ON and OFF indicator lamps go out.

  The front passenger airbag may be deployed during an accident. Observe the following information on the correct seat position (⟶ page 115).

  Vehicles with rear seats: a person of smaller stature should use a rear seat.

SYSTEM LIMITS

THE FRONT PASSENGER AIRBAG MAY BE DEACTIVATED BY MISTAKE, E.G. IN THE FOLLOWING SITUATIONS:

- The front passenger transfers their weight by supporting themselves on a vehicle armrest.
- The front passenger sits in such a way that their weight is raised from the seat surface.

NOTE
Deployment of components of the restraint system when the front passenger seat is unoccupied

IN AN ACCIDENT, THE COMPONENTS OF THE RESTRAINT SYSTEM MAY DEPLOY UNNECESSARILY ON THE FRONT PASSENGER SIDE IF:

- There are heavy objects on the front passenger seat.
- The seat belt tongue is engaged in the seat belt buckle of the front passenger seat and the front passenger seat is unoccupied.

► Store objects in a suitable place.

► Only one person should use each seat belt at any one time.

Depending on the detected accident situation, the window airbag on the front passenger side may deploy. The airbag is deployed regardless of whether the front passenger seat is occupied.

Function of PRE-SAFE® (anticipatory occupant protection)

PRE-SAFE® is able to detect certain critical driving situations and implement pre-emptive measures to protect the vehicle occupants.

PRE-SAFE® CAN IMPLEMENT THE FOLLOWING MEASURES INDEPENDENTLY OF EACH OTHER:

- Tightening the seat belts on the driver's seat and front passenger seat.
- closing the side windows.
- **Vehicles with sliding sunroof:** closing the sliding sunroof.
- **Vehicles with memory function:** moving the front passenger seat to a more favorable seat position.
- **PRE-SAFE® Sound:** provided that the multimedia system is switched on, generating a brief noise signal to stimulate the innate protective mechanism of a person's hearing.

NOTE
Damage caused by objects in the footwell or behind the seat

The automatic adjustment of the seat position may result in damage to the seat and/or the object.

► Stow objects in a suitable place.

Reversing the PRE-SAFE® system measures

If an accident did not occur, the pre-emptive measures that were taken are reversed.

You will need to perform certain settings yourself.

- If the seat belt pre-tensioning is not reduced, move the seat backrest slightly backwards.
  The seat belt pre-tensioning releases.

Seat belt adjustment function

Vehicles with PRE-SAFE®: After you have fastened the seat belt of the front seat, it may adjust itself against your body by pulling at the shoulder until somewhat tight. Do not hold the seat belt tightly while it is adjusting.

You can activate and deactivate the seat belt adjustment function using the multimedia system (⟶ page 125).

Activating/deactivating seat belt adjustment via the multimedia system

Multimedia system:

Settings » Vehicle » Occupant Protection

- Activate or deactivate Belt adjustment.

Overview of automatic measures following an accident

DEPENDING ON THE TYPE AND SEVERITY OF THE ACCIDENT, AND DEPENDING ON THE VEHICLE'S EQUIPMENT, THE FOLLOWING MEASURES CAN BE IMPLEMENTED FOREXAMPLE:

- automatic braking (post-collision brake) (⟶ page 125)
- activating the hazard warning light system
- initiating an automatic emergency call (⟶ page 62)
- Shutting off the drive system and high-voltage on-board electrical system
  To start the vehicle again, switch the vehicle off and then back on again (⟶ page 272). Depending on the type and severity of the accident, the vehicle might no longer start.
- Unlocking the vehicle doors
- Lowering the side windows
- Displaying the emergency guide on the central display (⟶ page 511)
- Switching on the interior lighting

Function of the post-collision brake after an accident

Depending on the accident situation, the post-collision brake can minimise the severity of a further collision or even avoid it.

If an accident is detected, the post-collision brake can initiate automatic braking. When the vehicle has come to a standstill, the electric parking brake is automatically applied.

THE DRIVER CAN CANCEL AUTOMATIC BRAKING BY TAKING THE FOLLOWING ACTIONS:

- Braking more strongly than automatic braking
- Fully depressing the accelerator pedal with force

Purpose and function of the restraint system

Overview of deployment situations (restraint system)

IN PARTICULAR ENSURE THE FOLLOWING CONDITIONS TO ENABLE THE COMPONENTS OF THE RESTRAINT SYSTEM TO UNFOLD THEIR PROTECTIVE POTENTIAL:

- Sit correctly (⟶ page 115).
- Fasten the seat belt correctly (⟶ page 116).
  - Function of the seat belt warning lamp (⟶ page 119).
  - Function of the rear seat belt status display (⟶ page 120).
- The restraint system warning lamp does not light up after the self-check (⟶ page 119).
- The PASSENGER AIR BAG indicator lamps display the correct status of the front passenger airbag (⟶ page 120).

DEPENDING ON THE DETECTED DEPLOYMENT SITUATION, THE COMPONENTS OF THE RESTRAINT SYSTEM CAN BE ACTIVATED OR DEPLOYED INDEPENDENTLY OF EACH OTHER:

- Emergency Tensioning Devices: frontal impact, rear impact, side impact, rollover
- Driver's airbag, front passenger airbag: frontal impact
- Knee airbag: frontal impact
- Side airbag: side impact
- Window airbag: side impact, rollover, frontal impact

The installation location of an airbag is identified by the AIRBAG (⟶ page 133) symbol.

Observe the information on how the restraint system works (⟶ page 126).

Information on functioning of the restraint system

The function of the restraint system depends on the severity of the impact detected and the apparent type of accident.

For more information about types of accidents, see "Overview of deployment situations" (⟶ page 126).

The activation thresholds for the components of the restraint system are determined based on the evaluation of the sensor values measured at various points in the vehicle. This process is pre-emptive in nature. Triggering of the restraint system components must take place in good time at the start of the impact.

Factors which can only be seen and measured after a collision has occurred cannot play a decisive role in airbag deployment. They also do not provide an indication of airbag deployment.

The vehicle may be deformed significantly without an airbag being deployed. This is the case if only parts which are relatively easily deformed are affected

and the rate of vehicle deceleration is not high. Conversely, an airbag may be deployed even though the vehicle suffers only minor deformation. If, forexample, very rigid vehicle parts such as longitudinal members are hit, this may result in sufficiently high levels of vehicle deceleration.

Depending on the apparent type of accident and the detected deployment situation, seat belt tensioners and/or airbags supplement the protection offered by a correctly worn seat belt.

When enabled, an airbag can provide additional protection for the respective vehicle occupant.

POTENTIAL PROTECTION PROVIDED BY EACH AIRBAG:

- Knee airbag: thighs, knees, and lower legs
- Driver's airbag, front passenger airbag: head and ribcage
- Window airbag: head
- Side airbag: ribcage and pelvis

However, no system available today can completely eliminate injuries and fatalities in every accident situation. In particular, the seat belt and airbag generally do not protect against objects penetrating the vehicle from the outside. It is also not possible to completely rule out the risk of injury caused by the airbag deploying.

Mercedes-Benz recommends that you have the vehicle towed to a qualified specialist workshop after an accident. This should be considered in particular if a seat belt tensioner has been triggered or an airbag deployed.

IF THE SEAT BELT TENSIONERS ARE TRIGGERED OR AN AIRBAG IS DEPLOYED, YOU WILL HEAR A BANG, AND A SMALL AMOUNT OF FINE POWDER MAY ALSO BE RELEASED:

- The bang will not generally affect your hearing.
- In general, the fine powder released is not hazardous to health but may cause short-term breathing difficulties to persons suffering from asthma or other respiratory problems.

  Provided it is safe to do so, leave the vehicle immediately or open the window in order to prevent breathing difficulties.

Airbags and pyrotechnic seat belt tensioners contain perchlorate, a substance which may require special handling or environmental protection measures. National guidelines regarding waste disposal must be observed. In California see https://dtsc.ca.gov/ – Use the search function to find information on perchlorate, forexample.

Information on the limited protection provided by the restraint system

RISK DUE TO THE INCORRECT BEHAVIOR OF VEHICLE OCCUPANTS

EVERY VEHICLE OCCUPANT MUST MAKE SURE OF THE FOLLOWING IN PARTICULAR:

- They observe the information on the correct seat position (→ page 115).
- Do not stow any heavy, pointed, sharp, or fragile objects in the pockets of clothing items. Stow such objects in a suitable place.

WARNING
Risk of injury or death due to an incorrect seat position

The seat belt does not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you could slip beneath the seatbelt and become injured.

- ► Adjust the seat properly before beginning your journey.
- ► Always ensure that the seat backrest is in an almost vertical position and that the shoulder belt is routed across the center of your shoulder.

RISK DUE TO OBJECTS IN THE VEHICLE INTERIOR

EVERY VEHICLE OCCUPANT MUST MAKE SURE OF THE FOLLOWING IN PARTICULAR:

- They observe the information on the correct seat position (⟶ page 115).
- There are no objects between the seat, door, and door pillar (B-pillar).
- There are no hard objects, e.g., clothes hangers, hanging on the grab handles or coat hooks.
- Do not stow any heavy, pointed, sharp or fragile objects in the pockets of clothing items. Stow such objects in a suitable place.

To secure objects, luggage, or cargo, observe the instructions for loading the vehicle (⟶ page 217).

WARNING
Risk of injury or death due to blocked seat belt buckle or seat belt anchorage

Objects next to the front seat that block the seat belt buckle or the moving seat belt anchorage on the front seat impair the function of the Emergency Tensioning Devices.

- ► Before starting the journey, make sure that there are no objects around the seat belt buckle or between the front seat and door.

WARNING
Risk of injury from objects in the deployment area of an airbag

Objects in the deployment area of an airbag can hinder or prevent the correct deployment of the airbag.

The airbag may then deploy in an uncontrolled manner and may even cause additional injuries to the vehicle occupants by deploying. This may be the case in particular if the airbag is integrated into the seat.

- ► Always stow and secure objects correctly.
- ► Before commencing your journey, make sure that no objects are stowed in the deployment area of an airbag.

The installation location of an airbag is identified by the symbol AIRBAG (⟶ page 133).

RISK DUE TO THE INSTALLATION OF ACCESSORIES

Do not attach accessory parts such as mobile navigation devices, mobile phones, or cup holders within the deployment area of an airbag, e.g., on the cockpit, on the door, on the side window, or on the side trim.

In addition, there must be no connecting cables, tensioning straps, or retaining straps routed or attached to the vehicle within the deployment area of an airbag. Always comply with the accessory manufacturer's installation instructions and, in particular, the notes on suitable places for installation.

WARNING
Risk of injury or death due to unsuitable protective covers

Unsuitable protective covers mean that air bags can no longer protect vehicle occupants as they are designed to do.

► Use only protective covers approved by Mercedes-Benz for the seat in question.

In addition, the function of the automatic front passenger airbag deactivation could be restricted due to an unsuitable protective cover. If the front passenger seat is occupied, ensure that the PASSENGER AIR BAG indicator lamps display the correct status of the front passenger airbag (⟶ page 120).

RISK DUE TO PETS IN THE VEHICLE INTERIOR

WARNING
Risk of accident and injury due to animals left unsecured or unattended in the vehicle

If you leave animals in the vehicle unattended or unsecured, they could possibly press buttons or switches.

AN ANIMAL MAY:

- Activate vehicle equipment and become trapped, for example
- Switch systems on or off and endanger other road users

Unsecured animals may be thrown around in the vehicle in the event of an accident or sudden steering and braking maneuvers and injure vehicle occupants in the process.

► Never leave animals in the vehicle unattended.

► Always correctly secure animals while driving, e.g. using a suitable animal carrier.

RISK DUE TO MODIFICATION, DAMAGE, OR WEAR TO THE COMPONENTS OF THE RESTRAINT SYSTEM

WARNING
Risk of injury or death due to modifications to the restraint system

Vehicle occupants may no longer be protected as intended if alterations are made to the restraint system.

- ► Never alter the parts of the restraint system.
- ► Never tamper with the wiring or any electronic component parts or their software.

If it is necessary to modify the vehicle to accommodate a person with disabilities, contact an authorized Mercedes-Benz service center for details.

USA only: for details please contact our Customer Assistance Center on 1-800-FOR-MERCedes (1-800-367-6372).

WARNING
Risk of injury or death due to damaged or modified seat belts

SEAT BELTS CANNOT PROVIDE PROTECTION IN THE FOLLOWING SITUATIONS:

- The seat belt is damaged, has been modified, is extremely dirty, bleached or dyed
- The seat belt buckle is damaged or extremely dirty
- Modifications have been made to the Emergency Tensioning Device, seat belt anchorage or seat belt retractor

Seat belts may sustain non-visible damage in an accident, e.g. due to glass splinters.

Modified or damaged seat belts could tear or fail in the event of an accident, for example.

Modified Emergency Tensioning Devices could accidentally trigger or fail to function as intended.

- ► Never modify the seat belt system, for example the seat belt, seat belt buckle, Emergency Tensioning Device, seat belt anchorage and seat belt retractor.
- ► Make sure that the seat belts are undamaged, not worn and clean.
- ► Always have the seat belts checked immediately after an accident at a qualified specialist workshop.

Only use seat belts which have been approved for your vehicle by Mercedes-Benz.

WARNING
Risk of injury due to modifications to the cover of an airbag

If you change the cover of an airbag or attach objects, e.g. even stickers, to it, the airbag may no longer function as intended.

- Never modify the cover of an airbag.
- Do not attach any objects to the cover.

The installation location of an airbag is identified by the airbag symbol (⟶ page 133).

WARNING
Risk of injury due to malfunctioning sensors in the door

The function of the airbags can be impaired due to modifications or incorrect work performed on the doors or door trim, or if the doors are damaged.

- Never modify the doors or parts of the doors.
- Always have work on the doors or door trim carried out at a qualified specialist workshop.

RISK DUE TO COMPONENTS OF THE RESTRAINT SYSTEM WHICH HAVE ALREADY BEEN DEPLOYED
Mercedes-Benz recommends that you have the vehicle towed to a qualified specialist workshop after an accident.

WARNING
Risk of burns from hot air bag components

The air bag parts are hot after an air bag has been deployed.

- Do not touch the air bag parts.
- Have a deployed air bag replaced at a qualified specialist workshop as soon as possible.

WARNING
Risk of injury due to deployed airbag

A deployed airbag no longer offers any protection.

- Have the vehicle towed to a qualified specialist workshop in order to have the deployed airbag replaced.

Have deployed airbags replaced immediately.

WARNING
Risk of injury or death from deployed pyrotechnic Emergency Tensioning Devices

Pyrotechnic Emergency Tensioning Devices that have been deployed are no longer operational and are unable to perform their intended protective function.

- Therefore, have deployed pyrotechnic Emergency Tensioning Devices immediately replaced at a qualified specialist workshop.

Seat belts

Releasing the seat belts

- Press the release button in the seat belt buckle and guide the seat belt back with the seat belt tongue.


NOTE
Damage caused by trapping the seat belt

If an unused seat belt is not fully retracted, it may become trapped in the door or in the seat mechanism.

- Always ensure that an unused seat belt is fully retracted.

Airbags

Overview of air bags

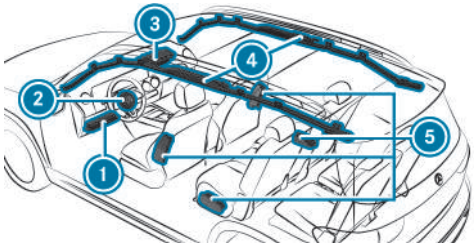

1. Knee air bag
2. Driver's air bag
3. Front passenger air bag
4. Window air bag
5. Side air bag

The installation location of an air bag is identified by the AIRBAG symbol.

Observe the information under "Overview of deployment situations" (⟶ page 126).

Back to contents

Children in the vehicle

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Key facts in brief

Important safety notes

Suitable child restraint systems for the transport of children


Securing the child restraint system


Child safety locks

Passive occupant presence reminder

Key facts in brief

Safely transporting children in the vehicle

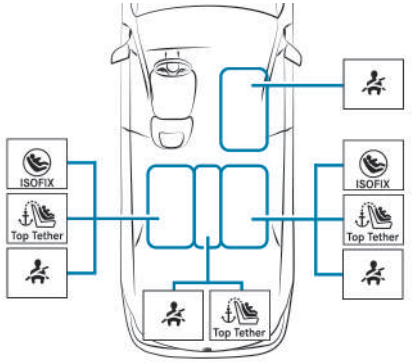

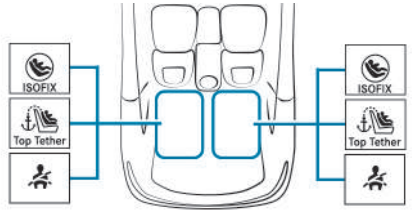

ALWAYS OBSERVE THE FOLLOWING WHEN TRANSPORTING CHILDREN:

- Never leave children unattended in the vehicle (⟶ page 138).
- Secure children younger than twelve or of a height up to 5 ft (1.50 m) on the seat (see illustration above) properly with a suitable and approved child restraint system and secure small children in a rearward-facing child restraint system.
- Observe the child restraint system manufacturer's installation instructions.

LEFT/RIGHT REAR SEAT (PREFERRED SEATS)

SECOND SEAT ROW - PREFERRED FASTENING SYSTEM:

ISOFIX mounting brackets

and additionally fasten Top Tether if available (⟶ page 149).

SECOND SEAT ROW - ALTERNATIVE FASTENING SYSTEM:

Vehicle seat belt (⟶ page 150)

Additionally fasten Top Tether if recommended by the manufacturer of the child restraint system (⟶ page 149).

THIRD SEAT ROW –PREFERRED FASTENING SYSTEM:

ISOFIX/LATCH child seat anchor

Additionally fasten Top Tether if present (⟶ page 149).

THIRD SEAT ROW –ALTERNATIVE FASTENING SYSTEM:

 Vehicle seat belt (⟶ page 150)

 Additionally fasten Top Tether if present (⟶ page 149).

FRONT PASSENGER SEAT
FASTENING SYSTEM:

 Vehicle seat belt (⟶ page 150)

BE SURE TO OBSERVE:

- If the front passenger seat is occupied, ensure that the status of the front passenger air bag is correct for the current situation (⟶ page 120).

REAR CENTER SEAT (SECOND SEAT ROW ONLY)
FASTENING SYSTEM:

 Vehicle seat belt (⟶ page 150)

 Additionally fasten Top Tether if recommended by the manufacturer of the child restraint system (⟶ page 149).

Important safety notes

Basic information

BE DILIGENT
Bear in mind that negligence when securing a child in the child restraint system may have serious consequences. Always be diligent in securing a child carefully before every journey.

Never allow babies and children to travel sitting on the lap of another vehicle occupant.

TO IMPROVE PROTECTION FOR CHILDREN YOUNGER THAN TWELVE YEARS OR UNDER 5 FT (1.50 M) IN HEIGHT, MERCEDES-BENZ URGENTLY RECOMMENDS THAT YOU OBSERVE THE FOLLOWING:

- Always secure the child in a child restraint system suitable for this Mercedes-Benz vehicle.
- The child restraint system must be appropriate for the age, weight and size of the child.
- The vehicle seat must be suitable for the child restraint system to be installed.

Accident statistics show that children secured on the rear passenger compartment seats are generally safer than children secured on the front seats. For this reason, Mercedes-Benz strongly advises that you install a child restraint system on a rear passenger compartment seat.

THE GENERIC TERM CHILD RESTRAINT SYSTEM

THE GENERIC TERM CHILD RESTRAINT SYSTEM IS USED IN THIS OPERATOR'S MANUAL. A CHILD RESTRAINT SYSTEM IS, FOREXAMPLE:

- a baby car seat
- a rearward-facing child seat
- a forward-facing child seat
- a child booster seat – Mercedes-Benz recommends using a child booster seat **with** a seat backrest and seat belt guide.

OBSERVE LAWS AND LEGAL REQUIREMENTS
Always observe the legal requirements when using a child restraint system in the vehicle.

SECURING SYSTEMS FOR CHILD RESTRAINT SYSTEMS IN THE VEHICLE

ONLY USE THE FOLLOWING SECURING SYSTEMS FOR CHILD RESTRAINT SYSTEMS:

- the ISOFIX mounting brackets
- the vehicle's seat belt system
- the Top Tether anchorages

Simply attaching to the ISOFIX mounting brackets on the vehicle can reduce the risk of installing the child restraint system incorrectly.

When securing a child with the integrated seat belt of the ISOFIX/LATCH child restraint system, always comply with the permissible gross mass for the child and child restraint system (⟶ page 147).

A child booster seat may be necessary to achieve proper seat belt positioning for children over 40 lbs (18 kg) in weight or until they reach a height where a three-point seat belt can be installed properly without a child booster seat.

Mercedes-Benz recommends a suitable child booster seat with a backrest and seat belt guide.

OBSERVE STANDARDS FOR CHILD RESTRAINT SYSTEMS

ALL CHILD RESTRAINT SYSTEMS MUST MEET THE FOLLOWING STANDARDS:

- U.S. Federal Motor Vehicle Safety Standards 213
- Canada Motor Vehicle Safety Standards 213

Confirmation that the child restraint system complies with the standards can be found on an information label on the child restraint system. This confirmation can also be found in the installation instructions that are included with the child restraint system.

Important warning information

ALWAYS SECURE A CHILD RESTRAINT SYSTEM CORRECTLY

WARNING
Risk of injury or death due to incorrect installation of the child restraint system

The child can then not be protected or restrained as intended.

- ► Be sure to comply with the manufacturer's installation instructions for the child restraint system and its correct use.
- ► Make sure that the entire base of the child restraint system always rests on the sitting surface of the seat.
- ► Never place objects (e.g. cushions) under or behind the child restraint system.
- ► Use child restraint systems only with the original cover designed for them.
- ► Always replace damaged covers with genuine covers.

- Always observe the vehicle-specific information.
  - Installing the ISOFIX/LATCH child restraint system on the right and left rear seats (⟶ page 147).
  - Securing the child restraint system with the seat belt (⟶ page 150).
- Observe the warning labels in the vehicle interior and on the child restraint system.

WARNING
Risk of injury or death due to unsecured child restraint systems in the vehicle

If the child restraint system is incorrectly mounted or unsecured, it may come loose.

The child can then not be protected or restrained as intended.

Unused child restraint systems could be flung around and hit vehicle occupants.

- Always comply with the manufacturer's installation instructions for the child restraint system and its correct use.
- Always fit child restraint systems correctly, even if they are transported in the vehicle unused.

DO NOT MODIFY THE CHILD RESTRAINT SYSTEM

WARNING
Risk of injury due to modifications to the child restraint system

The child restraint system can no longer function properly. This poses an increased risk of injury.

- Never modify a child restraint system.
- Only affix accessories which have been specially approved for this child restraint system by the child restraint system's manufacturer.

ONLY USE CHILD RESTRAINT SYSTEMS WHICH ARE IN PROPER WORKING CONDITION

WARNING
Risk of injury or death caused by the use of damaged child restraint systems

Child restraint systems or their retaining systems that have been subjected to stress in an accident may not be able to perform their intended protective function.

It may be the case that the child cannot be properly restrained.

- Always immediately replace child restraint systems that have been damaged or involved in an accident.
- Have the securing systems for the child restraint systems checked at a qualified specialist workshop before installing a child restraint system again.

AVOID DIRECT SUNLIGHT

WARNING
Risk of burns when the child seat is exposed to direct sunlight

If the child restraint system is exposed to direct sunlight or heat, parts could heat up excessively.

Children could suffer burns from these parts, particularly the metallic parts of the child restraint system.

- ► Always make sure that the child restraint system is not exposed to direct sunlight.
- ► Cover the child restraint system with a blanket, for example.
- ► If the child restraint system has been exposed to direct sunlight, allow it to cool before securing a child into it.
- ► Never leave children unattended in the vehicle.

OBSERVE THE FOLLOWING WHEN STOPPING OR PARKING

WARNING
Risk of fatalities due to exposure to extreme heat- or cold in the vehicle

If persons – and in particular children – are exposed to solar radiation, or the effects of heat or cold for prolonged periods of time, there is a risk of sustaining injuries or even fatalities!

- ► Never leave people – especially children – unattended in the vehicle.

WARNING
Risk of accident and injury if children are left unattended in the vehicle

IF CHILDREN ARE LEFT UNATTENDED IN THE VEHICLE, THEY COULD IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION, FOR EXAMPLE BY:

- releasing the parking brake.
- changing gear.
- starting the vehicle.

- ► Never leave children unattended in the vehicle.
- ► When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- ► Keep the SmartKey out of the reach of children.

Notes on rear-facing and front-facing child restraint systems on the front passenger seat

WARNING
Risk of injury- or fatal accident due to the use of a rearward-facing child restraint system with the front passenger airbag activated

If you secure a child in a rearward-facing child restraint system in the front passenger seat and the PASSENGER AIR BAG OFF indicator lamp is off, the front passenger airbag may deploy in the event of an accident.

The airbag may hit the child.

- ► Always ensure that the front passenger airbag is deactivated. The PASSENGER AIR BAG OFF indicator lamp must be lit.
- ► NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

Observe the specific instructions for rear-facing and front-facing child restraint systems (⟶ page 145).

IF IT IS ABSOLUTELY NECESSARY TO INSTALL A CHILD RESTRAINT SYSTEM ON THE FRONT PASSENGER SEAT, ALWAYS OBSERVE THE FOLLOWING INFORMATION:

- When using a rear-facing child restraint system on the front passenger seat, the front passenger airbag must always be disabled. This is only the case if the PASSENGER AIR BAG OFF indicator lamp is lit continuously (⟶ page 120).
- The front passenger airbag is enabled when the PASSENGER AIR BAG OFF indicator lamp is not lit. The front passenger airbag may be deployed during an accident. In that case, do not use rear-facing child restraint systems.

Information on automatic front passenger air-bag shutoff

If the front passenger seat is occupied, ensure, both before and during the journey, that the status of the front passenger airbag is correct for the current situation.

WARNING
Risk of injury or death due to objects between the seat surface and the child restraint system

Objects between the seat surface and the child restraint system can interfere with the function of the automatic front passenger air bag shutoff.

- ► Do not place any objects between the seat surface and the child restraint system.
- ► Make sure that the entire base of the child restraint system rests on the seat cushion of the front passenger seat.
- ► The backrest of a forward-facing child restraint system must, as far as possible, be resting against the seat backrest of the front passenger seat.
- ► Always comply with the installation instructions from the child restraint system manufacturer.

When fitting a child restraint system to the front passenger seat, observe the vehicle-specific information (⟶ page 141).

REARWARD-FACING CHILD RESTRAINT SYSTEM ON THE FRONT PASSENGER SEAT

If a rearward-facing child restraint system is fitted to the front passenger seat, the front passenger airbag must be deactivated. The PASSENGER AIR BAG OFF indicator lamp must light up continuously (⟶ page 120).

WARNING

Risk of injury- or fatal accident due to the use of a rearward-facing child restraint system with the front passenger airbag activated

If you secure a child in a rearward-facing child restraint system in the front passenger seat and the PASSENGER AIR BAG OFF indicator lamp is off, the front passenger airbag may deploy in the event of an accident.

The airbag may hit the child.

- Always ensure that the front passenger airbag is deactivated. The PASSENGER AIR BAG OFF indicator lamp must be lit.
- NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

The front passenger airbag is activated depending on the child restraint system and the stature of the child. The PASSENGER AIR BAG OFF indicator lamp does not light up.
The front passenger airbag may be deployed during an accident.
With this status of front passenger airbag, no rearward-facing child restraint system may be fitted to the front passenger seat.
Rather, fit the rearward-facing child restraint system to a suitable rear seat.

FORWARD-FACING CHILD RESTRAINT SYSTEM ON THE FRONT PASSENGER SEAT

If a forward-facing child restraint system is fitted to the front passenger seat, the front passenger airbag may be automatically activated or deactivated. The status of the front passenger airbag depends on the child restraint system and the stature of the child.

The PASSENGER AIR BAG OFF indicator lamp is either lit continuously, or not lit at all (⟶ page 120). Always observe the following information.

WARNING
Risk of injury or death caused by incorrect positioning of the child restraint system

IF YOU SECURE A CHILD IN A FORWARD-FACING CHILD RESTRAINT SYSTEM ON THE FRONT PASSENGER SEAT AND YOU POSITION THE FRONT PASSENGER SEAT TOO CLOSE TO THE COCKPIT, IN THE EVENT OF AN ACCIDENT, THE CHILD COULD:

- Come into contact with the vehicle interior if the PASSENGER AIR BAG OFF indicator lamp is lit, for example.
- Be struck by the air bag if the PASSENGER AIR BAG OFF indicator lamp is off.

► Always move the front-passenger seat as far back as possible. Always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system. The shoulder belt strap must be routed forwards and downwards from the seat belt outlet. If necessary, adjust the front-passenger seat accordingly.

► Always comply with the child restraint system manufacturer's installation instructions.

Suitable child restraint systems for the transport of children

Information on the advantage of a rearward-facing child restraint system

Transport a baby in a suitable rearward-facing child restraint system only. It is also preferable to transport a small child in a suitable rearward-facing child restraint system. In this case, the child sits in the opposite direction to the direction of travel and faces backwards.

Babies and small children have comparatively weak neck muscles in relation to the size and weight of their head. The risk of injury to the cervical spine during an accident can be reduced in a rearward-facing child restraint system.

Securing the child restraint system

Adjusting the seat correctly

WHEN INSTALLING A CHILD RESTRAINT SYSTEM ON THE LEFT OR RIGHT REAR SEAT, ALWAYS OBSERVE THE FOLLOWING:

- Make sure that the child's feet do not touch the front seat. If necessary, move the front seat slightly forwards.

If the head restraint of the child restraint system cannot be fully extended when it is installed in the vehicle, this will result in restrictions on the maximum size setting for certain child restraint systems. Observe the child restraint system manufacturer's installation instructions.

ⓘ Contact with the roof when the head restraint is fully extended and locked in place will not result in any restrictions on use.

ALSO OBSERVE THE FOLLOWING WHEN INSTALLING AN ISOFIX/LATCH CHILD RESTRAINT SYSTEM:

- **When using a rearward-facing child restraint system on a rear seat:** adjust the front seat so that it does not touch the child restraint system.
- **When using a forward-facing child restraint system with integrated child seat belt:** adjust the head restraint of the respective seat so that it does not push the child restraint system forwards. If necessary, the respective head restraint can be removed. In addition, the seat backrest of the child restraint system must lie as flat as possible against the backrest of the vehicle seat. After the child restraint system has been removed, replace the vehicle head restraint immediately and adjust it correctly.
- The child restraint system must not be put under strain between the roof and the seat cushion and/or be installed facing the wrong direction. Where possible, adjust the seat cushion inclination accordingly.
- Adjust the vehicle head restraints so that the child restraint system is not put under strain by the head restraint.

WHEN INSTALLING A BELT-SECURED CHILD RESTRAINT SYSTEM, ALSO OBSERVE THE FOLLOWING:

- **When using a rearward-facing child restraint system on a rear seat:** adjust the front seat so that it does not touch the child restraint system.
- Additionally fasten Top Tether if present (⟶ page 149).
- **When using a forward-facing child restraint system with integrated child seat belt:** adjust the head restraint of the respective seat so that it does not push the child restraint system forwards. If necessary, the respective head restraint can be removed. In addition, the seat backrest of the child restraint system must lie as flat as possible against the backrest of the vehicle seat. After the child restraint system has been removed, replace the vehicle head restraint immediately and adjust it correctly.
- The backrest of the forward-facing child restraint system must, as far as possible, be resting on the seat backrest of the rear seat.

- The child restraint system must not be put under strain between the roof and the seat cushion and/or be installed facing the wrong direction. Where possible, adjust the seat cushion inclination accordingly.
- Adjust the vehicle head restraints so that the child restraint system is not put under strain by the head restraint.
- Make sure that the child's feet do not touch the front seat. If necessary, move the front seat slightly forwards.

DEPENDING ON THE VEHICLE EQUIPMENT, ALWAYS OBSERVE THE FOLLOWING WHEN INSTALLING A BELT-SECURED CHILD RESTRAINT SYSTEM ON THE FRONT PASSENGER SEAT:

- Observe the notes on rearward-facing and forward-facing child restraint systems on the front passenger seat (⟶ page 141).
- **When using a forward-facing child restraint system integrated child seat belt:** remove the head restraint from the front passenger seat, if possible. After the child restraint system has been removed, immediately replace the head restraint and adjust it correctly.
- The backrest of the forward-facing child restraint system must, as far as possible, be resting against the seat backrest of the front passenger seat.
- The child restraint system must not be put under strain between the roof and the seat cushion and/or be installed facing the wrong direction.
- Adjust the vehicle head restraints so that the child restraint system is not put under strain by the head restraint.
- Never place objects (e.g. cushions) under or behind the child restraint system.
- Set the front passenger seat as far back as possible and move the seat into the highest position if possible. Always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system. The shoulder belt strap must be routed forwards from the seat belt outlet and, where possible, downwards to the child restraint system.
- Fully retract the seat cushion length adjustment.
- Adjust the seat cushion inclination so that the front edge of the seat cushion is in the highest position and the rear edge of the seat cushion is in the lowest position.
- Set the seat backrest to the most vertical position possible.

Activating or deactivating the child seat safety feature of the seat belt

WARNING
Risk of injury or death if a seat belt is unfastened while the vehicle is in motion

If the seat belt is released while the vehicle is in motion, the special seat belt retractor is deactivated and the child restraint system is no longer correctly secured. The seat belt is drawn in slightly by the inertia reel and cannot be immediately closed again.

- Stop the vehicle immediately in accordance with the traffic conditions.
- Activate the special seat belt retractor again and correctly secure the child restraint system.

THE SEAT BELTS ON THE FOLLOWING SEATS ARE EQUIPPED WITH A CHILD SEAT SAFETY FEATURE:

- Front passenger seat
- Rear seats

INSTALLING A CHILD RESTRAINT SYSTEM

- ► When installing a child restraint system, always observe the manufacturer's installation and operating instructions as well as the information in this Operator's Manual.
- ► Pull the seat belt out of the seat belt outlet smoothly.
- ► Engage the seat belt tongue in the seat belt buckle.

ACTIVATING THE CHILD SEAT SAFETY FEATURE

- ► Pull the seat belt out fully and let the inertia reel retract it again.
  When the child seat safety feature is activated, you should hear a ratcheting sound.
- ► Push the child restraint system down until the seat belt is taut.

DEACTIVATING THE CHILD SEAT SAFETY FEATURE

- ► Press the release button on the seat belt buckle.
- ► Hold the seat belt tongue and guide it back to the seat belt outlet.

Installing an ISOFIX/LATCH child restraint system

WARNING
Risk of accident if the rear bench seat, rear seat and seat backrest are not engaged

The rear bench seat, rear seat and seat backrest may fold forwards, even when you are driving.

- As a result, the vehicle occupant will be pushed into the seat belt with increased force. The seat belt will not be able to protect as intended and could cause additional injury.
- Objects or loads in the trunk or cargo compartment will not be restrained by the seat backrest.

- ► Make sure that the rear bench seat, the rear seat and the seat backrest are engaged before every trip.

If the rear passenger compartment seat backrest is not engaged and locked in place, the red lock verification indicator will be visible.

WARNING
Risk of injury or death if the permissible gross mass of the child and child restraint system together is exceeded.

Too much load may be placed on the LATCH-type (ISOFIX) or iSize child restraint systems and the child may not be restrained correctly in the event of an accident, for example.

► If the child is secured in a LATCH-type (ISOFIX) child restraint system with integrated seat belt, the total mass of the child and child restraint system must not exceed 73 lb (33 kg).

ALWAYS OBSERVE THE INFORMATION ON THE MASS OF THE CHILD RESTRAINT SYSTEM:

- In the installation instructions and Operator's Manual provided by the manufacturer of the child restraint system used
- On a label on the child restraint system, if present

Regularly check that the permissible gross mass of the child and child restraint system is still being adhered to.

WHEN INSTALLING A CHILD RESTRAINT SYSTEM, ALWAYS OBSERVE THE FOLLOWING:

☑ Always observe the area of use and the suitability of the seats for attaching a child restraint system.

ISOFIX mounting bracket

► Before every journey, always ensure that the ISOFIX/LATCH child restraint system is correctly engaged in both mounting brackets on the vehicle.

NOTE
Damage to the seat belt for the center seat during installation of the child restraint system

► Make sure that the seat belt is not trapped.

REAR PASSENGER COMPARTMENT BENCH SEAT (SECOND SEAT ROW):



► Attach the ISOFIX/LATCH child restraint system to both ISOFIX mounting brackets (1) in the vehicle.

VEHICLES WITH A THIRD SEAT ROW:



- Attach the ISOFIX/LATCH child restraint system to both ISOFIX mounting brackets (1) in the vehicle.

Fastening a Top Tether

WARNING
Risk of injury or death if the rear seat backrests are not locked after Top Tether belts are installed

The rear seat backrests may fold forwards when you are driving.

As a result, child restraint systems will no longer be able to perform their intended protective function. This may also cause additional injuries.


- Always lock rear seat backrests after installing Top Tether belts.
- Observe the lock verification indicator.

If the rear seat backrest is not engaged and locked in place, the red lock verification indicator will be visible.

If the child restraint system is equipped with a Top Tether belt:


The risk of injury may be reduced by Top Tether. The Top Tether belt enables an additional connection between the child restraint system attached with ISOFIX (left and right rear seats) or the seat belt (all rear seats) and the vehicle.

The Top Tether anchorages for the second row of seats are located on the rear side of the seat backrest. For the third row of seats, use the Top Tether anchorage on the rear side of the seat backrest.

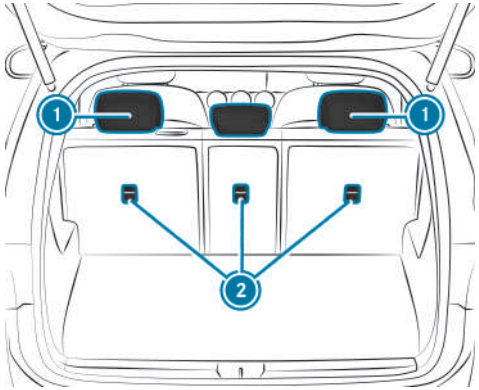

Second row of seats

- If necessary, slide head restraint (1) upwards (→ page 204).
- Install the ISOFIX/LATCH or belt-secured child restraint system with Top Tether. Comply with the child restraint system manufacturer's installation instructions.

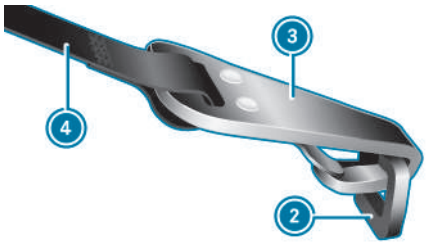

- ► Guide Top Tether belt (4) under head restraint (1) between the two head restraint bars.
- ► Hook Top Tether hook (3) into Top Tether anchorage (2) without twisting.
- ► Tension Top Tether belt (4). Comply with the child restraint system manufacturer's installation instructions.
- ► If necessary, slide head restraint (1) downwards (⟶ page 204). Make sure that you do not interfere with the correct routing of Top Tether belt (4).

Fastening the child restraint system with the seat belt

WARNING
Risk of accident if the rear bench seat, rear seat and seat backrest are not engaged

The rear bench seat, rear seat and seat backrest may fold forwards, even when you are driving.

- As a result, the vehicle occupant will be pushed into the seat belt with increased force. The seat belt will not be able to protect as intended and could cause additional injury.
- Objects or loads in the trunk or cargo compartment will not be restrained by the seat backrest.

► Make sure that the rear bench seat, the rear seat and the seat backrest are engaged before every trip.

If the rear seat backrest is not engaged and locked in place, the red lock verification indicator will be visible.

THE SEAT BELTS ON THE FOLLOWING SEATS ARE EQUIPPED WITH A CHILD SEAT SAFETY FEATURE:

- Front passenger seat
- Rear seats

When enabled, the child seat safety feature ensures that the seat belts of the front passenger seat and rear seats do not slacken once the child restraint system is secured.

- For a child restraint system of the "Universal" or "Semi-Universal" category, ensure that this is approved for the respective vehicle seat.
- Install the child restraint system.

  The entire base of the child restraint system must rest on the sitting surface of the seat.
- Always ensure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system.

  The shoulder belt strap must be routed forwards from the seat belt outlet and, where possible, downwards to the child restraint system.
- **When installing on the rear seat:** also secure Top Tether, where featured (⟶ page 149).
- **When installing on the front passenger seat:** if necessary, adjust the seat belt outlet and the front passenger seat accordingly.

Child safety locks

Activating/deactivating the child safety lock for the rear passenger compartment doors

WARNING
Risk of accident and injury if children are left unattended in the vehicle

IF CHILDREN ARE LEFT UNATTENDED IN THE VEHICLE, THEY COULD IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION, FOR EXAMPLE BY:

- releasing the parking brake.
- changing gear.
- starting the vehicle.

► Never leave children unattended in the vehicle.

► When leaving the vehicle, always take the SmartKey with you and lock the vehicle.

► Keep the SmartKey out of the reach of children.

WARNING
Risk of fatalities due to exposure to extreme heat- or cold in the vehicle

If persons – and in particular children – are exposed to solar radiation, or the effects of heat or cold for prolonged periods of time, there is a risk of sustaining injuries or even fatalities!

► Never leave people – especially children – unattended in the vehicle.

WARNING
Risk of accident and injury due to children left unattended in the vehicle

IF CHILDREN ARE TRAVELING IN THE VEHICLE, THEY COULD, IN PARTICULAR:


- Open doors, thereby endangering other persons or road users.
- Get out and be struck by oncoming traffic.
- Operate vehicle equipment and become trapped, for example.

► Always activate the installed child safety locks if children are traveling in the vehicle.

► Never leave children unattended in the vehicle.

► When leaving the vehicle, always take the SmartKey with you and lock the vehicle.

There are child safety locks for the rear passenger compartment doors and the rear passenger compartment side windows.
The child safety locks on the rear passenger compartment doors secure each door separately. The doors can no longer be opened from the inside.

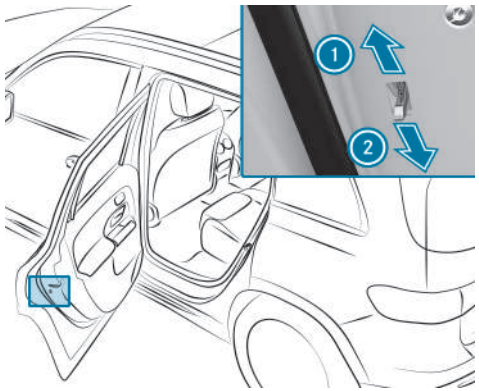

► Press the lever in the direction indicated by the arrow 1 (activate) or 2 (deactivate).

► Check the functionality of the child safety lock.

Activating/deactivating the child safety lock for the rear passenger compartment side windows

WARNING
Risk of accident and injury if children are left unattended in the vehicle

IF CHILDREN ARE LEFT UNATTENDED IN THE VEHICLE, THEY COULD IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION, FOR EXAMPLE BY:

- releasing the parking brake.
- changing gear.
- starting the vehicle.

► Never leave children unattended in the vehicle.

► When leaving the vehicle, always take the SmartKey with you and lock the vehicle.

► Keep the SmartKey out of the reach of children.

WARNING
Risk of fatalities due to exposure to extreme heat- or cold in the vehicle

If persons – and in particular children – are exposed to solar radiation, or the effects of heat or cold for prolonged periods of time, there is a risk of sustaining injuries or even fatalities!

► Never leave people – especially children – unattended in the vehicle.

WARNING
Risk of accident and injury due to children left unattended in the vehicle

IF CHILDREN ARE TRAVELING IN THE VEHICLE, THEY COULD, IN PARTICULAR:


- Open doors, thereby endangering other persons or road users.
- Get out and be struck by oncoming traffic.
- Operate vehicle equipment and become trapped, for example.

► Always activate the installed child safety locks if children are traveling in the vehicle.

► Never leave children unattended in the vehicle.

► When leaving the vehicle, always take the SmartKey with you and lock the vehicle.

There are child safety locks for the rear passenger compartment doors and the rear passenger compartment side windows.

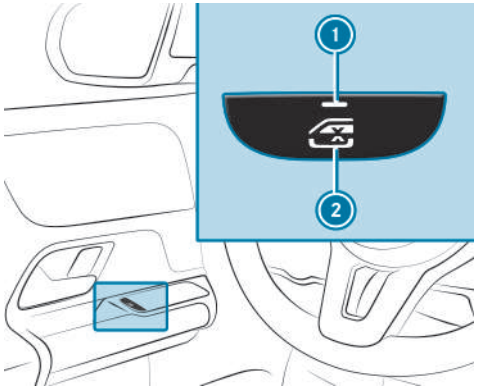

► **To activate/deactivate:** press the button (2).

THE REAR PASSENGER COMPARTMENT SIDE WINDOW CAN BE OPENED OR CLOSED AS FOLLOWS:

- The indicator lamp (1) is lit: via the switch on the driver's door
- The indicator lamp (1) is off: via the switch on the corresponding rear passenger compartment door or driver's door

Passive occupant presence reminder

Function of the passive occupant presence reminder

The passive occupant presence reminder can help to remind you about a child who may have been forgotten in the rear passenger compartment of the vehicle. It activates and deactivates automatically when the rear passenger compartment door is open for an extended period of time and a child which the system presumes to be present could enter or exit the vehicle.

When the vehicle is switched off, the Do Not Leave People or Animals in the Vehicle message appears on the driver display if the system was already automatically activated.

You can permanently deactivate the function in the multimedia system (⟶ page 156). When the system is deactivated, the  indicator lamp in the driver display lights up.

Switching the passive occupant presence reminder on or off in the multimedia system

Multimedia system:

Settings » Vehicle » Occupant Protection

- Activate or deactivate the function.

The function is permanently switched on or off.

Back to contents

Opening and closing

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

SmartKey
Doors
Cargo compartment
Side windows
Sliding sunroof
Anti-theft protection

SmartKey

Overview of SmartKey functions

WARNING
Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:

- releasing the parking brake.
- changing the gearbox position.
- starting the vehicle.

► Never leave children unattended in the vehicle.

► When leaving the vehicle, always take the key with you and lock the vehicle.

► Keep the key out of reach of children.

NOTE
Damage to the SmartKey caused by magnetic fields

► Keep the SmartKey away from strong magnetic fields.



Vehicle key with panic alarm

1 Locks
2 Indicator lamp
3 Unlocks
4 Opens/closes the tailgate
5 Panic alarm

If indicator lamp 2 does not light up when the or button is pressed, the battery is weak or possibly discharged. Replace the battery as soon as possible.

Replace the SmartKey battery (⟶ page 161).

THE SMARTKEY LOCKS AND UNLOCKS THE FOLLOWING COMPONENTS:

- Doors
- Socket flap
- Tailgate

If the vehicle is not opened within approximately 40 seconds after unlocking, it locks again. Anti-theft protection is armed again.

Do not keep the SmartKey together with electronic devices or metal objects. This can affect the SmartKey's functionality.

Activating/deactivating the acoustic locking verification signal

Multimedia system:

Settings » Vehicle » Open/Close

- Switch the Acoustic Lock on or off.

Activating/deactivating the panic alarm

Requirements

- The vehicle is switched off.



- **To activate:** press button 1 for approximately one second.
  A visual and audible alarm is triggered.
- **To deactivate:** briefly press button 1 again.

or

- Press the start/stop button.
  A key belonging to the vehicle must be detected in the vehicle.

Changing the unlocking settings

POSSIBLE UNLOCKING FUNCTIONS OF THE KEY:

- Central unlocking
- Unlocking the driver's door and socket flap

- **To switch between settings:** press the and buttons simultaneously for approximately six seconds until the indicator lamp flashes twice.

OPTIONS IF THE UNLOCKING FUNCTION FOR THE DRIVER'S DOOR AND SOCKET FLAP HAS BEEN SELECTED:

- **To unlock the vehicle centrally:** press the button twice.

- **Vehicles with KEYLESS-GO:** if you touch the inner surface of the door handle on the driver's door, only the driver's door and the socket flap will be unlocked.

Deactivating the key function

Vehicles with KEYLESS-GO: if you deactivate the key function, the KEYLESS-GO functions are also deactivated. Access or drive authorization via KEYLESS-GO is then no longer possible with that key. Activate the function of the key so that all functions using the key are available once again.

You can also deactivate the key's function to reduce the key's energy consumption if you do not use the vehicle or a key for an extended period of time.

► Press and hold the key button.

► With the button pressed, immediately press the key button twice in quick succession.


The indicator lamp of the key lights up once briefly, and then again for longer.

YOU HAVE THE FOLLOWING OPTIONS TO REACTIVATE THE KEY:

- Press any button on the key.
- Start the vehicle with the key in the center console storage compartment (⟶ page 274).

Removing/inserting the emergency key

REMOVING THE EMERGENCY KEY

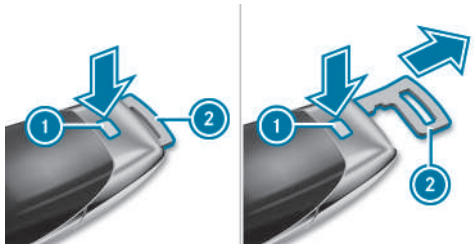

► Press the release knob (1).


The emergency key (2) is pushed out slightly.

► Pull out the emergency key (2) until it engages in the intermediate position.

Depending on the vehicle's equipment, the intermediate position may not be available.

► Press the release knob (1) again and fully remove the emergency key (2).

INSERTING THE EMERGENCY KEY

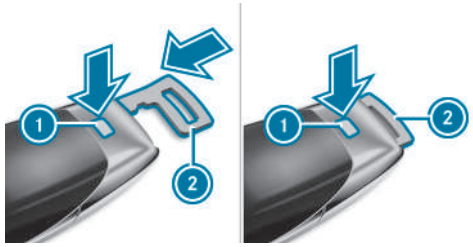

- Press the release knob (1).
- Insert the emergency key (2) to the intermediate position, or fully until it engages.

You can use the emergency key (2) to attach the key to a key ring.
Depending on the respective configuration, it is possible to engage the emergency key (2) in the intermediate position.

Replacing the key battery

DANGER
Risk of fatal injury due to swallowing batteries

Batteries contain toxic and corrosive substances. If batteries are swallowed or otherwise enter the body, severe internal burns can occur within two hours.

There is a risk of fatal injury!

- Keep the batteries out of the reach of children.
- If the lid and/or the battery compartment do not close securely, stop using the key and keep it away from children.
- If batteries are swallowed or otherwise enter the body, seek immediate medical attention.

ENVIRONMENTAL NOTE
Environmental damage due to improper disposal of batteries

Batteries contain pollutants. It is illegal to dispose of them with the household rubbish.


- Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

Requirements:

- You need a CR 2032 lithium cell battery (3 V).

Mercedes-Benz recommends that you have the battery replaced at a qualified specialist workshop.

- Remove the emergency key (→ page 160).

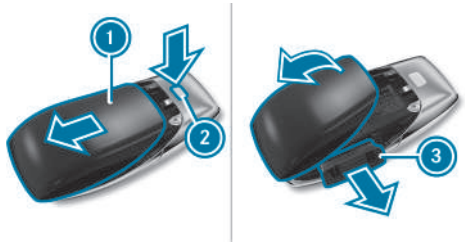

- Press the release knob (2) down fully and slide the cover (1) in the direction of the arrow.
- Fold out the cover (1) in the direction of the arrow and remove.

- ► Remove the battery compartment (3) and take out the discharged battery.
- ► Insert the new battery into the battery compartment (3). Observe the positive terminal marking in the battery compartment and on the battery.
- ► Push in the battery compartment (3).
- ► Re-attach the cover (1) and push in until it engages.

Troubleshooting problems with the key

YOU CAN NO LONGER LOCK OR UNLOCK THE VEHICLE

POSSIBLE CAUSES:

- The key battery is at low capacity or is flat.

- ► Check the battery via the indicator lamp (⟶ page 158).
- ► Replace the key battery as necessary (⟶ page 161).
- ► Use the replacement key.
- ► Use the emergency key to lock or unlock (⟶ page 166).
- ► Have the key checked at a qualified specialist workshop.

THERE IS INTERFERENCE FROM A POWERFUL RADIO SIGNAL SOURCE.

POSSIBLE CAUSES IF THE FUNCTION OF THE KEY IS IMPAIRED:

- high-voltage power lines
- mobile phones
- electronic devices (notebooks, tablets)
- shielding due to metallic objects or induction loops for electrical gate systems or automatic barriers


- ► Ensure that there is sufficient distance between the key and the potential source of interference.

YOU HAVE LOST A KEY

- ► Have the key deactivated at a qualified specialist workshop.
- ► If necessary, have the mechanical lock replaced as well.


Doors

Unlocking/opening the doors from the inside

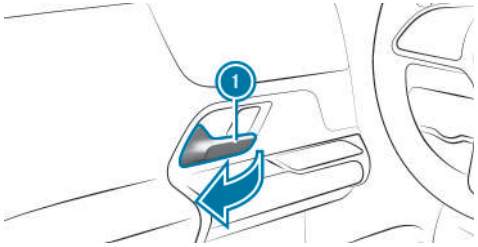

- **To unlock and open a front door:** pull door handle (1).
- **To unlock a rear door:** pull the rear door handle.
- **To open a rear door:** pull the rear door handle again.

Centrally locking and unlocking the vehicle from the inside

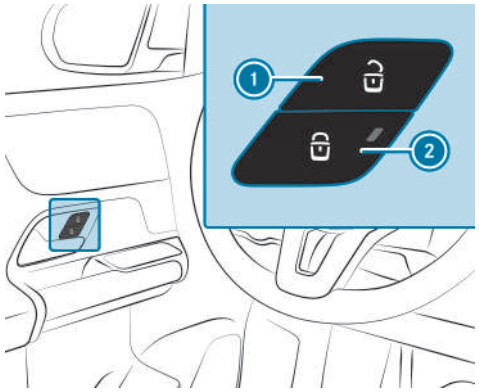

- **To unlock:** press the button (1).
- **To lock:** press the button (2).
  The red indicator lamp on the button (2) lights up when the vehicle is locked.

ⓘ The buttons are also located on the front passenger door.

The socket flap is also locked and unlocked. The socket flap can be opened even if a key is detected in the vehicle.

THE VEHICLE IS NOT UNLOCKED WHEN THE BUTTON (1) IS PRESSED:

- If you have locked the vehicle using the key
- If you have locked the vehicle using KEYLESS-GO

Locking/unlocking the vehicle with KEYLESS-GO


Requirements

- The key is outside the vehicle.
- The distance between the key and the vehicle does not exceed 3 ft (1 m).
- The driver's door and the door on which the door handle is used are closed.

> **NOTE**
> Vehicle damage due to unintentional opening of the tailgate
> - When using an automatic car wash
> - When using a high pressure cleaner
>
> ► Deactivate the function of the SmartKey in these situations.
>
> or
>
> ► Make sure that the SmartKey is at a minimum distance of 10 ft (3 m) away from the vehicle.

OBSERVE THE NOTES:

- on washing the vehicle in a car wash (⟶ page 32)
- on using a high-pressure cleaner (⟶ page 563)

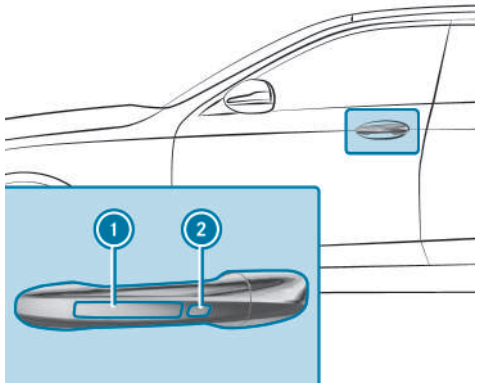

► **To unlock the vehicle:** touch the inner surface of the door handle.

► **To lock the vehicle:** touch sensor surface (1) or (2).

► **Convenience closing:** touch recessed sensor surface (2) until the closing process has been completed.

ⓘ Further information on convenience closing (⟶ page 176).

If you open the tailgate from outside, it is automatically unlocked.

Troubleshooting problems with KEYLESS-GO

YOU CAN NO LONGER LOCK OR UNLOCK THE VEHICLE USING KEYLESS-GO.

POSSIBLE CAUSES:

- The function of the key has been deactivated.

- The key battery is at low capacity or is flat.

► Activate the function of the key (⟶ page 62).

► Check the battery using the indicator lamp (⟶ page 158).

► Replace the key battery as necessary (⟶ page 161).

► Use the replacement key.

► Use the emergency key to lock or unlock (⟶ page 166).

► Have the vehicle and key checked at a qualified specialist workshop.


THERE IS INTERFERENCE FROM A POWERFUL RADIO SIGNAL SOURCE. POSSIBLE CAUSES IF THE FUNCTION OF KEYLESS-GO IS IMPAIRED:

- high-voltage power lines
- mobile phones
- electronic devices (laptops, tablets)
- shielding due to metallic objects or induction loops for electrical gate systems or automatic barriers

► Ensure that there is sufficient distance between the key and the potential source of interference.

Activating/deactivating the automatic locking feature

The vehicle will be locked automatically when the vehicle is switched on and the wheels are turning faster than walking pace.

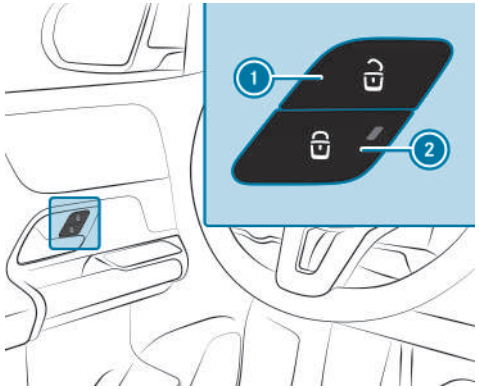

► **To activate:** press and hold button (2) for approximately five seconds until a tone sounds.

► **To deactivate:** press and hold button (1) for approximately five seconds until a tone sounds.

The red indicator lamp on button (2) will light up when the vehicle is locked.

IN THE FOLLOWING SITUATIONS, THERE IS A DANGER OF BEING LOCKED OUT WHEN THE FUNCTION IS ACTIVATED:

- while the vehicle is being tow started or pushed
- if the vehicle is being tested on a roller dynamometer

Activating/deactivating automatic locking in the MBUX multimedia system

Multimedia system:

Settings » Vehicle » Open/Close

The vehicle will be locked automatically when the vehicle is switched on and the wheels are turning faster than walking pace.

- Activate or deactivate Automatic Door Lock.

IN THE FOLLOWING SITUATIONS, THERE IS A RISK OF BEING LOCKED OUT WHEN THE FUNCTION IS ACTIVATED:

- The vehicle is being towed or pushed.
- The vehicle is being tested on a roller dynamometer.

Locking/unlocking the vehicle with the emergency key


LOCKING/UNLOCKING THE DRIVER'S DOOR WITH THE EMERGENCY KEY

If you wish to lock the vehicle entirely using the emergency key, first press the button for locking from the inside while the driver's door is open. Then proceed to lock the driver's door using the emergency key.


If you unlock and open the driver's door with the emergency key, this triggers the anti-theft alarm system.

If you unlock the driver's door with the emergency key, the tailgate will not be unlocked.

Information on starting the vehicle in emergency operation mode (→ page 274).

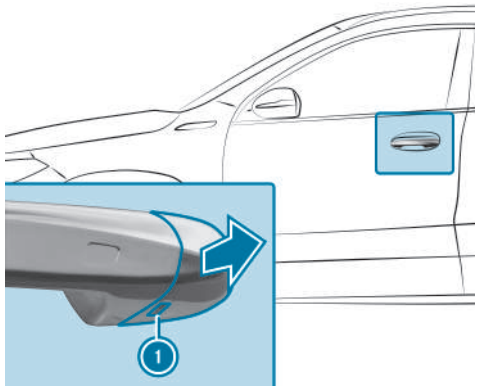


- Remove the emergency key (→ page 160).
- Insert the emergency key as far as it will go into the opening 1 on the cover cap.
- Pull out the door handle slightly and hold it in position.
- Pull the cover cap on the emergency key as straight as possible away from the vehicle until it releases.
- Release the door handle.

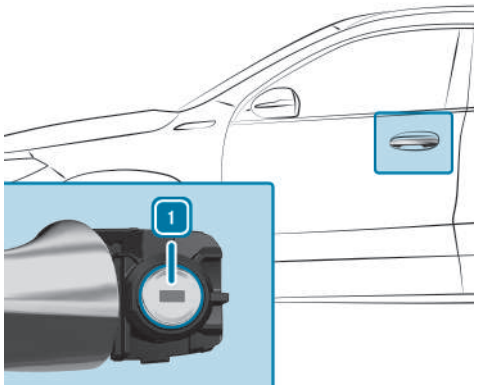

- **To unlock:** turn the emergency key counter-clockwise to position 1.
- **To lock:** turn the emergency key clockwise to position 1.
- Carefully press the cover cap onto the lock cylinder until it engages and is seated firmly.

LOCKING THE FRONT PASSENGER DOOR AND REAR DOORS

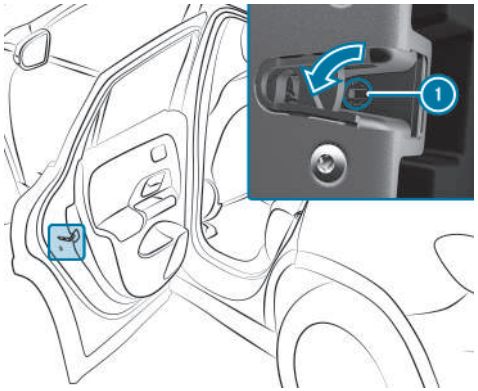

- Insert a suitable object, e.g. the emergency key, into the opening (1) on the door lock.
- **To lock the left-hand side of the vehicle:** turn the emergency key counter-clockwise as far as it will go.
- **To lock the right-hand side of the vehicle:** turn the emergency key clockwise as far as it will go.

If the locked door is then closed, it can no longer be opened from the outside.

Cargo compartment

Opening the tailgate


NOTE
Damage to the tailgate caused by obstacles above the vehicle

The tailgate swings rearwards and upwards when it is opened.

- Make sure that there is sufficient space behind and above the tailgate.

- If the tailgate is unlocked, press the top of the Mercedes star located on the tailgate.
- **Vehicles with HANDS-FREE ACCESS:** Make a kicking movement with your foot below the bumper (⟶ page 171).

VEHICLES WITH AN EASY-PACK TAILGATE

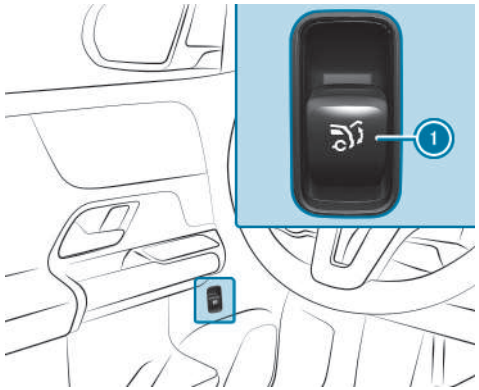

- Pull remote operating switch (1) until the tailgate opens.

or

- Press and hold the button on the key.
- If the tailgate is unlocked, press the top of the Mercedes star.

- If the tailgate has stopped in an intermediate position, pull it upwards. Release it as soon as it begins to open.

If an obstacle obstructs the tailgate during the automatic opening process, blockage detection will stop the tailgate. The automatic blockage detection function is only an aid. It is not a substitute for you having to pay attention.

Closing the tailgate

WARNING
Risk of injury from unsecured items in the vehicle

If objects, luggage or loads are not secured or not secured sufficiently, they could slip, tip over or be thrown around and thereby hit vehicle occupants.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ► Always stow objects in such a way that they cannot be thrown around.
- ► Before the journey, secure objects, luggage or loads against slipping or tipping over.

Observe the notes on loading the vehicle.
Notes on closing the tailgate: your vehicle is equipped with automatic key recognition.

NOTE THAT THE TAILGATE WILL NOT BE LOCKED IN THE FOLLOWING SITUATION:

- You have locked the vehicle and closed the tailgate while a key belonging to the vehicle is inside the vehicle and is detected.

  and
- A second key belonging to the vehicle is not detected outside the vehicle.

Automatic key recognition is only an aid and is not a substitute for your attentiveness.

- ► Before locking, ensure that at least one key belonging to the vehicle is outside the vehicle.
- ► **To close the tailgate:** pull the tailgate downwards with the handle and let it drop into the lock.

VEHICLES WITH AN EASY-PACK TAILGATE

WARNING
Risk of becoming trapped during automatic closing of the tailgate

Body parts may become trapped. There may be people in the closing area.


- ► Make sure that nobody is in the vicinity of the closing area.

USE ONE OF THE FOLLOWING OPTIONS TO STOP THE CLOSING PROCESS:


- Press the button on the SmartKey.
- Press or pull the remote operating switch on the driver's door.
- Press the closing or locking button on the tailgate.
- Press the top of the Mercedes star on the tailgate.

Vehicles with HANDS-FREE ACCESS: it is also possible to stop the closing process by making a kicking movement below the rear bumper.

- ► **To close the tailgate:** pull the tailgate downwards slightly. Release it as soon as it begins to close.

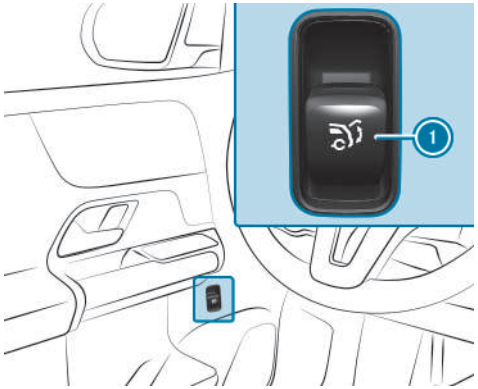

- Switch on the power supply or the vehicle.
- Push remote operating switch (1) until the tailgate is fully closed.

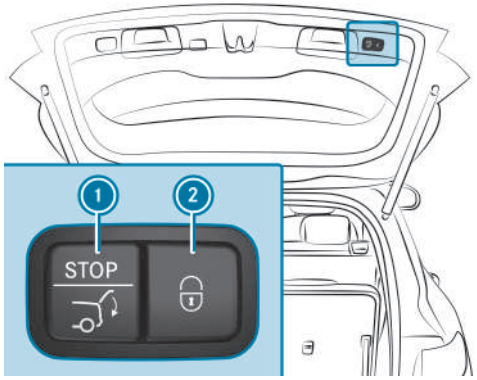

- Press closing button (1) on the tailgate.

VEHICLES WITH KEYLESS-GO

- Press locking button (2) on the tailgate.

  If a key is detected outside the vehicle, the tailgate will close and the vehicle will be locked.

- Press and hold the button on the key. The key must be in the vicinity of the vehicle.

VEHICLES WITH HANDS-FREE ACCESS

- Make a kicking movement with your foot below the bumper (→ page 171).

AUTOMATIC REVERSING FUNCTION FOR THE TAILGATE

The tailgate is equipped with automatic blockage detection with a reversing function. If an obstacle obstructs the tailgate during the automatic closing process, it will automatically open again slightly. Automatic blockage detection with the reversing function is only an aid and is not a substitute for your attentiveness.

- During the closing process, ensure that no body parts remain within the closing area.

WARNING
Risk of becoming trapped despite reversing function

THE REVERSING FUNCTION WILL NOT REACT:

- To soft, light and thin objects, e.g. fingers
- Towards the end of the closing procedure

In these situations in particular, the reversing function cannot prevent someone being trapped.

► Ensure that no body parts are in the closing area.

IF SOMEONE IS TRAPPED, EITHER:

- Press the button on the SmartKey.
- Press or pull the remote operating switch on the driver's door.
- Press the closing or locking button on the tailgate.
- Press the top of the Mercedes star on the tailgate.

HANDS-FREE ACCESS function

HANDS-FREE ACCESS allows you to open and close the tailgate, or even stop the opening and closing process at any point, by performing a kicking motion under the bumper. The transmission must be in position P for this function.

THE KICKING MOTION TRIGGERS THE OPENING OR CLOSING PROCESS ALTERNATELY.

- If you stop the tailgate opening process with a kicking motion, the tailgate is closed with the next kicking motion.
- If you stop the tailgate closing process with a kicking motion, the tailgate is opened with the next kicking motion.

IN THE FOLLOWING CASES, THE TAILGATE CAN ONLY BE CLOSED WITH HANDS-FREE ACCESS:

- If the vehicle is switched on and the key's unlocking function is set to unlock the driver's door only when unlocking the vehicle (⟶ page 159).
- If the vehicle has been centrally locked from the inside (⟶ page 163).

Observe the notes when opening (⟶ page 168) and closing (⟶ page 169) the tailgate.

ⓘ Two warning tones sound when the tailgate is opening or closing.

NOTE
Vehicle damage due to unintentional opening of the tailgate

- When using an automatic car wash
- When using a high pressure cleaner

► Deactivate the function of the SmartKey in these situations.


or

► Make sure that the SmartKey is at a minimum distance of 10 ft (3 m) away from the vehicle.

Ensure that you are standing firmly on the ground when performing the kicking motion. You could otherwise lose your balance, e.g. on ice.

OBSERVE THE FOLLOWING NOTES:

- The key is behind the vehicle.
  If the key is not recognized:
  - Take the key in your hand.
    or
  - Ensure that the function of the key is activated (⟶ page 62).
- Stand at least 12 in (30 cm) away from the vehicle when performing the kicking motion.
- Do not come into contact with the bumper when performing the kicking motion.
- Do not carry out the kicking motion too slowly.
- The kicking motion must be towards the vehicle and back again.

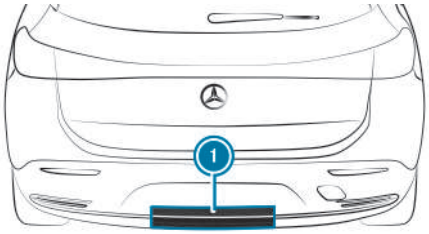

(1) Detection range of the sensors

If several consecutive kicking motions are not successful, wait ten seconds.

SYSTEM LIMITS

THE SYSTEM MAY BE IMPAIRED OR INOPERATIVE IN THE FOLLOWING CASES:

- The sensors are dirty, e.g. due to road salt or snow.
- The kicking motion is performed with a prosthetic leg.

THE TAILGATE CAN OPEN OR CLOSE UNINTENTIONALLY IN THE FOLLOWING SITUATIONS:

- A person's arms or legs are moving within the sensor detection range, e.g. when polishing the vehicle or picking up objects.
- Objects are moved or placed behind the vehicle, e.g. a charging cable or luggage.
- Tension belts, tarps or other covers are pulled over the bumper.
- A protective mat with a length reaching over the loading sill down into the detection range of the sensors is used.
- The protective mat is not secured correctly.

Deactivate the function of the key (⟶ page 62) or do not carry the key about your person in such situations.

You can watch an animation on this topic via the following link:

Limiting the opening angle of the tailgate

ACTIVATING THE OPENING ANGLE LIMITER

You can limit the opening angle of the tailgate in the top half of its opening range up to a point shortly before the end position.

► Stop the opening procedure of the tailgate at the desired position.

► Press and hold the closing button on the tailgate until you hear a short tone.

The opening angle limiter will be activated. The tailgate will then stop in the stored position when opened.

FULLY OPENING THE TAILGATE AFTER IT HAS STOPPED AUTOMATICALLY

► Press the top of the Mercedes star on the tailgate again.

or

- Open the tailgate manually.


DEACTIVATING THE OPENING ANGLE LIMITER

- Press and hold the closing button on the tailgate until two short tones sound.

Unlocking the tailgate with the emergency key

Requirements:

- The rear seat backrest has been folded forward.
- The cargo compartment cover has been removed.

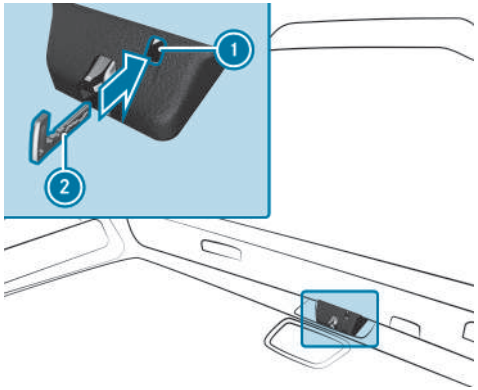

- Remove the emergency key (⟶ page 160).
- Insert emergency key (2) into opening (1) in the trim and push it in.
  The tailgate will be unlocked.

Side windows

Opening and closing the side windows

WARNING
Risk of entrapment when opening a side window

When opening a side window, parts of the body could be drawn in or become trapped between the side window and window frame.

- When opening, make sure that nobody is touching the side window.
- If someone is trapped, release the button immediately or pull it in order to close the side window again.

WARNING
Risk of becoming trapped when closing a side window

When closing a side window, body parts could be trapped in the closing area in the process.

- When closing, make sure that no body parts are in the closing area.
- If someone is trapped, release the button immediately or press the button in order to reopen the side window.


WARNING
Risk of becoming trapped when children operate the side window

Children could become trapped if they operate the side windows, particularly when unattended.

- Activate the child safety lock for the side windows in the rear passenger compartment.
- When exiting the vehicle, always lock the vehicle and take the key with you.
- Never leave children unattended in the vehicle.

Requirements:

- The power supply or the vehicle has been switched on.

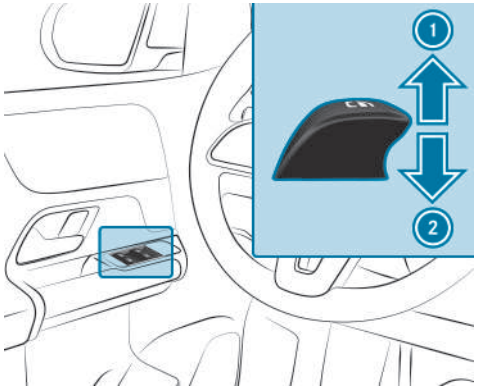

(1) Closes
(2) Opens

The buttons on the driver's door take precedence.

- **To start automatic operation:** press the button beyond the point of resistance or pull and release it.
- **To interrupt automatic operation:** press or pull the button again.

You can continue to operate the side windows with the vehicle switched off.

This function will be available for around four minutes or until a front door is opened.

AUTOMATIC REVERSING FUNCTION OF THE SIDE WINDOWS
If an obstacle impedes a side window during the closing process, the side window will open again automatically. The automatic reversing function serves solely as an aid and is not a substitute for your attentiveness.

- During the closing process, ensure that no body parts remain within the closing area.

WARNING
Risk of becoming trapped despite there being reversing protection on the side window

THE REVERSING FUNCTION DOES NOT REACT:

- To soft, light and thin objects, e.g. fingers.
- During resetting.

The reversing function cannot prevent someone from becoming trapped in these situations.

- During the closing process, make sure that no body parts are in the closing area.
- If someone becomes trapped, press the button to open the side window again.

Convenience opening (ventilating the vehicle before starting a journey)

WARNING
Risk of entrapment when opening a side window

When opening a side window, parts of the body could be drawn in or become trapped between the side window and window frame.

- ► When opening, make sure that nobody is touching the side window.
- ► Release the button immediately if somebody becomes trapped.

Requirements:

- The key is in immediate proximity to the vehicle.

► Press and hold the button on the key.

THE FOLLOWING FUNCTIONS ARE PERFORMED:

- The vehicle is unlocked.
- The side windows open.
- The panoramic sliding sunroof opens.
- The driver's seat ventilation is switched on.

If the roller sunblind of the panoramic sliding sunroof is closed, the roller sunblind is opened first.

► **Interrupt convenience opening:** Release the button.

► **Continue convenience opening:** Press and hold the button again.

Convenience closing (closing the vehicle from outside)

WARNING
Risk of entrapment due to not paying attention during convenience closing

When the convenience closing feature is operating, parts of the body could become trapped in the closing area of the side window and the sliding sunroof.

- ► When the convenience closing feature is operating, monitor the entire closing process and make sure that no body parts are in the closing area.

Requirements:

- The key is in immediate proximity to the vehicle.

► Press and hold the button on the key.

THE FOLLOWING FUNCTIONS ARE PERFORMED:

- The vehicle is locked.
- The side windows are closed.
- The panoramic sliding sunroof is closed.

► **To interrupt convenience closing:** release the button.

- **To continue convenience closing:** press and hold the [ ] button again.

Convenience closing also functions with KEYLESS-GO (→ page 164).

Resolving problems with the side windows

WARNING
Risk of becoming trapped or fatally injured if reversing protection is not activated

If you close a side window again immediately after it has been blocked, the side window will close with increased or maximum force. The reversing function is then not active and body parts may become trapped.

- Make sure that no parts of the body are in the closing area.
- To stop the closing process, release the button or press the button again to reopen the side window.

A SIDE WINDOW CANNOT BE CLOSED AND YOU CANNOT SEE THE CAUSE.

- Check to see whether any objects are in the window guide.
- Adjust the side windows.

Adjusting the side windows

If a side window is obstructed during closing and reopens again immediately:

- Immediately after this, pull and hold the corresponding button again until the side window has closed and hold the button for at least one more second (re-adjustment).
  The side window will be closed without the automatic reversing function.

If the side window is obstructed again and reopens again immediately:

- Immediately after this, pull and hold the corresponding button again until the side window has closed and hold the button for at least one more second (follow-up adjustment).
  The side window will be closed without the automatic reversing function.
- If a side window is obstructed again during closing and reopens again slightly, consult a qualified specialist workshop.

THE SIDE WINDOWS CANNOT BE OPENED OR CLOSED USING THE CONVENIENCE OPENING FEATURE.

POSSIBLE CAUSES:

- The key is not in the immediate vicinity of the vehicle.
- The key battery is at low capacity or is flat.

- Check the battery using the indicator lamp (→ page 158).
- Replace the key battery, if necessary (→ page 161).

Sliding sunroof

Opening and closing the sliding sunroof

ⓘ The term "sliding sunroof" also refers to the panoramic sliding sunroof.

⚠ **WARNING**
Risk of becoming trapped when the sliding sunroof is being opened and closed

Body parts may become trapped in the range of movement.

- ► During opening and closing, make sure that no body parts are in the range of movement.
- ► Release the button immediately if somebody becomes trapped.

or

- ► Briefly press the button in any direction during automatic operation.

  The opening or closing process will be stopped.

⚠ **WARNING**
Risk of children becoming trapped if they operate the sliding sunroof

Children could become trapped if they operate the sliding sunroof, particularly when unattended.

- ► Never leave children unattended in the vehicle.
- ► When leaving the vehicle, always lock the vehicle and take the key with you.

WARNING
Risk of becoming trapped when the roller sunblind is being opened and closed

Body parts may become trapped between the roller sunblind and frame or sliding roof.

- ► When opening or closing, make sure that no body parts are in the roller sunblind's range of movement.
- ► Release the button immediately if somebody becomes trapped.

or

- ► Briefly press the button in any direction during automatic operation.

  The opening or closing process will be stopped.

NOTE
Malfunction due to snow and ice

Snow and ice may cause the sliding sunroof to malfunction.

- ► Open the sliding sunroof only if it is free of snow and ice.

NOTE
Damage caused by moisture ingress

- ► Do not open the sliding sunroof if it has just rained.
- ► Do not open the sliding sunroof immediately after washing the vehicle in a car wash.

NOTE
Damage caused by protruding objects

Objects that protrude from the sliding sunroof may damage the seals.


- ► Do not allow anything to protrude from the sliding sunroof.

NOTE
Damage to the panorama roof with power tilt/sliding panel due to non-approved roof luggage racks

The panorama roof with power tilt/sliding panel may be damaged by the roof luggage rack if you attempt to open it when using a roof luggage rack not tested and approved for Mercedes-Benz.

- ► When a roof luggage rack is installed, open the panorama roof with power tilt/sliding panel only if this has been tested and approved for Mercedes-Benz.

The panorama roof with power tilt/sliding panel may be raised to allow ventilation of the vehicle interior.

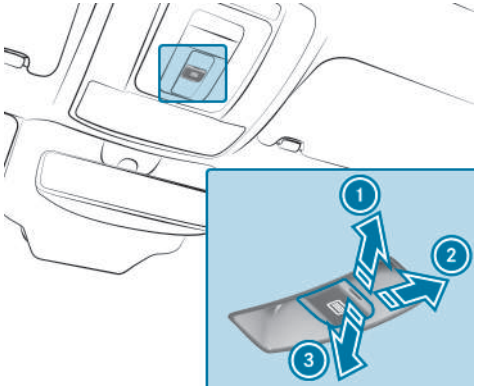

1 To raise
2 To open
3 To close/lower

Use the button to operate the panoramic sliding sunroof and the roller sunblind.

The panoramic sliding sunroof can be operated only when the roller sunblind is open.

- Ensure that the sliding sunroof can be raised or opened when a roof luggage rack is installed.
- **To start automatic operation:** press the button beyond the point of resistance or pull and release it.
- **To discontinue automatic operation:** briefly press the button in any direction.
  The opening/closing process is stopped.

Vehicles with panoramic sliding sunroof: the automatic raising feature is available only when the sliding sunroof is closed or raised.

AUTOMATIC REVERSING FUNCTION OF THE SLIDING SUNROOF
If an obstacle obstructs the sliding sunroof during the closing process, the sliding sunroof will open again automatically. The automatic reversing function serves solely as an aid and is not a substitute for your attentiveness.

- Keep the opening area and the guide rails free of debris (e.g. ice, snow or leaves).
- When closing the sliding sunroof, ensure that no body parts or objects are within the closing area.

⚠ **WARNING**
Risk of becoming trapped despite the reversing function being active

IN PARTICULAR, THE REVERSING FUNCTION DOES NOT REACT:

- To soft, light and thin objects, e.g. fingers.
- Towards the end of the closing procedure.
- During resetting.

- During the closing process, make sure that no body parts are in the closing area.
- Release the button immediately if somebody becomes trapped.

or

- Briefly press the button in any direction during automatic operation.
  The closing process will be stopped.

AUTOMATIC REVERSING FUNCTION OF THE ROLLER SUNBLIND

If an obstacle obstructs the roller sunblind during the closing process, the roller sunblind will open again automatically. The automatic reversing function serves solely as an aid and is not a substitute for your attentiveness.

- Keep the opening area and the guide rails free of debris (e.g. ice, snow or leaves).
- When closing the roller sunblind, ensure that no body parts or objects are within the range of movement.

WARNING
Risk of becoming trapped despite reversing function

In particular, the reversing function does not react to soft, light and thin objects, e.g. fingers.

- When closing the roller sunblind, make sure that no body parts are in the range of movement.
- Release the button immediately if somebody becomes trapped.

or

- Briefly press the button in any direction during the automatic closing process.

  The closing process will be stopped.

Automatic functions of the sliding sunroof

The term "sliding sunroof" also refers to the panoramic sliding sunroof.

RAIN CLOSING FUNCTION WHEN DRIVING

Vehicles with a panoramic sliding sunroof: if it starts to rain, the raised sliding sunroof will automatically be lowered while the vehicle is in motion.

AUTOMATIC LOWERING FUNCTION

Vehicles with a panoramic sliding sunroof: if the sliding sunroof is raised at the rear, it will automatically be lowered slightly at higher speeds. At low speeds, it will be raised again automatically.

WARNING
Risk of becoming trapped by automatic lowering of the sliding sunroof

At higher speeds, the raised sliding sunroof will automatically be lowered slightly at the rear.

- Make sure that nobody reaches into the sliding sunroof's range of movement while the vehicle is in motion.
- If somebody becomes trapped, briefly push the sliding sunroof button forwards or backwards.

By pushing or pulling the  button, you can interrupt the automatic functions "Rain closing function when driving" and "Automatic lowering".

Rectifying problems with the sliding sunroof

WARNING
Risk of becoming trapped or fatal injuries when the sliding sunroof is closed again

If the sliding sunroof is closed again immediately after it has been blocked or reset, it will close with increased force.

- Make sure that no parts of the body are in the closing area.
- Release the button immediately if somebody becomes trapped.

or

- Briefly press the button in any direction during the automatic closing process.
  The closing process will be stopped.

THE SLIDING SUNROOF CANNOT BE CLOSED AND YOU CANNOT SEE THE CAUSE.

The term "sliding sunroof" also refers to the panorama roof with power tilt/sliding panel.

If the sliding sunroof is obstructed during closing and reopens again slightly:

- Immediately after automatic reversing, pull and hold the button down again to the point of resistance until the sliding sunroof is closed.
  The sliding sunroof will be closed with increased force.

If the sliding sunroof is obstructed again and opens again slightly:

- Repeat the previous step.
  The sliding sunroof will be closed again with increased force.

Vehicles with a panorama roof with power tilt/sliding panel: The sliding sunroof or the roller sunblind is not operating smoothly.

- Reset the sliding sunroof and the roller sunblind.

Resetting the sliding sunroof and the roller sunblind

- Pull and hold the button little by little until the sliding sunroof is fully closed.
- Pull and hold the button little by little until the roller sunblind is fully closed.
- Use automatic operation to fully open and then close the sliding sunroof.

Anti-theft protection

Function of the immobilizer

The immobilizer prevents your vehicle from being started without the correct key.

The immobilizer is automatically activated when the vehicle is switched off, and deactivated when the vehicle is switched on.

When leaving the vehicle, always take the key with you and lock the vehicle. Anyone can start the vehicle if a valid key has been left inside the vehicle.

ⓘ In the event that the drive system cannot be started (although the vehicle's starter battery is charged), the immobilizer may be defective. Contact an authorized Mercedes-Benz Service Center or call 1-800-FOR-MERCedes (in the USA) or 1-800-387-0100 (in Canada).

ATA (anti-theft alarm system)


FUNCTION OF THE ATA SYSTEM

IF THE ATA SYSTEM IS ARMED, A VISUAL AND AUDIBLE ALARM WILL BE TRIGGERED IN THE FOLLOWING SITUATIONS:

- When a door is opened
- When the tailgate is opened
- When the hood is opened
- When the interior protection is triggered (⟶ page 185)
- When the tow-away alarm is triggered (⟶ page 185)

THE ATA SYSTEM WILL BE ARMED AUTOMATICALLY AFTER APPROXIMATELY TEN SECONDS IN THE FOLLOWING SITUATIONS:

- After locking the vehicle with the key
- After locking the vehicle using KEYLESS-GO

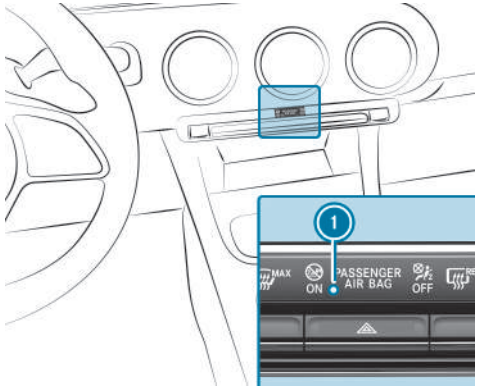

Indicator lamp (1) will flash when the ATA system is armed.

THE ATA SYSTEM IS DEACTIVATED AUTOMATICALLY IN THE FOLLOWING SITUATIONS:

- After unlocking the vehicle with the key
- After unlocking the vehicle using KEYLESS-GO

- After pressing the Start/Stop button with the key in the storage compartment (⟶ page 274)

ⓘ If the battery is heavily discharged, the Anti-Theft Alarm system is automatically deactivated to facilitate the next vehicle start.

DEACTIVATING THE ATA

► Press the [ ], [ ] or [ ] button on the key.

or

► Press the start/stop button with the key in the stowage compartment (⟶ page 274)

DEACTIVATING THE ALARM USING KEYLESS-GO

► Grasp the outside door handle with the key outside the vehicle.

Emergency Key Deactivation

REQUIREMENTS:

- Your smartphone and your vehicle have an active data connection.
- The vehicle battery is sufficiently charged.
- **To deactivate all keys:** there is no other key in the vehicle.
- There are no people or animals in the vehicle.
- The vehicle is parked in a safe place.

ⓘ Only use the Emergency Key Deactivation function in an emergency.

ⓘ If you deactivate all keys, they can only be reactivated within 30 days. After 30 days or if the battery state of charge is low, the vehicle must be unlocked and opened using the emergency key.

Where is the vehicle key? Misplaced, lost, or stolen?

Emergency Key Deactivation provides you with the option to deactivate specific keys or all vehicle keys in the event of loss or theft, and to reactivate them when the keys have been found again.

Here's how it works:

► Open [ ] in the Mercedes-Benz App and select the vehicle.
The My Garage menu appears.

► Select Service Management.

► Activate Emergency Key Deactivation.

DEACTIVATING SPECIFIC KEYS OR ALL KEYS

► Select [ ] in the Mercedes-Benz App.

► Select Emergency Key Deactivation.

► Deactivate Specific Keys or Deactivate All Keys.

► Select Confirm.

► Enter the four-digit PIN and select Send.
The request will be sent. If deactivation is successful, you will receive a message that a specific key or all keys have been deactivated.

ACTIVATING ALL KEYS

► Select Emergency Key Deactivation.

► Select Activate All Keys.

► Enter the four-digit PIN and select Send.
The request will be sent. If activation is successful, you will receive a message that all keys have been activated.

Function of the tow-away alarm

ⓘ This function may not be available in all countries.

A visual and audible alarm will be triggered if an alteration to your vehicle's angle of inclination is detected while the tow-away alarm is armed.

THE TOW-AWAY ALARM WILL BE ARMED AUTOMATICALLY AFTER ABOUT 60 SECONDS:

- After locking the vehicle with the key
- After locking the vehicle using KEYLESS-GO

THE TOW-AWAY ALARM WILL BE ARMED ONLY WHEN THE FOLLOWING COMPONENTS ARE CLOSED:

- Doors
- Tailgate

THE TOW-AWAY ALARM WILL AUTOMATICALLY BE DISARMED:

- After pressing the button or on the key
- After pressing the Start/Stop button with the key in the storage compartment (⟶ page 274)
- After unlocking the vehicle using KEYLESS-GO
- When using HANDS-FREE ACCESS

Information on collision detection for a parked vehicle (⟶ page 321).

Arming/disarming the tow-away alarm

Multimedia system:
Settings » Vehicle » Open/Close » Vehicle Protection

► Activate or deactivate Tow-away Protection.

THE TOW-AWAY ALARM WILL BE ARMED AGAIN IN THE FOLLOWING CASES:

- The vehicle is unlocked again.
- A door is opened.
- The vehicle is locked again.

Function of interior protection

ⓘ This function may not be available in all countries.

When interior protection is armed, a visual and audible alarm is triggered if movement is detected in the vehicle interior.

INTERIOR PROTECTION IS ARMED AUTOMATICALLY AFTER APPROXIMATELY TEN SECONDS:

- after locking the vehicle with the key
- after locking the vehicle using KEYLESS-GO

INTERIOR PROTECTION IS ARMED ONLY WHEN THE FOLLOWING COMPONENTS ARE CLOSED:

- Doors
- Tailgate

INTERIOR PROTECTION IS AUTOMATICALLY DEACTIVATED:

- after pressing the or button on the key
- after pressing the start/stop button with the key in the stowage compartment (⟶ page 274)
- after unlocking the vehicle using KEYLESS-GO
- when using HANDS-FREE ACCESS

THE FOLLOWING SITUATIONS CAN LEAD TO A FALSE ALARM:

- when there are moving objects suchas mascots in the vehicle interior
- if a side window is open
- if the panorama roof with power tilt/sliding panel is open

Arming/disarming interior protection

Multimedia system:

Settings Vehicle Open/Close Vehicle Protection

▶ Activate or deactivate Interior Protection.

INTERIOR PROTECTION IS ARMED AGAIN IN THE FOLLOWING CASES:

- The vehicle is unlocked again.
- A door is opened.
- The vehicle is locked again.

Back to contents

Seats and stowing

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go. You can return here at any time via the navigation bar at the top left.

Notes on correct positioning of the driver's seat
Notes on the height limit on the third row of seats
Notes on grab handles
Seats
Steering wheel
Easy entry and exit feature
Memory function
Stowage areas
Cup holder
Sockets
Charging a mobile phone wirelessly
Installing/removing the floor mats


Notes on correct positioning of the driver's seat

WARNING
Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

YOU COULD LOSE CONTROL OF THE VEHICLE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion

► Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.

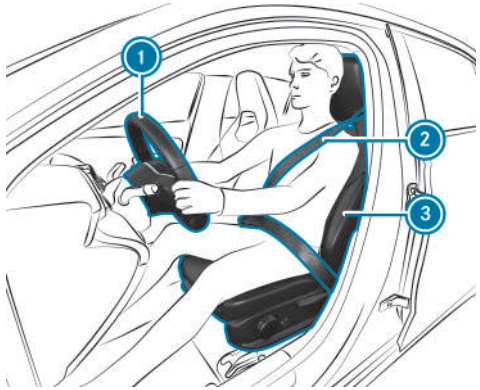

ENSURE THE FOLLOWING WHEN ADJUSTING THE STEERING WHEEL (1), SEAT BELT (2) AND DRIVER'S SEAT (3):

- You are sitting as far away as possible from the driver's air bag, taking the following points into consideration:
- You are sitting in an upright position
- Your thighs are supported slightly by the seat cushion.
- Your legs are not fully extended and you can actuate all pedals with ease
- The back of your head is supported at eye level by the center of the head restraint
- You can hold the steering wheel with your arms slightly bent
- You can move your legs freely
- You can easily see all notifications on the driver display.
- You have a good overview of the traffic conditions
- Observe the notes on correct fastening of the seat belt (⟶ page 116).

Notes on the height limit on the third row of seats



WARNING
Risk of injury if height limit on the third row is not observed

If a person exceeds the permissible body size for the seats in the third row of seats, he or she may be injured through contact with the roof or parts of the vehicle interior.

For that reason, a person of the relevant height must not use the seats on the third row.

► Use a suitable vehicle seat.

The seats on the third row are approved only for people up to 64.9 in (1.65 m) in height. Observe the information regarding height on the information label.

Notes on grab handles

WARNING
Risk of injury due to excessive load on the grab handles

If you apply your full body weight to the grab handle or pull it abruptly, the grab handle may be damaged or come loose from its anchorage. This may result in injuries.

- Use the grab handles only to stabilize the seating position or to assist in getting in and out of the seat.

Seats

Adjusting the front seat mechanically (without Seat Comfort Package)

WARNING
Risk of becoming trapped if the seats are adjusted by children

Children could become trapped if they adjust the seats, particularly when unattended.

- When leaving the vehicle, always take the key with you and lock the vehicle.
- Never leave children unattended in the vehicle.

This also applies to the Digital Vehicle Key.

WARNING
Risk of becoming trapped if the seats are adjusted

When adjusting a seat, you may trap yourself or a vehicle occupant, e.g. on the seat guide rail.

- Make sure that no part of the body is within the seat's range of motion when adjusting a seat.

Observe the safety notes on "Air bags" and "Children in the vehicle".

WARNING
Risk of accident due to the driver's seat not being engaged

The driver's seat may move unexpectedly while driving.

This could cause you to lose control of the vehicle.

- Always make sure that the driver's seat is engaged before starting the vehicle.

WARNING
Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

YOU COULD LOSE CONTROL OF THE VEHICLE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion

- Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.

WARNING
Risk of becoming trapped if the seat height is adjusted carelessly

If you adjust the seat height carelessly, you or other vehicle occupants could be trapped and thereby injured.

Children in particular could accidentally press the electrical seat adjustment buttons and become trapped.

- While moving the seats, make sure that hands or other body parts do not get under the lever assembly of the seat adjustment system.

WARNING
Risk of injury due to head restraints not being installed or being adjusted incorrectly

If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- Always drive with the head restraints installed.
- Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Do not rotate the head restraints of the front and rear seats. Otherwise, you will not be able to adjust the height and angle of the head restraints correctly.

Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

WARNING
Risk of injury or death due to an incorrect seat position

The seat belt does not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you could slip beneath the seatbelt and become injured.

- Adjust the seat properly before beginning your journey.
- Always ensure that the seat backrest is in an almost vertical position and that the shoulder belt is routed across the center of your shoulder.

WARNING
Risk of injury due to excessive load on the grab handles

If you apply your full body weight to the grab handle or pull it abruptly, the grab handle may be damaged or come loose from its anchorage. This may result in injuries.


- Use the grab handles only to stabilize the seating position or to assist in getting in and out of the seat.

WARNING
Risk of potentially fatal injuries due to objects trapped under the front passenger seat


Objects trapped under the front passenger seat may interfere with the function of the automatic front passenger air bag shutoff or damage the system.

- Do not stow any objects under the front passenger seat.
- When the front passenger seat is occupied, ensure that no objects have become trapped beneath the front passenger seat.

ADJUSTING THE SEAT FORE-AND-AFT POSITION

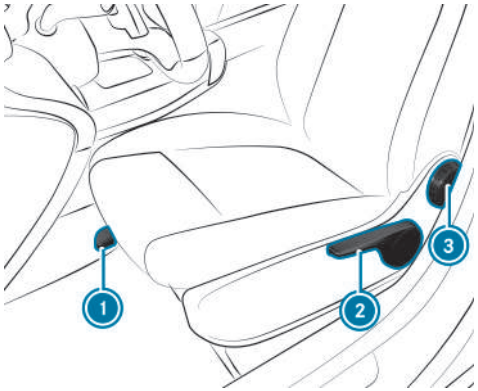

- Lift lever (1) and slide the seat into the desired position.
- Ensure that the seat is properly secured in position.

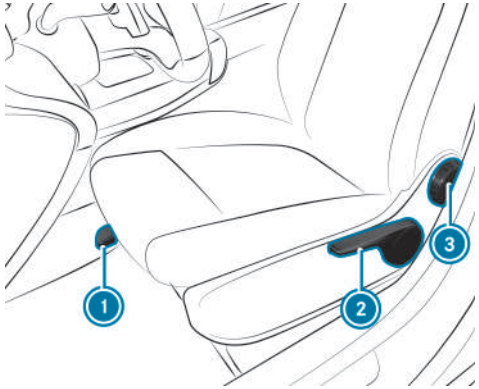

- **To adjust the seat height:** push or pull lever (2) until the desired position has been reached.
- **To adjust the seat backrest inclination:** turn handwheel (3) forwards and backwards until the desired position has been reached.

Adjusting the front seat mechanically (with Seat Comfort Package)

WARNING
Risk of becoming trapped if the seats are adjusted by children

Children could become trapped if they adjust the seats, particularly when unattended.

- When leaving the vehicle, always take the key with you and lock the vehicle.
- Never leave children unattended in the vehicle.

This also applies to the Digital Vehicle Key.

WARNING
Risk of becoming trapped if the seats are adjusted

When adjusting a seat, you may trap yourself or a vehicle occupant, e.g. on the seat guide rail.

► Make sure that no part of the body is within the seat's range of motion when adjusting a seat.

Observe the safety notes on "Air bags" and "Children in the vehicle".

WARNING
Risk of accident due to the driver's seat not being engaged

The driver's seat may move unexpectedly while driving.

This could cause you to lose control of the vehicle.

► Always make sure that the driver's seat is engaged before starting the vehicle.

WARNING
Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

YOU COULD LOSE CONTROL OF THE VEHICLE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion

► Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.

WARNING
Risk of becoming trapped if the seat height is adjusted carelessly

If you adjust the seat height carelessly, you or other vehicle occupants could be trapped and thereby injured.

Children in particular could accidentally press the electrical seat adjustment buttons and become trapped.

► While moving the seats, make sure that hands or other body parts do not get under the lever assembly of the seat adjustment system.

WARNING
Risk of injury due to head restraints not being installed or being adjusted incorrectly

If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- Always drive with the head restraints installed.
- Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Do not rotate the head restraints of the front and rear seats. Otherwise, you will not be able to adjust the height and angle of the head restraints correctly.

Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

WARNING
Risk of injury or death due to an incorrect seat position

The seat belt does not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you could slip beneath the seatbelt and become injured.

- Adjust the seat properly before beginning your journey.
- Always ensure that the seat backrest is in an almost vertical position and that the shoulder belt is routed across the center of your shoulder.

WARNING
Risk of injury due to excessive load on the grab handles

If you apply your full body weight to the grab handle or pull it abruptly, the grab handle may be damaged or come loose from its anchorage. This may result in injuries.


- Use the grab handles only to stabilize the seating position or to assist in getting in and out of the seat.

WARNING
Risk of potentially fatal injuries due to objects trapped under the front passenger seat


Objects trapped under the front passenger seat may interfere with the function of the automatic front passenger air bag shutoff or damage the system.

- Do not stow any objects under the front passenger seat.
- When the front passenger seat is occupied, ensure that no objects have become trapped beneath the front passenger seat.

ADJUSTING THE SEAT FORE-AND-AFT POSITION

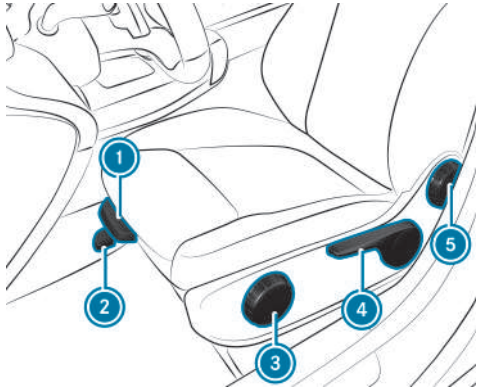

- Lift lever (2) and slide the seat into the desired position.
- Ensure that the seat is properly secured in position.

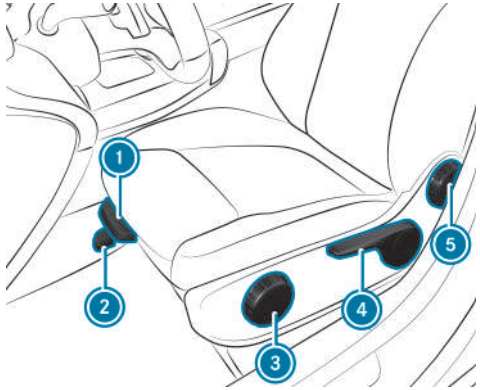

- **To adjust the seat cushion length (driver's seat only):** lift lever (1) and slide the front section of the seat cushion forwards or backwards.
- **To adjust the seat cushion inclination:** turn handwheel (3) forwards and backwards until the desired position has been reached.
- **To adjust the seat height:** push or pull lever (4) until the desired position has been reached.
- **To adjust the seat backrest inclination:** turn handwheel (5) forwards and backwards until the desired position has been reached.

Adjusting the front seat electrically

WARNING
Risk of becoming trapped if the seats are adjusted by children

Children could become trapped if they adjust the seats, particularly when unattended.

- When leaving the vehicle, always take the key with you and lock the vehicle.
- Never leave children unattended in the vehicle.

You can adjust the seats when the vehicle is switched off.

WARNING
Risk of becoming trapped if the seats are adjusted

When adjusting a seat, you may trap yourself or a vehicle occupant, e.g. on the seat guide rail.

- Make sure that no part of the body is within the seat's range of motion when adjusting a seat.

Observe the safety notes on "Air bags" and "Children in the vehicle".

WARNING
Risk of becoming trapped if the seat height is adjusted carelessly

If you adjust the seat height carelessly, you or other vehicle occupants could be trapped and thereby injured.

Children in particular could accidentally press the electrical seat adjustment buttons and become trapped.

- While moving the seats, make sure that hands or other body parts do not get under the lever assembly of the seat adjustment system.

WARNING
Risk of injury due to head restraints not being installed or being adjusted incorrectly

If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- Always drive with the head restraints installed.
- Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Do not rotate the head restraints of the front and rear seats. Otherwise, you will not be able to adjust the height and angle of the head restraints correctly.

Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

WARNING
Risk of injury or death due to an incorrect seat position

The seat belt does not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you could slip beneath the seatbelt and become injured.

- Adjust the seat properly before beginning your journey.
- Always ensure that the seat backrest is in an almost vertical position and that the shoulder belt is routed across the center of your shoulder.

WARNING
Risk of injury due to excessive load on the grab handles


If you apply your full body weight to the grab handle or pull it abruptly, the grab handle may be damaged or come loose from its anchorage. This may result in injuries.

- Use the grab handles only to stabilize the seating position or to assist in getting in and out of the seat.

WARNING
Risk of potentially fatal injuries due to objects trapped under the front passenger seat

Objects trapped under the front passenger seat may interfere with the function of the automatic front passenger air bag shutoff or damage the system.


- Do not stow any objects under the front passenger seat.
- When the front passenger seat is occupied, ensure that no objects have become trapped beneath the front passenger seat.

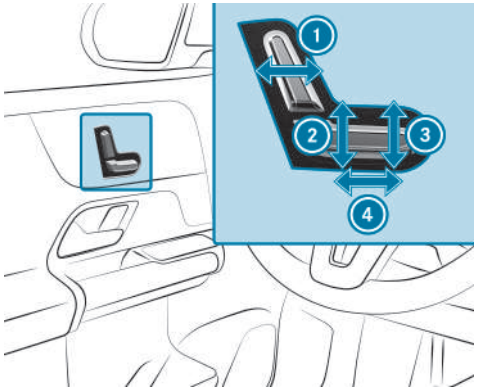

1. Seat backrest inclination
2. Seat height
3. Seat cushion inclination
4. Seat fore-and-aft position

- Save the settings with the memory function (⟶ page 215).

Adjusting the 4-way lumbar support

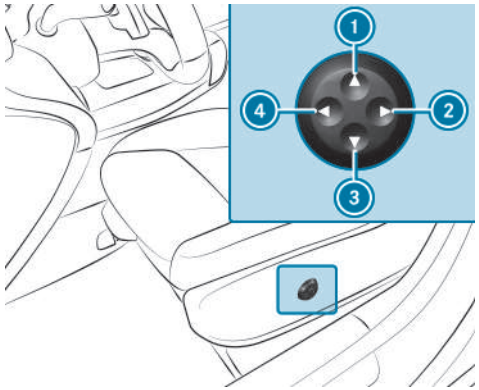

1. Higher
2. Softer
3. Lower
4. Firmer

- Use buttons 1 to 4 to adjust the contour of the backrest.

Adjusting rear seats manually

WARNING
Risk of becoming trapped when adjusting the seats

When you adjust a seat, you may trap yourself or a vehicle occupant.

- When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.

WARNING
Risk of accident and injury if the seat and seat backrest are not engaged

The seat and seat backrest can fold forwards.

THERE IS A RISK OF THE FOLLOWING, IN PARTICULAR:

- The vehicle occupant may be pressed against the seat belt. The seat belt cannot provide the intended protection and could cause additional injury to the vehicle occupant.
- A child restraint system is no longer properly supported or correctly positioned and can no longer perform its function as intended.
- The seat backrest will not be able to restrain objects or goods in the cargo compartment.

ALWAYS ENSURE THAT THE SEAT AND SEAT BACKREST ARE ENGAGED, IN PARTICULAR:

- Before persons travel in the vehicle while sitting on a seat with the easy entry and exit feature
- After the seat has been adjusted.
- After the easy entry and exit feature has been used
- After the cargo compartment enlargement has been folded forwards

WARNING
Risk of injury from adjusting the rear seats while driving

You or other vehicle occupants could be trapped and thereby injured.

Adjust the rear seats before starting the drive system.

WARNING
Risk of injury due to excessive load on the grab handles

If you apply your full body weight to the grab handle or pull it abruptly, the grab handle may be damaged or come loose from its anchorage. This may result in injuries.

► Use the grab handles only to stabilize the seating position or to assist in getting in and out of the seat.

NOTE
Damage caused by objects in the footwell or behind the rear seats

When adjusting in a longitudinal direction the rear seats and/or objects may be damaged.

► Store such objects in a suitable place.

This function is available only for vehicles with a movable rear bench seat.

The components of the rear bench seat can be moved. You can move the right-hand and left-hand parts together with the center part independently of each other. This allows you to make the footwell larger in either the second or third row of seats.



- ► Lift release handle (1) and slide the corresponding part of the bench seat into the desired position.
- ► Let go of release handle (1).
- ► Make sure that the seat is engaged.

Adjusting the rear seat backrests manually

WARNING
Risk of becoming trapped when adjusting the seats

When you adjust a seat, you may trap yourself or a vehicle occupant.

- ► When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.

WARNING
Risk of accident and injury if the seat and seat backrest are not engaged

The seat and seat backrest can fold forwards.

THERE IS A RISK OF THE FOLLOWING, IN PARTICULAR:

- The vehicle occupant may be pressed against the seat belt. The seat belt cannot provide the intended protection and could cause additional injury to the vehicle occupant.
- A child restraint system is no longer properly supported or correctly positioned and can no longer perform its function as intended.
- The seat backrest will not be able to restrain objects or goods in the cargo compartment.

ALWAYS ENSURE THAT THE SEAT AND SEAT BACKREST ARE ENGAGED, IN PARTICULAR:

- Before persons travel in the vehicle while sitting on a seat with the easy entry and exit feature
- After the seat has been adjusted.
- After the easy entry and exit feature has been used
- After the cargo compartment enlargement has been folded forwards

Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly. Particular attention must be paid to children.

If the rear seat backrest is not engaged and locked in place, the red lock verification indicator will be visible.

WARNING
Risk of injury due to seat backrests folded forwards

If the seat backrest of the rear seat is folded forwards, persons in the third row of seats may hit parts of the seat mechanism, especially in the event of an accident, braking maneuver or abrupt change of direction.

- ► If there is a person in the third row of seats, the rear seat in front of them must be folded back to the driving position before the journey begins.
- ► Persons in the third row of seats should not rest their legs on a seat backrest that has been folded forwards.

You can fold the backrests of the second row of seats forwards to get in or out.

WARNING
Risk of becoming trapped if the seat is not engaged

The seat does not engage when folded forwards. The seat can fold backwards unexpectedly, e.g. when accelerating, braking or in the event of an abrupt change of direction or an accident.

People in the seat's sweep can become trapped.

- ► If a seat is folded forwards, always fold it back before driving off.
- ► Make sure that the seat is engaged.

WARNING
Risk of injury due to excessive load on the grab handles

If you apply your full body weight to the grab handle or pull it abruptly, the grab handle may be damaged or come loose from its anchorage. This may result in injuries.

- ► Use the grab handles only to stabilize the seating position or to assist in getting in and out of the seat.

Requirements:

- The area into which the seat is folded is clear.


ADJUSTING THE SEAT BACKREST

YOU CAN FOLD THE SEAT BACKRESTS ON THE SECOND ROW OF SEATS FORWARDS FOR THE FOLLOWING SITUATIONS:

- For easier access to the cargo compartment
- Vehicles with a third row of seats: for getting in or out

You can set the seat backrest to different angles.

If you no longer require the seat backrest to be folded down for loading or for getting in and out, fold it back into place.

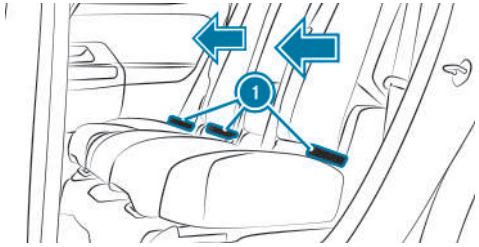

- Hold the seat backrest in place with your hand or back.
- Gently pull one of release loops (1) and fold the seat backrest forwards or backwards.
- Ensure that the seat backrest is engaged.

FOLDING THE SEAT BACKREST FORWARDS TO ENTER THE VEHICLE (VEHICLES WITH A THIRD ROW OF SEATS)

WARNING
Risk of injury when folding the seat backrest on the second row of seats forwards

If the handle for the seat backrest on the second row of seats is pulled from the third row of seats, the seat backrest on the second row of seats will fold forwards and will not engage. People in the sweep of this seat backrest can become trapped.

- When getting out of the third row of seats, do not hold the seat backrest on the second row of seats.

Vehicles with EASY-ENTRY function: If a seat on the second row of seats is located in the EASY-ENTRY area, this will be shown on the driver's display.

- If necessary, fold the seats on the third row into position (⟶ page 226).



- Pull handle (1).
  The seat backrest will fold forwards.

NOTE
Damage to the seat backrest handle caused by pulling

The handle can be damaged if it is used to pull the seat forwards.

- Move the seat forwards by the seat backrest.

- Move the seat forwards by the seat backrest. Hold the seat firmly in place while doing so.

FOLDING THE SEAT BACKREST BACK TO THE UPRIGHT POSITION (VEHICLES WITH THIRD ROW OF SEATS)

- Swivel seat backrest back until it engages.
  The seat backrest will remain in the cargo position.
- Slide the seat backwards.
  The seat will stop in the front position.

- Move the seat into the desired position (⟶ page 198).
- If necessary, fold in the seats on the third row (⟶ page 224).

ⓘ To increase the size of the cargo compartment, you can move the seat backrests into the trunk floor position (⟶ page 41).

Head restraints

ADJUSTING THE FRONT SEAT HEAD RESTRAINTS MANUALLY

⚠ **WARNING**
Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

YOU COULD LOSE CONTROL OF THE VEHICLE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion

- Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.


⚠ **WARNING**
Risk of injury due to head restraints not being installed or being adjusted incorrectly

If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- Always drive with the head restraints installed.
- Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Do not interchange the head restraints of the front and rear seats. Otherwise, you will not be able to adjust the height and angle of the head restraints correctly.

Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

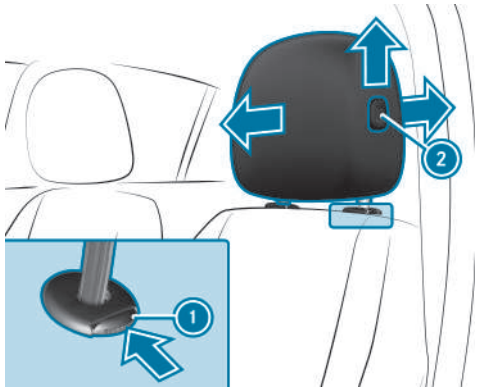

- **To raise:** pull the head restraint up.

- **To lower:** press release knob (1) in the direction of the arrow and push the head restraint down.
- **To move the driver's head restraint forwards:** press release knob (2) and pull the head restraint forwards.
- **To move the driver's head restraint backwards:** press release knob (2) and push the head restraint backwards.


ADJUSTING THE HEAD RESTRAINTS OF THE REAR SEATS MANUALLY

WARNING
Risk of injury due to head restraints not being installed or being adjusted incorrectly

If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- Always drive with the head restraints installed.
- Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Do not interchange the head restraints of the front and rear seats. Otherwise, you will not be able to adjust the height and angle of the head restraints correctly. Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

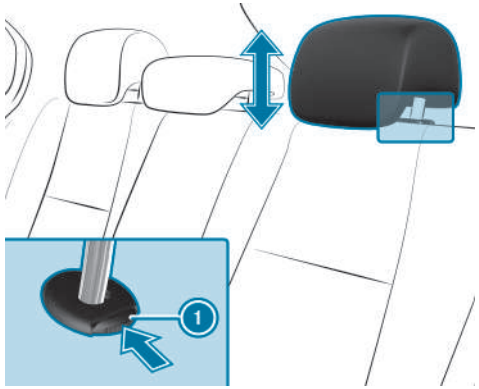

- **To raise:** pull the head restraint up.
- **To lower:** press release button (1) and push the head restraint down.
- **If the center seat on the second row of seats is not occupied:** press the head restraint down all the way.

VEHICLES WITH A THIRD ROW OF SEATS

The head restraints on the third row of seats have a usage- position and a non-usage position. The usage position is the extended, top position in which the head restraint engages; the non-usage position is the bottom, retracted position of the head restraint. If the seats on the third row of seats are being used, the head restraint must be in the top, engaged usage position.

When choosing a seat, bear in mind the limited space available. With the seat in the correct, upright position, your head should not touch the headliner.

- **If the third row of seats is occupied:** move the head restraints to the very top and have them engage there.
- **If the third row of seats is not occupied:** move the head restraints to the very bottom.

INSTALLING/REMOVING THE REAR SEAT HEAD RESTRAINTS

WARNING
Risk of injury due to head restraints not being installed or being adjusted incorrectly


If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- Always drive with the head restraints installed.
- Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Do not interchange the head restraints of the front and rear seats. Otherwise, you will not be able to adjust the height and angle of the head restraints correctly.


Adjust the head restraint longitudinal position so that it is as close as possible to the back of your head.

REMOVAL

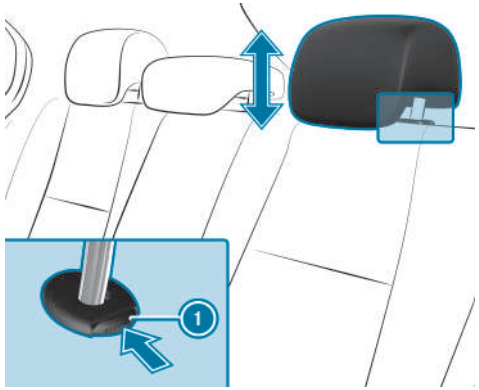

- Release the rear seat backrest and fold it forwards slightly (⟶ page 41).
- Pull the head restraint upwards as far as it will go.
- Push the release knob (1) in the direction indicated by the arrow and pull out the head restraint.

INSTALLING

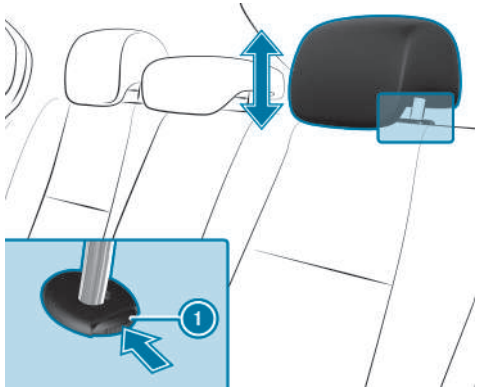

- Insert the head restraint so that the notches on the bar are on the left when viewed in the direction of travel.
- Push the head restraint down until it engages.
- Fold the rear seat backrest back until it engages.

Setting automatic seat adjustment

WARNING
Risk of becoming trapped during adjustment of the driver's seat after calling up a driver profile

Selecting a user profile may trigger an adjustment of the driver's seat to the position saved under the user profile. You or other vehicle occupants could be injured in the process.

- Make sure that when the position of driver's seat is being adjusted using the multimedia system, no people or body parts are in the seat's range of movement.

If there is a risk of someone becoming trapped, immediately stop the adjustment process by:

- a) Tapping the warning message on the central display.

or

- b) Pressing a position button of the memory function or a seat adjustment switch in the driver's door.

  The adjustment process is stopped.

Multimedia system:

Comfort » Seat » Automatic Seat Positioning

MANUALLY ADJUSTING DRIVER'S SEAT AND STEERING WHEEL POSITION TO BODY SIZE

The vehicle will calculate suitable driver's seat and steering wheel positions on the basis of the driver's body size and set them directly.

- **To set the unit of measurement:** select cm or ft/in.
- Set the size using the scale.
- Select Start Positioning.

  The driver's seat and steering wheel positions will be adjusted to the body size that has been set.

You can also configure these settings via the Mercedes-Benz user account for your user profile. By synchronizing the profiles in the vehicle and the Mercedes-Benz connect profiles, you can adopt these settings for your vehicle.
Further information about synchronizing user profiles (→ page 424).

If the driver's seat and steering wheel positions calculated by the vehicle are not practical or comfortable, they can be manually adapted at any time via the control buttons.
The outside mirrors are not set via this function. Instead, they have to be set manually via the operating switches.

Resetting the seat adjustments

Multimedia system:

Comfort » Seat

- Select Reset.
- Select for the desired seat.

  The settings for the selected seat will be reset.

Switching the seat heating on/off

WARNING
Risk of burns due to repeatedly switching on the seat heating

Repeatedly switching on the seat heating can cause the seat cushion and seat backrest padding to become very hot.

In particular, the health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries.

- Do not repeatedly switch on the seat heating.

To protect against overheating, the seat heating may be temporarily deactivated after it has been switched on repeatedly.


NOTE
Damage to the seats caused by objects or documents when the seat heating is switched on

When the seat heating is switched on, overheating may occur due to objects or documents placed on the seats, e.g. seat cushions or child seats. This could cause damage to the seat surface.

- Make sure that no objects or documents are on the seats when the seat heating is switched on.

Requirements

- The power supply is switched on.

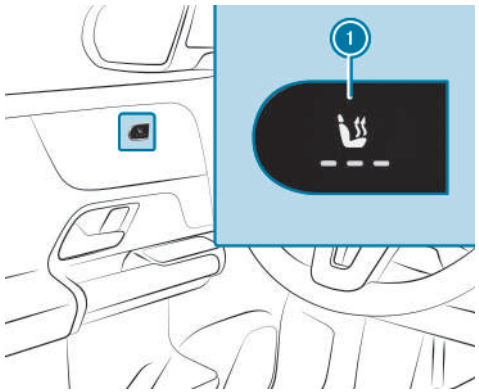

- Press button (1) repeatedly until the desired heating level is set.

  Depending on the heating level, up to three indicator lamps will light up. If all indicator lamps are off, the seat heating is switched off.

The seat heating will automatically switch down from the three heating levels after around 8, 10 and 20 minutes. For optimum seating comfort, the seat heating can remain switched on at reduced power after 20 minutes.


ⓘ The seat heating will be deactivated when the vehicle is in **ECO+** (⟶ page 261) climate mode and when you are using the range maximization function (⟶ page 282).

ⓘ When the outside temperature is low, the seat heating may switch on automatically to one of the three heating levels depending on the vehicle interior temperature and remain switched on for an extended time. This will be indicated by the respective indicator lamps. You can change the heating level manually at any time by pressing button (1), which will override the automatic seat heating function.

Switching the seat ventilation on/off

Requirements

- The power supply is switched on.

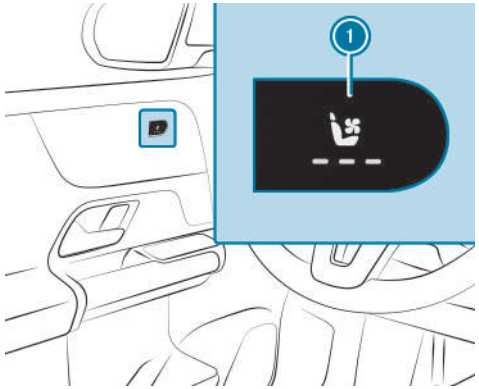

► Press button (1) repeatedly until the desired blower setting has been reached.

Depending on the blower setting, up to three indicator lamps will light up. If all indicator lamps are off, the seat ventilation is switched off.

Steering wheel

Adjusting the steering wheel manually

WARNING
Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

YOU COULD LOSE CONTROL OF THE VEHICLE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion

► Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.


WARNING
Risk of entrapment for children when adjusting the steering wheel

Children could injure themselves if they adjust the steering wheel.

► Never leave children unattended in the vehicle.

► When leaving the vehicle, always take the key with you and lock the vehicle.


UNLOCKING

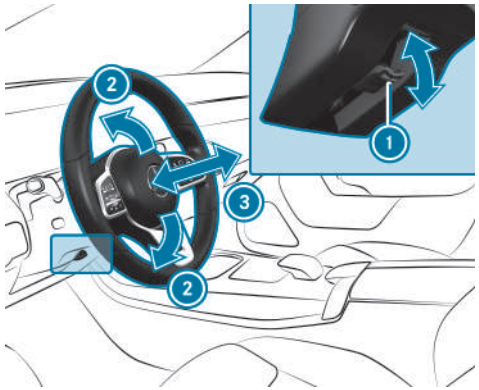

► Fold release lever (1) down as far as it will go.

► Adjust height (2) and distance (3) to the steering wheel.

LOCKING

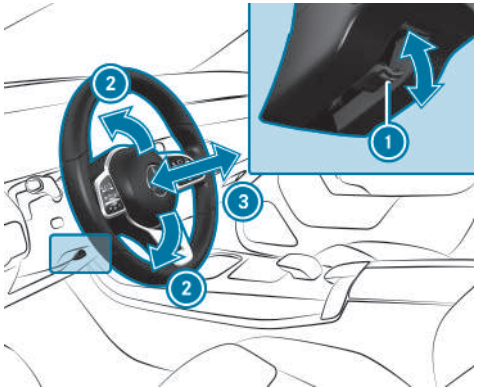


- Fold release lever (1) up as far as it will go.
- Check and make sure that the steering column is locked by moving the steering wheel.

Switching the steering wheel heater on/off

Depending on the vehicle version, the steering wheel heater can be switched on/off via a switch on the steering wheel.

Requirements

- The vehicle is switched on.

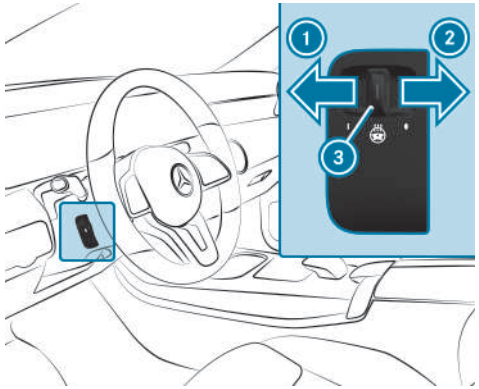

- **To switch on:** push the switch to position (1).
  If the indicator lamp (3) lights up, the steering wheel heater is switched on.
- **To switch off:** push the switch to position (2).

When you switch the vehicle off, the steering wheel heater will switch off.

Decoupling the steering wheel heater from the seat heating

Requirements:

- The power supply or the vehicle has been switched on.
- The steering wheel heater and the seat heating are linked.

Multimedia system:

Comfort » Seat » Heating Settings

The function is active by default and the steering wheel heater will automatically be activated and deactivated when the seat heating is switched on and off.

- Tap on Switch On Steering Wheel Heater.

  The steering wheel heater will be decoupled from the seat heating.

The steering wheel heater can also be deactivated via the MBUX voice assistant.

Easy entry and exit feature

Using the easy entry and exit feature

WARNING
Risk of accident when pulling away during the adjustment process of the easy entry and exit feature

You could lose control of the vehicle.

- Always wait until the adjustment process is complete before driving off.

WARNING
Risk of becoming trapped during adjustment of the easy entry and exit feature

You and other vehicle occupants could become trapped.

- Ensure that no-one has any body parts in the range of movement of the seat.

If there is a risk of becoming trapped by the driver's seat:

- Press the seat adjustment switch.
  The adjustment process will be stopped.

You can stop the adjustment process by pressing one of the memory function position switches.

WARNING
Risk of becoming trapped if children activate the easy entry and exit feature

Children could become trapped if they activate the easy entry and exit feature, particularly when unattended.

- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the key with you and lock the vehicle.

IF THE EASY ENTRY AND EXIT FEATURE IS ACTIVE, THE DRIVER'S SEAT WILL MOVE INTO AN IDEAL POSITION FOR ENTERING OR EXITING THE VEHICLE AND THE SEAT BACKREST WILL ADJUST TO A MORE UPRIGHT POSITION IN THE FOLLOWING SITUATIONS:

- You switch off the vehicle when the driver's door is open.
- You open the driver's door when the vehicle is switched off.

The driver's seat only moves forwards or backwards if it is not already in an ideal position for entering or exiting the vehicle.

The seat backrest will then move forwards only if it is not already at the front of the backrest adjustment range.

driver's seat and steering wheel to move into the correct position automatically (⟶ page 422).

THE DRIVER'S SEAT WILL MOVE BACK TO THE LAST DRIVE POSITION WHEN:

- You switch the vehicle on when the driver's door is closed.
- You close the driver's door when the vehicle is switched on.

THE LAST DRIVE POSITION WILL BE SAVED WHEN:

- If you switch off the vehicle.
- You call up the seat settings via the memory function.
- You save the seat settings via the memory function.

Setting the easy entry and exit feature

Requirements:

- The automatic seat adjustment has been activated (⟶ page 206).
- The power supply or the vehicle has been switched on.

Multimedia system:

Settings » Vehicle » Comfort » Easy Entry And Exit Feature

SETTING THE EASY ENTRY AND EXIT FEATURE

► Select Steering Wheel & Seat, Steering Wheel Only or Off.

ⓘ If you are using a custom user profile, this information will be used for the easy entry and exit feature. This will cause the

Memory function

Memory function

WARNING
Risk of an accident if the memory function is used while driving

If you use the memory function on the driver's side while driving, you could lose control of the vehicle as a result of the adjustments being made.

- Only use the memory function on the driver's side when the vehicle is stationary.

WARNING
Risk of entrapment when adjusting the seat with the memory function

When the memory function adjusts the seat, you and other vehicle occupants – particularly children – could become trapped.

- During the adjustment process of the memory function, make sure that no one has any body parts in the sweep of the seat.
- If someone becomes trapped, press a preset position button or seat adjustment switch immediately.

WARNING
Danger of entrapment when memory function is activated by children

When children activate the memory function, they can get trapped, especially if they are unsupervised.

- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the key with you and lock the vehicle.

You can use the memory function when the vehicle is switched off.
Seat adjustments for up to three people can be stored and called up using the memory function.

YOU CAN SAVE SETTINGS FOR THE FOLLOWING SYSTEMS:

- Seat
- Seat contour
- Outside mirrors

Operating the memory function

WARNING
Risk of an accident if the memory function is used while driving

If you use the memory function on the driver's side while driving, you could lose control of the vehicle as a result of the adjustments being made.

- Only use the memory function on the driver's side when the vehicle is stationary.

WARNING
Risk of entrapment when adjusting the seat with the memory function

When the memory function adjusts the seat, you and other vehicle occupants – particularly children – could become trapped.

- During the adjustment process of the memory function, make sure that no one has any body parts in the sweep of the seat.
- If someone becomes trapped, press a preset position button or seat adjustment switch immediately.


WARNING
Danger of entrapment when memory function is activated by children

When children activate the memory function, they can get trapped, especially if they are unsupervised.


- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the key with you and lock the vehicle.

You can use the memory function when the ignition is switched off.

STORING

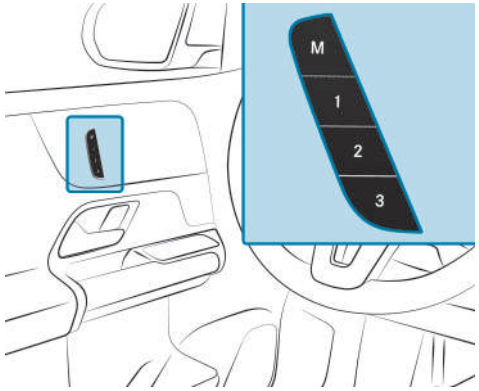

- Set the desired position for all systems.
- Briefly press memory button M and then press preset position 1, 2 or 3 within three seconds.

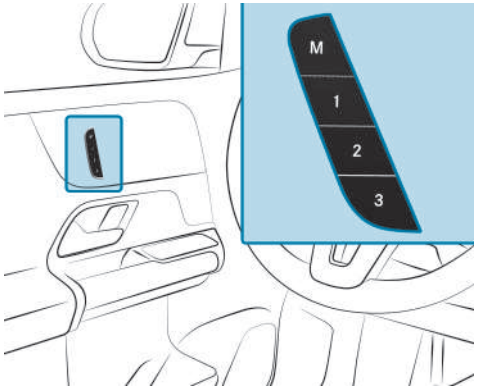

- **To call up:** press and briefly hold one of preset position buttons 1, 2 or 3.

  After releasing the button, all systems are moved into the stored position.

Stowage areas

Notes on loading the vehicle

Objects in the deployment area of an airbag may prevent the airbag from functioning correctly. Observe the notes on airbags. (⟶ page 133)

WARNING
Risk of injury from unsecured items in the vehicle

If objects, luggage or loads are not secured or not secured sufficiently, they could slip, tip over or be thrown around and thereby hit vehicle occupants.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- Always stow objects in such a way that they cannot be thrown around.
- Before the journey, secure objects, luggage or loads against slipping or tipping over.

WARNING
Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they may slide or be thrown around and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone receptacles will not always be able to retain all objects that they contain in the event of an accident.

There is a risk of injury, particularly in the event of braking maneuvers or abrupt changes in direction.

- Always stow objects such that they cannot be thrown around in such situations.
- Always make sure that objects do not protrude from stowage spaces, parcel nets or stowage nets.
- Close the lockable stowage spaces before starting a journey.
- Stow and secure objects that are heavy, hard, pointed, sharp-edged, fragile or too large in the cargo compartment.

WARNING
Risk of accident due to objects in the driver's and front-passenger footwell

Objects in the driver's and front-passenger footwell may impede pedal travel or block a depressed pedal.

This jeopardizes the operating- and road safety of the vehicle.

- Stow all objects in the vehicle securely so that they cannot get into the driver's or front-passenger footwell.
- Always ensure that the pedals have sufficient free space.
- Always install the floor mats securely and as prescribed.
- Do not use loose floor mats and do not place floor mats on top of one another.

Vehicles with automatic front passenger airbag deactivation: objects trapped under the front passenger seat may interfere with the function of the automatic front passenger airbag deactivation or damage the system. Therefore please observe the notes on the function of the automatic front passenger airbag deactivation. (⟶ page 122)

WARNING
- Risk of accident or injury when using the cup holder while the vehicle is moving

The cup holder cannot secure containers while the vehicle is moving.

If you use a cup holder while the vehicle is moving, the container may be flung around and liquids may be spilled. The vehicle occupants may come into contact with the liquid and if it is hot, they could be scalded. You could be distracted from traffic conditions and you may lose control of the vehicle.

- Only use the cup holder when the vehicle is stationary.
- Only use the cup holder for containers of the right size.
- Close the container, particularly if the liquid is hot.

NOTE
Damage to the cup holder

The cup holder can be damaged when folding back the rear armrest. When open, the cup holder can be damaged by body weight.

- The rear armrest can only be folded back when the cup holder is closed.
- Do not sit or support yourself on the cup holder when it is open.

NOTE
Damage to the vehicle caused by spilled liquids

If liquids are spilled in the vehicle, parts of the vehicle may be damaged.

- ► Always securely close containers containing liquids that you have brought with you.
- ► Clean the vehicle as soon as possible if liquids are spilled.
- ► If larger quantities of liquids are spilled, have the vehicle checked in a qualified specialist workshop.

NOTE
Damage to the rear armrest due to body weight

When folded out, the rear armrest can be damaged by body weight.

- ► Do not sit or support yourself on the rear seat armrest.

NOTE
Damage to the cargo floor caused by an unevenly distributed load or an abrupt application of load.

The cargo floor may be damaged by an unevenly distributed load or an abrupt application of load.

- ► Distribute the load evenly.
- ► Drive carefully when the vehicle is laden. Avoid abrupt starts, braking and steering as well as rapid cornering.

Leather is a natural product. It has natural surface characteristics, suchas differences in structure, marks caused by growth and injury or subtle color differences. These surface characteristics are particular to leather, and are not material defects. Leather is also subject to a natural aging process, which changes the surface characteristics.

THE HANDLING CHARACTERISTICS OF YOUR VEHICLE ARE DEPENDENT ON THE DISTRIBUTION OF THE LOAD WITHIN THE VEHICLE. YOU SHOULD BEAR THE FOLLOWING IN MIND WHEN LOADING THE VEHICLE:

- Never allow the payload including occupants to exceed the maximum permissible gross mass or the permissible axle loads for the vehicle. The values are specified on the vehicle identification plate on the vehicle's B-pillar.
- The load must not protrude above the upper edge of the seat backrests.
- Always use the partitioning net when carrying objects in the load compartment.
- Always place the load behind unoccupied seats if possible.
- Secure the load using the tie-down eyes and distribute the tension evenly. (⟶ page 44)

NOTES ON CARRYING A ROOF LOAD:

- Distribute the roof load and vehicle load evenly, and place heavy objects at the bottom. Also observe the notes on loading the vehicle.
- Drive with care. Avoid sudden starting, braking and steering maneuver or fast cornering.

- When carrying a roof load or when the vehicle is fully loaded or occupied, select drive program [E] or [C]. These are configured for good stability. (⟶ page 284)

ⓘ Further information on storage compartments and stowage facilities can be found in the Digital Operator's Manual.

Stowage spaces in the vehicle interior

OVERVIEW OF THE FRONT STORAGE COMPARTMENTS


⚠ **WARNING**
Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they may slide or be thrown around and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone receptacles will not always be able to retain all objects that they contain in the event of an accident.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ► Always stow objects such that they cannot be thrown around in such situations.
- ► Always make sure that objects do not protrude from stowage spaces, parcel nets or stowage nets.
- ► Close the lockable stowage spaces before starting a journey.
- ► Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk/cargo compartment.

Observe the information on loading the vehicle.

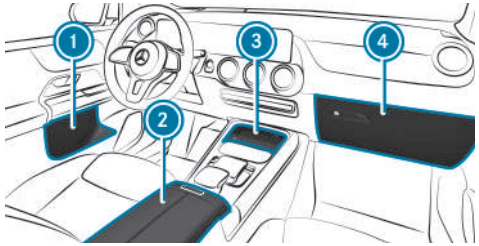

1. Stowage spaces in the doors
2. Storage compartment in the armrest with a multimedia and USB connection
3. Storage compartment in the front center console with a USB port
4. Glove box

LOCKING/UNLOCKING THE GLOVE BOX


WARNING
Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open storage spaces and mobile phone brackets cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- Always stow objects in such a way that they cannot be thrown around in such situations.
- Always make sure that objects do not protrude from storage spaces, parcel nets or storage nets.
- Close the lockable storage spaces before starting a journey.
- Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk.

Observe the notes on loading the vehicle.

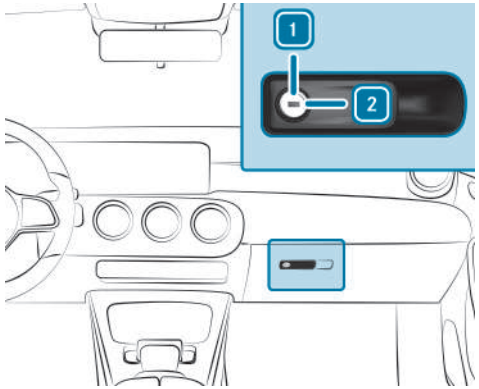

- Turn the emergency key a quarter turn clockwise 2 (to lock) or counter-clockwise 1 (to unlock).

Through-loading feature in the rear bench seat (EASY-PACK Quickfold)

FOLDING THE REAR SEAT BACKREST FORWARDS

WARNING
Risk of becoming trapped when adjusting the seats

When you adjust a seat, you may trap yourself or a vehicle occupant.

- When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.

WARNING
Risk of becoming trapped if the seat is not engaged

The seat does not engage when folded forwards. The seat can fold backwards unexpectedly, e.g. when accelerating, braking or in the event of an abrupt change of direction or an accident.

People in the seat's sweep can become trapped.

- ► If a seat is folded forwards, always fold it back before driving off.
- ► Make sure that the seat is engaged.

WARNING
Risk of injury due to seat backrests folded forwards

If the seat backrest of the rear seat is folded forwards, persons in the third row of seats may hit parts of the seat mechanism, especially in the event of an accident, braking maneuver or abrupt change of direction.


- ► If there is a person in the third row of seats, the rear seat in front of them must be folded back to the driving position before the journey begins.
- ► Persons in the third row of seats should not rest their legs on a seat backrest that has been folded forwards.

Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly. Particular attention must be paid to children.

If you no longer require the folded-down seat backrest as a loading area, fold the seat backrest back into place.


Requirements:

- The area into which the seat is folded is clear.
- The area under the rear bench seat is clear.
- The armrest on the second seat row is folded back and the cup holders are empty.

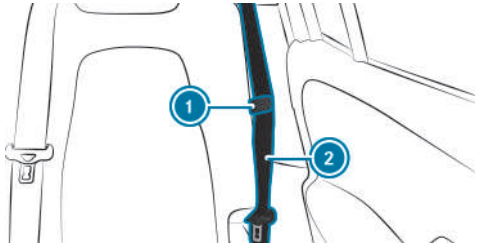


- ► Trap the seat belt strap on seat belt (2) in seat belt strap holder (1).

When the left-hand seat backrest is folded forwards, the center seat backrest will also be folded forwards.

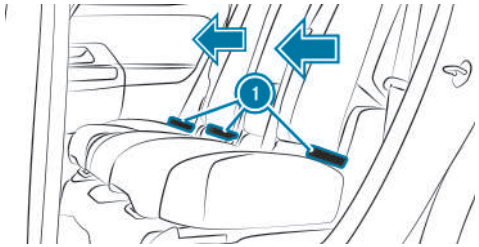

- ► Move the driver's seat forwards.
- ► If necessary, release the head restraints for the seat backrest and push them down as far as possible (⟶ page 204).

- **Left and right seat backrests:** pull one of release loops (1).
  The seat backrest will automatically fold forwards.

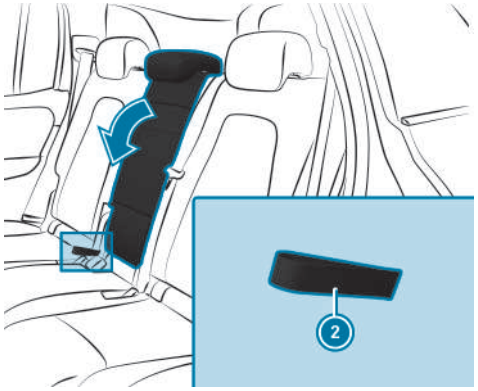

- **Center seat backrest:** pull release loop (2).
  The seat backrest will automatically fold forwards.

When the seat backrests on the second and third seat rows are folded forwards, you can push the rear bench seat on the second seat row back. This will then provide a continuous cargo compartment surface. Ensure that the area between the seat rows is clear.

FOLDING THE REAR SEAT BACKREST BACK

WARNING
Risk of becoming trapped when adjusting the seats

When you adjust a seat, you may trap yourself or a vehicle occupant.

- When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.

WARNING
Risk of accident if the rear bench seat, rear seat and seat backrest are not engaged

The rear bench seat, rear seat and seat backrest may fold forwards, even when you are driving.

- As a result, the vehicle occupant will be pushed into the seat belt with increased force. The seat belt will not be able to protect as intended and could cause additional injury.
- Objects or loads in the trunk or cargo compartment will not be restrained by the seat backrest.

- Make sure that the rear bench seat, the rear seat and the seat backrest are engaged before every trip.


If the rear seat backrest is not engaged and locked in place, the red lock verification indicator will be visible.

NOTE
Damage caused by trapping the seat belt when folding back the seat backrest

The seat belt could become trapped and thus damaged when the seat backrest is folded back.

► Make sure that the seat belt is not trapped when folding back the seat backrest.

If the left and center seat backrests have been folded forwards together, fold the left seat backrest back first.

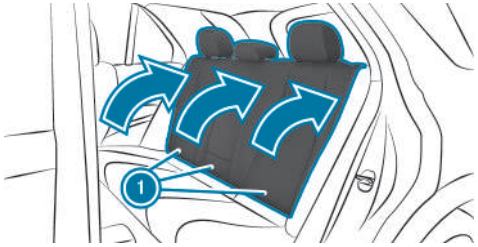

► Move the driver's or front passenger seat forwards, if necessary.

► Swivel seat backrest (1) back until it engages.
The seat backrest will remain in the cargo position.

► After the seat backrest has been folded back, check the position of the head restraint and set it to the correct position (⟶ page 204).

FOLDING THE SEAT BACKREST ON THE THIRD ROW OF SEATS FORWARDS

WARNING
Risk of becoming trapped when adjusting the seats

When you adjust a seat, you may trap yourself or a vehicle occupant.

► When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.

WARNING
Risk of an accident because the seat and seat backrest are not engaged

The seat and seat backrest can fold forwards.

THERE IS A RISK OF THE FOLLOWING, IN PARTICULAR:

- The vehicle occupant may be pressed against the seat belt. The seat belt cannot protect as intended and could cause additional injury.
- The seat backrest cannot restrain objects or goods in the cargo compartment.

ALWAYS ENSURE THAT THE SEAT AND SEAT BACKREST ARE ENGAGED, ESPECIALLY:

- Before passengers travel on a seat with the easy entry and exit feature.
- After the seat has been adjusted.
- After the easy entry and exit feature has been used.
- After the cargo compartment enlargement has been folded forwards.

Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly. Particular attention must be paid to children.

You can fold the backrests of the second row of seats forwards to get in or out.

WARNING
Risk of becoming trapped if the seat is not engaged

The seat does not engage when folded forwards. The seat can fold backwards unexpectedly, e.g. when accelerating, braking or in the event of an abrupt change of direction or an accident.


People in the seat's sweep can become trapped.

- ► If a seat is folded forwards, always fold it back before driving off.
- ► Make sure that the seat is engaged.

Requirements:

- The area into which the seat is folded is clear.
- The area under the third row of seats is clear.
- The cup holders in the third row of seats are empty.
- The cargo compartment cover has been removed.

If you no longer require the folded-down seat backrest as a load area, fold the backrest back into place.

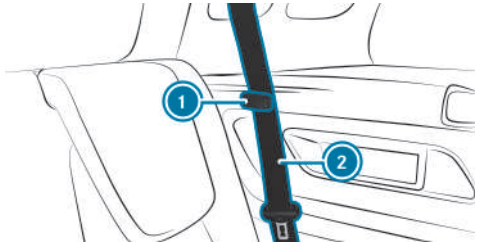


► Trap the seat belt strap on seat belt (2) in seat belt strap holder (1).

NOTE
Damage to the release loops due to the attachment of objects

The release loops of the seat backrests in the rear passenger compartment may be damaged due to the attachment of objects.

► Only attach objects to the tie-down eyes.

The release loops are located in the cargo compartment to the side of the bottom part of the seat backrests.

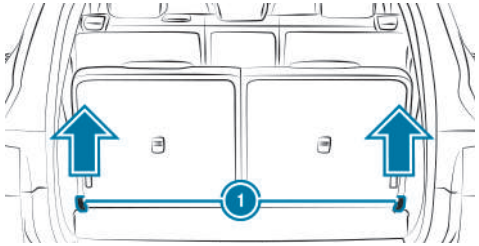

Release loops on the rear sides

► Move the second row of seats forwards and move the seat backrests into the cargo position (⟶ page 227).

- ► Release the head restraints on the third row of seats and push them down (⟶ page 204).
- ► Pull one of red release loops (1).
  The seat backrest will automatically fold forwards.
- ► Push the seat backrest down until it engages.

ⓘ When the seat backrests on the second and third rows of seats are folded forwards, you can push the rear bench seat on the second row of seats back. This will then provide a continuous cargo compartment surface. Ensure that the area between the rows of seats is clear.

FOLDING BACK THE SEAT BACKREST ON THE THIRD ROW OF SEATS

⚠ **WARNING**
Risk of becoming trapped when adjusting the seats

When you adjust a seat, you may trap yourself or a vehicle occupant.

- ► When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.

⚠ **WARNING**
Risk of accident if the rear bench seat, rear seat and seat backrest are not engaged

The rear bench seat, rear seat and seat backrest may fold forwards, even when you are driving.

- As a result, the vehicle occupant will be pushed into the seat belt with increased force. The seat belt will not be able to protect as intended and could cause additional injury.
- Objects or loads in the trunk or cargo compartment will not be restrained by the seat backrest.

- ► Make sure that the rear bench seat, the rear seat and the seat backrest are engaged before every trip.

NOTE
Damage caused by trapping the seat belt when folding back the seat backrest

The seat belt could become trapped and thus damaged when the seat backrest is folded back.

- ► Make sure that the seat belt is not trapped when folding back the seat backrest.


Requirements:

- The seats and the seat backrests on the second row of seats have been moved forwards sufficiently.

NOTE
Damage to the release loops due to the attachment of objects

The release loops of the seat backrests in the rear passenger compartment may be damaged due to the attachment of objects.

- ► Only attach objects to the tie-down eyes.

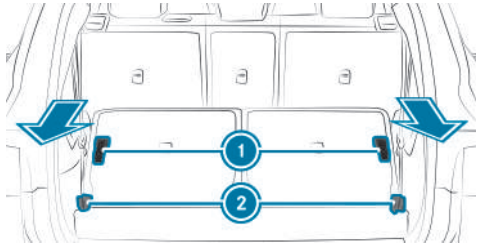

Loops on the rear sides

- ► Briefly pull one of red release loops (2).
- ► **To fold the left or right seat backrest back:** pull one of black release loops (1).

ADJUSTING THE ANGLE OF THE REAR SEAT BACKRESTS (CARGO POSITION)

WARNING
Risk of accident and injury if the rear bench seat and seat backrest are not engaged

The rear bench seat and seat backrest can fold forward, even when the vehicle is in motion.

- As a result, the vehicle occupant is pressed against the seat belt. The seat belt cannot provide the intended protection and could cause additional injury to the vehicle occupant.
- A child restraint system is no longer properly supported or correctly positioned and can no longer fulfill its function as intended.
- Objects or cargo in the trunk or cargo compartment cannot be held back by the seat backrest.


- ► Prior to every journey, make sure that the rear bench seat and the seat backrest are engaged.

In vehicles with longitudinally adjustable rear seats, you can also adjust the angle of the rear seat backrests. There are several possible detent positions.

NOTE
Damage to the release loops due to the attachment of objects

The release loops of the seat backrests in the rear passenger compartment may be damaged due to the attachment of objects.

- ► Only attach objects to the tie-down eyes.

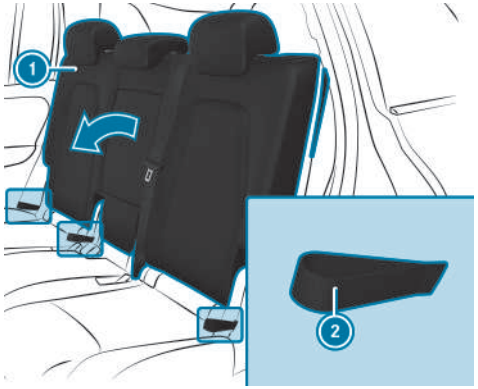

- Pull one of release loops (2) forwards.
  Corresponding seat backrest (1) will be unlocked.
- Move seat backrest (1) to the desired angle.
- Let go of release loop (2).

Cargo compartment cover

NOTES ON THE CARGO COMPARTMENT COVER

WARNING
Risk of injury or death due to poorly secured objects

The cargo compartment cover alone cannot secure or restrain heavy objects, items of luggage or heavy loads.

You could be hit by an unsecured load, particularly in the event of abrupt changes in direction, sudden braking or an accident.

- Always stow objects in such a way that they cannot be thrown around.
- Secure objects, luggage or loads against slipping or tipping over, e.g. by using tie downs, even if you are using the cargo compartment cover.

NOTE
Damage to the cargo compartment cover when loading the vehicle

The cargo compartment cover may be damaged when loading the vehicle.

- Do not place any objects on the cargo compartment cover.

Vehicles with a third row of seats: when the third row of seats is in use, the cargo compartment cover on the seat backrests on the second row of seats will be removed.

ROLLING THE CARGO COMPARTMENT COVER IN/OUT

WARNING
Risk of injury or death due to poorly secured objects

The cargo compartment cover alone cannot secure or restrain heavy objects, items of luggage or heavy loads.


You could be hit by an unsecured load, particularly in the event of abrupt changes in direction, sudden braking or an accident.

- Always stow objects in such a way that they cannot be thrown around.
- Secure objects, luggage or loads against slipping or tipping over, e.g. by using tie downs, even if you are using the cargo compartment cover.

NOTE
Damage to the cargo compartment cover when loading the vehicle

The cargo compartment cover may be damaged when loading the vehicle.

- Do not place any objects on the cargo compartment cover.

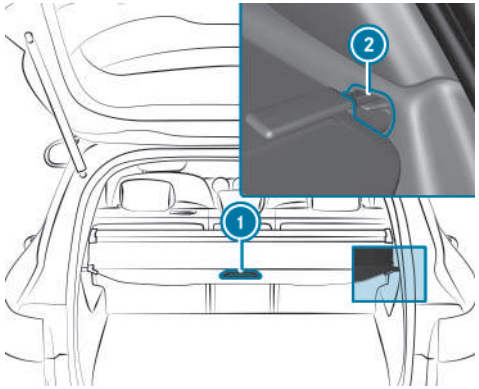

- **To extend:** pull the cargo compartment cover back using the grab handle (1) and hook it into the holders (2) on the left and right.

RETRACTING


- Release the cargo compartment cover from the holders (2) on the left and right.
- Guide the cargo compartment cover forwards using the grab handle (1) until it is fully retracted.

INSTALLING/REMOVING THE CARGO COMPARTMENT COVER

Requirements:


- The cargo compartment cover is rolled up.

REMOVING THE CARGO COMPARTMENT COVER

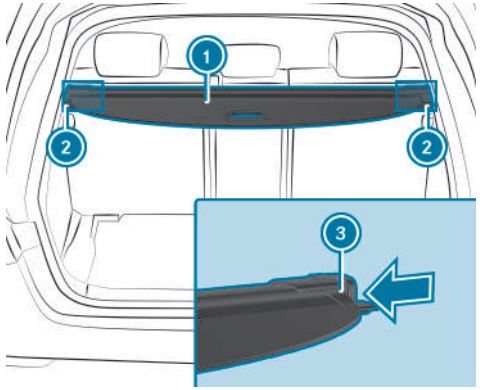

- Press in the end cap of cargo compartment cover (1) on the right- and left-hand side in the direction of the arrow using the handle on lower edge (3).
- Push cargo compartment cover (1) into anchorage (2) on the opposite side.
- Take cargo compartment cover (1) out by pulling it upwards.


INSTALLING THE CARGO COMPARTMENT COVER

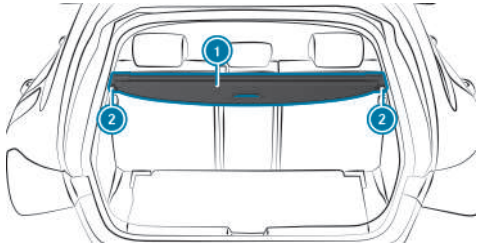

- Place cargo compartment cover (1) in anchorage (2) on the right- or left-hand side.
- Press in the end cap of cargo compartment cover (1) on the opposite side and insert cargo compartment cover (1) into the other anchorage (2).

Overview of the tie-down eyes

Observe the notes on loading the vehicle (→ page 217).

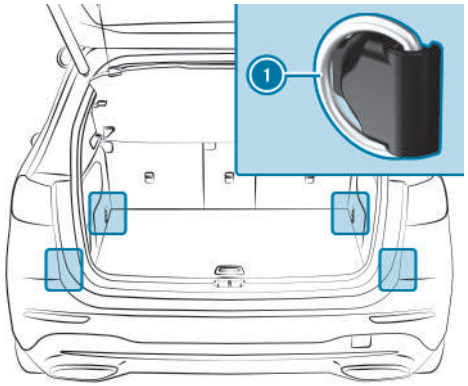

(1) Tie-down eyes (vehicles with through-loading feature in the rear bench seat)

Overview of bag hooks

WARNING
Risk of injury when using bag hooks with heavy objects


The bag hooks cannot restrain heavy objects or items of luggage.

Objects or items of luggage may be flung around and hit vehicle occupants.

- Only hang light objects on the bag hooks.
- Never hang hard, sharp-edged or fragile objects on the bag hooks.

Observe the notes on loading the vehicle (⟶ page 217).


Subject the bag hooks to a maximum load of 6.6 lbs (3 kg) and do not attach any goods to them.

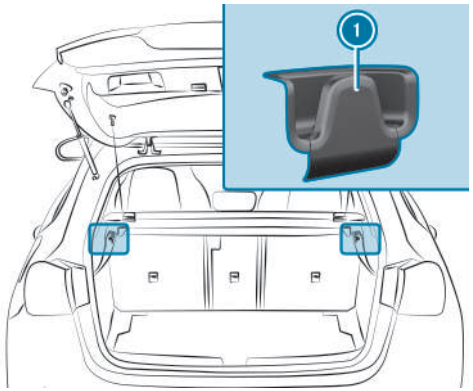

(1) Bag hook

Overview of clothes hooks on the tailgate

Observe the notes on loading the vehicle (⟶ page 217).

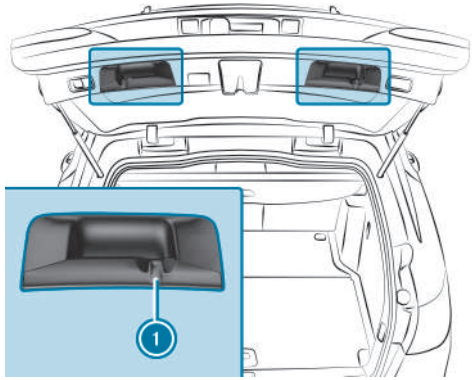

(1) Clothes hook

The clothes hooks are not suitable for hanging heavy objects as this can cause the tailgate to lower automatically. Use the clothes hooks only for light objects such as jackets.


Opening or closing the stowage space under the cargo floor

WARNING
Risk of injury due to an open cargo compartment floor

If you drive with the cargo compartment floor open, objects could be flung around and hit vehicle occupants as a result. There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- Always close the cargo compartment floor before a journey.

OPENING

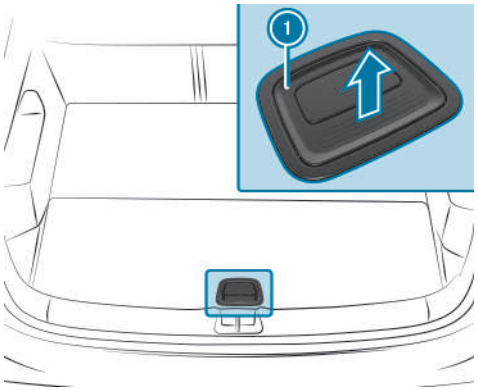

- Pull handle (1) upwards.
- Lift the cargo floor up using handle (1).

CLOSING

- Fold the cargo floor down and then press handle (1) down until it engages.

Attaching a roof luggage rack

WARNING
Risk of accident due to exceeding the maximum roof load

The vehicle center of gravity and the usual driving characteristics as well as the steering and braking characteristics alter.

If you exceed the maximum roof load, the driving characteristics, as well as steering and braking, will be greatly impaired.

- Never exceed the maximum roof load and adjust your driving style.

Vehicle-specific weight information can be found on the vehicle identification plate.

NOTE
Vehicle damage due to failure to observe the maximum permissible clearance height

If the vehicle height exceeds the maximum permissible clearance height, the roof and other vehicle parts may be damaged.

- Please observe the maximum clearance height indicated.
- If the vehicle exceeds the permissible clearance height, do not drive in.
- Take the modified vehicle height into account in the case of roof superstructures or other carrier systems.

NOTE
Damage to the panorama roof with power tilt/sliding panel due to non-approved roof luggage racks

The panorama roof with power tilt/sliding panel may be damaged by the roof luggage rack if you attempt to open it when using a roof luggage rack not tested and approved for Mercedes-Benz.

- ► When a roof luggage rack is installed, open the panorama roof with power tilt/sliding panel only if this has been tested and approved for Mercedes-Benz.

The panorama roof with power tilt/sliding panel may be raised to allow ventilation of the vehicle interior.

NOTES ON DRIVING WITH ROOF LOAD

- Distribute the roof load and vehicle load evenly, and place heavy objects at the bottom. Also observe the notes on loading the vehicle (⟶ page 217) .
- Drive carefully, avoiding abrupt starting, braking and steering as well as fast cornering.
- When transporting a roof load and with a fully laden or fully occupied vehicle, select one of the drive programs E and C. These are configured for good stability (⟶ page 284).

► Secure the roof luggage rack to the roof railing.

► Observe the manufacturer's installation instructions.

Cup holder

Installing the cup holder in or removing it from the center console

WARNING
- Risk of accident or injury when using the cup holder while the vehicle is moving


The cup holder cannot secure containers while the vehicle is moving.

If you use a cup holder while the vehicle is moving, the container may be flung around and liquids may be spilled. The vehicle occupants may come into contact with the liquid and if it is hot, they could be scalded. You could be distracted from traffic conditions and you may lose control of the vehicle.

- ► Only use the cup holder when the vehicle is stationary.
- ► Only use the cup holder for containers of the right size.
- ► Close the container, particularly if the liquid is hot.

DEPENDING ON THE VEHICLE'S EQUIPMENT, THE FOLLOWING CUP HOLDERS WILL BE AVAILABLE:


- In the front stowage compartment of the center console
- In the armrests of the rear seats
- Between the seats on the third row of seats

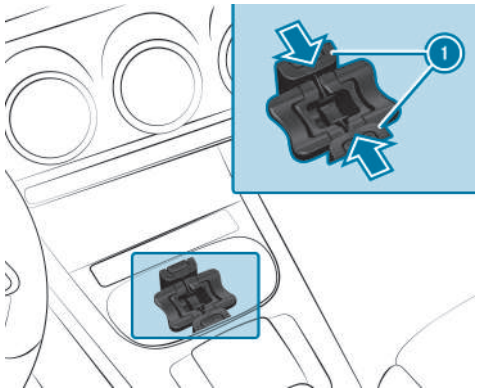

Cup holder in the stowage compartment without cover

- ► **To remove:** slide snap-in brackets (1) of the cup holder inwards until they are unlocked.
- ► Pull the cup holder up and out of the stowage compartment.

The cup holder and the rubber mat beneath it can be removed for cleaning, e.g. with clean, lukewarm water.

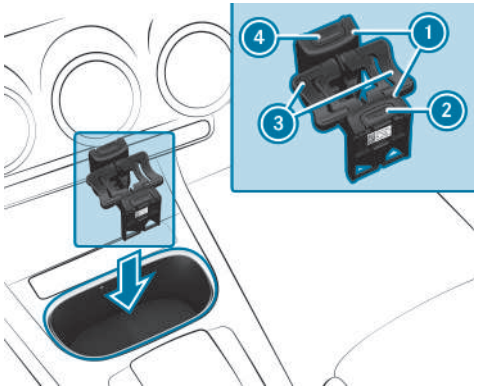

Cup holder in the stowage compartment without cover

- **To install:** if necessary, open the stowage compartment cover and insert the cup holder, as shown, into the stowage compartment with the label facing the vehicle interior.
- Slide the cup holder onto the bars in the stowage compartment.
- Slide snap-in brackets (1) outwards until they engage.
- Press button (2) and/or (4).
  Wings (3) will fold upwards.

ⓘ The cup holder wings can be folded downwards and locked. The cup holder's holding function will then not be available.

Opening or closing the cup holders in the rear armrest

WARNING
- Risk of accident or injury when using the cup holder while the vehicle is moving

The cup holder cannot secure containers while the vehicle is moving.

If you use a cup holder while the vehicle is moving, the container may be flung around and liquids may be spilled. The vehicle occupants may come into contact with the liquid and if it is hot, they could be scalded. You could be distracted from traffic conditions and you may lose control of the vehicle.

- Only use the cup holder when the vehicle is stationary.
- Only use the cup holder for containers of the right size.
- Close the container, particularly if the liquid is hot.

NOTE
Damage to the rear armrest due to body weight

When folded out, the rear armrest can be damaged by body weight.


- Do not sit or support yourself on the rear seat armrest.

NOTE
Damage to the cup holder

The cup holder can be damaged when folding back the rear armrest. When open, the cup holder can be damaged by body weight.

- The rear armrest can only be folded back when the cup holder is closed.
- Do not sit or support yourself on the cup holder when it is open.

Depending on its equipment, your vehicle will have a rear armrest with a cup holder.

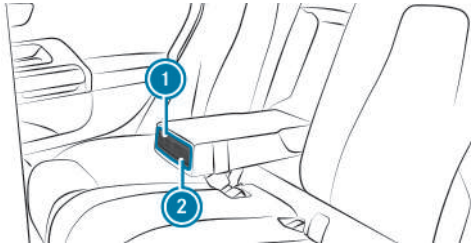

- **To open:** press cup holder 1 or 2.
  Cup holder 1 or 2 will extend automatically.
- **To close:** push cup holder 1 or 2 back until it engages.

Sockets


Using the 12 V socket

Requirements:

- Only devices up to a maximum of 180 W (15 A) are permissible.

DEPENDING ON THE VEHICLE EQUIPMENT, THE VEHICLE HAS THE FOLLOWING 12 V SOCKETS:

- In the storage compartment in the front center console
- In the storage compartment under the front armrest
- In the cargo compartment

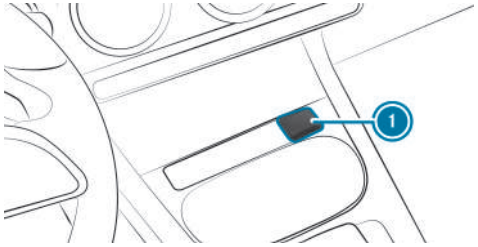

Example: 12 V socket in the storage compartment in the front center console

► Fold up cover (1) of the socket.

► Insert the plug of the device.

12 V socket in the storage compartment with cover: if you have connected a device to the 12 V socket, leave the cover of the storage compartment open.

Using the 115 V socket in the rear passenger compartment

⚠ **DANGER**
Risk of fatal injuries due to a damaged connecting cable or a damaged socket

You could receive an electric shock if the connecting cable or the 115 V power socket is pulled out of the trim or is damaged or wet.

► Use only connecting cables that are dry and free of damage.

► When the vehicle is switched off, make sure that the 115 V power socket is dry.

► Immediately have the 115 V power socket checked or replaced at a qualified specialized workshop if it is damaged or has been pulled out of the trim.

► Never plug the connecting cable into a 115 V power socket that is damaged or has been pulled out of the trim.

DANGER
Risk of death due to using the socket incorrectly

IN PARTICULAR, YOU COULD RECEIVE AN ELECTRIC SHOCK:

- If you touch the inside of the socket
- If you insert unsuitable devices or objects into the socket

► Do not touch the inside of the socket.


► Only connect suitable devices to the socket.

Make sure that no liquids get into the 115 V socket.

When the 115 V socket is not in use, keep the socket flap closed.

Requirements

- The device is equipped with a suitable plug which conforms to the standards specific to the country you are in.
- A device up to a maximum of 150 W (1.3 A) is used.
- Do not use multiple socket outlets.

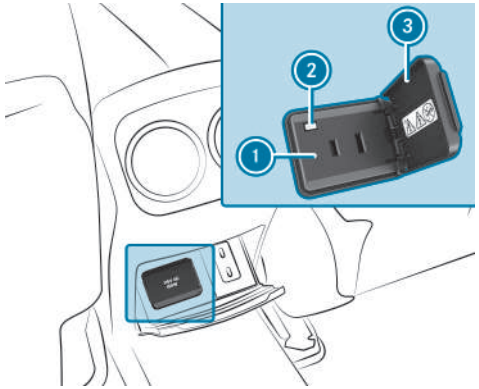

► Open socket flap (3).

► Insert the plug of the device into 115 V socket (1).


When the on-board electrical system voltage is sufficient, indicator lamp (2) lights up.

Overview of USB ports


DEPENDING ON THE VEHICLE EQUIPMENT, THE VEHICLE HAS THE FOLLOWING USB PORTS:

- In the stowage compartment of the cockpit armrest (⟶ page 45)
- In the front center console next to the mobile phone stowage compartment
- In the rear center console
- Vehicles with three seat rows: in the side stowage compartment of the cargo compartment

Depending on the vehicle equipment, the design of the stowage compartment and the number of USB ports in the rear center console may vary.

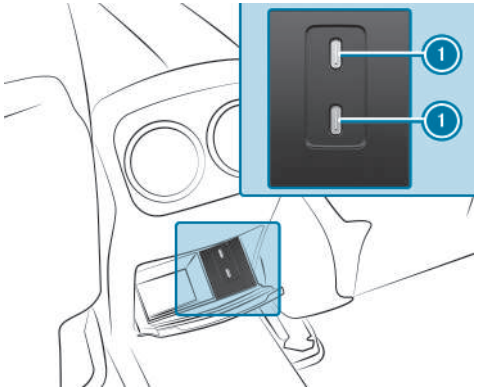

Example: USB ports in the rear center console

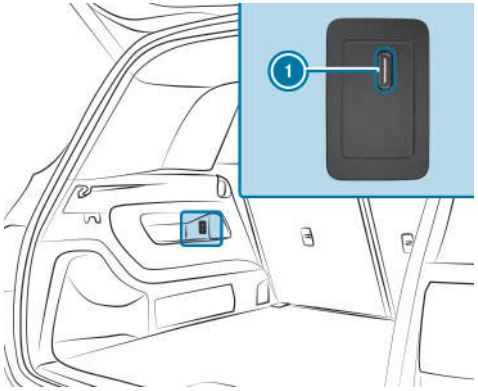

USB ports in the cargo compartment of vehicles with three seat rows

When the vehicle is switched on, you can charge a USB device, such as a mobile phone, at USB ports (1) using a suitable charging cable.

Charging a mobile phone wirelessly

WARNING
Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they may slide or be thrown around and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone receptacles will not always be able to retain all objects that they contain in the event of an accident.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.


- ► Always stow objects such that they cannot be thrown around in such situations.
- ► Always make sure that objects do not protrude from stowage spaces, parcel nets or stowage nets.
- ► Close the lockable stowage spaces before starting a journey.
- ► Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk/cargo compartment.

Observe the information on loading the vehicle.

Requirements:

- The mobile phone is suitable for wireless charging.

A list of compatible mobile phones can be found at: https://www.mercedes-benz-mobile.com.

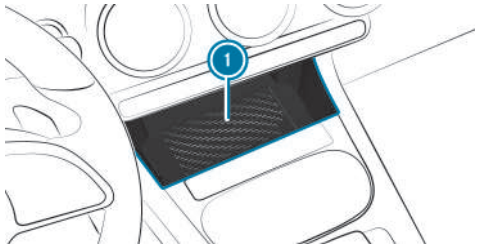


- ► Place the mobile phone as close to the center of the marked surface on mat (1) as possible with the display facing up.

  When a message is shown in the multimedia system, the mobile phone is being charged.

  Malfunctions during the charging process are shown in the central display.

ⓘ The mat can be removed for cleaning, e.g. using clean, lukewarm water.

STORAGE COMPARTMENT WITHOUT COVER
Make sure the mobile phone is properly stored and secured to prevent it from falling out while you are driving.

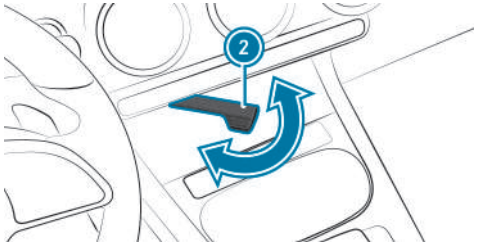

- **To secure the mobile phone:** swing lever (2) out.


Installing/removing the floor mats

WARNING
Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This will jeopardize the operating- and road safety of the vehicle.

- Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- Make sure that there is always sufficient clearance for the pedals.
- Always install the floor mats securely and as prescribed.
- Do not use loose floor mats and do not place floor mats on top of one another.

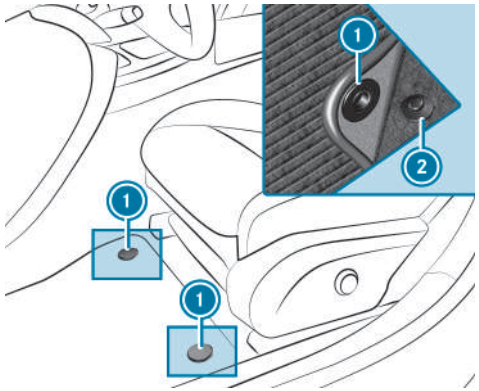

- **To install:** slide the corresponding seat backwards and lay the floor mat in the footwell.
- Press studs (1) onto holders (2).
- Adjust the corresponding seat.
- **To remove:** slide the corresponding seat backwards and pull the floor mat off holders (2).
- Remove the floor mat.

Back to contents

Light and visibility

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Exterior lighting

Interior lighting

Windshield wiper and windshield washer system

Mirrors


Exterior lighting

Information about lighting systems and your responsibility

The various lighting systems of the vehicle are only aids. The driver of the vehicle is responsible for correct vehicle illumination in accordance with the prevailing light and visibility conditions, legal requirements and traffic situation.

Light switch

OPERATING THE LIGHT SWITCH

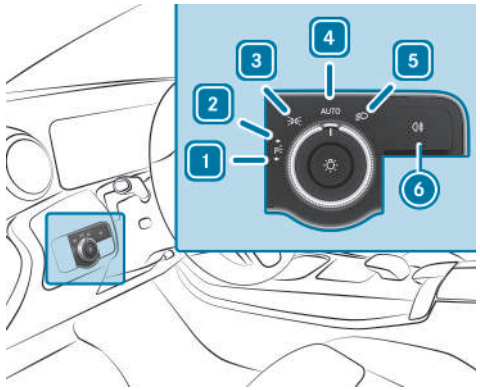

1 Left-hand parking lights
2 Right-hand parking lights
3 Standing lights and license plate lamp
4 AUTO Automatic driving lights (preferred light switch position)
5 Low beam/high beam
6 Activates or deactivates the rear fog light.

When low beam is activated, the indicator lamp for the standing lights will be deactivated and replaced by the low-beam indicator lamp.

- Always park your vehicle safely using sufficient lighting, in accordance with the relevant legal stipulations.

NOTE
Battery discharging by operating the parking lamps

Do not have the parking lamps switched on over a period of several hours.

If the battery is insufficiently charged, the standing lights or parking lights will be switched off automatically to facilitate the next drive system start.

THE EXTERIOR LIGHTING (EXCEPT STANDING AND PARKING LIGHTS) WILL SWITCH OFF AUTOMATICALLY WHEN THE DRIVER'S DOOR IS OPENED.

- Observe the notes on locator lighting (→ page 248).

AUTOMATIC DRIVING LIGHTS FUNCTION
When the vehicle is switched on, the standing lights, low beam and daytime running lights will be switched on automatically depending on the ambient light.

WARNING
Risk of accident when the low beam is switched off in poor visibility

When the light switch is set to AUTO, the low beam may not be switched on automatically if there is fog, snow or other causes of poor visibility such as spray.

► In such cases, turn the light switch to ≡D.

The automatic driving lights are only an aid. You are responsible for the vehicle lighting.

SWITCHING THE REAR FOG LIGHT ON/OFF


Requirements

- The light switch is in the ≡D or AUTO position.

► Press button 0≠.

Please observe the country-specific laws on the use of rear fog lamps.

Operating the combination switch for the light

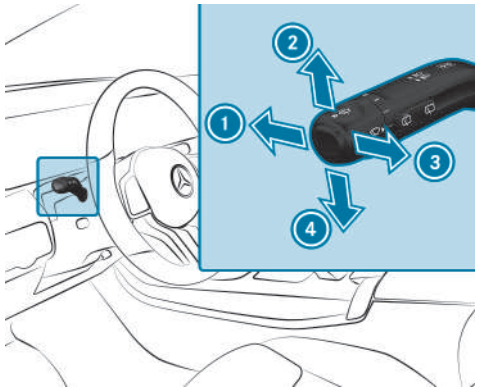

1 High beam
2 Turn signal light, right
3 Headlamp flashing
4 Turn signal light, left

► Use the combination switch to select the desired function.

SWITCHING ON THE HIGH BEAM

► Turn the light switch to position ≡D or AUTO.

► Push the combination switch in the direction indicated by the arrow 1.

When the high beam is activated, the indicator lamp for the low beam ≡D is deactivated and replaced by the indicator lamp for the high beam ≡D.

SWITCHING OFF THE HIGH BEAM

► Push the combination switch in the direction indicated by arrow 1 or pull in the direction indicated by arrow 3.

HEADLAMP FLASHING

► Pull the combination switch in the direction indicated by the arrow 3.


TURN SIGNAL LIGHT

- **To indicate briefly:** push the combination switch briefly as far as the pressure point in the direction indicated by arrow (2) or (4).

  The corresponding turn signal light flashes three times.

- **To indicate continuously:** push the combination switch beyond the pressure point in the direction indicated by arrow (2) or (4).

Activating/deactivating the hazard warning lights

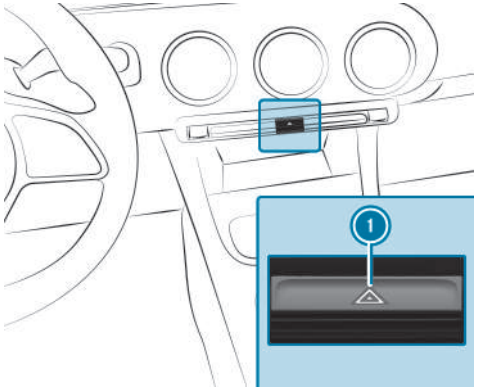

- Press the button (1).

IN THE FOLLOWING SITUATIONS, THE HAZARD WARNING LIGHTS WILL SWITCH ON AUTOMATICALLY:

- The airbag has been deployed
- An emergency stop has been initiated (⟶ page 345)

Adaptive Highbeam Assist

ADAPTIVE HIGHBEAM ASSIST FUNCTION

WARNING
Risk of accident despite Adaptive Highbeam Assist

ADAPTIVE HIGHBEAM ASSIST DOES NOT REACT TO:

- Road users without lights, e.g. pedestrians
- Road users with poor lighting, e.g. cyclists
- Road users whose lighting is obstructed, e.g. by a barrier

On very rare occasions, Adaptive Highbeam Assist may fail to recognize other road users with their own lighting, or may recognize them too late.

In these, or in similar situations, the automatic high beam will not be deactivated or will be activated despite the presence of other road users.

- Always observe the road and traffic conditions carefully and switch off the high beam in good time.


Adaptive Highbeam Assist cannot take into account road, weather or traffic conditions.

DETECTION MAY BE RESTRICTED IN THE FOLLOWING CASES:

- In poor visibility (e.g. fog, heavy rain or snow)
- If there is dirt on the sensors or the sensors are obscured

Adaptive Highbeam Assist serves solely as an aid. The responsibility for correctly adapting the vehicle's lighting to the prevailing light, visibility and traffic conditions lies solely with the driver.

ⓘ Adaptive Highbeam Assist is a Digital Extra (⟶ page 89).

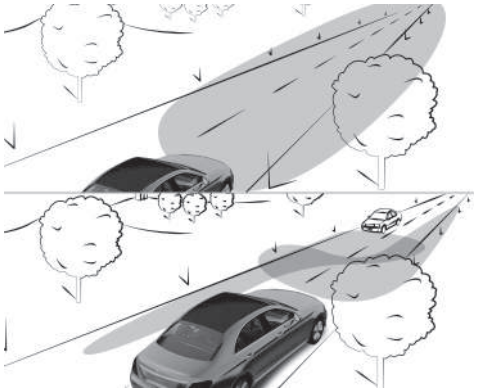

ADAPTIVE HIGHBEAM ASSIST AUTOMATICALLY SWITCHES BETWEEN THE FOLLOWING TYPES OF LIGHT:

- Low beam
- High beam

AT SPEEDS ABOVE 19 MPH (30 KM/H):

- If no other road users are detected, the high beam will switch on automatically.

THE HIGH BEAM WILL SWITCH OFF AUTOMATICALLY IN THE FOLLOWING CASES:

- At speeds below 16 mph (25 km/h)
- If other road users are detected
- If street lighting is adequate

ⓘ The system's optical sensor is located behind the windshield near the overhead control panel.

SWITCHING ADAPTIVE HIGHBEAM ASSIST ON/OFF

⚠ **WARNING**
Risk of accident despite Adaptive Highbeam Assist

ADAPTIVE HIGHBEAM ASSIST DOES NOT REACT TO:

- Road users without lights, e.g. pedestrians
- Road users with poor lighting, e.g. cyclists
- Road users whose lighting is obstructed, e.g. by a barrier

On very rare occasions, Adaptive Highbeam Assist may fail to recognize other road users with their own lighting, or may recognize them too late.

In these, or in similar situations, the automatic high beam will not be deactivated or will be activated despite the presence of other road users.

► Always observe the road and traffic conditions carefully and switch off the high beam in good time.

SWITCHING ON

► Turn the light switch to the AUTO position.

- Switch on high beam using the combination switch.

  If Adaptive Highbeam Assist is activated, the  indicator lamp will light up on the driver's display.

SWITCHING OFF

- Switch off high beam using the combination switch.

Setting the exterior lighting switch-off delay time

Multimedia system:

Settings » Light » Interior/Exterior Lighting » Exterior Lighting Switch-off Delay

- Set a switch-off delay time.

  After parking and locking the vehicle, the exterior lighting will be activated for the set time.

Activating/deactivating locator lighting

Multimedia system:

Settings » Light » Interior/Exterior Lighting


- Activate or deactivate Locator Lighting.

The exterior lighting will light up for 40 seconds after the vehicle is unlocked or the driver's door is opened when the vehicle is not locked. When you start the vehicle, the locator lighting will be deactivated and the automatic driving lights activated.

Interior lighting

Adjusting the interior lighting


FRONT OVERHEAD CONTROL PANEL

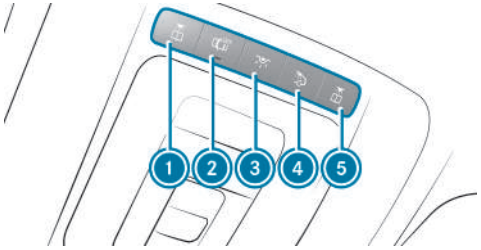

1. Front left reading lamp
2. Automatic interior lighting control
3. Front interior lighting
4. Rear interior lighting
5. Front right reading lamp

► **To switch on or off:** press button 1 – 5 accordingly.

OPERATING UNIT INSIDE THE GRAB HANDLE (REAR PASSENGER COMPARTMENT)

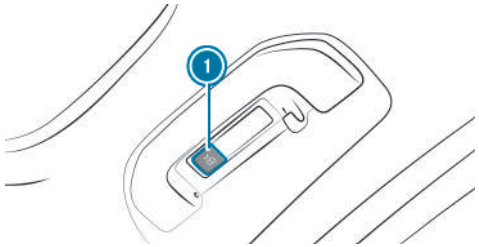

1. Rear reading lamp

► **To switch on or off:** press the 1 button.

Adjusting the ambient lighting

Multimedia system:

Comfort Ambient Light

SETTING THE COLOR

► Select Color.

► Select Monochrome or Multi-color .

► Set the desired color or color scheme.

ADJUSTING THE BRIGHTNESS

► Select Brightness.

- Adjust the brightness.

Depending on the ambient light, the ambient lighting will automatically switch between day and night mode.

ACTIVATING THE BRIGHTNESS FOR ZONES

- Select Brightness.
- Switch off Link Zones .

  The Direct, Indirect and Accents zones can be set separately.

ACTIVATING EFFECTS

- Select Effects.
- Activate the desired effect.

Different effects will be available depending on the vehicle equipment.

MULTI-COLOR ANIMATION

- The set color combination will change at predefined intervals.

CLIMATE

- If changes are made to the temperature setting in the vehicle, the color of the ambient lighting will change briefly.

GREETING

- When you get into the vehicle, a special color animation will play.

CHARGING ANIMATION

- The ambient lighting provides visual feedback on the different states of charge when the vehicle is connected to or disconnected from the charging station.

Switching the interior lighting switch-off delay time on/off

Multimedia system:


Settings » Light » Interior/Exterior Lighting » Interior Lighting Switch-off Delay

- Activate or deactivate Interior Lighting Switch-off Delay.

  If this function is active, the interior lighting will be switched on for a short time after the end of the journey.

Windshield wiper and windshield washer system

Switching the windshield wipers on/off

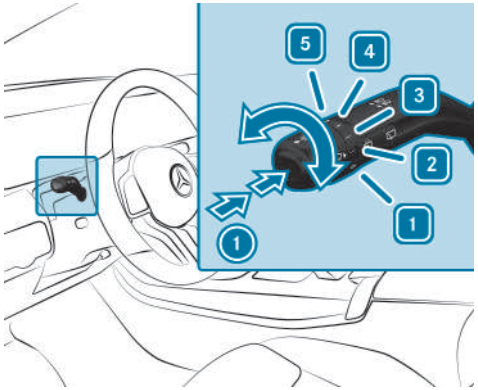


1 0 Windshield wipers off
2 ••• Automatic wiping, normal
3 •••• Automatic wiping, frequent
4 — Continuous wiping, slow
5 = Continuous wiping, fast

- Turn the combination switch to the corresponding position 1 - 5.
- **Single wipe:** press button (1) as far as the pressure point.
- **Wiping with washer fluid:** press button (1) beyond the pressure point.

ⓘ Observe the notes on washing the vehicle in a car wash (→ page 32).

Switching the rear window wiper on/off

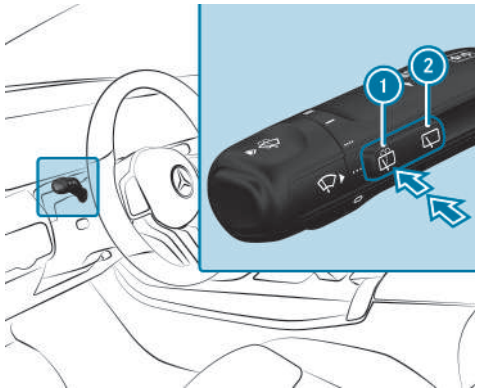

(1) Single wipe/washing
(2) Intermittent wiping

- **Single wipe:** press button (1) as far as the point of resistance.
- **Wiping with washer fluid:** press button (1) beyond the point of resistance.

- **Switching intermittent wiping on/off:** press button (2).

  The [symbol] symbol will appear on the driver's display when the rear window wiper is switched on.

Replacing the windshield wiper blades

WARNING
Risk of becoming trapped if the windshield wipers are switched on while wiper blades are being replaced

If the windshield wipers begin to move while you are changing the wiper blades, you can be trapped by the wiper arm.

- Always switch off the windshield wipers and vehicle before changing the wiper blades.

MOVING THE WIPER ARMS INTO THE REPLACEMENT POSITION


- Switch the vehicle on and then off again immediately.
- Within around 15 seconds, press and hold the [button] button on the combination switch for approximately three seconds (⟶ page 251).

  The wiper arms will move into the replacement position.

Check the condition of the wiper blades regularly and replace them in the event of visible damage or ongoing smearing.

- Observe the information about the service indicator.

SERVICE INDICATOR

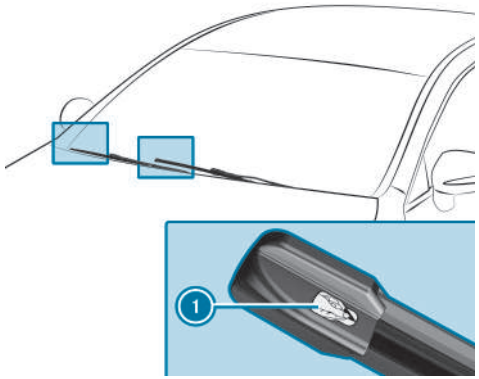

- Remove protective film (1) from the service indicators on the tips of the newly installed wiper blades.

When the color of the service indicator changes from black to yellow, replace the wiper blades.

The time it takes for the color to change will vary depending on the usage conditions.


Replacing the rear window wiper blade

WARNING
Risk of becoming trapped if the windshield wipers are switched on while wiper blades are being replaced

If the windshield wipers begin to move while you are changing the wiper blades, you can be trapped by the wiper arm.


- Always switch off the windshield wipers and vehicle before changing the wiper blades.

REMOVING THE WIPER BLADE

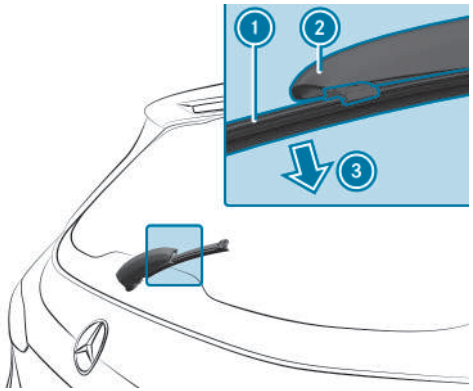

- Switch off the vehicle.
- Fold wiper arm (2) away from the rear window until it engages in the replacement position.
- Unclip wiper blade (1) from wiper arm (2) and remove it in the direction of arrow (3).

INSTALLING THE WIPER BLADE

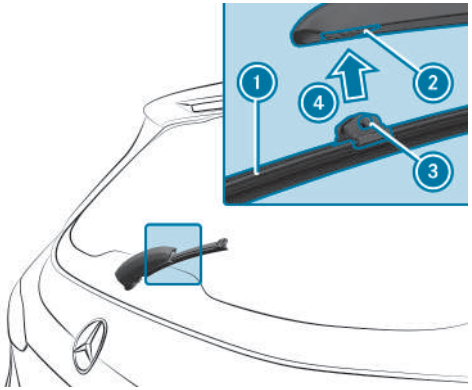

- Position wiper blade (1) with both tabs (3) on holder (2) on the wiper arm.
- Push wiper blade (1) in the direction of arrow (4) until it engages in holder (2).
- Make sure that wiper blade (1) is seated correctly.
- Fold the wiper arm from the replacement position back onto the rear window.

Mirrors

Operating the outside mirrors

WARNING
Risk of injury due to adjusting vehicle settings while the vehicle is in motion

YOU COULD LOSE CONTROL OF THE VEHICLE IN THE FOLLOWING SITUATIONS IN PARTICULAR:


- If you adjust the driver's seat, the head restraints, the steering wheel or the mirror while the vehicle is in motion.
- If you fasten your seat belt while the vehicle is in motion.

► Before starting the drive system: adjust the driver's seat, the head restraints, the steering wheel and the mirror and fasten your seat belt.

WARNING
Risk of accident due to misjudgment of distance when using the front-passenger mirror

The outside mirror on the front passenger side reflects objects on a smaller scale. The objects in view are in fact closer than they appear.

► Therefore, always look over your shoulder to check the actual distance between you and the road users traveling behind you.

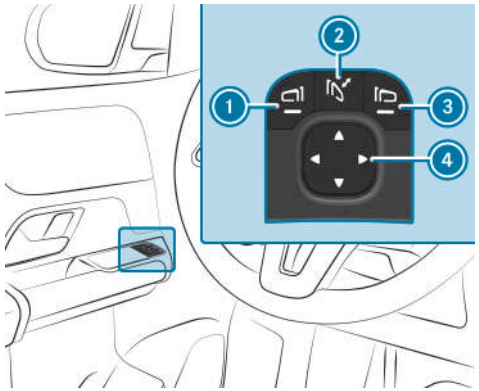

► **To fold in or out:** briefly press button (2).

► **To adjust:** use button (1) or (3) to select the outside mirror to be adjusted.

► Use button (4) to adjust the position of the mirror glass.

If the battery has been disconnected or completely discharged, you will have to reset the outside mirrors. Only then will the automatic mirror folding function work properly.

► **To reset:** briefly press button (2).

An outside mirror that has been pushed out of position can be engaged in position again as follows:

- **Vehicles without electrically folding outside mirrors:** Manually move the outside mirror into the correct position.
- **Vehicles with electrically folding outside mirrors:** Press and hold button (2).

  You will hear a click. The outside mirror will now be set to the correct position.

Automatic anti-glare mirrors function

WARNING
Risk of acid burns and poisoning due to the anti-glare mirror electrolyte

Electrolyte may escape if the glass in an automatic anti-glare mirror breaks.

The electrolyte is hazardous to health and causes irritation. It must not come into contact with your skin, eyes, respiratory organs or clothing or be swallowed.

- If you come into contact with electrolyte, observe the following:
  - Immediately rinse the electrolyte from your skin with water and seek medical attention.
  - If electrolyte comes into contact with your eyes, immediately rinse them thoroughly with clean water and seek medical attention.
  - If the electrolyte is swallowed, immediately rinse your mouth out thoroughly. Do not induce vomiting. Seek medical attention immediately.
  - Immediately change out of clothing which has been contaminated with electrolyte.
  - If an allergic reaction occurs, seek medical attention immediately.

The inside rearview mirror and the outside mirror on the driver's side will automatically go into anti-glare mode if light from a headlamp hits the sensor on the inside rearview mirror.

SYSTEM LIMITS

THE SYSTEM WILL NOT GO INTO ANTI-GLARE MODE IF:

- The drive system is switched off.
- Reverse gear is engaged.
- The interior lighting is switched on.

Front-passenger outside mirror parking position function

The parking position makes parking easier.

THE FRONT-PASSENGER OUTSIDE MIRROR WILL SWIVEL DOWNWARDS IN THE DIRECTION OF THE REAR WHEEL ON THE FRONT PASSENGER'S SIDE WHEN:


- The parking position is stored (⟶ page 256).
- The front-passenger mirror is selected.
- Reverse gear is engaged.

THE FRONT-PASSENGER OUTSIDE MIRROR WILL MOVE BACK TO ITS ORIGINAL POSITION WHEN:

- You shift the transmission to another transmission position.
- You are traveling at a speed greater than 9 mph (15 km/h).
- You press the button for the outside mirror on the driver's side.


Storing the parking position of the front-passenger outside mirror using reverse gear

STORING

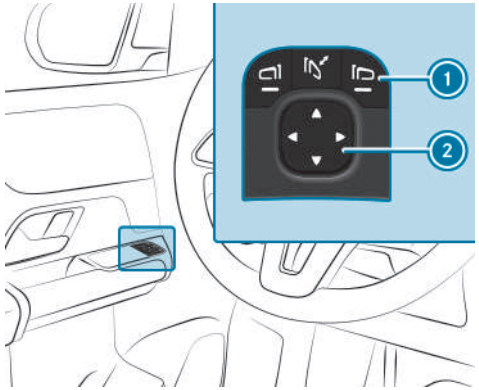

- ► Press button (1) to select the front-passenger outside mirror.
- ► Engage reverse gear.
- ► Move the front-passenger outside mirror into the desired parking position using button (2).

CALLING UP

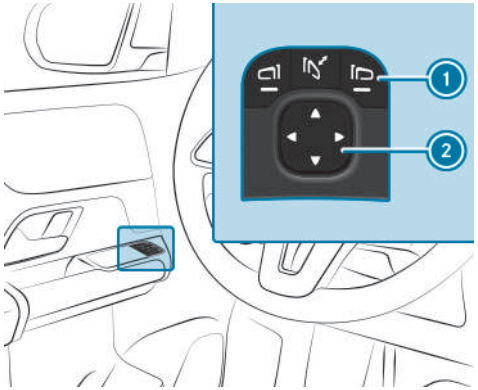

(1) Selects the front-passenger outside mirror
(2) Adjusts the mirrors

► Press button (1) to select the front-passenger outside mirror.

► Engage reverse gear.

The front-passenger outside mirror will move into the stored parking position.

Activating/deactivating the automatic mirror folding function

Multimedia system:

→ Settings » Vehicle » Open/Close

► Activate or deactivate Automatic Mirror Folding.

Back to contents

Climate control

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Overview of climate control systems

Operating the climate control system


Overview of climate control systems

Notes on climate control

For the air-conditioning system, pollution level monitoring and air filtration to function correctly, an interior air filter must always be used. Make sure that the filter is installed correctly. Use filters recommended and approved by Mercedes-Benz. Always have maintenance work carried out at a qualified specialist workshop.

Overview of the air-conditioning control panel

Vehicles with THERMOTRONIC air conditioning control panel:

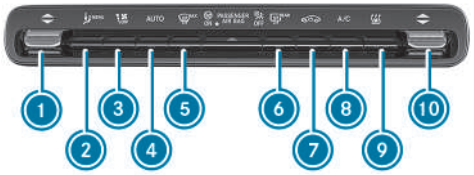

1. ▼▲ Sets the temperature on the driver's side
2. MENU Calls up the air conditioning menu
3. OFF Sets the airflow or switches off climate control
4. AUTO Sets climate control to automatic mode (⟶ page 261)
5. MAX Defrosts the windshield
6. REAR Switches the rear window defroster on/off
7. Switches air-recirculation mode on/off (⟶ page 263)
8. A/C Switches the A/C function on/off (⟶ page 260)
9. Activates/deactivates "Immediate pre-entry climate control" (⟶ page 266)
10. ▼▲ Sets the temperature on the front passenger side

Operating the climate control system

Switching climate control on/off

- **To switch on:** set the airflow to level 1 or higher using the button.
- **To switch off:** set the airflow to level 0 using the button.

If climate control is switched off, the windows may fog up more quickly. Switch off climate control only briefly.

Switching the A/C function on/off using the air conditioning control panel

The A/C function heats, cools and dehumidifies the vehicle's interior air.

- Press the A/C button.

Switch off the A/C function only briefly; otherwise, the windows may fog up more quickly.

Condensation may drip from the underside of the vehicle when cooling mode is active. This is not indicative of a malfunction.

Calling up the air conditioning menu via the climate bar or the air conditioning control panel

The air conditioning menu can be called up via the climate bar. The climate bar is always shown on the lower edge of the media display.

- Select the Climate Menu entry in the air conditioning bar.

Activating/deactivating the A/C function via the air-conditioning menu

Multimedia system:

Climate Menu >> First Row of Seats

Depending on the external conditions, support for improved cooling and dehumidification of the interior air will be provided when the A/C function is activated. If it is not possible to operate the A/C function on the climate bar on the media display, switch the function on or off in the climate menu of the media display.

- Select A/C (A/C).

Switch off the A/C function only briefly; otherwise, the windows may fog up more quickly.

Condensation may drip from the underside of the vehicle when cooling mode is active. This is not indicative of a fault.

Switching the steering wheel heater on or off via the air conditioning menu

Multimedia system:

Climate Menu >> First Row of Seats

- Select [steering wheel heater].

  The indicator lamp lights up when the steering wheel heater is switched on.

Setting climate control to automatic

In automatic mode, the set temperature is controlled and maintained at a constant level by the air supply.

- Press button AUTO.
- **To switch to manual mode:** press the [fan] or AUTO button.

In automatic mode, you can choose between five different air quantities using the [fan OFF] button. Automatic mode is retained.

Selecting climate modes via the air conditioning menu

Multimedia system:

Climate Menu

It is possible to switch between different climate modes on the Climate menu via the ECO button.

If ECO or ECO+ mode is activated, certain climate control functions will be restricted to conserve energy and extend the vehicle's range.

THE FOLLOWING MODES ARE AVAILABLE ON THE CLIMATE MENU:

- **Comfort:** maximum climate comfort
- **ECO:** while heating and cooling output are limited, it remains possible to operate climate control without restriction. If you activate [MAX], the system will automatically switch to Comfort mode.
- **ECO+:** mode using only the blower and waste heat, if applicable. The temperature can no longer be adjusted. If you activate [MAX], the system will automatically switch to Comfort mode.

ⓘ The windows may fog up more when ECO or ECO+ mode is activated. If windows fog up, the blower setting should be varied and, if necessary, the Comfort air-conditioning mode should be selected. If necessary, also switch on the "defrost windshield" function [MAX] (→ page 263).

ⓘ ECO+ climate mode can also be switched on and off via the range maximization button (⟶ page 282) on the EQ menu under Range. When the range maximization function is deactivated, the system will automatically switch to the last selected climate mode.

ⓘ If ECO+ mode or range maximization is activated, the seat heating will automatically be deactivated.

ⓘ If there is a low outside and vehicle interior temperature, the heating output via air will be reduced and the seat heating will automatically be activated to increase the range (⟶ page 207).

ⓘ If the vehicle is parked in ECO or ECO+ mode for a short period, the previously selected mode will still be activated the next time the vehicle is started. If the vehicle is parked in ECO or ECO+ mode for a longer period of time, the system will automatically switch to Comfort mode the next time the vehicle is started.

- ► Tap on ECO.
- ► Select Comfort, ECO or ECO+.

If an ECO mode is selected via the air conditioning control panel, two LEDs will appear below the temperature display. When ECO mode is switched on, one LED will light up green on the temperature display. When ECO+ mode is switched on, both LEDs will light up green and the ECO+ display will appear.

Overview of the air distribution settings

THE SYMBOLS ON THE DISPLAY INDICATE WHICH VENTS THE AIRFLOW IS BEING DIRECTED THROUGH:

- Demister and side air vents
- Center and side air vents
- Footwell and side air vents
- Center, side and footwell vents
- Demister, footwell and side air vents
- All vents
- Demister, center and side air vents
- Automatic air distribution

Setting air distribution using the air conditioning menu

Multimedia system:

→ Climate Menu

- ► Select First Row of Seats or Second Row of Seats.
- ► To set the air distribution: select , or .
- ► Set the airflow.

When the air conditioning system is switched on, at least one zone is always active. However, several air distribution options can be selected at the same time, for example to set the climate control for the vehicle interior and the footwells simultaneously. The climate control for the windshield can only be selected for the first seat row. When automatic mode is active, the buttons for setting the air distribution are automatically deactivated. If the air conditioning system is switched off, the buttons can still be operated and the last setting is saved.

Switching the synchronization function on/off via the air conditioning menu

Multimedia system:

Climate Menu >> First Row of Seats

The synchronization function controls the climate control centrally. The driver's settings for temperature, airflow and air distribution are automatically adopted for each climate zone.

- Select SYNC (SYNC).

Defrosting the windows

WINDOWS FOGGED UP ON THE INSIDE

- Press the AUTO button.
- If the windows remain fogged up: press the MAX button.

WINDOWS FOGGED UP ON THE OUTSIDE

- Switch on the windshield wipers.
- Press the AUTO button.

Switching air-recirculation mode on/off

- Press the button.
  The interior air is recirculated.

Air-recirculation mode will automatically switch to fresh air mode after a while.

The windows may fog up more quickly with air-recirculation mode switched on. Do not have air-recirculation mode switched on for long periods.

Pre-entry climate control via SmartKey

PRE-ENTRY CLIMATE CONTROL VIA SMARTKEY

Before you get into the vehicle, the driver's side or the whole vehicle interior can be briefly pre-warmed or pre-cooled.

DURING PRE-COOLING, THE FOLLOWING FUNCTIONS WILL BE ACTIVATED AS NEEDED:

- Automatic climate control
- Blower
- Seat ventilation

DURING PRE-HEATING, THE FOLLOWING FUNCTIONS WILL BE ACTIVATED AS NEEDED:

- Automatic climate control
- Blower

- Seat heating
- Steering wheel heating
- Mirror heater
- Rear window defroster

SETTING PRE-ENTRY CLIMATE CONTROL VIA THE KEY

Multimedia system:

Climate Menu >> Pre-entry Climate Ctrl.

ACTIVATING/DEACTIVATING

► Select ☼.

► Select Pre-entry Climate Control via Key.

SWITCHING PRE-ENTRY CLIMATE CONTROL VIA THE SMARTKEY ON/OFF

Requirements:

- The high-voltage battery is charged sufficiently.
- The function has been activated via the multimedia system.

► **To switch on:** unlock the vehicle.

The climate control functions are activated for up to five minutes for pre-heating and pre-cooling.

Pre-entry climate control via the SmartKey cannot be activated more than three times when the vehicle is switched off.

► **To switch off:** push the ❄ button up or down.

THE FOLLOWING FUNCTIONS WILL REMAIN ACTIVE ONCE THE VEHICLE HAS BEEN STARTED:

- Seat heating
- Seat ventilation

Pre-entry climate control for departure time

PRE-ENTRY CLIMATE CONTROL FOR DEPARTURE TIME FUNCTION

⚠ WARNING

Risk of fatal injury due to exposure to extreme heat or cold in the vehicle

If persons, particularly children, are subjected to prolonged exposure to intense heat or cold, there is a risk of severe injury or even death.

► Never leave persons, particularly children, unattended in the vehicle.

The vehicle interior can be air conditioned when the vehicle is parked.

When the vehicle is connected to power supply equipment, priority will be given to charging the high-voltage battery to a specified minimum state of charge.

THE RUNNING TIME OF PRE-ENTRY CLIMATE CONTROL MAY BE REDUCED UNDER THE FOLLOWING CONDITIONS:

- The vehicle is not connected to power supply equipment.
- The high-voltage battery is not charged sufficiently.

With active pre-entry climate control, the state of charge of the high-voltage battery may be reduced, even if the charging cable connector is inserted.

DURING COOLING, THE FOLLOWING FUNCTIONS WILL BE ACTIVATED AS NEEDED:

- Automatic climate control
- Blower

- Seat ventilation

DURING HEATING, THE FOLLOWING FUNCTIONS WILL BE ACTIVATED AS NEEDED:

- Automatic climate control
- Blower
- Seat heating
- Steering wheel heating
- Mirror heater
- Rear window defroster

SETTING PRE-ENTRY CLIMATE CONTROL FOR DEPARTURE TIME

Multimedia system:

Climate Menu >> Pre-entry Climate Ctrl.

SETTING A SINGLE DEPARTURE TIME

► Select ONCE.

► Set a departure time.

CHANGING THE ACTIVE DEPARTURE TIME

► Select the pen icon next to the displayed departure time.

► Set a departure time.

SETTING THE WEEK PROFILE

► Select WEEK PROFILE.

► Set the desired departure times, e.g. every day at 08:00.

SELECTING THE ZONE

► Select [⚙].

► Select Driver's Seat Only.

If the Driver's Seat Only setting is deactivated, pre-entry climate control will be carried out for the entire vehicle.

You can watch an animation on this topic via the following link:

ACTIVATING/DEACTIVATING PRE-ENTRY CLIMATE CONTROL FOR DEPARTURE TIME

WARNING
Risk of fatal injury due to exposure to extreme heat or cold in the vehicle

If persons, particularly children, are subjected to prolonged exposure to intense heat or cold, there is a risk of severe injury or even death.

► Never leave persons, particularly children, unattended in the vehicle.

Requirements

- The high-voltage battery is charged sufficiently.
- The function has been activated via the multimedia system.

► **To activate:** set the departure time (⟶ page 265).

Pre-entry climate control for departure time will switch on a maximum of 55 minutes before the selected departure time. It will remain active for another ten minutes if the departure is delayed.

► **To deactivate:** press the [❄] button up or down.

THE FOLLOWING FUNCTIONS WILL REMAIN ACTIVE ONCE THE VEHICLE HAS BEEN STARTED:

- Seat heating
- Seat ventilation

ⓘ You can also activate the function via the Mercedes me App.


Activating/deactivating immediate pre-entry climate control

⚠ **WARNING**
Risk of fatal injury due to exposure to extreme heat or cold in the vehicle

If persons, particularly children, are subjected to prolonged exposure to intense heat or cold, there is a risk of severe injury or even death.

► Never leave persons, particularly children, unattended in the vehicle.

Air-conditioning of the vehicle interior can continue for up to 30 minutes, e.g. if the journey is interrupted.

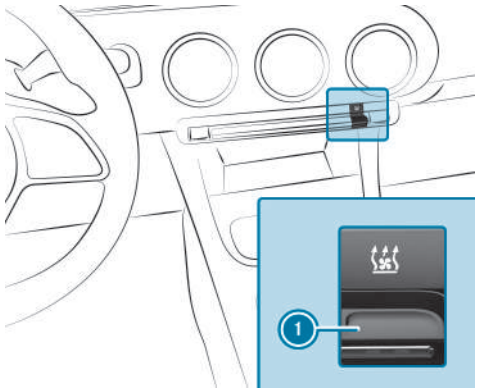

THE COLORS OF THE INDICATOR LAMP ON BUTTON 1 HAVE THE FOLLOWING MEANINGS:

- **Blue:** cooling is activated.
- **Red:** heating is activated.
- **Yellow:** the departure time has been preselected.

► Set the desired temperature using the ▼▲ button.

► Press button 1.
The red or blue indicator lamp on button 1 will light up or go out.

ⓘ You can also activate the function via the Mercedes me App.

Air vents

ADJUSTING THE FRONT AIR VENTS


WARNING
Risk of burns or frostbite due to being too close to the air vents

Very hot or very cold air can flow from the air vents.

- ► Make sure that all vehicle occupants always maintain a sufficient distance from the air vents.
- ► If necessary, direct the airflow to another area of the vehicle interior.

TO GUARANTEE THE FLOW OF FRESH AIR THROUGH THE AIR VENTS INTO THE VEHICLE INTERIOR, OBSERVE THE FOLLOWING:

- Always keep the vents and ventilation grilles in the vehicle interior clear.
- Keep the air inlet free of residue build-up (→ page 559).

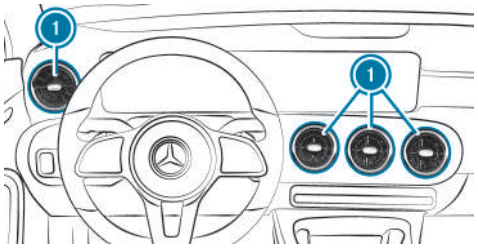


- ► **To open or close:** grip the center of the air vent (1) and turn it to the left (open) or right (closed) as far as it will go.
- ► **To set the airflow direction:** grip the center of the air vent (1) and move it up or down or to the left or right.

ADJUSTING THE REAR AIR VENTS

WARNING
Risk of burns or frostbite due to being too close to the air vents

Very hot or very cold air can flow from the air vents.

- ► Make sure that all vehicle occupants always maintain a sufficient distance from the air vents.
- ► If necessary, direct the airflow to another area of the vehicle interior.

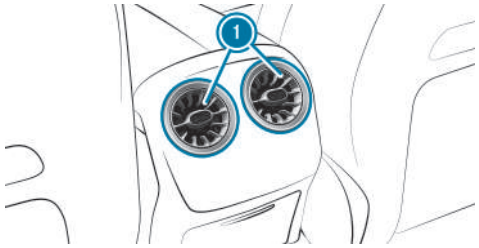

- ► **To open or close:** hold the center of air vent (1) and turn it to the left or right as far as it will go.
- ► **To set the airflow direction:** hold the center of air vent (1) and move it up or down or to the left or right.

Back to contents

Driving and parking

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Driving
DYNAMIC SELECT
Transmission
Function of 4MATIC
Charge the high-voltage battery
Parking
Driving and driving safety systems
Vehicle towing instructions

Driving

Notes on electric driving

WARNING
Risk of chemical burns and poisoning from damaged high-voltage battery

If the housing of the high-voltage battery has been damaged, electrolyte and gases may leak out.

- ► Avoid contact with the skin, eyes or clothing.
- ► Immediately rinse electrolyte splashes off with water and seek medical attention straight away.

DANGER
Risk of fire and explosion from excessive internal pressure of the high-voltage battery

In the event of a vehicle fire, flammable gas can escape and ignite.

- ► If there is an unusual smell, smoke or burn marks, stop the charging process immediately.
- ► Leave the danger zone immediately. Secure the danger area at a sufficient distance.
- ► Call the fire service.

OBSERVE THE FOLLOWING NOTES ON VEHICLE NOISE EMISSIONS AND THE ACOUSTIC VEHICLE ALERTING SYSTEM:

- The vehicle is equipped with an all-electric drive system and produces considerably lower stationary and vehicle noise emissions than a vehicle with a combustion engine.

  It is for this reason that the vehicle is equipped with a sound generator, which serves as an acoustic vehicle alerting system (AVAS). This safety system is prescribed by law.

  The external noise produced by the sound generator can be heard in the vehicle interior when the vehicle is stationary and at low speeds and does not represent a malfunction.
- The sound generator will produce idling and speed-dependent driving noises up to a speed of approximately 25 mph (30 km/h).

  This will help other road users, particularly pedestrians and cyclists, to hear your vehicle better.
- From a speed of 20 mph (20 km/h), the acoustic vehicle alerting system will gradually switch off.
- Despite the sound generator, the vehicle still may not be heard by other road users. Adapt your driving style accordingly.

Manually disconnecting the high-voltage on-board electrical system

DANGER
Risk of death and fire due to modified and/or damaged components of the high-voltage on-board electrical system

The vehicle's high-voltage on-board electrical system is under high voltage. If you modify component parts in the vehicle's high-voltage on-board electrical system or touch damaged component parts, you may be electrocuted. In addition, modified and/or damaged components may cause a fire.

In the event of an accident or impact to the underbody, components of the high-voltage electrical system may be damaged although the damage is not visible.

- ► Never make any modifications to the high-voltage on-board electrical system.
- ► Do not switch on or use the vehicle if its high-voltage on-board electrical system components have been modified or damaged.
- ► Never touch damaged components of the high-voltage on-board electrical system.
- ► After an accident, do not touch any components of the high-voltage on-board electrical system.
- ► After an accident, have the vehicle transported away.
- ► Have the components of the high-voltage on-board electrical system checked at a qualified specialist workshop and replaced if necessary.


Requirements:

ONLY DISCONNECT THE HIGH-VOLTAGE ON-BOARD ELECTRICAL SYSTEM MANUALLY IN THE FOLLOWING SITUATIONS:

- The restraint system warning lamp lights up on the driver display, e.g. after an accident.
- The vehicle is badly damaged, e.g. after an accident, and restraint system components have not been triggered.

OPERATING THE HIGH-VOLTAGE DISCONNECT DEVICE
Only disconnect the high-voltage on-board electrical system manually in the above-mentioned situations.

- ► Switch off the vehicle.
- ► Shift the transmission to position P.
- ► Apply the electric parking brake.
- ► Secure the vehicle against rolling away.
- ► Open the hood (⟶ page 555).

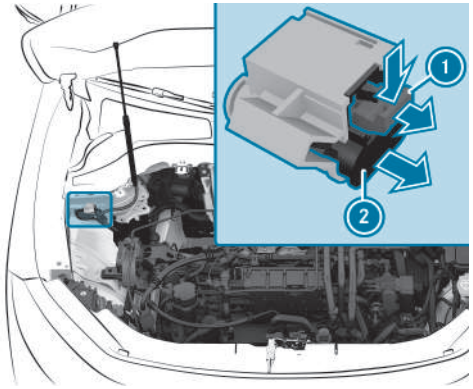

- ► Press release tab (1) in the direction of the arrow and pull it out.
- ► Pull high-voltage disconnect device (2) in the direction of the arrow until it engages.

  The high-voltage on-board electrical system is switched off.

All work on the drive system (including after disconnecting the high-voltage on-board electrical system manually) may only be carried out at a qualified specialist workshop.

Switching on the power supply or the vehicle

WARNING
Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.


IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:

- releasing the parking brake.
- changing the gearbox position.
- starting the vehicle.

- ► Never leave children unattended in the vehicle.
- ► When leaving the vehicle, always take the key with you and lock the vehicle.
- ► Keep the key out of reach of children.

Requirements:

- The key is in the vehicle and is recognized.
- The brake pedal is not depressed.

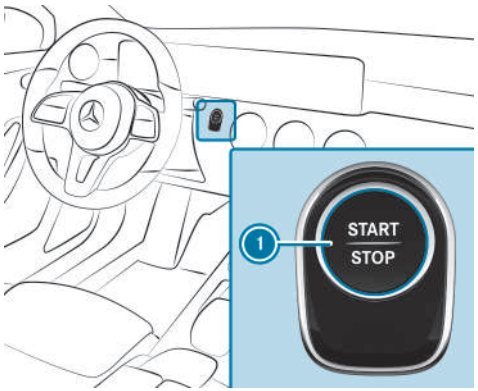

► **To switch on the power supply:** press button (1) once.

You can, for example, switch on the windshield wipers.

THE POWER SUPPLY WILL BE SWITCHED OFF AGAIN IF THE FOLLOWING CONDITIONS ARE MET:

- You open the driver's door.
- You press button (1) twice more.

► **To switch on the vehicle:** press button (1) twice.

Indicator and warning lamps will light up on the driver display.

THE VEHICLE WILL BE SWITCHED OFF AGAIN IF ONE OF THE FOLLOWING CONDITIONS IS MET:

- You do not start the vehicle within 15 minutes and the transmission is in position P or the electric parking brake is applied.
- You press button (1) once.

Starting the vehicle with the start/stop button

WARNING
Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:

- releasing the parking brake.
- changing the gearbox position.
- starting the vehicle.


► Never leave children unattended in the vehicle.

► When leaving the vehicle, always take the key with you and lock the vehicle.

► Keep the key out of reach of children.

Requirements:

- The key is in the vehicle and is recognized.

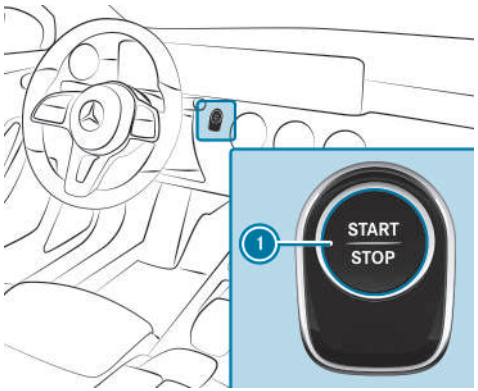

- Shift the transmission to position P or N.
- Depress the brake pedal and press the button 1 once.
  - The vehicle is started.
  - The READY indicator appears on the driver display: the vehicle is ready to drive.
- If the vehicle does not start, switch off unnecessary consumers and press the button 1 once.
- If the vehicle still does not start and the Place the Key in the Marked Space See Operator's Manual display message appears on the driver display, start the vehicle with the key in the marked space (emergency operation mode) (⟶ page 274).

ⓘ You can switch off the vehicle while driving. Switch off the vehicle by pressing and holding the button 1 for about three seconds or pressing the button 1 three times within three seconds. The transmission will shift to neutral N automatically. When you press the button 1 again, the vehicle will start again and you can engage the drive position D again. Be sure to observe the safety notes concerning this under "Driving tips" (⟶ page 275).

Observe any information regarding display messages that may be shown on the driver display.

Starting the vehicle in emergency operation mode

WARNING
Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:


- releasing the parking brake.
- changing the gearbox position.
- starting the vehicle.

► Never leave children unattended in the vehicle.

► When leaving the vehicle, always take the key with you and lock the vehicle.

► Keep the key out of reach of children.

START THE VEHICLE WITH THE KEY IN THE MARKED SPACE.
If the vehicle does not start and the Place the Key in the Marked Space See Operator's Manual display message appears on the driver display, you can start the vehicle in emergency operation mode.

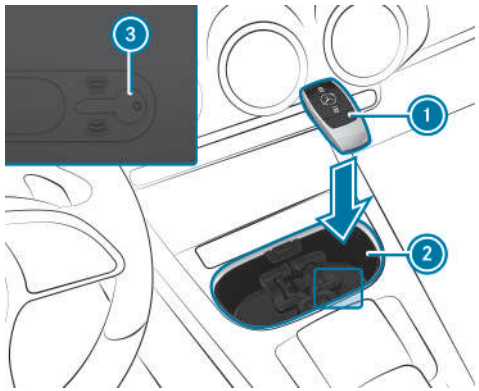

Storage compartment (example with cup holder without roller cover)

► Open the roller cover of the storage compartment (2) if necessary.

► Ensure that the storage compartment (2) is empty.

► Remove the key (1) from the key ring.

► Place the key (1) on the symbol (3) in the storage compartment (2).
The vehicle will start after a short delay.
If you remove the key (1) from the storage compartment (2), the vehicle will still be ready to drive. For further vehicle starts, however, the key (1) must be located on the symbol (3) in the storage compartment (2) during the entire journey.

► Have the key (1) checked at a qualified specialist workshop.

IF THE VEHICLE DOES NOT START:

► Place the key (1) in the storage compartment (2) and leave it there.

► Depress the brake pedal and start the vehicle using the start/stop button.

You can also switch on the power supply or the vehicle independently with the start/stop button (⟶ page 271).

Observe any information regarding display messages that may be shown on the driver display.

Breaking-in notes

- In certain handling and driving safety systems, the sensors adjust automatically while a certain distance is being driven after the vehicle has been delivered or after repairs. Full system effectiveness is reached only when this teaching-in process has concluded.
- Brake pads, brake discs and tires that are either new or have been replaced achieve optimum braking effect and grip only after the vehicle has been driven several hundred kilometers. Compensate for the reduced braking effect by applying greater force to the brake pedal.

Notes on driving

WARNING
Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This will jeopardize the operating- and road safety of the vehicle.

- ► Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- ► Make sure that there is always sufficient clearance for the pedals.
- ► Always install the floor mats securely and as prescribed.
- ► Do not use loose floor mats and do not place floor mats on top of one another.

WARNING
Risk of accident due to incorrect footwear

INCORRECT FOOTWEAR INCLUDES, FOR EXAMPLE:

- Shoes with platform soles
- Shoes with high heels
- Slippers

There is a risk of an accident.

► Always wear suitable footwear so that you can operate the pedals safely.

WARNING
Risk of accident if the vehicle is switched off while driving

If you switch off the vehicle while driving, safety functions are restricted or no longer available.

This may affect the power steering system and the brake force boosting, for example.

You will need to use considerably more force to steer and brake, for example.

► Do not switch off the vehicle while driving.

WARNING
Risk of accident and injury due to being under the influence of alcohol and drugs while driving

Drinking and driving and/or taking drugs and driving are very dangerous combinations. Even a small amount of alcohol or drugs can affect your reflexes, perceptions and judgment.

The possibility of a serious or even fatal accident are greatly increased when you drink or take drugs and drive.

► Do not drink or take drugs and drive or allow anyone to drive who has been drinking or taking drugs.

WARNING
Risk of accident due to the brake system overheating

If you leave your foot on the brake pedal when driving, the brake system may overheat.

This increases the braking distance and the brake system can even fail.

► Never use the brake pedal as a footrest.

► Do not depress the brake pedal and the accelerator pedal at the same time while driving.

NOTE
Reduced battery life due to frequent short-distance trips

The 12 V battery may not be sufficiently charged when the vehicle is used only for short-distance trips. This reduces the life of the battery.

► Drive longer distances regularly to charge the battery.

NOTE
Vehicle damage due to failure to observe the maximum permissible clearance height

If the vehicle height exceeds the maximum permissible clearance height, the roof and other vehicle parts may be damaged.

► Please observe the maximum clearance height indicated.

► If the vehicle exceeds the permissible clearance height, do not drive in.

► Take the modified vehicle height into account in the case of roof superstructures or other carrier systems.

ⓘ Please bear in mind that all speed values stated in this Operator's Manual are approximate values and are subject to a certain tolerance.

NOTES ON DRIVING WITH A ROOF LOAD, TRAILER OR FULLY LADEN VEHICLE

Driving with a loaded roof luggage rack or trailer, or with the vehicle fully laden or fully occupied, changes the handling and steering characteristics of your vehicle.

THEREFORE, PLEASE OBSERVE THE FOLLOWING NOTES:

- Do not exceed the permissible roof load and trailer load. Observe also the information in the technical data in this regard.
- Distribute the roof load and vehicle load evenly, and place heavy objects at the bottom. Observe also the notes on loading the vehicle (⟶ page 217).
- Drive with caution. Avoid sudden starting, braking and steering maneuvers or fast cornering.

NOTES ON DRIVING ON ROADS TREATED WITH DE-ICING SALT

The braking effect is limited on road surfaces treated with de-icing salt.

PLEASE THEREFORE BEAR IN MIND THE FOLLOWING NOTES:

- Due to salt build-up on the brake discs and brake linings, the braking distance can increase considerably or braking may be one-sided.
- Maintain a much greater safety distance to the vehicle traveling ahead.

REMOVE SALT BUILD-UP AS FOLLOWS:

- Brake occasionally, paying attention to the traffic conditions.
- Carefully depress the brake pedal at the end of the journey and when starting the next journey.

NOTES ON HYDROPLANING

Hydroplaning can occur if a certain depth of water has built up on the road surface.

OBSERVE THE FOLLOWING NOTES DURING HEAVY PRECIPITATION OR IN CONDITIONS IN WHICH HYDROPLANING MAY OCCUR:

- Reduce speed.
- Avoid tire ruts.

- Avoid sudden steering movements.
- Brake carefully.

ⓘ Observe also the notes on regularly checking wheels and tires (⟶ page 34).

NOTES ON DRIVING THROUGH WATER ON THE ROAD
Water ingress can damage the drive system, electrics and transmission of the vehicle.

OBSERVE THE FOLLOWING IF DRIVING THROUGH WATER IS ABSOLUTELY NECESSARY:

- The water, when calm, should reach no higher than the lower edge of the vehicle body.
- Drive no faster than walking pace, otherwise water may enter the vehicle.
- Vehicles traveling ahead, or oncoming vehicles, can create waves which may exceed the maximum permissible depth of water.


The service brakes have a reduced braking effect after driving through water. The regenerative brake system is not adversely affected. Brake the vehicle carefully with the service brake, paying attention to the traffic conditions, until the braking effect has been fully restored.

NOTES ON DOWNHILL DRIVING OVER LONG STRETCHES
If you hold the brake pedal continuously depressed over long stretches of downhill driving, you will cause excessive wear of the brake lining and the brake system may overheat.

PLEASE THEREFORE BEAR IN MIND THE FOLLOWING NOTES:

- When negotiating downhill gradients, use the braking effect of the regenerative brake system. Set the recuperation level to D – (⟶ page 279).
- Please note that if the high-voltage battery is cold or has a high state of charge, the braking effect of the regenerative brake system is reduced or completely ineffective.
- Charge the high-voltage battery to a maximum of 80 % before embarking on long stretches of downhill driving.

ECO display function

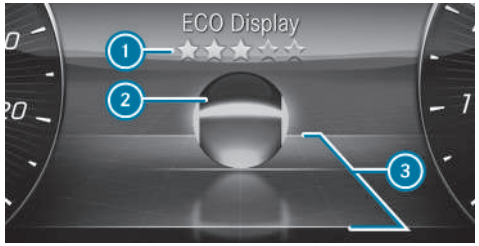

The ECO display shows an evaluation of your driving style on the driver display depending on the situation. This enables you to check the efficiency of your driving style and adjust it if necessary. The ECO Display menu shows a ball (2) that will roll forwards or backwards in the direction of travel on a stylized road according to the driving characteristics.

Above and below the road, lines mark the area for an efficient driving style (3). Ball (2) will light up in green if it is rolling within these lines. Outside the lines, the ball will light up in orange.

THE ECO DISPLAY ASSESSES THE FOLLOWING CRITERIA FOR AN ECONOMICAL DRIVING STYLE:

- Coasting at the right times

- Consistent speed
- Moderate acceleration

The overall assessment of your driving style "from start" is indicated using stars (1). It starts with five empty stars, which you can fill one after the other if you drive efficiently. When all five stars are filled, a glow will appear in the background.

ⓘ You can call up the ECO Display function via the Classic menu (⟶ page 385).

Recuperative brake system

FUNCTION OF THE REGENERATIVE BRAKE SYSTEM

The regenerative brake system converts the vehicle's kinetic energy into electrical energy during overrun mode and braking.

Depending on the selected recuperation level, the electric motors are operated as an alternator when in overrun mode and during braking in order to charge the high-voltage battery while driving. As soon as you take your foot off the accelerator pedal while driving in transmission position D or R, recuperation starts in overrun mode.

The higher the recuperation, the more sharply the vehicle is braked when coasting and the more electrical energy is fed into the high-voltage battery.

The deceleration in overrun mode may not be sufficient depending on the driving situation. There is no deceleration to a standstill. Also brake with the service brake if necessary. Always adapt your speed to the driving situation and keep sufficient distance.

ⓘ If you brake heavily, the mechanical brake is also used. This means that the maximum recuperation energy cannot be recovered. The more proactively you accelerate and brake, the more efficiently energy can be recuperated.

SYSTEM LIMITS

WITH RECUPERATION IN OVERRUN MODE, THE BRAKING EFFECT OF THE ELECTRIC MOTOR IS ONLY REDUCED OR NON-EXISTENT IN THE FOLLOWING SITUATIONS:


- when the high-voltage battery state of charge increases
- if the high-voltage battery is not yet at a normal operating temperature

ⓘ Be mindful of the system limits, especially before long downhill stretches where the braking effect of the regenerative brake system is to be used (⟶ page 275).

You can watch an animation on this topic via the following link:

MANUALLY SETTING REGENERATIVE DECELERATION

In transmission position D, you can use the steering wheel shift paddles to manually adjust the intensity of the recuperation in overrun mode.

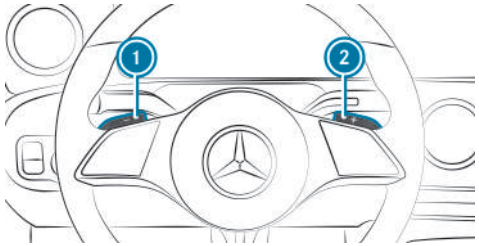

THE FOLLOWING RECUPERATION LEVELS ARE AVAILABLE:

- D AUTO Intelligent, anticipatory recuperation with ECO Assist (→ page 280)
- D + Low recuperation
- D Normal recuperation
- D – Increased recuperation: increased deceleration in overrun mode

- ► Select transmission position D.
- ► **Increase recuperation:** Pull shift paddle (1) briefly.
- ► **Reduce recuperation:** Pull shift paddle (2) briefly.
- ► Select D AUTO **:** Pull shift paddle (1) or (2).

When changing to transmission position R, the current recuperation level is adopted with the exception of D AUTO. If D AUTO was previously selected, the vehicle deceleration of the recuperation level D is set in transmission position R. With a subsequent change to transmission position D, the previously selected variable recuperation D AUTO is set again.

ⓘ **AFTER RESTARTING THE VEHICLE, THE FOLLOWING RECUPERATION LEVEL IS SET:**

- D AUTO: If D AUTO was previously selected.
- D: If a recuperation level other than D AUTO was previously selected.

The driver display shows the currently set recuperation level next to the transmission position display.

ECO Assist

ECO ASSIST FUNCTION

ECO Assist is only an aid. It is not a substitute for you paying attention to your surroundings and does not relieve you of your responsibility pertaining to road traffic law. The driver is responsible for keeping a safe distance from the vehicle in front, for vehicle speed and for braking in good time.

⚠ **WARNING**
Risk of accident if ECO Assist does not provide sufficient deceleration

ECO Assist only brakes your vehicle when you take your foot off the gas pedal. If vehicles are detected late, e.g. after tight curves, or if you do not react immediately to the ECO Assist display, the deceleration may not be sufficient.

- ► React promptly to the ECO Assist recommendation and take your foot off the gas pedal.
- ► Adjust your speed to the driving conditions and maintain a suitable distance from the vehicle in front.
- ► Brake the vehicle yourself and/or take evasive action.

ECO Assist is active only in D AUTO (→ page 279).

Depending on the vehicle's equipment, ECO Assist analyzes data for the vehicle's expected route. This allows the system to optimally adjust the driving style for the route ahead, use minimal energy and recuperate as much as possible. If the system has detected an event ahead or a vehicle in front and the vehicle is approaching the event, ECO Assist will calculate an optimized speed profile based on the distance, speed and available route information.

If you release the accelerator pedal in this case, intelligent recuperation will start in overrun mode. The deceleration in overrun mode may not be sufficient depending on the driving situation. The vehicle will not be decelerated to a standstill. Also brake with the service brake if necessary. Always adapt your speed to the driving situation and keep sufficient distance. This will be the case particularly if, for example, the detected vehicle ahead stops in front of you or you pull away again in slow-moving traffic and the distance to the vehicle in front is very short.



1 "Foot off the accelerator" recommendation
2 Route event ahead

ⓘ ECO Assist can also be shown on the head-up display.

If a route event that requires an adjustment of your driving style is detected ahead, corresponding symbol 2 and the symbol (gray) will be displayed.

If you release the accelerator pedal, the symbol will turn green and recuperation in overrun mode will be initiated. If the deceleration is not sufficient, also apply the service brake.

If ECO Assist intervenes for a route event ahead and you press the accelerator pedal, you will end control by ECO Assist. This does not apply in the case of a vehicle in front.

THE ECO ASSIST DISPLAY WILL BE HIDDEN AGAIN IN THE FOLLOWING CASES:

- You do not react to the ECO Assist recommendation for a long time.
- You depress the accelerator pedal while ECO Assist is intervening because of a route event ahead. This does not apply in the case of a vehicle in front.
- ECO Assist cannot identify any further recommendations from the route ahead.

IN ADDITION TO A VEHICLE IN FRONT , ECO ASSIST CAN DETECT THE FOLLOWING ROUTE EVENTS 2 DEPENDING ON THE VEHICLE'S EQUIPMENT:

- Traffic circle
- Sharp bend
- Intersection
- T-intersection
- Downhill gradient
- Speed limit

To enable ECO Assist to react to future route events, the equipment-dependent speed adaptation functions of Active Distance Assist must be active (⟶ page 342).

SYSTEM LIMITS

If the calculated route is adhered to when route guidance is active, ECO Assist will operate with greater accuracy. The basic function is also available when

route guidance is not active. Not all information and traffic situations can be foreseen. The quality depends on the map data.

ECO Assist will be available after you drive off, as soon as the sensor check is completed.

THE SYSTEM MAY BE IMPAIRED OR MAY NOT FUNCTION IN THE FOLLOWING SITUATIONS:

- if there is poor visibility, e.g. owing to insufficient road illumination, highly variable shadows, rain, snow, fog or heavy spray
- if there is glare, e.g. from oncoming traffic, direct sunlight or reflections
- if the windshield is dirty in the vicinity of the multifunction camera
- if the multifunction camera is fogged up, damaged or obscured
- if road signs are hard to detect, e.g. due to dirt, snow or insufficient lighting, or because they are obscured
- if the digital road map of the navigation system has incorrect or outdated information
- if signs are ambiguous, e.g. road signs in roadworks or in adjacent lanes
- if the radar sensors are dirty or obscured
- when you drive on roads with steep gradients
- if there are narrow vehicles in front, such as bicycles or motorcycles

You can watch an animation on this topic via the following link:

Range maximization

RANGE MAXIMIZATION FUNCTION

The range maximization function enables a maximum range gain. To achieve this, the function partially or completely switches off convenience systems that are not relevant to driving and activates efficiency-enhancing driving functions.

THE RANGE MAXIMIZATION FUNCTION CONTROLS THE RESTRICTIONS OF THE FOLLOWING FUNCTION GROUPS:

- **Climate control**
  - Deactivating the active climate control function. Switching to ECO+ climate mode. Using only the blower and, if necessary, waste heat utilization (⟶ page 261).

    Deactivating rear window and mirror heaters. The windows may fog up more
- **Interior**
  - Switching off ambient lighting, displays and certain charging functions
- **Seating comfort**
  - Deactivating the steering wheel heater and seat heating
- **ECO drive functions**
  - Changing to the E drive program

If necessary, you can deactivate the restrictions of individual function groups again. This will reduce the maximum range gain by the value specified for the function group.

If you switch on a deactivated function while range maximization is activated, all restrictions of the corresponding function group are removed, and the maximum range gain is reduced accordingly. If you switch on the seat heating again, for example, all restrictions on the "Seating comfort" function group are deactivated.

The specified range gain for the ECO drive functions can be achieved only if you drive in an energy-efficient way and without kickdown in drive program E.

ACTIVATING/DEACTIVATING RANGE MAXIMIZATION

Multimedia system:

Settings >> EQ >> Range

- Activate or deactivate Maximum Range.

  All function groups concerned will be activated or deactivated.

or

- Individually activate or deactivate the individual subsystems of the four Climate Control, Interior, Seat Comfort and ECO Driving Functions function groups.

DYNAMIC SELECT

Function of DYNAMIC SELECT

DYNAMIC SELECT allows a drive program to be selected quickly according to the current driving conditions or the desired vehicle characteristics.

THE FOLLOWING VEHICLE CHARACTERISTICS WILL CHANGE ACCORDING TO THE DRIVE PROGRAM SELECTED:

- Drive
- **Vehicles with adaptive damping adjustment:** suspension
- Steering
- ESP®

AVAILABLE DRIVE PROGRAMS

I+ INDIVIDUAL

- Individual settings for the following vehicle characteristics (⟶ page 285):
  - Drive
  - Suspension
  - Steering
  - ESP®

S SPORT

- Maximum power availability
- Emphasis on stability, but with a sporty, dynamic setup
- Suitable only for good road conditions, a dry surface and a clear stretch of road

C COMFORT

- Comfortable driving style
- Balance between traction and stability
- Recommended for all road conditions
- Optimum balance of efficiency and performance for all driving situations

E ECO

- Economical setting of vehicle functions
- Balance between traction and stability
- Recommended for all road conditions
- Limitation of maximum speed to 81 mph (130 km/h)

  If you depress the accelerator pedal beyond the pressure point (kick-down), the limitation of maximum speed will be deactivated.
- **Navigation with Electric Intelligence:** When the Plan Charging Stops route option is switched on and route guidance is active, the maximum speed recommended by the active range monitor will be displayed on the speedometer (⟶ page 387). Compliance in this regard is the sole responsibility of the driver in order to reach the next scheduled charging station.

The ESP® settings in the drive programs [E] and [C] are configured for stability. Therefore, choose one of these drive programs in particular when transporting roof loads, in trailer operation and when the vehicle is fully laden or fully occupied.

Notes on the roof load display


Certain drive programs and ESP® settings are unsuitable for transporting a roof load.

If one of these drive programs is set or selected, the [symbol] symbol is shown as a warning. When this symbol is shown, the selected drive program is not suitable for transporting a load on the roof.

THE FOLLOWING DRIVE PROGRAMS ARE AFFECTED:

- Drive program [S] Sport
- Drive program [I*] Individual with the ESP® setting Sport

Selecting a drive program

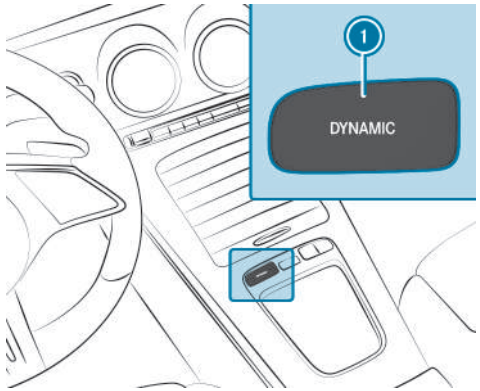

- Press DYNAMIC SELECT button (1) repeatedly until the selected drive program appears on the driver display.

or

- Press DYNAMIC SELECT button (1) and select the drive program on the DYNAMIC SELECT menu on the central display.

Configuring DYNAMIC SELECT in the multimedia system

Multimedia system:

[home] Settings >> Vehicle >> DYNAMIC SELECT

SETTING THE I DRIVE PROGRAM

- Select [I*] Individual.
- Select and set a category.

> A sporty ESP mode can be set in conjunction with a sporty suspension mode.

SETTING DRIVE PROGRAM C

- Select Comfort.
- Select Route Based or Standard.

  If route guidance is active and the Route Based option has been switched on, the electrical energy is distributed intelligently in both urban and non-urban areas over the entire route.

With the Standard option, the vehicle drives in its standard drive program (C Comfort). There is no distribution of electrical energy over the entire route. The high-voltage battery is exhausted.

SWITCHING THE RESET DISPLAY ON/OFF

- Activate or deactivate Request at Start.

> This function must be activated for each user profile separately. The drive program for the respective user profile of the last driver is only stored if this function is activated.

Function on: the next time the vehicle is started a prompt appears asking whether the last active drive program should be restored.

> The prompt appears only if the previously active settings deviate from the standard settings.

Function off: the next time the vehicle is started the C Comfort drive program is set automatically.

Displaying vehicle data

Multimedia system:

→ ⌂ ▶▶ Info

- Select Vehicle.

  The vehicle data is displayed.

Calling up the fuel consumption indicator

Multimedia system:

→ ⌂ ▶▶ EQ

- Select Consumption.

  The current and average fuel consumption will be displayed.

Transmission

DIRECT SELECT lever

FUNCTION OF THE DIRECT SELECT LEVER

WARNING
Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:

- releasing the parking brake.
- changing the gearbox position.
- starting the vehicle.

► Never leave children unattended in the vehicle.

► When leaving the vehicle, always take the key with you and lock the vehicle.

► Keep the key out of reach of children.

WARNING
Risk of accident– and injury when the transmission position is not engaged

The current transmission position will be highlighted on the driver display.


If the selected transmission position is not highlighted, the vehicle may pull away in the wrong direction or roll away.

- After changing the transmission position, always check the transmission position indicator on the driver display.

If the transmission position is not highlighted on the driver display even after a short time:


- Pay attention to the display messages.
- Pull away carefully and check the engaged transmission position.
- When parking, engage the parking brake and secure the vehicle against rolling away.
- Have the transmission checked immediately at a qualified specialist workshop.

Use the DIRECT SELECT lever to switch the transmission position. The current transmission position will be highlighted on the driver display.

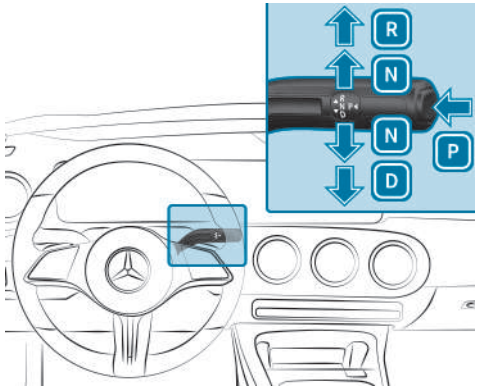


P Park position
R Reverse gear
N Neutral
D Drive position

ENGAGING REVERSE GEAR R

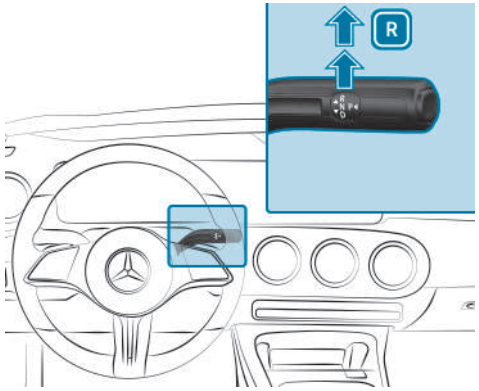

- Depress the brake pedal and push the DIRECT SELECT lever up past the first point of resistance.

ENGAGING NEUTRAL N

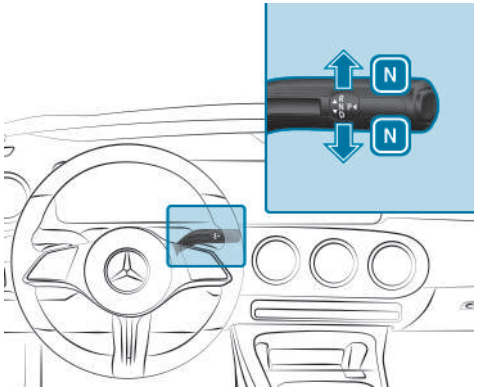

- ► Depress the brake pedal and push the DIRECT SELECT lever up or down to the first point of resistance, holding it there until transmission position N is shown on the driver display.

Subsequently releasing the brake pedal will allow you to move the vehicle freely, e.g. to push it or tow it.

IF YOU WANT THE TRANSMISSION TO REMAIN IN NEUTRAL N EVEN IF THE VEHICLE IS SWITCHED OFF:

- ► Start the vehicle.
- ► Depress the brake pedal and engage neutral N.
- ► Release the brake pedal.
- ► Switch off the vehicle.

ⓘ If you then exit the vehicle leaving the key in the vehicle, the transmission will remain in neutral N.

ENGAGING PARK POSITION P

⚠ **WARNING**
Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:


- releasing the parking brake.
- changing the gearbox position.
- starting the vehicle.

- ► Never leave children unattended in the vehicle.
- ► When leaving the vehicle, always take the key with you and lock the vehicle.
- ► Keep the key out of reach of children.

NOTE
Damage due to engaging park position P while the vehicle is rolling

If you shift the transmission into park position P while the vehicle is rolling, the transmission may be damaged.

- If the vehicle is rolling, do not open a door.
- Only engage park position P when the vehicle is stationary.

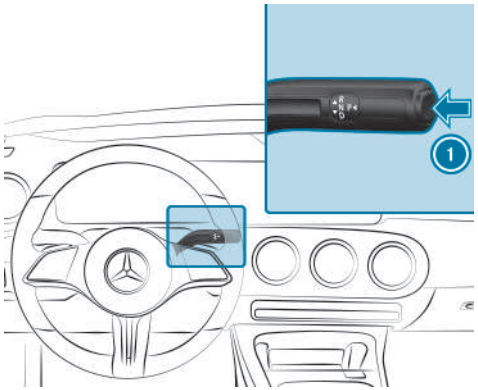

- Observe the notes on parking the vehicle (⟶ page 312).
- Depress the brake pedal until the vehicle comes to a standstill.
- When the vehicle is stationary, press button 1.

  When the transmission position display P is shown, park position is engaged. If the transmission position display P is not shown, apply the parking brake and secure the vehicle to prevent it from rolling away.


Depending on the respective situation, it may take a short while until P is engaged. Therefore, always pay attention to the transmission position display.

PARK POSITION P WILL BE ENGAGED AUTOMATICALLY IF ONE OF THE FOLLOWING CONDITIONS IS MET:

- You switch the stationary vehicle off in transmission position D or R.
- You open the driver's door when the vehicle is stationary in transmission position D or R.
- You switch off the vehicle when coasting to a stop in transmission position D or R, and bring the vehicle to a standstill.
- You shift to transmission position N with the vehicle coasting to a stop, bring the vehicle to a standstill and open the driver's door when the vehicle is at a standstill.
- It is imperative that park position P is engaged automatically for the vehicle.

To maneuver with the driver's door open, open the driver's door while the vehicle is at a standstill and engage transmission position D or R again.

ENGAGING DRIVE POSITION D

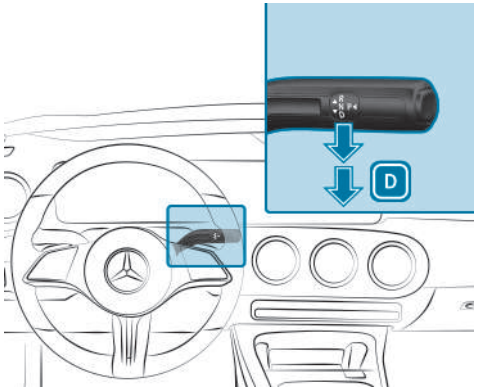

- Depress the brake pedal and push the DIRECT SELECT lever down past the first point of resistance.

Permanently activate/deactivate manual gearshifting

Multimedia system:

Settings >> Vehicle >> Driving

- Permanently activate or deactivate the function.

Function of 4MATIC

The flexible all-wheel distribution of 4MATIC means the drive is always ideally distributed between both axles. Depending on the respective situation, drive can be provided only to the front axle or to the rear axle, or drive is distributed continuously to both axles.

This means that recuperation can be used even more effectively and range of the vehicle can be increased (⟶ page 279).

Together with ESP® and 4ETS, 4MATIC improves the traction of your vehicle whenever a driven wheel spins due to a lack of traction.

If you fail to adapt your driving style, 4MATIC can neither reduce the risk of an accident nor override the laws of physics. It cannot take into account road, weather or traffic conditions. 4MATIC serves solely as an aid. You are responsible in particular for maintaining a safe distance from the vehicle in front, for vehicle speed, for braking in good time and for staying in lane.

ⓘ In wintry road conditions, maximum effect of the flexible all-wheel distribution can be achieved only if you use winter tires (M+S tires), with snow chains if necessary.

Charge the high-voltage battery

Notes on charging the high-voltage battery

DANGER
Danger to life from improper handling of the Mercedes-Benz Power Charger

Improper use of the Mercedes-Benz Power Charger may, for example, result in fires or an electric shock.

- ► Observe the notes in the Operator's Manual about the Mercedes-Benz Power Charger. Potential dangers may otherwise remain undetected.

DANGER
Risk of fatal injury from incorrectly installed component parts

Connecting the charging cable to a mains socket, wallbox or charging station using incorrectly installed component parts could cause fires or an electrical shock, for example.

- ► Visually inspect the charging station for obvious signs of damage, e.g. serious damage to the housing or charging cable connection.
- ► Only connect the charging cable to a mains socket or wallbox that:
  - has been properly installed and
  - has been inspected by a qualified electrician.
- ► For safety reasons, only use charging cables that are supplied with the vehicle or have been tested and approved by the charging cable manufacturer for charging the high-voltage battery of an electric vehicle.
- ► Never use a damaged charging cable.
- ► Do not use:
  - Extension cables

- Extension reels
- Power strips

- ► For home and public charging (level 1 or level 2), Mercedes-Benz approved adapters or cords are recommended to avoid the risk of serious injury or property damage. For DC Fast Charging (level 3), a Mercedes-Benz approved adapter is recommended to avoid the risk of serious injury or property damage. Furthermore, also ensure that DC adapters are not used with an AC charger.
- ► Never use multiple adapters.
- ► Observe the safety notes in the operating instructions for the adapter.
- ► Observe the safety notes in the operating instructions for the wallbox.
- ► Observe the safety instructions for the charging station.

⚠ **DANGER**
Risk of fatal injury if damaged component parts are used

If you use a damaged component part to connect the vehicle to the mains socket, wallbox or charging station, this may lead to fires or electric shocks, for example.

- ► Visually inspect the charging station or wallbox for obvious signs of damage, e.g. serious damage to the housing or charging cable connection.
- ► Never use damaged charging cables.
- ► Do not use an extension cord, nor stretch the charging cable.
- ► Do not use a damaged or broken adapter.
- ► Ensure that the charge port and the charge plug don't contain any foreign debris before you start a charge session.
- ► Observe the safety instructions for the charging station or wallbox.

⚠ **DANGER**
Risk of fatal injuries when carrying out maintenance work during the charging process

During the charging process, the high-voltage on-board electrical system is under high voltage.

- ► Do not perform any maintenance work during the charging process.

DANGER
Risk of death when charging at a damaged socket

The charging process uses high voltage.

If the charging cable, the vehicle socket, or the mains socket are damaged, you could receive an electric shock.

- ► Only use an undamaged charging cable.
- ► Avoid mechanical damage such as crushing, abrading, or driving over the cable.
- ► Have a damaged vehicle socket replaced at a qualified specialist workshop as soon as possible.
- ► Never connect the charging cable to a damaged vehicle socket.

DANGER
Risk of burns from hot component parts

Adapters can become very hot during the charging process, e.g., in direct sunlight.

- ► If possible, do not expose the adapter to direct sunlight.
- ► Do not cover the adapter, the socket, or the charging cable.
- ► If necessary, allow the adapter to cool down before removing it from the vehicle socket.

NOTE
High-voltage battery damage due to leaving the vehicle idle for lengthy periods of time

Lithium-ion batteries experience a natural self-discharge.

Exhaustive discharging can therefore occur if the vehicle is not in operation for several months. This can damage the high-voltage battery.

- ► To avoid damage, please observe the following recommendations when handling the high-voltage battery.

NOTE
Accelerated aging of the high-voltage battery if the following recommendations are not observed

Due to its basic characteristics, the storage capacity of and amount of energy available from the high-voltage battery will decrease over the course of its life. Both the maximum electric range that can be achieved by the vehicle and its maximum electrical output may be impaired as a result.

THE FOLLOWING FACTORS CAN ACCELERATE THE AGING OF THE HIGH-VOLTAGE BATTERY:

- frequent full charging (state of charge 100 %) of the high-voltage battery, especially if the vehicle is not driven directly afterwards
- frequent DC fast charging (level 3)
- high ambient temperatures during long non-operational times

- ► To avoid accelerated aging, observe the recommendations for handling the high-voltage battery described below.

NOTE
Damage to the drive system when the high-voltage battery is charged at extreme altitudes

The drive system may be damaged if you charge the high-voltage battery at extreme altitudes more than 13123.36 ft (4000 m) above sea level.

In this case, it may no longer be possible to continue driving the vehicle.

► Avoid charging processes at extreme altitudes.

NOTE
Damage due to overheating of the charging cable and charge port

The charging cable and charge port may heat up within the permissible limit values during the charging process.

THE HEATING OF THE CHARGING CABLE AND CHARGE PORT IS INFLUENCED BY THE FOLLOWING FACTORS:

- The power supply equipment of the mains supply and the charging cable are intact.
- The instructions for handling the charging cable and control element on the charging cable have been observed.

► If the charging cable or the charge port become too hot, do not touch them and have the power supply equipment of the mains supply checked.

NOTE
Damage to or soiling of the vehicle socket

► If no charging cable is connected, always keep the socket cover and the socket flap closed. These protect the vehicle socket from dirt and damage.

► Before closing the socket flap, ensure that the socket cover is properly closed. Otherwise damage may occur and it may no longer be possible to open the socket flap.

NOTE
Damage to the vehicle socket or the charging cable connector due to incorrect handling

Do not use excessive force (maximum 67.4 lbf (300 N)) to fully insert the charging cable connector into the vehicle socket. You may otherwise damage the vehicle socket, the charging cable connector, or their contacts.

► If you feel there is increased resistance, pull the charging cable connector out of the socket and reinsert it.

RECOMMENDATIONS WHEN HANDLING THE HIGH-VOLTAGE BATTERY:


- If the outside temperature is above 50 °F (10 °C), park the vehicle overnight with a state of charge below 20 % every six months.
- From a state of charge of 80 % the charging time increases significantly.
- At a state of charge of less than 20 %, particularly at very low outside temperatures below 32 °F (0 °C), problems may be encountered when restarting the vehicle.
- Fast charging (level 3) only when required.

- The charging time of the high-voltage battery may change during the battery service life.
- In the case of longer non-operational periods:
  - Park the vehicle with the high-voltage battery at a state of charge between 30 % and 50 %.
  - Do not permanently connect the high-voltage battery to power supply equipment.
  - Avoid high outside temperatures as far as possible.
  - Do not disconnect the 12 V battery. Otherwise the condition of the vehicle's high-voltage battery cannot be monitored.
  - Check the high-voltage battery's state of charge every six weeks (⟶ page 309).

YOU CAN CONTRIBUTE TO REDUCING THE VEHICLE'S ENERGY CONSUMPTION IN THE FOLLOWING WAYS:

- An anticipatory driving style (⟶ page 278)
- Reduced use of electrical consumers
- Having the vehicle regularly serviced

You can charge the high-voltage battery with both alternating current (level 1/2) and direct current (level 3).

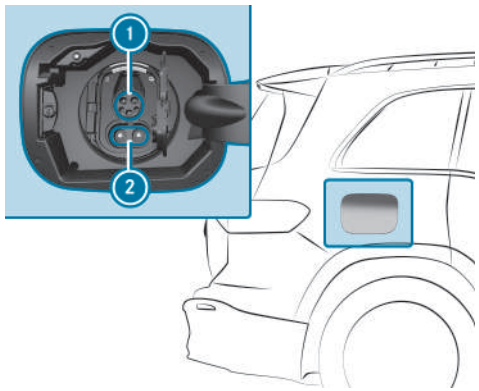

① AC charging connection

② Socket extension for DC charging

ⓘ When using a CCS charging cable (Combined Charging System) for charging with direct current, both areas of the vehicle socket are covered by the charging cable plug.

CHARGING OPTIONS FOR THE HIGH-VOLTAGE BATTERY:

- While driving by means of recuperation
- Stationary alternating current charging (AC charging):
  - at a mains socket (level 1) (⟶ page 298)
  - at a wallbox or public charging station (level 2) (⟶ page 299)
- Stationary direct current charging (DC charging):
  - at a fast charging station (level 3) (⟶ page 299)

Depending on the country-specific vehicle equipment and your vehicle's charging cable, single-phase AC charging is also possible.

Observe the different mains requirements of your current location when charging. Only use charging cables which conform to the mains requirements. Consult a qualified electrician or your local mains operator if you have any questions.

It is recommended that you charge the high-voltage battery at a wallbox or charging station due to the higher charging power and better charging efficiency offered.

Information on charging settings (⟶ page 310).

SYSTEM LIMITS

THE PERFORMANCE OF THE HIGH-VOLTAGE BATTERY MAY BE IMPAIRED BY THE FOLLOWING:

- high or low outside temperatures
- electrical auxiliary consumers in the vehicle being switched on, e.g. operating the air conditioning system
- extended non-operational periods without charging

THE CHARGING TIME OR THE CHARGING POWER OF THE HIGH-VOLTAGE BATTERY MAY BE INCREASED BY THE FOLLOWING:

- high or low outside temperatures
- a low or high state of charge of the high-voltage battery
- the maximum available charging current of the charging device
- the charging process settings in the multimedia system
- the charging current set on the Mercedes-Benz Power Charger (level 1/2) (see Mercedes-Benz Power Charger operating instructions)
- the age of the high-voltage battery

Notes on charging the high-voltage battery at a mains socket (level 1)

DANGER
Danger to life from improper handling of the Mercedes-Benz Power Charger

Improper use of the Mercedes-Benz Power Charger may, for example, result in fires or an electric shock.

► Observe the notes in the Operator's Manual about the Mercedes-Benz Power Charger. Potential dangers may otherwise remain undetected.

ONLY THE FOLLOWING CHARGING CABLES MAY BE USED:

- The charging cable supplied with the vehicle.
- A charging cable that has been approved for the vehicle.

The charging process can vary depending on the power supply equipment. The charging times when charging the high-voltage battery at a mains socket are considerably longer than when charging at a wallbox or charging station.

When doing so, always observe the local information.

Do not leave the charging cable control element hanging loose from a mains socket.

DO NOT LIFT THE CONTROL ELEMENT BY THE FOLLOWING COMPONENT PARTS:

- The charging cable plug

- The mains plug

When charging, protect the charging cable control element from excessive heat such as direct sunlight. Otherwise the charging process may be aborted.

Notes on charging the high-voltage battery at a wallbox or charging station (level 2)

If charging at a wallbox without a pre-installed cable, use the optionally available charging cable for a wallbox and charging station. The charging cable is stowed in a bag in the cargo compartment.

For home and public charging (level 1 or level 2), Mercedes-Benz approved adapters or cords are recommended to avoid the risk of serious injury or property damage. Furthermore, also ensure that DC adapters are not used with an AC charger.

Most charging stations must be activated before the charging process, e.g. using an RFID card or via Plug & Charge. Observe the on-site operator's instructions for the charging station and the notes on MB.CHARGE Public (⟶ page 455).

The amount of energy dispensed for the charging process, shown by the charging station, may be higher than the amount of energy actually absorbed by the high-voltage battery. This is the result of different levels of charging losses and is described as recharge efficiency. Charging losses occur, for example, due to heat that builds up when the vehicle is charging or from running auxiliary consumers. Further information on recharge efficiency can be obtained at a qualified specialist workshop.

Charging at a fast charging station (level 3)

Most charging stations must be activated before the charging process, e.g. using an RFID card or via Plug & Charge. Observe the on-site operator's instructions for the charging station and the notes on MB.CHARGE Public (⟶ page 455).

The amount of energy dispensed for the charging process, shown by the charging station, may be higher than the amount of energy actually absorbed by the high-voltage battery. This is the result of different levels of charging losses and is described as recharge efficiency. Charging losses occur, for example, due to heat that builds up when the vehicle is charging or from running auxiliary consumers. Further information on recharge efficiency can be obtained at a qualified specialist workshop.

Maximum permissible charging current for charging at a mains socket

DANGER
Danger to life from improper handling of the Mercedes-Benz Power Charger

Improper use of the Mercedes-Benz Power Charger may, for example, result in fires or an electric shock.

► Observe the notes in the Operator's Manual about the Mercedes-Benz Power Charger. Potential dangers may otherwise remain undetected.

NOTE
Overload of the AC socket due to excessive charging current

If the charging current is too high, the fuse could be tripped or the external power supply could overheat.

- Ensure that the external power supply is designed for the charging current provided.
- Mercedes-Benz approved charging cables are recommended to avoid the risk of serious injury or property damage.
  Mercedes-Benz thoroughly tests these genuine charging cables for their suitability for high-voltage charging of your vehicle.
- Purchase these parts at a Mercedes-Benz service center and obtain advice there.
- Check the maximum charging current using the charging power shown on the driver display.

Canada only: for the supplied Gen4 or Gen5 charging cable, the maximum charging current value is set country-specifically. When charging abroad, the maximum value may exceed the permitted value for that country.

If you are using the Mercedes-Benz Power Charger, the maximum charging current can be set (see the Mercedes-Benz Power Charger Owner's Manual).

- Before charging at a mains socket, have the maximum permissible charging current for the relevant mains socket or the building mechanicals checked by a qualified electrician.
- When abroad, observe the country-specific laws when charging.

If you have questions concerning the charging current or if there is a malfunction, please contact a qualified specialist workshop.

Charging cable

OVERVIEW OF CHARGING CABLES
Observe the information on charging the high-voltage battery (⟶ page 293).

USA: the Mercedes-Benz Power Charger is supplied with your vehicle for charging at AC sockets (⟶ page 302).

CANADA: FOR CHARGING AT AC SOCKETS, YOUR VEHICLE MAY BE EQUIPPED WITH ONE OF THE FOLLOWING CHARGING CABLES:

- Gen4 charging cable (⟶ page 300)
- Gen5 charging cable (⟶ page 300)
- Mercedes-Benz Power Charger (⟶ page 302)

GEN4 AND GEN5 CHARGING CABLES (CANADA)
Observe the information on charging the high-voltage battery (⟶ page 293).

Your vehicle may be equipped with one of the two charging cables Gen4 or Gen5 described below for charging at the mains socket.

Information on the Mercedes-Benz Power Charger (⟶ page 302).



1 Gen5 charging cable
2 Gen4 charging cable
3 Supply voltage indicator
4 Charging process display
5 Temperature monitor display
6 Safety system display

SUPPLY VOLTAGE INDICATOR
3 lights up in white: there is mains voltage

CHARGING PROCESS DISPLAY
4 flashes in green: the high-voltage battery is being charged

TEMPERATURE MONITOR DISPLAY
5 flashes in red: overtemperature at the mains plug – charging process ended

5 LIGHTS UP RED AND

- 4 simultaneously flashes green: overtemperature – charging power will be reduced
- 4 does not flash: overtemperature – charging process terminated

If temperature monitor display 5 lights up, it can help to protect the charging cable from direct sunlight.

SAFETY SYSTEM DISPLAY (GEN4 CHARGING CABLE)

- 6 flashes red: charging cable or internal fault – charging process not possible
- 6 lights up red: infrastructure fault – charging process not possible, use a different mains socket

If the charging cable operating unit detects residual current or a fault, the charging process is interrupted. The charging process is resumed automatically when the fault has been rectified.

SAFETY SYSTEM DISPLAY (GEN5 CHARGING CABLE)
6 flashes red: charging cable or internal fault, charging process not possible, reset charging cable operating unit

6 LIGHTS UP RED AND

- 3 is off: power supply fault, charging process not possible, use a different mains socket
- 3 is on: vehicle-side fault, charging process not possible, reset charging cable operating unit

NOTES ON GEN5 CHARGING CABLE
When all four displays light up, the charging cable operating unit is performing a self-test.

If safety system 6 displays a charging cable fault or a vehicle-side fault, first reset the charging cable operating unit. To do this, disconnect the charging cable from the vehicle and from the mains socket and wait for approximately five seconds. If the fault persists after the charging cable is reconnected, charging at the mains socket is not possible. The charging cable must be replaced or the vehicle plug must be checked at a qualified specialist workshop, depending on the readout.

MERCEDES-BENZ POWER CHARGER

DANGER
Danger to life from improper handling of the Mercedes-Benz Power Charger


Improper use of the Mercedes-Benz Power Charger may, for example, result in fires or an electric shock.

- Observe the notes in the Operator's Manual about the Mercedes-Benz Power Charger. Potential dangers may otherwise remain undetected.

Observe the information on charging the high-voltage battery (⟶ page 293).

The Mercedes-Benz Power Charger is a Level 1 and Level 2 mobile charger with an overheating and overvoltage protection.

Only connect the charger to a circuit with 50 amps maximum branch circuit overcurrent protection in accordance with NEC and local electric code. Read the owners manual of the charger before operating.

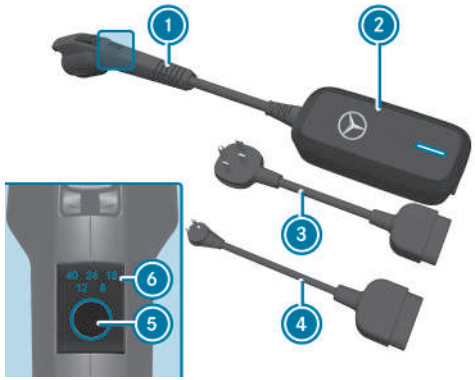

1. Coupler
2. Control box with indicator light
3. High-power 14–50 grid cord
4. Low-power 5–15 grid cord
5. Current selection button
6. Current (amperage) indicator

INDICATOR LIGHT ON CONTROL BOX 2

- Amber: Reduced charging due to an increase in temperature or a recoverable fault which may interrupt charging.
- Blue: The charger is ready to use or is charging.
- Red: Fault which may interrupt charging.

If the temperature monitor indicates a fault (yellow light is on), it may help to protect the charging cable from direct sunlight or move to a cooler environment for charging.

If the operating unit detects residual current or a fault (red light is on), the charging process is interrupted. The error must be corrected before charging begins or resumes.

The charger is equipped with a selectable current (amperage) function that features a current selector button (5) and a two row current (amperage) indicator (6).

The bottom row represents the selection of currents available for AC Level 1 – 12 amps (default) and 8 amps.

The top row represents the selection of currents available for AC Level 2 – 40 amps (default), 24 amps and 16 amps.

Only one of the five numbers should be illuminated at any time. This number represents the selected current.

STOWING THE CHARGING CABLE


Always stow the vehicle's charging cable in the charging cable bag supplied and secure the charging cable bag in the trunk or load compartment using the corresponding retaining strap. Otherwise, the charging cable bag with the charging cable is not sufficiently secured.

ⓘ If possible, stow the adapter for charging the high-voltage battery together with the charging cable in the charging cable bag to prevent soiling.




Example: charging cable bag in the trunk/load compartment

As delivered, charging cable bag (1) with retaining strap (2) is located in the trunk or load compartment. To secure the charging cable bag, the retaining strap must be attached to tie-down eye (3). Do not use bag hooks to attach the retaining strap.

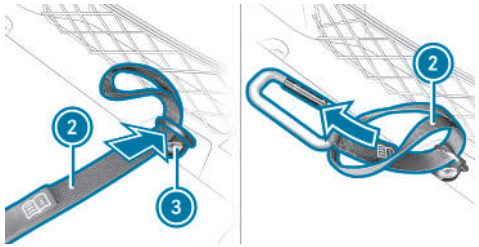


- Feed the loop end of retaining strap (2) through tie-down eye (3) in the trunk or load compartment.
- Feed the end with the snap hook through the loop of retaining strap (2).

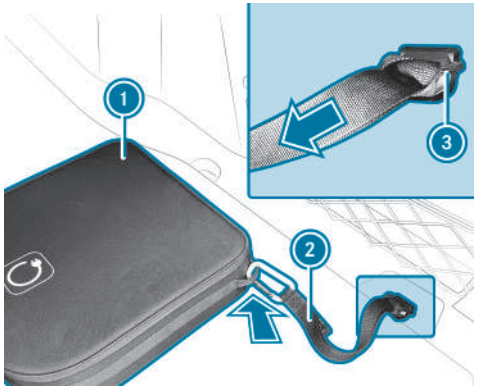

- Tighten retaining strap (2) so that the knot around tie-down eye (3) is tight and secure.
- Hook the snap hook of retaining strap (2) in a tie-down eye of charging cable bag (1).

Functions of the indicator lamps on the vehicle socket

The socket flap is centrally locked and unlocked together with the vehicle.

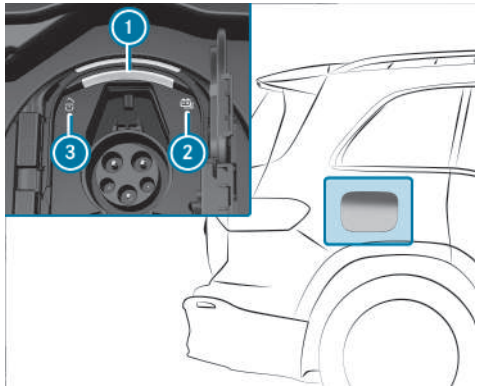

(1) Socket lamp
(2) Charging process indicator lamp
(3) Locking status indicator lamp

The upper curve of socket lamp (1) is used for the lighting and flashes or lights up as with indicator lamp (3). The lower curve is used for the status display and flashes or lights up as with indicator lamp (2).

The color and behavior of indicator lamps (2) and (3) have the following meaning.

LOCKING STATUS (3)

- Lights up white: vehicle socket unlocked; insert or remove charging cable
- Flashes white: malfunction during locking or unlocking

STATUS OF THE CHARGING PROCESS (2)

- Lights up green (for approx. 60 s): charging process completed
- Flashes green: charging; active energy flow
- Lights up orange (for approx. 60 s): charging break
- Flashes orange: connection is being established

- Flashes red (for approx. 90 s): malfunction in vehicle; charging not possible

ⓘ If the charging sequence is activated for the ambient lighting, the charge level is also accompanied by ambient lighting (⟶ page 249).

Starting the AC charging process (level 1/2)

⚠ **DANGER**
Danger to life from improper handling of the Mercedes-Benz Power Charger


Improper use of the Mercedes-Benz Power Charger may, for example, result in fires or an electric shock.

► Observe the notes in the Operator's Manual about the Mercedes-Benz Power Charger. Potential dangers may otherwise remain undetected.

Observe the information on charging the high-voltage battery (⟶ page 293).

Requirements:

- The transmission is in position P.
- The vehicle is unlocked or the vehicle is locked and the distance between the key and the vehicle does not exceed 3 ft (1 m).
- The vehicle has not been started.
- The charging cable is not in tension.

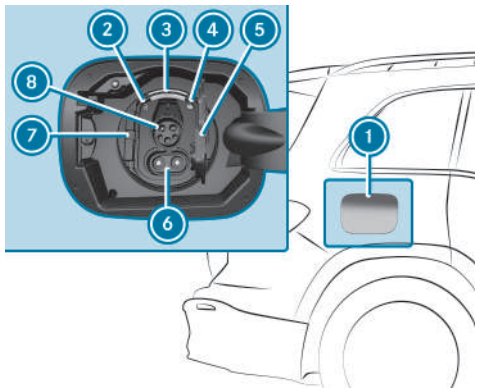

► Press on the center rear of socket flap (1) and swing the socket flap to the front.
The indicator lamp (2) and upper status display (3) light up white.

ⓘ The socket flap (1) can also be opened via the multimedia system (⟶ page 310).

► Press catch (7) to the left and open socket cover (5).

ⓘ Only connection (8) is required for the charging cable plug. Only open the upper part of socket cover (5).

► **Mercedes-Benz Power Charger:** select the appropriate connecting cable and plug it into the operating unit (see Mercedes-Benz Power Charger Operating Instructions).

- To charge at an AC socket, fully insert the power plug into the AC socket of the external power source and observe the maximum permissible charging current (⟶ page 299).
- **Mercedes-Benz Power Charger:** if necessary, set the maximum charging current (see the Mercedes-Benz Power Charger Operating Instructions).
- Fully insert the charging cable plug into vehicle socket (8). If the wallbox/charging station is not equipped with a connecting cable, fully insert the plug of the vehicle's charging cable into the wallbox/charging station socket.

  Make sure that the inserted charging cable is not in tension.

  If the charging station is enabled, the indicator lamp (4) and lower status display (3) flash orange, and green as soon as the high-voltage battery is being charged.

ⓘ If the charging orchestration for the ambient lighting is activated, the ambient lighting lights up for about 30 seconds analogous to status display (3) (⟶ page 249).
When the Sound Experience is switched on, various situations, such as plugging in the charging cable plug or the start of the charging process, are accompanied by selected sounds (⟶ page 548).

When the charging cable is connected to the vehicle, the vehicle cannot be started or moved.

At the start of the charging process, the state of charge indicator is shown on the driver display with a charging prediction. The charging prediction is the point in time at which the high-voltage battery will be fully charged.


ⓘ Depending on the temperature, the fan and battery cooling system may audibly switch on during the charging process.

ⓘ If the vehicle is idle for long periods and connected to the power grid, the high-voltage battery will be recharged automatically as needed or when electrical consumers are activated (e.g. pre-entry climate control).

Ending the AC charging process (level 1/2)

Requirements:

- The vehicle is unlocked or the vehicle is locked and the distance between the key and the vehicle does not exceed 3 ft (1 m).

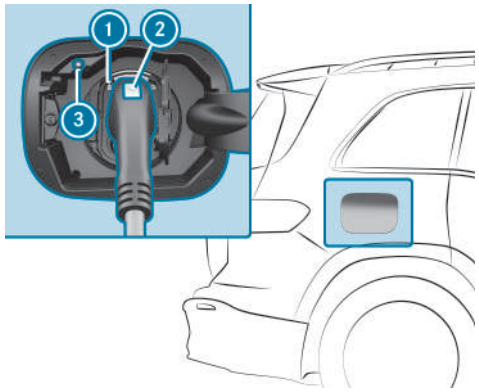

- Press 'Cancel charging' button (3).

  The charging process is ended. The indicator lamp (1) lights up white. The vehicle socket is unlocked.

ⓘ As an alternative, and only if the 'Cancel charging' button (3) is not working, you can unlock the vehicle using the vehicle key or centrally from inside to end the charging process. If the [🔓] indicator lamp (1) then lights up white, the vehicle socket is unlocked for around 30 seconds.

ⓘ The charging process can also be ended via the multimedia system (⟶ page 310).

► Press and hold button (2) on the charging cable plug and remove the charging cable plug from the vehicle socket.

ⓘ If you cannot remove the charging cable plug, repeat the unlocking procedure. If the charging cable plug is still locked, contact a qualified specialist workshop.

► Close the socket cover and the socket flap.

ⓘ The [🔓] indicator lamp (1) on the vehicle socket remains lit for some time after the charging cable plug has been disconnected and then goes out.


► Remove the charging cable plug from the AC socket, or from the socket on the wallbox/charging station, and stow the vehicle's charging cable safely in the vehicle (⟶ page 303).

Starting the DC charging process (level 3)

Observe the information on charging the high-voltage battery (⟶ page 293).

Requirements:

- The transmission is in position [P].
- The vehicle is unlocked or the vehicle is locked and the distance between the key and the vehicle does not exceed 3 ft (1 m).
- The vehicle has not been started.
- The charging cable is not in tension.

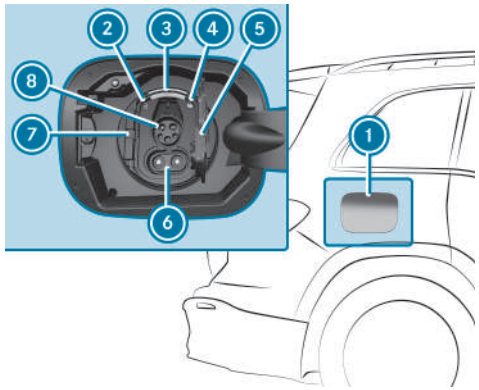

► Press on the center rear of socket flap (1) and swing the socket flap to the front.
The [🔓] indicator lamp (2) and upper status display (3) light up white.

ⓘ Socket flap (1) can also be opened via the multimedia system (⟶ page 310).

► Press catch (7) to the left and open socket cover (5).

ⓘ Connections (6) and (8) are required for the CCS charging cable plug. Both sections of socket cover (5) must therefore be opened.

► Fully insert the CCS charging cable plug into the vehicle socket.
Make sure that the inserted charging cable is not in tension.
If the charging station is enabled, the [⊟+] indicator lamp (4) and lower status display (3) flash orange, and green as soon as the high-voltage battery is being charged.

ⓘ If the charging orchestration for the ambient lighting is activated, the ambient lighting lights up for about 30 seconds analogous to status display (3) (⟶ page 249).
When the Sound Experience is switched on, various situations, such as plugging in the charging cable plug or the start of the charging process, are accompanied by selected sounds (⟶ page 548).

When the charging cable is connected to the vehicle, the vehicle cannot be started or moved.

At the start of the charging process, the state of charge indicator is shown on the driver display with a charging prediction. The charging prediction either refers to the predicted state of charge at the set departure time, or the time at which the high-voltage battery will be fully charged.


ⓘ Depending on the temperature, the fan and battery cooling system may audibly switch on during the charging process.

ⓘ If the vehicle is idle for long periods and connected to the power grid, the high-voltage battery will be recharged automatically as needed or when electrical consumers are activated (e.g. pre-entry climate control).

Ending the DC charging process (level 3)

Requirements:

- The vehicle is unlocked or the vehicle is locked and the distance between the key and the vehicle does not exceed 3 ft (1 m).

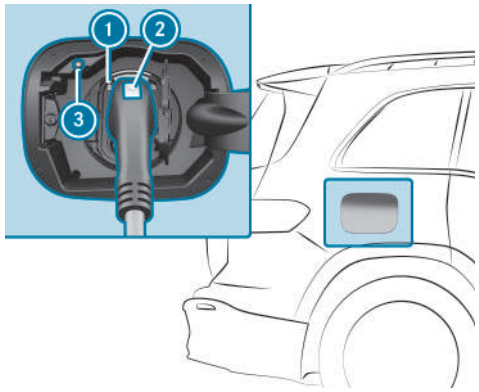

► Press 'Cancel charging' button (3).
The charging process is ended. The [🔓] indicator lamp (1) lights up white. The vehicle socket is unlocked.

As an alternative, and only if 'Cancel charging' button (3) is not working, you can unlock the vehicle using the vehicle key or centrally from inside to end the charging process. If the (1) indicator lamp then lights up white, the vehicle socket is unlocked for around 30 seconds.

The charging process can also be ended via the multimedia system (→ page 310).

- Press and hold button (2) on the charging cable plug and remove the charging cable plug from the vehicle socket.


If you cannot remove the charging cable plug, unlock the vehicle and repeat the unlocking procedure. If the charging cable plug is still locked, contact a qualified specialist workshop.

- Close the socket cover and the socket flap.

The left (1) indicator lamp on the vehicle socket remains lit for some time after the charging cable plug has been disconnected and then goes out.

Function of the charge level display on the driver display

The data in the illustration is shown as an example.

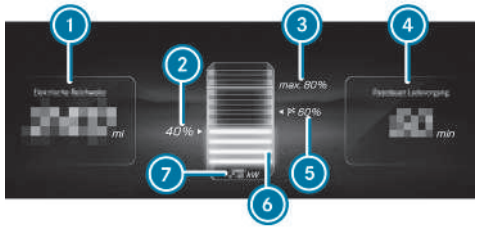

Example

1. Remaining range at current state of charge
2. Current state of charge of the high-voltage battery
3. Maximum state of charge (as per the setting)
4. Expected end of charge cycle or remaining time until fully charged (up to the selected maximum state of charge)
5. State of charge recommended by the range monitor to reach the next destination
6. Dynamic charge level display
7. Current charging capacity

Indicated remaining range (1) may vary due to various factors, e.g. driving style or topography.

The driver display shows the charge level display for around two minutes when the charging cable is connected. As long as the charging cable is connected to

the vehicle, the charge level display is also displayed briefly after unlocking or locking the vehicle or after opening a door.

The value of current charging capacity (7) can differ from the display on the charging station. At a charging capacity of 10 kW or higher, the value in the charge level display is rounded off and shown without a decimal place.

The value in (4) varies depending on the charging process setting. It displays the charging prediction, e.g. the time at which the selected state of charge will be reached or the state of charge at the pre-selected departure time.

Configure the charging settings

Multimedia system:

→ Home » EQ » Charging

SETTING THE CHARGING PROGRAM

► Select Home, Work or Standard.

ⓘ When driving to a charging station, the temperature of the vehicle's high-voltage battery is optimized so that the maximum charging power can be accessed at the charging station. On the central display, the pre-temperature control of the battery is marked with [icon] and the approved maximum DC charging power in kW until the optimum battery temperature is reached. The advance temperature control of the battery is completed and the corresponding symbol faded out as soon as there are adequate battery temperature conditions.

IN THE FOLLOWING SITUATIONS, THE DISPLAY OF THE APPROVED DC CHARGING POWER IS HIDDEN:

- The maximum charging power of the vehicle battery has been reached.
- The driver cancels the journey to the charging station.
- A vehicle plug is connected to the vehicle.

ⓘ The range recharged during a charging process is marked on the central display with [icon].

You can watch an animation on this topic via the following link:

OPENING THE SOCKET FLAP IN THE MBUX MULTIMEDIA SYSTEM

► Open Socket Flap to open the socket flap.

► The charging process can be interrupted using Cancel Charging. The charging process is ended and the charging cable is unlocked.

ⓘ Further notes on charging with alternating current: (→ page 305) or direct current: (→ page 307).

UNLOCKING THE CHARGING CABLE (LEVEL 2 OR 3)

ⓘ When the function is active, the charging cable is unlocked when the maximum state of charge is reached.

► Select Home or Work.

► Activate or deactivate Unlock Charging Cable.

ACTIVATING OR DEACTIVATING LOCATION-BASED CHARGING

► Select Charging Program, Home or Charging Program, Work .

► Activate or deactivate Select Based on Location.

When the function is activated, the vehicle's current position is saved as one of the selected options. The charging program is automatically switched when arriving at the address again.

SETTING THE DEPARTURE TIME

The set departure times are used for the vehicle's pre-entry climate control and for predictions regarding the approximate state of charge and range at the time selected.

► Select Departure Time.

THE FOLLOWING CHARGING TIMES CAN BE SELECTED:

- Individual charging times
- A Week Profile

SETTING AN INDIVIDUAL DEPARTURE TIME

► Select Add New Time and set a new departure time.

or

► Select [✎] and adjust an existing departure time.

SETTING REPEAT DAYS

► Select Add New Time and set a new departure time.

► Mark the relevant weekdays for which the departure time will apply and confirm with [OK].

or

► Select [✎] and edit existing repeat days.

CHARGING POWER

► Select [ⓘ].

The reasons for a reduction in the current charging power are displayed.

VARIOUS INFLUENCES CAN LEAD TO A REDUCTION IN THE MAXIMUM CHARGING POWER:

- Insufficient battery temperature [🔋].
- Current SOC range of the battery in which reduced charging power can contribute to the longevity of the battery [🔋].
- Reduced charging power at the charging station [🔌].
- Charging system
- Charge control

Additional values for the current charging power and the maximum available charging power are available under Charging Power Arriving at Battery.

Parking

Parking the vehicle

WARNING
Risk of accident and injury caused by an insufficiently secured vehicle rolling away

If the vehicle is not securely parked sufficiently, it can roll away in an uncontrolled way even at a slight downhill gradient.

- ► On uphill or downhill gradients, turn the front wheels so that the vehicle rolls towards the curb if it starts moving.
- ► Apply the parking brake.
- ► Switch the transmission to position P.

WARNING
Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:

- releasing the parking brake.
- changing the gearbox position.
- starting the vehicle.

- ► Never leave children unattended in the vehicle.
- ► When leaving the vehicle, always take the key with you and lock the vehicle.
- ► Keep the key out of reach of children.


NOTE
Damage to the vehicle due to it rolling away

- Always secure the vehicle against rolling away.

IF THE VEHICLE IS PARKED FOR A LENGTHY PERIOD, OBSERVE THE FOLLOWING INFORMATION:

- At very low outside temperatures below 32 °F (0 °C) in particular, ensure that the state of charge of the high-voltage battery is at least 20 %. This will help you to avoid any problems when you start the vehicle again.
- If possible, avoid parking spaces in direct sunlight.

Observe the information on charging the high-voltage battery (⟶ page 293).

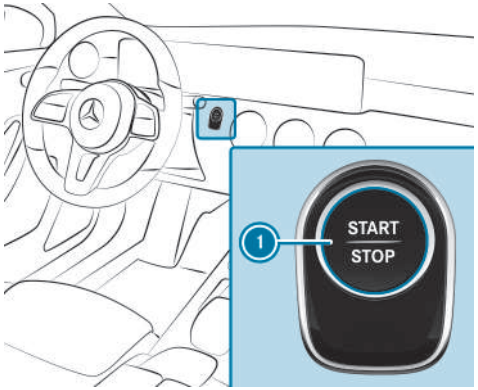

- Bring the vehicle to a standstill by depressing the brake pedal.
- On uphill or downhill gradients, turn the front wheels so that the vehicle will roll towards the curb if it starts moving.
- Apply the electric parking brake.
- Engage transmission position P with the vehicle stationary and the brake pedal depressed (⟶ page 289).
- Switch off the vehicle by pressing the button 1.
- Release the service brake slowly.
- Exit and then lock the vehicle.

When you park the vehicle, you can still operate the side windows and the panoramic sliding sunroof for approximately four minutes as long as the driver's door is closed.

Garage door opener (HomeLink®)

PROGRAMMING THE HOMELINK® BUTTONS

WARNING
Risk of injury by becoming trapped when opening and closing a garage door

When you operate or program a garage door with an integrated garage door opener, persons can become trapped or struck by the garage door if they stand within its range of movement.

- Always make sure that nobody is within the range of the garage door's movement.

ONLY OPERATE THE FOLLOWING DOORS USING THE GARAGE DOOR OPENER:


- Doors with a safety stop and reversing function
- Doors that comply with the applicable safety standards

Before programming the garage door opener, park the vehicle outside the garage. Ensure that the vehicle is switched on but not started.

Requirements:

- The vehicle has been parked outside the garage or outside the range of movement of the door.
- The vehicle is switched on.
- The vehicle is not in READY (→ page 272).
- The original remote control for the garage door is used.

ⓘ The garage door opener function is always available when the vehicle is switched on.

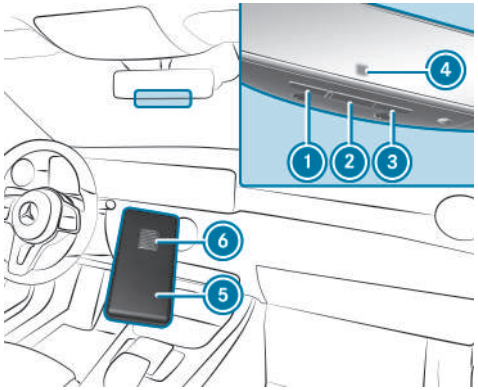

► **Programming procedure:** press the button to be programmed (1, 2 or 3) and then release it.

If the selected button is not programmed, the indicator lamp 4 flashes orange slowly.

ⓘ To reprogram a button that has already been programmed, press the corresponding button until the indicator lamp 4 starts to flash orange slowly. This may take up to 20 seconds.

► Point the remote control 5 from a distance of between 2 in (5 cm) and 12 in (30 cm) underneath the mirror towards button 1, 2 or 3.

► Press and hold the button 6 on the remote control 5 until one of the following signals appears:

- The indicator lamp 4 lights up green continuously. Programming is complete.
- The indicator lamp 4 flashes green. Programming was successful.

The selected HomeLink® button is now programmed.

► **Test the programming:** press and hold the HomeLink® button for two seconds.

► Release the HomeLink® button and, after three seconds, press and hold it again for two seconds.

► Repeat this process once more (three times in total).

ⓘ If you have a garage door system with fixed code or QuickTrain technology, pressing the programmed HomeLink® button opens or closes the garage door.

If the garage door is not working and the indicator lamp (4) is flashing quickly, you must perform rolling code synchronization (→ page 315).

PERFORMING ROLLING CODE SYNCHRONIZATION (IF REQUIRED)

WARNING
Risk of injury by becoming trapped when opening and closing a garage door

When you operate or program a garage door with an integrated garage door opener, persons can become trapped or struck by the garage door if they stand within its range of movement.

► Always make sure that nobody is within the range of the garage door's movement.

ONLY OPERATE THE FOLLOWING DOORS USING THE GARAGE DOOR OPENER:

- Doors with a safety stop and reversing function
- Doors that comply with the applicable safety standards


Before programming the garage door opener, park the vehicle outside the garage. Ensure that the vehicle is switched on but not started.

The garage door opener function is always available when the vehicle is switched on.

If the garage door is not working and the indicator lamp in the inside mirror is flashing quickly, your garage door system operates with rolling code. In this case, you must perform rolling code synchronization.

Information on rolling code synchronization: In the following steps, you must press the "Learn" "Program" or "Smart" button on the garage door opener in your garage. Please note that the names of the buttons may vary depending on the manufacturer. For more information, refer to the Operator's Manual for the garage door opener.

- Have someone help you so that the steps can be carried out faster and more easily.
- You may need a ladder or something of similar stability to help you reach the buttons. Do not stand on your vehicle to carry out these steps!
- Certain timings must be observed for the following steps. It may be necessary to try carrying out the steps several times.

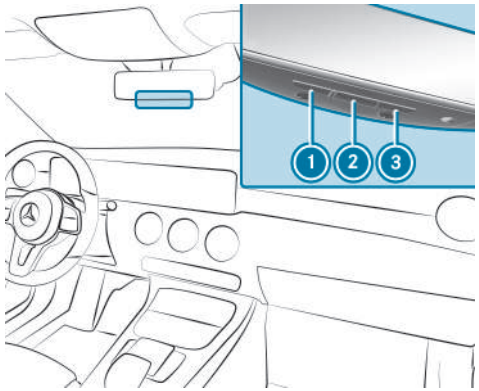

► Find the "Learn", "Program" or "Smart" button on the garage door opener in the garage.

The shape and color of the buttons vary depending on the manufacturer.

► Press the "Learn", "Program" or "Smart" button.

Depending on the manufacturer of the garage door opener, an indicator lamp may start to flash.

- ▶ Within 30 seconds, press and hold the HomeLink® button in the vehicle for three seconds.
- ▶ Press the HomeLink® button again and hold it for three seconds.
- ▶ Repeat this process once more (three times in total).

  Rolling code synchronization is now complete. HomeLink® should now activate your garage door equipped with a rolling code.

ⓘ Please note that some garage door openers may require the HomeLink® button to be pressed for different lengths of time during the synchronization process. Observe the Operator's Manual for the garage door manufacturer.
More information can be found on the https://www.homelink.com

RESOLVING PROBLEMS WHEN PROGRAMMING HOMELINK®

⚠ **WARNING**
Risk of injury by becoming trapped when opening and closing a garage door

When you operate or program a garage door with an integrated garage door opener, persons can become trapped or struck by the garage door if they stand within its range of movement.

- ▶ Always make sure that nobody is within the range of the garage door's movement.


ONLY OPERATE THE FOLLOWING DOORS USING THE GARAGE DOOR OPENER:

- Doors with a safety stop and reversing function
- Doors that comply with the applicable safety standards

Before programming the garage door opener, park the vehicle outside the garage. Ensure that the vehicle is switched on but not started.

ⓘ The garage door opener function is always available when the vehicle is switched on.

- ▶ Ensure that the remote control used for programming is approved by the manufacturer of the garage door opener and activates the door.

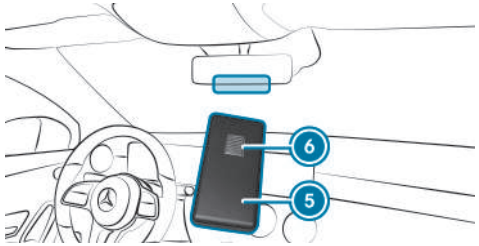

- ▶ Replace the batteries in the remote control (5).
- ▶ Hold the remote control (5) at various angles in front of the inside mirror from a distance of between 2 in (5 cm) and 12 in (30 cm).

  Hold each position for at least 25 seconds before trying another position.
- ▶ Hold the remote control (5) at the same angles at various distances in front of the inside mirror. You should test every position for at least 25 seconds before trying another position.
- ▶ On remote controls that only transmit for a limited period, press the button (6) on the remote control (5) again before transmission ends.

SUPPORT AND ADDITIONAL PROGRAMMING INFORMATION:

- **United States (U.S.):** call the free HomeLink® hotline on 1-800-355-3515
- Visit the https://www.homelink.com

DELETING THE HOMELINK® BUTTONS

WARNING
Risk of injury by becoming trapped when opening and closing a garage door

When you operate or program a garage door with an integrated garage door opener, persons can become trapped or struck by the garage door if they stand within its range of movement.


► Always make sure that nobody is within the range of the garage door's movement.

ONLY OPERATE THE FOLLOWING DOORS USING THE GARAGE DOOR OPENER:

- Doors with a safety stop and reversing function
- Doors that comply with the applicable safety standards

Before programming the garage door opener, park the vehicle outside the garage. Ensure that the vehicle is switched on but not started.

The garage door opener function is always available when the vehicle is switched on.

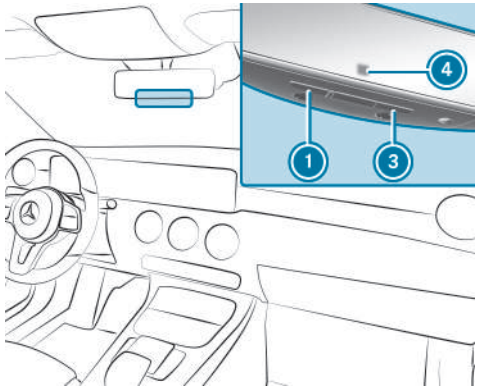

► Press and hold buttons 1 and 3.
The indicator lamp 4 lights up orange.

► If the indicator lamp 4 flashes green, release buttons 1 and 3.
This may take up to 10 seconds.
The entire memory has been deleted.

SPECIAL PROGRAMMING MODES (IF REQUIRED)

WARNING
Risk of injury by becoming trapped when opening and closing a garage door

When you operate or program a garage door with an integrated garage door opener, persons can become trapped or struck by the garage door if they stand within its range of movement.

► Always make sure that nobody is within the range of the garage door's movement.

ONLY OPERATE THE FOLLOWING DOORS USING THE GARAGE DOOR OPENER:

- Doors with a safety stop and reversing function
- Doors that comply with the applicable safety standards

Before programming the garage door opener, park the vehicle outside the garage. Ensure that the vehicle is switched on but not started.

ⓘ The garage door opener function is always available when the vehicle is switched on.

D-mode: A special programming mode is required for some devices available on the market. Only use this if this is expressly stated in the programming instructions in the Operator's Manual for the device or on the https://www.homelink.com.

Electric parking brake

FUNCTION OF THE ELECTRIC PARKING BRAKE (APPLYING AUTOMATICALLY)

⚠ **WARNING**
Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:

- releasing the parking brake.
- changing the gearbox position.
- starting the vehicle.

► Never leave children unattended in the vehicle.

► When leaving the vehicle, always take the key with you and lock the vehicle.

► Keep the key out of reach of children.

THE ELECTRIC PARKING BRAKE IS APPLIED IF THE TRANSMISSION IS IN POSITION P AND ONE OF THE FOLLOWING CONDITIONS IS FULFILLED:

- The vehicle is switched off.

- The driver's seat belt is not fastened and the driver's door is opened.

ⓘ To prevent application: pull the handle of the electric parking brake (⟶ page 320).

IN THE FOLLOWING SITUATIONS, THE ELECTRIC PARKING BRAKE IS ALSO APPLIED:

- The HOLD function is keeping the vehicle stationary.
- Active Distance Assist DISTRONIC is bringing the vehicle to a standstill.
- Active Parking Assist is keeping the vehicle stationary.
- **In addition, one of the following conditions must be fulfilled:**
  - The vehicle is switched off.
  - The driver's seat belt is not fastened.
  - There is a system malfunction.
  - The power supply is insufficient.
  - The vehicle is stationary for a lengthy period.

When the electric parking brake is applied, the red indicator lamp lights up on the driver display PARK (USA) or Ⓟ (Canada).

FUNCTION OF THE ELECTRIC PARKING BRAKE (AUTOMATIC RELEASE)

THE ELECTRIC PARKING BRAKE IS RELEASED WHEN THE FOLLOWING CONDITIONS ARE FULFILLED:

- The driver's door is closed.
- The vehicle has been started.
- The transmission is in position D or R and you depress the accelerator pedal, or you shift from transmission position P to D or R on level ground.
- If the transmission is in position R, the tailgate must be closed.
- The driver's seat belt is properly fastened.

  If the driver's seat belt is not fastened, the following condition must be met:
  - You shift out of transmission position P.

When the electric parking brake is released, the red PARK (USA) or Ⓟ (Canada) indicator lamp on the driver display goes out.

APPLYING/RELEASING THE ELECTRIC PARKING BRAKE MANUALLY

WARNING
Risk of accident and injury due to children left unattended in the vehicle

IF YOU LEAVE CHILDREN UNATTENDED IN THE VEHICLE, THEY COULD, IN PARTICULAR:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

IN ADDITION, THE CHILDREN COULD ALSO SET THE VEHICLE IN MOTION BY, FOR EXAMPLE:


- releasing the parking brake.
- changing the gearbox position.
- starting the vehicle.

► Never leave children unattended in the vehicle.

► When leaving the vehicle, always take the key with you and lock the vehicle.

► Keep the key out of reach of children.


APPLYING

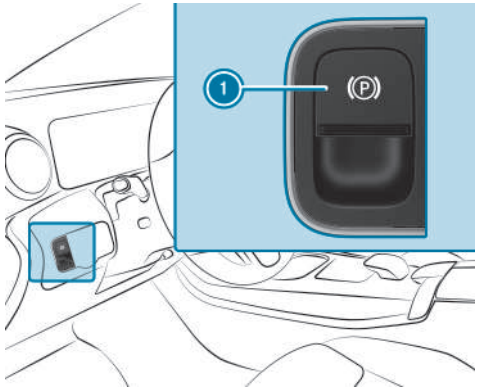

► Push handle (1).
The red indicator lamp PARK (USA) or Ⓟ (Canada) lights up on the driver's display.

ⓘ The electric parking brake is only securely applied if the red indicator lamp PARK (USA) or Ⓟ (Canada) is lit continuously.


RELEASING

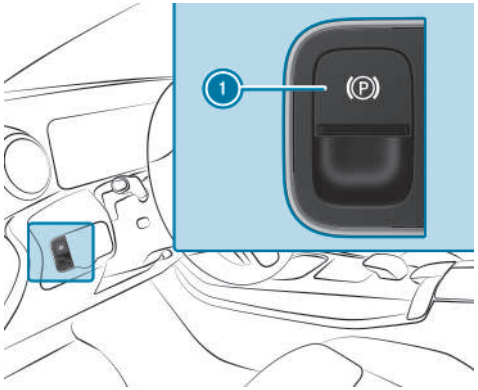

- Switch on the vehicle.
- Pull handle (1).

  The red indicator lamp PARK (USA) or (Canada) on the driver's display goes out.

EMERGENCY BRAKING

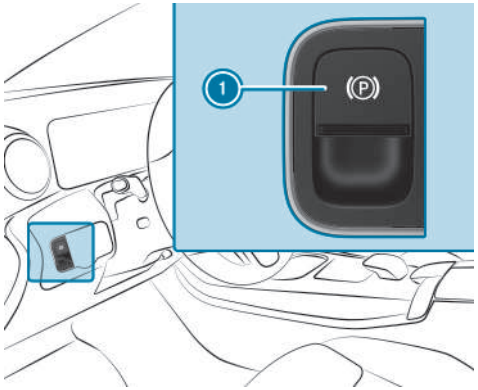

- Press and hold handle (1).

  As long as the vehicle is in motion, the Release Parking Brake message is displayed and the red PARK (USA) or (Canada) indicator lamp flashes.

  When the vehicle has been braked to a standstill, the electric parking brake is applied. The red PARK (USA) or (Canada) indicator lamp lights up on the driver display.

Information on collision detection for a parked vehicle

If an impact is detected with tow-away protection switched on in the vehicle, and collision detection is active, a message is displayed in the multimedia system when the vehicle is switched on.

YOU WILL THEN RECEIVE INFORMATION REGARDING THE FOLLOWING:

- The area of the vehicle that may have been damaged.
- The force of the impact.

THE FOLLOWING SITUATIONS CAN LEAD TO INADVERTENT ACTIVATION:

- The parked vehicle is moved, forexample in a double-decker garage.
- The locked vehicle is parked in a car wash.

Deactivate tow-away protection to prevent inadvertent activation. If you deactivate tow-away protection, collision detection will also be deactivated.
You can permanently deactivate collision detection via the multimedia system (→ page 322).

If the battery is heavily discharged, the function for collision detection on a parked vehicle is automatically deactivated to facilitate the next vehicle start.

SYSTEM LIMITS

DETECTION MAY BE RESTRICTED IN THE FOLLOWING SITUATIONS:

- if damage is caused to the vehicle without impact, for example, if an outside mirror is torn off or the paint is damaged by a key
- in the event of an impact involving the collision partner at low speed
- if the electric parking brake is not applied

You are responsible for your vehicle. You should therefore always ensure that your vehicle is free of damage and is roadworthy.

Setting collision detection for a parked vehicle

Multimedia system:

Settings » Vehicle » Open/Close » Vehicle Protection

- Activate or deactivate the function via Tow-away Alarm.

Driving and driving safety systems

Driving systems and your responsibility

Your vehicle is equipped with driving systems that assist you in driving, parking and maneuvering the vehicle. The driving systems are only aids. They are not a substitute for you paying attention to your surroundings and do not relieve you of your responsibility pertaining to road traffic law. The driver is always responsible for maintaining a safe distance to the vehicle in front, for vehicle speed, for braking in good time and for staying in lane. Pay attention to the traffic conditions at all times and intervene when necessary. Be aware of the limitations regarding the safe use of these systems.

Driving systems can neither reduce the risk of an accident if you fail to adapt your driving style nor override the laws of physics. They cannot always take into account road, weather or traffic conditions.

ⓘ Some driving systems can regulate or limit the speed to a previously set value. Draw attention to the stored speed when changing drivers.


Information on vehicle sensors and cameras

⚠ **WARNING**
Risk of accident if the detection capability of the vehicle sensors or cameras is impaired

If the areas of the vehicle sensors or cameras are obscured, damaged or dirty, some driving and driving safety systems may no longer function correctly. There is a risk of an accident.

- ► Always keep the areas of the vehicle sensors and cameras clear of obstructions and clean.
- ► Have damage to the bumpers, radiator shell or stone chipping in the area of the cameras in the windshield repaired at a qualified specialist workshop.

Some driving and driving safety systems use cameras as well as radar or ultrasonic sensors to monitor the area in front of, behind or next to the vehicle.

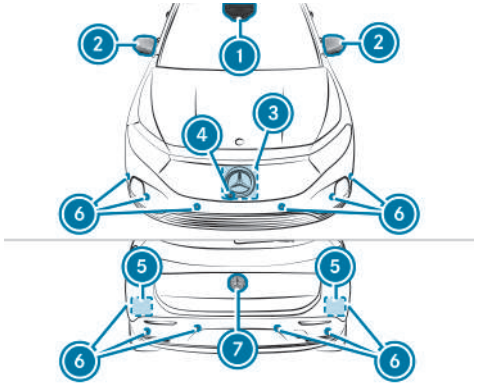

1 Multifunction camera
2 Cameras in the exterior mirrors
3 Front radar
4 Front camera
5 Corner radars
6 Ultrasonic sensors
7 Reversing camera

Keep the areas of the cameras and sensors in particular free of dirt, ice and slush (⟶ page 566). The sensors and cameras must not be obscured and the detection ranges around them must be kept clear. Do not attach additional license plate brackets, advertisements, stickers, wraps or rock chip protection films in the detection range of the sensors and cameras. Make sure there are no overhanging loads protruding into the detection range.

If there is damage to a bumper or the radiator shell, or after an impact, have the function of the sensors checked at a qualified specialist workshop. Have damage or stone chipping in the area of the cameras in the windshield repaired at a qualified specialist workshop.

ⓘ The rear-view camera may retract and extend automatically for calibration purposes, even if no camera image appears on the display.

Overview of driving systems and driving safety systems

DRIVING SYSTEMS AND DRIVING SAFETY SYSTEMS

- ABS (⟶ page 325)
- BAS (⟶ page 325)
- ESP® (⟶ page 326)
- ESP® Crosswind Assist (⟶ page 327)
- EBD (⟶ page 327)
- STEER CONTROL (⟶ page 327)
- HOLD function (⟶ page 328)
- Hill Start Assist (⟶ page 329)
- ATTENTION ASSIST (⟶ page 329)
- Cruise control (⟶ page 331)
- Traffic Sign Assist (⟶ page 351)
- Suspension with adaptive damping adjustment (⟶ page 358)

DRIVING ASSISTANCE PACKAGE

- Active Distance Assist DISTRONIC (⟶ page 334)
- Active Speed Limit Assist (⟶ page 340)
- Route-based speed adaptation (⟶ page 341)
- Active Brake Assist (⟶ page 346)
- Active Steering Assist (⟶ page 343)

- Active Emergency Stop Assist (⟶ page 345)
- Blind Spot Assist with exit warning (⟶ page 354)
- Active Lane Keeping Assist (⟶ page 356)

ⓘ These functions are part of the Driving Assistance Package. Certain functions are only available in some countries. Some functions are also available without the Driving Assistance Package, albeit with a restricted range of functions.

PARKING SYSTEMS

- Reversing camera (⟶ page 358)
- 360° camera (⟶ page 362)
- Parking Assist PARKTRONIC (⟶ page 366)
- Active Parking Assist (⟶ page 369)

ⓘ Availability of individual functions depends on the respective equipment or country of use.

Function of ABS

THE ANTI-LOCK BRAKE SYSTEM (ABS) REGULATES THE BRAKE PRESSURE IN CRITICAL DRIVING SITUATIONS:

- During braking, for instance, at maximum full-stop braking or if there is insufficient tire traction, the wheels are prevented from locking.
- Vehicle steerability while braking is ensured.

If ABS intervenes when braking, you will feel a pulsing in the brake pedal. The pulsating brake pedal can be an indication of hazardous road conditions and can serve as a reminder to take extra care while driving.

SYSTEM LIMITS

- ABS is active from speeds of approx. 3 mph (5 km/h).
- ABS may be impaired or may not function if a malfunction has occurred and the yellow (ABS) ABS warning lamp lights up continuously after the vehicle is started.

Function of BAS

⚠ **WARNING**
Risk of an accident caused by a malfunction in BAS (Brake Assist System)

If BAS is malfunctioning, the braking distance in an emergency braking situation is increased.

► Depress the brake pedal with full force in emergency braking situations. ABS prevents the wheels from locking.

The Brake Assist System (BAS) supports your emergency braking situation with additional brake force.

IF YOU DEPRESS THE BRAKE PEDAL QUICKLY, BAS IS ACTIVATED:

- BAS automatically boosts the brake pressure.
- BAS can shorten the braking distance.
- ABS prevents the wheels from locking.

The brakes will function as usual once you release the brake pedal. BAS is deactivated.

ESP® (Electronic Stability Program)

FUNCTION OF ESP®

CHARACTERISTICS WHEN ESP® IS ACTIVATED

THE ELECTRONIC STABILITY PROGRAM (ESP®) CAN MONITOR AND IMPROVE DRIVING STABILITY AND TRACTION IN THE FOLLOWING SITUATIONS WITHIN PHYSICAL LIMITS:

- when starting off on wet or slippery roads
- when braking

IF THE VEHICLE DEVIATES FROM THE DIRECTION DESIRED BY THE DRIVER, ESP® CAN STABILISE THE VEHICLE BY INTERVENING IN THE FOLLOWING WAYS:

- One or more wheels are individually braked.
- The output of the drive system is adjusted according to the situation.

WHEN ESP® IS DEACTIVATED, THE OFF WARNING LAMP LIGHTS UP CONTINUOUSLY:

- Driving stability will no longer be improved.
- The drive wheels could spin.
- ETS/4ETS traction control is still active.

WHEN THE WARNING LAMP FLASHES, ONE OR SEVERAL WHEELS HAS REACHED ITS GRIP LIMIT:

- Adapt your driving style to suit the current road and weather conditions.
- Do not deactivate ESP®.
- Only depress the accelerator pedal as far as is necessary when starting off.

CHARACTERISTICS WHEN ESP® IS DEACTIVATED

WARNING
Risk of skidding if ESP® is deactivated

If you deactivate ESP®, ESP® cannot carry out vehicle stabilization.

► ESP® should only be deactivated in the following situations.

TO IMPROVE TRACTION, ESP® CAN BE SWITCHED OFF IN THE FOLLOWING SITUATIONS:

- when using snow chains
- in deep snow
- on sand or gravel

Spinning the wheels results in a cutting action, which enhances traction.

If the warning lamp lights up continuously, ESP® is not available due to a malfunction.

OBSERVE THE FOLLOWING INFORMATION:

- Indicator and warning lamps (⟶ page 759)
- Display messages (⟶ page 708)

ETS/4ETS
ETS/4ETS traction control (Electronic Traction System) is part of ESP® and makes it possible to pull away and accelerate on a slippery road.

ETS/4ETS CAN IMPROVE THE VEHICLE'S TRACTION BY INTERVENING IN THE FOLLOWING WAYS:

- The drive wheels are braked individually if they spin.
- More drive torque is transferred to the wheel or wheels with traction.

INFLUENCE OF DRIVE PROGRAMS ON ESP®
The drive programs enable ESP® to adapt to different weather and road conditions as well as the driver's preferred driving style. Depending on the selected drive program, the appropriate ESP® mode will be activated (⟶ page 284).

FUNCTION OF ESP® CROSSWIND ASSIST

ESP® CROSSWIND ASSIST DETECTS SUDDEN GUSTS OF SIDE WIND AND HELPS THE DRIVER TO KEEP THE VEHICLE IN THE LANE:

- ESP® Crosswind Assist operates at vehicle speeds between approximately 50 mph (80 km/h) and 125 mph (200 km/h) when you are driving straight ahead or cornering slightly.
- The system stabilizes the vehicle by applying the brakes to specific wheels on one side.

SWITCHING ESP® ON OR OFF IN THE MBUX MULTIMEDIA SYSTEM
Multimedia system:



ⓘ ESP® can only be activated/deactivated using quick-access when at least one other function is available in quick-access. ESP® can otherwise be found in the Assistance menu.

- Select ESP.
- Select On or Off.

ESP® is deactivated if the ESP® OFF warning lamp lights up continuously on the driver display.

Observe the information on the warning lamps and the display messages which may be shown on the driver display.

Function of EBD

ELECTRONIC BRAKEFORCE DISTRIBUTION (EBD) IS CHARACTERIZED BY THE FOLLOWING:

- Monitoring and regulating the brake pressure on the rear wheels.
- Improved driving stability when braking, especially on bends.

Function of STEER CONTROL

STEER CONTROL assists you by transmitting a distinct steering force to the steering wheel in the direction required for vehicle stabilization.

THIS STEERING RECOMMENDATION IS GIVEN IN THE FOLLOWING SITUATIONS:

- both right wheels or both left wheels are on a wet or slippery road surface when you brake
- the vehicle starts to skid

SYSTEM LIMITS

STEER CONTROL MAY BE IMPAIRED OR INOPERATIVE IN THE FOLLOWING SITUATIONS:

- ESP® is deactivated.
- ESP® is malfunctioning.
- The steering is malfunctioning.

If ESP® is malfunctioning, the power steering continues to provide assistance.

HOLD function

HOLD FUNCTION

The HOLD function holds the vehicle at a standstill without requiring you to depress the brake pedal, e.g. while you are waiting in traffic.

The HOLD function is only an aid. The responsibility for the vehicle safely standing still remains with the driver.

SYSTEM LIMITS

The HOLD function is intended only to provide assistance during driving and is not a sufficient means of safeguarding the vehicle against rolling away when stationary.

- The gradient must not be greater than 30%.

ACTIVATING/DEACTIVATING THE HOLD FUNCTION

⚠ **WARNING**
Risk of an accident due to the HOLD function being active when you leave the vehicle

IF THE VEHICLE IS ONLY BRAKED WITH THE HOLD FUNCTION IT COULD, IN THE FOLLOWING SITUATIONS, ROLL AWAY:

- If there is a malfunction in the system or in the power supply.
- If the HOLD function is deactivated by depressing the accelerator pedal or brake pedal, e.g. by a vehicle occupant.

► Always secure the vehicle against rolling away before you leave it.

Requirements:

- The vehicle is stationary.
- The driver's door is closed or the driver is correctly belted.
- The vehicle has been started.
- The electric parking brake has been released.
- The transmission position D, R or N is engaged.

ACTIVATING THE HOLD FUNCTION

► Depress the brake pedal, and after a short time quickly depress further until the HOLD display appears on the driver display.

► Release the brake pedal.

DEACTIVATING THE HOLD FUNCTION

► Depress the accelerator pedal to start off.

or

► Depress the brake pedal until HOLD disappears from the driver display.

THE HOLD FUNCTION IS ALSO DEACTIVATED IN THE FOLLOWING SITUATIONS:

- The parking position P is engaged.
- The vehicle is secured with the electric parking brake.

IN THE FOLLOWING SITUATIONS, THE VEHICLE IS HELD BY THE PARKING POSITION P AND/OR ELECTRIC PARKING BRAKE:

- The seat belt is unfastened and the driver's door is opened.
- The vehicle is switched off.
- There is a system fault.
- The power supply is insufficient.

Function of Hill Start Assist

WARNING
Risk of accident and injury due to the vehicle rolling away

After a short time, Hill Start Assist no longer holds the vehicle.

► Swiftly move your foot from the brake pedal to the accelerator pedal. Do not leave the vehicle when it is being held by Hill Start Assist.

HILL START ASSIST HOLDS THE VEHICLE FOR A SHORT TIME WHEN YOU PULL AWAY UPHILL UNDER THE FOLLOWING CONDITIONS:

- The transmission position D or R for starting off uphill is selected.
- The electric parking brake has been released.

This gives you enough time to move your foot from the brake pedal to the accelerator pedal and depress it without the vehicle rolling away immediately.

Intelligent crawler function

The intelligent crawler function assists you when starting off, maneuvering and parking. When the brake pedal is released, the vehicle rolls in the direction of the engaged transmission position. The crawler torque is adapted when reaching an uphill gradient.

In recuperation level D AUTO (⟶ page 279) the intelligent crawler mode also assists you up to speeds of approximately 12 mph (20 km/h), by following the vehicle in front at approximately the same speed.

The intelligent crawler mode is only an aid. The driver is responsible for maintaining a sufficient distance to the vehicle in front.

SYSTEM LIMITS
The intelligent crawler mode does not automatically stop the vehicle if the vehicle in front stops. Bring the vehicle to a standstill using the brake pedal.

ATTENTION ASSIST

FUNCTION OF ATTENTION ASSIST
ATTENTION ASSIST assists you on long, monotonous journeys, e.g. on highways and trunk roads. If indicators of fatigue or increasing lapses in concentration on the part of the driver are detected, the system suggests taking a break.

ATTENTION ASSIST serves solely as an aid. It cannot always promptly detect fatigue or lapses in concentration. The system is not a substitute for a well-rested and attentive driver. On long journeys, take regular, timely breaks to allow for adequate recovery.

YOU CAN CHOOSE BETWEEN TWO SETTINGS:

- **Standard:** normal system sensitivity.
- **Sensitive:** higher system sensitivity. The driver is warned earlier and the attention level detected by ATTENTION ASSIST is adapted accordingly.

If fatigue or increasing lapses in concentration are detected, the driver display shows the warning: ATTENTION ASSIST: Take a Break!You can acknowledge the message and take a break if necessary. If you do not take a break and ATTENTION ASSIST continues to detect increasing lapses in concentration, you will be warned again after a minimum of 15 minutes.



THE FOLLOWING INFORMATION IS SHOWN ON THE DRIVER DISPLAY:

- Journey time since the last break
- The attention level determined by ATTENTION ASSIST

The more segments (1) of the circle that are displayed, the higher the detected attention level. Fewer segments (1) are displayed in the circle as the attention level decreases.

If ATTENTION ASSIST is unable to calculate the attention level and cannot issue a warning, the System Suspended message appears.

If the driver display shows a warning, the MBUX multimedia system offers to search for a rest area. You can select a rest area and start navigation to this rest area.

When you restart the vehicle, ATTENTION ASSIST is automatically switched on. The last sensitivity level selected remains stored.

SYSTEM LIMITS

ATTENTION ASSIST is active in the 37 mph (60 km/h) to 124 mph (200 km/h) speed range.

If the system is unavailable due to a malfunction, the ATTENTION ASSIST warning lamp lights up continuously on the driver display.

THE FUNCTIONALITY OF ATTENTION ASSIST IS RESTRICTED, AND WARNINGS MAY BE DELAYED OR NOT ISSUED AT ALL IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- If you have been driving for less than approximately 30 minutes
- If the road condition is poor (uneven road surface or potholes)
- If there is a strong side wind
- If you adopt a sporty driving style (high cornering speeds or high rates of acceleration)
- If the Active Steering Assist function of Active Distance Assist DISTRONIC is active
- If the clock is set to the incorrect time
- If you change lanes and vary your speed frequently in active driving situations

Observe also any information regarding display messages that may be displayed on the driver display.

THE ATTENTION ASSIST DROWSINESS AND ALERTNESS ASSESSMENT IS RESET AND RESTARTED WHEN CONTINUING THE JOURNEY IN THE FOLLOWING SITUATIONS:

- If you switch off the vehicle.
- If you unfasten your seat belt and open the driver's door (e.g. to change drivers or take a break).

SETTING ATTENTION ASSIST

Multimedia system:

Settings » Assistance » Assistance » ATTENTION ASSIST

- Activate or deactivate ATTENTION ASSIST.

SETTING THE SENSITIVITY

- Select next to ATTENTION ASSIST.
- Select Standard or Sensitive.

Speed control cruise control

FUNCTION OF CRUISE CONTROL

Cruise control regulates the speed to the value selected by the driver.

Forexample, the stored speed is not deleted if you accelerate to overtake. If you remove your foot from the accelerator pedal after overtaking, cruise control will resume speed regulation back to the stored speed.

You can set any speed above 15 mph (20 km/h) up to the maximum design speed. In the drive program E, the adjustable speed is limited to 81 mph (130 km/h).

Observe the notes on driving systems and your responsibility; otherwise you may fail to recognize potential dangers (⟶ page 323).

NOTIFICATIONS ON THE DRIVER DISPLAY

Gray: cruise control is selected but not yet activated or temporarily in passive mode.

Green: cruise control is activated.

A stored speed is shown below the display and is indicated in the speedometer.

SYSTEM LIMITS

Cruise control may be unable to maintain the stored speed on uphill gradients. The stored speed is resumed when the gradient evens out.

On long and steep downhill gradients, you must increase recuperation in good time. This is particularly important when driving a laden vehicle. The electric motor's braking effect can thus be used to charge the high-voltage battery. This will take some of the strain off the brake system and prevent the brakes from overheating and wearing too quickly.

DO NOT USE CRUISE CONTROL IN THE FOLLOWING SITUATIONS:

- In traffic situations which require frequent changes of speed, e.g. in heavy traffic, on winding roads.
- On slippery roads. Accelerating can cause the drive wheels to lose traction and the vehicle could then begin skidding.
- When visibility is poor.

OPERATING CRUISE CONTROL


WARNING
Risk of accident due to stored speed

If you call up the stored speed and this is lower than your current speed, the vehicle decelerates.

► Take into account the traffic situation before calling up the stored speed.

Requirements:

- The transmission is in position D.
- The vehicle speed is at least 15 mph (20 km/h).
- ESP® must be activated, but not intervening.
- Cruise control is selected.

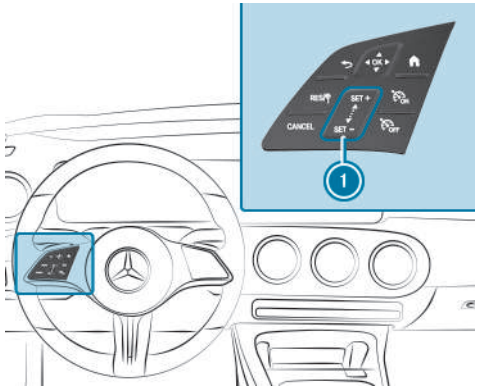

Steering wheel control panel for cruise control

RES	Adopts the stored/detected speed
CANCEL	Deactivates cruise control
1 SET + SET -	Control panel to increase/decrease speed
ON	Switches on cruise control
OFF	Switches off cruise control

To switch on cruise control:

► Press ON.

To activate cruise control:

► Press SET + or SET - on the control panel 1.
The current travel speed is stored and maintained by the vehicle.

or

► Press RES.
The last stored speed is called up and maintained by the vehicle.

If the last stored speed has previously been deleted, the current vehicle speed is stored.

ⓘ When you switch off the vehicle, the last speed stored is deleted.

Increasing/decreasing the stored speed:

► To increase the stored speed: swipe upwards from the bottom of the control panel (1).
  • The stored speed is increased by 1 mph (1 km/h).

► To decrease the stored speed: swipe downwards from the top of the control panel (1).
  • The stored speed is decreased by 1 mph (1 km/h).

or

► Briefly press SET+ or SET- on the control panel (1).

THE STORED SPEED IS INCREASED OR DECREASED TO THE FOLLOWING VALUES DEPENDING ON THE RESPECTIVE UNIT OF MEASUREMENT:

  • **mph:** the next value ending in 5
  • **km/h:** the next value ending in 0

or

► Accelerate the vehicle to the desired speed.

► Press SET+ on the control panel (1).

Adopting a detected speed:

If cruise control is activated and Traffic Sign Assist has detected a traffic sign with a maximum permissible speed and this is displayed on the driver display:

► Press RES.

The maximum permissible speed shown by the traffic sign is stored, and the vehicle maintains this speed.

To deactivate cruise control:

► Press CANCEL.

To switch off cruise control:

► Press OFF.

ⓘ If you brake, deactivate ESP® or if ESP® intervenes, cruise control is deactivated.

Active Distance Assist DISTRONIC

FUNCTION OF ACTIVE DISTANCE ASSIST DISTRONIC

WARNING
Risk of accident from acceleration or braking by Active Distance Assist DISTRONIC

ACTIVE DISTANCE ASSIST DISTRONIC MAY ACCELERATE OR BRAKE IN THE FOLLOWING CASES, FOR EXAMPLE:

- If the vehicle pulls away using Active Distance Assist DISTRONIC.
- If the stored speed is called up and is considerably faster or slower than the currently driven speed.
- If Active Distance Assist DISTRONIC no longer detects a vehicle in front or does not react to relevant objects.

► Always carefully observe the traffic conditions and be ready to brake at all times.

► Take into account the traffic situation before calling up the stored speed.

WARNING
Risk of accident due to insufficient deceleration by Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC brakes your vehicle with up to 50% of the possible deceleration. If this deceleration is not sufficient, Active Distance Assist DISTRONIC alerts you with a visual and acoustic warning.

► Adjust your speed and maintain a suitable distance from the vehicle in front.

► Brake the vehicle yourself and/or take evasive action.

WARNING
Risk of accident if detection function of Active Distance Assist DISTRONIC is impaired

ACTIVE DISTANCE ASSIST DISTRONIC DOES NOT REACT OR HAS A LIMITED REACTION:

- when driving on a different lane or when changing lanes
- to pedestrians, animals, bicycles or stationary vehicles, or unexpected obstacles
- to complex traffic conditions
- to oncoming vehicles and crossing traffic

As a result, Active Distance Assist DISTRONIC may neither give warnings nor intervene in such situations.

► Always observe the traffic conditions carefully and react accordingly.

ⓘ Active Distance Assist DISTRONIC described for vehicles without Driving Assistance Package may be a Digital Extra (depending on the respective country of use) (⟶ page 89).

Active Distance Assist DISTRONIC maintains the set speed on free-flowing roads. If vehicles are detected ahead the set distance is maintained, if necessary until the vehicle comes to a standstill. The vehicle accelerates or brakes depending on the distance to the vehicle in front and the set speed.

The speed and distance to the vehicle in front are set and saved using the steering wheel.

Available speed range: 15 mph (20 km/h) - 100 mph (160 km/h)

THE ADJUSTABLE SET SPEED CAN VARY DUE TO THE FOLLOWING FACTORS:

- Drive program [E] (⟶ page 284) selected
- Stored speed restriction, e.g. winter tire limit


OTHER FEATURES OF ACTIVE DISTANCE ASSIST DISTRONIC:

- Adjusts the driving style depending on the selected drive program
- Initiates acceleration to the stored speed if the turn signal indicator is switched on to change to the overtaking lane
- **Vehicles with Driving Assistance Package:**
  - Reacts to stationary vehicles detected in urban speed ranges (except bicycles and motorcycles)
  - Takes one-sided overtaking restrictions into account on highways or multi-lane roads with separate roadways (country-dependent)

ⓘ It is possible to set the driving mode of Active Distance Assist DISTRONIC in the Active Distance Assist menu. Depending on the selected drive program, the driving behavior is energy-saving, comfortable or dynamic (⟶ page 342).

If the vehicle is braked to a standstill by Active Distance Assist DISTRONIC on multi-lane, separate roadways, it can automatically follow the vehicle in front when driving off again, depending on the respective vehicle equipment. If a critical situation is detected when driving off, a visual and audible warning is issued indicating that the driver must now take control of the vehicle. The vehicle is not accelerated any further.

Observe the notes on driving systems and your responsibility; otherwise you may fail to recognize potential dangers (⟶ page 323).

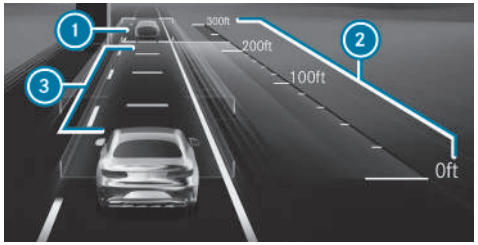

Notification on the driver display in the Assistance menu

1 Vehicle in front
2 Distance indicator
3 Set specified distance

The vehicle detected in front 1 is highlighted in green. It may also be in the lane to the right of your vehicle in situations where it is not permitted to overtake on the left, for example, on UK highways.

PERMANENT STATUS DISPLAY

Gray: Active Distance Assist DISTRONIC selected but not yet active.

Green speedometer, gray vehicle: Active Distance Assist DISTRONIC active, speed set.

Green: Active Distance Assist DISTRONIC active and vehicle detected.

The stored speed is shown under the permanent status display and highlighted on the speedometer. Active Distance Assist DISTRONIC's status display is grayed out when in passive mode.

If the speed of the vehicle in front or the ascertained target speed due to the route event ahead is less than the stored speed, the segments on the speedometer light up.

If you increase or decrease the set specified distance 3, the display appears briefly.

The green vehicle symbol is displayed cyclically when the vehicle is ready to pull away.

If the accelerator pedal is depressed while Active Distance Assist DISTRONIC is operational, the system can be switched to passive mode. The Suspended message appears briefly on the driver display.

SYSTEM LIMITS

THE SYSTEM MAY BE IMPAIRED OR INOPERATIVE IN THE FOLLOWING INSTANCES, FOREXAMPLE:

- In snow, rain, fog, heavy spray, if there is glare, in direct sunlight or in greatly varying light conditions.
- If the windshield in the area of the camera is dirty, fogged up, damaged or covered.
- If the radar sensors are dirty or covered.
- In parking garages or on roads with steep uphill or downhill gradients.
- If there are narrow vehicles in front, such as bicycles or motorcycles.

In addition, one or more wheels may lose grip due to braking or acceleration on smooth or slippery roads, and the vehicle may begin skidding. If ESP® intervenes, Active Distance Assist DISTRONIC is deactivated.

Do not use Active Distance Assist DISTRONIC in these situations.

You can watch an animation on this topic via the following link:

OPERATING ACTIVE DISTANCE ASSIST DISTRONIC

WARNING
Risk of accident if detection function of Active Distance Assist DISTRONIC is impaired

ACTIVE DISTANCE ASSIST DISTRONIC DOES NOT REACT OR HAS A LIMITED REACTION:

- when driving on a different lane or when changing lanes
- to pedestrians, animals, bicycles or stationary vehicles, or unexpected obstacles
- to complex traffic conditions
- to oncoming vehicles and crossing traffic

As a result, Active Distance Assist DISTRONIC may neither give warnings nor intervene in such situations.

► Always observe the traffic conditions carefully and react accordingly.

WARNING
Risk of accident from acceleration or braking by Active Distance Assist DISTRONIC

ACTIVE DISTANCE ASSIST DISTRONIC MAY ACCELERATE OR BRAKE IN THE FOLLOWING CASES, FOR EXAMPLE:

- If the vehicle pulls away using Active Distance Assist DISTRONIC.
- If the stored speed is called up and is considerably faster or slower than the currently driven speed.
- If Active Distance Assist DISTRONIC no longer detects a vehicle in front or does not react to relevant objects.

► Always carefully observe the traffic conditions and be ready to brake at all times.

► Take into account the traffic situation before calling up the stored speed.

WARNING
Risk of accident due to insufficient deceleration by Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC brakes your vehicle with up to 50% of the possible deceleration. If this deceleration is not sufficient, Active Distance Assist DISTRONIC alerts you with a visual and acoustic warning.

- ► Adjust your speed and maintain a suitable distance from the vehicle in front.
- ► Brake the vehicle yourself and/or take evasive action.

WARNING
Risk of accident due to speed adaptation via Active Speed Limit Assist


The speed limit adopted by Active Speed Limit Assist may be too high or otherwise erroneous in certain circumstances:

- in the case of speed limits below 12 mph (20 km/h)
- due to weather, e.g. in wet or foggy conditions

- ► Ensure that the vehicle speed always complies with the traffic regulations.
- ► Adjust the vehicle speed to the current traffic and weather conditions.

Requirements:

- The electric parking brake has been released.
- ESP® is switched on and is not intervening.
- Transmission position D is engaged.
- All the doors are closed.
- Check of the radar sensor system has been successfully completed.

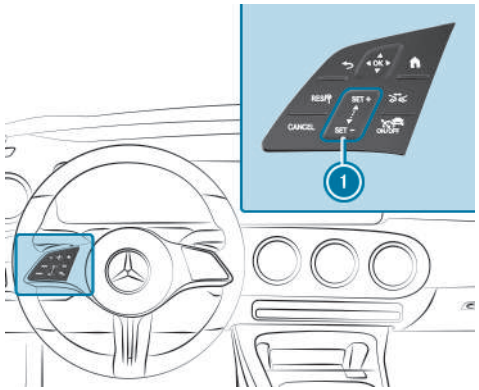

RES/	Adopts the stored/detected speed
CANCEL	Deactivates Active Distance Assist DISTRONIC
1 SET + SET -	Control panel to increase/decrease speed
	Increases/decreases the specified distance
ON/OFF	Activates/deactivates Active Distance Assist DISTRONIC

- ► **Activating/deactivating Active Distance Assist DISTRONIC: press** ON/OFF.

OPERATING ACTIVE DISTANCE ASSIST DISTRONIC

- ► Press the corresponding button with only one finger or swipe across the control panel.

ACTIVATING ACTIVE DISTANCE ASSIST DISTRONIC

- **Without stored speed:** press the control panel (1) at the top SET+ or at the bottom SET- or press RES. Remove your foot from the accelerator pedal.

or

- **With stored speed: press** RES. Remove your foot from the accelerator pedal.

  The last stored speed is called up and maintained by the vehicle.

  If the stored speed has been deleted, the current vehicle speed is stored.

INCREASING/DECREASING THE SPEED

- To increase the stored speed: swipe upwards from the bottom of the control panel (1).
  - The stored speed is increased by 1 mph (1 km/h).
- To decrease the stored speed: swipe downwards from the top of the control panel (1).
  - The stored speed is decreased by 1 mph (1 km/h).

or

- Briefly press the top SET+ or bottom SET- of the control panel (1).

  The stored speed is increased or decreased by 5 mph (10 km/h).

or

- Accelerate the vehicle to the desired speed.
- Press the top SET+ of the control panel (1).

ADOPTING THE SPEED RESTRICTION SHOWN ON THE DRIVER DISPLAY

- To activate Active Distance Assist DISTRONIC: press SET+, SET- or RES.
- To adopt the displayed speed restriction: press RES.

  The speed restriction shown on the driver display is adopted as the stored speed. The vehicle adapts its speed to that of the vehicle in front, but only up to the stored speed, or restricts its speed accordingly.

ⓘ A speed restriction shown on the driver display is adopted only while the vehicle is motion, not when it is stationary.

PULLING AWAY WITH ACTIVE DISTANCE ASSIST DISTRONIC

- Activate Active Distance Assist DISTRONIC and remove your foot from the brake pedal.
- Press RES.

or

- Depress the accelerator pedal briefly and firmly.

  The functions of Active Distance Assist DISTRONIC remain active.

INCREASING/DECREASING THE SPECIFIED DISTANCE TO THE VEHICLE IN FRONT

- Press  .

  The  display appears. The specified distance is reduced by one level.

  If the lowest level is already selected, the selection jumps to the highest level.

DEACTIVATES ACTIVE DISTANCE ASSIST DISTRONIC

WARNING
Risk of an accident due to Active Distance Assist DISTRONIC being active when you leave the driver's seat

If you leave the driver's seat while the vehicle is being braked by Active Distance Assist DISTRONIC only, the vehicle can roll away.

- Always deactivate Active Distance Assist DISTRONIC and secure the vehicle to prevent it from rolling away before you leave the driver's seat.

- Press CANCEL.

If you brake, deactivate ESP® or if ESP® intervenes, Active Distance Assist DISTRONIC is deactivated.

FUNCTION OF ACTIVE SPEED LIMIT ASSIST

WARNING
Risk of accident due to speed adaptation via Active Speed Limit Assist

The speed limit adopted by Active Speed Limit Assist may be too high or otherwise erroneous in certain circumstances:

- in the case of speed limits below 12 mph (20 km/h)
- due to weather, e.g. in wet or foggy conditions

- Ensure that the vehicle speed always complies with the traffic regulations.

- Adjust the vehicle speed to the current traffic and weather conditions.

If a change in speed limit is detected and automatic adoption of speed limits is switched on, the new speed limit will automatically be adopted as the stored speed (⟶ page 342). Speed limits below 12 mph (20 km/h) will not be adopted.

The vehicle's speed will be adjusted when the vehicle is level with the traffic sign at the latest. In the case of signs indicating entry into an urban area, the speed will be adapted according to the speed permitted within the urban area. The speed limit indicator on the driver's display will always be updated when the vehicle is level with the traffic sign.

If you are driving on a German freeway with no speed limit, the system will use the speed stored for a stretch of road with no speed limit as the set speed. If you do not alter the stored speed on a stretch of road with no speed limit, the recommended speed of 80 mph (130 km/h) will be adopted.

If you have switched Active Distance Assist DISTRONIC to passive mode by pressing the accelerator pedal, only speed limits that are higher than the stored speed will be adopted.

The maximum permissible speed does not take the road condition and current weather and traffic conditions into consideration. Adjust your speed accordingly when necessary.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize potential dangers (⟶ page 323).

SYSTEM LIMITS

The system limits of Traffic Sign Assist apply to the detection of traffic signs (⟶ page 351).

Speed limits below 12 mph (20 km/h) will not automatically be adopted by the system as the set speed. Temporary speed restrictions (e.g. for a specific time or due to weather conditions) cannot be unequivocally detected by the system.

Adjust your speed in these situations.

You can watch an animation on this topic via the following link:

FUNCTION OF ROUTE-BASED SPEED ADAPTATION

⚠ **WARNING**
Risk of accident in spite of route-based speed adaptation

Route-based speed adaptation can malfunction or be temporarily unavailable in the following situations:

- If the driver does not follow the calculated route
- If map data is not up-to-date or available
- In the event of roadworks
- In bad weather or road conditions
- If the accelerator pedal is depressed
- In the event of electronically displayed speed limitations

► Adapt the speed to the traffic situation.

When Active Distance Assist DISTRONIC is activated, the vehicle speed will be adapted to the route events ahead. Depending on the drive program selected, the vehicle negotiates a route event ahead in an energy-saving, comfortable or dynamic manner. When the route event has been passed, the vehicle accelerates again to the stored speed. The set distance to the vehicle in front, vehicles detected ahead and speed restrictions ahead are taken into account.

Route-based speed adaptation can be activated in the multimedia system (⟶ page 342).

THE FOLLOWING ROUTE EVENTS ARE TAKEN INTO ACCOUNT:

- Bends
- Roundabouts
- T-intersections

- Turns and exits

ALSO, THE SPEED IS REDUCED IF THE TURN SIGNAL INDICATOR IS SWITCHED ON AND ONE OF THE FOLLOWING SITUATIONS IS DETECTED:

- Turning off at intersections
- Driving on slowing-down lanes
- Driving on lanes adjacent to slowing-down lanes

The driver is responsible for choosing the right speed and observing other road users. This applies in particular to intersections, roundabouts and traffic lights, as route-based speed adaptation does not brake the vehicle to a standstill.

When route guidance is active, the first speed adjustment is carried out automatically. If the turn signal indicator is switched on, the selected route is confirmed and further speed adjustment is activated.

SPEED ADJUSTMENT IS CANCELED IN THE FOLLOWING CASES:

- If the turn signal indicator is switched off before the route event and it is presumed that the route event is not deemed relevant for the driver.
- If the driver depresses the accelerator or brake pedal during the process.

SYSTEM LIMITS
Route-based speed adaptation does not take right of way regulations into account. The driver is responsible for complying with road traffic regulations and driving at a suitable speed.

IN DIFFICULT CONDITIONS, THE SPEED SELECTION MADE BY THE SYSTEM MAY NOT ALWAYS BE SUITABLE. THIS APPLIES TO THE FOLLOWING SITUATIONS, FOREXAMPLE:

- The road's course is not clearly visible
- Road narrowing
- Varying maximum permissible speeds in individual lanes, forexample, at toll stations
- Wet road surfaces, snow or ice

In these situations the driver must intervene accordingly.

SETTING THE DRIVING STYLE FOR ACTIVE DISTANCE ASSIST DISTRONIC

Requirements:

- Active Distance Assist DISTRONIC is activated.

Multimedia system:
Settings » Assistance » Driving » Active Distance Assist

SELECTING A DRIVING STYLE

► Select Based on DYNAMIC SELECT, Dynamic or Comfortable.

ⓘ Additional information on Active Distance Assist DISTRONIC (⟶ page 334).

SETTING SPEED ADJUSTMENT

► Select Adopt Speed Limit or Route-based Speed Adaptation.

When these functions are active, the travel speed is adjusted depending on the route events ahead or in accordance with a speed limit.

ⓘ **IF ONE OF THE FOLLOWING SYSTEMS IS ACTIVATED, THE DETECTED SPEED CAN BE MANUALLY ADOPTED AS THE MAXIMUM PERMISSIBLE SPEED:**

- Active Distance Assist DISTRONIC

- Variable limiter

Additional information on speed adjustment (⟶ page 341).

Active Steering Assist

FUNCTION OF ACTIVE STEERING ASSIST

WARNING
Risk of accident if Active Steering Assist unexpectedly stops functioning

If the system limits of Active Steering Assist are reached there is no guarantee that the system will remain active or will keep the vehicle in lane.

- ► Always keep your hands on the steering wheel and observe the traffic carefully.
- ► Always steer the vehicle paying attention to traffic conditions.

WARNING
Risk of accident if Active Steering Assist unexpectedly intervenes

The detection of lane markings and objects may malfunction and cause unexpected steering interventions.

- ► Steer according to traffic conditions.

Active Steering Assist is available up to a speed of 100 mph (160 km/h).

The system helps you to stay in the center of the lane by means of moderate steering interventions. Depending on the vehicle speed, Active Steering Assist uses the vehicles ahead and lane markings as a reference.

Depending on the respective country of use, Active Steering Assist can use the surrounding traffic as a reference in the lower speed range. If necessary, Active Steering Assist can also assist when driving outside the center of the lane, forexample, to form an emergency corridor.

If the detection of lane markings and vehicles ahead is impaired, Active Steering Assist switches to passive mode. The system provides no support in this case.

STATUS DISPLAY OF ACTIVE STEERING ASSIST

- **Gray:** activated and in passive mode
- **Green:** activated and active
- **Red, flashing:** prompt to the driver to actively confirm or transition from active to passive mode, system limits detected
- **White, red hands:** "hands on the steering wheel" prompt

During the transition from active mode to passive mode, the symbol is shown as enlarged and flashing. Once the system is in passive mode, the symbol is shown as gray on the driver display.

Depending on the selected vehicle settings, Active Steering Assist may be unavailable.

STEERING AND TOUCH DETECTION

The driver is required to keep their hands on the steering wheel at all times to ensure that they can intervene at any time to correct the course of the vehicle and keep it in lane. The driver must anticipate a change from active mode to passive mode or vice versa at any time.



If the system detects that the driver has not steered the vehicle for a considerable period of time or has removed their hands from the steering wheel, an initial visual warning is issued. The notification (1) appears on the driver display. If the driver still does not steer the vehicle, or gives no confirmation to the system, a repetitive warning tone sounds in addition to the visual warning message.

If the driver does not react to this warning for a considerable period, an emergency stop may be initiated (→ page 345).

The warning is not issued or stops as soon as the system detects the driver touching or steering the steering wheel.

Touch detection may be limited or inoperative if there is no direct contact between the hand and the steering wheel, e.g., when wearing gloves or if there is a cover on the steering wheel.

If Active Steering Assist detects that a system limit has been reached, a visual warning is issued and a warning tone sounds.

Observe the notes on driving systems and your responsibility; otherwise you may fail to recognize potential dangers (→ page 323).

SYSTEM LIMITS

Active Steering Assist has a limited steering torque for lateral guidance. In some cases, the steering intervention is not sufficient to keep the vehicle in the lane or to drive through exits.

THE SYSTEM MAY BE IMPAIRED OR INOPERATIVE IN THE FOLLOWING SITUATIONS:

- There is poor visibility, e.g., due to snow, rain, fog, heavy spray, greatly varying light conditions or dense shadows on the roadway.
- There is glare, e.g. from oncoming traffic, direct sunlight or reflections.
- If there is insufficient road illumination.
- The windshield is dirty, fogged up, damaged, or covered in the vicinity of the camera, e.g., by a sticker.
- If there are no lane markings in a given lane, or the markings are not easily discernible or change quickly, forexample, in a construction area or at intersections.
- If the lane markings are worn away, dark or covered up, e.g. by dirt or snow.
- If the distance to the vehicle in front is too short and the lane markings can therefore not be detected.
- If the roadway is narrow and winding.
- If there are obstacles on the lane or projecting out into the lane, suchas object markers.

THE SYSTEM DOES NOT PROVIDE ASSISTANCE IN THE FOLLOWING CONDITIONS:

- in very tight bends and when turning
- when crossing intersections
- at roundabouts or toll stations
- when actively changing lane without switching on the turn signal indicator
- when the tire pressure is too low

You can watch an animation on this topic via the following link:

ACTIVATING/DEACTIVATING ACTIVE STEERING ASSIST

Requirements:

- ESP® is activated, but is not intervening.
- Active Distance Assist DISTRONIC is activated.

Multimedia system:

→ Settings >> Assistance >> Driving

▶ Activate or deactivate Active Steering Assist.

Function of Active Emergency Stop Assist

ⓘ The following function is only available in combination with the Driving Assistance Package.

Active Emergency Stop Assist monitors the steering wheel, as well as the accelerator and brake pedals. If the system detects a lack of driver activity or the vehicle is in danger of leaving the lane, a warning may be issued and an emergency stop initiated.

If Active Steering Assist is switched off, the system is available from a speed of approx. 37 mph (60 km/h).

IF THE VEHICLE IS IN DANGER OF LEAVING THE LANE, A WARNING IS ISSUED IN THE FOLLOWING INSTANCES.

- The driver has not touched the steering wheel for a certain while, or no steering movement is detected for a lengthy period (depending on the respective vehicle equipment).
- Neither the accelerator pedal nor the brake pedal is depressed.

ⓘ If Active Steering Assist is switched on and active, the system only monitors the steering wheel. If the driver has not touched the steering wheel for a certain period of time, a warning may be issued despite pedal actuation.
Observe also the notes on touch detection of Active Steering Assist (→ page 343).



ACTIVE EMERGENCY STOP ASSIST ISSUES THE FOLLOWING WARNINGS IN SUCCESSION:

- The notification (1) appears on the driver display.

- In addition to the notification (1), a warning tone sounds.
- The Emergency Stop Initiated To Cancel: Operate Steering Wheel and a Pedal message appears on the driver display, a continuous warning tone sounds and the vehicle will no longer accelerate.
- The vehicle speed is reduced in increments until the vehicle comes to a standstill. This generates jerky braking impulses.

When automatic braking is initiated, Active Distance Assist DISTRONIC is deactivated. Depending on the respective country of use, the hazard warning light system is also switched on.

WHEN THE VEHICLE HAS SLOWED TO A STANDSTILL:

- the vehicle is secured with the electric parking brake.
- the vehicle is unlocked.
- if possible, an emergency call is made to the Mercedes-Benz emergency call center.

Before the Emergency Stop Initiated To Cancel: Operate Steering Wheel and a Pedal message is displayed, you can cancel Active Emergency Stop Assist by turning the steering wheel.

ONCE THE EMERGENCY STOP INITIATED TO CANCEL: OPERATE STEERING WHEEL AND A PEDAL **MESSAGE HAS BEEN DISPLAYED, YOU CAN CANCEL ACTIVE EMERGENCY STOP ASSIST AS FOLLOWS:**

- Accelerating or braking: braking is canceled, but the warning message, warning tone and electric power steering remain active.
- Steering: electric power steering is canceled, the warning message and warning tone remain active and the vehicle continues to be braked.
- Steering and accelerating or braking: The emergency stop and electric power steering are canceled. The warning message and the warning tone are canceled.

ⓘ Active Emergency Stop Assist can initiate an emergency stop a maximum of three times within a driving cycle. After that, Active Steering Assist and Active Emergency Stop Assist are disabled until the vehicle has been restarted.

SYSTEM LIMITS

FOR THE DETECTION OF VEHICLES AND OTHER OBSTACLES, OBSERVE THE SYSTEM LIMITS OF THE FOLLOWING FUNCTIONS:

- Active Distance Assist DISTRONIC (⟶ page 334)
- Active Steering Assist (⟶ page 343)
- Active Lane Keeping Assist (⟶ page 356)
- Active Brake Assist (⟶ page 346)

ACTIVE EMERGENCY STOP ASSIST IS INACTIVE IN THE FOLLOWING CASE:

- Active Lane Keeping Assist and Active Steering Assist are switched off.

Active Brake Assist

FUNCTION OF ACTIVE BRAKE ASSIST


ACTIVE BRAKE ASSIST CONSISTS OF THE FOLLOWING FUNCTIONS:

- Collision warning
- Autonomous braking function
- Situation-based brake force boosting

- **Vehicles Driving Assistance Package:** Evasive Steering Assist

Active Brake Assist can help you to minimize the risk of a collision with vehicles, cyclists or pedestrians, or to reduce the effects of such a collision.

If Active Brake Assist has detected a risk of collision, a warning tone sounds and the [⚠] Active Brake Assist warning lamp lights up.

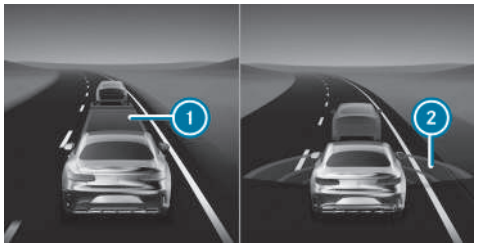

Notification on the driver display in the menu Assistance

① Distance insufficient
② Red radar waves


In the Assistance menu, an insufficient distance to the vehicle in front ① is displayed in red. If you further reduce the distance, the vehicle in front is also highlighted in red. When the system detects a risk of collision, red radar waves ② appear ahead of the vehicle.

ⓘ **Vehicles with PRE-SAFE®:** depending on the country, an additional haptic warning is given in the form of slight, repeated seat belt tensioning on the driver's side.

If you do not react to the warning, autonomous braking can be initiated in critical situations.

In particularly critical situations, Active Brake Assist can also initiate autonomous braking directly. In this case, the warning tone and the [⚠] distance warning lamp are simultaneous with the braking action.

If you apply the brakes yourself in a critical situation or apply the brakes during autonomous braking, situation-based braking assistance is given. The brake pressure increases up to maximum emergency braking if necessary.

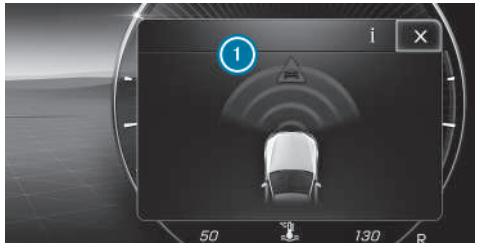

If autonomous braking, situation-related based assistance or evasive action has occurred, pop-up ① appears on the driver display. It automatically disappears after a short time.

If the autonomous braking function or the situation-based braking assistance is triggered, additional preventive measures for occupant protection by PRE-SAFE® may also be initiated.

WARNING
Risk of an accident caused by limited detection performance of Active Brake Assist

Active Brake Assist cannot always clearly identify objects and complex traffic situations.

IN SUCH CASES, ACTIVE BRAKE ASSIST MIGHT:

- Give a warning or brake without reason
- Not give a warning or not brake

Active Brake Assist is only an aid. The driver is responsible for maintaining a sufficiently safe distance to the vehicle in front, vehicle speed and for braking in good time.

► Always pay careful attention to the traffic situation; do not rely on Active Brake Assist alone.

► Be prepared to brake or swerve if necessary.

If Active Brake Assist is deactivated or the functions are restricted, e.g. owing to activation of another driving system, the OFF Active Brake Assist warning lamp appears in the driver display.

If the system is unavailable due to soiled or damaged sensors or a malfunction, or if the functions are restricted, the Active Brake Assist warning lamp appears on the driver display.

Also observe the system limits of Active Brake Assist.

COLLISION WARNING

THE COLLISION WARNING CAN ASSIST YOU IN THE FOLLOWING SITUATIONS WITH AN INTERMITTENT WARNING TONE AND THE WARNING LAMP:

- at speeds up to approximately 155 mph (250 km/h) when approaching moving vehicles ahead.
- at speeds up to approximately 50 mph (80 km/h) when approaching stationary vehicles, pedestrians walking along the road and moving cyclists ahead.
- at speeds up to approximately 43 mph (70 km/h) when approaching crossing pedestrians and cyclists.
- at speeds up to approximately 37 mph (60 km/h) when approaching stationary pedestrians and cyclists.

AUTONOMOUS BRAKING FUNCTION

AT SPEEDS ABOVE APPROXIMATELY 4 MPH (7 KM/H), THE AUTONOMOUS BRAKING FUNCTION CAN INTERVENE IN THE FOLLOWING SITUATIONS:

- at speeds up to approximately 155 mph (250 km/h) when approaching moving vehicles ahead.
- at speeds up to approximately 50 mph (80 km/h) when approaching moving cyclists ahead, pedestrians walking along the road and stationary vehicles.
- at speeds up to approximately 43 mph (70 km/h) when approaching crossing pedestrians and cyclists.

SITUATION-BASED BRAKE FORCE BOOSTING

AT SPEEDS ABOVE APPROXIMATELY 4 MPH (7 KM/H), SITUATION-RELATED BRAKE FORCE BOOSTING CAN INTERVENE IN THE FOLLOWING SITUATIONS.

- at speeds up to approximately 155 mph (250 km/h) when approaching moving vehicles ahead.
- at speeds up to approximately 50 mph (80 km/h) when approaching moving cyclists ahead, pedestrians walking along the road and stationary vehicles.
- at speeds up to approximately 43 mph (70 km/h) when approaching crossing pedestrians and cyclists.
- at speeds up to approximately 37 mph (60 km/h) when approaching stationary pedestrians and cyclists.

CANCELING A BRAKING INTERVENTION BY ACTIVE BRAKE ASSIST

YOU CAN CANCEL A BRAKE APPLICATION OF ACTIVE BRAKE ASSIST AT ANY TIME BY:

- firmly depressing the accelerator pedal or by kickdown
- releasing the brake pedal.

ACTIVE BRAKE ASSIST MAY CANCEL THE BRAKING INTERVENTION WHEN ONE OF THE FOLLOWING CONDITIONS IS FULFILLED:

- You steer to avoid an obstacle.
- there is no longer a risk of collision
- An obstacle is no longer detected in front of your vehicle.

TURNING MANEUVER FUNCTION (VEHICLES WITH DRIVING ASSISTANCE PACKAGE):

If the system detects a risk of a collision with an oncoming vehicle when turning across an oncoming lane, autonomous braking can be initiated at speeds below 9 mph (15 km/h) before you have left your own lane.

ACTIVE EVASIVE STEERING ASSIST

⚠ **WARNING**
Risk of accident despite Active Evasive Steering Assist

Active Evasive Steering Assist cannot always clearly identify objects and complex traffic situations.

IN SUCH CASES, ACTIVE EVASIVE STEERING ASSIST MAY:

- issue a warning or initiate a steering intervention without reason
- fail to issue a warning or initiate a steering intervention

Active Evasive Steering Assist can help to prevent a collision by automatically initiating a steering intervention.

► Always pay close attention to the road and traffic conditions and do not rely on Active Evasive Steering Assist alone.

► Be prepared to brake or swerve if necessary.

► Adjust your speed if there are pedestrians near the vehicle.

Active Evasive Steering Assist can automatically react to objects that are stationary or moving longitudinally in your lane.

ACTIVE EVASIVE STEERING ASSIST HAS THE FOLLOWING FEATURES:

- Detection of pedestrians, cyclists and vehicles.

- Assistance through autonomous steering intervention during a necessary evasive maneuver
- Autonomous activation if there is sufficient space in your own lane
- Reaction from a speed of approximately 18 mph (30 km/h) up to a speed of approximately 50 mph (80 km/h).

When Active Evasive Steering Assist is intervening, and for the duration of the evasive action, a warning tone is sounded and the distance warning lamp flashes.

The steering assistance by Active Evasive Steering Assist can be canceled at any time by steering, accelerating or braking.

ACTIVE EVASIVE STEERING ASSIST CAN INTERVENE IN THE FOLLOWING SPEED RANGES:

- when approaching stationary vehicles, pedestrians or cyclists at speeds from approximately 18 mph (30 km/h) to approximately 50 mph (80 km/h)
- when approaching pedestrians or cyclists moving longitudinally ahead at speeds from approximately 18 mph (30 km/h) to approximately 50 mph (80 km/h)

SYSTEM LIMITS
Full system performance is not yet available for a short time after switching on the vehicle or after driving off. Depending on the environmental conditions, it may take a few minutes before full system performance is available.

THE SYSTEM MAY BE IMPAIRED OR MAY NOT FUNCTION, PARTICULARLY IN THE FOLLOWING SITUATIONS:

- In snow, rain, fog, heavy spray, glare, in direct sunlight or in varying ambient light.
- if the sensors are soiled, fogged up, damaged or covered.
- If the sensors are impaired due to interference from other radar sources, e.g. strong radar reflections in parking garages.
- If a loss of tire pressure or a defective tire has been detected and displayed.
- In complex traffic situations where objects cannot always be clearly identified.
- if pedestrians or vehicles move quickly into the sensor detection range.
- if pedestrians are hidden by other objects.
- if the typical outline of a pedestrian cannot be distinguished from the background.
- if a pedestrian is not detected as such, e.g. owing to special clothing or other objects.
- On bends with a tight radius.
- If the driver's seat belt is not fastened.
- if there is no lane marking, or it is not clearly recognizable
- if the course of the road is nowhere near straight

You can watch an animation on this topic via the following link:

SETTING ACTIVE BRAKE ASSIST

Requirements:

- The vehicle is switched on.

Multimedia system:

Settings » Assistance » Collision Avoidance

▶ Activate or deactivate the function.

ⓘ It is recommended that you always leave Active Brake Assist activated.

Switching off Active Brake Assist also switches off the distance warning function, the collision warning, the autonomous braking function and Active Evasive Steering Assist (with Driving Assistance Package – country-dependent).

If Active Brake Assist is deactivated, the OFF symbol appears in the status bar of the driver display and when the vehicle is next started the system is activated again.

The setting after starting the vehicle depends on the country.

SETTING THE WARNING TIME

- Select ⚙ next to Active Brake Assist.
- Select Early, Medium or Late.

Traffic Sign Assist

FUNCTION OF TRAFFIC SIGN ASSIST

This function can be a Digital Extra (→ page 89).

Traffic Sign Assist detects the traffic signs with the multifunction camera and compares them with the information from the digital road map of the navigation system. It supports you by showing detected speed limits and no-overtaking zones on the driver display.

Speed limits can also be shown on the head-up display.

The system can issue a warning when you exceed the maximum permissible speed.

In some countries, the system can provide you with additional functions and can warn you when you are approaching pedestrian crossings. If the system detects that you are driving onto a section of road in the wrong direction of travel, it issues a warning.

The camera also detects and evaluates traffic signs with a restriction indicated by an additional sign (e.g. in wet conditions).


Traffic Sign Assist only shows selected signs on the driver display. Actual traffic signs and speed limits are always prioritized over traffic signs and speed limits shown on the driver display.

THE FOLLOWING SHOULD ALSO BE OBSERVED WHEN USING TRAFFIC SIGN ASSIST:

- Select a speed suitable for the traffic, surroundings and weather conditions.
- Observe actual traffic signs.
- Observe applicable traffic rules and regulations.

Observe the notes on driving systems and your responsibility; otherwise you may fail to recognize potential dangers (→ page 323).

NOTIFICATIONS ON THE DRIVER DISPLAY

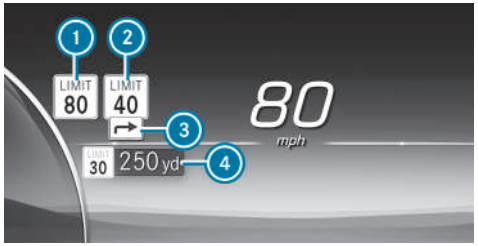

Example


1. Permissible speed
2. Permissible speed when there is a restriction
3. Additional sign with restriction
4. Speed limits up ahead

Speed limits are always shown as a priority over other traffic signs, such as no-overtaking zones, forexample. The head-up display only shows one traffic sign with a speed limit. If two speed signs are shown on the driver display, forexample when speed limits are detected, the value of the left-hand speed limit 1 is always transmitted to cruise control or to Active Distance Assist DISTRONIC for acceptance and is shown on the head-up display.

Important information from other systems can cause traffic signs to be hidden for a short time.

DEPENDING ON THE RESPECTIVE COUNTRY OF USE, TRAFFIC SIGN ASSIST CAN DETECT AND DISPLAY THE FOLLOWING TRAFFIC SIGNS, FOR EXAMPLE:

- speed limits
- end of the speed limit
- overtaking restrictions
- residential streets
- recommended speeds

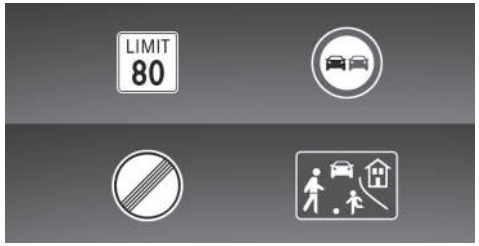

Detected traffic signs (examples)

TRAFFIC SIGN ASSIST CAN ALSO DETECT THE FOLLOWING ADDITIONAL SIGNS 3, FOR EXAMPLE, AND EVALUATE THE RELEVANCE OF THE RESTRICTIONS WHERE NECESSARY USING AUXILIARY VEHICLE SENSORS:

- in wet conditions
- slippery road surfaces
- in fog
- temporary restrictions
- exits

Traffic Sign Assist also uses data from the digital road map of the navigation system. When you leave or enter a municipality or change roads, on a freeway exit or slip road forexample, or after you turn at a intersection, the display on the driver display can thus be updated without a traffic sign having been detected.

ⓘ Regularly update the digital road map of the navigation system to ensure optimum functioning of Traffic Sign Assist (⟶ page 37).

Depending on the respective vehicle equipment and country of use, the system may also display upcoming speed restrictions on the driver display and head-up display. The driver display may also show the distance to an upcoming lower speed limit. Information from the digital road map of the navigation system is used for this purpose. The Assistance menu can also display a dynamic visualization of the speed limits ahead.

If Traffic Sign Assist cannot determine the current maximum permissible speed, e.g. due to a lack of signage, the notification appears on the driver display.


Traffic Sign Assist is not available in all countries. This display is shown permanently in the vehicle when traveling in countries which do not support Traffic Sign Assist.

If the system is temporarily or permanently unavailable due to a technical malfunction or because the windshield is dirty, a corresponding display message appears on the driver display. The Traffic Sign Assist warning lamp also lights up on the driver display in certain countries.

ⓘ Please also note the information on the display messages from Traffic Sign Assist (⟶ page 708).

WARNING WHEN THE MAXIMUM PERMISSIBLE SPEED IS EXCEEDED

The system can warn you if you are about to exceed the maximum permissible speed. Depending on the respective country of use, you can set the extent to which the maximum permissible speed may be exceeded in the multimedia system before a warning is issued. You can switch off the warning, or select in the settings whether the warning should be issued visually, with the traffic sign flashing on the driver display, or as a combination of a visual and audible warning. Selection of the type of warning is confirmed via a notification on the driver display, depending on the respective country of use.

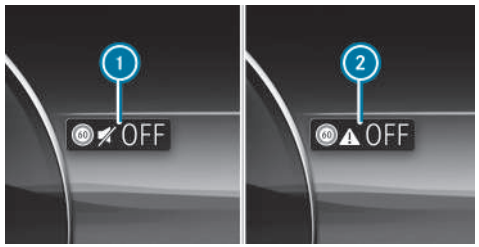

Example

1. Visual warning only
2. Warning off

ⓘ The type, duration and deployment stages of the speed warning, as well as the option to set the timing of the deployment stages upon which the warning is issued, are subject to legislation valid for the respective country in which the vehicle is delivered.

ADDITIONAL WARNING FUNCTIONS

Warning for no-entry signs: Traffic Sign Assist can warn you if you drive down a section of road in the wrong direction of travel, forexample, on freeway slip roads or one-way streets.

Warning at pedestrian crossings: if you approach pedestrian crossings, provided that pedestrians are in the danger zone or are moving towards it, Traffic Sign Assist can warn you up to a speed of approximately 44 mph (70 km/h).

SYSTEM LIMITS

THE SYSTEM MAY BE IMPAIRED OR INOPERATIVE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- If visibility is poor, e.g. due to insufficient illumination of the road, highly variable shade conditions, rain, snow, fog, swirling dust or heavy spray.

- If there is glare, e.g. from oncoming traffic, direct sunlight or reflections.
- If there is soiling on the windshield in the vicinity of the multifunction camera, or if the camera is fogged up, damaged or obscured.
- If the traffic signs are difficult to see because, forexample, they are dirty, obscured, faded, iced over, damaged, inconveniently positioned, insufficiently illuminated or askew.
- Active traffic signs with LED displays may not be detected correctly, or even at all due to technical factors, suchas transmission frequency.
- If the information on the navigation system's digital road map is incorrect, incomplete or out of date.
- If the signs, road markings or road layout are ambiguous, e.g. traffic signs at roadworks, at exits and slip roads, adjacent lanes or parallel roads, and pedestrian crossing markings at traffic lights.
- If the signage or road markings do not comply with the standard.
- If the signage, road markings or road layout are country-specific and deviate from the navigation system's route guidance, e.g. at or after roadworks.
- After sharp turns and in tight bends, if traffic signs are outside the camera's field of vision.
- If you overtake vehicles with traffic signs affixed or attached to them.

SETTING TRAFFIC SIGN ASSIST

Multimedia system:

Settings » Assistance » Assistance » Traffic Sign Assist

ACTIVATING OR DEACTIVATING THE SPEED LIMIT WARNING

► Switch off Speed Limit Warning.

Following country-specific legislation, the speed limit warning remains deactivated until the next time the vehicle is switched on or off.

CHANGE THE TYPE OF SPEED LIMIT WARNING

► Change the warning to Visual or Visual & Audible.

SETTING THE WARNING THRESHOLD

This value determines the speed at which a warning is issued when exceeded.

► Set the desired speed under Warning Threshold.

Blind Spot Assist

FUNCTION OF BLIND SPOT ASSIST WITH EXIT WARNING

Blind Spot Assist uses two lateral, rear-facing radar sensors to monitor the area up to 130 ft (40 m) behind and 10 ft (3 m) next to your vehicle.

If at speeds above approximately 8 mph (12 km/h) a vehicle is detected and this vehicle subsequently enters the monitoring range directly next to your vehicle, the warning lamp in the outside mirror lights up red.

STATUS DISPLAY ON THE DRIVER DISPLAY

Gray: the system is activated but inoperative.

Green: the system is activated and operational.

If a vehicle is detected close to your vehicle and you actuate the turn signal indicator in its direction, a double warning tone sounds and the red warning lamp in the outside mirror flashes. If the turn signal indicator remains switched on, all other detected vehicles are indicated only by the flashing of the red warning lamp.

If you overtake a vehicle quickly, no warning is given.

WARNING
Risk of accident despite Blind Spot Assist

Blind Spot Assist does not react to vehicles approaching and overtaking you at a greatly different speed.

Blind Spot Assist cannot warn drivers in this situation.

► Always pay careful attention to the traffic situation and maintain a safe distance at the side of the vehicle.

Blind Spot Assist is only an aid. It may fail to detect some vehicles and is not a substitute for attentive driving. Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize potential dangers (⟶ page 323).

EXIT WARNING

The exit warning is an additional function of Blind Spot Assist and can warn vehicle occupants about approaching vehicles when leaving the vehicle when stationary.

WARNING
Risk of accident despite exit warning

The exit warning neither reacts to stationary objects nor to persons or road users approaching you at a greatly differing speed.

The exit warning cannot warn drivers in these situations.

► Always pay particular attention to the traffic situation when opening the doors and make sure there is sufficient clearance.

If there is a vehicle in the monitoring range, this is indicated in the outside mirror. If a vehicle occupant opens the door on the side with the warning, a warning tone sounds and the warning lamp in the outside mirror starts to flash.

This additional function is only available when Blind Spot Assist is active. When the exit warning is activated, it can warn vehicle occupants for up to three minutes after switching the vehicle off. The exit warning is no longer available once the warning lamp in the outside mirror flashes three times.

The exit warning is only an aid and not a substitute for the attention of vehicle occupants. The responsibility for opening the doors and exiting the vehicle remains with the vehicle occupants at all times.

SYSTEM LIMITS

BLIND SPOT ASSIST MAY BE RESTRICTED IN THE FOLLOWING SITUATIONS, IN PARTICULAR:

- if there is dirt on the sensors or the sensors are obscured.
- if there is poor visibility, e.g. owing to fog, heavy rain or snow.
- if there are narrow vehicles, e.g. bicycles or motorcycles.
- if the road has very wide or narrow lanes.
- if vehicles are not driving in the middle of their lane.

Warnings may be issued in error when driving close to crash barriers or similar continuous lane borders. Always make sure that there is sufficient distance to the side for other traffic or obstacles.

Warnings may be interrupted when driving alongside long vehicles, e.g. trucks, for a prolonged period.

Blind Spot Assist is not operational when reverse gear is engaged.

THE EXIT WARNING MAY BE LIMITED IN THE FOLLOWING SITUATIONS:

- when the sensors are covered by adjacent vehicles in narrow parking spaces.
- when people approach the vehicle.
- when there are stationary or slowly moving objects.

ACTIVATING OR DEACTIVATING BLIND SPOT ASSIST

Multimedia system:

Settings » Assistance » Collision Avoidance

▶ Activate or deactivate Blind Spot Assist.

Active Lane Keeping Assist

FUNCTION OF ACTIVE LANE KEEPING ASSIST

Active Lane Keeping Assist monitors the area in front of your vehicle using the multifunction camera (⟶ page 323).

It can protect you against unintentionally departing your lane. The system can guide you back into your lane with a course-correcting steering intervention, and warn you with tangible steering wheel feedback.

Active Lane Keeping Assist is available in the speed range between 37 mph (60 km/h) and 124 mph (200 km/h).

THE SYSTEM CAN INTERVENE IF THE FOLLOWING CONDITIONS ARE MET:

- Active Lane Keeping Assist detects a lane marking.
- You touch this lane marking with one of your front wheels.

If you activate the turn signal indicators, there is no steering intervention on that side.

There is no steering intervention if you leave your lane without activating the turn signal indicators, but there is a risk of collision with a moving obstacle in your own lane.

Vehicles with Blind Spot Assist or Driving Assistance Package: If the system detects an obstacle, e.g. another vehicle, in the adjacent lane, there is steering intervention despite the direction indicators.



IN THE FOLLOWING CASES THE WARNING (1) APPEARS ON THE DRIVER DISPLAY AND A WARNING TONE SOUNDS:

- A steering intervention by Active Lane Keeping Assist lasts more than approximately ten seconds.
- There are two or more steering interventions by the systems within approximately three minutes, without steering intervention by the driver.

You can set the sensitivity of the system in the Active Lane Keeping Assist settings in order to determine the level of assistance. You can also determine whether the system is to react to broken lane markings, or only to continuous lane markings (⟶ page 358).

STATUS DISPLAYS OF ACTIVE LANE KEEPING ASSIST

White: Active Lane Keeping Assist is switched off.

If ESP® is switched off or a tire pressure loss warning is indicated, Active Lane Keeping Assist is automatically switched off.

Yellow: There is a malfunction. Also note any display messages.

Gray: Active Lane Keeping Assist is switched on but not ready.

Green: Active Lane Keeping Assist is switched on and ready.

Red: Active Lane Keeping Assist has guided you back into your lane by a course-correcting steering intervention. If a tangible warning is also given in the steering wheel, the status display flashes. The lane marking of the affected side is shown in red.



Notification on the driver display in the Assistance menu

If one of your front wheels moves onto a detected lane marking, this is highlighted in red in the Assistance menu on the driver display.

SYSTEM LIMITS

IN THE FOLLOWING SITUATIONS, THERE MAY BE NO COURSE-CORRECTING STEERING INTERVENTION, BUT A WARNING MAY BE GIVEN IN THE STEERING WHEEL DEPENDING ON THE SITUATION:

- if you clearly and actively steer, brake or accelerate
- if a driving safety system is intervening, e.g. ESP® or Active Brake Assist
- if you have adopted a sporty driving style with high cornering speeds or high rates of acceleration

THE SYSTEM MAY BE IMPAIRED OR INOPERATIVE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- if there is poor visibility, e.g. owing to insufficient illumination of the road, highly variable shade conditions, rain, snow, fog or heavy spray
- if there is glare, e.g. from oncoming traffic, direct sunlight or reflections
- if there is soiling on the windshield in the vicinity of the multifunction camera, or if the camera is fogged up, damaged or obscured
- if the bumper is soiled in the area of the radar sensors, or if these are damaged or obscured
- if there are no lane markings or several unclear lane markings for one lane, e.g. around roadworks
- if the lane markings are worn, dark or covered
- if the distance to the vehicle in front is too short and therefore the lane markings cannot be detected
- if the lane markings change quickly, e.g. lanes branch off, cross one another or merge
- if the lanes are very narrow and winding

Observe the notes on driving systems and your responsibility; otherwise you may fail to recognize potential dangers (⟶ page 323).

ACTIVATING/DEACTIVATING ACTIVE LANE KEEPING ASSIST

Multimedia system:

Settings » Assistance » Collision Avoidance » Active Lane Keeping Assist

▶ Activate or deactivate the function.

Alternatively, Active Lane Keeping Assist can be activated and deactivated via vehicle quick-access.

The setting after starting the vehicle depends on the country.

SETTING ACTIVE LANE KEEPING ASSIST
Multimedia system:
Settings » Assistance » Collision Avoidance » Active Lane Keeping Assist

SETTING THE SENSITIVITY

- Select ⚙.
- Select Early, Med. or Late.

The last setting selected will be applied the next time the vehicle is started.

The standard setting of this function is country-dependent.

The function may not be available on vehicles with Driving Assistance Package, depending on the country.

ACTIVATING/DEACTIVATING ASSISTANCE WHEN LANE MARKINGS ARE INTERRUPTED

- Select Advanced Support.

The last setting selected will be applied the next time the vehicle is started.

The standard setting of this function is country-dependent.

Depending on the country, this function must be activated in order for the full scope of Emergency Stop Assist to be available.

Further information on Emergency Stop Assist (⟶ page 345).

Function of adaptive damping adjustment

The suspension with adaptive damping adjustment continually adjusts the characteristics of the suspension dampers to the current operating and driving conditions.

THE DAMPING IS SET INDIVIDUALLY FOR EACH WHEEL AND IS AFFECTED BY THE FOLLOWING FACTORS:

- the road surface conditions
- the vehicle load
- the drive program selected
- the driving style

The drive program can be adjusted using DYNAMIC SELECT.


Rear view camera

FUNCTION OF THE REVERSING CAMERA
The reversing camera serves solely as an aid. It is not a substitute for you having to pay attention to your surroundings. The responsibility for safe maneuvering and parking remains with you. Ensure that no persons, animals, objects, etc. are in the maneuvering area while maneuvering and parking.

The area behind the vehicle is displayed as a mirror image, as it would appear in the inside mirror.

CAMERA PERSPECTIVE ON THE CENTRAL DISPLAY

Vehicles without Parking Package

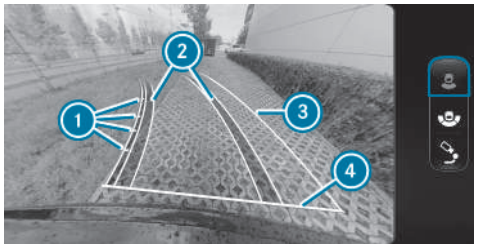

Example

1. Guide lines at a distance of approximately 1.6 ft (0.5 m), 3.3 ft (1.0 m), 5 ft (1.5 m) and 9.9 ft (3.0 m) from the rear area
2. Path indicating the route the wheels will take at the current steering angle (dynamic)
3. Driven surface depending on the current steering angle (dynamic)
4. Guide line at a distance of approximately 1.0 ft (0.3 m) from the rear area

WIDE-ANGLE VIEW



Example

1. Switching on the wide-angle view

PEDESTRIAN BRAKING FUNCTION

ⓘ This function is available only in vehicles without the Parking Package. Vehicles with the Parking Package are equipped with maneuvering assistant functions (→ page 375).

The pedestrian braking function can prevent collisions with pedestrians when the vehicle is backing up at slow speeds. If the reversing camera detects a person in the vehicle's path, the vehicle can be braked to a standstill.

THE PEDESTRIAN BRAKING FUNCTION CAN INTERVENE UNDER THE FOLLOWING CONDITIONS:

- The vehicle is backing up at a speed below 9 mph (15 km/h).
- The camera image is shown on the central display.

When automatic braking is triggered, the symbol appears in red in the camera image.

In addition, the message Pedestrian! For Emerg. Braking Off: Tap Here appears.

The driver can close or ignore this message. Pedestrian braking then remains active. When the driver taps the message, pedestrian braking is momentarily deactivated.

IN THE FOLLOWING CASES, THE PEDESTRIAN BRAKING FUNCTION IS ACTIVATED AGAIN:

- The vehicle is traveling forwards faster than 10 mph (16 km/h).
- The vehicle is switched off and on again.

If the function is unavailable or deactivated, the symbol appears in gray in the camera image.

The pedestrian braking function serves solely as an aid. It is not a substitute for you having to pay attention to your surroundings. The responsibility for safe maneuvering, parking and exiting parking spaces remains with you. Ensure that no persons, animals, objects, etc. are in the vehicle's path.

WARNING
Risk of accident caused by limited detection of the pedestrian braking function

The pedestrian braking function cannot always clearly detect people. Other obstacles are not detected by the function.

In these cases, the function may brake unnecessarily or not brake at all.


- ► Always pay careful attention to the traffic situation; do not rely on the pedestrian braking function alone.
- ► Be ready to brake.

IN THE FOLLOWING SITUATIONS, THE PEDESTRIAN BRAKING FUNCTION IS NOT AVAILABLE:

- on uphill gradients
- if the reversing camera is not operational

Please also note the system limits of the reversing camera.

CAMERA PERSPECTIVE ON THE CENTRAL DISPLAY
Vehicles with Parking Package

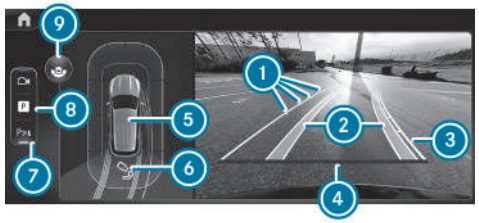

Example

1. Guide lines at a distance of approximately 1.6 ft (0.5 m), 3.3 ft (1.0 m), 5 ft (1.5 m) and 9.9 ft (3.0 m) from the rear area
2. Path indicating the route the wheels will take at the current steering angle (dynamic)
3. Driven surface depending on the current steering angle (dynamic)
4. Guide line at a distance of approximately 1.0 ft (0.3 m) from the rear area
5. Warning display of Parking Assist PARKTRONIC (⟶ page 366)
6. Trailer view or reversing camera (depending on the respective vehicle version)
7. Activate/deactivate Parking Assist PARKTRONIC (⟶ page 368)
8. Menu Parking Assistance
9. Wide-angle view

When Active Parking Assist is active, the paths 2 are displayed in green (⟶ page 369).

WIDE-ANGLE VIEW



Example

1. Switch on the standard view
2. Warning display of Parking Assist PARKTRONIC (⟶ page 366)
3. Activate/deactivate Parking Assist PARKTRONIC (⟶ page 368)

SYSTEM LIMITS

If the system is not ready for operation, the message System Inoperative appears on the driver display and/or on the central display.

If a camera perspective is selected and the central display is temporarily black or does not show a camera image, the camera system is also faulty or is not ready for operation.

WARNING
Risk of accident due to functional limitations of the rear-view camera

Functional limitations of the rear-view camera could lead to a risk of collision with persons or objects.

- ► Do not use the rear-view camera if its functions are limited.
- ► Ensure that no persons, animals, objects, etc. are in the maneuvering area while maneuvering and parking.

THE REVERSING CAMERA WILL NOT FUNCTION OR WILL FUNCTION ONLY PARTIALLY IN THE FOLLOWING SITUATIONS:

- You are driving forwards at a speed greater than approximately 10 mph (16 km/h).
- The weather conditions are poor, e.g. heavy rain, snow, fog, storm or spray.
- The ambient light is poor, e.g. at night or if a light is shining into the camera.
- The camera lens is obstructed, dirty or fogged up. Observe the notes on cleaning the reversing camera (⟶ page 566).
- The camera or rear of your vehicle is damaged. In this case, have the camera, its position and setting checked at a qualified specialist workshop.

The field of vision and other functions of the camera system may be restricted due to additional vehicle attachments (e.g. license plate bracket or bicycle rack).

The contrast of the display can be impaired by incidental light or other light sources, e.g., when driving out of a garage. Particular attention must be afforded in this case.

Have the display repaired or replaced if, for example, its use is considerably restricted due to pixel errors.

Observe also the information on vehicle sensors and cameras (⟶ page 323).

360° camera

FUNCTION OF THE 360° CAMERA


THE 360° CAMERA IS A SYSTEM COMPRISING FOUR CAMERAS:

- Front camera
- Reversing camera
- Two outside mirror cameras

The cameras record the immediate surroundings of the vehicle and provide assistance, e.g. during parking or at exits that are difficult to see.

The cameras serve solely as aids and may show a distorted view of obstacles, show them incorrectly or even omit them altogether. They are not a substitute for you having to pay attention to your surroundings. The responsibility for safe maneuvering and parking remains with you. Ensure that no persons, animals, objects, etc. are in the maneuvering area while maneuvering and parking.

CAMERA PERSPECTIVE ON THE CENTRAL DISPLAY

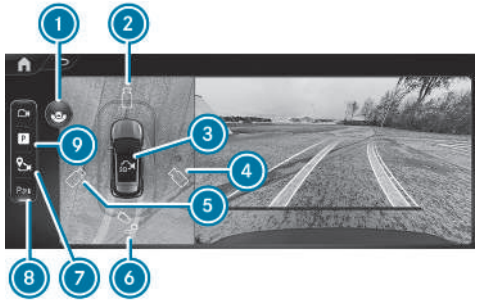


Example

1. Switching between standard view and wide-angle view
2. Image from the front camera
3. 3D auto view
4. 3D view right side of the vehicle
5. 3D view left side of the vehicle
6. Trailer view (depending on the respective equipment) or reversing camera
7. Set the GPS activation point (⟶ page 365)
8. Activate/deactivate Parking Assist PARKTRONIC (⟶ page 368)
9. Menu Parking Assistance

The warning display of Parking Assist PARKTRONIC is shown in all views (⟶ page 366).

Availability of the 3D-Auto-View 3 and 3D-View 4, 5 functions is dependent upon the respective equipment.

FUNCTION OF THE GUIDE LINES

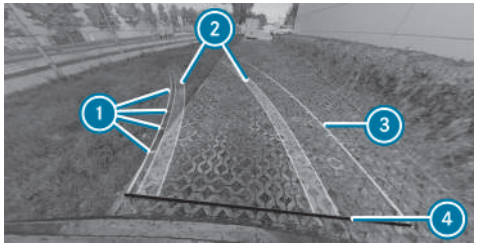


Example

1. Guide lines at a distance of approximately 1.6 ft (0.5 m), 3.3 ft (1.0 m), 5 ft (1.5 m) and 9.9 ft (3.0 m) from the rear area
2. Path indicating the route the wheels will take at the current steering angle (dynamic)
3. Driven surface depending on the current steering angle (dynamic)
4. Guide line at a distance of approximately 1.0 ft (0.3 m) from the rear area

ⓘ When Active Parking Assist is active, paths and guide lines are displayed in green instead of yellow (⟶ page 369).

TOP VIEW WITH THE IMAGE FROM THE FRONT OR REVERSING CAMERA

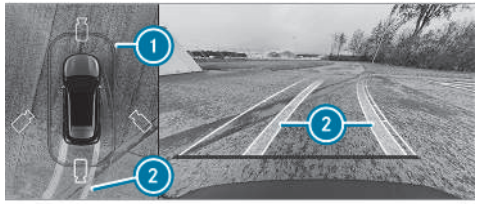

Example

1. Warning display of Parking Assist PARKTRONIC (⟶ page 366)
2. Path indicating the current steering angle

TOP VIEW WITH IMAGE FROM THE OUTSIDE MIRROR CAMERAS



Example

1. Switch to the side view of the outside mirror cameras

The front and rear sides of the vehicle can be seen in this view.

WIDE-ANGLE VIEW



Example

1. Switching between standard view and wide-angle view
2. Display of Parking Assist PARKTRONIC (⟶ page 366)
3. Activating/deactivating Parking Assist PARKTRONIC (⟶ page 368)

SYSTEM LIMITS

If the system is not ready for operation, the message System Inoperative appears on the driver display and/or on the central display.

If a camera perspective is selected and the central display is temporarily black or does not show a camera image, the camera system is also faulty or is not ready for operation.

WARNING
Risk of accident due to restrictions in the function of the 360° camera

If the function of the 360° camera is restricted, there is a risk of collision with people or objects.

- ► Do not use the 360° camera in the event of function restrictions.
- ► Make sure that there are no persons, animals or objects etc., in the maneuvering area while maneuvering and parking.

THE 360° CAMERA WILL NOT FUNCTION OR WILL FUNCTION ONLY PARTIALLY IN THE FOLLOWING SITUATIONS:

- You are driving forwards at a speed greater than approximately 10 mph (16 km/h).
- The doors are open.
- An outside mirror is not completely extended.
- The tailgate is open.
- The weather conditions are poor, e.g. heavy rain, snow, fog, storm or spray.
- The ambient light is poor, e.g. at night or if a light is shining into the camera.
- The camera lens is obstructed, dirty or fogged up. Refer to the notes on cleaning the 360° camera (⟶ page 566).
- If cameras or vehicle components in which the cameras are installed are damaged. In this event, have the cameras, their positions and their setting checked at a qualified specialist workshop.

For technical reasons, the standard height of the vehicle may be altered if the vehicle is carrying a heavy load and this can result in inaccuracies in the guide lines and in the display of generated images.


The field of vision and other functions of the camera system may be restricted due to additional vehicle attachments (e.g. license plate bracket or bicycle rack).

ⓘ Contrast of the display may be impaired by abrupt direct sunlight or other light sources, e.g. when driving out of a garage. Particular attention must be afforded in this case.

ⓘ Have the display repaired or replaced if, for example, its use is considerably restricted due to pixel errors.

Observe also the information on vehicle sensors and cameras (⟶ page 323).

CALLING UP THE 360° CAMERA VIEWS USING THE BUTTON

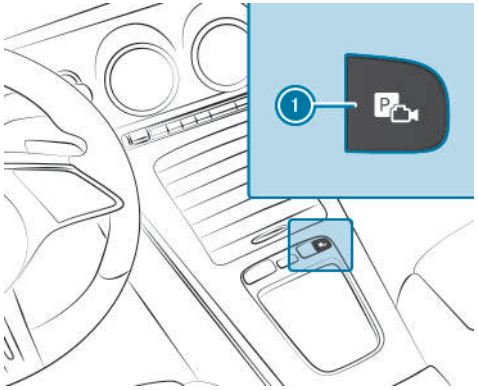

► Press button (1).

► Select the menu Camera Views .

► Select the desired view in the multimedia system (⟶ page 362).

SELECTING A VIEW FOR THE 360° CAMERA (REVERSE GEAR)

► Engage reverse gear.

► Select the desired view in the multimedia system (⟶ page 362).

MANAGING 360° CAMERA WITH GPS-ACTIVATION POSITIONS

Multimedia system:

Settings » Assistance » Camera

RENAMING AN ACTIVATION POSITION

ⓘ You can determine activation positions in the Camera Views menu (⟶ page 362).

► Select ••• for the desired activation position.

► Select Edit.

► Enter a name and confirm.
The activation position is stored under the new name.

DELETING AN ACTIVATION POSITION

► Select ••• for the desired activation position.

► Select Delete Entry.

► Confirm the prompt.
The activation position is deleted.

OPENING THE CAMERA COVER

Multimedia system:

→ Settings » Assistance » Camera

▶ Select Open Camera Cover.

ⓘ The camera cover closes automatically after some time, or after the vehicle is switched on or off.

Parking Assist PARKTRONIC

FUNCTION OF PARKING ASSIST PARKTRONIC

Parking Assist PARKTRONIC is an electronic parking assistance system which monitors the area surrounding your vehicle . The distance between your vehicle and a detected obstacle is displayed visually and acoustically.


The passive side impact protection also warns you of obstacles to the side. These must be detected beforehand by the sensors in the front or rear bumper while driving by them. If you steer in the direction of a detected obstacle and there is a risk of a lateral collision, a warning is issued.

Passive side impact protection can be activated and deactivated via the multimedia system (⟶ page 369).

In order that front or rear obstacles to the side can be displayed, the vehicle must first travel a distance of at least half a vehicle length. Once the vehicle has traveled a distance of one vehicle length, obstacles on all sides can be shown.


Parking Assist PARKTRONIC serves solely as an aid. It is not a substitute for you having to pay attention to your surroundings. The responsibility for safe maneuvering, parking and unparking remains with you at all times. Ensure that there are no persons, animals or objects etc. in the maneuvering area while maneuvering and parking in/exiting parking spaces.

DISPLAYS ON THE CENTRAL DISPLAY

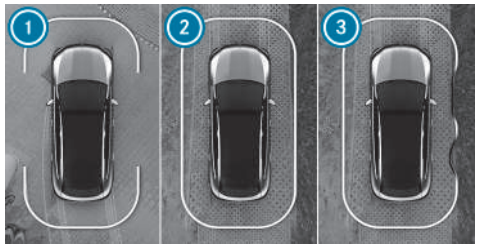

Example: vehicles with 360° camera

① Ready for display at the front and rear
② Ready for display all around
③ Ready for display all around and obstacles detected

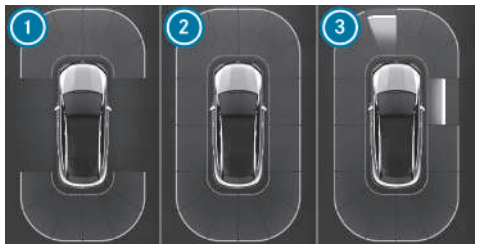

Example: vehicles with reversing camera

① Ready for display at the front and rear
② Ready for display all around
③ Ready for display all around and obstacles detected

As soon as Parking Assist PARKTRONIC is ready for display, the respective areas ① to ③ of the display are shown in blue.

THE COLOR OF THE DISPLAY CHANGES ACCORDING TO THE DISTANCE TO THE DETECTED OBSTACLE:


- **Blue:** > 3.3 ft (1 m) (no obstacles detected)
- **Yellow:** approximately 3.3 ft (1 m) - 2.3 ft (0.7 m)
- **Orange:** approx. 2.3 ft (0.7 m) - 1.3 ft (0.4 m)
- **Red:** < 1.3 ft (0.4 m)

Vehicles with 360° camera: the boundary line shifts dynamically according to the position and distance of the obstacles detected.

An intermittent warning tone also sounds according to the distance to the obstacle detected. You can set the timing of the warnings in the multimedia system. In the Warn Early setting, the system warns you from a distance of 3.3 ft (1 m). In the standard setting, from a shorter distance of 1.3 ft (0.4 m).




Example: vehicles with 360° camera

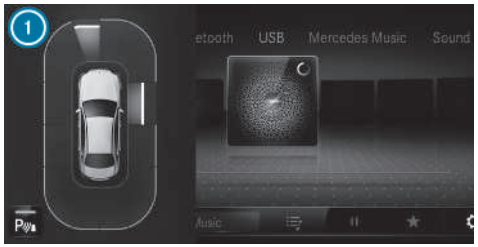

Example: vehicles with reversing camera

IF YOU ARE NOT IN THE CAMERA & PARKING MENU AND AN OBSTACLE IN THE VEHICLE'S PATH IS DETECTED, A POP-UP WINDOW (1) APPEARS ON THE CENTRAL DISPLAY IF THE FOLLOWING REQUIREMENTS ARE MET:

- **Vehicles without Active Parking Assist:** when driving no faster than 8 mph (12 km/h).
- **Vehicles with Active Parking Assist:** when driving no faster than 11 mph (18 km/h).

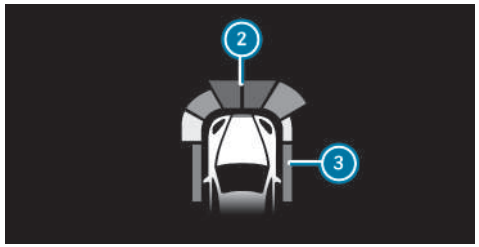

Notifications in the head-up display (example)

Optionally, obstacles detected by Parking Assist PARKTRONIC from a distance of approximately 3.3 ft (1.0 m) in front (2) and 2.3 ft (0.7 m) at the sides (3) can also be displayed on the head-up display.

SYSTEM LIMITS

PARKING ASSIST PARKTRONIC DOES NOT NECESSARILY TAKE INTO ACCOUNT THE FOLLOWING OBSTACLES:

- Obstacles below the detection range, e.g. persons, animals or objects
- Obstacles above the detection range, e.g. protruding loads, overhangs or loading ramps of truck
- Pedestrians or animals approaching the vehicle from the side
- Objects placed next to the vehicle

OBSTACLES ON THE SIDES ARE NOT SHOWN IN THE FOLLOWING SITUATIONS, FOR EXAMPLE:

- You park the vehicle and switch it off.
- You open the doors.

After the vehicle is restarted, obstacles must be detected again by driving past them before a new warning can be issued.

OBSERVE ALSO THE SYSTEM LIMITS OF THE FOLLOWING SYSTEMS:

- Reversing camera (⟶ page 358)
- 360° camera (⟶ page 362)

Observe the information on vehicle sensors and cameras; otherwise the system cannot function properly (⟶ page 323).

PROBLEMS WITH PARKING ASSIST PARKTRONIC

If the Parking Assist PARKTRONIC display lights up red for approximately three seconds and then goes out, and the symbol [P OFF] appears on the driver display, the system may have been deactivated due to signal interference. Start the vehicle again and check whether Parking Assist PARKTRONIC works in a different location.

IF A WARNING TONE ALSO SOUNDS, THE CAUSES MAY BE AS FOLLOWS:

- **The sensors are dirty:** clean the sensors (⟶ page 566).
- **Parking Assist PARKTRONIC has been deactivated due to a malfunction:** restart the vehicle. If the problem persists, consult a qualified specialist workshop.

ACTIVATING/DEACTIVATING PARKING ASSIST PARKTRONIC

NOTE
Vehicle damage during parking or maneuvering due to objects at close range

Parking Assist PARKTRONIC may not detect certain objects close to the vehicle.

► When parking or maneuvering, look out in particular for objects that are underneath or above the sensors, e.g. flower pots or drawbars. Otherwise, the vehicle or other objects could be damaged.

Requirements:

- The camera menu is open.
- Or: the Parking Assist PARKTRONIC pop-up window is displayed.

► Tap [P] on the central display.

If the indicator lamp is lit, Parking Assist PARKTRONIC is active. If the indicator lamp does not light up or the symbol [P OFF] is displayed, Parking Assist PARKTRONIC is not active.

ⓘ Parking Assist PARKTRONIC is automatically activated when the vehicle is started.

Alternatively, Parking Assist PARKTRONIC can be activated or deactivated in the quick-access menu.

SETTING THE PARKING ASSIST PARKTRONIC WARNING TONES

Multimedia system:

Settings » Assistance » Parking » PARKTRONIC

SETTING WARNING TONES

- ► Select Set Warning Tones.
- ► Set the desired value under Volume or Tone Pitch.

ACTIVATING/DEACTIVATING AUDIO FADEOUT

- ► Select Audio Fadeout and activate or deactivate Audio Fade for Warnings.

  The volume of the media source currently playing is reduced when a Parking Assist PARKTRONIC warning tone sounds.

or

- ► Select Audio Fadeout and activate or deactivate Audio Fadeout When in R.

  The volume of the media source currently playing is reduced when reverse gear is engaged.

SETTING THE WARNING TIME

- ► Select Time of Warning.
- ► Set the desired warning time for Front or Rear.
- ► Activate or deactivate Side Warning.

Active Parking Assist

FUNCTION OF ACTIVE PARKING ASSIST

WARNING

Risk of accident due to objects located above or below the detection range of Active Parking Assist

IF THERE ARE OBJECTS ABOVE OR BELOW THE DETECTION RANGE, THE FOLLOWING SITUATIONS MAY ARISE:

- Active Parking Assist may steer too early.
- The vehicle may not stop in front of these objects.

There is a danger of collision!

- ► In these situations, do not use Active Parking Assist.

Active Parking Assist is an electronic parking assistance system that uses ultrasound with the assistance of the rear view camera or 360° camera. When you are driving forwards up to approximately 22 mph (35 km/h), the system automatically measures parking spaces on both sides of the vehicle.

Active Parking Assist serves solely as an aid. It is not a substitute for you having to pay attention to your surroundings. The responsibility for safe maneuvering, parking and exiting parking spaces remains with you. Ensure that no persons, animals, or objects, etc. are in the vehicle's path.

Active Parking Assist offers the following functions:

VEHICLES WITH REAR VIEW CAMERA

- Parking in parking spaces parallel to the roadway
- Reversing into parking spaces perpendicular to the roadway

The parking space is freely selectable. The parking procedure is executed with the vehicle reversing.

VEHICLES WITH 360° CAMERA

- Parking in parking spaces parallel to the roadway
- Parking in parking spaces perpendicular to the roadway (either forwards or reversing as desired)
- Parking in parking spaces that can be detected as such only from markings (for example at the roadside)
- Exiting parking spaces if you have parked using Active Parking Assist

The parking space is freely selectable. The parking direction (forwards or reversing) can also be freely selected, depending on the orientation of the parking space.

If Active Parking Assist is available, the notification [P] appears on the driver display. When the system detects parking spaces, the notification [P] appears. The arrows show the side of the roadway on which free parking spaces are detected. These are then shown on the central display.

When Active Parking Assist is activated, the turn signal indicator is activated based on the calculated path of your vehicle. The parking and unparking procedures are assisted by acceleration, braking, steering and gear changes.

To start the parking procedure, press button [P] (⟶ page 371).

ACTIVE PARKING ASSIST WILL BE CANCELED IN THE FOLLOWING SITUATIONS:

- You press button [P] again.
- You begin steering.
- You select the park position [P].
- You engage the electric parking brake.
- ESP® intervenes.
- You open the driver's door.

SYSTEM LIMITS

If the exterior lighting is malfunctioning, Active Parking Assist is not available.

OBSERVE ALSO THE SYSTEM LIMITS OF THE FOLLOWING SYSTEMS:

- Rear view camera (⟶ page 358)
- 360° camera (⟶ page 362)

Objects above or below the detection range of Active Parking Assist, e.g. protruding loads, overhangs or loading ramps of trucks or parking space boundaries, are not detected when measuring the parking space. These are also not subsequently taken into account when calculating the parking procedure. In some circumstances, Active Parking Assist may therefore prematurely guide you into the parking space or brake too late.

Certain environmental conditions, such as snowfall or heavy rain, may lead to a parking space being mismeasured. Parking spaces that are partially occupied by trailer drawbars might not be identified as such or may be measured incorrectly. Use Active Parking Assist only on level road surfaces with adequate grip.

Active Parking Assist can also display unsuitable parking spaces, e.g. parking spaces in which parking is not permitted or on unsuitable surfaces.

DO NOT USE ACTIVE PARKING ASSIST IN THE FOLLOWING SITUATIONS, FOR EXAMPLE:

- in extreme weather conditions, such as ice, packed snow or in heavy rain
- when transporting a load that protrudes beyond the vehicle
- if the parking space is on a steep downhill or uphill gradient
- when snow chains are installed

- directly after a tire change or when spare tires are installed
- if the tire pressure is too low or too high
- on steep downhill gradients of more than approximately 15%
- if the vehicle level has been offset, e.g. mounting the curb on one side (vehicles with level control)

PARKING WITH ACTIVE PARKING ASSIST


⚠ **WARNING**
Risk of accident due to objects located above or below the detection range of Active Parking Assist

IF THERE ARE OBJECTS ABOVE OR BELOW THE DETECTION RANGE, THE FOLLOWING SITUATIONS MAY ARISE:


- Active Parking Assist may steer too early.
- The vehicle may not stop in front of these objects.

There is a danger of collision!

► In these situations, do not use Active Parking Assist.

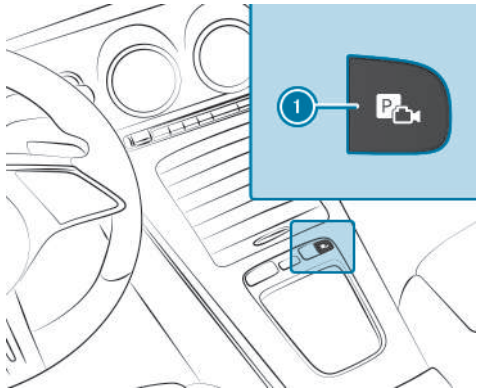

► Press the 1 button.

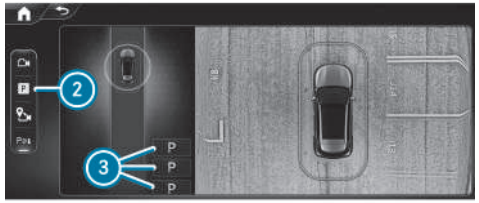


Parking Assist menu (example for left-hand side of the screen)

► Select the Parking Assistance 2 menu.

Parking spaces 3 detected by the system are shown on the central display.

At speeds greater than approximately 10 mph (16 km/h), the camera perspective on the right-hand side of the screen switches off.

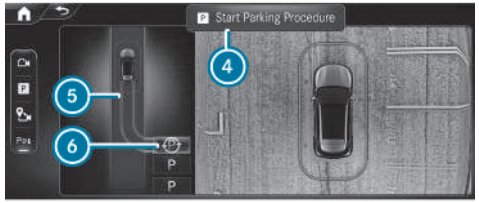

Parking Assist menu (example)

When the vehicle is at a standstill, the indicated vehicle path 5 into the currently selected parking space 6 also appears.

► If a parking space is displayed: stop the vehicle.

► If necessary, select another parking space.

- **Vehicles with 360° camera:** to change the parking direction, tap the selected parking space again.
- **To start the parking procedure:** press button (1) again.

or

- Depress the brake pedal and select Start Parking Procedure (4).
- Take your hands off the steering wheel and release the brake pedal.

  The vehicle drives into the selected parking space.

  The duration of the parking procedure is indicated by a progress bar.

The turn signal indicator is switched on automatically when the parking procedure begins. You are responsible for selecting the turn signal indicator in accordance with the traffic conditions. If necessary, select the turn signal indicator accordingly.

WARNING
Risk of accident due to vehicle swinging out while parking or pulling out of a parking space

While parking or exiting a parking space, the vehicle swings out and can drive onto areas of the oncoming lane.


This could cause you to collide with objects or other road users.

- Pay attention to objects and other road users.
- Where necessary, stop the vehicle or cancel the parking procedure with Active Parking Assist.

Following completion of the parking procedure, the message Active Parking Assist Finished appears.

- Secure the vehicle against rolling away. When necessitated by legal requirements or local conditions: Turn the wheels towards the curb.

You can stop the vehicle and change the transmission position during the parking procedure. The system then calculates a new vehicle path. If no new vehicle path is available, the transmission position can be changed again, or the process can be canceled.

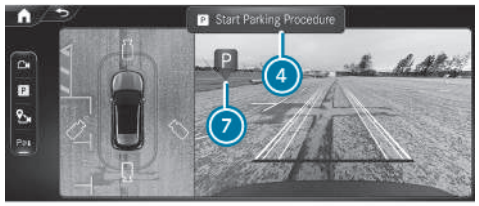

Immediate parking via the Camera Views menu

- Select the Camera Views menu.
- When the vehicle is stationary and in transmission position R, and the (7) symbol appears in the camera image: press button (1) again.

or

- Depress the brake pedal and select Start Parking Procedure (4).

  The parking procedure is initiated for the detected parking space.

The parking space and parking direction cannot be changed in immediate parking.

EXITING A PARKING SPACE WITH ACTIVE PARKING ASSIST

WARNING
Risk of accident due to objects located above or below the detection range of Active Parking Assist

IF THERE ARE OBJECTS ABOVE OR BELOW THE DETECTION RANGE, THE FOLLOWING SITUATIONS MAY ARISE:

- Active Parking Assist may steer too early.
- The vehicle may not stop in front of these objects.


There is a danger of collision!

► In these situations, do not use Active Parking Assist.


Requirements:

- The vehicle is equipped with a 360° camera.
- The vehicle has been parked with Active Parking Assist.

► Start the vehicle.

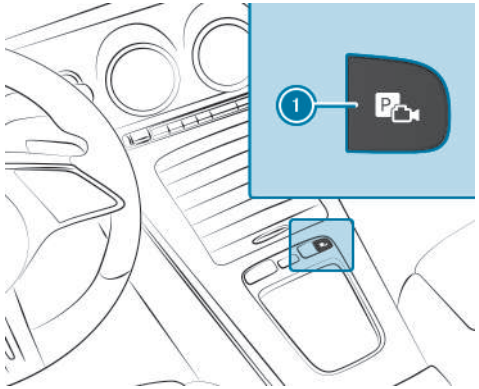

► Press the button (1).

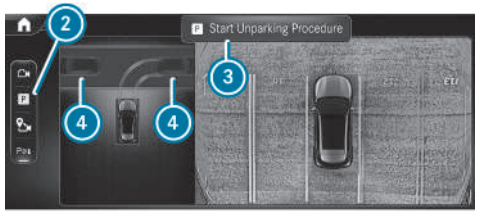

Parking Assist menu (example for left-hand side of the screen)

► Select the menu Parking Assistance (2).

► If necessary, change the direction of exit (4).

► **To initiate the unparking procedure:** press the button (1) again.

or

► Depress the brake pedal and select Start Unparking Procedure (3) (depending on the respective vehicle equipment).

► If necessary, change the transmission position. Observe any messages displayed on the driver display and central display.

The vehicle moves out of the parking space.

The duration of the unparking procedure is indicated by a progress bar.

The turn signal indicator is automatically switched on when the unparking procedure is initiated, and automatically switched off again when it is completed. You are responsible for selecting the turn signal indicator in accordance with the traffic conditions. If necessary, select the turn signal indicator accordingly.

WARNING
Risk of accident due to vehicle swinging out while parking or pulling out of a parking space

While parking or exiting a parking space, the vehicle swings out and can drive onto areas of the oncoming lane.

This could cause you to collide with objects or other road users.

► Pay attention to objects and other road users.

► Where necessary, stop the vehicle or cancel the parking procedure with Active Parking Assist.

After the parking space has been exited, a warning tone and the Active Parking Assist Finished: Take Control of Vehicle message prompt you to take control of the vehicle. You have to accelerate, brake, steer and change gear yourself again.

If you do not react to the prompt to reassume control of the vehicle, the system will brake the vehicle to a standstill.

PAUSING ACTIVE PARKING ASSIST

WARNING
Risk of accident due to objects located above or below the detection range of Active Parking Assist

IF THERE ARE OBJECTS ABOVE OR BELOW THE DETECTION RANGE, THE FOLLOWING SITUATIONS MAY ARISE:

- Active Parking Assist may steer too early.
- The vehicle may not stop in front of these objects.

There is a danger of collision!

► In these situations, do not use Active Parking Assist.

YOU CAN INTERRUPT THE PARKING OR UNPARKING PROCEDURE OF ACTIVE PARKING ASSIST BY PERFORMING ONE OF THE FOLLOWING ACTIONS, FOREXAMPLE:

► Depress the brake pedal.

► Open the front passenger door, a rear door, the tailgate, or the hood.

► Apply the electric parking brake or activate the HOLD function.

REINITIATING THE PARKING OR UNPARKING PROCEDURE:

► Check the vehicle surroundings.

► Ensure once again that there are no persons, animals or objects in the vehicle's path.

► Gently depress the accelerator pedal.

Observe the messages shown on the driver display and central display.

► Observe the system limits of Active Parking Assist (→ page 369).

AUTOMATIC BRAKING FUNCTION OF ACTIVE PARKING ASSIST

WARNING
Risk of accident due to objects located above or below the detection range of Active Parking Assist

IF THERE ARE OBJECTS ABOVE OR BELOW THE DETECTION RANGE, THE FOLLOWING SITUATIONS MAY ARISE:

- Active Parking Assist may steer too early.
- The vehicle may not stop in front of these objects.

There is a danger of collision!

► In these situations, do not use Active Parking Assist.

Persons or objects detected in the vehicle's path may trigger a sudden braking action, which will in turn halt the parking or unparking procedure. The vehicle will then remain at a standstill. The parking or unparking procedure is resumed if you depress the accelerator pedal.

Check the area around your vehicle again before resuming the parking or unparking procedure. Ensure once again that no persons, animals or objects are in the vehicle's path. Observe also the system limits of Active Parking Assist.

Maneuvering assistance

FUNCTION OF DRIVE AWAY ASSIST

Drive Away Assist can reduce the severity of an impact when you are pulling away. If the system detects an obstacle in the direction of travel, the vehicle's speed will briefly be restricted to approximately 1 mph (2 km/h). When a critical situation is detected, the  symbol will appear on the central display.

Drive Away Assist can be switched on or off on the Maneuvering Assistance menu.

You can cancel intervention by Drive Away Assist at any time by deactivating Parking Assist PARKTRONIC.

WARNING
Risk of accident caused by limited detection performance of Drive Away Assist

Drive Away Assist cannot always clearly identify objects and traffic situations.

► Always pay careful attention to the traffic situation; do not rely on Drive Away Assist alone.

► Be prepared to brake or swerve as necessary, provided the traffic situation permits and that it is safe to take evasive action.

Drive Away Assist serves solely as an aid. It is not a substitute for you having to pay attention to your surroundings. The responsibility for safe maneuvering, parking and exiting parking spaces remains with you. Ensure that no persons, animals or objects etc. are in the vehicle's path.

A RISK OF COLLISION MAY ARISE IN THE FOLLOWING SITUATIONS, FOR EXAMPLE:

- If the driver mixes up the accelerator and brake pedals.
- If an incorrect transmission position is engaged.

THE DRIVE AWAY ASSIST FUNCTION WILL BE ACTIVE IN THE FOLLOWING CIRCUMSTANCES:

- If Parking Assist PARKTRONIC is activated.
- If you shift the transmission position to R or D when the vehicle is at a standstill.
- If the detected obstacle is less than approximately 3.3 ft (1.0 m) away.
- Maneuvering assistant is activated (⟶ page 377).

SYSTEM LIMITS
The performance of Drive Away Assist will be limited on uphill gradients.

ⓘ Also observe the system limits of Parking Assist PARKTRONIC (⟶ page 366).

FUNCTION OF CROSS TRAFFIC ALERT

ⓘ The Cross Traffic Alert function is available only for vehicles with Blind Spot Assist.

The Cross Traffic Alert function can warn drivers of any crossing traffic when they are backing up and maneuvering out of a parking space. The radar sensors in the bumper also monitor the area adjacent to the vehicle. If a critical situation is detected, the symbol appears on the central display, and the vehicle can be braked automatically.

If the radar sensors are obstructed by vehicles or other objects, detection is not possible.

THE CROSS TRAFFIC ALERT FUNCTION IS ACTIVE UNDER THE FOLLOWING CONDITIONS:

- If the vehicle is backing up at walking pace.
- Maneuvering assistant is activated (⟶ page 377).

ⓘ Observe also the instructions on Blind Spot Assist (⟶ page 354).

SYSTEM LIMITS
The Cross Traffic Alert function is not available on uphill gradients.

FUNCTION OF CLOSE-RANGE BRAKING

⚠ **WARNING**
Risk of accident caused by limited detection by the maneuvering brake function

The maneuvering brake function cannot always clearly detect people. Other obstacles are not detected by the function.

In these cases, the function may brake unnecessarily or not brake at all.

► Always pay careful attention to the traffic situation; do not rely on the maneuvering brake function alone.

► Be ready to brake.

Close-range braking can prevent collisions with pedestrians when the vehicle is backing up at slow speeds. If the rear view camera detects a person in the vehicle's path, the vehicle can be braked to a standstill.

CLOSE-RANGE BRAKING CAN INTERVENE UNDER THE FOLLOWING CONDITIONS:

- The vehicle is backing up at a speed slower than 6 mph (10 km/h).
- The camera image is shown on the central display (⟶ page 365).

Depending on the respective country, close-range braking can be deactivated or activated in the Maneuvering Assistance menu (⟶ page 377).

When close-range braking is triggered, the symbol  appears in red in the selected view in the menu Camera & Parking.

ⓘ If close-range braking is not available, the symbol  appears in gray.

Close-range braking serves solely as an aid. It is not a substitute for you having to pay attention to your surroundings. The responsibility for safe maneuvering, parking and unparking remains with you at all times. Ensure that no persons, animals, objects, etc. are in the vehicle's path.

SYSTEM LIMITS

OBSERVE THE SYSTEM LIMITS OF THE FOLLOWING FUNCTIONS:

- Active Parking Assist (⟶ page 369)
- 360° camera (⟶ page 362)
- Rear view camera (⟶ page 358)

THE CLOSE-RANGE BRAKING FUNCTION IS NOT AVAILABLE IN THE FOLLOWING SITUATIONS:

- on uphill gradients

You can watch an animation on this topic via the following link:

ACTIVATING/DEACTIVATING THE MANEUVERING ASSISTANT

Multimedia system:

 Settings » Assistance » Parking

ⓘ This function is a Digital Extra (⟶ page 89).

ⓘ The activating/deactivating maneuvering assistant function is not available in all countries.

- ▶ Select Maneuvering Assistance.
- ▶ Activate or deactivate the desired maneuvering assistant.

Vehicle towing instructions

The vehicle is not suitable for the use of tow bar systems that are used for flat towing or dinghy towing, for example. Attaching and using tow bar systems may result in damage to the vehicle. When you are towing a vehicle with tow bar systems, safe driving characteristics cannot be guaranteed for the towing vehicle or the towed vehicle. The vehicle-trailer combination may swerve from side to side.

OBSERVE THE FOLLOWING INFORMATION:

- Permitted towing methods (⟶ page 587)
- The notes on towing the vehicle with both axles on the ground (⟶ page 58)

Driver display

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Notes on the driver display
Overview of status indicators on the driver display
Notes on range
Driver display fault
Operating the driver display
Driver display menus
Head-up display
Function of the power availability display

Notes on the driver display

WARNING
Risk of accident if the driver display malfunctions

if the driver display is inoperative or its functions are restricted, you will not receive information about such issues as other function restrictions, speed, current drive range and the status of the electric parking brake.

This will impair operating safety.

- ► Stop the vehicle immediately in accordance with the traffic conditions and switch it off. Do not continue driving.
- ► Consult a qualified specialist workshop.
- ► Have the vehicle transported rather than towed.

If operating safety of your vehicle is impaired, park the vehicle in a safe place immediately. Notify a qualified specialist workshop.

ADDITIONAL AVAILABLE FUNCTIONS INCLUDE THE FOLLOWING, FOREXAMPLE:

- Various menus, e.g. for Assistance and Navigation
- Status displays for the driving systems
- Display messages

Content and settings can be changed individually in some menus (→ page 386).

Notes on range

RANGE IN GENERAL

- All ranges shown are assumptions based on various calculation bases. The actual range achieved may differ from the range displayed.
- Outside temperatures, climate control settings, vehicle interior temperatures, road conditions, driving style etc. will directly influence the achievable range.
- Pay attention to the charging prompts at all times.

RANGE ACCORDING TO PERSONAL DRIVING STYLE

- Your previous personal consumption will be taken into account when the range is being calculated.
- While the navigation system or commuter route is active, additional information regarding the route ahead may be included in the range calculation.

RANGE WITH LOW CONSUMPTION

- The maximum range shows the potential range when consumption is low, e.g. as a result of economical driving or having the air conditioning system turned off.

RANGE WITH HIGH CONSUMPTION

- The minimum range shows the range when consumption is high, e.g. as a result of a sporty driving style or having the air conditioning system turned on.
- This range is determined based on past and current consumption figures.

ELECTRICAL CONSUMPTION

- The From Start and From Reset consumption figures take into account all active consumer equipment for the drive system's operational readiness READY.

ⓘ If the range maximization function is switched on, the range on the speedometer may increase depending on the potential range (⟶ page 282).

Driver display fault

WARNING
Risk of accident if the driver display malfunctions

if the driver display is inoperative or its functions are restricted, you will not receive information about such issues as other function restrictions, speed, current drive range and the status of the electric parking brake.

This will impair operating safety.

- ► Stop the vehicle immediately in accordance with the traffic conditions and switch it off. Do not continue driving.
- ► Consult a qualified specialist workshop.
- ► Have the vehicle transported rather than towed.

Identifying a driver display fault

A DRIVER DISPLAY FAULT CAN BE IDENTIFIED BY CHARACTERISTICS SUCHAS THE FOLLOWING:

- When the vehicle is switched on, the driver display continues to show nothing but a black screen.
- The driver display restarts.
- The content freezes.
- The display stops showing data suchas speed. Various indicator lamps and warning lamps are also displayed.

What to do in the event of a driver display fault

If the driver display is inoperative or its functions are restricted, stop the vehicle immediately in accordance with the traffic conditions and switch off the vehicle. The following procedure is recommended for this eventuality:

- ► Stop the vehicle in accordance with the traffic conditions.
- ► With the vehicle at a standstill, continue to depress the brake pedal.
- ► Press the button P on the DIRECT SELECT lever.
- ► Apply the parking brake.
- ► Slowly release the brake pedal and ensure that the vehicle is secured against rolling away.
- ► Press and hold the start/stop button (→ page 312) once for roughly three seconds to switch off the drive system.
- ► Contact a qualified specialist workshop immediately.
- ► Have the vehicle transported rather than towed.

ⓘ In addition, note the additional information on switching off the vehicle (→ page 312)and the notes on transporting the vehicle (→ page 590).

Operating the driver display


WARNING
Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

Observe the legal requirements for the country in which you are currently driving when operating the driver display.

SCROLLING ON THE MENU BAR

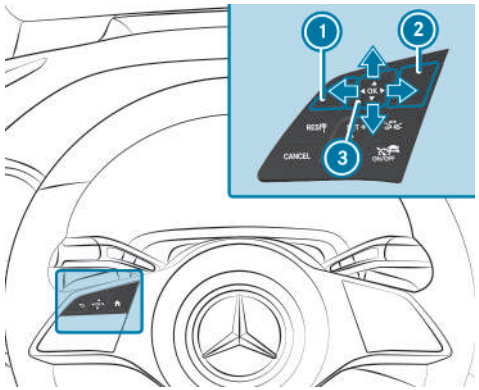

1. Back button
2. Main menu button
3. Touch Control

The control elements on the left of the steering wheel manage the content of the driver display. Swipe with your finger on Touch Control 3 to navigate vertically or horizontally through the content. Press the Touch Control to confirm your selection.

Use the tip of your thumb to operate Touch Control 3 in the most effective way. Set sensitivity of the Touch Control on the media display (→ page 415).

- Briefly press the main menu button (2).
- Select a menu by swiping to the left or right on Touch Control (3).
- **To confirm:** press Touch Control (3).

You can watch an animation on this topic via the following link:

Driver display menus

Notes on menus on the driver display

WARNING
Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ► Only operate this equipment when the traffic situation permits.
- ► If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

Observe the legal requirements for the country in which you are currently driving when operating the driver display.

THE FOLLOWING MENUS CAN BE CALLED UP VIA THE MENU BAR ON THE DRIVER DISPLAY:

- Understated
- Sport
- Classic
- Navigation
- Assistance
- Offroad (vehicles with 4MATIC)
- Service


In some of the menus, you can choose between different display content in the center display area.

In most of the menus, you can use Options to configure further settings for the menu-specific display content.

You can watch an animation on this topic via the following link:

Calling up and operating menus on the driver display

CALLING UP A MENU ON THE DRIVER DISPLAY

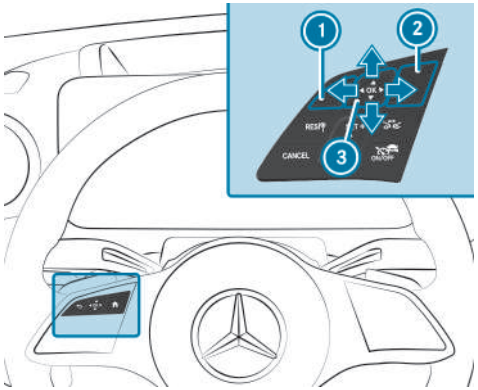

1 Back button
2 Main menu button
3 Touch Control

► Press main menu button 2 on the steering wheel.
The menu bar will be shown in the lower area of the driver display.



► Swipe to the left or right on Touch Control 3 and select a menu (e.g. the Classic menu) on the menu bar.

► **To confirm:** press Touch Control 3.

BROWSING THROUGH DISPLAY CONTENT OR LISTS

► Swipe vertically or horizontally on Touch Control 3.

ⓘ On some menus, an index character will be displayed at the right edge of the center display content to indicate how the information has been sorted.

PRESETTING DISPLAYS

You can preset individually configured information of a menu and thus determine the standard display.

► Press Touch Control 3 until the bar is completely filled.
Answer the Set Shortcut? query as follows.

► Swipe to the left on Touch Control 3 and select Yes.

► **To confirm:** press Touch Control 3.

► **To call up presettings:** press the back button 1 on the upper level of a menu.

ⓘ Pressing back button 1 on the standard display will open the previous menu.

CALLING UP OR EXITING THE OPTIONS SUBMENU

Depending on the information in the center display content, you can configure various settings on the Options submenu.

- **To call up the Options submenu and confirm a selection:** press Touch Control (3).
- **To leave the Options submenu:** press Touch Control (1).

THE FOLLOWING FUNCTIONS MAY BE AVAILABLE ON THE OPTIONS **SUBMENU, FOR EXAMPLE:**

- Navigation: selecting and adjusting zoom, route guidance and map settings
- Understated: selecting the color selection
- Classic: resetting the trip odometer
- Classic: resetting the trip computer From Start
- Classic: resetting the trip computer From Reset
- Classic: resetting the ECO display values


Calling up the Classic or Understated menu

Driver display:

→ Classic

INFORMATION FOR SELECTING THE CENTER DISPLAY CONTENT

The Classic menu shows the driver display separated into speedometer and power availability display. The area in between can be filled with various types of information.

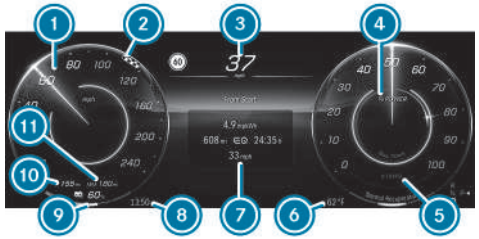

(1) Speedometer
(2) Recommended maximum speed when range monitoring and route guidance are active
(3) Digital speedometer
(4) Display area for output
(5) Display area for recuperated power (recuperation)
(6) Outside temperature
(7) Center display content (example: trip computer)
(8) Time
(9) Charge level display
(10) Range according to personal driving style (⟶ page 381)
(11) Range at low consumption (⟶ page 381)

THE FOLLOWING INFORMATION CAN BE SHOWN IN THE CENTER DISPLAY CONTENT (7):

- Trip and total distance
- Distance From Start and From Reset
- ECO display
- Range trend display
- Current consumption
- ATTENTION ASSIST
- Audio

- Navigation (with changing navigation instructions)

THE FOLLOWING VALUES WILL BE DISPLAYED FOR TRIP COMPUTER (7):

- Distance covered in electric mode
- Electric energy consumption
- Driving time
- Average speed

► Swipe upwards or downwards on the Touch Control and select the display content.

OBSERVE THE FOLLOWING NOTES ON THE CLASSIC MENU:

- Recommended maximum speed (2) ensures that the destination will be reached with route guidance active. The state of charge that is desired and entered will be taken into account. If it becomes necessary to limit the vehicle's speed to reach the destination safely with the specified state of charge, the recommended maximum speed will be displayed on the speedometer. A message will also appear on the driver display.


  Please note that despite recommended maximum speed (2), the maximum permissible speed must not be exceeded.
- Display (5) will change when intelligent recuperation is activated (⟶ page 279).

CHANGING THE RADIO STATION OR TRACK ON THE STATION OR TRACK LIST

You can change radio stations or tracks on the station or track list in the center display content with audio information.

THE FOLLOWING WILL BE ADJUSTED IN THE MBUX MULTIMEDIA SYSTEM:

- Configuring the radio station and track lists
- Switching between tracks
- Setting the frequency band

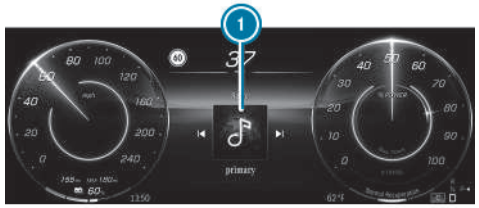

(1) Track list in the center display content (example)

► **To change radio stations or tracks:** swipe left or right on the Touch Control and select a radio station or track on the station or track list (1).

ⓘ The radio station or track displayed when the vehicle is restarted depends on the user profile used for the previous trip.

CHANGING COLOR SETTINGS ON THE UNDERSTATED MENU

► Call up the Understated menu via the driver display menu bar.

► **To call up the color list:** Press the Touch Control.

► **To select color settings:** Swipe upwards or downwards on the left-hand Touch Control and select the color setting.

► Press the Touch Control to confirm.

► **To exit the color list:** Press the back button ⮌.

Depending on the equipment, the selected color adjustment will be adopted for the ambient lighting and the MBUX multimedia system. When you select the Understated menu on the driver display, the content in the MBUX multimedia system will also be reduced.

Calling up the Service menu

Driver display:

Service

The current status of the vehicle is shown on the Service menu.

- **To call up the menu:** press the Touch Control.
- **To select:** swipe upwards or downwards on the Touch Control and select the display content Service.

THE FOLLOWING DISPLAY CONTENT IS AVAILABLE IN THE SERVICE MENU (EQUIPMENT-DEPENDENT):

- Information about how many messages are in the message memory
- Tire Pressure:
  - Checking the tire pressure with the tire pressure monitor (⟶ page 606)
  - Restarting the tire pressure monitor (⟶ page 607)
- ASSYST PLUS: calling up the service due date (⟶ page 551)
- Temperature display (high-voltage battery, front and rear high-voltage motors)

THE FOLLOWING FUNCTIONS ARE AVAILABLE ON THE OPTIONS SUBMENU:

- Tire pressure (⟶ page 606)
- Message memory (⟶ page 708)

Calling up the Assistance menu

Driver display:

Assistance

The Assistance menu displays various driver assistance systems and navigation instructions.

- **To call up the menu:** press the Touch Control.
- **To select:** swipe upwards or downwards on the Touch Control and select the display content Assistance.
- Press the Touch Control.



Active Distance Assist DISTRONIC indicator on the assistant display (example)

THE FOLLOWING DISPLAYS MAY VARY DEPENDING ON THE DRIVING SITUATION:

- The navigation instructions in the left-hand display section

- The traffic light view in the right-hand display section
- The display of the driver assistance systems
- The level of detail on the assistant display

THE FOLLOWING STATUS DISPLAYS ARE AVAILABLE ON THE ASSISTANT DISPLAY:

- Green: pedestrian detection active
- Gray: pedestrian detection activated, but no person detected
- Green radar waves next to vehicle: Blind Spot Assist activated and ready for operation
- Gray radar waves next to vehicle: Blind Spot Assist activated but not ready for operation

THE CONTENT ON THE ASSISTANT DISPLAY WILL ADAPT TO THE FOLLOWING SITUATIONS:

- Number of lanes detected
- Change of direction, e.g. lane change
- Current road conditions
- Road users detected

ⓘ The assistant display will not show other detected obstacles, with the exception of road users.

THE FOLLOWING FUNCTIONS ARE AVAILABLE IN THE OPTIONS SUBMENU:

- Starting route guidance
- With active route guidance: end route guidance
- Call up previous destinations and favorites
- Start new route guidance to a recent destination
- Start new route guidance to a favorite


Calling up the Sport menu

Driver display:

→ Sport

The Sport menu shows information about electric mode.

► **To call up the menu:** press the Touch Control.

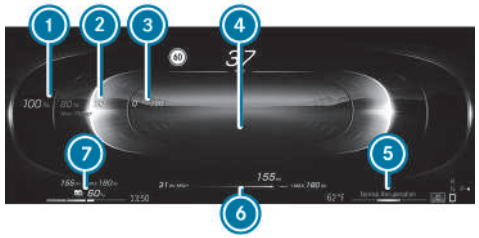

1. Maximum available output
2. Current output
3. Recuperative braking
4. G-force display
5. Selected recuperation level
6. Range trend display
7. State of charge of the high-voltage battery

The range indicator on the driver display will vary depending on the menu selected.



Display content for range

1. Range at high consumption (⟶ page 381)
2. Range according to personal driving style (⟶ page 381)
3. Range at low consumption (⟶ page 381)

Calling up the off-road menu

Driver display:

↳ Offroad

AMONG OTHER THINGS, THE MENU SHOWS THE FOLLOWING INFORMATION:

- Steering angle
- Elevation above sea level
- Compass with direction of travel
- Coordinates

► **To call up the menu:** press the Touch Control.



Calling up the Navigation menu

Driver display:

↳ Navigation

The Navigation menu shows the relevant map with navigation instructions.

► **To call up the menu:** press the Touch Control.

CHANGING THE SCALE OF THE SELECTED MAP VIEW



1. Distance to the change of direction
2. Road to which the change of direction leads
3. Traffic incident indicator
4. Currently selected route
5. Indicator showing vehicle's current position
6. Change-of-direction symbol
7. Recommended lane (white)

8 Lane not recommended (gray)
9 Current lane

ⓘ The level of detail in the navigation instructions in the left-hand display section may vary.

► **To zoom in and out on the map directly:** swipe upwards or downwards on the Touch Control.

ⓘ If you do not operate anything in Autozoom, the system will reset the scale of the map view already selected after a short time. You can set the map scale permanently in the MBUX multimedia system (⟶ page 478).

THE FOLLOWING FUNCTIONS ARE AVAILABLE ON THE OPTIONS SUBMENU:

- With active route guidance: end route guidance
- Select route guidance
- Map Settings

ⓘ If the current route guidance is ended on the Navigation menu of the driver display, it will also be ended in the MBUX multimedia system.

On the Options submenu, you can use other functions in the Destinations and Map Settings categories.

YOU CAN USE THE FOLLOWING FUNCTIONS IN THE DESTINATIONS CATEGORY:

- Call up previous destinations and favourites
- Start new route guidance to a favourite

ⓘ The two options Work and Home will be displayed in Favorites even if no address is stored.

YOU CAN USE THE FOLLOWING FUNCTIONS IN THE MAP SETTINGS CATEGORY:

- Activate auto zoom
- Set the map view, satellite view and route overview.

THE FOLLOWING MAP VIEWS ARE AVAILABLE ON THE NAVIGATION MENU:

- Entire route
- 2D direction of travel
- 2D north-up
- 3D map

Head-up display

Function of the head-up display


The head-up display projects a variety of content into the driver's field of vision:

YOU CAN USE THE HEAD-UP DISPLAY MENU BAR TO SELECT DIFFERENT CONTEXTS, E.G.:

- Minimal
- Sport
- Standard
- Offroad (vehicles with 4MATIC)
- Settings
- Head-up display on/off

The following image shows an example of the head-up display. You can choose what content is displayed (⟶ page 394).

HEAD-UP DISPLAY CONTENT WITH NAVIGATION (6X2°)

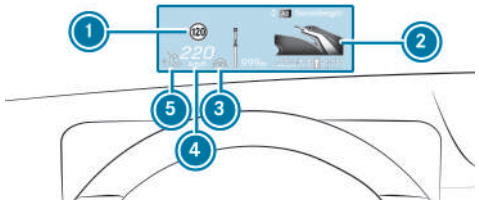

1. Detected instructions and traffic signs
2. Navigation instructions (distance to the next route event)
3. Active Steering Assist status
4. Current speed
5. Set speed in the driving system (e.g. Active Distance Assist DISTRONIC)

SYSTEM LIMITS

VISIBILITY IS INFLUENCED BY THE FOLLOWING CONDITIONS IN PARTICULAR:

- Seat position
- Image position setting
- Ambient light
- Wet road surfaces
- Objects on the display cover
- Polarization in sunglasses

You can watch an animation on this topic via the following link:

Operating the head-up display

SELECTING DISPLAY CONTENT OF THE HEAD-UP DISPLAY VIA THE MENU BAR OF THE DRIVER DISPLAY

- Press the main menu button [⌂].
- **To select the menu bar of the head-up display:** swipe upwards on the Touch Control.



SWITCHING BETWEEN DISPLAY CONTENT ON THE HEAD-UP DISPLAY

- Swipe to the left or right on the Touch Control.

  A preview of the selected display content will appear on the head-up display.
- **To confirm:** press the button [OK].

SWITCHING BACK TO THE DRIVER DISPLAY

- Press the button [↩] or [⌂].

SETTING THE POSITION AND BRIGHTNESS

- Swipe to the left or right on the Touch Control and select Settings on the menu bar of the head-up display.
- Press the Touch Control.

  The current position and brightness settings will be displayed as graphics on the head-up display and on the driver display.
- **To adjust the position:** swipe upwards or downwards on the Touch Control.
- **To adjust the brightness:** swipe to the left or right on the Touch Control.

  The settings configured for position and brightness will be saved automatically.
- Press either button [↩] or [OK] to exit the settings.

ⓘ Brightness of the head-up display switches automatically between day and night mode according to the ambient light.

Switching the head-up display on/off

Driver display:

→ [⌂]

SWITCHING ON

- Swipe upwards on the Touch Control.
- Press Touch Control [OK].

SWITCHING OFF

- Swipe upwards on the Touch Control.
- Swipe on the Touch Control and select Head-up Display.
- Press Touch Control [OK].

Switching the head-up display on/off in the multimedia system

Multimedia system:




SWITCHING THE HEAD-UP DISPLAY ON/OFF

- Select Head-up Display.

  The head-up display is activated or deactivated.

Function of the power availability display

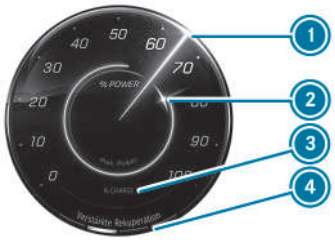

1. Current output
2. Available power
3. Recovered energy (regeneration)
4. Set regeneration level

Maximum output is available in normal operating condition.

IN THE FOLLOWING CASES, THE AVAILABLE OUTPUT MAY DEVIATE FROM THE MAXIMUM VALUE:

- When the ambient temperatures are very high or low
- When there are very high output requests over an extended period of time
- When the state of charge of the high-voltage battery is very low
- When the drive system is malfunctioning

The values displayed serve only as orientation. The displayed output value may differ from the actual value.

When the maximum regenerated power 3 has been reached, the additionally desired deceleration is set via the brake control system. Use the service brake for additional braking, if necessary.

Overview of status indicators on the driver display

The status indicators for the driving systems and driving safety systems can be found in display sections (1) to (4).



The number, position and presentation of the status indicators on the driver display depend on which systems are activated or deactivated.

- Pedestrian detection (on assistant display only)
- Active Parking Assist is available (⟶ page 371)
- Active Parking Assist has detected a parking space (⟶ page 371)
- Parking Assist PARKTRONIC deactivated (⟶ page 368)
- Cruise control (⟶ page 331)
- Active Distance Assist DISTRONIC (⟶ page 334)
- Specified distance for Active Distance Assist DISTRONIC (⟶ page 334)
- Active Brake Assist deactivated (⟶ page 350)
- Active Brake Assist impaired or inoperative (⟶ page 350)
- Active Steering Assist (⟶ page 343)
- Active Lane Keeping Assist (⟶ page 356)
- Active Blind Spot Assist (on assistant display only)
- Haptic accelerator pedal
- HOLD function (⟶ page 328)
- Adaptive Highbeam Assist (⟶ page 246)
- Active Stop-and-Go Assist
- Slippery road surface warning

Vehicles with Traffic Sign Assist: detected information and traffic signs (⟶ page 351)

Important information from other driving systems may briefly appear over the displayed traffic signs.

MBUX Voice Assistant

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Notes on operating safety
Operation
Using MBUX Voice Assistant effectively
Essential voice commands

Notes on operating safety

FOR YOUR OWN SAFETY, ALWAYS OBSERVE THE FOLLOWING POINTS WHEN OPERATING MOBILE COMMUNICATIONS EQUIPMENT AND ESPECIALLY YOUR VOICE CONTROL SYSTEM:

- Observe the legal requirements for the country in which you are driving.
- If voice control is used in an emergency situation, commands may be less easily recognized due to a change in voice.
- Familiarize yourself with the voice control system functions before starting the journey.

The voice control system does not replace the Operator's Manual.
The answers from the voice control system do not provide the complete scope of information contained in the Operator's Manual. The voice control system also does not give detailed warning or damage information. Therefore read the Operator's Manual so that you are fully informed about the functions and the safe operation of the vehicle.

Operation

Function of the MBUX Voice Assistant

You can watch an animation on this topic via the following link:

Using the MBUX Voice Assistant, vehicle functions and various areas of the MBUX multimedia system can be operated by voice input, e.g. Navigation or Telephone. The MBUX Voice Assistant is operational about half a minute after switching on the vehicle and can be operated from all seats (depending on the special equipment).

Conducting a dialog

Requirements:

- Voice activation is activated in the multimedia system (⟶ page 402).

STARTING A DIALOG

► Say Hey Mercedes to activate the MBUX Voice Assistant.

or

► Press the button on the multifunction steering wheel.

A wave appears in the MBUX multimedia system. The dialog can be started.

For the dialog with the MBUX Voice Assistant, you can use complete sentences of colloquial language as voice commands. Voice activation can also be combined directly with a voice command, e.g. Hey Mercedes, how warm is it outside?

INTERRUPTING THE DIALOG

► During the dialog say Pause.

The dialog is interrupted.

► Say Hey Mercedes to continue the dialog.

CHANGING DIALOG LEVEL

► During the dialog, say Back.

The MBUX Voice Assistant jumps back to the previous dialog step.

NAVIGATING IN THE SELECTION LIST

If a voice command does not achieve a clear result, a selection list is shown.

► Say the line number or the content to select an entry or to have further details shown.

► Say Next page or Previous page to browse the selection list.

CALLING UP HELP

► **Information on the MBUX Voice Assistant:** call up the following app in the multimedia system: Hey Mercedes Info.

► **Current application:** say Help.

You will receive suggestions and information about operation of MBUX Voice Assistant for the current application.

► **Specific function:** call up the voice command for the required function, for example with Hey Mercedes, I need help with the radio.

- **Digital Operator's Manual:** say Show me the Operator's Manual.
  The full extent of the Digital Operator's Manual is available on the media display when the vehicle is stationary.

Overview of the operable functions of the MBUX Voice Assistant

YOU CAN USE THE MBUX VOICE ASSISTANT TO OPERATE THE FOLLOWING FUNCTIONS DEPENDING ON THE VEHICLE EQUIPMENT:

- Telephone
- Text messages and e-mails
- Navigation
- Radio and media
- Vehicle functions
- Online functions

Full functionality of the voice control system is only available for you with activation of online voice control (⟶ page 402).

Information on the language setting

You can change the language of the MBUX Voice Assistant via the system language settings (⟶ page 437). If the set system language is not supported by the MBUX Voice Assistant, English will be selected.

Setting functions of MBUX Voice Assistant using the multimedia system

Multimedia system:

Settings » System » Voice Assistant

SWITCHING VOICE ACTIVATION OF MBUX VOICE ASSISTANT ON OR OFF

- Select Hey Mercedes.
  When the function is active, the Hey Mercedes voice command can activate the dialog.

SWITCHING DIRECT COMMANDS ON OR OFF

- Select ⚙.
- Activate or deactivate the function.
  If the function is active, some commands can be used without saying Hey Mercedes, for example Next track.

SWITCHING VOICE ACTIVATION FOR INDIVIDUAL SEATS ON OR OFF

- Select ⚙.
- Switch the function for the desired seats on or off.

SWITCHING PROACTIVITY ON OR OFF

- Select Proactivity.
- Select the desired situation, e.g. Profile Activation or Don't Forget Your Phone.
  When the function is active, the voice assistant proactively provides information in specific situations.

ACTIVATING OR DEACTIVATING ONLINE VOICE CONTROL

Online voice control is activated at the factory.

- Select Online Voice Control.
- Activate or deactivate the function.

  If the function is switched on and a Mercedes-Benz user account is linked to the vehicle, additional results are available through external information, e.g. information on points of interest. By clicking the symbol in the wave, more information about the online voice control can be displayed.

ACTIVATING OR DEACTIVATING CONTACTS FOR ONLINE USE

- Select Contacts for Online Use.

  When the function is active, contacts will be found more easily and accurately using voice input.

Using MBUX Voice Assistant effectively

Notes on optimum use of the MBUX Voice Assistant

- The MBUX Voice Assistant is operational half a minute after switching on the vehicle and can be operated from all seats, depending on the equipment installed. The system recognizes from which seat the command was spoken and performs actions according to the seat position.
- When a dialog is ended, the MBUX Voice Assistant continues to be active for as long as the wave is displayed in the multimedia system. You can say another voice command without saying **Hey Mercedes**.
- Using the direct command **Change language to English**, the system language can be changed to English without **Hey Mercedes**. Direct commands must be activated for this.
- If a user profile has been stored and is active, the MBUX Voice Assistant can make suggestions based on the habits of the user.

  Say **Hey Mercedes, load my personal profile**, to activate the profile. The user's voice must first be taught in by the system and assigned to a profile.

  Further information on user profiles (⟶ page 422).
- With the MBUX Voice Assistant, incoming calls can be accepted or rejected without the keyword **Hey Mercedes**.

Information on the MBUX online voice assistant

The online voice control facilitates recognition and thanks to external information makes additional results available.

Therefore, Mercedes-Benz recommends that you activate online voice control (⟶ page 402).

You will need a Mercedes-Benz user account for this. If you do not yet have a user account you must create one and connect it with your vehicle (⟶ page 422).

Then call up your Mercedes-Benz user account. The Mercedes-Benz Digital Extras are displayed and can be activated (⟶ page 424).

By clicking on the symbols displayed in the wave, further information on the online status is displayed.

WHEN ONLINE VOICE CONTROL IS ACTIVE, ADDITIONAL FUNCTIONS ARE AVAILABLE SUCH AS:

- Weather
- General knowledge
- Public holidays and school holidays
- Smart home
- Messages
- Time, date and time zones

- Pocket and currency calculator
- Football results and fixture lists
- Share prices
- Calendar
- ChitChat
- Horoscope
- Geo Quiz
- Giving feedback

The availability of these functions is country and equipment-dependent.

Text content is taken from Wikipedia in accordance with the CC BY-SA 3.0 license.

Essential voice commands

Notes on voice commands

It is not necessary to use exact voice commands to call up a specific function. The MBUX Voice Assistant also understands you when you use your colloquial speech. Some examples are listed below. For some languages however these examples are only available to a limited extent.

EXAMPLES OF VOICE COMMANDS:

- Navigation (⟶ page 406)
- Telephone (⟶ page 406)
- Radio and TV (⟶ page 407)
- Media player (⟶ page 408)
- Messages (⟶ page 408)
- Vehicle functions (⟶ page 408)
- Online functions (⟶ page 409)

Examples of navigation voice commands

You can operate the navigation system using the MBUX Voice Assistant. The following list offers just a small selection of the possible navigation commands. You will receive additional suggestions if you say Help for navigation.

- Drive me home.
- Where is the nearest service station?
- Is there a service area along the route?
- Set Covent Garden as intermediate destination.
- Cancel the route guidance.
- Show my last destination.
- I want to buy juice.
- Search for an Asian restaurant, but not Japanese, in South London.

Examples of telephone voice commands

You can operate phones connected with MBUX multimedia system the using the MBUX Voice Assistant. The following list offers just a small selection of the possible telephone commands. You will receive additional suggestions if you say Help for phone.

- Call Peter Miller on the mobile phone.
- Dial 0711 17 0.
- Call my father.
- Accept call
- Reject call
- Search for the contact Peter Miller.
- Switch to address book
- Show me the incoming calls.
- Switch the phone

Examples of radio and TV voice commands

Depending on the vehicle equipment, you can operate the radio and TV using the MBUX Voice Assistant. The following list offers just a small selection of the possible radio or TV voice commands. You will receive additional suggestions if you say Help for radio or Help for TV.

- Play the radio station Heart FM.
- Next station.
- Previous station.
- Show me the list of radio stations
- Save the station
- What am I listening to?

Overview of radio voice commands

Radio voice commands can also be used when the radio application is running in the background and another application is visible in the foreground. The following list offers just a small selection of the possible radio voice commands. You will receive additional suggestions if you say Help for radio.

RADIO VOICE COMMANDS

Voice command	Colloquial example	Function
Radio station <station name>	I'd like to select the radio station "Cool FM"	Selects the radio station.
Radio frequency <Frequency>	Go to station/radio frequency "eighty seven point five megahertz"	Enters a radio frequency, e.g. in the FM frequency band.
Next radio station	Call up the next radio station	Calls up the next radio station from the station list.
Previous station	Switch to the last radio station/to the previous program	Switches to the previous radio station.
Save radio station	Please save the radio station	Saves the radio station currently playing.
Show radio station list	Show me the list of all radio stations, please	Shows the radio list with the radio stations that can currently be received.
Read out channel list	I'd like to listen to the station list, please	Reads out the radio list with the radio stations that can currently be received.
Traffic information on	Switch on the traffic info	Switches on traffic announcements.
Traffic information off	I'd like to switch off traffic info	Switches off traffic announcements.
Radio info on	I want you to turn on additional radio station text	Switches on the radio text information for the radio station currently playing.

Voice command	Colloquial example	Function
Radio info off	I want you to turn off additional radio station text	Switches off the radio text information for the radio station currently playing.
Change to radio favorites	Please show me the list of all favorite radio stations	Shows the favorites with the saved radio stations.

Examples of media voice commands

You can operate connected media sources and online music using the MBUX Voice Assistant. The following list offers just a small selection of the possible media voice commands. You will receive additional suggestions if you say Help for media or Help for player.

- Play Michael Jackson.
- Play "Yellow Submarine' by the Beatles.
- Next track.
- Previous track.
- Repeat this track.
- Switch on random playback.
- Mute the music.
- Switch to USB.

Examples of message voice commands

Messages can be created, edited and listened to using the MBUX Voice Assistant. The following list offers just a small selection of the possible message commands. You will receive additional suggestions if you say Help for messaging.

- Write a text message to Jane Doe: When will the next meeting take place?
- Show me my new e-mails.
- Write an e-mail to Jane Doe.
- Read me my new text messages.
- Show all new text messages.
- Write an e-mail to John Doe in English

Examples of vehicle voice commands

You can operate vehicle settings and vehicle functions using the MBUX Voice Assistant. The following list offers only a small selection of possible vehicle-specific voice commands and depends on the vehicle equipment and the language set.

ⓘ If no seat is mentioned for commands, the action is carried out automatically for the seat from which the command was spoken or for the function which is closest to that seat.

- Switch the seat heating to level 2.
- My feet are cold.
- Start the Refresh program.
- Switch the massage program on.
- I would like to set the ambient light to blue
- Switch on the reading lamp.
- Open all the windows.
- Tell me my next service appointment

- How warm is it outside?
- Show me the charging options
- Select the Home charging program.
- Set the charging limit to 80%.
- To what percentage will the battery be charged?
- Set my weekend departure time for 10 a.m..
- With how many kilowatts will the battery be charged?
- How much longer do I have to charge?

INFORMATION ABOUT THE VEHICLE CAN ALSO BE REQUESTED:

- Information about individual items of the vehicle equipment
  - Hey Mercedes, which massage program do you have?
  - Hey Mercedes, do I have Blind Spot Assist?
  - Hey Mercedes, where is the warning triangle?
- Information about functioning of the systems and components installed in the vehicle
  - Hey Mercedes, what is DISTRONIC?
  - Hey Mercedes, what do I need ESP for?
  - Hey Mercedes, what is MBUX?
- Information about operating the systems and components installed in the vehicle
  - Hey Mercedes, how do I connect my smartphone?
  - Hey Mercedes, how can I turn on the high beam headlamps?
  - Hey Mercedes, how do I stop the ionization function?

Examples of online functions

Depending on the country, language and vehicle equipment, additional functions are available when online voice control is active. The system accesses external information and can, as a result, answer general knowledge questions and make calculations, for example.

- Is the sun shining in Manchester?
- Is it raining at my destination?
- What are the skiing conditions on the Zugspitze?
- What's the time in Sydney now?
- In which country do you pay with dollars?
- How many Swiss franks make 25 euros?
- How long now until the holidays?
- What day is it tomorrow?
- What is 20 % of 29?
- What does my horoscope say?
- What is the price of Mercedes-Benz Group shares?
- Let's play Geo Quiz.
- I'm bored.
- Who is the current president?
- What do you know about the Globe Theatre in London?
- Who painted the picture "The Scream"?
- What's the status in the Premier League?
- Create a calendar entry tomorrow at 9 am.
- What's my next task?
- Tell me a joke.
- How many languages do you speak?
- What is your favorite animal?

- Are there any updates?
- Is the light still on in the kitchen?
- Switch off all the devices in my house.
- Please set the temperature in the living room to 24 degrees.
- I'd like to give you feedback.
- Navigate to work
- Navigate home
- Repeat driving instruction
- Cancel route guidance
- Change language to English

Direct command examples

With direct commands, some functions can be operated without first saying the voice command **Hey Mercedes**. To use direct commands, the function must be activated in the multimedia system (⟶ page 402).

- Next TV channel
- Previous TV channel
- Next radio station
- Previous radio station
- Next station
- Previous station
- Next track
- Previous track
- Start dashcam recording
- Stop dashcam recording
- Show the map
- 3D map
- 2D map
- Align map to north
- Align map in direction of travel
- Show all routes
- Show traffic

MBUX multimedia system

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Overview and operation
Media
System settings
Radio
Drive system settings
Sound
Fit & Healthy
Navigation and traffic
Telephone
Online and Internet functions

Overview and operation

Overview of the MBUX multimedia system

WARNING
Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ► Only operate this equipment when the traffic situation permits.
- ► If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

NOTE
Increased surface temperature due to direct sunlight on the central display

The surface of the central display is very dark.

If the display is exposed to direct sunlight, the surface can become very hot.


- ► If the central display has been exposed to direct sunlight, allow it to cool down before touching it for a long time.

THE FUNCTIONS OF YOUR MBUX MULTIMEDIA SYSTEM MAY DIFFER AND DEPEND ON THE FOLLOWING FACTORS:

- Market
- National version
- Technical conditions

Functions and Digital Extras provided by Mercedes-Benz and/or third-party providers may no longer be available when the contractual period expires. This may also be due to technical prerequisites. There is therefore no entitlement to the continuous provision of functions and Digital Extras.
The described functions may be modified, optimized and adapted after the time of going to press.

Mercedes-Benz therefore reserves the right to introduce changes to functions and Digital Extras.
For these reasons, descriptions and depictions relating to the MBUX multimedia system may, in some cases, differ for your vehicle.

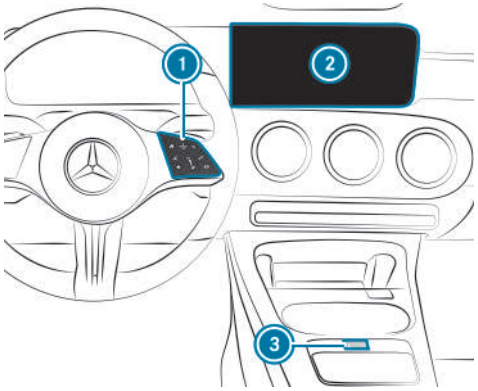

1. Touch Control and control panel for the MBUX multimedia system
   MBUX stands for Mercedes-Benz User Experience.
   - Operating Touch Control (⟶ page 414)
2. Media display with touch functionality
   - Home screen overview (⟶ page 414)
   - Operating the touchscreen (⟶ page 415)
3. Controller
   Press and hold: switches the MBUX multimedia system or media display on or off
   Press briefly: switches the mute function on/off
   Turn: adjusts the volume

ⓘ Alternatively, the MBUX Voice Assistant allows voice dialog. Operation with natural speech starts after the wake-up call "Hey Mercedes" (⟶ page 401). You can start a voice navigation, for example.

ⓘ If the vehicle is equipped with the MBUX Interior Assistant, selected functions of the multimedia system can be operated contact-free. In addition, the reading light or search light can be switched on or off contact-free.

Numerous apps and Digital Extras are available to you. These can be called up via the home screen.

You can conveniently call up your favorites using the ★ button on the steering wheel. Quick-access in the home screen and in the applications serve to select functions more quickly.


If you use the learning function of the multimedia system, you will receive suggestions during operation of the most probable navigation destinations, media sources, radio stations and contacts. The configuration of the suggestions is completed in the system settings. You can compile your user profile from various vehicle settings and settings of the multimedia system. Some functions and Digital Extras are protected by a PIN. You can teach in biometric procedures to identify yourself with these instead of the four-digit Mercedes me ID PIN.

The Notifications Center collects incoming notifications, e.g. about an available software update. Depending on the type of notification it offers various actions. The call is made via the Control Center.

With the global search, you can search on the home screen via categories, e.g. in the navigation, and on the Internet.

ANTI-THEFT PROTECTION
This device is equipped with technical provisions to protect it against theft. Further information on anti-theft protection can be obtained at an authorized Mercedes-Benz Center.

Home screen overview

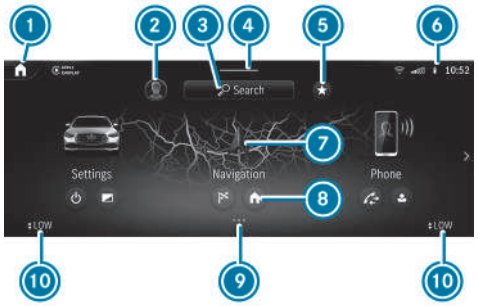

1. On the home screen: displays the first three applications
   In other displays: calls up the home screen
2. Calls up user profile settings and switches user
3. Using the global search
4. Calls up the Control Center: pull the bar down
5. Calls up favorites
6. Displays in the status line
7. Calls up applications
8. Quick-access to application
9. Index points for selected display area
10. Calling up the air-conditioning menu


THE FOLLOWING FUNCTIONS ARE CALLED UP IN THE CONTROL CENTER:

- Notifications Center
- Favorites
- Vehicle quick-access

In the image, the applications are arranged as a carousel. Pressing and holding on [⌂] arranges the applications in a grid. This view is also used by a smartphone, for example.

Touch Control

OPERATING TOUCH CONTROL (MBUX MULTIMEDIA SYSTEM)

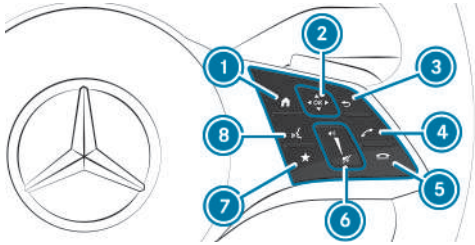

1. [⌂] Shows the home screen
2. Touch Control
   [◀] [▲] [▶] [▼] Swipe in the direction of the arrow (navigate)
   [OK] Press (confirm)
3. [↩] Returns to the previous display
4. [✆] Makes or accepts a call
5. [✆] Rejects or ends a call
6. To increase volume: swipe upwards
   To reduce volume: swipe down
   [🔇] To switch off the sound: press

7 ★ Calls up favorites
8 Starts the MBUX Voice Assistant

ⓘ To operate Touch Control 2 in the most effective way, use the tip of your thumb if possible.

You can navigate through menus and lists via the touch-sensitive surface of Touch Control 2 using **a single-finger swipe**, e.g.:

- **To enter a character:** select a character using the keyboard and press on Touch Control 2.
- **To select a menu option:** scroll in a list and press Touch Control 2.
- **To move the digital map:** swipe in any direction.

SETTING THE SENSITIVITY FOR TOUCH CONTROL

Multimedia system:

Settings » System » Control Elements » Touch Control Sensitivity

- Select Fast, Medium or Slow.

SETTING ACOUSTIC OPERATIONAL FEEDBACK FOR ALL CONTROL ELEMENTS

Multimedia system:

Settings » System » Control Elements » Acoustic Feedback

The function is supported by the selection in a list.

- Set Off, Regular or Loud.

  If the function is activated you will hear a clicking sound when selecting control elements or when scrolling in a list. When the beginning or end of the list is reached you will hear another clicking sound.

Touchscreen

OPERATING THE TOUCHSCREEN

TAPPING

- **To select a menu item or entry:** tap on a symbol or an entry.
- **To increase the map scale:** tap twice quickly with one finger.
- **To reduce the map scale:** tap with two fingers.
- **To enter characters with the keypad:** tap on a button.

SINGLE-FINGER SWIPE

- **To navigate in menus:** swipe up, down, left or right.
- **To move the digital map:** swipe in any direction.
- **To use handwriting to enter characters:** write the character with one finger on the touchscreen.

TWO-FINGER SWIPE

- **To zoom in and out of the map:** move two fingers together or apart.
- **To enlarge or reduce the size of a section of a website:** move two fingers together or apart.
- **To turn the map:** turn counter-clockwise or clockwise using two fingers.

THREE-FINGER SWIPE

- **To call up the home screen:** swipe up with three fingers in an application.

TOUCHING, HOLDING AND MOVING


- **To move the map:** touch the touchscreen and move your finger in any direction.

- **To set the volume on a scale:** touch the touchscreen and move your finger to the left or right.

TOUCHING AND HOLDING

- **To save the destination in the map:** touch the touchscreen and hold until a message is shown.
- **To call up a global menu in the applications:** touch the touchscreen and hold until the Options menu appears.

Overview of the lower control panel on the center console

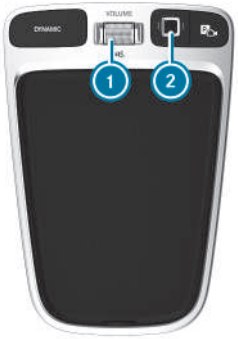

1. Turn: adjusts the volume
   Press: switches sound on or off
2. Fingerprint sensor

MBUX Interior Assistant

NOTES ON LASERS AND LASER CLASSIFICATION

WARNING
Risk of injury from the camera's laser radiation

This product uses a classification 1 laser system. If the housing is opened or damaged, laser radiation may damage your retina.

- Do not open the housing.
- Always have maintenance work and repairs carried out by a qualified specialist workshop.

This product complies with the requirements of the FDA 21 CFR 1040.10 and 1040.11 with exception of the variations according to the FDA Laser Notice No. 50 from 24 June 2007.

WARNING
Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.


You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

OVERVIEW OF THE MBUX INTERIOR ASSISTANT

If the vehicle is equipped with the MBUX Interior Assistant, selected functions of the multimedia system can be operated contact-free. In addition, the reading light or search light can be switched on or off contact-free.

The MBUX Interior Assistant can differentiate between driver and front passenger interactions.

The MBUX Interior Assistant recognizes specific hand movements and a pose.

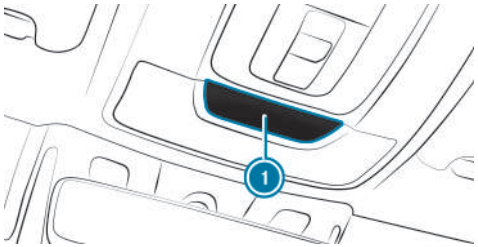

Example of camera installation location

Camera (1) is located in the overhead control panel.

SYSTEM LIMITS, DISPLAY MESSAGES AND NOTES FOR RECTIFICATION

THE SYSTEM MAY BE IMPAIRED OR MAY NOT FUNCTION IN THE FOLLOWING SITUATIONS:

- The camera in the overhead control panel may heat up due to operating conditions. As a result the camera may switch off temporarily, particularly during longer periods of operation and at high outside temperatures.

  Do not touch or cover the camera and wait until the camera has cooled down and is available again.
- The camera is covered, dirty, fogged up or scratched.

  Wait until the camera has cooled down before cleaning the camera lens.

  Clean the outside of the camera lens with a dry or damp cotton cloth. Do not use microfiber cloths. Do **not** remove the cover when cleaning.
- Recognition can be impaired by reflective clothing, an adverse color of clothing or by accessories, for example.
- Clothing being worn (hat, shawl, scarf) may be limiting the detection range of the camera.

  Keep the camera's field of vision clear.
- The camera is not operational.

  Consult an authorized Mercedes-Benz Center.

SUPPORTED INTERACTIONS

Interaction area	Interaction	Description
In front of the media display or above the touchpad	Proximity to the control element	The MBUX Interior Assistant recognizes a hand approaching a control element. Depending on the active application, the display will be adjusted in the media display. Some functions differentiate between driver and front passenger. No specific hand position is required.
Above the center console	Defined pose	A favorite is called up with a defined pose.
Below the inside rearview mirror	Brief up and down movements	With brief up and down movements below the inside rearview mirror the reading light for the driver or the front passenger is switched on and off.
Above the front passenger seat	Stretching out a hand above the front passenger seat	By stretching out a hand above the front passenger seat the search light is switched on. If you withdraw a hand from this area, the search light is switched off again.

You can watch an animation on this topic via the following link:

OPERATING FUNCTIONS BY BRINGING YOUR HAND CLOSER TO THE MULTIMEDIA SYSTEM

Requirements:

- One of the following applications appears in the media display:
  - Seat settings with displays for the driver and front passenger seat, e.g. Seat
  - Home screen
  - Radio menu or media menu
  - Map in the navigation
  - Active Parking Assist

SEAT ADJUSTMENTS BY THE DRIVER OR FRONT PASSENGER

In the seat settings menu, the MBUX Interior Assistant detects proximity to various control elements of the multimedia system. In addition, the MBUX Interior Assistant detects from which seat the action emanates.

- ▶ Either switch the function on and off directly or make further settings (depending on function).

HIGHLIGHTING AN APPLICATION ON THE HOME SCREEN

The MBUX Interior Assistant detects in which area your hand is in front of the touchscreen. The display of objects shown is adjusted to improve orientation.

- ▶ Move your hand towards the touchscreen.

  The symbol for the application is enlarged. The quick-access applications will be highlighted.

- ▶ Continue operation and select a quick-access application, for example.

ⓘ Further information about the home screen (⟶ page 414).

ACTIVATING COVER CHANGE IN THE RADIO MENU AND MEDIA MENU

The MBUX Interior Assistant reduces the number of operating steps.

► Continue operation and select a cover.

ⓘ More information on the radio menu (⟶ page 539) and the media menu (⟶ page 532).

SHOWING THE NAVIGATION MENU ON THE MAP
The MBUX Interior Assistant shows the navigation menu.

► Continue operation and select a symbol.

ⓘ Further information on the navigation menu (⟶ page 444).

SHOWING OPERATING SYMBOLS IN THE ACTIVE PARKING ASSIST CAMERA IMAGE (ONLY FROM DRIVER'S SEAT)
The MBUX Interior Assistant facilitates quick-access for the driver to various camera views.

► When Active Parking Assist is shown, move your hand towards the touchscreen.
The camera operation symbols are displayed.

► Continue operation and display the desired front, rear, left and right camera views.

ⓘ Further information on the Active Parking Assist function (⟶ page 369).

CALLING UP FAVORITES WITH THE V POSE

Requirements:

- There is at least one favorite.
- The favorite has been connected with the MBUX Interior Assistant (⟶ page 425).
- The area for recognition of the favorite's pose (V pose) is above the center console at the height of the climate control vents and the media display. Your hand should be at least 4 in (10 cm) from the media display.
- The V pose is held for a brief time.

CALLING UP FAVORITES
The driver and front passenger can connect two different favorites with the V pose.

ⓘ If a favorite has not yet been saved and connected with the MBUX Interior Assistant, the multimedia system will assist you.

► Position a hand above the center console in the direction of the media display. The back of your hand is facing upwards. In doing so the index and middle finger are spread to form a V with the other fingers bent inwards. Briefly hold the V pose.
The favorite is called up.

CONTACTLESS SWITCHING ON OR OFF OF THE READING LIGHT FOR DRIVER AND FRONT PASSENGER

Requirements:

- The function is available when it is dark.
- The hand movement takes place in the interaction area below the inside rearview mirror.

Briefly moving a hand up and down under the inside rearview mirror switches the reading light specifically for the driver or front passenger on or off.

► Move your hand up and down under the inside rearview mirror.
The reading light is switched on or off.

SWITCHING THE SEARCH LIGHT FOR THE DRIVER ON OR OFF WITH A HAND MOVEMENT

Requirements:

- The function is available when it is dark.
- The hand movement takes place in the interaction area above the front passenger seat.
- The seat belt on the front passenger seat must **not** be inserted in the seat belt buckle.

Stretching out a hand over the front passenger seat switches a search light on for the driver when it is dark. Pulling the hand back switches the search light off again.

► **To switch on:** reach across the front passenger seat with a hand.
The search light is switched on for the driver.

► **To switch off:** take a hand back away from the front passenger seat.
The search light is switched off again.

SELECTING SETTINGS FOR THE MBUX INTERIOR ASSISTANT
Multimedia system:
Settings » System » Interior Assistant

► **To switch on full functionality of the MBUX Interior Assistant:** select On.
The option is activated ●.

► **To activate additional functions for reading and search lights:** select Including Search and Reading Light.
When the option is switched on, the display button is activated.
The functions for the reading and search lights are activated in addition to the proximity functions.

► **To switch off the MBUX Interior Assistant:** select Off.
The option is activated ●.

User profiles

NOTES ON USER PROFILES

WARNING
Risk of becoming trapped during adjustment of the driver's seat after calling up a driver profile

Selecting a user profile may trigger an adjustment of the driver's seat to the position saved under the user profile. You or other vehicle occupants could be injured in the process.

► Make sure that when the position of driver's seat is being adjusted using the multimedia system, no people or body parts are in the seat's range of movement.

If there is a risk of someone becoming trapped, immediately stop the adjustment process by:

► a) Tapping the warning message on the central display.

or

► b) Pressing a position button of the memory function or a seat adjustment switch in the driver's door.
The adjustment process is stopped.

The electrically adjustable driver's seat is equipped with an automatic reversing function.

If the driver's door is open, the driver's seat will **not** be set after calling up the driver's profile.

OVERVIEW OF USER PROFILES

REQUIREMENTS FOR USE

- You have registered with a Mercedes me ID and confirmed the terms of use.
- Your Mercedes me ID is linked to the vehicle.
- You have a Mercedes me ID PIN.

ⓘ If one of the pre-requisites listed is missing or if no user profile has been selected, the data described in the following section will be saved in the vehicle as the standard setting. Standard settings can be changed by all vehicle users.

User profiles save personal settings. If the vehicle is used by several people, a person can change their profile settings without changing the settings of other users.

You can individualize a user profile in the vehicle using the set-up assistant or using the settings in your user profile. Some settings, e.g. the Mercedes me ID PIN and a profile photo, are made in the Mercedes-Benz App or on the Mercedes-Benz website.

ⓘ If the user profile is downloaded while traveling, user profiles are not set up using the set-up assistant.

User-specific content and applications with personal data are protected by different levels of security (⟶ page 422).

To access protected content, the Mercedes me ID PIN and, depending on the vehicle equipment, biometric sensors are used.

ⓘ The security level is set by the multimedia system and calculated from the combination of all sensor inputs. Some security levels cannot be turned off.

ⓘ **WHEN A USER PROFILE IS ACTIVATED, THE FOLLOWING PERSONALIZED COMFORT SYSTEMS, FOR EXAMPLE, CAN BE ADJUSTED OR THEIR SETTINGS LOADED:**

- Seat
- Ambient light
- Outside mirrors
- Air-conditioning settings

If the user profile is activated when driving then the driver's seat position will not be adjusted.

USER-SPECIFIC CONTENT

DEPENDING ON THE VEHICLE EQUIPMENT YOU CAN, AS A USER, SAVE THE FOLLOWING SETTINGS, FOR EXAMPLE:

- Driver's seat, steering wheel and mirror settings
- Climate control
- Ambient light
- Radio (including station list)

- Suggestions and favorites

You can watch an animation on this topic via the following link:

ADDING A USER

Requirements:

- The vehicle is stationary.

Multimedia system:

 Select User

▶ Select ⊕ Add User.

A QR code is loaded.

▶ Scan the displayed QR code with the Mercedes-Benz App or any QR code scanner on a mobile device. If the Mercedes-Benz App is not yet installed on your mobile device, you will be directed to the store on your mobile device.

▶ Follow the steps in the Mercedes-Benz App.

The vehicle is linked to your Mercedes me ID. This automatically creates your user profile in the vehicle.

You will be informed when your user profile is available.

When the vehicle is stationary, the set-up assistant starts automatically after user selection.

ⓘ When the user has been added, they can be selected (⟶ page 424).

SELECTING USER OPTIONS

Multimedia system:

 Settings

PROTECTING USER-SPECIFIC CONTENT AND APPLICATIONS

If you add a new user, access protection is already activated for the user profile. The Mercedes me ID PIN and, depending on the vehicle equipment, biometric sensors are available for access. Biometric sensors in the vehicle must be taught in. The authentication process then takes all taught-in and available sensors into account.

THE FOLLOWING USER-SPECIFIC CONTENT AND APPLICATIONS ARE PROTECTED, FOR EXAMPLE:

- User selection and user profile settings
- Biometric sensors

  The teaching-in of biometric sensors

  For teaching in and editing biometric recognition see the following section.
- Suggestions

  The data and determination of the most probable navigation destinations, media sources, radio stations, contacts and messages.
- ENERGIZING COACH

  The recorded health data and its evaluation.
- Parking service

  The payment transactions.
- Mercedes-Benz Store

  The purchase of Digital Extras
- System activations of paid vehicle functions

IN THE FOLLOWING CASES YOU WILL BE PROMPTED FOR AUTHENTICATION OR RE-AUTHENTICATION USING A SENSOR OR THE MERCEDES ME ID PIN:

- When selecting a protected user profile
- When calling up a function requiring special protection
- If biometric sensors provide insufficient or contradictory information
- If the multimedia system no longer trusts a sensor
- If the seat belt buckle and the door are opened at the same seat and a function requiring special protection is called up
- When the vehicle is locked from outside

► Select Protect Content.

► Switch Access Protection on or off.

ⓘ When access protection is switched off, your user profile can be viewed from any seat and changes can be made.

ⓘ Access protection is switched on or off on a vehicle-specific basis.

ⓘ Note that authentication is necessary for some functions and therefore cannot be switched off completely.

SETTING UP AND EDITING BIOMETRIC RECOGNITION

The biometric data models are saved in the sensors in the vehicle. If recognition has been set up, this sensor serves as a contributory factor for authentication on the multimedia system.

► Select Protect Content.

► Select Voice Recognition.

ⓘ If necessary, authenticate yourself on the multimedia system.

SETTING UP VOICE RECOGNITION

► Speak the sentence shown on the media display and follow the voice assistant's instructions.

If voice recognition was successful, a message appears on the media display. You can unlock your user profile.

ⓘ Avoid background or disturbing noises during voice recognition.

DELETING BIOMETRIC DATA

► Tap on 🗑 behind Voice Recognition.

► Select Yes.

CALLING UP THE SET-UP ASSISTANT

► Select Profile.

► Select Set-up Assistant.

► Follow the directions from the set-up assistant.

CHANGING A USER NAME OR PROFILE PHOTO

► Select Profile.

► Select Change User Name.

or

- ► Select User Image.
- ► Enter the user name or select a user image.
- ► Select Finish.

ⓘ You can use the Mercedes me ID to store your photo in the Mercedes-Benz App or in the Mercedes-Benz Portal. The photo will then be shown in the vehicle. In the vehicle itself, you can select other sample images instead of the photo.

DELETING A USER PROFILE

- ► Select Profile.
- ► Select Remove.
- ► Select Remove User Profile.

ⓘ Your Mercedes me ID and your personal data are retained in the Mercedes-Benz ecosystem.

RESETTING THE USER PROFILE TO FACTORY SETTINGS

- ► Select Profile.
- ► Select Reset.
- ► Select Yes.

ⓘ This resets the contents of the user profile to factory settings, but not the vehicle.

You can watch an animation on this topic via the following link:

SELECTING A USER

Multimedia system:



ⓘ When you call up your driver profile, the driver's seat and the steering wheel can be set.

YOU CAN CANCEL THE SETTING PROCESS WITH THE FOLLOWING ACTIONS:

- Press one of the seat operating buttons in the driver's door.

- ► Select Select User.
- ► Select a user.
- ► When requested to do so, authenticate with the Mercedes me PIN or a taught-in biometric characteristic.

  The user profile is loaded and activated.

ⓘ If you select Continue Without Selecting a User, no specific settings for the user profile are loaded.

SYNCHRONIZING USER PROFILES

Requirements:

- You have a Mercedes me ID.
- The vehicle is linked to your Mercedes me ID.

Multimedia system:

Settings Synchronization

- Activate Synchronize Automatically.

  When the vehicle is switched on or off, the data stored in the vehicle is automatically synchronized with the Mercedes me IDs. This synchronization is done for all user profiles and is not profile-specific.

or

- Select Synchronize Now.

  The data stored in the vehicle is synchronized with the personal profiles after selecting this option.

Not all user profile functions are available during synchronization. During synchronization, the most recently changed data is applied.

IF THE PERSONALIZATION SERVICE IN THE VEHICLE IS DEACTIVATED, ONLY THE FOLLOWING USER PROFILE MASTER DATA IS SYNCHRONIZED:

- Profile name
- Profile image
- Mercedes me ID PIN

Favorites

OVERVIEW OF FAVORITES

Favorites offer you quick access to frequently used applications. 100 favorites are available in total.

You can select favorites from categories or you add favorites directly from an application.

You can add and edit navigation favorites within the application.

CALLING UP FAVORITES

Multimedia system:

- Alternatively, in the home screen pull down bar in the center of the status line (⟶ page 414).
- Select ★ in the Control Center.

ADDING FAVORITES

Multimedia system:

SELECTING FAVORITES FROM CATEGORIES

- Select >.
- Select + Create New Favorite.
- Select the category.
- Select a favorite.

  The favorite is stored at the next available position.
- **All positions in the favorites are taken:** confirm the message shown.

  A list shows all the favorites.
- Select a favorite to be overwritten.

ADDING A FAVORITE FROM AN APPLICATION

You can, for example, save a contact (example), or add an ENERGIZING COMFORT program.

- **To save a contact as a global favorite:** select a contact (→ page 499).
- Press on a telephone number until a menu is shown.
- Select Save as Favorite.
  The contact is added as a favorite.

LINKING FAVORITES WITH THE MBUX INTERIOR ASSISTANT V POSE

ⓘ If a favorite is linked to the V pose, you can call it up (→ page 419).

- Select [>].
- Select Driver or Passenger.
- Select the category.
- Select a favorite.
  If the favorite is linked with the V pose, a notification appears.

ⓘ The linked favorite pose can be activated or deactivated for the driver or front passenger.

RENAMING FAVORITES

Multimedia system:



- Press on a favorite until a menu is shown.
- Select Rename.
- Enter the name.
- Save the names.

MOVING FAVORITES

Multimedia system:



- Press on a favorite until a menu is shown.
- Select Move.
- Move the favorite to the new position.
- Tap on [✓].

DELETING FAVORITES

Multimedia system:



- Press on a favorite until a menu is shown.
- Select Delete.
- Select Yes.

RESETTING FAVORITES

- In the menu, select Reset All Favorites.
- Select Yes.

Notifications Center

OVERVIEW OF THE NOTIFICATIONS CENTER

THE FOLLOWING COMMUNICATIONS ARE COLLECTED IN THE NOTIFICATIONS CENTER:

- Communications which are generated by the vehicle or from the multimedia system.
- Messages that arrive through the use of Digital Extras.

THE FOLLOWING NOTIFICATION TYPES ARE AVAILABLE FOR YOU:


- Navigable destinations and routes
- Messages (text messages)
- System information, e.g. Important Software Update Available Confirm to Start the Update
- Other notifications, e.g. from additional Digital Extras that can be booked or from emergency reports (e.g. tornado)

The Notifications center is in the Control center.

Depending on the style set, newly received notifications are shown using a colored dot.

Notifications are normally briefly shown as they are received. If you take no action, these are stored for future access in the Notifications center.

The notifications are sorted chronologically. The most recent notifications are at the top.

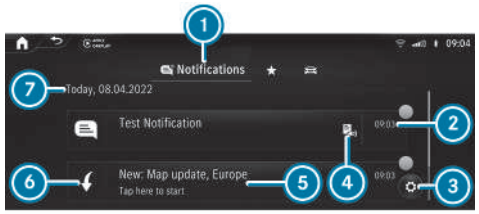

Example of a message

1. Calls up the Notifications center
2. Time message received
3. Calls up the settings
4. Display for available actions
5. Description of the notification and the issuing service
6. Symbol for notifications
7. Date of the received notifications

Depending on the type of notification, up to four different actions are available.

EXAMPLES OF ACTIONS INCLUDE:

- Reading aloud
- Placing a call
- Replying
- Calling up a web page
- Navigation

Some notifications, e.g. a navigation destination, are stored longer. Therefore, it is not necessary to carry out available actions directly upon receipt of the notifications. A route guidance can be started at a later time.

You can pin a notification so that it is not deleted automatically after a certain time has elapsed (→ page 428).

CALLING UP NOTIFICATIONS

OPENING THE NOTIFICATIONS CENTER

► Select [ ] in the Control Center.

SELECTING A NOTIFICATION

► If several messages are available swipe up or down.

► Select an action.

CLOSING THE NOTIFICATIONS CENTER

► Select [ ].

SELECTING ACTIONS FOR A NOTIFICATION

THE FOLLOWING OPTIONS ARE AVAILABLE:

- Select the action directly after a notification is received and shown.
- Select the action later after calling up in the Notifications Center.

► Up to two actions available: select the action.

► More than two actions available: select [ ].

► Select the action.
The notification is still available.

► Close the actions with [ ].

EDITING NOTIFICATIONS

► Call up the Notifications Center (→ page 428).

CONFIGURING SETTINGS

► Select [ ] Settings .

► Select the service.

► Switch the options on or off.

THE FOLLOWING OPTIONS ARE AVAILABLE DEPENDING ON THE SERVICE:

- Allow Notifications
- Display in Notification Center
- Show Notifications
- Switching Acoustic Signals on or off
- External Access
  The option allows an external service access to specific data, e.g. the current vehicle position. The detailed, approved information is shown with ⓘ.

If Allow Notifications is switched off, the options cannot be selected with the exception of External Access.

PINNING A NOTIFICATION

► Drag a notification to the right on the touchscreen.
A pin appears.

► Tap on the pin.
The notification is marked with a pin.

DELETING NOTIFICATIONS

► Drag a notification to the left on the touchscreen.

or

► Select [ ].
► Select Yes.
All messages are deleted.

Global search

GLOBAL SEARCH OVERVIEW
You can call up the global search on the home screen. You can input characters using the keyboard or the handwriting recognition. Alternatively, the MBUX voice assistant allows voice input.

THE GLOBAL SEARCH PROVIDES SEARCH RESULTS FOR THE FOLLOWING CATEGORIES:

- Navigation
- Entertainment
- Telephone
- Digital Operator's Manual
- Website

The global search enables you to search for cities, roads and tourist attractions in the navigation category, for example.

If the search field is empty, you will first see smart suggestions in the Suggestions category.

If a letter is entered, the best hits are displayed in the All category. You will find further search results in the individual categories. Next to the category is the number of results.

After selecting a category you can select the search results within the category. When you select a search result, a detailed view is opened depending on the category.

USING THE GLOBAL SEARCH
Multimedia system:
Search

In the Suggestions category up to six smart suggestions are displayed, even if no search entry has been entered yet.

- Enter the search term into the search field.
  As soon as a character is entered the All category is marked. Up to ten search results per category are displayed there.
  In the other categories suitable search results for the entered search item are displayed.

> Alternatively, the MBUX Voice Assistant allows voice input using [ ] or you switch to the handwriting recognition [ ] (→ page 430).

- **To end the search:** select [OK].
- **To show search results for a category:** select a category.
- **To accept the search result:** select the search result.
  An action starts, e.g. a radio station is set or a detailed view is displayed, e.g. for a contact.

Entering characters

USING THE CHARACTER INPUT FUNCTION
Enter the characters on the Touch Control or on the touchscreen. Character input can be started with a control element and resumed with another.


- When the keypad is shown, enter the characters by swiping and pressing on the Touch Control or by tapping on the touchscreen.

Examples for character input include the global search, entering a navigation destination or the renaming of a favorite, for example.

ENTERING CHARACTERS ON THE TOUCHSCREEN

Requirements:

- An online connection is required for some functions.

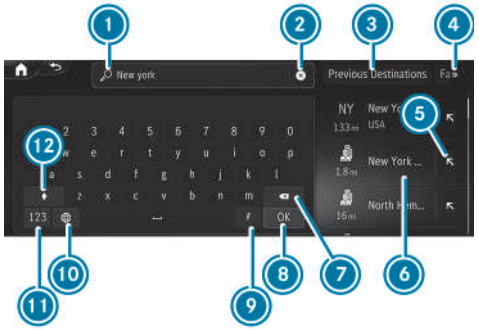

Character input with the keypad (destination entry)

1. Input line with current entry
2. Deletes an entry
3. Selects previous destinations
4. Displays and selects additional destination searches
5. Adopts the search result in the input line and continues the search
6. Search result
7. Deletes the last character entered
8. Hides the keypad
9. Activates voice input
10. Sets the written language
11. Switches to digits and special characters
12. Switches to upper-case or lower-case letters

- Example: call up the navigation and enter a destination address (→ page 38).
- Briefly press on a character.
  The character is entered in input line 1.
- Resume character input.

ⓘ The available editing functions depend on the editing task, the language set and the character level.

ENTERING ALTERNATIVE CHARACTERS

- Press and hold on a character.
- Select the character.

ENDING CHARACTER INPUT

- Hide keypad 8.

SETTING THE KEYBOARD FOR CHARACTER ENTRY

Multimedia system:

Settings » System » Keyboards and Handwriting

SETTING THE KEYBOARD LANGUAGE

- Select Keyboard Languages.
- Select one or more keyboard languages.

DELETING THE USER DICTIONARY

The user dictionary learns from your inputs and offers suggestions during character input. You can reset the user dictionary.

- Select Reset My Dictionary.
- Select Yes.

System settings

Display

CONFIGURING DISPLAY SETTINGS
Multimedia system:
Settings » System » Display

ADJUSTING THE BRIGHTNESS

- Select Display Brightness.
- Vehicles with a driver display and media display: adjust the display brightness of the driver display or media display.

Time and date

SETTING THE TIME ZONE
Multimedia system:
Settings » System » Time and Date

- Select Time Zone.
  The list of countries is displayed.

> If there are several time zones available in a country, these will be shown after the country is selected.

- Select a country and, if required, a time zone.
  The time zone set is displayed after Time Zone.

or

- Select the Automatic Time Zone entry from the country list.
  The time zone will be set automatically according to the vehicle location.

> The Automatic Time Zone option is available for vehicles with satellite reception.

SETTING THE TIME AND DATE FORMAT
Multimedia system:
Settings » System » Time and Date » Set Format

- Select a time and date format.

SETTING THE TIME AND DATE MANUALLY

Requirements:

- The vehicle does not have satellite reception.

Multimedia system:
Settings » System » Time and Date

SETTING THE TIME

- Select Set Time.
- Set a time.
- Press OK to confirm.

SETTING THE DATE

- ▶ Select Set Date.
- ▶ Select a date.
- ▶ Press OK to confirm.

ⓘ On vehicles with satellite reception, the time and date settings are determined automatically based on the vehicle location and cannot be set manually.

ADJUSTING THE TIME

- ▶ Select Adjust Time.
- ▶ Set a value.
- ▶ Press OK to confirm.

ⓘ The function is only available in vehicles with satellite reception.

Switching voice amplification on/off (vehicles with long wheelbase)

Requirements:

- Your vehicle is equipped with the Burmester® 3D surround sound system or the Burmester® high-end 4D surround sound system.
- The ignition is switched on.
- The doors, side windows and the panoramic sliding sunroof are closed.
- At least one seat belt is fastened on the rear bench seat.

Multimedia system:

▶ ⌂ ▶▶ Settings ▶▶ System ▶▶ Audio ▶▶ Voice Amplification Volume

Voice amplification supports communication between the driver/front passenger with vehicle occupants in the rear passenger compartment. When voice amplification is activated, the signals picked up by the microphone are amplified depending upon vehicle noise levels and played back over the speakers in the rear area of the vehicle. In order to improve speech intelligibility and maintain the naturalness of speech an automatic adjustment occurs based on speaker volume and ambient noise.

- ▶ Switch voice amplification on or off.

SETTING THE INTENSITY OF THE VOICE AMPLIFICATION

- ▶ Set the desired intensity on the control.

  Depending on the intensity set, voice amplification is increased or reduced.

Vehicle position

SWITCHING TRANSMISSION OF THE VEHICLE POSITION ON OR OFF

Requirements:

- The vehicle is linked to a Mercedes-Benz ID.
- At least one Digital Extra is activated for the vehicle, which can be used to display the vehicle position to customers and/or co-users via the respective user accesses.

With this setting, you decide whether the vehicle position will be transmitted in order to show it to users who have access to the digital Mercedes-Benz services for this vehicle.

ⓘ The function is country-dependent. For more information, consult a authorized Mercedes-Benz Center.

Multimedia system:

→ Settings » System » Data Protection

► Activate or deactivate the Transmit Veh. Position function.

ⓘ Alternatively, you can also switch the function on or off in the status line via .

Setting permissions

Multimedia system:

→ Settings » System » Data Protection » Permissions

In the Permissions menu, you can set access authorization for various data points (such as microphone, camera) used in an application. You can change permissions that have already been granted here. You can set permissions either for individual data points or for certain applications or websites.

► Select Requests or Apps/Websites.

► Make the required settings for the permissions.

Bluetooth®

INFORMATION ABOUT BLUETOOTH®

Bluetooth® technology is a standard for short-range wireless data transfer up to approximately 32.8 ft (10 m).

YOU CAN USE BLUETOOTH® TO CONNECT YOUR MOBILE PHONE TO THE MULTIMEDIA SYSTEM AND USE THE FOLLOWING FUNCTIONS, FOR EXAMPLE:

- Hands-free system with access to the following options:
  - Contacts (→ page 498)
  - Call lists (→ page 500)
  - Text messages (→ page 501)
- Internet connection (→ page 521)

Bluetooth® is a registered trademark of Bluetooth Special Interest Group (SIG) Inc.

ⓘ Internet connection via Bluetooth® is not available in all countries.

ACTIVATING/DEACTIVATING BLUETOOTH®

Multimedia system:

→ Settings » System » Internet and Bluetooth

► Activate or deactivate Bluetooth.

Near Field Communication (NFC)

INFORMATION ON NEAR FIELD COMMUNICATION (NFC)

NFC enables short-range wireless data transfer or connection of a mobile phone with the multimedia system.

Further information can be found at: https://www.mercedes-benz-mobile.com/

SWITCHING NEAR-FIELD COMMUNICATION ON OR OFF

Multimedia system:

Settings >> System >> Internet and Bluetooth

- Activate or deactivate NFC.

Wi-Fi

WI-FI CONNECTION OVERVIEW

You can use Wi-Fi to set up a connection to the Internet or to external network devices.

ⓘ The availability of the function is dependent on the country.

GENERALLY, TWO TYPES OF WI-FI CONNECTION ARE AVAILABLE:

- **Using the multimedia system as a Wi-Fi hotspot** (⟶ page 435)

  The vehicle's multimedia system serves as Wi-Fi hotspot for mobile communication devices, such as smartphone or tablet PC, for example.

- **Using a mobile communication device as a Wi-Fi hotspot (tethering)** (⟶ page 523)

  An external Wi-Fi hotspot is accessed for the Internet connection of the vehicle's multimedia system.

SWITCHING WI-FI ON OR OFF

Multimedia system:

Settings >> System >> Internet and Bluetooth

- Select Wi-Fi.

  The controller is to the right: Wi-Fi is switched on.

When Wi-Fi is switched on, you can connect the multimedia system with external hotspots or make it available as a hotspot for external devices.

When Wi-Fi is switched off, it is not possible to establish a hotspot connection.

ⓘ Availability of the function is dependent on the respective country.

USING THE MULTIMEDIA SYSTEM AS A WI-FI HOTSPOT

Requirements:

- The device to be connected supports at least one of the types of connection described.

  The connection types shown depend on the device to be connected. The function must be supported by the multimedia system and by the device to be connected. The type of connection must be selected on the multimedia system and on the device to be connected.

ⓘ The data volume of the vehicle or an already connected tethering device is used for the data connection.

Vehicle data volume: depending on the vehicle equipment, you can purchase an Entertainment Package via the Mercedes-Benz Store. In order to use the data package included, you must conclude your own contract with a mobile phone network provider via the Mercedes-Benz App. This can be terminated at any time and incurs no costs. Without this contract it is not possible to use the services included in the previously acquired Entertainment Package. The availability of this option is dependent on the country.
If the data package option is not available or can be upgraded, you can purchase data volume directly from the mobile phone network provider for a fee. The availability of this option is dependent on the country.

ⓘ Some functions may first need to be activated on the device being connected. More detailed information can be found in the manufacturer's operating instructions.

ⓘ The use of the vehicle data tariff by external devices is not available in all countries.

Multimedia system:

→ Settings » System » Internet and Bluetooth

► Select MBUX Hotspot.

► Select one of the following connection options.

CONNECTING USING A QR CODE

Requirement: an app for scanning the QR code is installed on the device being connected.

Alternatively: the device being connected has an integrated QR code scanner (see the manufacturer's operating instructions).

► Scan the QR code shown.
The WLAN connection is established.

CONNECTING USING NFC

► Activate NFC on the device to be connected.

► When the NFC symbol is displayed in the MBUX Hotspot menu, hold the device to be connected to the NFC interface.

► Follow the instructions on the device.
The WLAN connection is established.

CONNECTING USING A SECURITY KEY

► Select the vehicle from the device to be connected. The vehicle is displayed with the MBUX XXXXX network name.

► Enter the security key which is shown in the media display on the device to be connected.

► Confirm the entry.

GENERATING A NEW SECURITY KEY

► Select the Generate New Security Key option in the MBUX Hotspot menu.

► Confirm the prompt with Yes.
A new security key is generated.

A connection will be established with the newly created security key.

ⓘ When a new security key is generated, all existing WLAN connections are then disconnected. If the WLAN connections are re-established, the new security key must be entered.

System language

NOTES ON THE SYSTEM LANGUAGE
This function allows you to determine the language for the menus and navigation announcements. The selected language affects the characters available for entry. The navigation announcements are not available in all languages. If a language is not available, the navigation announcements will be in English.

SETTING THE LANGUAGE
Multimedia system:
Settings >> System >> Language

SETTING THE SYSTEM LANGUAGE
A list of the available system languages is shown.

- Select a language.
  The system language is switched to the selected language.

Setting the distance unit

Multimedia system:
Settings >> System >> Display

ⓘ This function is not available in all countries.

- Select a unit for the distance.
- Activate Additional Speedometer for an additional display in the driver display.

Activating/deactivating system PIN protection

Multimedia system:
Settings >> System >> Data Protection >> PIN Protection

SETTING THE SYSTEM PIN
- Select Set PIN.
- Enter a four-digit system PIN.
- Enter the four-digit system PIN again.
  If both system PINs match, then the system PIN protection is active.

CHANGING THE SYSTEM PIN
- Select Change Settings.
- Enter the current system PIN.
- Select Change PIN.
- Set a new system PIN.

ACTIVATING SYSTEM PIN PROTECTION FOR SOFTWARE UPDATES
- Select Protect Software Updates.
- Activate or deactivate the function.

Configuring suggestions

Multimedia system:
Settings >> System >> Suggestions
- Select ⚙.

- Switch the options on or off individually.

  If an option is switched on and sufficient data has been gathered, personalized suggestions based on your user behavior will be offered to you. These are, for example, navigation destinations visited, phone numbers dialed as well as suggestions based on your music preferences.

  Navigation

  When Allow Destination Suggestions is switched on, the vehicle makes suggestions based on your visited navigation destinations.

  If Commuter Route is switched on, the navigation automatically detects that the vehicle is on a commuter route.

  Calls & Messages

  Suggestions are offered for numbers dialed and messages sent.

  Comfort

  The vehicle makes suggestions based on the use of your comfort functions, e.g. which massage program should be started at what time.

  Entertainment

  Suggestions are offered for the currently played media source. Suggestions are also made for Digital Extras such as Spotify, TuneIn Radio and other streaming providers as well as for categories, for example, genre, artist and mood.

  Vehicle

  The suggestions for vehicle functions are displayed, e.g. for Parking Assist PARKTRONIC.

  Online Voice Services

  The suggestions are made available online based on your voice input and are offered on the zero layer.

The zero layer is your own personalized user interface with the digital map in the foreground and the applications that you use the most. You can switch between the zero layer and the home screen with a classic menu.

The suggestions offered depend on the equipment.

Deleting collected suggestions

Multimedia system:

Settings » System » Suggestions

- Select [↺].
- Select Yes.

  The suggestions are reset.

Software update

INFORMATION ON SOFTWARE UPDATES

Software updates keep your vehicle and the related systems up-to-date and prevent security flaws.

Software updates are available online for vehicle components such as control units, convenience systems, locking and safety systems, driver assistance systems, suspension and drive systems as well as for the MBUX multimedia system. Software updates are available via the communication module or a Wi-Fi connection to an external hotspot.

The navigation maps are also updated via updates from external storage media (e.g. USB flash drive).

Install available software updates regularly. Otherwise the security of your MBUX multimedia system and individual vehicle components cannot be ensured.

Software updates can be protected with a system PIN. Further information about the system PIN (⟶ page 437).

Further information about software updates can be found at https://me.secure.mercedes-benz.com.

CARRYING OUT SOFTWARE UPDATES

Requirements:

FOR SOFTWARE UPDATES VIA THE COMMUNICATION MODULE AND WI-FI:

- Your vehicle is linked to a Mercedes me ID (⟶ page 515).
- Software updates without Mercedes me ID: the Allow Software Updates option in the Software Update menu is activated.
- For software updates via the communication module: an Internet connection exists via the communication module (⟶ page 522).
- For software updates via Wi-Fi: a connection to an external Wi-Fi hotspot exists (⟶ page 523).

Depending on the software update, this is started via the communication module, Wi-Fi or an external storage medium.

Online software updates cannot be performed via external Wi-Fi hotspots that are encrypted via TKIP.

If the Wi-Fi hotspot requires logging in via the browser, once the connection is successfully established the browser will open in order to start the update. To start the download follow the instructions in the browser.

Multimedia system:

Settings » System » Software Update »

STARTING A MAP UPDATE FROM AN EXTERNAL STORAGE MEDIUM

- ► Connect the storage medium with the vehicle via a media interface.
  A message about an available map update appears on the media display.
- ► Select the message.
- ► Select Start.
  The map update is started.

STARTING THE SOFTWARE UPDATE VIA THE COMMUNICATION MODULE

If the Automatic Online Update option is active, available software updates are downloaded and installed automatically. Activate the option in order to always keep your vehicle up-to-date and avoid security flaws.

- ► Select Automatic Online Update.
  The software update is downloaded and installed automatically.

If the option is deactivated, you will be informed of new software updates once. The updates are available for downloading for a limited period of time.

- ► Select an update from the list of available updates.
- ► Start the update.
  The software update is downloaded and installed automatically.

STARTING A SOFTWARE UPDATE VIA WI-FI
Some software updates require an additional connection to a Wi-Fi hotspot. The connection to an external hotspot can be established when the software update is started.

- ► Select an update from the list of available updates.
- ► Start the update.
- ► Establish the connection to a Wi-Fi hotspot.
  The update is downloaded and installed automatically.

For software updates requiring a safe vehicle status: when the last installation step is reached, a message appears on the media display after the vehicle is switched off. Follow the step-by-step instructions on the media display to complete the installation.

There are software updates that can only be installed when the vehicle is safely parked, there are no more people in the vehicle and the vehicle is locked.

INSTALLING SOFTWARE UPDATES
Software updates are installed automatically after they are downloaded. As soon as the software update has been completed, a message appears in the media display. It may be necessary to restart the MBUX multimedia system.

Some software updates require a safe vehicle status for the installation to be completed. They can only be carried out in a safely parked vehicle with the vehicle switched off. If this is necessary, a message appears on the media display after the vehicle is switched off.

- ► Follow the instructions on the media display.


For some software updates, you can set a time for installation. The installation is carried out automatically at the scheduled time. You do not need to be in the vehicle during installation. Note that the planned installation is canceled as soon as the vehicle door is opened.

If an installation is available where you can set the time, a message appears on the media display after the vehicle is switched off.

- ► Follow the instructions on the media display.

The vehicle cannot be used while these software updates are being installed. Make sure that no persons or animals are in the path of your vehicle. Events stored in the vehicle's control units can be overwritten.

AVAILABILITY OF THE DRIVER AND MEDIA DISPLAY
During the installation of software updates, it is not possible to use the vehicle, driver display and media display. You may receive the following display message when an installation is running:

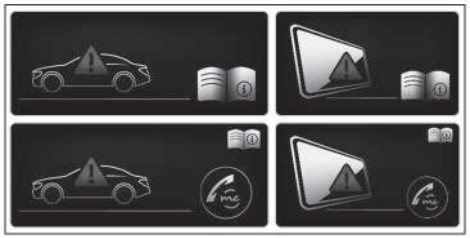

ⓘ The display message does not appear every time a software update is installed.

In rare cases, an error can occur during the installation. The multimedia system automatically attempts to restore the previous version.

If it is not possible to restore the previous version, the display message shown above appears every time the vehicle is started.

FAILURE OF THE DRIVER DISPLAY:
If the driver display fails or there is a malfunction, you may not recognize limitations in the functions of systems relevant to safety or the speed display, for example. This may impair the operating safety of the vehicle. Park the vehicle safely as soon as possible and notify a qualified specialist workshop .

Further information about software updates can be found at https://me.secure.mercedes-benz.com

FAILURE OF THE MEDIA DISPLAY:
If the media display fails or the display message shown above is shown continuously, several systems such as the rear view camera, Parking Assist PARKTRONIC or climate control are no longer available. Drive on carefully and consult a specialist workshop as soon as possible.

Resetting the multimedia system (reset function)

WARNING
Risk of accident due to failure of central display functions

While the multimedia system is reset, its functions, such as the rear view camera, are not available.

- ► Only reset the multimedia system when the vehicle is stationary.

Requirements:

- The vehicle is switched on.
- The vehicle is stationary.

Multimedia system:
Settings » System » Reset

WHEN RESETTING THE SYSTEM, PERSONAL DATA AND SETTINGS ARE DELETED, FOR EXAMPLE:

- Connected devices
- Individual user profiles
- Biometric data

ⓘ The data used and saved in the multimedia system by the driver assistance systems is deleted.

- ► Select Reset.
  A query appears asking if the system should really be reset.
- ► Select Yes.
  The multimedia system is reset to the factory settings. The multimedia system is restarted after the system reset.

ⓘ Due to data protection, as well as the function of individual driving systems and driving safety systems, it is a requirement to carry out a complete system reset before selling the vehicle or transferring it to a third party, or after use as a hire car.

Drive system settings

Functions of the energy flow display

The active components of the drive system are highlighted on the energy flow display. The energy flow between the individual components is shown in color.

THE ENERGY FLOW IS SHOWN IN DIFFERENT COLORS DEPENDING ON THE OPERATING STATUS:

- **White:** strong acceleration (boost effect)
- **Copper:** driving at constant speed or with moderate acceleration
- **Blue:** recuperation (charging the high-voltage battery) or overrun mode

Calling up the energy flow display

Multimedia system:

Info

▶ Select Energy Flow.

The energy flow in the vehicle will be displayed.

Fit & Healthy

Setting ENERGIZING seat kinetics

Requirements:

ⓘ These functions are available only for fully electric seats with a memory function.

Multimedia system:

Comfort » Seat

- Select Seat Kinetics.

ENERGIZING seat kinetics can support back health by changing the seat position during a journey. This involves repeatedly stressing and relieving the muscles and joints by means of minor movements of the cushion and backrest.

STARTING SEAT KINETICS

- Select ▶ for the desired seat.

  The program will run for the set duration.

CONFIGURING SEAT KINETICS

- Select ⚙ for the desired seat.
- Select Backrest, Backrest and Seat Surface or Seat Surface.
- Select the desired duration for the selected seat.

Navigation and traffic

Switching navigation on

Multimedia system:

Navigation

- Alternatively, switch on the MBUX voice assistant (→ page 401).
- Switch to navigation.
  The map appears.

Navigation overview

DIGITAL MAP



1 Navigation module (reduced view)
Route guidance active:
Reduced view of the navigation module shows information relevant to the route, e.g. the next charging stop, the destination and a traffic delay
Tapping opens the navigation module and displays the route overview (→ page 460)
Tapping on the checkered flag ends the current route guidance

2 Sets map orientation and map type

3 Calls up the telephone menu

4 Calls up entertainment applications

5 Navigation window shows the next maneuver (zoomed out view) or the route monitor (zoomed in view)
Route guidance active: route monitor shows, e.g. route sections, upcoming driving maneuver with lane recommendations, charging stops, destination, traffic delays, 3D images at freeway exits, online content

PRESSING 2 SEVERAL TIMES CHANGES THE MAP ORIENTATION IN THIS ORDER:

- 2D and to the north
- 2D and in the direction of travel
- 3D and in the direction of travel
- Map with complete route

If the map is moved, the map switches between 3D direction of travel and 2D north orientation.

THE FOLLOWING MAP TYPES (2) ARE AVAILABLE:

- Daytime display
- Night-time display
- Satellite map

ⓘ If you notice a problem with the digital map, you can report it at https://mapfeedback.here.com/#/report.

You can watch an animation on this topic via the following link:

Destination entry

NOTES ON DESTINATION ENTRY

⚠ **WARNING**
Risk of distraction from operating integrated communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

► Only operate this equipment when the traffic situation permits.

► If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

ENTERING A POI OR ADDRESS


Requirements:

- **For the online search:**
  - There is an Internet connection.
  - Digital Extras are available.
  - You have created a Mercedes me ID.
  - The vehicle is linked to the Mercedes me ID and you have accepted the terms of use.
  - Further information can be found at: https://www.mercedes.me
  - The Digital Extra is available.
  - The Digital Extra has been activated at an authorized Mercedes-Benz Center.

ⓘ If Online Search is not available, the search is performed using the data of the digital map.

Multimedia system:

→ Navigation

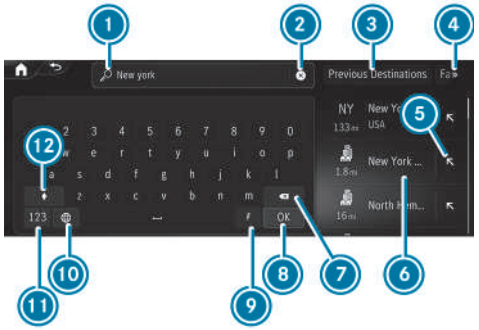

Example: entering a POI or address

(1) Input line with current entry
(2) Deletes an entry
(3) Selects previous destinations
(4) Displays and selects additional destination searches
(5) Adopts the search result in the input line and continues the search
(6) Search result
(7) Deletes the last character entered
(8) Hides the keypad
(9) Activates voice input
(10) Sets the written language
(11) Switches to digits and special characters
(12) Switches to upper-case or lower-case letters

If available, selecting the [ ] symbol starts the MBUX Voice Assistant.

► Enter a destination. The entries can be made in any order.
The search results are displayed in a list.

ⓘ Online search results for POIs may contain additional information, for example opening times and ratings. The information is provided by an online map service.
This online function is not available in all countries.

THE FOLLOWING ENTRIES CAN BE MADE, FOR EXAMPLE IN (1):

- City, street, house number or street, city
- Zip code
- POI name or POI category, e.g. Restaurants
- City, POI name
- Contact name
- Geo-coordinates (→ page 449)

► Hide the keyboard with [OK].

► Select the destination in the list.
The following menu shows the selected destination with the address information and a corresponding map section.
The menu enables the route to be calculated.

SELECTING A DESTINATION SUGGESTION

Requirements:

- The Allow Destination Suggestions option is switched on (→ page 437).

- The multimedia system has gathered sufficient data in order to show destination suggestions.

Multimedia system:

→ Navigation »

► Select Suggestions.

The route is calculated in the following menu.

ⓘ If Suggestions has been selected, a menu is available via •••. The menu offers settings for the suggestions and memory functions.

ⓘ Managing destination suggestions (⟶ page 470).

SELECTING PREVIOUS DESTINATIONS

Multimedia system:

→ Navigation »

► Select Previous Destinations.

► Select the destination.

The following menu enables the route to be calculated.

ⓘ You can save a destination as a favorite (⟶ page 470).

SELECTING A POI

Requirements:

- **For use of personal POIs:** a USB device is connected with the multimedia system.
- Personal POIs with the GPS Exchange format (.gpx) have been saved in the PersonalPOI folder on the USB device.

Multimedia system:

→ Navigation »

► Select POIs.

► Select one of the displayed quick-access categories, e.g. P .

► Select the POI.

The following menu enables the route to be calculated.

or

► Select All Categories or Personal POIs (see requirements).

► Select the category.

► Select the POI.

The following menu enables the route to be calculated.

SETTING A SEARCH FILTER AFTER SELECTING A POI CATEGORY

THE PRESET SEARCH POSITION DEPENDS ON THE STATUS OF THE ROUTE GUIDANCE:

- If route guidance is not active, In the Vicinity is searched.
- If route guidance is active, Along the Route is searched.

- ▶ When the search results are displayed, select Filter.
- ▶ Select the search position, e.g. In the Vicinity.
- ▶ If a route with intermediate destinations already exists and Near Destination has been selected in the search filters, the destination is selected for the search.

or

- ▶ Select the desired traveling time to the point of interest.
- ▶ Select Search Results.

CONFIGURING CATEGORIES FOR QUICK ACCESS

THE CATEGORIES ARE DISPLAYED:

- As symbols after calling up the destination entry via
- As a list after calling up All Categories

- ▶ In the POI menu, select All Categories.
- ▶ Select ☆ or ★ for a category.
  Tapping on ☆ adds the category.
  Tapping on ★ removes the category.
- ▶ Use ↩ to change back.
  The new categories are shown after the destination entry is called up the next time.

ⓘ If all available quick-access positions are full, select the category to be replaced.

CHANGING THE ORDER OF QUICK-ACCESS CATEGORIES

- ▶ In the POI menu, press and hold a category for quick access.
- ▶ Tap on the arrows next to the selected category.
  The arrows for the other categories are grayed out.
- ▶ Drag the category up or down.
- ▶ Select ✓.

DELETING QUICK-ACCESS CATEGORIES

- ▶ In the POI menu, press and hold a category for quick access.
- ▶ Select ★ for the chosen category.
- ▶ Select Delete.
- ▶ Select ✓.

CHANGING CATEGORIES FOR PERSONAL POIS

- ▶ Select Personal POIs.
- ▶ Press on a category as long as is necessary until a menu appears.
- ▶ Select Change name and enter a name.
- ▶ Select Change Icon and select a symbol.
- ▶ Select Delete and confirm the prompt with Yes.

SELECTING A CONTACT FOR DESTINATION ENTRY

Requirements:

- A mobile phone is connected to the multimedia system (⟶ page 493).
- The contacts from the mobile phone have been downloaded .
- The contact has a navigable address.

- The address data can be located on the digital map.

Multimedia system:

→ Navigation →

► Enter a contact in the entry line.

► Select the address.

The following menu enables the route to be calculated.

ⓘ Alternatively, after calling up the destination entry, you can enter the name of a contact in the search field.

ENTERING GEO-COORDINATES

Multimedia system:

→ Navigation →

► Enter the geo-coordinates as latitude and longitude.

EXAMPLES OF INPUT FORMATS:

- 47°58'11"N 7°57'25"E (degrees, minutes and seconds)
- 47.969722 7.956944 (decimal degrees)

► Confirm the entry.

The following menu enables the route to be calculated.

SELECTING A DESTINATION ON THE MAP

Multimedia system:

→ Navigation

► If necessary, move the map (→ page 476).

► Press and hold on the map.

Available destinations are displayed.

or

► Briefly press on a POI symbol.

The POI is selected. If there are several POIs at this map position, a list appears.

► Select the destination in the Selected Objects list.

The following menu enables the route to be calculated.

SELECTING A DESTINATION FROM FAVORITES

Requirements:

- Destinations are saved as favorites.

  Save a previous destination or a destination suggestion as a favorite (→ page 470).

Multimedia system:

→ Navigation →

► Select Favorites.

► Select a favorite.

The route is calculated in the following menu.

ADDRESSES FOR HOME AND WORK ARE ALREADY SET

► Select Home or Work.

The following menu enables the route to be calculated.

ADDRESSES FOR HOME AND WORK ARE NOT YET SET

- ► Select Home or Work.
  The prompt No "Home" Address Available Set Address Now? appears, for example.
- ► Select Yes.
- ► Search for or select the address.
- ► Select Save.

DELETING FAVORITES

- ► Select [•••] for a favorite.
- ► Select Delete.

or

- ► Select Delete All.
- ► Confirm the prompt.
  When all the favorites have been deleted, Add Favorite is available, for example.

SELECTING RECEIVED DESTINATIONS

Requirements:

- There is an Internet connection for receiving external destinations.
- A destination has been sent to the vehicle.
- Destinations have been shared from another seat in the vehicle.

Multimedia system:

Navigation

The vehicle can receive destinations from Digital Extras. You will be informed when a destination is received.

- ► Select Received Destinations.
- ► Select a destination.
  The route is calculated in the following menu.

ⓘ You can save a received destination in the favorites (→ page 470).

DELETING RECEIVED DESTINATIONS

- ► Delete a destination with [🗑].

or

- ► Select Delete All.

Route

CALCULATING A ROUTE WITH ELECTRIC INTELLIGENCE

Requirements:

- The destination has been entered.
- The destination address is shown.
- **For Navigation with Electric Intelligence:**
  - Mercedes-Benz Connect is available.
  - You have a Mercedes me ID and the vehicle is linked to the user account.

- The "Navigation with Electric Intelligence" Digital Extra is available and activated in the Mercedes-Benz Portal.
  The Digital Extras "Navigation with Electric Intelligence", "Display of charging stations" and "Mercedes-Benz Charge" are required for optimum function.
- The Plan Charging Stops route option is switched on (⟶ page 453).



Example: detailed display

1. Calls up alternative routes
2. Calculates the route and starts route guidance
3. Selects a point of interest in the vicinity of the destination
4. Destination address
   The detailed display can contain additional entries, such as a three-word address from what3words, online content

The route with Electric Intelligence is automatically and intelligently calculated to the destination. This is updated during route guidance. The route with Electric Intelligence contains the required charging stops as intermediate destinations. The charging stations are determined taking account of the driving distance and the estimated charging times.

► Select one of the options.

ⓘ When the Plan Charging Stops route option is switched off, a route without charging stations is calculated.

SAVING A DESTINATION AS A FAVORITE

► Select ★ Favorite.

► Select an option.

CALLING UP THE ROUTE OVERVIEW

ⓘ When Plan Charging Stops is switched off, this option is available instead of the favorites function.

► Select Routes.

► Select an alternative route.

STARTING ROUTE GUIDANCE

► Select Let's Go!.

CALLING UP THE DETAILED DISPLAY WITH DESTINATION ADDRESS

► Pull the bar above the Let's Go! symbol upwards.
  Depending on the destination selection and availability, online content, for example ratings, prices and weather information, is shown.
  If the destination is in a different time zone, a message is displayed.

► **To share a destination:** select Share.
  This option allows you to scan the displayed QR code.

► **To call up an Internet address:** if a web address is available, select Browser.

► **To call the destination:** if a telephone number is available, select Call.

SEARCHING FOR POIS IN THE VICINITY OF THE DESTINATION SHOWN

- Select In The Vicinity.
- Search using categories, enter a search entry or search for a personal POI (⟶ page 447).

ADDING AN INTERMEDIATE DESTINATION TO THE EXISTING ROUTE OR STARTING A NEW ROUTE GUIDANCE

- Select Add.

  The selected destination address is set as the next intermediate destination. Route guidance begins.
- **There are already four intermediate destinations:** confirm the prompt with Yes and select an intermediate destinations in the route overview (⟶ page 460), that should be overwritten with the new intermediate destination.

or

- Select Replace.

  The selected destination address is set as a new destination. Route guidance begins.

IF YOU CALL UP THE MENU DURING ROUTE GUIDANCE, MORE OPTIONS ARE AVAILABLE:

- To change the order of destinations, select Move (⟶ page 462).
- To delete the destination, select Delete (⟶ page 462).
- To end route guidance, select Cancel Route Guidance.

OVERVIEW: NAVIGATION WITH ELECTRIC INTELLIGENCE

If the Plan Charging Stops route option is enabled, the optimal route based on time is calculated with the required charging stops. The charging stops are determined taking into account the route and charging times and are set as intermediate destinations for route guidance.

Navigation with Electric Intelligence constantly checks a large number of influencing variables, e.g. specifications for the climate control in the vehicle interior or changes in the weather. For each section of the route, the current energy requirement is calculated from the high-voltage battery. The multimedia system determines the ideal charging stations along the route based on availability and charging power.

For each charging stop, the required amount of energy and the expected charging time is calculated and displayed. If the driver wishes, they will be informed by a notification on their mobile phone when the required state of charge is reached. The high-voltage battery continues to charge until the process is interrupted by the driver.

Observe the notes on charging the high-voltage battery (⟶ page 293).

You can influence the route calculated by the Navigation with Electric Intelligence.

The options "Ignore charging station" and "Add charging station" are available for this purpose (⟶ page 460).

NAVIGATION WITH ELECTRIC INTELLIGENCE ATTEMPTS TO SHORTEN THE TOTAL TRAVEL TIME, IF NECESSARY, BY USING THE FOLLOWING CHARGING STRATEGIES:

- Charge twice briefly with high charging power instead of charging once for a long time with low charging power
- Charge once briefly with low charging power to reach a charging station with higher charging power

NAVIGATION WITH ELECTRIC INTELLIGENCE USES THE FOLLOWING DATA:

- Online Route

  Route calculation establishes an Online Route.

  The Online Route is continuously updated during the journey, e.g. if traffic information is available.
- Specific vehicle information

  The current state of charge of the high-voltage battery and electrical consumption are taken into account, for example.
- Charging stations

  These are made available as intermediate destinations in the Online Route.

This function is not available in all countries.

You can watch an animation on this topic via the following link:

SWITCHING ON THE ELECTRIC INTELLIGENCE ROUTE OPTION

Multimedia system:

Navigation » Route

- Switch on the Plan Charging Stops route option.

  If the route has been calculated and the state of charge of the high-voltage battery is not sufficient to reach the destination, charging stations are set automatically as intermediate destinations.

This function is not available in all countries.

SELECTING SETTINGS FOR CHARGING STATIONS ON THE ROUTE

Requirements:

- The "Navigation with Electric Intelligence" Digital Extra is available and activated in the Mercedes-Benz Portal.

  The Digital Extras "Navigation with Electric Intelligence", "Display of charging stations" and "Mercedes-Benz Charge" are required for optimum function.

Multimedia system:

Navigation » Route

SETTING THE STATE OF CHARGE OF THE HIGH-VOLTAGE BATTERY WHEN THE CHARGING STATION AND DESTINATION ARE REACHED

- Select State of Charge at Destination or State of Charge at Charging Stations.
- Move the control knob to the left or right and set the preferred state of charge in percent (%).

To reach a charging station, the system uses the battery capacity, e.g. up to 10 % of the residual energy content (state of charge) or even less. The Min.

message appears on the central display. You can increase this state of charge for the arrival at the charging station and destination, e.g. to 25 % at the charging station and 50 % at the destination.

IN THE EVENT OF INCREASED ENERGY CONSUMPTION WHILE DRIVING, E.G. WITH HEADWIND, THE FOLLOWING OPTIONS ARE AVAILABLE FROM THE SYSTEM:

- The charging station is safely reached even at states of charge of less than 10 %.
- Navigation with Electric Intelligence selects a closer charging station for the route.

If a charging facility is available at the destination, the state of charge can be lowered below 10 %. The Min. message appears on the central display. Make sure that the range monitor is switched on.

When planning a route, you can enter another destination or the return journey. The Navigation with Electric Intelligence then takes into account the required state of charge at the destination. This ensures that an optimal charging station or the new destination is reached safely on the onward journey.

SELECTING A PROVIDER FOR CHARGING STATIONS

► Activate or deactivate MB.CHARGE Public.

If the option is activated, only charging stations payable with Mercedes me Charge are taken into account when selecting the charging station.

or

► Activate All.

All charging stations known to the navigation system are taken into account when calculating routes with Electric Intelligence, regardless of the type of payment.

It may be necessary to register with the provider.

If route guidance is active, the high-voltage battery is tempered before a charging stop depending on the state of charge and the battery temperature.

SWITCHING THE RANGE MONITOR ON OR OFF

Multimedia system:

Navigation » Route

The activated range monitoring assists with messages on the driver and central display to ensure safe arrival at the destination.

► Activate or deactivate Range Monitor.

To reach the destination with the state of charge set by the driver, the range is permanently monitored when the option is switched on.

If necessary, the range monitor in the speedometer shows a recommended maximum speed and informs you in the driver display, e.g. with the message Avoid additional charging stop: drive less than 100 km/h .

Tips for saving energy are then also shown on the central display while driving.

THE RECOMMENDED MAXIMUM SPEED IS ACCOUNTED FOR BY THE FOLLOWING DRIVING SYSTEMS:

- Active Distance Assist DISTRONIC (⟶ page 337)
- Cruise control (⟶ page 332)

This function is not available in all countries.

PAYING FOR CHARGING ON A ROUTE WITH MB.CHARGE PUBLIC

Requirements:

- The Mercedes me Charge service is available and booked in the Mercedes-Benz Portal.
- The Digital Extras "Navigation with Electric Intelligence", "Display of charging stations" and "Mercedes me Charge" are activated.
- **To select a charging station:** the Plan Charging Stops option is switched on in the multimedia system.
- **For authentication at the charging station:** after activation in the Mercedes-Benz Portal, you have concluded a charging contract with your payment details with the respective contractual partners.
- **For authentication using the app:** the Mercedes-Benz App is installed on the external device, e.g. tablet or smartphone.
- For charging stations without remote access, you have purchased an RFID card for the contracting partner.

This function is not available in all countries.

Multimedia system:

Navigation

OBSERVE THE FOLLOWING INFORMATION:

- Read the notes on charging the high-voltage battery at the charging station (⟶ page 293).
- Read the notes on charging the high-voltage battery at the charging station (⟶ page 299) and (⟶ page 299).
- **Before selection of a charging station:** the data for the charging stations is based on the online content available from the respective third-party provider.
- Observe the local information and conditions.

With the Plug & Charge charging function of MB.CHARGE Public, you can charge the vehicle at public Plug & Charge-enabled charging stations. The charging process starts immediately when the charging cable is plugged into the charging station. No further authentication is required. Communication between the vehicle and the charging station takes place directly via the charging cable.
This charging function is not available in all countries.

▶ **To select a charging station:** tap on a symbol on the map for a charging station or on a group of symbols for several charging stations.

▶ If a group of symbols is selected, select the charging station from the list.

THE FOLLOWING INFORMATION IS DISPLAYED (IF AVAILABLE):

- Name of the charging station operator
- Address of the charging station
- Plug with availability and information about charging power
- Opening times
- Name of the charging station
- Travel time and distance of the charging station from the vehicle
- Authentication method
- Contact information of the charging station operator
- General costs and charging costs
- Estimated charging costs and your available energy volumes, if available
- Display of available reviews and the ability to review with up to five stars
- Availability prognosis
- Information on green charging

  Mercedes-Benz provides high-quality certificates of origin to ensure that an equivalent amount of electricity from renewable sources is fed into the grid for charging processes carried out via MB.CHARGE Public.

► Calculate the route (⟶ page 450).

ⓘ If the function is available, the start/stop of the charging process can be selected.

► **To access a charging station remotely (start/stop):** select a charging station in the map menu of the app or the MBUX multimedia system.

► Show the details using the widget (program symbol).

► Select Start charging process.

The charging process starts. In addition, the payment agreement saved with the third-party provider is authorized.

ⓘ Remote access is not available for some charging stations. In this case use your RFID card to activate the charging process (if available).

► If required, enter the PIN for personalization.

► Confirm the action.

► If required, select the connector ID from the list shown.

The selected charging cable connector is unlocked.

► Start the charging process.

The start of the charging process is shown.

► Select the Stop charging process display button in the app.

The charging process is ended.

Payment is processed automatically.

IF DATA FOR THIRD-PARTY PROVIDERS IS AVAILABLE, YOU WILL RECEIVE THIS INFORMATION:

- Overview of the charging process
- Estimated cost

ⓘ There may be differences between the costs listed and the costs billed.

You can watch an animation on this topic via the following link:

OVERVIEW OF THE DIGITAL EXTRA RANGE DISPLAY

If there are only a few fast-charging stations or charging stations available within the vehicle's electric range, the service warns you with a notification. The notification recommends charging stations made available to the service by charging station providers/operators.

THE FUNCTION IS AVAILABLE UNDER THE FOLLOWING CONDITIONS:

- The fee-based Digital Extra "Range Display" is available and activated in the Mercedes-Benz Portal.
- The route type Online routes is switched off (⟶ page 458).

THERE ARE THREE NOTIFICATION TYPES:

- Comfort warning

  There are no longer enough fast charging stations nearby.
- Warning when electric range falls below 31 mi (50 km)

  As soon as the vehicle falls below the electric range of 31 mi (50 km), the next charging stations in the vicinity are suggested.
- Critical warning

  There are less than five charging stations including fast charging stations nearby.

ⓘ If you do not want to receive any notifications, deactivate the Allow Notifications option for the Digital Extra "Range Display" (⟶ page 428).

In addition, the electric range can be displayed on the map (⟶ page 481).

ⓘ If the electric range of the vehicle is less than 4 mi (6 km), there is no display on the map. If there are not enough charging stations available within this range, you will receive a notification.

ⓘ If the route type Online routes is switched on, you will not receive any notifications.

OVERVIEW OF CHARGING NEAR DESTINATION

THE FUNCTION IS AVAILABLE UNDER THE FOLLOWING CONDITIONS:

- The destination has been entered.
- The destination address is shown.
- **For Navigation with Electric Intelligence:**
  - Mercedes-Benz Connect is available.
  - You have a Mercedes me ID and the vehicle is linked to the user account.
  - The "Navigation with Electric Intelligence" Digital Extra is available and activated in the Mercedes-Benz Portal.

    The Digital Extras "Navigation with Electric Intelligence", "Display of charging stations" and "Mercedes me Charge" are required for optimum function.

The function suggests the best possible charging stop near the destination from which you can reach the destination on foot.

THE DIGITAL MAP SHOWS THE FOLLOWING INFORMATION, FOR EXAMPLE:

- The route to the destination
- The route to the charging stop

- The pedestrian route from the charging stop to the destination and the walking time in minutes

THE FOLLOWING FUNCTIONS CAN BE USED, FOR EXAMPLE:

- Select the charging station as the destination and calculate the route.
- Move the map and reset the map to the current vehicle position.
- Change the map scale.
- Select additional map symbols, e.g. for displaying traffic information or hazard warnings from Car-2-X.

SELECTING A ROUTE TYPE

Multimedia system:

Navigation » Route

USING TRAILER MODE AND ONLINE ROUTES

The route is calculated as a fast route with a short journey time.

Trailer mode is available if a trailer has been coupled with the vehicle. If available, you can select online routes.

ⓘ Trailer mode and online routes are not available in all countries and for all vehicles.

► Select Trailer Mode.

A prompt is shown in the multimedia system.

► Confirm the prompt.

The arrival time at the destination takes into account a reduced driving speed with trailer.

► **To use online routes:** switch on the option.

TAKING TRAFFIC INFORMATION FOR THE ROUTE INTO ACCOUNT

► Select Reroute Based on Traffic [>].

► Select one of the options.

EXPLANATION OF THE OPTIONS:

- Automatic

  Traffic reports via Live Traffic Information are taken into account (→ page 471).
- On Request

  A prompt appears when a new route is detected with a shorter journey time based on traffic reports. You can continue to use the current route or use the dynamic route instead (→ page 458).
- Off

  No traffic reports are taken into account for the route.

CALCULATING ALTERNATIVE ROUTES

Multimedia system:

Navigation » View

► Switch on Route Overview after Start.

Alternative routes are calculated for every route.

ACCEPTING A DETOUR RECOMMENDATION AFTER A PROMPT

Requirements:

- On Request is switched on (→ page 458) in the Reroute Based on Traffic menu.
- Route guidance is active.
- There are traffic reports for the current route.

If a new route with a shorter driving time is determined, the current and new routes will be shown.

If another application is active, a notification is hidden.

- Confirm the notification.
- **To accept the new route:** select Accept.
- **To maintain the current route:** select Keep to Current Route.

SELECTING ROUTE OPTIONS

Multimedia system:

Navigation » Route » Avoid Options

AVOIDING OR USING ROUTE SECTIONS, E.G. HIGHWAYS OR FERRIES

- Activate or deactivate the avoid option.

  Avoid: the option is activated. The route avoids highways, for example.

  Use: the option is deactivated. The route takes highways into consideration, for example.

ⓘ The selected route options cannot always be taken into account. Therefore, a route may include a ferry, for instance, even though the Avoid Ferries avoid option is enabled. A message then appears and you will hear a corresponding message.

AVOIDING OR USING TOLL ROADS

The use of toll roads requires a usage fee (toll).

- Select Toll Roads [>].
- Activate or deactivate Avoid All.

  If the option is activated, the route avoids toll roads.

  If the option is deactivated, the route takes toll roads into account.

or

- Select an option for Cash or Card Payment or Electronic Billing.

  Avoid: the route avoids toll roads with the selected method of payment.

  Use: the route takes into account roads that require a toll corresponding with the payment type selected.

USING CARPOOL LANES

When using carpool lanes, observe the applicable legal requirements as well as any conditions pertaining to when and where such lanes may be used. Carpool lanes are only available under certain conditions.

Carpool lanes are not available in all countries.

- Select Carpool Lanes [>].
- Select one of the options.

THE FOLLOWING OPTIONS ARE AVAILABLE:

- Avoid

  If this option is selected, then no carpool lanes will be used for the route.
- 2 People
- At Least 3 People
- On Request

  When this option is selected and a carpool lane is available, a prompt appears. You can continue to use the current route or select a route with the carpool lane.

AVOIDING AREAS

- Select Avoid Areas [>] (→ page 478).

SELECTING NOTIFICATIONS FOR THE ROUTE

Requirements:

- **For an audible indication when approaching a personal POI:** the USB device contains personal POIs.
- The USB device is connected with the multimedia system.
- The category in which the personal POI belongs is activated.

Multimedia system:

Navigation >> Messages & Acoustic Signals

SWITCHING NAVIGATION ANNOUNCEMENTS ON OR OFF

► Activate Reduced Messages.

If a driving instruction is available for a simple change in direction, you hear a brief announcement, e.g. "Turn right in 600 ft (200 m)". The number of driving instructions along the route is minimized.

► Activate Detailed Messages.

If a driving instruction is available and there is a complex driving situation, you hear supplementary information, e.g. "In 600 ft (200 m) turn right and continue to follow the major road". Additional driving instructions are issued for the route, for example on major roads with bends.

► Activate Announce Street Names.

The name of the street into which the vehicle should turn is announced.

ⓘ This option is not available in all countries and languages.

SWITCHING TRAFFIC ANNOUNCEMENTS ON OR OFF

► Activate or deactivate Announce Traffic Warnings.

If available, traffic warnings are announced, e.g. before the end of traffic jams that pose a risk.

AUDIBLE INDICATION WHEN APPROACHING A PERSONAL POI

► Select Personal POIs.

► Activate a category.

When approaching a personal POI in the selected category an audible indication will be issued.


DISPLAYING A ROUTE OVERVIEW

Requirements:

- A destination is entered.

Multimedia system:

Navigation

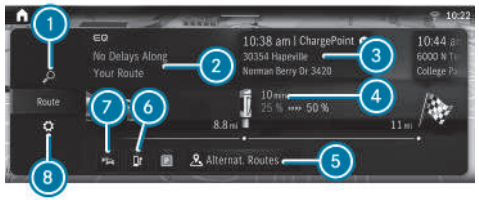

Example: route guidance is active

1. Enters an address or POI
2. Information about delays along the route
3. Arrival time and address for the charging stop
4. Charging stop shows the charging time recommended by the Navigation with Electric Intelligence as well as states of charge on arrival and onward journey for an optimal travel time
   as well as: current distance to charging stop
5. Alternative routes

⑥ Searches for an additional charging station
⑦ Switches traffic information display on or off
⑧ Makes settings for View, Messages & Acoustic Signals and Route

When route guidance is active, the destination and entered intermediate destinations are shown.

DEPENDING ON THE ROUTE, TRAFFIC SITUATION AND AVAILABLE DATA, FURTHER INFORMATION IS DISPLAYED:

- Name, destination address
- Symbols for intermediate destination and destination
- Phone number (if available)
- Web address (if available)
- Traffic information

The route can include up to four intermediate destinations.

You can influence the route calculated by the Navigation with Electric Intelligence using options ③ and ⑥.

► Select one of the options.

IGNORING A CHARGING STATION

If you do not want to drive to the selected charging station, it can be removed for the current route guidance. The Navigation with Electric Intelligence tries to plan the best possible alternative charging station for the route.

► Select ③ .

The expected charging output, the dynamic charge level display as well as the current state of charge and the predicted charging target are displayed, for example.

► Select Ignore.

► Select Ignore during this journey.

The charging station is removed from the route.

ⓘ After selecting Details, the detailed information about the charging station is displayed.

ADDING A CHARGING STATION

If you want to drive to a charging station on the route earlier than planned, for example, you can search for an additional charging station. If the charging station is suitable for the route, it will be accepted by the Navigation with Electric Intelligence.

► Select ⑥ .

► If necessary, filter the display of the charging stations according to the charging power.

► Select a charging station.

PLANNING ROUTES

Multimedia system:

→ Navigation

► Enter the intermediate destination (→ page 38).

After entering the destination and new calculation of the route, the route overview is shown again. The route contains a new intermediate destination.

ⓘ If there are already four intermediate destinations, delete an intermediate destination (→ page 462).

EDITING A ROUTE WITH INTERMEDIATE DESTINATIONS

Requirements:

- The destination and at least one intermediate destination have been entered.

Multimedia system:

→ Navigation

CHANGING THE ORDER OF THE DESTINATIONS

- ▶ In the route overview, press and hold on a destination.
- ▶ Move the destination with ◀ or ▶.
- ▶ Tap on ✓.
  The editing mode is ended.

DELETING A DESTINATION

- ▶ In the route overview, press and hold on a destination.
- ▶ Tap on 🗑.
  The editing mode is ended.

DISPLAYING THE ROUTE LIST

Multimedia system:

→ Navigation

- ▶ Tap on navigation window (5) on the digital map (→ page 444).



Example: route list

(1) Upcoming maneuver with turning arrow, distance to maneuver, street number, street name
  Switches on navigation announcements
  Switches off navigation announcements
  Including the following route sections on the route to the destination

(2) Current vehicle position

The route sections are displayed in the navigation window. The route list is updated during the journey.

ⓘ Freeway information shows the available service facilities. After selecting symbols, e.g. for car parks, service areas or freeway exits, the POI is adopted as an intermediate destination or destination.

- ▶ Press the arrow at the bottom of the navigation window briefly.
- ▶ Swipe up or down.
- ▶ Select a route section.
  The map section is displayed.
- ▶ **To return to vehicle position:** select Current Position.

SELECTING AN ALTERNATIVE ROUTE

Requirements:

- A route has already been created.
- The Route Overview after Start option is switched on (⟶ page 458).

Multimedia system:

Navigation Alternative Routes



Example: alternative routes

1 Original route is highlighted

2 Alternative routes with indication of the difference in driving time

ⓘ In 2 a faster route may also be shown that is considerably longer.

THE FOLLOWING ROUTE INFORMATION IS DISPLAYED:

- Driving time
- Time of arrival
- Distance to the destination
- Avoid options based on the set route options
- Driving time saved or lost compared with the original route

▶ When the alternative routes have been calculated, display the route in the navigation window by swiping to the right or left.

CHANGING ROUTE TYPE

▶ Select Filter.

▶ Switching the route type on or off.

AVOIDING OR USING ROUTE OPTIONS

▶ Select Filter.

▶ Switch the route options on or off (⟶ page 459).

▶ Confirm the settings with Done.

▶ **To start route guidance to the alternative route:** select Start.

▶ **To select an alternative route on the map:** touch any point on the alternative route.

The alternative route is highlighted.

ACTIVATING A COMMUTER ROUTE

Requirements:

- You have created a profile (⟶ page 422).
- The Allow Destination Suggestions option is switched on (⟶ page 437).
- The Commuter Route option is switched on .
- The multimedia system has gathered sufficient data in order to show destination suggestions.
- Routes have been learned for these destination suggestions.
- Route guidance is active.

This commuter route is not available in all countries.

Multimedia system:

Navigation Route

- Activate Commuter Route.

  The navigation system automatically detects that the vehicle is on a commuter route.

  For the daily commuter route, traffic incidents on the route are also reported when driving without active route guidance.
- **To select commuter route:** select Start.

  Route guidance begins without spoken driving instructions.

A commuter route is suggested even with delays on the route.

- **To delete a commuter route:** select ×.

STARTING THE AUTOMATIC SERVICE STATION SEARCH

Requirements:

- ATTENTION ASSIST is activated (→ page 331).
- You are driving on a freeway.
- There are service stations along the route section ahead.

DRIVING SITUATION

- Confirm the notification.

  The service station search starts. The available service stations along the route or in the vicinity of the vehicle's current position are displayed.
- Select a service station.
- Calculate the route with the service station as an intermediate destination or as a destination (→ page 450).
- **If there are already four intermediate destinations:** select Yes in the prompt.

  The selected service station is entered in the route overview at position 1. Intermediate destination 4 is deleted. Route guidance begins.

STARTING AND EDITING A STORED ROUTE

Requirements:

- A USB device with stored routes is connected with the multimedia system (→ page 532).
- The route is stored in the "Routes" folder with the GPS Exchange data format (.gpx).

Multimedia system:

Navigation

- Press the double arrow in the destination input line until Saved Routes is displayed.
- Select Saved Routes.

STARTING A SAVED ROUTE

- Select a route.
- Select Start Route Guid. from Start or Start: from Current Position.

  Route guidance begins.

RENAMING A ROUTE

- Press on a route until a menu is shown.

- ► Select Rename.
- ► Enter the name.
- ► Select OK.

RECORDING AND STORING A ROUTE

Requirements:

- A USB device is connected with the multimedia system (⟶ page 532).

Multimedia system:

→ Navigation »

- ► Press the double arrow in the destination input line until Saved Routes is displayed.
- ► Select Saved Routes.

STARTING RECORDING

- ► Select Start Recording.

  A white rectangle is displayed.

  The route is stored on the USB device.

STOPPING RECORDING

- ► Press the white rectangle.
- ► Select End Recording.

Route guidance

NOTES ON ROUTE GUIDANCE

WARNING
Risk of distraction from operating integrated communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- ► Only operate this equipment when the traffic situation permits.
- ► If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.
Route guidance begins once a route has been calculated. The road and traffic rules and regulations always have priority over multimedia system driving instructions. Driving instructions are, for example navigation announcements, changes in direction and lane recommendations.

Changes in direction and lane recommendations are shown in the navigation window.

THE FOLLOWING DISPLAYS AND FUNCTIONS ARE ALSO AVAILABLE IN THE NAVIGATION WINDOW, FOR EXAMPLE:

- Route list
- Destination information

- Traffic information, e.g. length of traffic jam, delay
- Freeway facilities
- Car park search

If you do not follow the driving instructions or if you leave the calculated route, a new route is calculated automatically.

If, for example, the route is diverted or the direction of a one-way road has been reversed, driving instructions may deviate from the actual traffic situation.

Alternatives may be offered during route guidance, e.g. before passing a freeway exit road. The additional driving time for the journey along the freeway exit is shown.

For this reason, you must always observe road and traffic rules and regulations during your journey as well as the prevailing traffic conditions.

The route can differ from the ideal route, for example in the event of roadworks or incomplete digital map data.

NOTES ON SATELLITE RECEPTION

The correct function of the navigation system depends amongst other things on reception of the satellite system used. In certain situations satellite reception can be impaired, malfunction or even not be possible, e.g. in tunnels or in parking garages.

CHANGING DIRECTION OVERVIEW

CHANGES OF DIRECTION ARE SHOWN IN THE FOLLOWING DISPLAYS:

- Detailed image of the intersection
  The display appears when you drive into an intersection.
- 3D image
  The display appears when driving on intersection-free, multi-lane roads, for example at freeway exits and freeway interchanges.



Example: detailed image of the crossing with upcoming changes of direction

1. Name of the street to turn into
2. Change of direction arrow (also on the map)
3. Current vehicle position
4. Current distance to the change of direction



Example: 3D image of the upcoming change of direction

1. Maneuver point
2. Change of direction arrow (also on the map)
   Larger map scales show change of direction points instead of change of direction arrows.
3. Current distance to the change of direction
4. Current vehicle position

THERE ARE THREE PHASES WHEN CHANGING DIRECTION:

- Preparation phase

  If there is enough time between the changes of direction, the multimedia system prepares you for the upcoming change of direction. A navigation announcement is issued, e.g. "Prepare to turn right".

  The navigation window shows: the direction information or the name of the road which is to be turned into as well as the distance to the change of direction.
- Announcement phase

  The multimedia system announces the upcoming change of direction, e.g. by announcing "Turn right in 900 ft (300 m)".

  When the Auto Zoom map orientation is switched off (⟶ page 480), a detailed representation of the intersection or a 3D image of the upcoming change in direction appears in the navigation window.
- Change-of-direction phase

  The multimedia system announces the imminent change of direction, e.g. by announcing "Now turn right".

  Example of 3D image: when the distance to maneuver point ① is shown with 0 ft (0 m) and the symbol for current vehicle position ④ has reached maneuver point ① the change in direction is carried out.

ⓘ Changes in direction are also displayed on the driver display and head-up display.

LANE RECOMMENDATIONS OVERVIEW



Example: lane recommendations

① Non-recommended lane (gray arrow)
② Possible lane (white arrow)
③ Recommended lane (white arrow, blue background)

This display appears for multi-lane roads.

If the digital map contains the relevant data, lane recommendations are displayed in the navigation window.

EXPLANATION OF THE DISPLAYED LANES:

- Recommended lane

  In this lane, you will be able to complete both the next change of direction and the one after that.
- Possible lane

  In this lane, you will only be able to complete the next change of direction.
- Non-recommended lane

  In this lane, you will not be able to complete the next change of direction without changing lane.

During the change of direction, new lanes may be added. Bus lanes are also shown.

Lane recommendations are also displayed on the driver display and head-up display.

USING FREEWAY INFORMATION

When driving on the freeway, upcoming freeway facilities and available service facilities are shown in the route list. These include car parks, service stations or freeway exits with service POIs, for example.

The entries are sorted according to increasing distance from the current vehicle position.

- Select an entry.
- If several service facilities are available, select a service facility from the list.

  The destination address and the map position are shown.
- Calculate the route (⟶ page 450).

or

- Search for a POI in the vicinity.

or

- Use other functions, e.g. store the destination address of the service facility.

DESTINATION REACHED

Once the destination is reached, you will see the checkered flag. Route guidance will now be complete. The navigation menu is shown.

When an intermediate destination has been reached, you will see the intermediate destination flag with the number of your intermediate destination. Route guidance is continued.

SWITCHING NAVIGATION ANNOUNCEMENTS ON OR OFF

SWITCHING OFF

- During a navigation announcement, press the button on the steering wheel or controller on the center console.

  The Spoken voice guidance has been deactivated. message appears.

or

- In the route list for a driving maneuver select (⟶ page 462).

  The symbol changes to .

SWITCHING ON

- Press the button on the steering wheel or on the controller on the center console again.

or

- In the navigation window, select for an upcoming driving maneuver.

  The current navigation announcement is played.

  The symbol changes to .

SWITCHING NAVIGATION ANNOUNCEMENTS ON OR OFF DURING A PHONE CALL

- Press the button on the steering wheel on the right.

or

- Tap on in the media display.
- Select Settings.
- Select System.
- Select Audio.

- Select Navi. And Traffic Announcements.
- Activate or deactivate Driving Recommendations During Call.
- **To leave the menu:** select [↩].

ADJUSTING THE VOLUME OF NAVIGATION ANNOUNCEMENTS

Multimedia system:

[⌂] ▸▸ Settings ▸▸ System ▸▸ Audio ▸▸ Navi. And Traffic Announcements

- Select Voice Guidance Volume.
- Set the volume.
- **To leave the menu:** select [↩].

ROUTE GUIDANCE IS ACTIVE

SWITCHING AUDIO FADEOUT ON OR OFF DURING NAVIGATION ANNOUNCEMENTS

- Press the [⌂] button on the steering wheel on the right.

or

- Tap [⌂] on the central display.
- Select Settings.
- Select System.
- Select Audio.
- Select Navi. And Traffic Announcements.
- Activate or deactivate Audio Fadeout During Navigation Announcements.
- **To leave the menu:** select [↩].

REPEATING NAVIGATION ANNOUNCEMENTS

Requirements:

- A route has already been created.
- Route guidance is active.

Multimedia system:

[⌂] ▸▸ Navigation

- In the navigation window, select [🔊] for an upcoming driving maneuver.
- Select [🔇].
  The current navigation announcement is repeated.

CANCELING ROUTE GUIDANCE

Requirements:

- A route has already been created.
- Route guidance is active.

- Show the navigation menu.
- Select [🏁] in the navigation menu (⟶ page 444).

OVERVIEW OF OFF-ROAD STATUS DURING ROUTE GUIDANCE

Due to roadworks, for example, there may be differences between the data on the digital map and the actual course of the road. In such cases, the multimedia system will temporarily be unable to locate the vehicle's current position on the digital map. The vehicle is off-road. Road Not Mapped will be shown. Route guidance may be restricted.

When the vehicle is back on a road known to the multimedia system, route guidance continues as normal.

Destination

SAVING THE CURRENT VEHICLE POSITION

Multimedia system:

→ [⌂] ⏩ Navigation

- ▶ When the map is shown, tap on the [▲] current vehicle position.
- ▶ Select Save Position.
- ▶ **To save as a favorite:** select Save as Favorite .
- ▶ **To save as "Home" address:** select Home .
- ▶ **To save as "Work" address:** select Work .

MANAGING PREVIOUS DESTINATIONS

Multimedia system:

→ [⌂] ⏩ Navigation ⏩ [🔍]

- ▶ Select Previous Destinations.
- ▶ Select [•••] for the last destination.

SAVING THE LAST DESTINATION AS A FAVORITE

- ▶ Press and hold on one of the previous destinations.
  A menu appears.
- ▶ **To save as a favorite:** select Save as Favorite .
- ▶ **To save as "Home" address:** select Home .
- ▶ **To save as "Work" address:** select Work .

DELETING A PREVIOUS DESTINATION

- ▶ Select Previous Destinations.
- ▶ Select [•••] for the last destination.
- ▶ Select Delete.

or

- ▶ Select Delete All.
- ▶ Confirm the prompt.
  When all the favorites have been deleted, Add Favorite is available, for example.

EDITING DESTINATION SUGGESTIONS

Requirements:

- The Allow Destination Suggestions option is switched on (⟶ page 437).
- For the display of destination suggestions: the multimedia system has gathered sufficient data.

Multimedia system:

→ [⌂] ⏩ Navigation ⏩ [🔍]

- ▶ Select Suggestions.
- ▶ Press and hold on a destination suggestion.
  A menu appears.
- ▶ **To cancel a destination suggestion:** select Do Not Suggest Now or No Longer Suggest.
- ▶ **To save a destination suggestion:** select Save as Favorite, Home or Work.

ⓘ Delete a destination suggestion from the favorites (⟶ page 449).

Route guidance with current traffic reports

TRAFFIC INFORMATION OVERVIEW

Current traffic reports are received with the Live Traffic Information subscription service.

ⓘ Live Traffic Information is not available in all countries.

The Digital Extra updates the traffic situation at short, regular intervals via the Internet connection.

Information on the vehicle's position is regularly sent to Mercedes-Benz AG. The data is immediately rendered anonymous by Mercedes-Benz AG and forwarded to the traffic data provider. Using this data, traffic reports relevant to the vehicle's position are sent to the vehicle. The vehicle acts as a sensor for the flow of traffic and helps to improve the quality of the traffic reports.

ⓘ There may be differences between the traffic reports received and the actual road and traffic conditions.

IF YOU DO NOT WANT TO TRANSMIT THE VEHICLE POSITION, YOU HAVE THE FOLLOWING OPTIONS:

- You can deactivate the Digital Extra in your Mercedes me ID.
- You can have the Digital Extra deactivated at an authorized Mercedes-Benz Center.

ⓘ Further hazard warnings are received via the Car-to-X Digital Extra (⟶ page 473).

SHOWING INFORMATION FROM THE SERVICE PROVIDER FOR LIVE TRAFFIC INFORMATION

Requirements:

- The vehicle is equipped with Live Traffic Information.

Multimedia system:

⟶ 🏠 ⏩ Apps ⏩ Mercedes me ⏩ My Digital Extras

▶ Select Live Traffic.

ⓘ **YOU HAVE THE FOLLOWING OPTIONS FOR EXTENDING THE SUBSCRIPTION:**

- At any authorized Mercedes-Benz Center
- With a call to the Mercedes-Benz Customer Assistance Center via the me button (⟶ page 510)
- If the vehicle identification number (VIN) is linked to your Mercedes-Benz user account, you can renew the subscription yourself. To do this, call up the user profile on the Mercedes-Benz website after logging in with your Mercedes me ID.

DISPLAYING TRAFFIC INFORMATION ON THE MAP

Requirements:

- Traffic Incidents and Free Flowing Traffic are switched on (⟶ page 473).

Multimedia system:

⟶ 🏠

▶ If necessary, move the map (⟶ page 476).

THE MAP SHOWS THE FOLLOWING TRAFFIC INFORMATION DEPENDING ON THE ACTIVATED SETTINGS:

- Traffic incidents

  These are roadworks, road blocks and warning messages, for example.

  When route guidance is active, the symbols for traffic incidents will be shown in color on the route. Off the route they are gray.
- Warning messages

  Warning messages are shown as the symbol.

  Traffic safety information can be shown, e.g. if there are people on the road.

  If the vehicle approaches a danger area, for example the end of a traffic jam in a dangerous position, the symbol is shown on the map. If Announce Traffic Warnings is switched on and a message has been issued, an additional announcement is made.
- Traffic flow information:
  - Traffic jam (red line)
  - Slow-moving traffic (orange line)
  - Heavy traffic (yellow line)
  - Free-flowing traffic (green line)
- Display for traffic delays on the current route

  The smallest value for the display for traffic delays is a minute.

SHOWING TRAFFIC INCIDENTS ON THE ROUTE

Requirements:

- The Traffic Incidents display is switched on (⟶ page 473).

Multimedia system:

Navigation

If there are traffic incidents on the route, these are shown on the map and in the route overview.

> With the MBUX Voice Assistant you can inform yourself about traffic incidents on your route. Ask, for example How is the traffic on my route? or How is the traffic at home?. A voice output is issued.



Example: traffic incidents on the route

1. Total delay or message that there are no delays along the route
2. Switches traffic information display on or off
3. Calls up settings for View, Messages & Acoustic Signals and Route

IF THERE ARE ANY DELAYS ALONG THE ROUTE, THESE ARE SHOWN IN THE ROUTE OVERVIEW TOGETHER WITH THE FOLLOWING INFORMATION:

- Traffic jam section: red bars
- Slow-moving traffic: orange bar
- Heavy traffic: yellow bar
- For each section:
  - The delay
  - The length

- The street name or the street number

DURING ACTIVE ROUTE GUIDANCE, THE TOTAL DELAY ON THE ROUTE IS ALSO DISPLAYED HERE:

- in the navigation system in the navigation module
- in other applications in the status line at the top

Traffic incident symbols are shown in the route overview and in the map. A traffic incident symbol is, for example  for roadworks.
In the map several traffic incidents may be shown on top of each other. The traffic incident symbol shows a plus sign.
If available, the street number can be replaced by a street name or both the name and number.

- To see all of the traffic incidents on the route, swipe to the right or left.
  The route section is highlighted on the map.
- **To show detailed information in the route overview:** tap on a display in the route overview.
  The detailed information is shown, for example the road section and the direction.

CALLING UP DETAILED INFORMATION ON THE MAP

- Tap on traffic flow information on the map, e.g. a red line for a traffic jam section.
  The detail information is displayed.
- If several lines are shown on top of the other, then select an item of traffic flow information from the list.

SHOWING TRAFFIC INCIDENTS ON THE MAP

- Tap on a traffic incident symbol.
  The detail information is displayed.
- **Several traffic incidents are in the immediate vicinity:** tap on the top traffic incident symbol and select from the list of traffic incidents.

SWITCHING THE TRAFFIC INFORMATION DISPLAY ON

Multimedia system:



- Select View.
- Traffic .
- Activate Traffic Incidents and Free Flowing Traffic.
  Traffic incidents, for example roadworks, local area reports (e.g. fog) and warning messages, are shown on the route.

Car-to-X-Communication

CAR-TO-X-COMMUNICATION OVERVIEW

THE FOLLOWING REQUIREMENTS APPLY FOR THE DIGITAL EXTRA CAR-TO-X-COMMUNICATION:

- The vehicle is equipped with an MBUX multimedia system with navigation function.
- There is a subscription for the Live Traffic Information service.
- Car-to-X-Communication is activated in your Mercedes-Benz user account.

Car-to-X-Communication is available in selected countries.

The communication module automatically establishes an Internet connection once the vehicle is switched on. If there are any hazard warnings, they will be provided shortly thereafter. Depending on the mobile phone connection, provision takes place from within a second up to about a minute.

BENEFITS OF CAR-TO-X-COMMUNICATION:

- Dangers are automatically detected by the vehicle or can be reported by the driver. These are then sent to vehicles with Car-to-X-Communication in the immediate vicinity.
- If available, current details relating to hazard spots near the vehicle's current position are received.

  This gives you sufficient time to adapt your driving style to the traffic conditions.

The use of Car-to-X-Communication requires the regular transmission of vehicle data to Mercedes-Benz AG. The data is then immediately pseudonymized by Mercedes-Benz AG. The vehicle data is deleted after an appropriate amount of time has elapsed (several weeks) and is not stored permanently.

Data which serves as identification is replaced during the pseudonymization process. In this way, your identity is protected against access by unauthorized third parties.

DISPLAYING HAZARD WARNINGS

Multimedia system:

Navigation

If hazard warnings are available these can be shown as symbols on the map. The display depends on the settings for the Traffic Incidents option.

- Set the option via ⚙ (⟶ page 473).

  If the option is activated, all of the symbols are shown.

  If the option is deactivated, the symbols are only shown when there is a hazard warning.

THE FOLLOWING HAZARDS MAY BE SHOWN ON THE MAP:

- Accidents and breakdowns
- Slippery roads, fog, crosswinds and heavy rain
- Hazards reported manually
- Vehicle with active hazard warning light
- Roadworks
- Additional hazards (if available)

If Announce Traffic Warnings is switched off (⟶ page 460), voice output can indicate a danger area.

SENDING HAZARD WARNINGS

REPORTING HAZARDS MANUALLY

Automatically detected hazard warnings are sent by the vehicle.

- When the map is shown, tap on the current vehicle position.
  The Position menu is shown.
- Select Report Traffic Incident.
  A prompt is shown.
- Select Yes.
  The Thank you for supporting accident prevention! message appears.

Route guidance with augmented reality

OVERVIEW OF ROUTE GUIDANCE WITH AUGMENTED REALITY


WARNING
Risk of accident and injury as a result of distraction, incorrect depiction or wrong interpretation of the display

The camera image of the augmented reality display is not suitable as a guide for driving.

- Always keep an eye on the actual traffic situation.
- Avoid extended observation of the camera image.

During route guidance with augmented reality a camera image with the real traffic scene is shown in the media display before a turning maneuver. The camera image includes additional information, for example arrows indicating a change of direction.

If the options are switched on and this additional information is available, road names and house numbers are displayed (⟶ page 476).

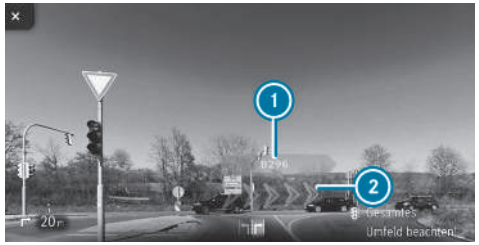

1 Street name
2 Change of direction arrow

Route guidance with augmented reality will not be available in some situations, e.g. in the event of poor satellite reception or roads that have not been digitized.

Route guidance with augmented reality is not available in all countries.

You can watch an animation on this topic via the following link:

ACTIVATING ROUTE GUIDANCE WITH AUGMENTED REALITY

WARNING
Risk of accident and injury due to imprecise positioning of additional information

The additional information from the augmented reality display may be inaccurate and is not a substitute for observing and assessing the actual driving situation.

- Always keep an eye on the actual traffic situation when carrying out all driving maneuvers.

Multimedia system:

→ Navigation

- ▶ Select View.
- ▶ Select Augmented Reality Video.
- ▶ Activate or deactivate Augmented Reality Video.

SHOWING PROPERTY INFORMATION FOR ROUTE GUIDANCE WITH AUGMENTED REALITY

Requirements:

- Augmented reality is activated (⟶ page 475).

Multimedia system:

→ Navigation

- ▶ Select View.
- ▶ Select Augmented Reality Video.
- ▶ Activate Street Names and House Numbers.

  During route guidance, the activated options are shown as additional information in the camera image.

Map

SETTING THE MAP SCALE

Multimedia system:

→ Navigation

ZOOMING IN

- ▶ When the map is shown, tap twice quickly with one finger on the media display.

or

- ▶ Move two fingers apart on the media display.

ZOOMING OUT

- ▶ Tap with two fingers on the media display.

or

- ▶ Move two fingers together on the media display.

ⓘ You can set the unit of measurement of the map scale (⟶ page 437).

MOVING THE MAP

Multimedia system:

→ Navigation

- ▶ When the map is displayed, swipe in any direction with one finger on the media display.

THE FOLLOWING FUNCTIONS ARE AVAILABLE:

- Selecting a destination on the map (⟶ page 449).

- Selecting a POI (⟶ page 447).
- Showing traffic incidents on the map (⟶ page 472).

► **To reset the map to the current vehicle position:** select Center .

SWITCHING THE ROUTE OVERVIEW AFTER START ON OR OFF

Multimedia system:

Navigation

► Select View.

► Activate or deactivate Route Overview after Start.

If the option is enabled, the map shows the full route after route guidance is started and, if available, all alternative routes.

SELECTING POI SYMBOLS FOR THE MAP DISPLAY

Multimedia system:

Navigation

POIs include restaurants and hotels, for example. These are displayed as symbols on the map. Not all POIs are available in all countries.

Personal POIs are destinations which you have saved on a USB device, for example.

ⓘ The display of POI symbols on the map can be activated or deactivated as a favorite.

► Select View.

► Select POI Symbols On Map .

► Activate Hide All POIs.

If the option is switched off, POI symbols are displayed on the map which correspond to the settings in the POI categories.

ⓘ If the conditions are fulfilled, the POI symbols are shown with current online information (⟶ page 481).

SWITCHING DISPLAY OF CATEGORIES FOR QUICK-ACCESS ON OR OFF

► Switch a category on or off in the menu.

SELECTING CATEGORIES

► In the menu, select Other Categories .

► Activate or deactivate Show All.

When the option is switched on, the POI symbols for all categories are shown on the map.

or

► Select the categories.

► Activate or deactivate the categories.

The POI symbols for the selected categories are shown on the map.

SELECTING PERSONAL POI CATEGORIES

► In the menu, select Personal POIs .

► Select a category.

► Activate or deactivate Show on Map.

► **To issue a signal when approaching:** activate Visual Notification and Acoustic Notification.

RESETTING THE POI SYMBOL DISPLAY

- In the menu, select Reset POIs.

  The settings are reset to the standard settings.

SELECTING THE DISPLAY OF ADDITIONAL INFORMATION ON THE MAP

Multimedia system:

Navigation

- Select View.
- Select Show More Information.
- Switch the options on or off.

THE FOLLOWING OPTIONS ARE AVAILABLE:

- Current Street

  If the option is enabled, it will be displayed in the navigation window.
- Scale

  If the option is switched off, the map scale is only displayed on the map when zooming.

  If the option is enabled, the map scale is permanently displayed on the map.

  The option also influences the display on the driver display.
- Elevation
- Next Intersection

  If the option is switched on and the journey continues without route guidance, the name of the next intersecting street will be displayed in the navigation window.

DISPLAYING THE MAP VERSION

Multimedia system:

Navigation

- Select View.
- Select Map Data Version.

  The detail information is displayed.

ⓘ You can update the map data with the Online Map Update Digital Extra (⟶ page 37).

ⓘ Information about new versions of the digital map can be obtained from an authorized Mercedes-Benz Center.

OVERVIEW OF AREA AVOIDANCE ON THE ROUTE

You can define areas along a route that you would like to avoid.

Highways or multi-lane highways that pass through an area to be avoided may be included in the route despite being blocked.

AVOIDING A NEW AREA FOR THE ROUTE

Multimedia system:

Navigation Route Avoid Areas

- Select Avoid New Area.

STARTING USING THE MAP

- Select Using Map.

  A red rectangle appears. This designates the area that should be avoided.

- Move the map (⟶ page 476).
- Set the map scale (⟶ page 476).
- Select OK.
  The area is entered into the list.

STARTING USING DESTINATION SEARCH

- Select Via Address Entry.
- Enter the address (⟶ page 38).
- Select the destination in the list.
  The map appears. The area is saved.

CHANGING AN AREA TO BE AVOIDED

Multimedia system:

Navigation ⏩ ⚙ ⏩ Route ⏩ Avoid Areas

- Select an area in the list.
- Select Edit.
- **To move an area on the map:** swipe in any direction on the media display.

CHANGING THE SIZE OF THE AREA

- Move two fingers apart or together on the media display.
- Select OK.
  The area is entered into the list.

TAKING THE AREA FOR THE ROUTE INTO ACCOUNT

- Select the area in the list.
- Activate Avoid Area.
  If route guidance is active, a new route is calculated.
  If there is no route yet, the setting is carried over to the next route guidance.

THE ROUTE CAN INCLUDE AN AREA THAT IS TO BE AVOIDED IN THE FOLLOWING CASES:

- The destination is located in an area that is to be avoided.
- The route includes highways or multi-lane highways which pass through an area to be avoided.
- There is no practical alternative route.

DELETING AN AREA TO BE AVOIDED

Multimedia system:

Navigation ⏩ ⚙ ⏩ Route ⏩ Avoid Areas

DELETING AN AREA TO BE AVOIDED

- Select an area in the list.
- Select Delete.
- Confirm the prompt with Yes.

DELETING ALL AREAS TO BE AVOIDED

- If at least two areas to be avoided are set, select Delete All.
- Confirm the prompt with Yes.

MAP DATA UPDATE OVERVIEW

As the content of a digital road map has a short life, outdated data may have a negative effect on all navigation functions. For the best MBUX navigation experience, you should install all of the map updates offered by Mercedes-Benz.

THE FOLLOWING OPTIONS ARE AVAILABLE FOR THE UPDATE OF MAP DATA:

- Online map update

- Updates via the Mercedes-Benz Portal
- Update at an authorized Mercedes-Benz Center
  Additional costs can be incurred in this process.

ONLINE MAP UPDATE

REQUIREMENTS:

- Digital Extras are available.
- You have a Mercedes me ID.
- The Digital Extra Online Map Update is available for your region.
- Online Map Update has been activated.

Installation takes place in the background as an automatic map update.

The MBUX multimedia system installs all of the available map updates for the North American regions in which the vehicle is located or is moved.

The online map update is activated at the latest after the next time the vehicle is switched on.

UPDATES VIA THE MERCEDES-BENZ PORTAL

The map data for several regions can also be updated manually. Log in with your Mercedes-Benz user account at: https://www.mercedes-benz.de/

Click on your account at the top right and follow the menu path My dashboard > Manage vehicle > Manage Digital Extras > Online Map Update. Select the regions to be downloaded to a storage medium.

After the map data has been copied, connect the storage medium with your vehicle. Select the notification with information about a new version of the map data and start the installation. After the MBUX multimedia system has been restarted, the updated map data is used.

OVERVIEW OF MAP DATA

If map data is reinstalled in a vehicle, no activation code needs to be entered.

For map data purchased as data media, the enclosed activation code must be entered after starting the installation.

Activation codes are only ever valid for one vehicle.

IN THE EVENT OF THE FOLLOWING PROBLEMS, PLEASE CONTACT AN AUTHORIZED MERCEDES-BENZ CENTER:

- The multimedia system does not accept the activation code.
- You have lost the activation code.

DISPLAYING THE COMPASS

Multimedia system:

Navigation

- ▶ When the map is shown, tap on the current vehicle position until the Position menu is shown.
- ▶ Select Compass.

  THE COMPASS DISPLAY SHOWS THE FOLLOWING INFORMATION:

  - The current direction of travel with bearing (360° format) and compass direction
  - Longitude and latitude coordinates in degrees, minutes and seconds
  - Number of satellites from which a signal can be received

SETTING THE MAP SCALE AUTOMATICALLY

Multimedia system:

Navigation

- ▶ Select View.

- Activate Auto Zoom.

  When the option is switched on, the map scale is set automatically depending on your driving speed and the type of road.

The automatically selected map scale can be changed manually. After a few seconds, this is automatically reset.
When the option is activated, no detailed display of the intersection or a 3D image is shown in the navigation window during an upcoming driving maneuver.

DISPLAYING THE SATELLITE MAP

Multimedia system:

Navigation

- Select View.
- Activate or deactivate Satellite Map.

  WHEN SATELLITE MAP IS SELECTED, THEY ARE DISPLAYED AT THE FOLLOWING MAP SCALES:

  - On-board maps

    The satellite maps are displayed in map scales from 2 mi (2 km).
  - Online maps

    The satellite maps are displayed in high-resolution map scales from 50 ft (10 m).

  When Satellite Map is not selected, no satellite maps are displayed.

The satellite maps for these map scales are not available in all countries.

SHOWING ELECTRIC RANGE ON THE MAP

Requirements:

- There is an Internet connection.
- Mercedes-Benz Connect is available.
- You have a Mercedes me ID.
- The vehicle is linked to your Mercedes me ID and you have accepted the Mercedes-Benz Connect terms of use.

  Further information can be found at: https://www.mercedes.me
- The fee-based Digital Extra Range Display is available.
- The Digital Extra has been activated at an authorized Mercedes-Benz Center.

Multimedia system:

Navigation

- Select View.
- Range .

  The electric range is shown on the map with a white line around the current vehicle position.

The electric range display on the map is not available in all countries.

DISPLAYING ONLINE MAP CONTENTS

Requirements:

- There is an Internet connection.
- Digital Extras are available.
- You have a Mercedes me ID.

- The vehicle is linked to the Mercedes me ID and you have accepted the Mercedes-Benz terms of use.

  Further information can be found at: https://www.mercedes.me
- The Digital Extra is available.
- The Digital Extra has been activated at an authorized Mercedes-Benz Center.

Multimedia system:

→ Navigation »

► Select View.

► Switch on a Digital Extra, e.g. Weather.

Current weather information is displayed on the navigation map, e.g. temperature or cloud cover.

The information provided by the Digital Extras is not displayed in all map scales, e.g. weather symbols.

ⓘ The display of online map content is not available in all countries.

Toll collection with Toll System

OVERVIEW OF THE PAYMENT SYSTEM FOR TOLL CHARGES

⚠ **WARNING**
Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

► Only operate this equipment when the traffic situation permits.

► If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the MBUX multimedia system and the control unit.

ⓘ The toll system is optional equipment and is not available in all countries and vehicles.

Debiting of toll charges at freeway toll gates is facilitated with an electronic payment system.

The toll system uses RFID (Radio Frequency Identification) for data transfer between the control unit and the toll station.

The toll system is initially switched off at the factory.

The control unit is in the vehicle glove box.

IN ORDER TO BE ABLE TO USE THE TOLL SYSTEM, IT MUST HAVE BEEN REGISTERED BY THE CUSTOMER AND ACTIVATED BY THE SERVICE PROVIDER:

- Activate the toll system in the settings of the MBUX multimedia system.
- Registration and activation are carried out on the website of the Payviam service provider https://www.payviam.com/MB.

Payviam is a payment platform via which the vehicle pays the required toll charges.

Activation of the toll system can take up to 48 hours after registration.

When the toll system is activated, the automatic detection of the number of vehicle occupants is initially switched off at the factory. The number of vehicle occupants is preset with one person.

THE FOLLOWING APPLIES FOR ROADS ON WHICH TOLL CHARGES ARE DEPENDENT ON THE NUMBER OF VEHICLE OCCUPANTS:

- If the automatic detection of the number of vehicle occupants is switched off, the number of vehicle occupants must be selected manually. This ensures correct toll accounting.
- The number of vehicle occupants can be transmitted automatically. In the process, the number of seat belts worn is determined.

  If the number of detected persons does not correspond with the number of persons actually in the vehicle, the number of persons must be manually selected.

The standard setting of one person does not need to be changed for roads which require toll payment regardless of the number of vehicle occupants.

The toll payment system enables the payment of toll charges in many states in the USA.

YOU CAN VIEW OR CALL UP THE STATES PARTICIPATING IN PAYVIAM VIA THE FOLLOWING CONTACT OPTIONS:

- Internet: https://www.payviam.com/MB
- Telephone: (888) 725-1012
- Email: support@payviam.com

You can also reach Account Management via phone or email and obtain information about your invoices.

In Mexico, for example, the toll system can be registered and activated for journeys to the USA.

NOTICES

- You can only use the toll system once registration and activation are complete.
- Drive at the prescribed vehicle speed in the toll lane.
- Mercedes-Benz recommends operation using the MBUX multimedia system.

- For safety reasons, entries should be made while the vehicle stationary.
- You can obtain further information from an authorized Mercedes-Benz Center. Alternatively, you can call 1-800-FOR-MERCedes (in the USA) or 1-800-387-0100 (in Canada).

REGISTERING WITH AND ACTIVATING THE PAYMENT SYSTEM FOR TOLL CHARGES

REGISTERING AND ACTIVATING VIA PAYVIAM

► Go to the website https://www.payviam.com/MB and select SIGN UP.

or

► Scan the QR code shown.

► To check and confirm the geographic area of validity on the map, select NEXT.

► Enter the contact information and select NEXT.

► Enter the UID Serial Number of the control unit.

ⓘ The UID serial number is a 9-digit alpha-numeric string.
You will find it under the following menu path in the MBUX multimedia system: ⌂ > Settings > Vehicle > Driving > Toll System.



① UID serial number

► Select CHECK MY UID.

► Enter the vehicle information and select NEXT.

► Enter the license plate information and select NEXT.

► Enter the payment information and select PAY NOW.

Your payment confirmation appears. A Payviam account is created in the next step. You can use this account to manage any data entered and toll payments.

ⓘ Activation of the toll system can take up to 48 hours after registration.

YOU CAN FIND OUT THE CURRENT ACTIVATION STATUS OF THE TOLL SYSTEM FROM THE PAYVIAM SERVICE PROVIDER VIA THE FOLLOWING CONTACT OPTIONS:

- Internet: https://www.payviam.com/MB
- Telephone: (888) 725-1012


- Email: support@payviam.com

OPERATION ON THE MBUX MULTIMEDIA SYSTEM

- ► Select [⌂].
- ► Select Settings.
- ► Select Driving.
- ► Select Toll System.
- ► Switch the toll system on or off.
  If you switch the toll system on or off, the number of vehicle occupants is preset to one person.
- ► Activate Detect Automatically.
  The number of seat belts worn is transmitted and displayed, e.g. 2.
- ► If this does not correspond to the number of vehicle occupants, use the number keys to select 1, 2 or 3+.

OPERATION WITH THE CONTROL UNIT

- ► Open the glove box (⟶ page 46).

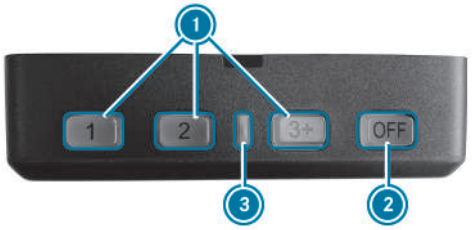

① Buttons for entering the number of vehicle occupants
The control unit is switched off: switches on the control unit
② Switches off the control unit
③ LED lights up green: control unit is ready for operation
LED flashes red: there is an error

- ► To enter the number of people in the vehicle, press one of buttons ①.

CONTROL UNIT IS MALFUNCTIONING

If the control unit is malfunctioning, an acoustic signal will sound. Toll payment with the control unit cannot be made.

- ► Consult an authorized Mercedes-Benz Center.

Parking service

NOTES ON THE PARKING SERVICE

NOTE
Vehicle damage due to failure to observe the maximum permissible clearance height

If the vehicle height exceeds the maximum permissible clearance height, the roof and other vehicle parts may be damaged.

- ► Please observe the maximum clearance height indicated.
- ► If the vehicle exceeds the permissible clearance height, do not drive in.
- ► Take the modified vehicle height into account in the case of roof superstructures or other carrier systems.

ⓘ This service is not available in all countries.

DISPLAYING PARKING OPTIONS ON THE MAP

Requirements:

- The Navigation Services service is activated in your Mercedes-Benz user account.
- The parking service is part of the scope of the Navigation Services.

Multimedia system:

Navigation

- ▶ Switch on Parking.

  The parking options within the vicinity of the current vehicle position are shown.

SELECTING PARKING OPTIONS

NOTE
Vehicle damage due to failure to observe local information and parking conditions

The data is based on the information provided by the respective service providers.

Mercedes-Benz does not guarantee the accuracy of the information provided in relation to the car park or parking area.

- ▶ Always observe the local information and conditions.

Requirements:

- The Navigation Services service is activated in your Mercedes-Benz user account.
- The parking service is part of the scope of the Navigation Services.
- Parking is activated (⟶ page 486).

Multimedia system:

Navigation

- ▶ Tap on [P] on the map.

or

- ▶ In the route overview, select [P] Parking Spaces (⟶ page 460).
- ▶ Select the search position and search filter, e.g. Near destination and Parking garages.

  The map shows car parks suited to the selected settings.

- ▶ Select a parking option.

  THE FOLLOWING INFORMATION IS DISPLAYED (IF AVAILABLE):

  - Destination address, distance from current vehicle position and arrival time
  - Information on the car park, e.g.
    - Opening times
    - Parking charges
    - Current occupancy
    - Maximum parking time
    - **Maximum access height**

      The maximum access height shown by the parking service does not replace the need for observation of the actual circumstances.
  - Available payment options (Mercedes pay, coins, bank notes, cards)
  - Details on parking tariffs
  - Number of available parking spaces

- Payment method (e.g. at parking meters)
- Services/facilities at the parking option
- Telephone number

► Calculate the route (⟶ page 450).

THE FOLLOWING FUNCTIONS CAN BE USED (IF AVAILABLE):

- Searching for POIs in the vicinity.
- Saving the destination.
- Placing a call at the destination.
- Sharing the destination via the QR code.
- Calling up the web address.
- Showing the destination on the map.

Dashcam

NOTES ON THE DASHCAM

NOTE
Risk of legal consequences due to violation of legal regulations and data protection provisions

You are legally responsible for operation and use of the dashcam functions.

The legal requirements relating to operation and use of the dashcam can vary depending on the country in which the dashcam is operated.

This function is not permitted in all countries.

► Before using the dashcam, read up on the content of the legal regulations, in particular the data protection requirements in the respective country of use.

► Observe the legal regulations, in particular the data protection requirements.

OBSERVE THE FOLLOWING INSTRUCTIONS FOR SAFE OPERATION:

- Only use FAT32 or exFAT formatted USB storage devices.
- Use USB-IF certified USB storage devices.
  USB-IF is a non-profit corporation and stands for USB Implementers Forum. Based on the USB specification, USB-IF certifies, for example, USB versions, corresponding cables and plugs as well as energy supply processes via the USB interface.

- USB storage devices may be damaged if often or permanently overwritten at high speed. Mercedes-Benz recommends a high-quality external SSD drive.

  The abbreviation SSD stands for Solid State Drive.

ⓘ The file size and therefore the duration of single recording is limited by the limitations of the USB flash drive format. So FAT32 formatted USB flash drives do not allow files larger than 4 GB, for example.
When the file size is reached, the recording stops and you receive a notification.

ⓘ **THE FOLLOWING FUNCTIONS ARE AVAILABLE IN THE GALLERY APP:**

- Switching write protection on or off
- Deleting video files

Additional information about the Gallery app (⟶ page 516).

SELECTING A USB DEVICE FOR A VIDEO RECORDING WITH THE DASHCAM

Requirements:

- At least one USB device is connected with the multimedia system (⟶ page 532).

Multimedia system:

⟶ Apps » Dashcam

- ▶ Select the USB symbol.
- ▶ Select the USB device.

ⓘ When USB devices contain multiple partitions, recorded video files are not always displayed in the recording list.
Mercedes-Benz recommends that you use USB devices with one partition.

STARTING OR STOPPING A LOOP RECORDING WITH THE DASHCAM

Requirements:

- For recording and saving a video file: a USB device is connected with the multimedia system (⟶ page 532).
- The vehicle is switched on.

Multimedia system:

⟶ Apps » Dashcam

- ▶ If several USB devices are connected with the multimedia system, select a USB device (⟶ page 488).

  If no USB device is selected, a selection is made automatically when recording starts.

- ▶ **To select recording mode:** select Loop Recording.

  Loop Recording continuously records short video files. When the memory is full, recording is continued automatically. In doing so, the oldest video file is written over.

- **To start:** select Start Recording.

  The length of the recording is shown. The Do not remove the storage medium during recording. Before removing the storage medium, eject it first. message appears. The video file is stored on the USB device.

- **To end:** select End Recording.

ⓘ In some countries, geo-coordinates (longitude and latitude) are shown in the video image.
For technical reasons, the geo-coordinates may show greater inaccuracies.

A MESSAGE MAY APPEAR IN THE FOLLOWING CASES:

- The camera is not functional, the Camera Unavailable message appears.

  Have the camera checked in an authorized Mercedes-Benz Center.
- If the country border indication has been switched on (⟶ page 490).
- If an outdoor recording is started with the camera app during a dashcam recording, the dashcam recording pauses and resumes automatically after the camera recording is finished. A notification to this effect is displayed.

STARTING OR STOPPING INDIVIDUAL RECORDINGS WITH THE DASHCAM

Requirements:

- For recording and saving a video file: a USB device is connected with the multimedia system (⟶ page 532).
- The vehicle is switched on.

Multimedia system:

Apps » Dashcam

- If several USB devices are connected with the multimedia system, select a USB device (⟶ page 488).

  If no USB device is selected, a selection is made automatically when recording starts.

- **To select recording mode:** select Individual Recording.

  Individual Recording stops recording when the memory limit is reached. An individual recording is automatically protected against being over-written.

- **To start:** select Start Recording.

  The length of the recording is shown. The Do not remove the storage medium during recording. Before removing the storage medium, eject it first. message appears. The video file is stored on the USB device.

- **To end:** select End Recording.

ⓘ In some countries, geo-coordinates (longitude and latitude) are shown in the video image.
For technical reasons, the geo-coordinates may show greater inaccuracies.

A MESSAGE MAY APPEAR IN THE FOLLOWING CASES:

- Individual Recording: the memory is full or there are only a few minutes recording time available. The video recording stops or will be stopped imminently.

  Change the USB device or delete a video file.
- The camera is not functional, the Camera Unavailable message appears.

  Have the camera checked in an authorized Mercedes-Benz Center.

- If the country border indication has been switched on (⟶ page 490).
- If an outdoor recording is started with the camera app during a dashcam recording, the dashcam recording pauses and resumes automatically after the camera recording is finished. A notification to this effect is displayed.

CONFIGURING DASHCAM SETTINGS

Requirements:

- A USB device is connected with the multimedia system (⟶ page 532).

Multimedia system:

Apps » Dashcam

► Select ⚙.

RECEIVING NOTIFICATIONS AFTER PASSING A BORDER CROSSING

► Switch on National Borders Alert .

A message is shown if video is being recorded and the vehicle passes a border.

ⓘ This function is not available in all countries.

STARTING AUTOMATIC VIDEO RECORDING

► Select Automatic Loop Recording.

► Switch on Automatic Loop Recording.

When the vehicle is started, video recording starts automatically.

ⓘ This function is not available in all countries.

Telephone

Telephony

NOTES ON TELEPHONY

WARNING
Risk of distraction from operating integrated communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

WARNING
Risk of accident from operating mobile communication equipment while the vehicle is in motion

Mobile communication devices distract the driver from the traffic situation. This can also cause the driver to lose control of the vehicle.

- As a driver, only operate mobile communication devices when the vehicle is stationary.
- As a vehicle occupant, use mobile communication devices only in the designated area, e.g. in the rear passenger compartment.

When operating the multimedia system and mobile communication devices in the vehicle, observe the legal regulations of the country in which you are currently traveling.

WARNING
Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they may slide or be thrown around and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone receptacles will not always be able to retain all objects that they contain in the event of an accident.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- ► Always stow objects such that they cannot be thrown around in such situations.
- ► Always make sure that objects do not protrude from stowage spaces, parcel nets or stowage nets.
- ► Close the lockable stowage spaces before starting a journey.
- ► Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk/cargo compartment.

OBSERVE THE ADDITIONAL INFORMATION ON STOWING MOBILE COMMUNICATIONS DEVICES CORRECTLY:

- Loading the vehicle (⟶ page 217)

Further information can be obtained from an authorized Mercedes-Benz Center or at: https://www.mercedes-benz-mobile.com/

TELEPHONE MENU OVERVIEW



1. Bluetooth® device name of the currently connected mobile phone/of the mobile phone
2. Bluetooth® device name of the other currently connected mobile phone/of the mobile phone
3. Signal strength of the mobile phone network
4. Battery status of the connected mobile phone
5. Options
6. Messages
7. Calls up devices
8. Numerical pad
9. Starts contact search

BLUETOOTH® PROFILE OVERVIEW

Bluetooth® profile of the mobile phone	Function
PBAP (**P**hone **B**ook **A**ccess **P**rofile)	Contacts are automatically displayed in the multimedia system
MAP (**M**essage **A**ccess **P**rofile)	Message functions can be used
HFP (**H**ands **F**ree **P**rofile)	Wireless telephony is available

TELEPHONY OPERATING MODES OVERVIEW

DEPENDING ON YOUR EQUIPMENT, THE FOLLOWING TELEPHONY OPERATING MODES ARE AVAILABLE:

- A mobile phone is connected to the multimedia system via Bluetooth® (⟶ page 493).
- Two mobile phones are connected with the multimedia system via Bluetooth® (two phone mode) (⟶ page 494).
  - You can use all the functions of the multimedia system with both mobile phones.

ⓘ Irrespective of this, Bluetooth® audio functionality can by used with any mobile phone (⟶ page 533).

INFORMATION ON TELEPHONY

THE FOLLOWING SITUATIONS CAN LEAD TO THE CALL BEING DISCONNECTED WHILE THE VEHICLE IS IN MOTION:

- There is insufficient network coverage in the area
- You move from one transmission/reception station to another and no communication channels are free
- The SIM card used is not compatible with the network available
- A mobile phone with "Twincard" is logged into the network with the second SIM card at the same time

The multimedia system supports calls in HD Voice® for improved speech quality. A requirement for this is that the mobile phone and the mobile phone network provider of the person you are calling support HD Voice® .

Depending on the quality of the connection, the voice quality may fluctuate.

CONNECTING A MOBILE PHONE

Requirements:

- Bluetooth® is activated on the mobile phone (see the manufacturer's operating instructions).
- Bluetooth® is activated on the multimedia system (⟶ page 434).

Multimedia system:



SEARCHING FOR A MOBILE PHONE

► Select Connect New Device.

AUTHORIZING A MOBILE PHONE

► Select a mobile phone.

A code is displayed in the multimedia system and on the mobile phone.

► **If the codes match:** confirm the code on the mobile phone.

ⓘ For older mobile phone models, enter a 1 to 16-digit number code on the mobile phone and on the multimedia system for authorization.

ⓘ Up to 15 mobile phones can be authorized on the multimedia system.
Authorized mobile phones are reconnected automatically.

ⓘ The connected mobile phone can also be used as a Bluetooth® audio device (⟶ page 533).

You can watch an animation on this topic via the following link:

CONNECTING A SECOND MOBILE PHONE (TWO PHONE MODE)

Requirements:

- At least one mobile phone is already connected to the multimedia system via Bluetooth®.

Multimedia system:

Phone » Devices » Devices

- ▶ Select Connect New Device.
- ▶ Select the mobile phone.
- ▶ In some cases, if the query appears, confirm the selection of the mobile phone pair with the Device name 1 + Device name 2 option.

  The selected mobile phone is connected to the multimedia system.

INTERCHANGING MOBILE PHONES (TWO PHONE MODE)

Multimedia system:

Phone

Both mobile phones are shown individually in separate tabs.

- ▶ Select the tab with the desired mobile phone.

  Selecting the tab of a specific mobile phone displays the associated telephone contents.

  Selecting the other tab switches the view to the other telephone.

  The submenus in the telephone menu (e.g. contacts, call lists, messages) relate to the currently selected mobile phone with the exception of the telephone settings. In the telephone settings, settings can be made for both mobile phones.

CHANGING THE FUNCTION OF A MOBILE PHONE

Multimedia system:

Phone » Devices » Devices

ACTIVATING A FUNCTION

- ▶ Select a gray symbol in the line of a mobile phone.

  The corresponding function is activated.

DEACTIVATING A FUNCTION

- ▶ **One function is active:** select the color symbol in the line of a mobile phone.

  The mobile phone is disconnected from the multimedia system.

- ▶ **Several functions are active:** de-select an active function in the line of one of the mobile phones.

  The corresponding function is deactivated.

REPLACING MOBILE PHONES

Multimedia system:

Phone » Devices » Devices

NO AUTHORIZED MOBILE PHONE AVAILABLE:

- ▶ Select Connect New Device.
- ▶ Select a mobile phone.
- ▶ **Newly authorized mobile phone:** confirm the numerical code on the mobile phone.

USING IN SINGLE TELEPHONE MODE

- ▶ Select Device name.

  A newly authorized mobile phone is connected in single telephone mode.

  If the mobile phone has already been authorized and connected in single telephone mode, it is connected again in single telephone mode.

If a mobile phone is already authorized and has been connected in two phone mode with another mobile phone, a query may come, whether the mobile phone should in future be operated in single telephone mode or connected with another mobile phone in two phone mode.

► If required, confirm the query about operating mode (single telephone or two phone mode) by confirming the Device name option.

USING IN TWO PHONE MODE

► Select Device name 1 + Device name 2.

A newly authorized mobile phone is connected with the selected mobile phone in two phone mode.

If the mobile phone has already been authorized and connected in single telephone mode, it will be connected in future with the selected mobile phone in two phone mode.

If the mobile phone was previously connected with another mobile phone, this connection is canceled.

DISCONNECTING OR DELETING A MOBILE PHONE

Multimedia system:

Phone » Devices

DISCONNECTING A MOBILE PHONE

► Select Disconnect.

If applicable, the mobile phone will be automatically reconnected when the vehicle is next started.

DELETING A MOBILE PHONE

► Select Devices.

► Select [•••] in the line of the mobile phone.

► Select Delete Device.

The mobile phone is deleted from the system.

SETTING THE RECEPTION AND TRANSMISSION VOLUME

Requirements:

- A mobile phone is connected (⟶ page 493).

Multimedia system:

Phone » Devices » Devices

This function ensures optimal language quality.

ⓘ Please note that the respective mobile phone must be selected for adjustment of the reception and transmission volume.

► Select [•••] in the line of the mobile phone.

► Select Volume.

► Set the reception and transmission volume using Reception Volume and Transmission Volume.

Further information on the recommended reception and transmission volume: https://www.mercedes-benz-mobile.com/

SETTING THE RINGTONE

Multimedia system:

Phone » Ringtones

► Set the ringtone.

ⓘ If the mobile phone supports the transfer of the ringtone, you will hear the ringtone of the mobile phone instead of that of the vehicle audio system.

STARTING OR STOPPING MOBILE PHONE VOICE RECOGNITION

Requirements

- At least one mobile phone is connected to the multimedia system (⟶ page 493).
- The tab with the mobile phone for which voice recognition should be started is selected (⟶ page 494).

STARTING MOBILE PHONE VOICE RECOGNITION

► Press and hold the button on the multifunction steering wheel for more than one second.

Voice recognition is started for the currently selected mobile phone.

STOPPING MOBILE PHONE VOICE RECOGNITION

► Press the or button on the multifunction steering wheel.

ⓘ If a mobile phone is connected via Smartphone Integration, the voice recognition of this mobile phone is always started or stopped.

NOTE ABOUT CONTACT SUGGESTIONS

The multimedia system can show contact suggestions based on frequently used contacts, outgoing calls and text messages. For this, the Allow Contact Suggestions option must be switched on (⟶ page 437).

When you open the call list or the message menu, contacts which you can call or write to will be suggested to you. Suggestions will be shown in the Suggestionstab.

ⓘ The multimedia system does not use the content of messages for suggestions.

SELECTING OPTIONS FOR CONTACT SUGGESTIONS

Requirements:

- The Allow Contact Suggestions option is switched on (⟶ page 437).
- The multimedia system has gathered sufficient data in order to show contact suggestions.

Multimedia system:

Phone

► Select Recent Calls or Contacts.

► Select Suggestions.

► Select in the line of the suggested contact.

THE FOLLOWING OPTION IS AVAILABLE FOR SELECTION:

- Do Not Suggest Now

Calls

TELEPHONE OPERATION

Multimedia system:

Phone

MAKING A CALL BY ENTERING NUMBERS

► Select .

► Enter a number.

► Select .

The call is made.

ACCEPTING A CALL

► Select Accept .

REJECTING A CALL

► Select Reject .

ANSWERING A CALL WITH A MESSAGE

► Select Message.

ENDING A CALL

► Select .

PUTTING A CALL ON IN-CAR OFFICE'S TO-DO LIST

► Select Put call on In-Car Office's to-do list.

ACTIVATING FUNCTIONS DURING A CALL

THE FOLLOWING FUNCTIONS ARE AVAILABLE DURING A CALL:

- End Call
- Mic Off
- Number Pad (show to send DTMF tones)
- Add Call
- Hands-free

  Transfer the call, e.g. to Front, Rear or All Seats.
- Private Mode

  Transfer the call to the telephone or headphones, for example.

► Select a function.

ⓘ Observe that the functions and symbols can vary depending on the vehicle equipment.

CONDUCTING CALLS WITH SEVERAL PARTICIPANTS

Requirements:

- There is an active call (⟶ page 496).
- Another call is being made.

SWITCHING BETWEEN CALLS

► Select the contact.

The selected call is active. The other call is on hold.

ACTIVATING A CALL ON HOLD

► Select the contact of the call on hold.

CONDUCTING A CONFERENCE CALL

► Select Conference.

The new participant is included in the conference call.

ENDING AN ACTIVE CALL

► Select End Call.

ⓘ On some mobile phones, the call on hold is activated as soon as the active call is ended.

ACCEPTING OR REJECTING A WAITING CALL

Requirements:

- There is an active call (⟶ page 496).

If you receive a call while already in a call, a message is displayed.

Depending on the mobile phone and mobile phone network provider you will hear a call waiting signal.

Alternatively, in two phone mode you will hear an acoustic signal when the call goes through to the other (not yet active) mobile phone.

- Select Accept.
  The incoming call is active.
  If only one mobile phone is connected with the multimedia system, the previous call will be put on hold.
  If during a call you accept a call with the other mobile phone when in two phone mode then the existing call is ended.

or

- Select Message.
  The incoming call is not accepted.
  You answer with a message.

or

- Select Reject.

ⓘ The function and the behavior depend on your mobile phone network provider as well as on the mobile phone (see the manufacturer's operating instructions).

USING THE INTERNATIONAL DIALING CODE
Multimedia system:
Phone

- Press and "0" until a "+" appears in the selection field.
- Enter the numbers of the country code, regional code and the telephone number.
- Select .
  The call is made.

Contacts

INFORMATION ABOUT THE CONTACTS MENU
The contacts menu contains all contacts from existing data sources, e.g. mobile phone or data storage medium.

DEPENDING ON THE DATA SOURCE, IT IS POSSIBLE TO SAVE/LOAD THE FOLLOWING NUMBER OF CONTACTS:

- Permanently saved contacts: 3,000 entries
- Contacts loaded from the mobile phone: 5,000 entries per mobile phone

FROM THE CONTACTS MENU, YOU CAN PERFORM THE FOLLOWING ACTIONS:

- Make a call, for example call a contact (→ page 500)
- Navigation (→ page 448)
- Compose messages (→ page 502)
- Additional options (→ page 500)

Mobile phone contacts are automatically displayed when a mobile phone is connected to the multimedia system (→ page 493).

DOWNLOADING MOBILE PHONE FAVORITE CONTACTS
If the mobile phone supports the function, the favorites of the mobile phone are automatically loaded and appear in the overview of the phone menu.

CALLING UP CONTACTS

Multimedia system:

→ Home » Phone » Contacts

THE FOLLOWING OPTIONS CAN BE USED TO SEARCH FOR CONTACTS:

- Searching by initials
- Searching by name
- Searching by phone number

► Enter characters into the search field.

► Select the contact.

A CONTACT CAN CONTAIN THE FOLLOWING DETAILS:

- Phone numbers
- Navigation addresses
- Internet address
- Email addresses
- Relationship (if set)

MANAGING THE FORMAT OF A CONTACT'S NAME

Multimedia system:

→ Home » Phone » Settings

► Select Contacts.

► Select Name Format.

► Select an option.

OVERVIEW OF IMPORTING CONTACTS

IMPORTING CONTACTS INTO THE CONTACTS MENU

Source	Requirements
USB device	The USB device is connected with the USB port.
Mobile phone	A mobile phone is connected to the multimedia system via Bluetooth®. Contacts are available.

ⓘ Note that the imported contacts remain in the vehicle and can be accessed at any time regardless of the connected mobile phones.

IMPORTING CONTACTS INTO THE CONTACTS MENU

Multimedia system:

→ Home » Phone » Settings » Contacts » Import Contacts

► Select a mobile phone <device name>, from which the contacts should be imported.

► Select an option.

SAVING A MOBILE PHONE CONTACT

Multimedia system:

→ Home » Phone » Contacts

► Select [>] in the line of the mobile phone contact.

► Select [•••].

► Select Save.

- Select Yes.
  The contact saved in the multimedia system is identified by the MBUX symbol.

CALLING A CONTACT
Multimedia system:
Phone Contacts
- Select Search for Contacts.
- Enter characters into the search field.
- Select the contact.
- Select the telephone number.
  The number is dialed.

SELECTING FURTHER OPTIONS IN THE CONTACTS MENU
Multimedia system:
Phone Contacts
- Select in the line of the contact.
- Select •••.
- Select an option.

DELETING CONTACTS

Requirements:

- The contacts are saved in the vehicle.
- To delete an individual contact, this has been imported manually into the vehicle.

Multimedia system:
Phone

DELETING ALL CONTACTS
- Select .
- Select Contacts.
- Select Delete All MBUX Contacts.
- Select an option.

DELETING A CONTACT
- Select Contacts.
- Select in the line of the contact.
- Select •••.
- Select Delete Contact.
- Select Yes.

Call list

OVERVIEW OF THE CALL LIST
Depending on whether your mobile phone supports the PBAP Bluetooth® profile or not, this can have different effects on the presentation and functions of the call list.

IF THE PBAP BLUETOOTH® PROFILE IS SUPPORTED, THE EFFECTS ARE AS FOLLOWS:

- The call lists from the mobile phone are displayed in the multimedia system.

- When connecting the mobile phone, you may have to confirm the connection for the PBAP Bluetooth® profile.

IF THE PBAP BLUETOOTH® PROFILE IS NOT SUPPORTED, THE EFFECTS ARE AS FOLLOWS:

- The multimedia system generates a call list independently as soon as calls are made in the vehicle.
- The call list is not synchronized with the call lists in the mobile phone.

MAKING A CALL FROM THE CALL LIST

Multimedia system:

→ Home ▸▸ Phone

▶ Select Recent Calls.

▶ Select an entry.

The call is made.

SELECTING ADDITIONAL OPTIONS IN THE CALL LIST

Multimedia system:

→ Home ▸▸ Phone

▶ Select Recent Calls.

▶ For contacts that are in the address book: select options.

The contact details are called up.

▶ For contacts where only one number is shown (not in the address book): select .

DELETING THE CALL LIST

Multimedia system:

→ Home ▸▸ Phone ▸▸ <Device name> ▸▸ Settings ▸▸ Devices

▶ Select Delete Recent Calls.

▶ Select Yes.

ⓘ This function is only available if your mobile does not support the PBAP Bluetooth® profile.

Text messages

OVERVIEW OF MESSAGE FUNCTIONS

In the message menu you can receive text messages and create and send them with the help of the MBUX voice assistant.

If the connected mobile phone supports the Bluetooth® MAP profile, the message functions can be used on the multimedia system.

You can obtain further information about settings and supported functions of Bluetooth®-capable mobile phones at a Mercedes-Benz service center or at: https://www.mercedes-benz-mobile.com/

Some mobile phones require further settings after being connected to the multimedia system to activate the messaging functionality (see manufacturer's operating instructions).

SETTING MESSAGE DISPLAYS

Multimedia system:

→ Home ▸▸ Phone ▸▸ <Device name> ▸▸ Settings ▸▸ Devices

▶ Select Message Display.

► Select On or Off.

READING MESSAGES

Multimedia system:

→ ⌂ ▸▸ Phone ▸▸ <Device name> ▸▸ 💬

USING THE READ-ALOUD FUNCTION

A message list is shown.

► To read aloud, select the 🔊 symbol at a conversation.

The message is read aloud.

CREATING AND SENDING A NEW MESSAGE

Requirements:

- There is an Internet connection.
- At least one mobile phone with reception is connected.
- If applicable, the message function must be activated on the mobile phone.

Multimedia system:

→ ⌂ ▸▸ Phone ▸▸ <Device name> ▸▸ 💬

► Using the MBUX voice assistant, speak the voice command Send a message to, and name the desired contact (⟶ page 401).

DICTATING TEXT

► Say the message.

You are guided by the voice dialog.

REPLYING TO A MESSAGE IN THE MESSAGING HISTORY

Multimedia system:

→ ⌂ ▸▸ Phone ▸▸ <Device name> ▸▸ 💬

A message list is shown.

► Select [>] next to a contact.

The messaging history with this contact is shown. You will be guided through the steps with the help of a voice dialog.

► Say the message.

FORWARDING MESSAGES

Multimedia system:

→ ⌂ ▸▸ Phone ▸▸ <Device name> ▸▸ 💬

A message list is shown.

► Speak the voice command Forward message.

You are guided by the voice dialog.

CALLING A MESSAGE SENDER

Multimedia system:

→ ⌂ ▸▸ Phone ▸▸ <Device name> ▸▸ 💬

A message list is shown.

► Select [>] next to a contact.

The messaging history with this contact is shown.

► Select [•••].

► Select Call.

USING TELEPHONE NUMBERS, URLS OR EMAIL ADDRESSES FROM A TEXT MESSAGE

Requirements

- An Internet connection is available to call up a URL.

Multimedia system:
Phone >> <Device name> >>
A message list is shown.

- Select > next to a contact.
  The messaging history with this contact is shown.
- Select a telephone number or a URL in the message.
  If a URL is selected the web browser opens.
  IF A TELEPHONE NUMBER IS SELECTED THE FOLLOWING OPTIONS ARE AVAILABLE:
  - Call
  - New Message

or

- **If In-Car Office and the email function are available:** select an email address.
  In-Car Office opens.

The availability of In-Car Office is country-dependent.

- Select an option.

DELETING A MESSAGE
Multimedia system:
Phone >> <Device name> >>
A message list is shown.

- Select a contact.
- Press and hold on a message.
- **To delete the message:** select Delete.

Apple CarPlay®

OVERVIEW OF APPLE CARPLAY®

WARNING
Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.
iPhone® functions can be used via the multimedia system using Apple CarPlay®. They are operated using the touchscreen, Touch Control or Siri® voice control. You can activate voice control by pressing and holding the button on the multifunction steering wheel.

By briefly pressing the button on the multifunction steering wheel you can continue to operate the multimedia system using the MBUX Voice Assistant (⟶ page 401).

Only one iPhone® at a time can be connected via Apple CarPlay® with the multimedia system.

Also for use of Apple CarPlay® with two phone mode, only one additional mobile phone can be connected using Bluetooth® with the multimedia system.

As access to the iPhone® is restricted by MBUX when an Apple CarPlay® session is active, not all MBUX functions (e.g. dialing from the address book) can be fully provided for the connected device. In this case use Apple CarPlay®.

The full range of functions for Apple CarPlay® is only available with an Internet connection.

The availability of Apple CarPlay® may vary according to the country.

The service provider is responsible for this application and the services and content connected to it.

Apple CarPlay® is a registered trademark of Apple Inc.

You can watch an animation on this topic via the following link:

INFORMATION ON APPLE CARPLAY®

The Apple CarPlay® symbol in the status line switches within Apple CarPlay® to the last active display.

If route guidance is active on the multimedia system, it is closed when route guidance is started on the mobile phone.

CONNECTING AN IPHONE® VIA APPLE CARPLAY® (WIRED)

Requirements:

- The current version of your device's operating system is being used (see the manufacturer's operating instructions).

For safety reasons, the first activation of Apple CarPlay® on the multimedia system must be carried out when the vehicle is stationary and the parking brake applied.

- ▶ Connect the iPhone® to a USB port on the multimedia system using a suitable cable (⟶ page 532).

  When the application is connected for the first time, a message about data protection regulations appears.
- ▶ Select Accept & Start if the application should be started.

or

- ▶ Open the device manager (⟶ page 494).
- ▶ Start Apple CarPlay® using the relevant symbol next to the device name.

If applicable, a message about data protection regulations appears.

- ▶ If required confirm the use of Apple CarPlay® on your iPhone®.

EXITING APPLE CARPLAY®

- ▶ Select .

or

- Press the [⌂] button on the multifunction steering wheel (MBUX multimedia system).

ⓘ If Apple CarPlay® was not displayed in the foreground before disconnecting, the application starts in the background when reconnected. You can call up Apple CarPlay® using the Apple CarPlay® symbol in the status line.

CONNECTING AN IPHONE® VIA APPLE CARPLAY® (WIRELESS)

Requirements:

- The current version of your device's operating system is being used (see the manufacturer's operating instructions).
- Bluetooth® is activated on the device (see the manufacturer's operating instructions).
- The device is "visible" for other devices.

ⓘ For safety reasons, the first activation of Apple CarPlay® on the multimedia system must be carried out when the vehicle is stationary and the parking brake applied.

Multimedia system:

→ [⌂] ▸▸ Phone ▸▸ [⚙] ▸▸ Devices

- Connect the mobile phone using Bluetooth® (⟶ page 493).

  When the application is connected for the first time, a message about data protection regulations appears.
- Select OK, start Apple CarPlay if the application should be started.
- If required confirm the use of Apple CarPlay® on your iPhone®.

ⓘ It is possible at any time to switch between a connection via Bluetooth® or Apple CarPlay® (wireless) in the device list.

ⓘ If you have already connected a mobile phone via Bluetooth®, you can connect another iPhone® via Bluetooth® to use Apple CarPlay® via the device manager.

EXITING APPLE CARPLAY®

- Select [⌂].

or

- Press the [⌂] button on the Touch Control (MBUX multimedia system).

ⓘ If Apple CarPlay® was not displayed in the foreground before disconnecting, the application starts in the background when reconnected. You can call up Apple CarPlay® using the Apple CarPlay® symbol in the status line.

CALLING UP APPLE CARPLAY® SOUND SETTINGS

Multimedia system:

→ [⌂] ▸▸ Settings ▸▸ System ▸▸ Audio

- Select the sound settings.

ENDING APPLE CARPLAY®

► Select the Apple CarPlay® symbol in the device manager (telephone, media) that is next to the device name of the iPhone®.

ⓘ Select the Apple CarPlay® symbol in the device manager in the telephone or media applications if Apple CarPlay® should be restarted.

ⓘ If Apple CarPlay® was not displayed in the foreground before disconnecting, the application starts in the background the next time it is started automatically. You can call up Apple CarPlay® using the relevant symbol in the status line.

Android Auto

ANDROID AUTO OVERVIEW

⚠ **WARNING**
Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

► Only operate this equipment when the traffic situation permits.

► If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.
Mobile phone functions can be used with Android Auto using the Android operating system on the multimedia system. They are operated using the touchscreen, Touch Control or voice control. You can activate the voice control system by pressing and holding the button on the multifunction steering wheel.

ⓘ By briefly pressing the button on the multifunction steering wheel you can continue to operate the multimedia system using the MBUX Voice Assistant (⟶ page 401).

Only one mobile phone at a time can be connected via Android Auto with the multimedia system.

Also for use of Android Auto with two phone mode, only one additional mobile phone can be connected using Bluetooth® with the multimedia system.

The full range of functions for Android Auto is only possible with an Internet connection.

The availability of Android Auto and Android Auto apps may vary according to the country.

The service provider is responsible for this application and the services and content connected to it.

You can watch an animation on this topic via the following link:

INFORMATION ON ANDROID AUTO

The Android Auto symbol in the status line switches within Android Auto to the last active display.

If route guidance is active on the multimedia system, it is closed when route guidance is started on the mobile phone.

CONNECTING A MOBILE PHONE VIA ANDROID AUTO (WIRED)

Requirements:

- The mobile phone supports Android Auto from Android 5.0.
- The current version of the Android Auto app is installed on the mobile phone.
- In order to use the telephone functions, the mobile phone must be connected to the multimedia system via Bluetooth® (⟶ page 493).

  If there was no prior Internet connection, this is established with the use of the mobile phone with Android Auto.

ⓘ For safety reasons, the first activation of Android Auto on the multimedia system must be carried out when the vehicle is stationary with the parking brake.

► Connect the mobile phone to a USB port on the multimedia system using a suitable cable (⟶ page 532).

  When the application is connected for the first time, a message about data protection regulations appears.

► Select Accept & Start if the application should be started.

or

► Open the device manager (⟶ page 494).
► Start Android Auto using the relevant symbol next to the device name.

EXITING ANDROID AUTO

► Select [⌂].

or

► Press the [⌂] button on the Touch Control (MBUX multimedia system).

ⓘ If Android Auto was not displayed in the foreground before disconnecting, the application starts in the background when reconnected. You can call up Android Auto using the Android Auto symbol in the status line.

CONNECTING A MOBILE PHONE VIA ANDROID AUTO (WIRELESS)

Requirements:

- The current version of your device's operating system is being used (see the manufacturer's operating instructions).
- The device supports the Android Auto function (wireless).
- Bluetooth® is activated on the device (see the manufacturer's operating instructions).
- The device is "visible" for other devices.
- Bluetooth® is activated on the multimedia system (⟶ page 434)

ⓘ For safety reasons, the first activation of Android Auto on the multimedia system must be carried out when the vehicle is stationary and the parking brake applied.

ⓘ The Android Auto function (wireless) is not available in all countries.

Multimedia system:

⟶ [⌂] » Phone » [⚙] » Devices

► Connect the mobile phone using Bluetooth® (⟶ page 493).

ⓘ Depending on the device configuration, the query whether Android Auto should be started may appear after connecting the mobile phone via Bluetooth®. In this case, the query must be answered with Yes.

► Select Start Android Auto.

When the application is connected for the first time, a message about data protection regulations appears.

► Select Accept & Start.

ⓘ It is possible at any time to switch between a connection via Bluetooth® or Android Auto (wireless) in the device list.

ⓘ If you have already connected a mobile phone via Bluetooth®, you can connect another mobile phone via Bluetooth® to use Android Auto via the device manager.

EXITING ANDROID AUTO

► Select [⌂].

or

► Press the [⌂] button on the Touch Control (MBUX multimedia system).

ⓘ If Android Auto was not displayed in the foreground before disconnecting, the application starts in the background when reconnected. You can call up Android Auto using the Android Auto symbol in the status line.

CALLING UP THE ANDROID AUTO SOUND SETTINGS

Multimedia system:

⟶ [⌂] » Settings » System » Audio

► Select the sound settings.

ENDING ANDROID AUTO

► Select the Android Auto symbol in the device manager (telephone, media) that is next to the device name of the mobile phone.

ⓘ Select the Android Auto symbol in the device manager if Android Auto should be restarted.

ⓘ If Android Auto was not displayed in the foreground before disconnecting, the application starts in the background the next time it is started automatically. You can call up Android Auto using the Android Auto symbol in the status line.

Transferred vehicle data with Android Auto and Apple CarPlay®

OVERVIEW OF TRANSFERRED VEHICLE DATA

When using Smartphone Integration, certain vehicle data is transferred to the mobile phone. This enables you to get the best out of selected mobile phone services. Vehicle data is not directly accessible.

THE FOLLOWING SYSTEM INFORMATION IS TRANSMITTED:

- Software release of the multimedia system
- System ID (anonymized)

The transfer of this data is used to optimize communication between the vehicle and the mobile phone.

To do this, and to assign several vehicles to the mobile phone, a vehicle identifier is randomly generated.

This has no connection to the vehicle identification number (VIN) and is deleted when the multimedia system is reset (⟶ page 441).

THE FOLLOWING DRIVING STATUS DATA IS TRANSMITTED:

- Transmission position engaged
- Distinction between parked, standstill, rolling and driving
- Day/night mode of the driver display
- Drive type

The transfer of this data is used to alter how content is displayed to correspond to the driving situation.


THE FOLLOWING POSITION DATA IS TRANSMITTED:

- Coordinates
- Speed
- Compass direction
- Acceleration direction

This data is used by the mobile phone to improve the accuracy of the navigation (e.g. for continuation in a tunnel).

Mercedes-Benz Support Calls

MAKING A CALL VIA THE OVERHEAD CONTROL PANEL

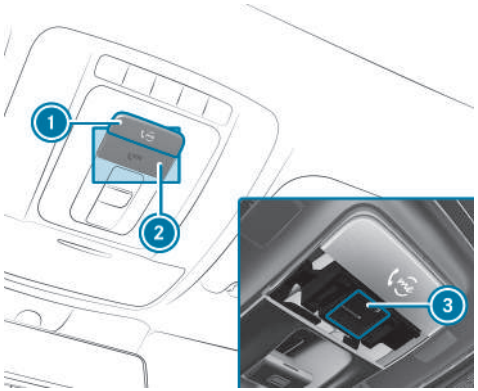

1 me button for a Mercedes-Benz Connect call
2 SOS button cover
3 SOS button (emergency call system)

Making a Mercedes-Benz Connect call

► Press me button 1.

MAKING AN EMERGENCY CALL

► To open the cover of SOS button 2 , press it briefly.

► Press and hold SOS button 3 for at least one second.

If a Mercedes-Benz Connect call is active, an emergency call can still be triggered. This has priority over all other active calls.

INFORMATION ON THE MERCEDES-BENZ SUPPORT CALL VIA THE ME BUTTON

A call was made via the me button to Mercedes-Benz Support via the overhead control panel or the multimedia system (⟶ page 510).

USING THE VOICE DIALOG SYSTEM YOU ACCESS THE DESIRED SERVICE:

- Accident and Breakdown Management
- Mercedes-Benz Support for general information about the vehicle

YOU CAN FIND INFORMATION ON THE FOLLOWING TOPICS:

- Activation of Digital Extras
- Operating the vehicle
- Nearest authorized Mercedes-Benz Center
- Further products from Mercedes-Benz

Data is transferred during the connection to Mercedes-Benz Support (⟶ page 512).

CALLING MERCEDES-BENZ SUPPORT USING THE MULTIMEDIA SYSTEM

Requirements:

- Access to a mobile phone network is available.
- Sufficient network coverage is provided by the mobile phone network providers in the respective region.
- For automatic transmission of vehicle data: the vehicle is switched on.

Multimedia system:

Phone

► Call Mercedes-Benz Support.

- After confirmation, the multimedia system sends the required vehicle data. The data transfer is shown in the display.

► Select a service via the voice dialog system.
You will be put in touch with a contact person at Mercedes-Benz Support.

THE FOLLOWING SELECTIONS MAY BE AVAILABLE:

- Accident and Breakdown Management
- Workshop service
- Mercedes-Benz Support for general information about the vehicle

ⓘ The availability of the individual selection options is country-dependent.

CALLING MERCEDES-BENZ SUPPORT AFTER AUTOMATIC ACCIDENT/BREAKDOWN DETECTION

Requirements:

The vehicle can detect accident or breakdown situations under certain circumstances.

Accident: no requirements.

Breakdown:

- The vehicle is stationary.
- The hazard warning lights are switched on.

Additional requirements may apply for collision detection with a parked vehicle (⟶ page 321).

ⓘ This function is not available in all countries.

ACCIDENT/BREAKDOWN DETECTION PROCEDURE

- The vehicle has detected an accident or breakdown situation (⟶ page 321).
- In the event an accident or breakdown is detected, the emergency guide shows safety notes in the multimedia system display. This may take a few seconds.
  Depending on the severity of the accident, an automatic emergency call can be initiated. This has priority over all other active calls (⟶ page 518).

► Exit the emergency guide display.
A prompt appears asking whether you would like to receive support from Mercedes-Benz Support.

► **Assistance from Mercedes-Benz Support immediately after the breakdown or accident has been recognized:** select Call.
  - The vehicle data is transferred automatically after your consent or if the "Breakdown Management" Digital Extra is activated (⟶ page 514).
  - Mercedes-Benz Support will take your call and organize accident/breakdown assistance.

You may be charged for these services.

► **Support from Mercedes-Benz Support at a later time:** select Call Later.
The message will disappear and reappear at a later time.

Additional prompt when the "Guard 360" Digital Extra is active: if the "Guard 360" Digital Extra is active, a message may appear in the multimedia

system when the vehicle is switched on after a collision is detected, indicating the affected area and the severity of the impact.

- **Support from Mercedes-Benz Support directly after collision detection:** select Call.
- **No support from Mercedes-Benz Support required:** reject the prompt.

ARRANGING A SERVICE APPOINTMENT VIA A MERCEDES-BENZ SUPPORT CALL

If you have activated the Digital Extra Maintenance Management, relevant vehicle data is automatically transferred to Mercedes-Benz Support. You will then receive individual recommendations regarding the maintenance of your vehicle.

Regardless of whether you have consented to the maintenance management service, the multimedia system reminds you after a certain amount of time that a service is due. A prompt appears asking if you would like to make an appointment.

- **To arrange a service appointment:** select Call.

  The vehicle data will be transferred after your approval and Mercedes-Benz Support will accept your appointment request. The information is then sent to your desired service outlet.

  This will contact you to confirm the appointment and if necessary consult about the details.

ⓘ If you select Call Later after the service message appears, the message is hidden and reappears at a later time.

DATA TRANSMITTED DURING A MERCEDES-BENZ SUPPORT CALL

If you initiate a Mercedes-Benz Support call, data is transferred to enable targeted advice and an efficient service.

THE FOLLOWING REQUIREMENTS MUST BE FULFILLED FOR THE TRANSFER OF THE DATA:

- The vehicle is switched on.
- The required data transfer technology is supported by the mobile phone network provider.
- The quality of the mobile connection is sufficient.

MULTI-STAGE TRANSFER DEPENDS ON THE FOLLOWING FACTORS:

- Reason for the initiation of the call
- The available mobile phone transmission technology
- Activated Digital Extras
- The service selected in the voice control system

ⓘ The scope of the data transmitted depends on the vehicle model and vehicle equipment. For technical reasons, not all data is available at all times.

DATA TRANSMISSION WHEN DIGITAL EXTRAS ARE NOT ACTIVATED

IF NO DIGITAL EXTRAS ARE ACTIVATED, THE FOLLOWING DATA IS TRANSMITTED:

- Vehicle identification number
- Time of the call
- Reason for the initiation of the call
- Confirmation of the data protection prompt
- Country indicator of the vehicle
- Set language for the multimedia system

- Telephone number of the communication platform installed in the vehicle

IF A CALL IS MADE FOR A SERVICE APPOINTMENT VIA THE SERVICE REMINDER, THE FOLLOWING DATA IS ALSO TRANSMITTED:

- Current mileage and maintenance data

IF A CALL IS MADE AFTER AUTOMATIC ACCIDENT OR BREAKDOWN DETECTION USING THE MULTIMEDIA SYSTEM, THE FOLLOWING DATA IS ALSO TRANSMITTED:

- Current mileage and maintenance data
- Current vehicle location

IF ACCIDENT AND BREAKDOWN MANAGEMENT HAS BEEN SELECTED VIA THE VOICE DIALOG SYSTEM, THE FOLLOWING DATA CAN ALSO BE REQUESTED FROM THE VEHICLE BY MERCEDES-BENZ SUPPORT:

- Current vehicle location

DATA PROCESSING
The data transmitted as part of the call will be deleted from the transmitting systems once the call has been completed, provided they are not used for other activated Digital Extras.

The incident-specific data is processed and stored by Mercedes-Benz Support and, if required to process the incident, forwarded to the service partner authorised by Mercedes-Benz Support. Please observe the data protection note on the Mercedes-Benz website at https://me.secure.mercedes-benz.com or in the announcement immediately after a call to Mercedes-Benz Support is connected.

ⓘ The recorded message is not available in every country.

Mercedes-Benz Connect

INFORMATION ON MERCEDES-BENZ CONNECT

YOU CAN USE THE FOLLOWING DIGITAL EXTRAS VIA THE MULTIMEDIA SYSTEM AND THE OVERHEAD CONTROL PANEL, FOR EXAMPLE:

- Accident Recovery (me button or the situation-dependent display in the multimedia system)
- Breakdown Management (me button or the situation-dependent display in the multimedia system)
- Mercedes-Benz Emergency Call System (automatic emergency call and SOS button)

The Digital Extras Accident and Breakdown Management and the Mercedes-Benz emergency call system are available to you around the clock.

The me button and the SOS button can be found on the vehicle's overhead control panel (⟶ page 510).

You can also call Mercedes-Benz Support via the multimedia system (⟶ page 510).

Please note that Mercedes-Benz Connect is a Mercedes-Benz service. In an emergency, use the emergency call system in the vehicle (⟶ page 62) or contact the standard national emergency numbers.

Please note the terms of use and the data protection notes for Digital Extras. You can find these in your Mercedes-Benz user account.

Further information on Digital Extras can be found in the Mercedes-Benz Portal: https://www.mercedes-benz.com.cn/mercedes-me.html

ACCIDENT AND BREAKDOWN MANAGEMENT DIGITAL EXTRAS

ⓘ The Accident and Breakdown Management Digital Extras are not available in every country. Contact a authorized Mercedes-Benz Center to find out whether this function is available in your country.

THE ACCIDENT AND BREAKDOWN MANAGEMENT CAN INCLUDE THE FOLLOWING FUNCTIONS:

- Supplement to the Mercedes-Benz emergency call system (⟶ page 62)

  If necessary, the contact person at the Mercedes-Benz emergency call center forwards the call to Accident and Breakdown Management. Forwarding the call is however not possible in all countries.
- Breakdown assistance by a technician on location and/or the towing away of the vehicle to the nearest authorized Mercedes-Benz Center

  You may be charged for these services.
- Addition to the emergency guide after automatic accident or breakdown detection (⟶ page 511)

  In the event of a breakdown or accident, further vehicle data is sent which enables optimal support by Mercedes-Benz Support and the authorised service partner or breakdown assistance.
- Supplement to the Digital Extra Telediagnosis

  With the Telediagnosis function, specific wear and failure reports are recorded by the service provider, in so far as these can be clearly interpreted and are available through the monitoring of components that are subject to diagnostics.

  If your vehicle detects a breakdown or threat of a breakdown, you may be prompted via the multimedia system to contact Mercedes-Benz Support for further help. This prompt in the multimedia system only appears when the vehicle is stationary.

ⓘ These Digital Extras are subject to technical restrictions such as the mobile phone coverage, mobile network quality and the ability of the processing systems to interpret the transferred data. In some circumstances, this can result in delays or the failure of the information to appear in the multimedia system.

Please note that the Mercedes-Benz Support Call is a Mercedes-Benz service. In emergencies, be sure to contact the usual national emergency number first or use the Mercedes-Benz emergency call system (⟶ page 517).

You can find more information on Digital Extras on the Mercedes-Benz Portal: https://me.secure.mercedes-benz.com

DATA TRANSMITTED WITH MERCEDES-BENZ CONNECT

THE DATA TRANSFERRED DURING THE MERCEDES-BENZ SUPPORT CALL DEPENDS ON:

- The reason for initiation of the call
- The service that is selected in the voice control system
- The activated Digital Extras (⟶ page 512)

Which data is transferred for the Digital Extras can be taken from the currently valid terms of use and the data protection notes for Digital Extras. You can find these in your Mercedes me ID.

MB Apps (Digital Extras)

INFORMATION ON MB APPS AND DIGITAL EXTRAS

With a Mercedes me ID, you have access to services and offers from Mercedes-Benz.

Availability is dependent both on the country and equipment.

You can obtain further information at an authorized Mercedes-Benz Center or in the Mercedes-Benz Portal: https://www.mercedes.me

CALLING UP THE MERCEDES ME ID USER ACCOUNT

Multimedia system:

→ [⌂] » MB Apps » Mercedes me

YOU HAVE A MERCEDES ME ID AND THE VEHICLE IS LINKED TO THE MERCEDES ME ID

- ▶ Select Mercedes me ID.

  Information regarding the linked Mercedes me ID user account appears.

YOU DO NOT YET HAVE A MERCEDES ME ID AND THE VEHICLE IS NOT YET LINKED TO THE MERCEDES ME ID

ⓘ If you do not yet have a Mercedes me ID, you can create a Mercedes me ID at: https://www.mercedes.me or in the Mercedes-Benz App. A valid email address or phone number is required for this.

- ▶ Select [⌂].
- ▶ Select MB Apps.
- ▶ Select Mercedes me.
- ▶ To link your Mercedes me ID to the vehicle, follow the instructions on the display.

ⓘ If the Mercedes-Benz App is available on a mobile phone, the vehicle link can be made via the displayed QR code.

CALLING UP DIGITAL EXTRAS

Requirements:

- The vehicle is linked to your Mercedes me ID.

Multimedia system:

→ [⌂] » MB Apps » Mercedes me

- ▶ Select My Digital Extras.

  The Digital Extras for which you have a valid license are displayed in alphabetical order.

ORDERING OR RENEWING DIGITAL EXTRAS

To order or extend Digital Extras, use the Mercedes-Benz Store.

- ▶ Select [⌂].
- ▶ Select Store.

REMOVING THE LINK BETWEEN YOUR MERCEDES ME ID AND THE VEHICLE

Requirements:

- The Mercedes me ID that was first linked to the vehicle is registered.
- The user profile is synchronized (→ page 424).
- A Mercedes me PIN has been set.

Multimedia system:

→ ⌂ » MB Apps » Mercedes me

► Select Mercedes me ID.

► Select Delete Vehicle Connection.

ⓘ Only the user whose Mercedes me ID was first linked to the vehicle can delete the link between all users and the vehicle.

SELECTING APPS

Requirements:

- Depending on the app, the general terms and conditions are confirmed.

Multimedia system:

→ ⌂ » Apps

► Select an app.

THE FOLLOWING APPS ARE AVAILABLE, FOR EXAMPLE:

- Weather
- Browser
- Additional apps, which are purchased or installed subsequently

ⓘ You can also access both of the first two apps via the quick access at Apps.

ⓘ The available features are country-dependent.
License fees may be applicable.

THE FOLLOWING FUNCTIONS ARE AVAILABLE FOR APPS, FOR EXAMPLE:

- Search function
- Filter function, for displaying search results at the current vehicle position or at the destination
- Display of detailed information
- Read-aloud function
- Setting functions

USING THE GALLERY APP

Multimedia system:

→ ⌂ » Apps

► Select Gallery.

IMAGES AND VIDEO RECORDINGS ARE DISPLAYED FROM THE FOLLOWING SOURCES, FOR EXAMPLE:

- Dashcam video recordings
- Collision detection images
- Video recordings and images from other available sources
- Video recordings from AMG TRACK PACE
- Favorites

► Select a tab.

FILTERING DISPLAYS

► Select ⚙.

► Select an option.

All files, all images or all video recordings are displayed.

PLAYING BACK A VIDEO RECORDING

- Select [▶].
  Playback starts.
- **To continue playback in full screen mode:** tap on the display.
- **To pause playback:** select [⏸].
- **To continue playback from the desired position:** move the [●] position on the timeline by sliding it.
- **To select the previous or next video recording:** swipe to the right or left.

SCROLLING AND ZOOMING IMAGES

- **To scroll:** swipe on the image in one direction.
- **To zoom:** tap twice in quick succession on an image.
- **To select the previous or next image:** swipe to the right or left.

ADDING OR REMOVING A FILE FROM THE FAVORITES

- Press and hold on a file.
- Select Add to Favorites/Remove from Favorites.
  A corresponding message appears.

SWITCHING WRITE PROTECTION ON OR OFF

ⓘ Active write protection is not supported by every app.

- Press and hold on a file.
- Activate [⬤] or deactivate [⬤] Write Protection.

DELETING FILES

- Select [✎].
- **To delete a single file:** tap on a file.
  [✓] will appear.
- **To delete all files:** tap on [☰✓].
- **To delete:** select [🗑].
  A prompt appears.
- Select Yes.

ⓘ A single file can be deleted even after a long press on the file.

Mercedes-Benz emergency call system

INFORMATION ON THE MERCEDES-BENZ EMERGENCY CALL SYSTEM

Your vehicle is equipped with the Mercedes-Benz emergency call system (“eCall”). This feature can help save lives in the event of an accident. eCall in no way replaces assistance provided from dialing 911.

The Mercedes-Benz emergency call system is generally available for your vehicle for 10 years ex works.

Mercedes-Benz eCall only functions in areas where mobile phone coverage is available from the wireless service providers. Insufficient network coverage from the wireless service providers may result in an emergency call not being transmitted.

eCall is a standard feature in your Mercedes-Benz vehicle. In order to function as intended, the system relies on the transmission of data detailed in the Transmitted Data section that follows.

To disable eCall, a customer must visit an authorized Mercedes-Benz Service department to deactivate the vehicle's communication module.

Deactivation of this module prevents the activation of all Digital Extras. After the deactivation of eCall, automatic emergency call and manual emergency call will not be available.

The vehicle must be switched on before an automatic emergency call can be made.

ⓘ eCall can be deactivated by an authorized Mercedes-Benz dealer. Please note that in the event ownership of the vehicle is transferred to another owner in its deactivated state, eCall will remain deactivated unless the new owner visits an authorized Mercedes-Benz dealership to reactivate the system.

OVERVIEW OF THE MERCEDES-BENZ EMERGENCY CALL SYSTEM

eCall can help to reduce the time between an accident and the arrival of emergency services at the site of the accident. It helps locate an accident site in places that are difficult to access. However, even if a vehicle is equipped with eCall, this does not mean the system is ON. As such, eCall does not replace dialing 911 in the event of an accident.

An emergency call can be made automatically or manually.

Only make emergency calls if you or others are in need of rescue. Do not make an emergency call in the event of a breakdown or a similar situation.

INFORMATION ON THE DISPLAY:

SOS NOT READY: the vehicle is not on or eCall not available.

During an active emergency call, SOS appears in the display.

You can find more information on the regional availability of eCall at: https://www.mercedes-benz-mobile.com/extra/ecall/

ⓘ In case of a malfunction of the emergency call system, the loudspeakers, microphone, air bag or the SOS button, for example, are faulty.

YOU CAN RECOGNIZE A MALFUNCTION IN THE EMERGENCY CALL SYSTEM BY THE FOLLOWING DISPLAYS:

- A corresponding message appears on the driver and media display (⟶ page 769).
- The SOS button lights up red continuously.

TRIGGERING AN AUTOMATIC MERCEDES-BENZ EMERGENCY CALL

Requirements:

- The vehicle is switched on.
- The starter battery is sufficiently charged.

THE MERCEDES-BENZ EMERGENCY CALL SYSTEM TRIGGERS AN EMERGENCY CALL AUTOMATICALLY IN THE FOLLOWING CASES:

- After activation of the restraint systems such as air bags or Emergency Tensioning Devices after an accident

THE EMERGENCY CALL HAS BEEN MADE:

- A voice connection is made to the Mercedes-Benz emergency call center.
- A message with accident data is transmitted to the Mercedes-Benz emergency call center.

  The Mercedes-Benz emergency call center can transmit the vehicle position data to one of the emergency call centers.

The SOS button in the overhead control panel flashes until the emergency call is finished.

It is not possible to immediately end an automatic emergency call.

If no connection can be made to the emergency services either, a corresponding message appears in the media display.

► Dial the local emergency number on your mobile phone.

IF AN EMERGENCY CALL HAS BEEN INITIATED:

- Remain in the vehicle if the road and traffic conditions permit you to do so until a voice connection is established with the emergency call center operator.
- Based on the call, the operator decides whether it is necessary to call rescue teams and/or the police to the accident site.
- If no vehicle occupant answers, an ambulance is sent to the vehicle immediately.

TRIGGERING A MANUAL MERCEDES-BENZ EMERGENCY CALL

► **To use the SOS button in the overhead control panel:** press the SOS button for at least one second (⟶ page 510).

or

► **To use voice control:** use the voice commands of the MBUX voice assistant (⟶ page 406).

THE EMERGENCY CALL HAS BEEN MADE:

- A voice connection is made to the Mercedes-Benz emergency call center.
- A message with accident data is transmitted to the Mercedes-Benz emergency call center.

  The Mercedes-Benz emergency call center can transmit the vehicle position data to one of the emergency call centers.
- Remain in the vehicle if the road and traffic conditions permit you to do so until a voice connection is established with the emergency call center operator.
- Based on the call, the operator decides whether it is necessary to call rescue teams and/or the police to the accident site.

If no connection can be made to the emergency services, a corresponding message appears in the central display.

► Dial the local emergency number on your mobile phone.

ENDING AN UNINTENTIONALLY TRIGGERED MANUAL MERCEDES-BENZ EMERGENCY CALL

► Select  on the multifunction steering wheel. Depress button for several seconds.

DATA TRANSFER OF THE MERCEDES-BENZ EMERGENCY CALL SYSTEM

IN THE EVENT OF AN AUTOMATIC OR MANUAL EMERGENCY CALL THE FOLLOWING DATA IS TRANSMITTED, FOR EXAMPLE:

- Vehicle's GPS position data
- GPS position data on the route (a few 300 feet (100 m) before the incident)
- Direction of travel
- Vehicle identification number
- Vehicle drive type
- Number of people detected in the vehicle
- Digital Extras available or not
- Whether the emergency call was initiated manually or automatically
- Time of the accident
- Language setting on the multimedia system

Data transmitted is vehicle information. For any questions about the collection, use and sharing of the eCall system data, please contact MBUSA's Customer Assistance Center at 800-FOR-MERC.

For Canada, please contact MBC's Customer Assistance Center at 1-800-387-0100.

Customer requests for covered information should be submitted via the same channels.

FOR ACCIDENT CLARIFICATION PURPOSES, THE FOLLOWING MEASURES CAN BE TAKEN UP TO AN HOUR AFTER THE EMERGENCY CALL HAS BEEN INITIATED:

- The current vehicle position can be determined.
- A voice connection to the vehicle occupants can be established.

SELF-DIAGNOSIS FUNCTION OF THE EMERGENCY CALL SYSTEM
Your vehicle checks the functionality of the emergency call system every time the vehicle is switched on.

During this time, the SOS button lights up red continuously for five seconds.

In the event of a system failure, you will be informed via a text message on the driver display and the red SOS NOT READY indicator on the central display or media display.

Please make sure, that within 30 seconds after switching the vehicle ON, the red indicator SOS NOT READY in the upper right corner of the display is switched OFF. This means the emergency call system passed diagnostics successfully.

Online and Internet functions

Internet connection

INFORMATION ON CONNECTING TO THE INTERNET

WARNING
Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

WARNING
Risk of accident from operating mobile communication equipment while the vehicle is in motion

Mobile communication devices distract the driver from the traffic situation. This can also cause the driver to lose control of the vehicle.

- As a driver, only operate mobile communication devices when the vehicle is stationary.
- As a vehicle occupant, use mobile communication devices only in the designated area, e.g. in the rear passenger compartment.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communication equipment in the vehicle.

DEPENDING ON THE VEHICLE'S EQUIPMENT AND AVAILABILITY IN THE COUNTRY, YOU CAN ESTABLISH AN INTERNET CONNECTION IN THE FOLLOWING WAYS:

- **Vehicles with a communication module:**
  - Using the communication module including data roaming (⟶ page 522)
  - Using Bluetooth® or Wi-Fi with a data-enabled mobile phone
- **Vehicles without a communication module:**
  - Using Bluetooth® or Wi-Fi with a data-enabled mobile phone

The Internet functions can only be used to a limited degree whilst driving.

SETTING UP AN INTERNET CONNECTION USING THE COMMUNICATION MODULE

Requirements:

- The vehicle is equipped with a permanently installed communication module.
- A Mercedes me ID is available.
- The vehicle is linked to a Mercedes me ID.
- The Entertainment Package is active.
- The Comfort Data Volume Digital Extra is activated.

Multimedia system:

Settings » System » Internet and Bluetooth » Manage Internet Access

- Select Data Plan.

For most Digital Extras, data volume can be obtained when procuring the Digital Extras.

Additional data volume is required to use some functions, e.g. web browser or Wi-Fi hotspot.

If the data volume is reached, availability of the Digital Extras is limited.

Depending on the vehicle equipment, you can obtain an Entertainment Package via the Mercedes-Benz Store. In order to use the data package included, you must conclude your own contract with a mobile phone network provider via the Mercedes-Benz App. This can be terminated at any time and incurs no costs. Without this contract it is not possible to use the Digital Extras included in the previously acquired Entertainment Package. The availability of this option is dependent on the country.

If the data package option is not available or can be upgraded, you can purchase data volume directly from the mobile phone network provider for a fee. The availability of this option is dependent on the country.

ⓘ Visit an authorized Mercedes-Benz Center to find out whether it is possible to purchase data volume in your country directly from a mobile phone network provider.

ⓘ Alternatively, and if available, you can utilize the tethering function of a mobile phone via Wi-Fi or Bluetooth® to use the web browser or Wi-Fi hotspot.

ⓘ With external Wi-Fi hotspots, which are encrypted via TKIP, online software updates cannot be carried out via the external Wi-Fi hotspot.

DISCONNECTING THE AUTOMATIC INTERNET CONNECTION VIA COMMUNICATION MODULE

Requirements:

- Wi-Fi or Bluetooth® tethering are available in the vehicle.

Multimedia system:

Settings » System » Internet and Bluetooth » Manage Internet Access

- Select the ••• settings in the line of Data Plan.
- **To disconnect the automatic connection:** select the Delete Entry option.

The communication module is removed from the list of known hotspots, but can be reconnected manually at any time (⟶ page 522).

The Delete Entry option permits the use of purchased data volume to be limited. The system is prevented from automatically establishing a connection to the communication module after this option has been activated.

SETTING UP AN INTERNET CONNECTION VIA WLAN

Requirements:

- The Wi-Fi function is activated on the multimedia system (⟶ page 435).
- The Wi-Fi hotspot function is activated on the mobile phone (see the manufacturer's operating instructions).
- Internet access via Wi-Fi is activated (see the manufacturer's operating instructions).

Multimedia system:
Settings » System » Internet and Bluetooth » Manage Internet Access

This function is country-dependent.

The mobile phone is listed in the Internet device manager

► Select the mobile phone with the Wi-Fi symbol.

The mobile phone is not listed in the Internet device manager

► Select Search for Access.

► Select the mobile phone with the Wi-Fi symbol.
It may take a few seconds until the device is found by the Wi-Fi search.

► Log in to the Wi-Fi network (⟶ page 435).

THE INTERNET CONNECTION VIA WI-FI IS RESTRICTED OR DOES NOT FUNCTION IN THE FOLLOWING CASES:

- The mobile phone is switched off.
- Mobile data use is deactivated on the mobile phone.
- The Wi-Fi function is deactivated on the multimedia system.
- The Wi-Fi function is deactivated on the mobile phone.
- Internet access via Wi-Fi is deactivated on the mobile phone.

SETTING UP AN INTERNET CONNECTION VIA BLUETOOTH®

Requirements:

- The mobile phone supports the Bluetooth® profile PAN (**P**ersonal **A**rea **N**etwork).
- The mobile phone is connected to the multimedia system via Bluetooth® (⟶ page 493).
- Internet access via Bluetooth® is activated (see the manufacturer's operating instructions).

Multimedia system:
Settings » System » Internet and Bluetooth » Manage Internet Access

This function is country-dependent.

The mobile phone is listed in the Internet device manager

- Select the mobile phone with the Bluetooth® symbol.

The mobile phone is not listed in the Internet device manager

- Select Search for Access.

  In the list displayed, all mobile phones already known to the multimedia system are shown. New devices can be set up using the phone application.

- Connect the mobile phone using Bluetooth® (⟶ page 493).

ⓘ If a new mobile phone is connected using Bluetooth®, this is also used for the telephone application.

THE INTERNET CONNECTION VIA BLUETOOTH® IS RESTRICTED OR DOES NOT FUNCTION IN THE FOLLOWING CASES:

- The mobile phone is switched off.
- The mobile phone network coverage is insufficient.
- Mobile data use is deactivated on the mobile phone.
- The Bluetooth® function on the multimedia system is switched off and the mobile phone is to be connected via Bluetooth®.
- The Bluetooth® function is switched off on the mobile phone and the mobile phone is to be connected via Bluetooth®.
- Neither the mobile phone network nor the mobile phone allow simultaneous use of a telephone and an Internet connection.
- The mobile phone has not been enabled for Internet access via Bluetooth®.

CANCELING INTERNET ACCESS PERMISSION FOR A MOBILE PHONE

Multimedia system:

Home » Settings » System » Internet and Bluetooth » Manage Internet Access

- Select options ••• next to the name of the mobile phone.
- Select Delete Configuration.
- Select Yes.

ESTABLISHING AN INTERNET CONNECTION

Multimedia system:

Home » Apps

- For example, select Browser.

If you select a function that requires an Internet connection and the system is currently offline, a menu opens with a selection of possible Internet accesses as well as all tethering devices that are within range.

- Select an Internet access from the list.

  The Internet connection is established.

ⓘ The list of possible Internet connections can also be displayed using the extended status line.

ⓘ Depending on the vehicle equipment and country availability, you can establish an Internet connection via the communication module or connected mobile phones.

The availability of the web browser depends on the country.

Connection status

CONNECTION STATUS OVERVIEW

DEPENDING ON THE CONNECTION STATUS, THE FOLLOWING SYMBOLS CAN APPEAR ON THE MEDIA DISPLAY IN THE STATUS LINE:

- : a Wi-Fi device is selected as Internet access.
- : a Bluetooth® device is selected as Internet access.
- Mobile communications standard (e.g. 4G + double arrow symbol): the communication module is selected as the hotspot.

DISPLAYING THE CONNECTION STATUS

Multimedia system:

→

► Briefly press the status line.

The extended status line is displayed.

► Briefly press the Internet symbol in the symbol overview.

The current connection status is displayed.

NOTES ON DISPLAYING THE CONNECTION STATUS

- When connecting via Wi-Fi, the connection status and device name are displayed.
- When connecting via a Bluetooth® device, the connection status, device name, and network type are displayed.
- In the case of a connection via the communication module the following status information can be shown:
  - Type of network
  - Status (online, offline, data volumes available or used, limited service)
- For vehicles with a communication module, the connection data of Digital Extras for which the user does not have to pay can be displayed under Digital Extras.

Web browsers

CALLING UP A WEB PAGE

WARNING
Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

► Only operate this equipment when the traffic situation permits.

► If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

Multimedia system:

→ » Apps » Browser

CALLING UP A NEW WEB PAGE

► Select Search.

- Entering a web address.
- Select OK.

The function is country-dependent.

No web pages can be displayed on the multimedia system while driving.

CALLING UP A WEBSITE FROM THE BROWSER HISTORY

- **To call up the previous page from the history:** select [<].

WEB BROWSER OVERVIEW



1. Previous website
2. Next website
3. Update
4. URL
5. Adds/removes bookmarks
6. Options
7. Settings

UNDER [•••] YOU HAVE THE FOLLOWING OPTIONS:

- Tabs
- Bookmarks & History
- Reading Mode
- Share Link
- Share Content
- Request Mobile Website

CALLING UP WEB BROWSER OPTIONS

Multimedia system:

[Home] >> Apps >> [Browser] >> [•••] >> Bookmarks & History

THE FOLLOWING FUNCTIONS ARE AVAILABLE:

- Bookmarks
- Browser History
- Entered URLs

- Select an option.
- Change the settings.

CALLING UP THE WEB BROWSER SETTINGS

Multimedia system:

[Home] >> Apps >> [Browser] >> [⚙] >> Settings

THE FOLLOWING FUNCTIONS ARE AVAILABLE:

- Block Pop-ups
- Allow Cookies
- Activate Javascript

- ▶ Switch a function on or off.

DELETING BROWSER DATA

Multimedia system:

Apps Browser Browser Data

THE FOLLOWING SPECIFIC BROWSER DATA CAN BE DELETED:

- Cache
- Cookies
- Form Data

- ▶ Select one of the options shown.

MANAGING BOOKMARKS

Multimedia system:

Apps Browser

- ▶ Select Bookmarks & History.
- ▶ Select ••• after the bookmark.

  A menu with options opens.

THE FOLLOWING OPTIONS ARE AVAILABLE:

- Delete Entry
- Delete All
- Edit
- Share

- ▶ Select one of the options shown.

MANAGING TABS

Multimedia system:

Apps Browser Tabs

OPENING A NEW TAB

- ▶ Select New Tab.

CHANGING TAB

- ▶ Select the icon for the desired tab.

CLOSING A TAB

- ▶ Press and hold the icon of the tab to be closed until a menu appears.
- ▶ Select Close.

  The tab is closed.

PRIVATE MODE

- ▶ Switch private mode on or off.

  If the private mode is switched on, an icon appears in the input line of the web browser.

ⓘ In private mode, neither the history nor cookies are saved. Bookmarks can also be created in private mode.

SHARING URLS FROM THE WEB BROWSER

Requirements:

- To share via QR code: an app for scanning the QR code is installed on the mobile device.

Multimedia system:

Apps Browser

SHARING URLS VIA QR CODE

- Select Share Link.
  A QR code appears.
- Scan the displayed QR code with a mobile device.

SHARING URLS WITH ANOTHER DISPLAY

- Select Share Content.
- In the menu drag and drop a display to another display.
  The displayed web page opens on the other display.

SETTING THE WEB BROWSER IN THE BACKGROUND

Multimedia system:

Apps Browser

- Press .
  Audio playback continues.

TuneIn Radio

CALLING UP TUNEIN RADIO

Requirements:

- There is a user account at https://www.mercedes.me.
- The vehicle is linked to the Mercedes me user account.
- The TuneIn radio service is activated.
- The data volume is available.
  Depending on the country, data volume may need to be purchased.
- A fast Internet connection for data transmission free of interference.

The functions and services are country-dependent. For more information, consult an authorized Mercedes-Benz Center.


Multimedia system:

Radio

- Select TuneIn Radio.
  The TuneIn Radio menu appears. The last station set starts playing.

The connection quality depends on the local mobile phone reception.

OVERVIEW OF TUNEIN RADIO

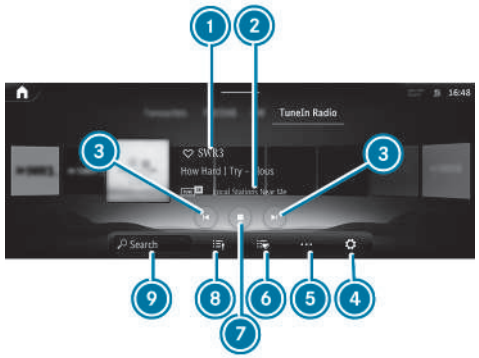

1. Internet Radio provider
2. Additional information on the current station
3. Previous or next station

4 Settings
5 Additional options
6 Favorites
7 Controls playback
8 Station list
9 Search

SELECTING AND CONNECTING TO TUNEIN RADIO STATIONS

Multimedia system:

Radio » TuneIn Radio

- ► Select .
- ► Select a category.
- ► Select a station.
  The connection is established automatically.

or

- ► Select the search field.
- ► Enter a station name.

ⓘ A relatively large volume of data can be transmitted when using Internet Radio.

SAVING/DELETING A TUNEIN RADIO STATION AS A FAVORITE

Multimedia system:

Radio » TuneIn Radio

SAVING FAVOURITES

- ► Select a station.
- ► Press the symbol next to the station name.

DELETING FAVORITES

- ► Select a station.
- ► Press the symbol next to the station name.

SETTING INTERNET RADIO OPTIONS

Multimedia system:

Radio » TuneIn Radio » » TuneIn

THE FOLLOWING OPTIONS ARE AVAILABLE:

- Select Stream: select the stream quality
- Login to TuneIn Account: log in to your TuneIn user account
- Log Out of Account: log out of your TuneIn user account

- ► Select an option.

Media

Information about media mode

INFORMATION ABOUT SUPPORTED FORMATS AND DATA STORAGE MEDIA

WARNING
Risk of distraction when handling data storage media

If you handle a data storage medium while driving, your attention is diverted from the traffic conditions. This could also cause you to lose control of the vehicle.

► Only handle a data storage medium when the vehicle is stationary.

SUPPORTED FORMATS AND DATA STORAGE MEDIA:

Permissible filing systems	FAT32, exFAT, NTFS
Permissible data storage media	USB devices, iPod®/iPhone®, MTP devices, Bluetooth® audio devices
Supported audio formats	MP3, WMA, AAC, WAV, FLAC, ALAC
Supported video formats	MPEG, AVI, MKV, MP4, M4V, WMV

OBSERVE THE FOLLOWING NOTES:

- The multimedia system supports a total of up to 50,000 files.
- Data storage media up to 2 TB are supported (32-bit address space).
- Due to the large variety of available music and video files regarding encoders, sampling frequency and data transfer rates, playback cannot be guaranteed.
- Due to the wide range of USB devices available on the market, playback cannot be guaranteed for all USB devices.
- Videos up to FullHD (1920x1080) are supported.
- Copy-protected music and video files or DRM (Digital Rights Management) encrypted files cannot be played back.
- MP3 players must support Media Transfer Protocol (MTP).
- Files with the corresponding format can be played back from the USB device in Dolby Atmos.

INFORMATION ON COPYRIGHT PROTECTION AND TRADEMARKS

Audio files which you create yourself (e.g. copies of data storage media you make yourself) are generally subject to copyright protection. In many countries, reproductions are not permitted without the prior consent of the copyright holder, even for private use. Make sure that you know about the applicable copyright regulations and that you comply with these.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Confidential unpublished works. Copyright 2020-2022 Dolby Laboratories. All Rights Reserved.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.

For DTS Patents, see https://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS TruVolume is a trademark of DTS, Inc.©. DTS, Inc. All Rights Reserved.

DTS® Connected Radio™


For DTS Patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, DTS Connected Radio, and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED. Lyrics licensed and provided by Lyric Find™. Content licensed and sourced from Radioplayer™.

Gracenote, the Gracenote logo and logotype, "Powered by Gracenote", MusicID and Playlist Plus are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries.

TIDAL

TIDAL and TIDAL logo are registered trademark of Aspiro AB in the European Union and other countries.

Overview of the media menu

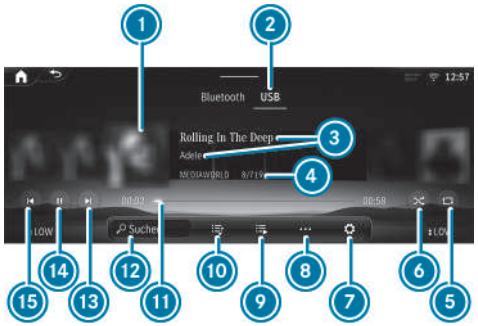

1. Album cover
2. Active media source
3. Track and artist
4. Active data storage medium and current track number/track in playback list
5. Repeat
6. Random playback
7. Settings
8. Additional options
9. Additional categories
10. Playlists and categories
11. Timeline
12. Media search
13. Next track or fast forward
14. Controls playback
15. Previous track or fast rewind


Connecting the data storage medium to the multimedia system

CONNECTING USB DEVICES

NOTE
Damage caused by high temperatures

High temperatures can damage USB devices.

► Remove the USB device after use and take it out of the vehicle.

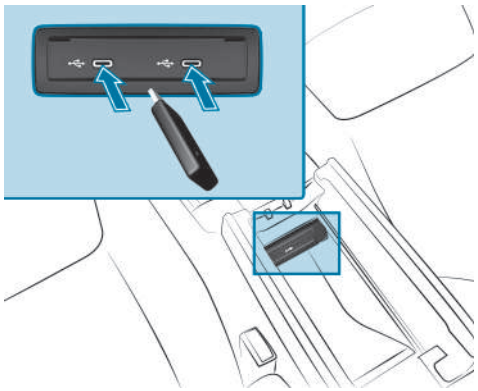

A multimedia connection unit is found in the stowage compartment under the armrest and has two type C USB ports. Depending on the vehicle's equipment, additional USB ports can be found in the storage compartment of the center console.

► Connect the USB device to the USB port.

SEARCHING FOR AND AUTHORIZING A BLUETOOTH® AUDIO DEVICE

Requirements:

- Bluetooth® is activated on the multimedia system and audio device.
- The audio device supports the Bluetooth® audio profiles A2DP and AVRCP.
- The audio device is "visible" for other devices.

Multimedia system:

→ ⌂ » Media » Bluetooth

AUTHORIZING A NEW BLUETOOTH® AUDIO DEVICE

► Select Connect device.

Detected equipment is displayed in the device list.

► Select an audio device.

Authorization starts. A code is displayed on the multimedia system and on the mobile phone.

► If the codes are identical, confirm on the audio device.

► Select No, Only for Music.

The Bluetooth® audio device is connected with the multimedia system.

CONNECTING A PREVIOUSLY AUTHORIZED BLUETOOTH® AUDIO DEVICE

► Select a Bluetooth® audio device from the list.

The connection is being established.

Starting media playback

Requirements:

- A data storage medium is connected to the multimedia system.

Multimedia system:

→ ⌂ » Media

► Select a media source.

Controlling media playback

Multimedia system:

→ ⌂ » Media

► **To pause playback:** select ⏸.

► **To continue playback:** select ▶.

- **To repeat a track:** select [⟲].
  FOR THE REPEAT FUNCTION THERE ARE THE FOLLOWING SETTINGS:
  - **Select once:** the active playlist is repeated.
  - **Select twice:** the current track is repeated.
  - **Select three times:** the repeat function is deactivated.
- **To play back tracks in random order:** select [⤮].
- **To rewind or fast-forward a track:** tap on the desired point on the timeline.
- **To select the next track:** select [⏭].
- **To select the previous track:** select [⏮].
- **To scroll through tracks quickly:** press and hold [⏮] or [⏭].
- **To show the current track list:** select [♫].

Additional options for setting media playback

Multimedia system:

→ [⌂] » Media

CALLING UP ADDITIONAL OPTIONS

- Select [•••].
  The additional options are shown.
- Select an option.

Media search

NOTES ABOUT THE SEARCH FUNCTION IN CATEGORIES

Under [♫] you can search through all available media files. There are several categories available for selection. The categories shown depend on the connected device and data format.

ⓘ The categories are available as soon as the entire media content has been read in and analyzed.
Availability of the media search with Android devices may be limited.

STARTING A SEARCH IN CATEGORIES

Multimedia system:

→ [⌂] » Media » [♫]

- Select a category.

USING THE KEYWORD SEARCH

Multimedia system:

→ [⌂] » Media

You can look for content using the keyword search with free text input.

- Select [🔍].
  A keyboard for character entry appears.
- Enter the term searched for.

ⓘ The search begins with the first character entered. The more characters entered the more concrete the search results become.

- Select the desired entry from the result list.
  If a list with several tracks is selected, then this is opened in the search.
  To playback all of the tracks in the list, select [•••] and then Play Now.

Music online

REQUIREMENTS

- There is an account for the music streaming service.
- A subscription for the music streaming service has been obtained.
- The data volume is available.
  Depending on the country, data volume may need to be purchased.
- A fast Internet connection for data transmission free of interference.

ⓘ The functions and services are country-dependent. For more information, consult an authorized Mercedes-Benz Center.

Multimedia system:

→ [⌂] » Media

ADDING A STREAMING PROVIDER THE FIRST TIME YOU START THE APPLICATION

- Select Online Music.
  The overview of all supported streaming providers appears.
- Select a streaming provider.
  A QR code is shown on the display.
- Scan the QR code with the mobile phone.
- Confirm the connection request on the mobile phone.

ADDING MORE STREAMING PROVIDERS

- Select Online Music.
  The last active streaming provider is active.
- Select [⚙].
- Select Music Services.
  The overview of all supported streaming providers appears.
- Select a streaming provider.
  A QR code is shown on the display.
- Scan the QR code with the mobile phone.
- Confirm the connection request on the mobile phone.

LOGGING OUT FROM A STREAMING PROVIDER

- Select Online Music.
  The last active streaming provider is active.
- Select [⚙].
- Select Music Services.
  The overview of all supported streaming providers appears.
- Tap on Log Out.

CALLING UP MUSIC ONLINE

Multimedia system:

→ [⌂] » Media

- Select Online Music.

Music playback can be controlled with the Touch Control or by using the media application.

SEARCHING FOR MUSIC IN ONLINE MUSIC

Multimedia system:

Media » Online Music

SEARCHING FOR CATEGORIES IN ONLINE MUSIC

The media content of the streaming provider can be scanned through in the category search. The available categories and the symbol for the category search depend on the streaming provider.

- Start the category search.
  The list of available categories appears.
- Select a category.

KEYWORD SEARCH IN ONLINE MUSIC

You can look for content using the keyword search with free text input.

- Select [search].
  A keyboard for character entry appears.
- Enter the term searched for.

ⓘ The more characters entered when using the keyword search, the more concrete the search results are.

- Select the desired entry from the result list.
  Depending on the selected hit, playback is started or a lower level in the search is opened.

CALLING UP ONLINE MUSIC SETTINGS

Multimedia system:

Media » Online Music

- Select [settings].
- Select Music Services.
- Select [settings] next to a streaming provider.
- Select a setting.

INFORMATION ABOUT DOLBY ATMOS®

The MBUX multimedia system enables playback of Dolby Atmos® content via the Burmester® sound system, thereby providing an even more immersive three-dimensional sound experience.

ⓘ The function is available with Amazon Music® or Apple Music® or by using a USB device with the corresponding file formats.

ⓘ Availability of this function depends on the respective equipment.

SWITCHING DOLBY ATMOS® ON OR OFF

Requirements:

- An account for the Amazon Music® or Apple Music® music streaming service is available.
- A subscription to the Amazon Music® or Apple Music® music streaming service has been obtained.
- Sufficient data volume is available.
  Depending on the country, data volume may need to be purchased.

- A fast Internet connection for data transmission free of interference.

The functions and services are country-dependent. For more information, consult an authorized Mercedes-Benz Center.

Multimedia system:

→ Media

► Select Online Music.
The overview of all supported streaming providers appears.

► Select Amazon Music® or Apple Music®.

► Select .

► Tap to switch on Dolby Atmos®.

or

► Tap to switch off Dolby Atmos®.
Tracks which are present or available in Dolby Atmos® will be played accordingly in this format by the sound system.

MBUX SOUND DRIVE

INFORMATION ON MBUX SOUND DRIVE

MBUX SOUND DRIVE allows you to experience your favorite song in a new interactive way. You can use various driving conditions to influence elements, e.g. instruments or voices in real time, and recreate them while driving. Different elements of your favorite song are thus built up and broken down again through the experience of different driving situations.

THE FOLLOWING DRIVING CONDITIONS ALLOW YOU TO BECOME PART OF THE MUSIC (EXAMPLES):

- Accelerating
- Braking
- Steering

YOUR FAVORITE SONG CAN BE EXPANDED WITH THE FOLLOWING LAYERS (EXAMPLES):

- Bass
- Melody
- Certain instruments

Availability of this function depends on the respective equipment.

OPERATING THE MBUX SOUND DRIVE

Requirements:

- You have a Mercedes me ID.
- The vehicle is linked to the Mercedes me ID.
- The Digital Extra is available and has been activated.
- There is an Internet connection.
- The track is available.

Multimedia system:

Media Sound Drive

CONTROLLING PLAYBACK

- Tap on ▶ to start playback.

  Playback starts.

or

- Tap on ■ to stop playback.

  Playback stops.

SWITCHING RANDOM PLAYBACK ON OR OFF

- Tap on to switch on random playback.

  Random playback starts.

or

- Tap again on to switch off random playback.

  Random playback stops.

CALLING UP THE SETTINGS

- Tap on to access the settings.
- Select a setting.

CALLING UP A PLAYLIST

- Tap on to search the available content.
- Select a track.

SEARCHING FOR A TRACK

- Tap on to search for a track.

Radio

Switching on the radio

Multimedia system:

Radio

- Start the application on the multimedia system home screen.
  The radio menu appears. You will hear the last station played on the last frequency band selected.

Radio overview



1. Preview image
2. Active frequency band
3. Station name or set frequency
4. Settings
5. Options
6. Switches HD Radio™ on/off
7. Station list
8. Search

Switching the HD Radio™ function on/off

Multimedia system:

Radio

- Select AM or FM.

HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. For patents see DTS website. HD Radio and the HD, HD Radio, and "ARC" logos are registered trademarks or trademarks of iBiquity Digital Corporation in the United States and/or other countries.

Setting the frequency band

Multimedia system:

Radio

THE FOLLOWING FREQUENCY BANDS ARE AVAILABLE:

- AM
- FM
- SiriusXM

- Select a frequency band or a favorite in the selection above the preview image.

Selecting a radio station

Multimedia system:

Radio

- Swipe to the left or right on the control element or select a radio station.

Calling up the radio station list

Multimedia system:

Radio

- Select .

  The station list appears.

- Swipe the station list up or down.

- Select a station.

Searching for radio stations using station names or frequency entry

Multimedia system:

Radio

- Select .

- Enter a station name or frequency.

- Select a station.

Selecting a recommended radio station

Requirements:

- The multimedia system has gathered sufficient data in order to show station suggestions.

Multimedia system:

Radio

- Select .

  The recommended stations are shown.

- Select a suggested station.

  The selected station is played.

Storing radio stations

Multimedia system:

Radio

- Select a radio station.
- Select ☆.

Managing favorites

Multimedia system:

Radio Favorites

MOVING STATIONS

- Press ☆.
  The list of favorites appears.
- Press ••• to the far right of the station name.
- Select Move.
- Move the station to the new position.

Displaying emergency warnings

Multimedia system:

Radio

ⓘ Availability of the function is dependent on the respective country.

- Activate or deactivate Emergency Warnings.

Displaying radio text

Multimedia system:

Radio Active frequency band

- Activate or deactivate Radio Text Information.

Satellite radio

INFORMATION ON THE SATELLITE RADIO

SIRIUS XM® satellite radio offers more than 175 digital-quality radio channels providing 100% commercial-free music, sports, news and entertainment, for example. SIRIUS XM satellite radio employs a fleet of high-performance satellites to broadcast around the clock throughout the USA and Canada. The satellite radio program is available for a monthly fee. Information about this can be obtained from a Sirius XM® Service Center and at https://www.siriusxm.com (USA) or https://www.siriusxm.ca (Canada).

ⓘ Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. All other marks, channel names and logos are the property of their respective owners. All rights reserved.

SATELLITE RADIO RESTRICTIONS

Satellite radio mode may be temporarily unavailable or interrupted for a variety of reasons. These include environmental or topographical conditions beyond the control of Mercedes-Benz USA, LLC. Thus, operation at certain locations may not be possible.

SETTING UP SATELLITE RADIO

Requirements:

- Satellite radio equipment is available.
- Registration with a satellite radio provider has been completed.
- If registration is not included when purchasing the system, your credit card details will be required to activate your account.

Multimedia system:

Radio SiriusXM

- ▶ Select Service Information.

  The service information screen appears showing the radio ID and the current subscription status.

- ▶ Establish a telephone connection.
- ▶ Follow the service staff's instructions.

  The activation process may take up to ten minutes.

ⓘ You can also have the satellite service activated online. To do so, please visit https://www.siriusxm.com (USA) or https://www.siriusxm.ca (Canada).

SWITCHING ON SATELLITE RADIO

Multimedia system:

Radio

- ▶ Select SiriusXM.

SELECTING A SATELLITE RADIO CATEGORY

Multimedia system:

Radio SiriusXM

- ▶ Select .
- ▶ Select Category.
- ▶ Select a category.

SELECTING A SATELLITE RADIO CHANNEL

Multimedia system:

Radio SiriusXM

- ▶ Select .
- ▶ Select a channel.

SAVING OR DELETING A SATELLITE RADIO CHANNEL

Multimedia system:

Radio SiriusXM

STORING THE CURRENT CHANNEL

- ▶ Select .

MOVING A CHANNEL

- ▶ Press .

  The list of favorites appears.

- ▶ Press next to the station name.
- ▶ Move the station to the new position.

DELETING THE CURRENT CHANNEL

- ▶ Press .

SETTING PARENTAL CONTROL FOR RADIO

Multimedia system:

Radio SiriusXM

- Select Parental Control.
- Determine a four-digit character sequence and select ok.

  All channels with adult content are locked.

UNLOCKING A CHANNEL

- Enter the four-digit character sequence and select ok.

  All channels with adult content are unlocked.

MUSIC AND SPORT ALERTS FUNCTION

This function enables you to program an alert for your favorite artists, tracks or sporting events. Music alerts can be saved whilst a track is being played and sport alerts can be saved during a live game. You can also specify sport alerts via the menu option. The system then continuously searches through all the channels. If a match is found with a stored alert, you will be informed.

SETTING MUSIC AND SPORT ALERTS

Multimedia system:

Radio SiriusXM Alerts

ACTIVATING MESSAGES FOR A CATEGORY

- Select a category and activate .

ADDING MESSAGES FOR A CATEGORY

- Select a category and add a message +.
- Select Artist Alerts or Track Alerts in the dialog window.

  The message is set for the activated ☑ track and artist. If a match is found, a prompt appears asking whether you wish to change to the station.

DELETING MESSAGES IN A CATEGORY

- Select a category, mark the desired messages and delete .

or

- Do not mark any messages and delete all entries .

INFORMATION ABOUT SMART FAVORITES AND TUNESTART

From the station presets you can set up to eight stations as Smart Favorites. Smart Favorites stations are automatically saved to temporary storage in the background. If you change to a Smart Favorites station, you can replay, pause or actively skip forward or back to broadcasts which you have missed. If Tune Start is activated and you change to another Smart Favorites station, the music track currently playing on the station is automatically restarted from the beginning of the track.

ADDING A CHANNEL TO SMART FAVORITES

Multimedia system:

Radio SiriusXM

- Press and hold on the station logo until the options appear.
- **To add a channel:** select Add to Smart Favorites in the menu.
- **To remove a channel:** select Delete from Smart Favorites in the menu.

ACTIVATING/DEACTIVATING TUNESTART

Multimedia system:

Radio SiriusXM

- Select General.
- Switch TuneStart on or off.

DISPLAYING SATELLITE RADIO SERVICE INFORMATION

Multimedia system:

Radio SiriusXM

- Select General.
- Select Service Information.

Sound

Sound settings

INFORMATION ABOUT THE SOUND SYSTEM
The sound system has a total output of 100 W and is equipped with six speakers. It is available for all functions in the radio and media modes.

The call can also be made from other audio sources. Replace Media with, for example, Radio in the menu path.

CALLING UP THE SOUND MENU
Multimedia system:
Media

- Select one of the functions shown to make settings.

ADJUSTING TREBLE, MID-RANGE AND BASS SETTINGS
Multimedia system:
Media

- Set Treble, Mid or Bass.

SWITCHING LOUDNESS NORMALIZATION ON OR OFF
Multimedia system:
Media Loudness Normalization

The function compensates for differing loudness when changing between audio sources and within an audio source. Several levels are available for this purpose. The currently set level is displayed.

Loudness normalization can also be switched off.

- Switch on one level.

or

- Switch off loudness normalization.

SETTING THE BALANCE AND FADER
Multimedia system:
Media Balance and Fader

ADJUSTING THE BALANCE

- In the grid shown, move the volume distribution between the right and left speakers in the vehicle.

  The volume is distributed between the right and left-hand speakers.

ADJUSTING THE FADER

- In the grid shown, move the volume distribution between the front and rear speakers in the vehicle.

  The volume is distributed between the front and rear speakers.

SWITCHING THE GREETING TONE ON/OFF
Multimedia system:
Settings System Audio

SWITCHING ON THE GREETING TONE
If the Greeting Tone is switched on and you enter the vehicle, the vehicle will welcome you with a corresponding sound.

- Tap on in order to switch on the Greeting Tone.

SWITCHING OFF THE GREETING TONE

- Tap on  in order to switch off the Greeting Tone.

Burmester® surround sound system

INFORMATION ABOUT THE BURMESTER® SURROUND SOUND SYSTEM

The Burmester® surround sound system is equipped with 12 loudspeakers. It is available for all functions in the radio and media modes.

ⓘ The call can also be made from other audio sources. Replace Media with, for example, Radio in the menu path.

CALLING UP THE SOUND MENU IN THE BURMESTER® SURROUND SOUND SYSTEM

Multimedia system:

 Media

- Select one of the functions shown to make settings.

ADJUSTING THE TREBLE, MID AND BASS SETTINGS ON THE BURMESTER® SURROUND SOUND SYSTEM

Multimedia system:

 Media Equalizer

- Set Treble, Mid or Bass.

SWITCHING LOUDNESS NORMALIZATION IN THE BURMESTER® SURROUND SOUND SYSTEM ON OR OFF

Multimedia system:

 Media Equalizer Loudness Normalization

The function compensates for differing loudness when changing between audio sources and within an audio source. Several levels are available for this purpose. The currently set level is displayed.

Loudness normalization can also be switched off.


- Switch on one level.

or

- Switch off loudness normalization.

ADJUSTING THE BALANCE AND FADER IN THE BURMESTER® SURROUND SOUND SYSTEM

Multimedia system:

 Media Balance and Fader

ADJUSTING THE BALANCE

- Move the volume distribution between the right and left sides of the vehicle in the grid shown.

  The volume is distributed between the speakers on the left and right sides in the vehicle.

ADJUSTING THE FADER

- Move the volume distribution between the front and rear of the vehicle in the grid shown.

  The volume is distributed between the speakers in the front and rear of the vehicle.

ⓘ Setting 0 is recommended for high quality music and voice reproduction.

SETTING THE BALANCE AND FADER

- Move the volume distribution between the right and left side of the vehicle and the front and rear of the vehicle in the grid shown.

  The volume is distributed between the left and right and front and rear loudspeakers in the vehicle.

SELECTING A SOUND PROFILE IN THE BURMESTER® SURROUND SOUND SYSTEM

Multimedia system:

Media

SETTING AN EXISTING SOUND PROFILE

- Select a sound profile.

SETTING UP A PERSONAL SOUND PROFILE

- Select Personal Sound Profile and .
- Select Reconfigure.
- Restart the set-up assistant.

SETTING UP A PERSONAL SOUND PROFILE FOR THE FIRST TIME:

- Select Personal Sound Profile.
- Open the set-up assistant with Start.
- Observe the messages on the display and select the preferred settings.

  The personal sound profile is created with the selected settings and can be selected in the Sound Profiles menu.

CHANGING INDIVIDUAL SETTINGS OF THE PERSONAL SOUND PROFILE AT A LATER DATE:

- Select Personal Sound Profile and .
- Adjust the desired settings.

ⓘ The availability of a Personal Sound Profile is dependent on the equipment.
The set-up assistant is available when the vehicle is stationary.

ADJUSTING SOUND FOCUS IN THE BURMESTER® SURROUND SOUND SYSTEM

Multimedia system:

Media Sound Focus

- Select a seat or seat row for sound focus.

  Sound focus is activated.

or

- Select the seat or seat row again.

  Sound focus is deactivated.

Advanced sound system

INFORMATION ABOUT THE ADVANCED SOUND SYSTEM

The Advanced Sound System is equipped with ten speakers. It is available for all functions in the radio and media modes.

ⓘ The call can also be made from other audio sources. Replace Media with, for example, Radio in the menu path.

CALLING UP THE SOUND MENU IN THE ADVANCED SOUND SYSTEM

Multimedia system:

Media

ADJUSTING SOUND SETTINGS

- Select one of the functions shown.

ADJUSTING TREBLE, MID-RANGE AND BASS SETTINGS IN THE ADVANCED SOUND SYSTEM

Multimedia system:

Media

- Set Treble, Mid or Bass.

SWITCHING LOUDNESS NORMALIZATION IN THE ADVANCED SOUND SYSTEM ON OR OFF

Multimedia system:

Media Equalizer Loudness Normalization

SWITCHING OFF LOUDNESS NORMALIZATION

- Switch on one level.

or

- Switch off loudness normalization.

SETTING THE BALANCE/FADER IN THE ADVANCED SOUND SYSTEM

Multimedia system:

Media Balance and Fader

ADJUSTING THE BALANCE

- Move the volume distribution between the right and left sides of the vehicle in the grid shown.

  The volume is distributed between the speakers on the left and right sides in the vehicle.

ADJUSTING THE FADER

- Move the volume distribution between the front and rear of the vehicle in the grid shown.

  The volume is distributed between the speakers in the front and rear of the vehicle.

Sound Experience

INFORMATION ABOUT SOUND EXPERIENCE

Your journey will be an acoustic experience. For this purpose, the active Sound Experience accompanies certain situations in the vehicle with selected sounds.

IN THE VEHICLE INTERIOR, FOR EXAMPLE, THE FOLLOWING SITUATIONS ARE ACCOMPANIED BY SELECTED SOUNDS:

- Arrival in the vehicle
- Starting the drive system
- Vehicle acceleration
- Recovery of energy from the braking procedure
- Exiting the vehicle

IN THE EXTERIOR AREA, FOR EXAMPLE, THE FOLLOWING SITUATIONS ARE ACCOMPANIED BY SELECTED SOUNDS:

- Locking and unlocking your vehicle
- Plugging in and unplugging the vehicle plug

  The sound when disconnecting the vehicle plug varies with the state of charge of your vehicle.
- Unlocking the vehicle plug
- Successful initiation of the charging process
- Malfunction when charging

In addition, your vehicle welcomes you with an ambient sound outside when the vehicle is stationary and unlocked.

The availability of the exterior area sounds is dependent on the country.

CALLING UP SOUND EXPERIENCE

Multimedia system:

Settings >> Vehicle >> Driving >> Sound Experience

SWITCHING SOUND EXPERIENCE ON OR OFF

- Switching Sound Experience on or off

CALLING UP SOUND EXPERIENCE

Multimedia system:

Settings >> Vehicle >> Driving >> Sound Experience

SWITCHING SOUND EXPERIENCE ON OR OFF

- Switch Sound Experience Inside or Sound Experience Outside on or off.

The availability of the Sound Experience Outside is country-dependent.

SELECTING SOUND EXPERIENCE STYLE

- Select a style.

Styles are already available, for example Vivid Flux.

You can purchase additional styles through the Mercedes me Portal.

The availability of styles that can be purchased is country-dependent.

Maintenance and care

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

ASSYST PLUS service interval display
Maintenance Management
Telediagnostics
Engine compartment
Checking the brake lining thickness
Cleaning and care

ASSYST PLUS service interval display

Function of the ASSYST PLUS service interval display

The ASSYST PLUS service interval display on the driver display informs you of the next regular service due date.

Depending on the operating conditions of the vehicle, the remaining time or distance until the next service due date will be displayed.

You can hide this service display using the back button on the steering wheel.

You can obtain information concerning the servicing of your vehicle from a qualified specialist workshop, e.g.,a Mercedes-Benz service center (→ page 99).

Displaying the service due date

Driver display:

→ Service

The next service due date is displayed.

- **To exit the display:** press the 'back' button on the steering wheel.

Displaying the service due date

Driver display:

→ Service

The next service due date is displayed.

- **To exit the display:** press the 'back' button on the steering wheel.

Information on performing regular service work

NOTE

Premature wear through failure to observe service due dates

Service work which is not carried out at the right time or incompletely can lead to increased wear and damage to the vehicle.

- Observe the specified service intervals. If there are any uncertainties regarding the service due date, for example if the battery is disconnected, operating conditions are difficult, etc., contact a qualified specialist workshop.
- Have the prescribed service work carried out at a qualified specialist workshop.

NOTE
Irreparable damage to the high-voltage battery due to maintenance work not being carried out

The high-voltage battery is subject to wear. Maintenance work which is not carried out in time can lead to irreparable damage to the high-voltage battery.

- Always observe the warning messages about the high-voltage battery and immediately consult a qualified specialist workshop.
- Have the necessary maintenance work on the high-voltage battery carried out at a qualified specialist workshop.

Notes on special servicing measures

The prescribed service interval is based on normal operation of the vehicle. Have the servicing work carried out more often than prescribed if operating conditions are difficult or the vehicle is subject to increased stress. These situations could arise if the vehicle is regularly used on mountainous terrain or on poor road surfaces, for example.

In these or similar operating conditions, have the interior air filter changed more frequently, for example. Check the tires more frequently if the vehicle is operated in tougher conditions. Further information can be obtained at a qualified specialist workshop.

The ASSYST PLUS service interval display serves solely as an aid. The driver of the vehicle is responsible for ensuring that servicing work is carried out more often than prescribed due to the actual operating conditions and/or increased stress.

Non-operational times with disconnected battery

The ASSYST PLUS service interval display can only calculate the service due date when the battery is connected.

- Display and note down the service due date on the driver display before disconnecting the battery (⟶ page 551).
- The period with disconnected battery is not taken into account by ASSYST PLUS. Deduct the period with disconnected battery from the time indicated on the driver display.
  - The calculated date serves as a new service due date.
  - The service interval for distance before service due date (mi (km)) is not affected in this regard.

Maintenance Management

Notes about Maintenance Management

If the Maintenance Management service is activated, relevant data is automatically transferred to the Mercedes-Benz Customer Center.

The customer center transmits the data to the service partner that you have entered on the Mercedes-Benz website at: https://www.mercedes.me. You will then receive individual recommendations regarding the maintenance of your vehicle.

The calculation of the optimal transmission time of the maintenance request to the service partner is subject to technical limitations that may cause the maintenance recommendation to be perceived as too early or too late or not to be made at all. In this case, you can conveniently arrange a maintenance appointment with the customer center via the maintenance reminder in the multimedia system.

Maintenance Management and the maintenance reminder in the multimedia system are not available in every country. Contact an authorized Mercedes-Benz Center to find out whether this function is available in your country.

Data transferred when using Maintenance Management

When the service is activated, relevant data is automatically transferred to determine the required scope of maintenance as well as malfunction detection and malfunction rectification.

Details on data transmission can be found in the data protection notes for Mercedes-Benz Support. These can be found at: https://www.mercedes.me under "My Account", "Privacy & Legal".

Maintenance Management and the maintenance reminder in the multimedia system are not available in every country.

Telediagnostics

Notes about Telediagnosis

This service is not available in all countries.

The vehicle can detect if certain wear parts need to be replaced or if malfunctions have occurred in vehicle systems. If the Telediagnosis service is activated, relevant data is automatically transmitted to the manufacturer. If malfunction conditions are detected by the vehicle system self-diagnosis, the system transmits recommendations for action to the Mercedes-Benz customer center depending on the malfunction detected. The customer center transmits the data to the service partner that you have entered on the Mercedes-Benz website at: https://www.mercedes.me.

For selected malfunctions, the notification that a malfunction has been detected may appear in the multimedia system with a request to contact the Mercedes-Benz Customer Center. From this message, a call can be made directly to the customer center for assistance.

The transmission of a notification to the multimedia system depends on the country, vehicle model and equipment and requires a fast data connection, over which the service provider has no influence.

Reliable malfunction detection is subject to technical limitations. Therefore, only a limited selection of malfunctions can be detected and recommendations for action transmitted to the customer center and the service partners. Mercedes-Benz AG is continuously working on the expansion of this service. The malfunction detection depends on the country, vehicle model and equipment.

Data transferred when using Telediagnosis

When the service is activated, relevant data is automatically transferred to determine the required scope of maintenance as well as malfunction detection and malfunction rectification.

Details on data transmission can be found in the data protection notes for Mercedes-Benz Support. These can be found at: https://www.mercedes.me under "My Account", "Privacy & Legal".

The scope of the transmitted data depends on the vehicle model and its equipment. For technical reasons, not all data is available at all times.

Engine compartment

Opening and closing the hood

DANGER
Risk of fatal injuries when carrying out maintenance work during the charging process

During the charging process, the high-voltage on-board electrical system is under high voltage.

- ► Do not perform any maintenance work during the charging process.

WARNING
Risk of accident due to driving with the hood unlocked

The hood may open and block your view.

- ► Never release the hood when driving.
- ► Before every trip, ensure that the hood is locked.

WARNING
Risk of accident and injury when opening and closing the hood

The hood may suddenly drop into the end position.

There is a risk of injury for anyone in the hood's range of movement.

- ► Do not open or close the hood if there is a person in the hood's range of movement.

WARNING
Risk of injury due to overheated vehicle

IF YOU OPEN THE HOOD IN THE EVENT OF AN OVERHEATED VEHICLE OR FIRE IN THE ENGINE COMPARTMENT, THE FOLLOWING SITUATIONS MAY OCCUR:

- You may come into contact with hot gases.
- You may come into contact with other escaping hot operating fluids.

- ► In the event of overheating or fire in the engine compartment, keep the hood closed and call the fire service.
- ► Allow the overheated vehicle to cool down first if you need to open the hood.

WARNING
Risk of injury due to moving parts

Components in the engine compartment may continue to run or start unexpectedly even when the drive system is switched off.

Observe the following if you must open the hood:

- Switch off the vehicle.
- Never touch the danger zones surrounding moving components, e.g. the rotation area of the fan.
- Remove jewelery and watches.
- Keep items of clothing and hair away from moving parts.

WARNING
Risk of burns from hot components in the engine compartment

Certain components in the engine compartment can be very hot, e.g. the drive system and the cooler.


- Allow the drive system to cool down and touch only the components described below.

WARNING
Risk of injury from using the windshield wipers when the hood is open


If the windshield wipers start moving when the hood is open, you could be trapped by the wiper linkage.

- Always switch off the windshield wipers and the vehicle first if you need to open the hood.

OPENING THE HOOD

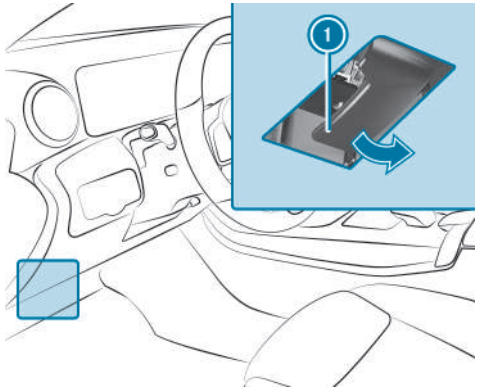

- To release the hood, pull on handle (1).

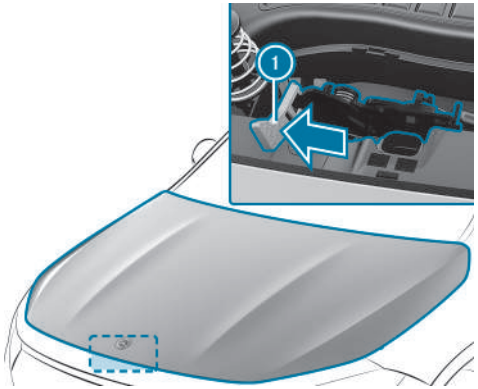

► Push yellow handle (1) on the hood catch to the left as far as it will go (palm downwards). Lift the hood until it is automatically raised by the pneumatic spring.

CLOSING THE HOOD

► Lower the hood and let it drop from a height of approximately 8 in (20 cm).

► If the hood can still be lifted slightly, open the hood again and close it with a little force until it engages correctly.

Checking the coolant level

DANGER
Risk of fatal injuries when carrying out maintenance work during the charging process

During the charging process, the high-voltage on-board electrical system is under high voltage.

► Do not perform any maintenance work during the charging process.

WARNING
Risk of injury due to overheated vehicle

IF YOU OPEN THE HOOD IN THE EVENT OF AN OVERHEATED VEHICLE OR FIRE IN THE ENGINE COMPARTMENT, THE FOLLOWING SITUATIONS MAY OCCUR:

- You may come into contact with hot gases.
- You may come into contact with other escaping hot operating fluids.

► In the event of overheating or fire in the engine compartment, keep the hood closed and call the fire service.

► Allow the overheated vehicle to cool down first if you need to open the hood.

WARNING
Risk of injury due to moving parts

Components in the engine compartment may continue to run or start unexpectedly even when the drive system is switched off.

Observe the following if you must open the hood:

- ► Switch off the vehicle.
- ► Never touch the danger zones surrounding moving components, e.g. the rotation area of the fan.
- ► Remove jewelery and watches.
- ► Keep items of clothing and hair away from moving parts.

WARNING
Risk of scalding from hot coolant

You may scald yourself if you open the cap when the drive system is at normal operating temperature.

- ► Allow the drive system to cool down before opening the cap.
- ► When opening the cap, wear protective gloves and safety glasses.
- ► Open the cap slowly to release pressure.

► Have the coolant checked or refilled only at a qualified specialist workshop.

Refilling the windshield washer system

DANGER
Risk of fatal injuries when carrying out maintenance work during the charging process

During the charging process, the high-voltage on-board electrical system is under high voltage.

- ► Do not perform any maintenance work during the charging process.

WARNING
Risk of injury due to overheated vehicle

IF YOU OPEN THE HOOD IN THE EVENT OF AN OVERHEATED VEHICLE OR FIRE IN THE ENGINE COMPARTMENT, THE FOLLOWING SITUATIONS MAY OCCUR:

- You may come into contact with hot gases.
- You may come into contact with other escaping hot operating fluids.

- ► In the event of overheating or fire in the engine compartment, keep the hood closed and call the fire service.
- ► Allow the overheated vehicle to cool down first if you need to open the hood.

WARNING
Risk of injury due to moving parts

Components in the engine compartment may continue to run or start unexpectedly even when the drive system is switched off.

Observe the following if you must open the hood:

- Switch off the vehicle.
- Never touch the danger zones surrounding moving components, e.g. the rotation area of the fan.
- Remove jewelery and watches.
- Keep items of clothing and hair away from moving parts.

WARNING
Risk of burns from hot components in the engine compartment


Certain components in the engine compartment can be very hot, e.g. the drive system and the cooler.

- Allow the drive system to cool down and touch only the components described below.

WARNING
Risk of fire and injury from windshield washer concentrate

Windshield washer concentrate is highly flammable.

- Avoid fire, open flames, smoking and the creation of sparks when using windshield washer concentrate.

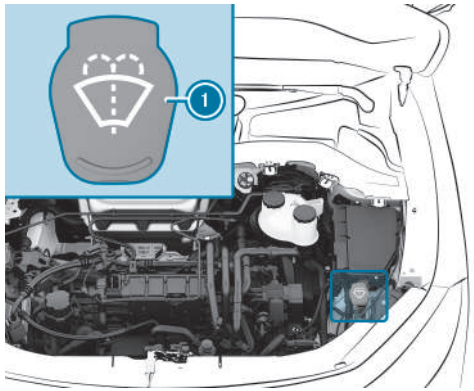


- Remove cap (1) by the tab.
- Add washer fluid.

Keeping the air/water duct free

- Keep the area between the hood and the windshield free of deposits, e.g. ice, snow or leaves.

Checking the brake lining thickness

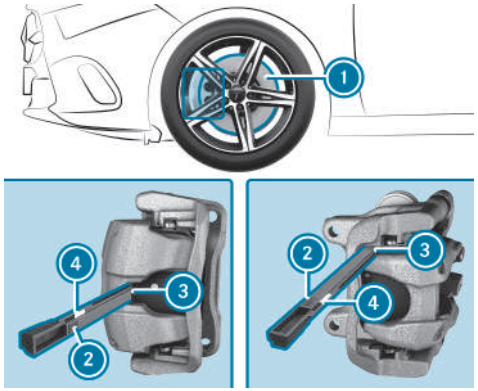

- Bring the vehicle and wheels into a suitable position so that you can position the gage.

Measuring point (3) for the test gage depends on the equipment. The gage is positioned at point (3), which is located either in the center of the brake lining or at the upper end to the side, depending on the brake caliper.

- Switch off the vehicle.
- Secure the vehicle against rolling away.
- Take the gage out of the vehicle document wallet in the glove compartment.
- Place the test gage between the wheel spokes at measuring point (3) on the brake lining.
- Hold the gage vertically to brake disc (1) and slide measuring pin (2) onto brake disc (1).
- Check which color field (4) the arrow on measuring pin (2) is pointing to.

  Green: the brake lining thickness is sufficient.

  Red: the brake lining thickness is not sufficient. Have the brake linings checked at a qualified specialist workshop.

TO AVOID AN INACCURATE MEASUREMENT:

- Make sure the wheels are suitably positioned.
- In the case of perforated brake discs, do not put the measuring pin on one of the bores in the brake disc.

Cleaning and care

Information on washing the vehicle in a car wash

WARNING
Risk of accident due to reduced braking effect after washing the vehicle

The braking effect is reduced after washing the vehicle.

- ► After the vehicle has been washed, brake carefully while paying attention to the traffic conditions until the braking effect has been fully restored.

NOTE
Damage from automatic braking

THE VEHICLE WILL BRAKE AUTONOMOUSLY IN CERTAIN SITUATIONS IF THE FOLLOWING FUNCTIONS ARE SWITCHED ON:

- Active Brake Assist
- Active Distance Assist DISTRONIC
- HOLD function
- Active Parking Assist

To avoid damage to the vehicle, switch these systems off e.g. before towing it or in a car wash.

NOTE
Damage due to unsuitable car wash

- ► Before driving into a car wash make sure that the car wash is suitable for the vehicle dimensions.
- ► Ensure there is sufficient ground clearance between the underbody and the guide rails of the car wash.
- ► Ensure that the clearance width of the car wash, in particular the width of the guide rails, is sufficient.

TO AVOID DAMAGE TO YOUR VEHICLE WHEN USING A CAR WASH, ENSURE THE FOLLOWING BEFOREHAND:

- Active Distance Assist DISTRONIC is switched off.
- The HOLD function is switched off.
- The 360° camera or the reversing camera is switched off.
- The side windows and sliding sunroof are completely closed.
- The blower for the ventilation and heating is switched off.
- The windshield wiper switch is in position 0.
- The key is at least 10 ft (3 m) away from the vehicle. Otherwise the tailgate could open unintentionally.
- For car washes with conveyor systems:
  - Neutral gear N is engaged.
  - If you leave the vehicle while it is being washed, ensure the key is located in the vehicle. The park position P is otherwise automatically engaged.

ⓘ Removing the wax from the windshield and the wiper rubber after washing the vehicle will help to avoid smearing and reduce wiper noise.

Car wash mode

In car wash mode, the vehicle is configured in readiness for entering an automatic car wash. Car wash mode can be activated up to a speed of 12 mph (20 km/h) (⟶ page 563).

THE FOLLOWING SETTINGS WILL BE ADJUSTED WHEN CAR WASH MODE IS ACTIVATED:

- The outside mirrors will be folded in.
- To prevent the windshield washer system from starting up automatically, the rain sensor will be deactivated.
- The rear passenger compartment window wiper will be deactivated.
- Parking Assist PARKTRONIC will be deactivated.
- **Vehicles with 360° camera:** the front image will be activated after approximately eight seconds.

If one of the settings cannot be selected, this will be indicated by a X after the respective setting.

Car wash mode will automatically be deactivated above a speed of 12 mph (20 km/h).

THE FOLLOWING SETTINGS WILL BE RESET WHEN CAR WASH MODE IS DEACTIVATED:

- The outside mirrors will be folded out.
- The rain sensor will be activated.
- The rear passenger compartment window wiper will be activated.
- Parking Assist PARKTRONIC will be reset to the previously selected setting.
- **Vehicles with 360° camera:** the front image will be deactivated at speeds above 11 mph (18 km/h).

Activating/deactivating car wash mode

Requirements:

- The vehicle is stationary.
- The vehicle is switched on.

Multimedia system:

Settings » Vehicle » Driving

ACTIVATING CAR WASH MODE

► Select Automatic Car Wash Mode.

► Select Activate.

If one of the settings cannot be selected, this will be indicated by a [X] next to the respective setting.

ⓘ For an overview of the settings provided when you activate car wash mode (⟶ page 562).

DEACTIVATING CAR WASH MODE

► Select Switch Off.

The car wash mode settings will be reset.

ⓘ Car wash mode will be automatically deactivated as soon as your speed exceeds 12 mph (20 km/h).

Information on using a power washer

⚠ **WARNING**
Risk of an accident when using power washers with round-spray nozzles

The water jet can cause externally invisible damage.

Components damaged in this way may unexpectedly fail.

► Do not use a power washer with round-spray nozzles.

► Have damaged tires or chassis parts replaced immediately.

TO AVOID DAMAGE TO YOUR VEHICLE, OBSERVE THE FOLLOWING WHEN USING A POWER WASHER:

- Keep the key at least 10 ft (3 m) away from the vehicle. Otherwise the tailgate could open unintentionally.
- Maintain a distance of at least 11.8 in (30 cm) to the vehicle.
- **Vehicles with decorative foil:** parts of your vehicle are covered with a decorative foil. Maintain a distance of at least 27.6 in (70 cm) between the foil-covered parts of the vehicle and the nozzle of the power washer. Move the nozzle of the power washer around while cleaning. The water temperature of the power washer must not exceed 140°F (60°C).
- Observe the information on the correct distance in the equipment manufacturer's operating instructions.
- Do not direct the nozzle of the power washer directly at sensitive parts, e.g. tires, gaps, electrical components, batteries, illuminants or louvers.

Washing the vehicle by hand

Observe the relevant legal requirements (for example in some countries, washing by hand is permitted only in specially designated wash bays).

- ► Use a mild cleaning agent, e.g. car shampoo.
- ► Do not use acidic cleaning agents.
- ► Wash the vehicle with lukewarm water using a soft car sponge. When doing so, do not expose the vehicle to direct sunlight.
- ► Carefully hose the vehicle off with water and dry using a chamois.

ⓘ Observe the notes on the care of car parts (⟶ page 566).

Notes on paintwork/matte finish paintwork care

To avoid damaging the paintwork and interfering with the driving assistance systems, please observe the following notes:

PAINT

- Insect remains: soak with insect remover and rinse off the treated areas afterwards.
- Bird droppings: soak with water and rinse off afterwards.
- Tree resin, oils, fuels and greases: remove by rubbing gently with a cloth soaked in petroleum ether or lighter fluid.
- Coolant and brake fluid: remove with a damp cloth and clean water.
- Tar stains: use tar remover.
- Wax: use silicone remover.
- Do not attach stickers, films or similar materials. Only have film attached to the bumper at a qualified specialist workshop.
- Remove dirt immediately, where possible. Do not use acidic solutions and acidic cleaning agents.

MATTE FINISH

- Only use care products approved for Mercedes-Benz.
- Do not attach stickers, films or similar materials. Only have film attached to the bumper at a qualified specialist workshop.
- Do not polish the vehicle or the light-alloy wheels.
- Only use car washes that correspond to the latest engineering standards.
- Do not use a car wash program with a final hot wax treatment.
- Do not use paint cleaners, buffing or polishing products, gloss preservers, e.g. wax.

IN THE EVENT OF PAINTWORK DAMAGE:

- Always have paintwork repairs carried out at a qualified specialist workshop.
- Make sure the radar sensors function (⟶ page 323).

Notes on cleaning decorative car films

Please observe the "Notes on paintwork/matt paintwork care“ (⟶ page 564). These notes also apply for matt decorative car films.

To avoid damage, please observe the notes on cleaning decorative car films.

CLEANING

- When cleaning with a power washer, maintain a minimum distance of 27.6 in (70 cm) between the film-covered parts of the vehicle and the nozzle of the power washer.

- To clean, use lots of water and a mild cleaning agent without additional or abrasive products, e.g. a car shampoo approved for Mercedes-Benz.
- Do not use any acidic cleaning agents.
- Remove dirt immediately, if possible. Avoid hard rubbing to avoid damaging the decorative car film irreparably.
- In case of dirt embedded in the surface or a dull decorative car film: use the 'Paint Cleaner' cleaning agent recommended and approved for Mercedes-Benz.
- Insect remains: Soak with insect remover and rinse off the treated areas afterwards.
- Bird droppings: Soak with water and rinse off afterwards.
- Dry vehicles covered with car film after every wash using a soft, absorbent cloth to prevent water stains.

PREVENTING DAMAGE TO THE DECORATIVE CAR FILM

- The durability and color of decorative car films are affected by:
  - Solar radiation
  - Temperature, e.g. heat gun
  - Weather
  - Stone chips and dirt
  - Chemical cleaning products
  - Products containing grease
- Do not use polishes on matt decorative car films. Polishing results in the film-covered surface developing a shine.
- Do not use wax on matt or structured decorative car films. This may result in permanent stains.

Scratches, corrosive deposits, etched areas and damage caused by inadequate care cannot always be completely repaired. In such cases, please contact a qualified specialist workshop.

For more information about special care and cleaning products, please contact the manufacturer.

Laminated surfaces may exhibit optical differences to surfaces which were not protected by a decorative film when the decorative film is removed.

ⓘ Have work or repairs on decorative car film carried out at a qualified specialist workshop, e.g. a Mercedes-Benz Service Center.

Information on window foils

NOTE
Damage to electronic components due to excess fluids

When window films have been retrofitted, fluids such as cleaning agents or water may run down and get behind trim parts of the vehicle interior and cause damage to electronic components.

► Use cleaning agents as sparingly as possible.

► Immediately absorb any excess fluids.

Notes on cleaning and care of vehicle parts

WARNING
Risk of entrapment if the windshield wipers are switched on while the windshield is being cleaned

If the windshield wipers are set in motion while you are cleaning the windshield or wiper blades, you can be trapped by the wiper arm.

- ► Always switch off the windshield wipers and the drive system before cleaning the windshield or wiper blades.

NOTE
Damage caused by acidic cleaning agents

- ► Do not use acidic cleaning agents. Otherwise, the surfaces could be damaged.

To avoid damage to the vehicle, observe the notes on cleaning and care of the following car parts:

WINDOWS

NOTE
Damage to electronic components due to excess fluids

When cleaning the windows from the inside, fluids such as cleaning agents or water may run down and get behind trim parts of the vehicle interior and cause damage to electronic components.

- ► Use cleaning agents as sparingly as possible.
- ► Immediately absorb any excess fluids.

- Clean the windows on the inside and outside with a damp cloth and with a cleaning agent recommended for Mercedes-Benz.
- Do not use dry cloths or abrasive or solvent-based cleaning agents to clean the insides of windows.

After changing the wiper blades or treating the vehicle with wax, clean the windshield thoroughly with cleaning agents recommended for Mercedes-Benz. Failure to observe the application instructions may result in damage, smear marks or glaring spots.

Remove external misting or dirt on the windshield within line of sight of the multifunction camera. Otherwise, driving systems and driving safety systems may become impaired or unavailable (→ page 323).

WHEELS AND RIMS

- Use water and acid-free rim cleaners.

- Do not use acidic rim cleaners to remove brake dust. This could damage wheel bolts and brake components.
- To avoid corrosion of the brake discs and brake linings, drive the vehicle for a few minutes after cleaning before parking up. The brake discs and brake linings will warm up and dry out.

WIPER BLADES

- Move the wiper arms into the replacement position (⟶ page 31).
- With the wiper arms folded out, clean the wiper blades with a damp cloth.

ⓘ Note that the wiper blades are coated. The coating may leave residue on a cloth. Do not rub the wiper blades excessively or clean them too often.

EXTERIOR LIGHTING

- Clean the lenses with a wet sponge and mild cleaning agent (e.g. car shampoo).
- Use only cleaning agents or cleaning cloths that are suitable for plastic lenses.

VEHICLE SOCKET (HIGH-VOLTAGE BATTERY)

- Use clean water and a soft cloth to clean the vehicle socket.
- Do not use power washers or cleaning agents (such as soap).

SENSORS

- Clean the sensors in the front and rear sections of the vehicle with car shampoo, plenty of water and a soft cloth (⟶ page 323).
- When using a power washer, maintain a minimum distance of 11.8 in (30 cm).

CAMERAS

- Open the camera cover with the multimedia system (⟶ page 366).
- Use clean water and a soft cloth to clean the camera lenses.
- Do not use a power washer.

ⓘ Remove external misting or dirt on the windshield within line of sight of the multifunction camera. Otherwise, driving systems and driving safety systems may become impaired or unavailable (⟶ page 323).

Notes on interior care

⚠ **WARNING**
Risk of injury from plastic parts breaking off after the use of solvent-based care products

Care and cleaning products containing solvents can cause surfaces in the cockpit to become porous. When the airbags are deployed, plastic parts may break away.

► Do not use any care or cleaning products containing solvents to clean the cockpit.

WARNING
Risk of injury or fatal injuries from bleached seat belts

Bleaching or dyeing seat belts can severely weaken them.

This can, for example, cause seat belts to tear or fail in an accident.

► Never bleach or dye seat belts.

NOTE
Property damage due to disinfectants

The interior includes a number of sensitive surfaces such as displays, plastics and leather.

Disinfectants can contain alcohol and other substances that penetrate and damage surfaces. Technology behind buttons and displays can also be damaged.

► Do not use disinfectant on interior surfaces.

To avoid damage to the vehicle, observe the following notes on cleaning and care:

SEAT BELTS
- Clean with lukewarm, soapy water.
- Do not use chemical cleaning agents.
- Do not dry by heating to more than 176 °F (80 °C) or exposing to direct sunlight.

DISPLAY
- Switch off the display and allow it to cool.
- Clean the surface carefully with a microfiber cloth and a suitable display care product (TFT LCD).
- Do not use any other agents.

HEAD-UP DISPLAY
- Clean with a soft, non-static, lint-free cloth.
- Do not use cleaning agents.

PLASTIC TRIM
- Clean with a damp microfiber cloth.
- If it is very dirty, use a cleaning agent recommended for Mercedes-Benz.
- Do not attach stickers, plastic film or similar materials.
- Do not allow cosmetics, insect repellent or sun cream to come into contact with the plastic trim.

GENUINE WOOD AND TRIM ELEMENTS
- Clean with a microfiber cloth.
- Black piano-lacquer look: clean with a damp cloth and soapy water.
- If it is very dirty, use a cleaning agent recommended for Mercedes-Benz.
- Do not use solvent-based cleaning agents, polishes or waxes.

HEADLINER
- Clean with a brush or dry shampoo.

CARPET
- Use a carpets and textiles cleaning agent recommended for Mercedes-Benz.

IMITATION LEATHER STEERING WHEEL
- Clean the entire steering wheel with a damp cotton cloth and a 1% soap solution. Do not spot clean.
- Use cleaning and care products recommended for Mercedes-Benz.
- Do not use a microfiber cloth.

- Do not use oil-based cleaning and care products.

STEERING WHEEL MADE OF GENUINE LEATHER OR DINAMICA

NOTE
Damage caused by wrong cleaners

► Do not use solvent-based cleaning agents such as tar remover or wheel cleaner; neither should you use polishes or waxes. Otherwise you may damage the finish.

- Clean with a damp cloth and a 1% soap solution and then wipe with a dry cloth.
- If it is very dirty, use a cleaning agent recommended for Mercedes-Benz.
- Leather care: use a leather care agent recommended for Mercedes-Benz.
- Do not allow the leather to become too damp.
- Do not use a microfiber cloth.

ⓘ Leather is a natural product. It has natural surface characteristics, such as differences in structure, marks caused by growth and injury or subtle color differences. These surface characteristics are particular to leather, and are not material defects. Leather is also subject to a natural aging process, which changes the surface characteristics.

GENUINE LEATHER SEAT COVERS

- Vacuum up dirt such as crumbs or dust and then clean the seat covers with a damp cotton cloth and wipe down with a dry cloth. Regularly clean the seat covers.
- If they are very dirty, use an aftercare leather care agent recommended for Mercedes-Benz.
- Leather care: use a leather care agent recommended for Mercedes-Benz.
- Do not use a microfiber cloth.
- Do not allow the leather to become too damp.
- Do not use oil-based cleaning and care products.

ⓘ Leather is a natural product. It has natural surface characteristics, such as differences in structure, marks caused by growth and injury or subtle color differences. These surface characteristics are particular to leather, and are not material defects. Leather is also subject to a natural aging process, which changes the surface characteristics.
Waves or wrinkling in the seat cover may occur due to the stress on the seat; this is caused by the natural leather material.
Regular cleaning and care of the leather will reduce dirt build-up, wear marks and aging damage and thus significantly extend its life span. Clothing that can leave stains (e.g. jeans) may discolor the leather.

DINAMICA SEAT COVERS

- Vacuum up contaminants, such as crumbs or dust and then use a damp cloth to clean.
- Do not use a microfiber cloth.

IMITATION LEATHER SEAT COVERS

- Vacuum up dirt such as crumbs or dust and then use a damp cotton cloth and a 1% soap solution to clean the entire seat cover. Do not spot clean.
- Use cleaning and care products recommended for Mercedes-Benz.
- Do not use a microfiber cloth.
- Do not use oil-based cleaning and care products.

CLOTH SEAT COVERS

- Vacuum up dirt such as crumbs or dust and then use a damp microfiber cloth and a 1% soap solution to clean the entire seat cover. Do not spot clean.
- Use cleaning and care products recommended for Mercedes-Benz.
- Do not use oil-based cleaning and care products.

Back to contents


Breakdown assistance

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Emergency
Flat tire
Battery (vehicle)
Tow starting or towing away
Electrical fuses

Emergency


Removing the safety vest

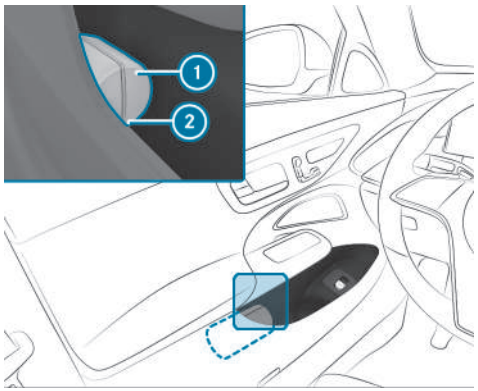

There is a safety vest stowage recess in the door stowage compartments of all doors for storing the safety vests.

- ► To remove: pull out the safety vest bag (1) using the loop (2).
- ► Open the safety vest bag (1) and take out the safety vest.
- ► To replace: fold the safety vest, roll it up and insert it into the safety vest bag (1).
- ► Slide the safety vest bag (1) along the underside of the armrest into the safety vest stowage recess. Ensure that the loop (2) remains hanging out so that it is easy to grasp.

ⓘ Remove the packaging film from a new safety vest before sliding it into the safety vest stowage recess. Otherwise, it may slide out unintentionally or the packaging may hinder its removal.
Observe the legal requirements for the individual countries.

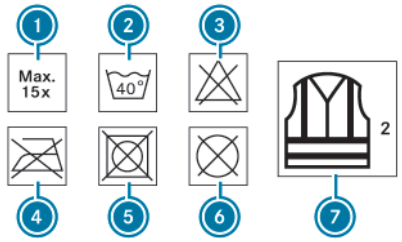

(1) Maximum number of washes
(2) Maximum wash temperature
(3) Do not bleach
(4) Do not iron
(5) Do not tumble dry
(6) Do not dry clean
(7) Class 2 safety vest

The requirements defined by the legal standard are only fulfilled if the safety vest is the correct size and is fully closed.

EXCHANGE THE SAFETY VEST IN THE FOLLOWING CASES:

- The reflective strips are damaged or dirty.


- The maximum permissible number of washes is exceeded.
- The fluorescence has faded, e.g. due to continuous exposure to sunlight.

DISPOSE OF THE SAFETY VEST IN AN ENVIRONMENTALLY FRIENDLY WAY:


- Please contact your local waste disposal company.

Warning triangle

REMOVING THE WARNING TRIANGLE

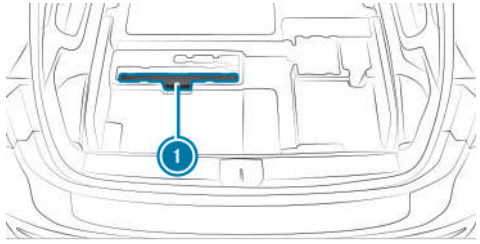

Vehicles with two seat rows

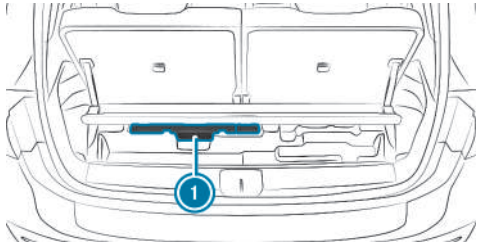


Vehicles with three seat rows

- ▶ Open the cargo floor.
- ▶ Remove warning triangle (1).


SETTING UP THE WARNING TRIANGLE

- ▶ Fold the side reflectors upwards to form a triangle and attach using the upper snap fastener .
- ▶ Fold the legs down and out to the side.

First-aid kit overview

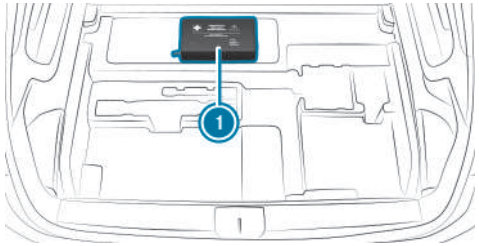

Vehicles with two seat rows

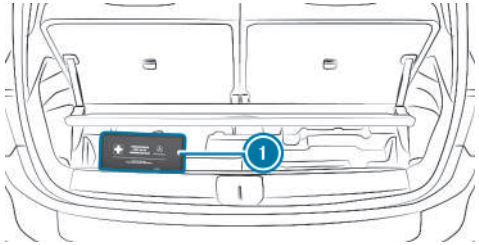

Vehicles with three seat rows

The first-aid kit (1) is located under the load compartment floor.

Flat tire

Notes in the event of a flat tire

WARNING
Risk of accident due to a flat tire

A flat tire severely affects the driving characteristics as well as steering and braking.

Tires without run-flat characteristics:

- Do not drive on with a flat tire.
- Change the flat tire immediately with an emergency spare wheel or spare wheel. Alternatively, consult a qualified specialist workshop.

Tires with run-flat characteristics:

- Observe the information and warning notes on MOExtended tires (run-flat tires).

IN THE EVENT OF A FLAT TIRE, THE FOLLOWING OPTIONS ARE AVAILABLE DEPENDING ON YOUR VEHICLE'S EQUIPMENT:

- **Vehicles with MOExtended tires:** it is possible to continue the journey for a short period of time. Make sure you observe the notes on MOExtended tires (run-flat tire) (⟶ page 575).
- **Vehicles with a TIREFIT kit:** you can seal the tire so that it is possible to continue the journey for a short period of time. To do this, use the TIREFIT kit (⟶ page 576).
- **Vehicles with Mercedes-Benz Support:** in the event of a breakdown, you can make a breakdown call via the overhead control panel (⟶ page 510).
- **All vehicles:** change the wheel (⟶ page 625).

The emergency spare wheel is only available in certain countries (⟶ page 631).
Vehicles with MOExtended tires are not equipped with a TIREFIT kit at the factory. If you retrofit your vehicle with tires without run-flat properties, e.g., winter tires, you should also equip it with a TIREFIT kit. You can obtain a TIREFIT kit in a qualified specialist workshop.
Vehicles with a Mercedes-Benz emergency call system which are not equipped with a TIREFIT kit: in the event of a flat tire, consult the Mercedes-Benz emergency call system Customer Assistance Center.

Notes on MOExtended tires (run-flat tires)

WARNING
Risk of accident when driving in limp-home mode

When driving in emergency mode the handling characteristics are impaired.

- ► Do not exceed the specified maximum speed of the MOExtended tires.
- ► Avoid any abrupt steering and driving maneuvers as well as driving over obstacles (curbs, pot holes, off-road). This applies, in particular, to a loaded vehicle.
- ► Stop driving in the emergency mode if you notice:
  - Banging noise
  - Vehicle vibration
  - Smoke which smells like rubber
  - Continuous ESP® intervention
  - Cracks in the tire side walls
- ► After driving in emergency mode, have the rims checked by a qualified specialist workshop with regard to their further use.
- ► The defective tire must be replaced in every case.

With MOExtended tires (run-flat tires), you can continue to drive your vehicle even if there is a total loss of pressure in one or more tires. However, the tire affected must not show any clearly visible damage.

You can recognize MOExtended tires by the MOExtended marking which appears on the side wall of the tire.

Vehicles with tire pressure monitoring system: MOExtended tires may only be used in conjunction with an activated tire pressure monitoring system.

IF A PRESSURE LOSS WARNING MESSAGE APPEARS IN THE DRIVER'S DISPLAY, PROCEED AS FOLLOWS:

- Check the tire for damage.
- If driving on, observe the following notes.

DRIVING DISTANCE POSSIBLE IN EMERGENCY MODE AFTER THE PRESSURE LOSS WARNING:


Load condition	Driving distance possible in emergency mode
Partially laden	50 miles (80 km)
Fully laden	19 miles (30 km)

The driving distance possible in emergency mode may vary depending on the driving style. Observe the maximum permissible speed of 50 mph (80 km/h).

If a tire has gone flat and cannot be replaced with an MOExtended tire, you can use a standard tire as a temporary measure.


TIREFIT kit storage location

The TIREFIT kit is located under the cargo floor.

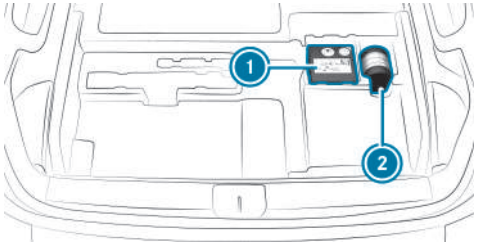

Vehicles with two rows of seats

1 Tire inflation compressor
2 Tire sealant bottle

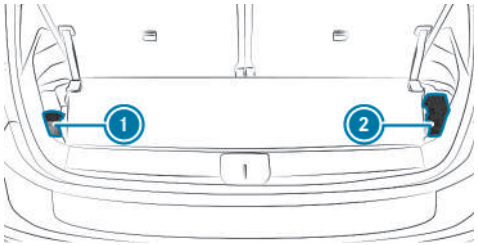

Vehicles with three rows of seats

1 Tire sealant bottle
2 Tire inflation compressor

Depending on the vehicle version, the TIREFIT kit may be located elsewhere in the cargo compartment.

Using the TIREFIT kit

Requirements:

- Tire sealant bottle and tire inflation compressor are ready for use (⟶ page 58).
- The TIREFIT sticker is displayed.
- Gloves are at hand.

You can use TIREFIT tire sealant to seal perforation damage of up to 0.16 in (4 mm), particularly on the tire contact surface. You can use TIREFIT in outside temperatures down to -4 °F (-20 °C).

WARNING
Risk of accident when using tire sealant

The tire sealant may be unable to seal the tire properly, especially in the following cases:

- There are large cuts or punctures in the tire (larger than damage previously mentioned)
- The wheel rims have been damaged
- After journeys with very low tire pressure or with flat tires

► Do not continue driving.

► Consult a qualified specialist workshop.

WARNING
Risk of injury and poisoning from tire sealant

The tire sealant is harmful and causes irritation. Do not allow it to come into contact with the skin, eyes or clothing, and do not swallow it. Do not inhale tire sealant fumes. Keep the tire sealant away from children.

If you come into contact with the tire sealant, observe the following:

- Rinse off the tire sealant from your skin immediately using water.
- If tire sealant gets into your eyes, thoroughly rinse out the eyes using clean water.
- If tire sealant has been swallowed, immediately rinse out the mouth thoroughly and drink plenty of water. Do not induce vomiting and seek medical attention immediately.
- Change out of any clothes contaminated with tire sealant immediately.
- If allergic reactions occur, seek medical attention immediately.


NOTE
Overheating due to the tire inflation compressor running too long

- Do not run the tire inflation compressor for longer than ten minutes without interruption.


Observe the manufacturer's safety notes on the sticker on the tire sealant bottle.

Have the tire sealant bottle replaced at a qualified specialist workshop every five years.


- Do not remove any foreign objects that have pierced the tire.

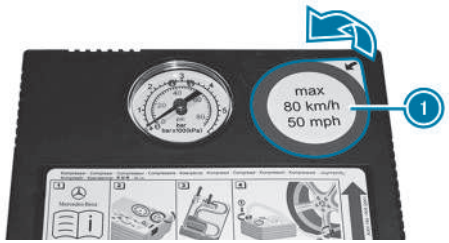


- Remove the sticker (1) from the tire inflation compressor housing and affix it onto the driver display within the driver's field of vision.

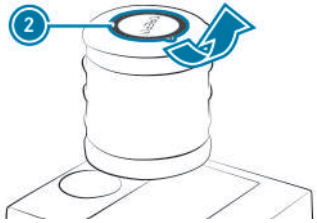


- Remove the sticker (2) from the tire sealant bottle and affix it near the valve on the wheel with the defective tire.

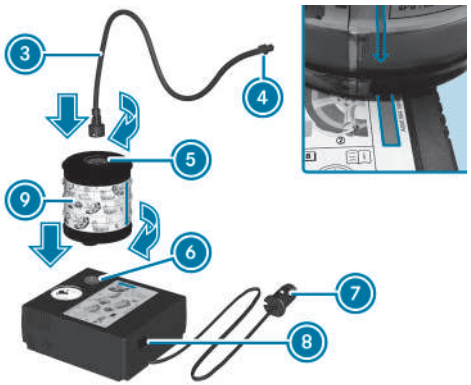

- Pull the plug (7) with cable and filling hose (3) out of the tire inflation compressor housing.
- Insert the tire sealant bottle (9) into the socket (6) of the tire inflation compressor so that the red arrow on the tire sealant bottle (9) aligns with the red arrow on the tire inflation compressor.
- Rotate the tire sealant bottle (9) a quarter of a turn clockwise.
- Insert the plug of the filling hose (3) into the socket (5) of the tire sealant bottle (9).
- Rotate the filling hose (3) a quarter of a turn clockwise.

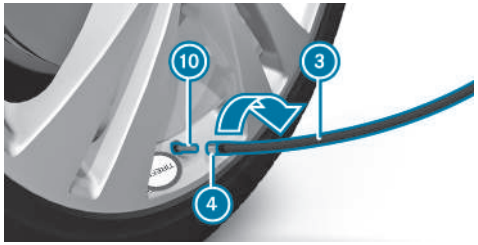

- Remove the valve cap from the valve (10) on the faulty tire.
- Screw the union nut (4) of the filling hose (3) onto the valve (10).

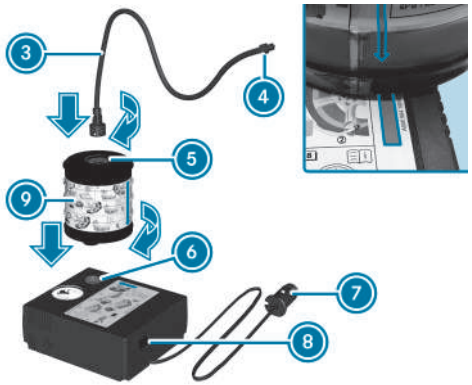

- Insert the plug (7) into a 12-V-socket in your vehicle (⟶ page 237).
- Switch on the vehicle.
- Press the On/Off switch (8) on the tire inflation compressor.

  The tire inflation compressor is switched on. The tire will be inflated. First, tire sealant is pumped into the tire. The pressure may briefly rise to approximately 500 kPa (5 bar/73 psi).

Do not switch off the tire inflation compressor during this phase!

- Allow the tire inflation compressor to run for a maximum of ten minutes.

  The tire then needs to have reached a tire pressure of at least 200 kPa (2.0 bar/29 psi).

If tire sealant leaks out, ensure that the affected area is cleaned as quickly as possible. Ideally, use clean water.

If you get tire sealant on your clothing, have it cleaned with perchloroethylene at a dry cleaner's as soon as possible.

IF, AFTER TEN MINUTES, A TIRE PRESSURE OF 200 KPA (2.0 BAR/29 PSI) IS NOT REACHED:

- Switch off the tire inflation compressor.
- Unscrew the filling hose from the valve of the defective tire.

Please note that tire sealant may leak out when unscrewing the filling hose.

- Drive the vehicle forward or in reverse very slowly for approximately 33 ft (10 m).
- Inflate the tire again.

  After a maximum of ten minutes, the tire pressure needs to be at least 200 kPa (2.0 bar/29 psi).

WARNING
Risk of accident due to the specified tire pressure not being achieved

If the specified tire pressure is not achieved after the specified time, the tire is too badly damaged. The tire sealant cannot repair the tire in this instance.

The braking characteristics as well as the driving characteristics may be greatly impaired.

- Do not continue driving.
- Consult a qualified specialist workshop.

NOTE
Staining caused by leaking tire sealant

After use, excess tire sealant may leak out from the filling hose.

- Therefore, place the filling hose in the plastic bag that contained the TIREFIT kit.

IF, AFTER TEN MINUTES, A TIRE PRESSURE OF 200 KPA (2.0 BAR/29 PSI) IS REACHED:

- Switch off the tire inflation compressor.
- Unscrew the filling hose from the valve of the defective tire.

Please note that tire sealant may leak out when unscrewing the filling hose.

WARNING
Risk of accident from driving with sealed tires

A tire temporarily sealed with tire sealant impairs the handling characteristics and is not suitable for higher speeds.

- Adapt your driving style accordingly and drive carefully.
- Do not exceed the maximum speed limit with a tire that has been repaired using tire sealant.

- Observe the maximum permissible speed of 50 mph (80 km/h) for a tire sealed with tire sealant.
- The sticker providing details of the maximum permissible speed must be affixed to the driver display where it can be clearly seen by the driver.

NOTE
Staining caused by leaking tire sealant

After use, excess tire sealant may leak out from the filling hose.

- Therefore, place the filling hose in the plastic bag that contained the TIREFIT kit.

ENVIRONMENTAL NOTE
Environmental pollution caused by environmentally irresponsible disposal

Tire sealant contains pollutants.

- Have the tire sealant bottle disposed of professionally, e.g. at an authorized Mercedes-Benz Center.

- Stow the tire sealant bottle and the tire inflation compressor.
- Pull away immediately.
- Stop driving after approximately ten minutes and check the tire pressure using the tire inflation compressor.
  The tire pressure now needs to be at least 130 kPa (1.3 bar/19 psi).

WARNING
Risk of accident due to the specified tire pressure not being attained

If the specified tire pressure is not reached, the tire is too badly damaged. The tire sealant cannot repair the tire in this instance.

The braking and driving characteristics may be greatly impaired.

- Do not continue driving.
- Consult a qualified specialist workshop.

In cases such as the one mentioned above, contact a Mercedes-Benz service center. Or call 1-800-FOR-MERCedes (in the USA) or 1-800-387-0100 (in Canada).


- Correct the tire pressure if it is still at least 130 kPa (1.3 bar/19 psi). For values, refer to the tire data and load data plate on the B-pillar on the driver's side or the tire pressure table on the fuel filler flap.

INCREASING THE TIRE PRESSURE

- Switch on the tire inflation compressor.

DECREASING THE TIRE PRESSURE

- Remove the tire sealant bottle from the tire inflation compressor.
- Insert the filling hose into the socket of the tire inflation compressor and rotate it a quarter of a turn clockwise.

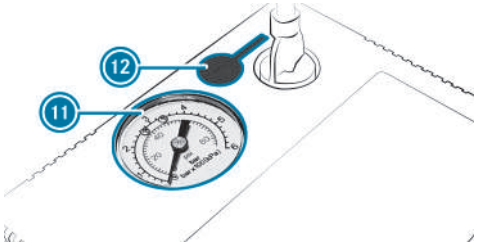

- Press the pressure release button (12) next to the manometer (11).

WHEN THE TIRE PRESSURE IS CORRECT

- Unscrew the filling hose from the valve of the sealed tire.
- Screw the valve cap onto the valve of the sealed tire.
- Stow the tire sealant bottle and the tire inflation compressor.
- Drive to the nearest qualified specialist workshop and have the tire, tire sealant bottle, and filling hose replaced.

Battery (vehicle)

Notes on the 12 V battery

WARNING
Risk of explosion due to electrostatic charge

Electrostatic charge can ignite the highly explosive gas mixture in the battery.

- To discharge any electrostatic charge that may have built up, touch the metal vehicle body before handling the battery.

The highly flammable gas mixture is created while the battery is charging and during starting assistance.

For safety reasons, Mercedes-Benz recommends that you only use batteries which have been tested and approved for your vehicle by Mercedes-Benz.

WARNING
Danger of chemical burns from the battery acid

Battery acid is caustic.

- Avoid contact with the skin, eyes or clothing.
- Do not lean over the battery.
- Do not inhale battery gases.
- Keep children away from the battery.
- Immediately rinse battery acid off thoroughly with plenty of clean water and seek medical attention immediately.

ENVIRONMENTAL NOTE
Environmental damage due to improper disposal of batteries

Batteries contain pollutants. It is illegal to dispose of them with the household rubbish.

- Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

Consult a qualified specialist workshop to disconnect the 12 V battery.

Comply with safety notes and take protective measures when handling batteries.

Risk of explosion.

Fire, open flame and smoking are prohibited when handling the battery. Avoid creating sparks.

Electrolyte or battery acid is corrosive. Avoid contact with your skin, eyes or clothing. Wear suitable protective clothing, in particular gloves, apron and face mask. Immediately rinse electrolyte or acid splashes off with clean water. Consult a doctor.

Wear safety glasses.

Keep children away.

Observe this Operator's Manual.

If you do not want to use the vehicle for a long period of time, consult a qualified specialist workshop.

Notes on the high-voltage battery

DANGER
Risk of fire and explosion from excessive internal pressure of the high-voltage battery

In the event of a vehicle fire, flammable gas can escape and ignite.

- If there is an unusual smell, smoke or burn marks, stop the charging process immediately.
- Leave the danger zone immediately. Secure the danger area at a sufficient distance.
- Call the fire service.

Observe the notes on charging the high-voltage battery (⟶ page 293).

Risk of explosion.

Fire, naked flames and smoking are prohibited when handling the battery. Avoid creating sparks.

Electrolyte or battery acid is corrosive. Avoid contact with the skin, eyes or clothing. Wear suitable protective clothing, in particular gloves, an apron and a face mask. Immediately rinse electrolyte or acid splashes off with clean water. Consult a doctor.

Wear safety glasses.

Keep children away.

Observe this Operator's Manual.

Notes on starting assistance and charging the 12 V battery

ALL VEHICLES
Always use the jump-start connection point in the engine compartment for charging the battery and jump starting.

NOTE
Damage to the battery due to overvoltage

When charging using a battery charger without a maximum charging voltage, the battery or the on-board electronics may be damaged.

- Only use battery chargers with a maximum charging voltage of 14.8 V.

WARNING
Risk of explosion due to igniting hydrogen gas

If you cause a short circuit or sparks occur, the hydrogen gas may ignite when a battery is charging.

- Ensure that the positive terminal of a connected battery does not come into contact with vehicle parts.
- Never place metal objects or tools on a battery.
- When connecting and disconnecting the battery, always observe the sequence of battery terminals described.
- When jump starting, take care to connect only battery terminals of identical polarity.
- When jump starting, always observe the sequence described for connecting and disconnecting the jumper cables.
- Do not connect or disconnect the battery terminals when the engine is running.

WARNING
Risk of explosion due to a mixture of explosive gases

A mixture of explosive gases can escape from the battery during charging and jump starting.

- ► Fire, open flames, smoking and creating sparks must be avoided.
- ► Make sure that there is sufficient ventilation.
- ► Do not stand over the battery.

WARNING
Risk of explosion from a frozen battery

A discharged battery may freeze at temperatures slightly above or below freezing point.

During starting assistance or battery charging, battery gas can be released.

- ► Always allow a battery to thaw before charging it or performing starting assistance.

If the indicator/warning lamps in the driver display do not light up at low temperatures, the discharged battery is very likely frozen. In this case you may neither jump-start the vehicle nor charge the battery.

The service life of a defrosted battery may be drastically shortened. The starting behavior may deteriorate, in particular at low temperatures.

It is recommended to have a defrosted battery checked at a qualified specialist workshop.

ALL VEHICLES

NOTE
Damage caused by numerous or extended attempts to start the engine

Numerous or extended attempts to start the engine may damage the catalytic converter due to non-combusted fuel.

- ► Avoid numerous and extended attempts to start the engine.

OBSERVE THE FOLLOWING POINTS DURING STARTING ASSISTANCE AND WHEN CHARGING THE BATTERY:

- Only use undamaged jumper cables/charging cables with a sufficient cross-section and insulated terminal clamps.
- Uninsulated parts of the terminal clamps must not come into contact with other metal parts as long as the jumper cables/charging cables are connected to the battery/the jump-start connection point.
- The jumper cables/charging cables must not touch any parts which may move when the engine is running.
- Make sure that neither you nor the battery are electrostatically charged.
- Keep away from fire and naked flames.
- Do not stand over the battery.

ALSO OBSERVE THE FOLLOWING POINTS WHEN CHARGING THE BATTERY:

- Only use chargers tested and approved for Mercedes-Benz.
- Read the operating instructions for the charger, then charge the battery.

ALSO NOTE THE FOLLOWING POINTS DURING STARTING ASSISTANCE:

- Starting assistance may only be provided using vehicles, batteries or other jump start devices with a nominal voltage of 12 V.
- The vehicles must not touch each other.

Starting assistance and charging the 12-V-battery

- ▶ Only have starting assistance provided by a qualified specialist workshop, e.g. an authorized Mercedes-Benz Center.
- ▶ Only have the battery charged at a qualified specialist workshop, e.g. an authorized Mercedes-Benz Center.

Replacing the 12-V-battery

- ▶ Only have the battery replaced at a qualified specialist workshop, e.g. at an authorized Mercedes-Benz Center.

Tow starting or towing away

Overview of the permitted towing methods

NOTE
Damage from automatic braking

THE VEHICLE WILL BRAKE AUTONOMOUSLY IN CERTAIN SITUATIONS IF THE FOLLOWING FUNCTIONS ARE SWITCHED ON:

- Active Brake Assist
- Active Distance Assist DISTRONIC
- HOLD function
- Active Parking Assist

To avoid damage to the vehicle, switch these systems off e.g. before towing it or in a car wash.

Mercedes-Benz recommends transporting your vehicle in the case of a breakdown, rather than towing it.

For towing with both axles on the ground, use a tow rope or tow bar. Do not use tow bar systems.

If you notice that the vehicle has lost coolant, do not have it towed. Have the vehicle transported instead.

NOTE
Damage to the vehicle due to towing away incorrectly

► Observe the instructions and notes on towing away.

VEHICLES WITH FRONT WHEEL DRIVE

Permitted towing methods	
Both axles on the ground	Yes, for a maximum of 30 miles (50 km) at 30 mph (50 km/h)*, only forwards with the driver in the cockpit
Front axle raised	Yes, for a maximum of 30 miles (50 km) at 30 mph (50 km/h)
Rear axle raised	No

*The towing range can be significantly lower depending on the active auxiliary consumers and environmental conditions (⟶ page 58).

4MATIC VEHICLES

Permitted towing methods	
Both axles on the ground	Yes, for a maximum of 30 miles (50 km) at 30 mph (50 km/h)*, only forwards with the driver in the cockpit
Front axle raised	No
Rear axle raised	No

*The towing range can be significantly lower depending on the active auxiliary consumers and environmental conditions (⟶ page 58).

Towing the vehicle with both axles on the ground

► Observe the notes on the permitted towing methods (⟶ page 587).

► Make sure that the 12-V-battery is connected and charged.

OBSERVE THE FOLLOWING POINTS WHEN THE 12-V-BATTERY IS DISCONNECTED OR DISCHARGED:

- The drive system cannot be started.
- The electric parking brake cannot be released or applied.
- The selector lever cannot be put into position N or P.

IF AT LEAST ONE OF THE FOLLOWING CONDITIONS APPLIES, TRANSPORTING THE VEHICLE IS THE ONLY POSSIBLE OPTION:

- If the high-voltage battery is discharged.
- If the selector lever cannot be put into position N.
- If the 12-V-battery is disconnected or discharged.
- If the driver display has failed.
- If the Towing Not Permitted See Operator's Manual display message is shown.

  Exception: if the vehicle is located in a danger zone, it can be recovered from the danger zone despite the display message.

  It must not be towed further than 328 ft (100 m) with both axles on the ground. A towing speed of 6 mph (10 km/h) must not be exceeded. Beyond these limits, only transporting is permitted.

- If the Check Coolant Level See Operator's Manual display message is shown.
- If the Stop Switch Off Vehicle display message is shown.

► In such cases, transport the vehicle (⟶ page 590).

NOTE

Damage due to towing away at excessively high speeds or over long distances

The drivetrain could be damaged when towing at excessively high speeds or over long distances.

► A towing speed of 30 mph (50 km/h) must not be exceeded.

► A towing distance of 30 miles (50 km) must not be exceeded.

WARNING
Risk of accident when towing a vehicle with too much weight

IF THE VEHICLE TO BE TOWED IS HEAVIER THAN THE PERMISSIBLE GROSS MASS OF YOUR VEHICLE, THE FOLLOWING SITUATIONS CAN ARISE:

- The towing eye breaks off.
- The combination oscillates and can capsize.

► Before towing, check whether the vehicle to be towed exceeds the permissible gross mass.

If a vehicle is to be towed away, its permissible gross mass must not exceed the permissible gross mass of the towing vehicle.

► Information on the permissible gross mass of the vehicle can be found on the vehicle identification plate (⟶ page 698).

TOWING THE VEHICLE

► Install the towing eye (⟶ page 591).

► Fasten the towing device.

NOTE
Damage due to incorrect connection of the tow bar

► Only connect the tow rope or tow bar to the towing eyes.

► Deactivate the automatic locking mechanism (⟶ page 165).

► Do not activate the HOLD function (⟶ page 328).

► Deactivate the tow-away alarm (⟶ page 185).

► Deactivate Active Brake Assist (⟶ page 350).

► Put the selector lever into position N.

► Release the electric parking brake.

► Remain in the cockpit during towing and observe the display messages.

► Do not switch off the vehicle while it is being towed.

► Do not open the driver's door or front passenger door, because otherwise the selector lever automatically switches to position P.

WARNING
Risk of accident due to limited safety-related functions during the towing process

SAFETY-RELATED FUNCTIONS ARE LIMITED OR NO LONGER AVAILABLE IN THE FOLLOWING SITUATIONS:

- The vehicle is switched off.
- The brake system or power steering system is malfunctioning.
- The energy supply or the on-board electrical system is malfunctioning.

► In such cases, do not tow the vehicle.

► Transport the vehicle (⟶ page 590).

NOTE
Damage to the drive system due to incorrect towing

THE VEHICLE MUST NOT BE TOWED IN THE FOLLOWING SITUATIONS:

- The vehicle is switched off.
- The brake system or power steering is malfunctioning.
- The energy supply or on-board electrical system is malfunctioning.

► Do not tow the vehicle in these situations.

NOTE
Damage due to excessive tractive power

If you pull away sharply, the tractive power may be too high and the vehicles could be damaged.

► Pull away slowly and smoothly.

Loading up the vehicle for transport

► Observe the notes on towing away (⟶ page 58).

► Connect the towing device to the towing eye in order to load up the vehicle.

► Shift the transmission to position N.

The transmission may be locked in position P in the event of damage to the electrics. To shift to N, supply power to the on-board electrical system (⟶ page 55).

► Load the vehicle correctly onto the transporter.
- Ensure that all wheels are on the transportation surface.
- Ensure that the vehicle is positioned parallel with the direction of travel.

► Put the selector lever into position P.

► Use the electric parking brake to secure the vehicle against rolling away.

► Stop the vehicle and switch off the power supply.

► Only secure the vehicle by the wheels.

VEHICLES WITH ADAPTIVE DAMPING SYSTEM

WARNING
Risk of an accident when transporting vehicles with adaptive damping adjustment

When transporting vehicles with adaptive damping adjustment, the vehicle/trailer combination may begin to rock and start to skid.


► Load the vehicle correctly onto the transporter.

► Secure the vehicle on all four wheels with suitable tensioning straps.

NOTE
Vehicle damage due to incorrect lashing

- Secure the vehicle at all four wheels after loading it up. Otherwise, the vehicle could be damaged.
- Keep a minimum distance of 8 in (20 cm) above and 4 in (10 cm) below the transport platform.

- Load the vehicle correctly onto the transporter.
  - Ensure that all wheels are on the transportation surface.
  - Ensure that the vehicle is positioned parallel with the direction of travel.
- Put the selector lever into position P.
- Use the electric parking brake to secure the vehicle against rolling away.
- Stop the vehicle and switch off the power supply.
- Secure the vehicle at all four wheels.

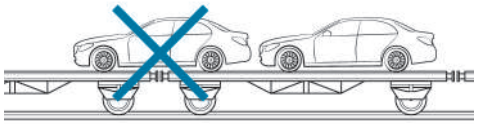

- Make sure that the front and rear axles come to rest on the same transport vehicle.


NOTE
Damage to the drive train due to incorrect positioning of the vehicle

- Do not position the vehicle above the connection point of the transport vehicle.

Towing eye storage location

The towing eye is under the cargo floor.

Installing and removing the towing eye

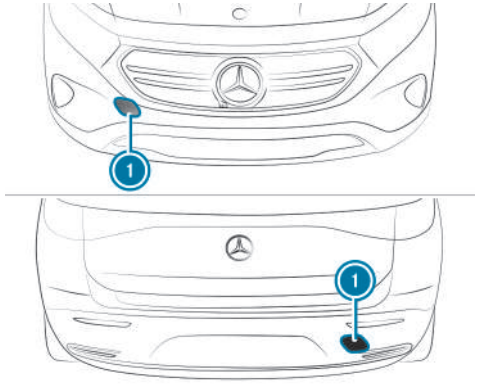

- Press the cover (1) inwards at the marking and remove.
- Screw in the towing eye in a clockwise direction as far as it will go and tighten.
- After removing the towing eye, reattach the cover (1) in the bumper.

NOTE
Damage to the vehicle as a result of incorrect use of the towing eye or trailer hitch

The vehicle could sustain damage if the towing eye or trailer hitch is used to haul the vehicle out of a ditch during recovery situations.

- The towing eye and trailer hitch should only be used to tow the vehicle.
- Do not use the towing eye or trailer hitch to haul the vehicle out of a ditch during recovery situations.

Tow-starting the vehicle

- If the drive system does not start, have the vehicle transported to a qualified specialist workshop, e.g. an authorized Mercedes-Benz Center.
- The drive system is not started by tow-starting the vehicle. Do not make any attempts to tow-start the vehicle.

Electrical fuses

Notes on electrical fuses

WARNING
Risk of accident and injury due to overloaded lines

If you manipulate or bridge a faulty fuse or if you replace it with a fuse with a higher amperage, the electric line could be overloaded.

This could result in a fire.

- Always replace faulty fuses with specified new fuses containing the correct amperage.

NOTE
Damage due to incorrect fuses

Using incorrect fuses can result in damage to electrical components or systems or their functions being considerably restricted.

- Use only fuses approved for Mercedes-Benz with the respective specified fuse rating.

Replace blown fuses with equivalent fuses, identifiable by their color and label. The fuse ratings and further information to be observed can be found in the fuse assignment diagram.

Fuse assignment diagram: on the fuse box in the engine compartment (→ page 594).

NOTE
Damage or malfunctions caused by moisture

Moisture may cause damage to the electrical system or cause it to malfunction.

- When the fuse box is open, make sure that no moisture can enter the fuse box.
- When closing the fuse box, make sure that the seal of the lid is positioned correctly on the fuse box.

If the newly inserted fuse also blows, have the cause determined and rectified at a qualified specialist workshop.

ENSURE THE FOLLOWING BEFORE REPLACING A FUSE:

- The vehicle is secured against rolling away.
- All electrical consumers are switched off.
- The vehicle is switched off.

THE ELECTRICAL FUSES ARE LOCATED IN VARIOUS FUSE BOXES:

- Fuse box in the engine compartment on the left-hand side of the vehicle, when viewed in the direction of travel (→ page 594)

- Fuse box in the front passenger footwell (⟶ page 595)
- Fuse box in the center of the cargo bay (⟶ page 596)

Opening and closing the fuse box in the engine compartment

Requirements:

- A dry cloth and a screwdriver are available.

Observe the notes on electrical fuses (⟶ page 55).


OPENING

WARNING
Risk of injury from using the windshield wipers when the hood is open

If the windshield wipers start moving when the hood is open, you could be trapped by the wiper linkage.

► Always switch off the windshield wipers and vehicle before opening the hood.

► Open the hood.

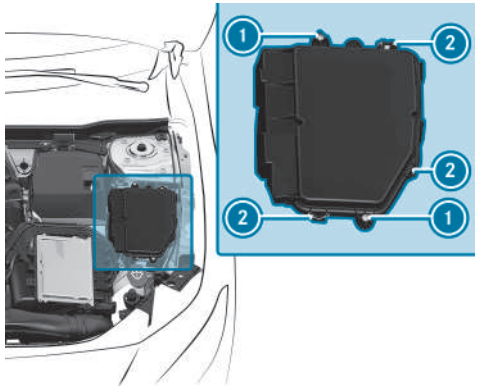

► Remove any existing moisture from the fuse box using a dry cloth.


► Loosen screws (1).

► Press clips (2) and lift the fuse box lid up and out.

The fuse assignment diagram is in a recess on the side of the fuse box.

CLOSING

► Check whether the seal is positioned correctly in the lid.

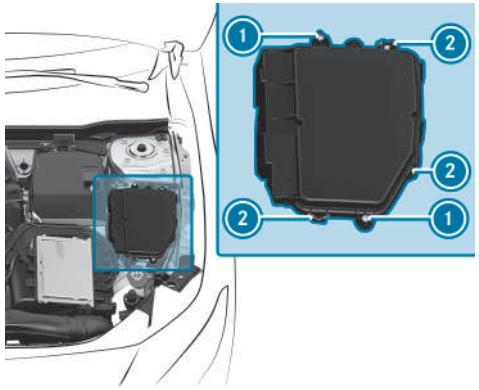


- Place the lid on the fuse box.
- Make sure that clips (2) engage.
- Tighten screws (1).
- Close the hood.

Opening and closing the fuse box in the front passenger footwell


Requirements

Observe the notes on electrical fuses (⟶ page 55).

OPENING

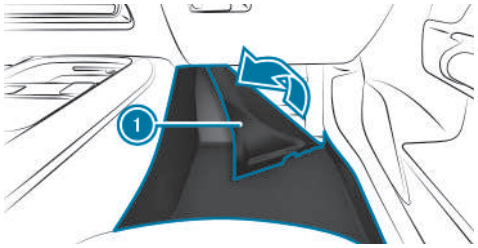


- Lift carpet (1) in the direction of the arrow.

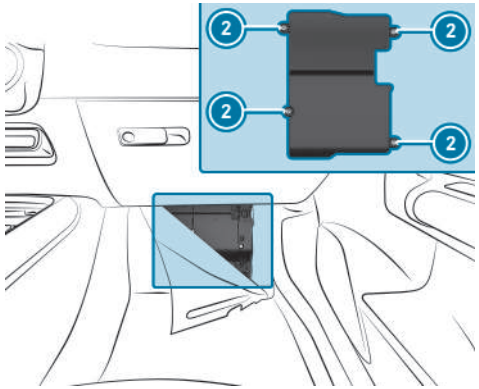

- Loosen screws (2) and remove fuse box lid from the top.

CLOSING

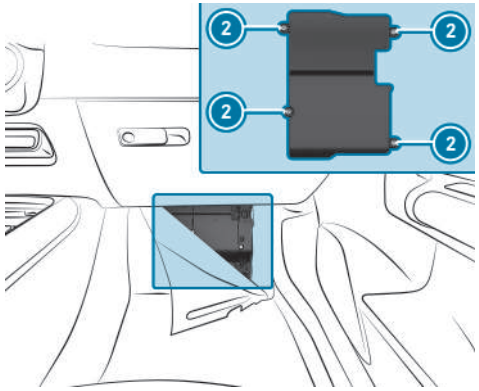


- Place the lid on the fuse box.
- Tighten screws (2).
- Fold back the carpet.

Opening and closing the fuse box in the cargo compartment

Requirements

Observe the notes on electrical fuses (⟶ page 55).

► Open the cargo floor.

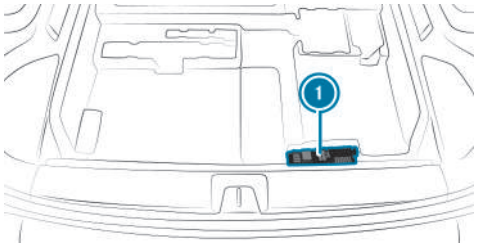

Fuse box (1) is located underneath the cargo floor.

Back to contents

Wheels and tires

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Notes on noise or unusual handling characteristics
Notes on regularly inspecting wheels and tires
Notes on snow chains
Tire pressure
Loading the vehicle
Tire labeling
Definitions for tires and loading
Changing a wheel
Emergency spare wheel

Notes on noise or unusual handling characteristics

Make sure there are no vibrations, noises or unusual handling characteristics when the vehicle is in motion. This may indicate that the wheels or tires are damaged. Hidden tire damage could also be causing the unusual handling characteristics.

If you suspect that a tire is defective, reduce your speed immediately and have the tires and wheels checked at a qualified specialist workshop.

Notes on regularly inspecting wheels and tires

WARNING
Risk of injury through damaged tires

Damaged tires can cause tire pressure loss.

► Check the tires regularly for signs of damage and replace any damaged tires immediately.

WARNING
Risk of hydroplaning due to insufficient tire tread

Insufficient tire tread will result in reduced tire grip. There is a risk of an accident.

On a wet road surface the risk of hydroplaning is increased, in particular where speed is not adapted to suit the conditions.

► Check the tread depth and the condition of the tire contact surface across the entire width of all tires on a regular basis.

MINIMUM TREAD DEPTH FOR

- summer tires: ⅛in (3 mm)
- M+S tires: ⅙in (4 mm)

► For safety reasons, replace the tires before the legally-prescribed limit for the minimum tread depth is reached.


► Replace the tires immediately if the legally-prescribed limit for the minimum tread depth is reached.

CARRY OUT THE FOLLOWING CHECKS ON ALL WHEELS REGULARLY, AT LEAST ONCE A MONTH OR AS REQUIRED, FOR EXAMPLE, PRIOR TO A LONG JOURNEY OR DRIVING OFF-ROAD:

- Check the tire pressure (⟶ page 602).

- Visually inspect wheels and tires for damage.
- Check the valve caps.
- Visual check of the tire tread depth and the tire contact surface across the entire width.

  The minimum tread depth for summer tires is ⅛ in (3 mm) and for winter tires ⅙ in (4 mm).

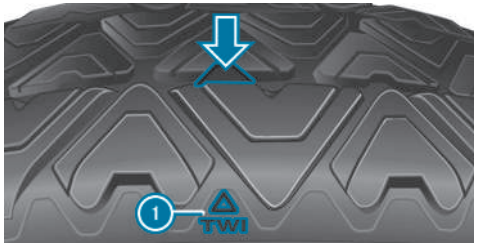

Six marks (1) show where the bar indicators (arrow) are integrated into the tire tread. They are visible once a tire tread depth of approximately 1/16 in (1.6 mm) has been reached.

Notes on snow chains

WARNING
Risk of accident due to incorrectly installed snow chains

If you have installed snow chains to the rear wheels, they may drag against the vehicle body or chassis components.

- ► Never install snow chains on the rear wheels.
- ► Only install snow chains on the front wheels in pairs.

NOTE
Damage to vehicle body or suspension components caused by installed snow chains

On 4MATIC vehicles, if you install snow chains on the rear wheels, you can damage vehicle body or suspension components.

- ► On 4MATIC vehicles, only install snow chains on the front wheels.

OBSERVE THE FOLLOWING NOTES WHEN USING SNOW CHAINS:

- Snow chains are only permissible for certain wheel/tire combinations. You can obtain information about this from an authorized Mercedes-Benz Center.
- For safety reasons, only use snow chains that have been specifically approved for your vehicle by Mercedes-Benz, or snow chains of the same quality standard.
- If snow chains are installed, the maximum permissible speed is 30 mph (50 km/h).
- **Vehicles with Active Parking Assist:** Do not use Active Parking Assist when snow chains are installed.

ⓘ You can deactivate ESP® to start off (→ page 327). This allows the wheels to spin, achieving increased tractive power.

Tire pressure

Notes on tire pressure

WARNING
Risk of an accident due to tire pressure that is too low or too high

TIRES WITH PRESSURE THAT IS TOO HIGH OR TOO LOW POSE THE FOLLOWING DANGERS:

- The tires can burst.
- The tires can wear excessively and/or unevenly.
- The driving characteristics as well as the steering- and braking may be greatly impaired.

► Observe the recommended tire pressure and check the tire pressure of all tires including the spare wheel:

- monthly
- when the load changes
- before leaving on a longer journey
- when the operating conditions change, e.g. off-road driving
- when driving at over 155 mph (250 km/h)

► Adjust the tire pressure if necessary.

HIGH OR LOW TIRE PRESSURE CAN:

- Shorten the service life of the tires.
- Cause increased tire damage.
- Adversely affect driving characteristics and thus driving safety, e.g. due to hydroplaning.

WARNING
Risk of accident due to too low a tire pressure

Tires with pressure that is too low can overheat and burst as a consequence.

In addition, they also suffer from irregular wear, which can significantly impair the braking properties and the handling characteristics.

► Avoid excessively low tire pressure.

LOW TIRE PRESSURE CAN CAUSE:

- Tire defects as a result of overheating
- Impaired handling characteristics
- Irregular wear
- Increased energy consumption

WARNING
Risk of accident due to too high a tire pressure

Tires with excessively high pressure can burst.

In addition, they also suffer from irregular wear, which can significantly impair the braking properties and the handling characteristics.

► Avoid excessively high tire pressures.

HIGH TIRE PRESSURE CAN CAUSE:

- Increased braking distance
- Impaired handling characteristics
- Irregular wear
- Impaired driving comfort
- Susceptibility to damage

WARNING
Risk of accident due to repeated pressure drop in the tires

The wheels, valves or tires could be damaged.

Too low a tire pressure can lead to the tires bursting.

► Examine the tires for foreign objects.

► Check whether the tire has a puncture or the valve has a leak.

► If you are unable to rectify the damage, contact a qualified specialist workshop.

YOU CAN FIND INFORMATION ON TIRE PRESSURE FOR THE VEHICLE'S FACTORY-INSTALLED TIRES ON THE FOLLOWING LABELS:

- Tire and Loading Information placard on the B-pillar of your vehicle (⟶ page 608).
- Tire pressure table on the inside of the socket flap (⟶ page 604).

Observe the maximum tire pressure (⟶ page 615).

Use a suitable pressure gauge to check the tire pressure. The outer appearance of a tire does not permit any reliable conclusion about the tire pressure.

ONLY CORRECT TIRE PRESSURE WHEN THE TIRES ARE COLD. CONDITIONS FOR COLD TIRES:

- The vehicle has been parked with the tires out of direct sunlight for at least three hours.
- The vehicle has traveled less than 1 mile (1.6 km).

The vehicle's tires heat up when driving. As the temperature of the tires increases, so too does the tire pressure.

Vehicles with a tire pressure monitoring system: You can also see the tire pressure in the driver display (⟶ page 606).

The tire pressure recommended for increased load/speed in the tire pressure table can affect the ride comfort.

WARNING
Risk of accident due to unsuitable accessories on tire valves


If you mount unsuitable accessories onto tire valves, the tire valves may be overloaded and malfunction, which can cause tire pressure loss.

- Only screw standard valve caps or valve caps specifically approved by Mercedes-Benz for your vehicle onto the tire valve.

Tire pressure table

The tire pressure table is on the inside of the socket flap.


The data shown in the illustrations are sample data.

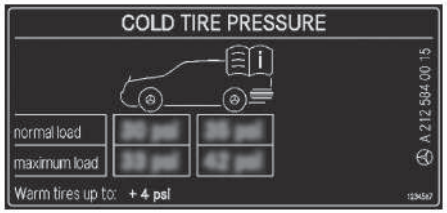

The tire pressure table shows the recommended tire pressure for all tires approved for this vehicle. The recommended tire pressures apply for cold tires under various operating conditions, i.e. load and/or speed of the vehicle.

If one or more tire sizes precede a tire pressure, the tire pressure shown is only valid for those tire sizes.

The load conditions "partially laden" and "fully laden" are defined in the table for different numbers of passengers and amounts of luggage. The actual number of seats may differ from this.

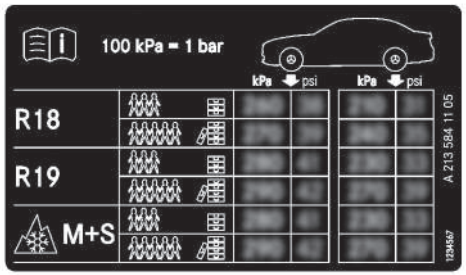

Some tire pressure tables only show the rim diameter instead of the complete tire size, e.g. **R18**. The rim diameter is part of the tire size and can be found on the tire side wall (⟶ page 615).

BE SURE TO ALSO OBSERVE THE FOLLOWING FURTHER RELATED TOPICS:

- Notes on tire pressure (⟶ page 602)
- Tire and load information table (⟶ page 608)
- Maximum tire pressure (⟶ page 615)

Checking the tire pressure manually

- Read the tire pressure recommended for the current operating conditions from the tire and loading information placard or the tire pressure table. Observe the notes on tire pressure.
- Remove the valve cap of the tire to be checked.

- Press the tire pressure gauge securely onto the valve.
- Read the tire pressure.
- If the tire pressure is lower than the recommended value, increase the tire pressure to the recommended value.
- If the tire pressure is higher than the recommended value, release air. To do so, press down the metal pin in the valve, e.g. using the tip of a pen. Then check the tire pressure again using the tire pressure gauge.
- Screw the valve cap onto the valve.

Tire pressure monitoring system

FUNCTION OF THE TIRE PRESSURE MONITORING SYSTEM

DANGER
Risk of accident due to incorrect tire pressure

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability. Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly.

►

The system checks the tire pressure and the temperature of the tires installed on the vehicle by means of a tire pressure sensor.

The tire pressure and the tire temperature are displayed on the driver display.

In the event of significant pressure loss or excessive temperature of the tires, you will be warned by display messages (⟶ page 755) or the (!) warning lamp on the driver display (⟶ page 769).

The tire pressure monitoring system serves solely as an aid. It is the driver's responsibility to set the tire pressure to the recommended cold tire pressure suitable for the operating situation.

In most cases, the tire pressure monitoring system will automatically update the new reference values after you have changed the tire pressure. You can, however, also update the reference values by restarting the tire pressure monitoring system manually (⟶ page 607).

SYSTEM LIMITS

THE SYSTEM MAY BE IMPAIRED OR INOPERATIVE IN THE FOLLOWING SITUATIONS IN PARTICULAR:

- Incorrect reference values were taught in.
- Sudden pressure loss caused, e.g. by a foreign object penetrating the tire.
- There is a malfunction caused by another radio signal source.

CHECKING THE TIRE PRESSURE WITH THE TIRE PRESSURE MONITORING SYSTEM

Requirements:

- The vehicle is switched on.

Driver display:

→ Home » Service

► Press OK to confirm.

ONE OF THE FOLLOWING MESSAGES APPEARS:

- Current tire pressure of each wheel:



- Tire pressure displayed after driving for a few minutes.: Current values are not yet known to the system. The pressure/temperature values of each tire are displayed as soon as they are known to the system.
- Tire Pressure Monitor Active: the teach-in process of the system is not yet complete. The tire pressures are already being monitored.

► Compare the current tire pressure with the recommended tire pressure for the current operating status (⟶ page 604). Additionally, observe the notes on cold tires (⟶ page 602).

The values displayed on the driver display may deviate from those of the tire pressure gage as they relate to sea level. At high elevations, the tire pressure value indicated by a pressure gage are higher than those shown on the driver display.

RESTARTING THE TIRE PRESSURE MONITORING SYSTEM

Requirements:

- The recommended tire pressure is correctly set for the respective operating condition on each of the four wheels (⟶ page 602).

RESTART THE TIRE PRESSURE MONITORING SYSTEM IN THE FOLLOWING SITUATIONS:

- The tire pressure has changed.
- The wheels or tires have been changed or newly installed.

Driver display:

Service

▶ Show tire pressure: press OK.

▶ Show options: press OK again.

▶ Select Tire Pressure and confirm with OK.

The driver display shows the message Use current pressures as new reference values?.

▶ Select Yes and confirm the restart with OK.

The driver display shows the message Tire Pressure Monitor Restarted.

Current warning messages are deleted and the yellow warning lamp goes out.

After you have driven for a few minutes, the system checks whether the current tire pressures are within the specified range. The current tire pressures are then accepted as reference values and monitored.

If the tire pressure values are not within the prescribed range, the message Please Correct Tire Pressure appears.

Loading the vehicle


Notes on the Tire and Loading Information placard

WARNING
Risk of accident from overloaded tires


Overloaded tires may overheat and burst as a consequence. Overloaded tires can also impair the steering and handling characteristics and lead to brake failure.

- Observe the load rating of the tires.
- The load rating must be at least half the permissible axle load of the vehicle.
- Never overload the tires by exceeding the maximum load.

The Tire and Loading Information placard is on the B-pillar on the driver's side of the vehicle.

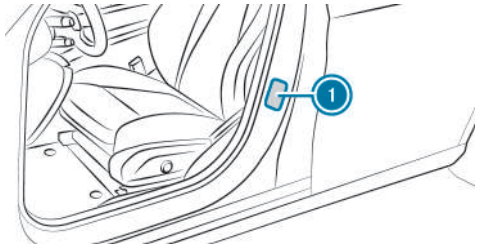

1 Tire and Loading Information placard

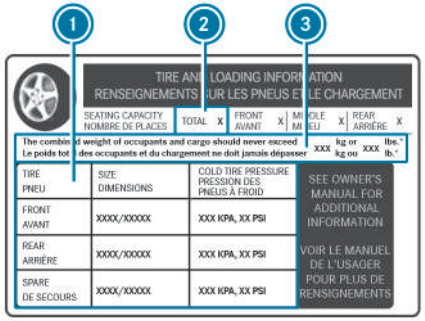

The data shown in the illustration are sample data.

THE TIRE AND LOADING INFORMATION PLACARD SHOWS THE FOLLOWING INFORMATION:

- Maximum number of seats (2) according to the maximum number of people permitted to travel in the vehicle.
- Maximum permissible load (3) comprises the gross weight of all vehicle occupants, luggage and additional load.
- Recommended tire pressure (1) for cold tires. The recommended tire pressures are valid for the maximum permissible load and up to the maximum permissible vehicle speed.

PLEASE ALSO NOTE:

- Information on permissible weights and loads on the vehicle identification plate (⟶ page 698).
- Information on the tire pressure in the tire pressure table (⟶ page 604).

Steps for determining the correct load limit

The following steps were developed according to the regulations of Title 49, Code of U.S. Federal Regulations, Part 575, which are binding on all manufacturers, and the National Traffic and Motor Vehicle Safety Act of 1966.

- (1): Locate the statement “The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs.” on your vehicle's placard.
- (2): Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- (3): Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
- **(4):** The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1400 lbs. and there will be five 150 lb passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1400 - 750 (5 x 150) = 650 lbs.)
- (5): Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
- (6): If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

ⓘ Not all vehicles are permitted to tow a trailer. Towing a trailer is only permitted if a trailer-hitch is installed. Please consult an authorized Mercedes-Benz dealer if you have any questions about towing a tralier with your vehicle.

Even if you have calculated the total load carefully, you should still make sure that the maximum permissible gross weight and the maximum gross axle weight rating of your vehicle are not exceeded. Details can be found on the vehicle identification plate.

- Have your loaded vehicle – including driver, occupants and load – weighed on a vehicle weighbridge.

  The measured values may not exceed the maximum permissible values stated on the vehicle identification plate.

Calculation example for determining the maximum payload

The following table shows examples of how to calculate total load capacities and payloads with varying seating configurations and different occupant numbers and weights. The following examples use a maximum payload of 1500 lbs (680 kg). **This is for illustration purposes only.** Make sure you are using the actual maximum payload for your vehicle as stated in the Tire and Loading Information table of your vehicle (→ page 608).

The higher the weight of all the occupants, the lower the maximum luggage load.

STEP 1

	Example 1	Example 2
Combined maximum weight of occupants and payload (data from the Tire and Loading Information table)	1500 lbs (680 kg)	1500 lbs (680 kg)

STEP 2


	Example 1	Example 2
Number of persons in the vehicle (driver and passengers)	5	1
Distribution of vehicle occupants	Front: 2 Rear: 3	Front: 1
Weight of vehicle occupants	Occupant 1: 150 lbs (68 kg) Occupant 2: 180 lbs (82 kg) Occupant 3: 160 lbs (73 kg) Occupant 4: 140 lbs (63 kg) Occupant 5: 120 lbs (54 kg)	Occupant 1: 200 lbs (91 kg)
Total weight of all vehicle occupants	750 lbs (340 kg)	200 lbs (91 kg)

STEP 3

	Example 1	Example 2
Permissible payload (maximum permissible gross vehicle weight from the Tire and Loading Information table minus the total weight of all occupants)	1500 lbs (680 kg) - 750 lbs (340 kg) = 750 lbs (340 kg)	1500 lbs (680 kg) - 200 lbs (91 kg) = 1300 lbs (589 kg)

Tire labeling

Overview of tire labeling

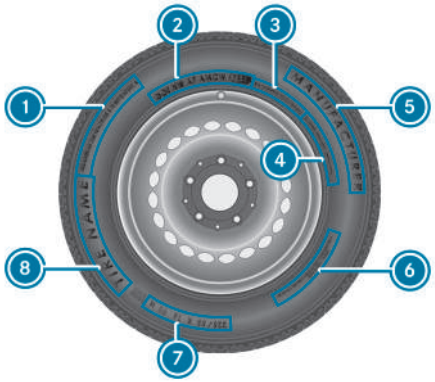


1. Uniform Tire Quality Grading Standards
2. DOT (Department of Transportation), (TIN) Tire Identification Number
3. Maximum tire load (⟶ page 614)
4. Maximum tire pressure (⟶ page 615)
5. Manufacturer
6. Tire characteristics (⟶ page 615)
7. Tire size designation, load-bearing capacity, speed rating and load index (⟶ page 615)
8. Tire name

ⓘ The data shown in the illustration is example data.

Tire quality grading

In accordance with the US Department of Transportation's "Uniform Tire Quality Grading Standards," tire manufacturers are required to grade their tires on the basis of the following three performance factors:

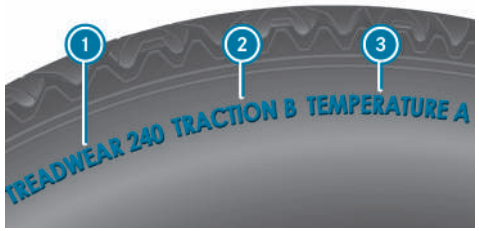

1. Tread wear grade
2. Traction grade
3. Temperature grade

ⓘ The data shown in the illustration is example data.

ⓘ The classification is not legally stipulated for Canada, but it is generally stated.

TREAD WEAR GRADE
The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test

course. For example, a tire graded 150 would wear one and one-half (1\1/2\) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

TRACTION GRADE

DANGER
Risk of accident due to inadequate traction

The traction grade assigned to this tire is based on straight-ahead braking traction tests.

- Always adapt your driving style and drive at a speed to suit the prevailing traffic and weather conditions.

NOTE
Damage to the drivetrain from wheelspin

- Avoid wheelspin.

The traction grades, from highest to lowest, are AA, A, B, and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

TEMPERATURE GRADE

WARNING
Risk of accident from tire overheating and tire failure


Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause excessive heat build-up and possible tire failure.

- Observe the recommended tire pressure.
- Regularly check the pressure of all the tires.
- Adjust the tire pressure, if necessary.

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

DOT, Tire Identification Number (TIN)

US tire regulations stipulate that every tire manufacturer or retreader must imprint a TIN in or on the side wall of each tire produced.

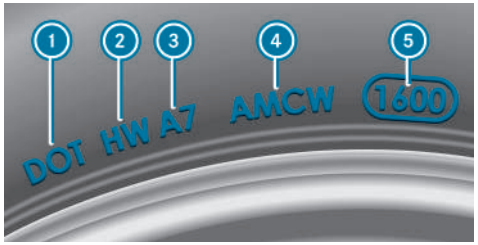

The data in the illustration is shown as an example.

THE TIN IS A UNIQUE IDENTIFICATION NUMBER TO IDENTIFY TIRES, AND COMPRISES THE FOLLOWING:

- **DOT (Department of Transportation):** tire marking (1) indicating that the tire complies with the requirements of the US Department of Transportation.
- **Manufacturer identification code:** the manufacturer identification code (2) contains details of the tire manufacturer. New tires have a code with two symbols. Retreaded tires have a code with four symbols. Further information on retreaded tires (→ page 621).
- **Tire size:** the marking (3) states the tire size.
- **Tire type code:** the tire type code (4) can be used by the manufacturer as a code to describe specific characteristics of the tire.
- **Manufacturing date:** the manufacturing date (5) provides information about the age of a tire. The 1st and 2nd digits represent the calendar week and the 3rd and 4th digits state the year of manufacture (e.g. "3208" represents the 32nd week of 2008).

Information on the maximum tire load

WARNING
Risk of accident from overloaded tires

Overloaded tires may overheat and burst as a consequence. Overloaded tires can also impair the steering and handling characteristics and lead to brake failure.

- ► Observe the load rating of the tires.
- ► The load rating must be at least half the permissible axle load of the vehicle.
- ► Never overload the tires by exceeding the maximum load.




The data in the illustration is shown as an example.

Maximum tire load (1) is the maximum permissible weight for which the tire is approved.

Do not overload the tires by exceeding the maximum permissible load limit. The maximum permissible load can be found on the vehicle's Tire and Loading Information table on the B-pillar on the driver's side (→ page 608).


Information on maximum tire pressure

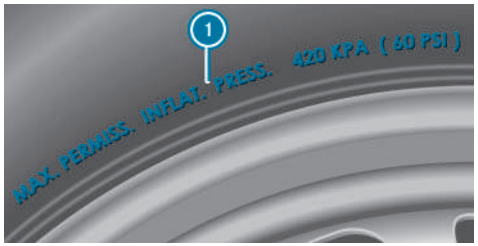

ⓘ The data in the illustration is shown as an example.

Do not exceed the maximum tire pressure (1) permitted for the tire. Always observe the recommended tire pressure for your vehicle when adjusting the tire pressure (⟶ page 604).

Information on tire composition

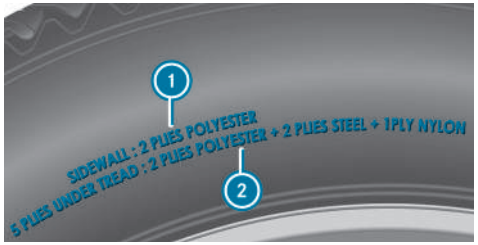

ⓘ The data in the illustration is shown as an example.


It describes the type of tire cord and the number of layers in the side wall (1) and under the tire tread (2).

Tire size, load-bearing capacity, speed rating and load index

WARNING
Risk of injury through exceeding the specified tire load-bearing capacity or the permissible speed rating

Exceeding the specified tire load rating or the permissible speed rating may lead to tire damage and to the tires bursting.

- ► Therefore, only use tire types and sizes approved for your vehicle model.
- ► Observe the tire load rating and speed rating required for your vehicle.

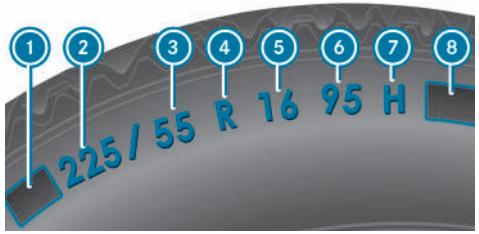

(1) Preceding letter
(2) Nominal tire width in millimeters
(3) Aspect ratio in %
(4) Tire code
(5) Rim diameter
(6) Load-bearing index
(7) Speed rating
(8) Load index

The data in the illustration is shown as an example.

Information about interpreting tire data can be obtained from any qualified specialist workshop.

PRECEDING LETTER (1):

- None: passenger car tires according to European manufacturing standards.
- "P": passenger car tires according to US manufacturing standards.
- "LT": light truck tires according to US manufacturing standards.
- "T": compact emergency spare wheels with high tire pressure that are only designed for temporary use in an emergency.

ASPECT RATIO (3):

Ratio between tire height and tire width in percent (tire height divided by tire width).

TIRE CODE (4) (TIRE TYPE):

- "R" radial tire
- "D": bias ply tire
- "B": bias radial tire
- "ZR": radial tire with a maximum permissible speed above 149 mph (240 km/h) (optional)

RIM DIAMETER (5):

The diameter of the bead seat (not the diameter of the rim flange). The rim diameter is specified in inches (in).

LOAD-BEARING INDEX (6):

Numerical code that specifies the maximum load-bearing capacity of a tire (e.g. "91" corresponds to 1356 lbs (615 kg)).

The load-bearing capacity of the tire must be at least half the gross axle weight rating of your vehicle. Do not overload the tires by exceeding the maximum permissible payload.

SEE ALSO:

- Maximum permissible payload in the Tire and Loading Information table (⟶ page 608)
- Maximum tire load (⟶ page 614)
- Load index

SPEED RATING (7):

Specifies the maximum permissible speed of the tire.

An electronic speed limiter prevents your vehicle from exceeding a speed of 130 mph (210 km/h).

Make sure that your tires have the required speed rating. You can obtain information on the required speed rating from a Mercedes-Benz service center.

SUMMER TIRES

Index	Speed rating
Q	up to 100 mph (160 km/h)
R	up to 106 mph (170 km/h)
S	up to 112 mph (180 km/h)
T	up to 118 mph (190 km/h)
H	up to 130 mph (210 km/h)
V	up to 149 mph (240 km/h)

Index	Speed rating
W	up to 168 mph (270 km/h)
Y	up to 186 mph (300 km/h)
ZR...Y[1]	up to 186 mph (300 km/h)
ZR...(..Y) [1]	over 186 mph (300 km/h)
ZR [1]	over 149 mph (240 km/h)

- Specifying the speed rating as the "ZR" index in the tire code (4) is optional for tires up to 186 mph (300 km/h).
- If your tire code (4) includes "ZR" and there is no speed rating (7), find out the maximum permissible speed from the tire manufacturer.
- If the load-bearing index (6) and speed rating (7) are in brackets, the maximum permissible speed of your tire is above 186 mph (300 km/h). To find out the maximum permissible speed, ask the tire manufacturer.

ALL-WEATHER TIRES AND WINTER TIRES

Index	Speed rating
Q M+S[2]	up to 100 mph (160 km/h)
T M+S[2]	up to 118 mph (190 km/h)
H M+S[2]	up to 130 mph (210 km/h)
V M+S[2]	up to 149 mph (240 km/h)

Winter tires bear the snowflake symbol and fulfill the requirements of the Rubber Manufacturers Association (RMA) and the Rubber Association of Canada (RAC) regarding the tire traction on snow.

LOAD INDEX (8):

- No specification given: standard load (SL) tire
- "XL" or "Extra Load": extra load tire or reinforced tire
- "Light Load": light load tire
- "C", "D", "E": a load range that depends on the maximum load the tire can carry at a certain pressure.

1 "ZR" stated in the tire code.
2 Or "M+S " for winter tires.

Definitions for tires and loading

Tire structure and characteristics: describes the number of layers or the number of rubber-coated belts in the tire contact surface and the tire wall. These are made of steel, nylon, polyester and other materials.

Bar: metric unit for tire pressure. 14.5038 pounds per square inch (psi) and 100 kilopascals (kPa) is the equivalent of one bar.

DOT (Department of Transportation): DOT-marked tires fulfill the requirements of the US Department of Transportation.

Average weight of the vehicle occupants: the number of vehicle occupants for which the vehicle is designed, multiplied by 150 lb (68 kg).

Uniform tire Quality Grading Standards: a uniform standard to grade the quality of tires with regard to tread quality, tire traction and temperature characteristics. The quality grading assessment is made by the manufacturer following specifications from the U.S. government. The quality grade of a tire is imprinted on the side wall of the tire.

Recommended tire pressure: the recommended tire pressure is the tire pressure specified for the tires mounted to the vehicle at the factory.

The tire and information table contains the recommended tire pressure for cold tires, the maximum permissible load and the maximum permissible vehicle speed.

The tire pressure table contains the recommended tire pressure for cold tires under various operating conditions, i.e. loading and/or speed of the vehicle.

Increased vehicle weight due to optional equipment: the combined weight of all standard and optional equipment available for the vehicle, regardless of whether it is actually installed on the vehicle or not.

Rim: the part of the wheel on which the tire is installed.

GAWR (Gross Axle Weight Rating): the GAWR is the maximum gross axle weight rating. The actual load on an axle must never exceed the gross axle weight rating. The gross axle weight rating can be found on the vehicle identification plate on the B-pillar on the driver's side.

Speed rating: the speed rating is part of the tire identification. It specifies the speed range for which a tire is approved.

GVW (Gross Vehicle Weight): the gross vehicle weight comprises the weight of the vehicle including fuel, tools, the spare wheel, accessories installed, vehicle occupants, luggage and the trailer drawbar noseweight, if applicable. The gross vehicle weight must not exceed the gross vehicle weight rating GVWR as specified on the vehicle identification plate on the B-pillar on the driver's side.

GVWR (Gross Vehicle Weight Rating): the GVWR is the maximum permitted gross weight of the fully laden vehicle (weight of the vehicle including all accessories, vehicle occupants, fuel, luggage and the trailer drawbar noseweight if applicable). The gross vehicle weight rating is specified on the vehicle identification plate on the B-pillar on the driver's side.

Maximum weight of the laden vehicle: the maximum weight is the sum of the curb weight of the vehicle, the weight of the accessories, the maximum load and the weight of optional equipment installed at the factory.

Kilopascal (kPa): metric unit for tire pressure. 6.9 kPa corresponds to 1 psi. Another unit for tire pressure is bar. 100 kilopascals (kPa) equals 1 bar.

Load index: in addition to the load-bearing index, the load index may also be imprinted on the side wall of the tire. This specifies the load-bearing capacity of the tire more precisely.

Tread: that portion of a tire that comes into contact with the road.

Treadwear indicators (TWI): the projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread.

Curb weight: the weight of a vehicle with standard equipment including the maximum capacity of fuel, oil and coolant. It also includes the air conditioning system and optional equipment if these are installed on the vehicle, but does not include passengers or luggage.

Maximum tire load: the maximum tire load is the maximum permissible weight in kilograms or lbs for which a tire is approved.

Maximum permissible tire pressure: the maximum cold inflation pressure to which a tire may be inflated.

Maximum load on one tire: maximum load on one tire. This is calculated by dividing the maximum axle load of one axle by two.

Maximum loaded vehicle weight: the sum of (a) Curb weight; (b) Accessory weight; (c) Vehicle capacity weight; and (d) Production options weight.

PSI (pounds per square inch): standard unit of measurement for tire pressure.

Aspect ratio: ratio between tire height and tire width in percent.

Tire pressure: pressure inside the tire applying an outward force to every square inch of the tire. The tire pressure is specified in pounds per square inch (psi), in kilopascals (kPa) or in bar. The tire pressure should only be corrected when the tires are cold.

Cold tire pressure: the tires are cold when the vehicle has been parked for at least three hours without direct sunlight on the tires or the vehicle has been driven for less than 1 mile (1.6 km).

Tire contact surface: the part of the tire that comes into contact with the road.

Tire bead: the purpose of the tire bead is to ensure that the tire sits securely on the wheel rim. There are several wire cores in the tire bead to prevent the tire from changing length on the wheel rim.

Side wall: the part of the tire between the tread and the tire bead.

Production options weight: the combined weight of those installed regular production options weighing over 5 lbs (2,3 kg) in excess of those standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim.

TIN (Tire Identification Number): a unique identification number which can be used by a tire manufacturer to identify tires, for example, in a product recall, and thus identify the purchasers. The TIN is made up of the manufacturer's identity code, tire size, tire type code and the manufacturing date.

Load rating: the maximum load that a tire is rated to carry for a given inflation pressure.

Load-bearing index: the load-bearing index is a code that contains the maximum load-bearing capacity of a tire.

Traction: traction is the grip resulting from friction between the tires and the road surface.

Wear indicator: narrow bars (tread wear bars) that are distributed over the tire contact surface. If the tire tread is level with the bars, the wear limit of 1/16 in (1.6 mm) has been reached.

Distribution of vehicle occupants: distribution of vehicle occupants over designated seat positions in a vehicle.

Snow tire: a tire that attains a traction index equal to or greater than 112, compared to the ASTM F2493 standard reference test tire when using the snow traction test on the medium pack snow surface as described in ASTM F1805-20, and that is marked with an Alpine Symbol on at least one sidewall.

Accessory weight: the combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio, and heater, to the extent that these items are available as factory-installed equipment (whether installed or not).

Maximum permissible payload weight: nominal load and luggage load plus 150 lb (68 kg) multiplied by the number of seats in the vehicle.

Changing a wheel

Notes on selecting, installing and replacing tires

WARNING
Risk of accident due to incorrect wheel and tire dimensions

If wheels and tires of the wrong size are installed, the service brakes or components in the brake system and in the wheel suspension may be damaged.

- ► Always replace wheels and tires with ones that fulfill the specifications of the original part.

FOR WHEELS, PAY ATTENTION TO THE FOLLOWING:

- Designation
- Type

FOR TIRES, PAY ATTENTION TO THE FOLLOWING:

- Designation
- Manufacturer
- Type

WARNING
Risk of injury through exceeding the specified tire load-bearing capacity or the permissible speed rating

Exceeding the specified tire load rating or the permissible speed rating may lead to tire damage and to the tires bursting.

- ► Therefore, only use tire types and sizes approved for your vehicle model.
- ► Observe the tire load rating and speed rating required for your vehicle.

NOTE
Vehicle and tire damage caused by non-approved tire types and sizes

For safety reasons, only use tires, wheels and accessories which have been specially approved by Mercedes-Benz for your vehicle.

THESE TIRES ARE SPECIFICALLY CONFIGURED FOR ACTIVE SAFETY SYSTEMS, E.G. ABS, ESP® AND 4MATIC, AND ARE MARKED AS FOLLOWS:

- MO = Mercedes-Benz Original
- MOE = Mercedes-Benz Original Extended (tires with run-flat characteristics, only for certain wheels)
- MO1 = Mercedes-Benz Original (only certain AMG tires)

Otherwise certain properties, e.g. driving characteristics, noise emissions, consumption, etc., could be adversely affected. Furthermore, other tire sizes could result in the tires rubbing against the body and axle components when loaded. This could result in damage to the tire or the vehicle.

Only use tires, wheels and accessories that have been checked and recommended by Mercedes-Benz.

NOTE
Risk to driving safety from retreaded tires

Retreaded tires are neither tested nor recommended by Mercedes-Benz, since previous damage cannot always be detected on retreaded tires.

For this reason driving safety cannot be guaranteed.

► Do not use used tires if you have no information about their previous usage.

NOTE
Possible wheel and tire damage when driving over obstacles

Large wheels have a smaller section width. As the section width decreases, the risk of wheels and tires being damaged when driving over obstacles increases.

► Avoid obstacles or drive especially carefully.

► Reduce your speed when driving over curbs, speed bumps, manhole covers and potholes.

► Avoid particularly high curbs.

NOTE
Possible wheel and tire damage when parking on curbs or in potholes

Parking on curbs or in potholes can damage the wheels and tires.

- ► Only park on as level a surface as possible.
- ► Avoid curbs and potholes when parking.

NOTE
Damage to electronic components caused by the use of tire-installing tools

Vehicles with tire pressure monitoring system: there are electronic components in the wheel.

Positioning tire-installing tools in the area of the valve may damage the electronic components.

- ► Tire-installing tools should not be positioned in the area of the valve.
- ► Always have tires changed at a qualified specialist workshop.

NOTE
Damage to summer tires at low ambient temperatures

At low ambient temperatures, tears could form when driving with summer tires, causing permanent damage to the tires.

- ► At temperatures below 45 °F (7 °C) use M+S tires.

Accessory parts which are not approved for your vehicle by Mercedes-Benz, or which are not used correctly, can impair driving safety.

BEFORE PURCHASING AND USING NON-APPROVED ACCESSORIES, VISIT A QUALIFIED SPECIALIST WORKSHOP AND INQUIRE ABOUT:

- Suitability
- Legal provisions
- Factory recommendations

WARNING
Risk of accidents with sports tires

The special tire tread in combination with the optimized tire compound means that the risk of skidding or hydroplaning on wet roads is increased.

In addition, the tire grip is greatly reduced at a low outside temperature and tire running temperature.

- ► Switch on ESP® and adapt your driving style accordingly.
- ► Use M+S tires at outside temperatures of less than 45°F (7°C).
- ► Only use tires suitable for the intended use.

OBSERVE THE FOLLOWING WHEN SELECTING, INSTALLING AND REPLACING TIRES:

- The use of certain tire types in certain regions and areas of operation can be advisable.

- Only use tires and wheels of the same type (summer tires, winter tires, MOExtended tires) and the same make.
- Only install wheels of the same size on one axle (left and right).

  Only install a different size of wheel in the event of a flat tire, to enable you to drive to a specialist workshop.
- **Vehicles with a tire pressure monitoring system:** All installed wheels must be equipped with functioning sensors for the tire pressure monitoring system.
- At temperatures below 45 °F (7 °C), use winter tires or all-season tires marked M+S on all wheels.

  Winter tires provide the best possible grip in wintry road conditions.
- For M+S tires, only use tires with the same tread.
- Observe the maximum permissible speed for the M+S tires installed.

  If the tire's maximum speed is below that of the vehicle, this must be indicated by an appropriate label in the driver's field of vision.
- Drive the vehicle with new tires at moderate speeds for the first 60 miles (100 km).
- Replace the tires after six years at the latest, regardless of wear.
- **When replacing with tires that do not feature run-flat characteristics:** vehicles with MOExtended tires are not supplied with a TIREFIT kit ex factory. Equip the vehicle with a TIREFIT kit after replacing with tires that do not feature run-flat characteristics, e.g. winter tires.

For more information on wheels and tires, contact a qualified specialist workshop.

Notes on changing wheels

WARNING
Risk of injury through different wheel sizes

Rotating the front and rear wheels can severely impair the driving characteristics.

The wheel brakes or suspension components may also be damaged.

► Rotate front and rear wheels only if the wheels and tires are of the same dimensions.

Observe the instructions and safety notes on "Changing a wheel" (⟶ page 621).

THE WEAR PATTERNS ON THE FRONT AND REAR WHEELS DIFFER:

- front wheels wear more on the tire shoulder
- rear wheels have more wear in the center of the tire

Do not drive with tires that have too little tread depth. This significantly reduces traction on wet roads (hydroplaning).

On vehicles that have the same size front and rear wheels, switch the wheels according to the intervals in the tire manufacturer's warranty booklet in your vehicle documents. If this is not available, switch the tires every 3,000 to 6,000 miles (5,000 to 10,000 km), depending on the wear. Ensure the original rotational direction of the wheels.

Notes on storing wheels

WHEN STORING WHEELS, OBSERVE THE FOLLOWING NOTES:

- After removing wheels, store them in a cool, dry and preferably dark place.
- Protect the tires from contact with oil, grease or fuel.

Overview of the tire-change tool kit


With the exception of some country-specific variants, vehicles are not equipped with a tire-change tool kit. For more information on which tire-changing tools are required and approved for performing a wheel change on your vehicle, consult a qualified specialist workshop.

YOU REQUIRE THE FOLLOWING TOOLS, FOR EXAMPLE, TO CHANGE A WHEEL:


- Jack
- Chock
- Wheel wrench
- Centering pin

The tire-change tool kit is located in the tool bag (1) in the load compartment.

When stowing the tool bag, ensure that it is adequately secured.

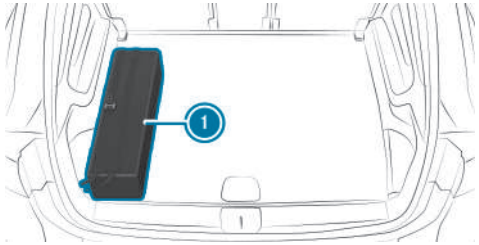

Vehicles with two seat rows

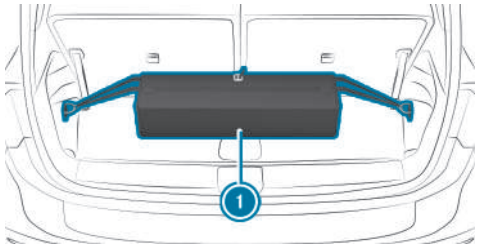

Vehicles with three seat rows

THE TOOL BAG CONTAINS:

- Jack
- Gloves
- Wheel wrench
- Centering pin
- Folding chock
- Ratchet wrench for jack

Preparing the vehicle for a wheel change

Requirements:

- The vehicle is not on a slope.

- The vehicle is on solid, non-slippery and level ground.
- The required tire-change tool kit is available.

ⓘ If your vehicle is not equipped with the tire-change tool kit, consult a qualified specialist workshop to find out about suitable tools.

- ▶ Apply the electric parking brake manually.
- ▶ Move the front wheels to the straight-ahead position.
- ▶ Shift the transmission to position P.
- ▶ Switch off the vehicle.
- ▶ Make sure that the vehicle cannot be started.
- ▶ Place wedges or other suitable items under the front and rear of the wheel that is diagonally opposite the wheel you wish to change.
- ▶ Unload the vehicle.


Raising the vehicle for a wheel change

Requirements:

- There are no persons in the vehicle.
- The vehicle has been prepared for a wheel change (⟶ page 625).


IMPORTANT NOTES ON USING THE JACK:

- Use only a vehicle-specific jack that has been approved for Mercedes-Benz to raise the vehicle.
- The jack is only designed for raising and holding the vehicle for a short time while a wheel is being changed and not for maintenance work under the vehicle.
- The jack must be placed on a firm, level and non-slip surface. If necessary, use a large, flat, load-bearing, non-slip underlay.
- The foot of the jack must be positioned vertically under the jack support point.

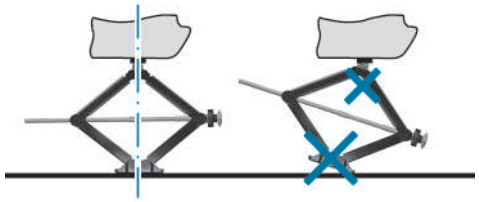


RULES OF CONDUCT WHEN THE VEHICLE IS RAISED:

- Do not put your hands or feet under the vehicle.
- Do not lie under the vehicle.
- Do not start the vehicle and do not release the electric parking brake.
- Do not open or close any doors or the tailgate.

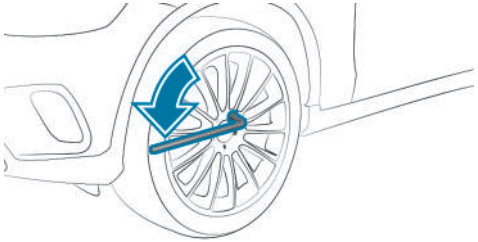

- Using the wheel wrench, loosen the wheel bolts on the wheel you wish to change by about one full turn. Do not unscrew the screws completely.

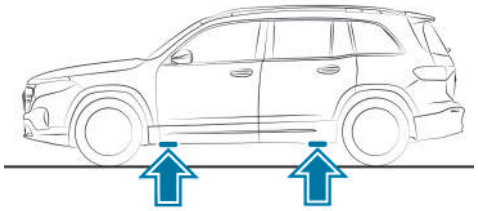

Position of the jack support points

WARNING
Risk of injury from incorrect positioning of the jack

If you do not position the jack correctly at the appropriate jacking point of the vehicle, the jack could tip with the vehicle raised.

- Only position the jack at the appropriate jacking point of the vehicle. The base of the jack must be positioned vertically under the jacking point of the vehicle.

NOTE
Damage to the vehicle due to using an unsuitable jack

If a jack is used which was not designed for the vehicle's jack support points, the vehicle and especially the high-voltage battery may suffer damage.


- Only use jacks that are specifically designed for the jack support points, or use a suitable adapter.

NOTE
Risk of damage to the vehicle due to incorrect positioning of the jack

If the vehicle jack has not been positioned at the prescribed jack support points, the vehicle and especially the high-voltage battery may suffer damage.

- Only position the jack at the designated jack support points.

- Take the ratchet wrench out of the tire-change tool kit and place it on the hexagon nut of the jack in such a way that the lettering "AUF" is visible.

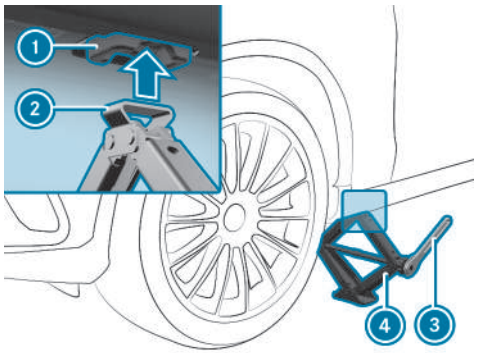

- ► Position support plate (2) of jack (4) in line with jack support point (1).
- ► Turn ratchet wrench (3) clockwise until support (2) sits completely on jack support point (1) and the base of the jack lies evenly on the ground.
- ► Turn ratchet wrench (3) until the tire is raised a maximum of 1.2 in (3 cm) from the ground.
- ► Loosen and remove the wheel (⟶ page 628).

Removing a wheel

Requirements:


- The vehicle is raised (⟶ page 626).

During wheel change, avoid applying any force to the brake discs, since this could impair the level of comfort when braking.

NOTE
Damage to threading from dirt on wheel bolts

- ► Do not place wheel bolts in sand or on a dirty surface.

- ► Unscrew the uppermost wheel bolt completely.

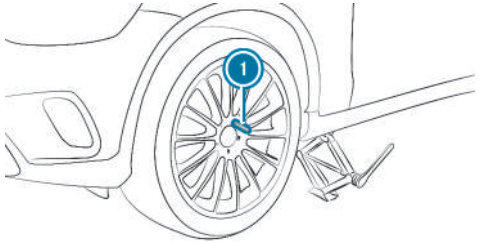

- ► Screw alignment bolt (1) into the thread instead of the wheel bolt.
- ► Unscrew the remaining wheel bolts completely.
- ► Remove the wheel.

Installing a new wheel

Requirements:

- The wheel to be changed is removed and the alignment bolt is screwed in (⟶ page 628).

WARNING
Risk of accident from losing a wheel

Oiled, greased or damaged wheel bolt/wheel nut threads or wheel hub/wheel mounting bolt threads can cause the wheel bolts/wheel nuts to come loose.

- Never oil or grease the threads.
- In the event of damage to the threads, contact a qualified specialist workshop immediately.
- Have the damaged wheel bolts or damaged hub threads replaced.
- Do not continue driving.

- Observe the information on the choice of tires (⟶ page 621).

For tires with a specified running direction, an arrow on the side wall of the tire indicates the correct running direction. Observe the direction of rotation when assembling.

NOTE
Damage to the wheels' plastic elements when changing a wheel

Plastic elements on wheels may be damaged when removing and repositioning the wheel.

- Do not raise the wheels by the plastic elements when removing and repositioning.

- Slide the wheel to be mounted onto the alignment bolt and push it on.

WARNING
Risk of injury from tightening wheel bolts and nuts

If you tighten the wheel bolts or wheel nuts when the vehicle is raised, the jack could tip.

- Only tighten wheel bolts or wheel nuts when the vehicle is on the ground.


- Observe the instructions and safety notes on "Wheel change" (⟶ page 621).
- For safety reasons, only use wheel bolts which have been approved for Mercedes-Benz and for the wheel in question.

NOTE
Paintwork damage to the rim when tightening the first wheel bolt

If the wheel is too loose when tightening the first wheel bolt, there is a risk of damaging the paint finish on the rim.

- When tightening the first wheel bolt, be sure to hold the wheel sufficiently firmly against the wheel hub.

- Tighten the wheel bolts evenly in a diagonal pattern in the order indicated until they are hand-tight.

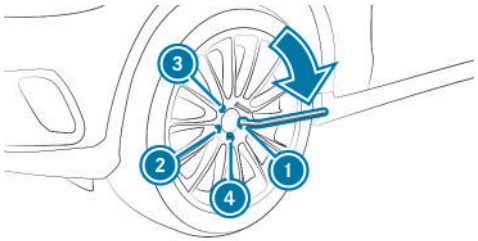


- Unscrew and remove the alignment bolt.
- Tighten the last wheel bolt until it is hand-tight.
- Lower the vehicle and tighten wheel bolts with the prescribed tightening torque (⟶ page 630).

Lowering the vehicle after a wheel change

Requirements:

- The new wheel has been installed (⟶ page 628).

- **To lower the vehicle:** place the ratchet wrench onto the hexagon nut of the jack in such a way that the lettering "AB" is visible and turn it counter-clockwise.

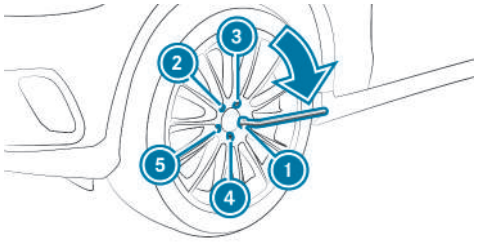

- Tighten the wheel bolts evenly in a diagonal pattern in the order indicated (1) to (5) with an initial maximum force of 59 lb-ft (80 Nm).
- Tighten the wheel bolts evenly in a diagonal pattern in the indicated order (1) to (5) with the specified tightening torque of 111 lb-ft (150 Nm).

WARNING
Risk of accident due to incorrect tightening torque

The wheels could come loose if the wheel bolts or wheel nuts are not tightened to the prescribed torque.

- Ensure that the wheel bolts or wheel nuts are tightened to the prescribed tightening torque.
- If you are not sure, do not move the vehicle. Contact a qualified specialist workshop and have the tightening torque checked immediately.

- Check the tire pressure of the newly installed wheel and adjust it if necessary.

The following does not apply if the new wheel is an emergency spare wheel:

- **Vehicles with a tire pressure monitoring system:** Restart the tire pressure monitoring system (⟶ page 607).

Emergency spare wheel

Notes on the emergency spare wheel

WARNING
Risk of accident caused by incorrect wheel and tire dimensions

The wheel or tire sizes and the tire type of the emergency spare wheel or spare wheel and the wheel to be replaced may differ. The emergency spare wheel or spare wheel can significantly impair driving characteristics of the vehicle.

To prevent hazardous situations:

- ► Drive carefully.
- ► Never install more than one emergency spare wheel or spare wheel that differs in size.
- ► Only use an emergency spare wheel or spare wheel briefly.
- ► Do not deactivate ESP®.
- ► Have the emergency spare wheel or spare wheel of a different size replaced at the nearest qualified specialist workshop. The new wheel must have the correct dimensions.

NOTES ON INSTALLING AN EMERGENCY SPARE WHEEL:

- The maximum permissible speed with an emergency spare wheel installed is 50 mph (80 km/h).
- Do not install snow chains on the emergency spare wheel.
- Replace the emergency spare wheel after six years at the latest, regardless of wear.
- Use the included wheel bolts for the emergency spare wheel.
- Check the tire pressure of the installed emergency spare wheel and adjust it as necessary.

ⓘ The specified tire pressure is indicated on the label of the emergency spare wheel.

ⓘ **Vehicles with tire pressure monitoring system:** if an emergency spare wheel is installed, the tire pressure monitoring system cannot function reliably. For a few minutes after an emergency spare wheel is installed, the system may still display the tire pressure of the removed wheel. Only restart the system when the emergency spare wheel has been replaced with a new wheel.

ALSO TAKE NOTE OF THE FOLLOWING TOPICS:

- Notes on tire pressure (⟶ page 602)
- Tire and Load Information placard (⟶ page 608)
- Tire pressure table (⟶ page 604)
- Notes on installing tires (⟶ page 621)
- Installing an emergency spare wheel (⟶ page 625)

Technical data

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Notes on technical data
Vehicle electronics
Radio regulations
Overview of vehicle identification plate, VIN and engine number
Operating fluids
Vehicle data

Notes on technical data

The data stated applies only to vehicles with standard equipment. You can obtain further information from a Mercedes-Benz Service Center.

Vehicle electronics

Two-way radios

NOTES ON INSTALLING TWO-WAY RADIOS

WARNING
Risk of accident due to improper work on two-way radios

If two-way radios are manipulated or retrofitted incorrectly, the electromagnetic radiation from the two-way radios can interfere with the vehicle electronics and jeopardize the operating safety of the vehicle.

► You should have all work on electrical and electronic components carried out at a qualified specialist workshop.

WARNING
Risk of accident due to improper operation of two-way radios

If you use two-way radios in the vehicle improperly, their electromagnetic radiation can disrupt the vehicle's electronics. This is the case in the following situations, in particular:

- The two-way radio is not connected to an exterior antenna.
- The exterior antenna is installed incorrectly or is not a low-reflection antenna.

This could jeopardize the operating safety of the vehicle.


► Have the low-reflection exterior antenna installed at a qualified specialist workshop.

► When operating two-way radios in the vehicle, always connect them to the low-reflection exterior antenna.

NOTE
Invalidation of the operating permit due to failure to comply with the instructions for installation and use

The operating permit may be invalidated if the instructions for installation and use of two-way radios are not observed.

- ► Only use approved frequency bands.
- ► Observe the maximum permissible output power in these frequency bands.
- ► Only use approved antenna positions.

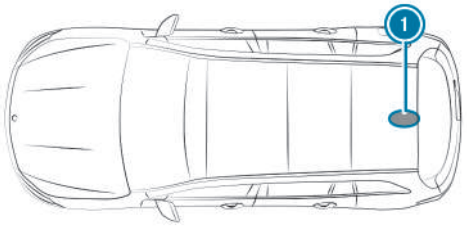

(1) Rear roof area

Installing a roof antenna on a vehicle with a panorama roof with power tilt/sliding panel is not permitted.

Use Technical Specification ISO/TS 21609 (Road Vehicles – "EMCs for installation of aftermarket radio frequency transmitting equipment") when retrofitting two-way radios. Comply with the legal requirements for detachable parts.

If your vehicle is equipped with the pre-installation for a two-way radio, use the power supply and antenna connectors provided in the pre-installation. Observe the manufacturer's supplements when installing.

MOBILE PHONE TRANSMISSION OUTPUT

The maximum transmission output (PEAK) at the base of the antenna must not exceed the values in the following table.

FREQUENCY BAND AND MAXIMUM TRANSMISSION OUTPUT

Frequency band	Maximum transmission output
2-m- frequency band 144 - 174 MHz	50 W
Terrestrial Trunked Radio (TETRA) 380 - 460 MHz	10 W
Mobile phone 2G	2 W
Mobile phone 3G/4G/5G	0.5 W

THE FOLLOWING CAN BE USED IN THE VEHICLE WITHOUT RESTRICTIONS:

- two-way radios with a maximum transmission output of up to 100 mW
- two-way radios with transmitter frequencies in the 380 -410 MHz frequency band and a maximum transmission output of up to 2 W (TETRA)
- mobile phones (2G/3G/4G/5G)

THERE ARE NO RESTRICTIONS REGARDING THE POSITIONING OF THE ANTENNA ON THE OUTSIDE OF THE VEHICLE FOR THE FOLLOWING FREQUENCY BANDS:

- Terrestrial Trunked Radio (TETRA)

- 2G/3G/4G/5G

Radio regulations

Regulatory radio identifiers/specific notes

The tables and sections contain the following regulatory radio information:

- Manufacturer information
- Required regulatory radio identifiers, listed by country/region:
  - Manufacturer's specifications
  - Model designations
  - Radio equipment approval numbers
- Specific information on radio-based vehicle components

Further information and updates are available at the following website:

https://regulatoryradioinformation.corpinter.net/us

OVERVIEW OF MANUFACTURERS

Manufacturer	Manufacturer information
Continental ADC	Continental ADC Automotive Distance Control Systems GmbH, Peter-Dornier-Straße 10, 88131 Lindau, Germany
Bosch	Robert Bosch GmbH, Daimlerstraße 6, 71229 Leonberg, Germany
Bury	BURY SP. Z O.O., UL. WOJSKA POLSKIEGO 4, 39-300 Mielec, Poland
Continental Antenna	Continental Advanced Antenna GmbH, Römerring 1, 31137 Hildesheim, Germany
Continental Automotive	Continental Automotive GmbH, Siemensstraße 12, 93055 Regensburg, Germany
Continental Automotive France	Continental Automotive France SAS, 1 Avenue Paul Ourliac, 31100 Toulouse 1, France
Continental Automotive Hungary	Continental Automotive Hungary Kft., H-1106 Budapest, Napmátka u. 6., Hungary
Continental Automotive Technologies	Continental Automotive Technologies GmbH, VDO-Straße 1, 64832 Babenhausen, Germany
Gentex	Gentex Corporation, 600 North Centennial Street, Zeeland MI 49464, USA
Harman Becker	Harman Becker Automotive Systems GmbH, Becker-Goehring-Straße 18, 76307 Karlsbad, Germany
HELLA	HELLA KGaA Hueck & Co., Rixbecker Straße 75, 59552 Lippstadt, Germany
Hirschmann	Hirschmann Car Communication GmbH, Stuttgarter Straße 45-51, 72654 Neckartenzlingen, Germany

Manufacturer	Manufacturer information
Huf Baolong	Huf Baolong Electronics Bretten GmbH, Gewerbestraße 40, 75015 Bretten, Germany
HUF	HUF Hülsbeck & Fürst GmbH & Co. KG, Steeger Straße 17, 42551 Velbert, Germany
MARQUARDT	MARQUARDT GmbH, Schloßstraße 16, 78604 Rietheim-Weilheim, Germany
Meta System	Meta System S.P.A., Via T. Galimberti 5, 42124 Reggio Emilia, Italy
Molex	Molex CVS Dabendorf GmbH, Märkische Straße 72, 15806 Zossen, Germany
Molex Technologies	Molex Technologies GmbH, Mizarstraße 3, 12529 Schönefeld, Germany
Panasonic	Panasonic Automotive Systems Europe GmbH, Robert-Bosch-Straße 27, 63225 Langen, Germany
Schrader	Schrader Electronics Ltd., 11 Technology Park, Belfast Road, Antrim BT41 1QS, Northern Ireland, United Kingdom
Sennheiser	Sennheiser electronic GmbH & Co. KG, Am Labor 1, 30900 Wedemark, Germany
Valeo	Valeo Telematik und Akustik GmbH, Max-Planck-Straße 28-32, 61381 Friedrichsdorf Germany
Veoneer	Veoneer Sweden AB, Wallentinsvägen 22, 44737 Vårgårda, Sweden
Vitesco	Vitesco Technologies GmbH, Siemensstrasse 12, 93055 Regensburg Germany
WITTE-Velbert	WITTE-Velbert GmbH & Co. KG, Hoeferstr. 3-15, 42551 Velbert, Germany

ALGERIA

Agréé par l'ANF
Référence du Certificat de conformité

Homologué par l'ARPCE
Référence du Certificat de conformité

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223GNS (locking system)	71/H/ANF/2021
Continental Automotive	CMKG1 (locking system)	122/H/ANF/2021
Continental Automotive	CMKG2 (locking system)	136/H/ANF/2023

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	MARS Keyless (locking system)	168/H/ANF/2024
HELLA	DM4 (locking system)	123/H/ANF/2021
Hirschmann	920287A (locking system)	106/H/ANF/2020
Hirschmann	920287B (locking system)	107/H/ANF/2020
Hirschmann	920702A (locking system)	133/H/ANF/2022
Huf Baolong	TSSRE4A (tire pressure sensor)	198/H/ANF/2021
HUF	HUF13145 (locking system)	105/H/ANF/2022
MARQUARDT	DC12A (locking system)	188/H/ANF/2021
MARQUARDT	DC12B (locking system)	189/H/ANF/2021
MARQUARDT	DC12K (locking system)	190/H/ANF/2021
MARQUARDT	MS5 (locking system)	195/H/ANF/2021
MARQUARDT	MS7 (locking system)	146/H/ANF/2024
MARQUARDT	MK1 (locking system)	193/H/ANF/2021
MARQUARDT	MK2 (locking system)	194/H/ANF/2021
MARQUARDT	MK3 (locking system)	300/H/ANF/2024
MARQUARDT	3350.38 (locking system)	186/H/ANF/2021
Schrader	AG5SP4 (tire pressure sensor)	3681/1-73.OA 1639/DT/DG/ARPT/15
Schrader	AG3PF4 (tire pressure sensor)	652/1/DT/DG/ARPCE/2020
Schrader	BG3FP4 (tire pressure sensor)	56/H/ANF/2021
Schrader	GG4T (tire pressure sensor)	3994/1.69-DA/2098/DT/DG/ARPT/17
Schrader	DG6W2D4 (tire pressure sensor)	2695/1-NO.431396/DT/DG/ARPT/17
WITTE-Velbert	SDHTAG3NFC (locking system)	32/H/ANF/2021

ARGENTINA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-A (radar sensor)	C-18005
Continental ADC	ARS6-A (radar sensor)	H-28818
Continental ADC	ARS441DP10 (radar sensor)	C-2377
Continental Antenna	RKE213E1 (antenna amplifier)	H-26206
Continental Antenna	RKE223E1 (antenna amplifier)	H-24637
Continental Automotive	CMKG1 (locking system)	H-24376
Continental Automotive	CMKG2 (locking system)	H-28998
Continental Automotive	MARS Keyless (locking system)	H-17929
Continental Automotive	D-WMI2020A (control unit)	H-23974

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	C-29127
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	C-29126
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	C-29128
Continental Automotive Technologies	NTG7Q PREMIUMPLUS LF2 (head unit)	C-29930
HELLA	DM4 (locking system)	H-17845
Hirschmann	920287A (locking system)	H-15694
Hirschmann	920287B (locking system)	H-15695
Hirschmann	920702A (locking system)	H-28310
Huf Baolong	TSSRE4A (tire pressure sensor)	H-27592
HUF	HUF13482 (locking system)	H-31125
HUF	HUF13145 (locking system)	H-28067
HUF	HUF14632 (locking system)	H-15541
HUF	HUF4761 (locking system)	H-11545
MARQUARDT	DC12A (locking system)	H-17689
MARQUARDT	DC12B (locking system)	H-21034

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12K (locking system)	H-21035
MARQUARDT	MS2 (locking system)	H-17598
MARQUARDT	MS4 (locking system)	H-23101
MARQUARDT	MS5 (locking system)	H-24933
MARQUARDT	MS6 (locking system)	H-30441
MARQUARDT	MS7 (locking system)	H-29810
MARQUARDT	MK1 (locking system)	H-17213
MARQUARDT	MK2 (locking system)	H-17212
MARQUARDT	MK3 (locking system)	H-30378
MARQUARDT	3350.38 (locking system)	H-23166
MARQUARDT	MU3 (locking system)	H-30159
MARQUARDT	MUB1 (locking system)	H-30622
Schrader	AG5SP4 (tire pressure sensor)	H-4788
Schrader	AG3PF4 (tire pressure sensor)	H-23292
Schrader	BG3FP4 (tire pressure sensor)	H-25586
Schrader	GG4T (tire pressure sensor)	H-20495
Schrader	DG6W2D4 (tire pressure sensor)	H-20959

Manufacturer	Model designation	Radio equipment approval number
Vitesco	HFA30 (Handsfree-Access)	H-30148
WITTE-Velbert	SDHTAG3NFC (locking system)	H-24664

AUSTRALIA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation
Continental ADC	ARS4-A (radar sensor)
Continental ADC	ARS6-A (radar sensor)
Continental ADC	ARS4-C (radar sensor)
Continental ADC	ARS441DP10 (radar sensor)
Bosch	MRR1Rear (radar sensor)
Bosch	MRRe14FCR (radar sensor)
Bosch	F5CP12 (radar sensor)
Continental Antenna	RKE213E1 (antenna amplifier)
Continental Antenna	RKE223E1 (antenna amplifier)
Continental Automotive	CMKG1 (locking system)
Continental Automotive	CMKG2 (locking system)

Manufacturer	Model designation
Continental Automotive	MARS Keyless (locking system)
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)
Hirschmann	920287A (locking system)
Hirschmann	920287B (locking system)
Hirschmann	920702A (locking system)
Huf Baolong	TSSRE4A (tire pressure sensor)
HUF	HUF13145 (locking system)
MARQUARDT	MS6 (locking system)
MARQUARDT	MS7 (locking system)
MARQUARDT	MK1 (locking system)
MARQUARDT	MK2 (locking system)
MARQUARDT	MK3 (locking system)
MARQUARDT	3350.38 (locking system)
MARQUARDT	MU3 (locking system)
MARQUARDT	MUB1 (locking system)
Schrader	AG5SP4 (tire pressure sensor)

Manufacturer	Model designation
Schrader	AG3PF4 (tire pressure sensor)
Schrader	BG3FP4 (tire pressure sensor)
Schrader	GG4T (tire pressure sensor)
Schrader	DG6W2D4 (tire pressure sensor)
Veoneer	77V12BSM (radar sensor)
Veoneer	77V12CRN (radar sensor)
Veoneer	77V125CRN (radar sensor)
Veoneer	MMRV1 (radar sensor)

BAHAMAS

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-A (radar sensor)	URCA_TA_2014_082
Continental ADC	ARS6-A (radar sensor)	URCA_TA_2023_211
Continental ADC	ARS4-C (radar sensor)	URCA_TA_2019_167
Bosch	MRR1Rear (radar sensor)	URCA_TA/2017_184
Bosch	MRRe14FCR (radar sensor)	URCA_TA/2017_157
Bosch	FR5CPCCF (radar sensor)	URCA_TA_2019_195
Bosch	F5CP12 (radar sensor)	URCA_TA_2022_077
Continental Automotive	CMKG1 (locking system)	URCA_TA/2020_068
Continental Automotive	CMKG2 (locking system)	URCA_TA/2023_028
Continental Automotive	MARS Keyless (locking system)	URCA_TA/2017_119
Continental Antenna	RKE213E1 (antenna amplifier)	UCRA_TA/2016_009
Continental Antenna	RKE223E1GNS (antenna amplifier)	UCRA_TA/2020_032
HELLA	DM4 (locking system)	URCA_TA/2017_078
HELLA	RS6 (locking system)	URCA_TA_2023_174
Hirschmann	920287A (locking system)	URCA_TA/2019_053
Hirschmann	920287B (locking system)	URCA_TA/2019_052
Hirschmann	920702A (locking system)	URCA_TA/2022_043
HUF	HUF13145 (locking system)	URCA_TA_2022_057
HUF	HUF14632 (locking system)	URCA_TA/2015_087
HUF	HUF4761 (locking system)	URCA_TA/2015_087
Huf Baolong	TSSRE4A (tire pressure sensor)	URCA_TA/2017_094
MARQUARDT	DC12A (locking system)	URCA_TA_2017_042
MARQUARDT	DC12B (locking system)	URCA_TA_2019_128
MARQUARDT	DC12K (locking system)	URCA_TA_2019_129
MARQUARDT	MS2 (locking system)	URCA_TA/2017_021

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS4 (locking system)	URCA_TA_2019_141
MARQUARDT	MS5 (locking system)	URCA_TA_2020_141
MARQUARDT	MS6 (locking system)	URCA_TA_2024-035
MARQUARDT	MS7 (locking system)	URCA_TA_2024-066
MARQUARDT	MK1 (locking system)	URCA_TA/2015_031
MARQUARDT	MK2 (locking system)	URCA_TA/2015_033
MARQUARDT	MK3 (locking system)	URCA_TA_2024_025
MARQUARDT	3350.38 (locking system)	URCA_TA/2019_250
MARQUARDT	MU3 (locking system)	URCA_TA/2023_245
MARQUARDT	MUB1 (locking system)	URCA_TA/2024_060
Schrader	AG5SP4 (tire pressure sensor)	URCA_TA_TA/2015_009
Schrader	AG3PF4 (tire pressure sensor)	URCA_TA_2019_101
Schrader	BG3FP4 (tire pressure sensor)	URCA_TA_2021_001
Schrader	GG4T (tire pressure sensor)	URCA_TA_2020_046
Schrader	DG6W2D4 (tire pressure sensor)	URCA_TA_2019_247
Valeo	ARTEMIS-SUB-01 (locking system)	URCA_TA_2024_056
Veoneer	77V12BSM (radar sensor)	URCA_TA_2019_169
Veoneer	77V12CRN (radar sensor)	URCA_TA_2019_168
Veoneer	77V125CRN (radar sensor)	URCA_TA_2021_027
Veoneer	MMRV1 (radar sensor)	URCA_TA/2015_063
Vitesco Technologies	HFA30 (Handsfree-Access)	URCA_TA_2023_247
WITTE-Velbert	SDHTAG3NFC (locking system)	URCA_TA_2020_056

BELARUS

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation
Continental ADC	ARS4-A (radar sensor)
Continental ADC	ARS4-C (radar sensor)
Bosch	MRR1Rear (radar sensor)
Bosch	MRRe14FCR (radar sensor)
Bosch	FR5CPCCF (radar sensor)
Bosch	F5CP12 (radar sensor)
Continental Antenna	RKE213E1 (antenna amplifier)
Continental Antenna	RKE223E1GNS (antenna amplifier)
Continental Automotive	CMKG1 (locking system)
Continental Automotive	CMKG2 (locking system)

Manufacturer	Model designation
Continental Automotive	MARS Keyless (locking system)
Harman Becker	HERMES 3.0 (communication module)
HELLA	DM4 (locking system)
HUF	HUF13145 (locking system)
MARQUARDT	DC12A (locking system)
MARQUARDT	DC12B (locking system)
MARQUARDT	DC12K (locking system)
MARQUARDT	MS2 (locking system)
MARQUARDT	MS4 (locking system)
MARQUARDT	MS5 (locking system)
MARQUARDT	MS7 (locking system)
MARQUARDT	MK1 (locking system)
MARQUARDT	MK2 (locking system)
MARQUARDT	MK3 (locking system)
MARQUARDT	3350.38 (locking system)
MARQUARDT	MU3 (locking system)
MARQUARDT	MUB1 (locking system)
Veoneer	77V12BSM (radar sensor)

Manufacturer	Model designation
Veoneer	77V12CRN (radar sensor)
Veoneer	77V125CRN (radar sensor)
Veoneer	MMRV1 (radar sensor)
WITTE-Velbert	SDHTAG3NFC (locking system)

BOTSWANA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-A (radar sensor)	BOCRA/TA/2018/2026
Continental ADC	ARS6-A (radar sensor)	BOCRA/TA/2022/7599
Continental ADC	ARS4-C (radar sensor)	BOCRA/TA/2020/5186
Bosch	MRRe14FCR (radar sensor)	BOCRA/TA/2019/4674
Bosch	FR5CPCCF (radar sensor)	BOCRA/TA/2019/4975
Bosch	MRR1Rear (radar sensor)	BOCRA/TA/2017/3788
Bosch	F5CP12 (radar sensor)	BOCRA/TA/2022/7110
Continental Antenna	RKE213E1 (antenna amplifier)	BOCRA/TA/2019/4387
Continental Antenna	RKE223E1GNS (antenna amplifier)	BOCRA/TA/2019/5050
Continental Automotive	CMKG1 (locking system)	BOCRA/TA/2019/5075

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG2 (locking system)	BOCRA/TA/2023/8144
Continental Automotive	MARS Keyless (locking system)	BOCRA/TA/2019/4661
HELLA	DM4 (locking system)	BOCRA/TA/2019/4662
HELLA	RS6 (locking system)	BOCRA/TA/2023/8610
Hirschmann	920287A (locking system)	BOCRA/TA/2019/4724
Hirschmann	920287B (locking system)	BOCRA/TA/2019/4723
Hirschmann	920702A (locking system)	BOCRA/TA/2022/7099
HUF	HUF13145 (locking system)	HUF13145
HUF	HUF4761 (locking system)	BOCRA/TA/2019/4664
MARQUARDT	DC12A (locking system)	BOCRA/TA/2019/4389
MARQUARDT	DC12B (locking system)	BOCRA/TA/2019/4388
MARQUARDT	DC12K (locking system)	BOCRA/TA/2019/4390
MARQUARDT	MS2 (locking system)	BOCRA/TA/2019/5135
MARQUARDT	MS4 (locking system)	BOCRA/TA/2019/4758
MARQUARDT	MS5 (locking system)	BOCRA/TA/2020/5473
MARQUARDT	MS6 (locking system)	BOCRA/TA/2024/259
MARQUARDT	MS7 (locking system)	BOCRA/TA/2024/374
MARQUARDT	MK1 (locking system)	BOCRA/TA/2019/4359
MARQUARDT	MK2 (locking system)	BOCRA/TA/2019/4360
MARQUARDT	MK3 (locking system)	BOCRA/TA/2024/373
MARQUARDT	3350.38 (locking system)	BOCRA/TA/2019/4687
MARQUARDT	MU3 (locking system)	BOCRA/TA/2023/8771
MARQUARDT	MUB1 (locking system)	BOCRA/TA/2024/386
Veoneer	77V12BSM (radar sensor)	BOCRA/TA/2019/4975
Veoneer	77V12CRN (radar sensor)	BOCRA/TA/2019/4980
Veoneer	77V125CRN (radar sensor)	BOCRA/TA/2021/6191
WITTE-Velbert	SDHTAG3NFC (locking system)	BOCRA/TA/2020/5342

BRAZIL

Information on two-way radio systems in the vehicle:

These systems are not protected against harmful interference and must not cause interference in properly approved systems.

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-A (radar sensor)	02217-14-06068
Continental ADC	ARS441DP10 (radar sensor)	06783-19-02496
Bury	A167 820 19 03 /A247 820 84 02 (mobile phone charger)	20280-23-04457

Manufacturer	Model designation	Radio equipment approval number
Bury	A247 820 86 02 (mobile phone charger)	20288-23-04457
Bury	A174 820 42 00 (USB-C charger)	07785-24-04457
Continental Antenna	RKE223E1 (antenna amplifier)	03691-15-05298
Continental Antenna	RKE213E1 (antenna amplifier)	07359-21-12817
Continental Antenna	RKE213E1 (antenna amplifier)	3691-15-5298
Continental Automotive	CMKG1 (locking system)	00325-20-02149
Continental Automotive	CMKG2 (locking system)	01334-23-02149
Continental Automotive	MARS Keyless (locking system)	03189-17-02856
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	12520-23-06353
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	12525-23-06353
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	12522-23-06353
Continental Automotive Technologies	NTG7Q PREMIUMPLUS LF2 (head unit)	17830-23-06353
HELLA	DM4 (locking system)	04689-17-05364
Hirschmann	920287A (locking system)	1855-12-5762
Hirschmann	920287B (locking system)	1787-12-8058

Manufacturer	Model designation	Radio equipment approval number
Huf Baolong	TSSRE4A (tire pressure sensor)	08539-19-03616
HUF	HUF13482 (locking system)	07889-24-06643
HUF	HUF13145 (locking system)	HUF13145
HUF	HUF14632 (locking system)	03627-15-06643
HUF	HUF4761 (locking system)	00053-13-06643
MARQUARDT	DC12A (locking system)	01333-17-02930
MARQUARDT	DC12B (locking system)	01395-11-02930
MARQUARDT	DC12K (locking system)	01392-11-02930
MARQUARDT	MS2 (locking system)	00616-17-02930
MARQUARDT	MS4 (locking system)	06218-19-02930
MARQUARDT	MS5 (locking system)	11149-20-02930
MARQUARDT	MS6 (locking system)	02565-24-02930
MARQUARDT	MS7 (locking system)	05883-24-02930
MARQUARDT	3350.38 (locking system)	03149-19-02930
MARQUARDT	MK1 (locking system)	03756-15-02930
MARQUARDT	MK2 (locking system)	03757-15-02930
MARQUARDT	MK3 (locking system)	06050-24-02930

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MU3 (locking system)	05884-24-02930
MARQUARDT	MUB1 (locking system)	05886-24-02930
Molex Technologies	HUB-8 (mobile phone charger)	19286-23-12116
Molex Technologies	HUB-9d / HUB-9e (mobile phone charger)	19287-23-12116
Vitesco Technologies	HFA30 (Handsfree-Access)	18924-23-15869
WITTE-Velbert	SDHTAG3NFC (locking system)	03034-20-07018

Additional specific information

Rear passenger compartment Seat Entertainment System:

This system is not protected against harmful interference and must not cause interference in properly approved systems.

This product is approved by ANATEL in accordance with the procedures set out in Resolution 242/2000 and complies with the relevant technical requirements. You will find additional information on the ANATEL website https://www.anatel.gov.br

Charging unit for the wireless charging of mobile communication devices (WMI):

This device operates in secondary mode, which means it has no protection against harmful interference, not even from stations of the same type, and must not cause interference with systems operating on a primary basis.

This product is approved in accordance with the procedures defined in Directive 242/2000 by the Brazilian telecommunications agency ANATEL and complies with the applicable technical requirements.

Additional information can be found on the ANATEL website www.anatel.gov.br.

Telecommunications products:

This product has been approved by Anatel in accordance with the procedures stipulated in Resolution No. 715/2020, and satisfies all applied technical requirements.

Additional information can be found on the ANATEL website www.anatel.gov.br.

BRUNEI DARUSSALAM

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-C (radar sensor)	DTA-004005
Continental ADC	ARS6-A (radar sensor)	DTA-020359
Bosch	FR5CPCCF (radar sensor)	DTA-004222
Bosch	LRR3 (radar sensor)	DTA-011039
Bosch	MRR1Rear (radar sensor)	DTA-006601
Bosch	MRRe14FCR (radar sensor)	DTA-006678
Bosch	F5CP12 (radar sensor)	DTA-018042

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE213E1 (antenna amplifier)	DTA-006665
Continental Antenna	RKE223E1GNS (antenna amplifier)	DTA-004998
Continental Automotive	CMKG1 (locking system)	DTA-005043
Continental Automotive	CMKG2 (locking system)	DTA-023993
Continental Automotive	MARS Keyless (locking system)	DTA-017264
HELLA	DM4 (locking system)	DTA-020187
HELLA	RS6 (locking system)	AA-000081
Hirschmann	920287A (locking system)	DTA-001661
Hirschmann	920287B (locking system)	DTA-000794
Hirschmann	920702A (locking system)	DTA-018051
Huf Baolong	TSSRE4A (tire pressure sensor)	DTA-011045
Huf Baolong	TSSSG4G6b (tire pressure monitoring system control unit)	DTA-003757
HUF	HUF13145 (locking system)	DTA-017926
HUF	HUF14632 (locking system)	DTA-006138
HUF	HUF4761 (locking system)	DTA-000615

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12A (locking system)	DTA-019403
MARQUARDT	DC12B (locking system)	DTA-000068
MARQUARDT	DC12K (locking system)	DTA-000066
MARQUARDT	MS2 (locking system)	LPD-38890
MARQUARDT	MS4 (locking system)	DTA-003525
MARQUARDT	MS5 (locking system)	DTA-005850
MARQUARDT	MS7 (locking system)	DTA-032943
MARQUARDT	MK1 (locking system)	DTA-011312
MARQUARDT	MK2 (locking system)	DTA-011313
MARQUARDT	MK3 (locking system)	DTA-031059
MARQUARDT	3350.38 (locking system)	DTA-032673
MARQUARDT	MU3 (locking system)	DTA-029861
MARQUARDT	MUB1 (locking system)	DTA-032674
Schrader	AG5SP4 (tire pressure sensor)	DTA-005291
Schrader	AG3PF4 (tire pressure sensor)	DTA-003581
Schrader	BG3FP4 (tire pressure sensor)	DRQ-D-JATI-07-2000-109000
Schrader	DG6W2D4 (tire pressure sensor)	DTA-025258

Manufacturer	Model designation	Radio equipment approval number
Schrader	GG4T (tire pressure sensor)	DTA-025258
Schrader	BG3FP4 (tire pressure sensor)	DTA-025258
Schrader	MFR (tire pressure monitoring system control unit)	DTA-003893
Schrader	MFR3 (tire pressure monitoring system control unit)	DRQ-D-MAJU-02-2011-111083
Valeo	ARTEMIS-SUB-01 (locking system)	DTA-031587
Veoneer	77V12BSM (radar sensor)	DTA-004000
Veoneer	77V12CRN (radar sensor)	DTA-003999
Veoneer	77V125CRN (radar sensor)	DTA-010423
Veoneer	77GHz MMRV1 (radar sensor)	DTA-006216
Vitesco Technologies	HFA30 (Handsfree-Access)	DTA-030296
WITTE-Velbert	SDHTAG3NFC (locking system)	DTA-005628

EURASIAN ECONOMIC UNION

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation
Continental ADC	ARS4-A (radar sensor)
Continental ADC	ARS4-C (radar sensor)
Continental ADC	ARS6-A (radar sensor)
Continental ADC	ARS441DP10 (radar sensor)
Bosch	FR5CPCCF (radar sensor)
Bosch	LRR3 (radar sensor)
Bosch	MRR1Rear (radar sensor)
Bosch	MRRe14FCR (radar sensor)
Bosch	F5CP12 (radar sensor)
Continental Antenna	RKE213E1 (antenna amplifier)
Continental Antenna	RKE223E1GNS (antenna amplifier)
Continental Automotive	MARS Keyless (locking system)
Continental Automotive	CMKG1 (locking system)
Continental Automotive	CMKG2 (locking system)
HELLA	DM4 (locking system)
Hirschmann	920287A (locking system)
Hirschmann	920287B (locking system)

Manufacturer	Model designation
Hirschmann	920702A (locking system)
Huf Baolong	TSSRE4A (tire pressure sensor)
HUF	HUF13145 (locking system)
HUF	HUF4761 (locking system)
HUF	HUF14632 (locking system)
HUF	HUF13482 (locking system)
MARQUARDT	DC12A (locking system)
MARQUARDT	DC12B (locking system)
MARQUARDT	DC12K (locking system)
MARQUARDT	MS2 (locking system)
MARQUARDT	MS4 (locking system)
MARQUARDT	MS5 (locking system)
MARQUARDT	MS6 (locking system)
MARQUARDT	MS7 (locking system)
MARQUARDT	MK1 (locking system)
MARQUARDT	MK2 (locking system)
MARQUARDT	MK3 (locking system)
MARQUARDT	3350.38 (locking system)

Manufacturer	Model designation
MARQUARDT	MU3 (locking system)
MARQUARDT	MUB1 (locking system)
Schrader	AG5SP4 (tire pressure sensor)
Schrader	AG3PF4 (tire pressure sensor)
Schrader	BG3FP4 (tire pressure sensor)
Schrader	GG4T (tire pressure sensor)
Schrader	DG6W2D4 (tire pressure sensor)
Valeo	ARTEMIS-SUB-01 (locking system)
Veoneer	77GHz MMRV1 (radar sensor)
Veoneer	77V12BSM (radar sensor)
Veoneer	77V12CRN (radar sensor)
Veoneer	77V125CRN (radar sensor)
WITTE-Velbert	SDHTAG3NFC (locking system)

GHANA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
		NCA APPROVED
Continental ADC	ARS4-C (radar sensor)	ZRO-1H-7E3-152

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS6-A (radar sensor)	7E6-M1-16C-SRD
Continental ADC	ARS441DP10 (radar sensor)	ZRO-1H-7E3-152
Bosch	FR5CPCCF (radar sensor)	ZRO-M8-7E3-230
Bosch	F5CP12 (radar sensor)	7E6-M1-X9B-SRD
Continental Antenna	RKE213E1 (antenna amplifier)	ZRO-M8-7E3-X53
Continental Antenna	RKE223E1GNS (antenna amplifier)	ZRO-M8-7E3-225
Continental Automotive	CMKG1 (locking system)	ZRO-M8-7E3-277
Continental Automotive	CMKG2 (locking system)	7M-7E7-X25-DSR
Continental Automotive	MARS Keyless (locking system)	BR3-1M-GE2-16A
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	7M-7E7-X09-DSR
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	7M-7E7-X05-DSR
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	7M-7E7-X03-DSR
HELLA	DM4 (locking system)	BR3-1M-GE2-157
Hirschmann	920287A (locking system)	ZRO-M8-7E3-X45
Hirschmann	920287B (locking system)	ZRO-M8-7E3-X47
HUF	HUF13145 (locking system)	7E6-M1-X14-SRD
HUF	HUF4761 (locking system)	EX6-6M-GE2-16C

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12A (locking system)	ZRO-M8-7E3-X50
MARQUARDT	DC12B (locking system)	ZRO-M8-7E3-X51
MARQUARDT	DC12K (locking system)	ZRO-M8-7E3-X52
MARQUARDT	MS2 (locking system)	BR3-1M-GE-129
MARQUARDT	MS4 (locking system)	ZRO-1H-7E3-26E
MARQUARDT	MS5 (locking system)	SRO-1M-7E4-11B
MARQUARDT	MS6 (locking system)	M1-7E8-X42-SRH
MARQUARDT	MS7 (locking system)	M1-7E8-X9F-SRH
MARQUARDT	MK1 (locking system)	ZRO-M8-7E3-X4A
MARQUARDT	MK2 (locking system)	ZRO-M8-7E3-X4C
MARQUARDT	MK3 (locking system)	HS-7E7-262-DSR
MARQUARDT	MU3 (locking system)	HS-7E7-XE5-DSR
MARQUARDT	MUB1 (locking system)	M1-7E8-X9D-SRH
MARQUARDT	3350.38 (locking system)	ZRO-M8-7E3-X3C
MARQUARDT	MU3 (locking system)	HS-7E7-XE5-DSR
Valeo	ARTEMIS-SUB-01 (locking system)	7M-7E7-272-DSR
Veoneer	77V12BSM (radar sensor)	ZRO-1H-7E3-142
Veoneer	77V12CRN (radar sensor)	ZRO-M8-7E3-230
Veoneer	77V125CRN (radar sensor)	7E5-7M-X72-RDR

Manufacturer	Model designation	Radio equipment approval number
Vitesco Technologies	HFA30 (Handsfree-Access)	7M-7E7-134-DSR
WITTE-Velbert	SDHTAG3NFC (locking system)	SRO-1M-7E4-X59

INDONESIA

⚠ Dilarang melakukan perubahan spesifikasi yang dapat menimbulkan gangguan fisik dan/atau elektromagnetik terhadap lingkungan sekitarnya

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Bury	MB-WMI2024 (control unit)	100200/SDPPI/2024 7163
Continental ADC	ARS3-A (radar sensor)	97128/SDPPI/2024 7163
Continental ADC	ARS3-B (radar sensor)	97129/SDPPI/2024 7163
Continental ADC	ARS4-B (radar sensor)	97127/ SDPPI/ 2024 7163
Continental ADC	ARS4-C (radar sensor)	68676/SDPPI/2020 7163
Continental ADC	ARS4-A (radar sensor)	90362/SDPPI/2023 7163
Continental ADC	ARS6-A (radar sensor)	84770/SDPPI/2022 7163
Continental ADC	ARS441DP10 (radar sensor)	89748/SDPPI/2023 7163
Bosch	LRR3 (radar sensor)	74264/SDPPI/2021 7163
Bosch	MRR1Rear (radar sensor)	74267/SDPPI/2021 7163
Bosch	MRRevo14F (radar sensor)	74265/SDPPI/2021 7163

Manufacturer	Model designation	Radio equipment approval number
Bosch	MRRe14FCR (radar sensor)	74266/SDPPI/2021 7163
Bosch	FR5CPCCF (radar sensor)	67882/SDPPI/2020 7163
Bosch	F5CP12 (radar sensor)	86858/SDPPI/2022 84754
Continental Antenna	RKE213E1 (antenna amplifier)	103697/SDPPI/2024 7163
Continental Antenna	RKE223E1GNS (antenna amplifier)	86957/ SDPPI/ 2022 10325
Continental Automotive	CMKG1 (locking system)	87836/SDPPI/2023 7163
Continental Automotive	CMKG2 (locking system)	88721/SDPPI/2023 7163

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	MARS Keyless (locking system)	69379/SDPPI/2020 7163
Continental Automotive	CORTIS08 (tire pressure monitoring system control unit)	97476//SDPPI/2024 7163
Continental Automotive	D-WMI2020A (control unit)	66678/SDPPI/2020 7163
Continental Automotive	NTG7 MID (Headunit) Production: Hungary	92192/SDPPI/2023 7163
Continental Automotive	NTG7 HIGH (Headunit) Production: Hungary	92190/SDPPI/2023 7163
Continental Automotive	NTG7 PREMIUM (Headunit) Production: Hungary	92188/SDPPI/2023 7163
Continental Automotive	NTG7 PREMIUM PLUS (Headunit) Production: Hungary	92195/SDPPI/2023 7163
Continental Automotive France	CORTIS08 (tire pressure monitoring system control unit)	97476/SDPPI/2024 7163

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	88477/SDPPI/2023 7163
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	88579/SDPPI/2023 7163
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	88478/SDPPI/2023 7163
Harman Becker	NTG6N ENTRY/MID (Headunit) Production: Germany	64019/SDPPI/2019 7163
Harman Becker	NTG6N HIGH (Headunit) Production: Germany	64018/SDPPI/2019 7163
Harman Becker	NTG6N ENTRY/MID (Headunit) Production: Hungary	63775/SDPPI/2019 7163
Harman Becker	NTG6N HIGH (Headunit) Production: Hungary	63774/SDPPI/2019 7163
Harman Becker	NTG7 MID (Headunit)	65544/SDPPI/2020 7163
Harman Becker	NTG7 HIGH (Headunit)	70513/SDPPI/2020 7163
Harman Becker	NTG7 PREMIUM (Headunit)	65543/SDPPI/2020 7163
Harman Becker	NTG7 PREMIUM PLUS (Headunit)	70512/SDPPI/2020 7163
Harman Becker	NTG7 RSU (control unit)	66387/SDPPI/2020 7163
HELLA	DM4 (locking system)	69378/SDPPI/2020 7163
Huf Baolong	TSSRE4A (tire pressure sensor)	72438/SDPPI/2021 7163
Hirschmann	920287A (locking system)	71369 /SDPPI/2020 7163
Hirschmann	920287B (locking system)	72974 /SDPPI/2021 7163
Hirschmann	920702A (locking system)	82675/SDPPI/2022 7163

Manufacturer	Model designation	Radio equipment approval number
HUF	HUF13482 (locking system)	104103/SDPPI/2024 7163
HUF	HUF14632 (locking system)	78368/SDPPI/2021 7163
HUF	HUF4761 (locking system)	26742/SDPPI/2015 3533
HUF	HUF13145 (NFC reader)	83988/SDPPI/2022
MARQUARDT	DC12A (locking system)	67373/SDPPI/2020 7163
MARQUARDT	DC12B (locking system)	80676/SDPPI/2022 7163
MARQUARDT	DC12K (locking system)	80621/SDPPI/2022 7163

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS2 (locking system)	67372/SDPPI/2020 7163
MARQUARDT	MS4 (locking system)	64126/SDPPI/2019 7163
MARQUARDT	MS5 (locking system)	90695/SDPPI/2023 7163 7163
MARQUARDT	MS6 (locking system)	102883/SDPPI/2024 7163 7163
MARQUARDT	MS7 (locking system)	102735/SDPPI/2024 7163 7163
MARQUARDT	MK1 (locking system)	100207/ SDPPI/ 2024 7163
MARQUARDT	MK2 (locking system)	100209/ SDPPI/ 2024 7163

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK3 (locking system)	102736/ SDPPI/ 2024 7163 
MARQUARDT	3350.38 (locking system)	82980/SDPPI/2022 7163 
Molex	WCH-302b (control unit)	71668/SDPPI/2020 7163 
Molex	WCH-302d (control unit)	71220/SDPPI/2020 7163 
Molex	WCH-302e (control unit)	71669/SDPPI/2020 7163 
Panasonic	DAIRSE (control unit)	63550/SDPPI/2019 
Schrader	GG4T (tire pressure sensor)	72023/SDPPI/2020 9338
Schrader	AG5SP4 (tire pressure sensor)	75465/SDPPI/2021 7163 
Schrader	BG3FP4 (tire pressure sensor)	72765/SDPP/2021 7163 

Manufacturer	Model designation	Radio equipment approval number
Schrader	DG6W2D4 (tire pressure sensor)	57058/SDPPI/2018 3612
Schrader	MC34MA4 (tire pressure monitoring system control unit)	25626/SDPPI/2015 3612
Schrader	AG3PF4 (tire pressure sensor)	62396/SDPPI/2020 7163 
Schrader	GG4T (tire pressure sensor)	72023/SDPPI/2020 7163 
Veoneer	77GHz MMRV1 (radar sensor)	74749/SDPPI/2021 7163 
Veoneer	77V12CRN (radar sensor)	66830/SDPPI/2020 7163 
Veoneer	77V125CRN (radar sensor)	78366/SDPPI/2021 7163 

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12BSM (radar sensor)	66792/SDPPI/2020 7163 
WITTE-Velbert	SDHTAG3NFC (locking system)	67233/SDPPI/2020 10325 

ISRAEL

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
		Approval number of the Ministry of Communications:
Continental ADC	ARS4-A (radar sensor)	55-09697
Continental ADC	ARS6-A (radar sensor)	55-14225
Continental ADC	ARS4-C (radar sensor)	55-07525
Bosch	FR5CPCCF (radar sensor)	55-08783
Bosch	LRR3 (radar sensor)	55-08334
Bosch	MRR1Rear (radar sensor)	55-08333
Bosch	MRRe14FCR (radar sensor)	55-08395
Bosch	F5CP12 (radar sensor)	55-12854
Bosch	MBCI2LS3PR1 (head unit)	51-91228
Bosch	MBCI2LS4PR1 (head unit)	51-91226
Continental Antenna	RKE213E1 (antenna amplifier)	55-13929
Continental Antenna	RKE223E1GNS (antenna amplifier)	51-97825
Continental Automotive	D-WMI2017B (control unit)	51-75654
Continental Automotive	D-WMI2017A (control unit)	51-75367
Continental Automotive	D-WMI2016A (control unit)	55-08177
Continental Automotive	D-WMI2020A (control unit)	55-08179
Continental Automotive	RKE213E1 (Antennenverstärker)	55-13929
Continental Automotive	RKE223E1GNS (Antennenverstärker)	51-97825
Continental Automotive	CMKG1 (Schließsystem)	51-87871
Continental Automotive	CMKG2 (Schließsystem)	51-92059
Continental Automotive	MARS Keyless (Schließsystem)	56-04831
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	51-90718
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	51-90717

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	51-90719
Harman Becker	NTG7 HIGH-IL (Headunit)	51-89476
Harman Becker	NTG7 PREMIUMPLUS-IL (Headunit)	51-89475
HELLA	DM4 (locking system)	55-14271
HELLA	RS6 (locking system)	51-98663
Hirschmann	920287A (locking system)	51-62759
Hirschmann	920287B (locking system)	51-49357
Hirschmann	920702A (locking system)	56-03806
Huf Baolong	TSSRE4A (tire pressure sensor)	63-63571
Huf Baolong	TSSSG4G6b (tire pressure monitoring system control unit)	63-66757
HUF	HUF13145 (locking system)	55-14153
MARQUARDT	DC12A (locking system)	55-13847
MARQUARDT	DC12B (locking system)	55-12215
MARQUARDT	DC12K (locking system)	55-12214
MARQUARDT	MS2 (locking system)	51-85192
MARQUARDT	MS5 (locking system)	51-86840

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS6 (locking system)	56-03065
MARQUARDT	MS7 (locking system)	56-07888
MARQUARDT	3350.38 (locking system)	55-14331
MARQUARDT	MK1 (locking system)	51-94449
MARQUARDT	MK2 (locking system)	51-94450
MARQUARDT	MK3 (locking system)	56-03260
MARQUARDT	MU3 (locking system)	51-97974
MARQUARDT	MUB1 (locking system)	56-07889
Schrader	AG3PF4 (tire pressure sensor)	51-78338
Schrader	AG5SP4 (tire pressure sensor)	51-73152
Schrader	BG3FP4 (tire pressure sensor)	51-77898
Schrader	DG6W2D4 (tire pressure sensor)	51-64111
Schrader	GG4T (tire pressure sensor)	55-09441
Schrader	MC34MA4 (tire pressure monitoring system control unit)	51-29611
Schrader	MFR (tire pressure monitoring system control unit)	55-06040
Schrader	MFR3 (tire pressure monitoring system control unit)	51-79817
Veoneer	77V12BSM (radar sensor)	55-08176

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12CRN (radar sensor)	55-08301
WITTE-Velbert	SDHTAG3NFC (locking system)	55-12216
Vitesco	HFA30 (Handsfree-Access)	56-01011

JAMAICA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation
	This product has been Type Approved by Jamaica:
Continental Automotive	CMKG1 (locking system)
Continental Automotive	CMKG2 (locking system) SMA – CMKG2
Continental Automotive	RKE213E1 (antenna amplifier)
Continental Automotive	RKE223E1GNS (antenna amplifier)
Continental Automotive	MARS Keyless (locking system)
Hirschmann	920287A (locking system)
Hirschmann	920287B (locking system)
Hirschmann	920702A (locking system)
HELLA	DM4 (locking system)
HUF	HUF13145 (locking system)
MARQUARDT	DC12A (locking system)
MARQUARDT	DC12B (locking system)
MARQUARDT	DC12K (locking system)
MARQUARDT	MS2 (locking system)
MARQUARDT	MS4 (locking system)
MARQUARDT	MS5 (locking system)
MARQUARDT	MS6 (locking system) SMA – MS6
MARQUARDT	MS7 (locking system) SMA – MS7
MARQUARDT	MK1 (locking system)
MARQUARDT	MK2 (locking system)
MARQUARDT	MK3 (locking system) SMA – MK3
MARQUARDT	MU3 (locking system) SMA – MU3
MARQUARDT	MUB1 (locking system) SMA – MUB1
MARQUARDT	3350.38 (locking system)
WITTE-Velbert	SDHTAG3NFC (locking system)
Valeo	ARTEMIS-SUB-01 (locking system) SMA – ARTEMIS-SUB-01
Vitesco	HFA30 (Handsfree-Access)

JAPAN

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG2 (locking system)	TMWK2211004648KR
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	003-230113
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	003-230112
MARQUARDT	MS6 (locking system)	204-A00043
Sennheiser	M3IETW2R (Earbud)	201-190814 (R)
Sennheiser	M3IETW2L (Earbud)	201-190815 (L)
Sennheiser	BTT100 (Bluetooth Audio Transmitter)	020-180077
Vitesco	HFA30 (Handsfree-Access)	209-J00495

Additional specific information

ARTEMIS and MB - 4G eCall Box:

This device has been approved in accordance with Japanese Radio Law and with Japanese Telecommunications Business Law.

This device may not undergo any modifications, otherwise the designation number assigned to this product will be rendered null and void.

JORDAN

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE213E1 (antenna amplifier)	TRC/34/7421/2023
Continental Antenna	RKE223E1GNS (antenna amplifier)	TRC/36/7494/2020
Continental Automotive	CMKG1 (Schließsystem)	T/4/11/11/6775
Continental Automotive	CMKG2 (Schließsystem)	TRC/19/11374/2023
Continental Automotive	MARS Keyless (Schließsystem)	TRC/34/11448/2023
Gentex	MUAHL5 (convenience system)	T/4/11/11/8462
HELLA	DM4 (locking system)	T/4/11/11/5472
Hirschmann	920287A (locking system)	T/4/11/11/10883
Hirschmann	920287B (locking system)	T/4/11/11/10332
Hirschmann	920702A (locking system)	TRC/34/9770/2022
HUF	HUF13145 (locking system)	T/4/11/11/2242
HUF	HUF14632 (locking system)	T/4/11/11/4355
MARQUARDT	DC12A (locking system)	T/4/11/11/933
MARQUARDT	DC12B (locking system)	T/4/11/11/9429
MARQUARDT	DC12K (locking system)	T/4/11/11/9430

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS2 (locking system)	T/4/11/11/6493
MARQUARDT	MS4 (locking system)	T/4/11/11/6493
MARQUARDT	MS5 (locking system)	T/4/11/11/3509
MARQUARDT	MS7 (locking system)	TRC/34/14099/2024
MARQUARDT	3350.38 (locking system)	TRC/34/12899/2023
MARQUARDT	MK1 (locking system)	TRC/34/7629/2020
MARQUARDT	MK2 (locking system)	TRC/34/7630/2020
MARQUARDT	MK3 (locking system)	TRC/34/13651/2024
MARQUARDT	MU3 (locking system)	TRC/34/12770/2023
MARQUARDT	MUB1 (locking system)	TRC/34/14013/2024
Valeo	ARTEMIS-SUB-01 (locking system)	TRC/34/13621/2023
WITTE-Velbert	SDHTAG3NFC (locking system)	T/4/11/11/2635

CANADA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG2 (locking system)	IC: 7812D-CMKG2
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	IC: NTG7QMIDLF2
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	IC: NTG7QHIGLF2
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	IC: NTG7QPREF2
MARQUARDT	MS6 (locking system)	IC: 2701A-MS6
Sennheiser	M3IETW2R (Earbud)	IC:2099A-M3IETW2R
Sennheiser	M3IETW2L (Earbud)	IC:2099A-M3IETW2L
Sennheiser	BTT100 (Bluetooth Audio Transmitter)	IC:2099A-BTT100
Sennheiser	M3IETW2 C (Charging Case)	CAN ICS-3(B)/NMB-3(B)
Vitesco	HFA30 (Handsfree-Access)	28616-HFA30

KUWAIT

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
HUF	HUF13145 (locking system)	Ref. 5873
Continental Automotive	CMKG2 (locking system)	Ref. 6716
Sennheiser	M3IETW2 (Momentum True Wireless 2)	Ref. 4870
Sennheiser	BTT100 (Bluetooth Audio Transmitter)	Ref. 4871
Vitesco	HFA30 (Handsfree-Access)	Ref. 7272

MALAYSIA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS6-A (radar sensor)	HIDF15000153
Continental ADC	ARS4-C (radar sensor)	HIDF15000153
Bosch	FR5CPCCF (radar sensor)	CIDF15000490
Bosch	LRR3 (radar sensor)	CIDF15000490
Bosch	MRR1Rear (radar sensor)	CIDF15000490
Bosch	MRRe14FCR (radar sensor)	CIDF15000490
Bosch	MRRevo14F (radar sensor)	CIDF15000490
Bosch	F5CP12 (radar sensor)	RGLN/30A/0522/S(22-2490)
Continental Antenna	RKE213E1 (antenna amplifier)	HIDF15000153
Continental Antenna	RKE223E1GNS (antenna amplifier)	HIDF16000136
Continental Automotive	CMKG1 (locking system)	HIDF15000153
Continental Automotive	CMKG2 (locking system)	HIDF15000153
Continental Automotive	MARS Keyless (locking system)	CIDF15000578
Continental Automotive	UWBTRX1 (locking system)	HIDF15000153
Continental Automotive	D-WMI2020A (control unit)	RGEZ/12A/1019/S(19-4128)
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	RCCT/92G/0423/S(23-0350)
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	CCT/91G/0323/S(23-1291)
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	RGQB/05A/0323/S(23-1293)
HELLA	DM4 (locking system)	RDDK/41A/0717/S(17-2269)
HELLA	RS6 (locking system)	CIDF15000578
Hirschmann	920287A (locking system)	RAUU/63A/0311/S(11-0432)
Hirschmann	920287B (locking system)	RAUU/22C/0615/S(15-1864)
Hirschmann	920702A (locking system)	HIDF15000153
Huf Baolong	TSSRE4A (tire pressure sensor)	HIDF15000153
HUF	HUF13482 (locking system)	HIDF15000153
HUF	HUF13145 (locking system)	RFBY/09A/0422/S(22-1843)
HUF	HUF14632 (locking system)	RAYN/25A/0715/S(15-2385)
HUF	HUF4761 (locking system)	RAAU/16B/1112/S(12-2053)
MARQUARDT	DC12A (locking system)	RDDK/33A/0317/S(17-0669)
MARQUARDT	DC12B (locking system)	RAUU/62A/0311/S(11-0263)
MARQUARDT	DC12K (locking system)	RAUU/62A/0311/S(11-0264)

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS2 (locking system)	RDDK/31A/0217/S(17-0405)
MARQUARDT	MS4 (locking system)	RDDK/25B/1019/S(19-0943)
MARQUARDT	MS5 (locking system)	RGLO/02A/0720/S(20-2580)
MARQUARDT	MS6 (locking system)	CIDF19000029
MARQUARDT	MS7 (locking system)	CIDF19000029
MARQUARDT	MK1 (locking system)	CIDF19000029
MARQUARDT	MK2 (locking system)	CIDF19000029
MARQUARDT	MK3 (locking system)	CIDF19000029
MARQUARDT	MU3 (locking system)	CIDF19000029
MARQUARDT	MUB1 (locking system)	CIDF19000029
MARQUARDT	3350.38 (locking system)	CIDF19000029
Meta System	ITS/TPS (interior protection)	RAVG/18Q/0212/S(11-2068)
Meta System	MUW II (interior protection)	RAVG/17Q/0212/S(11-2067)
Schrader	AG5SP4 (tire pressure sensor)	RCDD/03A/0615/S(19-2094)
Schrader	AG3PF4 (tire pressure sensor)	RBEF/28A/0419/S/(19-1542)
Schrader	BG3FP4 (tire pressure sensor)	RBEF/51A/0121/S/(20-5642)
Schrader	GG4T (tire pressure sensor)	RBEF/09A/1017/S(17-3183)

Manufacturer	Model designation	Radio equipment approval number
Schrader	DG6W2D4 (tire pressure sensor)	RBEF/09A/1017/S(17-3183)
Schrader	MFR (tire pressure monitoring system control unit)	RAQP/62A/0419/S(19-1694)
Schrader	MFR3 (tire pressure monitoring system control unit)	RAQP/62A/0419/S(19-1694)
Veoneer	77GHz MMRV1 (radar sensor)	HIDF15000153
Veoneer	77V12BSM (radar sensor)	HIDF15000153
Veoneer	77V12CRN (radar sensor)	HIDF15000153
Veoneer	77V125CRN (radar sensor)	HIDF15000153
WITTE-Velbert	SDHTAG3NFC (locking system)	RDDK/43B/0420/S(20-1749)
Vitesco	HFA30 (Handsfree-Access)	RGZK/03A/1223/S(23-5530)

MOROCCO

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
		AGREE PAR L'ANRT MAROC
Continental ADC	ARS4-A (radar sensor)	MR 9490 ANTR 2014-07-23
Continental ADC	ARS6-A (radar sensor)	MR 00033936 ANRT 2022-08-03

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-C (radar sensor)	MR 20231 ANRT 2019-06-27
Continental ADC	ARS441DP10 (radar sensor)	MR 20231 ANRT 2019-06-27
Bosch	FR5CPCCF (radar sensor)	MR 20575 ANRT 2019-07-29
Bosch	LRR3 (radar sensor)	MR 5371 ANRT 2010 2019-12-05
Bosch	MRR1Rear (radar sensor)	MR 9186 ANTR 2014-04-22
Bosch	MRRe14FCR (radar sensor)	MR 13900 ANTR 2017-05-04
Bosch	F5CP12 (radar sensor)	MR00032137ANRT2022
Continental Antenna	RKE213E1 (antenna amplifier)	MR 10631 ANTR 2015-07-16
Continental Antenna	RKE223E1GNS (antenna amplifier)	MR 21174 ANTR 2019-10-14
Continental Automotive	CMKG1 (locking system)	MR 21701 ANTR 2019-12-05
Continental Automotive	CMKG2 (locking system)	MR 36542 ANRT 2023-02-01
Continental Automotive	MARS Keyless (locking system)	MR 13681 ANTR 2017-04-04
Continental Automotive	UWBTRX1 (locking system)	MR 623 ANTR 2024-02-14
HELLA	DM4 (locking system)	MR 14426 ANTR 2017-07-28
Hirschmann	920287A (locking system)	MR 6700 ANTR 2011-11-16
Hirschmann	920287B (locking system)	MR 7260 ANTR 2012-06-13
Hirschmann	920702A (locking system)	MR 32214 ANTR 2022-03-08

Manufacturer	Model designation	Radio equipment approval number
Huf Baolong	TSSRE4A (tire pressure monitoring system control unit)	MR 14320 ANTR 2017-07-07
Huf Baolong	TSSSG4G6b (tire pressure monitoring system control unit)	MR 19561 ANTR 2019-04-26
HUF	HUF13482 (locking system)	MR 3374 ANRT 2024-07-31
HUF	HUF13145 (locking system)	MR 32395 ANRT 2022-03-24
HUF	HUF14632 (locking system)	MR 10506 ANTR 2015-06-22
HUF	HUF4761 (locking system)	MR 7829 ANTR 2013-02-14
MARQUARDT	DC12A (locking system)	MR 13429 ANTR 2017-03-03
MARQUARDT	DC12B (locking system)	MR 6698 ANTR 2021-11-04
MARQUARDT	DC12K (locking system)	MR 6699 ANTR 2021-11-04
MARQUARDT	MS2 (locking system)	MR 13300 ANTR 2017-02-15
MARQUARDT	MS4 (locking system)	MR 19199 ANTR 2019-03-25
MARQUARDT	MS5 (locking system)	MR 23805 ANRT 2020-04-22
MARQUARDT	MS6 (locking system)	MR 00000358 ANRT 2024-01-30
MARQUARDT	MS7 (locking system)	MR 00001197 ANTR 2024-03-25
MARQUARDT	MK1 (locking system)	MR 10645 ANTR 2015-07-21
MARQUARDT	MK2 (locking system)	MR 10987 ANTR 2015-10-22

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK3 (locking system)	MR 00041098 ANTR 2023-12-25
MARQUARDT	MU3 (locking system)	MR 00039580 ANTR 2023-08-08
MARQUARDT	3350.38 (locking system)	MR 18817 ANTR 2019-02-12
MARQUARDT	MUB1 (locking system)	MR 00000864 ANTR 2024-02-29
Schrader	AG5SP4 (tire pressure monitoring system control unit)	MR 10216 ANRT 2015
Schrader	AG3PF4 (tire pressure sensor)	MR 19241 ANRT 2019
Schrader	BG3FP4 (tire pressure sensor)	MR00026829ANRT2020
Schrader	MFR (tire pressure monitoring system control unit)	MR 10927 ANRT 2015
Schrader	MFR3 (tire pressure monitoring system control unit)	MR 19527 ANRT 2019
Schrader	GG4T (tire pressure sensor)	MR 14777 ANRT 2017-09-20
Schrader	DG6W2D4 (tire pressure sensor)	MR 16355 ANRT 2018-04-19
Schrader	MC34MA4 (tire pressure monitoring system control unit)	MR 6706 ANRT 2011-11-17
Veoneer	77GHz MMRV1 (radar sensor)	MR 10436 ANRT 2015-05-25
Veoneer	77V12BSM (radar sensor)	MR 20097 ANRT 2019-06-14
Veoneer	77V12CRN (radar sensor)	MR 20149 ANRT 2019-06-19
Veoneer	77V125CRN (radar sensor)	MR 27966 ANRT 2021-03-29
Valeo	ARTEMIS-SUB-01 (locking system)	MR 00000073 ANRT 2024-01-05
WITTE-Velbert	SDHTAG3NFC (locking system)	MR 23310 ANRT 2020-03-10

MEXICO

REGULATORY RADIO IDENTIFIERS

NOM	NYCE	ANCE ift	
Manufacturer	**Model designation**	**Radio equipment approval number**	
Continental ADC	ARS4-A (radar sensor)	IFETEL: RCPCOAR14-1191	
Continental ADC	ARS6-A (radar sensor)	IFETEL: SYCOAR22-17289	
Continental ADC	ARS4-C (radar sensor)	IFETEL: RLVCOR19-1062	
Continental ADC	ARS441DP10 (radar sensor)	IFETEL: RLVCOR19-1062	
Bosch	LRR3 (radar sensor)	IFETEL: RCPBOLR09-0828	
Bosch	MRR1Rear (radar sensor)	IFETEL: RCPBOMR14-0922	
Bosch	MRRe14FCR (radar sensor)	IFETEL: RCPBOMR17-0598	
Continental Antenna	RKE213E1 (antenna amplifier)	IFETEL: RLVKARK15-1741	
Continental Antenna	RKE223E1 (antenna amplifier)	IFETEL: RLVCORK19-2174	
Continental Automotive	CMKG1 (locking system)	IFETEL: RCPCOCM19-2315	

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG2 (locking system)	IFETEL: COCOCM22-31003
Continental Automotive	MARS Keyless (locking system)	IFETEL: RLVDAMA18-1827
Continental Automotive	UWBTRX1 (locking system)	IFETEL: MECOCM22-17609
Continental Automotive Hungary	HNA15_01 (Ramses 1.5) (communication module)	IFETEL: MECOHN24 - 29722
Continental Automotive Hungary	HNA15_02 (Ramses 1.5) (communication module)	IFETEL: MECOHN24 - 29725
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	IFETEL: MEMENT23 - 12200
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	IFETEL: MEMENT23 - 11923
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	IFETEL: MEMENT23 - 12204
Gentex	MUAHL5 (convenience system)	IFETEL: RCPGEMU15-0448
HELLA	DM4 (locking system)	IFETEL: RLVHEDM17-10
Hirschmann	920287A (locking system)	IFETEL: RLVHI9211-0472
Hirschmann	920287B (locking system)	IFETEL: RLVHI9212-0608
Hirschmann	920702A (locking system)	IFETEL: RLVHI9222-2674
Huf Baolong	TSSRE4A (tire pressure sensor)	IFETEL: RLVHUTS17-0806
HUF	HUF13145 (locking system)	IFETEL: RCPHUHU22-2505
HUF	HUF14632 (locking system)	IFETEL: RLVHUHU15-1204
HUF	HUF4761 (locking system)	IFETEL: RLVHUHU12-1587
MARQUARDT	DC12A (locking system)	IFETEL: RLVMEDC17-0348
MARQUARDT	DC12B (locking system)	IFETEL: RLVMContinental ADC11-0446
MARQUARDT	DC12K (interior protection)	IFETEL: RLVMContinental ADC11-0446
MARQUARDT	MS2 (locking system)	IFETEL: RLVMAMS17-0222
MARQUARDT	MS4 (locking system)	IFETEL: RLVMAMS19-0449
MARQUARDT	MS5 (locking system)	IFETEL: RLVMEMS20-0957
MARQUARDT	MS6 (locking system)	IFETEL: MEMAMS24-03199
MARQUARDT	MS7 (locking system)	IFT MEMAMS24-22544
MARQUARDT	MK1 (locking system)	IFETEL: RLVMAMK15-1042
MARQUARDT	MK2 (locking system)	IFETEL: RLVMAMK15-1043
MARQUARDT	MK3 (locking system)	IFT MEMAMK24-22883

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MU3 (locking system)	IFT MEMAMU25-22726
MARQUARDT	3350.38 (locking system)	IFETEL: RCPMA3319-0530
Schrader	AG5SP4 (tire pressure sensor)	IFETEL: RCPSCAG15-0627
Schrader	AG3PF4 (tire pressure sensor)	IFETEL: RLVSCAG19-0705
Schrader	BG3FP4 (tire pressure sensor)	IFETEL: RLVSCBG21-0750
Schrader	MFR (tire pressure monitoring system control unit)	IFETEL: RLVSCMF15-0959
Schrader	MFR3 (tire pressure monitoring system control unit)	IFETEL: RLVSCMF19-0777
Schrader	GG4T (tire pressure sensor)	IFETEL: RLVSCGG17-1665
Schrader	DG6W2D4 (tire pressure sensor)	IFETEL: RLVSCDG18-04
Schrader	MC34MA4 (tire pressure monitoring system control unit)	IFETEL: RCPSCMR14-062
Sennheiser	M3IETW2R (Earbud)	IFETEL: RCPSEM320-0435-A1
Sennheiser	M3IETW2L (Earbud)	IFETEL: RCPSEM320-0435
Sennheiser	BTT100 (Bluetooth Audio Transmitter)	IFETEL: RCPSEBT18-1407
WITTE-Velbert	SDHTAG3NFC (locking system)	IFETEL: RCPWISD20-0943
Vitesco	HFA30 (Handsfree-Access)	IFETEL: ROVIHF24-02919

MONGOLIA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG1 (locking system)	A19000633
Continental Automotive	CMKG2 (locking system)	A23000900
Continental Automotive	MARS Keyless (locking system)	A18000328
HELLA	DM4 (locking system)	A18000329
Hirschmann	920702A (locking system)	A22000649
HUF	HUF13145 (locking system)	A22000674
MARQUARDT	DC12A (locking system)	A19000400
MARQUARDT	DC12B (locking system)	A19000371
MARQUARDT	DC12K (locking system)	A19000372

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS2 (locking system)	A18000289
MARQUARDT	MS4 (locking system)	A19000516
MARQUARDT	MS5 (locking system)	A20000085
MARQUARDT	MS6 (locking system)	A24001213
MARQUARDT	MS7 (locking system)	A24001253
MARQUARDT	MK1 (locking system)	A19000374
MARQUARDT	MK2 (locking system)	A19000374
MARQUARDT	MK3 (locking system)	A24001205
MARQUARDT	MU3 (locking system)	A23001102
MARQUARDT	MUB1 (locking system)	A24001254
MARQUARDT	3350.38 (locking system)	A19000401
WITTE-Velbert	SDHTAG3NFC (locking system)	A20000067
Valeo	ARTEMIS-SUB-01 (locking system)	A24001183
Vitesco	HFA30 (Handsfree-Access)	A23001126

NIGER

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE213E1 (antenna amplifier)	029/ARCEP/DG/19
Continental Automotive	MARS Keyless (locking system)	083/ARCEP/DG/19
HELLA	DM4 (locking system)	082/ARCEP/DG/19
Hirschmann	920287A (locking system)	097/ARCEP/DG/19
Hirschmann	920287B (locking system)	098/ARCEP/DG/19
HUF	HUF4761 (locking system)	053/ARCEP/DG/19
MARQUARDT	DC12A (locking system)	010/ARCEP/DG/19
MARQUARDT	DC12B (locking system)	008/ARCEP/DG/19
MARQUARDT	DC12K (locking system)	009/ARCEP/DG/19
MARQUARDT	MS2 (locking system)	014/ARCEP/DG/19
MARQUARDT	MS4 (locking system)	HOMO-0096/ARCEP/DG/2019
MARQUARDT	MK1 (locking system)	034/ARCEP/DG/19
MARQUARDT	MK2 (locking system)	035/ARCEP/DG/19
MARQUARDT	3350.38 (locking system)	015/ARCEP/DG/19
MARQUARDT	MU1 (locking system)	HOMO-0095/ARCEP/DG/2019

NIGERIA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation
Continental ADC	ARS4-A (radar sensor)
Continental ADC	ARS6-A (radar sensor)
Continental ADC	ARS4-C (radar sensor)
Bosch	FR5CPCCF (radar sensor)
Bosch	MRR1Rear (radar sensor)
Bosch	MRRe14FCR (radar sensor)
Bosch	F5CP12 (radar sensor)
Continental Antenna	RKE213E1 (antenna amplifier)
Continental Antenna	RKE223E1GNS (antenna amplifier)
Continental Automotive	CMKG1 (locking system)
Continental Automotive	CMKG2 (locking system)
Continental Automotive	MARS Keyless (locking system)
HELLA	DM4 (locking system)
Hirschmann	920287A (locking system)
Hirschmann	920287B (locking system)
Hirschmann	920702A (locking system)
HUF	HUF13145 (locking system)
HUF	HUF14632 (locking system)
HUF	HUF4761 (locking system)
MARQUARDT	DC12A (locking system)
MARQUARDT	DC12B (locking system)
MARQUARDT	DC12K (locking system)
MARQUARDT	MS2 (locking system)
MARQUARDT	MS4 (locking system)
MARQUARDT	MS5 (locking system)
MARQUARDT	MS6 (locking system)
MARQUARDT	MS7 (locking system)
MARQUARDT	MK1 (locking system)
MARQUARDT	MK2 (locking system)
MARQUARDT	MK3 (locking system)
MARQUARDT	MU3 (locking system)
MARQUARDT	MUB1 (locking system)
MARQUARDT	3350.38 (locking system)
Schrader	AG3PF4 (tire pressure sensor)
Schrader	BG3FP4 (tire pressure sensor)
Schrader	MFR3 (tire pressure monitoring system control unit)
Valeo	ARTEMIS-SUB-01 (locking system)

Manufacturer	Model designation
Veoneer	77V12BSM (radar sensor)
Veoneer	77V12CRN (radar sensor)
Veoneer	77V125CRN (radar sensor)
WITTE-Velbert	SDHTAG3NFC (locking system)
Vitesco	HFA30 (Handsfree-Access)

OMAN

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-A (radar sensor)	TRA/TA-R/2016/14 D080134
Continental ADC	ARS6-A (radar sensor)	TRA/TA-R/14181/22 D172338
Continental ADC	ARS4-C (radar sensor)	TRA/TA-R/7769/19 D172338
Bosch	FR5CPCCF (radar sensor)	TRA/TA-R/7983/19 D172338
Bosch	LRR3 (radar sensor)	TRA/TA-R/1049/09
Bosch	MRR1Rear (radar sensor)	TRA/TA-R/1849/14
Bosch	MRRe14FCR (radar sensor)	TRA/TA-R/4353/17
Bosch	F5CP12 (radar sensor)	TRA/TA-R/13339/22
Continental Antenna	RKE213E1 (antenna amplifier)	TRA/TA-R/2715/15 D090258
Continental Antenna	RKE223E1GNS (antenna amplifier)	TRA/TA-R/8337/19 D172338
Continental Automotive	CMKG1 (locking system)	TRA/TA-R/8642/19 D172338
Continental Automotive	CMKG2 (locking system)	TRA/TA-R/15164/23 D100428
Continental Automotive	MARS Keyless (locking system)	TRA/TA-R/4158/17 D080134
HELLA	DM4 (locking system)	TRA/TA-R/4548/17 D080134
Hirschmann	920287A (locking system)	TRA/TA-R/0210/11 D080353
Hirschmann	920287B (locking system)	TRA/TA-R/0655/12 D080353
Hirschmann	920702A (locking system)	TRA/TA-R/13300/22 D172338
Huf Baolong	TSSRE4A (tire pressure sensor)	TRA/TA-R/4516/17 D100428
Huf Baolong	TSSSG4G6b (tire pressure sensor)	TRA/TA-R/7506/19
HUF	HUF13482 (locking system)	TRA/TA-R/18930/24

Manufacturer	Model designation	Radio equipment approval number
HUF	HUF13145 (locking system)	TRA/TA-R/13465/22
HUF	HUF14632 (locking system)	TRA/TA-R/2665/15
HUF	HUF4761 (locking system)	TRA/TA-R/0920/12
MARQUARDT	DC12A (locking system)	TRA/TA-RD/4056/17 D100428
MARQUARDT	DC12B (locking system)	TRA/TA-R/0227/11 D080353
MARQUARDT	DC12K (locking system)	TRA/TA-R/0228/11 D080353
MARQUARDT	MS2 (locking system)	TRA/TA-R/4136/17 D080134
MARQUARDT	MS4 (locking system)	TRA/TA-R/7316/19 D172249
MARQUARDT	MS5 (locking system)	TRA/TA-R/17887/24 D172338
MARQUARDT	MS6 (locking system)	TRA/TA-R/17509/24 D172338
MARQUARDT	MK1 (locking system)	TRA/TA-R/2848/15 D080353
MARQUARDT	MK2 (locking system)	TRA/TA-R/2900/15 D080353
MARQUARDT	MK3 (locking system)	TRA/TA-R/17223/23 D080354

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MU3 (locking system)	TRA/TA-R/16494/23 D172338
MARQUARDT	3350.38 (locking system)	TRA/TA-R/7051/19 D172249
MARQUARDT	MUB1 (locking system)	TRA/TA-R/17721/24 D172338
Schrader	AG5SP4 (tire pressure sensor)	TRA R/2380/15 D080134
Schrader	AG3PF4 (tire pressure sensor)	TRA R/7287/19 D172338
Schrader	BG3FP4 (tire pressure sensor)	TRA/TA-R/10694/20 D172338
Schrader	MFR (tire pressure monitoring system control unit)	TRA/TA-R/7464/19 D090258
Schrader	MFR3 (tire pressure monitoring system control unit)	TRA/TA-R/7467/19 D090258
Schrader	GG4T (tire pressure sensor)	TRA/TA-R/4686/17 D080134
Schrader	DG6W2D4 (tire pressure sensor)	TRA/TA-R/5511/18 D172249
Sennheiser	M3IETW2R (Earbud)	TRA/TA-R/10988/21
Sennheiser	BTT100 (Bluetooth Audio Transmitter)	TRA/TA-R/10976/21

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77GHz MMRV1 (radar sensor)	TRA/TA-R/2706/15
Veoneer	77V12BSM (radar sensor)	TRA/TA-R/7706/19 D172338
Veoneer	77V12CRN (radar sensor)	TRA/TA-R/7707/19 D172338
Veoneer	77V125CRN (radar sensor)	TRA/TA-R/11335/21 D172338
WITTE-Velbert	SDHTAG3NFC (locking system)	TRA/TA-R/9150/20
Valeo	ARTEMIS-SUB-01 (locking system)	TRA/TA-R/17293/23 D172338
Vitesco	HFA30 (Handsfree-Access)	TRA/TA-R/17028/23 172338D

PAKISTAN

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-A (radar sensor)	TAC NO: 9.9014/2019
Continental ADC	ARS4-C (radar sensor)	TAC NO: 9.9389/2019
Continental ADC	ARS6-A (radar sensor)	TAC NO: 9.666/2024
Bosch	FR5CPCCF (radar sensor)	TAC NO: 9.198/2020

Manufacturer	Model designation	Radio equipment approval number
Bosch	F5CP12 (radar sensor)	TAC NO: 9.243/2023
Continental Antenna	RKE213E1 (antenna amplifier)	TAC NO: 9.142/2016
Continental Antenna	RKE223E1GNS (antenna amplifier)	TAC NO: 9.100169/2019
Continental Automotive	CMKG1 (locking system)	TAC NO:9.100175/2019
Continental Automotive	CMKG2 (locking system)	TAC NO: 9.153/2023
Continental Automotive	MARS Keyless (locking system)	TAC NO: 9.213/2017
Continental Automotive	D-WMI2020A (control unit)	TAC NO: 9.9836/2019
HELLA	DM4 (locking system)	TAC NO: 9.409/2017
Hirschmann	920287A (locking system)	TAC NO: 9.845/2013
Hirschmann	920287B (locking system)	TAC NO: 9.846/2013
Hirschmann	920702A (locking system)	TAC NO. 9.412/2022
HUF Baolong	TSSRE4A (tire pressure sensor)	TAC NO: 9.620/2017
HUF Baolong	TSSSRG4G6B (tire pressure monitoring system control unit)	TAC NO: 9.9345/2019
HUF	HUF14632 (locking system)	TAC NO: 9.598/2015
HUF	HUF4761 (locking system)	TAC NO: 9.790/2013

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12A (locking system)	TAC NO: 9.131/2017
MARQUARDT	DC12B (locking system)	TAC NO: 9.829/2013
MARQUARDT	DC12K (locking system)	TAC NO: 9.830/2013
MARQUARDT	MS2 (locking system)	TAC NO: 9.133/2017
MARQUARDT	MS4 (locking system)	TAC NO: 9.100171/2019
MARQUARDT	MS5 (locking system)	TAC.NO: 9.322/2020
MARQUARDT	MS6 (locking system)	TAC.NO: 9.94/2024
MARQUARDT	MS7 (locking system)	TAC.NO: 9.322/2024
MARQUARDT	MK1 (locking system)	TAC NO: 9.486/2015
MARQUARDT	MK2 (locking system)	TAC NO: 9.497/2015
MARQUARDT	MK3 (locking system)	TAC NO: 9.1175/2023
MARQUARDT	MU3 (locking system)	TAC NO: 9.1168/2023
MARQUARDT	MUB1 (locking system)	TAC NO: 9.269/2024
Schrader	AG3PF4 (tire pressure sensor)	TAC NO:9.039/2016
Schrader	AG5SP4 (tire pressure sensor)	TAC NO:9.9167/2019
Schrader	BG3FP4 (tire pressure sensor)	TAC NO:9.68/2021
Schrader	GG4T (tire pressure sensor)	TAC NO:9.538/2017
Schrader	DG6W2D4 (tire pressure sensor)	TAC NO: 9.789/2018
Valeo	ARTEMIS-SUB-01 (locking system)	TAC NO: 9.746/2024
Veoneer	77GHz MMRV1 (radar sensor)	TAC NO: 9.9284/2019
Veoneer	77V12BSM (radar sensor)	TAC NO: 9.9391/2019
Veoneer	77V12CRN (radar sensor)	TAC NO: 9.9391/2019
Veoneer	77V125CRN (radar sensor)	TAC NO: 9.477/2021
WITTE-Velbert	SDHTAG3NFC (locking system)	TAC NO: 9.527/2020
Vitesco	HFA30 (Handsfree-Access)	TAC NO: 9.1058/2023

PARAGUAY

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-A (radar sensor)	2019-05-I-0271
Continental ADC	ARS6-A (radar sensor)	2022-08-I-0513

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-C (radar sensor)	2019-11-I-0602
Bosch	FR5CPCCF (radar sensor)	2019-09-I-0508
Bosch	MRRe14FCR (radar sensor)	2017-06-I-0000162
Bosch	MRR1Rear (radar sensor)	2019-05-I-000236
Bosch	F5CP12 (radar sensor)	2022-05-I-0329
Continental Antenna	RKE213E1 (antenna amplifier)	2021-02-I-00101 y 2016-02-I-0000038
Continental Antenna	RKE223E1GNS (antenna amplifier)	2019-12-I-0656
Continental Automotive	CMKG1 (locking system)	2020-02-I-0110
Continental Automotive	CMKG2 (locking system)	2023-03-I-0153
Continental Automotive	MARS Keyless (locking system)	2017-05-I-0000136
Continental Automotive	D-WMI2016A	2019-03-I-0170
Continental Automotive	D-WMI2017A	2019-03-I-000171
Continental Automotive	D-WMI2017B	2019-03-I-000172
Continental Automotive	D-WMI2020A	2019-11-I-0600
HELLA	DM4 (locking system)	2022-06-I-0388 y 2017-08-I-0000261
Hirschmann	920287A (locking system)	2016-5-I-000134 y 2011-06-I-0059
Hirschmann	920287B (locking system)	2017-04-I-0000119 y 2012-05-I-0096
Hirschmann	920702A (locking system)	2022-03-I-0149
Huf Baolong	TSSRE4A (tire pressure sensor)	2022-08-I-0528

Manufacturer	Model designation	Radio equipment approval number
HUF	HUF13482 (locking system)	2024-08-I-0727
HUF	HUF13145 (locking system)	2022-04-I-0235
HUF	HUF14632 (locking system)	2020-06-I-0284 y 2015-08-I-0000226
HUF	HUF4761 (locking system)	2017-12-I-0000409 y 2012-10-I-0178
MARQUARDT	DC12A (locking system)	2020-12-I-0898 y 2015-06-I-0000181
MARQUARDT	DC12B (locking system)	2021-05-I-0304; 2016-5-I-000144 y 2011-06-I-0067
MARQUARDT	DC12K (locking system)	2021-05-I-0305; 2016-5-I-000143 y 2011-06-I-0068
MARQUARDT	MS2 (locking system)	2017-04-I-0000101
MARQUARDT	MS4 (locking system)	2019-10-I-0581
MARQUARDT	MS5 (locking system)	2020-08-I-0604
MARQUARDT	MS6 (locking system)	2024-02-I-0164
MARQUARDT	MS7 (locking system)	2024-05-I-0400
MARQUARDT	MK1 (locking system)	2020-07-I-0390 y 2015-07-I-0000200
MARQUARDT	MK2 (locking system)	2020-07-I-0391 y 2015-07-I-0000201
MARQUARDT	MK3 (locking system)	2024-03-I-0256
MARQUARDT	MU3 (locking system)	2023-08-I-0590
MARQUARDT	MUB1 (locking system)	2024-05-I-0401
MARQUARDT	3350.38 (locking system)	2024-02-I-0190 y 2019-04-I-000216

Manufacturer	Model designation	Radio equipment approval number
Schrader	AG5SP4 (tire pressure sensor)	2015-04-I-0000150
Schrader	AG3PF4 (tire pressure sensor)	2019-05-1-000261
Schrader	BG3FP4 (tire pressure sensor)	2021-02-I-0063
Schrader	GG4T (tire pressure sensor)	2020-02-1-0044
Schrader	DG6W2D4 (tire pressure sensor)	2019-11-1-0632
Veoneer	77GHz MMRV1 (radar sensor)	2020-07-I-0510
Veoneer	77V12BSM (radar sensor)	2019-07-I-0399
Veoneer	77V12CRN (radar sensor)	2019-07-I-0398
Veoneer	77V125CRN (radar sensor)	2021-04-I-0188
Vitesco	HFA30 (Handsfree-Access)	2023-11-I-0808
Valeo	ARTEMIS-SUB-01 (locking system)	2024-01-I-0074
WITTE-Velbert	SDHTAG3NFC (locking system)	2020-06-I-0326

Additional specific information

Charging unit for the wireless charging of mobile communication devices (WMI):

D-WMI2020A:

This vehicle is equipped with the following radio frequency component approved by CONATEL – Paraguay: wireless interface for mobile devices, Continental brand, model D-WMI2020A, manufactured by Continental Automotive GmbH.

Radio equipment approval number: 2019-11-I-0600

Rear passenger compartment Seat Entertainment System:

DAIRSE:

Importer: Condor S.A.C.I Casa Central, J.B. Gorostiaga 315 y Guaraníes, Asunción, Paraguay, (595 21) 569 7000, sac@condor.com.py

PHILIPPINES

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-A (radar sensor)	ESD-1409466C
Continental ADC	ARS4-C (radar sensor)	ESD-1920226C
Bosch	FR5CPCCF (radar sensor)	ESD-1920531C
Bosch	MRR1Rear (radar sensor)	ESD-1408917C
Bosch	MRRe14FCR (radar sensor)	ESD-1716172C
Bosch	F5CP12 (radar sensor)	ESD-RCE-2229495
Continental Antenna	RKE213E1 (antenna amplifier)	ESD-1511856C
Continental Antenna	RKE223E1GNS (antenna amplifier)	ESD-1921015C
Continental Automotive	CMKG1 (locking system)	ESD-2021556C
Continental Automotive	CMKG2 (locking system)	ESD-RCE-2332806
Continental Automotive	MARS Keyless (locking system)	ESD-1714865C
HELLA	DM4 (locking system)	ESD-1715539C
Hirschmann	920287A (locking system)	ESD-1105246C
Hirschmann	920287B (locking system)	ESD-1206044C
Hirschmann	920702A (locking system)	ESD-RCE-2229632
Huf Baolong	TSSRE4A (tire pressure sensor)	ESD-1715393C
HUF	HUF13145 (locking system)	ESD-RCE-2229722
HUF	HUF14632 (locking system)	ESD-1511236C
HUF	HUF4761 (locking system)	ESD-1206521C
MARQUARDT	DC12A (locking system)	ESD-1714489C
MARQUARDT	DC12B (locking system)	ESD-1105216C
MARQUARDT	DC12K (locking system)	ESD-1105215C
MARQUARDT	MS2 (locking system)	ESD-1715652C
MARQUARDT	MS4 (locking system)	ESD-1919133C
MARQUARDT	MS5 (locking system)	ESD-REC-20437299
MARQUARDT	MS7 (locking system)	ESD-2022426C
MARQUARDT	MK1 (locking system)	ESD-1510644C
MARQUARDT	MK2 (locking system)	ESD-1510645C
MARQUARDT	MK3 (locking system)	ESD-REC-2436842
MARQUARDT	MU3 (locking system)	ESD-REC-2436843
MARQUARDT	3350.38 (locking system)	ESD-1919198C
MARQUARDT	MUB1 (locking system)	ESD-REC-2436916

Manufacturer	Model designation	Radio equipment approval number
Schrader	AG5SP4 (tire pressure sensor)	ESD-1715393C
Schrader	AG3PF4 (tire pressure sensor)	ESD-1919585C
Schrader	BG3FP4 (tire pressure sensor)	ESD-RCE-2124846
Schrader	GG4T (tire pressure sensor)	ESD-1715977C
Schrader	DG6W2D4 (tire pressure sensor)	ESD-1817081C
Veoneer	77GHz MMRV1 (radar sensor)	ESD-1510921C
Vitesco	HFA30 (Handsfree-Access)	ESD-RCE-2335375
Valeo	ARTEMIS-SUB-01 (locking system)	ESD-RCE-2436285
WITTE-Velbert	SDHTAG3NFC (locking system)	ESD-2022599C

ZAMBIA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223E1 (antenna amplifier)	ZMB/ZICTA/TA/2019/3/11
Continental Automotive	MARS Keyless (locking system)	ZMB/ZICTA/TA/2019/3/3
HELLA	DM4 (locking system)	ZMB/ZICTA/TA/2019/3/4
Hirschmann	920287A (locking system)	ZMB/ZICTA/TA/2019/7/12
Hirschmann	920287B (locking system)	ZMB/ZICTA/TA/2019/7/11
HUF	HUF4761 (locking system)	ZMB/ZICTA/TA/2018/12/18
MARQUARDT	DC12A (locking system)	ZMB/ZICTA/TA/2019/5/16
MARQUARDT	DC12B (locking system)	ZMB/ZICTA/TA/2019/5/17
MARQUARDT	DC12K (locking system)	ZMB/ZICTA/TA/2019/5/18
MARQUARDT	MS2 (locking system)	ZMB/ZICTA/TA/2018/9/30
MARQUARDT	MS4 (locking system)	ZMB/ZICTA/TA/2019/7/123
MARQUARDT	MK1 (locking system)	ZMB/ZICTA/TA/2019/3/20
MARQUARDT	MK2 (locking system)	ZMB/ZICTA/TA/2019/3/21
MARQUARDT	3350.38 (locking system)	ZMB/ZICTA/TA/2019/3/6
MARQUARDT	MU1 (locking system)	ZMB/ZICTA/TA/2019/7/124
Valeo	ARTEMIS-SUB-01 (locking system)	ZMB/ZICTA/TA/2024/1/08

SENEGAL



REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG2 (locking system)	072504/AG/ER
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	072486/AG/ER
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	072487/AG/ER
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	072488/AG/ER
Continental Automotive Technologies	NTG7Q PREMIUMPLUS LF2 (head unit)	072689/AG/ER
HUF	HUF13482 (locking system)	072954/AG/ER
MARQUARDT	MK3 (locking system)	072784/AG/ER
MARQUARDT	MU3 (locking system)	072676/AG/ER
MARQUARDT	MS7 (locking system)	072845/AG/ER
MARQUARDT	MUB1 (locking system)	072819/AG/ER
Valeo	ARTEMIS-SUB-01 (locking system)	072776/AG/ER

SERBIA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-A (radar sensor)	011 20
Continental ADC	ARS6-A (radar sensor)	038 22
Continental ADC	ARS4-C (radar sensor)	011 19
Bosch	FR5CPCCF (radar sensor)	011 19
Bosch	LRR3 (radar sensor)	011 19
Bosch	MRR1Rear (radar sensor)	011 17
Bosch	MRRe14FCR (radar sensor)	005 17
Continental Antenna	RKE213E1 (antenna amplifier)	005 24
Continental Antenna	RKE223E1GNS (antenna amplifier)	005 22
Continental Automotive	CMKG1 (locking system)	005 20
Continental Automotive	CMKG2 (locking system)	005 23

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	MARS Keyless (locking system)	005 20
Continental Automotive	NTG7 MID	005 23
Continental Automotive	NTG7 HIGH	005 23
Continental Automotive	NTG7 PREMIUM	005 23
Continental Automotive	NTG7 PREMIUM PLUS	005 23
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	005 23
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	005 23
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	005 23
HELLA	DM4 (locking system)	005 20
Hirschmann	920287A (locking system)	005 18
Hirschmann	920287B (locking system)	005 18
Hirschmann	920702A (locking system)	005 22
Huf Baolong	TSSRE4A (tire pressure sensor)	005 20
HUF	HUF13482 (locking system)	005 24
HUF	HUF13145 (locking system)	005 22

Manufacturer	Model designation	Radio equipment approval number
HUF	HUF14632 (locking system)	005 21
HUF	HUF4761 (locking system)	005 21
MARQUARDT	DC12A (locking system)	005 20
MARQUARDT	DC12B (locking system)	005 20
MARQUARDT	DC12K (locking system)	005 20
MARQUARDT	MS2 (locking system)	011 17
MARQUARDT	MS4 (locking system)	005 19
MARQUARDT	MS5 (locking system)	005 24
MARQUARDT	MS6 (locking system)	005 24
MARQUARDT	MS7 (locking system)	005 24
MARQUARDT	MK1 (locking system)	005 24
MARQUARDT	MK2 (locking system)	005 24
MARQUARDT	MK3 (locking system)	005 24
MARQUARDT	MU3 (locking system)	005 23
MARQUARDT	3350.38 (locking system)	005 22
MARQUARDT	MUB1 (locking system)	005 24
Meta System	MUW II (interior protection)	011 19
Schrader	AG5SP4 (tire pressure sensor)	005 15

Manufacturer	Model designation	Radio equipment approval number
Schrader	AG3PF4 (tire pressure sensor)	005 15
Schrader	BG3FP4 (tire pressure sensor)	005 20
Schrader	GG4T (tire pressure sensor)	005 17
Schrader	DG6W2D4 (tire pressure sensor)	005 18
Schrader	MC34MA4 (tire pressure monitoring system control unit)	011 11
Valeo	ARTEMIS-SUB-01 (locking system)	011 18
Veoneer	77GHz MMRV1 (radar sensor)	005 24
Veoneer	77V12BSM (radar sensor)	011 19
Veoneer	77V12CRN (radar sensor)	011 19
Veoneer	77V125CRN (radar sensor)	038 21
Vitesco	HFA30 (Handsfree-Access)	011
WITTE-Velbert	SDHTAG3NFC (locking system)	005 20

SINGAPORE

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
		Complies with IMDA Standards
Continental ADC	ARS4-A (radar sensor)	DA103365
Continental ADC	ARS6-A (radar sensor)	DA103365
Continental ADC	ARS4-C (radar sensor)	DA103365
Bosch	FR5CPCCF (radar sensor)	DA103365
Bosch	LRR3 (radar sensor)	DA103365
Bosch	MRR1Rear (radar sensor)	DA103365
Bosch	MRRe14FCR (radar sensor)	DA103365
Bosch	F5CP12 (radar sensor)	N3827-22
Continental Antenna	RKE213E1 (antenna amplifier)	DA105282
Continental Antenna	RKE223E1GNS (antenna amplifier)	DA107248
Continental Automotive	CMKG1 (locking system)	DA103365
Continental Automotive	CMKG2 (locking system)	DB106440
Continental Automotive	MARS Keyless (locking system)	DA105282
Continental Automotive	UWBTRX1 (locking system)	DB107091
Continental Automotive	D-WMI2020A (control unit)	DA103365

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	DA105282
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	DA105282
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	DA105282
Harman Becker	HERMES 3.0 (communication module)	DB107091
HELLA	DM4 (locking system)	DA103365 N3308-22
Hirschmann	920287A (locking system)	DA103365
Hirschmann	920287B (locking system)	DA103365
Hirschmann	920702A (locking system)	DA105282
HUF	HUF13482 (locking system)	DB105654
HUF	HUF13145 (locking system)	N2197-22
HUF Baolong	TSSRE4A (tire pressure sensor)	DA30668
HUF Baolong	TSSSG4G6b (tire pressure sensor)	DA28467
HUF	HUF14632 (locking system)	DA105282
HUF	HUF4761 (locking system)	DA103365
MARQUARDT	DC12A (locking system)	DA103787
MARQUARDT	DC12B (locking system)	DA103365

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	DC12K (locking system)	DA103365
MARQUARDT	MS2 (locking system)	DA103787
MARQUARDT	MS4 (locking system)	DA103787
MARQUARDT	MS6 (locking system)	DA103787
MARQUARDT	MS7 (locking system)	DB103787
MARQUARDT	MK1 (locking system)	DA103365
MARQUARDT	MK2 (locking system)	DA103365
MARQUARDT	MK3 (locking system)	DA103787
MARQUARDT	MU3 (locking system)	DA103787
MARQUARDT	MBU1 (locking system)	DA103787
MARQUARDT	3350.38 (locking system)	DB107091
Meta System	ITS/TPS (interior protection)	DA103365
Meta System	MUW II (interior protection)	DA103365
Schrader	AG5SP4 (tire pressure sensor)	DA103787
Schrader	AG3PF4 (tire pressure sensor)	DA107968
Schrader	BG3FP4 (tire pressure sensor)	DA103365
Schrader	GG4T (tire pressure sensor)	DA105282
Schrader	DG6W2D4 (tire pressure sensor)	DA105282
Veoneer	77GHz MMRV1 (radar sensor)	DA103365

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V12BSM (radar sensor)	DA103365
Veoneer	77V12CRN (radar sensor)	DA103365
Veoneer	77V125CRN (radar sensor)	DA103365
Visteo	HFA30 (Handsfree-Access)	N4949-23
WITTE-Velbert	SDHTAG3NFC (locking system)	DA107248

SOUTH AFRICA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-A (radar sensor)	TA-2014/1637
Continental ADC	ARS6-A (radar sensor)	TA-2022/1837
Continental ADC	ARS4-C (radar sensor)	TA-2019/1595
Bosch	FR5CPCCF (radar sensor)	TA-2019/1200
Bosch	MRR1Rear (radar sensor)	TA-2014/212
Bosch	MRRe14FCR (radar sensor)	TA-2017/2013
Bosch	LRR3 (radar sensor)	TA-2009/464
Bosch	F5CP12 (radar sensor)	TA-2022/0153
Continental Antenna	RKE213E1 (antenna amplifier)	TA-2015/1438

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223E1 (antenna amplifier)	TA-2020/043
Continental Automotive	CMKG1 (locking system)	TA-2019/5405
Continental Automotive	CMKG2 (locking system)	TA-2022/3611_CMKG2
Continental Automotive	MARS Keyless (locking system)	TA-2016/3500
Continental Automotive	UWBTRX1 (locking system)	TA-2021/3460
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	TA-2023/0091
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	TA-2023/0111
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	TA-2023/0090
Gentex	MUAHL5 (convenience system)	TA-2015/1386
HELLA	DM4 (locking system)	TA-2017/2518
Hirschmann	920287A (locking system)	TA-2011/374
Hirschmann	920287B (locking system)	TA-2013/1262
Hirschmann	920702A (locking system)	TA-2022/0162
Huf Baolong	TSSRE4A (tire pressure sensor)	TA-2017/1393
Huf Baolong	TSSSG4G6b (tire pressure sensor)	TA-2019/1440

Manufacturer	Model designation	Radio equipment approval number
HUF	HUF13482 (locking system)	TA-2024/2001
HUF	HUF13145 (locking system)	TA-2022/0375
HUF	HUF14632 (locking system)	TA-2015/1077
HUF	HUF4761 (locking system)	TA-2012/1543
Meta System	ITS Master (interior protection)	TA-2011/1636
Meta System	ITS Sensor (interior protection)	TA-2011/1227
Meta System	MUW II (interior protection)	TA-2019/261
MARQUARDT	DC12A (locking system)	TA-2017/312
MARQUARDT	DC12B (locking system)	TA-2011/370
MARQUARDT	DC12K (locking system)	TA-2012/1542
MARQUARDT	MS2 (locking system)	TA-2016/3314
MARQUARDT	MS4 (locking system)	TA-2019/843
MARQUARDT	MS5 (locking system)	TA-2020/5765
MARQUARDT	MS6 (locking system)	TA-2023/3673
MARQUARDT	MS7 (locking system)	TA-2024/1232
MARQUARDT	MK1 (locking system)	TA-2015/179
MARQUARDT	MK2 (locking system)	TA-2015/180

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MK3 (locking system)	TA-2024/0439
MARQUARDT	3350.38 (locking system)	TA-2018/3985
MARQUARDT	MU3 (locking system)	TA-2023/1835
MARQUARDT	MUB1 (locking system)	TA-2024/0505
Schrader	AG5SP4 (tire pressure sensor)	TA-2015/072
Schrader	AG3PF4 (tire pressure sensor)	TA-2019-133
Schrader	BG3FP4 (tire pressure sensor)	TA-2020/7731
Schrader	MFR (tire pressure monitoring system control unit)	TA-2019/273
Schrader	MFR3 (tire pressure monitoring system control unit)	TA-2019-273
Schrader	GG4T (tire pressure sensor)	TA-2017/3884
Schrader	DG6W2D4 (tire pressure sensor)	TA-2017/2933
Schrader	MC34MA4 (tire pressure monitoring system control unit)	TA-2011/1370
Veoneer	77GHz MMRV1 (radar sensor)	TA-2015/2087
Veoneer	77V12BSM (radar sensor)	TA-2019/1380
Veoneer	77V12CRN (radar sensor)	TA-2019/1382
Veoneer	77V125CRN (radar sensor)	TA-2021/0150

Manufacturer	Model designation	Radio equipment approval number
Visteo	HFA30 (Handsfree-Access)	TA-2023/2469
WITTE-Velbert	SDHTAG3NFC (locking system)	TA-2020/055

SOUTH KOREA

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223E1 (antenna amplifier)	R-C-Ca3-RKE223E1
Continental Automotive	CMKG2 (locking system)	R-R-TeH-CMKG2
Continental Automotive Technologies	NTG7Q LF2 (head unit)	R-R-TeH- NTG7QLF2
Huf Baolong	TSSRE4A (tire pressure sensor)	R-CRM-HHFTSSRE4A
Huf Baolong	TSSSG4G6 (tire pressure monitoring system control unit)	R-REM-HHFTSSSG4G6
HUF	HUF14632 (locking system)	MSIP-CRM-HHF-HUF-14632
MARQUARDT	MS6 (locking system)	R-C-MQU-MS6
Schrader	MFR (tire pressure monitoring system control unit)	MSIP-REM-SRD-MFR
Schrader	MFR3 (tire pressure monitoring system control unit)	KCC R-R-SRD-MFR3A
Schrader	MC34MA4 (tire pressure monitoring system control unit)	KCC-REM-SRD-MRXMC34MA4
Schrader	AG5SP4 (tire pressure sensor)	MSIP-CRM-SRD-AG5SP4
Schrader	AG3PF4 (tire pressure sensor)	R-C-SRD-AG3PF4
Schrader	BG3FP4 (tire pressure sensor)	R-C-SRD-BG3FP4
Schrader	GG4T (tire pressure sensor)	MSIP-CRM-SRD-GG4T
Schrader	DG6W2D4 (tire pressure sensor)	R-CRM-SRD-DG6W2D4
Visteo	HFA30 (Handsfree-Access)	R-R-vT2-HFA30

TANZANIA

TCRA Approved
XXXXXX/XXX/XXXX

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223E1 (antenna amplifier)	TCRA/TAC/018/2016

THAILAND

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	130111-23-0132

ARTEMIS and MB - 4G eCall box:

This radio communication device has an electromagnetic wave that complies with the Safety Standard for the Use of Radiocommunication Equipment on Human Health announced by the National Telecommunications Commission.

TOGO

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Antenna	RKE223E1 (antenna amplifier)	No. 024/19
Continental Automotive	MARS Keyless (locking system)	No. 059/24
HELLA	DM4 (locking system)	No. 039/19
Hirschmann	920287A (locking system)	No. 089/19
Hirschmann	920287B (locking system)	No. 088/19
HUF	HUF4761 (locking system)	No. 041/19
MARQUARDT	DC12A (locking system)	No. 055/19
MARQUARDT	DC12B (locking system)	No. 057/19
MARQUARDT	DC12K (locking system)	No. 056/19
MARQUARDT	MS2 (locking system)	No. 008/19
MARQUARDT	MS4 (locking system)	No. 101/19
MARQUARDT	MK1 (locking system)	No. 021/19
MARQUARDT	MK2 (locking system)	No. 022/19
MARQUARDT	3350.38 (locking system)	No. 016/20

UKRAINE

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-A (radar sensor)	UA RF: 1CONT0004
Continental ADC	ARS6-A (radar sensor)	UA RF: 1CONT0013
Continental Antenna	RKE213E1 (antenna amplifier)	UKR.355-123/19
Continental Antenna	RKE223E1GNS (antenna amplifier)	UA.R.TR.052.682-19
Continental Automotive	CMKG1 (locking system)	UA1.001.021175-20-TE
Continental Automotive	CMKG2 (locking system)	UA.032.CT.0105-23
Continental Automotive	MARS Keyless (locking system)	RTS.UKR.355-34/18

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	UA.TR.052
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	UA.TR.052
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	UA.TR.052
HELLA	DM4 (locking system)	UA.TR.109
Hirschmann	920287A (locking system)	UKR.355-7/20
Hirschmann	920287B (locking system)	UKR.355-8/20
Huf Baolong	TSSRE4A (tire pressure sensor)	UA 1.001.018568-19-TE
Huf Baolong	TSSSG4G6b (tire pressure monitoring system control unit)	UA 1.001.019289-19-TE
HUF	HUF13145 (locking system)	UKR.355-113/19
HUF	HUF14632 (locking system)	UKR.355-113/19
HUF	HUF4761 (locking system)	UA1.001.018653-19-TE
MARQUARDT	DC12A (locking system)	UA.R.TR.052.307-19
MARQUARDT	DC12B (locking system)	UA.R.TR.052.308-19
MARQUARDT	DC12K (locking system)	UA.R.TR.052.309-19
MARQUARDT	MS2 (locking system)	UA1.001.019129-19-TE

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS4 (locking system)	UA.R.TR.052.528-19
MARQUARDT	MS5 (locking system)	UA.TR.028
MARQUARDT	MS7 (locking system)	UA.TR.001.0355.30.00624-24
MARQUARDT	MK1 (locking system)	UA1.001.019233-19-TE
MARQUARDT	MK2 (locking system)	UA1.001.019234-19-TE
MARQUARDT	MK3 (locking system)	UA.TR.001.0355.30.01316-23
MARQUARDT	MU3 (locking system)	UA.TR.001.0355.30.01276-23
MARQUARDT	MUB1 (locking system)	UA.TR.001.0355.30.00623-24
MARQUARDT	3350.38 (locking system)	UA1.001.018888-19-TE
Schrader	AG5SP4 (tire pressure sensor)	UA.TR. 032
Schrader	AG3PF4 (tire pressure sensor)	UA-TR-001
Schrader	BG3FP4 (tire pressure sensor)	UA-TR-109
Schrader	GG4T (tire pressure sensor)	UA.TR. 028
Schrader	DG6W2D4 (tire pressure sensor)	UA.TR. 028
Valeo	ARTEMIS-SUB-01 (locking system)	UA.R.TR.052.071-24
WITTE-Velbert	SDHTAG3NFC (locking system)	UA.R.TR.052.120-20

UZBEKISTAN

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation
Continental Automotive	RKE213E1 (antenna amplifier)
Continental Automotive	RKE223E1GNS (antenna amplifier)
Continental Automotive	CMKG1 (locking system)
Continental Automotive	CMKG2 (locking system)
Continental Automotive	MARS Keyless (locking system)
HELLA	DM4 (locking system)
Hirschmann	920287A (locking system)
Hirschmann	920287B (locking system)
Hirschmann	920702A (locking system)
HUF	HUF13145 (locking system)
MARQUARDT	DC12A (locking system)
MARQUARDT	DC12B (locking system)
MARQUARDT	DC12K (locking system)
MARQUARDT	MS2 (locking system)
MARQUARDT	MS4 (locking system)
MARQUARDT	MS5 (locking system)
MARQUARDT	MS6 (locking system)
MARQUARDT	MS7 (locking system)
MARQUARDT	MK1 (locking system)
MARQUARDT	MK2 (locking system)
MARQUARDT	MK3 (locking system)
MARQUARDT	MU3 (locking system)
MARQUARDT	3350.38 (locking system)
MARQUARDT	MUB1 (locking system)
Visteo	HFA30 (Handsfree-Access)
Valeo	ARTEMIS-SUB-01 (locking system)
WITTE-Velbert	SDHTAG3NFC (locking system)

UNITED ARAB EMIRATES

TDRA هيئة تنظيم الاتصالات والحكومة الرقمية
TELECOMMUNICATIONS AND DIGITAL GOVERNMENT REGULATORY AUTHORITY

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-A (radar sensor)	TA RTTE: Er558296/17, DA40068/15
Continental ADC	ARS4-C (radar sensor)	TA RTTE: ER77062/19, DA40068/15
Bosch	FR5CPCCF (radar sensor)	TA RTTE: ER74533/19, DA36758/14
Bosch	NRCS2P (radar sensor)	TA RTTE: ER88778/20, DA36758/14
Continental Antenna	RKE213E1 (antenna amplifier)	TRA ER64693/18, DA65993/17
Continental Antenna	RKE223E1GNS (antenna amplifier)	TRA ER76442/19, DA65993/17
Continental Automotive	CMKG1 (locking system)	TRA ER77964/20, DA0018994/09
Continental Automotive	CMKG2 (locking system)	TRA ER17713/23, DA36975/14
Continental Automotive	MARS Keyless (locking system)	TRA ER56005/17, DA44932/15
Continental Automotive	UWBTRX1 (locking system)	TRA ER11321/22, DA36975/14
Continental Automotive Hungary	Ramses 1.5 (communication module)	ER32722/24
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	TDRA ER17731/23, DA76163/18
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	TDRA ER17730/23, DA76163/18
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	TDRA ER17732/23, DA76163/18
Gentex	MUAHL5 (convenience system)	TRA ER41849/15, DA35176/14
Harman Becker	HERMES 3.0 (communication module)	TRA ER03601/21, DA0028019/10
HELLA	DM4 (locking system)	TRA ER56616/17, DA44932/15
Hirschmann	920287A (locking system)	TRA ER52213/17, DA35219/14
Hirschmann	920287B (locking system)	TRA ER42011/15, DA35219/14

Manufacturer	Model designation	Radio equipment approval number
Hirschmann	920702A (locking system)	TRA ER10723/22, DA35219/14
Huf Baolong	TSSRE4A (tire pressure sensor)	TRA ER57806/17, DA36976/14
Huf Baolong	TSSSG4G6b (tire pressure monitoring system control unit)	TRA ER7307/19, DA0086237/12
HUF	HUF13482 (locking system)	TRA ER33320/24
HUF	HUF13145 (locking system)	TRA ER08607/22, DA36976/14
HUF	HUF14632 (locking system)	TRA ER63716/18, DA36976/14
HUF	HUF4761 (locking system)	TRA ER55496/17, DA36976/14
HUF	HUF13145 (locking system)	TRA ER08607/22 DA36976/14
MARQUARDT	DC12A (locking system)	TRA ER53465/17, DA0018994/09
MARQUARDT	DC12B (locking system)	TRA ER0067828/11, DA0018994/09
MARQUARDT	DC12K (locking system)	TRA ER0067829/11, DA0018994/09

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS2 (locking system)	TRA ER52668/17, DA0018994/09
MARQUARDT	MS4 (locking system)	TRA ER71616/19, DA0018994/09
MARQUARDT	MS5 (locking system)	TRA ER80720/20, DA0018994/09
MARQUARDT	MS6 (locking system)	TRA ER28697/24, DA0018994/09
MARQUARDT	MS7 (locking system)	TRA ER29729/24, DA0018994/09
MARQUARDT	MK1 (locking system)	TRA ER64145/18, DA0018994/09
MARQUARDT	MK2 (locking system)	TRA ER64146/18, DA0018994/09
MARQUARDT	MK3 (locking system)	TRA ER26811/23, DA0018994/09
MARQUARDT	3350.38 (locking system)	TRA ER69280/19, DA0018994/09
MARQUARDT	MU3 (locking system)	TRA ER25917/23, DA0018994/09

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MUB1 (locking system)	TRA ER29344/24, DA0018994/09
Schrader	AG5SP4 (tire pressure sensor)	TRA ER37156/15, DA0047074/10
Schrader	AG3PF4 (tire pressure sensor)	TRA ER70533/19, DA0047074/10
Schrader	BG3FP4 (tire pressure sensor)	TRA ER96175/21, DA0047074/10
Schrader	GG4T (tire pressure sensor)	TRA ER57985/17, DA0047074/10
Schrader	DG6W2D4 (tire pressure sensor)	TRA ER960528/18, DA0047074/10
Schrader	MC34MA4 (tire pressure monitoring system control unit)	TRA ER37066/15, DA0047074/10
Sennheiser	M3IETW2L (Earbud)	ER78231/20
Sennheiser	BTT100 (Bluetooth Audio Transmitter)	ER64728/18
Veoneer	77GHz MMRV1 (radar sensor)	TA RTTE: ER96352/21; 0020858/10
Veoneer	77V12BSM (radar sensor)	TA RTTE: ER72324/19; 0020858/10
Veoneer	77V12CRN (radar sensor)	TA RTTE: ER72323/19; 0020858/10
Veoneer	77V125CRN (radar sensor)	TA RTTE: ER95775/21; 0020858/10
Visteo	HFA30 (Handsfree-Access)	TRA ER25428/23
WITTE-Velbert	SDHTAG3NFC (locking system)	TRA ER79695/20, DA0018994/09

UNITED KINGDOM
Additional specific information

Charging unit for the wireless charging of mobile communication devices (WMI):

D-WMI2016A, D-WMI2017A, D-WMI2017B:

Restrictions or requirements in the UK: a minimum distance of 3.9 in (10 cm) must be maintained between all persons and the device at all times. The device must not be set up or operated together with other antennas or transmitters.

D-WMI2020A:

Restrictions or requirements in the UK: a minimum distance of 0 in (0 cm) must be maintained between all persons and the device at all times. The device must not be set up or operated together with other antennas or transmitters.

UNITED STATES

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental Automotive	CMKG2 (locking system)	FCC ID: KR5CMKG2
Continental Automotive Technologies	NTG7Q MID LF2 (head unit)	FCC ID: NTG7QMIDLF2
Continental Automotive Technologies	NTG7Q HIGH LF2 (head unit)	FCC ID: NTG7QHIGLF2
Continental Automotive Technologies	NTG7Q PREMIUM LF2 (head unit)	FCC ID: NTG7QPRELF2
HUF	HUF13145 (locking system)	FCC ID: YGOHUF13145
MARQUARDT	MS6 (locking system)	FCC ID:IYZMS6
Sennheiser	M3IETW2R (Earbud)	FCC ID: DMOM3IETW2R
Sennheiser	M3IETW2L (Earbud)	FCC ID: DMOM3IETW2L
Sennheiser	BTT100 (Bluetooth Audio Transmitter)	FCC ID: DMOBTT100
Visteo	HFA30 (Handsfree-Access)	FCC ID: 2A6TC-HFA30
WITTE-Velbert	SDHTAG3NFC (locking system)	FCC ID: DMOBTT100

Information on installation clearances

Charging unit for the wireless charging of mobile communication devices (WMI):

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 0 cm (in contact) between the radiator and your body.This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Only for Canada: Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un Environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 0 cm (in contact) de distance entre la source de rayonnement et votre corps. Ce transmetteur ne doit pas être place au même endroit ou utilise simultanément avec un autre transmetteur ou antenne.

Rear passenger compartment Seat Entertainment System:

Only for USA: This device complies with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device must be installed and used at a distance of at least 6 cm from the body.

Only for Canda: This device complies with ISED Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with ISED radiation exposure limits established for an uncontrolled environment. This equipment must be installed and operated with a minimum distance of 5 cm between the radiation source and your body. Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 5 cm de distance entre la source de rayonnement et votre corps.

Radar sensors:

ARS4-C (Continental ADC), ARS4-B (Continental ADC), ARS4-A (Continental ADC), FR5CPCCF (Bosch), MRR1REAR (Bosch), MRREVO14F (Bosch), LRR3 (Bosch), 77V12BSM (Veoneer), 77V12CRN (Veoneer), MMRV1 (Veoneer)

Only for USA: Radiofrequency radiation exposure Information:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Only for Canada: This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

BT Audio Transmitter (BTT100):

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 9 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Infotainment system head unit (NTG7Q):

Only for USA: This device complies with FCC/ISED radiation exposure limits set forth in an uncontrolled environment and meets the FCC radio frequency Exposure Guidelines and RSS-102 of the ISED radio frequency Exposure rules. This device is installed in the vehicle at a distance minor to 20 cm to the closest passenger.

Only for Canada: This device complies with FCC/ISED radiation exposure limits set forth in an uncontrolled environment and meets the FCC radio frequency Exposure Guidelines and RSS-102 of the ISED radio frequency Exposure rules. This device is installed in the vehicle at a distance minor to 20 cm to the closest passenger. Le présent appareil est conforme à l'exposition de la fréquence de la FCC/ISED définies pour un environment non contrôlé et répond aux directives d'exposition de la fréquence de la FCC radiofréquence (RF) et RSS-102 de fréquence radio (RF) ISED règles d'éposition. Cet appareil sera installé à une distance minimale de 20 cm de l'utilisateur final.

VIETNAM

REGULATORY RADIO IDENTIFIERS

Manufacturer	Model designation	Radio equipment approval number
Continental ADC	ARS4-A (radar sensor)	SUNTECH VN C00082015
Continental ADC	ARS6-A (radar sensor)	SUNTECH VN C00082015
Continental ADC	ARS4-C (radar sensor)	SUNTECH VN C00082015

Manufacturer	Model designation	Radio equipment approval number
Bosch	FR5CPCCF (radar sensor)	SUNTECH VN C00082015
Bosch	MRR1Rear (radar sensor)	SUNTECH VN C00082015
Bosch	MRRe14FCR (radar sensor)	SUNTECH VN C00082015
Continental Antenna	RKE213E1 (antenna amplifier)	Suntech Vietnam Technology Company Limited C0274151118AF04A2
Continental Antenna	RKE223E1GNS (antenna amplifier)	CÔNG TY TNHH MERCEDES-BENZ, Mercedes-Benz Vietnam, Company Limited B0676160424AF03A3
Continental Automotive	CMKG1 (locking system)	Suntech Vietnam Technology Company Limited C0001070120AF04A2
Continental Automotive	CMKG2 (locking system)	Mercedes-Benz Vietnam Company Limited C0104060423AF04A3
Continental Automotive	MARS Keyless (locking system)	Mercedes-Benz Vietnam Company Limited B0748240419AF04A2
Continental Automotive	UWBTRX1 (locking system)	Mercedes-Benz Vietnam B00172019

Manufacturer	Model designation	Radio equipment approval number
HELLA	DM4 (locking system)	Mercedes-Benz Vietnam Company Limited CO204030321AF04A3
HELLA	RS6 (locking system)	SUNTECH VN C00082015
Hirschmann	920702A (locking system)	Mercedes-Benz Vietnam Company Limited B0424070422AF04A3
Huf Baolong	TSSRE4A (tire pressure sensor)	C0112200717AF04A2
HUF	HUF13145 (tire pressure sensor)	C1071050922AF04A3
MARQUARDT	DC12A (locking system)	Suntech Vietnam Technology Company Limited C0208030321AF04A3
MARQUARDT	DC12B (locking system)	Suntech Vietnam Technology Company Limited C0076210121AF04A3
MARQUARDT	DC12K (locking system)	Suntech Vietnam Technology Company Limited C0077210121AF04A3
MARQUARDT	MS2 (locking system)	Suntech Vietnam Technology Company Limited C0075210121AF04A3

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	MS4 (locking system)	Suntech Vietnam Technology Company Limited C0913110821AF04A3
MARQUARDT	MS5 (locking system)	Suntech Vietnam Technology Company Limited C0141140520AF04A2
MARQUARDT	MS6 (locking system)	CÔNG TY TNHH MERCEDES-BENZ Mercedes-Benz Vietnam Company Limited C0471120824AF04A3
MARQUARDT	MS7 (locking system)	CÔNG TY TNHH MERCEDES-BENZ Mercedes-Benz Vietnam Company Limited C0225240424AE01A3
MARQUARDT	MK1 (locking system)	Suntech Vietnam Technology Company Limited C0049150121AF04A3
MARQUARDT	MK2 (locking system)	Suntech Vietnam Technology Company Limited C0050150121AF04A3
MARQUARDT	MU3 (locking system)	CÔNG TY TNHH MERCEDES-BENZ Mercedes-Benz Vietnam Company Limited C0547201223AF04A3

Manufacturer	Model designation	Radio equipment approval number
MARQUARDT	3350.38 (locking system)	Suntech Vietnam Technology Company Limited C0131030221AF04A3
Schrader	AG5SP4 (tire pressure sensor)	Suntech Vietnam Technology Company Limited C0002050119AF042A
Schrader	AG3PF4 (tire pressure sensor)	Suntech Vietnam Technology Company Limited C0120220519AF04A2
Schrader	GG4T (tire pressure sensor)	Suntech Vietnam Technology Company Limited C0170191017AF04A2
Schrader	DG6W2D4 (tire pressure sensor)	Suntech Vietnam Technology Company Limited C0078070518AF04A2
Valeo	ARTEMIS-SUB-01 (locking system)	CÔNG TY TNHH MERCEDES-BENZ Mercedes-Benz Vietnam Company Limited C0931270624AF03A3
Veoneer	77GHz MMRV1 (radar sensor)	Mercedes-Benz Vietnam Company Limited
Veoneer	77V12BSM (radar sensor)	Mercedes-Benz Vietnam Company Limited
Veoneer	77V12CRN (radar sensor)	Mercedes-Benz Vietnam Company Limited

Manufacturer	Model designation	Radio equipment approval number
Veoneer	77V125CRN (radar sensor)	Mercedes-Benz Vietnam Company Limited
WITTE-Velbert	SDHTAG3NFC (locking system)	Mercedes-Benz Vietnam Company Limited A0847130820AF04A3

Further information and updates are available at the following website:

https://regulatoryradioinformation.corpinter.net/us

Information on the specific absorption rate (SAR)

INFORMATION ON THE SPECIFIC ABSORPTION RATE

The values have been determined and tested in accordance with the Décret n° 2019-1186 guideline relating to details of the specific absorption rate (SAR) of wireless vehicle components.


INFORMATION ON THE SPECIFIC ABSORPTION RATE

Vehicle components	SAR value in W/kg	Applicable limit value
D-WMI2020A	0.018 W/kg	4 W/kg
Gen20x.i2 LS3+	2.2 W/kg	4 W/kg
Gen20x.i2 LS4+	2.5 W/kg	4 W/kg
ARTEMIS communication module	0.471 W/kg	2 W/kg
HERMES communication module	< 0.4 W/kg	2 W/kg
RAMSES communication module	0.036 W/kg	2 W/kg


Vehicle components	SAR value in W/kg	Applicable limit value
ECE DE003 & ECE DE004 compensators	< 0.2 W/kg	2 W/kg
NRCS2P	0.003 W/kg	2 W/kg
NTG6	0.199 W/kg	4 W/kg
NTG7	0.08 W/kg	2 W/kg
NTG7RSU	0.07 W/kg	2 W/kg
SM-T230NZ tablet PC	0.7 W/kg	4 W/kg
Radio data transmission telephone system	0.24 W/kg	2 W/kg

Overview of vehicle identification plate, VIN and engine number


VEHICLE IDENTIFICATION PLATE

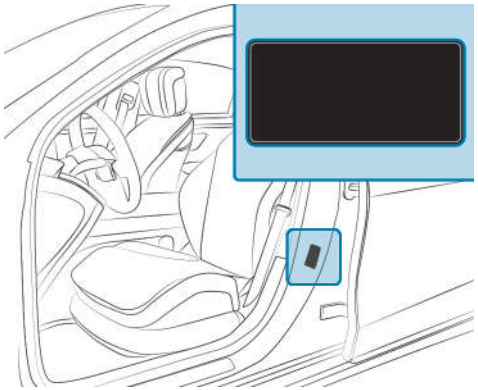

Vehicle identification plate (example: USA)

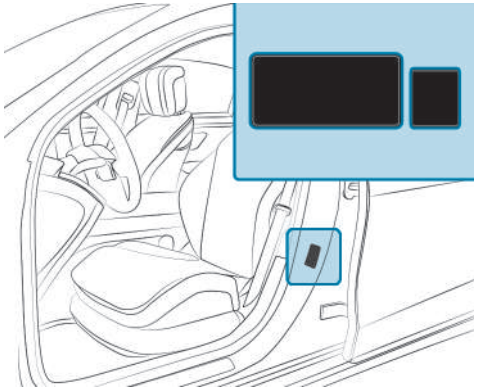


Vehicle identification plate (example: Canada)

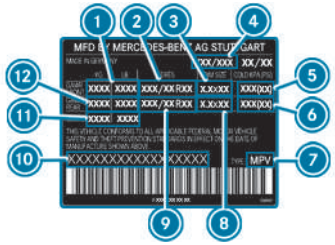

Vehicle identification plate (USA only)

1. Maximum permissible front axle load
2. Front tire size
3. Front wheel size
4. Paint code
5. Recommended tire pressure front (when cold)
6. Recommended tire pressure rear (when cold)
7. Vehicle model
8. Rear wheel size
9. Rear tire size
10. VIN (vehicle identification number)
11. Permissible gross mass
12. Maximum permissible rear axle load

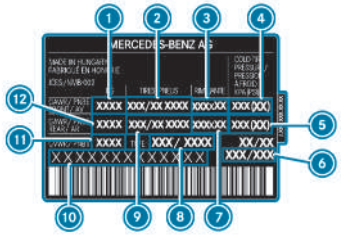

Vehicle identification plate (Canada only)

1. Maximum permissible front axle load
2. Front tire size
3. Front wheel size
4. Recommended tire pressure front (when cold)
5. Recommended tire pressure rear (when cold)
6. Paint code
7. Rear wheel size
8. Vehicle model
9. Rear tire size
10. VIN (vehicle identification number)
11. Permissible gross mass
12. Maximum permissible rear axle load

The permissible gross mass comprises the vehicle weight, all vehicle occupants, the fuel and the load. The maximum permissible axle load is the maximum weight that can be carried on one axle (front or rear axle).

Do not exceed the permissible gross mass or the maximum permissible axle load for the front or rear axle.


Canada only: The following plate can be found alongside the vehicle identification plate.



Plate confirming the national emissions guidelines and safety requirements for motor vehicles (example applicable for Canada)

VIN IN THE ENGINE COMPARTMENT

The VIN can be found on the crossmember in the engine compartment. More detailed information can be obtained at a qualified specialist workshop.

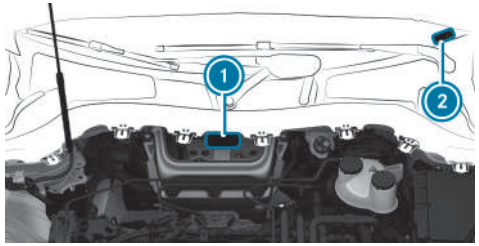

1. Imprinted VIN (vehicle identification number)
2. VIN (vehicle identification number) as a label

Operating fluids

Notes on operating fluids

WARNING
Risk of injury due to harmful operating fluids

Operating fluids can be toxic.

- ► When using, storing and disposing of operating fluids, observe the imprints on the respective original containers.
- ► Always keep operating fluids in the sealed original container.
- ► Always keep children away from operating fluids.

ENVIRONMENTAL NOTE
Pollution of the environment due to irresponsible disposal of operating fluids

Incorrect disposal of operating fluids can cause considerable damage to the environment.

- ► Dispose of operating fluids in an environmentally responsible manner.

OPERATING FLUIDS INCLUDE THE FOLLOWING:

- Lubricants
- Coolant
- Brake fluid
- Windshield washer fluid
- Climate control system refrigerant

Use only products approved by Mercedes-Benz. Damage to the vehicle caused by the use of products that have not been approved is not covered by the Mercedes-Benz warranty or goodwill gestures.

You can identify operating fluids approved by Mercedes-Benz by the following inscriptions on the container:

- MB-Freigabe (e.g. MB-Freigabe 229.51)
- MB-Approval (e.g. MB-Approval 229.51)

FURTHER INFORMATION ON APPROVED OPERATING FLUIDS IS AVAILABLE AT THE FOLLOWING LOCATIONS:

- in the Mercedes-Benz Specifications for Operating Fluids in accordance with the details on the label
  - at https://operatingfluids.mercedes-benz.com
- At a qualified specialist workshop

Notes on brake fluid

Observe the notes on operating fluids (⟶ page 700).

WARNING
Risk of an accident due to vapor pockets forming in the brake system

The brake fluid constantly absorbs moisture from the air. This lowers the boiling point of the brake fluid. If the boiling point is too low, vapor pockets may form in the brake system when the brakes are applied hard.

This causes the braking effect to be impaired.

► Have the brake fluid renewed at the specified intervals.

Have the brake fluid regularly replaced at a qualified specialist workshop. Only use a brake fluid approved by Mercedes-Benz in accordance with MB-Freigabe or MB-Approval 331.0.

Coolant

NOTES ON COOLANT
Observe the notes on operating fluids (⟶ page 700).

WARNING
Risk of fire- and injury from antifreeze

If antifreeze comes into contact with hot component parts in the engine compartment, it may ignite.

► Allow the drive system to cool down before you add antifreeze.

► Make sure that no antifreeze spills out next to the filler opening.

► Thoroughly clean the antifreeze from component parts before starting the vehicle.

NOTE
Damage caused by incorrect coolant

► Only use coolant that has been premixed with the required antifreeze protection.

INFORMATION ON COOLANT IS AVAILABLE AT THE FOLLOWING LOCATIONS:

- In the Mercedes-Benz Specification for Operating Fluids 320.1
  - At https://operatingfluids.mercedes-benz.com
- At a qualified specialist workshop

NOTE
Overheating at high outside temperatures

If an inappropriate coolant is used, the cooling system is not sufficiently protected against overheating and corrosion at high outside temperatures.

- ► Only use coolant approved for Mercedes-Benz.
- ► Observe the instructions in the Mercedes-Benz Specifications for Operating Fluids 320.1.

Have the coolant regularly replaced at a qualified specialist workshop.

PROPORTION OF ANTIFREEZE CONCENTRATE- IN THE ENGINE COOLING SYSTEM:

- A minimum of 50 % (antifreeze protection down to about -35°F (-37°C))
- A maximum of 55 % (antifreeze protection down to -49°F (-45°C))

COOLANT FILLING CAPACITY

COOLANT (DRIVE SYSTEM)

Model	Capacity
EQB 250+	17.6 US qt (16.7 liters)
All other models	18.4 US qt (17.4 liters)

Notes on windshield washer fluid

Observe the notes on operating fluids (⟶ page 700).

WARNING
Risk of fire and injury from windshield washer concentrate

Windshield washer concentrate is highly flammable. If it comes into contact with hot components, it may ignite.

- ► Make sure that windshield washer concentrate is not spilled near to the filler opening.

NOTE
Damage to the exterior lighting due to unsuitable windshield washer fluid

Unsuitable windshield washer fluid may damage the plastic surface of the exterior lighting.

- ► Only use windshield washer fluid which is also suitable for use on plastic surfaces, e.g. MB SummerFit or MB WinterFit.

NOTE
Blocked spray nozzles caused by mixing windshield washer fluids

- ► Do not mix MB SummerFit and MB WinterFit with other windshield washer fluids.

Do not use distilled or de-ionized water. Otherwise, the fill level sensor may be triggered erroneously.

RECOMMENDED WINDSHIELD WASHER FLUID:

- above freezing point: e.g. MB SummerFit

- below freezing point: e.g. MB WinterFit

For the correct mixing ratio, refer to the information on the antifreeze container.

Mix washer fluid with windshield washer fluid all year round.

Refrigerant

NOTES ON REFRIGERANT
Observe the notes on operating fluids (⟶ page 700).

NOTE
Damage due to incorrect refrigerant

If a non-approved refrigerant is used, the climate control system may be damaged.

► Use only R-1234yf refrigerant.

NOTE
Damage to the climate control system due to incorrect refrigerant compressor oil

► Only use refrigerant compressor oil that has been approved by Mercedes-Benz.

► Do not mix the approved refrigerant compressor oil with a different refrigerant compressor oil.

The refrigerant system should only be serviced by trained technicians certified to SAE Standard J2845 to insure proper and safe operation.

All applicable specifications, as well as SAE-Standard J639, must be strictly observed if reliable and proper maintenance is to be guaranteed.

The air conditioning evaporator (cooling coil) shall never be repaired or replaced with one removed from a used or salvaged vehicle and that new replacement MAC evaporators shall be certified (and labeled) as meeting SAE Standard J2842 HFO-1234yf and R744 Design Criteria and Certification for OEM Mobile Air Conditioning Evaporator and Service Replacements.

The information label on the climate control system for the refrigerant type and the refrigerant compressor oil (PAG-oil) is located on the inside of the hood.



Information label

1. Hazard and service warning symbols (see table below for symbol definitions)
2. Refrigerant filling quantity
3. CO_2 equivalent of the refrigerant used
4. Applicable standards
5. PAG oil part number
6. GWP (Global Warming Potential) of the refrigerant used
7. Refrigerant type

SYMBOLS AND DEFINITIONS

Symbol Name	Reference	Graphic
Caution	ISO 7000 0434	
Air Conditioning System (MAC)	ISO 2575 001	
MAC System Lubricant Type (PAG POE)		
Requires Registered Technician to Service MAC system		
Flammable Refrigerant		

FILLING CAPACITY FOR REFRIGERANT AND PAG OIL

REFRIGERANT FILLING CAPACITY

Model	
All models	23.6 ± 0.4 oz (670 ± 10 g)

FILLING QUANTITY FOR PAG OIL


Model	
All models	5.6 ± 0.4 oz (160 ± 10 g)

Vehicle data

Vehicle dimensions

THE HEIGHTS SPECIFIED MAY VARY AS A RESULT OF THE FOLLOWING FACTORS:

- Tires
- Load
- Condition of the suspension
- Special equipment

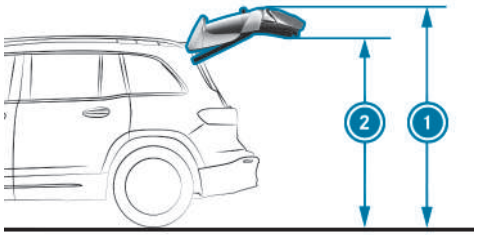

HEIGHT WHEN OPEN AND HEADROOM

Model	Height when open	Headroom
EQB 350 4MATIC	83.3 in (2116 mm)	76.5 in (1944 mm)
All other models	82.6 in (2098 mm)	75.8 in (1926 mm)

VEHICLE DIMENSIONS

All models	
Vehicle length	184.4 in (4684 mm)
Vehicle width including outside mirrors	79.5 in (2020 mm)
Wheelbase	111.4 in (2829 mm)
Turning circle	38.4 ft (11.7 m)

VEHICLE HEIGHT

Model	
EQB 250+	65.1 in (1656 mm)
EQB 300 4MATIC	66.5 in (1689 mm)
EQB 350 4MATIC	67.2 in (1706 mm)

Weights and loads

Bear in mind that special equipment increases the curb weight and reduces the payload. Vehicle-specific weight information can be found on the vehicle identification plate.

High-voltage battery

For information on charging the high-voltage battery, refer to the "Charging the high-voltage battery" section (⟶ page 293).

Missing values were not yet available at the time of going to press.

ENERGY CONTENT AND CHARGING TIMES

All models	
Type	Lithium-ion
Usable energy content	70.5 kWh
Range	
Charging time – level 4 With a maximum charging power of 100 kW	Approx. 35 min
Charging time – level 3 With 9.6 kW charging power	Approx. 8 h 30 min

Level 3 charging time – applies to AC charging from 0 % to 100 % of the usable energy content. Charging time – level 4 applies to DC charging from 10 % to 80 % of the usable energy content.

The charging time depends on the state of health of the battery, the ambient temperature, and the charging power of the battery. The charging power, in turn, depends on the supply voltage, the current, and the type of power supply.

The rated voltage range for your vehicle can be found on the information label in the socket flap (⟶ page 293).

Back to contents

Display messages and warning/indicator lamps

This interactive PDF works like a website – tap or click a button to jump straight to where you want to go.
You can return here at any time via the navigation bar at the top left.

Display messages
Warning and indicator lamps

Display messages

Introduction

INFORMATION ON DISPLAY MESSAGES
Display messages appear on the driver display.

Display messages with graphical symbols are simplified in the Operator's Manual and may differ from the symbols on the driver display. The driver display shows high-priority display messages in red. Certain display messages will be accompanied by a warning tone.

Follow the notifications in the display messages and observe the additional information in this Operator's Manual.

SYMBOLS WILL ALSO BE SHOWN WITH SOME DISPLAY MESSAGES:

- ⓘ Further information
- × Hide display message

You can select the respective symbol by swiping left or right on the left-hand Touch Control. Press ⓘ to display further information on the central display. Press × to hide the display message.

You can hide pending display messages by pressing the back button ↩ or via the left-hand Touch Control. The display messages will then be stored in the message memory.

Rectify the cause of a display message as quickly as possible.

High-priority display messages cannot be hidden. The driver display will show these display messages continuously until the cause of the display message has been rectified.

CALLING UP SAVED DISPLAY MESSAGES
Driver display:

→ Service

The Message Memory: XXmessage appears on the driver display.

- ► Scroll through the display messages by swiping upwards or downwards on the left-hand Touch Control.
- ► **To exit the display:** press the ↩ back button.

Occupant safety

Display messages	Possible causes/consequences and ▶ Solutions
 Restraint System Malfunction Service Required	* The restraint system is malfunctioning (⟶ page 119).
 Front Left Malfunction Service Required	* The restraint system is malfunctioning (⟶ page 119).

DANGER
Risk of death due to the restraint system malfunctioning

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may receive an electric shock if you touch the damaged components of the high-voltage on-board electrical system.

- ▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- ▶ After an accident, switch off the vehicle immediately.

DETECTION OF A RESTRAINT SYSTEM MALFUNCTION:

- The restraint system warning lamp does not light up when the vehicle is switched on
- The restraint system warning lamp lights up continuously or repeatedly during a journey.

▶ Consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ▶ Solutions

DANGER
Risk of death due to the restraint system malfunctioning

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may receive an electric shock if you touch the damaged components of the high-voltage on-board electrical system.

- ► Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- ► After an accident, switch off the vehicle immediately.

DETECTION OF A RESTRAINT SYSTEM MALFUNCTION:

- The restraint system warning lamp does not light up when the vehicle is switched on
- The restraint system warning lamp lights up continuously or repeatedly during a journey.

► Consult a qualified specialist workshop immediately.



Front Right Malfunction Service Required

* The restraint system is malfunctioning (⟶ page 119).

WARNING
Risk of injury due to malfunctions in the restraint system

Components in the restraint system may be activated unintentionally or not deploy as planned in an accident.

- ► Have the restraint system checked and repaired immediately at a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions

DANGER
Risk of death due to the restraint system malfunctioning

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may receive an electric shock if you touch the damaged components of the high-voltage on-board electrical system.

- ► Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- ► After an accident, switch off the vehicle immediately.

DETECTION OF A RESTRAINT SYSTEM MALFUNCTION:

- The restraint system warning lamp does not light up when the vehicle is switched on
- The restraint system warning lamp lights up continuously or repeatedly during a journey.

► Consult a qualified specialist workshop immediately.



Second Row of Seats, Left Malfunction Service Required

* The restraint system is malfunctioning (⟶ page 119).

WARNING
Risk of injury due to malfunctions in the restraint system

Components in the restraint system may be activated unintentionally or not deploy as planned in an accident.

- ► Have the restraint system checked and repaired immediately at a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions

DANGER
Risk of death due to the restraint system malfunctioning

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may receive an electric shock if you touch the damaged components of the high-voltage on-board electrical system.

- ▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- ▶ After an accident, switch off the vehicle immediately.

DETECTION OF A RESTRAINT SYSTEM MALFUNCTION:

- The restraint system warning lamp does not light up when the vehicle is switched on
- The restraint system warning lamp lights up continuously or repeatedly during a journey.

▶ Consult a qualified specialist workshop immediately.



Second Row of Seats, Right Malfunction Service Required

* The restraint system is malfunctioning (⟶ page 119).

WARNING
Risk of injury due to malfunctions in the restraint system

Components in the restraint system may be activated unintentionally or not deploy as planned in an accident.

- ▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions

DANGER
Risk of death due to the restraint system malfunctioning

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may receive an electric shock if you touch the damaged components of the high-voltage on-board electrical system.

- ▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- ▶ After an accident, switch off the vehicle immediately.

DETECTION OF A RESTRAINT SYSTEM MALFUNCTION:

- The restraint system warning lamp does not light up when the vehicle is switched on
- The restraint system warning lamp lights up continuously or repeatedly during a journey.

▶ Consult a qualified specialist workshop immediately.



Third Row of Seats, Left Malfunction Service Required

* The restraint system on the third seat row, left, is malfunctioning (⟶ page 119).

WARNING
Risk of injury due to malfunctions in the restraint system

Components in the restraint system may be activated unintentionally or not deploy as planned in an accident.

- ▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions

DANGER
Risk of death due to the restraint system malfunctioning

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may receive an electric shock if you touch the damaged components of the high-voltage on-board electrical system.

- ▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- ▶ After an accident, switch off the vehicle immediately.

DETECTION OF A RESTRAINT SYSTEM MALFUNCTION:

- The restraint system warning lamp does not light up when the ignition is switched on
- The restraint system warning lamp lights up continuously or repeatedly during a journey

▶ Consult a qualified specialist workshop immediately.



Third Row of Seats, Right Malfunction Service Required

* The restraint system on the third seat row, right, is malfunctioning (⟶ page 119).

WARNING
Risk of injury due to malfunctions in the restraint system

Components in the restraint system may be activated unintentionally or not deploy as planned in an accident.

- ▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions

DANGER
Risk of death due to the restraint system malfunctioning

Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended.

You may receive an electric shock if you touch the damaged components of the high-voltage on-board electrical system.

- ▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- ▶ After an accident, switch off the vehicle immediately.

DETECTION OF A RESTRAINT SYSTEM MALFUNCTION:

- The restraint system warning lamp does not light up when the ignition is switched on
- The restraint system warning lamp lights up continuously or repeatedly during a journey

▶ Consult a qualified specialist workshop immediately.



Left Window Airbag Malfunction Service Required

* The restraint system is malfunctioning (⟶ page 119).

WARNING
Risk of injury or fatal injury due to a malfunction in the window curtain airbag

The window curtain airbag might be triggered unintentionally or might not be triggered at all in the event of an accident.

- ▶ Have the window curtain airbag checked and repaired immediately at a qualified specialist workshop.




▶ Consult a qualified specialist workshop immediately.




Display messages	Possible causes/consequences and ▶ Solutions
 Right Window Airbag Malfunction Service Required	* The restraint system is malfunctioning (⟶ page 119). **WARNING** Risk of injury or fatal injury due to a malfunction in the window curtain airbag The window curtain airbag might be triggered unintentionally or might not be triggered at all in the event of an accident. ▶ Have the window curtain airbag checked and repaired immediately at a qualified specialist workshop. ▶ Consult a qualified specialist workshop immediately.
Front Passenger Airbag Disabled See Operator's Manual	* The front passenger air bag has been disabled even though an adult, or an individual of adult build is occupying the front passenger seat. If additional forces are applied to the seat, the weight the system detects may be too low. **WARNING** Risk of injury- or fatalities if the front passenger air bag is deactivated If the front passenger air bag is deactivated, it will not be released in the event of an accident and can not therefore provide the protection for which it is designed. An occupant on the front passenger seat may then collide with parts of the vehicle interior, forexample, in particular if they are sitting too close to the cockpit. ▶ Ensure correct status of the front passenger air bag both prior to and during the journey. ▶ Stop the vehicle immediately in accordance with the traffic conditions. ▶ Ensure that no objects are trapped under the front passenger seat. ▶ Check the status of automatic front passenger air bag shutoff (⟶ page 120). ▶ If necessary, consult a qualified specialist workshop immediately.

Display messages	Possible causes/consequences and ▶ Solutions
Front Passenger Airbag Enabled See Operator's Manual	* **THE FRONT PASSENGER AIR BAG WILL BE ENABLED WHILE THE VEHICLE IS IN MOTION IN THE FOLLOWING SITUATIONS:** • Even when a child, a small adult or an object weighing less than the system weight threshold is located on the front passenger seat. • Even when the front passenger seat is not occupied. The system may detect objects or forces that are adding to the weight applied to the seat. **WARNING** Risk of injury or death when using a child restraint system while the front passenger airbag is enabled If you secure a child in a child restraint system on the front passenger seat and the front passenger airbag is enabled, the front passenger airbag can deploy in the event of an accident. The child could be struck by the airbag. ▶ Ensure, both before and during the journey, that the status of the front passenger airbag is correct. NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. ▶ Stop the vehicle immediately in accordance with the traffic conditions. ▶ Ensure that no objects are trapped under the front passenger seat. ▶ Check the status of automatic front passenger air bag shutoff (⟶ page 120). ▶ If necessary, consult a qualified specialist workshop immediately.
Occupant Presence Reminder Inoperative	* The passive occupant presence reminder is faulty. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
 Do Not Leave People or Animals in the Vehicle	* The passive occupant presence reminder suspects that persons or animals are present in the rear passenger compartment of the vehicle. ▶ Do not leave any persons or animals in the vehicle after exiting the vehicle.

SmartKey

Display messages	Possible causes/consequences and ▶ Solutions
 Replace Key Battery	* The key battery is discharged. ▶ Change the battery (⟶ page 161).
 Key Not Detected (white display message)	* The key is currently undetected. ▶ Change the location of the key in the vehicle. ▶ Try to start the vehicle. ▶ If the key is still not detected, place it in the marked space for starting with the key (⟶ page 274). ▶ Start the vehicle.
 Key Not Detected (red display message)	* The key can no longer be detected during a journey and may no longer be in the vehicle. **IF THE KEY IS NO LONGER IN THE VEHICLE AND YOU SWITCH OFF THE VEHICLE:** • You will no longer be able to start the vehicle. • You will not be able to lock the vehicle centrally. ▶ Ensure that the key is in the vehicle.

Display messages	Possible causes/consequences and ▶ Solutions
	If the key is in the vehicle and is still not detected: ▶ Stop the vehicle immediately in accordance with the traffic conditions. ▶ Place the key in the marked space for starting the vehicle with the key (⟶ page 274). The key battery is at low capacity or is flat. ▶ Check the battery via the indicator lamp (⟶ page 158). ▶ Replace the key battery as necessary (⟶ page 161).
 Initializing Key Please Wait	* The vehicle is processing in order to teach in the new key. ▶ Wait until processing is complete.
 Don't Forget Your Key	* A warning tone will also sound. This message reminds you to take your key with you when you leave the vehicle.
Place the Key in the Marked Space See Operator's Manual	* Key detection is malfunctioning. ▶ Change the location of the key in the vehicle. ▶ Place the key in the marked space for starting the vehicle with the key (⟶ page 274).
 Obtain a New Key	* Have the key replaced. ▶ Consult a qualified specialist workshop.

Lights

Display messages	Possible causes/consequences and ▶ Solutions
 Malfunction See Operator's Manual	* The exterior lighting is malfunctioning. ▶ Consult a qualified specialist workshop.
 Automatic Driving Lights Inoperative	* The light sensor for automatic driving lights is malfunctioning. ▶ Consult a qualified specialist workshop.
 Switch On Headlights	* You are driving without low beam headlamps. ▶ Turn the light switch to position [≡D] or [AUTO].
 Switch Off Lights	* You are exiting the vehicle and the lights are still switched on. ▶ Turn the light switch to position [AUTO].
Adaptive Highbeam Assist Currently Unavailable See Operator's Manual	* Adaptive Highbeam Assist is temporarily unavailable. The system limits have been reached (⟶ page 246). The system will become available again when the cause of the problem is rectified. The Adaptive Highbeam Assist Now Available display message will appear. ▶ Continue driving. ▶ Operate the high beam manually until Adaptive Highbeam Assist becomes available once again.
Adaptive Highbeam Assist Inoperative	* Adaptive Highbeam Assist is malfunctioning. ▶ Continue driving.

Display messages	Possible causes/consequences and ▶ Solutions
	or ▶ Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ▶ If the display message does not disappear, consult a qualified specialist workshop. ▶ Until then, operate the high beam manually.
 Parking Light Front Left	* The front left parking light is malfunctioning. ▶ Consult a qualified specialist workshop.
 Parking Light Front Right	* The front right parking light is malfunctioning. ▶ Consult a qualified specialist workshop.
 Check Left Low Beam	* The left low beam is malfunctioning. ▶ Consult a qualified specialist workshop.
 Check Right Low Beam	* The right low beam is malfunctioning. ▶ Consult a qualified specialist workshop.
 Check Left Cornering Light	* The left cornering light is malfunctioning. ▶ Consult a qualified specialist workshop.
 Check Right Cornering Light	* The right cornering light is malfunctioning. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
 Check Front Left Sidemarker Light	* The front left side marker lamp is malfunctioning. ▶ Consult a qualified specialist workshop.
 Check Front Right Sidemarker Light	* The front right side marker lamp is malfunctioning. ▶ Consult a qualified specialist workshop.
 Check Rear Left Sidemarker Light	* The rear left side marker lamp is malfunctioning. ▶ Consult a qualified specialist workshop.
 Check Rear Right Sidemarker Light	* The rear right side marker lamp is malfunctioning. ▶ Consult a qualified specialist workshop.
 Check Left High Beam	* The left high beam is malfunctioning. ▶ Consult a qualified specialist workshop.
 Check Right High Beam	* The right high beam is malfunctioning. ▶ Consult a qualified specialist workshop.
 Check Left Daytime Running Light	* The left daytime running lights are malfunctioning. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
 Check Right Daytime Running Light	* The right-hand daytime running lights are malfunctioning. ▶ Consult a qualified specialist workshop.
 Turn Signal Indicator, Front Left	* The front left turn signal lamp is malfunctioning. ▶ Consult a qualified specialist workshop.
 Turn Signal Indicator, Rear Left	* The rear passenger compartment left turn signal lamp is malfunctioning. ▶ Consult a qualified specialist workshop.
 Turn Signal Indicator, Front Right	* The front right turn signal lamp is malfunctioning. ▶ Consult a qualified specialist workshop.
 Turn Signal Indicator, Rear Right	* The rear passenger compartment right turn signal lamp is malfunctioning. ▶ Consult a qualified specialist workshop.
 Turn Signal Indicator, Left Mirror	* The turn signal lamp on the left mirror is malfunctioning. ▶ Consult a qualified specialist workshop.
 Turn Signal Indicator, Right Mirror	* The turn signal lamp on the right mirror is malfunctioning. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
 Brake Light Left	* The left brake light is malfunctioning. ▶ Consult a qualified specialist workshop.
 Brake Light Right	* The right brake light is malfunctioning. ▶ Consult a qualified specialist workshop.
 Center Brake Light	* The third brake light is malfunctioning. ▶ Consult a qualified specialist workshop.
 Reversing Light	* The reversing light is malfunctioning. ▶ Consult a qualified specialist workshop.
 Rear Fog Light	* The rear fog light is malfunctioning. ▶ Consult a qualified specialist workshop.
 License Plate Light	* The license plate lamp is malfunctioning. ▶ Consult a qualified specialist workshop.
Hazard Warning Light Malfunction	* The hazard warning switch is malfunctioning. ▶ Consult a qualified specialist workshop.
Indicator Lamp in Driver's Display Inoperative Service Required	* An indicator lamp on the driver display is defective.

Display messages	Possible causes/consequences and ▶ Solutions
	▶ Consult a qualified specialist workshop.


Climate control

Display messages	Possible causes/consequences and ▶ Solutions
 Currently Not Available Charging of the High-voltage Battery Not Completed	* The high-voltage battery is charging. Pre-entry climate control cannot be switched on. ▶ Wait until the charging process has achieved a minimum state of charge.
 Currently Not Available Charge High-voltage Battery	* The charge of the high-voltage battery is too low. Pre-entry climate control cannot be switched on. ▶ Charging the high-voltage battery (⟶ page 293).
 Pre-entry Climate Control Available Again via SmartKey after Vehicle Start	* You have attempted to switch on pre-entry climate control more than three times with the vehicle switched off. ▶ Start the vehicle for ten seconds. Pre-entry climate control is operational again.
 Pre-entry Climate Control via SmartKey Currently Not Available. High-voltage Battery Low	* The charge of the high-voltage battery is too low. Pre-entry climate control cannot be switched on. ▶ Charge the high-voltage battery (⟶ page 293). Pre-entry climate control will become operational again when the high-voltage battery is sufficiently charged.

Drive system

Display messages	Possible causes/consequences and ▶ Solutions
 Cooling System Malfunction Stop Immediately Switch Off Vehicle	* The coolant is too hot. ▶ Stop the vehicle immediately in accordance with the traffic conditions and switch the drive system off. **⚠ WARNING** Risk of injury due to overheated vehicle **IF YOU OPEN THE HOOD IN THE EVENT OF AN OVERHEATED VEHICLE OR FIRE IN THE ENGINE COMPARTMENT, THE FOLLOWING SITUATIONS MAY OCCUR:** • You may come into contact with hot gases. • You may come into contact with other escaping hot operating fluids. ▶ In the event of overheating or fire in the engine compartment, keep the hood closed and call the fire service. ▶ Allow the overheated vehicle to cool down first if you need to open the hood. ▶ Wait until the drive system has cooled down. ▶ Ensure that the air supply to the vehicle radiator is not obstructed. ▶ Avoiding high loads on the drive system, drive to the nearest qualified specialist workshop.
 Towing Not Permitted See Operator's Manual	* The drive system is malfunctioning. ▶ Have the vehicle transported using only a transporter or trailer (⟶ page 587).


Display messages	Possible causes/consequences and ▶ Solutions
 Acoustic Presence Indicator Inoperative	* The sound generator (acoustic vehicle alerting system) is malfunctioning. No vehicle noises are being produced. The vehicle may not be heard by other road users. ▶ Drive with utmost caution. ▶ Consult a qualified specialist workshop.
To Switch Off Vehicle Press and Hold Start/Stop Button for at Least 3 Seconds or Press 3 Times	* You have pressed the start/stop button while the vehicle is in motion. ▶ To switch the drive system off while the vehicle is in motion (⟶ page 272).
Cannot Start Vehicle See Operator's Manual	* It is not possible to start the vehicle. A malfunction has occurred in the drive system. ▶ Switch off and lock the vehicle. ▶ After waiting for a short time, unlock the vehicle and start it again. ▶ If the display message appears again and the vehicle does not start, consult a qualified specialist workshop.
 Check Coolant Level See Operator's Manual	* The coolant level is too low. **NOTE** Damage to the drive system due to insufficient coolant ▶ Avoid long journeys with insufficient coolant. ▶ Have the cooling system of the drive system checked at a qualified specialist workshop.
	* The cooling system has detected a component malfunction. ▶ Avoiding high loads on the drive system, drive to the nearest qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
 Charging Cable Connected	* You cannot pull away while the charging cable is connected. ▶ Disconnect the charging cable from the vehicle.
Not Possible to Unlock Charging Cable See Operator's Manual	* The charging cable connector cannot be removed from the vehicle socket. ▶ If the charging cable is under strain, relieve the strain on the charging cable connector by carefully pulling on the charging cable. ▶ Press the charging interruption button (⟶ page 306). If the charging cable connector cannot be subsequently removed: ▶ Consult a qualified specialist workshop.
Vehicle Not Currently Being Charged Try a Different Charging Station	* A malfunction has occurred in the charging station or the RFID card is not recognize. ▶ Start the charging process at a different charging station. or ▶ Use an alternative authentication method or payment method.
Charging Fault Change Charging Mode See Operator's Manual	* A temporary malfunction has occurred in the charging station. ▶ Wait until the malfunction has passed. or ▶ Start the charging process at a different charging station. or ▶ Use an alternative authentication method or payment method.
AC Charging Inoperative Service Required	* The charging process cannot be started due to a malfunction. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
DC Charging Inoperative Service Required	* The charging process cannot be started due to a malfunction. ▶ Consult a qualified specialist workshop.
Authentication Failed Use Different Authentication Method or Charging Station	* Plug-and-Charge is not expected to be available at this charging station. ▶ Use an alternative authentication method or payment method. or ▶ Start the charging process at a different charging station.
Reduced Drive Power See Operator's Manual	* The drive system is outside the normal operating temperature range (e.g. due to extremely low or high outside temperatures). Drive system power output is reduced. The yellow reduced-power warning lamp is lit. Once the operating temperature of the drive system returns to normal (e.g. after a short trip), maximum output will be available once again. The display message and the yellow reduced-power warning lamp will go out. ▶ Continue driving with caution. * The high-voltage battery is not charged sufficiently. Drive system power output is reduced. The yellow reduced-power warning lamp is lit. ▶ Continue driving with caution. ▶ Charge the high-voltage battery immediately. * If the drive system power output is still reduced, there is a malfunction in the drive system. ▶ Continue driving with caution. ▶ Consult a qualified specialist workshop.
Charge high-voltage battery if the vehicle will be parked for an extended period at low outside temperatures.	* Due to a possible drop in temperature of the high-voltage battery, the starting ability or the range may drop significantly until the vehicle is restarted. ▶ Charging the high-voltage battery (⟶ page 293).

Display messages	Possible causes/consequences and ▶ Solutions
Wait in READY State Battery Is Warming Up See Operator's Manual	* Vehicle traction standby is established READY and transmission position P is engaged. The high-voltage battery is warmed up to the operating temperature. This process can take a few minutes, and possibly longer if defrosting of the windshield MAX is activated. The heating process ends when transmission position D is engaged. However, output will be significantly limited in driving operation until the high-voltage battery has reached its operating temperature.
 Battery Too Low Stop Vehicle Charge Immediately	* The state of charge for the high-voltage battery is so low that it is no longer possible to drive the vehicle. The drive system can no longer be restarted. When the drive system is restarted, the message Battery Too Low Stop Vehicle Charge Immediately will appear again. ▶ Stop the vehicle immediately in accordance with the traffic conditions. ▶ Charging the high-voltage battery (⟶ page 293).
 Battery Overheated Stop! Everyone Get Out! Outdoors if Possible	* The high-voltage battery has overheated. There is a risk of fire. ▶ Stop the vehicle immediately in accordance with the traffic conditions. ▶ If possible, stop the vehicle in the open air and ensure that all vehicle occupants exit the vehicle. ⓘ Supporting vehicle functions may activate automatically (e.g. the climate control's air-recirculation mode). ▶ Do not continue driving. ▶ In the event of smoke, leave the danger zone and notify the fire service immediately. ▶ Notify a qualified specialist workshop even if there are no external signs of fire.
 Malfunction	* The drive system is malfunctioning. A warning tone will also sound. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
 Malfunction Service Required	* The drive system is malfunctioning. ▶ Consult a qualified specialist workshop.
Do Not Restart Vehicle Service Required	* It is not possible to restart the drive system due to a malfunction. ▶ Do not switch the drive system off; continue driving to the nearest qualified specialist workshop.
Drive Malfunction Achievable Speed Severely Limited See Operator's Manual	* The drive system is malfunctioning. Maximum vehicle speed is restricted. ▶ Consult a qualified specialist workshop.
 Reserve Level Charge High-Voltage Battery	* The state of charge for the high-voltage battery has dropped into the reserve range. ▶ Charging the high-voltage battery (⟶ page 293).
 12 V Battery See Operator's Manual	* The drive system is off and the state of charge of the 12 V battery is too low. ▶ Switch off electrical consumers that are not required. ▶ Drive for 30 - 60 mins. or ▶ Charge the vehicle at a charging station (⟶ page 293). If the message appears while the vehicle is switched on, this indicates an on-board electrical system malfunction. ▶ Consult a qualified specialized workshop.
 Malfunction	* The drive system is malfunctioning. The output of your vehicle is restricted. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
 Stop Switch Off Vehicle	* The drive system is malfunctioning. ▶ Stop the vehicle immediately in accordance with the traffic conditions and switch the drive system off. Do not continue driving as the drive system is automatically deactivated. ▶ Do not tow the vehicle; stop towing if necessary. ▶ Consult a qualified specialist workshop.
 Malfunction Service Required	* The drive system is malfunctioning. ▶ Consult a qualified specialist workshop.
 Performance Extremely Limited	* A malfunction has occurred in the high-voltage battery. Output and range will be severely restricted. ▶ Switch off and lock the vehicle. ▶ After waiting for a short time, unlock the vehicle and start it again. If the display message appears again: ▶ Continue driving with caution. ▶ Fully charge the high-voltage battery (⟶ page 293). If the output and range are still reduced, there is a malfunction in the drive system. ▶ Continue driving with caution. ▶ Consult a qualified specialist workshop.
High-Voltage Battery Fault No Start in Approx. XXX mi Service Required (yellow display message)	* A malfunction has occurred in the high-voltage battery. It will no longer be possible to start the electric drive system after the distance displayed has been covered.


Display messages	Possible causes/consequences and ▶ Solutions
	▶ Have the necessary maintenance work on the high-voltage battery carried out at a qualified specialist workshop.
High-Voltage Battery Fault No Start in Approx. XXX mi Service Required (red display message)	* A malfunction has occurred in the high-voltage battery. It will no longer be possible to start the electric drive system after the distance displayed has been covered. ▶ Have the necessary maintenance work on the high-voltage battery carried out immediately at a qualified specialist workshop.
Hight-Voltage Battery Fault Do Not Restart Service Required	* A malfunction has occurred in the high-voltage battery. It will no longer be possible to restart the drive system once it has been switched off. ▶ Do not switch the drive system off; continue driving to the nearest qualified specialist workshop.

Vehicle

Display messages	Possible causes/consequences and ▶ Solutions
Vehicle Ready to Drive Shutdown Occurs When Locked or After a Few Minutes	* You are exiting the vehicle with operational readiness established. ▶ Exit the vehicle, secure it against rolling away, and take the key with you. ▶ If you do not leave the vehicle, switch off the electrical consumers (e.g.,the seat heating). Otherwise, the 12-V battery may discharge and starting the engine will then only be possible with the help of a second battery (starting assistance).
 Add Washer Fluid	* The washer fluid level in the washer fluid reservoir has dropped below the minimum fill level. ▶ Top up washer fluid (⟶ page 29).
Windshield Wiper Malfunction	* The windshield wiper is malfunctioning. ▶ Restart the vehicle.

Display messages	Possible causes/consequences and ▶ Solutions
	If the display message does not disappear: ▶ Consult a qualified specialist workshop.
Head-up Display Currently Unavailable See Operator's Manual	* **THE HEAD-UP DISPLAY IS TEMPORARILY UNAVAILABLE. POSSIBLE CAUSES:** • Faults in the power supply • Signal interference ▶ Stop in accordance with the traffic conditions and switch the vehicle off and then on again. ▶ If the display message does not disappear, consult a qualified specialist workshop.
Head-up Display Inoperative	* The head-up display is indicating an internal error. ▶ Consult a qualified specialist workshop.
 Steering Malfunction Stop Immediately See Operator's Manual	* The steering is malfunctioning. Steering capability is significantly impaired. **WARNING** Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardized. ▶ Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ▶ Consult a qualified specialist workshop. ▶ Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
 Steering Malfunction Increased Physical Effort See Operator's Manual	* The power steering assistance is malfunctioning. **WARNING** Risk of an accident due to altered steering characteristics If the power assistance of the steering fails partially or completely, you will need to use more force to steer. ► If safe steering is possible, drive on carefully. ► Visit or consult a qualified specialist workshop immediately. ► If safe steering is possible, continue driving with caution. ► Consult or notify a qualified specialist workshop immediately.
	* The hood is open. **WARNING** Risk of accident due to driving with the hood unlocked The hood may open and block your view. ► Never release the hood when driving. ► Before every trip, ensure that the hood is locked. ► Stop the vehicle immediately in accordance with the traffic conditions. ► Close the hood.
	* At least one door is open. ► Close all doors.

Display messages	Possible causes/consequences and ▶ Solutions
	* The tailgate is open. ▶ Close the tailgate.
 2nd Seat Row, Left Not Locked	* The left-hand seat or the seat backrest on the second seat row is not locked in place. ▶ Fold the corresponding seat backrest back until it locks in place and/or push the seat row back (⟶ page 200). ▶ Ensure that the seat is locked in place (⟶ page 200).
 2nd Seat Row, Right Not Locked	* The right-hand seat or the seat backrest on the second seat row is not locked in place. ▶ Fold the corresponding seat backrest back until it locks in place and/or push the seat row back (⟶ page 200). ▶ Ensure that the seat is locked in place (⟶ page 200).
 Cannot Fold 2nd Seat Row See Operator's Manual	* The seat backrests on the second seat row cannot be folded forward. ▶ Check the requirements for folding the seat backrests forward on the second seat row (⟶ page 200).
 3rd Seat Row, Left Not Locked	* The left-hand seat or the seat backrest on the third seat row is not locked in place. ▶ Fold the corresponding seat backrest back until it locks in place and/or push the seat row back (⟶ page 200). ▶ Ensure that the seat is locked in place (⟶ page 200).
 3rd Seat Row, Right Not Locked	* The right-hand seat or the seat backrest on the third seat row is not locked in place. ▶ Fold the corresponding seat backrest back until it locks in place and/or push the seat row back (⟶ page 200). ▶ Ensure that the seat is locked in place (⟶ page 200).

Transmission

Display messages	Possible causes/consequences and ▶ Solutions
Stop Vehicle Leave Engine Running Wait Transmission Cooling	* No drive range can be selected from park position P. The transmission is overheating. ▶ Wait until the transmission has cooled down. ▶ If it is still not possible to select a drive range, contact a qualified specialized workshop.
Shift to P Only When Vehicle Is Stationary	* It is possible to select the park position P only if the vehicle is stationary. ▶ Depress the brake pedal to stop. ▶ Shift the transmission to park position P with the vehicle at a standstill.
Depress Brake to Shift from P	* You have attempted to shift the transmission out of park position P and into another transmission position. ▶ Depress the brake pedal. ▶ Engage transmission position D, R or neutral N.
To Deselect P or N Depress Brake and Start Vehicle	* You have attempted to shift the transmission out of park position P or neutral N and into another transmission position. ▶ Depress the brake pedal. ▶ Start the vehicle. ▶ Change the transmission position.
Depress Brake to Shift to D or R	* You have attempted to engage transmission position D or R. ▶ Depress the brake pedal. ▶ Engage transmission position D or R.
Depress Brake to Shift to R	* You have attempted to select transmission position R. ▶ Depress the brake pedal.

Display messages	Possible causes/consequences and ▶ Solutions
	▶ Select transmission position R.
Risk of Vehicle Rolling Away Driver's Door Open Position P Not Selected	* The driver's door is not fully closed and transmission position D, R or neutral N is engaged. The vehicle may roll away. ▶ Engage park position P when parking the vehicle.
N Permanently Active Risk of Rolling Away	* Neutral N has been engaged while the vehicle is moving or while you are driving. ▶ Depress the brake pedal to stop. ▶ Shift the transmission to park position P when the vehicle is stationary. ▶ To continue driving, select transmission position D or R.
Reversing Not Possible Service Required	* The transmission is malfunctioning. It is not possible to engage transmission position R. ▶ Consult a qualified specialist workshop.
Transmission Malfunction Stop	* The transmission is malfunctioning. The transmission shifts to neutral N automatically. ▶ Stop the vehicle immediately in accordance with the traffic conditions. ▶ Depress the brake pedal. ▶ Engage park position P. ▶ Consult a qualified specialist workshop.
Service Required Do Not Change Transmission Position	* The transmission is malfunctioning. It is no longer possible to change the transmission position. ▶ If transmission position D is engaged, consult a qualified specialist workshop and do not change the transmission position. ▶ For all other transmission positions, park the vehicle safely. ▶ Consult a qualified specialist workshop or breakdown service.

Brakes

Display messages	Possible causes/consequences and ▶ Solutions
PARK (USA only) (P) (Canada only) Parking Brake See Operator's Manual	* The yellow indicator lamp (P) is lit. The electric parking brake is malfunctioning. **To apply:** ▶ Switch the vehicle off and then back on again. ▶ Apply the electric parking brake manually (⟶ page 320). If it is not possible to apply the electric parking brake: ▶ Consult a qualified specialist workshop. ▶ Where necessary, also secure the parked vehicle against rolling away. * The yellow indicator lamp (P) and the red indicator lamp PARK (USA only) or (P) (Canada only) are lit. The electric parking brake is malfunctioning. **To release:** ▶ Switch the vehicle off and then back on again. ▶ Release the electric parking brake manually (⟶ page 320). or ▶ Release the electric parking brake automatically (⟶ page 319). If it is still not possible to release the electric parking brake: ▶ Do not continue driving. Consult a qualified specialist workshop. * The yellow indicator lamp (P) is lit and the red indicator lamp PARK (USA only) or (P) (Canada only) is flashing. The electric parking brake is malfunctioning. The electric parking brake could not be applied or released. ▶ Switch the vehicle off and then back on again. **To apply:**

Display messages	Possible causes/consequences and ▶ Solutions

▶ Release and then apply the electric parking brake manually (⟶ page 320).

To release:

▶ Apply and then release the electric parking brake manually.

If the electric parking brake cannot be applied or the red indicator lamp PARK (USA only) or (P) (Canada only) continues flashing:

▶ Do not continue driving. Consult a qualified specialist workshop.

▶ Where necessary, also secure the parked vehicle against rolling away.

* The yellow indicator lamp (P) is lit and the red indicator lamp PARK (USA only) or (P) (Canada only) flashes for approximately ten seconds after the electric parking brake has been applied or released. It then remains lit or goes out. The electric parking brake is malfunctioning.

If the state of charge is too low:

▶ Charge the 12 V battery (⟶ page 55).

To apply:

▶ Switch off the vehicle.
The electric parking brake will be applied automatically.

If you do not want the electric parking brake to be applied (e.g.at a car wash or when the vehicle is being towed), leave the vehicle switched on. This does not apply when having the vehicle towed with the rear passenger compartment axle raised.

If the electric parking brake is not applied automatically:

▶ Switch the vehicle off and then back on again.

▶ Release and then apply the electric parking brake manually (⟶ page 320).

If it is still not possible to apply the electric parking brake:

▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
	▶ Where necessary, also secure the parked vehicle against rolling away. **To release:** ▶ If the conditions for automatic release are fulfilled and the electric parking brake is not released automatically, release the electric parking brake manually (⟶ page 320). If it is still not possible to release the electric parking brake: ▶ Do not continue driving. Consult a qualified specialist workshop.
PARK (USA only) (P) (Canada only) Release Parking Brake	* The red indicator lamp PARK (USA only) or (P) (Canada only) is flashing. **THE ELECTRIC PARKING BRAKE IS APPLIED WHILE YOU ARE DRIVING:** • A condition for automatic release of the electric parking brake has not been fulfilled (⟶ page 319). • You are performing emergency braking using the electric parking brake (⟶ page 321). ▶ Check the conditions for automatic release of the electric parking brake. ▶ Release the electric parking brake manually.
PARK (USA only) (P) (Canada only) Switch on Vehicle to Release the Parking Brake	* The red indicator lamp PARK (USA only) or (P) (Canada only) is lit. You have attempted to release the electric parking brake with the vehicle switched off. ▶ Switch on the vehicle.

Display messages	Possible causes/consequences and ▶ Solutions
 (USA only)  (Canada only) Check Brake Fluid Level	* There is insufficient brake fluid in the brake fluid reservoir. **WARNING** Risk of an accident due to low brake fluid level If the brake fluid level is too low, the braking effect and the braking characteristics may be impaired. ▶ Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ▶ Consult a qualified specialist workshop. ▶ Do not add brake fluid. ▶ Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. ▶ Do not add brake fluid. ▶ Consult a qualified specialist workshop.
Check Brake Pads See Operator's Manual	* The brake linings have reached the wear limit. ▶ Consult a qualified specialist workshop.

Driving and driving safety systems

Display messages	Possible causes/consequences and ▶ Solutions
 Currently Unavailable See Operator's Manual (ABS and ESP®)	* ABS and ESP® are temporarily unavailable. Other driving systems and driving safety systems (e.g.,BAS) may also be temporarily unavailable. The brake system continues to function normally. Braking distance may increase in an emergency braking situation.

Display messages	Possible causes/consequences and ▶ Solutions
 Inoperative See Operator's Manual (ABS and ESP®)	**WARNING** Risk of skidding if ABS and ESP® are malfunctioning The wheels may lock during braking and ESP® does not perform any vehicle stabilization. The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off. ► Drive carefully on a suitable stretch of road, making slight steering movements at a speed above 19 mph (30 km/h). ► If the display message does not disappear, consult a qualified specialist workshop immediately. Drive carefully. ► Drive with caution on a suitable stretch of road, executing slight steering movements at a speed above 19 mph (30 km/h). ► If the display message does not disappear, consult a qualified specialist workshop immediately. Continue driving with caution. * ABS and ESP® are malfunctioning. Other driving systems and driving safety systems (e.g.,BAS) may also be malfunctioning. The brake system continues to function normally. Braking distance may increase in an emergency braking situation.

Display messages	Possible causes/consequences and ▶ Solutions

WARNING
Risk of skidding if ABS and ESP® are malfunctioning

The wheels may block during braking and ESP® does not perform any vehicle stabilization.

The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off.

- ► Drive on carefully.
- ► Have ABS and ESP® checked immediately at a qualified specialist workshop.

► Continue driving with caution.

► Consult a qualified specialist workshop immediately.



Currently Unavailable See Operator's Manual (ESP®)


* ESP® is temporarily unavailable.

Other driving systems and driving safety systems (e.g.,BAS) may also be malfunctioning.

WARNING
Risk of skidding if ESP is malfunctioning®

If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilization. In addition, other driving safety systems are switched off.

- ► Drive carefully on a suitable stretch of road, making slight steering movements at a speed above 19 mph (30 km/h).
- ► If the display message does not disappear, consult a qualified specialist workshop immediately. Drive carefully.

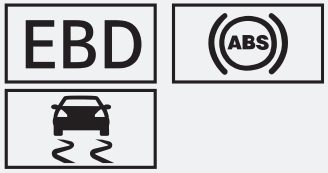Display messages	Possible causes/consequences and ▶ Solutions
	▶ Drive with caution on a suitable stretch of road, executing slight steering movements at a speed above 19 mph (30 km/h). ▶ If the display message does not disappear, consult a qualified specialist workshop immediately. Continue driving with caution.
 Inoperative See Operator's Manual (ESP®)	* ESP® is malfunctioning. Other driving systems and driving safety systems (e.g.,BAS) may also be malfunctioning. The brake system continues to function normally. Braking distance may increase in an emergency braking situation. **WARNING** Risk of skidding if ESP® is malfunctioning If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilization. In addition, other driving safety systems are switched off. ▶ Drive on carefully. ▶ Have ESP® checked at a qualified specialist workshop. ▶ Continue driving with caution. ▶ Consult a qualified specialist workshop immediately.
 Inoperative See Operator's Manual (EBD, ABS, and ESP®)	* EBD, ABS, and ESP® are malfunctioning. Other driving systems and driving safety systems (e.g.,BAS) may also be malfunctioning.

Display messages	Possible causes/consequences and ▶ Solutions
	WARNING Risk of skidding if EBD, ABS and ESP® are malfunctioning The wheels may block during braking and ESP® does not perform any vehicle stabilization. The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off. ▶ Drive on carefully. ▶ Have the brake system checked immediately at a qualified specialist workshop. ▶ Continue driving with caution. ▶ Consult a qualified specialist workshop immediately.
 Off	* The HOLD function is deactivated due to the vehicle sliding or because a condition for activation is not fulfilled. ▶ Reactivate the HOLD function later or check the activation conditions for the HOLD function (⟶ page 328).
 ATTENTION ASSIST: Take a Break!	* ATTENTION ASSIST has detected fatigue or an increasing lack of concentration on the part of the driver (⟶ page 329). ▶ If necessary, take a break.
 - - - mph	* Cruise control cannot be activated because not all activation conditions are fulfilled. ▶ Observe the activation conditions for cruise control (⟶ page 332).
Cruise Control Inoperative	* Cruise control is malfunctioning. ▶ Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
Cruise Control Off	* Cruise control has been deactivated. If there is an additional warning tone, cruise control has been deactivated automatically (⟶ page 331).
Traffic Sign Assist Currently Unavailable See Operator's Manual	* Traffic Sign Assist is temporarily unavailable. The system will become available again when the cause of the problem is rectified. ▶ Continue driving in compliance with the traffic regulations.
Traffic Sign Assist Inoperative	* Traffic Sign Assist is malfunctioning. ▶ Continue driving in compliance with the traffic regulations. or ▶ Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ▶ If the display message does not disappear, consult a qualified specialist workshop.
 Malfunction Do Not Exceed 50 mph	* The adjustable damping is malfunctioning. The vehicle's handling characteristics may be affected. ▶ Do not drive at speeds greater than 50 mph (80 km/h). ▶ Consult a qualified specialist workshop.

Driver assistance systems

Display messages	Possible causes/consequences and ▶ Solutions
Emergency Stop Initiated To Cancel: Operate Steering Wheel and a Pedal	* No driver activity (e.g. steering or accelerating) was detected for an extended period. Active Emergency Stop Assist will initiate an emergency stop (⟶ page 343). ▶ Place your hands on the steering wheel. ▶ Move the steering wheel. ▶ Accelerate or brake.


Display messages	Possible causes/consequences and ▶ Solutions
	Information on Canceling an emergency stop (⟶ page 345).
 --- mph	* Active Distance Assist DISTRONIC cannot be activated because not all activation conditions are fulfilled. ▶ Comply with the activation conditions of Active Distance Assist DISTRONIC (⟶ page 337).
 Suspended	* If you depress the accelerator pedal beyond the setting of Active Distance Assist DISTRONIC, the system will switch to passive mode (⟶ page 334).
 Off	* Active Distance Assist DISTRONIC was deactivated. If a warning tone also sounds, Active Distance Assist DISTRONIC has deactivated automatically (⟶ page 337).
Active Distance Assist Currently Unavailable See Operator's Manual	* Active Distance Assist DISTRONIC is temporarily unavailable. The ambient conditions are outside the system limits (⟶ page 334). The system will become available again as soon as the ambient conditions are within the system limits. ▶ Continue driving with caution. or ▶ If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.
Active Distance Assist Inoperative	* Active Distance Assist DISTRONIC and Active Emergency Stop Assist are malfunctioning. Other driving systems and driving safety systems may also be malfunctioning. ▶ Continue driving with caution. or ▶ Stop the vehicle in accordance with traffic conditions and restart the vehicle.

Display messages	Possible causes/consequences and ▶ Solutions
	▶ If the display message does not disappear, consult a qualified specialist workshop.
Active Distance Assist Now Available	* Active Distance Assist DISTRONIC is operational again. ▶ Switch on Active Distance Assist DISTRONIC (⟶ page 337).
Active Brake Assist Functions Currently Limited See Operator's Manual	* **FOR VEHICLES WITH THE DRIVING ASSISTANCE PACKAGE, THE FOLLOWING FUNCTIONS MAY BE TEMPORARILY UNAVAILABLE OR ONLY AVAILABLE TO A LIMITED EXTENT:** • Active Brake Assist • Active Evasive Steering Assist The ambient conditions are outside the system limits (⟶ page 346). **Vehicles without Driving Assistance Package:** Active Brake Assist is temporarily unavailable. ▶ Continue driving with caution. The system will become available again as soon as the ambient conditions are within the system limits. or ▶ If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.
Active Brake Assist Functions Limited See Operator's Manual	* **FOR VEHICLES WITH THE DRIVING ASSISTANCE PACKAGE, THE FOLLOWING FUNCTIONS MAY BE TEMPORARILY UNAVAILABLE OR ONLY AVAILABLE TO A LIMITED EXTENT:** • Active Brake Assist • Active Evasive Steering Assist **Vehicles without Driving Assistance Package:** Active Brake Assist is temporarily unavailable or only available to a limited extent. ▶ Continue driving with caution. or

Display messages	Possible causes/consequences and ▶ Solutions
	▶ Stop the vehicle in accordance with traffic conditions and restart the vehicle. ▶ If the display message does not disappear, consult a qualified specialist workshop.
Active Steering Assist Currently Unavailable See Operator's Manual	* Active Steering Assist is temporarily unavailable. The ambient conditions are outside the system limits (⟶ page 343). The system will become available again as soon as the ambient conditions are within the system limits. ▶ Continue driving. ▶ Check the tire pressure as necessary.
Active Steering Assist Inoperative	* Active Steering Assist and Active Emergency Stop Assist are malfunctioning. Active Distance Assist DISTRONIC is still available. ▶ Continue driving. or ▶ Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ▶ If the display message does not disappear, consult a qualified specialist workshop.
Active Steering Assist Currently Unavailable Due to Multiple Emergency Stops	* Active Steering Assist is temporarily unavailable due to multiple emergency stops. ▶ Resume manual steering and stop in accordance with the traffic conditions. ▶ Switch the vehicle off and then back on again. Active Steering Assist is available once more.
Active Emergency Stop Assist Currently Unavailable See Operator's Manual	* Active Emergency Stop Assist is temporarily unavailable. The ambient conditions are outside the system limits (⟶ page 345). The system will become available again as soon as the ambient conditions are within the system limits. ▶ Continue driving. or ▶ If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.

Display messages	Possible causes/consequences and ▶ Solutions
Active Emergency Stop Assist Inoperative	* Active Emergency Stop Assist is malfunctioning. ▶ Continue driving. or ▶ Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ▶ If the display message does not disappear, consult a qualified specialist workshop.
Blind Spot Assist and Exiting Warning Currently Unavailable See Operator's Manual	* Blind Spot Assist is temporarily unavailable. The system limits have been reached (⟶ page 354). The system will become available again when the cause of the problem is rectified. ▶ Continue driving. or ▶ If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.
Blind Spot Assist and Exit Warning Inoperative	* Blind Spot Assist or the exit warning is malfunctioning. ▶ Continue driving. or ▶ Stop the vehicle in accordance with traffic conditions and restart the vehicle. ▶ If the display message does not disappear, consult a qualified specialist workshop.
Active Lane Keeping Assist Currently Unavailable See Operator's Manual	* Active Lane Keeping Assist is temporarily unavailable. The ambient conditions are outside the system limits (⟶ page 356). The system will become available again as soon as the ambient conditions are within the system limits. ▶ Continue driving.
Active Lane Keeping Assist Inoperative	* Active Lane Keeping Assist and Active Emergency Stop Assist are malfunctioning.

Display messages	Possible causes/consequences and ▶ Solutions
	▶ Continue driving. or ▶ Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ▶ If the display message does not disappear, consult a qualified specialist workshop.
Active Lane Keeping Assist Limited Range of Functions See Operator's Manual	* Active Lane Keeping Assist is available but restricted. ▶ Continue driving. or ▶ Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ▶ If the display message does not disappear, consult a qualified specialist workshop.
 Temporarily Unavailable Sensors Dirty	* **FRONT AND CORNER RADAR SENSORS (HEREAFTER REFERRED TO AS "SENSORS") ARE MALFUNCTIONING. POSSIBLE CAUSES:** • The sensors are dirty • Heavy rain or snow • Extensive country drives with no flowing traffic (e.g. in the desert) Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. The brake system, steering and drive system will continue to function normally. ▶ Continue driving with caution. Once the causes of the problem have been rectified, the driving systems and driving safety systems will be available again and the corresponding symbols are switched off. If the display message does not disappear: ▶ Stop the vehicle in accordance with the traffic conditions.

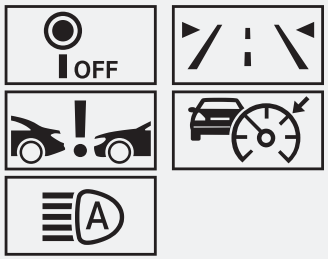Display messages	Possible causes/consequences and ▶ Solutions
	▶ Clean all sensor covers from the outside (⟶ page 323). ▶ Restart the vehicle.
 Camera View Reduced See Operator's Manual	* **THE VIEW OF THE MULTIFUNCTION CAMERA IS RESTRICTED. POSSIBLE CAUSES:** • Dirt on the windshield in the field of vision of the multifunction camera • Heavy rain, snow or fog • Mist on the inside or outside of the windshield: in certain weather conditions, mist can form on the inside or outside of the windshield during colder times of the year in particular. ⓘ The mist on the windshield will be removed automatically in a short space of time with the aid of a heater. The restriction is temporary. Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. The brake system, steering and drive system will continue to function normally. ▶ Continue driving with caution. ▶ To remove mist from the outside, wipe once (⟶ page 251). ▶ To remove the mist from the inside, press MAX (⟶ page 263). Once the causes of the problem have been rectified, the driving systems and driving safety systems will be available again and the corresponding symbols are switched off. If the display message still does not disappear after a driving time of about 15 minutes: ▶ Stop the vehicle in accordance with the traffic conditions. ▶ Clean the windshield, especially around the position of the multifunction camera (⟶ page 323). ▶ Restart the vehicle.

Display messages	Possible causes/consequences and ▶ Solutions
PRE-SAFE Inoperative See Operator's Manual	* The PRE-SAFE® functions are malfunctioning. ▶ Consult a qualified specialist workshop.

Parking assistance systems

Display messages	Possible causes/consequences and ▶ Solutions
PARKTRONIC Inoperative See Operator's Manual	* Parking Assist PARKTRONIC is malfunctioning. The system will become available again when the cause of the problem is rectified. ▶ Continue driving while paying attention to the vehicle's surroundings. or ▶ Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ▶ If the display message does not disappear, consult a qualified specialist workshop.
Active Parking Assist and PARKTRONIC Inoperative See Operator's Manual	* Active Parking Assist and Parking Assist PARKTRONIC are malfunctioning. The system will become available again when the cause of the problem is rectified. ▶ Continue driving while paying attention to the vehicle's surroundings. or ▶ Stop the vehicle in accordance with the traffic conditions and restart the vehicle. ▶ If the display message does not disappear, consult a qualified specialist workshop.

Mercedes-Benz emergency call system

Display messages	Possible causes/consequences and ▶ Solutions
 Inoperative	* The Mercedes-Benz emergency call system is malfunctioning. The Mercedes-Benz Support system is also malfunctioning. ▶ Consult a qualified specialist workshop.

Tire pressure monitor

Display messages	Possible causes/consequences and ▶ Solutions
Tire Pressure Monitor Currently Unavailable	* There is interference from a powerful radio signal source. As a result, no signals from the tire pressure sensor are being received. The tire pressure monitoring system is temporarily unavailable. The tire pressure monitoring system will restart automatically as soon as the cause has been rectified. ▶ Continue driving.
Tire Pressure Monitor Inoperative	* The tire pressure monitoring system is malfunctioning. **WARNING** There is a risk of an accident if the tire pressure monitoring system is malfunctioning The tire pressure monitoring system cannot issue a warning if there is pressure loss in one or more of the tires. Tires with insufficient tire pressure may impair the driving characteristics as well as steering and braking. ▶ Have the tire pressure monitoring system checked at a qualified specialist workshop. ▶ Consult a qualified specialist workshop.
Tire Pressure Monitor Inoperative Tire Pressure Sensors Missing	* The mounted wheels do not have suitable tire pressure sensors. The tire pressure monitoring system is deactivated.

Display messages	Possible causes/consequences and ▶ Solutions
	▶ Install wheels with suitable tire pressure sensors.
 Wheel Sensor(s) Missing	* There is no signal from the tire pressure sensor for at least one wheel. No pressure value is displayed for the affected tire. ▶ Have the faulty tire pressure sensor replaced at a qualified specialist workshop.
 Check Tires	* The tire pressure in one or more tires has dropped significantly. The wheel position is displayed. A warning tone will also sound. **⚠ WARNING** Risk of an accident due to insufficient tire pressure • The tires can burst. • The tires can wear excessively and/or unevenly. • The driving characteristics as well as the steering and braking may be greatly impaired. You could then lose control of the vehicle. ▶ Observe the recommended tire pressures. ▶ Adjust the tire pressure if necessary. ▶ Stop the vehicle in accordance with the traffic conditions. ▶ Check the tire pressure (⟶ page 602) and the tires.
 Please Correct Tire Pressure	* The tire pressure is too low for at least one of the tires, or the difference in tire pressure between the individual wheels is too great. ▶ Check the tire pressure and add air as necessary. ▶ When the tire pressure is correct, restart the tire pressure monitoring system (⟶ page 607).

Display messages	Possible causes/consequences and ▶ Solutions
 Warning Tire Malfunction	* The tire pressure in one or more tires has dropped suddenly. The wheel position is displayed.
 Tires Overheated	* At least one tire is overheating. The affected tires are displayed in red. At temperatures close to the limit value, the tires are displayed in yellow.

WARNING
Risk of an accident from driving with a flat tire

- The tires can overheat and be damaged.
- The driving characteristics as well as the steering and braking characteristics may be greatly impaired.

You could then lose control of the vehicle.

▶ Do not drive with a flat tire.

▶ Do not exceed the maximum permissible driving distance in emergency mode and the maximum permissible speed with a flat MOExtended tire.

▶ Observe the notes on flat tires.

Notes on flat tire (⟶ page 56).

▶ Stop the vehicle in accordance with the traffic conditions.

▶ Check the tires.

WARNING
Risk of an accident from driving with overheated tires

Overheated tires can burst.

▶ Reduce speed so that the tires cool down.

▶ Reduce your speed to allow the tires to cool.

Display messages	Possible causes/consequences and ▶ Solutions
 Reduce Speed	* At least one tire is overheating. The affected tires are displayed in red. At temperatures close to the limit value, the tires are displayed in yellow.

WARNING
Risk of an accident from driving with overheated tires

Overheated tires can burst.

► Reduce speed so that the tires cool down.

▶ Reduce your speed to allow the tires to cool.

Warning and indicator lamps

Overview of indicator lamps and warning lamps

Some systems will perform a self-test when the vehicle is switched on. Some indicator lamps and warning lamps may briefly light up or begin flashing. This behavior is non-critical. These indicator lamps and warning lamps only indicate a fault if they light up or begin flashing after the vehicle has been started or during a journey.

The indicator lamps and warning lamps are located in the highlighted display sections.

STANDARD DRIVER DISPLAY



WIDESCREEN COCKPIT DRIVER DISPLAY



Depending on the display settings, the positions of the indicator lamps on the driver display may differ from the example shown.

INDICATOR LAMPS AND WARNING LAMPS

OCCUPANT SAFETY

- Restraint system (⟶ page 761)
- Seat belt (⟶ page 761)
- Passive occupant presence reminder (white) (⟶ page 761)
- Passive occupant presence reminder (yellow) (⟶ page 761)

DRIVE SYSTEM

- Reduced power (⟶ page 762)
- System error (⟶ page 762)

 Electrical malfunction (⟶ page 762)

VEHICLE

 Power steering (yellow) (⟶ page 763)

 Power steering (red) (⟶ page 763)

BRAKING

 Electric parking brake (yellow) (⟶ page 764)

 USA: electric parking brake (red) (⟶ page 764)

 Canada: electric parking brake (red) (⟶ page 764)

 USA: Regenerative Brake System (⟶ page 764)

 Canada: brakes (yellow)(⟶ page 764)

 USA: brakes (red) (⟶ page 764)

 Canada: brakes (red) (⟶ page 764)

DRIVING SYSTEMS AND DRIVING SAFETY SYSTEMS

 ABS (⟶ page 766)

 ESP® (⟶ page 766)

 ESP® OFF (⟶ page 766)

 ATTENTION ASSIST (⟶ page 766)

 Traffic Sign Assist (⟶ page 766)

 Distance warning (⟶ page 766)

 Active Brake Assist (⟶ page 766)

 Active Brake Assist (⟶ page 766)

MERCEDES-BENZ EMERGENCY CALL SYSTEM

 Mercedes-Benz emergency call system (⟶ page 769)

TIRE PRESSURE MONITORING SYSTEM

 Tire pressure monitoring system (⟶ page 769)

EXTERIOR LIGHTING

 Standing lights (⟶ page 244)

 Low beam (⟶ page 244)

 High beam (⟶ page 245)

 Turn signal lights (⟶ page 245)

 Front fog lamps (⟶ page 244)

 Rear fog lights (⟶ page 244)

SYMBOLS ON THE CENTRAL DISPLAY

 Drive Away Assist (⟶ page 375)

 Cross Traffic Alert (⟶ page 376)

Close-range braking (⟶ page 376)

Occupant safety

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Restraint system warning lamp	* The restraint system red warning lamp is lit while the vehicle is on. The restraint system is malfunctioning (⟶ page 119). **DANGER** Risk of death due to the restraint system malfunctioning Components in the restraint system may be activated unintentionally or not deploy as intended in an accident. In the event of an accident, the high-voltage on-board electrical system may not be deactivated as intended. You may receive an electric shock if you touch the damaged components of the high-voltage on-board electrical system. ► Have the restraint system checked and repaired immediately at a qualified specialist workshop. ► After an accident, switch off the vehicle immediately. ► Continue driving with caution. ► Observe the messages on the driver display. ► Consult a qualified specialist workshop immediately.
 Seat belt warning lamp flashes	* The red seat belt warning lamp flashes and an intermittent warning tone sounds. The driver or front passenger has not fastened his/her seat belt while the vehicle is in motion. ► Fasten your seat belt (⟶ page 118). There are objects on the front passenger seat. ► Remove the objects from the front passenger seat.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Seat belt warning lamp lights up	* The red seat belt warning lamp lights up for six seconds once the vehicle has started. In addition, an intermittent warning tone may sound. The red seat belt warning lamp reminds the driver and front passenger to fasten their seat belts. ▶ Fasten your seat belt (⟶ page 118). If you have placed objects on the front passenger seat, the red seat belt warning lamp may remain lit.
 Passive occupant presence reminder warning lamp (white)	* The white occupant presence reminder warning lamp is lit. Passive occupant presence reminder is deactivated. ▶ Switch on passive occupant presence reminder (⟶ page 156).
 Passive occupant presence reminder warning lamp (yellow)	* The yellow occupant presence reminder warning lamp is lit. The passive occupant presence reminder is faulty. ▶ Observe the messages on the driver display.

Drive system

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Reduced warning lamp power	* The yellow reduced-power warning lamp is lit. Drive system power output is reduced. ▶ Observe the messages on the driver display.
 System malfunction warning lamp	* The red system error warning lamp is lit while the vehicle is in vehicle traction standby READY. There is a malfunction in the drive system. ▶ Observe the messages on the driver display.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Electrical malfunction warning lamp	* The red electrical malfunction warning lamp is lit. There is a malfunction with the electrics. ▶ Observe the messages on the driver display.

Vehicle

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Power steering warning lamp (yellow)	* The yellow power steering warning lamp is lit while the vehicle is running. The power assistance or the steering itself is malfunctioning. ▶ Observe the messages on the driver display.
 Power steering warning lamp (red)	* The red power steering warning lamp is lit while the vehicle is running. The power assistance or the steering itself is malfunctioning. **WARNING** Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardized. ▶ Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ▶ Consult a qualified specialist workshop. ▶ Observe the messages on the driver display.

Brakes

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
PARK Electric parking brake indicator lamp (red) (USA only)  Electric parking brake indicator lamp (red) (Canada only)  Electric parking brake indicator lamp (yellow)	* The red electric parking brake indicator lamp is flashing or is lit. The yellow electric parking brake indicator lamp is also lit up in the event of a malfunction. ▶ Observe the messages on the driver display.
RBS RBS warning lamp (USA only)  Brakes warning lamp (yellow) (Canada only)	* The yellow RBS warning lamp (USA only) or the yellow brake warning lamp (Canada only) is lit while the vehicle is running. **WARNING** Risk of an accident due to a brake system malfunction If the brake system is malfunctioning, braking characteristics may be impaired. ▶ Drive on carefully. ▶ Have the brake system checked immediately at a qualified specialist workshop. ▶ Adjust your speed and drive on carefully, at a suitable distance from the vehicle in front. ▶ If the driver display shows a display message, observe it. ▶ Consult a qualified specialist workshop.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
BRAKE Brakes warning lamp (USA only)  Brakes warning lamp (Canada only)	* The red brake warning lamp is lit while the vehicle is running. **POSSIBLE CAUSES:** • The brake force boosting is malfunctioning and the braking characteristics may be affected. • There is insufficient brake fluid in the brake fluid reservoir. ▶ Observe the messages on the driver display. **⚠ WARNING** Risk of accident and injury if brake force boosting is malfunctioning If brake force boosting is malfunctioning, increased brake pedal force may be necessary for braking. The braking characteristics may be impaired. The braking distance can increase in emergency braking situations. ▶ Stop in a safe location immediately. Do not continue driving. ▶ Consult a qualified specialist workshop. **⚠ WARNING** Risk of an accident due to low brake fluid level If the brake fluid level is too low, the braking effect and the braking characteristics may be impaired. ▶ Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. ▶ Consult a qualified specialist workshop. ▶ Do not add brake fluid.

Driving and driving safety systems

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 ABS warning lamp	* The yellow ABS warning lamp is lit while the vehicle is running. ABS is malfunctioning. If an additional warning tone sounds, EBD is malfunctioning. Other driving systems and driving safety systems may also be malfunctioning. ▶ Observe the messages on the driver display. **⚠ WARNING** There is a risk of skidding if EBD or ABS is malfunctioning The wheels may lock during braking. The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off. ▶ Drive on carefully. ▶ Have the brake system checked immediately at a qualified specialist workshop. ▶ Continue driving with caution. ▶ Consult a qualified specialist workshop.
 ESP® warning lamp flashes	* The yellow ESP® warning lamp flashes while the vehicle is in motion. One or more wheels have reached their grip limit (⟶ page 326). ▶ Adapt your driving style to suit the road and weather conditions.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 ESP® warning lamp lights up	* The yellow ESP® warning lamp is lit while the vehicle is running. ESP® is malfunctioning. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning. ▶ Note the messages on the driver display. **WARNING** Risk of skidding if ESP® is malfunctioning If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilization. In addition, other driving safety systems are switched off. ▶ Drive on carefully. ▶ Have ESP® checked at a qualified specialist workshop. ▶ Drive on carefully. ▶ Consult a qualified specialist workshop immediately.
 ESP® OFF warning lamp	* The yellow ESP® OFF warning lamp is lit while the vehicle is running. ESP® is deactivated. Other driving systems and driving safety systems may also be inoperative.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	WARNING Risk of skidding when driving with ESP® deactivated ESP® does not act to stabilize the vehicle. The availability of further driving safety systems is also limited. ▶ Drive on carefully. ▶ Deactivate ESP® only for as long as the situation requires. If ESP® cannot be activated, ESP® is malfunctioning. ▶ Have ESP® checked immediately at a qualified specialist workshop. ▶ Observe the notes on deactivating ESP® (⟶ page 326).
 ATTENTION ASSIST warning lamp	* The yellow ATTENTION ASSIST warning lamp is lit. ATTENTION ASSIST is malfunctioning. ▶ Consult a qualified specialist workshop.
 Traffic Sign Assist warning lamp	* The Traffic Sign Assist warning lamp is lit. Traffic Sign Assist is malfunctioning. ▶ Observe the messages on the driver display.
 Distance warning lamp	* The red distance warning lamp lights up while the vehicle is in motion. The distance to the vehicle in front is inadequate for the speed selected. If an additional warning tone sounds, the speed at which you are approaching an obstacle is too high. ▶ Be prepared to brake immediately. ▶ Increase the distance.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	Function of Active Brake Assist (⟶ page 346).
 Active Brake Assist warning lamp	* The Active Brake Assist warning lamp is lit. The system is unavailable due to dirty sensors or a malfunction, or the range of functions is restricted. ▶ Observe the messages on the driver display.
 Active Brake Assist warning lamp	* The Active Brake Assist warning lamp is lit. The system is switched off or the range of functions has been automatically restricted. This may be due to activation of another driving system. ▶ Observe the notes on Active Brake Assist (⟶ page 346).

Mercedes-Benz emergency call system

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Mercedes-Benz emergency call system warning lamp	* The Mercedes-Benz emergency call system is malfunctioning. The Mercedes-Benz Support system is also malfunctioning. ▶ Consult a qualified specialist workshop.

Tire pressure monitor

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
 Tire pressure monitoring system warning lamp flashes	* The yellow tire pressure monitor warning lamp (pressure loss/malfunction) flashes for approximately one minute and then remains lit. The tire pressure monitoring system is malfunctioning.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	WARNING There is a risk of an accident if the tire pressure monitoring system is malfunctioning The tire pressure monitoring system cannot issue a warning if there is pressure loss in one or more of the tires. Tires with insufficient tire pressure may impair the driving characteristics as well as steering and braking. ▶ Have the tire pressure monitoring system checked at a qualified specialist workshop. ▶ Consult a qualified specialist workshop.
 Tire pressure monitoring system warning lamp lights up	* The yellow tire pressure monitoring system warning lamp (pressure loss/malfunction) is lit. The tire pressure monitoring system has detected a loss of pressure in at least one tire. **WARNING** Risk of an accident due to insufficient tire pressure • The tires can burst. • The tires can wear excessively and/or unevenly. • The driving characteristics as well as the steering and braking may be greatly impaired. You could then lose control of the vehicle. ▶ Observe the recommended tire pressures. ▶ Adjust the tire pressure if necessary. ▶ Stop the vehicle in accordance with the traffic conditions. ▶ Check the tire pressure and the tires.

Back to contents

Index

Searching for something specific? Click on the relevant initial letter here and look it up.
Incidentally, you can also use your PDF reader's search function at any time.

0-9
A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W

0-9

(SmartKey) battery >

4MATIC >

A

A/C function
- Activating/deactivating (operating unit)
- switching on/off (MBUX)

ABS

Access data
- Setting (Bluetooth®)

Accident, emergency call

Acoustic presence indicator

Acoustic vehicle alerting system

Activating/deactivating the acoustic locking verification signal

Activation
- Toll system

Active Brake Assist
- Function
- Setting

Active Distance Assist DISTRONIC
- Activating/deactivating
- Active Emergency Stop Assist
- Active Speed Limit Assist
- Calling up a speed
- Function
- Increasing/decreasing the speed
- Route-based speed adaptation

Storing a speed

Active Emergency Stop Assist

Active Lane Keeping Assist

Activating/deactivating

Function

Setting the sensitivity

Active Parking Assist

Automatic braking function

Exiting a parking space

Function

Maneuvering brake function

Parking

Pausing

Active Service System PLUS

Active Speed Limit Assist

Active Steering Assist

Activating/deactivating

Active Emergency Stop Assist

Function

Adaptive cruise control

Adaptive damping system

Suspension

Adaptive Highbeam Assist

Activating/deactivating

Function

Adjusting bass, mid-range and treble settings

Advanced sound system

Adjusting mid-range, treble and bass settings
- Advanced sound system

Adjusting the balance/fader
- Advanced sound system
- Burmester® surround sound system

Adjusting the bass, mid-range and treble
- Burmester® surround sound system

Adjusting the mid-range, treble and bass
- Burmester® surround sound system

Adjusting the sound focus
- Burmester® surround sound system

Adjusting treble, mid-range and bass settings
- Advanced sound system
- Burmester® surround sound system

Advanced sound system
- Adjusting the balance/fader
- Adjusting treble, mid-range and bass settings
- Calling up the sound menu
- Information
- Switching loudness normalization on/off

After-sales service

Air bag
- Inflating
- Overview
- PASSENGER AIR BAG indicator lamp
- Warning lamp

Air conditioning menu
- Air distribution
- Selecting climate modes
- Switching on the steering wheel heater

Air distribution
- Overview
- Setting
- Setting the climate menu

Air inlet

Air pressure

Air vents
- Adjusting

Air-conditioning menu
- Climate control

Air/water duct

Airflow
- Setting

Alarm system

All-wheel drive

Alternative route

Ambient lighting

Android Auto
- Connecting a mobile phone (wired)
- Connecting a mobile phone (wireless)
- Ending
- Information
- Sound settings

Transferred vehicle data

Android smartphone

Animals

Anti-lock braking system

Anti-theft alarm system

Anti-theft protection

Immobilizer

Apple CarPlay®, Smartphone

Connecting an iPhone® (cable)

Connecting an iPhone® (wireless)

Ending

Notes

Overview

Sound settings

Transferred vehicle data

Apps

Mercedes-Benz Connect

Mercedes-Benz Support Calls

Selecting (MBUX multimedia system)

Assistance system

Assistant display

Menu (driver display)

ASSYST PLUS

Battery disconnection periods

Displaying the service due date

Maintenance work

Service interval display

Service requirements
Special service requirements

ATA

Deactivating the alarm
Function
Interior protection
Interior protection function
Tow-away alarm function
Tow-away protection

ATTENTION ASSIST

Function
Setting

Attention assistant

Augmented reality

MBUX route guidance

Authorization

Setting

Authorized Mercedes-Benz Service Center

Authorized workshop

Automatic car wash

Automatic climate control

Automatic distance control

Automatic driving lights

Automatic emergency call

Automatic front passenger air bag shut-off

Function
Information (child restraint system on the front passenger seat)

PASSENGER AIR BAG indicator lamp >

Automatic measures after an accident >

Automatic mirror folding function >

Automatic seat adjustment >

Automatic transmission >

Autonomous braking >

AVAS >

B

Baby

Pregnancy (seat belt)

Bag hook

BAS (Brake Assist System)

Basic information

Battery

High-voltage battery

Battery (12 V battery)

Charging

Notes

Notes (starting assistance and charging)

Replacing

Starting assistance

Battery (high-voltage on-board electrical system)

Belt

Fastening

Notes on wearing correctly

Releasing

Blind Spot Assist

Activating/deactivating

Function

Bluetooth®
- Activating/deactivating
- Connecting a mobile phone
- Information
- Setting up an Internet connection

Brake Assist
- Active Brake Assist
- Brake Assist System (BAS)

Brake Assist System (BAS)

Brake disks

Brake fluid

Brake force distribution

Brake pads

Brakepad gauge

Brakes
- ABS (Anti-lock Braking System)
- Active Brake Assist
- Brake Assist System (BAS)

Checking the brakepad thickness

Driving tips

EBD (Electronic Brakeforce Distribution)

Electric parking brake

Handbrake

HOLD function

Limited braking effect (salt-treated roads)

New/replaced brake pads/brake discs

Notes on breaking in a new vehicle

Parking brake
Post-collision brake
Recuperation

Braking assistance

Active Brake Assist
Brake Assist System (BAS)

Breakdown

Changing a wheel
Flat tire

Overview of aids
Tow-starting
Towing methods
Transporting the vehicle

Breakdown (Roadside Assistance)

Burmester® surround sound system

Adjusting the balance/fader
Adjusting the sound focus
Adjusting treble, mid-range and bass settings

Automatic loudness normalization
Calls up the sound menu
Information
Selecting the sound profile

C

Call list
- Deleting
- Making a call
- Overview
- Selecting options

Calling Support at Mercedes-Benz

Calling up a web page

Calling up the sound menu
- Advanced sound system

Calls, Telephone operation
- Accepting
- Activating functions during a call
- Calls with several participants
- Declining
- Ending a call
- Incoming call during an existing call
- Making
- Mercedes-Benz Support
- Telephone
- Using the international dialing code
- Via the overhead control panel

Calls up the sound menu
- Burmester® surround sound system

Camera

- 360° camera
- Activating using GPS (reversing camera)
- Button
- Care
- Cleaning
- Function
- Information
- Managing activation points
- Opening the camera cover (rear view camera)
- Rear view camera
- Select view

Car key

Car wash

- Automatic car wash
- Automatic car wash mode
- Power washer
- Washing by hand

Car wash mode

- Activating/deactivating

Car-to-X-Communication

- Display on map
- Overview
- Sending hazard warnings

Care

- Air/water duct
- Automatic car wash

Automatic car wash mode
Camera
Car parts
Decorative foil
Display
Exterior lighting
Genuine wood/trim elements
Head-up display
Headliner
Paint
Plastic trim
Power washer
Seat belt
Steering wheel
Vehicle interior
Vehicle socket for the high-voltage battery
Washing by hand
Wheels/rims
Cargo compartment cover
Extending/retracting
Notes
Removing/installing
Cargo compartment floor
Opening/closing
Caring for rims
Center console
MBUX lower control panel

Central display
- Operating

Central locking system
- Button
- SmartKey

Change of address

Change of ownership

Changing a wheel
- Preparation
- Raising the vehicle

Charge level display

Charge level/charge display

Charging
- 12 V battery
- Charge level display
- Charging cables (overview)
- Charging station
- Configuring a weekly profile
- Ending the charging process (AC, level 1/2)
- Ending the charging process (DC, level 3)
- Fast charging station
- Gen4/Gen5 charging cables
- In time for departure
- Indicator lamps on vehicle socket
- Maximum charging current (mains socket)
- Notes on charging the high-voltage battery
- Notes on the high-voltage battery

Power Charger
Power outlet
Recuperation
Starting the charging process (AC, level 1/2)
Starting the charging process (DC, level 3)
Stowing the charging cable
USB port
Wallbox

Charging cable
- Gen4/Gen5 charging cables
- Overview
- Power Charger
- Stowing

Charging near destination
- Route

Charging process
- Paying

Charging settings
Checking the brakepad thickness
Checking the coolant level
Child safety lock
- Rear door
- Side windows (rear passenger compartment)

Child seat
- Adjusting the vehicle seat
- Basic instructions

Front passenger seat
Installing ISOFIX
Rearward-facing
Risks/dangers
Securing on the rear seat with the seat belt
Securing to the front passenger seat with the seat belt
The most important information in brief
Top Tether

Children
Avoiding dangers in the vehicle
Basic instructions
Special seat belt retractor

Chock

Classic menu display content
Selecting

Clean varnish

Cleaning
Air/water duct
Automatic car wash
Automatic car wash mode
Camera
Car parts
Decorative foil
Genuine wood/trim elements
Paint

- Power washer
- Sensors
- Vehicle interior
- Vehicle socket for the high-voltage battery
- Washing by hand

Cleaning the carpet

Cleaning the seat cover

Climate control, Air conditioning system, Blower, Cooling

- Activating/deactivating
- Activating/deactivating the A/C function (control panel)
- Air distribution settings
- Air vents (front)
- Air vents (rear passenger compartment)
- Automatic control
- Defrosting the windshield
- Defrosting windows
- Filling capacity for refrigerant and PAG oil
- Immediate pre-entry climate control
- Notes
- Overview of systems
- Pre-entry climate control for departure time
- Pre-entry climate control via SmartKey
- Refrigerant
- Resetting the climate control settings
- Setting the air distribution
- Setting the airflow
- Setting the vehicle interior temperature

Switching air-recirculation mode on/off
Switching the A/C function on/off (MBUX)
Switching the rear window heater on/off
Synchronization function
Ventilation with convenience opening
Climate control settings
Resetting
Clothes hook
COC papers, CERTIFICATE OF CONFORMITY
Cockpit
Instrument panel
Coffee cup symbol
Collision detection (parked vehicle)
Adjusting
Information
Combination switch
Lights
Windshield wipers
Comfort
Information
Communication module
Disconnecting automatically from the Internet
Setting up an Internet connection
Commuter route
Compass
Components relevant to radio regulation
Declaration of conformity

Composition of the tire

Connection status

- Displaying
- Overview

Contacts, Address book, Phone book

- Calling up
- Deleting
- Importing
- Importing (overview)
- Information
- Making a call
- Name format
- Note about suggestions
- Options
- Selecting options for suggestions
- Storing

Control element (MBUX multimedia system)

- Setting acoustic feedback

Control elements:

Convenience closing

Convenience opening

Coolant

- Capacity
- Notes

Copyright

- License

Copyrights
- Trademarks

Correct use

Cover

Creeping mode
- Function/notes

Cross traffic (warning)

Cross Traffic Alert, Cross traffic warning

Crosswind Assist

Cruise control
- Activating/deactivating
- Calling up a speed
- Function
- Requirements:
- Setting a speed
- Storing a speed

Cup holder
- Rear passenger compartment

Customer Assistance Center (CAC)

D

Damage
- Limited protection

Dashcam
- Configuring settings
- Selecting a USB device
- Starting/stopping an individual recording
- Starting/stopping loop recording

Data processing in the vehicle

Data protection
- Granting authorization

Data protection rights

Data storage
- Data protection rights
- Electronic control units
- Event Data Recorder
- MBUX Multimedia System/Mercedes-Benz Connect
- Online services

Deactivating the alarm

Dealership

Declaration of conformity
- Components relevant to radio regulation

Decorative foil

Definitions
- Tires and loading

Deployed components

Limited protection

Deployment situations

Destination

Editing a suggestion

Editing intermediate destinations

Editing the previous destinations

Saving as a favorite

Destination entry

Accepting a destination suggestion

Entering an intermediate destination

Entering geo-coordinates

Selecting a contact

Selecting a received destination

Selecting from favorites

Selecting from the map

Selecting previous destinations

Destination entry (multimedia system)

Notes

Selecting a POI

Detecting inattentiveness

Diagnostics connection

Digital Extras

Digital Operator's Manual

Dinghy towing

Pulling/towing

Direct commands

Voice commands for MBUX voice assistant

DIRECT SELECT lever

Engaging drive position

Engaging neutral

Engaging park position automatically

Engaging reverse gear

Function

Selecting park position

Disconnect device (high-voltage on-board electrical system)

Notes

Display

Care

Display (driver's display)

Overview of displays

Display (MBUX multimedia system)

Settings

Display message

Calling up on driver display

Display messages

- - - mph

- - - mph

2nd Seat Row, Left Not Locked

2nd Seat Row, Right Not Locked

3rd Seat Row, Left Not Locked

3rd Seat Row, Right Not Locked

12 V Battery See Operator's Manual

Acoustic Presence Indicator Inoperative
Add Washer Fluid
ATTENTION ASSIST: Take a Break!
Automatic Driving Lights Inoperative
Battery Overheated Stop! Everyone Get Out! Outdoors if Possible
Battery Too Low Stop Vehicle Charge Immediately
Brake Light Left
Brake Light Right
Camera View Reduced See Operator's Manual
Cannot Fold 2nd Seat Row See Operator's Manual
Center Brake Light
Charging Cable Connected
Check Brake Fluid Level
Check Coolant Level See Operator's Manual
Check Front Left Sidemarker Light
Check Front Right Sidemarker Light
Check Left Cornering Light
Check Left Daytime Running Light
Check Left High Beam
Check Left Low Beam
Check Rear Left Sidemarker Light
Check Rear Right Sidemarker Light
Check Right Cornering Light
Check Right Daytime Running Light
Check Right High Beam
Check Right Low Beam
Check Tires

Cooling System Malfunction Stop Immediately Switch Off Vehicle >
Currently Not Available Charge High-voltage Battery >
Currently Not Available Charging of the High-voltage Battery Not Completed >
Currently Unavailable See Operator's Manual (ABS and ESP®) >
Currently Unavailable See Operator's Manual (ESP®) >
Do Not Leave People or Animals in the Vehicle >
Don't Forget Your Key >
Front Left Malfunction Service Required >
Front Right Malfunction Service Required >
Initializing Key Please Wait >
Inoperative See Operator's Manual (ABS and ESP®) >
Inoperative See Operator's Manual (ESP®) >
EBD Inoperative See Operator's Manual (EBD, ABS, and ESP®) >
SOS Inoperative >
Key Not Detected (red display message) >
Key Not Detected (white display message) >
Left Window Airbag Malfunction Service Required >
License Plate Light >
Malfunction Do Not Exceed 50 mph >
Malfunction See Operator's Manual >
Malfunction Service Required >
Malfunction Service Required >
Malfunction >
Malfunction >
Obtain a New Key >
Off >
HOLD Off >

PARK Parking Brake See Operator's Manual >
Parking Light Front Left >
Parking Light Front Right >
Performance Extremely Limited >
Please Correct Tire Pressure >
Pre-entry Climate Control Available Again via SmartKey after Vehicle Start >
Pre-entry Climate Control via SmartKey Currently Not Available. High-voltage Battery Low >
Rear Fog Light >
Reduce Speed >
PARK Release Parking Brake >
Replace Key Battery >
Reserve Level Charge High-Voltage Battery >
Restraint System Malfunction Service Required >
Reversing Light >
Right Window Airbag Malfunction Service Required >
Second Row of Seats, Left Malfunction Service Required >
Second Row of Seats, Right Malfunction Service Required >
Steering Malfunction Increased Physical Effort See Operator's Manual >
Steering Malfunction Stop Immediately See Operator's Manual >
Stop Switch Off Vehicle >
Suspended >
Switch Off Lights >
Switch On Headlights >
PARK Switch on Vehicle to Release the Parking Brake >
Temporarily Unavailable Sensors Dirty >
Third Row of Seats, Left Malfunction Service Required >
Third Row of Seats, Right Malfunction Service Required >

Tires Overheated
Towing Not Permitted See Operator's Manual
Turn Signal Indicator, Front Left
Turn Signal Indicator, Front Right
Turn Signal Indicator, Left Mirror
Turn Signal Indicator, Rear Left
Turn Signal Indicator, Rear Right
Turn Signal Indicator, Right Mirror
Warning Tire Malfunction
Wheel Sensor(s) Missing
AC Charging Inoperative Service Required
Active Brake Assist Functions Currently Limited See Operator's Manual
Active Brake Assist Functions Limited See Operator's Manual
Active Distance Assist Currently Unavailable See Operator's Manual
Active Distance Assist Inoperative
Active Distance Assist Now Available
Active Emergency Stop Assist Currently Unavailable See Operator's Manual
Active Emergency Stop Assist Inoperative
Active Lane Keeping Assist Currently Unavailable See Operator's Manual
Active Lane Keeping Assist Inoperative
Active Lane Keeping Assist Limited Range of Functions See Operator's Manual
Active Parking Assist and PARKTRONIC Inoperative See Operator's Manual
Active Steering Assist Currently Unavailable Due to Multiple Emergency Stops
Active Steering Assist Currently Unavailable See Operator's Manual
Active Steering Assist Inoperative
Adaptive Highbeam Assist Currently Unavailable See Operator's Manual
Adaptive Highbeam Assist Inoperative

Authentication Failed Use Different Authentication Method or Charging Station
Blind Spot Assist and Exit Warning Inoperative
Blind Spot Assist and Exiting Warning Currently Unavailable See Operator's Manual
Cannot Start Vehicle See Operator's Manual
Charge high-voltage battery if the vehicle will be parked for an extended period at low outside temperatures.
Charging Fault Change Charging Mode See Operator's Manual
Check Brake Pads See Operator's Manual
Cruise Control Inoperative
Cruise Control Off
DC Charging Inoperative Service Required
Depress Brake to Shift from P
Depress Brake to Shift to D or R
Depress Brake to Shift to R
Do Not Restart Vehicle Service Required
Drive Malfunction Achievable Speed Severely Limited See Operator's Manual
Emergency Stop Initiated To Cancel: Operate Steering Wheel and a Pedal
Front Passenger Airbag Disabled See Operator's Manual
Front Passenger Airbag Enabled See Operator's Manual
Hazard Warning Light Malfunction
Head-up Display Currently Unavailable See Operator's Manual
Head-up Display Inoperative
High-Voltage Battery Fault No Start in Approx. XXX mi Service Required (red display message)
High-Voltage Battery Fault No Start in Approx. XXX mi Service Required (yellow display message)
Hight-Voltage Battery Fault Do Not Restart Service Required
Indicator Lamp in Driver's Display Inoperative Service Required
N Permanently Active Risk of Rolling Away

Not Possible to Unlock Charging Cable See Operator's Manual
Occupant Presence Reminder Inoperative
PARKTRONIC Inoperative See Operator's Manual
Place the Key in the Marked Space See Operator's Manual
PRE-SAFE Inoperative See Operator's Manual
Reduced Drive Power See Operator's Manual
Reversing Not Possible Service Required
Risk of Vehicle Rolling Away Driver's Door Open Position P Not Selected
Service Required Do Not Change Transmission Position
Shift to P Only When Vehicle Is Stationary
Stop Vehicle Leave Engine Running Wait Transmission Cooling
Tire Pressure Monitor Currently Unavailable
Tire Pressure Monitor Inoperative
Tire Pressure Monitor Inoperative Tire Pressure Sensors Missing
To Deselect P or N Depress Brake and Start Vehicle
To Switch Off Vehicle Press and Hold Start/Stop Button for at Least 3 Seconds or Press 3 Times
Traffic Sign Assist Currently Unavailable See Operator's Manual
Traffic Sign Assist Inoperative
Transmission Malfunction Stop
Vehicle Not Currently Being Charged Try a Different Charging Station
Vehicle Ready to Drive Shutdown Occurs When Locked or After a Few Minutes
Wait in READY State Battery Is Warming Up See Operator's Manual
Windshield Wiper Malfunction

Displaying road names/house numbers

Distance control

Distance warning

DISTRONIC

Dolby Atmos®
- Calling up Dolby Atmos®
- Information

Door
- Child safety lock (rear door)
- Emergency key
- Opening (from the inside)
- Unlocking (inside)

Door operating unit
- Function seat

DOT, Tire Identification Number (TIN)

Drinking and driving

Drive Away Assist

Drive position

Drive program display

Drive programs
- Function
- Selecting

Drive system
- Manual switch-off

Driver display
- Identifying faults
- Operation
- Service due date
- Service menu
- Sport menu

Driver's display, Instrument cluster
- Assistant display
- Classic menu
- Head-up display
- Instrument cluster
- Menus
- Navigation menu
- Notes
- Off-road menu
- Status displays
- Understated menu

Driver's seat
- Adjusting (Seat Comfort)
- Adjusting (without seat comfort)
- Adjusting electrically
- Easy entry and exit feature
- Seat heating

Driving safety system
- ABS (Anti-lock Braking System)
- Active Brake Assist
- Active Lane Keeping Assist
- Active Steering Assist
- ATTENTION ASSIST
- BAS (Brake Assist System)
- Blind Spot Assist
- Cameras

Cruise control
EBD (Electronic Brakeforce Distribution)
ESP® (Electronic Stability Program)
Hill Start Assist
HOLD function
Overview
Radar and ultrasonic sensors
STEER CONTROL
Traffic Sign Assist
Your responsibility
Driving system
Driving tips
Acoustic presence indicator (sound generator)
Drinking and driving
Electric mode
General driving tips
Notes on breaking in a new vehicle
Recuperation
Drowsiness detection
Duplicate key
Dynamic handling control system
DYNAMIC SELECT
Calling up the fuel consumption indicator
Configuring drive program I
Displaying vehicle data
Drive program display
Drive programs

Function >
Selecting the drive program >

E

E-mails

Easy entry feature

Adjusting

Function

Easy exit feature

Adjusting

Function

EBD, Electronic Brakeforce Distribution

ECO Assist

Function

ECO display

Electric Intelligence

Route with charging stations

Electric mode, Notes

Electric parking brake

Applying automatically

Emergency braking

Manually applying/releasing

Releasing automatically

Electrical fuses

Electronic Stability Program

Emergency

Emergency guide

First-aid kit (soft sided)

Overview of aids
Reflective safety vest
Warning triangle

Emergency braking

Active Brake Assist
Brake Assist System (BAS)
Carrying out
Electric parking brake/handbrake

Emergency key

Door
Tailgate

Emergency operation mode

Start the vehicle

Emergency shutoff (high-voltage on-board electrical system)

Emergency start (drive system)

Emergency stop assistant

Emergency Tensioning Devices

Inflating

Energy flow display

Calling up
Function/notes

Engine

Emergency operation mode
Engine number
Jump-starting

Parking (start/stop button)

Engine number

Engine start

Emergency operation mode

Entering characters

Deleting the user dictionary

Function/notes

Setting the keyboard language

using the touchscreen

Environmentally friendly driving

ESC, Electronic Stability Control

ESP®

Activating/deactivating

Crosswind Assist

Function

Event Data Recorder

Exit warning

Blind Spot Assist

Exiting a parking space

Active Parking Assist

Drive Away Assist

PARKTRONIC

Exterior lighting

Care

Exterior mirrors

Parking position

F

Factory settings
- MBUX reset function

Fault
- Driver display

Favorites
- Adding a destination
- Calling up
- Deleting
- Home address
- Moving
- Renaming
- Work address

Favourites
- Overview

Film coverings
- On camera/sensors

First aid
- First-aid kit (soft sided)

First-aid kit (soft sided)

Fitting
- Snow chains

Fitting accessories
- Limited protection

Flat tire
- Changing a wheel
- MOExtended
- Notes
- TIREFIT kit

Flat towing
- Pulling/towing

Floor mats

Fog lamp

Foil covering
- Radar and ultrasonic sensors

Free software

Frequencies
- Mobile phone
- Two-way radio

Front air bag
- Inflating

Front headlamps

Front passenger air bag
- Disabling/enabling

Front passenger air bag shutoff, PASSENGER AIR BAG OFF
- Information (child restraint system on the front passenger seat)

Front passenger seat
- Adjusting (Seat Comfort)
- Adjusting (without seat comfort)
- Adjusting electrically

Fuel consumption indicator

Function in the event of an accident >

Function seat >

Fuses

- Cargo compartment >
- Engine compartment >
- Fuse assignment diagram >
- Notes >
- Passenger footwell >

G

G-meter (driver display, Sport menu)
Special programming modes (if required)
Gallery app
Operating
Garage door opener
Deleting the HomeLink® buttons
Performing rolling code synchronization (if required)
Problem
Programming the HomeLink® buttons
General driving tips
Genuine parts
Global search
Function
Overview
Glove box
Locking/unlocking
Grab handles
Greeting tone
Switching the greeting tone on/off

H

Handbrake

Handling characteristics

- Unusual

HANDS-FREE ACCESS

hands-free system

Hazard warning lights

Hazard warnings

- Car-to-X-Communication

Head restraint

- Adjusting (rear passenger compartment)
- Adjusting manually (front)
- Removing/installing (rear passenger compartment)

Head-up display

- Care
- Function
- Memory function

- Operating
- Switching on/off

Headlamp flashing

Headlamps

Headliner care

Heating

- Activating/deactivating
- Seat

Steering wheel

Help call

Mercedes-Benz emergency call system

High beam

High-voltage battery

Charge level display

Charging ahead of the departure time

Charging cables (overview)

Charging duration

Charging station

Configuring a weekly profile

Disconnect device

Ending the charging process (AC, level 1/2)

Ending the charging process (DC, level 3)

Energy flow display

Fast charging station

Gen4/Gen5 charging cables

General notes on charging

Maximum charging current (mains socket)

Notes

Power Charger

Power outlet

Range

Range maximization

Recuperation

Starting the charging process (AC, level 1/2)

Starting the charging process (DC, level 3)

Stowing the charging cable
Type
Wallbox

High-voltage on-board electrical system

Charging cables (overview)
Disconnect device
Gen4/Gen5 charging cables
Indicator lamps on vehicle socket
Manual switch-off
Power Charger

Hill Start Assist

HOLD function

Function
Switching on/off

Home screen

Central display

Hood

Opening/closing

I

Identification plate
- Engine
- Refrigerant
- Vehicle

Immediate pre-entry climate control

Immobilizer

Incorrect behavior by vehicle occupants
- Limited protection

Indicator/warning lamps
- Overview
- PASSENGER AIR BAG

Individual drive program
- Configuring

Inside rearview mirror

Installing
- Tires/wheels

Instrument panel
- Cockpit

Interior lighting
- Adjusting
- Ambient lighting
- MBUX reading light
- Switch-off delay time

Interior protection

Intermediate destination

Editing

Starting the automatic service station search

Internet

Calling up a web page

Calling up the web browser settings

Calling up web browser options

Deleting a bookmark

Deleting browser data

Managing bookmarks

Setting up a Wi-Fi hotspot

Smartphone integration

Web browser

Web browser in the background

Internet connection

Canceling permission (mobile phone)

Disconnecting automatically (communication module)

Displaying the connection status

Establishing

Information

Overview of connection status

Restrictions

Setting access data (Bluetooth®)

Setting up (communication module)

Setting up (Wi-Fi)

Setup (Bluetooth®)

iPhone®

Smartphone integration

ISOFIX child seat anchor

Installing

J

Jack

Storage location >

Jump-start connection >

K

Key

- Problem
- Replacement key

KEYLESS-GO

- Deactivating
- Locking/unlocking the vehicle
- Problem
- Unlocking setting

Knee bag

L

Lane Keeping Assist
Lane recognition
- Active Lane Keeping Assist

Language
- Notes
- Setting

License plate (front)
License plate assembly (front)
Light switch
Lighting
- Interior lighting

Lights
- Adaptive Highbeam Assist
- Automatic driving lights
- Combination switch
- Hazard warning lights
- High beam
- Interior lighting
- Locator lighting
- Reading lamp
- Rear fog light
- Responsibility for lighting systems
- Switch-off delay time
- Turn signals

Limited Warranty

Live Traffic Information

- Displaying the traffic map
- Displaying traffic incidents
- Information from the service provider

Load index

- Tires

Load-bearing capacity

- Tires

Loading

- Bag hook
- Clothes hook
- Definitions
- Notes
- Opening/closing the cargo compartment floor
- Roof luggage rack
- Tie-down eyes

Loading guidelines

Loading information table

Loads

Locator lighting

Locking/unlocking

- Automatic locking (MMS)
- Doors (from the inside)
- Emergency key
- KEYLESS-GO

Loud sound

PRE-SAFE® Sound >

Low-beam headlamps

Activating/deactivating >

Lubricants >

Luggage >

Luggage rack >

Lumbar support >

M

Maintaining safe distance
- Active Distance Assist DISTRONIC

Maintenance
- Vehicle

Maintenance Management
- Notes
- Transferred data

Maintenance work, Information on regular performance

Malfunction
- Restraint system

Malfunction message
- Driver's display

Maneuvering
- Maneuvering brake function

Maneuvering assistant
- Activating/deactivating
- Drive Away Assist
- Maneuvering brake function

Maneuvering brake function

Manual gearshifting
- Activating/deactivating

Map, Traffic map
- Avoiding an area
- Avoiding an area (overview)

Changing an area
Deleting an area
Displaying online map contents
Displaying the compass
Displaying the map version
Displaying the range
Displaying the satellite map
Displaying the traffic map
Displaying weather information
Map data
Moving
Route overview after start
Selecting additional information
Selecting POI symbols
Setting the map scale
Setting the map scale automatically
Updating
Map functions
Massage programs
Maximum full-stop braking
Maximum permissible load
Calculation example
Determining
Maximum tire load
Maximum tire pressure
MB Apps
Calling up Digital Extras

Calling up the Mercedes me ID user account
Unlinking the Mercedes me ID user account

MBUX

Dashcam

MBUX Interior Assistant

Favorites
Lasers and laser classification
Operating functions by proximity of your hand
Overview

Reading light
Search light
Selecting settings
Using the favorites pose

MBUX multimedia system

Authorization
Configuring display settings
Display settings
Drive programs

ENERGIZING seat kinetics
Factory setting
Global search
Home screen
Language settings
MB Apps
MBUX Interior Assistant
Overview
Set keyboard

Setting collision detection
Setting route-based speed adaptation
Steering wheel heater / seat heating
Touchscreen
MBUX reading light
MBUX search light
MBUX SOUND DRIVE
Information
Operating
MBUX Voice Assistant
E-mails
Function
Language setting
Media voice commands
Online voice commands
Online voice control
Operable functions
Operating safety
Setting
Speech quality
Voice commands
Voice prompting
Mechanical key
Inserting/removing
Media
General information

Media mode

- Adding a favorite song
- Connecting Bluetooth® audio equipment
- Connecting USB devices
- Controlling media playback
- Copyright and trademarks
- Notes about the search function in categories
- Overview of the media menu
- Playing back similar music tracks
- Removing a favorite song
- Starting a search in categories
- Starting media playback
- Supported formats and data storage media
- Surprise mix
- Using the keyword search

Medical aids

Memory function

- Head-up display
- Outside mirrors
- Seat

Menus (driver display)

- Service
- Sport

Menus (driver's display), Steering-wheel buttons

- Assistant display
- Classic menu
- Navigation

Notes
Off-road
Operating
Understated menu

Mercedes me Charge, Paying

Charging stations display

Mercedes-Benz App

Activating Digital Extras

Mercedes-Benz Connect

Information
Transferred data

Mercedes-Benz emergency call system, Call for help, Emergency call

Automatic emergency call
Availability
Data transfer
Manual emergency call
Overview

Self-diagnosis

Mercedes-Benz GenuineParts

Mercedes-Benz Support

Accident/Breakdown Management

Mercedes-Benz Support Calls

Arranging a service appointment
Calling Mercedes-Benz Support after automatic accident/breakdown detection
Calls via the overhead control panel
Information

Mercedes-Benz Support
Transferred data
Message memory
Messages, Short messages
Calling a message sender
Deleting
Dictating
Forwarding
MBUX voice commands
Overview
Read-aloud function
Reading
Replying
Sending
Setting the displayed text messages
Using a phone number or URL
Mirrors
Mirror folding function
Outside mirrors
Rearview mirror
Mobile phone
Canceling permission for Internet connection
Frequencies
Maximum transmission output
Smartphone integration
Telephone
Model type

Modification

- Limited protection

MOExtended tires, Run-flat tires

Multimedia system

- Activating/deactivating voice amplification to rear passenger compartment

Music online

- Adding providers
- Calling up
- Calling up the settings
- Requirements:
- Search function

N

Navigation
- Activating
- Destination entry
- Electric Intelligence
- Information
- MBUX voice commands
- Menu (driver display)
- Overview
- Route with charging stations
- Updating the map data

Navigation announcements
- Activating/deactivating
- Repeating
- Switching audio fadeout on/off
- To adjust the volume

Near Field Communication (NFC)
- Information

Near-field communication
- Activating/deactivating

Neutral

NFC

Notes on breaking in a new vehicle

Notifications Center

Calling up a notification >
Editing a notification >
Message types >
Overview >
Selecting actions >

O

Objects in the vehicle interior
- Limited protection

Occupant safety
- Air bag
- Basic information
- Child seat
- Information on correct seat position
- Information on the child restraint system
- Passive occupant presence reminder
- Pets in the vehicle
- PRE-SAFE®
- Pregnancy (seat belt)

Off-road

On-board diagnostics interface

On-board electronics
- Two-way radios

Online services

Open Source Software

Opening angle
- Limiting (tailgate)

Opening the tailgate using your foot
- HANDS-FREE ACCESS

Operating fluids
- Brake fluid

Coolant
Notes
Refrigerant (air conditioning system)
Windshield washer fluid
Operating safety
Operator's Manual digital
Outside mirrors
Automatic anti-glare mode
Automatic mirror folding function
Blind Spot Assist
Folding in/out
Memory function
Setting
Warning lamp
Overhead control panel

P

Paint code

Panic alarm, Alarm

- Activating/deactivating

Park position

Parking

- Active Parking Assist
- PARKTRONIC

Parking Assist

- Active Parking Assist
- PARKTRONIC

Parking Assist PARKTRONIC

- Activating/deactivating
- Adjusting warning tones
- Function

Parking assistance systems

- Active Parking Assist
- Drive Away Assist
- Maneuvering brake function
- PARKTRONIC

Parking brake

Parking lamps

Parking lights

Parking option
- Displaying on the map
- Selecting
- Selecting parking options

Parking position
- Exterior mirrors
- Storing the front-passenger outside mirror using the memory button
- Storing the position of the front-passenger outside mirror using reverse gear

Parking service
- Displaying a parking option on the map

Parking space
- Finding

PARKTRONIC

PASSENGER AIR BAG
- Status display, front passenger air bag

Passive occupant presence reminder
- Activating/deactivating
- Function

Payload
- Calculation example
- Determining the maximum

Permitted towing methods
- Overview

Pets in the vehicle

Photos
- Gallery app

PIN protection
System PIN protection
Plastic trim care
POI
Selecting
POI symbols
Selecting
Post-collision brake
Power (driver display, Sport menu)
Power Charger
Power display
Function/notes
Power supply
Start/stop button
Switching on (start/stop button)
Power washer
Pre-entry climate control
activating/deactivating for departure time
At time of departure
immediate
Pre-entry climate control for departure time
Adjusting
Pre-entry climate control via SmartKey
Function
Setting
Pre-entry climate control via the Smart-Key
Activating/deactivating

PRE-SAFE®, Anticipatory occupant protection
- Function
- PRE-SAFE® Sound
- Reverting measures

Pregnancy
- Information on correct seat position
- Seat belt

Preventative occupant protection system

Previous destinations
- Selecting

Program

Protection
- Limited

Protection against collision
- Maneuvering brake function

Protection of the environment
- Driving style

Pulling away
- Hill Start Assist

Q

QR code rescue card >

Qualified specialist workshop >

R

Radar and ultrasonic sensors

Radio

- Activating
- Activating/deactivating radio text
- Calling up the station list
- Deleting stations
- Direct frequency entry
- Displaying emergency messages
- Displaying emergency warnings
- Displaying radio text
- Editing station presets
- Managing favorites
- MBUX voice commands
- Menu
- Moving stations
- Overview
- Setting a channel
- Setting the frequency band
- Station search
- Station suggestion
- Storing radio stations
- Voice commands (Voice Control System)

Radio (multimedia system)

- Switching the HD Radio function on/off

Radio regulations

- Regulatory radio identification

Rain closing function

- Sliding sunroof

Rain sensor

- Sliding sunroof
- Windshield wipers

Range

- Notes

Range maximization, ERM (Extended Range Mode)

- Activating/deactivating
- Function

Range monitor

- Activating/deactivating

Range on map

- on map

Reading lamp

- Interior lighting

Rear door (child safety lock)

- Securing

Rear fog light

Rear passenger compartment seat

- Adjusting the backrest angle

Rear passenger compartment seat belt

- Status display

Rear seat

- Adjusting the backrest

Rear view camera
- 360° Camera
- Function
- Opening the camera cover

Rear window heater

Rear window wiper
- Activating/deactivating
- Automatically active
- Replacing wiper blade

Rearview mirror
- Automatic anti-glare mode

Rearward-facing child seat
- Information

Recuperation
- Function
- Setting

Recuperative braking (driver display, Sport menu)

Reflective safety vest

Refrigerant

Registration
- Toll system

Regulatory radio information
- Specific absorption rate

Replacement key

Reporting safety defects

Resetting
- MBUX reset function

Responsibility
- Driving safety systems

Restraint system
- Basic information
- Basic instructions for children
- Deployment situations
- Functionality
- Information on correct seat position
- Information on function
- Limited protection
- Malfunction
- Protection
- Self-test
- Warning lamp

Reverse gear

Reversing camera
- Activating via GPS
- Managing activation points

Roadside Assistance (breakdown)

Roll away protection

Roller sunblind
- Sliding sunroof

Rollover crash

Roof load display
- Information

Roof luggage rack
- Loading

Securing

Route

Accepting a detour recommendation
Alternative route
Calculating alternative routes
Calculating with Electric Intelligence
Charging near destination
Commuter route
Digital Extra Range Display
Displaying destination information
Displaying the route list
Editing a stored route
Electric Intelligence
Electric Intelligence (overview)
Navigation
Planning
Recording
Saving a recorded route
Selecting a type
Selecting notifications
Selecting options
Selecting settings for charging stations (navigation with Electric Intelligence)
Starting a saved route
Starting the automatic service station search
Switching the range monitor on/off

Route guidance

Canceling

Changing direction
Destination reached
Freeway information
Lane recommendations
Notes
Off-road

Route guidance with augmented reality

Activating
Displaying road names/house numbers
Overview

Route-based speed adaptation

Function
Setting

Run-flat characteristics

S

Safety system

Satellite map

Satellite radio

- Activating/deactivating TuneStart
- Adding a channel to Smart Favorites
- Deleting a channel
- Displaying service information
- Information
- Information about Smart Favorites and TuneStart
- Logging in
- Moving a channel
- Music and sport alerts function
- Restrictions
- Selecting a category
- Selecting a channel
- Setting music and sport alerts
- Setting the parental control
- Storing a channel
- Switching on

Saving a destination suggestion as a favorite

Seat, Through-loading feature

- Adjusting (Seat Comfort)
- Adjusting (without seat comfort)
- Adjusting backrests (rear passenger compartment)

Adjusting electrically
Adjusting manually (rear passenger compartment)
Adjusting the angle of the backrests (rear passenger compartment)
Automatic adjustment
Correct driver's seat position
ENERGIZING seat kinetics
Folding back the backrest (rear passenger compartment)
Folding back the backrest on the third row of seats
Folding backrest forward (rear)
Folding the backrest (rear passenger compartment) forwards to get in (third row of seats)
Folding the backrest on the third row of seats forwards
Lumbar support
Memory function
Resetting the settings
Settings
Side impact air bag

Seat belt

Automatic tightening
Care
Notes on wearing correctly
Rear passenger compartment seat belt status display
Warning lamp
Wearing during pregnancy

Seat belt adjustment

Activating/deactivating
Function

Seat belt warning

Seat belts
- Activating/deactivating seat belt adjustment
- Fastening
- Releasing

Seat heating
- Activating/deactivating

Seat kinetics
- Setting

Seat ventilation
- Activating/deactivating

Second telephone
- Connecting

Selecting the sound profile
- Burmester® surround sound system

Selector lever

Self-test
- Automatic front passenger air bag shutoff
- Restraint system

Sensors
- Cleaning
- Information

Service
- Menu (driver display)

Service center

Service due date

Service interval display

Service station search
- Starting automatic search

Setting the date format

Setting the distance unit

Settings
- Information

Shortening the braking distance
- Brake Assist System (BAS)

Shunting support

Side impact air bag

Side window
- Close with key
- Convenience closing
- Convenience opening
- Opening with the key
- Opening/closing
- Window films

Side windows
- Child safety lock (rear passenger compartment)
- Problem

Size designation
- Tires

Skid chains

Sliding sunroof, Panorama roof with power tilt/sliding panel
- Automatic functions
- Close with key

Opening with the key
Opening/closing
Problem
Rain closing function

SmartKey

Acoustic locking verification signal
Activating/deactivating pre-entry climate control
Battery
Deactivating a function
Function
Key ring attachment
Mechanical key
Panic alarm
Power consumption
Unlocking setting

Smartphone integration

Apple CarPlay®/Android Auto

Snow chains

Socket

12 V (front center console)
12 V (trunk/cargo compartment)
115 V (rear passenger compartment)

Socket flap

SOS button

Sound

PRE-SAFE® Sound
Wheels/tires

Sound Experience
- Calling up Sound Experience
- Information

Sound generator

Sound settings
- Adjusting treble, mid-range and bass settings
- Automatic loudness normalization
- Calling up the sound menu
- Information
- Setting the balance and fader

Spare parts

Spare wheel, Emergency spare wheel

Special seat belt retractor

Specialist workshop

Specific absorption rate (SAR)

Speed
- Save, cruise control
- Save, DISTRONIC

Speed adaptation, Route-based

Speed control
- Active Distance Assist DISTRONIC
- Cruise control

Speed rating
- Tires

Sport Utility Vehicle

Start-off assist
- Hill Start Assist

Start/stop button
- Parking the vehicle
- Starting the vehicle
- Switching on the power supply / vehicle

Starting
- Start/stop button

Starting assistance

Starting the engine
- Start/stop button

Starting-off aid
- Drive Away Assist
- Hill Start Assist

Station
- Deleting
- Direct frequency entry
- Managing favorites
- Moving
- Setting
- Storing

Station list
- Calling up

Station presets
- Editing

Station search

Station suggestion
- Radio

Status display
- Front passenger air bag
- Rear passenger compartment seat belt

Steer Assist
- Active Steering Assist
- STEER CONTROL

STEER CONTROL

Steering wheel
- Driver's air bag
- Manually adjusting
- Steering wheel heater

Steering wheel care

Steering wheel heater
- Air conditioning menu

Steering wheel heating
- Decoupling from the seat heating

Stopping
- Parking the vehicle

Stowage areas

Stowage space underneath the cargo compartment floor
- Opening/closing

Stowage spaces
- Armrest (front)
- Center console (front)
- Door
- Glove box

Streaming online music

Substances hazardous to health

Suggestions

- Configuring
- Deleting

Suspension

- Adaptive damping system

Switch-off delay time

- Exterior
- Interior

Switching air-recirculation mode on/off

Switching loudness normalization on/off

- Advanced sound system
- Burmester® surround sound system

System PIN protection

- Activating/deactivating

System settings

- Activating/deactivating system PIN protection
- Activating/deactivating voice amplification to rear passenger compartment
- MBUX reset function
- Setting the distance unit
- Setting the time zone
- Setting the time/date format
- Switching near-field communication (NFC) on or off
- Transmission of the vehicle position

T

Tabs

- Managing

Tailgate, Trunk lid

- Closing
- Emergency key
- HANDS-FREE ACCESS
- Limiting the opening angle
- Opening

Technical data

- High-voltage battery
- Information
- Radio frequencies
- Radio regulations
- Specific absorption rate (SAR)
- Vehicle dimensions

Telediagnosis

- Diagnostic data

Telediagnostics

- Transferred data

Telephone, Smartphone

- Activating functions during a call
- Calls with several participants
- Changing a function

Charging wirelessly (mobile phone)
Connecting a mobile phone
Disconnecting a mobile phone
Importing contacts
Importing contacts (overview)
Incoming call during an existing call
Information
Interchanging mobile phones
MBUX voice commands
Notes
Operating modes
Reception and transmission volume
Secure Simple Pairing
Setting the ringtone
Smartphone integration
Telephone menu overview
Telephone operation
Voice recognition
Telephone (audio system)
Replacing a mobile phone
Telephony operating modes
Bluetooth® telephony
Television, Digital TV
MBUX voice commands
Temperature
Setting the vehicle interior temperature
Temperature grade

Text messages

Third row of seats, Through-loading feature

- Folding back the backrest on the third row of seats
- Folding the backrest on the third row of seats forwards
- Getting in/out
- Height limit

Tie-down eyes

Time

- Manual time setting
- Setting the time zone
- Setting the time/date format

TIN (Tire Identification Number)

Tire and Loading Information placard

Tire information table

Tire labeling

- Load index
- Load-bearing capacity
- Size designation
- Speed rating
- Temperature grade
- Tire Quality Grading
- Traction grade
- Tread wear grade

Tire lettering

- Composition
- DOT, Tire Identification Number (TIN)
- Maximum tire load

Maximum tire pressure

Tire pressure

Checking
Checking manually
maximum
Notes
Tire pressure table
TIREFIT kit

Tire pressure monitor

Function

Tire pressure monitoring system

Restarting

Tire pressure table
Tire Quality Grading
Tire sealant
Tire tread
Tire-change tool

Tire-change tool kit

TIREFIT kit, Tire inflation compressor

Storage location

Tires

Breakdown
Checking
Checking the temperature
Checking the tire pressure manually
Composition

Definitions
DOT, Tire Identification Number (TIN)
Installing
Labeling
Load index
Load-bearing capacity
Maximum pressure
Maximum tire load
MOExtended
Noise
Notes on installing
Removing
Replacing
Rotating
Selecting
Size designation
Snow chains
Speed rating
Storing
Temperature grade
Tire and Loading Information placard
Tire pressure table
Tire Quality Grading
TIREFIT kit
Traction grade
Tread wear grade
Unusual handling characteristics

Toll system
- Debiting toll fees
- Registering and activating

Top Tether

Touch Control
- Driver display
- MBUX
- Setting the sensitivity

Touch-sensitive controls

Touchscreen
- Entering characters

Tow bar system
- Towing away

Tow-away protection

Tow-starting

Towing
- Towing methods

Towing eye
- Storage location

Towing methods
- Both axles on the ground
- Overview

Traction grade

Traffic information
- Car-to-X-Communication
- Displaying the traffic map

Displaying traffic incidents
Information on Live Traffic Information
Overview
Traffic light warning/display
Traffic Sign Assist
Function
Setting
Trailer drawbar, Pulling/towing
Transferred vehicle data
Android Auto
Apple CarPlay®
Transmission
Creeping mode
DIRECT SELECT lever
Drive programs
DYNAMIC SELECT button
Engaging drive position
Engaging neutral
Engaging reverse gear
Selecting park position
Transmission position display
Transmission positions
Transmission position display
Transporting
Vehicle
Tread wear grade

TuneIn

- Deleting stations
- Logging out
- Overview
- Registering
- Saving stations
- Selecting and connecting a station
- Selecting stream
- Setting options

Turn signal indicator

Turn signals

TV

- MBUX voice commands

Two-way radios

- Frequencies
- Installation
- Transmission output

U

Understated menu display content
Selecting
Unfastening
Units of measurement
Setting
Unlocking setting
Updating software, System update, Update
Error message
Information
Performing
URL
Sharing
USB port
Rear passenger compartment
Storage compartments (front)
USB port (multimedia system)
Connecting devices
User profiles, Personalization
Adding a user
Notes
Overview
Requirements for use
Selecting a user

Selecting options >
Synchronizing >
User-specific content >

V

Vehicle, Switching on the ignition
- Collision detection (information)
- Correct use
- Data storage
- Diagnostics connection
- Emergency key
- Information
- KEYLESS-GO
- Limited Warranty
- lock automatically (MMS)
- Locking/unlocking (emergency key)
- Locking/unlocking (from inside)
- Lowering
- Maintenance
- Medical aids
- Parking
- Problem notification
- Pulling
- QR code rescue card
- Raising
- Setting collision detection
- Starting (start/stop button)
- starting, emergency operation mode
- Stopping

Switching off (start/stop button)
Switching on (start/stop button)
Towing away
Transporting
Ventilation / convenience opening
Voice commands for MBUX voice assistant
Vehicle cameras
Vehicle charger
Vehicle data
Display, MBUX
Displaying, DYNAMIC SELECT
Transferring to Android Auto
Transferring to Apple CarPlay®
Turning circle
Vehicle height
Vehicle length
Vehicle width
Weights
Wheelbase
Vehicle dimensions
Vehicle identification plate
Model type
Paint code
VIN
Vehicle key

Vehicle location
- Switching transmission on/off

Vehicle operation outside the USA or Canada

Vehicle position
- Storing

Vehicle sensors

Vehicle socket
- Care
- Indicator lamps

Vehicle start
- Emergency operation mode
- Start/stop button

Vehicle tool kit
- TIREFIT kit
- Towing eye

Vehicle with a high center of gravity

Ventilation

Vents
- Air vents

Video recordings
- Gallery app

VIN, Vehicle identification number
- Engine compartment
- Identification plate
- Windshield

Vision

Defrosting windows >

Voice amplification to the rear passenger compartment

Activating/deactivating >

Voice assistant

Voice prompting >

Voice Control System

Radio voice commands >

Voice recognition >

W

Warning system

Warning triangle

Warning/indicator lamp

- ABS warning lamp
- Active Brake Assist warning lamp
- ATTENTION ASSIST warning lamp
- Brakes warning lamp (Canada only)
- Brakes warning lamp (USA only)
- Brakes warning lamp (yellow) (Canada only)
- Distance warning lamp
- Electric parking brake indicator lamp (red) (Canada only)
- Electric parking brake indicator lamp (red) (USA only)
- Electric parking brake indicator lamp (yellow)
- Electrical malfunction warning lamp
- ESP® OFF warning lamp
- ESP® warning lamp flashes
- ESP® warning lamp lights up
- Mercedes-Benz emergency call system warning lamp
- Passive occupant presence reminder warning lamp (white)
- Passive occupant presence reminder warning lamp (yellow)
- Power steering warning lamp (red)
- Power steering warning lamp (yellow)
- RBS warning lamp (USA only)
- Reduced warning lamp power

Restraint system warning lamp
Seat belt warning lamp flashes
Seat belt warning lamp lights up
System malfunction warning lamp
Tire pressure monitoring system warning lamp flashes
Tire pressure monitoring system warning lamp lights up
Traffic Sign Assist warning lamp

Warning/indicator lamps

Overview

PASSENGER AIR BAG

Washer fluid

Topping up
Windshield washer fluid

Washing by hand

Water tank

Wear

Limited protection

Weather information

Web browser

Calling up a web page
Calling up options
Deleting a bookmark
Deleting browser data
Managing bookmarks
Setting in the background
Tabs

Web browsers
- Calling up the settings
- Sharing URLs

Website
- Mercedes-Benz Connect

Weight information

Welcome

Wheel change
- Installing a new wheel
- Lowering the vehicle
- Removing a wheel

Wheel rotation

Wheels
- Breakdown
- Care
- Checking
- Checking the tire pressure manually
- Checking the tire temperature
- Composition of the tire
- Definitions
- DOT, Tire Identification Number (TIN)
- Installing
- Load index
- Load-bearing capacity
- Maximum tire load
- Maximum tire pressure
- MOExtended

Noise
Notes on installing
Removing
Replacing
Rotating
Selecting
Size designation
Snow chains
Speed rating
Storing
Temperature grade
Tire and Loading Information placard
Tire labeling
Tire pressure
Tire pressure monitor
Tire Quality Grading
TIREFIT kit
Traction grade
Tread wear grade
Unusual handling characteristics

Wi-Fi

Activating/deactivating
Information on connection
Setting up a hotspot
Setting up an Internet connection

Widescreen cockpit driver's display

Instrument cluster

Window curtain air bag

Windows

- Care
- Convenience opening
- Opening with the key
- Opening/closing
- Removing mist
- Window films

Windshield

- Defrosting

Windshield washer fluid

Windshield washer system

Windshield wipers

- Activating/deactivating
- Replacing the wiper blades
- Replacing the wiper blades (windshield)
- Replacing wiper blades (rear window)

Winter operation

- Snow chains

Wiper blades

- Care
- Replacing (windshield)

Wipers

Wireless charging

- Mobile phone

Workshop

Publication details

WEBSITE
Further information about Mercedes-Benz vehicles and about Mercedes-Benz AG can be found on the following websites:

https://www.mbusa.com (USA only)

https://www.mercedes-benz.ca (Canada only)

EDITORIAL TEAM
© Mercedes-Benz AG: Not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Mercedes-Benz AG.

VEHICLE MANUFACTURER
Mercedes-Benz AG

Mercedesstraße 120

70372 Stuttgart, Germany